



DONGGUAN SHENGYANG INDUSTRIAL CO., LTD

SY-WMVC Smart Grid Tie Microinverter

User Manual



Dongguan Shengyang Industrial Co., Ltd.

ADD: No. 1 Shangxin Road, New Village, Xin'An Community, Chang' An Town,
Dongguan City, Guangdong 523850, P. R. China.

TEL: (86)769-85372118-812

FAX: (86)769-85372122

E-mail: sherry@sycorp.com.cn

Web: <http://www.sycorp.com.cn>

Thanks for choosing Smart Microinverters of Shengyang Industrial Co., Ltd. Read the following instruction carefully before installation and operating, install and operate as specified by this user manual strictly to ensure your safe and benefit.

Catalogue


Shengyang Smart Microinverter Introduction.....	2
Important Safety Information.....	4
Technical Parameters.....	7
Installation.....	8
LED Indicators.....	14
General troubleshooting.....	15
Wiring Diagram.....	16
Warranty.....	19
Warranty Card.....	20
Explore Applications Diagram.....	22

This Manual is a copyright of Dongguan Shengyang Industrial Co., Ltd. It is not allowed duping and plagiarizing without permission, otherwise Shengyang pursue the legal responsibilities. Dongguan Shengyang Industrial Co., Ltd has the final say of this Manual. Any relevant alteration is subject to the latest version without any prior notice.




Explore Applications Diagram


1. Work with 72cells solar panel (Vmp: 35-39V, Voc: 42-46V)

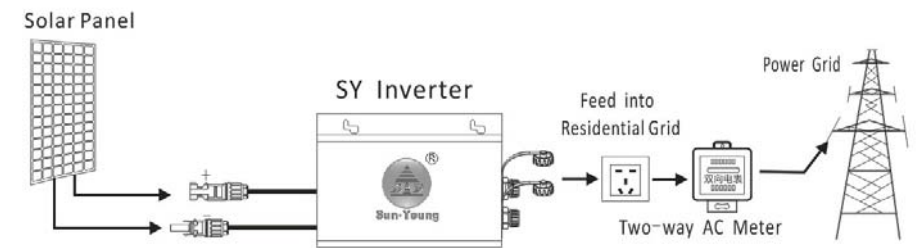

2. Work with wind turbine, output DC voltage is fit in with the range as specified and a 36V charge controller needed to be used if the wind turbine without build-in AC TO DC charge controller.

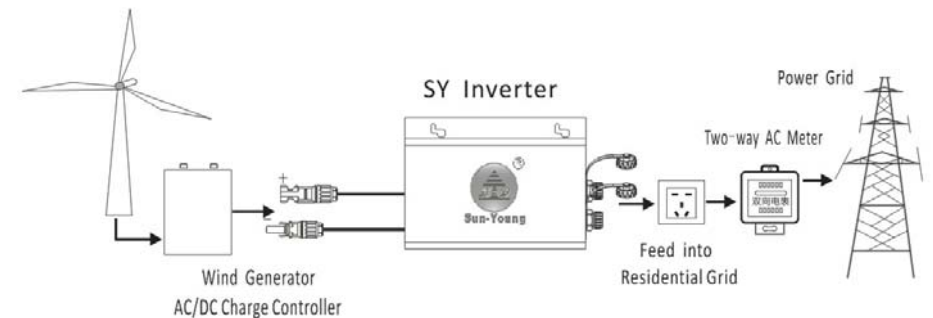

3. Work with battery, PV module and wind turbine charging the battery and battery discharging to inverter for converting AC power which will feed into power grid.

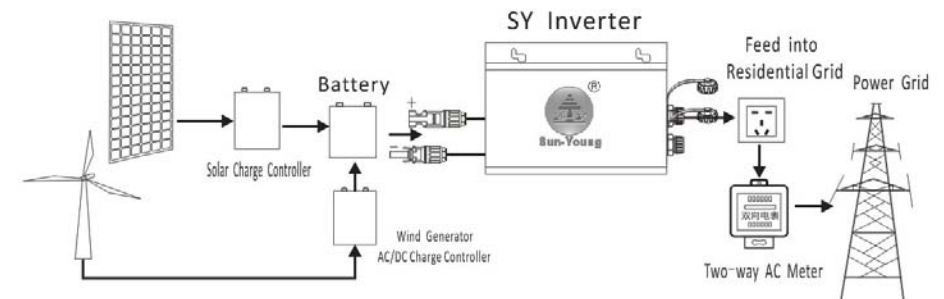


Shengyang Smart Microinverter Introduction

Smart grid tie inverter is a compact unit, which directly converts direct current into alternating current for powering appliances and/or office equipments and connecting to utility grid. The AC output from Smart Microinverter is synchronized and in-phase with the utility grid. It is a key device of power generation systems such as PV power generation system, wind turbine power generation system. Shengyang Smart Microinverter specially optimized design to work with modularization of DC power supplies which includes the mainstream solar modules, 18V (36 cells), 24V (60 cells) and 36V (72 cells) monocrystal and/or Polycrystalline solar panels, wind turbines and batteries. Shengyang Smart Microinverters are stabilization, reliable and high conversion efficiency items. It is the best choice for PV power generation systems.

Shengyang Smart Microinverter can be easily placed and attached to the rack underneath of PV module. No need spaces for independent installation and low voltage DC wire connects from the PV module to Smart Microinverter can eliminate the risk of high DC voltage. Distributed modularization design philosophy for Shengyang Smart Microinverter insures the productiveness of the whole system and will not affect by a single point of failure. Each Smart Microinverter is individually connected to each PV module in the array. This unique configuration means that an individual Maximum Peak Power Point Tracker (MPPT) controls each PV modules and insures that the maximum power available from each PV module is exported to the utility grid regardless of the performance of the other PV modules in the array which may be affected by shading, soiling, orientation or mismatch, etc. Smart Microinverter insures top performance for maximizing energy production from the whole PV system and gets return on investment in less time.

Smart Microinverter System Diagram

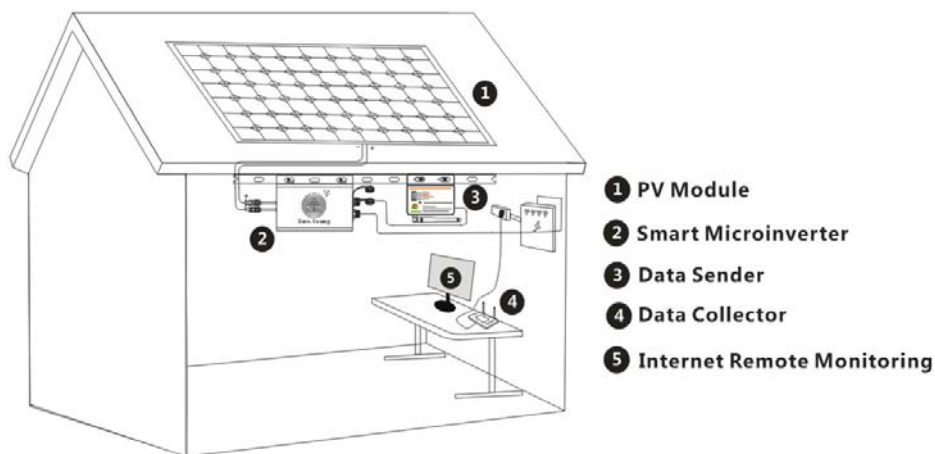

The four key elements of a Smart Microinverter System are:

- ① PV Module
- ② The Shengyang Smart Microinverter
- ③ The Data Sender
- ④ The Data Collector

Grid-connected PV system

Grid-tied PV systems consist of PV panels, grid-tied inverters, junction boxes, etc. The Smart Microinverters convert the DC from your solar panels and convert it into alternating current (AC) energy used in homes and businesses.

Remote Monitoring

The Data Sender collects performance information for each inverter in a user's system and transmits this data to the Data Collector and displays it on website, where users can view and manage the inverters' performance of their solar power system, or view through Data Collector directly.



NOTE: The DATA SENDER and the DATA COLLECTOR are optional elements. Before installing these elements, read all instructions and cautionary markings in their corresponding user manuals.

Warranty Card (Invalid Duplicate)

Customer Feedback:

Name			
Country and/or Territory			
Telephone			
Email			
Purchase Channels and/or Sources			
Models			
Date of Purchase			
Date of Installation			
Time of Using			
Brief Fault Description			
Improvement Suggestions			

Distributor and/or Sales Representative

Distributor Name			
Telephone and/or Email			
Sales Representative		Date of Customer Feedback	
Date of finish Disposal		Disposal	
Shengyang QC		Technician	
Others			

Warranty

Warranty Conditions

Warranty Period: 15-year limited warranty period.

Warranty Evidence: The B/L, Tracking no, and a completed warranty card.

Shengyang grants an implied warranty of 1 year to the inverter from date of purchase for repair or replace the Defective Product free of charge includes freight cost. Furthermore, Shengyang provides an additional limited warranty for 14 years for repair or replace the Defective Product free of charge but non-free of freight charge. If your device has a defect or malfunction during the warranty period, please also contact our customer service staff or your retailer or installer.

Warranty claims are excluded for:

- Alterations or repairs to the unit without prior authorization
- Improper use or operation of device
- Improper and non-standard installation
- operating the equipment with defective safety devices
- Impact of foreign objects and force majeure (lightning, surge, storm, fire)
- Inadequate or nonexistent ventilation of the device
- disregarding of safety regulations
- shipping damage
- The Product has been improperly stored or was damaged while in possession of the Dealer or end user;



WARNING! Only qualified electrical professionals can do the trouble shooting of the Smart Microinverter system.



WARNING! Do not disconnect the Microinverter from its PV module when the inverter is still operating. Disconnect the inverter from the PV module during running may damage the Microinverter and bring electrical hazard to the person nearby.



WARNING! Disconnect the AC grid first before disconnecting the inverter from the PV module.



WARNING: Do not attempt to repair the Smart Microinverter. This may bring electrical hazard to the person and it will also void the Microinverter warranty. If troubleshooting methods fail, please contact Shengyang customer support to return the Microinverter and initiate for replacement process.

Features of Shengyang Smart Microinverter

1. Unique circuit design, choice of import industrial electronic components, higher efficiency, more stable performance.
2. Creative MPPT technology, efficiency more than 99%, faster and more sensitive reaction, more reliable.
3. Parallel type design for DC input and modularization design for inverter, small volume, distributed installation, easy for system configuration, flexible for combination, strong expansibility of system.
4. Adopting high-frequency isolation transformer type, high efficiency, and high security.
5. Perfect electrical protection function.
6. Aluminum alloy housing, not rust, heat-resisting and cold-resistant as well as anti-corrosion.
7. Getting electronic circuit design, appearance design and other core technology patents.
8. High-quality thermal conductivity silica gel potting in, electronic components completely isolated from the air and it makes the aging of electronic components almost stop, greatly enhancing the life time of the product.
9. Highly DSP (Digital Signal Processor) as well as precision sensor IC adopted for getting accurately electrical parameters. Work with data sender and data collector to achieving remote monitoring, so the solar power generation information you can get and monitor at anytime and anywhere.

(Purchase additional communication configuration parts separately)

Important Safety Information

Read This First

This manual contains important instructions for use during installation and maintenance of the Shengyang Smart Microinverter. To reduce the risk of electrical shock, and to ensure the safe installation and operation of the Shengyang Smart Microinverter, the following safety symbols appear throughout this document to indicate dangerous conditions and important safety instructions.

Follow instruction closely.



DANGER! This indicates a hazardous situation, which if not avoided, will result in death or serious injury.



WARNING! This indicates a situation where failure to follow instructions may be a safety hazard or cause equipment malfunction. Use extreme caution and follow instructions carefully.



NOTE: This indicates information particularly important for optimal system operation.




Safety Instruction

- Do not use Smart Microinverter in a manner not specified by the manufacturer. Doing so may cause death or injury to persons, or damage to equipment.
- Perform all electrical installations in accordance with all applicable local electrical codes.
- Be aware that only qualified personnel should disassemble and repair the Smart Microinverters and non-qualified personnel should not install and/or repair.
- Do not attempt to repair the Smart Microinverter; it contains no user-serviceable parts. If it fails, contact Shengyang customer service to claim a return merchandise authorization and start the replacement process.




PV Power Plant

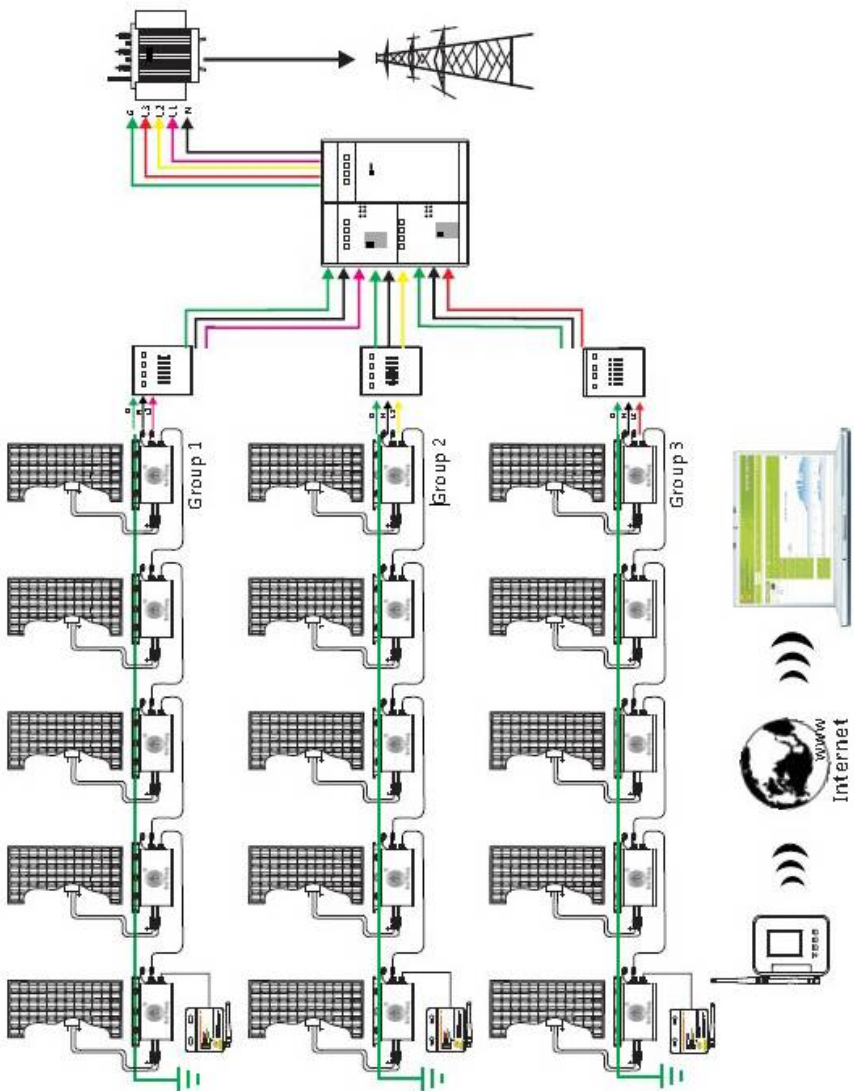

Remark: When microinverters placed in large-scale of PV power generation sites, equipped lightning protection facilities and junction boxes and low pressure electricity cabinets are needed as well as ground grounded safely.



Shengyang Smart Microinverter Three Phase output Wiring Diagram

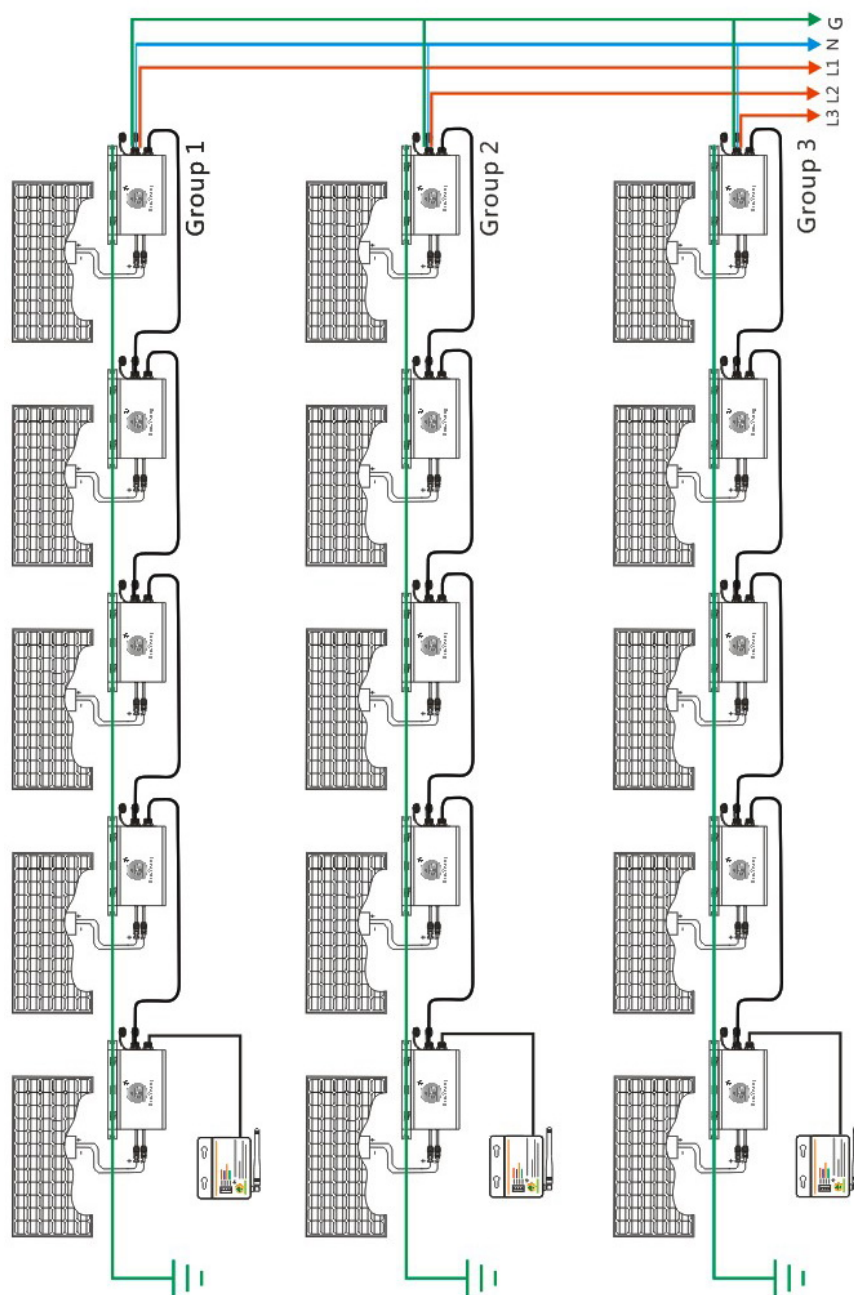

Tampering with or opening the Smart Microinverter will void the warranty.

- If the AC cable connector on the Microinverter is damaged or broken, do not install the unit.
- Before installing or using the Smart Microinverter, read all instructions and cautionary markings in the technical description and on the Smart Microinverter System and the PV equipment.
- Connect the Smart Microinverter to the utility grid only after you have completed all installation procedures and after receiving prior approval from the local electrical utility company.
- Be aware that the body of the Smart Microinverter is the heat sink. Under normal operating conditions, the temperature is 15°C above ambient, but under extreme conditions the Microinverter can reach a temperature of 75°C. To reduce risk of burns, use caution when working with Microinverters.
- Do NOT disconnect the PV module from the Smart Microinverter without first removing AC power.

The better disconnect DC terminal first. It may cause of components damaged if removing AC power first when Smart Microinverter still operation. It is available to disconnect AC power first when Smart Microinverter is not working but the better to disconnect the DC terminal first.

- Keep away from children, no touching, no playing so as not to electric shock when using.
- Please installed in place of low humidity and well-ventilated so as to avoid inverter overheating, as well as clear around the inflammable and explosive materials.

Technical Parameters


(Suit for 72 cells solar panel which Vmp is 35-37V as well as Voc is 44-46V.)

Model	SY-WMVC-230W
Solar panels	72cell 36V/200-250W
DC input range	24-45VDC
MPPT Voltage	28-36VDC
DC MAX current	15A
AC output range	120VAC(90-140VAC) or 230VAC(190-260VAC)
Frequency range	50Hz/60Hz(Auto control)
Power Factor	>98.5%
THD	<5%
Phase Shift	<1%
Efficiency	120VAC(90-140VAC)
Peak Efficiency	>90%
Stable Efficiency	>89%
Efficiency	230VAC(190-260VAC)
Peak Efficiency	>91%
Stable Efficiency	>90%
Protection	Islanding; Short-circuit; Converse Connection; Low Voltage; Over Voltage; Over Temperature Protection
Work Temperature	-25℃-65℃
Grade of Waterproof	IP65
Show	Red and green LED
Cooling	Natural cooling
Stand-by Power	1-2W
EMC	EN61000-6-3:2007 EN61000-6-1:2007
Grid Disturbance	EN 50178+EN 62109-1+VDE0126-1-12
Grid Detection	DIN VDE 1026 UL1741
Certificate	CE
Mounting Dimension	80CM(length)

Remark: The maximum PV Panel open circuit voltage CANNOT be more than 46V.



Shengyang Smart Microinverter Stack Wiring Diagram

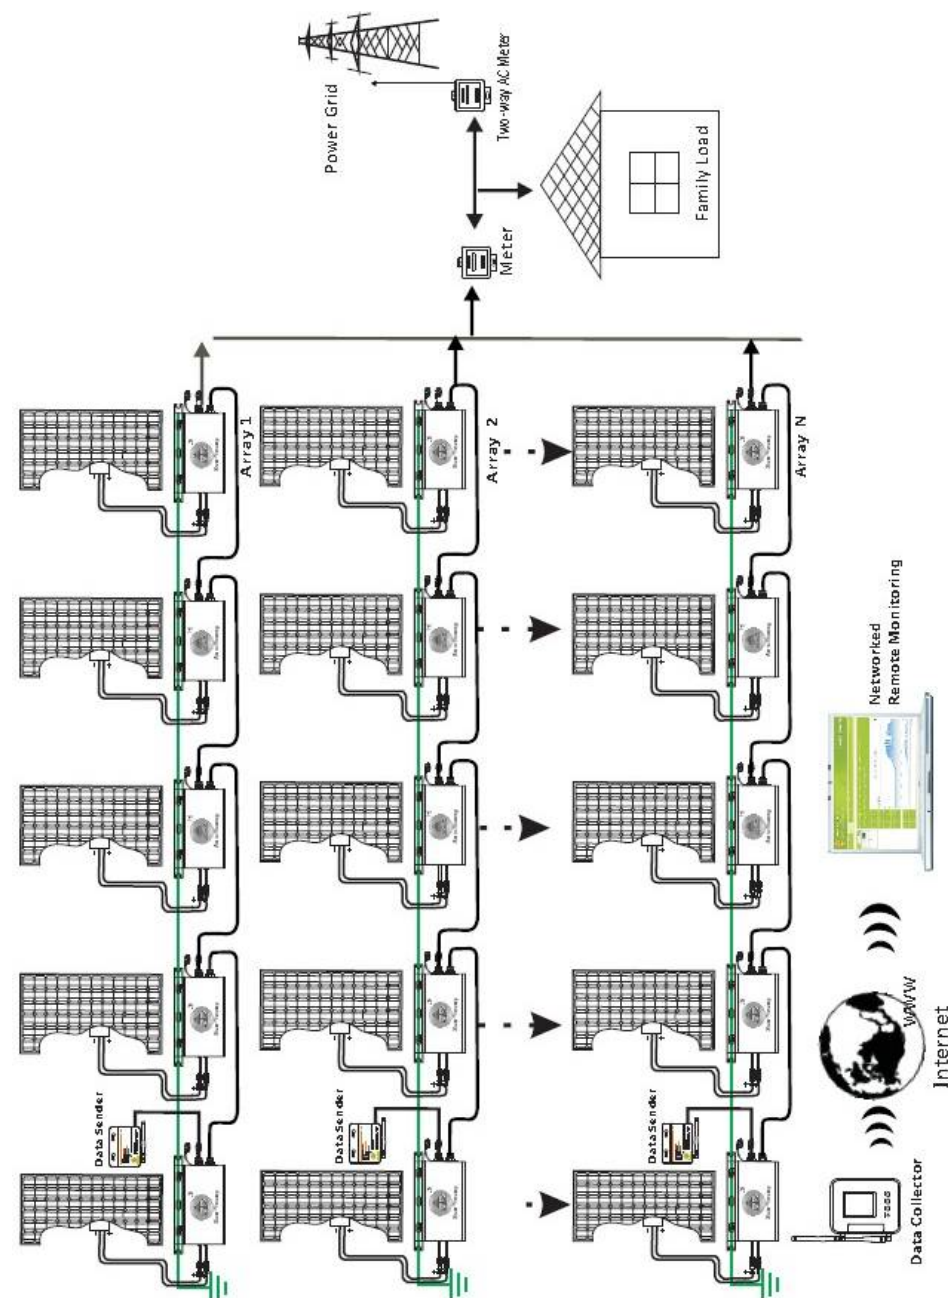

Troubleshooting a non-operating Smart Microinverter

1. System halted and /or without power output

- Check if switch of Smart Microinverter is turn on or not,
- Check if the DC connections to Smart Microinverter are correct or not,
- Check if any reverse DC connections for positive or negative or not,
- Check if DC input voltage is within the range of the Smart Microinverter's not,
- Check if the utility grid voltage and frequency are fit in with the serviceable range of Smart Microinverter or not,
- Check if fuses of DC side are fusing or not,
- Check if utility grid voltage properly connecting to Smart Microinverters or not,

2. DC power supply is normal but no power output:

- Check if utility grid voltage is connecting to Smart Microinverter or not,
- Check if utility grid voltage is fit in with the serviceable range of Smart Microinverter or not,
- Please visual inspection for the LED operation status, red LED will turn off and green LED will flash or run when inverter connecting with DC power supply which input voltage is fit in with the range as specified and power grid properly. If still no power output when green LED flash or run, probably internal components are damaged, in such case, please turn the defective inverter back for further analyze.
- Please visual inspection for the LED operation status, red LED still turn on and green LED without any flash or run when inverter connecting with DC power supply which input voltage is fit in with the range as specified and power grid properly, probably internal components are damaged, in such case, please turn the defective inverter back for further analyze.


Packing Specification

Packing Accessory	Microinverter, AC Cord, User Manual(Warranty Card)
Mechanical Size	16.5 x 7.5 x 5.5CM
Net Weight/PCS	1.6KGS/PCS
Inner Box (L x W x H)	26.5 x 20 x 11 CM
Carton(L x W x H)	42.5 x 28 x 36 CM, 6pcs/CTN, 10/13KGS




Installation

- Diagrammatize DC input and AC output terminals,

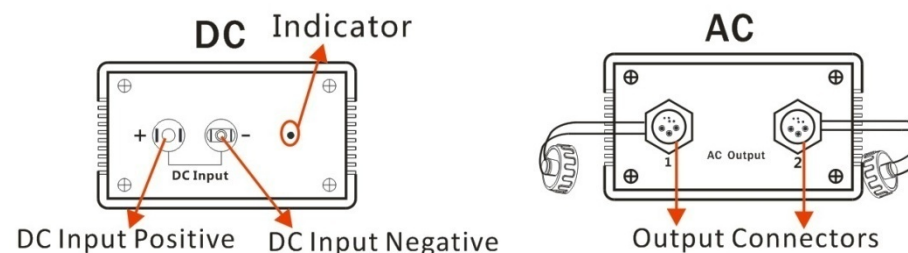


- Attach the Smart Microinverter to the racking or fix onto the wall,

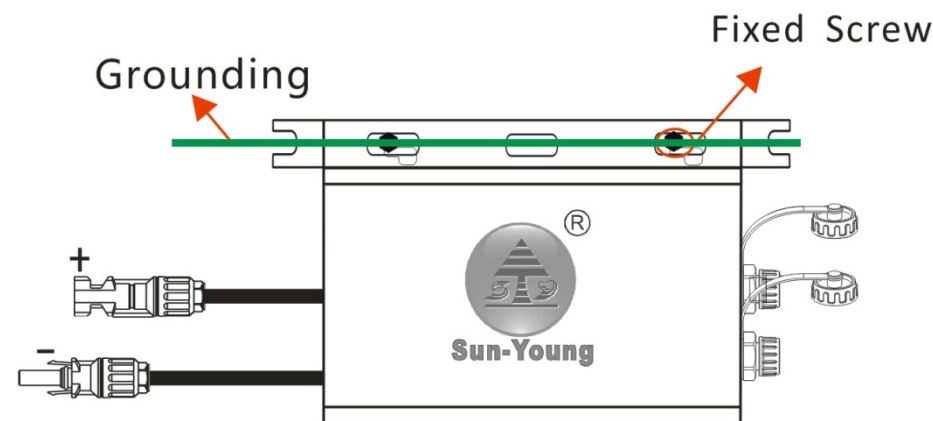


- Properly connect the positive and negative of solar panel and Smart Microinverter,

Solar Panel

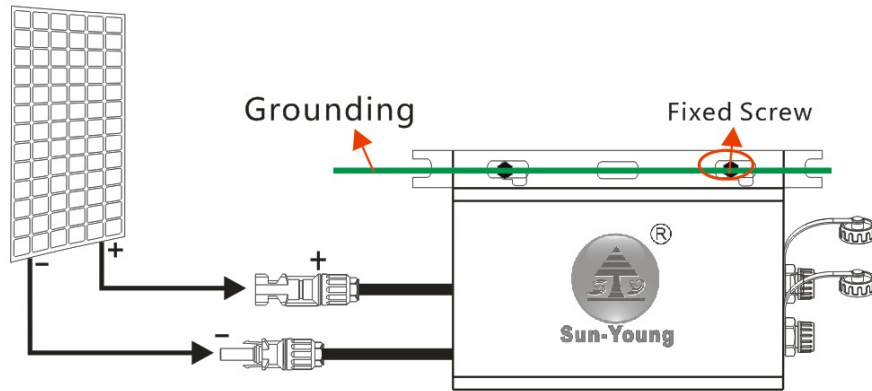

4. AC power cable connects with Smart Microinverter and residential power grid which refers to low voltage civilian single-phase power grid.

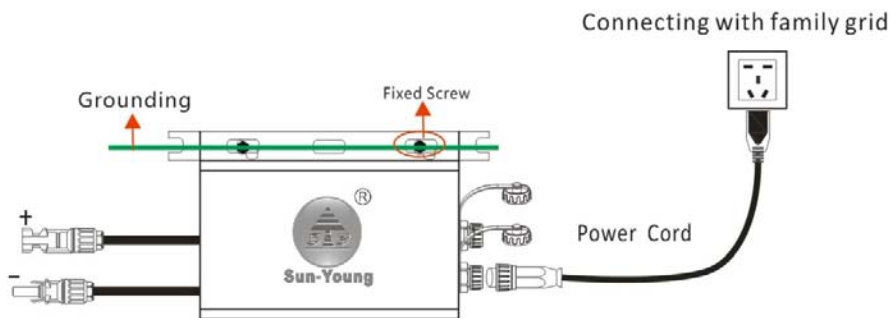

5. Switch on power grid after check for input and output connections are correct and then switch on the Smart Microinverter. Red/green LED lights up first, and red LED lights off follow on and green LED lights on and flash fast, next LED flash slowly which indicates that Smart Microinverter is in processing of MPPT operation for tracking down the Maximum power point from solar module. Finally, green LED last lights on and indicates that maximum power point lock-in. Smart Micro inverter proper functioning and output steady.


Status Indications of LED

1. Red LED indicator lights up under any conditions include but not limited:
 - a) Low-voltage protection (DC input voltage lower than Min. input voltage of inverters),
 - b) Over-voltage protection (DC input voltage higher than Max. input voltage of inverters),
 - c) Over-temperature protection (inverters will shut down for power output when temperature of body of inverters higher than 65-75°C, and inverter will be automatically restart up when temperature down to 40-50°C.)
 - d) Power grid fault protection when 110VAC or 220VAC grid power outage and/or tripped.
 - e) Islanding protection: inverter will be automatically shut down for power output when disconnect with power grid.
 - f) Short-circuit protection: inverter stops work when output line short-circuits..
 - g) Red LED lights on for a while and then green LED lights on in one second when inverter starts to work.
2. Green LED indicator lights up under any conditions include but not limited:
 - a) Green LED flash: adjusting for power output, MPPT operating for tracking.
 - b) Green LED long light: indicates inverter locking-in Max. output power operation status.
 - c) When green LED flash from the bottom up in turns, it is indicates the inverter is locked at maximum power point as well as the output power is steady. The more power output, the faster running of green LED.
3. Please note that above operations only run at grid-connected status.




Note

- a) Two type AC cables for connecting when placed microinverters by stack. One is for connecting to utility grid, the other is for parallel connecting.
 - A. For placing single microinverter, insulations seal for unused AC output terminal firmly to avoid electric shock.
 - B. For placing stacked microinverters, insulations seal for unused AC output terminal of the last microinverter firmly to avoid electric shock.
- b). Max. 10 microinverters can be paralleled for a small group because of power load capacity of AC cables when paralleled stacking use. Too much microinverters for paralleled stacking will be leading to AC cables heat or burn down due to overloads.
- c). When stacking use, in theory, unlimited small groups can be setup base on sharing a AC main cable which is enough capacity for loads. For make sure the AC main cable you should use for connecting the small groups', users should check with the professional electrician for counting out the total power of all of small group's and the current.
- d). When paralleled stacking use, the microinverters placed in the end of each small group, there will be one unused connector of such microinverters, this unused connector should be screw up and prevent electric shock due to careless touching and the cap screw off.
- e). Microinverter will be automatic detect AC power grid and DC input data after DC power sources correct connection and grid switching on. Microinverter will be automatic startup and starting to operate after all condition for operation is satisfied.
- f). Microinverters paralleled stacking use also are available for batteries, small power wind generator which output DC directly or output DC through AC TO DC controller operation.
- g). Such paralleled stacking small groups are unlimited for PV system, only a set of AC power cable will be needed for connecting each small group, the more small groups setup, the high power output.

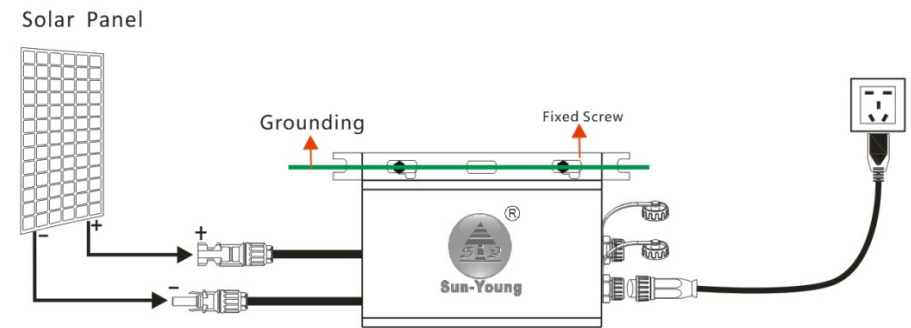

AC waterproof Connectors

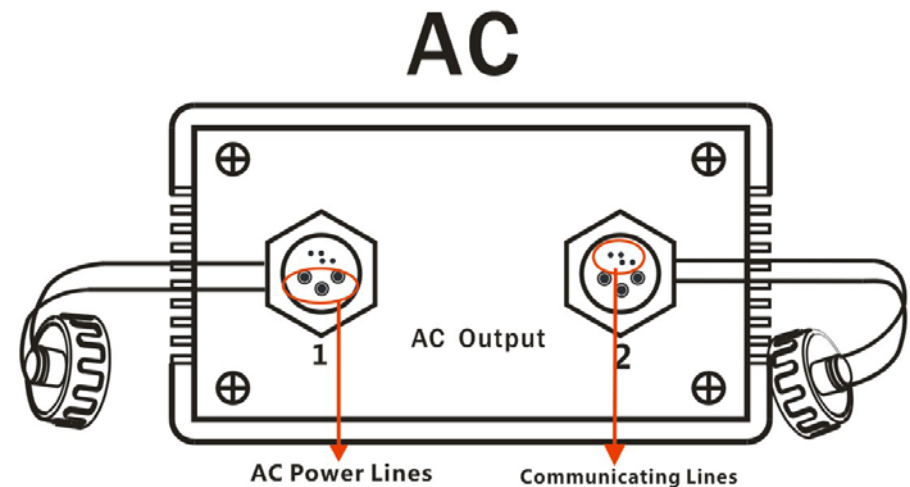

There are two connectors design for inverters, terminal connector included AC power line and communication data line. Two connectors are the same and can change at random. The electricity power cable which connecting to grid, no need data line. User should wrap up data line to avoid touching with electric conductor. AC power up for the RF transmit-receive module, RF transmit-receive module will be out of service when grid power off.




Cables

1. AC Power Cord



European Standard

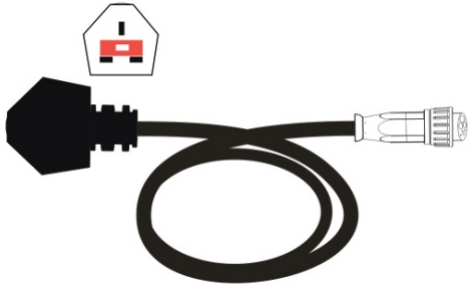

UK Standard




Australia Standard




US Standard

2. Parallel Power Cable

Please note that directionality of connecting cables between inverters

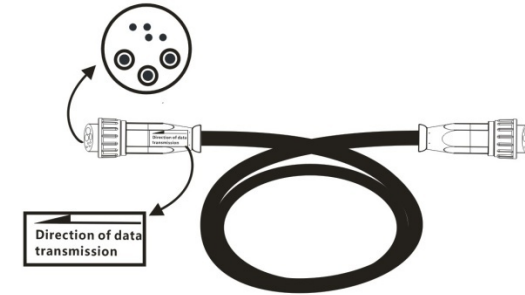

3. Extension Power Cable

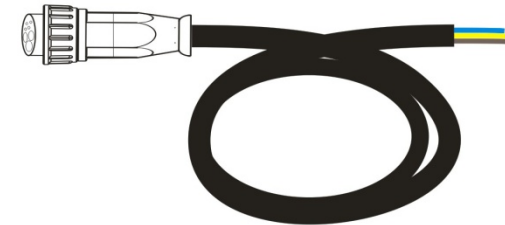

4. Transmission Direction of Parallel Power Cable

When connecting for system, data transmission direction start from inverter which closest to grid to RF transmit-receive module. Please pay attention to cable direction, un-correct connection will leading to RF transmit-receive module can't be receive inverter data correctly.

