



MAGNUM PRO

CODE: S3egLZctcmp_0ww 1602g970+A01/160709

MAGNUM PLUS

CODE: S3egLZctcms_0ww 1602g970+A01/160709

USER MANUAL



Copyright 2009 LORENZ ELECTRONICS Italia.

All rights reserved. Printed in Italy. No part of this publication may be reproduced or distributed in any form or by any means, or stored in a database or retrieval system, without prior written permission of the publisher.

Warning!

Electronic charts displayed by the chart plotter are believed to be accurate and reliable, but they are not intended to substitute for the official charts which should remain your main reference for all the matters related to the execution of a safe navigation.

For this reason we would like to remind you that you are required to carry on board and use the officially published and approved nautical charts.

Caution

- Please read through this manual before the first operation. If you have any questions, please contact the Company customer service or your local dealer.
- The chart plotter is not built water proof. Please give attention to avoid water intrusion into the chart plotter. Water damage is not covered by the warranty.
- Extensive exposure to heat may result in damage to the chart plotter.
- Connection to the power source with reversed polarity will damage the chart plotter severely. This damage may not be covered by the warranty.
- The chart plotter contains dangerous high voltage circuits which only experienced technicians can handle.
- The **C-MAP By JEPPESEN C-CARD** are available from your local dealer.
- We will not be liable for errors contained herein, or for incidental or consequential damages in connection with the performance or use of this material.
- Exposure of display to UV rays may shorten life of the liquid crystals used in your chart plotter. This limitation is due to the current technology of the LCD displays.
Avoid overheating which may cause loss of contrast and, in extreme cases, a darkening of the screen.
Problems which occur from overheating are reversible when temperature decreases.

Warning on Serial Ports Connection

Please be aware that the serial ports are not opto-isolated and then the external device is electrically connected to the chart plotter. This allows the connection of high speed devices, like Fish Finder. If you are connecting a NMEA0183 device and you would like to isolate it from the chart plotter, you have to add the opto-isolator externally.

Table of Content

1	Introduction	13
	1.1 CONVENTIONS	13
	1.2 FEATURES	13
	1.2.1 Specifications	14
	1.2.1.1 Main Characteristics	14
	1.2.1.2 Physical Characteristics	17
	1.3 BASICS	18
2	Before You Begin	19
	2.1 THE KEYBOARD	19
	2.2 TURNING THE CHART PLOTTER ON AND OFF	22
	2.2.1 Turning On	22
	2.2.2 Turning Off	22
	2.3 SELECTING THE USER INTERFACE LANGUAGE	22
	2.4 EXTERNAL CONNECTIONS	23
	2.4.1 GPS Connections	23
	2.4.2 Autopilot Connections	23
	2.4.3 External NMEA Connections	24
	2.4.4 C-COM Connections	25
	2.4.5 External Alarm Connection	25
	2.5 ADDITIONAL C-CARDS	26
	2.5.1 Inserting C-CARD	26
	2.5.2 Removing C-CARD	27
	2.6 MENU OPTIONS	27
	2.7 DATA ENTRY	27
3	For the New User	29
	3.1 SCREEN DISPLAY CONFIGURATION	29
	3.1.1 Charts and Text Area	30
	3.1.2 Depth Graph	31
	3.1.3 GPS Status Page	32
	3.1.4 Navigation Data Page	32
	3.1.5 3D Navigation Data Page	33
	3.1.6 Wind Data Page	33
	3.2 BASIC SETTINGS	33
	3.2.1 Course Vector	34
	3.2.2 Screen Amplifier	34
	3.2.3 Advanced Functions	34
	3.2.4 User Points	34
	3.2.5 Depth Window	34
	3.2.6 Units Selection	34
	3.2.7 Nav Aids Presentation	35
	3.2.8 Input/Output Menu	35

3.2.8.1	Port 1/Port 2/Port 3/Port 4/Port 5 Input	35
3.2.8.2	Port 1/Port 2/Port 3/Port 4/Port 5 Output	36
3.2.8.3	Port 1/Port 2/Port 3/Port 4/Port 5 NMEA Output	36
3.2.8.4	GPS Setup Menu	36
	Restart GPS	36
	Differential Correction Source	36
	Navigation Speed	36
3.2.8.5	Send & Receive Marks/Routes	36
3.2.8.6	C-Link	37
3.2.8.7	External Signal	37
3.2.8.8	Cable Wiring Pages	37
3.2.9	C-Voice Menu	37
3.2.9.1	Navigation	37
3.2.9.2	Echosounder	37
3.2.9.3	Output Port	38
3.3	A-B-C-D FUNCTION	38
3.3.1	Inserting the A-B-C-D points	38
3.3.2	Deleting the A-B-C-D points	38
3.3.3	Navigating on the A-B-C-D points	39
3.4	NAVIGATING TO A SINGLE DESTINATION	39
3.4.1	Distance and Bearing to Target	39
3.4.2	Time To Go	39
3.4.3	Deleting Target	39
3.5	C-MAP BY JEPPESEN MAX CARTOGRAPHY INFORMATION	40
3.5.1	Map Settings Menu	41
3.5.1.1	3D View (Perspective View)	41
3.5.1.2	Palette	42
3.5.1.3	Map Orientation	42
3.5.1.4	Zoom Type	42
3.5.1.5	Fonts & Symbols	43
3.5.1.6	Dynamic Nav-Aids	43
3.5.1.7	Mixing Levels	43
3.5.1.8	Safety Status Bar (DSI - Data Safety Indicator)	44
3.5.1.9	Satellite Imagery	45
3.5.1.10	Currents Prediction	45
3.5.1.11	Other Map Configurations	45
3.5.1.12	Selecting the Chart Language	49
3.5.2	Getting Automatic Info	49
3.5.2.1	Info on objects with Pictures	50
	Change Picture Size	50
3.5.2.2	Quick Info on Lakes	51
3.5.2.3	Full Info on Lakes	51
3.5.3	Info Tree and Expanded Info page	52
3.5.4	Info Function	52
3.5.5	Getting Port Info	53
3.5.6	Getting Tide Info	53
3.5.7	Find Function	55
3.5.7.1	Finding Port Services	55
3.5.7.2	Finding Tide Stations	55
3.5.7.3	Finding Wrecks	55
3.5.7.4	Finding Obstructions	55
3.5.7.5	Finding Port By Name	55
3.5.7.6	Finding Port By Distance	56

3.5.7.7	Finding Lakes Information	56
3.5.7.8	Finding Lakes By Name	57
3.5.7.9	Finding Points Of Interest	57
3.6	MAN OVERBOARD (MOB)	57
3.6.1	Inserting MOB	57
3.6.2	Deleting MOB	58

4 For the Experienced User 59

4.1	MORE ABOUT CREATING AND USING ROUTES	59
4.1.1	Waypoint	59
4.1.1.1	Adding Waypoint	59
4.1.1.2	Creating a route	60
4.1.1.3	Deleting Waypoint	60
4.1.1.4	Deleting route	61
4.1.1.5	Distance and Bearing to Target	61
	Time To Go	62
	Deleting Target	62
4.1.1.6	Moving Waypoint	62
4.1.1.7	Inserting Waypoint	63
4.1.1.8	Editing Waypoint	64
4.1.1.9	Finding info on Waypoints: User Points List page	65
	Finding User Points	65
	Deleting selected User Point	65
	Deleting all User Points with the same symbol	65
	Deleting all User Points with the same type	65
	Deleting all stored User Points	66
	Send/Receive User Points	66
4.1.2	Routes	66
4.1.2.1	Selecting route	66
4.1.2.2	Route name	66
4.1.2.3	Deleting route	66
4.1.2.4	Reversing route	67
4.1.2.5	Route color	67
4.1.2.6	Send/Receive route	67
4.1.2.7	Finding information on route: Route Report	67
	Selecting route	68
	Changing Speed & Fuel values	68
	Reversing route	68
	Deleting route	68
4.1.2.8	Safe Route Checking	69
4.2	MARK & EVENT	70
4.2.1	Marks	70
4.2.1.1	Adding Mark	70
4.2.1.2	Deleting Mark	70
4.2.1.3	Goto	71
4.2.1.4	Moving Mark	71
4.2.1.5	Editing Mark	71
4.2.1.6	Finding information on Marks: User Points List page ..	72
4.2.1.7	Add to route	72
4.2.2	Events	72
4.2.2.1	Adding Event	73
4.2.2.2	Deleting Event	73
4.2.2.3	Goto	73

	4.2.2.4	Editing Event	73
	4.2.2.5	Finding information on Events: User Points List page ..	74
	4.2.2.6	Add to route	74
4.3	EBL & VRM FUNCTION		74
	4.3.1	Placing EBL & VRM	74
	4.3.2	Deleting EBL & VRM	75
	4.3.3	Editing EBL & VRM	75
4.4	MORE ABOUT A-B-C-D FUNCTION		75
	4.4.1	Inserting the A-B-C-D points	75
	4.4.2	Deleting the A-B-C-D points	76
	4.4.3	Deleting the A-B-C-D segment	76
	4.4.4	Moving the A-B-C-D points	76
	4.4.5	Inserting the A-B-C-D points	76
	4.4.6	Navigating on the A-B-C-D points	76
4.5	USING THE TRACK FUNCTIONS		76
	4.5.1	Selecting active Track	77
	4.5.2	Enabling Track storing	77
	4.5.3	Displaying Track	77
	4.5.4	Selecting track Color	77
	4.5.5	Deleting Track	77
	4.5.6	Deleting Selected Track	77
	4.5.7	Selecting Track memorizing type	78
	4.5.8	Selecting distance	78
	4.5.9	Selecting time	78
4.6	USER C-CARD MENU		78
	4.6.1	Saving File	79
	4.6.2	Loading File	79
	4.6.3	Deleting File	80
	4.6.4	Formatting User C-CARD	80
	4.6.5	Changing User C-CARD	80
4.7	C-LINK		80
	4.7.1	How C-Link system works	80
4.8	C-LINK NAVIGATION DATA TRANSFER		81
	4.8.1	Operations	81
		4.8.1.1	Introductive elements
		4.8.1.2	C-Link serial connection
		4.8.1.3	Master Chart Plotter
			Operating mode
		4.8.1.4	Slave Chart Plotter
			Operating mode
		4.8.1.5	C-Link Navigation Data: acquisition and display
		4.8.1.6	Graphical representation on Map Display
		4.8.1.7	Route Data Report
		4.8.1.8	Quick Info
			Route Navigation: Quick Info on the Destination
			Quick info on Single Destination
5	Advanced Settings		87
5.1	SETUP		87
	5.1.1	Time Reference	87
	5.1.2	Time Format	87
	5.1.3	Date Format	88
	5.1.4	Wind Speed	88

5.1.5	Beeper	88
5.1.6	External Wpt	88
5.1.7	Ship Icon Mode	88
5.2	FIX	88
5.2.1	Fix Correction	89
5.2.2	Compute Correction	89
5.2.3	Correction Offset	89
5.2.4	Position Filter	89
5.2.5	Speed Filter	89
5.2.6	Filter Dump	89
5.2.7	Dead Reckoning	90
5.2.8	Static Navigation	90
5.3	NAVIGATE	90
5.3.1	Coordinate System	90
5.3.2	Fix Datum	90
5.3.3	Map Datum	91
5.3.4	Orientation Resolution	91
5.3.5	Roll Road Scale	91
5.3.6	Reset Partial and Total Trip	91
5.4	COMPASS	91
5.4.1	Bearings	92
5.4.2	Variation	92
5.4.3	Calibration	92
5.5	ALARMS	92
5.5.1	Arrival Alarm	92
5.5.2	XTE Alarm	93
5.5.3	Anchor Alarm	93
5.5.4	Depth Alarm	93
5.5.5	External Alarm	93
5.5.6	Grounding Alarm (Guardian Technology)	93
5.5.7	Grounding Alarm Range	94
5.5.8	Grounding Alarm Width	94
5.5.9	Grounding Alarm Report	94
5.6	SIMULATION	94
5.6.1	Activate Simulation	94
5.6.2	Speed	95
5.6.3	Heading	95
5.6.4	Date and Time	95
5.6.5	Cursor Control	95
5.7	AIS MENU	95
5.7.1	AIS System Definitions	96
5.7.2	AIS Menu	97
5.7.2.1	Display	97
5.7.2.2	Activation range	98
5.7.2.3	CPA Alarm	98
5.7.2.4	CPA Limit	98
5.7.2.5	TCPA Alarm	98
5.7.2.6	TCPA Limit	98
5.7.3	To Set the Chart Plotter for Receiving AIS	98
5.7.4	Quick Info on AIS Target	98
5.8	C-STAFF	99
5.9	C-WEATHER SERVICE	99
5.9.1	C-Weather Service Menu	100

5.9.1.1	Download	100
	Select Country to Call	100
	SIM PIN	100
	Download Area	100
5.9.1.2	Copy from User C-CARD	100
5.9.1.3	Weather Forecast	101
5.9.1.4	Real Time View	101
5.9.1.5	Type of Data	101
5.10	DSC	101
5.10.1	Distress Call and Position Request	102
5.10.2	DSC Menu	103
5.10.2.1	DSC LOG	103
	Locate	103
	Delete	103
	Delete All	103
	Hide/Show	103
	Position Request/Distress Call	103
5.10.2.2	DSC Directory	104
	Edit	104
	Add	104
	Delete	104
	Delete All	104
5.10.3	Quick Info on DSC Icons	105
5.11	MOBILARM SYSTEM	105
5.11.1	Software Setup	105
5.11.2	MOBILARM Status	105
5.11.3	MOBILARM PTX	106
5.11.3.1	PTX is received	106
5.11.3.2	PTX is received again	107
5.11.4	Moving Cursor on the PTX Icon	107
5.11.4.1	Deleting PTX	108
5.11.4.2	Goto PTX	108
5.11.4.3	MOBILARM PTX List Page	108
5.11.4.4	Show PTX	109
5.12	FISH FINDER MENU	109
5.13	RADAR SETUP MENU	110
6	For the Technician	111
6.1	DIMENSIONS	111
6.2	INSTALLATION	111
6.3	EXTERNAL WIRING	112
6.4	TYPICAL CONNECTIONS - "POWER & I/O" Connector	112
6.4.1	GPS Connections	112
6.4.2	Autopilot Connections	113
6.4.3	External NMEA Connections	114
6.4.4	C-COM Connection	114
6.4.5	External Alarm Connection	114
6.6	TROUBLESHOOTING	115
6.6.1	Problems and Solutions	115
6.6.2	Quick Reference Guide	115
6.6.3	If you need assistance	115
6.6.3.1	World Background Charts	116
	Worldwide Background Update	116

6.7	SYSTEM TEST	116
6.7.1	RAM Menu	117
6.7.2	Dim Menu	117
6.7.3	Cartridges	117
6.7.4	Serial Ports	118
6.7.5	External Alarm	118
6.7.6	Display Settings	118
A	Terms	121
	Analytical Index	127

1

Introduction

Congratulations on your purchase of the chart plotter!

If you have not used a position-finding instrument before and intend to use your chart plotter for navigating, we suggest you should read this User Manual and make sure you are familiar with its contents.

The User Manual is divided into three main parts. Chapter "Before You Begin" introduces you to the basic information to get you start using the chart plotter. Chapter "For the New User" should be read first to become familiar with your new instrument. Chapter "For the Experienced User" introduces the advanced features of the chart plotter.

1.1 CONVENTIONS

Throughout this User Manual, the labelled keys are shown in capitals letters enclosed between single inverted commas, for example 'MENU'.

Menu operations are in bold characters listed by keys sequence with the menu names enclosed between inverted commas, for example '**MENU**' + '**BASIC SETTINGS**' + '**ENTER**' + '**INPUT/OUTPUT**' + '**ENTER**' means: press the 'MENU' key, using the cursor key select the Basic Settings menu and press 'ENTER', using the cursor key select the Input/Output menu and press 'ENTER'.

Terms underlined, for example Mark, are explained in the Appendix "Terms".

1.2 FEATURES

The chart plotter is a computer specifically designed for nautical use but, more precisely, to ease and speed up all calculations, which so far have been done manually. If

connected to a positioning instrument, the chart plotter displays the current position, the speed, and the heading of the boat and its Track. The user information like Waypoints, Marks and Tracks can then be stored on a User C-CARD and can be recalled at any time. On the screen are shown navigation data and cartographic information obtained from electronic charts of **C-MAP By JEPPESEN C-CARD**.

When the package containing the chart plotter is first opened, please check it for the following contents (if any parts are missing contact the dealer the chart plotter was purchased from):

- External bracket kit
- AUX IN I/O cable 1,5 mt/5.9 feet
- 2 Fuses 1 Amp. + fuseholder
- I/O cable (CBC0FS0603)
- Power supply and I/O (CBC0FS0804)
- Video Cable (CBCHMS0700)
- User Manual

C-MAP By JEPPESEN C-CARD (cartography data cards) are available through your local dealer. For additional information on **C-MAP By JEPPESEN** Cartography visit web site at www.jepesen.com.

1.2.1 SPECIFICATIONS

1.2.1.1 Main Characteristics

Recordable Individual points

- User Points : 1000
- Type of User Points : 16

Routes

- Routes : 20
- Max User Points per Route : 100

Tracking

- Tracks : 5
- Points per Track : 5000
- Step by Distance : 0.01, 0.05, 0.1, 0.5, 1, 2, 5, 10 Nm
- Step by Time : 1, 5, 10, 30 Sec, 1, 5, 10 Min

Cartographic Functions

- Detailed Map by using **C-MAP By JEPPESEN C-CARD**
- "C-MAP By JEPPESEN" MAX electronic charts, object-oriented chart system with enhanced functionality including:
Guardian alarm, Safety Status Bar, Safety route check

- Perspective view
- Satellite image coverage
- Turbo and Smooth Zoom
- Multilanguage
- Enhanced Port information database
- Tides & Currents data
- Photos & Diagrams
- Automatic information on all chart objects
- Search function for ports, tidal information, service facilities

Coordinate System (ddd mm ss, ddd mm.mm, ddd mm.mmm, UTM, OSGB, TD)

- Map Datum
- Display Mode (Full, Medium, Low, Radar, Tides, Custom)
- Marine Settings
 - Names, Name Tags, Nav Aids & Light Sectors, Attention Areas, Tides & Currents, Seabed Type, Ports & Services, Tracks & Routes
- Depth Settings
 - Depth Range Min/Max
- Land Settings
 - Land Elevations, Land Elevation Values, Roads, Points Of Interest
- Chart Settings
 - Lat/Lon Grid, Chart Boundaries, Value-Added Data, Chart Lock
- Underwater Objects Settings
 - Underwater Objects Limit, Rocks, Obstructions, Diffusers, Wrecks

Map Settings

- 3D View (Perspective View)
- Palette
- Map Orientation (North, Head, Course)
- Zoom Type
- Fonts & Symbols
- Dynamic Nav-Aids
- Mixing Levels
- Safety Status Bar
- Satellite Imagery
- Currents Prediction
- Chart Language

Fix Functions

- Fix Correction (manual and automatic)
- Position Filter
- Speed Filter

- Dead Reckoning
- Reset Total and Partial Trip
- Rolling Road Scale
- Fix Datum
- Compass Calibration
- Bearings True and Magnetic
- Variation user selectable
- Course Vector
- Static Navigation
- A-B-C-D Function
- EBL & VRM Function

Report Pages

- Depth Graph Page
- GPS Status Page
- Navigation Data Page
- 3D Navigation Data Page
- Fish Finder full screen Page (*)
- Fish Finder Dual Frequency Page (*)
- Fish Finder Zoom Page (*)
- Chart - Fish Finder Page (*)
- Radar full screen Page (*)
- Radar - Chart Page (*)
- Radar - Fish Finder Page (*)
- Radar - 3D Navigation Data Page (*)
- Radar - Fish Finder - Chart - NavData Page (*)
- Wind Data Page
- About Page

Special Functions

- C-Link, C-Weather Service and C-Staff
- AIS (Automatic Identification System)
- DSC (Digital Selective Calling)
- MOBILARM System
- Fish Finder capability if connected to Fish Finder Black Box
- Radar functions display if connected to Radar scanner
- Automatic Info
- Find (Port Services, Tide Stations, Wrecks, Obstructions, Port By Name, Port By Distance, Lakes Information, Lakes By Name, Points Of Interest)
- Navigation to Destination
- Speed Unit (Mph, Kts, Kph)

- Distance Unit (Km, Nm, Sm)
- Depth Unit (Ft, FM, Mt)
- Altitude Unit (Ft, FL, Mt)
- Temperature Unit (°C, °F)
- Alarms Handling
Arrival Alarm, XTE Alarm, Anchor Alarm, Depth Alarm, Grounding Alarm, Grounding Alarm Range, Grounding Alarm Report
- MOB Function
- Simulation
Speed, Heading, Date, Time, Cursor Control, Activate Simulation

Auxiliary Memory

- User C-CARD 1/2/4 MB

Interface

- 5 I/O ports

Note*

If connected to Fish Finder Black Box and/or Radar scanner.

1.2.1.2 Physical Characteristics

Controller size (inch/mm)

- 6.8" x 4.2" x 3.2" (172.5 mm x 106.5 mm x 80.2 mm)

Controller weight

- 600 gr

Display Resolution

- 640 x 480 or 800 x 600 or 1024 x 768 pixels user selectable

Video Output

- Compatible VGA (optional adapter cable)

Power consumption

- 2.5 Watt max a 35 Volt dc

Operating Temperature Range

- from 0°C to 55°C (from 32°F to 131°F)

Memory

- Non volatile with battery back-up

Keyboard

- Silicon rubber, backlight

1.3 BASICS

The chart plotter is controlled by using 14 keys. There is also a cursor key to move a cursor across the screen. As you press a key, a single audio beep confirms the key action; every time the key pressed is not valid, three rapid beeps sound indicates that no response is available.

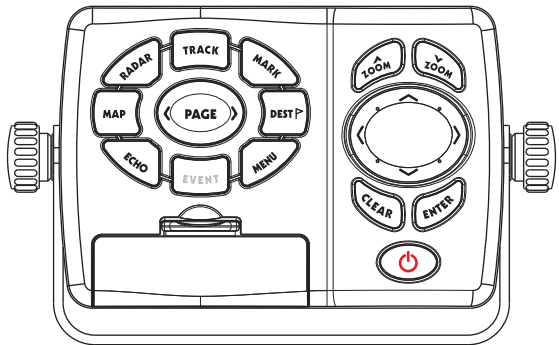


Fig. 1.3 - MAGNUM Pro

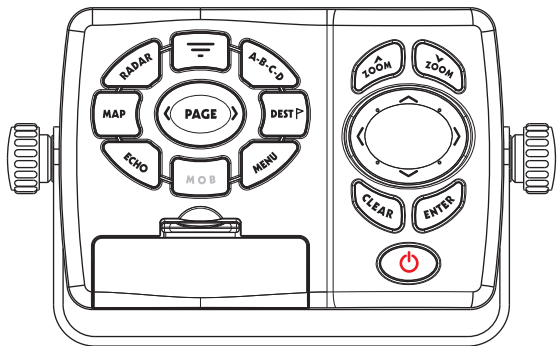


Fig. 1.3a - MAGNUM Plus

2

Before You Begin

This chapter provides basic information to get you start using the chart plotter; it will help you to become familiar with the chart display and the functions of the controls before you start using the chart plotter.

2.1 THE KEYBOARD

The  'POWER' key

Press 'POWER' down for 1 second to turn the chart plotter On. Press and hold 'POWER' down (once the chart plotter has been turned On) for 3 seconds turns the chart plotter Off.

Press and immediately release 'POWER' to adjust the keyboard brightness.

The  key


Excluding specific situations, returns to the previous menu or leaves a menu without making changes. If you are not into a menu, if the GPS computing a valid fix position and the chart plotter is not in Home mode, pressing 'CLEAR' sets Home mode. When Home (called also Navigate) mode is set, the cursor is not shown anymore and all cartographic functions (zoom, scroll, etc.) are leaded by the fix position. The fix is centered in the map display and the map scrolls underneath as the fix position changes. To deactivate Home mode move the cursor. In Basic Mode deletes the A, B, C, D points, the User Point (Mark, Event, Waypoint), the MOB, the Target identified by the cursor.

The  key

Selects the desired option, confirms selection.

ONLY ON MAGNUM PRO pressing 'ENTER' in Basic Mode places A, B, C, D points on the cursor coordinates, in Advanced Mode creates Objects (Waypoint, EBL/VRM, A-B-C-D).


ONLY ON MAGNUM PLUS pressing 'ENTER' in Advanced Mode creates Objects (Mark, Event, Waypoint, EBL/VRM).

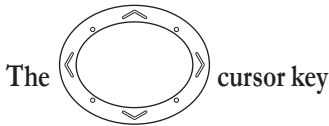

The **cursor key**

Moves the cursor about on the display screen, quickly and accurately. The cursor starts moving slowly the cursor key is initially pressed then accelerates after a while if the cursor key is pressed and hold. It also scrolls the desired option in the menu page(s): up/down move the current menu selection; right executes the function assigned to the active selection in the menu (same as 'ENTER'); left quit menu (same as 'CLEAR').

If in Home (Navigate) mode, it allows to exit from Home mode.



The **keys**

Press 'ZOOM IN' shows more details of a smaller area, by changing the chart scale and zooming in on your display. Press 'ZOOM OUT' to operate similarly to the 'ZOOM IN', except in reverse, changing the scale and showing a wider, otherwise less detailed view.



The **key ONLY ON MAGNUM PLUS**

Press 'MOB' to place MOB (Man OverBoard). Pressing 'MOB' when the MOB is placed to delete MOB.



The **key ONLY ON MAGNUM PRO**

In Basic Mode pressing 'EVENT' places Event at ship's coordinates; in Advanced Mode places, deletes, edits and moves Event.

Pressing 'EVENT' for 2 seconds sets MOB (Man Overboard). Pressing 'EVENT' for 2 seconds when the MOB is placed to delete MOB.



The **key**

Pressing 'MENU' selects the Functions Menu.



The **key**

Place the cursor and press 'DEST' to set Target.



The **key ONLY ON MAGNUM PLUS**

Press 'A-B-C-D' to place the A, B, C, D points at cursor coordinates.

The  key ONLY ON **MAGNUM PRO**

In Basic Mode pressing 'MARK' places Mark at cursor coordinates; in Advanced Mode places, deletes, edits and moves Mark.

The  'FUNCTION' key ONLY ON **MAGNUM PLUS**

This key can be customized to have a quick access to the main functions. Press 'FUNCTION' for 1 second allows setting the shortcut to one of the following functions:

'WIND'	select Wind pages
'MARK'	place Mark
'EVENT'	place Event
'WAYPOINT'	place Waypoint
'EBL-VRM'	place EBL and VRM
'C-WEATHER'	shows C-Weather Forecast mode

Press and release 'FUNCTION' executes the function that was assigned.

Note

The selections Mark, Event, Waypoint and EBL-VRM are available even if Advanced Functions is Off.

The  key ONLY ON **MAGNUM PRO**

Pressing 'TRACK' enables or disables the track storing.

The  key

If Radar is connected, pressing 'RADAR' selects the Radar Page and pressing 'RADAR' for 1 second selects the Radar menu.

The  key

Pressing 'MAP' selects the desired map page and pressing 'MAP' for 1 second selects the Functions menu.

The  key

If Fish Finder is connected, pressing 'ECHO' selects the Fish Finder Page. and pressing 'ECHO' for 1 second selects the Fish Finder menu.

The  key

Pressing 'PAGE' selects the page you want.

2.2 TURNING THE CHART PLOTTER ON AND OFF

Before powering On the chart plotter, check for the correct voltage (10-35 volt dc) and the correct connections with the positioning instrument:

POWER & I/O CONNECTOR		
PIN #	CABLE WIRE COLOR	FUNCTION
1	BLACK	GND/COMMON
2	RED	+10-35 Vdc

Fig. 2.2 - Power On

2.2.1 TURNING ON

Press and hold the right side of 'POWER' for 1 second. The chart plotter emits one rapid beep sound and a title page is opened.

After a few seconds, the first of the two Caution Notice pages is displayed, reminding you that the chart plotter is only an aid to navigation, and should be used with appropriate prudence. The electronic charts are not intended to substitute for the official charts. Then the cartographic screen is displayed.

2.2.2 TURNING OFF

Press the right side of 'POWER' and hold for 3 seconds: a countdown timer appears on the screen, if you release the key before the countdown timer reaches zero, the chart plotter will remain On.

2.3 SELECTING THE USER INTERFACE LANGUAGE

It is possible to set the language to display menus, data pages, warning/alarm messages, full/quick info, list of objects found by find/nearest function, and on charts (such as place's names, buoy's names and so on). The default setting is Italian.

- To select the language you want:
- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "LANGUAGE" + 'ENTER'
- Choose the language you prefer and press 'ENTER' to confirm.

Note

If the selected language is not available on cartographic data, English language is used instead.

WARNING !!!

If you have accidentally selected an incomprehensible language, and you don't be able to reselect your language (the above procedure is not of help to you), follow this procedure: press **'MENU'**, move the cursor to highlight the third selection (starting from the top) which corresponds to the Basic Settings menu and press **'ENTER'**. Then a window appears with "Language" message, press **'ENTER'**; now select your language and press **'ENTER'** again. Anyway if you in trouble, see Chapter "System Test" for a R-AM Clear operation: the chart plotter will also return all selections, in particular language, to original default values.

2.4 EXTERNAL CONNECTIONS

2.4.1 GPS CONNECTIONS

Connects the GPS to the GPS serial Port 3.

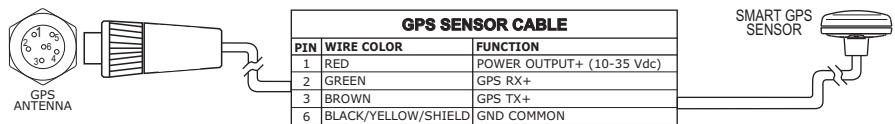


Fig. 2.4.1 - GPS Connection on Port 3

Control the input setting following the procedure:

- **'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "PORT 3 INPUT" + 'ENTER' + "NMEA-4800-N81-N" + 'ENTER'**

The GPS can be connected also to the Port 1 and 2, in this case select NMEA-0183 4800-N81-N on the used port.

2.4.2 AUTOPILOT CONNECTIONS

To connect the Autopilot to the serial Port 1 see the following picture:

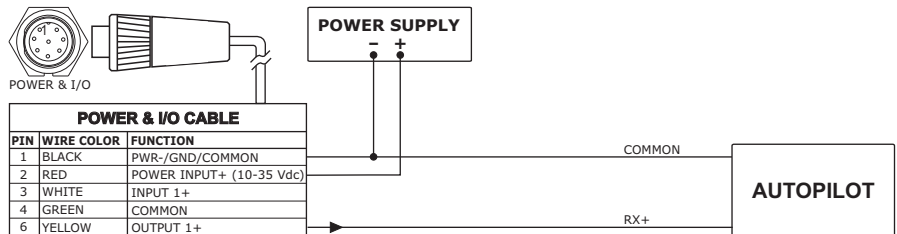


Fig. 2.4.2 - Autopilot Connections on Port 1

To choose your preferred setting follow the procedure:

- **'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "PORT 1 OUTPUT" + 'ENTER'**

Then choose your preferred setting among the NMEA available settings NMEA-

0183 4800-N81-N, NMEA-0180, NMEA-0180/CDX (the default setting is NMEA-0183 4800-N81-N) and press 'ENTER' to confirm.

To connect the Autopilot to the serial Port 2 see the following picture:

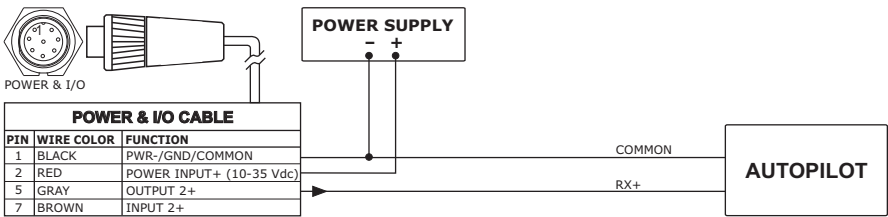


Fig. 2.4.2a - Autopilot Connections on Port 2

To choose your preferred setting follow the procedure:

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "PORT 2 OUTPUT" + 'ENTER'

Then choose your preferred setting among the NMEA available settings NMEA-0183 4800-N81-N, NMEA-0180, NMEA-0180/CDX (the default setting is NMEA-0183 4800-N81-N) and press 'ENTER' to confirm.

2.4.3 EXTERNAL NMEA CONNECTIONS

To connect the External NMEA to the serial Port 1 see the following picture:

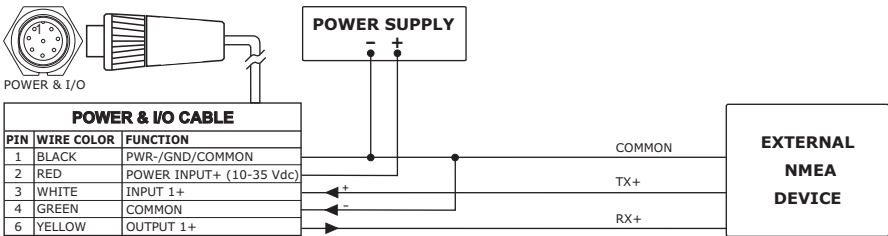


Fig. 2.4.3 - External NMEA Connections on Port 1

To choose your preferred setting follow the procedure:

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "PORT 1 INPUT" + 'ENTER'

Then choose your preferred setting among the NMEA available settings NMEA 1200-N81-N, NMEA 4800-N81-N, NMEA 4800-N82-N, NMEA 9600-O81-N, NMEA 9600-N81-N (the default setting is 4800-N81-N) and press 'ENTER' to confirm.

To connect the External NMEA to the serial Port 2 see the following picture:

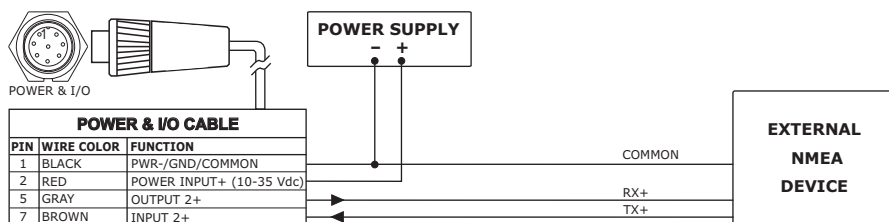


Fig. 2.4.3b - External NMEA Connections on Port 2

To choose your preferred setting follow the procedure:

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "PORT 2 INPUT" + 'ENTER'

Then choose your preferred setting among the NMEA available settings NMEA 1200-N81-N, NMEA 4800-N81-N, NMEA 4800-N82-N, NMEA 9600-O81-N, NMEA 9600-N81-N (the default setting is 4800-N81-N) and press 'ENTER' to confirm.

2.4.4 C-COM CONNECTIONS

To connect the modem C-COM to the chart plotter follow the procedure:

1. Connect Power & I/O as follows:

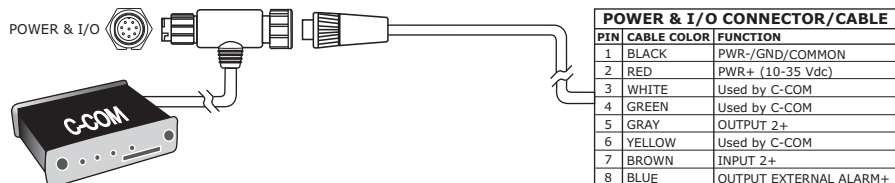


Fig. 2.4.4 - C-COM Connection

Note

The connection is valid for the C-COM IR and C-COM RS232 too.

2. Into the Input/Output menu, set the C-COM for Port 1 as follows:

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "PORT 1 INPUT" + 'ENTER' + "C-COM" + 'ENTER'

Also the modem C-COM can be connected to the other Ports, in this case set the format for the selected Port.

2.4.5 EXTERNAL ALARM CONNECTION

To connect the External Alarm device see the following picture:

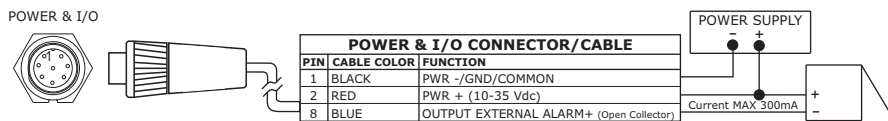


Fig. 2.4.5 - External Alarm Connection

Once the connection is active, to enable the External Alarm follow the procedure:

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ALARMS" + 'ENTER' + "EXTERNAL ALARM" + 'ENTER' + "ON" + 'ENTER'

2.5 ADDITIONAL C-CARDS

The chart plotter uses two types of C-MAP By JEPPESEN cartridges: either a chart cartridge or a data storage cartridge. A chart cartridge, called C-CARD, contains detailed charts of the area covered. A data storage cartridge, called User C-CARD can be used to permanently store your routes, Waypoints, Marks, Events and tracks.

Note

During normal operations the C-CARD should not be removed since the chart plotter may lock up.

2.5.1 INSERTING C-CARD

Hold the C-CARD by the short inclined side so that you can see the C-MAP label.

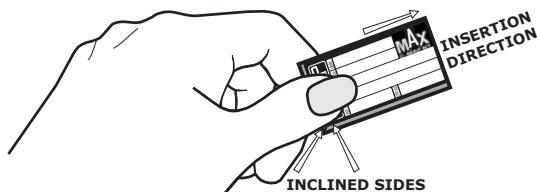


Fig. 2.5.1 - Inserting C-CARD (I)

Gently push the C-CARD into one of the two slots (1); push the C-CARD in as far as it will go, then move it to the bottom (2) to hold fixed into the slot (3).

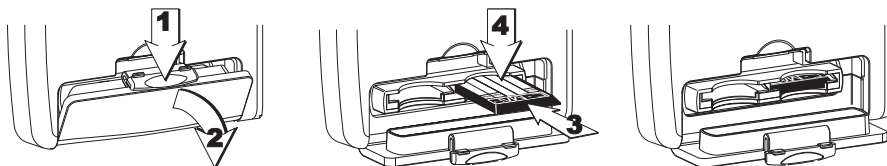


Fig. 2.5.1a - Inserting C-CARD (II)

2.5.2 REMOVING C-CARD

Press lightly the C-CARD you wish to remove (1) and move it to the top (2) until you hear a click: the C-CARD will ejected out of the slot (3).

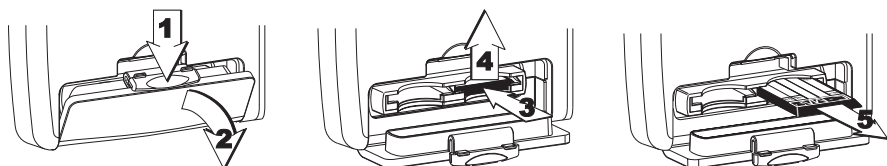


Fig. 2.5.2 - Removing C-CARD

Note

C-MAP BY JEPPESEN is continuously creating new charts and revising old ones. If you wish to receive information on the newest available charts, you can write for the catalog of available C-MAP BY JEPPESEN C-CARD at your dealer.

2.6 MENU OPTIONS

You may select how the chart plotter displays primary information (such as how time is displayed) from the Functions Menu.

► 'MENU'

Refer to Chapter 5 for more information on Main Menu.

2.7 DATA ENTRY

Information is keyed into the chart plotter when editing a Waypoint, entering a Route or using the Fix Correction functions. When the field is highlighted:

- Enter or edit data by pressing up/down cursor key to step through the available characters until the preferred character is displayed.

- Press right cursor key to move the cursor to the right.
- Use left cursor key to move the cursor to the left.

3

For the New User

In order to get started using your chart plotter, you must do the following things:

1) Your chart plotter must have been installed properly according to the installation instruction on Par. 6.2.

2) You must have performed the proper settings for use with your positioning instrument (see Par. 2.4) and inserting the C-CARD for navigating in area you wish (see Par. 2.5).

3) You must have turned on the chart plotter and adjust the brightness and contrast of the display (see Par. 2.2).

Once this is done, you can use your chart plotter for navigation.

3.1 SCREEN DISPLAY CONFIGURATION

Use 'PAGE' to select the desired page, in two different ways:

1) by showing the next page as the relative key is pressed

2) by selecting the page from the Page Selection menu

The desired way to select the page is set by changing "Page Preview" following the procedure:

➤ 'MENU' + "BASIC SETTINGS" + 'ENTER' + "PAGE PREVIEW" + 'ENTER'

When "Page Preview" is "Off", 'PAGE' allows setting the next page (1). When "Page Preview" is "On", 'PAGE' opens the Page Selection menu (2), on which the icons representing the pages are shown: the icon of the currently selected page is identified by a bold frame; move the selection with the Cursor keys or 'PAGE', the name of the currently selected page icon is shown in the lower side of the Page Selection menu. Pressing 'ENTER' the Page Selection menu is closed and the currently selected page is activated.

3.1.1 CHARTS AND TEXT AREA

The charts and text area can be shown in two different modes. The first is with text area on the right side of the screen:

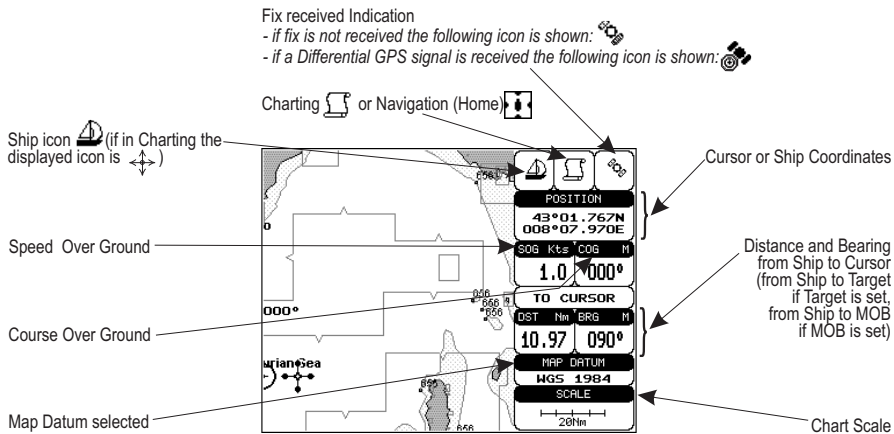


Fig. 3.1.1 - Chart - General Data Window

The second is with text area on the bottom line of the screen (with partial information on SOG):

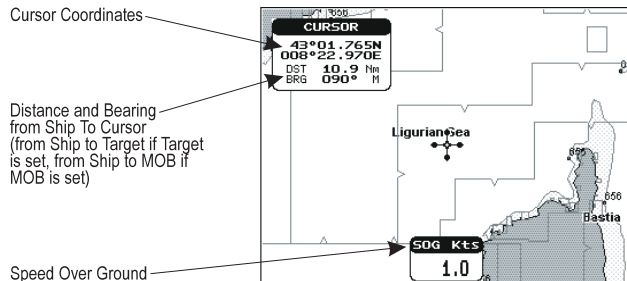


Fig. 3.1.1a - Chart - Data Window on bottom

If Target is set, in the previous Fig. 3.1.1a instead of the only SOG information window, a text line with DST, BRG, XTE, SOG and TTG information appears.

Then it is possible to see on the screen only charts:

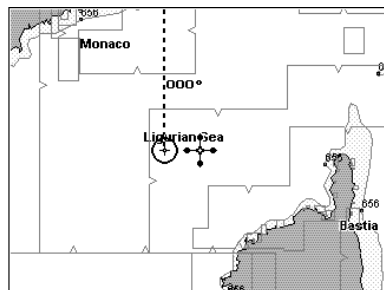


Fig. 3.1.1b - Chart full screen

3.1.2 DEPTH GRAPH

The depth graph can be shown in two different modes. Depth graph displayed only on 1/4 of the screen:

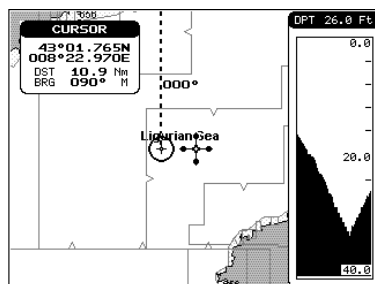


Fig. 3.1.2 - Chart - Depth 1/4

or Depth graph displayed on 1/2 of the screen:

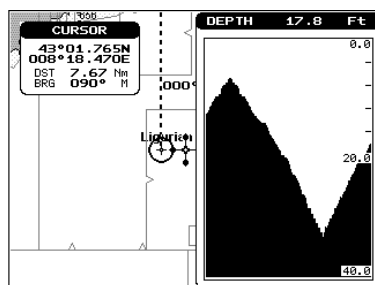


Fig. 3.1.2a - Chart - Depth 1/2

3.1.3 GPS STATUS PAGE

The GPS Status page shows in graphic mode GPS data.

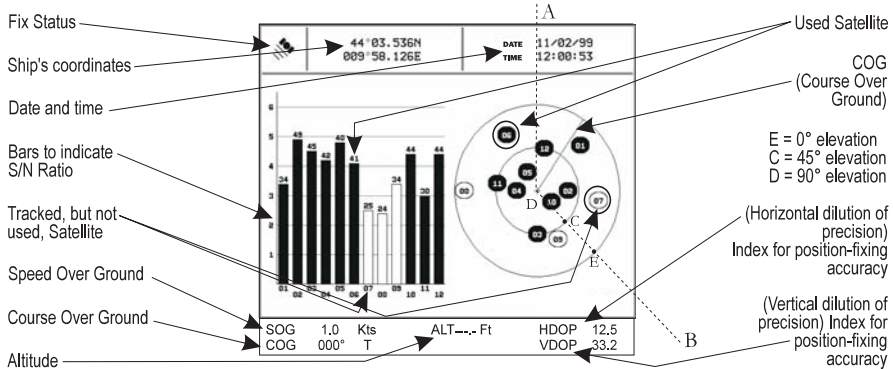


Fig. 3.1.3 - GPS Status page

On the right side of the screen (see Fig. 3.1.3), there is a polar representation of the azimuth and elevation of each satellites. The circle contains a number indicating the PRN of the satellite and it is filled when it is used for the fix solution. On the left side there are histograms indicating the S/N ratio (SNR). The bar is filled when the satellite is used for solution. As example, the satellite with PRN=10 is used for solution with S/N=44, Azimuth=127degree and Elevation=70degree. When a valid fix is received, the Lat/Lon, Date, Time, Altitude, VDOP, HDOP, SOG and COG are shown in the page.

3.1.4 NAVIGATION DATA PAGE

The Navigation Data page shows information about speed (SOG) and course (COG) of the ship, status of the received signal, ship's coordinate and other general information.

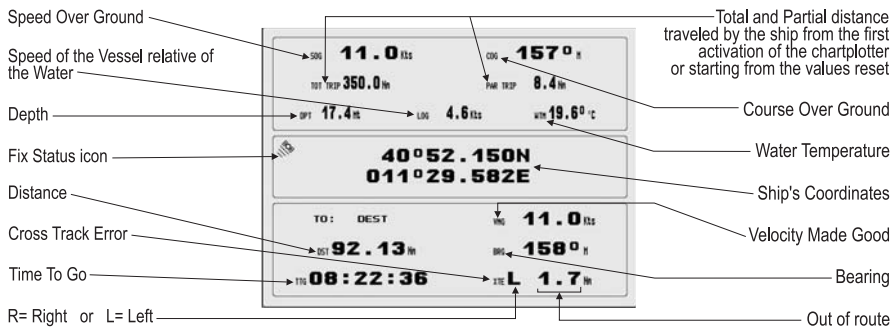


Fig. 3.1.4 - Navigation Data Page

3.1.5 3D NAVIGATION DATA PAGE

The 3D Navigation Data page shows in graphic mode navigation data.

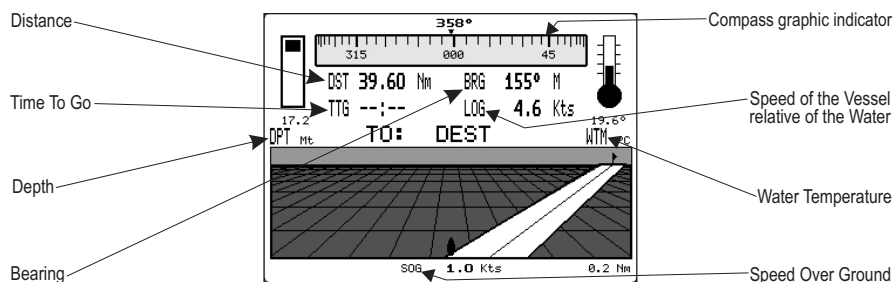


Fig. 3.1.5 - 3D Navigation Data page

3.1.6 WIND DATA PAGE

The Wind Data Page shows data related to the wind: TWS (True Wind Speed: Velocity of the Wind relative to a fixed point on the earth), AWS (Apparent Wind Speed: the Speed at which the Wind appears to blow relative to a moving point, also called Relative Wind Speed), TWA (True Wind Angle) and AWA (Apparent Wind Angle). Also SPEED (Ship Speed) and HEAD (Ship Heading) are shown.

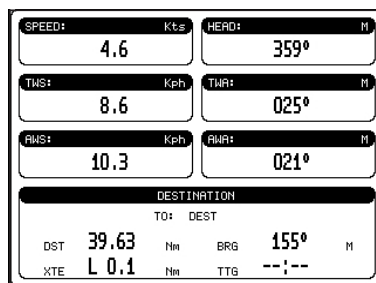


Fig. 3.1.6 - Wind Data page

3.2 BASIC SETTINGS

The Basic Settings menu provides access to the set up functions. Here you can choose the language you want (see Par. 2.4). For "Page Preview" option see Par. 3.1.

- 'MENU' + "BASIC SETTINGS" + 'ENTER'

3.2.1 COURSE VECTOR

Disables (Off) the Course Vector or selects the preferred time among: 2, 10, 30 Min, 1 hour, 2 hours, Infinite. The default setting is Infinite.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "COURSE VECTOR" + 'ENTER'

3.2.2 SCREEN AMPLIFIER

The Screen Amplifier function allows, when it is On and Home mode is set, to place map on the screen related to the fix position and direction, so the map shown is that before the ship. The default setting is On.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "SCREEN AMPLIFIER" + 'ENTER'

3.2.3 ADVANCED FUNCTIONS

When it is On the chart plotter works in Advanced Mode, otherwise when it is Off the chart plotter works in Basic Mode. The default setting is Off.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "ADVANCED FUNCTIONS" + 'ENTER'

3.2.4 USER POINTS

Selects the User Point display among On, Off or Icon. The default setting is On.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "USER POINTS" + 'ENTER'

3.2.5 DEPTH WINDOW

Enables/Disables the display on the Depth Window on the screen. The default setting is Off.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "DEPTH WINDOW" + 'ENTER'

3.2.6 UNITS SELECTION

Allows to select the preferred unit for Distance, Speed, Depth and Altitude (altitude of GPS Antenna on the medium sea level).

Speed: Kts(knots)/Mph(miles per hour)Kph(chilometres per hour). The default setting is Kts.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "SPEED" + 'ENTER'

Distance: Nm(Nautical Miles)/Sm(statute miles)Km(chilometres). The default setting is Nm.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "DISTANCE" + 'ENTER'

Depth: Ft(Feet)/FM(Fathoms)/Mt(Meters). The default setting is Mt.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "DEPTH" + 'ENTER'

Altitude: Ft(Feet)/FL(Flight Level)/Mt(Meters). The default setting is Mt.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "ALTITUDE" + 'ENTER'

Temperature: °C/°F. The default setting is °C.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "TEMPERATURE" + 'ENTER'

3.2.7 NAV AIDS PRESENTATION

Allows to set the Nav Aids presentation as US or INTERNATIONAL. The default setting is INTERNATIONAL. When selected it affects Lights, Signals, Buoys & Beacons display.

- **International:** Draws Nav-Aids using international symbology. All components of Complex Objects are shown.
- **US:** Draw Nav-Aids using NOAA symbology. All components of Complex Objects are shown.
- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "NAV AIDS PRESENTATION" + 'ENTER'

3.2.8 INPUT/OUTPUT MENU

WARNING !!!

After every software upgrade the RAM is cleared and the chart plotter re starts with the usual default settings. Please go to the Input/output menu and set the proper input format once again.

3.2.8.1 Port 1/Port 2/Port 3/Port 4/Port 5 Input

Sets or disables the format for the navigation data input serial Port1/2/3/4/5. The default setting is NMEA-0183 4800-N81-N. For example to set the Port 2 as NMEA-0183 (4800 Baud Rate, Parity None, 8 Bits Number, 1 Stop Bit and Normal Polarity) you must select:

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "PORT 1/2/3/4/5 INPUT" + 'ENTER'

Choose your preferred setting and press 'ENTER' to confirm.

Note (*)

The port selection for C-COM or BBFF (Fish Finder) system defines on which Port (in Input or Output) are to be connected the two systems. It is important to remark that this setting affects the Input and the Output of the selected Port. If the C-COM or BBFF (Fish Finder) was already assigned to one Port and the user tries to set the C-COM or BBFF (Fish Finder) to another port, the chart plotter will show a message that warns the user about the current settings and asks if the new settings should overwrite the previous ones.

3.2.8.2 Port 1/Port 2/Port 3/Port 4/Port 5 Output

Sets or disables the output interface. The default setting is NMEA-0183 4800-N81-N.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "PORT 1/2/3/4/5 OUTPUT" + 'ENTER'

3.2.8.3 Port 1/Port 2/Port 3/Port 4/Port 5 NMEA Output

The chart plotter allows customizing the NMEA-0183 sentence transmitted on each port. Each port can transmit a different set of sentences among: GLL, VTG, BOD, XTE, BWC, RMA, RMB, RMC, APB, WCV, GGA, HSL, HDG. The default setting is GLL, VTG, XTE, RMB, RMC, APB On and BOD, BWC, RMA, WCV, GGA, HSL, HDG Off.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "PORT 1/2/3/4/5 NMEA OUTPUT" + 'ENTER'

3.2.8.4 GPS Setup Menu

It is possible to set the your preferred configuration for the connected GPS.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "GPS SETUP" + 'ENTER'

Note

This item is shown alternately to the selection of the output messages when to the related port is connected a GPS identifiable by the chart plotter.

Restart GPS

Restarts all GPS processes. Once executed, the message "Done" is shown.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "GPS SETUP" + 'ENTER' + "RESTART GPS" + 'ENTER'

Differential Correction Source

Allows setting what kind of Differential Correction will be used by the GPS between WAAS-EGNOS and RTCM (beacon correction). The default setting is WAAS-EGNOS.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "GPS SETUP" + 'ENTER' + "DIFF CORRECTION SOURCE" + 'ENTER'

Navigation Speed

Allows setting the Navigation Speed among Low Speed, Medium Speed and High Speed.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "GPS SETUP" + 'ENTER' + "NAVIGATION SPEED" + 'ENTER'

3.2.8.5 Send & Receive Marks/Routes

Sets the desired port used for transferring User Points and Routes functions:

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "SEND/REC ROUTES & MARKS" + 'ENTER' + "Port1/Port2" + 'ENTER'

3.2.8.6 C-Link

Selects the Master unit (Primary Station) or the Slave unit (Secondary Station):

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "C-LINK" + 'ENTER' + "Secondary Station/Primary Station" + 'ENTER'

3.2.8.7 External Signal

Sets the External Output. Then choose your preferred setting among External Alarm (when activated, this pin goes to GND level. It is used to command an external buzzer), External Power (it is command switch for the Radar. It must be used in conjunction with the Radar Junction box device) and Off.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "EXTERNAL SIGNAL" + 'ENTER'

3.2.8.8 Cable Wiring Pages

Shows a window containing the interface cable wiring. See Par. 6.3 and 6.4.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "POWER I/O CABLE WIRING" + 'ENTER'
- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "GPS CABLE WIRING" + 'ENTER'
- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "AUX IN I/O CABLE WIRING" + 'ENTER'

3.2.9 C-VOICE MENU

AVAILABLE ONLY IF THE CHART PLOTTER IS CONNECTED TO VOICE NAVIGATION SYSTEM

The chart plotter has two different vocal modes, Navigation and Echosounder. According to what mode is selected the messages spoken from the chart plotter are different.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "C-VOICE" + 'ENTER'

3.2.9.1 Navigation

Enables (On), disables (Off) or insert the time (2, 5, 10, 15 minutes) for the Navigation Voice mode. If it is On, the message is always sent, as fast as possible. Instead if it is one among the available values, for example 2 minutes, the message is sent related to the selected time, in the previous example every two minutes.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "C-VOICE" + 'ENTER' + "NAVIGATION" + 'ENTER'

3.2.9.2 Echosounder

Enables (On) or disables (Off) the Echosounder Voice mode. If it is On, the Depth message is spoken. The message is spoken if a valid depth data is received by the chart plotter or if it is in Simulation mode. The default setting is Off.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "C-VOICE" + 'ENTER' + "ECHOSOUNDER" + 'ENTER'

3.2.9.3 Output Port

Selects the Output Port for the Voice function. The default setting is Port 1.

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "C- VOICE" + 'ENTER' + "OUTPUT PORT" + 'ENTER'

3.3 A-B-C-D FUNCTION

The A-B-C-D function allows you to create the A, B, C, D points and to delete them.

3.3.1 INSERTING THE A-B-C-D POINTS

Place the cursor on the desired position and press 'ENTER' on **MAGNUM PRO** or 'A-B-C-D' on **MAGNUM PLUS**: on the screen the A point and an information window on A appear. Move the cursor and press ENTER on **MAGNUM PRO** or 'A-B-C-D' on **MAGNUM PLUS** again: the B point appears, connected to A with a straight segment; an information window on A-B segment (distance (DST), bearing (BRG) and total distance from the first point) appears. Moving the cursor and pressing ENTER on **MAGNUM PRO** or 'A-B-C-D' on **MAGNUM PLUS** places the C and D points:

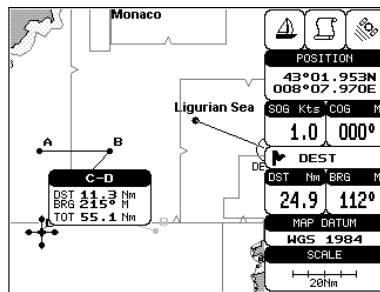


Fig. 3.3.1 - A-B-C-D points

3.3.2 DELETING THE A-B-C-D POINTS

Place the cursor on the desired point (A, B, C or D) and press 'CLEAR': the point is deleted. When the point is deleted, the cursor is placed on the previous point, if existed. The labels of the next points are renamed.

3.3.3 NAVIGATING ON THE A-B-C-D POINTS

If fix received is good, place the cursor on the desired point A, B, C or D and press 'DEST'. When the ship arrives to the Destination point, navigation follows to the next point (if existed).

3.4 NAVIGATING TO A SINGLE DESTINATION

3.4.1 DISTANCE AND BEARING TO TARGET

Once you have positioned the cursor on your desired location (a generic point on the map) press 'DEST'.

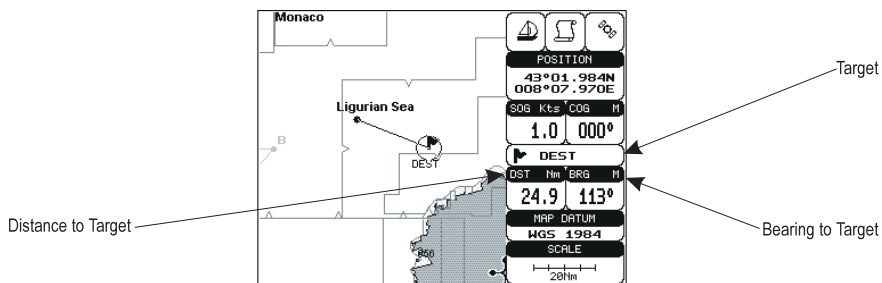


Fig. 3.4.1 - Navigation to a single destination

On the screen is shown a straight line connecting the Target (called DEST) with the ship's position and an information window with Target position, that disappears when the cursor is moved from the Target. When the Target is placed, all navigation data are referred to this Target.

Note

When the chart plotter is turned Off, the Target does not remain in memory.

3.4.2 TIME TO GO

When the 'Target' is set the 'TTG' value is displayed in the Graphic Data Page:

- 'PAGE' more times to select the Graphic Data page

Note

If SOG value is less than 1.0 knots or the BRG is greater than 90 degrees, the TTG value is not displayed.

3.4.3 DELETING TARGET

Place cursor on Target icon, press 'CLEAR': the symbol identifies Target disap-

pears from the screen.

Otherwise (when the cursor is placed in a generic position on the chart) press 'DEST'. A window appears to advise that the Destination is present: select the item "STOP" and press 'ENTER', the symbol identifies Target disappears from the screen.

Note

If you select the "START" item and press 'ENTER', the Target icon is moved on the new cursor position.

3.5 C-MAP BY JEPPESEN MAX CARTOGRAPHY INFORMATION

MAX is a major evolution of the product technology. Key points are:

Data Features

- **ISO Certification** (*electronic chart production process with quality certification*)
- **Extra Large Coverage** (*all the C-MAP BY JEPPESEN electronic chart detail and a huge coverage without having to change cartridge*)
- **Official data source** (*data based on use of official data sources*)
- **Detailed World Background** (*worldwide background chart with details*)
- **Depths & Land Elevation** (*color shading of sea depth and land altitude for improved chart reading*)
- **Bathymetric & Spot Soundings** (*additional Data Base with depth and bathy information for an extraordinary view of the seabed depth*)
- **Detailed Port Plan** (*complete port and marina charts with detail*)
- **Search & Find** (*quickly locates chart contents and objects*)
- **Tides Preview** (*dynamic simulation of tides*)
- **Dynamic Currents** (*current arrows dynamically display direction and speed*)
- **Dynamic Nav-Aids** (*displays Nav-Aids in true color and with real interval lighting*)
- **Port Info** (*all the information of the available services in the ports and how to contact them*)
- **Enhanced Port Info & Roads** (*details of the available facilities and services in ports and surrounding areas*)
- **Object Info** (*indicates restricted area details and related information*)
- **Quick Info** (*full information on objects, buoys, wrecks, shoals and Nav-Aids*)
- **Photos & Diagrams** (*high definition pictures of ports, piers, bridge diagrams and nav-aids*)
- **Multilanguage Support** (*displays charts in the local character set*)
- **True-Type Font** (*improves text on chart for optimal reading*)

Presentation Features

- **Clear View** (*advanced legibility techniques providing more chart data on the screen*)
- **Clear Info** (*sophisticated "Human Dictionary" to translate Nav-Aid abbreviations found on*

- paper charts)*
- **Dynamic Nav-Aids** (*an innovative and dynamic presentation mode*)
- **Flexi-Zoom** (*increased Under and Over Zoom between chart levels, resulting in optimal scale display for any situation*)
- **Dynamic Elevation Data** (*optimized palettes including the NOAA color palette*)
- **Perspective View** (*"Real World" perspective view of the chart, updated real-time during navigation*)
- **Smooth-Zoom** (*smooth transition of cartographic levels*)
- **Enhanced Turbo-Zoom** (*extra fast cartography level change displaying the most important cartographic objects*)
- **Enhanced Mixing Levels** (*seamless data presentation*)
- **Off-line redraw** (*cartography level transition without image construction*)

Cartographic Data related Features

- **Guardian Alarm** (*automatic control and alarm over obstacles on charts in front of your boat*)
- **Safety Toolbar** (*interactive alarm system for situational awareness on screen*)
- **Safety Route Check** (*sophisticated function checking dangerous objects along your navigation route*)

MAX and NT/NT⁺ C-CARD coexistence

- When NT⁺ data and MAX data cover different areas, the chart plotter gets data from both charts (depending on the current position).
- When NT⁺ data and MAX data cover the same area, the chart plotter gets data only from MAX chart.

3.5.1 MAP SETTINGS MENU

It is possible to select the Map Settings Menu following the procedure:

- 'MENU' + "MAP SETTINGS" + 'ENTER'

3.5.1.1 3D View (Perspective View)

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "3D View" + 'ENTER'

Chart data may be projected in perspective mode during navigation. This function allows setting the panoramic view of the chart. As the upper side of the map is more compressed than the lower side, a wider map area is visible. The perspective view allows showing more chart information immediately ahead and around the cursor. The default setting is Off.

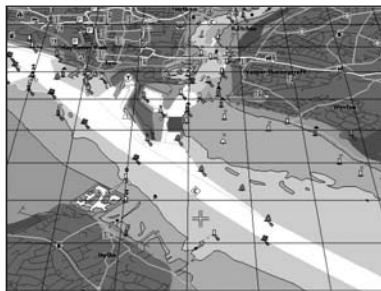


Fig. 3.5.1.1 - Perspective View

3.5.1.2 Palette

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Palette" + 'ENTER'

It is possible to set the palette used to enhance the visibility of the screen depending on the surrounding light condition. The possible choices are Normal, Classic, NOAA, Night and Sunlight. **Normal** is recommended when the chart plotter is not exposed to the direct sunlight. When this mode is set the maps are displayed in order to use colors as similar as possible to the ones used in the original paper charts. **Classic** uses more vivid colors (it is the default setting). **Night** is recommended when the environment is dark in order to reduce the glare of the display. The chart plotter displays maps and screen in darker colors. **Sunlight** is designed to enhance the visibility of the screen when the chart plotter is exposed to the sunlight. The maps are much brighter than in the other modes and the depth areas are filled with white color so different depth areas are not easily distinguishable. **NOAA** allows setting NOAA paper chart colors presentation.

3.5.1.3 Map Orientation

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Map Orientation" + 'ENTER'

Selects the orientation of your chart according to: North (the map is shown with North upwards), Head (the map is shown with the ship's current heading upwards), Course (the map is displayed with the currently selected course leg upwards). The default setting is North.

It is possible to select the resolution angle for the Map Orientation.

3.5.1.4 Zoom Type

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Zoom Type" + 'ENTER'

This feature allows more expansions or compression of the chart scale while zooming in or out. Zoom Type has two options; Standard (default) or Flexi-Zoom. When in Flexi-Zoom mode, a short 'ZOOM...' push causes a change of chart, whilst a long 'ZOOM...' push (press and hold) causes a pop-up window to be displayed on a corner of the screen.

The window shows the current Zoom factor. By pressing 'ZOOM IN'/'ZOOM OUT' the map is expanded or compressed according to the zoom factor selected. The window is automatically closed if 'ZOOM...' is not pressed for 2 seconds and the selected zoom factor will be used at the next zoom in/out.

3.5.1.5 Fonts & Symbols

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Fonts & Symbols" + 'ENTER'

On MAX charts it is possible to set the size of all names and symbols drawn on the charts, selecting between Normal size (the regular characters size) and Large size.

NORMAL size



LARGE size

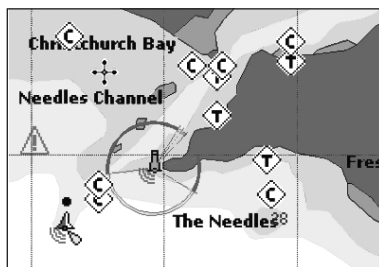


Fig. 3.5.1.5 - Example of Normal size (on the left side) and Large size (on the right side) settings

3.5.1.6 Dynamic Nav-Aids

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Dynamic Nav-Aids" + 'ENTER'

This function allows settings blinking lights on Nav-Aids. The blink period and color of each Nav-aid is read from the Nav-Aid attributes available on the data cartridge. When the ship is inside the Nav-Aid nominal range, the light of the Nav-Aid will start blinking. The default setting is Off.

When Dynamic Nav-Aids option is set to On, when the flashing light is Off, or when fix position is out of the sector, the light color is displayed by using a faint light color.

3.5.1.7 Mixing Levels

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Mixing Levels" + 'ENTER'

When the map coverage at the current zoom level does not fill the entire screen, the chart plotter draws the rest of the map expanding the cartographic information read from, at most, two zoom levels above the current zoom level. For this reason the map is drawn three times: firstly it draws the two levels before the current level and then the current level. The area covered by the cartographic data read from the previous levels is identified by a dotted pattern. When the cursor is moved on an area not covered by data of the current level the chart plotter zooms out to the first level covered by cartographic data. The default setting is On.

Note

The Mixing Levels function works only with the new C-CARDS. It also affects the speed of the redraw of the screen. If this function is not used it maybe disabled.

3.5.1.8 Safety Status Bar (DSI - Data Safety Indicator)

➤ 'MENU' + "MAP SETTINGS" + 'ENTER' + "Safety Status Bar" + 'ENTER'

It is possible to choose between the three following options:

- ON : the Safety Status Bar is shown
- OFF : the Safety Status Bar is not shown
- ICON : the Safety Status Bar is not shown, but a warning alarm icon is shown on the corner of the map screen as soon as any item controlled by the DSI function returns an alarm condition. The Warning Icon remains displayed until the alarm condition persists. Placing the cursor over it, a quick help message is shown next to the DSI icon, allowing to show the DSI bar. In this case - when the DSI bar is opened via DSI alarm icon - it is allowed to obtain information about each “active” DSI box (the red ones): it is possible to select them by cursor movement left/right, and a list of active alarms is shown underneath the selected box. By pressing 'CLEAR', the DSI bar is removed from the screen.

When Safety Status Bar is On, this feature displays a status bar with six boxes showing the status of certain functions. Any warning or alarm condition is identified by the red colour to indicate possible risk.



Fig. 3.5.1.8 - Safety Status Bar

Boxes definition is as follows:

① Zoom

- Normal: when the chart is displayed at normal scale.
- U. Zoom: red when the chart is under-zoomed out more than twice normal scale, gray otherwise.
- O. Zoom: red when the chart is over-zoomed in more than twice normal scale, gray otherwise.
- Chart Lock: red when the chart is zoomed in more than twice normal scale, gray otherwise.

② Best Scale

Red when a more detailed chart is available under the cursor position.

③ Data Off

Red when at least one of the following objects or layers is turned off (by the user): Depths/soundings; Wrecks/obstructions; Tracks/routes; Attention areas; Nav-Aids.

④ Clear View

Displays when Clear View function is On.

⑤ Dangers

Red when “Guardian Technology” detects one of the following objects: Land, Intertidal, Depth Area, Rocks, Obstructions, Shoreline Constructions, Fishing Facility, Wrecks, Dragged area, Diffusion area, Mooring facilities, Pingos and Production installations.

⑥ Caution

Red when “Guardian Technology” detects cautionary or restricted area.

3.5.1.9 Satellite Imagery

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "SATELLITE IMAGERY" + 'ENTER'

It is possible to overlay the Satellite image for background map. When it is set On, the Palette is set to Normal to display the proper colors.

3.5.1.10 Currents Prediction

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Currents Prediction" + 'ENTER'

It is possible to see the variation of the Tidal arrows on the selected area at any given time. A window is shown on the low-left side of the chart, press 'ENTER' to set the date and time manually, 'MENU' to decrease time and 'GOTO' to increase time. Press 'CLEAR' to exit.

3.5.1.11 Other Map Configurations

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER'

This function allows the user to customize the following selections and is divided into the following settings: Marine Settings, Depth Settings, Land Settings and Chart Settings.

Display Mode: To simplify the customization of the chart display, the map settings are now re-organized in modes allowing the user to choose the preferred setting. Pre-programmed settings are user selectable from Full, Medium, Low, Radar, Tides, Custom. The default setting is Custom.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Display Mode" + 'ENTER'

The table below shows the selections for each mode:

Setting	Full	Medium	Low	Radar	Tides	Custom (Default values)
Names	On	On	On	On	On	On
Name Tags	On	Off	Off	Off	Off	On
Nav Aids & Light Sectors	On	No Sector	No Sector	No Sector	Off	On
Attention Areas	On	On	Off	Off	Off	On
Tides & Currents	On	Off	Off	Off	On	On
Seabed Type	On	Off	Off	Off	Off	On
Ports & Services	On	On	Off	On	Off	On
Tracks & Routes	On	Off	Off	Off	Off	On
Depth Range Min	0Mt	0Mt	0Mt	0Mt	0Mt	0Mt
Depth Range Max	9999Mt	9999Mt	9999Mt	9999Mt	9999Mt	5Mt
Land Elevations	On	On	Off	Off	Off	Off
Land Elevation Values	On	Off	Off	Off	Off	On
Roads	On	Off	Off	Off	Off	On
Points Of Interest	On	Off	Off	Off	Off	On
Lat/Lon Grid	On	Off	Off	Off	Off	On
Chart Boundaries	On	Auto	Off	Off	Off	Auto
Value-Added Data	On	Off	Off	Off	Off	On
Chart Lock	On	On	On	On	On	On
Und. Objects Limit	9999Mt	10Mt	10Mt	10Mt	10Mt	3Mt
Rocks	Icon+Depth	Icon	Icon	Icon	Icon	Icon
Obstructions	Icon+Depth	Icon	Icon	Icon	Icon	Icon
Diffusers	Icon+Depth	Icon	Icon	Icon	Icon	Icon
Wrecks	Icon+Depth	Icon	Icon	Icon	Icon	Icon

Names: On/Off. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Names" + 'ENTER'

Name Tags: On/Off. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Name Tags" + 'ENTER'

Nav Aids & Light Sectors: On (Nav Aids & Light Sectors are shown)/Off (Nav Aids & Light Sectors are not shown)/No Sector (Nav Aids are shown, Light Sectors are hidden). The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Nav-Aids & Light Sectors" + 'ENTER'

Attention Areas: On/Off. The default setting is On. The Attention Areas will always be contour only when On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Attention Areas" + 'ENTER'

Tides & Currents: On/Off. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Tides & Currents" + 'ENTER'

Seabed Type: On/Off. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Seabed Type" + 'ENTER'

Ports & Services: On/Off. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Ports & Services" + 'ENTER'

Tracks & Routes: On/Off. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Tracks & Routes" + 'ENTER'

Depth Range Min: Sets a min reference depth value. The default setting is 0Mt.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Depth Range Min" + 'ENTER'

Depth Range Max: Sets a max reference depth value. The default setting is 10 Mt.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Depth Range Max" + 'ENTER'

Land Elevations: On/Off. The default setting is Off.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Land Elevations" + 'ENTER'

Land Elevation Values: On/Off. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Land Elevation Values" + 'ENTER'

Roads: On/Off. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Roads" + 'ENTER'

Points Of Interest: On/Off. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Points Of Interest" + 'ENTER'

Lat/Lon Grid: On/Off. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Lat/Lon Grid" + 'ENTER'

Chart Boundaries: On/Off/Auto. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Chart Boundaries" + 'ENTER'

Value Added Data: On/Off. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Value Added data" + 'ENTER'

Chart Lock: On/Off. The default setting is On.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Chart Lock" + 'ENTER'

Underwater Objects Limit: Selects the max depth value to display Underwater Objects. The default setting is 3Mt.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Underwater Object Limit" + 'ENTER'
- If value is set to 0 Mt, the Underwater Objects are not shown on the charts. Menu options are greyed out.
- If value is more than 0 Mt (i.e. 10 Mt), in the Range from 0 Mt to the selected value the Underwater Objects are displayed according to their setting below.

Rocks: Off/Icon/Icon+Depth (*). The default setting is Icon.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Rocks" + 'ENTER'

Obstructions: Off/Icon/Icon+Depth (*). The default setting is Icon.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Obstructions" + 'ENTER'

Diffusers: Off/Icon/Icon+Depth (*). The default setting is Icon.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Diffusers" + 'ENTER'

Wrecks: Off/Icon/Icon+Depth (*). The default setting is Icon.

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Other Map Configurations" + 'ENTER' + "Wrecks" + 'ENTER'

Note (*)

Choose the option:

- OFF : the object is not visible independently of the selected "Underwater Object Depth Value"
- ICON : the object icon is visible without tags, in the range selected from "Underwater Object Depth Value" option
- ICON+DEPTH : the object icon and tag is visible, in the range selected from "Underwater Object Depth Value" option

3.5.1.12 Selecting the CHART Language

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Chart Language" + 'ENTER'

The possible choices are:

Language: Allows setting the language to display chart information. The language is chosen among the list of languages available on the cartographic data (C-CARD or embedded charts).

- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Chart Language" + 'ENTER' + "Language" + 'ENTER'

Mode: Defines how objects are translated. It is possible to choose between the three following options:

- OFF : Uses the same Language used for LANGUAGE. If the selected language is not present on the objects information, English is used instead.
 - ENGLISH : Always uses English.
 - LOCAL : Uses the first Local language present on data. If no Local language is available, English is used instead.
- 'MENU' + "MAP SETTINGS" + 'ENTER' + "Chart Language" + 'ENTER' + "Mode" + 'ENTER'

Note

-
- When User Interface Language is changed, Chart Language settings are set as follows: MODE is set to Off and Chart Language is set as the User Interface Language selection if available on the chart data, otherwise is set to English.*
 - If the cartographic data is changed (for example the C-CARD is removed or replaced), Chart Language settings should be verified and if necessary changed.*
-

3.5.2 GETTING AUTOMATIC INFO

The type of Automatic Info is user selectable.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SETUP" + 'ENTER' + "AUTO INFO" + 'ENTER'

The possible settings are:

- **Off:** disabled, no automatic info shown at all.
- **On Points:** only on points. This is the default setting.
- **On All:** on all objects (points, lines and areas).

The Automatic Info On Points shows information when the cursor is placed on points (as Port Services, Tides, lights, wrecks, rocks, buoys, beacons, obstructions, land markers, etc.). The Automatic Info On All shows information when the cursor is placed on points, on lines (as Depth contours, Traffic Separation, Territorial Sea, Cartographic Lines etc.) on areas (Depth, Built-up, Sea, Attention, Restricted etc.) and on names (on the beginning of the text -hot spot- or on any of the characters of the name -name message box-). The details on Land, Source of Data, Cartographic Area and Spot Soundings are not shown.

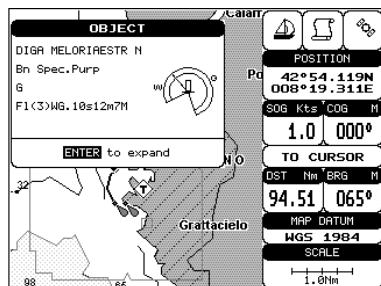


Fig. 3.5.2 - Automatic Info on Points window

If you press 'ENTER' you get the information about that object.

3.5.2.1 Info on objects with Pictures

On the Quick Info, there will be the camera icon on the top bar of the window if at least one of the objects found has one or more pictures associated.




Fig. 3.5.2.1 - Example of Quick Info on objects with picture

On the Full Info, there will be the small camera icon on a corner of the square containing the object icon or a big photo icon centered on the square for the object without icon.

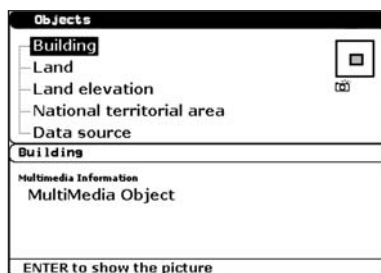


Fig. 3.5.2.1a - Example of Full Info on objects with picture

To see the picture press 'MENU' when the object with a picture is highlighted.

Change Picture Size

When the picture is shown, it is possible to fit it to screen by pressing 'ENTER'.

3.5.2.2 Quick Info on Lakes

Upon viewing the chart of a lake, you will click on to query the available information immediately displayed with many details. For example, see the following picture:

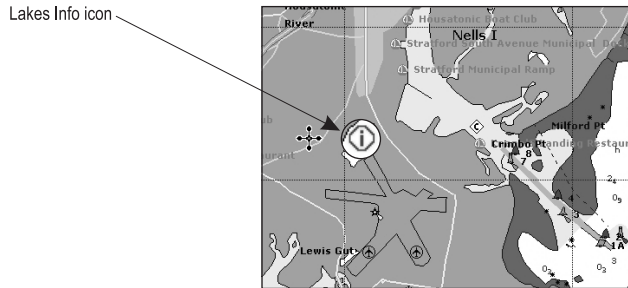


Fig. 3.5.2.2 - Example of Lakes info

When the cursor is placed over the icon, the icons of the available services are shown:

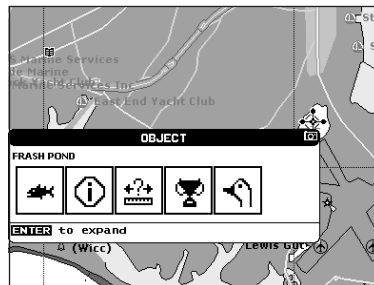


Fig. 3.5.2.2a - Quick Info: available services

If you press 'ENTER' all available information about the cartographic point under the cursor will be shown. See the next paragraph.

3.5.2.3 Full Info on Lakes

The following is an example of Full Info on Lakes:

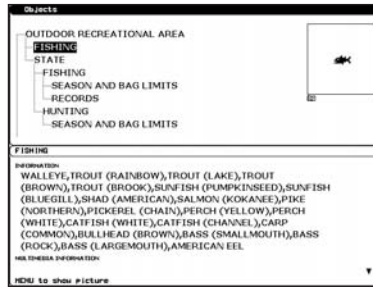


Fig. 3.5.2.3 - Example of Full Info page

To see the "Fishing" object press 'MENU' (when the "Fishing" object is highlighted). On the screen appears:

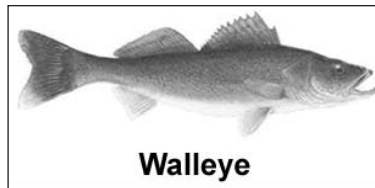


Fig. 3.5.2.3a - Example of picture associated to the Fishing object

3.5.3 INFO TREE AND EXPANDED INFO PAGE

This page combines the Info Tree and the Expanded Info pages; this gives the advantage of showing the details of the object selected on the Info Tree while the cursor is moving through the Info Tree's items.

The upper side of the page contains the Info Tree and the Lower side contains the expanded information. While moving the cursor through the Info Tree, all the relevant information of the selected object is shown on the lower part of the page.

When the selected object is a Tide Height, pressing 'ENTER' the Tide page is shown. Pressing 'CLEAR' the page is closed.

3.5.4 INFO FUNCTION

Place the cursor in any place you want and press:

- 'MENU' + 'INFO'
- to show the Info Tree and Expanded Info page (see Par. 3.5.4).

3.5.5 GETTING PORT INFO

Upon viewing the chart of a port or harbour, you will see a Port Info icon that can be clicked on to query the available information immediately displayed with many details. The Port Info icon is visible only if the Ports & Services option is On (default setting).

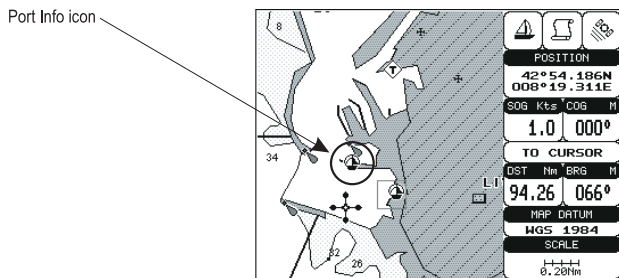


Fig. 3.5.5 - Port Info icon

The available information is shown in the Automatic Info window where icons of the available services are shown:

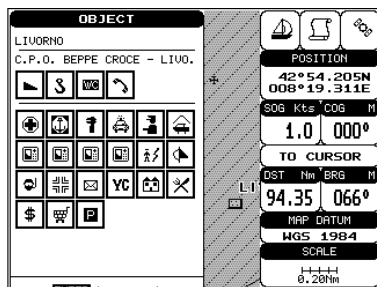


Fig. 3.5.5a - Automatic Info window

To expand information about that object press 'ENTER'.

3.5.6 GETTING TIDE INFO

When you will see a Tide Info icon you can click on it to query the available information that will immediately be displayed.

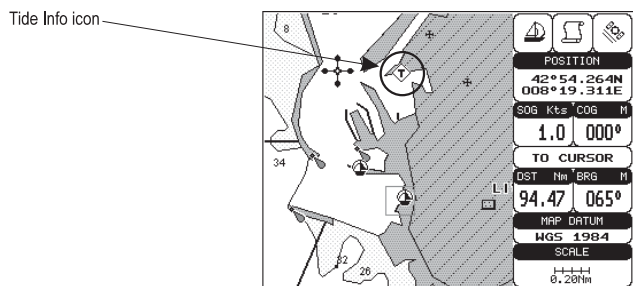


Fig. 3.5.6 - Tide Info icon

Place the cursor on the Tide symbol, a Automatic Info window is opened:

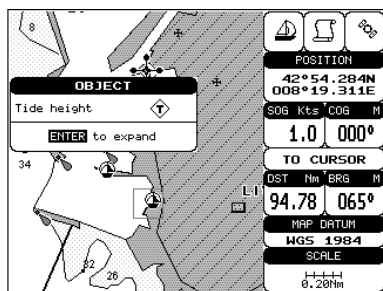


Fig. 3.5.6a - Automatic Info on Tide

To display the Tide Graph page, press 'ENTER':

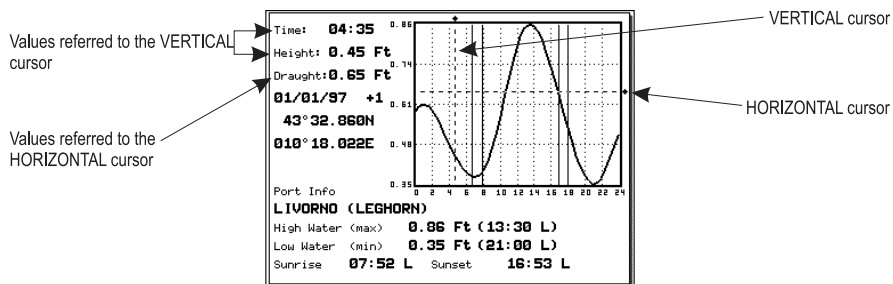


Fig. 3.5.6b - Tide Graph

Using the cursor key, it is possible to move the cursor anywhere on the graph and display the time, height (vertical cursor) and draught (horizontal cursor) on a particular graph point. Also use 'ZOOM IN' or 'ZOOM OUT' to go to previous or next day and 'ENTER' to set date (move the cursor key up/down to insert the preferred number and use it left/right to move cursor to left/right).

Note

Tide graphs are an approximation of the tide and they should be used in conjunction with traditional tide tables and navigational methods.

3.5.7 FIND FUNCTION

The chart plotter allows finding Nearest Services, Tide Stations, Wrecks, Obstructions, Port By Name, Port By Distance, Lakes Info, Lakes By Name, Points Of Interest.

3.5.7.1 Finding Port Services

To locate and display the nearest available facilities of a particular type (i.e. the nearest Hospital, sailmaker, bank, etc.).

- **'MENU' + " FIND" + 'ENTER' + "NEAREST SERVICES" + 'ENTER'**

The icons of the available services are shown. Use the cursor key to select any facility and press 'ENTER'. The list of the nearest ports (up to 10) containing the facility will be shown on the screen. Then choose the port you want and press 'ENTER'.

3.5.7.2 Finding Tide Stations

Finds the nearest Tide Stations (up to 10) on the map, from the boat position - if a valid fix is received - or from the cursor position - if the received fix position is not good.

- **'MENU' + "FIND" + 'ENTER' + "TIDE STATIONS" + 'ENTER'**

A new window will appear in few seconds. Choose the Tide Stations you want and press 'ENTER' or 'FIND' to display the Tide Graph page (see Par. 3.5.4). Press 'CLEAR' to display the Tide Station chosen.

3.5.7.3 Finding Wrecks

Searches for nearest Wrecks:

- **'MENU' + "FIND" + 'ENTER' + "WRECKS" + 'ENTER'**

Use the cursor key to select the port and 'ZOOM IN'/'ZOOM OUT' to select next/previous page. Press 'ENTER' to locate the selected Wreck on the map.

3.5.7.4 Finding Obstructions

Searches for nearest Obstructions:

- **'MENU' + "FIND" + 'ENTER' + "OBSTRUCTIONS" + 'ENTER'**

Use the cursor key to select the port and 'ZOOM IN'/'ZOOM OUT' to select next/previous page. Press 'ENTER' to locate the selected Obstruction.

3.5.7.5 Finding Port By Name

To select the Port By Name function following the procedure:

- **'MENU' + "FIND" + 'ENTER' + "PORT BY NAME" + 'ENTER'**

Shows the list of all ports stored on the C-CARD in alphabetical order and allows to search ports by name to locate the ports on the map.

3.5.7.6 Finding Port By Distance

To select the Port By Distance function following the procedure:

- 'MENU' + "FIND" + 'ENTER' + "PORT BY DISTANCE" + 'ENTER'

Shows the list of all ports stored on the C-CARD in closest distance order and allows to locate the ports on the map.

3.5.7.7 Finding Lakes Information

Searches for nearest Lakes Info:

- 'MENU' + "FIND" + 'ENTER' + "LAKES INFO" + 'ENTER'

It finds the Outdoor Recreational Area objects. See the following picture:

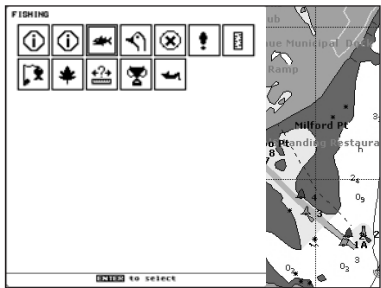


Fig. 3.5.7.7 - Outdoor Recreational Area objects

Use the cursor key to select any objects and press 'ENTER'. The list of the nearest lakes containing the facility will be shown on the screen.

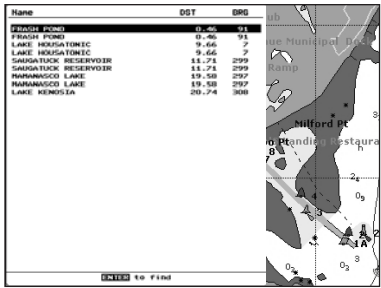


Fig. 3.5.7.7a - Nearest Lakes list

Then choose the lake you want and press 'ENTER': the Full Info page is shown.

3.5.7.8 Finding Lakes By Name

Selects the Lakes By Names function:

- 'MENU' + "FIND" + 'ENTER' + "LAKES BY NAME" + 'ENTER'

Shows the list of all lakes stored on the C-CARD in alphabetic order. Pressing 'MENU' to insert the Lake name.

3.5.7.9 Finding Points Of Interest

Searches for nearest Points Of Interest:

- 'MENU' + "FIND" + 'ENTER' + "POINTS OF INTEREST" + 'ENTER'

A sub-menu is opened to find different categories of Points Of Interest.

3.6 MAN OVERBOARD (MOB)

It is an important function useful in the case someone or something falls overboard.

3.6.1 INSERTING MOB

Press ON **MAGNUM PLUS** 'MOB' and ON **MAGNUM Pro** 'EVENT' for 2 seconds to place MOB symbol at ship's coordinates. On the screen the MOB symbol and a window to advise that the MOB is activated appear, press 'CLEAR' to delete this window. Data displayed in Text Area are related to MOB. Placing the cursor on the MOB symbol an information window appears:

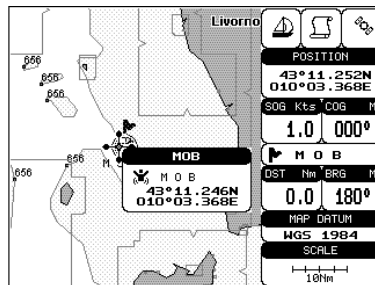


Fig. 3.6.1 - Man Overboard

Note

In the information window the bottom side "ENTER for Options" appears only if the "Advanced Functions" item in the "Basic Settings" menu is activated (On).

3.6.2 DELETING MOB

Press ON **MAGNUM PLUS** 'MOB' and ON **MAGNUM PRO** 'EVENT' for 2 seconds, select 'CANCEL' and press 'ENTER' again. The MOB symbol remains on the screen shaded until the next screen redraws.

Note

If the "Advanced Settings" item in the menu "Basic Settings" is activated (On), placing the cursor on MOB the information window appears as shown in the previous Fig. 5e. Press 'ENTER', select "CANCEL" and press 'ENTER' again: the MOB symbol remains on the screen shaded until the next screen redraws.

4

For the Experienced User

Now you have had a chance to become familiar with your new chart plotter, there are a great number of advanced features that you will find helpful. First of all the use of the Advanced Mode.

The chart plotter can operate in two different modes: Basic Mode and Advanced Mode. In the first mode there is a restricted number of functions, while in Advanced Mode it is possible to have more available functions, for example it is possible to handle Waypoints. To select the Advanced Mode:

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "ADVANCED FUNCTIONS" + 'ENTER' + "ON" + 'ENTER'

When Advanced Functions is Off the chart plotter operates in Basic Mode.

4.1 MORE ABOUT CREATING AND USING ROUTES

At anytime, you may add or delete Waypoints, see a route summary, reverse the direction of the route or erase the entire route.

4.1.1 WAYPOINT

You may add Waypoints, delete Waypoints from a route, move any Waypoint in the route to another location, insert a Waypoint between two existing ones, find any Waypoint at anytime. Every time you place the cursor on a Waypoint the following functions are available.

4.1.1.1 Adding Waypoint

- Select Advanced Mode + 'ENTER' + "WAYPOINT" + 'ENTER'

or ON MAGNUM PLUS:

- 'WAYPOINT' (if it is present)

The Waypoint appears on the cursor position. An info window is shown containing route number, Waypoint name, symbol and Latitude/Longitude.

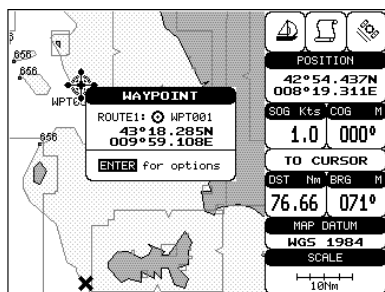


Fig. 4.1.1.1 - Waypoint placing

4.1.1.2 Creating a route

Repeat the "Adding Waypoint" procedure described in the previous Par. 4.1.1.1. The sequence of moving the cursor and pressing 'ENTER' is continued to create the route, until you have reached the last Waypoint, your final destination. Segments connecting the Waypoints are shown, and the starting point is identified by a circle surrounding the first Waypoint of the route:

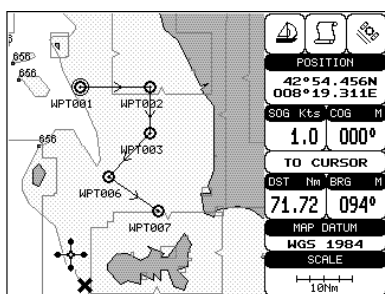


Fig. 4.1.1.2 - Route planning

4.1.1.3 Deleting Waypoint

- Select Advanced Mode + Place cursor on Waypoint

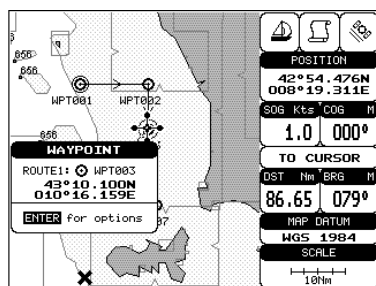


Fig. 4.1.1.3 - Deleting Waypoint (I)

Press 'ENTER'. Select "DELETE" and press 'ENTER'. The Waypoint is deleted and a new line between previous and next Waypoint is shown. The deleted Waypoint remains shaded until the screen is redrawn.

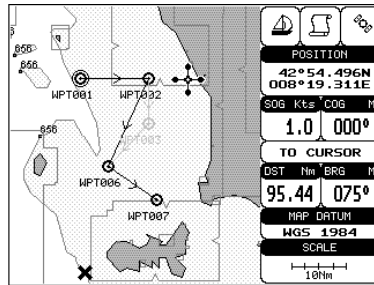


Fig. 4.1.1.3a - Deleting Waypoint (II)

4.1.1.4 Deleting route

- Select Advanced Mode + Place cursor on Waypoint

Press 'ENTER'. Select "DELETE ROUTE" and press 'ENTER'. A window is opened: select "YES" and press 'ENTER' to confirm (select "NO" and press 'ENTER' otherwise). The route remains on the screen shaded until the screen is redrawn. To delete route see also Par. 4.1.2.2 and 4.1.2.4.

4.1.1.5 Distance and Bearing to Target

Once you have positioned the cursor on the desired starting Waypoint (it could be the first Waypoint of the route or another one) press 'DEST'. A circle surrounds the Waypoint symbol. A line is shown, connecting the Target with the ship's position. When the Target is placed, all navigation data are referred to this Target.

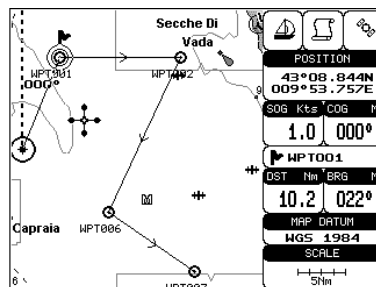


Fig. 4.1.1.5 - Selecting destination (Target)

The destination will automatically switch to the next Waypoint on the route when you reach or pass the present destination.

Time To Go

When the Target is set the TTG value is displayed in the Graphic Data page:

- 'PAGE' more times to select Graphic Data page

Note

If SOG value is less than 1.0 knots or the BRG is greater than 90 degrees, the TTG value is not displayed.

Deleting Target

If in Basic Mode place cursor on Target icon and press 'CLEAR': the symbol that identifies Target disappears from the screen, but the Waypoint remains.

If in Advanced Mode (see Par. 3.4.3) place cursor on Target icon, press 'ENTER', select "STOP NAV" and press 'ENTER': the symbol that identifies Target disappears from the screen, but the Waypoint remains.

Note

If you select "NEXT" / "PREV" and press 'ENTER', the Target icon is moved on the next / previous Waypoint in the route.

Otherwise in both Modes (when the cursor is placed in a generic position on the chart) press 'DEST'. A window appears to advice that the Destination point is present: select "STOP" and press 'ENTER', the symbol that identifies Target disappears from the screen, but the Waypoint remains.

Note

If you select "START" and press 'ENTER', the Target icon is moved on the new cursor position.

4.1.1.6 Moving Waypoint

- Select Advanced Mode + Place cursor on Waypoint

Press 'ENTER'. Select "MOVE" and press 'ENTER'. Use the cursor key to move the cursor: a dotted line, connecting the Waypoint to the new position, is shown:

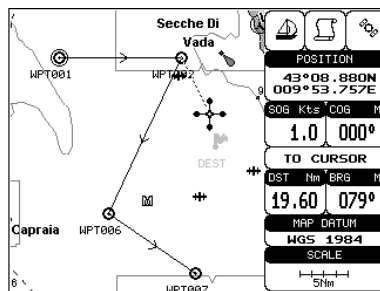


Fig. 4.1.1.6 - Moving Waypoint function (I)

To place the Waypoint in the new position, choose the new place and press 'ENTER' ('CLEAR' otherwise), Waypoint appears in the new position:

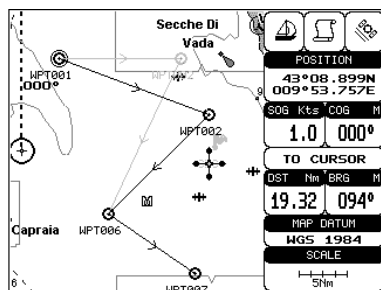


Fig. 4.1.1.6a - Moving Waypoint function (II)

4.1.1.7 Inserting Waypoint

Every time you place the cursor on the segment connecting two existing Waypoints of a route the following function is available.

- Place cursor on route leg

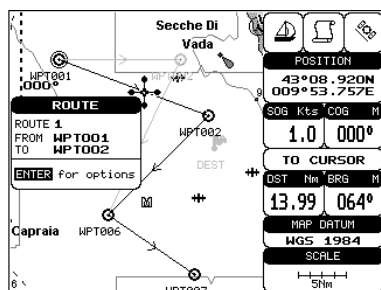


Fig. 4.1.1.7 - Placing Waypoint between two existing ones (I)

Press 'ENTER'. Select "INSERT" and press 'ENTER'. The line between the two Waypoints is turned into a dotted line: move the cursor to the new position. When the cursor is stationary for one second or two, the line will "rubber-band", drawing a dotted line between the last Waypoint and the cursor, and another dotted line between the cursor and the next Waypoint:

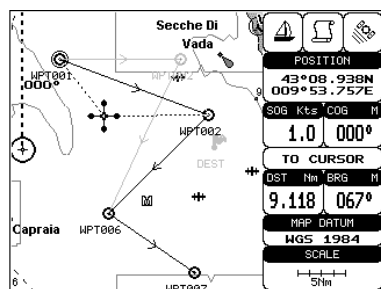


Fig. 4.1.1.7a - Placing Waypoint between two existing ones (II)

Once you have positioned the cursor at new location, press 'ENTER' (press 'CLEAR' to abort operation):

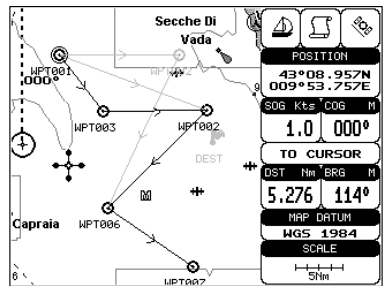


Fig. 4.1.1.7b - Placing Waypoint between two existing ones (III)

4.1.1.8 Editing Waypoint

- ▶ Select Advanced Mode + Place cursor on Waypoint

Press 'ENTER'. Select "EDIT" and press 'ENTER' to modify a Waypoint. A window will be shown with Name, Symbol, Color and Latitude/Longitude of the Waypoint, advising about what Waypoint data are modifiable.

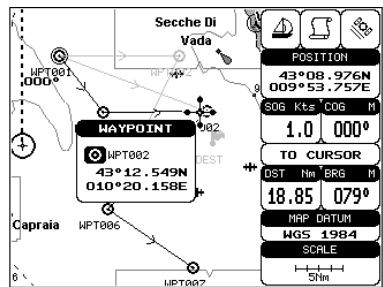


Fig. 4.1.1.8 - Edit Waypoint (I)

Use the cursor key to select the field. If you have selected Name field, press 'ENTER': use the cursor key to insert the character (8 characters max), then press 'ENTER'. If Symbol field is selected press 'ENTER': a window with 16 different symbols appears:

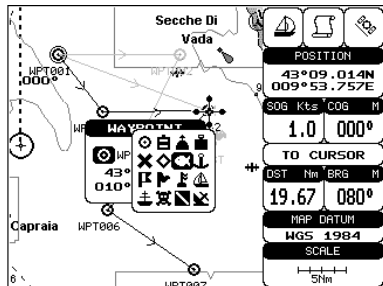


Fig. 4.1.1.8a - Edit Waypoint (II): Waypoint symbols

Use the cursor key to select the symbol and press 'ENTER'. If select Coordinates field, press 'ENTER' and then use the cursor key to insert the value. Then press 'CLEAR'. If Color field is selected press 'ENTER': a window with 8 different colors appears, use the cursor key to select the desired color and press 'ENTER'.

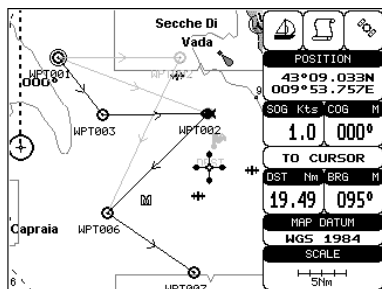


Fig. 4.1.1.8b - Edit Waypoint (III)

4.1.1.9 Finding information on Waypoints: User Points List page

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER POINTS" + 'ENTER'

Move up/down the cursor key to select the User Point you wish. If the page contains more than 8 User Points, the list continues in the next pages.

Finding User Points

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER POINTS" + 'ENTER' + "FIND" + 'ENTER'

The chart plotter exits from the User Points List page and redraws the chart. The selected point appears, with the cursor placed on it.

Deleting selected User Point

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER POINTS" + 'ENTER' + "CLR-ONE" + 'ENTER'

Deletes the selected User Point. A warning message appears, select "YES" and press 'ENTER' ('CLEAR' otherwise).

Deleting all User Points with the same symbol

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER POINTS" + 'ENTER' + "CLR-SYM" + 'ENTER'

Deletes all User Points which have the same identifier of that shown in the selected row. A warning message appears, select "YES" and press 'ENTER' ('CLEAR' otherwise).

Deleting all User Points with the same type

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER POINTS" + 'ENTER' + "CLR-TYP" + 'ENTER'

Deletes all User Points which have the same type of that shown in the selected row. A warning message appears, select "YES" and press 'ENTER' ('CLEAR' otherwise).

Deleting all stored User Points

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER POINTS" + 'ENTER' + "CLR-ALL" + 'ENTER'

A warning message appears, select "YES" and press 'ENTER' ('CLEAR' otherwise) to delete all stored User Points.

Send/Receive User Points

Sends all User Points to an external device using the serial port:

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER POINTS" + 'ENTER' + "SEND"

Reads all User Points from NMEA Input port:

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER POINTS" + 'ENTER' + "RECEIVE"

4.1.2 ROUTES

The following functions are used for the route management. The chart plotter handles routes from 1-20, which are permanently stored in the memory as they are created. Only one route can be selected for work at any one time.

4.1.2.1 Selecting route

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "CURRENT ROUTE" + 'ENTER'

A window appears with the route number list and the related route name. Use the cursor key to scroll the list up/down. Pressing 'ENTER' the selected route becomes the current route.

Note

If there is the Target in the current route, it is not possible to change the current route. So if the "Current Route" item is selected, a Warning window appears because Target is placed in the current route.

4.1.2.2 Route name

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "ROUTE NAME" + 'ENTER'

Use the cursor key to insert the route name (max 16 alphanumeric char.).

4.1.2.3 Deleting route

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "DELETE ROUTE" + 'ENTER'

A window is opened: select "YES" and press 'ENTER' to confirm (select "NO" and press 'ENTER' otherwise). The route remains on the screen shaded until the screen is redrawn. To delete route see also Par. 4.1.1.4 and 4.1.2.4).

4.1.2.4 Reversing route

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "ROUTE REVERSE" + 'ENTER'

Reversing a route plan is most typically used to return to the point where the route originally started.

4.1.2.5 Route color

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "ROUTE COLOR" + 'ENTER'

A window is opened: use the cursor keys to select the route color you want among the eight colors available. Press 'ENTER' to confirm. The route appears on the screen colored by the selected color. It is possible to select a different color for any route.

4.1.2.6 Send/Receive route

To transmit the active route information onto the NMEA output port.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "SEND" + 'ENTER'

The NMEA WPL & RTE messages are sent to the output port.

To save route information received from the NMEA input port.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "RECEIVE" + 'ENTER'

The received route is saved on the active route, overwriting it. The NMEA WPL & RTE messages are sent to the input port.

4.1.2.7 Finding information on route: Route Report

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "ROUTE REPORT" + 'ENTER'

If there are more than 8 Waypoints shown, use the cursor key to select another page.

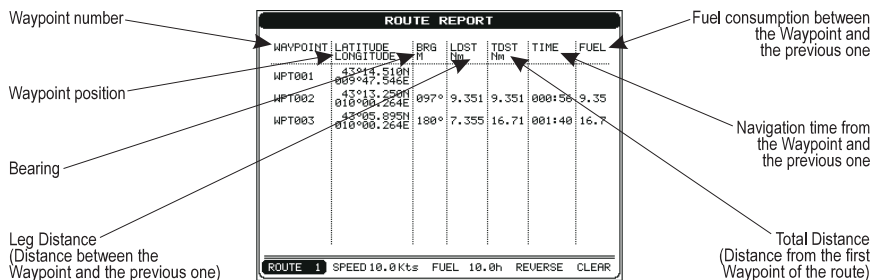


Fig. 4.1.2.7 - Route Data Report page

Selecting route

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "ROUTE REPORT" + 'ENTER' + "ROUTE #" + 'ENTER'

Use the cursor key to select the route number and press 'ENTER'. The route, shown by straight segments, is centered on the screen, with the cursor on the central Waypoint. See also Par. 4.1.2.1.

Note

If there is the Target in the current route, it is not possible to change the current route. So if the "Route #" item is selected, the chart plotter emits three beeps.

Changing Speed & Fuel values

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "ROUTE REPORT" + 'ENTER'

It is possible to modify the Speed and Fuel consumption values, respectively by selecting "SPEED" and "FUEL". Insert value by using the cursor key and pressing 'ENTER'.

Reversing route

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "ROUTE REPORT" + 'ENTER' + "REVERSE" + 'ENTER'

Reversing a route plan is most typically used to return to the point where the route originally started. See also Par. 4.1.2.3.

Deleting route

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "ROUTE REPORT" + 'ENTER' + "CLEAR" + 'ENTER'

A window is opened: select "YES" and press 'ENTER' to confirm (select "NO" and press 'ENTER' otherwise). The route remains on the screen shaded until the screen is redrawn. To delete the route see also Par. 4.1.1.4 and 4.1.2.2.

4.1.2.8 Safe Route Checking

This function checks the presence of particular cartographic objects (see the list below) on a range set by the user for all route legs:

- Land Areas
- Shallow Water
- Intertidal Areas
- Rocks
- Wrecks
- Obstructions
- Shoreline Constructions
- Fishing Facility
- Dredged Areas
- Diffusers
- Mooring/Warping Facility
- Production Installation
- Pings
- No Data Available

If any of these alarm conditions is detected, the function returns the list of dangerous objects and the relative dangerous route leg, that is drawn with a different color.

It is possible to make the Safe Route Check from menu following the procedure:

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "ROUTE CHECK REPORT" + 'ENTER'

or:

- Place cursor on route leg + 'ENTER' + "ROUTE CHECK" + 'ENTER'

The list of the dangerous objects found on the charts crossed by the route is shown in the route check report.

It is also possible to activate this function in automatic mode:

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "AUTOMATIC CHECK" + 'ENTER' + "ON" + 'ENTER'

If Automatic Route Check is activated, the modified Route legs are checked everytime a Waypoint is added, inserted, edited or moved.

Before activating the function, you could change the function parameters, as the width and the depth of the detected area and the research accuracy.

To select the width of the detected area aside the route:

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "ROUTE WIDTH" + 'ENTER'

Note

Safe Route width value represents half the total width checked by the function.

To select the depth of the detected area aside the route:

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "ROUTE DEPTH" + 'ENTER'

It also possible to select the accuracy for the route check, among Very Low, Low, Medium, High and Very High:

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ROUTE" + 'ENTER' + "ACCURACY" + 'ENTER'

4.2 MARK & EVENT

You may place a Mark, as it is called, at your cursor position, while Event is created at your vessel position.

4.2.1 MARKS

You may tag a location on the chart with a Mark symbol and number, which you can record for later use. Every time you place the cursor on a Mark the following functions are available.

4.2.1.1 Adding Mark

ONLY ON MAGNUM PLUS

- Select Advanced Mode + 'ENTER' + "MARK" + 'ENTER'

or:

- 'MARK' (if it is present)

ONLY ON MAGNUM PRO

- 'MARK'

The new Mark appears on your cursor position. An info window containing Mark name, symbol and Latitude/Longitude is shown.

4.2.1.2 Deleting Mark

- Select Advanced Mode + Place cursor on Mark

Press 'ENTER'. Select "DELETE" and press 'ENTER': the Mark remains on the screen shaded until the next screen is redrawn.

Note

If you try to delete a Mark that belongs to many routes, the chart plotter emits three beeps and on the screen a Warning message appears. If you want to delete the Mark, press 'ENTER'.

4.2.1.3 Goto

- Place cursor on Mark

Press 'DEST': a circle encloses the Mark symbol. A straight line is shown on the screen connecting the Target with the ship's position. When the Target is placed, all navigation data are referred to this Target.

4.2.1.4 Moving Mark

- Select Advanced Mode + Place cursor on Mark

Press 'ENTER'. Select "MOVE" and press 'ENTER'. Move the cursor by the cursor key, a dotted line connecting the Mark with the new position is shown:

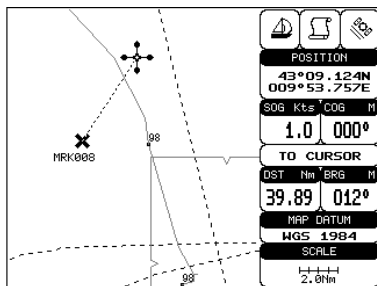


Fig. 4.2.1.4 - Moving Mark function (I)

Press 'ENTER':

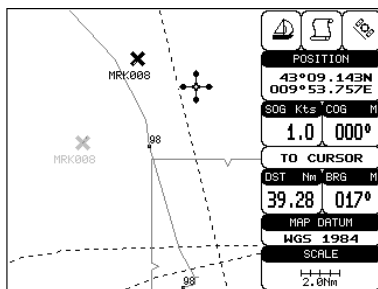


Fig. 4.2.1.4a - Moving Mark function (II)

The Mark is placed in the new position, the "old" Mark, remains on the screen shaded until the screen is redrawn.

Note

If you try to move a Mark that belongs to many routes, the chart plotter emits three beeps and on the screen a Warning message appears. If you want to move the Mark, press 'ENTER'.

4.2.1.5 Editing Mark

- Select Advanced Mode + Place cursor on Mark

Press 'ENTER'. Select "EDIT" and press 'ENTER'. A window appears to modify Name, Symbol, Color and coordinates of the existing Mark.

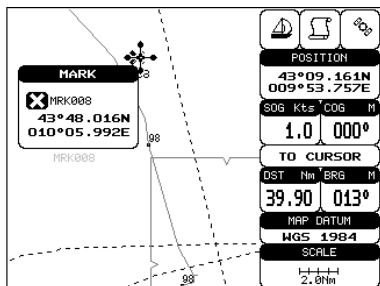


Fig. 4.2.1.5 - Edit Mark

Use the cursor key to select the field. If you have selected Name field, press 'ENTER': use the cursor key to insert the character (8 characters max), then press 'ENTER'. If Symbol field is selected press 'ENTER': a window with 16 different symbols appears. Use the cursor key to select the symbol and press 'ENTER'. If Color field is selected press 'ENTER': a window with 8 different colors appears, use the cursor key to select the desired color and press 'ENTER'. If Coordinates field is selected, press 'ENTER' and then use the cursor key to insert the value. Then press 'CLEAR'.

4.2.1.6 Finding information on Marks: User Points List page

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER POINTS" + 'ENTER'

A full window is opened showing information about all stored User Points (Marks, Events and Waypoints). Move up/down the cursor key to select the User Point you wish. If the page contains more than 8 User Points, the list continues in the next pages. See Par. 4.1.1.9.

4.2.1.7 Add to route

- Select Advanced Mode + Place cursor on Mark

Press 'ENTER'. Select "ADD TO ROUTE" and press 'ENTER': the selected Mark is connected to the current route. The same Mark can be added in many routes.

Note

An existing Mark can be connected to the current route in another mode too. Place cursor on Mark, the information window related to the Mark appears, press 'CLEAR' to close the window and then press 'ENTER', select the Waypoint option and press 'ENTER'. The Mark is connected to the current route.

4.2.2 EVENTS

In Navigate mode you may place a location with an Event symbol and number, directly on the ship's position. Move the cursor to exit from Navigate mode; place the

cursor on an Event to access the following functions.

4.2.2.1 Adding Event

ONLY ON **MAGNUM PLUS**

- Select Advanced Mode + 'CLEAR' , then 'ENTER' + "EVENT" + 'ENTER'

or:

- 'EVENT' (if it is present)

ONLY ON **MAGNUM PRO**

- 'CLEAR' + 'EVENT'

An Event is placed directly on the ship's position.

4.2.2.2 Deleting Event

- Place cursor on Event

Press 'ENTER'. Select "DELETE" and press 'ENTER': the Event remains on the screen shaded until the next screen is redrawn.

Note

If you try to delete a Event that belongs to many routes, the chart plotter emits three beeps and on the screen a Warning message appears. If you want to delete the Event, press 'ENTER'.

4.2.2.3 Goto

- Place cursor on Event

Press 'DEST': a circle encloses the Event symbol. A straight line is shown on the screen connecting the Target with the ship's position. When the Target is placed, all navigation data are referred to this Target.

4.2.2.4 Editing Event

- Place cursor on Event

Press 'ENTER'. Select "EDIT" and press 'ENTER'. A window appears to modify Name, Symbol, Color of the existing Event.

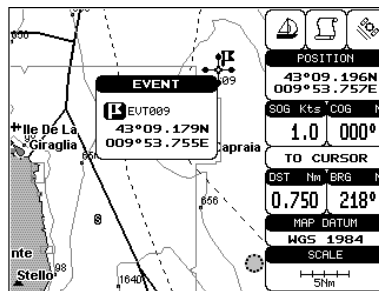


Fig. 4.2.2.4 - Edit Event

Use the cursor key to select the field. If you have selected Name field, press 'ENTER': use the cursor key to insert the character (8 characters max), then press 'ENTER'. If Color field is selected press 'ENTER': a window with 8 different colors appears, use the cursor key to select the desired color and press 'ENTER'. If Symbol field is selected press 'ENTER': a window with 16 different symbols appears. Use the cursor key to select the symbol and press 'ENTER'. Then press 'CLEAR'.

4.2.2.5 Finding information on Events: User Points List page

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER POINTS" + 'ENTER'

A full window is opened showing information about all stored User Points (Marks, Events and Waypoints). Move up/down the cursor key to select the User Point you wish. If the page contains more than 8 User Points, the list continues in the next pages. See Par. 4.1.1.9.

4.2.2.6 Add to route

- Place cursor on Event

Press 'ENTER'. Select "ADD TO ROUTE" and press 'ENTER': the selected Event is connected to the current route. The same Event can be added in many routes.

Note

An existing Event can be connected to the current route in another mode too. Place cursor on Event, the information window related to the Event appears, press 'CLEAR' to close the window and then press 'ENTER', select the Waypoint option and press 'ENTER'. The Event is connected to the current route.

4.3 EBL & VRM FUNCTION

EBL & VRM function enables to create a dotted line and a circle respectively with direction and radius determined by the user.

4.3.1 PLACING EBL & VRM

- Select Advanced Mode + 'ENTER' + "EBL & VRM" + 'ENTER'
- or ON MAGNUM PLUS:

- 'EBL-VRM' (if it is present)

On the screen a dotted line and a circle appear: you can move in any direction you choose moving the cursor keys. When the desired position is selected, press 'ENTER'. A window is shown containing the bearing value for the EBL and the radius value for the VRM.

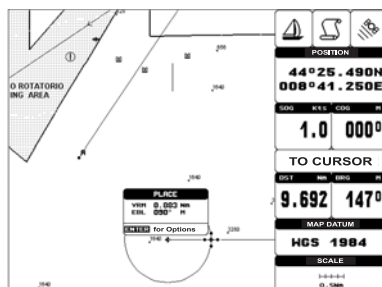


Fig. 4.3.1 - EBL & VRM

4.3.2 DELETING EBL & VRM

- Select Advanced Mode + Place cursor on the cross EBL & VRM + 'ENTER'
Select "DELETE" and press 'ENTER': the line and circle disappear from the screen.

4.3.3 EDITING EBL & VRM

- Select Advanced Mode + Place cursor on the cross EBL & VRM + 'ENTER'
Select "EDIT" and press 'ENTER': with the cursor key move the line and the circle, when the desired position is selected, press 'ENTER'. A window is shown containing the bearing value for the EBL and the radius value for the VRM.

4.4 MORE ABOUT A-B-C-D FUNCTION

The A-B-C-D function, explained in the previous paragraph 3.2, if Advanced Mode is selected, allows you not only to create the A, B, C, D points and to delete them, but also to modify and move them.

4.4.1 INSERTING THE A-B-C-D POINTS

Place the cursor on the desired position and ON **MAGNUM Pro** press 'ENTER' (on the screen the Create window appears), by using the cursor key select "A-B-C-D" and press 'ENTER'; ON **MAGNUM Plus** press 'A-B-C-D'. The A point and an information window on A appear. Move the cursor, and ON **MAGNUM Pro** press 'ENTER', select "A-B-C-D" and press 'ENTER' again; ON **MAGNUM Plus** press 'A-B-C-D', the B point appears, connected to A with a straight segment; an information window on A-B segment (distance (DST), bearing (BRG) and total distance from the first point) appears. Moving the cursor, following the above procedure the C and D points are placed (see previous Fig. 3.2.1).

4.4.2 DELETING THE A-B-C-D POINTS

When placing the cursor on the desired point (A, B, C or D) the information window appears. Press 'ENTER', select "DELETE" and press 'ENTER' again: the point is deleted. When the point is deleted, the cursor is placed on the previous point, if existed. The labels of the next points are renamed.

4.4.3 DELETING THE A-B-C-D SEGMENT

When placing the cursor on the desired point (A, B, C or D) or on segment between two points the information window appears. Press 'ENTER', select "DELETE ALL" and press 'ENTER' again: all points and connecting segments are deleted.

4.4.4 MOVING THE A-B-C-D POINTS

When placing the cursor on the desired point (A, B, C or D) the information window appears. Press 'ENTER', select "MOVE" and press 'ENTER': by the cursor key move the cursor, on the screen a dotted line connecting the point to move with the new position appears. By pressing 'ENTER' the point is placing in the new position.

4.4.5 INSERTING THE A-B-C-D POINTS

Placing cursor on the segment connecting two points, the information window appears. Select "INSERT" and press 'ENTER': by the cursor key move the cursor, on the screen a dotted line appears. By pressing 'ENTER' the new point is placing between the two existed points which are renamed.

4.4.6 NAVIGATING ON THE A-B-C-D POINTS

If fix received is good, place the cursor on the desired point A, B, C or D and press 'DEST'. When ship reaches the Destination point, navigation follows the next point (if exists). When Target is set, three options are available: STOP NAV, NEXT and PREV.

4.5 USING THE TRACK FUNCTIONS

As long as the chart plotter is connected to a positioning instrument, it stores all points in its memory. The chart plotter can store a fix when the distance from its last stored position is greater than a defined distance or after a defined time. A line connects such

points and represents the past course, called the track of the ship.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "TRACK" + 'ENTER'

4.5.1 SELECTING ACTIVE TRACK

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "TRACK" + 'ENTER' + "ACTIVE TRK" + 'ENTER'

Select the number of the active track. The default setting is 1.

4.5.2 ENABLING TRACK STORING

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "TRACK" + 'ENTER' + "TRACK" + 'ENTER'

To enable (On) or disable (Off) the track storing. It is not possible to use the track storing if you are not receiving a valid fix. The default setting is On.

4.5.3 DISPLAYING TRACK

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "TRACK" + 'ENTER' + "VISIBLE" + 'ENTER'

To enable (On) or disable (Off) the displaying of track. The default setting is On.

4.5.4 SELECTING TRACK COLOR

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "TRACK" + 'ENTER' + "COLOR" + 'ENTER'

Selects the desired color among the eight colors available for the track.

4.5.5 DELETING TRACK

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "TRACK" + 'ENTER' + "DELETE" + 'ENTER'

Deletes the all track storing. After pressing 'ENTER' a warning window appears: select "Yes" and press 'ENTER' to confirm (select "No" otherwise).

4.5.6 DELETING SELECTED TRACK

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "TRACK" + 'ENTER' + "DELETE SELECTION" + 'ENTER'

Deletes the track selected. After pressing 'ENTER' a window appears: press 'ENTER' to set the first point , then press 'ENTER' to set the second point. A warning window appears: select "Yes" and press 'ENTER' to confirm the deletion (select "No" otherwise).

4.5.7 SELECTING TRACK MEMORIZING TYPE

- 'MENU' + 'ADVANCED SETTINGS' + 'ENTER' + "TRACK" + 'ENTER' + "STEP UNIT" + 'ENTER'

Choose Distance (Dist) - the chart plotter can store a fix when the distance from its last stored position is greater than a defined distance; Time - the chart plotter can store a fix after a defined time; Auto - the software decides when storing a position, on the basis of the straight or curved track. The default setting is Time.

4.5.8 SELECTING DISTANCE

- 'MENU' + 'ADVANCED SETTINGS' + 'ENTER' + "TRACK" + 'ENTER' + "DISTANCE" + 'ENTER'

When the tracking function is On and the type of track storing is Distance, you can store a fix when the distance from its last stored position is greater than a defined distance. Choose in the range 0.01, 0.05, 0.1, 0.5, 1.0, 2.0, 5.0, 10.0 Nm (the distance unit is selected by the user, see Cap. 5). The default setting is 0.01 Nm.

4.5.9 SELECTING TIME

- 'MENU' + 'ADVANCED SETTINGS' + 'ENTER' + "TRACK" + 'ENTER' + "TIME" + 'ENTER'

When the tracking function is On and the type of track storing is Time, the chart plotter can store a fix after a defined time. Choose among 1, 5, 10, 30 sec, 1, 5, 10 min. The default setting is 1 sec.

4.6 USER C-CARD MENU

The chart plotter allows to copy information to an User C-CARD. You can also return the information to internal memory at a later time. This allows virtually unlimited storage.

- 'MENU' + 'ADVANCED SETTINGS' + 'ENTER' + "USER C-CARD" + 'ENTER'

Number of Selected Slot

File name

Number of Selected file

Information on stored User Points

DATE and Time of file creation

Type of data contained in the file (Mark file, Waypoint file...)

USER C-CARD				
SLOT	NAME	TYPE	DATE	TIME
FILE 1	JILE06	TRACKS	01/01/80	00:00:00
MARKS 2	FILE02	MARKS	01/01/80	00:00:00
	FILE07	TRACKS	01/01/80	00:00:00
	FILE04	MARKS	01/01/80	00:00:00
EVTS 2	JILE0710	TRACKS	01/01/80	00:00:00
	GILE06	TRACKS	01/01/80	00:00:00
	GILE07	TRACKS	01/01/80	00:00:00
WPTS 5	FILE08	MARKS	07/02/98	17:17:00
	FILE09	ROUTES	07/02/98	17:17:00
RTES 1	FILE01	TRACKS	01/01/80	00:00:00
	FILE03	MARKS	01/01/80	00:00:00
TRKS 566	FILE05	MARKS	01/01/80	00:00:00

SAVE LOAD DELETE FORMAT CHANGE

Fig. 4.6 - User C-CARD Menu

4.6.1 SAVING FILE

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER C-CARD" + 'ENTER' + "SAVE" + 'ENTER'

A window is opened to insert the file name and the type of data to save:

USER C-CARD				
SLOT	NAME	TYPE	DATE	TIME
FILE 1	FILE06	TRACKS	01/01/80	00:00:00
MRKS 2	FILE02	MARKS	01/01/80	00:00:00
EVTS 2	FILE07	TRACKS	01/01/80	00:00:00
WPTS 5	FILE04	MARKS	01/01/80	00:00:00
RTES	FILE09	ROUTES	07/02/98	17:17:00
TRKS 566	FILE01	TRACKS	01/01/80	00:00:00
	FILE03	MARKS	01/01/80	00:00:00
	FILE05	MARKS	01/01/80	00:00:00

SAVE FILE

NAME: FILE06

TYPE: EVENTS

SAVE
LOAD
DELETE
FORMAT
CHANGE

Fig. 4.6.1 - Save File function (I)

Select the file name. At first a default name is shown: use the cursor key to insert the name. Press 'ENTER'. Select the data type to save among "MARK", "EVENT", "ROUTE" or "TRACK".

Note

When naming a file, you may have trouble finding a name that uniquely identifies the file's contents. Dates, for example, are often used in filenames; however, they take up several characters, leaving you with little flexibility. The secret is to find a compromise, a point where you can combine a date with a word, creating a unique filename. The maximum length of the filename is 8 characters. The characters may be numbers (0, ..., 9), letters (A, ..., Z) and spaces (for example legal identifiers are "ABC", "AA", "12121212", "A B C", "1 A 1", and so on.

Press 'CLEAR'. On the screen appears:

USER C-CARD				
SLOT	NAME	TYPE	DATE	TIME
FILE 1	FILE06	TRACKS	01/01/80	00:00:00
MRKS 2	FILE02	MARKS	01/01/80	00:00:00
EVTS 2	FILE07	TRACKS	01/01/80	00:00:00
WPTS 5	FILE04	MARKS	01/01/80	00:00:00
RTES	FILE09	ROUTES	07/02/98	17:17:00
TRKS 566	FILE01	TRACKS	01/01/80	00:00:00
	FILE03	MARKS	01/01/80	00:00:00
	FILE05	MARKS	01/01/80	00:00:00

INFORMATION

SAVING

OK

SAVE
LOAD
DELETE
FORMAT
CHANGE

Fig. 4.6.1a - Save File function (II)

4.6.2 LOADING FILE

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER C-CARD" + 'ENTER' + "LOAD" + 'ENTER'

Before pressing 'ENTER', choose file name in the list shown on the screen using the cursor key.

4.6.3 DELETING FILE

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER C-CARD" + 'ENTER' + "DELETE" + 'ENTER'

A warning window is shown, select "YES" and press 'ENTER' to confirm deletion (select "NO" otherwise). This operation remove old or unnecessary files to clean up your User C-CARD. Remember that this option permanently erases the file.

4.6.4 FORMATTING USER C-CARD

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER C-CARD" + 'ENTER' + "FORMAT" + 'ENTER'

A warning window is shown, select "YES" and press 'ENTER' to confirm the formatting (select "NO" otherwise). The format of User C-CARD must be done before using a new User C-CARD: this operation prepares the User C-CARD to receive and store information.

4.6.5 CHANGING USER C-CARD

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "USER C-CARD" + 'ENTER' + "CHANGE" + 'ENTER'

Allows to change the User C-CARD.

4.7 C-LINK

C-Link system is a feature which allows to sharing the same cartographic data between two chart plotter units linked via serial I/O port.

In order to activate C-Link function, a “MAX data C-CARD” (called REGULAR C-CARD) must be inserted into one of the two chart plotters and a special MAX data C-CARD (called MIRROR C-CARD) must be inserted on the other chart plotter. The two MAX data C-CARDS must have the same code and revision. So, the MIRROR C-CARD can be utilized only on a chart plotter linked to another chart plotter provided with the equivalent REGULAR C-CARD. It is important to point out that the two chart plotters must have the update software versions that allow C-Link function.

4.7.1 HOW C-LINK SYSTEM WORKS

When the chart plotter is powered up, it switches into the “Stand-Alone Mode”. In this work mode, the chart plotter unit periodically scans all the available C-CARD slots searching for MIRROR C-CARDS. When one or more MIRROR C-CARD is found (in

one or both chart plotters) a special connection is established between the chart plotters to habilitate the MIRROR C-CARDS. If a regular C-CARD which has previously activated a MIRROR C-CARD is removed, even the MIRROR C-CARD will be not read anymore on the other unit.

4.8 C-LINK NAVIGATION DATA TRANSFER

This function allows transferring C-Link Navigation Data (Route Name, Destination ID & Position, Next Waypoint ID & Position, Total Route length, Fuel Consumption Rate, ETA, TIG etc.) between two chart plotters linked through the C-Link system. The chart plotters can be set to operate in two modes:

- MASTER mode (Primary chart plotter that sends data)
- SLAVE mode (Secondary chart plotter that receives data)

When the navigation is activated on the Master chart plotter, the C-Link Navigation Data will be continuously sent to the Slave until the navigation is active. If the Master is navigating to a Single Destination, the Slave will show the Destination position and activate the navigation to it. If the Master is navigating to a Route, the Slave will show the Route Leg composed by the Destination and the Waypoint after the Destination (Next Waypoint) and activate the navigation to it. Any variation to the current C-Link Navigation Data will be transferred from the Master to the Slave. The Slave will be provided with a few dedicated pages to show the C-Link Navigation Data received from the Master.

4.8.1 OPERATIONS

4.8.1.1 Introductive elements

It is important remark, once more, that this function does not transfer the whole Route but just the information relative to the navigation. Such information will be removed from the Slave chart plotter as soon as the navigation is terminated. C-Link Navigation Data is exchanged by using two NMEA-0183 C-MAP proprietary sentences: \$PCMPN,1 and \$PCMPN,2. When the navigation is activated on the Master, it starts outputting the C-Link Navigation Data. If the Slave is connected, all C-Link Navigation Data received are stored in its memory and the navigation is started. The information sent by the Master consists of the following values:

- Navigation mode (to Single Destination/to a Route)
- Route Name*
- Destination ID

- Destination Position
- Next Waypoint ID*
- Range from Destination to next Waypoint*
- Bearing from Destination to next Waypoint*
- Route Length*
- Distance from Destination to Last Route Waypoint*
- Remaining Route Legs*
- Planned Cruising Speed
- Average Fuel Consumption
- Initial Fuel Load

C-Link Navigation Data can refer to:


- Single Destination navigation
- Route Following navigation.

Values identified by * are sent only for Route Following navigation.

The Destination Icon, Navigation leg (Fix Position to Destination), the Next Waypoint Icon and all other relevant C-Link Navigation Data will be shown on the Slave chart plotter. Any variation of the C-Link Navigation Data on the Master will be communicated to the Slave so to keep data aligned on both devices.

4.8.1.2 C-Link serial connection

The two chart plotters should be connected via serial ports. Any of the available ports can be used, the software will recognize automatically the serial ports used. A typical connection is as follows:

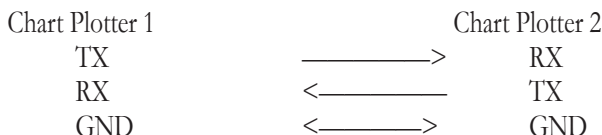

4.8.1.3 Master Chart Plotter

Operating mode

To select the Master mode (Primary Station) follow the procedure:

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "C-LINK" + 'ENTER' + "Primary Station" + 'ENTER'

Master mode is the default factory setting. All regular chart plotters functions are allowed. As soon as the Destination is placed, the Master chart plotter will start transmitting all C-Link Navigation Data. In Master mode the C-Link Navigation Data received from the NMEA port is ignored. So, if the two chart plotters are both operating in Master mode, the C-Link Navigation Data sent by the other chart plotter never processed. Under such condition if the navigation is activated on one of the two chart plotters, a warning message

will be shown to notify that the C-Link Navigation Data will be ignored by the other chart plotter.

4.8.1.4 Slave Chart Plotter

Operating mode

To select the Slave mode (Secondary Station) follow the procedure:

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "C-LINK" + 'ENTER' + "Secondary Station" + 'ENTER'

When Slave mode is set, the chart plotter cannot manipulate the C-Link Navigation Data anymore.

Stop current navigation

If the navigation was already active, it will be disabled as soon as Slave mode is set. An appropriate warning message will be shown to notify that the navigation is already active and to confirm whether Slave mode can be set.

Inhibit navigation operation

As soon as Slave mode is set, the destination cannot be placed anymore either the C-Link Navigation Data is received from the Master or not. Also, when the C-Link Navigation Data is received from the Master, it will not be allowed to deactivate the navigation.

Inhibit route following

While navigating to the Route received from the Master the destination is reached (either applying distance or perpendicular criteria), the destination will not be moved to the next Waypoint on the Route.

MOB handling

If the navigation to the external destination is active and 'MOB' is pressed on the Slave chart plotter, the MOB is placed but the navigation to the MOB is not activated.

Notes

While navigating to the external destination the operating mode is switched to Master mode, the navigation to the external destination will be terminated. An appropriate warning message will be shown to notify that the navigation to the external destination is active and to confirm whether Slave mode can be set. Setting Slave mode, the C-Link Navigation Data will be deleted.

The C-Link Navigation Data are deleted at Power Off.

4.8.1.5 C-Link Navigation Data: acquisition and display

As soon as the C-Link Navigation Data is received, the Slave parses the information received and executes the relative actions depending on its current working status.

Important

When the navigation to the external destination is activated, the Slave chart plotter will show all relevant C-Link Navigation Data exactly like when the destination is not the external one: (Destination Name, DST and BRG to Destination, calculate XTE, calculate TTG etc.). These values will be displayed all places where required and they will be used to format NMEA-0183 output data.

4.8.1.6 Graphical representation on Map Display

DESCRIPTION	SYMBOL
External Destination - RED Icon	
Next Waypoint - GREEN Icon	
Navigation Leg - RED Line	

Fig. 4.8.1.6 - Graphical Displaying

4.8.1.7 Route Data Report

When the Navigation to the External Route is received, it will be possible to display the information related to the External Route by entering the Route Data Report.

External Route: ROUTE001				
Cruising Speed:	12.5 kn	Fuel Consumption Rate:	8.0 l/h	
Total Route length:	71.19 Nm	Total Fuel Consumption:	45.5 l	
Waypoints in Route:	4	Initial Fuel Load:	255 l	
Remaining Waypoints:	4	Remaining Fuel:	209 l	
	DST (nm)	TTG: (hh:mm)	ETA: (hh:mm)	Cons Lit
To Dest	11.93	00:57	11:54 AM	7.4
To Next Wpt	15.97	01:16	1:10 PM	12.3
To Last Wpt	83.12	05:41	6:54 PM	54.4

Fig. 4.8.1.7 - External route on Route Data Report

- External Route : name of the External Route (from PCMPN,0)
- Cruising Speed : planned cruising speed (from PCMPN,1)
- Fuel Consumption Rate : planned fuel consumption rate (from PCMPN,1)
- Total Route length Route : length from first to last Wpt (from PCMPN,1)
- Initial Fuel Load : volume of fuel available before the navigation was started (liters)
- Total Fuel Consumption : calculated fuel consumption to navigate the whole Route

- Waypoints in Route : No. of Wpts in the Route (from PCMPN,1)
- Remaining Waypoints : No. of Wpts from Destination to last Wpt (from PCMPN,1)
- Distance to Destination : distance from ship to Destination (calculated)
- Distance to Next Wpt : distance to travel from ship to the Wpt after the destination (calculated: Distance to Dest + Next Route Leg length)
- Distance to Last Wpt : distance to travel from ship to the end of the Route (calculated: Distance to Dest +Distance from Dest to last Wpt received from PCMPN,1)
- TTG To Destination : estimated time to travel the “Distance to Last Wpt”. Calculated using Cruising Speed.
- TTG To Next Wpt : estimated time to travel the “Distance to Next Waypoint”. Calculated using Cruising Speed.
- TTG to Last Wpt : estimated time to travel the “Distance to Last Wpt”. Calculated using Cruising Speed
- ETA to Destination : Estimate Time of Arrival to the Destination point. Calculated: Current Time + “TTG To Destination”
- ETA to Next Waypoint : Estimate Time of Arrival to the Waypoint after the Destination. Calculated: Current Time + “TTG To Next Waypoint”
- ETA to Last Wpt : Estimate Time of Arrival to the end of the Route. Calculated: Current Time + “TTG To Last Wpt”

4.8.1.8 Quick Info

Route Navigation: Quick Info on the Destination

EXTERNAL Rte [ROUTE001]			
	DST	TTG:	Cons
	(nm)	(hh:mm)	Lit
Dest	11.93	00:57	7.41
Last	83.12	05:41	54.4
Route Length: 71.19 Nm			

Route Name, DESTINATION ID Wpt1/4

Distance, TTG and Consumption from Ship to Dest
Distance, TTG and Consumption from Ship to Last Wpt

Fig. 4.8.1.8 - Quick Info on Destination

Quick info on Single Destination

EXTERNAL DESTINATION WPT002	
DST	BRG
7.41 Nm	082° M

Fig. 4.8.1.8a - Quick Info on Single Destination

5

Advanced Settings

The Advanced Settings menu allows to handle the chart plotter functions. The menu options are arranged in sub-menus. For example, all options that relate to the Fix functions are in Fix sub-menu. See Par. 3.5 for informations about Map Setting menu, see Par. 4.4 about Track menu, see par. 4.1.2 about Route menu, see Par. 4.1.1.9 about User Points menu and Par. 4.5 about User C-CARD menu.

- **'MENU' + "ADVANCED SETTINGS" + 'ENTER'**

Once you are in the Menu, use your cursor key to highlight the item and press 'ENTER' to activate or to proceed to the next selection menu.

5.1 SETUP

The Setup menu allows to enable or disable general options in the chart plotter handling. See Par. 3.5.3 about Auto Info option.

- **'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SETUP" + 'ENTER'**

5.1.1 TIME REFERENCE

Sets UTC or Local Time. The default setting is UTC.

- **'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SETUP" + 'ENTER' + "TIME REFERENCE" + 'ENTER'**

5.1.2 TIME FORMAT

Sets you preferred time between 12 hour and 24 hour. The default setting is 24 hour.

- **'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SETUP" + 'ENTER' + "TIME FORMAT" + 'ENTER'**

5.1.3 DATE FORMAT

Sets you preferred date between MM-DD-YY (month-day-year) and DD-MM-YY (day-month-year). The default setting is MM-DD-YY.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SETUP" + 'ENTER' + "DATE FORMAT" + 'ENTER'

5.1.4 WIND SPEED

Selects the Wind Speed unit among Kts=Knots, m/s, Bft, Mph and Kph=kilometers per hour. The default setting is Kph.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SETUP" + 'ENTER' + "WIND SPEED" + 'ENTER'

5.1.5 BEEPER

Turns On/Off the sound after pressing a key ("beep"). The default setting is Off.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SETUP" + 'ENTER' + "BEEPER" + 'ENTER'

5.1.6 EXTERNAL WPT

The coordinates of a Waypoint, received from a GPS connected to the chart plotter, can be stored into the chart plotter, if the GPS is NMEA-0183 protocol compatible and support the \$BWC sentence (this symbol remains on the screen for 30 seconds). You may save it by placing a Waypoint or a Mark onto that symbol. As soon as the chart plotter receives another \$BWC sentence with the coordinates of a new Waypoint, the symbol moves to the new point. The default setting is Off.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SETUP" + 'ENTER' + "EXTERN WPT" + 'ENTER'

5.1.7 SHIP ICON MODE

Sets the ship icon as Steady or Blinking. The default setting is Steady.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SETUP" + 'ENTER' + "SHIP ICON MODE" + 'ENTER'

5.2 FIX

The Fix menu handles functions related to the Fix.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "FIX" + 'ENTER'

5.2.1 FIX CORRECTION

Turns On/Off the Correction from the positioning system. If the new Correction is calculated, but the Correction is not enabled, the ship's position is not changed. The default setting is Off.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "FIX" + 'ENTER' + "FIX CORRECTION" + 'ENTER'

5.2.2 COMPUTE CORRECTION

Corrects fixes from the positioning instrument. By placing the cursor on the ship's real position and selecting this option, the error is calculated and internally memorized for appropriate correction, but not applied.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "FIX" + 'ENTER' + "COMPUTE CORRECTION" + 'ENTER'

5.2.3 CORRECTION OFFSET

Manual correction of fix position.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "FIX" + 'ENTER' + "CORRECTION OFFSET" + 'ENTER'

Insert the preferred value and press 'ENTER'.

5.2.4 POSITION FILTER

Turns On/Off the Position Filter. In case of a jittering fix this option makes the ship's position more stable and the track smoother. The default setting is Off.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "FIX" + 'ENTER' + "POSITION FILTER" + 'ENTER'

5.2.5 SPEED FILTER

Turns On/Off the Speed Filter. When it is On, you can filter the speed of the ship, to optimize it. The default setting is Off.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "FIX" + 'ENTER' + "SPEED FILTER" + 'ENTER'

5.2.6 FILTER DUMP

Inserts the value for the Filter in the range [500 - 12000]. The default setting is 500.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "FIX" + 'ENTER' + "FILTER DUMP" + 'ENTER'

5.2.7 DEAD RECKONING

Enables (On) or disables (Off) the Dead Reckoning. The default setting is Off.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "FIX" + 'ENTER' + "DEAD RECKONING" + 'ENTER'

5.2.8 STATIC NAVIGATION

Sets up a threshold for the speed. When the speed received from the positioning device is under that threshold, the chart plotter displays zero speed. The default value is 0.0 Knots.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "FIX" + 'ENTER' + "STATIC NAVIGATION" + 'ENTER'

5.3 NAVIGATE

The Navigate menu allows to handle functions related to navigation.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "NAVIGATE" + 'ENTER'

5.3.1 COORDINATE SYSTEM

Sets your preferred Coordinate System among ddd mm ss, ddd mm.mm, ddd mm.mmm, UTM, OSGB, TD. The default setting is ddd mm.mmm.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "NAVIGATE" + 'ENTER' + "COORDINATE SYSTEM" + 'ENTER'

If TD has been selected a new menu is shown on the screen:

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "NAVIGATE" + 'ENTER' + "COORDINATE SYSTEM" + 'ENTER' + "TD" + 'ENTER'

Chain: Selects the preferred chain. The default setting is 9970.

Pair: Selects the pair of stations in the selected chain. The default setting is W X.

ASF 1/2: Sets the ASF (Additional Second Factor) for the slave in the selected chain. The default setting is 0.

Alter: Turns On/Off the Alternate Solution in the chain. The default setting is Off.

5.3.2 FIX DATUM

Sets the datum reference used by the GPS receiver connected to (or integrated in) the chart plotter so that the chart plotter converts the position received from the GPS to the Map Datum currently selected in the menu in order to match the position from the GPS with the position on the charts. You must know what datum reference is used by the GPS and set it in the Fix Datum option. WGS 1984 is the default Fix Datum.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "NAVIGATE" + 'ENTER' + "FIX DATUM" + 'ENTER'

5.3.3 MAP DATUM

Allows selecting any Geodetic Datum reference from the over 100 available on the chart plotter. Map Datum selection switches to the selected reference datum applying the datum offsets stored with the charts. WGS 1984 is the default Map Datum.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "NAVIGATE" + 'ENTER' + "MAP DATUM" + 'ENTER'

5.3.4 ORIENTATION RESOLUTION

Selects the orientation of your chart according to your personal needs (see Par. 3.5.1.3 for more information). The Orientation Resolution is the resolution angle for the Map Orientation, range [5°, 60°] . The default setting is 10°.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "NAVIGATE" + 'ENTER' + "ORIENT. RESOLUTION" + 'ENTER'

5.3.5 ROLL ROAD SCALE

Sets you preferred Rolling Road Scale among 0.2, 0.5, 1.0, 2.0, 4.0, 10.0. The default setting is 0.2.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "NAVIGATE" + 'ENTER' + "ROLL ROAD SCALE" + 'ENTER'

5.3.6 RESET PARTIAL AND TOTAL TRIP

Resets the partial or total distance travelled by the ship from the first activation of the chart plotter or starting from the values reset. The partial or total trip value is shown on the top of the Navigation Data page.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "NAVIGATE" + 'ENTER' + "RESET PARTIAL TRIP" + 'ENTER'
- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "NAVIGATE" + 'ENTER' + "RESET TOTAL TRIP" + 'ENTER'

5.4 COMPASS

The Compass menu sets the desired value for Bearing and Magnetic Variation, and selects the Calibration page.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "COMPASS" + 'ENTER'

5.4.1 BEARINGS

Selects either degrees Auto Magnetic or True. If magnetic readings are selected the variation is computed automatically for every zone as soon as the chart is displayed. The default setting is Mag.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "COMPASS" + 'ENTER' + "BEARINGS" + 'ENTER'

5.4.2 VARIATION

It is possible to calculate the Magnetic Variation in an Automatic or manual mode, by inserting the step for calculation of Magnetic Variation. The default setting is Auto.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "COMPASS" + 'ENTER' + "VARIATION" + 'ENTER'

5.4.3 CALIBRATION

The variation table is used to match magnetic value readout on the chart plotter comparable with the value given by the compass of the boat. In other words, since the compass of the boat must be compensated (due to the iron masses, ...), we use the same values given by the chart plotter. This means that, for example, if the BRG to the next Waypoint readout in the chart plotter display is "X" Mag degree, if you steer the boat reading "X" Mag degree from the compass, you are driving well toward the next Waypoint.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "COMPASS" + 'ENTER' + "CALIBRATION" + 'ENTER'

5.5 ALARMS

The chart plotter provides alarm settings for various functions. Here you can set the system for your navigational requirements.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ALARMS" + 'ENTER'

5.5.1 ARRIVAL ALARM

Sets an acoustic alarm to sound when the vessel is approaching the destination. The default setting is Off.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ALARMS" + 'ENTER' + "ARRIVAL ALARM" + 'ENTER'

5.5.2 XTE ALARM

Sets an acoustic alarm to sound when the vessel is deviating from a defined course. The default setting is Off.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ALARMS" + 'ENTER' + "XTE ALARM" + 'ENTER'

5.5.3 ANCHOR ALARM

This function allows inserting of the limit of anchor dragging: beyond that, the alarm is activated. The chart plotter computes the distance between the current GPS position and the GPS position saved at the activation of the anchor alarm in the menu. If the computed distance exceeds the value set in the menu, the chart plotter shows the alarm message and starts the acoustic alarm. The default setting is Off.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ALARMS" + 'ENTER' + "ANCHOR ALARM" + 'ENTER'

5.5.4 DEPTH ALARM

Sets an acoustic alarm to sound when the received depth value (from the depth transducer) is too shallow. The default setting is Off.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ALARMS" + 'ENTER' + "DEPTH ALARM" + 'ENTER'

5.5.5 EXTERNAL ALARM

When any alarm condition occurs the pin is switched from High Impedance to ground. This signal can be used by an external device (as a hooter or buzzer). The default setting is On.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ALARMS" + 'ENTER' + "EXTERNAL ALARM" + 'ENTER'

5.5.6 GROUNDING ALARM (GUARDIAN TECHNOLOGY)

The chart plotter is provided with a function that, by querying the map's data, verifies potential danger to navigation due to shallow water, land, rocks, obstructions and shoreline constructions. The maps are scanned periodically (every 10 seconds). When the Grounding Alarm is active, the chart plotter scans an area in front of the boat. This area is identified by a triangle drawn in front of the boat icon whose direction is determined by the current boat heading. The length of the triangle is user selectable and its angle is 30 degrees. If any of the above objects are found, the chart plotter notifies the danger on a dedicated warning message box in the Grounding Alarm Report page (see Par. 5.5.9). The Grounding

Alarm is switched Off by default after a Master Reset. Once the Grounding Alarm has been activated, a warning message is shown.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ALARMS" + 'ENTER' + "GROUNDING ALARM" + 'ENTER'

Note

The Grounding Alarm function only operates with the new C-CARDS. It also affects the speed of the redraw of the screen. If this function is not used it maybe disabled.

5.5.7 GROUNDING ALARM RANGE

Allows setting the length of the sector to be detected among 0.25, 0.5, 1.0 Nm. The default setting is 0.5 Nm. When any of the searched objects is found in the scanned area, a tick marker is printed on the relative box in the Grounding Alarm Report page (see Par. 5.5.9) to identify which dangerous objects have been currently detected.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ALARMS" + 'ENTER' + "GROUNDING ALARM RANGE" + 'ENTER'

5.5.8 GROUNDING ALARM WIDTH

Allows setting the length of the sector to be detected among Thin, Medium and Large. The default setting is Large.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ALARMS" + 'ENTER' + "GROUNDING ALARM WIDTH" + 'ENTER'

5.5.9 GROUNDING ALARM REPORT

Allows displaying the report of the dangerous objects currently detected.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "ALARMS" + 'ENTER' + "GROUNDING ALARM REPORT" + 'ENTER'

5.6 SIMULATION

The built-in Simulator function allows you to become proficient in the use of the chart plotter. No current position fix is required because the chart plotter simulates position data internally.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SIMULATION" + 'ENTER'

5.6.1 ACTIVATE SIMULATION

Once the settings are selected, turn on the Simulator:

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SIMULATION" + 'ENTER' + "ACTIVATE SIMULATION" + 'ENTER'

To turn On the Simulation select Off. The default setting is Off.

5.6.2 SPEED

To start the simulator you can insert the Speed value. Using the cursor key select the preferred Speed and press 'ENTER'. The default setting is 01.0 Kts.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SIMULATION" + 'ENTER' + "SPEED" + 'ENTER'

5.6.3 HEADING

To start the simulator you can insert the Heading value. Using the cursor key select the preferred Heading and press 'ENTER'. The default setting is 000° M.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SIMULATION" + 'ENTER' + "HEADING" + 'ENTER'

5.6.4 DATE AND TIME

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SIMULATION" + 'ENTER' + "DATE" + 'ENTER'
- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SIMULATION" + 'ENTER' + "TIME" + 'ENTER'

Using the cursor key insert the preferred Date and Time and press 'ENTER'.

5.6.5 CURSOR CONTROL

Enables (On)/disables (Off) the cursor control. The default setting is Off.

- 'MENU' + "ADVANCED SETTINGS" + 'ENTER' + "SIMULATION" + 'ENTER' + "CURSOR CONTROL" + 'ENTER'

5.7 AIS MENU

AIS is an Automatic Identification System. It has been introduced to improve the safety of navigation by assisting in the efficient operation of ship-to ship, ship reporting and VTS applications. The system should enable operators to obtain information from the ship automatically, requiring a minimum of involvement of ship's personnel, and should have a high level of availability. AIS transponders installed on IMO vessels use VHF frequencies to:

- Transmit details of their own vessel
- Receive details from other vessels or navigation aids within VHF range.

Information being transmitted from vessels over 300 tons that, due to recent world-wide legislation, are required to fit Class “A” AIS transponders.

Connecting to the chart plotter an AIS receiver (please contact your local dealer), vessels with AIS transponder within VHF range are displayed on screen giving the skipper or navigator a visual interpretation of the data of nearby vessels. This improves safety, and specifically for collision avoidance reasons.

5.7.1 AIS SYSTEM DEFINITIONS

- **Target**

It is a vessel equipped with AIS. Information about the targets is being received by AIS Receiver and displayed on the screen.

- **CPA**

Closest Point of Approach is the closest distance that will be achieved between your vessel and the tracked target, based on your vessel’s speed and direction and the target’s speed and direction.

- **CPA Limit**

This is the distance from your vessel that a target may reach before a target is deemed a threat.

- **CPA Alarm**

Occurs if CPA is less or equal to CPA Limit. This test is done for active targets only.

- **TCPA**

Time to closest Point of Approach is the time remaining until the CPA will occur.

- **TCPA Limit**

This is the time remaining before the CPA is reached.

- **TCPA Alarm**

Occurs if TCPA is less or equal to TCPA Limit. This test is done for active targets only and if CPA value is less or equal to CPA Limit.

- **Radio Call Sign**

International call sign assigned to vessel, often used on voice radio.

- **Name**

Name of ship, 20 characters.

- **MMSI**

Maritime Mobile Service Identity.

- **MMSI number**

A unique 9 digit number that is assigned to a DSC radio station. It primarily registers the boat information in the U.S. Coast Guard’s national distress database for use in emergency situations.

- **Active Target**
Target located within the Activation Range. Active target is represented by oriented triangle with COG and Heading vectors. Rate of turn may also be displayed.
- **Dangerous Target**
Target detected by CPA or TCPA Alarm. Dangerous target is Active Target by definition. For better visibility Dangerous Target symbol is flashing.
- **Sleeping Target**
Target located outside the Activation Range. Sleeping target is represented by a small oriented triangle.
- **Lost Target**
When the AIS info is not received from that vessel for 3.5 minutes. The presentation will be a flashing black triangle with a cross through.
- **Activation Range**
Range around your boat where targets become active. AIS target become active within this range. Activation Range should be greater than CPA Limit by definition.

Note

A target is removed from the screen if data is not received for 10 minutes.

The maximum number of tracked targets is 200.

Depending on the scale the presentation of the targets change to remove clutter on the screen.

This information is updated every 3 seconds to 6 minutes depending on speed and rate of turn, enabling the track of the vessels in range to be plotted.

TARGET STATUS	DESCRIPTION	SYMBOL
ACTIVE TARGET	Target located within the Activation Range.	
DANGEROUS TARGET	Target detected by CPA or TCPA Alarm. Dangerous Target is Active Target by definition.	 Flashing
SLEEPING TARGET	Target located outside the Activation Range.	
LOST TARGET	Ais info is not received from that vessel for 3.5 minutes.	

Fig. 5.7.1 - AIS Symbols

5.7.2 AIS MENU

To configure the chart plotter to receive AIS data, follow the procedure:

- 'MENU' + "AIS SETUP" + 'ENTER'

The AIS menu is shown on the screen, the items are described in the following paragraphs.

5.7.2.1 Display

- "MENU" + "AIS SETUP" + 'ENTER' + "DISPLAY" + 'ENTER'

Turns the display of AIS targets overlay on the cartography ON or OFF. The default setting is ON.

5.7.2.2 Activation range

- 'MENU' + "AIS SETUP" + 'ENTER' + "ACTIVATION RANGE" + 'ENTER'

Defines the range from the fix within which the AIS Target becomes active. The values allowed are from 0.1 to 20 Nm. The default setting is 5 Nm.

5.7.2.3 CPA Alarm

- 'MENU' + "AIS SETUP" + 'ENTER' + "CPA ALARM" + 'ENTER'

Turns ON or OFF the alarm. The default setting is ON.

5.7.2.4 CPA Limit

- 'MENU' + "AIS SETUP" + 'ENTER' + "CPA LIMIT" + 'ENTER'

The values allowed are from 0.1 to 10 Nm. The default setting is 0.5 Nm.

5.7.2.5 TCPA Alarm

- 'MENU' + "AIS SETUP" + 'ENTER' + "TCPA ALARM" + 'ENTER'

Turns ON or OFF the alarm. The default setting is ON.

5.7.2.6 TCPA Limit

- 'MENU' + "AIS SETUP" + 'ENTER' + "TCPA LIMIT" + 'ENTER'

The values allowed are from 1 to 30 min. The default setting is 10 min.

5.7.3 TO SET THE CHART PLOTTER FOR RECEIVING AIS

Make sure that the AIS receiver is properly connected to the chart plotter.

The chart plotter reads the AIS NMEA message VMD, type 1, 2, 3 and 5.

Select the used serial port and transmission speed by following the procedure:

- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + "PORT n INPUT" + 'ENTER' + "m" + 'ENTER'

Where: n = Port 1/Port 2/Port 3

m = NMEA-0183 4800-N81-N, NMEA-0183 38400-N81-N

according to the transmission speed of your AIS receiver.

5.7.4 QUICK INFO ON AIS TARGET

By placing the cursor over a AIS target icon, the following information is displayed:

- Vessel Name
- MMSI number
- Radio Call Sign
- SOG
- COG

- CPA and TCPA values

Note

The selected AIS target icon is surrounded by a square frame when user places the cursor over the icon

5.8 C-STAFF

The C-Staff functions are based on STAFF Concept ® (Satellite Tracking Aided Fleet Fishing). The STAFF Concept ® is designed for professional fishing purpose to allow monitoring the position of the vessels of a fleet from each vessel (the fleet may have until 20 vessels max).

- 'MENU' + "C-STAFF" + 'ENTER'

For more information see the specific User Manual.

5.9 C-WEATHER SERVICE

C-Weather Service is an innovative meteorological forecasting system with the ability to visualize the weather forecast, overlaying it on cartography. The weather data is held on Jeppesen Marine's weather server, which can be accessed via a C-COM modem connected to the chart plotter or by using the PC Planner (or the DPS - Dealer Programming System) saving the weather data on a User C-CARD. The weather data are overlaid on a map page as layers. The weather format data available are:

Data Type	Display
WIND (Speed & Dir)	- 0 ➔
WAVE Height & Dir	- 1 ➔
TEMPERATURE	18°
HUMIDITY (%)	30
VISIBILITY	20
WEATHER TYPE: Sun	
WEATHER TYPE: Rain	
WEATHER TYPE: Fog	
WEATHER TYPE: Snow	
WEATHER TYPE: Clouds	
WEATHER TYPE: Partly Cloudy	
WEATHER TYPE: Thunderstorm	

Fig. 5.9 - Weather data package

5.9.1 C-WEATHER SERVICE MENU

To select the menu:

- 'MENU' + "C-WEATHER SERVICE" + 'ENTER'

The C-Map Weather Service menu is shown on the screen, the items are described in the following paragraphs.

5.9.1.1 Download

- 'MENU' + "C-WEATHER SERVICE" + 'ENTER' + "DOWNLOAD" + 'ENTER'

Allows to connect the software to the Jeppesen Marine weather server and to download weather data directly via C-COM.

Select Country to Call

Allows the selection of the country to call. The whole telephone number set is automatically updated after every download.

SIM PIN

Allows inserting of the PIN of the SIM.

Download Area

Allows the weather download: a squared grey area, where the weather data will be downloaded, is centered on cursor position. See the following picture.

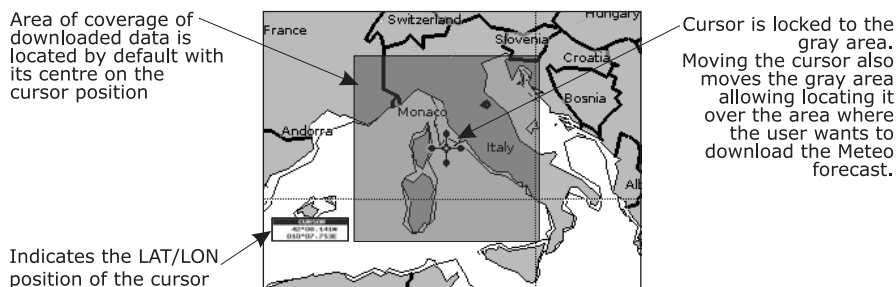


Fig 5.9.1.1 - Download Area

Press 'ENTER' to activate the C-Weather Download: the whole data package (see the previous "Weather data package" table) are downloaded. 'CLEAR' allows to interrupt the data download. At the end of the operation press 'CLEAR' to close the window.

5.9.1.2 Copy from User C-CARD

- 'MENU' + "C-WEATHER SERVICE" + 'ENTER' + "COPY FROM USER C-CARD" + 'ENTER'

Allows the C-Weather Data loading from the User C-CARD.

5.9.1.3 Weather Forecast

- 'MENU' + "C-WEATHER SERVICE" + 'ENTER' + "FORECAST" + 'ENTER'

Allows selecting the Layer of specific weather data to be displayed on the screen and to change date and time of the forecast preview.

The following functions are available:

- **Panning**
Default usage of the cursor key is the normal panning function.
- **Zoom In/Out**
Zoom in/out functions are allowed as usual by using 'ZOOM IN'/'ZOOM OUT'.
- **Set Date and Time**
'ENTER' to modify date and time values.
- **Layer Selection**
'PAGE' to cycle the weather layers.
- **Exit**
'CLEAR' to close the weather prediction page.

5.9.1.4 Real Time View

- 'MENU' + "C-WEATHER SERVICE" + 'ENTER' + "REAL TIME VIEW" + 'ENTER'

The following selections are available:

- **Real Time View On**
The data is shown (the area of the download) at the current date and time (received from the GPS)
- **Real Time View Off**
The Weather data is not displayed.

The layer displayed is the one selected into the previous menu item.

5.9.1.5 Type of Data

- 'MENU' + "C-WEATHER SERVICE" + 'ENTER' + "TYPE OF DATA" + 'ENTER'

Allows selecting the type of data, see the previous Fig. 5.9.

5.10 DSC

The DSC (*Digital Selective Calling*) is a method of establishing a VHF radio call; it is used to announce urgent maritime safety information broadcasts. This system allows mariners to instantly send Distress Call or/and Position Request to the other vessels equipped with a DSC transceiver within range of the transmission.

The Distress Call, that allows to receive a position of the vessel in distress, and the

Position Request, a great feature for anyone wanting to know the location of another vessel - for example you buddy that is catching fish, or finding the location of a person you are cruising with, are performed by an external device, the DSC VHF radio. The chart plotter interfaced with a DSC VHF radio prompts the user to see the GPS position of the vessel in distress and also allows for easy navigation to the vessel.

The Distress Call and the Position Request icons that are displaying on the screen, are shown in the following table:

DESCRIPTION	SYMBOL
Position Request icon	
Distress Call icon	

Fig. 5.10 - Distress Call and Position Request icons

Note

The label can be the MMSI or the corresponding vessel's name. If in the DSC Directory the MMSI has been associated to its relative vessel name, the vessel's name is shown in the label instead of the MMSI.

5.10.1 DISTRESS CALL AND POSITION REQUEST

During a distress situation, a vessel that is equipped with a DSC VHF radio and connected to a GPS, has the capability to transmit a DSC Distress Call with GPS Position.

When the VHF radio receives a DSC Distress Call, the position information of the vessel in distress is transferred to the chart plotter. The chart plotter logs the Distress Call into the DSC Log and also marks the position of the vessel in distress on the Chart page. A pop-up screen advises the user that a Distress Call has been received. Within the pop-up screen it asks the user if he would like to view the call on the Chart page or exit the pop-up screen. By selecting the item "VIEW ON CHART" and press 'ENTER' two options are shown:

- **GoTo Vessel**
Activates the navigation to the Distress Call or Position Request icon. The chart plotter changes the map scale to allow showing the Distress Call (or Position Request) icon and the vessel's icon simultaneously on the screen. The chart plotter then verifies if there are obstructions (land or low water) between the two positions. If obstructions are found the chart plotter shows a pop-up screen saying that the navigation to the Distress Call cannot be set automatically and the user must define a route to avoid the obstacles.
- **Stay on View**
Exits the pop-up screen and remains on the selected map screen.

5.10.2 DSC MENU

To select the DSC menu:

- 'MENU' + "DSC" + 'ENTER'

The DSC menu is shown on the screen, the items are described in the following paragraphs.

5.10.2.1 DSC LOG

- 'MENU' + "DSC" + 'ENTER' + "LOG" + 'ENTER'

Selecting Log shows the Distress Call Log page or Position Request Log page (it depends which of the two was selected):

DISTRESS CALL LOG			
DATE TIME	LAT LONG	NAME MMSI	SHOWN
03-03-01 08:31 PM	33°30.505 118°18.529 N	0080457645	NO
03-04-01 00:11 PM	33°34.167 118°21.864 W	BOY 003244524	YES
03-04-01 09:31 PM	33°31.211 118°29.151 W	BOB 005647743	NO
LOCATE HIDE	CLR-ONE POSITION REQUEST	CLR-ALL	

Fig. 5.10.2.1 - Example of DSC Log page

Press 'GO-TO' to set the navigation on the selected DSC point. Other available functions are:

Locate

- 'MENU' + "DSC" + 'ENTER' + "LOG" + 'ENTER' + "LOCATE" + 'ENTER'

Centers the map on the selected DSC position.

Delete

- 'MENU' + "DSC" + 'ENTER' + "LOG" + 'ENTER' + "DELETE" + 'ENTER'

Deletes selected DSC position.

Delete All

- 'MENU' + "DSC" + 'ENTER' + "LOG" + 'ENTER' + "DELETE ALL" + 'ENTER'

Deletes all entries

Hide/Show

- 'MENU' + "DSC" + 'ENTER' + "LOG" + 'ENTER' + "HIDE/SHOW" + 'ENTER'

Allows hiding/showing the selected DSC position on the chart display.

Position Request/Distress Call

- 'MENU' + "DSC" + 'ENTER' + "LOG" + 'ENTER' + "POSITION REQUEST/DISTRESS CALL" + 'ENTER'

Shows Position Request/Distress Call page. When Position Request page is active this message changes to Distress Call.

5.10.2.2 DSC Directory

- 'MENU' + "DSC" + 'ENTER' + "DIRECTORY" + 'ENTER'

Selects the DSC Directory page. From this page the user can assign the Vessel Name, Contact Name and Phone number to any MMSI (*Maritime Mobile Service Identity*) so that, when a DSC Distress Call or Position Request is received, the name of the vessel is displayed in place of the MMSI number - a unique number that is assigned to a DSC radio station for use in emergency situations:

DSC DIRECTORY			
VESSEL NAME	MMSI	CONTACT	PHONE
SCORPION	0046712433	ERICH SMITH	12372133456
STRIKE 99	0036612458	JIMMY PAGE	22832178345
JUPITER	0036612459	ROBERT PIO	22114433001
SARA	0063412123	SUSANNE	44332211001
EDIT ADD DELETE DELETE ALL			

Fig. 5.10.2.2 - Example of DSC Directory page

Edit

- 'MENU' + "DSC" + 'ENTER' + "DIRECTORY" + 'ENTER' + "EDIT" + 'ENTER'

Edit the fields of any existing entry in the Directory: Vessel Name, MMSI number, contact and phone number.

Add

- 'MENU' + "DSC" + 'ENTER' + "DIRECTORY" + 'ENTER' + "ADD" + 'ENTER'

Add a new entry to the Directory.

Delete

- 'MENU' + "DSC" + 'ENTER' + "DIRECTORY" + 'ENTER' + "DELETE" + 'ENTER'

Delete the selected entry.

Delete All

- 'MENU' + "DSC" + 'ENTER' + "DIRECTORY" + 'ENTER' + "DELETE ALL" + 'ENTER'

Deletes all entries in the page.

5.10.3 QUICK INFO ON DSC ICONS

Placing the cursor on the Distress Call or Position Request icon, the following information is displayed:

- **Vessel Name/MMSI Number**
- **Position**
- **Date and Time**
- **Distance and Bearing from current vessel's position**

Pressing 'ENTER' it is possible, by selecting "DELETE" deletes the DSC icon from the DSC Log page, otherwise by selecting "DSC LOG" the DSC Log page is shown.

5.11 MOBILARM SYSTEM

The MOBILARM is an automated crew monitoring system dedicated to monitoring onboard crew by maintaining a constant link between the crew member and the boat. The instant a man overboard event happens, an automatic alarm is sounded, and the vessels position is logged.

Connect the MOBILARM System to a serial port of the chart plotter.

5.11.1 SOFTWARE SETUP

After connections have been made, the chart plotter has to be setup to be able to receive NMEA information from the MOBILARM. When a MOBILARM is connected to the chart plotter, any input port of the NMEA Input/Output menu must be changed to MOBILARM as shown below for communications.


- 'MENU' + "BASIC SETTINGS" + 'ENTER' + "INPUT/OUTPUT" + 'ENTER' + select any input port you want + 'ENTER' + "MOBILARM" + 'ENTER'

The chart plotter continuously verifies the communication status with MOBILARM instruments. If there is no communication for more than one minute, an alarm window appears.

5.11.2 MOBILARM STATUS

If you want to know information about the MOBILARM connected, follow the procedure:

- 'MENU' + "About" + 'ENTER'

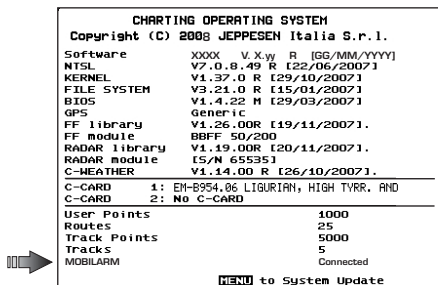

CHARTING OPERATING SYSTEM	
Copyright (C) 2008 JEPPESEN Italia S.r.l.	
Software	XXXX V.X.YY R [GG/MM/YYYY]
NTSL	V7.0.8.49 R [22/06/2007]
KERNEL	V1.37.0 R [29/10/2007]
FILE SYSTEM	V3.21.0 R [15/04/2007]
BIOS	V1.4.22 M [29/03/2007]
GPS	Generic
FF library	V1.26.00R [19/11/2007].
FF module	BBFF 50/200
RADAR library	V1.19.00R [20/11/2007].
RADAR module	[S/N 65535]
C-MEATHER	V1.14.00 R [26/10/2007].
C-CARD	1: EN-8954.06 LIGURIAN, HIGH TYRR. AND
C-CARD	2: No C-CARD
User Points	1000
Routes	25
Track Points	5000
Tracks	5
MOBILARM	Connected
MENU to System Update	

Fig. 5.11.2 - Example of About Page

In the About Page a new item appears, related to MOBILARM status, where status can be:

- **Function Not Activated** : MOBILARM input format has not been set from the Input/Output menu;
- **Not Detected** : the device has never been detected since the chart plotter was turned On and input format was set to MOBILARM;
- **Connected** : the communication with MOBILARM device is Ok;
- **Signal Lost** : the device has been detected but now the signal is no longer received;
- **No Valid GPS Position** : the communication with MOBILARM device is Ok but the GPS position fix is not received.

5.11.3 MOBILARM PTX

PTX is the personal transponder device that is worn by the crew. If a PTX is disconnected from the system a man overboard alarm is raised. So a MOB Waypoint appears on the chart plotter display. In the following for brevity this MOB Waypoint position is called PTX.

Warning!

Activating navigation to PTX pay attention and don't get too near the man-overboard (don't knock the man down!).

5.11.3.1 PTX is received

When a PTX has been received, the PTX data are saved on the chart plotter memory and the PTX icon appears on the map:




Fig. 5.11.3.1 - PTX icon

All menus and/or pages are closed and the chart is centered on the PTX received position. The Audible Alarm starts beeping and a pop-up warning window appears to notify that a PTX has been received:

MOBILARM	
33°27.090N 220°34.020W	
Id	Time
000001A0	10:16:29 PM

Fig. 5.11.3.2 - Example of PTX warning message

It is possible to navigate to the received PTX (see Par. 5.11.4.2) and open the MOBILARM PTX List Page (see Par. 5.11.4.3). Both Goto and List functions also mute the Audible Alarm.

Note

The List function is active if more than one PTX is store.

5.11.3.2 PTX is received again

When PTX has been received again, it is already present on the chart plotter memory. If the received PTX is NOT the active one, the user must confirmed to navigate to it.

Otherwise if the received PTX is the active one (the PTX on which we are navigating to), navigation data are updated in memory, the new PTX coordinates becomes the Destination position and the current Fix position becomes the starting position. The map is **not** automatically centered on it.

The PTX icon appears at the new position and a pop-up warning window appears. It is possible to close all menus/data pages (if open) and center the chart on the received PTX (see Par. 5.11.4.4). Otherwise you could close the alarm window and stay on the active screen.

5.11.4 MOVING CURSOR ON THE PTX ICON

Placing the cursor on the PTX icon shown on the screen, an information window containing the PTX Identifier, position and status (Overboard or Recovered) appears:

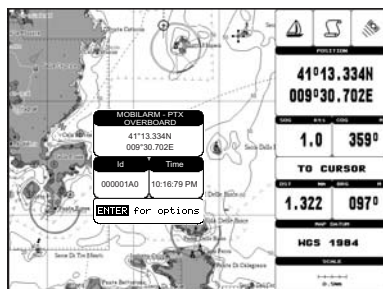


Fig. 5.11.4 - Example of PTX information window

5.11.4.1 Deleting PTX

The Delete PTX function permanently removes the selected PTX from the chart plotter memory and from the chart display.

Move the cursor over the PTX to delete. Press 'ENTER', using the cursor select "DELETE" and press 'ENTER'. A warning pop-up window will be shown. Select "YES" and press 'ENTER'.

5.11.4.2 Goto PTX

The Goto PTX function activates the navigation to the selected PTX.

Place the cursor on PTX cursor. Press 'ENTER', using the cursor select "GOTO" and press 'ENTER'.

If the navigation is set to the selected PTX, to terminate the navigation press 'ENTER', using the cursor select "STOP GOTO" and press 'ENTER'.

5.11.4.3 MOBILARM PTX List Page

The MOBILARM Alarm Status List shows the list of all PTX that returned an alarm event. To obtain the page press 'ENTER', using the cursor select "LIST" and press 'ENTER'.

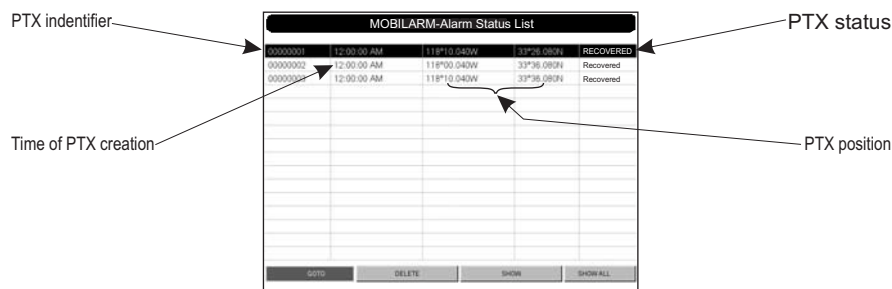


Fig. 5.11.4.3 - Example of MOBILARM PTX List page

This page allows you to:

Goto

Activates navigation to the selected PTX. Once the navigation has been activated, close all menus/data pages (if open) and center the chart selected PTX.

Delete

Deletes the selected PTX.

Show

Centers the chart on the selected PTX.

Show All

Selects the best chart scale to see PTX icons on the map at the same time.

5.11.4.4 Show PTX

The Show function is available when PTX has been received again, it is already present on the chart plotter memory and it is the active one.

To select this function press 'ENTER', using the cursor select "SHOW" and press 'ENTER' to close all menus/data pages (if open) and center the chart on the received PTX.

5.12 FISH FINDER MENU

The chart plotter combined with the sonar performance of the Fish Finder is one of the most advanced marine navigation system available.

➤ 'MENU' + "FISH FINDER SETUP" + 'ENTER'

ONLY ON **MAGNUM PLUS**

➤ 'ECHO' for 1 second

To select the Fish Finder pages:

➤ '<PAGE>' + cursor keys + 'ENTER' to select the desired Fish Finder page

ONLY ON **MAGNUM PLUS**

➤ 'ECHO'

For more information see the specific User Manual.

Note

The Fish Finder display page is available only if the Fish Finder is connected and powered On.

5.13 RADAR SETUP MENU

The Radar consists of a scanner unit which illuminates targets with microwave energy and then collects the echoes from those targets. The scanner unit includes the Radar antenna, transmitter, receiver and necessary electronics. The scanner unit is connected to a chart plotter equipped with software capable of displaying the Radar functions. To select the Radar menu, first select one of the four page related to the Radar:

- 'MENU' + "RADAR SETUP" + 'ENTER'

ONLY ON **MAGNUM PLUS**

- 'RADAR' for 1 second

To select the Radar pages:

- '<PAGE>' + cursor keys + 'ENTER' to select the desired Radar page

ONLY ON **MAGNUM PLUS**

- 'RADAR'

Once the Radar page is selected, access the Radar menu by pressing 'MENU'. For more information see the specific User Manual.


Note

The Radar display page is available only if the Radar is connected and powered On.


6

For the Technician


6.1 DIMENSIONS

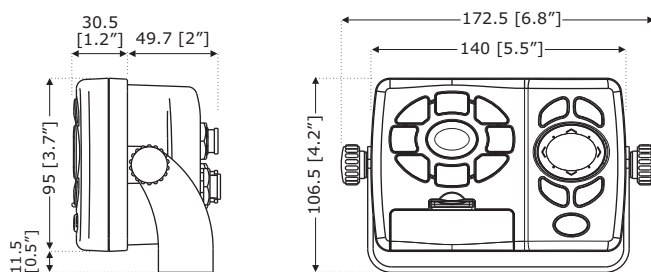

6.2 INSTALLATION

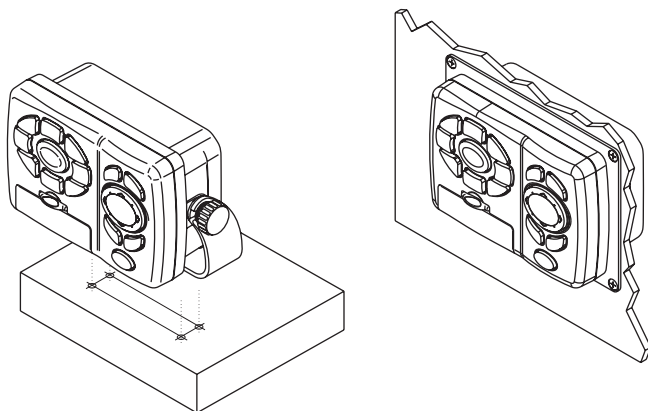


6.3 EXTERNAL WIRING

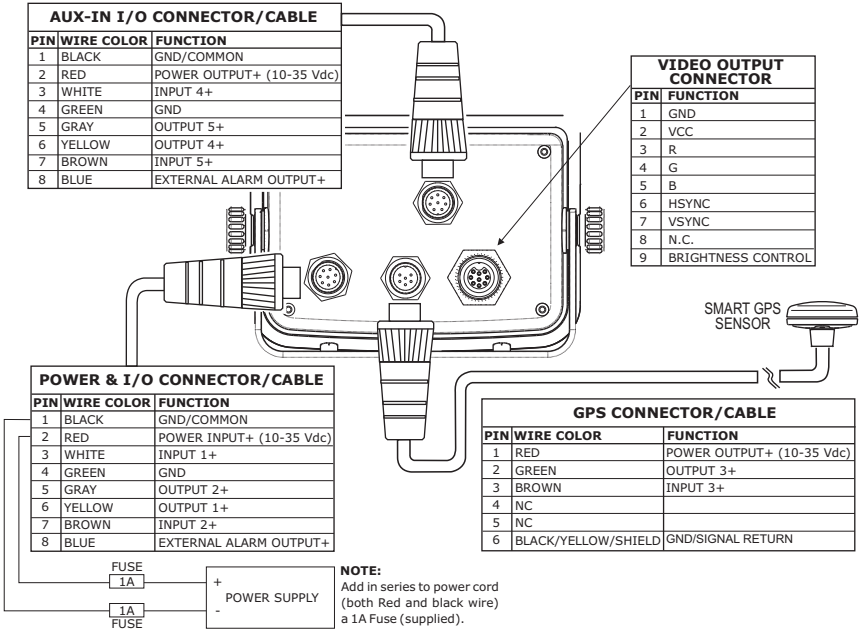


6.4 TYPICAL CONNECTIONS - "POWER & I/O" Connector


6.4.1 GPS CONNECTIONS

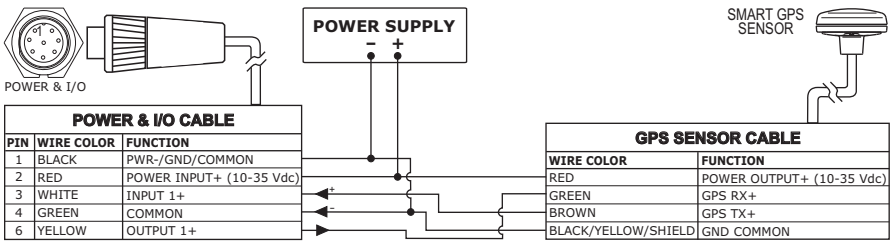

GPS on Port 1

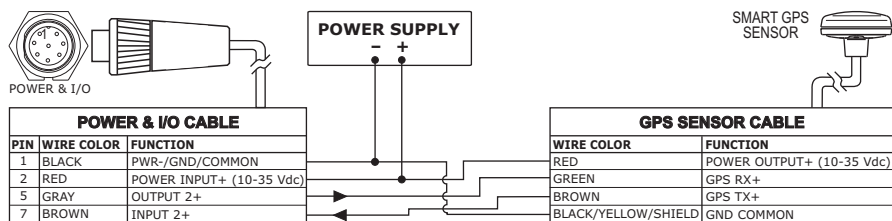


GPS on Port 2

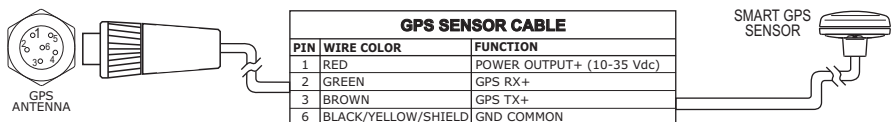


GPS on Port 3

6.4.2 AUTOPILOT CONNECTIONS


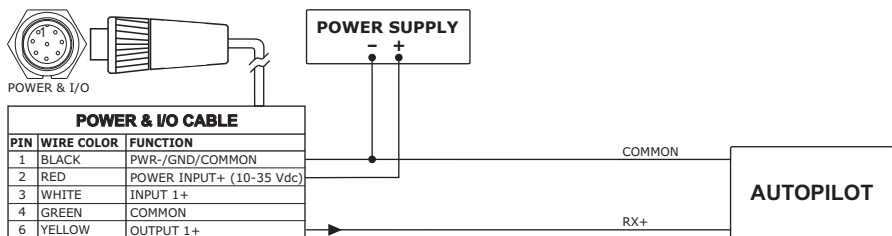


Autopilot on Port 1

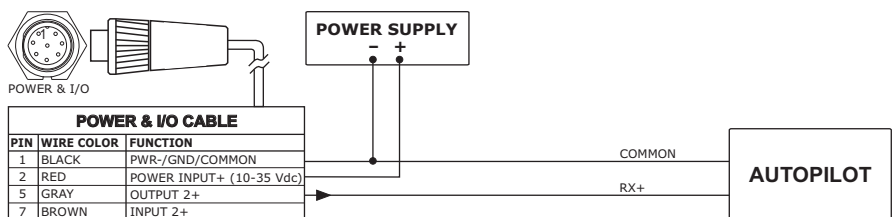


Autopilot on Port 2


6.4.3 EXTERNAL NMEA CONNECTIONS

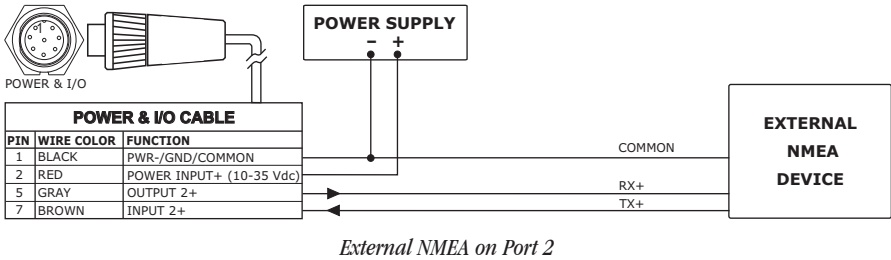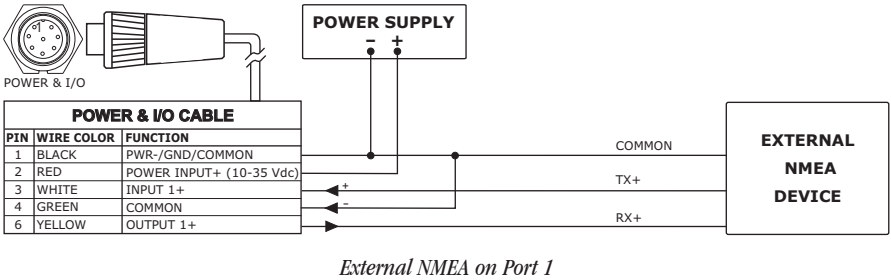

6.4.4 C-COM CONNECTION

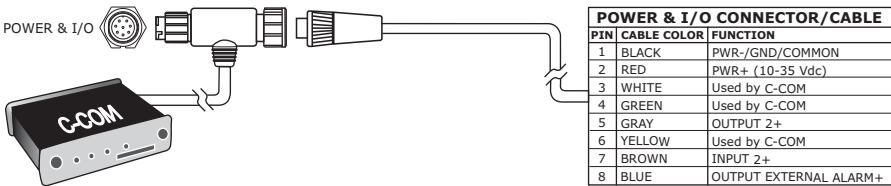

6.4.5 EXTERNAL ALARM CONNECTION



6.6 TROUBLESHOOTING

The following is a brief guide to some of the problems you may experience while using the chart plotter with common solutions.

6.6.1 PROBLEMS AND SOLUTIONS

The chart plotter does not turn On — Make sure that the correct voltage (10-35 volt dc) is present. Check also that the polarity is correct. Refer to the Par. 2.2.

The chart plotter does not turn Off — If, after a 'POWER' pressure (for at least 3 seconds) the chart plotter does not turn Off, then turn Off the voltage.

The chart plotter does not respond to any command — Try to turn Off, and then turn On. If the problem persists, erase the memory (see Par. 6.6.1).

The chart plotter does not get a valid fix — Make sure that no metal obstacle is placed around the chart plotter acting as a shield for the antenna. If, after 15 minutes, the chart plotter does not get the fix, turn it Off and On again.

The chart plotter screen becomes very dark after a long exposure to direct sunlight — Control the contrast (see Par. 2.3).

6.6.2 QUICK REFERENCE GUIDE

It is available an help on line to explain as the chart plotter works:

➤ 'MENU' + "HELP" + 'ENTER'

Using 'ZOOM IN' and 'ZOOM OUT' select previous and next page respectly.

6.6.3 IF YOU NEED ASSISTANCE

The list above should allow you to solve most of the operating problems you are likely to encounter. Simply disconnecting the chart plotter from power for a moment may solve your problem as well.

If this does not help, you can try one additional memory clear option. This is a factory default RAM Clear that should only be tried after all other attempts have been made. When using the RAM Clear feature, you will loose all user stored information and the chart plotter will default to factory settings. Before this step, you have the option of saving user Marks, Track history and Routes to a User C-CARD (this is an optional purchase from

your dealer). To perform a RAM Clear see Par. 6.6.1.

If you still need assistance, call your local dealer, reporting the Software Release and Cartography information available in the About Page.

- 'MENU' + "About..." + 'ENTER'

6.6.3.1 World Background Charts

The internal background charts can be updated to include the MAX A and B level charts which provide improved marine data, rivers, lakes, terrestrial data (major streets, highways, railways, etc...), Nav-Aids, depth areas, territorial water areas, etc... by reading them from a special data C-CARDS (contact your local dealer). All units must have the WorldWide Background upload function that is activated from the system.

Worldwide Background Update

The System Update menu is entered from the About Page. To select this menu follow the procedure:

- Plug the special data C-CARD + 'MENU' + "About..." + 'ENTER' + 'MENU' + "UPDATE WORLDWIDE CHARTS" + 'ENTER'

6.7 SYSTEM TEST

If you have connected your position-finding device according to the instructions, and chosen the proper menu selection for your device, and are still having problems with your chart plotter, the extended auto-test should help determine the problem. Make sure the chart plotter is turned Off. While pressing and holding any other key, turn the chart plotter On. A new menu will appear on the display:

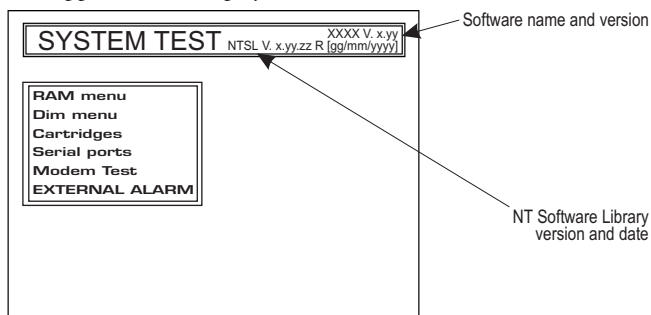


Fig. 6.7 - System Test

Use the cursor key to select the preferred test: this will display in reverse video and with the relative menu window. To choice the test press 'ENTER'. To exit from any submenu

press 'CLEAR'. To exit from the System Test turn Off the chart plotter.

6.7.1 RAM MENU

This test verifies the integrity of the memories and if preferred during this test all the internal memory can be erased and the default setting restored.

■ RAM Test

To verify the integrity of the RAM. If on the screen the message "ERROR" appears, the RAM is physically damaged.

■ RAM Clear

To clear internal memory. If the chart plotter exhibits unusual behaviour, or appears to be malfunctioning, it may be possible to correct the problem by clearing RAM. This operation will erase all Marks, Events, Routes, stored track plots and destinations. It will also return all selections (Input Data Format, Autopilot selection, etc.) to original default values. To confirm to clear RAM press 'ENTER' again (but if at this time you do not wish to clear RAM press 'CLEAR').

6.7.2 DIM MENU

To select the preferred value for contrast and backlight.

■ Contrast

Each time you pressed the cursor key to right, the screen will decrease brightness, instead of to left it will increase brightness.

■ Backlight

To set the backlight. Operates in similar mode as Contrast.

6.7.3 CARTRIDGES

To check the C-CARD and its connector.

■ Background ROM

To test the WorldWideBackground. If there is not a malfunction, the code of the Background and the message "OK" are shown.

■ C-CARD Test

To test the C-CARD. There are the possible situations:

1. if there is a C-CARD inserted in the slot and there is not a malfunction, the name of

the C-CARD zone and the message "OK" are shown.

2. if there is a C-CARD inserted in the slot, but it is a damaged C-CARD, the name of the C-CARD zone and the message "Faulty" are shown.
3. if there is not any C-CARD inserted in the slot, the message "not present" is shown.
4. if there is an User C-CARD inserted in the slot, the message "USER C-CARD" is shown.

■ C-CARD Connector

Indicates if there is a malfunction in the connector. It is used only in production.

6.7.4 SERIAL PORTS

If you are having problems receiving data from the position-finding instrument, this test should help determine the problem.

■ Change Parameters

To change the parameters of the serial interface. This menu allows to select the **Port 1**, **2**, **3**, the **Baud Rate** between 4800 or 9600, the **Data Bits** (Word Length) between 7 or 8, the **Parity** between even, odd or none, the **Stop Bits** between 1 or 2. Default settings are: Port = Port2, Baud Rate = 4800, Data Bits = 8, Parity = none, Stop Bits = 1.

■ Input Data Display

To allow the chart plotter to act as a computer terminal and display the incoming data exactly as it received. If the data displayed on the screen is unrecognizable, you may have selected the wrong input parameters for your particular receiver. Check your receiver manual to be sure that you have selected the proper interface format. If the screen is blank, you may have a broken connection, and no data is being received. Use 'ZOOM IN' to stop (or continue after pause) data displaying, 'ENTER' to show data in hex or ASCII mode (normal or small) and 'CLEAR' to exit.

6.7.5 EXTERNAL ALARM

To check if the External Alarm has been transmitted.

6.7.6 DISPLAY SETTINGS

To select the display resolution.

■ Resolution

Sets the resolution among: 1024x768, 800x600, 640x480 (default).

■ Horizontal Size

Allows entering the actual horizontal size of the screen. The value can be entered either in centimeters or inches (the default is 30.5 cm). The unit of measure is user selectable (see Screen Size Unit option). If the unit of measure is changed, the value is converted.

■ Screen Size Unit

Allows entering the screen size unit among cm and inch. Centimeters is the default unit.

■ Apply settings

Sets the values Resolution and Horizontal size. When this function is executed the following message are shown: "The Display settings will be applied after power off. Do you want to restart the unit now?". If the display will not be visible, shut off the chart plotter again then power it up keeping pressed '**ZOOM-IN**' to set default resolution 640x480. Choosing "**YES**", the chart plotter will be restarted and the new settings applied. Choosing "**NO**" the new settings will be applied only next time the chart plotter is powered up. Choosing "**ABORT**" will discarded all changes and nothing will be applied. The original values of Resolution and Horizontal Size are restored and displayed.

Note

It is possible to restore the lowest screen resolution (640x480) by pressing and holding 'ZOOM-IN' while the chart plotter is switched to ON. This is useful when the image is not shown on the screen for example as effect of changing the display or display not compatible with the set resolution.

A

Terms

This section explains the terms that may be unfamiliar to the reader.

■ **Advanced Mode**

The chart plotter can operate in two different modes: Basic Mode and Advanced Mode. In Advanced Mode it is possible to have more available functions, for example it is possible to handle Waypoints.

■ **AIS = Automatic Identification System**

It has been introduced to improve the safety of navigation by assisting in the efficient operation of ship-to-ship, ship reporting and VTS applications.

■ **Altitude**

Altitude of GPS Antenna on the medium sea level.

■ **Arrival Time**

The estimated time of day you will reach your destination, based on your current speed and track from GPS.

■ **Attention Areas**

Attention Areas are areas in which special attention by the mariner is required, because of natural or man-made hazards, or sailing regulations and restrictions. Moreover a special symbol (!) is placed inside the area selecting On option. This is valid also for the categories: FISHING FACILITY, MARINE FARM/CULTURE, MILITARY PRACTICE AREA, RESTRICTED AREA, SEAPLANE LANDING AREA. When the area is small, it is identified only by the boundary.

■ **Azimuth**

The angular measurement from the horizon to a satellite or another object.

■ **Basic Mode**

The chart plotter can operate in two different modes: Basic Mode and Advanced Mode. In the first mode there is a restricted number of functions, and it is not possible to handle Waypoints, Marks, Events and A-B-C-D function.

■ **Beacon**

A prominent, specially constructed object forming a conspicuous vertical mark as a fixed aid to navigation.

■ **Buoy**

A floating object moored to the sea bottom in a particular (charted) place, as an aid to navigation.

■ **Buoys and Beacons**

Buoys and Beacons are used to indicate to mariners recommended or established Routes, underwater dangers, restrictions and regulations. They can be lighted or not and are colored according to their international code.

■ **BRG = Bearing**

Angle between the North (True or Magnetic) and a destination. It represents the direction to follow.

■ **Chain**

Selects the preferred chain. The Loran chains are groups of transmitting stations that use timed radio pulse

transmissions. In each of these chains there is a master station and two or more slave or secondary stations. Stations belonging to a same chain transmit pulses in timing groups: a different time base identifies each chain. The time base of each chain is the Group Repetition Interval or GRI. This GRI identifies the chain in unique mode. For example the GRI = 4990 identifies the chain of Central Pacific zone.

■ Chart Lock

When Chart Lock is On, the available zoom scales are only the ones containing cartographic data. Instead when Chart Lock is Off, it is possible to zoom down into zoom scales not covered by cartographic data after the last available zoom scale covered by cartographic data.

Warning

When an empty level is entered, the message "No cartographic coverage" is shown on a window in a corner of the map display. The warning message is always displayed as long as the current zoom has no data coverage.

■ COG = Course Over Ground

Direction of the path over ground actually followed by a vessel.

■ Correction

To compute fix error in automatic mode, place cursor on ship's real position and then follow the procedure (compute correction). It is also possible to compute the fix error in manual mode (correction offset). Once you computed the error, you can turn the fix correction On or Off.

■ Course Vector

Graphical indication of the direction in which the Vessel is heading. The Course Vector origin is the vessel's position so the time line movement is synchronized with the vessels Icon. Course Vector course is given by the value of COG (Course Over Ground) and its length is proportional to the SOG (Speed Over Ground).

■ CTS = Course To Steer

The optimum direction the boat should be steered in order to efficiently make headway back to the course line while also proceeding toward the destination Waypoint.

■ Cultural Features

Any man-made topographic feature as built-up area, buildings, roads,

■ Datum

The Latitude and Longitude lines printed on any map are based on certain models of the shape of the earth: these models are called Datum or Coordinate Systems. There are many different Datum in use, each one gives different Lat/Lon positions for an identical point on the surface of the earth.

■ Default

Indicates a value or a setting which is used if the user has not defined a particular value. You can modify this value using the menu settings.

■ Depth Area Range

The sea area that is **beyond** the selected range is filled by an uniform white color, the sea area that is **inside** the selected range is filled by ordinary multicolor shading. The Spot Soundings and Depth Contours are displayed on the range only.

■ Depth Lines

Imaginary lines connecting points of equal water depth.

■ DGPS = Differential GPS

Provides even greater positioning accuracy than standard GPS.

■ DSC = Digital Selective Calling

Method of establishing a VHF radio call; it is used to announce urgent maritime safety information broadcasts. This system allows mariners to instantly send Distress Call or/and Position Request to the other vessels equipped with a DSC transceiver within range of the transmission.

■ **EBL = Electronic Bearing Line**

Dotted line with direction selectable by the user.

■ **Event**

User Point that refers to the ship's position. It is simply a way of marking where the boat is.

■ **File**

Collection of information (of the same type) stored on a User C-CARD. Each file must have a unique name, ideally one that describes its contents. Filenames are kept in a directory on each User C-CARD.

■ **Goto**

Sets a particular mark on the map, called Target or Destination.

■ **GPS = Global Positioning System**

Satellite based navigation system operated by the US Department of Defense. It gives the navigator a position 24 hours a day, 365 days a year under any weather conditions .

■ **HDG = Heading**

Horizontal direction in which a ship actually points or heads in any moment (see also COG).

■ **HDOP = Horizontal Dilution Of Precision**

Index for position-fixing accuracy. The smaller the HDOP value, the more accurately the position can be fixed.

■ **Home**

In this operating mode (called also Navigate mode) all operations refer to the ship's position.

■ **Latitude**

Angular distance North or South of the equator measured by lines encircling the earth parallel to the equator in degrees from 0° to 90°.

■ **LAT/LON**

Coordinate system using Latitude and Longitude coordinates to define a position on earth.

■ **LOG**

Speed of the vessel relative to the water.

■ **Longitude**

Angular distance East or West of the prime meridian (Greenwich meridian) as measured by lines perpendicular to the parallels and converging at the poles from 0° to 180°.

■ **Loran**

The Loran Chains are groups of transmitting stations that use timed radio pulse transmissions.

■ **Magnetic Deviation**

Angle between the Magnetic North and the Compass North.

■ **Magnetic Variation**

Angle between the magnetic and geographic meridians at any place, expressed in degrees West or East to indicate the direction of magnetic North from true North. It changes from point to point, and (at the same point) with time.

■ **Mark**

Reference points related to cursor position.

■ **MOBILARM**

Automated crew monitoring system dedicated to monitoring onboard crew by maintaining a constant link between the crew member and the boat. The instant a man over-board event happens, an automatic alarm is sounded, and the vessels position is logged.

■ **Natural Features**

Any topographic feature formed by the action of natural processes: coastlines, relief, glaciers,

■ Navigate (mode)

Operating mode (called also Home mode) all operations refer to the ship's position.

■ NMEA-0183

The NMEA-0183 Data Interface Standard was developed by the National Marine Electronics Association of America. It is an international standard that enables equipment from many different manufactures to be connected together and to share information.

■ Pictures and Diagrams

The MAX data format allows assigning one or more image to any cartographic object. These *Pictures* are typically used to facilitate the identification of cartographic objects or places around the map: they can be the landscape layout nearby a harbour, the shape of a bridge or of a buoy etc. On some objects, such as bridges, the image associated can represent the *Diagram* representing the shape of the objects and the various characteristics (length, height, type of bridge etc.).

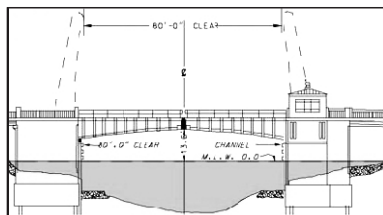


Fig.A.1 - Pictures and Diagrams

■ OSGB = Ordnance Survey of Great Britain

Coordinate system describing only Great Britain. Generally used with GBR36 datum, which also describes only Great Britain. This coordinate system cannot be used in any other part of the world.

■ Port Info

The Port Info function is a combination of a Port Info database containing all the relevant Safety and Navigational information normally found in good pilot books and a presentation software which displays special Port Facility Symbols.

■ Ports & Services

Areas along shore with facilities for mooring, downloading and uploading of ships, generally sheltered from waves and winds. Port installations are piers, wharves, pontoons, dry docks, cranes... .

■ Route

Sequence of Waypoints connected by segments. Among the available Routes, only one is the active Route, which is shown by a straight line and arrows to indicate the direction.

■ RTCM = Radio Technical Commission for Maritime Services

The data format created by the Radio Technical Commission Maritime to transmit Differential GPS corrections.

■ SOG = Speed Over Ground

Calculation of the rate of movement of the ship over the ground.

■ Speed

Current velocity at which you are travelling, relative to a ground location.

■ Spot Sounding

Depth of the water in a specific and charted position

■ STR = Steering

Difference between COG and CTS. If COG is 25° and CTS is 30°, then STR is 5° Right.

■ Target

In order to tag on the chart the point, towards which the ship is Heading, you can use a special mark, called

Target. When the Target is placed, all navigation data are referred to this Target.

■ TD = Time Difference

Loran positions are determined by precise timing of the intervals between reception of pulses transmitted by pairs of stations in the selected chain. Between any two stations a ship must be located somewhere along a line of possible positions where the measured Time Difference, TD, between arrival of pulses from those stations would be observed. The TD is measured from the time of reception of the master station signal to the time of reception of the slave station signal.

■ Tide

Periodic rise and fall of the surface of oceans, bays, etc., due principally to the gravitational interactions between the Moon and Earth.

■ Tide Info

Combination of a tide heights database that will be included within C-CARDS and features which calculate the tide graph for all primary and secondary ports worldwide. This function can calculate the tide heights for any past or future date and as a by-product of this calculation will also display the Maximum and Minimum Tide height and time for the day selected plus the times of Sunrise and Sunset. At some chart levels, the chart plotter will display a new Tide Diamond Symbol for every Port or tide point in the database covered by that particular C-CARD.

■ Tide & Currents

The worldwide database with tidal stream information is available with MAX C-CARDS. When data/time is available, Tidal stream arrows are shown on the charts, indicating the direction and strength of the Tide.

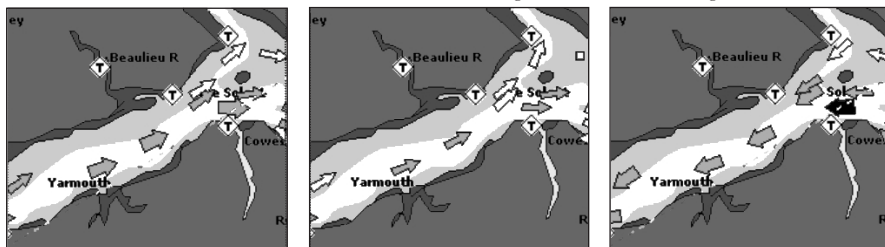


Fig. A.1a - Tides & Currents

If no data/time is available from the GPS or the chart plotter is not in Simulation mode, the icon on the map is generic one. The color of the arrow denotes the strength of the current as follows:

0 to 0.1 kn	-	□	← Yellow
0.2 to 1.0 kn	-	◀	← Yellow
1.1 to 2.0 kn	-	◀	← Orange
2.1 to 3.0 kn	-	◀	← Orange
3.1 to 9.9 kn	-	◀	← Red

Fig. A.1b - Tides & Currents table

When the chart plotter receives a valid position fix, the Tide icons are shown on the charts on the basis of the current date and time: the screen displays and changes arrows as date/time changes.

■ Time Line

The location where the ship will be after the time set by the user.

■ Tracks & Routes

Recommended and established routes for ships at sea, including traffic separation schemes, deep water routes,

■ **TRN = Turning**

Difference between COG and BRG. If COG is 80° and BRG is 75°, TRN is 5° Left.

■ **TTG = Time To Go**

Estimated time needed to reach your destination, based on your current speed and the distance to destination.

■ **User Point**

Place on the chart identified by its coordinates and displayed on the screen with a reference symbol (see Mark, Waypoint and Event).

■ **UTC = Universal Time Coordinated**

Time scale based on the rotation of the earth that is used by most broadcast time services.

■ **UTM = Universal Transverse Mercator**

Metric Grid system used on most large and intermediate scale land topographic charts and maps.

■ **VAD = Value Added Data**

Collection of additional cartographic objects which are not present on the original paper chart (from which the electronic chart derives). These objects have been obtained from other sources and then merged to the electronic charts in order to provide more information useful for the navigation. VAD object can be any cartographic objects and it can be distinguished from the official-chart-objects from the Quick Info. A dedicated icon is shown on the Quick Info window to indicate that the object queried is a VAD. The same icon is also shown on the Full Info page and in addition the extended text Value Added Data is shown on the details of the VAD object.

■ **VMG = Velocity Made Good**

Destination closing Velocity. The VMG is calculated using the current speed of the vessel (SOG) and the difference between the current vessel course and the bearing to the destination.

■ **VRM = Variable Range Marker**

Circle with radius selectable by the user.

■ **WAAS = Wide Area Augmentation System**

The Federal Aviation Administration (FAA), in cooperation with other DOT organizations and DOD, is augmenting the GPS/SPS with a satellite-based augmentation system, the WAAS. It will provide a signal-in-space to WAAS users to support en route through precision approach navigation. After achieving initial operational capability, the WAAS will then be incrementally improved over the next years to expand the area of coverage, increase the availability of precision approaches, increase signal redundancy and reduce operational restrictions.

■ **Waypoint**

Any point to which one intends to navigate. A sequence of Waypoints makes up a Route plan.

■ **WGS-84 = World Geodetic System 1984**

Coordinates System or Datum developed by the Defense Mapping Agency (DMA).

■ **Zoom-In**

Shows more detail in a smaller area.

■ **Zoom-Out**

Operates similarly to zoom-in, but in the reverse, showing a wider but less detailed view.

■ **XTE = Cross Track Error**

The distance from the ship's present position to the closest point on a line between the origin and destinations Waypoints of the navigation leg being travelled.

Analytical Index

3D Navigation Data page 16, 33
3D View 15

A

A-B-C-D 20
A-B-C-D function 16, 38, 75
About Page 106, 116
Activation Range 97, 98
Active Target 97
active Track 77
Add to route 72, 74
Adding Event 73
Adding Waypoint 60
Advanced Functions 34
Advanced Mode 34, 59, 62, 75, 121
Advanced Settings 87
AIS 16, 95, 121
AIS Menu 97
AIS NMEA message 98
AIS Symbols 97
Alarm 92, 96, 118
Alarm Report 94
Alarm Status List 108
Alarms Handling 17
Altitude 32, 35, 121
Altitude Unit 17
Anchor Alarm 17
APB 36
Arrival Alarm 17
Arrival Time 121
ASF 90
assistance 115
Attention Areas 15, 46, 121
Automatic Info 16, 49
Autopilot 23
Autopilot Connections 23, 113
AUX IN I/O cable 14
Auxiliary Memory 17
AWA 33
AWS 33
Azimuth 32, 121

B

Background ROM 117

backlight 117
Basic Mode 34, 59, 62, 121
Basic Settings 33
Bathymetric 40
Beacon 121
Bearing 61, 121
Bearings Magnetic 16
Bearings True 16
BOD 36
BRG 121
Buoy 121
Buoys and Beacons 121
BWC 36, 88

C

C-CARD 14, 26, 117
C-CARD Connector 118
C-CARD Test 117
C-COM 25, 114
C-COM Connection 25, 114
C-Link 16, 37, 80, 81
C-Link Navigation Data 81, 84
C-Link serial connection 82
C-MAP C-CARD 14
C-MAP cartridges 26
C-Staff 16, 99
C-Voice 37
C-Weather 21
C-Weather Service 16
Cable Wiring Pages 37
Cartographic Data 41
Cartographic Functions 14
CARTOGRAPHY INFORMATION 40
Cartridges 117
Caution Notice 22
Chain 90, 121
Changing User C-CARD 80
Chart - Fish Finder 16
Chart Boundaries 15, 46, 47
Chart Language 15, 49
Chart Lock 15, 44, 46, 48, 122
chart plotter 18
chart plotter Off 19
chart plotter On 19

Chart plotter size	17
Chart plotter weight	17
Charts and text area	30
CLEAR	19
Clear Info	40
Clear View	40
COG	32, 122
Compass Calibration	16
Compass menu	91
contrast	117
CONVENTIONS	13
Coordinate System	15
Correction	89, 122
Course Vector	16, 34, 122
CPA	96
CPA Alarm	96, 98
CPA Limit	96, 98
Creating a route	60
Cross Track Error	126
CTS	122
Cultural Features	122
Currents Prediction	15, 45
Cursor Control	17
cursor key	18, 20

D

Dangerous Target	97
Data Features	40
Data Safety Indicator	44
Datum	90, 122
Dead Reckoning	16
Default	122
Deleting EBL & VRM	75
Deleting Event	73
Deleting File	80
Deleting Mark	70
Deleting MOB	20, 58
Deleting PTX	108
Deleting route	61, 66, 68
Deleting Target	39, 62
Deleting the A-B-C-D points	38, 76
Deleting the A-B-C-D Segment	76
Deleting Track	77
Deleting User Point	65
Deleting Waypoint	60
Depth	35
Depth Alarm	17
Depth Area Range	122
Depth Graph	31
Depth Lines	122
Depth Range Max	15, 46, 47
Depth Range Min	15, 46, 47
Depth Unit	17

Depth Window	34
Depths & Land Elevation	40
DEST	20
destination	61, 62, 81
Detailed Port Plan	40
Detailed World Background	40
DGPS	122
Diagrams	124
Differential Correction Source	36
Differential GPS	122
Diffusers	15, 46, 48
Dim Menu	117
Display	17
Display Mode	15, 45
Display Settings	118
Displaying Track	77
Distance	14, 34
distance (track)	78
Distance Unit	17
Distress Call	101
Download	100
Download Area	100
DSC	16, 101, 122
DSC Directory	104
DSC LOG	103
DSC Menu	103
DSI	44
Dynamic Currents	40
Dynamic Elevation Data	41
Dynamic Nav-Aids	15, 40, 41, 43

E

EBL	74, 123
EBL & VRM	16
EBL & VRM function	74
ECHO	21
Echosounder	37
Editing EBL & VRM	75
Editing Event	73
Editing Mark	71
Editing Waypoint	64
electronic charts	14
Enhanced Mixing Levels	41
Enhanced Port Info	40
Enhanced Turbo-Zoom	41
ENTER	19
ETA	85
EVENT	20
Event	20, 73, 74, 123
Expanded Info	52
External Alarm	118
External Alarm Connection	25, 114
External bracket	14

External NMEA Connections	24, 114
External Route	84
External Signal	37
External Wiring	112
Extra Large Coverage	40

F

FEATURES	13
File	79, 80, 123
Filter	89
Find	40
Find Function	16, 55
Finding Lakes By Name	16, 57
Finding Lakes Information	16, 56
Finding Obstructions	16, 55
Finding Points Of Interest	16, 57
Finding Port By Distance	16, 56
Finding Port By Name	16, 55
Finding Port Services	16, 55
Finding Tide Stations	16, 55
Finding User Point	65
Finding Wrecks	16, 55
Fish Finder	16, 109
Fish Finder Dual Frequency	16
Fish Finder Full Screen	16
Fish Finder Page	21, 109
Fish Finder Zoom	16
Fix Correction	15
Fix Datum	16
Fix Functions	15
Fix menu	88
Flexi-Zoom	41, 42
Fonts & Symbols	15, 43
Format User C-CARD	80
Fuel	68
Full charts	31
Full Info	50, 51
Function key	21
Functions Menu	20

G

GGA	36
GLL	36
GO-TO	39, 71, 73, 103
Goto	71, 73, 123
Goto PTX	108
GPS . 19, 23, 32, 36, 88, 90, 112, 123	
GPS Connections	23, 112
GPS Data Page	32
GPS Setup Menu	36
GPS Status page	32
Graphic Data Page	33, 39
Grounding Alarm	17

Grounding Alarm Range	17
Grounding Alarm Report	17
Guardian Alarm	14, 41
Guardian Technology	93

H

HDG	36, 123
HDOP	32, 123
HEAD	33
Heading	123
Home	19, 20, 123
HSL	36

I

I/O ports	17
Info Function	52
Info on Lakes	51
Info on objects	50
Info Tree	52
information on Event	74
information on Mark	72
information on route	67
information on Waypoint	65
Inserting C-CARD	26
Inserting MOB	57
Inserting the A-B-C-D points .. 38, 75, 76	
Inserting Waypoint	63
Interface	17
ISO Certification	40

K

key	18
Keyboard	17, 19
keyboard brightness	19

L

Lakes	51, 56, 57
Lakes By Name	16, 57
Lakes Info	16, 51, 56
Land Elevation Values	15, 46, 47
Land Elevations	15, 40, 46, 47
language	22, 49
LAT/LON	123
Lat/Lon Grid	15, 46, 47
Latitude	123
Loading File	79
LOG	123
Longitude	123
Loran	123
Lost Target	97

M

Magnetic Deviation	123
--------------------------	-----

Magnetic Variation	92, 123
Man OverBoard	20, 57
MAP	21
Map Datum	15
Map Display	84
Map Orientation	15, 42, 91
Map Settings	15, 21, 41
MARK	21
Mark	21, 70, 72, 88, 123
Master Chart Plotter	82
MAX	40
memory	17, 78
MENU	20
Mixing Levels	15, 41, 43
MMSI	96, 98, 102, 104
MOB	17, 20, 57, 83, 107
MOBILARM	16, 105, 123
MOBILARM PTX	107
MOBILARM Status	105
modem	25
Modem Test	118
Moving Mark	71
Moving the A-B-C-D points	76
Moving Waypoint	62
Multilanguage	15, 40

N

Name Tags	15, 46
Names	15, 46
Natural Features	123
Nav Aids & Light Sectors	15, 46
Nav Aids Presentation	35
Navigate	19, 72
Navigate (mode)	124
Navigate menu	90
Navigating on the A-B-C-D points	39
Navigation	16, 37
Navigation Data Page	32, 91
Navigation mode	81
Navigation Speed	36
Nearest Services	16
NMEA	24
NMEA output port	67
NMEA-018323, 35, 36, 81, 88, 98, 124	
NOAA	35, 42
NT/NT+	40

O

Object Info	40
Obstructions	15, 16, 46, 48, 55
Off-line redraw	41
Official data source	40
opto-isolated	4

OSGB	15, 90, 124
Other Map Configurations	45
Output Port	38
Over Zoom	44

P

package	14
PAGE	29
Page Preview	29
Page Selection	29
Palette	15, 42
PCMPN	81
Perspective View	15, 41
Photos & Diagrams	15, 40
Picture Size	50
Pictures	50, 124
PIN	100
place Event	21
place Mark	21
place MOB	20
place Waypoint	21
Placing EBL & VRM	21, 74
Points Of Interest	15, 16, 46, 47, 57
Points per Track	14
Port 1/2/3/4/5 NMEA Output	36
Port 1/2/3/4/5 Output	36
Port 1/2/3/4/5 Input	35
Port By Distance	56
Port By Name	16, 55
Port Info	40, 53, 124
Port information	15
Port Services	55
Ports & Services	15, 46, 47, 53, 124
Position Filter	15
Position Request	102
POWER	19, 22
Power consumption	17
Presentation Features	40
PTX	107
PTX icon	107
PTX information window	108
PTX List Page	108
PTX warning message	107

Q

Quick Info	40, 50, 85, 98, 105
Quick Reference	115

R

RADAR	21
Radar	16, 37, 110
Radar Page	21, 110
RAM Clear	115, 117

RAM Menu	117
RAM Test	117
Real Time View	101
Receive route	67
Receive User Points	66
Removing C-CARD	27
Reset Partial Trip	16
Reset Total Trip	16
Resolution	118
Restart GPS	36
Reversing route	67, 68
RMA	36
RMB	36
RMC	36
Roads	15, 40, 46, 47
Rocks	15, 46, 48
Rolling Road Scale	16, 91
route	14, 59, 60, 61, 63, 66, 68, 72, 81, 124
route check report	69
Route color	67
Route Data Report	68, 84
Route Name	66
Route planning	60
Route Report	67, 69
RTCM	124
RTE	67

S

Safe Route Check	14, 41, 69
Safety Status Bar	15, 44
Safety Toolbar	41
Satellite image coverage	15
Satellite Imagery	15, 45
Saving File	79
Scale	44
Screen Amplifier	34
Seabed Type	15, 46, 47
Search & Find	40
Selecting active Track	77
Selecting distance (track)	78
Selecting route	66, 68
Selecting time (track)	78
Send & Receive Marks/Routes	36
Send/Receive route	67
Send/Receive User Points	66
Serial Ports	4, 118
Setup menu	87
Ship Icon Mode	88
Show PTX	109
SIM PIN	100
Simulation	17, 94
size	17

Slave Chart Plotter	83
Sleeping Target	97
Smooth Zoom	15, 41
SNR	32
SOG	32, 124
Specifications	14
Speed	33, 34, 68, 124
Speed Filter	15
Speed Unit	16
Spot Soundings	40, 124
Static Navigation	16
Steering	124
STR	124
System Test	116
System Update	116

T

Target	20, 30, 39, 61, 62, 71, 73, 96, 97, 124
TCPA	96
TCPA Alarm	96, 98
TCPA Limit	96, 98
TD	15, 90, 125
Temperature	17, 35
Temperature Unit	17
Terms	121
Tide	53, 55, 125
Tide & Currents	15, 40, 125
Tide Graph	54
Tide Height	52
Tide Info	53, 125
Tide Stations	16, 55
Tides & Currents	15, 46
Tides Preview	40
Time	14
Time (Simulation)	95
time (track)	78
Time Difference	125
Time Line	125
Time To Go	39, 62, 126
title page	22
TRACK	21
Track	77
track Color	77
Track memorizing type	78
Track storing	21, 77
Tracking	14
Tracks & Routes	15, 46, 47, 125
TRN	126
True-Type Font	40
TTG	39, 62, 85, 126
Turbo Zoom	15, 41
Turning	126

Turning Off	22
Turning On	22
TWA	33
TWS	33
Type of Data	101
Typical Connections	112

U

Under Zoom	44
Underwater Objects Limit	15, 46, 48
Units Selection	34
User C-CARD	17, 26, 78, 80, 100, 118
User Point	14, 34, 65, 66, 72, 74, 126
User Points List	65, 72, 74
UTC	87, 126
UTM	15, 90, 126

V

VAD	126
Value-Added Data	15, 46, 48, 126
Variation	16
VDOP	32
VGA	17
VHF radio	102
Video Input	17
Video Output	17
VMG	126
Voice mode	37
voltage	22

VRM	74, 126
VTG	36

W

WAAS	36, 126
Waypoint	60, 61, 63, 65, 67, 68, 88, 92, 126
Waypoint placing	60
WCV	36
Weather Forecast	101
weight	17
WGS 1984	90, 126
Wind Data Page	21, 33
World Background Charts	116
worldwide background	40
WPL	67
Wrecks	15, 16, 46, 48, 55

X

XTE	36, 126
XTE Alarm	17

Z

Zoom	41, 44
ZOOM IN	20, 43
ZOOM OUT	20, 43
Zoom Type	15, 42
Zoom-In	126
Zoom-Out	126