

Preface

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

Version 1.0

Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

Trademark Recognition

Microsoft, MS-DOS and Windows are registered trademarks of Microsoft Corp.

MMX, Pentium, Pentium-II, Pentium-III, Celeron are registered trademarks of Intel Corporation.

Other product names used in this manual are the properties of their respective owners and are acknowledged.

Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment onto an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Shielded interconnect cables and a shielded AC power cable must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

Declaration of Conformity

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

This device is in conformity with the following EC/EMC directives:

- ☐ **EN 55022** Limits and methods of measurement of radio disturbance characteristics of information technology equipment
- ☐ **EN 61000-3-2** Disturbances in supply systems caused
- ☐ **EN 61000-3-3** Disturbances in supply systems caused by household appliances and similar electrical equipment " Voltage fluctuations"
- ☐ **EN 55024** Information technology equipment-Immunity characteristics-Limits and methods of measurement
- ☐ **EN 60950** Safety for information technology equipment including electrical business equipment
- ☐ **CE marking**



Canadian Department of Communications

This class B digital apparatus meets all requirements of the Canadian Interference-causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

About the Manual

The manual consists of the following:

- | | |
|---|---|
| Chapter 1
Introducing the Motherboard | Describes features of the ➞ page 1 motherboard. |
| Chapter 2
Installing the Motherboard | Describes installation of ➞ page 7 motherboard components. |
| Chapter 3
Using BIOS | Provides information on using the BIOS Setup Utility. ➞ page 23 |
| Chapter 4
Using the Motherboard Software | Describes the motherboard software. ➞ page 43 |
| Chapter 5
Trouble Shooting | Provides basic trouble shooting tips. ➞ page 47 |

TABLE OF CONTENTS

Preface	i
Chapter 1	1
Introducing the Motherboard	1
Introduction.....	1
Package Contents.....	1
Specifications.....	2
Motherboard Components.....	4
I/O Ports.....	6
Chapter 2	7
Installing the Motherboard	7
Safety Precautions.....	7
Installing the Motherboard in a Chassis.....	7
Checking Jumper Settings.....	8
Installing Hardware.....	10
<i>Installing Memory Modules.....</i>	<i>10</i>
<i>Installing Add-on Cards.....</i>	<i>11</i>
<i>Connecting Optional Devices.....</i>	<i>13</i>
<i>Installing a Hard Disk Drive/Optical Disk Drive.....</i>	<i>19</i>
Connecting Case Components.....	20
Front Panel Header.....	21
Chapter 3	23
Using BIOS	23
About the Setup Utility.....	23
<i>The Standard Configuration.....</i>	<i>23</i>
<i>Entering the Setup Utility.....</i>	<i>23</i>
<i>Resetting the Default CMOS Values.....</i>	<i>24</i>
Using BIOS.....	24
<i>BIOS Navigation Keys.....</i>	<i>25</i>
<i>Main Menu.....</i>	<i>26</i>
<i>Advanced Menu.....</i>	<i>27</i>
<i>Chipset Menu.....</i>	<i>35</i>
<i>Feature Menu.....</i>	<i>37</i>
<i>Security Menu.....</i>	<i>38</i>
<i>Boot Menu.....</i>	<i>40</i>
<i>Exit Menu.....</i>	<i>41</i>
<i>Updating the BIOS.....</i>	<i>42</i>

Chapter 4	43
Using the Motherboard Software	43
Auto-installing under Windows 8/8.1.....	43
<i>Running Setup</i>	43
Manual Installation.....	45
Chapter 5	47
Trouble Shooting	47
Start up problems during assembly.....	47
Start up problems after prolong use.....	48
Maintenance and care tips.....	48
Basic Troubleshooting Flowchart.....	49

Chapter 1

Introducing the Motherboard

Introduction

Thank you for choosing the **BAT-TI** motherboard of high performance, enhanced function. This motherboard has Onboard Intel® Bay Trail-D Dual-Core (2C/2T for J1750/J1800) SoC for high-end business or personal desktop markets.

It supports up to **8 GB** of system memory with signal channel **DDR3 SO-DIMM 1333/1066 MHz**. One mini PCI Express x1 slot is for extending usage (it supports half-card and you can insert a wireless card into it).

It implements an EHCI (Enhanced Host Controller Interface) compliant interface that provides four USB 2.0 ports (two USB 2.0 ports at the rear panel and one USB 2.0 header supports additional two USB 2.0 ports) and two USB 3.0 ports (two USB 3.0 ports at the rear panel).

The motherboard is equipped with a full set of I/O ports in the rear panel, including one HDMI_IN port, one HDMI_OUT port, two USB 2.0 ports, two USB 3.0 ports, one RJ45 LAN connector, one DC_IN port, and audio jacks for microphone and line-out.

In addition, this motherboard supports two SATA 3.0Gb/s connectors for expansion.

Package Contents

Your motherboard package ships with the following items:

- ☐ BAT-TI Motherboard
- ☐ User Manual
- ☐ DVD
- ☐ I/O Shield
- ☐ 1 SATA 3.0Gb/s Cables
- ☐ 1 SATA/Power Cable



The package contents above are for reference only, please take the actual package items as standard.

Specifications

CPU	<ul style="list-style-type: none"> Onboard Intel® Bay Trail-D Dual-Core (2C/2T for J1750/J1800) SoC Intel TDP 10W
Memory	<ul style="list-style-type: none"> Signal channel DDR3 SO-DIMM memory architecture 1 x 204-pin DDR3 SO-DIMM socket supports up to 8 GB Supports DDR3 1333/1066 MHz DDR3 SDRAM
Expansion Slots	<ul style="list-style-type: none"> 1 x mini PCI Express x1 slot (supports half-card)
Storage	<ul style="list-style-type: none"> Supported by Intel® Bay Trail-D Dual-Core (2C/2T for J1750/J1800) SoC - 2 x Serial ATA 3.0Gb/s devices
Audio	<ul style="list-style-type: none"> Realtek ALC662-VD + ALC113GR - 2.1 Channel High Definition Audio Codec - Compliant with HD Audio specification
LAN	<ul style="list-style-type: none"> Realtek RTL8111G-CG Gigabit LAN - 10/100/1000 Fast Ethernet Controller - Wake-on-LAN and remote wake-up support
Rear Panel I/O	<ul style="list-style-type: none"> 1 x HDMI_IN port 1 x HDMI_OUT port 2 x USB 2.0 ports 2 x USB 3.0 ports 1 x DC-IN port 1 x RJ45 LAN connector 1 x Audio port (1x Line out, 1x Mic_in)
Internal I/O Connectors & Headers	<ul style="list-style-type: none"> 1 x 4-pin CPU_FAN connector 1 x 4-pin SYS_FAN connector 1 x USB 2.0 header supports additional two USB 2.0 ports 2 x Serial SATA 3.0Gb/s connectors 1 x Front Panel audio header 1 x Front Panel switch/LED header 1 x CLR_CMOS jumper 1 x COM header (Optional) 1 x LVDS connector (Optional) 1 x SATA power connector 1 x TXE unlock jumper 1 x Display brightness header (Optional) 1 x Speaker header 1 x Camera header (or can be functioned as a USB2.0 header) 1 x Touch panel header (or can be functioned as a USB2.0 header) 1 x Card reader header (or can be functioned as a USB2.0 header) 1 x CIR header (Optional) 1 x Digital Microphone header (Optional) 1 x LCD select jumper (Optional)

System BIOS	<ul style="list-style-type: none">• AMI BIOS with 64Mb SPI Flash ROM<ul style="list-style-type: none">- Supports Plug and Play, STR(S3)/STD(S4)- Supports Hardware Monitor- Supports ACPI 3.0 version & DMI- Supports Audio, LAN, can be disabled in BIOS- Supports Dual-Monitor function- F7 hot key for boot up devices option
Form Factor	<ul style="list-style-type: none">• Thin Mini-ITX Size, 170mm x 170mm

Motherboard Components


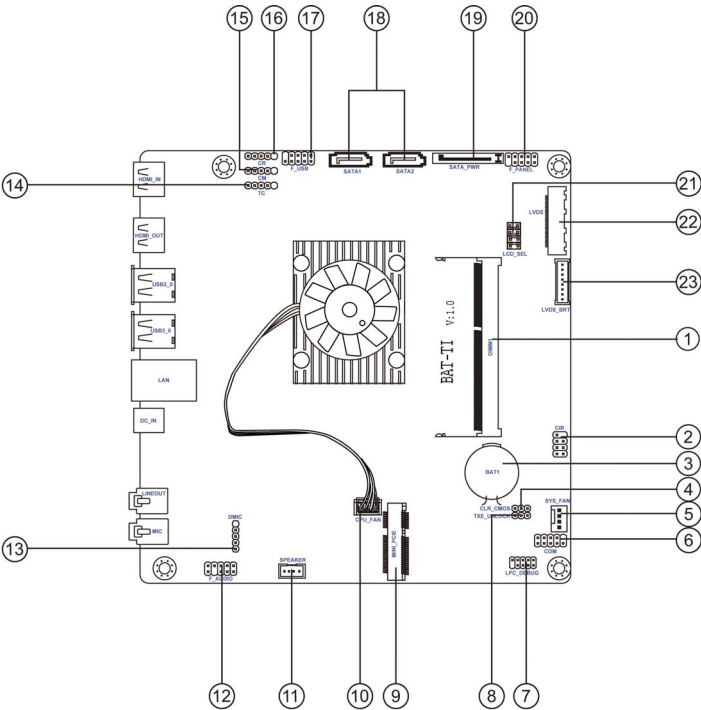


Table of Motherboard Components

LABEL	COMPONENTS
1. DIMM_1~2	204-pin DDR3 SDRAM SO-DIMM
2. CIR	Consumer Infrared header (optional)
3. BAT1	Battery
4. CLR_CMOS	Clear CMOS jumper
5. SYS_FAN	4-pin system cooling fan connector
6. COM	Onboard serial port header (optional)
7. LPC_DEBUG	LPC Debug header—for factory use only
8. TXE_UNLOCK	TXE Unlock jumper
9. MINI_PCIE	Mini PCI Express x1 slot (supports half-card)
10. CPU_FAN	4-pin CPU cooling fan connector
11. SPEAKER	Speaker header
12. F_AUDIO	Front panel audio header
13. DMIC	Digital Microphone header (optional)
14. TC	5-pin USB 2.0 header supports one USB 2.0 Device
15. CM	5-pin USB 2.0 header supports Camera or other USB 2.0 Device
16. CR	5-pin USB 2.0 header supports Card Reader or other USB 2.0 Device
17. F_USB	Front panel USB 2.0 header
18. SATA1~2	Serial ATA 3.0 Gb/s connectors
19. SATA_PWR	SATA power connector
20. F_PANEL	Front panel switch/LED header
21. LCD_SEL	LCD select jumper (optional)
22. LVDS	LVDS connector (optional)
23. LVDS_BRT	Display brightness header (optional)

I/O Ports

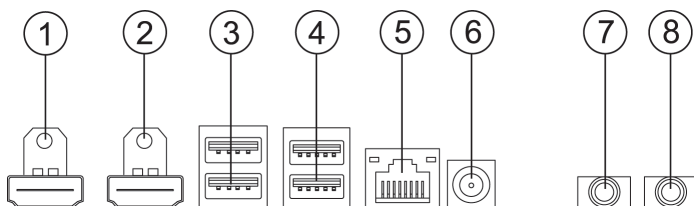

1. HDMI_IN Port

You can connect the HDMI output of other computer or other HDMI source to the HDMI_IN port.

PC	HDMI_IN port	LCD_MODE button pulse
Power ON	Un-plugged	PC → LCD off
Power OFF	Plugged	HDMI → LCD off
Power ON	Plugged	PC → HDMI → LCD off
Power OFF	Un-plugged	LCD off



1. Please press button to switch the mode manually, it will not be automatically switched when inserting the HDMI cable.

2. When HDMI_IN is in use, front panel audio header will be invalid.

2. HDMI_OUT Port

You can connect the display device to the HDMI_OUT port.

3. USB 2.0 Ports

Use the USB 2.0 ports to connect USB 2.0 devices.


4. USB 3.0 Ports

Use the USB 3.0 ports to connect USB 3.0 devices.

5. LAN Port

Connect an RJ-45 jack to the LAN port to connect your computer to the Network.

LAN LED	Status	Description
Activity LED	OFF	No data
	Orange blinking	Active
Link LED	OFF	No link
	Green	Link

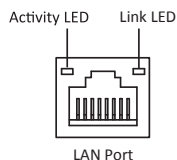

6. DC_IN Port

Connect the DC_IN port to the power adapter.

7. Line-out(lime)

It is used to connect to speakers or headphones.

8. Microphone(pink)

It is used to connect to a microphone.

Chapter 2

Installing the Motherboard


2-1. Safety Precautions

Follow these safety precautions when installing the motherboard:

- Wear a grounding strap attached to a grounded device to avoid damage from static electricity.
- Discharge static electricity by touching the metal case of a safely grounded object before working on the motherboard.
- Leave components in the static-proof bags.
- Always remove the AC power by unplugging the power cord from the power outlet before installing or removing the motherboard or other hardware components.

2-2. Installing the motherboard in a Chassis


This motherboard carries a Thin Mini-ITX form factor of 170 x 170 mm. Choose a chassis that accommodates this form factor. Make sure that the I/O template in the chassis matches the I/O ports installed on the rear edge of the motherboard. Most system chassis have mounting brackets installed in the chassis, which corresponds to the holes in the motherboard. Place the motherboard over the mounting brackets and secure the motherboard onto the mounting brackets with screws.

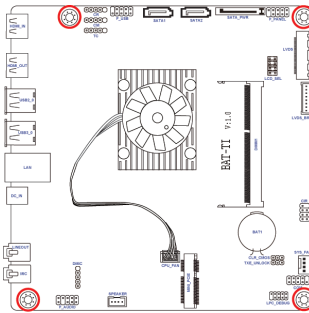

Do not over-tighten the screws as this can stress the motherboard.


2-3. Checking Jumper Settings

The following illustration shows the location of the motherboard jumpers. Pin 1 is labeled.

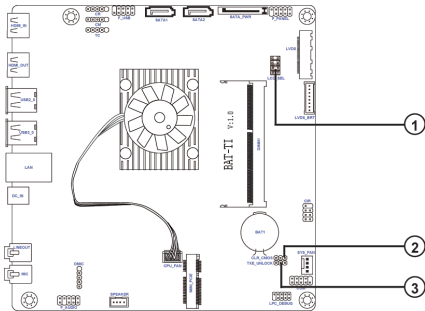


No.	Components
1	LCD_SEL
2	CLR_CMOS
3	TXE_UNLOCK

1. LCD_SEL: LCD Select Jumper (Optional)

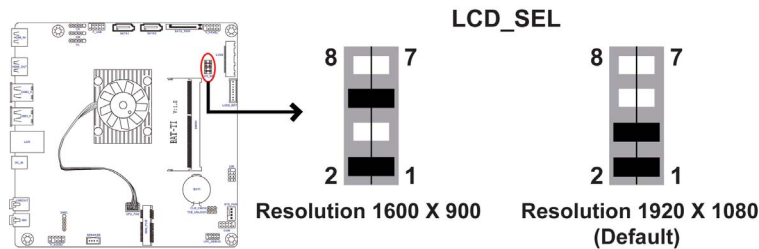


1. When your panel connects to LVDS, please check LCD Select header setting first.
2. Due to the differences of the panel parameters, please follow the above illustration to place the jumper caps.

2. CLR_CMOS: Clear CMOS Jumper

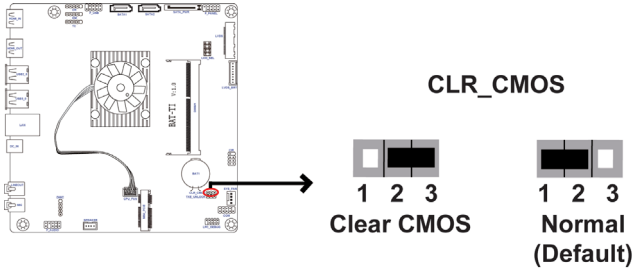

To avoid the system instability after clearing CMOS, we recommend users to enter the main BIOS setting page to "Load Default Settings" and then "Save and Exit Setup".

3. TXE_UNLOCK: TXE Unlock Jumper

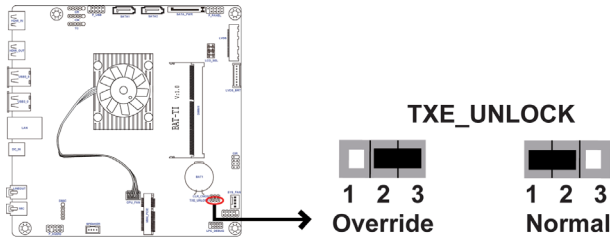


2-4. Installing Hardware

2-4-1. Installing Memory Modules


- This motherboard accommodates one memory module. It can support one 204-pin DDR3L DIMM 1333/1066MHz.
- Do not remove any memory module from its antistatic packaging until you are ready to install it on the motherboard. Handle the modules only by their edges. Do not touch the components or metal parts. Always wear a grounding strap when you handle the modules.
- You must install one module in the slot. Total memory capacity is 8 GB.
- Refer to the following to install the memory modules.

Install the DIMM module into the slot and press it firmly down until it fits in place. Check that the cutouts on the DIMM module edge connector match the notches in the DIMM slot.

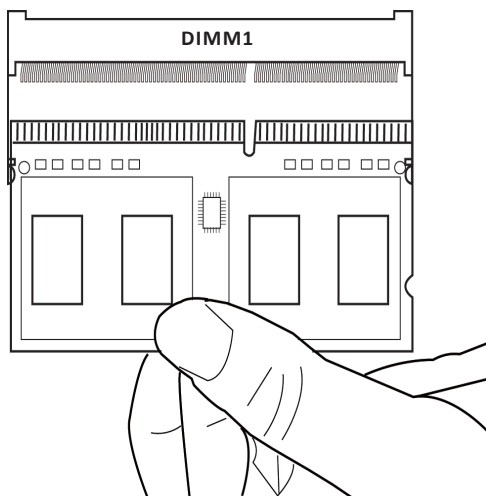

2-4-2. Installing Add-on Cards

The slots on this motherboard are designed to hold expansion cards and connect them to the system bus. Expansion slots are a means of adding or enhancing the motherboard's features and capabilities. With these efficient facilities, you can increase the motherboard's capabilities by adding hardware that performs tasks that are not part of the basic system.

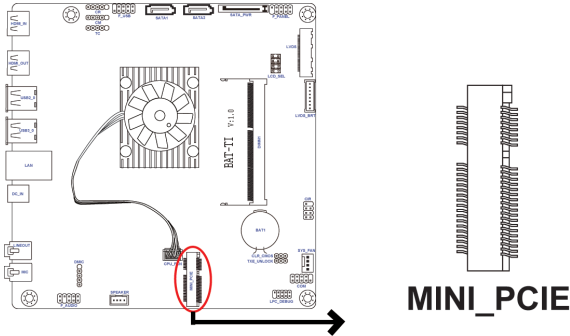

MINI_PCIE Slot

The mini PCI Express x1 slot is for extending usage which supports half-card with USB signal.



Before installing an add-on card, check the documentation for the card carefully. If the card is not Plug and Play, you may have to manually configure the card before installation.

Follow these instructions to install an add-on card:



- 1 Remove a blanking plate from the system case corresponding to the slot you are going to use.
- 2 Install the edge connector of the add-on card into the expansion slot. Ensure that the edge connector is correctly seated in the slot.
- 3 Secure the metal bracket of the card to the system case with a screw.



For some add-on cards, for example graphics adapters and network adapters, you have to install drivers and software before you can begin using the add-on card.

Please refer to the following illustrations to install the add-on card:


Insert a WIFI card into the MINI_PCIE Slot.

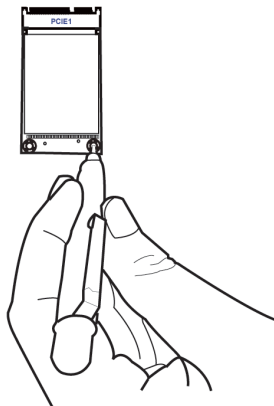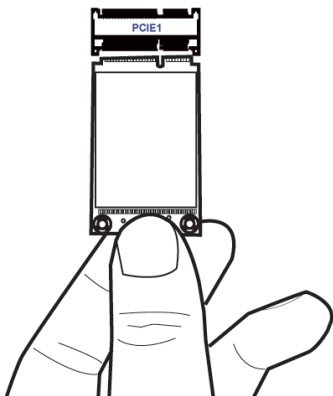

** For reference only*


2-4-3. Connecting Optional Devices

Refer to the following for information on connecting the motherboard's optional devices:

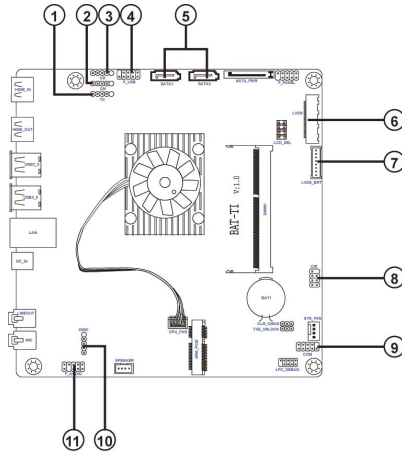


No.	Components	No.	Components
1	TC	7	LVDS_BRT
2	CM	8	CIR
3	CR	9	COM
4	F_USB	10	DMIC
5	SATA1~2	11	F_AUDIO
6	LVDS	~	~

1~3. TC/CM/CR: 5-pin USB 2.0 Header supports one USB 2.0 Device/5-pin USB 2.0 Header supports Camera or other USB 2.0 Device/5-pin USB 2.0 Header supports Card Reader or other USB 2.0 Device

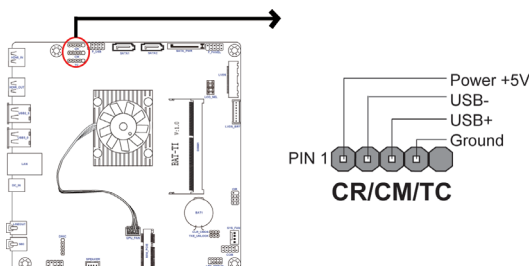


4. F_USB: Front Panel USB 2.0 header

The motherboard has one USB 2.0 headers supporting two USB 2.0 ports. Additionally, some computer cases have USB ports at the front of the case. If you have this kind of case, use auxiliary USB connector to connect the front-mounted ports to the motherboard.

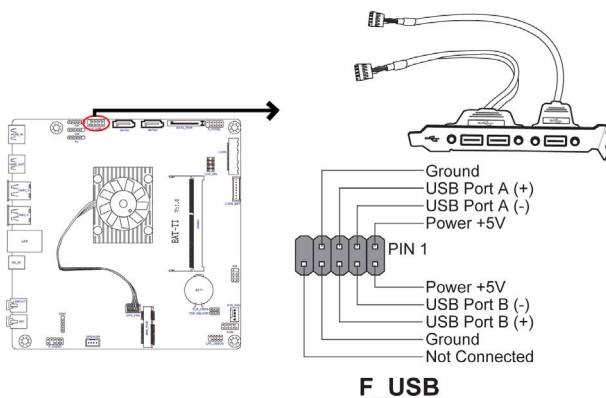


Please make sure that the USB cable has the same pin assignment as indicated above. A different pin assignment may cause damage or system hang-up.

7. LVDS_BRT: LVDS Brightness Control Header (Optional)

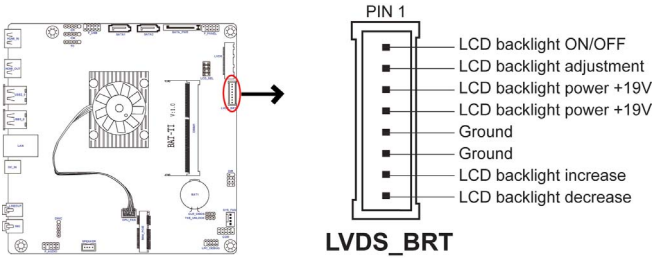


8. CIR: Consumer Infrared Header (Optional)

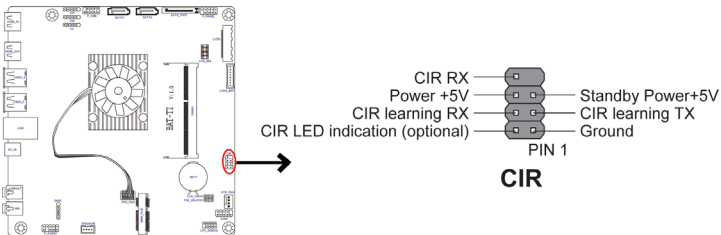


9. COM: Onboard Serial Port Header (Optional)

Connect a serial port extension bracket to this header to add a serial port to your system.

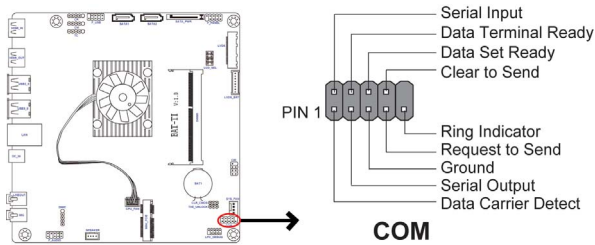


10. DMIC: Digital Microphone Header (Optional)

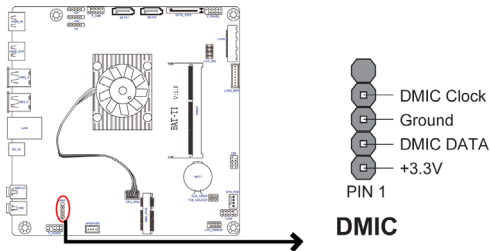

11. F_AUDIO: Front Panel Audio Header

The front panel audio header allows the user to install auxiliary front-oriented microphone and line-out ports for easier access. This header supports HD audio by default.

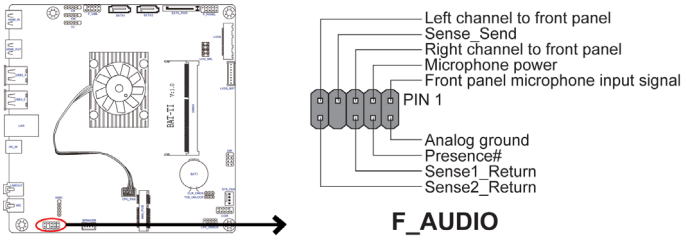

2-4-6. Installing a Hard Disk Drive/Optical Disk Drive

This section describes how to install a Hard Disk Drive/Optical Disk Drive.

About SATA Connectors


Your motherboard features two SATA connectors supporting a total of two drives. SATA refers to Serial ATA (Advanced Technology Attachment) is the standard interface for the IDE hard drives which are currently used in most PCs. These connectors are well designed and will only fit in one orientation. Locate the SATA connectors on the motherboard and follow the illustration below to install the Hard Disk Drive/Optical Disk Drive.

Installing Hard Disk Drive/Optical Disk Drive

To install the Hard Disk Drive (HDD)/Optical Disk Drive (ODD), use the HDD/ODD/SATA cables that support the Hard Disk Drive/Optical Disk Drive/Serial ATA protocol.

Refer to the illustration below for proper installation:


- 1 Attach either end of the single SATA cable to the SATA port on the motherboard.
- 2 Attach the other end of the single SATA cable to the hard disk drive.
- 3 Attach the linked end of the combo HDD/ODD cable to the Hard Disk Drive/Optical Disk Drive. Please note that, connect the black cable to the hard disk Drive, then connect the orange cable to the optical disk drive.
- 4 Attach the other end of the combo HDD/ODD cable to the SATA port and SATA_PWR connector on the motherboard. Please note that, connect the black cable to the SATA_PWR connector, and connect the orange cable to the SATA port.

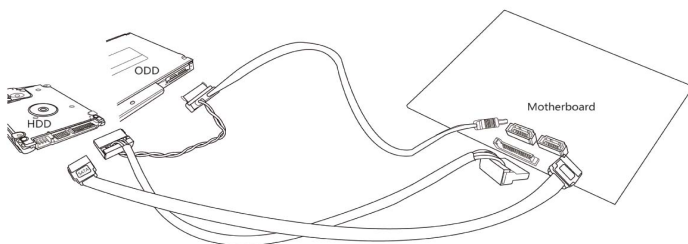

** For reference only*


2-4-5. Connecting Case Components

After you have installed the motherboard into a case, you can begin connecting the motherboard components. Refer to the following:

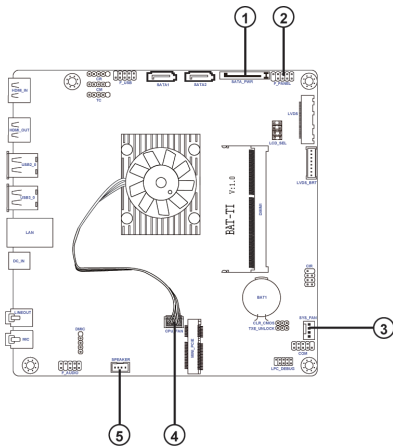


No.	Components	No.	Components
1	SATA_PWR	4	CPU_FAN
2	F_PANEL	5	SPEAKER
3	SYS_FAN	~	~

1. SATA_PWR: SATA Power Connector

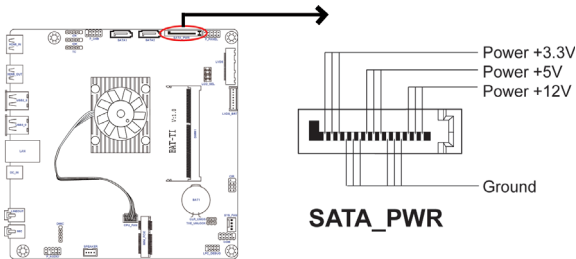

2. F_PANEL: Front Panel Header

The front panel header (F_PANEL) provides a standard set of switch and LED headers commonly found on ATX or Micro ATX cases.

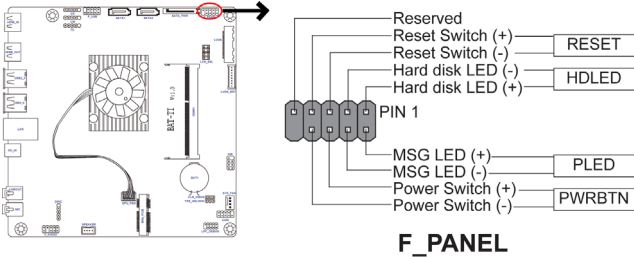

Hard Drive Activity LED

Connecting pins 1 and 3 to a front panel mounted LED provides visual indication that data is being read from or written to the hard drive. For the LED to function properly, an IDE drive should be connected to the onboard IDE interface. The LED will also show activity for devices connected to the SCSI (hard drive activity LED) connector.

Power/Sleep/Message waiting LED

Connecting pins 2 and 4 to a single or dual-color, front panel mounted LED provides power on/off, sleep, and message waiting indication.

Reset Switch

Supporting the reset function requires connecting pin 5 and 7 to a momentary-contact switch that is normally open. When the switch is closed, the board resets and runs POST.


Power Switch

Supporting the power on/off function requires connecting pins 6 and 8 to a momentary-contact switch that is normally open. The switch should maintain contact for at least 50 ms to signal the power supply to switch on or off. The time requirement is due to internal de-bounce circuitry. After receiving a power on/off signal, at least two seconds elapses before the power supply recognizes another on/off signal.

3 & 4. SYS_FAN & PWR_FAN: System Cooling FAN Connector & CPU Cooling FAN Connector

Connect the system cooling fan cable to **SYS_FAN**.


Connect the CPU cooling fan cable to **CPU_FAN**.

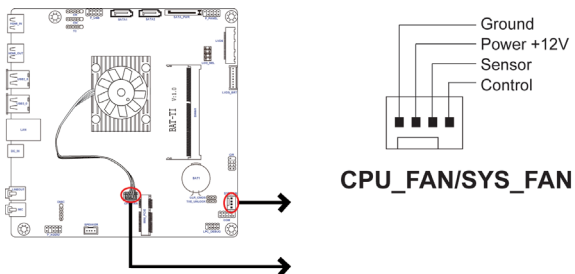

Users please note that the fan connector supports the CPU cooling fan of 1.1A ~ 2.2A (26.4W max) at +12V.

5. SPEAKER: Internal Speaker Header

Connect the case speaker cable to **SPEAKER**.

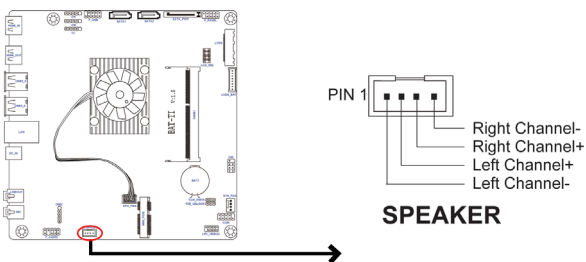

This concludes Chapter 2. The next chapter covers the BIOS.

Chapter 3

Using BIOS

About the Setup Utility

The computer uses the latest “American Megatrends Inc. ” BIOS with support for Windows Plug and Play. The CMOS chip on the motherboard contains the ROM setup instructions for configuring the motherboard BIOS.

The BIOS (Basic Input and Output System) Setup Utility displays the system’s configuration status and provides you with options to set system parameters. The parameters are stored in battery-backed-up CMOS RAM that saves this information when the power is turned off. When the system is turned back on, the system is configured with the values you stored in CMOS.

The BIOS Setup Utility enables you to configure:

- Hard drives, diskette drives and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power Management features

The settings made in the Setup Utility affect how the computer performs. Before using the Setup Utility, ensure that you understand the Setup Utility options.

This chapter provides explanations for Setup Utility options.

The Standard Configuration

A standard configuration has already been set in the Setup Utility. However, we recommend that you read this chapter in case you need to make any changes in the future.

This Setup Utility should be used:

- when changing the system configuration
- when a configuration error is detected and you are prompted to make changes to the Setup Utility
- when trying to resolve IRQ conflicts
- when making changes to the Power Management configuration
- when changing the password or making other changes to the Security Setup

Entering the Setup Utility

When you power on the system, BIOS enters the Power-On Self Test (POST) routines. POST is a series of built-in diagnostics performed by the BIOS. After the POST routines are completed, the following message appears:

Press DEL to enter SETUP

Press the delete key to access BIOS Setup Utility.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.			
Main	Advanced	Chipset	Feature Security Boot Exit
BIOS Information			Choose the system default language.
BIOS Version : BTDDW08.112 11/01/2013			→ ←:Select Screen ↑↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
System Serial Number : 00000000			
Motherboard Serial Number : 00000000			
MAC Address : C8-9C-DC-F2-EE-BB			
System Language [English]			
System Date [Fri 11/01/2013]			
System Time [00:01:55]			
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.			

Resetting the Default CMOS Values

When powering on for the first time, the POST screen may show a “CMOS Settings Wrong” message. This standard message will appear following a clear CMOS data at factory by the manufacturer. You simply need to Load Default Settings and Save it to reset the default CMOS values.

Note: Changes to system hardware such as different CPU, memories, etc. may also trigger this message.



Using BIOS

When you start the Setup Utility, the main menu appears. The main menu of the Setup Utility displays a list of the options that are available. A highlight indicates which option is currently selected. Use the cursor arrow keys to move the highlight to other options. When an option is highlighted, execute the option by pressing <Enter>.

Some options lead to pop-up dialog boxes that prompt you to verify that you wish to execute that option. Other options lead to dialog boxes that prompt you for information.

Some options (marked with a triangle ►) lead to submenus that enable you to change the values for the option. Use the cursor arrow keys to scroll through the items in the submenu.

In this manual, default values are enclosed in parenthesis. Submenu items are denoted by a triangle ►.



The default BIOS setting for this motherboard apply for most conditions with optimum performance. We do not suggest users change the default values in the BIOS setup and take no responsibility to any damage caused by changing the BIOS settings.

BIOS Navigation Keys

The BIOS navigation keys are listed below:

KEY	FUNCTION
ESC	Exits the current menu
↑↓→←	Scrolls through the items on a menu
+/-	Change Opt.
Enter	Select
F1	General Help
F2	Previous Value
F3	Optimized Defaults
F4	Save & Exit



For the purpose of better product maintenance, the manufacture reserves the right to change the BIOS items presented in this manual. The BIOS setup screens shown in this chapter are for reference only and may differ from the actual BIOS. Please visit the manufacture's website for updated manual.

Main Menu

When you enter the BIOS Setup program, the main menu appears, giving you an overview of the basic system information. Select an item and press <Enter> to display the submenu.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.		
Main	Advanced	Chipset Feature Security Boot Exit
BIOS Information BIOS Version : BTDDW08.112 11/01/2013 System Serial Number : 00000000 Motherboard Serial Number : 00000000 MAC Address : C8-9C-DC-F2-EE-BB		Choose the system default language. → ←:Select Screen ↑↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
System Language [English] System Date [Fri 11/01/2013] System Time [00:01:55]		
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.		

BIOS Version (BTDDW08.112 11/01/2013)

This item shows the information of the BIOS version.

System Serial Number (00000000)

This item shows the information of the system serial number.

Motherboard Serial Number (00000000)

This item shows the information of the motherboard serial number.

MAC Address (C8-9C-DC-F2-EE-BB)

This item shows the information of the MAC address.

System Language (English)


This item is used to set system language.

System Date & Time

The Date and Time items show the current date and time on the computer. If you are running a Windows OS, these items are automatically updated whenever you make changes to the Windows Date and Time Properties utility.

Advanced Menu

The Advanced menu items allow you to change the settings for the CPU and other system.

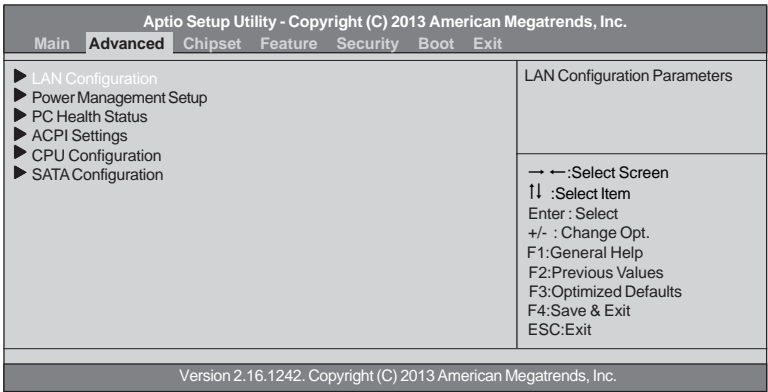

► LAN Configuration

The item in the menu shows the LAN-related information that the BIOS automatically detects.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.		
Main	Advanced	Chipset Feature Security Boot Exit
LAN Configuration		Enabled/Disabled UEFI Network Stack
Onboard LAN Controller	[Enabled]	
Network Stack	[Enabled]	
Ipv4 PXE Support	[Enabled]	
Ipv6 PXE Support	[Enabled]	
		→ ←:Select Screen ↑↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.		

Onboard LAN Controller (Enabled)

Use this item to enable or disable Onboard LAN 1 controller.

Network Stack (Enabled)

Use this item to enable or disable UEFI network stack.

Ipv4/6 PXE Support (Enabled)*

Use these items to enable or disable Ipv4/6 PXE Boot Support. If disabled Ipv4/6 PXE, boot option will not be created.



*These two items will be hidden when **Network Stack** is set to be **disabled**.

Press <Esc> to return to the Advanced Menu page.

► Power Management Setup

This page sets up some parameters for system power management operation.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.	
Main	Advanced
<div>Power Management Setup</div> <div> <div>Resume By PME</div> <div>[Enabled]</div> </div> <div> <div>EUP Function</div> <div>[Enabled]</div> </div>	
<div>About Resume by</div> <div>PCI/PCI-E/LAN/Ext .USB3.0 PME</div>	
<div>→ ←:Select Screen</div> <div>↑↓ :Select Item</div> <div>Enter : Select</div> <div>+/- : Change Opt.</div> <div>F1:General Help</div> <div>F2:Previous Values</div> <div>F3:Optimized Defaults</div> <div>F4:Save & Exit</div> <div>ESC:Exit</div>	
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.	

Resume By PME (Disabled)

This item specify whether the system will be awakened from power saving modes when activity or input signal of the specified hardware peripheral or components is detected.

EUP Function (Enabled)

This item allows user to enable or disable EUP support.

Press <Esc> to return to the Advanced Menu page.

► PC Health Status

On motherboards support hardware monitoring, this item lets you monitor the parameters for critical voltages, temperatures and fan speeds.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.		
Main	Advanced	Chipset Feature Security Boot Exit
PC Health Status		
CPU Temperature	42°C	
System Temperature	40°C	
CPU Fan Speed	1630 RPM	
System Fan Speed	1377 RPM	
CPU Voltage	0.816V	
DIMM Voltage	1.356V	
+12V	12.168V	
		→ ← : Select Screen ↑ ↓ : Select Item Enter : Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.		

System Component Characteristics

These items display the monitoring of the overall inboard hardware health events, such as System temperature, CPU & DIMM voltage, CPU & System fan speed... etc.

- CPU Temperature
- System Temperature
- CPU Fan Speed
- System Fan Speed
- CPU Voltage
- DIMM Voltage
- +12V

Press <Esc> to return to the Advanced Menu page.

► ACPI Configuration

The item in the menu shows the highest ACPI sleep state when the system enters suspend.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.		
Main	Advanced	Chipset Feature Security Boot Exit
ACPI Settings		Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.
ACPI Sleep State		

ACPI Sleep State [S3(Suspend to RAM)]

This item allows user to enter the ACPI S3 (Suspend to RAM) Sleep State (default).

Press <Esc> to return to the Advanced Menu page.

► CPU Configuration

The item in the menu shows the CPU Configuration.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.		
Main	Advanced	Chipset Feature Security Boot Exit
CPU Configuration		Socket sepcific CPU Information
▶ Socket 0 CPU Information		
CPU Speed	2001 MHz	→ ← :Select Screen ↑↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
64-bit	Supported	
Limit CPUID Maximum	[Disabled]	
Execute Disable Bit	[Enabled]	
Hardware Prefetcher	[Enabled]	
Adjacent Cache Line Prefetch	[Enabled]	
Intel Virtualization Technology	[Enabled]	
Power Technology	[Energy Efficient]	
Enhanced Halt (C1E)	[Enabled]	
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.		

► Socket 0 CPU Information

Scroll to this item and press <Enter> and view the following screen:

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.		
Main	Advanced	Chipset Feature Security Boot Exit
Socket0 CPU Information		Socket sepcific CPU Information
Intel(R) Celeron(R) CPU J1850 @ 1.99GHz		→ ←:Select Screen ↑↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
CPU Signature	30673	
Microcode Patch	312	
Max CPU Speed	1990 MHz	
Min CPU Speed	500 MHz	
Processor Cores	4	
Intel HT Technology	Not Supported	
Intel VT-x Technology	Supported	
L1 Data Cache	24 KB x 4	
L1 Code Cache	32 KB x 4	
L2 Cache	1024 KB x 2	
L3 Cache	Not Present	
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.		

Intel(R) Celeron(R) CPU J1850 @ 1.99GHz

This is display-only field and displays the information of the CPU installed in your computer.

CPU Signature (30673)

This item shows the information of the CPU signature.

Microcode Patch (312)

This item shows the version of microcode patch.

Max CPU Speed (1990 MHz)

This item shows the max speed of the CPU.

Min CPU Speed (500 MHz)

This item shows the min speed of the CPU.

Processor Cores (4)

This item shows the number of cores of the processor.

Intel HT Technology (Not Supported)

This item shows the computer supports Intel HT technology or not.

Intel VT-X Technology (Supported)

This item shows the computer supports Intel VT-X technology or not.

L1 Data Cache (24 KB x 4)

This item shows the size of CPU L1 Data Cache memory.

L1 Code Cache (32 KB x 4)

This item shows the size of CPU L1 Code Cache memory.

L2/L3 Cache (1024 KB x 2/Not Present)

These items show the size of CPU L2/L3 Cache memory.

Press <Esc> to return to the CPU Configuration page.

CPU Speed (2001 MHz)

This item shows the processor speed.

64-bit (Supported)

This item shows the computer supports EMT64.

Limit CUID Maximum (Disabled)

Use this item to enable or disable the maximum CUID value limit, you can enable this item to prevent the system from “rebooting” when trying to install Windows NT 4.0.

Excute Disable Bit (Enabled)

This item allows the processor to classify areas in memory by where application code can execute and where it cannot. When a malicious worm attempts to insert code in the buffer, the processor disables code execution, preventing damage or worm propagation. Replacing older computers with Execute Disable Bit enabled systems can halt worm attacks, reducing the need for virus related repair.

Hardware Prefetcher (Enabled)

This item enables or disables hardware prefetcher.

Adjacent Cache Line Prefetch (Enabled)

This item enables or disables adjacent cache line prefetch.

Intel Virtualization Technology (Enabled)

When disabled, a VMM cannot utilize the additional hardware capabilities provided by Vndor Pool Technology.

Power Technology (Energy Efficient)

Use this item to control the Energy mode of the processor.

Enhanced Halt (CIE) (Enabled)

Use this item to enable the CPU energy-saving function when the system is not running.

Press <Esc> to return to the Advanced Menu page.

► SATA Configuration

Use this item to show the mode of serial SATA configuration options.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.		
Main	Advanced	Chipset Feature Security Boot Exit
SATA Configuration		Select IDE / AHCI
SATA Mode [AHCI Mode]		
SATAII Port1	INTEL SSDSC2CW (60.0GB	
SATAII Port2	Not Present	
		→ ← : Select Screen ↑ ↓ : Select Item Enter : Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.		

SATA Mode (AHCI Mode)

Use this item to select SATA mode.


SATA Port1~2 (INTEL SSDSC2CW (60.0GB/Not Present)

This motherboard supports two SATA channels, each channel allows one SATA device to be installed. Use these items to configure each device on the SATA channel.

Press <Esc> to return to the Advanced Menu page.


Chipset Menu

The chipset menu items allow you to change the settings for the SoC chip and other system.

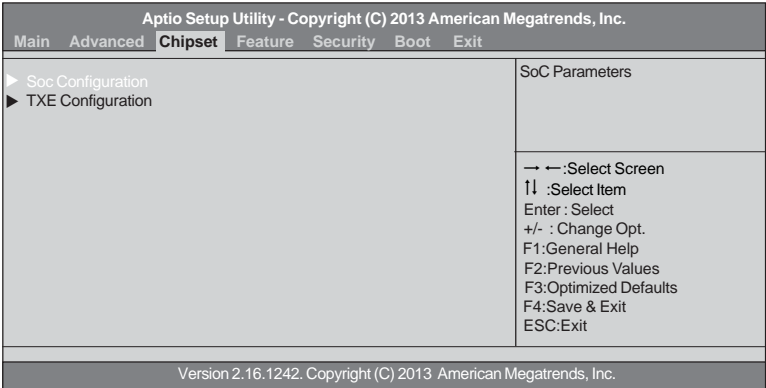

► SoC Configuration

Scroll to this item and press <Enter> and view the following screen:

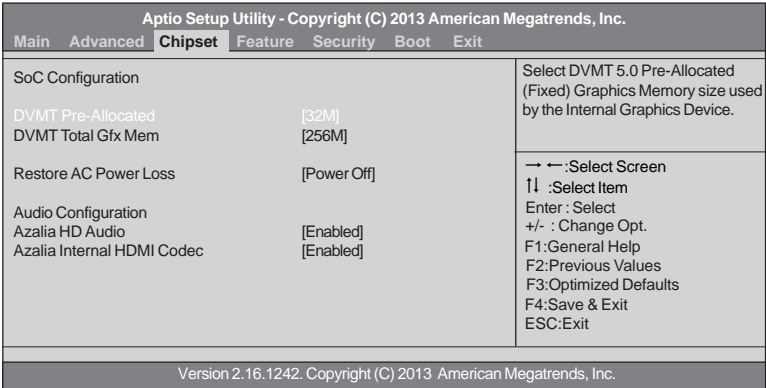

DVMT Pre-Allocated (32M)

This item is used to select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.

DVMT Total Gfx Mem (256M)

This item shows the information of DVMT 5.0 and graphic memory size used by Internal Graphics Device.

Restore AC Power Loss (Power Off)

This item enables your computer to automatically restart or return to its operating status.

Azalia HD Audio (Enabled)

This item enables or disables Azalia HD Audio.

Azalia Internal HDMI Codec (Enabled)

This item enables or disables Azalia Internal HDMI Codec.

Press <Esc> to return to the Chipset Menu page.

►TXE Information

Scroll to this item and press <Enter> and view the following screen:

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.			
Main	Advanced	Chipset	Feature Security Boot Exit
TXE Information			
Sec RC Version			00.05.00.00
TXE FW Version			01.00.02.1060
			→ ←:Select Screen ↑↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.			

Sec RC Version (00.05.00.00)

This item shows the Sec Reference Code Version.

TXE FW Version (01.00.02.1060)

This item shows the TXE Firmware Version.

Feature Menu

This page displays the information of feature of the motherboard.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.	
Main	Advanced
Chipset	Feature
Security	Boot
Exit	
Intel Advance Feature	Enable/Disable Intel SpeedStep
Enhanced Intel SpeedStep Technology	[Enabled]
	→ ←:Select Screen ↑ ↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.	

Enhanced Intel SpeedStep Technology (Enabled)

This item allows users to enable or disable the EIST (Enhanced Intel SpeedStep Technology).

Security Menu

This page enables you to set setup administrator password and user password.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.						
Main	Advanced	Chipset	Feature	Security	Boot	Exit
Administrator Password Status		Not Installed		Set Administrator Password. The password must be 3 to 20 characters long.		
User Password Status		Not Installed				
Administrator Password						
► Secure Boot menu				→ ←:Select Screen ↑↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit		
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.						

Administrator Password Status (Not Installed)

This item shows administrator password installed or not.

User Password Status (Not Installed)

This item shows user password installed or not.

► Secure Boot menu

Scroll to this item and press <Enter> and view the following screen:

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.						
Main	Advanced	Chipset	Feature	Security	Boot	Exit
System Mode		User		Secure Boot can be enabled if		
Secure Boot		Active		1. System running in User mode with enrolled Platform Key(PK) 2. CSM function is disabled		
Secure Boot		[Enabled]				
Secure Boot Mode		[Standard]				
► Key Management				→ ←:Select Screen ↑↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit		
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.						

System Mode (User)

This item shows system of secure boot (can be setup or user).

Secure Boot (Active/Enabled)

This item shows the active state of secure boot.

Secure Boot Mode (Standard)

This item is used to select secure boot mode, when you select standard mode, secure boot policy is fixed; when you select custom mode, the image execution policy and secure boot key databases are changeable.

► Key Management

Scroll to this item and press <Enter> and view the following screen:

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.		
Main	Advanced	Chipset Feature Security Boot Exit
Default Key Provision [Enabled]		Install Factory default Secure Boot Keys when System is in Setup Mode.
Enroll All Factory Default Keys Save All Secure Boot Variables		
Platform Key (PK) INSTALLED		
▶ Delete PK		
▶ Set new PK		
Key Exchange Key (KEK) INSTALLED		
▶ Delete KEK		
▶ Set new KEK		
▶ Append KEK		
Authorized Signatures INSTALLED		
▶ Delete DB		→ ←: Select Screen
▶ Set new DB		↑ ↓: Select Item
▶ Append DB		Enter: Select
Forbidden Signatures INSTALLED		+/-: Change Opt.
▶ Delete DBX		F1: General Help
▶ Set new DBX		F2: Previous Values
▶ Append DBX		F3: Optimized Defaults
		F4: Save & Exit
		ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.		

Default Key Provision (Enabled)

Use this item to install default secure boot keys when system is in setup mode.

Enroll All Factory Default Keys

Use this item to force system to user mode--install all factory default keys (PK, KEK, DB, DBX). And the change takes effect after reboot.

Save All Secure Boot Variables

Use this item to store content of each secure boot variable (data formatted as EFI_SIGNATURE_LIST) to a file with matching name on selected file system's root folder.

Platform Key (PK) (INSTALLED)

This item shows the information of the platform key.

Delete PK/KEK/DB/DBX

These items are used to delete the variable.

Set new PK/KEK/DB/DBX

These items launch the file browser to set Efi Variable from the file. The file data must be formatted as Efi Variable with TimeBased Authenticated Header.

Key Exchange Key (KEK)/Authorized Signatures/Forbidden Signatures (INSTALLED)

These items show the Key Exchange key (KEK)/Authorized Signatures/Forbidden Signature installed or not.

Append KEK/DB/DBX

These items launch the file browser to append new signature database from the file. The file data must be formatted as Efi Variable with TimeBased Authenticated Header.

Boot Menu

This page enables you to set the keyboard NumLock state.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.						
Main	Advanced	Chipset	Feature	Security	Boot	Exit
Boot Configuration Fast Boot [Enabled] VGA Support [EFI Driver] USB Support [Partial Initial] Network Stack Driver Support [Disabled] Bootup NumLock State [On] Quiet Boot [Enabled] Set Boot Priority Boot Option #1 [USB Flash] Boot Option #2 [CD/DVD] Boot Option #3 [Hard Disk: Windows...] Boot Option #4 [USB CD/DVD] Boot Option #5 [USB Hard Disk] Boot Option #6 [Network]						Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.
► UEFI Hard Disk Drive Priorities						→ ←:Select Screen ↑↓:Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.						

Fast Boot (Enabled)

Use this item to enable or disable the fast boot.

VGA Support (EFI Driver)

If auto, only install legacy OpROM with legacy OS and Post logo will not be shown during post. EFI driver still be installed with EFI OS.

USB Support (Partial Initial)

If you select Disabled, all USB devices will not be available until after OS boot. If you select Partial Initial, specific USB port/device will not be available before OS boot. If you select Full Initial, all USB devices will be available in OS and POST.

Network Stack Driver Support (Disabled)

If disabled, Network stack driver will be skipped.

Bootup NumLock State (On)

This item enables you to select NumLock state.

Quiet Boot (Enabled)

Use this item to enable or disable the Quiet boot.

Set Boot Priority

This item enables you to set boot priority for all boot devices.

Boot Option #1 /2 /3 /4 /5 /6 /7

These items show the boot priorities.

UEFI Hard Disk Drive Priorities

This item enables you to specify the sequence of loading the operating system. Press <Enter> to see the submenu.

Exit Menu

This page enables you to exit system setup after saving or without saving the changes.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.	
Main Advanced Chipset Feature Security Boot Exit	
Save Changes and Exit Discard Changes and Exit Save Changes and Reset Discard Changes and Reset Save Options Save Changes Discard Changes Restore Defaults Save as User Defaults Restore User Defaults	Exit system setup after saving the changes. → ←:Select Screen ↑↓ :Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.	

Save Changes and Exit

This item enables you to exit system setup after saving the changes.

Discard Changes and Exit

This item enables you to exit system setup without saving any changes.

Save Changes and Reset

This item enables you to reset system setup after saving the changes.

Discard Changes and Reset

This item enables you to reset system setup without saving any changes.

Save Options

This item enables you to save the options that you have made.

Save Changes

This item enables you to save the changes that you have made.

Discard Changes

This item enables you to discard any changes that you have made.

Restore Defaults

This item enables you to restore the system defaults.

Save as User Defaults

This item enables you to save the changes that you have made as user defaults.

Restore User Defaults

This item enables you to restore the user defaults.

Updating the BIOS

You can download and install updated BIOS for this motherboard from the manufacturer's Website. New BIOS provides support for new peripherals, improvements in performance, or fixes for known bugs. Install new BIOS as follows:

- 1 If your motherboard has a BIOS protection jumper, change the setting to allow BIOS flashing.
- 2 If your motherboard has an item called Firmware Write Protect in Advanced BIOS features, disable it. (Firmware Write Protect prevents BIOS from being overwritten.)
- 3 Prepare a bootable device or create a bootable system disk. (Refer to Windows online help for information on creating a bootable system disk.)
- 4 Download the Flash Utility and new BIOS file from the manufacturer's Web site. Copy these files to the bootable device.
- 5 Turn off your computer and insert the bootable device in your computer. (You might need to run the Setup Utility and change the boot priority items on the Advanced BIOS Features Setup page, to force your computer to boot from the bootable device first.)
- 6 At the C:\ or A:\ prompt, type the Flash Utility program name and the file name of the new BIOS and then press <Enter>. Example: AFUDOS.EXE 040706.ROM
- 7 When the installation is complete, remove the bootable device from the computer and restart your computer. If your motherboard has a Flash BIOS jumper, reset the jumper to protect the newly installed BIOS from being overwritten. The computer will restart automatically.


This concludes Chapter 3. Refer to the next chapter for information on the software supplied with the motherboard.

Chapter 4

Using the Motherboard Software

Auto-installing under Windows 8/8.1


The auto-install DVD-ROM makes it easy for you to install the drivers and software. The support software DVD-ROM disc loads automatically under Windows 8/8.1. When you insert the DVD-ROM disc in the DVD-ROM drive, the auto-run feature will automatically bring up the installation screen. The screen has four buttons on it: **Setup**, **Utilities**, **Browse CD** and **Exit**.

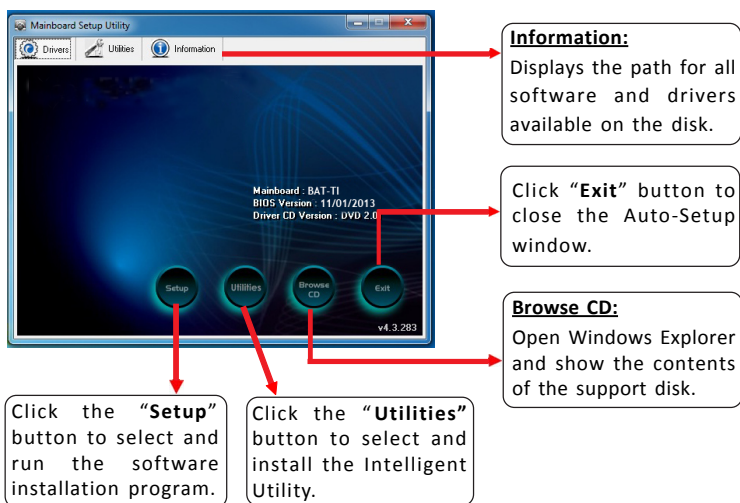

Running Setup

Follow these instructions to install device drivers and software for the motherboard:


1. Click **Setup**. The installation program begins:

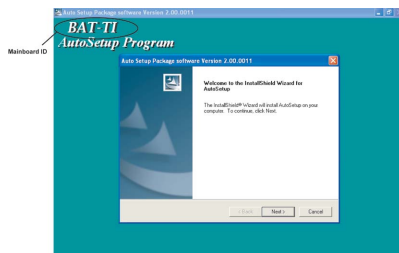


The following screens are examples only. The screens and driver lists will be different according to the motherboard you are installing.

The motherboard identification is located in the upper left-hand corner.

2. Click **Next**. The following screen appears:

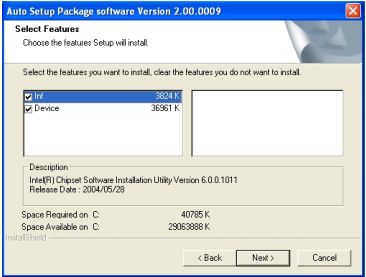

3. Check the box next to the items you want to install. The default options are recommended.
4. Click **Next** to run the Installation Wizard. An item installation screen appears:

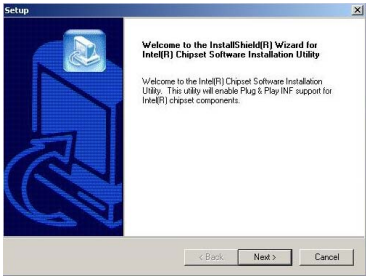

5. Follow the instructions on the screen to install the items.




Drivers and software are automatically installed in sequence. Follow the onscreen instructions, confirm commands and allow the computer to restart a few times to complete the installation.

Windows 8 will show the following screen after system restart, you must select "Desktop" in the bottom left to install the next driver.



Windows 8/8.1 will appear below UAC (User Account Control) message after the system restart. You must select “Yes” to install the next driver. Continue this process to complete the drivers installation.

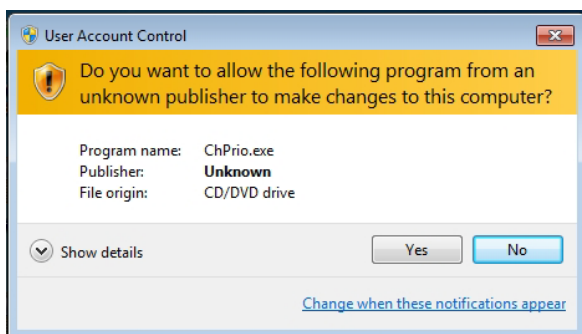

Manual Installation

If the auto-install DVD-ROM does not work on your system, you can still install drivers through the file manager for your OS (for example, Windows Explorer). Look for the chipset and motherboard model, and then browse to the directory and path to begin installing the drivers. Most drivers have a setup program (SETUP.EXE) that automatically detects your operating system before installation. Other drivers have the setup program located in the operating system subfolder.

If the driver you want to install does not have a setup program, browse to the operating system subfolder and locate the readme text file (README.TXT or README.DOC) for information on installing the driver or software for your operating system.

Memo

Chapter 5

Trouble Shooting

Start up problems during assembly

After assembling the PC for the first time you may experience some start up problems. Before calling for technical support or returning for warranty, this chapter may help to address some of the common questions using some basic troubleshooting tips. You may also log onto our website for more information.

a) System does not power up and the fans are not running.

1. Disassemble the PC to remove the VGA adaptor card, DDR memory, LAN, USB and other peripherals including keyboard and mouse. Leave only the motherboard, CPU with CPU cooler and power supply connected. Make sure the power cord is plugged into the wall socket & the switch on the Power Supply Unit (PSU) is turned " on " as well. Turn on again to see if the CPU and power supply fans are running.
2. Make sure to remove any unused screws or other metal objects such as screwdrivers from the inside PC case. This is to prevent damage from short circuit.
3. Check the CPU FAN connector is connected to the motherboard.
4. For Intel platforms check the pins on the CPU socket for damage or bent. A bent pin may cause failure to boot and sometimes permanent damage from short circuit.
5. Check the 12V power connector is connected to the motherboard.
6. Check that the 12V power & ATX connectors are fully inserted into the motherboard connectors. Make sure the latches of the cable and connector are locked into place.

b) Power is on, fans are running but there is no display

1. Make sure the monitor is turned on and the monitor cable is properly connected to the PC.
2. Check the VGA adapter card (if applicable) is inserted properly.
3. Listen for beep sounds. If you are using internal PC speaker make sure it is connected.
 - a. continuous 3 short beeps: memory not detected
 - b. 1 long beep and 8 short beeps: VGA not detected

c) The PC suddenly shuts down while booting up.

1. The CPU may experience overheating so it will shutdown to protect itself. Apply the thermal grease onto the CPU heatsink & ensure the CPU fan is well-connected with the CPU heatsink. Check if the CPU fan is working properly while the system is running.

2. From the BIOS setting, try to disable the Smartfan function to let the fan run at default speed. Doing a Load Optimised Default will also disable the Smartfan.

Start up problems after prolong use

After a prolong period of use your PC may experience start up problems again. This may be caused by breakdown of devices connected to the motherboard such as HDD, CPU fan, etc. The following tips may help to revive the PC or identify the cause of failure.


1. Clear the CMOS values using the CLR_CMOS jumper. Refer to CLR_CMOS jumper in Chapter 2 for Checking Jumper Settings in this user manual. When completed, follow up with a Load Optimised Default in the BIOS setup.
2. Check the CPU cooler fan for dust. Long term accumulation of dust will reduce its effectiveness to cool the processor. Clean the cooler or replace a new one if necessary.
3. Check that the 12V power & ATX connectors are fully inserted into the motherboard connectors. Make sure the latches of the cable and connector are locked into place.
4. Remove the hard drive, optical drive or DDR memory to determine which of these components may be at fault.
5. Check whether there is any bulked up electrolytic capacitor or abnormal component.

Maintenance and care tips

Your computer, like any electrical appliance, requires proper care and maintenance. Here are some basic PC care tips to help prolong the life of the motherboard and keep it running as best as it can.

1. Keep your computer in a well ventilated area. Leave some space between the PC and the wall for sufficient airflow.
2. Keep your computer in a cool dry place. Avoid dusty areas, direct sunlight and areas of high moisture content.
3. Routinely clean the CPU cooler fan to remove dust and hair.
4. In places of hot and humid weather you should turn on your computer once every other week to circulate the air and prevent damage from humidity.
5. Add more memory to your computer if possible. This not only speeds up the system but also reduces the loading of your hard drive to prolong its life span.
6. If possible, ensure the power cord has an earth ground pin directly from the wall outlet. This will reduce voltage fluctuation that may damage sensitive devices.

Basic Troubleshooting Flowchart

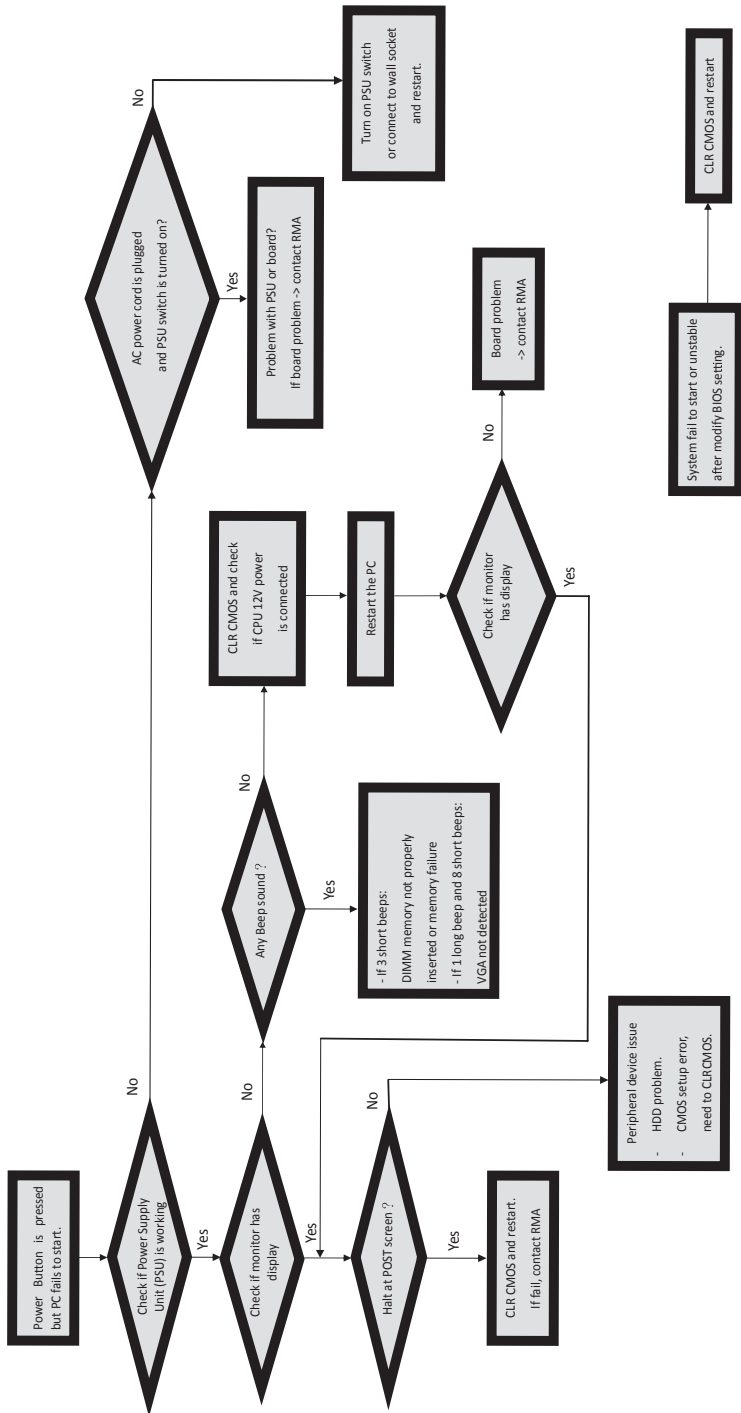

Memo