SP 2000 USER MANUAL

Product Data

SpacePak Series

Photoelectric diffuse proximity sensors

| Electrical Data | | |
|----------------------------|------------------|-------------------------------------|
| | DC | AC |
| Supply Voltage | 10 - 30 V dc | 12 - 240 V dc / 20 - 240 V ac |
| Voltage ripple | +/- 15% | - |
| Reverse polarity protected | Yes | - |
| Short circuit protected | Y | es |
| Current consumption | < 65 mA | < 70 mA |
| Output relay | - | 1 open / 1 close, 240 V ac / 3 A |
| Output transistor | 200 mA / 30 V dc | - |
| | | |

Environmental Data


| Temperature, operation | on | -20 to +55 °C |
|------------------------|----|---------------|
| Sealing class | | IP 67 |
| Approvals dc | ac | CE |
| | dc | CE |

Available Models

| | Model | Supply Voltage | Output | Time Delay | Sensing Range |
|-----------|------------------|--|--------------|--------------|------------------|
| | SPP 2603 T | 10-30 V dc | dc NPN / PNP | On/Off Delay | |
| | SPP 2603 | 10-30 V UC | | - | 0 - 3 m, |
| | SPP 2903 T | 12-240 V dc 20-240 V ac | Relay | On/Off Delay | adjustable* |
| Diffuse | SPP 2903 | | 20-240 V ac | neidy | - |
| proximity | SPP 2605 T | 10-30 V dc 12 – 240 V dc 20 – 240 V ac | NPN / PNP | On/Off Delay | |
| | SPP 2605 | | INFIN/FINF | - | 0 - 5 m, |
| | SPP 2905 T 12-24 | | Relay | On/Off Delay | adjustable* |
| | SPP 2905 | | neidy | - | |


* Note: Measured against matt white A4 paper.

Illustration

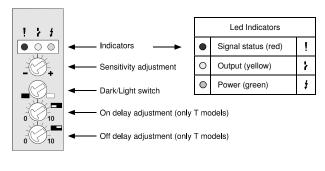

Connection



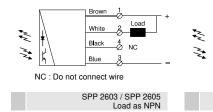

White ð NC RIa Blue NC : Do not connect wire

> SPP 2603 / SPP 2605 Load as PNP

| Ν | Brown | |
|---------------|---------|--------|
| | Grey | — N.C. |
| ₹ ↓ | White a | |
| _< t\ | Black | — с |
| <u></u> ₹ /\ | | - N.O. |
| ∽ [ʰ ∖ | Blue | -/~ |

SPP 2903 / SPP 2905 Relay output

| Cable | 4 pin, M12 plug | |
|-------|--|--|
| Brown | Pin 1 / Brown | |
| Blue | Pin 3 / Blue | |
| Grey | - | |
| Black | - | $\begin{pmatrix} \bullet 2 & 4 \bullet \\ 3 & 4 \bullet \end{pmatrix}$ |
| White | - | \bullet |
| Black | Pin 4 / Black | Ormanishin |
| White | Pin 2 / White | Sensor plug |
| | Brown Blue Grey Black White Black | Brown Pin 1 / Brown Blue Pin 3 / Blue Grey Black White - Black Pin 4 / Black |



Warning

This product is not a safety system and must not be used as such. It is not designed for personnel safety applications, and must not be used as a stand alone personnel safety system.

V 1.11 Part Number: 0666220633 February 2011 edition

Telco A/S reserves the right to make changes without prior notice

Mounting & Alignment

Mounting & Installation

EN

- Position the sensor pointing at the target object.
- Align by moving sensor horizontally and vertically until the output changes when the target object is present (refer to Output Logic table). 2
- Fasten the sensor securely using the enclosed mounting bracket and hardware. Avoid 3 acute angles on cable close to sensor.

Adjustments

Output Mode Selection

The output mode can be selected via an integral light/dark switch. Refer to Output Logic table for output mode reference.


| Light Operated (N.O.) | Enables the output to be active when there is an object present. |
|-----------------------|--|
| Dark Operated (N.C.) | Enables the output to be inactive when there is an object present. |

Turn switch to full clockwise position Turn switch to full counter

clockwise position

T models

Output Logic

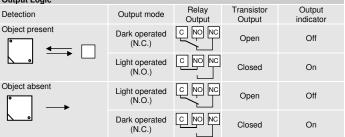

Sensitivity Adjustment

Proceed with the following steps:

- Select target object with smallest dimensions and most translucent surface. Place in correct position to the SPP
- Increase sensitivity slowly from minimum (full counter clockwise) until the yellow 2 output indicator changes. Increase a little further until the red Insufficient Signal indicator is off.
- Remove target object. If output changes, the sensitivity is adjusted correctly. If the output does not change then proceed to step 4. 3
- Place target object in correct position. Decrease the sensitivity by turning the gain 4 potentiometer counter clockwise until the red Insufficient Signal indicator is on.
- Remove target object. If the output changes the sensitivity is adjusted to suit the 5 target and target surroundings but the adjustment is very delicate and not advisable
- If the output does not change the target object is placed too close to surrounding 6 objects. Attempt to change position or to angle the sensor in relation to the surrounding objects. Then repeat procedure from step 1.

Time Delay Adjustment

The on delay enables output signal to only activate if an object in the detection area is present for the adjusted time period. (In Light operated mode)

The off delay enables output signal to remain activated for the adjusted time period.

| The time delay is adjustable between 0 - 10 sec. | | |
|--|---|--|
| On delay | Increase or decrease on delay by turning potentiometer clockwise or counter clockwise respectively. | |
| Off delay | Increase or decrease off delay by turning potentiometer clockwise or counter clockwise respectively. | |

