

# vtech®

Innovation Beyond Technology™



## User's manual

[www.vtechphones.com](http://www.vtechphones.com)

Models:  
CS6128-31/CS6129-2/CS6129-3/  
CS6129-4/CS6129-31/CS6129-32/  
CS6129-41/CS6129-52/CS6129-54

**DECT 6.0**

# **Congratulations**

on purchasing your new VTech product.

Before using this telephone, please read the

## **Important safety instructions**

on page 54 of this manual.

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech telephone. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich VTech product. For support, shopping, and everything new at VTech, visit our website at [www.vtechphones.com](http://www.vtechphones.com).

In Canada, please visit [www.vtechcanada.com](http://www.vtechcanada.com).



The ENERGY STAR® program ([www.energystar.gov](http://www.energystar.gov)) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

# Table of contents

|   |           |   |    |
|---|-----------|---|----|
| <b>Getting started</b>                  | <b>1</b>  | Call waiting                                    | 14 |
| Parts checklist                         | 1         | Find handset                                    | 14 |
| Telephone base and charger installation | 2         | Chain dialing                                   | 15 |
| Battery installation and charging       | 3         | Intercom  | 16 |
| Wall mounting                           | 4         | Conference call                                 | 17 |
| Handset layout                          | 5         | Transfer an external call                       | 18 |
| Telephone base layout                   | 6         | Switch between external and intercom call       | 20 |
| <b>Telephone settings</b>               | <b>7</b>  | Answer an incoming call during an intercom call | 21 |
| Ringer volume (handset)                 | 7         | Directory                                       | 22 |
| Ringer tone                             | 8         | Store a directory entry                         | 23 |
| Key tone                                | 9         | Character chart                                 | 24 |
| Language                                | 9         | Search the directory                            | 25 |
| Clear voicemail                         | 10        | Dial a directory entry                          | 25 |
| Home area code                          | 11        | Edit a directory entry                          | 26 |
| <b>Telephone operation</b>              | <b>12</b> | Delete from the directory                       | 27 |
| Make a call                             | 12        | About caller ID                                 | 28 |
| Answer a call                           | 12        | Call log  | 29 |
| End a call                              | 12        | Missed calls indicator                          | 30 |
| Speakerphone                            | 12        | Review the call log                             | 30 |
| Volume                                  | 13        | Make a call log entry ready to dial             | 31 |
| Mute                                    | 13        | Dial a call log entry                           | 31 |
| Ringer mute                             | 13        | Save a call log entry to the directory          | 32 |

## Table of contents

|  |           |   |           |
|--|-----------|---|-----------|
| Delete from the call log . . . . .         | 33        | Record and play memos . . . . .                 | 45        |
| Call log display screen messages . . . . . | 34        | Record a memo. . . . .                          | 45        |
| Redial list . . . . .                      | 35        | Memo playback. . . . .                          | 45        |
| Dial a redial entry . . . . .              | 35        | Call screening . . . . .                        | 46        |
| Delete from redial. . . . .                | 35        | Call intercept . . . . .                        | 46        |
| <b>Answering system . . . . .</b>          | <b>36</b> | Message window displays . . . . .               | 47        |
| Answering system and voicemail. . . . .    | 36        | Remote access . . . . .                         | 48        |
| Message capacity . . . . .                 | 37        | <b>Appendix. . . . .</b>                        | <b>49</b> |
| Activate the answering system . . . . .    | 37        | Handset display screen messages. . . . .        | 49        |
| Set the clock . . . . .                    | 38        | Handset and telephone base indicators . . . . . | 51        |
| Answering system set up . . . . .          | 39        | Battery . . . . .                               | 53        |
| Set number of rings. . . . .               | 39        | Important safety instructions . . . . .         | 54        |
| Set telephone base ringer . . . . .        | 40        | Troubleshooting. . . . .                        | 55        |
| Set remote access code . . . . .           | 40        | Operating range . . . . .                       | 65        |
| Set message alert tone. . . . .            | 41        | Maintenance . . . . .                           | 65        |
| Outgoing announcement . . . . .            | 42        | About cordless telephones . . . . .             | 66        |
| Record your own announcement. . . . .      | 42        | The RBRC® seal . . . . .                        | 66        |
| Play your announcement . . . . .           | 43        | Warranty . . . . .                              | 67        |
| Delete your announcement. . . . .          | 43        | FCC, ACTA and IC regulations . . . . .          | 69        |
| New message indication . . . . .           | 44        | Technical specifications . . . . .              | 71        |
| Message playback . . . . .                 | 44        | Index . . . . .                                 | 72        |
| Options during playback . . . . .          | 44        | Template for wall mounting studs. . . . .       | 74        |
| Delete all messages . . . . .              | 45        |   |           |

# Getting started


## Parts checklist

Your telephone contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.




### 1. Battery compartment covers

(2 for CS6129-2,  
3 for CS6128-31, CS6129-3,  
CS6129-31 and CS6129-32,  
4 for CS6129-4 and CS6129-41,  
5 for CS6129-52 and CS6129-54)

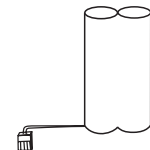

### 2. Batteries

(2 for CS6129-2,  
3 for CS6128-31, CS6129-3,  
CS6129-31 and CS6129-32,  
4 for CS6129-4 and CS6129-41,  
5 for CS6129-52 and CS6129-54)




### 3. Telephone base power adapter




### 4. Handsets

(2 for CS6129-2,  
3 for CS6128-31, CS6129-3,  
CS6129-31 and CS6129-32,  
4 for CS6129-4 and CS6129-41,  
5 for CS6129-52 and CS6129-54)

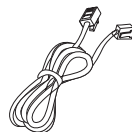


### 5. Telephone line cord



### 6. Charger and charger adapter


(1 for CS6129-2,  
2 for CS6128-31, CS6129-3, CS6129-31  
and CS6129-32,  
3 for CS6129-4 and CS6129-41,  
4 for CS6129-52 and CS6129-54)

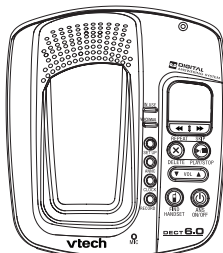

### 7. Telephone base



### 8. Quick start guide

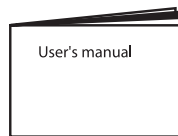

### 9. User's manual

## note

- To purchase replacement batteries or power adapters, visit our website at [www.vtechphones.com](http://www.vtechphones.com) or call 1 (800) 595-9511. In Canada, go to [www.vtechcanada.com](http://www.vtechcanada.com) or call 1 (800) 267-7377.


## note

- Use only the power adapters supplied with this product. To order a replacement, visit our website at [www.vtechphones.com](http://www.vtechphones.com) or call 1 (800) 595-9511. In Canada, go to [www.vtechcanada.com](http://www.vtechcanada.com) or call 1 (800) 267-7377.
- The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/ cabinet outlet.

## Getting started


### Telephone base and charger installation

Install the telephone base and charger as shown below. Make sure that the electrical outlet is not controlled by a wall switch. If you subscribe to Digital Subscriber Line (DSL) high-speed Internet service through your telephone line, you must install a DSL filter between the telephone base and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

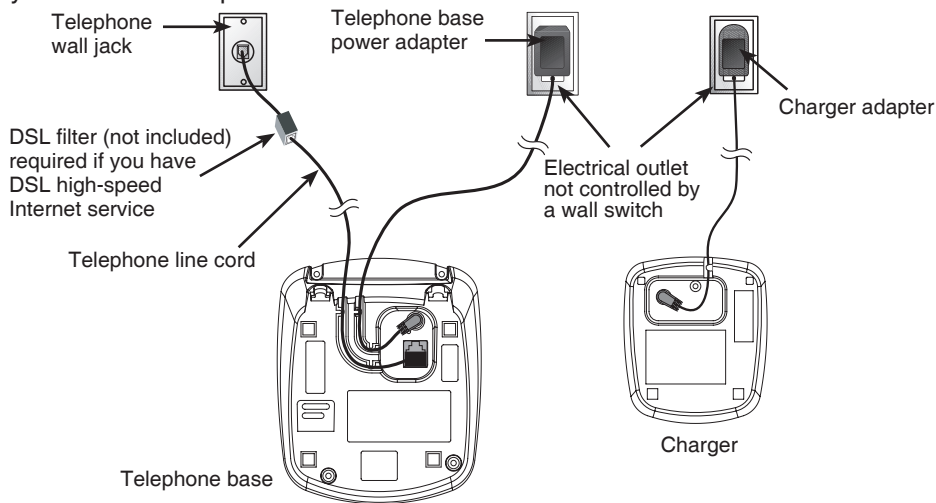



## Getting started


### Battery installation and charging


Install the battery as shown below. After installing the battery, you might be able to make and receive short calls. For best performance, charge the handset for at least 16 hours before use. When the battery power is low, the handset will beep, display **LOW BATTERY** and  will flash on the handset screen. Place the handset in the telephone base or charger to charge the battery when not in use. See the table on page 53 for battery operating times.

If the battery is depleted, it may take approximately four minutes to charge the handset before it can resume screen display. The screen will continue to display **LOW BATTERY** until the battery has been charged for approximately one hour.

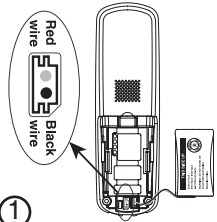- 

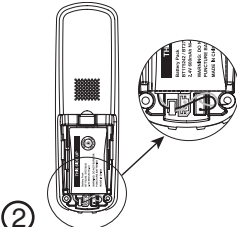1 Plug the battery securely into the plug inside the handset battery compartment, matching the color-coded label.
- 

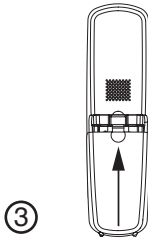2 Place the battery with the label **THIS SIDE UP** facing up and the wires inside the battery compartment. Route the wires through the slot at the bottom of the battery compartment.
- 

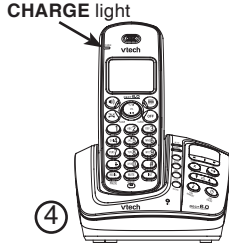3 Align the cover flat against the battery compartment, then slide it upwards until it clicks into place.
- 

4 Charge the handset by placing it in the telephone base or charger. The **CHARGE** light will be on when the handset is charging.

[www.vtechphones.com](http://www.vtechphones.com)

#### note

- If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.
- To purchase replacement batteries, visit our website at [www.vtechphones.com](http://www.vtechphones.com) or call 1 (800) 595-9511. In Canada, go to [www.vtechcanada.com](http://www.vtechcanada.com) or call 1 (800) 267-7377.

## note


- You can purchase mounting hardware from many hardware or home improvement stores.

## Getting started

### Wall mounting

Your telephone base is ready for desktop use. If wall mounting is desired, obtain appropriate hardware to be used as mounting studs, and follow the instructions below:

1. Fasten two mounting studs (not included) on the wall where you want to mount the telephone base. The width between the mounting studs should be 2.56in (65mm). Use the template on page 74 for drilling holes for the wall mounting studs.
2. Align the holes on the telephone base with the mounting studs on the wall.
3. Slide the telephone base down until it locks securely.
4. Bundle the telephone line cord and power adapter cord neatly with a twist tie.

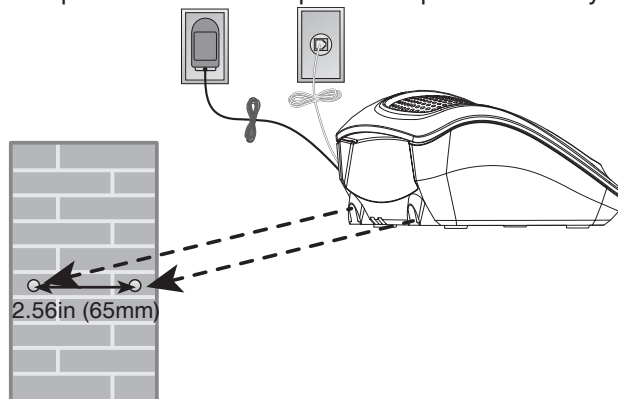



# Getting started

## Handset layout

### CHARGE light

- On when the handset is charging in the telephone base or charger.

### ▲ (Directory)

- Press to enter the directory when the telephone is not in use.
- While in the menu, press to scroll up.
- During a call, press to raise the listening volume.

### (Speakerphone)

- Press to activate the handset speakerphone.
- Press again to resume normal handset use.

### TALK/FLASH

- Press to make or answer a call.
- During a call, press to receive an incoming call when you receive a call waiting alert.

1


- While reviewing a call log entry, press repeatedly to add or remove a 1 in front of the telephone number before dialing or saving it in the directory.

### REDIAL/PAUSE

- Press to review the redial list.
- While dialing or entering numbers into the directory, press and hold to insert a dialing pause.

### INT (intercom)

- Press to initiate an intercom conversation or transfer a call.

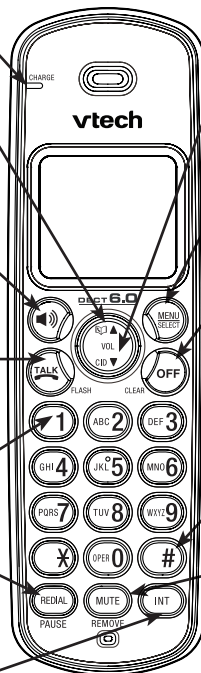

### CID ▼ (caller ID)

- Press to review the call log when the telephone is not in use.
- While in the menu, press to scroll down.
- During a call, press to lower the listening volume.

### MENU/SELECT

- Press to display the menu.
- While in the menu, press to select an item, or save an entry or setting.

### OFF/CLEAR

- During a call, press to hang up.
- While the handset is ringing, press to silence the ringer temporarily.
- Press and hold while the telephone is not in use to erase the missed calls indicator.
- During programming, press to exit without making changes.

#

- Press repeatedly to display other dialing options when reviewing a call log entry.

### MUTE/REMOVE

- While on a call, press to mute microphone.
- While reviewing the call log, press to delete an individual entry, or press and hold to delete the entire call log.
- Press to delete digits when predialing (preview numbers before dialing).

# Getting started

## Telephone base layout

### IN USE light

- Flashes when there is an incoming call or another telephone sharing the same line is in use.
- On when the handset is in use.

### VOICEMAIL light

- Flashes when you have new voicemail. Voicemail is offered by your telephone service provider.

### SET UP

- Press to enter the set up menu (pages 39-43).

### ANNC

- Press to enter announcement mode (pages 42-43).

### CLOCK


- Press to set the clock (page 38).

### RECORD

- Press to record a memo (page 45) or an announcement (page 42).

### FIND HANDSET

- Press to page the system handsets.

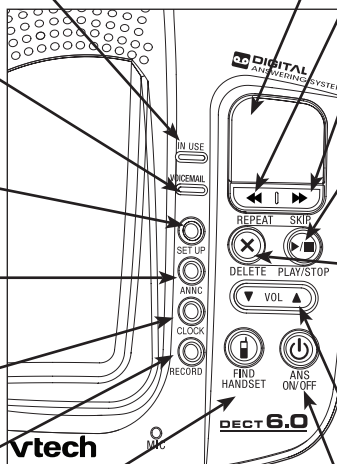

### Message window

- Displays the number of messages plus other answering system information (page 47).

### ◀/REPEAT

- Press to repeat a message or press twice to play previous message (page 44).

### ▶/SKIP

- Press to skip to the next message (page 44).

### ▶/PLAY/STOP

- Press to play messages (page 44).
- Press to stop message playback.

### X/DELETE

- Press to delete message currently playing (page 44).
- When the phone is not in use, press twice to delete all previously reviewed messages (page 45).

### ▼ VOL ▲

- Press to adjust the volume during playback (page 44).

### ANS ON/OFF

- Press to turn the answering system on or off (page 37).


## Telephone settings

### Ringer volume (handset)

You can change the ringer volume to a comfortable level, or turn the ringer off.

To adjust the ringer volume:

1. Press **MENU/SELECT** to display the menu when the handset is not in use.
2. Press **▲** or **▼** to select **>RINGER VOLUME**, then press **MENU/SELECT**.
3. Press **▲** or **▼** to adjust the volume. A sample of each ringer volume will play as you scroll through the choices.
4. Press **MENU/SELECT** to confirm your selection. You will hear a confirmation tone.




```
>RINGER VOLUME  
RINGER TONE
```



```
RINGER VOLUME  
■■■■■
```

#### note

- The ringer will be off if the volume is set to zero, and a ringer off icon  will be displayed.
- The telephone base ringer volume is set separately. See page 40 for details.
- When setting the ringer volume, make sure you do not block the speaker at the back of the handset with your fingers.

## note

- If the ringer volume is turned off, then you will not hear ringer tone samples.

## Telephone settings

### Ringer tone

This menu allows you to choose from different ringer tones.

To choose a ringer tone:

1. Press **MENU/SELECT** to display the menu when the handset is not in use.
2. Press **▲** or **▼** to select **>RINGER TONE**, then press **MENU/SELECT**.
3. Press **▲** or **▼** to select the desired ringer tone. A sample of each ringer tone will play as you scroll through the choices.
4. Press **MENU/SELECT** to confirm your selection. You will hear a confirmation tone.

>RINGER TONE  
KEY TONE

RINGER TONE  
1

## Telephone settings

### Key tone


The handset will beep when you press any handset key. You may turn the key tone on or off.

To change the setting:

1. Press **MENU/SELECT** to display the menu when the handset is not in use.
2. Press **▲** or **▼** to select **>KEY TONE**, then press **MENU/SELECT**.
3. Press **▲** or **▼** to choose **ON** or **OFF**.
4. Press **MENU/SELECT** to confirm your selection. You will hear a confirmation tone.



>KEY TONE  
LANGUAGE



KEY TONE  
ON

### Language


You can select **ENGLISH**, **FRANÇAIS** or **ESPAÑOL** to be used in all screen displays.

To change the setting:

1. Press **MENU/SELECT** to display the menu when the handset is not in use.
2. Press **▲** or **▼** to select **>LANGUAGE**, then press **MENU/SELECT**.
3. Press **▲** or **▼** to scroll through the choices.
4. Press **MENU/SELECT** to confirm your selection. You will hear a confirmation tone.



>LANGUAGE  
CLR VOICEMAIL




LANGUAGE  
ENGLISH

## note

- Your telephone service provider may alert you to new messages with a stutter (broken) dial tone. Contact your service provider for details.

## Telephone settings

### Clear voicemail

If you subscribe to voicemail service offered by your telephone service provider, **NEW VOICEMAIL** and  will appear on the handset, and the **VOICEMAIL** light on the telephone base will flash when you have new voicemail messages. Please contact your local telephone company for more information and assistance about using your voicemail service.

After you have listened to all new voicemail messages, the indicators on both the handset and telephone base will turn off automatically.

Use the clear voicemail feature when the telephone indicates that there is new voicemail but there is none (for example, when you have accessed your voicemail while away from home). Clearing the voicemail waiting indicator only turns off the indicators; it does not delete your voicemail message(s). As long as you have new voicemail messages, your local telephone company will continue to send the signal that will turn on the indicators.

To manually turn off these indicators:

1. Press **MENU/SELECT** to display the menu when the handset is not in use.
2. Press **▲** or **▼** to select **>CLR VOICEMAIL**, then press **MENU/SELECT**. The screen displays **TURN OFF INDICATOR?**
3. Press **MENU/SELECT** to confirm your selection. You will hear a confirmation tone.

>CLR VOICEMAIL  
HOME AREA CODE

TURN OFF  
INDICATOR?

## Telephone settings

### Home area code

If you dial your local calls using only seven digits (area code not required), you can program your home area code, following the steps below. By programming your home area code, when you receive a call within your local area, the telephone number will automatically be stored without the area code in the call log.

1. Press **MENU/SELECT** to display the menu when the handset is not in use.
2. Press **▲** or **▼** to select **>HOME AREA CODE**, then press **MENU/SELECT**. The stored home area code is displayed with the last digit flashing.
3. Use the dialing keys to enter the desired home area code.
  - Press **MUTE/REMOVE** to delete a digit.
  - Press and hold **MUTE/REMOVE** to delete the entire entry.
4. Press **MENU/SELECT** to confirm. You will hear a confirmation tone.



```
>HOME AREA CODE
  DIRECTORY
```



```
HOME AREA CODE
          800
```

### note

- If, in the future, your telephone service provider requires you to dial the area code when making a local call, delete the home area code you have already programmed by pressing **MUTE/REMOVE**. After the programmed home area code is deleted, **\_\_\_** will be displayed.

## note

- The screen displays the elapsed time as you talk (in hours, minutes and seconds).
- When predialing (preview numbers before dialing), press **MUTE/REMOVE** or **OFF/CLEAR** to backspace and delete; press and hold **REDIAL/PAUSE** to insert a dialing pause (p will be displayed).

## Telephone operation

### Make a call


1. Press **TALK/FLASH** or .

2. Dial the number.

**-OR-**

1. Dial the number.

2. Press **TALK/FLASH** or .

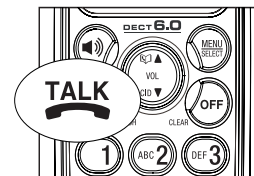


### Answer a call

- Press **TALK/FLASH**, , or any of the dialing keys (0-9, #, \*).

### End a call


- Press **OFF/CLEAR** or put the handset in the telephone base or charger.

### Speakerphone

During a call, press  to switch between speakerphone and normal handset use.

When the battery power is low:

- You cannot initiate a call with the speakerphone.
- You cannot switch a call from normal handset use to speakerphone mode.

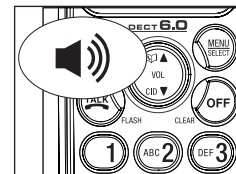



## Telephone operation

### Volume

During a call, press **VOL▲** or **VOL▼** to adjust the listening volume to a comfortable level.

### Mute





The mute function allows you to hear the other party while the other party cannot hear you.

1. During a call, press **MUTE/REMOVE** on the handset. **MUTED** will be temporarily displayed on the screen, along with the smaller **MUTE** icon.
2. Press **MUTE/REMOVE** again to resume the conversation. **MICROPHONE ON** will be temporarily displayed on the screen.

### Ringer mute

You can mute the ringer temporarily when the telephone is ringing.

- Press **OFF/CLEAR** or **MUTE/REMOVE** to temporarily silence the ringer. The next call will ring normally.

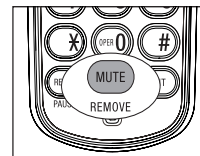


## Telephone operation


### Call waiting

If you subscribe to call waiting service from your telephone company, you will hear an alert tone if there is an incoming call while you're on another call. Press **TALK/FLASH** to answer the new incoming call. Press **TALK/FLASH** again to return to the original call.

### Find handset

This feature allows the telephone base to page all the system handsets.

1. Press **FIND HANDSET** on the telephone base. All handsets (not in use) will ring and the screens will display **\*\* PAGING \*\***.
2. Press **TALK/FLASH**,  or any dialing keys (0-9, #, \*) on any one of the system handsets; or press **FIND HANDSET** on the telephone base to end paging.

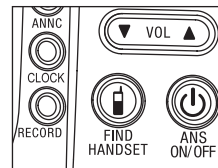

**\*\* PAGING \*\***

# Telephone operation

## Chain dialing

This feature allows you to initiate a dialing sequence from numbers stored in the directory, call log or redial list while you are on a call.

Chain dialing can be useful if you wish to access numbers other than phone numbers (such as bank account information or access codes) from the directory, call log or redial list.

To access a number in the directory while you are on a call:

1. Press **MENU/SELECT** twice to enter the directory menu.
2. Scroll by pressing **▲** or **▼** to find the desired entry.
3. Press **MENU/SELECT** to dial the desired number when it is displayed.

To access a number in the call log while you are on a call:

1. Press **MENU/SELECT** and then press **▼** to select **>CALL LOG**.
2. Press **MENU/SELECT** to confirm.
3. Scroll by pressing **▲** or **▼** to find the desired entry.
4. Press **MENU/SELECT** to dial the desired number when it is displayed.

To access the last number in the redial list while you are on a call:

- Press **REDIAL/PAUSE** to dial.
- Press **REDIAL/PAUSE** again within two seconds to cancel the chain dialing.

### note

- Only the most recent phone number stored in the redial memory can be accessed for chain dialing.

## note

- If the destination handset does not answer the intercom call within 100 seconds, is in the directory, call log, is on a call, or out of range, the originating handset screen will display **UNABLE TO CALL TRY AGAIN** and return to idle mode.

## Telephone operation

### Intercom

The intercom feature allows conversation between two system handsets.

#### For model CS6129-2

1. Press **INT** on the originating handset when it is not in use and its screen displays **CALLING OTHER HANDSET**.
2. The destination handset rings and its screen displays **OTHER HANDSET IS CALLING**.
3. To answer the intercom call, press **TALK/FLASH**, **INT** or any dialing keys (**0-9**, **#**, **\***) on the destination handset.
4. To end an intercom call, press **INT**, **OFF/CLEAR** or place the handset back in the telephone base or charger.

CALLING  
OTHER HANDSET

OTHER HANDSET  
IS CALLING

#### For models with three or more handsets

1. Press **INT** on the originating handset when the handset is not in use and its screen displays **INTERCOM TO:**
2. Use the dialing keys to select the destination handset.
3. The originating handset screen displays **CALLING HANDSET X**.
4. The destination handset rings and its screen displays **HANDSET X IS CALLING**.
5. To answer the intercom call, press **TALK/FLASH**, **INT** or any dialing keys (**0-9**, **#**, **\***) on the destination handset.
6. To end an intercom call, press **INT**, **OFF/CLEAR** or place the handset back in the telephone base or charger.


INTERCOM TO:

## Telephone operation


### Conference call

You can conference two system handsets on a call.


When one handset is on a call:

- Press **TALK/FLASH** or  on another handset to join the call.
- OR-**

#### For model CS6129-2

1. Press **INT** to initiate an intercom call. The screen displays **CALLING OTHER HANDSET**.
2. The destination handset rings and its screen displays **OTHER HANDSET IS CALLING**. Press **TALK/FLASH**, , **INT** or any dialing keys (**0-9**, **#**, **\***) on the destination handset to answer the intercom call.
3. After the destination handset has been answered, press and hold **INT** on the originating handset to let the destination handset join the call.

#### For models with three or more handsets

1. Press **INT** to initiate an intercom call. The screen displays **TRANSFER TO:**
2. Use the dialing keys to select the destination handset. The originating handset screen displays **CALLING HANDSET X**.
3. The destination handset rings and its screen displays **HANDSET X IS CALLING**. Press **TALK/FLASH**, , **INT** or any dialing keys (**0-9**, **#**, **\***) on the destination handset to answer the intercom call.
4. After the destination handset has been answered, press and hold **INT** on the originating handset to let the destination handset join the call.

## note

- If the destination handset does not pick up the intercom call, the originating handset can return to the external call by pressing **TALK/FLASH**, **OFF/CLEAR** or **INT**.
- If a call remains on hold for about 100 seconds, or if the destination handset is in the directory, call log, or out of range, the screen of the originating handset shows **UNABLE TO CALL TRY AGAIN** and reconnects to the external call automatically.

## Telephone operation

### Transfer an external call

You can transfer an external call from one handset to another system handset.

#### For model CS6129-2

1. During a call, press **INT** to put the call on hold at the originating handset. The screen displays **CALLING OTHER HANDSET**.
2. The destination handset rings and its screen displays **OTHER HANDSET IS CALLING**.
3. To answer the call at the destination handset, press **TALK/FLASH**, **INT** or any dialing keys (**0-9**, **#**, **\***) on the destination handset.
4. Now the party at the originating handset can have a conversation with the party at the destination handset. Both screens display **INTERCOM**.
5. Press **OFF/CLEAR** on the originating handset, or place it back in the telephone base or charger to transfer the external call to the destination handset. The originating handset displays **CALL TRANSFERED**.

CALLING  
OTHER HANDSET

OTHER HANDSET  
IS CALLING

INTERCOM

If you wish to cancel call transfer during intercom mode and reconnect to the external call:

- Press **TALK/FLASH** on the originating handset.
- OR-
- Press **OFF/CLEAR** or **INT** on the destination handset, or place it back in the telephone base or charger.

# Telephone operation

## For models with three or more handsets

1. During a call, press **INT** to put the call on hold at the originating handset. The screen displays **TRANSFER TO:**
2. Use the dialing keys to enter the destination handset number and the originating handset screen displays **CALLING HANDSET X.**
3. The destination handset rings and its screen displays **HANDSET X IS CALLING.**
4. To answer the call at the destination handset, press **TALK/FLASH**, **INT** or any dialing keys (**0-9, #, \***) on the destination handset.
5. Now the party at the originating handset can have a conversation with the party at the destination handset. Both screens display **INTERCOM.**
6. Press **OFF/CLEAR** on the originating handset, or place it back in the telephone base or charger to transfer the external call to the destination handset. The originating handset displays **CALL TRANSFERED.**

TRANSFER TO:

CALLING  
HANDSET X

HANDSET X  
IS CALLING

INTERCOM

If you wish to cancel call transfer during intercom mode and reconnect to the external call:

- Press **TALK/FLASH** on the originating handset.

**-OR-**

- Press **OFF/CLEAR** or **INT** on the destination handset, or place it back in the telephone base or charger.

## Telephone operation

### Switch between external and intercom call

If you are on an external call and you wish to intercom another system handset without disconnecting the external call:

#### For model CS6129-2

1. During a call, press **INT** to put the call on hold at the originating handset. The screen displays **CALLING OTHER HANDSET**.
2. The destination handset will ring and its screen will display **OTHER HANDSET IS CALLING**.
3. To answer the call at the destination handset, press **TALK/FLASH**, **INT** or any dialing keys (**0-9**, **#**, **\***) on the destination handset.
4. Now the party at the originating handset can have a conversation with the party at the destination handset. Both screens display **INTERCOM**.
5. Press **INT** repeatedly on the originating handset to alternate between the external (outside) call and the intercom call.

CALLING  
OTHER HANDSET

OTHER HANDSET  
IS CALLING


INTERCOM

OUTSIDE CALL



## Telephone operation

### For models with three or more handsets

1. During a call, press **INT** to put the call on hold at the originating handset. The screen displays **TRANSFER TO:**
2. Use the dialing keys to enter the destination handset number and the originating handset screen displays **CALLING HANDSET X**.
3. The destination handset will ring and its screen will display **HANDSET X IS CALLING**.
4. To answer the call at the destination handset, press **TALK/FLASH**, , **INT** or any dialing keys (**0-9**, **#**, **\***) on the destination handset.
5. Now the party at the originating handset can have a conversation with the party at the destination handset. Both screens display **INTERCOM**.
6. Press **INT** repeatedly on the originating handset to alternate between the external (outside) call and the intercom call.

### Answer an incoming call during an intercom call

During an intercom call, there will be an alert tone signaling an incoming call.

- To answer the incoming call, press **TALK/FLASH** and the intercom call will end automatically.
- To terminate the intercom call without answering the incoming call, press **OFF/CLEAR** on the handset.


## note

- Directory entries are shared by all system handsets. Any additions, deletions or edits made on one handset will affect the directory on all handsets.

## Telephone operation

### Directory

The directory can store up to 50 entries. Each entry may have up to 30 digits for the phone number and 15 characters for the name.

- The directory can be accessed when the handset is not in use by pressing  ▲ once or **MENU/SELECT** three times.
- The screen will display **DIRECTORY EMPTY** if there are no records in the directory.
- When the directory is full and you attempt to save an entry, the screen will display **LIST FULL**.
- If you attempt to save a number already stored in the directory, the screen will display **ALREADY SAVED**.
- If the telephone number in the directory exceeds 15 digits, < \* will be displayed in front of the telephone number. Press \* to move towards the end of the telephone number or press # to move towards the beginning of the telephone number.
- Only one handset can review the directory at a time. If a handset attempts to enter the directory while another handset is already in the directory, **NOT AVAILABLE AT THIS TIME** will be displayed.

DIRECTORY EMPTY

LIST FULL

ALREADY SAVED

ELIZABETH JONES  
< \* 180012345678

ELIZABETH JONES  
< \* 800123456 # >

ELIZABETH JONES  
123456789012 # >

## Telephone operation

### Store a directory entry

1. Press **MENU/SELECT** twice when the handset is not in use.
2. Press **▲** or **▼** to select **>STORE**, then press **MENU/SELECT**.  
The screen displays **ENTER NUMBER**.
3. Use the dialing keys to enter the number.
  - Press **MUTE/REMOVE** to backspace and erase a digit.
  - Press and hold **MUTE/REMOVE** to erase the entire entry.
  - Press **▼** to move the cursor to the left or **▲** to the right.
  - Press and hold **REDIAL/PAUSE** to insert a dialing pause (**p** will be displayed).
- OR -
- Copy a number from the redial list by pressing **REDIAL/PAUSE** and then **▲**, **▼** or **REDIAL/PAUSE** to scroll to the desired number. Press **MENU/SELECT** to copy the number.
4. Press **MENU/SELECT** to move on to the name. The screen displays **ENTER NAME**.
5. Use the dialing keys (see the **Character chart** on page 24) to enter the name.
  - Press **MUTE/REMOVE** to backspace and erase a character.
  - Press and hold **MUTE/REMOVE** to erase the entire entry.
  - Press **▼** to move the cursor to the left or **▲** to the right.
  - Press **#** to insert a space.
6. Press **MENU/SELECT** to confirm. You will hear a confirmation tone.

>DIRECTORY  
CALL LOG

>STORE  
REVIEW

ENTER NUMBER  
...

ENTER NAME  
...

## note

- When entering a name in the directory, the first letter of each word will be capitalized automatically.

## Telephone operation

### Character chart

Use the dial pad and the chart below to enter a name (up to 15 characters). Each press of a particular key causes the characters to be displayed in the following order:


| Number key | Characters by number of key presses |   |   |   |   |   |   |   |   |
|------------|-------------------------------------|---|---|---|---|---|---|---|---|
|            | 1                                   | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| 1          | 1                                   | # | ' | , | - | . | & |   |   |
| 2          | A                                   | B | C | 2 | a | b | c |   |   |
| 3          | D                                   | E | F | 3 | d | e | f |   |   |
| 4          | G                                   | H | I | 4 | g | h | i |   |   |
| 5          | J                                   | K | L | 5 | j | k | l |   |   |
| 6          | M                                   | N | O | 6 | m | n | o |   |   |
| 7          | P                                   | Q | R | S | 7 | p | q | r | s |
| 8          | T                                   | U | V | 8 | t | u | v |   |   |
| 9          | W                                   | X | Y | Z | 9 | w | x | y | z |
| 0          | 0                                   |   |   |   |   |   |   |   |   |
| *          | *                                   | ? | ! | / | ( | ) | @ |   |   |
| #          | space                               |   |   |   |   |   |   |   |   |

## Telephone operation


### Search the directory


Entries are sorted alphabetically.

To search the directory:




1. Press  **▲** once or **MENU/SELECT** three times to enter the directory.
2. Press **▲** or **▼** to scroll through the directory.

To start an alphabetical search:

1. Press  **▲** once or **MENU/SELECT** three times to enter the directory.
2. Use the dialing keys to enter the first letter associated with the name. For example, if you have name entries Jenny, Kristen and Linda in your directory, press **5** (JKL) once to find Jenny, twice to find Kristen, or three times to find Linda. If there is no name entry matching your search, the next closest matching entry in alphabetical order will be displayed. If necessary, use **▲** or **▼** to scroll to the desired entry.







### Dial a directory entry

1. Press  **▲** once or **MENU/SELECT** three times to enter the directory.
2. Press **▲** or **▼** to scroll to the desired entry, or use the alphabetical search to find it.
3. Press  **FLASH** or .


## Telephone operation

### Edit a directory entry

1. Press  **▲** once or **MENU/SELECT** three times to enter the directory.
2. Press **▲** or **▼** to scroll to the desired entry, or use the alphabetical search to find it.
3. Press **MENU/SELECT** to confirm your selection. The screen displays **EDIT NUMBER**.
4. Use the dialing keys to edit the number.
  - Press **MUTE/REMOVE** to backspace and erase a digit.
  - Press and hold **MUTE/REMOVE** to erase the entire entry.
  - Press **▼** to move the cursor to the left or **▲** to the right.
  - Press and hold **REDIAL/PAUSE** to insert a dialing pause (**p** will be displayed).
  - Copy a number from the redial list by pressing **REDIAL/PAUSE** and then **▲**, **▼** or **REDIAL/PAUSE** to scroll to the desired number. Press **MENU/SELECT** to copy the number.
5. Press **MENU/SELECT** to move on to the name. The screen displays **EDIT NAME**.
6. Use the dialing keys (see the **Character chart** on page 24) to edit the name.
  - Press **MUTE/REMOVE** to backspace and erase a character.
  - Press and hold **MUTE/REMOVE** to erase the entire entry.
  - Press **▼** to move the cursor to the left or **▲** to the right.
  - Press **#** to insert a space.
7. Press **MENU/SELECT** to save. You will hear a confirmation tone.

## Telephone operation

### Delete from the directory

1. Press  **▲** once or **MENU/SELECT** three times to enter the directory.
2. Press **▲** or **▼** to scroll to the desired entry, or use the alphabetical search to find it.
3. Press **MUTE/REMOVE** to remove the desired entry. You will hear a confirmation tone.

## Telephone operation

### About caller ID

The caller ID with call waiting feature in this telephone lets you see the name and telephone number of the caller before answering the call, even when you're on a call. These features require services provided by your local telephone company.

Contact your telephone company if:

- you have both caller ID and call waiting, but as separate services (you may need combined service);
- you have only caller ID service, or only call waiting service; or
- you do not subscribe to any caller ID or call waiting services, but wish to order them.

You can use this telephone with regular caller ID service, and you can use its other features without subscribing to either caller ID or combined caller ID with call waiting service. There may be fees for these services, and these services may not be available in all areas.

The caller ID features will work only if both you and the caller are in areas offering caller ID service, and if both telephone companies use compatible equipment.



# Telephone operation

## Call log

If you subscribe to caller ID service, information about each caller will be displayed after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the call log.

- The call log can store up to 50 entries. Each entry may have up to 24 digits for the phone number and 15 characters for the name. If the phone number has more than 24 digits, it will not be saved or displayed in the call log. If the phone number has more than 15 but fewer than 24 digits, only the last 15 digits will be shown. If the name is longer than 15 characters, only the first 15 characters will be shown and saved in the call log.
- You can review, redial, and copy an entry into the directory.
- Entries are displayed in reverse chronological order, i.e. from the most recent entry to the earliest entry.
- When the call log is full, the earliest entry is deleted to make room for new incoming call information.
- **XX MISSED CALL(S)** will be displayed if there are new call log entries (including missed and unreviewed calls).
- **CALL LOG EMPTY** will be displayed if there are no records in the call log.
- Only one handset can review the call log at a time. If a handset attempts to enter the call log while another handset is already in it, **NOT AVAILABLE AT THIS TIME** will be displayed.

HANDSET X  
XX MISSED CALLS

CALL LOG EMPTY

### note

- Due to regional service differences, the caller ID information may not be available for every incoming call. In addition, the callers may intentionally block their names and/or telephone numbers.
- For call log entries with numbers between 16 and 23 digits, in order to view the entire number you must save the entry to the directory. For information on saving call log entries to the directory, see page 32.

## Telephone operation


### Missed calls indicator

When the handset is not in use and there are unreviewed calls in the call log, its screen will display **XX MISSED CALL(S)**.


Each time a call log entry marked **NEW** is reviewed, the number of missed calls decreases by one.

When all the missed calls have been reviewed, the missed calls indicator will no longer display.

If you do not want to review the missed calls one by one, press and hold **OFF/CLEAR** to erase the missed calls indicator. All the entries will be considered old and kept in the call log.



HANDSET X  
XX MISSED CALLS



VTECH  
595-9511  
3:45 PM 1/02 <sup>NEW</sup>

### Review the call log

1. Press **CID ▼** when the telephone is not in use.

2. Press **▲** or **▼** to browse through the call log.

**-OR-**

1. Press **MENU/SELECT** when the telephone is not in use.

2. Press **▲** or **▼** to select **>CALL LOG**.


3. Press **MENU/SELECT**.

4. Press **▲** or **▼** to browse through the call log.

- The name (if available), telephone number, date and time of all incoming calls are displayed on the screen.
- You will hear a double beep when the list reaches the beginning or end of the call log.



VTECH  
595-9511  
3:45 PM 1/02



>CALL LOG  
RINGER VOLUME

## Telephone operation

### Make a call log entry ready to dial

Although the call log entries received have 10 digits (the area code plus the seven-digit number), in some areas, you may need to dial only the seven digits, or a 1 plus the seven digits, or a 1 plus the area code plus the seven digits. You can change the number of digits that you dial from or store in the call log.

While reviewing the call log, press **#** repeatedly to display different dialing options for local and long distance numbers before dialing or saving the telephone number in the directory. See the example on the right.

You may also press **1** repeatedly to add or remove a **1** in front of the telephone number before dialing or saving it in the directory. See the examples on the right.

When the number displayed is in the correct format for dialing, press **TALK/FLASH** or **⏏** to call the number.

```
800-595-9511
1-800-595-9511
595-9511
1-595-9511
```

```
595-9511
1-595-9511
```

```
800-595-9511
1-800-595-9511
```

### Dial a call log entry

1. When in the call log, press **▲** or **▼** to scroll to the desired entry.
2. Press **TALK/FLASH** or **⏏** to dial the entry.

## note

- See page 26 about editing names and numbers.

## Telephone operation

### Save a call log entry to the directory

1. When in the call log, press ▲ or ▼ to scroll to the desired entry.
2. Press **MENU/SELECT**.
  - You can edit the phone number, if necessary. Make sure the number is in the correct dialing format for your area. Press **MENU/SELECT** when done.
  - Edit the name, if necessary. Press **MENU/SELECT** when done.
3. Successful programming is indicated by **SAVED** on the handset display along with a confirmation tone.
  - If the entry is already saved in the directory, the screen displays **ALREADY SAVED**.
  - If there is no caller ID information, the screen displays **UNABLE TO SAVE**.

SAVED

ALREADY SAVED

UNABLE TO SAVE

## Telephone operation

### Delete from the call log

To delete one entry:

1. When in the call log, press ▲ or ▼ to scroll to the desired entry.
2. Press **MUTE/REMOVE** to delete the selected entry. You will hear a confirmation tone.

To delete all entries:

1. When in the call log, press and hold **MUTE/REMOVE** to delete the entire call log. The screen displays **DELETE ALL CALLS?**
2. Press **MENU/SELECT** to confirm. You will hear a confirmation tone. If you change your mind, press **OFF/CLEAR** to cancel the deletion and return to the call log.



DELETE ALL  
CALLS?

## Telephone operation

### Call log display screen messages


| Displays:   | When:  |
|---|--|
| PRIVATE NAME  | The caller is blocking the name information.             |
| PRIVATE NUMBER  | The caller is blocking the telephone number information. |
| PRIVATE CALLER  | The caller is blocking the name and number information.  |
| UNKNOWN NAME  | This caller's name is unavailable.                       |
| UNKNOWN NUMBER  | This caller's number is unavailable.                     |
| UNKNOWN CALLER  | No information is available about this caller.           |
| LONG DISTANCE<br>OR<br>L (before the caller's number) | It is a long distance call.                              |

# Telephone operation

## Redial list

The telephone stores the five most recently dialed numbers on the redial list.

- When there are already five entries on the redial list, the earliest entry will be deleted to make room for the latest entry.
- Entries are displayed in reverse chronological order, i.e. from the latest entry to the earliest entry.

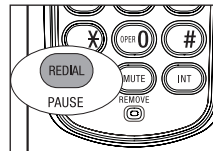

The redial list can be accessed by pressing **REDIAL/PAUSE** when the handset is not in use.

## Dial a redial entry

1. Press **REDIAL/PAUSE**, then ▲, ▼ or **REDIAL/PAUSE** to scroll to the desired number. You will hear a double beep when you reach the beginning or end of the redial list.
2. Press **TALK/FLASH** or **FLASH** to dial the number.

## Delete from redial

1. Press **REDIAL/PAUSE**, then ▲, ▼ or **REDIAL/PAUSE** to scroll to the desired number.
2. Press **MUTE/REMOVE** to delete the selected entry. You will hear a confirmation tone.

## Answering system

### Answering system and voicemail

Your telephone has both a digital answering system and voicemail indication. Voicemail is offered by your telephone service provider (fees may apply). Your telephone's answering system and voicemail indication are independent features, and each alerts you to new messages differently. For more information on the voicemail indicators, see page 10. To listen to your voicemail, you typically dial an access number provided by your telephone company, followed by a security code or PIN. To listen to messages recorded on your digital answering system, press ►/■/PLAY/STOP button on the telephone base.

If you subscribe to caller ID/call waiting service through your telephone service provider, you can use your telephone answering system and voicemail together. Set your answering system to answer calls at least two rings earlier than your voicemail is set to answer. For example, set your voicemail to answer calls after six rings and set your answering system to answer after four rings. Some voicemail providers may program the delay before answering calls in seconds instead of rings; in this case, allow six seconds per ring when determining the appropriate setting. By doing this, if you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message.




# Answering system

## Message capacity

The answering system can record and store up to 99 messages. A message can be up to four minutes in length. The total storage capacity for the announcement, messages and memos is approximately 14 minutes. The actual recording time depends on individual message characteristics. Messages will remain available for replay until they are deleted.

## Activate the answering system

The answering system must be turned on to answer and record messages. Press **ANS ON/OFF** to turn the answering system on or off. If the answering system is turned on, it will announce *"Calls will be answered,"* and the **ANS ON/OFF** light will be on. If the answering system is turned off, it will announce *"Calls will not be answered,"* and the **ANS ON/OFF** light will be off.

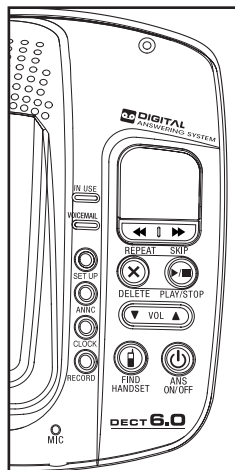

### note

- Answering system operation is suspended while a system handset is in use.

## note

- If you have caller ID service, the clock will be set automatically with incoming calls, but you will need to make sure the year is correct. See **Set the clock** for instructions on how to set the year, time and day manually.
- Press and hold **►/SKIP** or **◄/REPEAT** while setting the minutes or year to advance or decrease by increments of 10.

## Answering system

### Set the clock

Prior to playing a message, the answering system announces when it was received. Before using the answering system, set the year, time and day, so that messages are dated correctly. If the clock is not set before new messages are recorded, the system will announce *"Time and day not set,"* before each message is played to remind you to set the clock.

1. Press **CLOCK**. The system announces the clock setting (e.g. year, time and day), then announces: *"To set the clock, press **CLOCK**."*
2. Press **CLOCK**. The system announces the current year.
3. Press **►/SKIP** or **◄/REPEAT** until the system announces the correct year, then press **CLOCK**. The system announces the current hour.
4. Press **►/SKIP** or **◄/REPEAT** until the system announces the correct hour, then press **CLOCK**. The system announces the current minute.
5. Press **►/SKIP** or **◄/REPEAT** until the system announces the correct minute, then press **CLOCK**. The system announces the current day.
6. Press **►/SKIP** or **◄/REPEAT** until the system announces the correct day, then press **CLOCK**. After a confirmation tone, the system announces the new clock setting and exits programming mode.

# Answering system

## Answering system set up

The answering system uses voice prompts to guide you through feature set up. Press ►/■/PLAY/STOP anytime to save and exit the set up menu.

## Set number of rings

This feature allows you to select the number of rings before the answering system answers. You can choose from two, four or six rings or toll saver. With toll saver selected, the answering system answers after two rings when you have new messages, and after four rings when you have no new messages.

To set the number of rings:

1. Press **SET UP** when the phone is not in use. The system announces the current number of rings setting.
2. Press ►/SKIP or ◀/REPEAT until the system announces the desired setting, then press **SET UP** to save and go to the next setting, or press ►/■/PLAY/STOP to save and exit set up mode.

If you subscribe to caller ID/call waiting and voicemail service through your telephone service provider, you can use your telephone answering system and voicemail together. Set your answering system to answer calls at least two rings earlier than your voicemail is set to answer. For example, set your voicemail to answer calls after six rings and set your answering system to answer after four rings. Some voicemail providers may program the delay before answering calls in seconds instead of rings; in this case, allow six seconds per ring when determining the appropriate setting. By doing this, if you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message.

## note

- The handset ringer volume is set separately. See page 7 for details.

## Answering system

### Set telephone base ringer

This feature allows you to select the telephone base ringer volume level. You can choose from **HI** (high), **OF** (off) or **LO** (low).

1. Press **SET UP** when the phone is not in use, until the system announces the telephone base ringer setting.
2. Press **►/SKIP** or **◄/REPEAT** until the system announces the desired telephone base ringer volume level, then press **SET UP** to save and go to the next setting, or press **►/PLAY/STOP** to save and exit set up mode.

### Set remote access code

A two-digit security code is required to access the answering system remotely from any touch tone telephone. The preset code is **19**. You can set the code from **10** to **99**.

To set the remote access code:

1. Press **SET UP** when the phone is not in use, until the system announces the remote access code setting.
2. Press **►/SKIP** or **◄/REPEAT** to change the remote access code by one, or press and hold **►/SKIP** or **◄/REPEAT** to advance or decrease by increments of 10. Press **SET UP** to save and go to the next setting, or press **►/PLAY/STOP** to save and exit set up mode.

# Answering system

## Set message alert tone

This feature programs the system to beep every 10 seconds to alert you of new messages. The tone will stop when all new messages have been reviewed.

To set the message alert tone:

1. Press **SET UP** when the phone is not in use, until the system announces the message alert tone setting.
2. Press **►/SKIP** or **◄/REPEAT** to select on or off, then press **SET UP** to save and go to the next setting, or press **►/PLAY/STOP** to save and exit set up mode.

### note

- The answering system must be turned on for the message alert tone to function.

## note

- Your announcement can be up to 90 seconds in length.
- Announcements shorter than two seconds will not be recorded.

## Answering system

### Outgoing announcement

The outgoing announcement is the greeting callers hear when calls are answered by the answering system.

The telephone is preset with a greeting that answers calls with *"Hello, please leave a message after the tone."* You can use this preset announcement, or replace it with your own. While in the **ANNC** menu, press **ANNC** again to exit at anytime.

### Record your own announcement

1. Press **ANNC** when the phone is not in use, and the system will announce *"Announcement. Press **PLAY** or press **RECORD**."*
2. Press **RECORD** and the system announces, *"Record after the tone. Press **STOP** when you are done."*
3. After the tone, speak towards the microphone at the bottom front of the telephone base from about nine inches away.
4. Press **▶/■/PLAY/STOP** when finished.
5. The answering system will automatically playback the newly recorded announcement. Press **▶/■/PLAY/STOP** to stop the playback at anytime.
6. Press **▶/■/PLAY/STOP** again to replay the recorded announcement. Press **RECORD** to record again (follow steps 2 through 4) if desired. Press **ANNC** to exit programming mode.

## Answering system

### Play your announcement

1. Press **ANNC** when the phone is not in use, and the system will announce *"Announcement. Press **PLAY** or press **RECORD**."*
2. Press **▶/■/PLAY/STOP** to play. You can press **▶/■/PLAY/STOP** again to stop the playback.

### Delete your announcement

1. Press **ANNC** when the phone is not in use, and the system will announce *"Announcement. Press **PLAY** or press **RECORD**."*
2. Press **X/DELETE** and the system will announce *"Announcement deleted."*

#### note

- When your announcement is deleted, calls will be answered with the preset announcement.

## note

- If the system has less than five minutes of recording time left, the remaining time will be announced.
- If **F** and number of messages are flashing in the message window, the memory is full. You will have to delete some messages before new ones can be recorded.
- Only old messages can be deleted. Messages can only be deleted after they are played.

## Answering system

### New message indication

The message display counter will flash when there are new answering system messages.

If the new message alert tone is turned on, the telephone base will beep every 10 seconds when there are unreviewed messages.

### Message playback

1. Press **▶/■/PLAY/STOP** to listen to messages.
2. Press **▶/■/PLAY/STOP** again to stop playback.

If you have new messages, you will hear only the new messages (oldest first). If there are no new messages, the system will play back all messages (oldest first).

When playback begins, the total number of messages is announced, followed by the day and time of the first message to be played.

### Options during playback

- Press **▼ VOL ▲** to adjust the speaker volume.
- Press **▶/■/SKIP** to skip to the next message.
- Press **◀/REPEAT** to repeat the message currently playing. Press **◀/REPEAT** twice to listen to the previous message.
- Press **X/DELETE** to delete the current message. The system will advance to the next message.



## Answering system

### Delete all messages

Press **X/DELETE** when the phone is not in use. The system will announce *"To delete all old messages, press **DELETE** again."* Press **X/DELETE** again. All previously heard messages will be erased and the system will announce *"All old messages deleted."*

### Record and play memos

Memos are your own recorded messages used as reminders for yourself or others using the same answering system. They are saved, played back and deleted in the same way as incoming messages.

### Record a memo

1. Press **RECORD** when the phone is not in use. The system announces, *"Record after the tone. Press **STOP** when you are done."*
2. After the tone, speak towards the microphone at the bottom front of the telephone base from about nine inches away.
3. Press **▶/■/PLAY/STOP** when finished recording. The system will announce *"Recorded."*

### Memo playback

Press **▶/■/PLAY/STOP** when the phone is not in use. See **Options during playback** on page 44 for other options.

#### note


- "Memory is full," will be announced if you press **RECORD** when the memory is full.
- Each memo can be up to four minutes in length.
- Memos shorter than one second will not be recorded.

## Answering system

### Call screening

You can listen at the telephone base to a caller leaving a message. However, if you want to silence the telephone base when messages are being recorded, set the telephone base volume to its lowest level (1). Remember to raise the volume in order to hear your messages during playback.

### Call intercept

If you want to answer a call while a message is being recorded, press /FLASH on the handset.

# Answering system

## Message window displays

| Window displays:                  | Descriptions:  |
|-----------------------------------|--|
| <b>0</b>                          | No messages.   |
| <b>1-99</b>                       | Total number of old message(s) recorded.   |
| <b>0-99</b> (flashing)            | Total number of new and old message(s) recorded.<br>The telephone base may have lost and regained power.<br>The clock needs to be set. |
| <b>1-99 &amp; F</b> (alternating) | Memory is full with total number of messages recorded.   |
| <b>1-99</b> (counting)            | Elapsed time while recording memo or announcement (up to 90 seconds).  |
| <b>99</b> (flashing)              | Recording time exceeds 99 seconds.   |
| <b>1-99</b> (flashing)            | Current message number during new message playback.  |
| <b>1-99</b>                       | Current message number during old message playback.  |
| <b>1-8</b>                        | Current volume level while adjusting.  |
| <b>10-99</b>                      | Current remote access code while setting.  |
| <b>02, 04, 06, tS</b>             | Current number of rings before answering while setting.  |
| <b>--</b>                         | System is answering a call, or the time and date are being set, or being accessed remotely.  |
| <b>--</b> (flashing)              | System is being programmed or initialized.   |
| <b>HI, LO or OF</b>               | The telephone base ringer level while in set up mode.  |
| <b>On or OF</b>                   | The message alert tone is turned on or off.  |

### note

- If the memory is full, the system will answer after 10 rings and announce, "Memory is full. Enter the remote access code."

## note

- If no key is pressed after entering remote access, new messages will be played automatically. If there are no new messages, all old messages will be played automatically.
- Once the new messages have been played, the system will announce the help menu options. If no key is pressed within 20 seconds, the remote access call is automatically disconnected.
- When the answering system is turned off, the telephone will answer after 10 rings, and announce *"Please enter your remote access code."*

## Answering system

### Remote access

A two-digit security code is required to access the system remotely from any touch tone telephone. The preset code is **19**; see page 40 to change it.

1. Dial your telephone number from any touch tone telephone.
2. When the system answers and begins playing your announcement, enter the two-digit security code. If you have new messages, the system will play them (new messages first) automatically.
3. You may also enter one of the following remote commands.

| Command | Function                                      |
|---------|---|
| 1       | Play all messages.                            |
| 2       | Play only new messages.                       |
| 3       | Delete the current message (during playback). |
| 33      | Delete all messages.                          |
| 4       | Repeat the current message (during playback). |
| 5       | Stop.   |
| *5      | Hear a list of remote commands.               |
| 6       | Skip to the next message (during playback).   |
| *7      | Record a new announcement.                    |
| 8       | End the call.                                 |
| 0       | Turn the answering system on or off.          |

4. Hang up or press **8** to end the call.

# Appendix

## Handset display screen messages

|  |  |
|--|--|
| ALREADY SAVED  | The telephone number you have entered is already stored in the directory.                  |
| CALL LOG EMPTY   | There are no call log entries.   |
| CALLING HANDSET X<br>(for models with three or more handsets)<br>CALLING OTHER HANDSET<br>(for CS6129-2)       | Calling another handset.   |
| CONNECTING...  | The cordless handset is searching for the telephone base.                                  |
| CHARGING   | The handset with low battery has been placed in the telephone base or charger to recharge. |
| DIRECTORY EMPTY  | There are no directory entries.  |
| ENDED  | You have just ended a call.  |
| HANDSET X IS CALLING<br>(for models with three or more handsets)<br>OTHER HANDSET IS CALLING<br>(for CS6129-2) | Another system handset is calling.   |
| INCOMING CALL  | There is an incoming call.   |
| INTERCOM   | The handset is on an intercom call.  |
| INTERCOM ENDED   | You have just ended an intercom call.  |
| LINE IN USE  | A system handset or another telephone on the same line is in use.                          |

# Appendix

## Handset display screen messages

|                               |   |
|-------------------------------|---|
| LIST FULL                     | The directory is full.  |
| LOW BATTERY                   | The battery needs to be recharged.  |
| MICROPHONE ON                 | <b>MUTE</b> has been turned off and the person on the other end can hear you.   |
| MUTED                         | You have turned off the handset microphone. The other party cannot hear you but you can hear the other party.   |
| NEW VOICEMAIL                 | There are new voicemail messages from your telephone service provider.  |
| NO LINE                       | There is no telephone line connected.   |
| NO SIGNAL, CALL ENDED         | Communication between handset and telephone base is lost during a call.   |
| NOT AVAILABLE<br>AT THIS TIME | One handset is already viewing the call log or directory and another handset attempts to review it.   |
| OUTSIDE CALL                  | Connected to the external call during call transfer.  |
| **PAGING**                    | The cordless handset locator has been activated.  |
| PHONE                         | The handset is in use.  |
| PLACE IN CHARGER              | The battery is very low. The handset should be placed in the telephone base or charger for recharging.  |
| RINGER MUTE                   | The ringer is muted temporarily during an incoming call.  |
| SAVED                         | Your operation has been saved.  |
| SPEAKER                       | The handset speakerphone is in use.   |
| UNABLE TO CALL<br>TRY AGAIN   | You have attempted to make an intercom call, but the handset you are calling is in the directory, in the call log, out of range or on an external call. |


## Appendix

### Handset display screen messages

|                 |  |
|-----------------|--|
| UNABLE TO SAVE  | You are attempting to save a caller ID entry with no name or number. |
| XX MISSED CALLS | There are unreviewed calls in your call log.                         |

### Handset and telephone base indicators

#### Handset lights

|  |  |
|--|--|
|  | <ul style="list-style-type: none"><li>• On when the handset speakerphone is in use.</li></ul>                              |
| CHARGE   | <ul style="list-style-type: none"><li>• On when the handset is in the telephone base or charger and is charging.</li></ul> |





#### Telephone base lights

|            |   |
|------------|---|
| IN USE     | <ul style="list-style-type: none"><li>• Flashes when there is an incoming call or another telephone sharing the same line is in use.</li><li>• On when the handset is in use.</li></ul> |
| VOICEMAIL  | <ul style="list-style-type: none"><li>• Flashes when you have new voicemail. Voicemail is offered by your telephone service provider.</li></ul>   |
| ANS ON/OFF | <ul style="list-style-type: none"><li>• On when the answering system is on.</li></ul>   |

## Appendix

### Handset and telephone base indicators

#### Handset icons

|  |  |
|--|--|
| <b>MUTE</b>  | <ul style="list-style-type: none"><li>• Microphone is muted.</li></ul>   |
|                             | <ul style="list-style-type: none"><li>• Ringer off.</li></ul>  |
| <b>NEW</b>   | <ul style="list-style-type: none"><li>• New call log entries.</li></ul>  |
| NEW VOICEMAIL<br>           | <ul style="list-style-type: none"><li>• New voicemail received from the telephone service provider.</li></ul>  |
| SPEAKER<br>                 | <ul style="list-style-type: none"><li>• In speakerphone mode.</li></ul>  |
|  <b>(Battery indicator)</b> | <ul style="list-style-type: none"><li>• Cycles (low, medium, and full) when the handset battery is charging.</li><li>• Flashes when the battery is low and needs charging.</li><li>• Displays solid when the battery is fully charged.</li></ul> |



# Appendix

## Battery

It takes up to 16 hours for the battery to be fully charged. When it is fully charged, you can expect the following performance:

| Operation                             | Operating time              |
|---------------------------------------|-----------------------------|
| While in handset use (talking*)       | Up to nine hours            |
| While in speakerphone mode (talking*) | Up to two hours             |
| While not in use (standby**)          | Up to seven and a half days |

\*Operating times are approximate. Your results may vary.

\*\*Handset is off the telephone base but not in use.

The battery needs charging when:

- A new battery is installed in the handset.
- The handset beeps.
- **LOW BATTERY** is displayed and the battery icon on the handset screen is flashing.

### CAUTION:

To reduce the risk of fire or injury, read and follow these instructions:

- Use only the battery(ies) provided or equivalent. To order a replacement, visit our website at [www.vtechphones.com](http://www.vtechphones.com) or call 1 (800) 595-9511. In Canada, go to [www.vtechcanada.com](http://www.vtechcanada.com) or call 1 (800) 267-7377.
- Do not dispose of the battery(ies) in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit with conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
- Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
- Observe proper polarity orientation between the battery and metallic contacts.
- To prevent fire or shock hazard, do not expose this product to water or any type of moisture.

# Appendix

## Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bathtub, kitchen sink, or swimming pool).
5. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
6. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
9. Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
10. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
11. Do not overload wall outlets and extension cords.
12. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
  - A. When the power supply cord or plug is damaged or frayed.
  - B. If liquid has been spilled onto the product.
  - C. If the product has been exposed to rain or water.
  - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
  - E. If the product has been dropped and the telephone base and/or handset has been damaged.
  - F. If the product exhibits a distinct change in performance.
13. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity of the leak.
15. Only put the handset of your telephone next to your ear when it is in normal talk mode.
16. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.

**SAVE THESE INSTRUCTIONS**  
**[www.vtechphones.com](http://www.vtechphones.com)**

# Appendix

## Troubleshooting

If you have difficulty with your telephone, please try the suggestions below. For Customer Service, visit our website at [www.vtechphones.com](http://www.vtechphones.com), or call 1 (800) 595-9511; in Canada, call 1 (800) 267-7377.

| Problem                                    | Suggestion  |
|--|---|
| My telephone does not work at all.         | <ul style="list-style-type: none"><li>• Make sure the battery is installed and charged correctly (page 3). For optimum daily performance, return the handset to the telephone base or charger after use.</li><li>• Make sure the power adapter is securely plugged into an outlet not controlled by a wall switch.</li><li>• Make sure the telephone line cord is plugged firmly into the telephone base and the telephone wall jack.</li><li>• Unplug the electrical power to the telephone base. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and telephone base to synchronize.</li><li>• Charge the battery in the handset for up to 16 hours.</li><li>• If the battery is depleted, it may take approximately four minutes to charge the handset before it can resume display on the screen.</li><li>• Remove and re-insert the battery. If that still does not work, it may be necessary to purchase a new battery.</li><li>• Disconnect the telephone base from the telephone wall jack and plug in a working telephone. If the other telephone does not work, the problem is probably in the wiring or the local service. Call the local telephone company.</li></ul> |
| <b>LOW BATTERY</b> is displayed on screen. | <ul style="list-style-type: none"><li>• Place the handset in the telephone base or charger for recharging.</li><li>• Remove and re-install the battery and use it normally until fully discharged, then recharge the handset on the telephone base or charger for up to 16 hours.</li><li>• If the above measures do not correct the problem, the battery may need to be replaced.</li></ul>  |

## Appendix

### Troubleshooting

| Problem   | Suggestion   |
|---|--|
| The battery does not charge in the handset or the handset battery does not accept charge. | <ul style="list-style-type: none"><li>• Make sure the handset is placed in the telephone base or charger correctly. The <b>CHARGE</b> light on the handset should be on.</li><li>• Remove and reinstall the battery, then charge for up to 16 hours.</li><li>• If the handset is in the telephone base or charger but the <b>CHARGE</b> light on the handset is not on, refer to <b>The CHARGE light is off</b> in this section.</li><li>• If the battery is depleted, it may take approximately four minutes to charge the handset before it can resume display on the screen.</li><li>• It may be necessary to purchase a new battery. Please refer to the <b>Battery</b> section (page 53) of this user's manual.</li></ul> |
| The <b>CHARGE</b> light is off.   | <ul style="list-style-type: none"><li>• Clean the charging contacts on the handset and telephone base each month using a pencil eraser or a dry non-abrasive fabric.</li><li>• Make sure the power adapter and telephone line cord are plugged in correctly and securely.</li><li>• Unplug the power adapter. Wait for 15 seconds before plugging it back in. Allow up to one minute for the handset and telephone base to reset.</li></ul>  |
| There is no dial tone.  | <ul style="list-style-type: none"><li>• First, try all the above suggestions.</li><li>• Move the handset closer to the telephone base. It might be out of range.</li><li>• The telephone line cord might be malfunctioning. Try installing a new telephone line cord.</li><li>• Disconnect the telephone base from the telephone wall jack and connect a different telephone. If there is no dial tone on this telephone either, the problem is in your wiring or local service. Contact your local telephone company.</li></ul>   |

## Appendix

### Troubleshooting

| Problem   | Suggestion   |
|---|--|
| The telephone does not ring when there is an incoming call. | <ul style="list-style-type: none"><li>• Make sure the handset ringer volume is not set to zero (page 7) and the telephone base ringer volume is not set to off (page 40).</li><li>• Make sure the telephone line cord and power adapter are plugged in properly (page 2).</li><li>• The handset may be too far from the telephone base. Move it closer to the telephone base.</li><li>• There may be too many extension phones on the telephone line to allow all of them to ring simultaneously. Try unplugging some of them.</li><li>• If the other telephones in your home are having the same problem, the problem is in the wiring or local service. Contact the local telephone company (charges may apply).</li><li>• Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones.</li><li>• Test a working telephone at the telephone wall jack. If another telephone has the same problem, the problem is in the telephone wall jack. Contact your local telephone company (charges may apply).</li><li>• The telephone line cord might be malfunctioning. Try installing a new telephone line cord.</li><li>• Re-install the battery and place the handset in the telephone base or charger.</li><li>• Wait for the handset to synchronize with the telephone base. Allow up to one minute for this to take place.</li></ul> |

## Appendix

### Troubleshooting

| Problem  | Suggestion  |
|--|---|
| I cannot dial out.                               | <ul style="list-style-type: none"><li>• First, try all the above suggestions.</li><li>• Make sure there is a dial tone before dialing. It is normal if the handset takes a second or two to synchronize with the telephone before producing a dial tone. Wait an extra second before dialing.</li><li>• If the other telephones in your home are having the same problem, the problem is in the wiring or local service. Contact your local telephone company (charges may apply).</li><li>• Eliminate any background noise. Noise from a television, radio, or other appliances may cause the telephone not to dial out properly. If you cannot eliminate the background noise, first try muting the cordless handset before dialing, or dialing from another room in your home with less background noise.</li></ul>  |
| My handset beeps and is not performing normally. | <ul style="list-style-type: none"><li>• Make sure the power cord is securely plugged into the telephone base. Plug the telephone base into a different working electrical outlet not controlled by a wall switch.</li><li>• Move the handset closer to the telephone base. It may be out of range.</li><li>• Reset the telephone base by unplugging the electrical power to the base. Wait for 15 seconds and plug it back in again. Allow up to one minute for the cordless handset and the telephone base to synchronize.</li><li>• Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away from these electronic devices as possible: wireless routers, radios, radio towers, pager towers, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and other cordless telephones.</li></ul> |

# Appendix

## Troubleshooting

| Problem   | Suggestion   |
|---|--|
| There is interference during a telephone conversation.  | <ul style="list-style-type: none"><li>• The handset may be out of range. Move it closer to the telephone base.</li><li>• If you subscribe to high-speed Internet service (Digital Subscriber Line - DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack. The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.</li><li>• Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference. Try moving the appliance or telephone base to another outlet.</li><li>• Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones.</li><li>• If your telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this doesn't solve the problem, re-locate your telephone or modem farther apart from each other, or use a different surge protector.</li><li>• The location of your telephone base can impact the performance of your cordless phone. For better reception, install the telephone base in a centralized location within your home or office, away from walls or other obstructions. In many environments, elevating the telephone base will improve overall performance.</li><li>• Disconnect the telephone base from the telephone wall jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the wiring or local service. Contact your local service company (charges may apply).</li><li>• If the other telephones in your home are having the same problem, the problem is in the wiring or local service. Contact the local telephone company (charges may apply).</li></ul> |
| My calls fade out when I am using the cordless handset. |  |

## Appendix

### Troubleshooting

| Problem  | Suggestion   |
|--|--|
| I hear other calls when using the telephone.                                 | <ul style="list-style-type: none"><li>• Disconnect the telephone base from the telephone wall jack. Plug in a different telephone. If you still hear other calls, the problem is probably in the wiring or local service. Call your local telephone company.</li></ul>   |
| I hear noise on the cordless handset, and none of the keys or buttons works. | <ul style="list-style-type: none"><li>• Make sure the telephone line cord is plugged in securely.</li></ul>  |
| My caller ID features are not working properly.                              | <ul style="list-style-type: none"><li>• Caller ID is a subscription service. You must subscribe to this service from your local telephone company for this feature to work on your telephone.</li><li>• The caller may not be calling from an area which supports caller ID.</li><li>• Both you and the caller's telephone companies must use equipment which are compatible with the caller ID service.</li><li>• The caller ID information will be displayed after the first or second ring.</li><li>• If you subscribe to high-speed Internet service (Digital Subscriber Line - DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack. The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.</li></ul> |



# Appendix

## Troubleshooting

| Problem   | Suggestion  |
|---|---|
| The system does not receive caller ID or the system does not display caller ID during call waiting. | <ul style="list-style-type: none"><li>• Make sure you subscribe to caller ID with call waiting features provided by the local telephone company.</li><li>• The caller may not be calling from an area which supports caller ID.</li><li>• Both you and the caller's telephone companies must use equipment which are compatible with caller ID service.</li><li>• If you subscribe to high-speed Internet service (Digital Subscriber Line - DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack. The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.</li></ul> |
| Caller ID entries do not match the numbers I need to dial.  | <ul style="list-style-type: none"><li>• Although the call log entries you receive have 10 digits, (the area code plus the seven-digit number), in some areas, you may need to dial only the seven digits, or a 1 plus the seven digits, or a 1 plus the area code plus the seven digits. You can change the number of digits that you dial from or store in the call log.</li><li>• While reviewing the call log, press # repeatedly to display these dialing options for local and long distance numbers before dialing or saving the telephone number.</li></ul>  |

## Appendix

### Troubleshooting

| Problem  | Suggestion  |
|--|---|
| <b>CONNECTING...</b> is shown in the handset display window. Why don't I get a dial tone when I try to use this telephone? | <ul style="list-style-type: none"><li>• The handset may be out of range. Move it closer to the telephone base.</li><li>• Make sure the power cord is securely plugged into the telephone base. Use a working electrical outlet that is not controlled by a wall switch.</li><li>• Reset your telephone by unplugging the power adapter from the telephone base. Disconnect the battery from the cordless handset. Wait for 15 seconds, then plug in the power adapter and re-install the battery. Place the handset in the telephone base and allow up to one minute for the handset and telephone base to synchronize.</li><li>• Other electronic products may prevent your handset and telephone base from communicating with each other. Try installing your telephone base as far away from these electronic devices as possible: wireless routers, radios, radio towers, pager towers, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and other cordless telephones.</li></ul> |
| The answering system does not answer after the number of rings which I programmed it.                                      | <ul style="list-style-type: none"><li>• Make sure the answering system is on. When the answering system is on, the red light on the <b>ANS ON/OFF</b> key should be lit.</li><li>• If Toll Saver is activated, the number of rings changes to two when there are new messages waiting (page 39).</li><li>• If the memory is full or if the answering system is off, the system will answer after 10 rings.</li><li>• In some cases, the answering system will be affected by the ringing system used by the local telephone company.</li></ul>  |
| The outgoing announcement is not clear.  | <ul style="list-style-type: none"><li>• When recording the announcement, make sure you speak in a normal tone of voice about nine inches from the telephone base.</li><li>• Make sure there is no background noise (television, music, traffic, etc.) when recording.</li></ul>   |

# Appendix

## Troubleshooting

| Problem  | Suggestion   |
|--|--|
| The messages on the system are very difficult to hear. | <ul style="list-style-type: none"><li>• Press <b>VOL ▲</b> on the telephone base to increase the speaker volume.</li></ul>   |
| The answering system does not record messages.         | <ul style="list-style-type: none"><li>• Make sure the answering system is on.</li><li>• If the answering machine memory is full, it will not record new messages until some old messages are deleted.</li></ul>  |
| The messages on the answering system are incomplete.   | <ul style="list-style-type: none"><li>• If a caller leaves a very long message, part of it may be lost when the system disconnects the call after four minutes.</li><li>• If the memory on the system becomes full during a message, the system stops recording and disconnects the call.</li><li>• If the caller's voice is very soft, the system may stop recording and disconnect the call.</li></ul> |

## Appendix

### Troubleshooting

| Problem   | Suggestion  |
|---|---|
| The answering system does not respond to remote commands. | <ul style="list-style-type: none"><li>• Make sure your remote access code is correct (page 40).</li><li>• Make sure you are calling from a touch-tone telephone. When dialing a number, there should be tones. If there are clicks, then it is not a touch-tone telephone and cannot activate the answering system.</li><li>• The answering system may not detect the remote access code when your announcement is playing. Wait until the announcement is over before entering the code.</li><li>• There may be interference on the telephone line you are using. Press the dial pad keys firmly when dialing.</li></ul>   |
| Common cure for electronic equipment.                     | <ul style="list-style-type: none"><li>• If the telephone is not responding normally, try putting the cordless handset in the telephone base. If it does not respond, try the following (in the order listed):</li><li>• Disconnect the power to the telephone base.</li><li>• Disconnect the battery on the cordless handset.</li><li>• Wait a few minutes before connecting power to the telephone base.</li><li>• Re-install the battery and place the cordless handset in the telephone base or charger.</li><li>• Wait for the cordless handset to synchronize its connection with the telephone base. Allow up to one minute for this to take place.</li></ul> |

# Appendix

## Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset will display **CONNECTING...**

If there is a call while the handset is out of range, it might not ring, or if it does ring, the call might not connect well when you press **TALK/FLASH**. Move closer to the telephone base, then press **TALK/FLASH** to answer the call.

If the handset moves out of range during a telephone conversation, there might be interference.

To improve reception, move closer to the telephone base.

## Maintenance

### Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

### Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

### Avoid water

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

### Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

### Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap. Do not use excess water or cleaning solvents of any kind.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in the water. If the telephone base should fall into the water, **DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORD FROM THE WALL.** Then pull the unit out by the unplugged cords.

# Appendix

## About cordless telephones

- **Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- **Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged or switched off, or if the electrical power is interrupted.
- **Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.
- **Rechargeable batteries:** This product contains nickel-cadmium rechargeable batteries. Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- **Nickel-cadmium rechargeable batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

## The RBRC® seal



The RBRC® seal on the nickel-cadmium battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used nickel-cadmium batteries into the trash or municipal waste, which may be illegal in your area.

VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call **1-800-8-BATTERY™** for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

**RBRC® is a registered trademark of Rechargeable Battery Recycling Corporation.**

# Appendix

## Warranty

### **What does this limited warranty cover?**

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase (“Consumer” or “you”) that the Product and all accessories provided in the sales package (“Product”) are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

### **What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period (“Materially Defective Product”)?**

During the limited warranty period, VTech’s authorized service representative will repair or replace at VTech’s option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech’s option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

### **How long is the limited warranty period?**

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

### **What is not covered by this limited warranty?**

This limited warranty does not cover:

1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or
2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or
3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or
4. Product to the extent that the problem is caused by use with non-VTech accessories; or
5. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
7. Product returned without a valid proof of purchase (see item 2 below); or

# Appendix

## Warranty

8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

### How do you get warranty service?

To obtain warranty service in the United States of America, please call 1 (800) 595-9511. In Canada, please call 1 (800) 267-7377. NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

### What must you return with the Product to get warranty service?

1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and
2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and
3. Provide your name, complete and correct mailing address, and telephone number.

### Other Limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Please retain your original sales receipt as proof of purchase.**



# Appendix

## FCC, ACTA and IC regulations

### FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian ICES-003.

### FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US: AAAEQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the user's manual.

# Appendix

## FCC, ACTA and IC regulations

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

Remain on the line and briefly explain the reason for the call before hanging up.

Perform such activities in off-peak hours, such as early morning or late evening.

### Industry Canada

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This product meets the applicable Industry Canada technical specifications.

# Appendix

## Technical specifications

|                         |   |
|-------------------------|---|
| Frequency control       | Crystal controlled PLL synthesizer  |
| Transmit frequency      | Handset: 1921.536-1928.448 MHz<br>Telephone base: 1921.536-1928.448 MHz   |
| Channels                | 5   |
| Nominal effective range | Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.  |
| Size                    | Handset: 6.30in X 1.89in X 1.22in (160.00mm X 48.00mm X 31.00mm)<br>Telephone base: 5.22in X 4.47in X 2.62in (132.50mm X 113.50mm X 66.50mm)<br>Charger: 3.65in X 3.17in X 1.85in (92.80mm X 80.50mm X 47.00mm) |
| Weight                  | Handset: 5.01oz (142.00g) (including battery)<br>Telephone base: 6.55oz (185.80g)<br>Charger: 1.98oz (56.00g)   |
| Power requirements      | Handset: 2.4V 600mAh Ni-Cd battery<br>Telephone base: 6V DC @ 400mA<br>Charger: 6V DC @ 200mA   |
| Memory                  | Handset directory: 50 memory locations; up to 30 digits and 15 characters<br>Handset call log: 50 memory locations; up to 24 digits and 15 characters   |

# Appendix

## Index

### A

- Activate the answering system 37
- Announcement 42
- Answer a call 12
- Answer an incoming call during an intercom call 21
- Answering system 36

### B

- Battery 3, 53

### C

- Caller ID 28
- Call intercept 46
- Call log 29
- Call log display screen messages 34
- Call screening 46
- Call waiting 14
- Chain dialing 15
- Character chart 24
- Charging 3
- Clear voicemail 10
- Clock 38
- Conference call 17

### D

- Delete answering system messages 44, 45
- Delete from redial 35
- Delete from the call log 33
- Delete from the directory 27
- Delete your announcement 43
- Dial a call log entry 31
- Dial a directory entry 25
- Dial a redial entry 35
- Dialing pause 23, 26
- Directory 22
- DSL filter 2

### E

- Edit a directory entry 26
- End a call 12

### F

- Find handset 14

### H

- Handset display screen messages 49
- Handset icons 52
- Handset layout 5
- Handset lights 51
- Home area code 11

### I

- Important safety instructions 54
- Intercom 16

### K

- Key tone 9

### L

- Language 9

# Appendix

## Index

### M

Maintenance 65  
Make a call 12  
Make a call log entry ready to dial 31  
Message alert tone 41  
Message capacity 37  
Message playback 44  
Message window displays 47  
Missed calls indicator 30  
Mute 13

### N

New message indication 44  
Number of rings 39

### O

Operating range 65  
Options during playback 44

### P

Paging 14  
Parts checklist 1  
Play your announcement 43

### R

RBRC® seal 66  
Record and play memos 45  
Record your own announcement 42  
Redial list 35  
Remote access 48  
Remote access code 40  
Review the call log 30  
Ringer mute 13  
Ringer tone 8  
Ringer volume 7

### S

Save a call log entry to the directory 32  
Search the directory 25  
Speakerphone 12  
Store a directory entry 23

### T

Technical specifications 71  
Telephone base installation 2  
Telephone base layout 6  
Telephone base lights 51  
Telephone base ringer 40  
Transfer an external call 18  
Troubleshooting 55

### V

Volume 7, 13, 40

### W


Wall mounting 4  
Warranty 67

# Appendix

## Template for wall mounting studs

Drill holes through the template for the wall mounting studs.

Cut along dotted line.



VTECH TELECOMMUNICATIONS LTD.  
A member of THE VTECH GROUP OF COMPANIES.  
Distributed in the U.S.A. by VTech Communications, Inc. Beaverton, Oregon  
Distributed in Canada by VTech Technologies Canada, Ltd., Richmond, B.C.  
Copyright ©2008 for VTECH TELECOMMUNICATIONS LTD.  
Printed in China.

91-001849-030-100