

# User Manual

## COREPLAYER & CORELIBRARY



- System requirements
- CorePlayer installation
- CoreLibrary description

# General system requirements

## Minimal requirements

Processor:	Intel Core 2 Duo or equivalent
Memory (RAM):	1 GB
HDD:	At least 100 MB available hard disk space.
NIC:	1000 Mb/s, Jumbo frame 9kb.
OS:	Windows 7

## Recommended configuration


Processor:	Intel Core i3
Memory (RAM):	4 GB
HDD:	1 GB available hard disk space
NIC:	Gigabit Ethernet adapter and also a Gigabit Ethernet switch could be used for connecting more devices

In order to acquire images from a GigE Vision camera, you need to first make sure that you have all the correct hardware components and proper configuration. Below is a list of requirements.

## Special hardware requirements


**GigE Vision camera:** The camera must be GigE Vision standard compliant. If you have a camera that has a Gigabit Ethernet port but is not GigE Vision compliant, you cannot acquire images using CorePlayer. You should find the GigE Vision logo in the camera's user manual or marketing literature.

**Gigabit Ethernet port:** While it is possible to acquire images with Ethernet and Fast Ethernet ports, which support 10 MB/s and 100 MB/s respectively, this will only work at very slow frame rates and small resolutions. It is highly recommended that you use a Gigabit Ethernet Network Interface Controller (NIC).





### Network configuration

Once you have the hardware and software installed correctly, you must configure the network as well. GigE Vision cameras can obtain an IP address from a DHCP server or select one for itself using Link Local Addressing (LLA). If you connect the camera to a Gigabit Ethernet network with a DHCP server, the camera is automatically detected. If the camera is connected directly to the computer (using either a regular or cross-over cable), maybe you will need to wait about a minute for the camera to timeout on the DHCP request and use LLA. The Windows operating system may display a warning that the network card has only limited operation. You can ignore this warning.

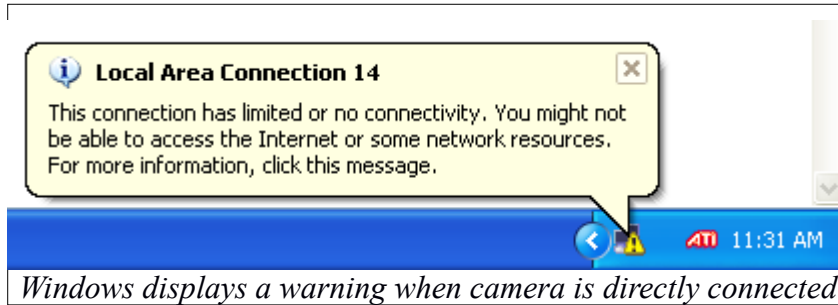

### Jumbo packets

Typically, network drivers will split any data larger than 1500 bytes into multiple packets. However, the GigE Vision standard allows packet sizes of up to 9014 bytes. These large packets, also known as Jumbo packets, allow the camera to more efficiently transfer data across the network. You can enable Jumbo packets in many network cards from the Device Manager by right-clicking the network card and selecting Properties.

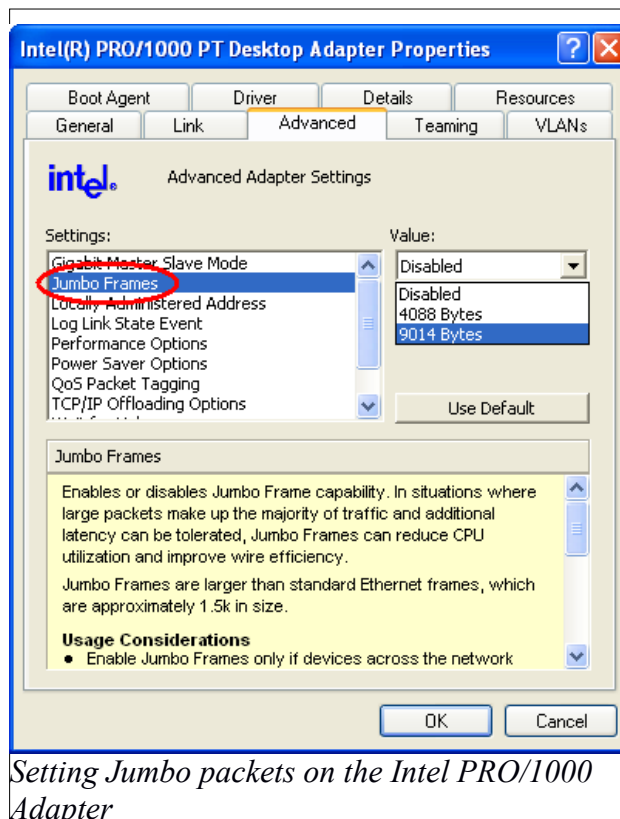

## Network Firewalls

When a camera acquires an image, it immediately streams those data packets to the host. However, network firewalls will not allow the packets to reach their destination because firewalls typically block uninitiated incoming traffic. Therefore you will need to disable you firewall in order to acquire images from a GigE Vision camera. You can disable the Windows Firewall from the Control Panel (Start>>Control Panel). However if you have a network card with an Intel PRO/1000 chipset and you are using the Filter driver that comes with CorePlayer, it is most likely that you will not need disable the firewall.

## Notifications and difficulties

**Jumbo Packets:** If your NIC device, or any intermediate network hardware (switch, router, etc.), does not support Jumbo packets, you will be limited to a packet size of less than 1500 Bytes. The GigE Vision packet size cannot be greater than the maximum packet size allowed by the NIC.


**Firewalls:** Many corporate networks employ firewalls for network security. However, you cannot acquire from GigE Vision cameras with the firewall enabled, unless you use the High Performance driver.

If your company's network policy does not allow you to disable the firewall or use a different network driver, you will need to use a system dedicated to image acquisition, that is not part of the corporate network.

**Corrupt XML files:** As with any new standard, camera manufacturing companies routinely release new revision of their firmware. If you get an error stating that the XML file is corrupt, please contact the camera manufacturer for the latest revision of their firmware.

**Interoperability:** While GenICam gives camera manufacturers the flexibility of creating a custom attribute set, it makes it difficult to easily switch between cameras without modifying your code. While the GenICam Standard Features Naming Convention alleviates this problem to a certain extent, most of the conventions are only recommendations and not requirements. So a camera manufacturer may deviate from the convention, in which case, the application software will need to be modified to be interoperable with other

**eBUS installation:** While is shown information windows mentioned below, there is problem with old version of eBUS SDK. For this case you need to remove older version of your eBUS SDK, restart PC and launch ThermoConnetor installation again.



# Installing CorePlayer


To get your copy of Workswell CorePlayer, go to page [www.workswell.cz/CorePlayer](http://www.workswell.cz/CorePlayer).

## eBusChecker

First you need to have installed eBus4 SDK-64bit. If you don't know, which version of this library you have installed, you can check it through the **eBusChecker**. Download it by clicking on **eBUSChecker** and then open file eBUSChecker.exe. If you have already correct version of eBus on your computer, you can continue by clicking on **launch**. Otherwise, click the button **Install** to install the prerequisites and run the application.

## Setup



After clicking on Install, the **setup.exe** file will be downloaded. Then proceed to the folder where you've downloaded the setup program and open it. If you see a prompt asking whether to install eBUS SDK or not, click on **Install**, otherwise the setup program would quit.

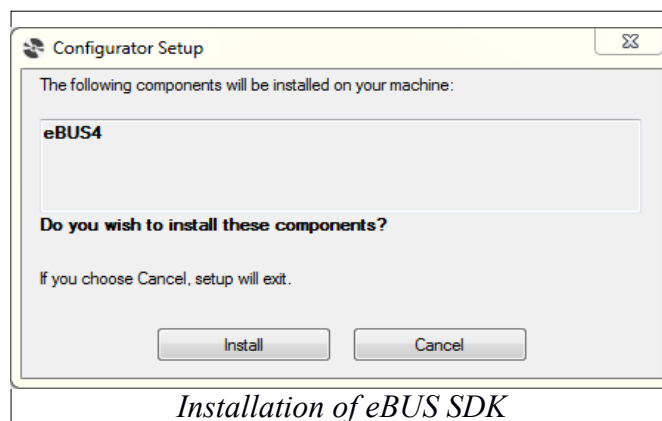

Follow the instructions of the eBUS SDK Setup program and in the end, if asked, reboot your computer. The installation will then continue. If not, please run the setup program again. CorePlayer's setup program itself doesn't need any further user interaction and the service application will run immediately as soon as the installation is completed.


## Activation

When you run the program for the very first time, the Authentication window is the first thing to deal with. The Authentication window provides you with two options: If you don't have a serial number and want to evaluate the software for a limited period of 15 days, choose **Request trial version**, otherwise, if you have valid, not yet activated serial number, click the **Proceed, I have a serial number** option.

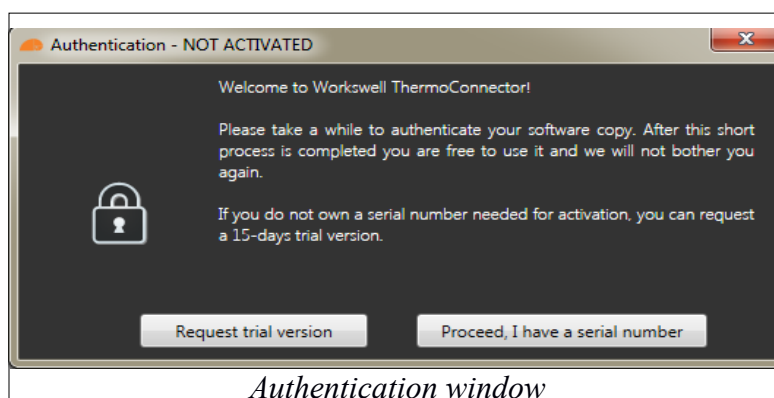


### Trial version


When requesting a trial version of Workswell CorePlayer, all you have to do is enter your (valid) email address.

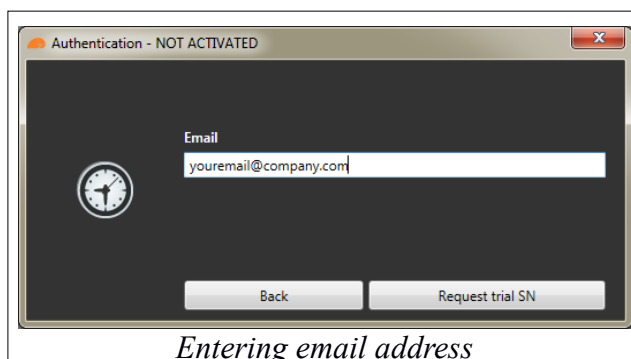

In a matter of seconds, you will receive an email with activation link leading to Workswell Activation Server, where we would be glad if you took a moment to fill in a brief info about yourself and helped us to improve the software to better suit the needs of our customers. After you'll express consent with the Licensing terms and agree to the above terms, click **Activate** and you will be given a unique trial serial number, valid for 15 days.

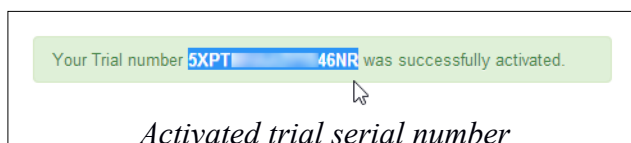


Copy the number. Then return to the program and click **Insert serial number**.

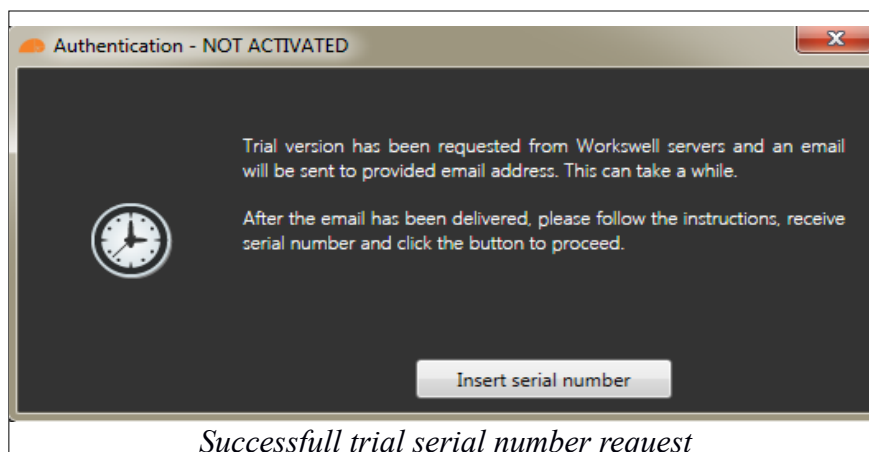


Further steps are the same as if you had a licensed copy of Workswell CorePlayer, and are described in next section.


### Full version

If you have a full version of the program (or you already have activated trial serial number), start the activation process by clicking on **Proceed, I have a serial number** button. On the next screen, enter your serial number provided by your sales partner or by Workswell and fill in your valid email address. Click the **Authenticate** button.




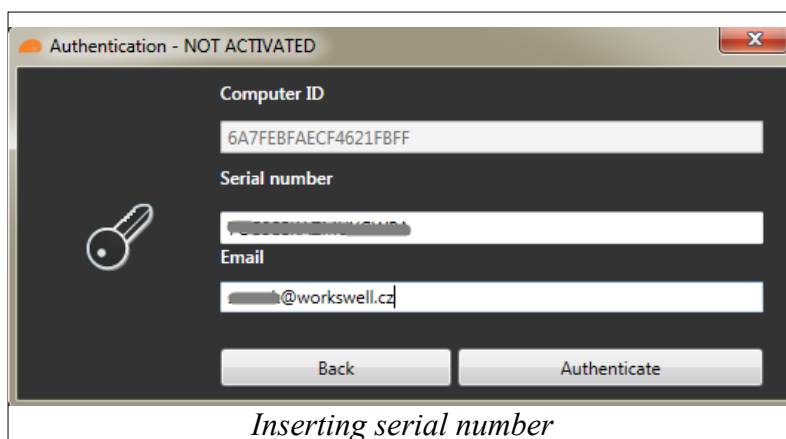


**Next steps apply for full versions only** The Authentication window is now indicating that your serial number is not yet activated. Never mind, everything has been taken care of.

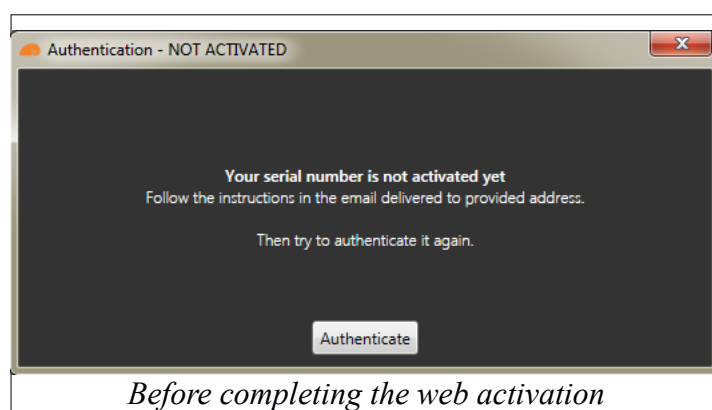

By clicking **Authenticate** on the previous screen, you've send an activation request to Workswell Activation Server and as a response, you will receive email with activation link. Click it and fill in a brief info about yourself. After you'll express consent with the Licensing terms and conditions by checking the "I agree" to the above terms, click **Activate** and return to the program. Click **Authenticate** as seen on the image above.

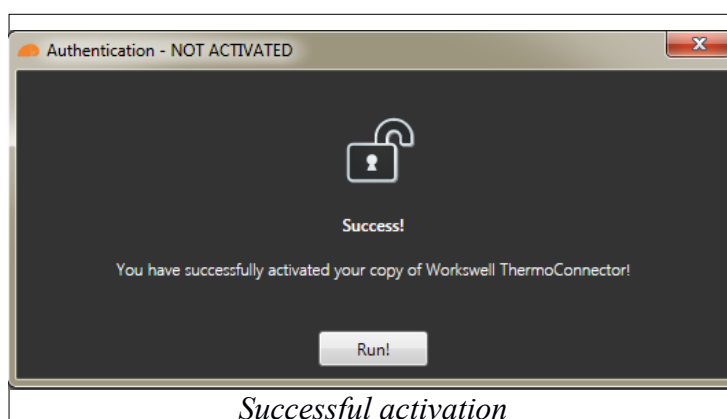


Click **Run!** and you are free to use Workswell CorePlayer.



## Supported Cameras

CorePlayer was designed especially for Workswell WIC cameras, but there is basic support for other types.

- **Workswell WIC**
  - **Fully supported** and tested.
  - Configurable device setup with intuitive graphic user interface.
  - Temperature calculation.
- **Flir Ax5 & Ax15**
  - **Fully supported** and tested
  - Configurable device setup with intuitive graphic user interface.
  - Temperature calculation.





# CorePlayer software

## Run application

The application will be started immediately after successful installation, otherwise you can run it by clicking on desktop icon. The following application window will be shown:



*Main application window - no camera connected*

First click **Close image** to close Workswell welcome thermoimage (you can disable the image opening in Application setup menu – see below).

## Main menu

**Source** – select source of the measured images


- Connect / Disconnect camera
- Open / Close file


**Export** – export radiometric file or sequence into another format (JPEG, PNG and CSV)

- Thermoimage – save \*.seq file as Radiometric JPEG, PNG or CSV file
- Visible image – save visible image as PNG file

**Report** – you can easy create measurement report



- Insert protocol name; date and time; user name; part, machine, tool material numbers; note; logo
- There are automatically shown thermoimage and time graph; emissivity, reflected temperature and all advanced image settings
- You can save report as PDF file.




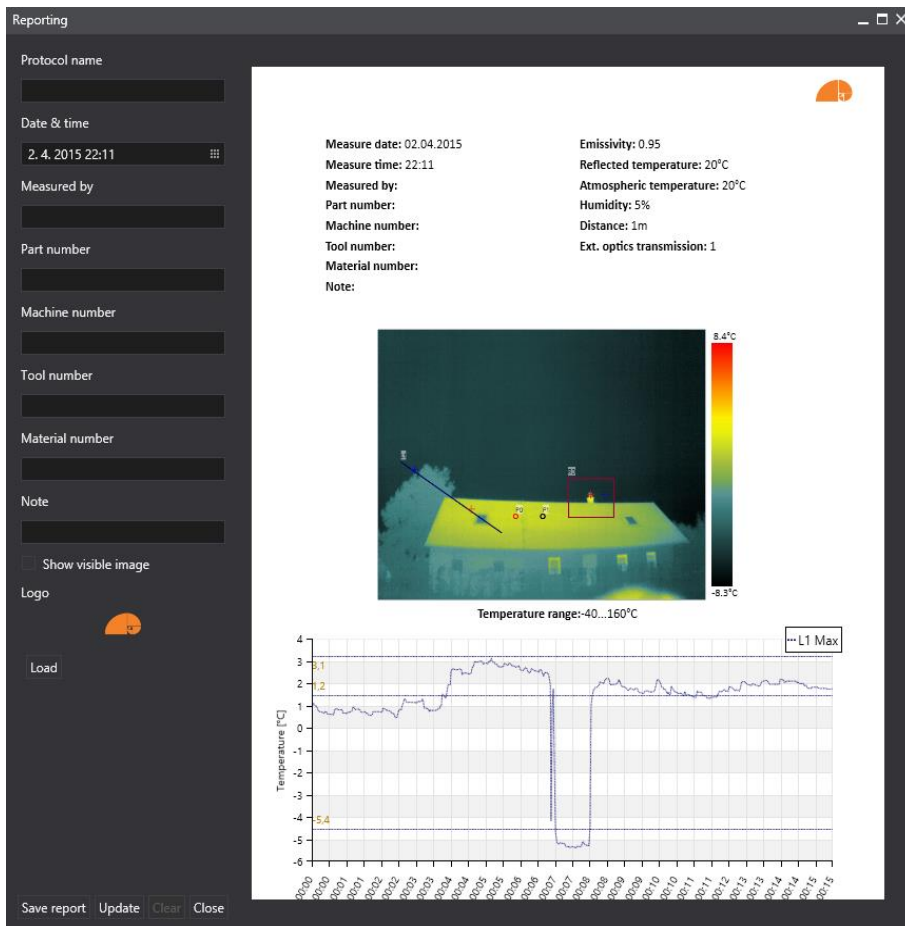


### Options

- **Restore layout** – restores layout of subwindows to defaults
- **Presentation mode** – full screen mode with image related controls – palette; looks best on wide-screen display; ends full-screen mode by clicking deselect **Options - Presentation mode**
- **Application setup**
  - General
    - Welcome image – check if you want to open welcome image on startup
    - Thermoimage interpolation – check if you want to interpolate thermoimage
    - Theme – Dark (only variant)
    - Layout autosave – check if you want to save layout automatically immediately after you change it
    - Ximea support – check if you want show Ximea subwindow
    - GPS support – check if you want show GPS subwindow
  - Thermo image
    - Overview window
  - Acquisition

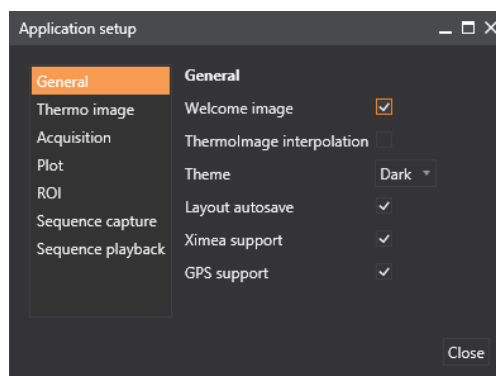


- Upper camera limit warning – shows warning if the measured temperature exceed camera temperature limit
- Limit shown framerate
- Desired framerate – default framerate
- Plot
  - Thickness of plot lines (time graph, thermal profile, limits)
- ROI
  - Fonts and label and line colors of ROIs
  - Show min/max
  - Number of lines for thermal scanner
- Sequence capture
  - Predefined file paths – for sequence save
  - Chunk size – if chunk mode is enabled, you have limited maximal size of sequence file; longer sequences will saved in parts
- Sequence playback
  - Live visual playback – play visual video together with radiometric sequence?
  - Relative time – change time scale to relative or absolute time

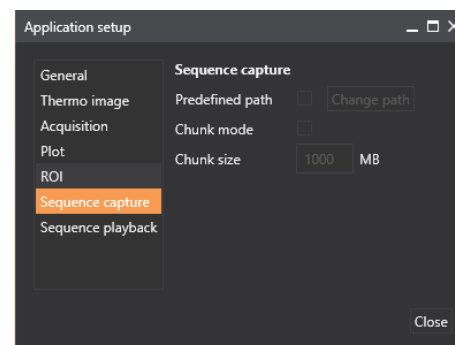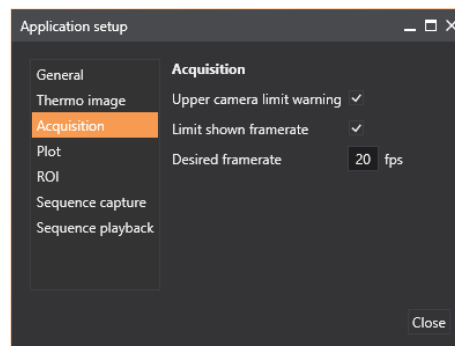


## Help

- **CoreLibrary documentation** – links to CoreLibrary documentation
- **Pan&Zoom quick help** - mouse and keyboard Controls for Pan and Zoom control
- **Changelog** – list of changes since the last release
- **About** – CorePlayer version, name of manufacturer, link to licenses, serial number, ...



## Connection

Click **Connect camera** to choose camera device which you want to connect. Following dialog will be shown.

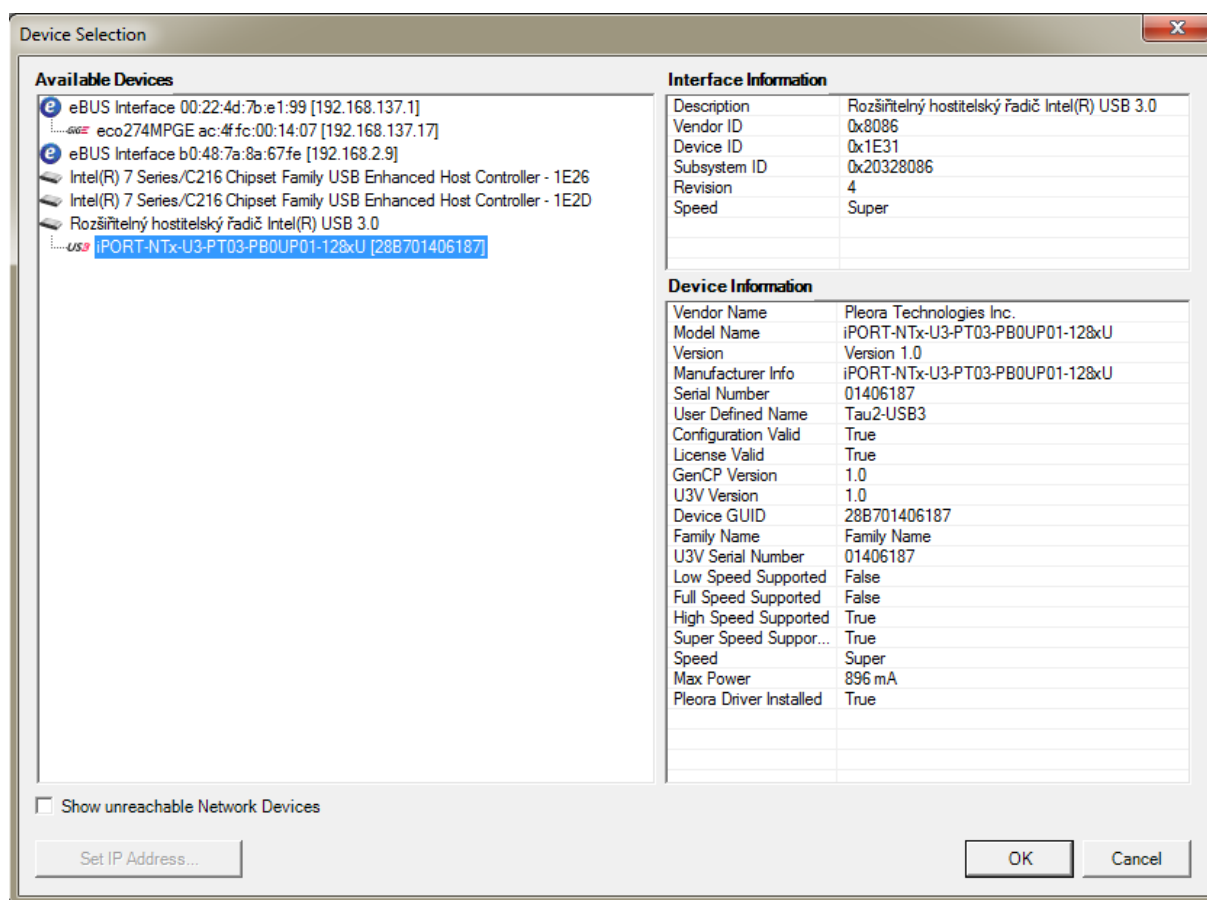



*Device selection*

Now, you see available devices, select one and click **Ok** to perform connection.

### Unreachable camera

Sometimes camera has incorrect network setup and it doesn't show up, so check the **Show unreachable Network devices** and your camera should show, select it and click **Set IP Address** and then set correct IP address corresponding to your network configuration.




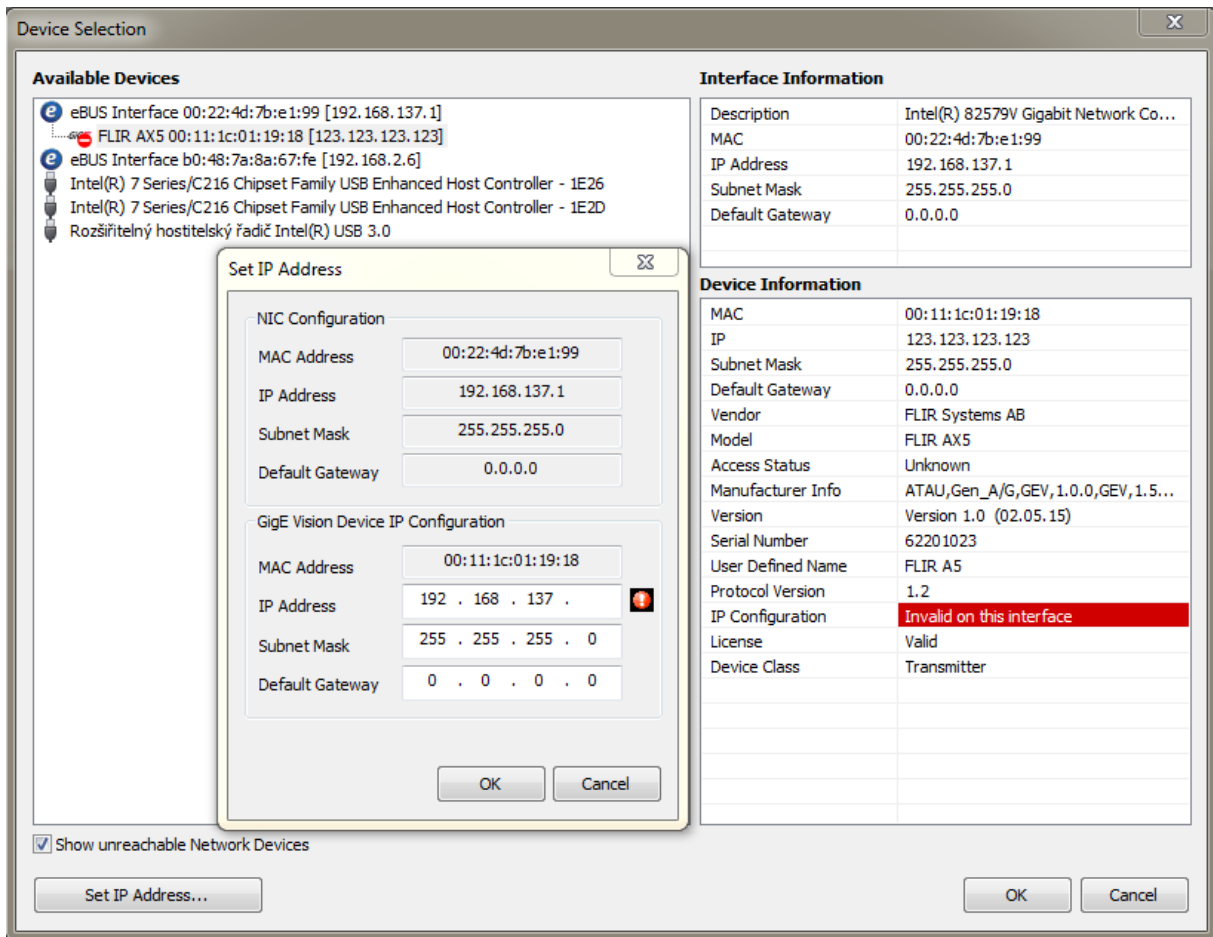


*Incorrect network configuration*

### Connection/Configuration error


In some cases, one of following error can occur. Try plug off and plug power of you device. When the errors persist, try reboot your computer. In case of USB3 device, if errors persist, try update your BIOS and/or USB3 controller drivers.

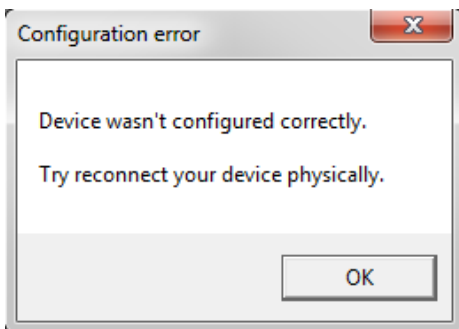


*Internal serial port unreachable*

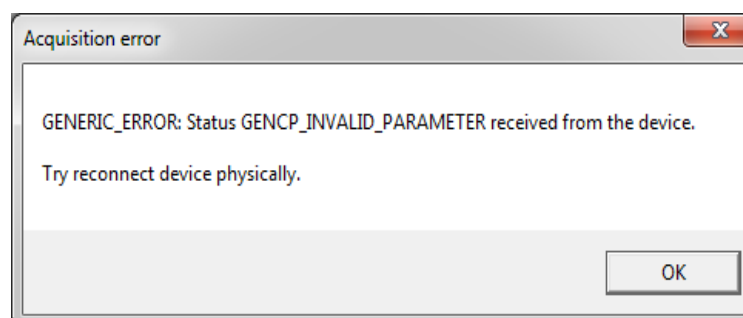

*Acquisition error - device connected and configured, but image cannot be acquired*




Now, your camera is connected and you can see currently acquired live thermal image.

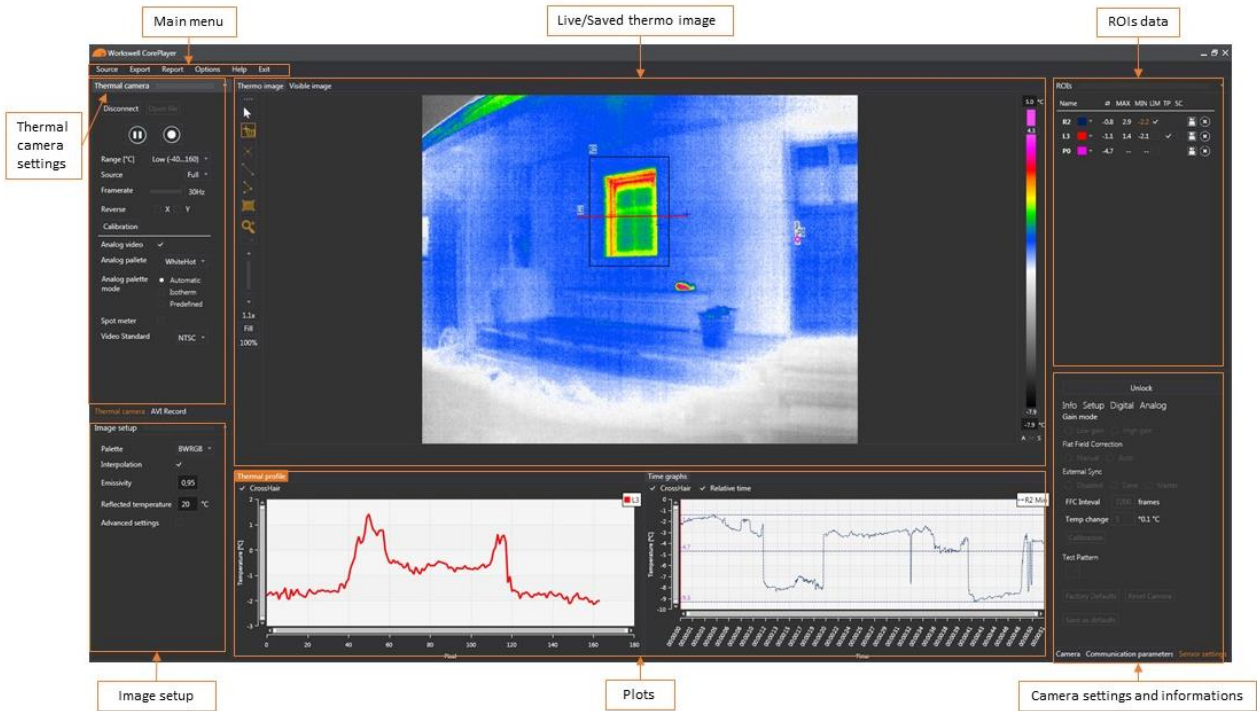


### Thermal camera settings


In this menu, you can set the camera and image features for most effective image acquisition.

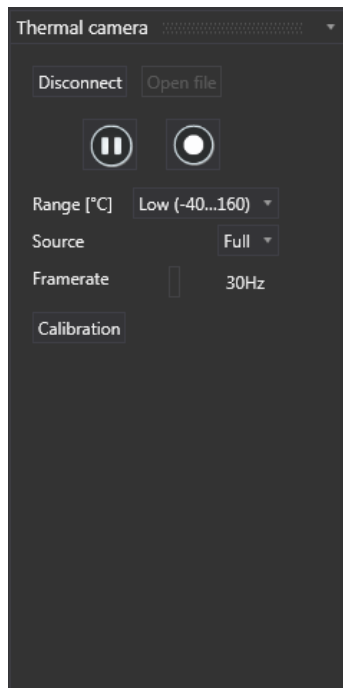

*Thermal camera menu – for Ax5 cameras*

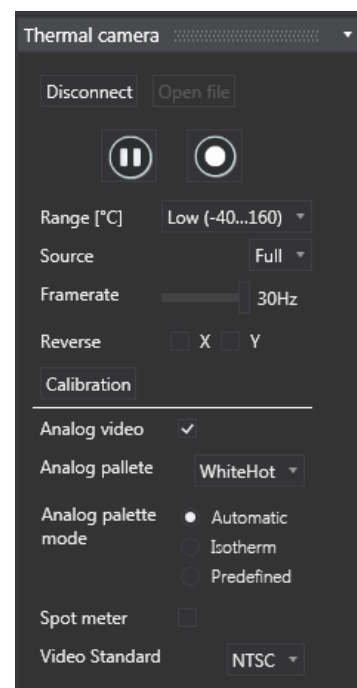

*Thermal camera menu – for WIC cameras*





- **Start / Stop recording button**
  - you can control acquisition of Flir Radiometric video (\*.seq file) by simple click on this button




- **Pause button**
  - when the stream is paused, you can still measure, save or export last displayed image
- **Range [°C]**
  - set the temperature range of camera (Low or High, for A615 a Middle range is available)
- **Source**
  - select the source of image: full sensor size or selected ROI only
- **Framerate**
  - you can control image acquiring frequency
  - thermal cameras only
- **Calibration**
  - Activation of camera shutter
- **Reverse**
  - you can reverse the image along the X or Y axis
- **Analog Video** (for WIC cameras only)
  - Checkbox - check, if you want to see analog image
  - Analog palette - shows data in selected color scale, colors depends on isotherm setup
  - Analog palette mode – you can work in Automatic, Isothermal or Predefined mode (for more details see Device setup chapter)
  - Spot meter – temperature-measurement capability via a spot meter in the central 4x4 area
  - Video standard – NTSC or PAL

## Image setup

In this subwindow you can change the image parameters (palette and interpolation) and the features, which are important for correct temperature measurement.

- **Palette**
  - shows data in selected color scale
  - assigned temperatures can be seen on right-sided temperature scale
- **Interpolation**
  - enable/disable image pixel interpolation
- **Emissivity**
  - Very important feature - you should set the value depend on measured material (range is 0-1; default is 0,95)




- **Reflected temperature**
  - Insert ambient temperature to correct reflection of incident radiation
- **Advanced settings** (important only for detailed temperature measurement)
  - Atmospheric temperature
  - Humidity (%) of ambient environment
  - Distance (m) of the measured object from camera
  - Ext. optics transmission

## Live/Saved thermo image window

You can see the live or opened image or sequence in this window. Also you can insert measuring ROI (line, rectangle, point) into image, zoom the image and adjust temperature range of color palette.


- **ROI (Region of Interest) tools** - measuring tools; for thermal cameras only
  - Select ROI – you can resize/move selected ROI by dragging on its corner (line & rectangle) or ROI itself (point)
  - Temperature – show current temperature on cursor position
  - Point – click to image to place the point
  - Line – click&drag to place the line
  - Polyline – click&drag&double click to place the broken line
  - Rectangle – click&drag to place the rectangle

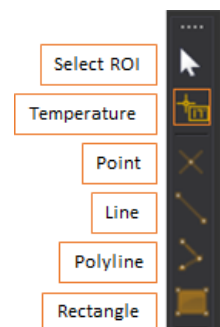

- **ZOOM tools**
  - every mouse click on the image zoom the image twice
  - adjustable zoom scale
  - Fill – fill thermo image window with the image
  - 100% - full image size
  - you can zoom-in or zoom-out with mouse scrolling too



- **Thermo image**
  - **Image capture** - right click on the image and you can save the image as Radiometric JPEG, PNG or CSV
  - **Radiometric JPEG**
    - native FLIR image format
    - standard JPEG with radiometric data included
    - image can be shown in every common image viewer
    - full radiometric support in FLIR Tools
  - **PNG**
    - lossless data compression
    - temperature scale included (thermal cameras only)
  - **CSV**
    - comma separated temperature matrix





- **Palette range** – you can adjust image colors by the right-sided temperature scale
  - Automatic mode – CorePlayer automatically calculate ideal temperature range
  - Manual mode – you can set the range manually
  - S mode – Set manual range to overall sequence min/max (for opened \*.seq files only)
- **Play sequence toolbar** (for opened \*.seq files only)



- Start/Pause the sequence playback
- Previous frame, Next frame – step over the sequence frames
- Cut – you can select one part of the sequence (time selection) and save it as new sequence or remake your previous sequence

## ROIs list


- When you add new ROI, it will be shown here, with appropriate **name** and color.
- You can change the **ROI color** in the drop-down menu.
- **Average, maximum and minimum** temperature of ROI (except point) is displayed.
- Enable **Time graph** display by click on the temperature value (min, max, avg). Not available for radiometric JPEG.
- **LIM** – add temperature limits into the Time graph by checking the LIM checkbox. Only available for radiometric sequences.
- **TP** - Enable Thermal profile display by checking TP checkbox.
- **SC** – Enable Thermal scanner display by checking SC checkbox
- You can **delete** ROI by clicking on **cross** button.

Name	Color	MAX	MIN	LIM	TP	SC	Actions
L0	Purple	22.8	23.3	22.1	<input type="checkbox"/>	<input type="checkbox"/>	✕
L1	Blue	22.4	23.4	20.5	<input type="checkbox"/>	<input type="checkbox"/>	✕
R0	Red	22.8	23.8	20.1	<input type="checkbox"/>	<input type="checkbox"/>	✕


*Current ROIs list*

## Plots

- **Thermal profile** – for line ROIs only; show temperatures of pixels on the line
- **Time graph** – for live video and sequences only; show min/max/avg temperature according on time (relative or absolute) and appropriate limits

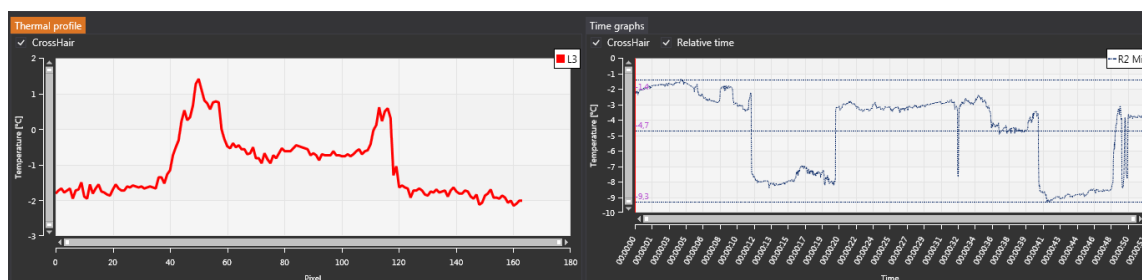


- **Crosshair tool** – shows temperature and pixel position (resp. time) at the cursor position
- You can modify all plot scales.
- **Fit to screen** - right click on plot you can fit it to the plot window



## Scanner

- thermal scanner shows the temperature of one line ROI according to time
- you can set number of lines of the scanner
- you can set temperature range of thermal palette (modes – manual, automatic, S)

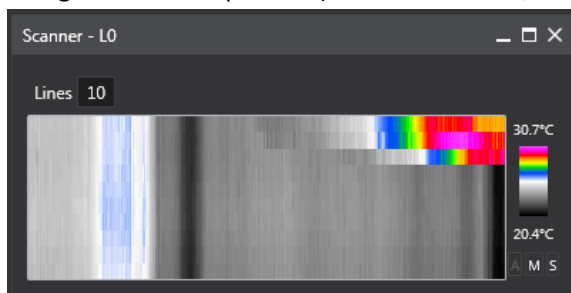

## Camera settings and information

### Camera


- **IP Address** - network address of your camera device; GigE devices only
- **MAC address** - unique identifier assigned to network interfaces; GigE devices only
- **Camera manufacturer** - Camera vendor; For WIC device – Flir Systems AB
- **Model** – camera model; WIC 336, AX5 etc...
- **Name** – user-defined camera name; WIC cameras – name of GigE/USB3 module only
- **USB3 module serial** - unique identifier assigned to USB3 devices – GUID; USB3 devices only
- **Resolution** – sensor resolution in pixels (width x height)

### Communication parameters

- **Communication control**
  - GigE/USB3 related communication parameters and informations
  - Preconfigured – no need to change
- **Device control**
  - USB3/GigE module device parameters and informations
  - eg. DeviceUserID – User-defined name of module
  - General settings - Pixel Format, Output, Resolution etc...
  - Preconfigured for WIC cameras – no need to change
- **Image stream controlled**
  - Image stream informations
  - Preconfigured – no need to change

### Sensor settings

WIC based devices cannot be currently controlled over standard GenICam device control parameters, so instead you can use following graphic interface on the right side of application.



Parameters are sorted to several categories:

**Phone numbers**  
+420 739 428 433  
+420 725 955 464

**E-mail and Web**  
info@workswell.cz  
www.workswell.cz

**ID**  
Reg. No.: 29048575  
VAT No. CZ29048575

**Headquarters**  
Libocká 653/51b, 16100  
Prague, Czech republic




Revision 1.4 EN, 7. 4. 2015  
All pictures are only for illustration  
Real values and parameters may vary

- **Info**
  - Device informations – name, type, vendor, serial numbers etc...
- **Setup**
  - Gain mode
    - Changes temperature ranges
    - High gain: from  $-40^{\circ}\text{C}$  to  $+160^{\circ}\text{C}$
    - Low gain: from  $-40^{\circ}\text{C}$  to  $+550^{\circ}\text{C}$
  - External sync
    - The WIC core provides an external sync channel that can be used to synchronize frame start between two WIC cores, one configured as master and the other configured as slave.
    - Disabled – The core relies on internal timing.
    - Master – The core relies on internal timing to control its own frame start but also outputs a synchronization pulse on the external-sync channel.
    - Slave – the core synchronizes its frame start to a pulse received on the external-sync channel.
  - FFC – Flat Field Correction
    - also known as NUC – Non-Uniformity Correction
    - Auto: Let camera decide when execute, based on conditions below
      - Number of processed frames
      - Device sensor temperature change
    - Manual: Perform FFC manually
      - Click on **Do FFC** button
  - Test pattern
    - Off – temperature data are transmitted.
    - Ramp – Test image.
  - Offset
    - Simple calibration.
    - Added to calculated temperatures.
  - Restore defaults
    - Restores default parameters.
    - See table 3-6 in Tau2 IDD document to see full list of affected parameters.
  - Reset camera
    - Performs reset/reboot of camera.
    - Device has to be physically reconnect to affect.

Sensor settings	
Info	Setup
Device	Tau 2 640
Manufacturer	FLIR Systems Inc.
Via	USB3
Resolution	640x512
Camera serial	121800
Sensor serial	1089318
Part number	46640007H-FPNLX
FW	3087.3342
SW	5135.3855


*Device informations*

Info	Setup	Digital	Analog
<b>Gain mode</b>			
<input type="radio"/> Low gain <input checked="" type="radio"/> High gain			
<b>Flat Field Correction</b>			
<input type="radio"/> Manual <input checked="" type="radio"/> Auto			
<b>External Sync</b>			
<input checked="" type="radio"/> Disabled <input type="radio"/> Slave <input type="radio"/> Master			
FFC Interval		7200	frames
Temp change		5	0.1 °C
<input type="button" value="Do FFC"/>			
<b>Test Pattern</b>			
<input type="button" value="Off"/>			
<b>Offset</b>			
		0.0	°C
<input type="button" value="Factory Defaults"/>		<input type="button" value="Reset Camera"/>	
<input type="button" value="Save as defaults"/>		<input type="button" value="Calibrate"/>	

*Device setup*


- **Digital**

- You can change type and bit depth of digital output.

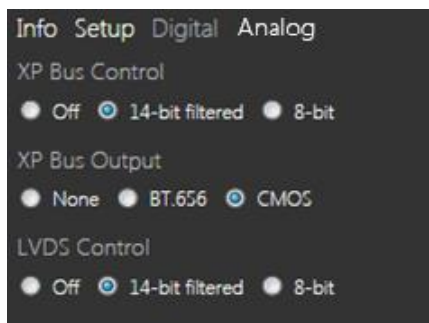


*Digital video*

- XB Bus, 14bit CMOS is recommended to correct temperature calculation.


- **Analog video**

- **Setup**


- On/Off Analog video
- Reverse video
  - Upside down (X), Leftside right (Y)
  - Affects digital output
- Video color
  - Color/Monochrome
- Frame rate
  - doubles framerate – 25/50Hz, 30/30Hz
- Video standard
  - NTSC/PAL
  - FFC should be executed afterward
- Dynamic DDE
  - digital-data-enhancement algorithm which can be used to enhance image details and/or suppress fixed pattern noise
  - DDE parameters are computed automatically based on scene contents. DDE index (which supplants the spatial-threshold parameter used in the manual algorithm) is the only controlling parameter and ranges from 0 to 63, with higher values representing higher degrees of detail enhancement.
  - If no enhancement is desired, the value should be set to 17.
  - Values less than 17 soften the image and filter fixed pattern noise.
  - Values greater than 17 sharpen the details in the image.



- Affects digital output

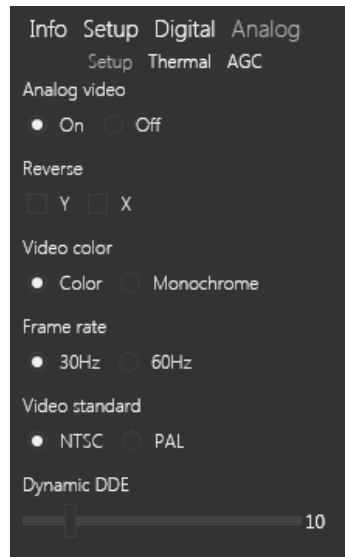

*Analog video - Setup*

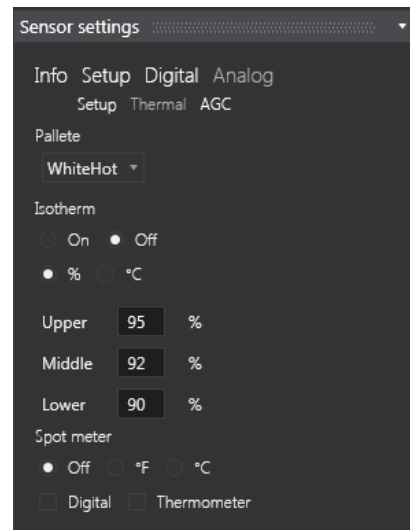

*Analog video - Thermal*

- **Thermal**

- **Palette**

- Changes color palette
    - Colors depends on isotherm setup

- **Isotherm**


- Portions of the scene exceeding a user-selectable threshold are mapped to different portions of the palette.
    - Three user-specified thresholds are applicable to the isotherm mode.
    - Specified either in degrees Celsius (°C) or in percentage (%) of full-scale
    - **Upper** threshold above which pixels will be mapped to the top shades of the palette (224 to 255).
    - **Middle** threshold pixels with value between the middle and upper threshold are mapped to shades 176 to 223.
    - **Lower** threshold pixels with value between the lower and middle threshold are mapped to shades 128 to 175.

- **Spot meter**


- Temperature-measurement capability via a spot meter in the central 4x4 area.
    - Accuracy of the spot meter is  $\pm 20$  °C in high-gain state and the greater of  $\pm 20\%$  or  $\pm 20\text{C}$  in low-gain state.
    - Can be shown as Digital numeric value and/or thermometer-style gauge.
    - The numeric indicator and gauge can be shown in degrees Celsius [°C] or Fahrenheit [°F].

- **AGC**

- The WIC core provides multiple AGC algorithms used to transform 14-bit data to 8-bit.
  - See chapter **3.3.2.6** in Tau2 Product Specification
  - Not available in isotherm mode




- **Algorithm**
  - Automatic
    - Automatic parameters adjustable
  - Once Bright
    - Contrast adjustable
  - Auto Bright
    - Contrast, Brightness Bias and AGC Filter adjustable
  - Manual
    - Contrast and Brightness adjustable
  - Linear Histogram
    - ITT Mean, Max Gain and AGC Filter adjustable
- **Contrast**
  - Image contrast
- **Brightness**
  - Image brightness
- **Brightness bias**
  - Once Bright mode only
- **Automatic parameters**

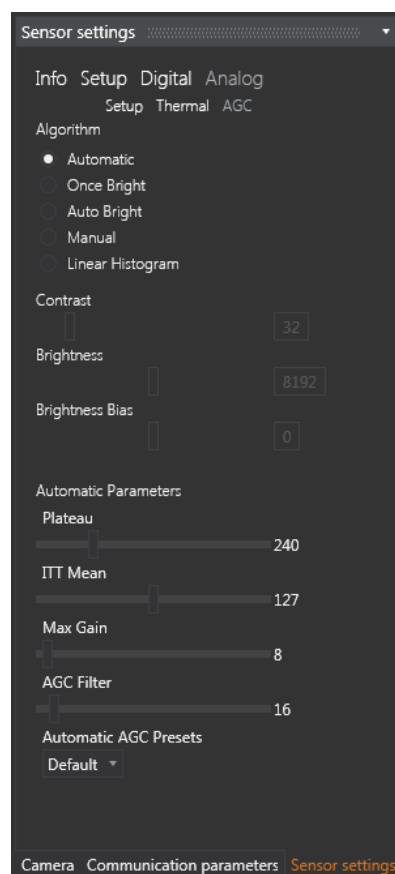


*Analog video - AGC*

- Plateau
  - When plateau value is set high, the algorithm approaches the behavior of classic histogram equalization – gray shades are distributed proportionally to the cumulative histogram, and more gray shades will be devoted to large areas of similar temperature in a given scene. On the other hand, when plateau value is set low, the algorithm behaves more like a linear AGC algorithm – there is little “compression” in the resulting 8-bit histogram.
- ITT Mean
  - The ITT Midpoint can be used to shift the 8-bit histogram darker or brighter. The nominal value is 128. A lower value causes a darker image. A darker image can help improve the perceived contrast, but it is important to note that more of the displayed image may be railed (8bit value = 0 or 255) by moving the midpoint away from 128.
- Max Gain
  - For scenes with high dynamic range (that is, wide 14-bit histogram), the maximum gain parameter has little effect. For a very bland scene, on the other hand, it can significantly affect the contrast of the resulting image.
- AGC Filter
  - The IIR filter is used to adjust how quickly the AGC algorithm reacts to a change in scene or parameter value.



- Automatic AGC Presets
  - These presets apply only to the Automatic AGC algorithm and set predefined values that are stored in the GUI for Plateau Value, ITT Mean, and Max Gain. These presets have been empirically determined for different scenarios. These settings are intended to be used as guidelines and are not guaranteed to be the optimum values for any particular scenario. It is recommended to fine-tune settings for preference and scene conditions.



# CoreLibrary

## Overview

This library provides basic support of Workswell WIC cameras. Because these cameras don't support setup over standard GEV parameters, they have to be set via internal serial communication.

Library with full documentation, samples etc. is available through *CorePlayer* → *Menu* → *About* → *CoreLibrary Documentation* or `%Documents%/CorePlayer/CoreLibrarySRC`

## Characteristics

Library is written in both C# and C++ and tested in Windows and (supported) Linux systems as well.

Library is based on Pleora eBUS SDK, which is bundled to CorePlayer and documented

- *Start* → *Pleora Technologies Inc* → *eBUS SDK*


## Requirements

- **Pleora eBUS SDK 4.0.4**
- Visual Studio 201x – C# version
- Visual Studio, NetBeans or any suitable IDE – C++ version

## Sample use

See related documentation! Only prerequisite is *connected PvDevice object*. *SetDefault* method sets both Pleoras videograbber and FLIR Core to correct default parameters.

Every parameter can be changed by related *Property(C#)* or *Getter/Setter(C++)*





## Conection and Setup Example

```
//IP address, MAC address or GUID of camera.
PvDevice device = PvDevice.CreateAndConnect("192.168.1.25");


//For Tau2 cameras the serial port should be always Bulk0
CameraSerialSettings settings = new CameraSerialSettings(mDevice,
PvDeviceSerial.Bulk0);

//Sets default settings (serial link,14b out...). Should be called before
setting up any parameters above
settings.SetDefault();

//now, we can change parameters
settings.GainMode = GainModes.Low;

//execute some action like FFC/NUC
settings.DoFFC();

//or read up something
string manufacturer = settings.Manufacturer;
```



## Data acquisition

See Pleora eBUS manual first to correct setup of PvDisplayThread, PvPipeline, etc...

This is not a standalone working code!

```

PvDisplayThread DisplayThread = new PvDisplayThread();

//set hook to new available frame
DisplayThread.OnBufferDisplay += new OnBufferDisplay(OnBufferDisplay);
private void OnBufferDisplay(PvDisplayThread aDisplayThread, PvBuffer aBuffer)
{
    PvImage ImageInfo = aBuffer.Image;


    uint pixelCount = ImageInfo.ImageSize / 2; //14b pixels are mapped to 2 bytes
    float [] Temperatures = new float[pixelCount];

    short[] RAWData = null;
    IntPtr bufferPtr;



    unsafe
    {
        //there are other ways, how to do it, even without unsafe - see eBUS docs.
        bufferPtr = new IntPtr(ImageInfo.DataPointer);
    }
    if (bufferPtr != IntPtr.Zero)
    {
        // Allocate byte array that can contain the copy of data
        RAWData = new short[pixelCount];

        // Do the copying
        System.Runtime.InteropServices.Marshal.Copy(bufferPtr, RAWData, 0, (int)pixelCount);

        for (int i = 0; i < pixelCount; i++)
        {
            Temperatures[i] = Raw2Temperatures(RAWData[i]);
        }
    }
}
    
```



# Contacts

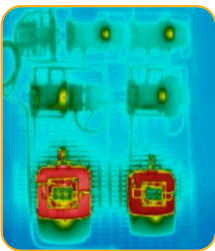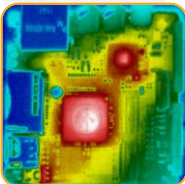

## Sales Department

Phone: +420 725 955 464

Email: [info@workswell.cz](mailto:info@workswell.cz)


Web: [www.workswell.cz](http://www.workswell.cz)

## Technical Department

Phone: +420 739 428 433

Email: [info@workswell.cz](mailto:info@workswell.cz)

Web: [www.workswell.cz](http://www.workswell.cz)

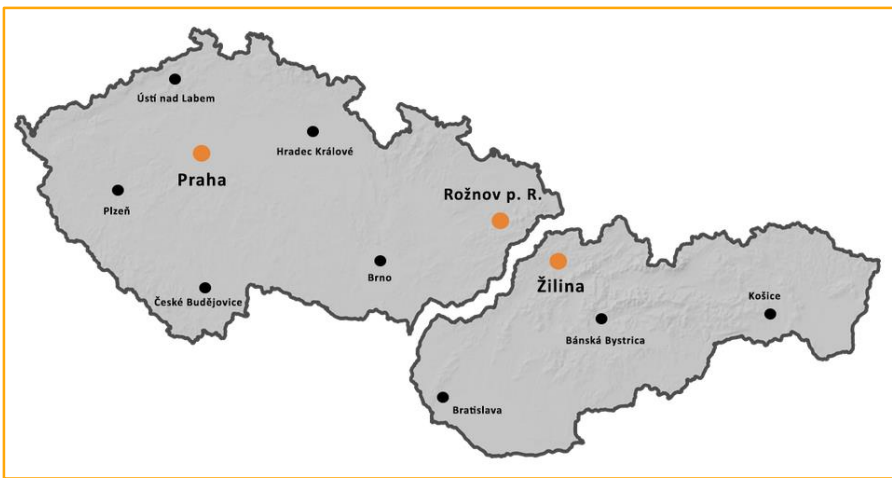

## Headquarters

Libocká 653/51b  
161 00, Prague 6  
Czech Republic

## Offices

Mezirická 100  
756 61, Rožnov p. R.  
Czech Republic

Univerzitní 1  
010 08, Žilina  
Slovakia

