



---

## **NK-NET User Guide**

**Version 02**

# Thank You for Choosing Ross

You've made a great choice. We expect you will be very happy with your purchase of Ross Technology.

Our mission is to:

1. Provide a Superior Customer Experience
  - offer the best product quality and support
2. Make Cool Practical Technology
  - develop great products that customers love

Ross has become well known for the Ross Video Code of Ethics. It guides our interactions and empowers our employees. I hope you enjoy reading it below.

If anything at all with your Ross experience does not live up to your expectations be sure to reach out to us at [solutions@rossvideo.com](mailto:solutions@rossvideo.com).



David Ross  
CEO, Ross Video  
[dross@rossvideo.com](mailto:dross@rossvideo.com)

## Ross Video Code of Ethics

Any company is the sum total of the people that make things happen. At Ross, our employees are a special group. Our employees truly care about doing a great job and delivering a high quality customer experience every day. This code of ethics hangs on the wall of all Ross Video locations to guide our behavior:

1. We will always act in our customers' best interest.
2. We will do our best to understand our customers' requirements.
3. We will not ship crap.
4. We will be great to work with.
5. We will do something extra for our customers, as an apology, when something big goes wrong and it's our fault.
6. We will keep our promises.
7. We will treat the competition with respect.
8. We will cooperate with and help other friendly companies.
9. We will go above and beyond in times of crisis. *If there's no one to authorize the required action in times of company or customer crisis - do what you know in your heart is right. (You may rent helicopters if necessary.)*

# NK-NET · User Guide

- Ross Part Number: **2201DR-002-02**
- Release Date: June 4, 2014. Printed in Canada.

The information contained in this Guide is subject to change without notice or obligation.

## Copyright

©2014 Ross Video Limited, Ross®, and any related marks are trademarks or registered trademarks of Ross Video Limited. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Video assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein..

## Patents

Patent numbers 4,205,346; 5,115,314; 5,280,346; 5,561,404; 7,034,886; 7,508,455; 7,602,446; 7,834,886; 7,914,332; 8307284, 2039277; 1237518; 1127289 and other patents pending.

## Notice

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as commitment by Ross Video Limited. Ross Video Limited assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

## Important Regulatory and Safety Notices to Service Personnel

Before using this product and any associated equipment, read all the Important Safety Instructions listed below so as to avoid personal injury and to prevent product damage.

Products may require specific equipment, and /or installation procedures be carried out to satisfy certain regulatory compliance requirements. Notices have been included in this publication to call attention to these Specific requirements.

## Symbol Meanings



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product. Failure to heed this information may present a risk of damage or injury to persons or equipment.



### Warning

The symbol with the word “**Warning**” within the equipment manual indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury.



### Caution

The symbol with the word “**Caution**” within the equipment manual indicates a potentially hazardous situation, which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

**Notice**

The symbol with the word “**Notice**” within the equipment manual indicates a situation, which if not avoided, may result in major or minor equipment damage or a situation, which could place the equipment in a non-compliant operating state.

**Warning  
Hazardous  
Voltages**

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of shock to persons.

**ESD  
Susceptibility**

This symbol is used to alert the user that an electrical or electronic device or assembly is susceptible to damage from an ESD event.

## Important Safety Instructions

1. Read these instructions.
2. Follow all instructions and heed all warnings.
3. Refer all servicing to qualified service personnel.
4. The equipment's external power supply AC appliance inlets are the means to disconnect the product from the AC Mains and must remain readily operable for this purpose.
5. To avoid the risk of electrical shock and to completely disconnect the apparatus from the supply AC appliance inlets prior to servicing.
6. The safe operation of this product requires that a protective earth connection be provided. A grounding conductor in the equipment's external power supply line cord provides this protective earth. To reduce the risk of electrical shock to the operator and service personnel, this ground conductor must be connected to an earthed ground.
7. Indoor Use: **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
8. **Warning:** This product includes an “Ethernet Port” for connection to a local area network (LAN). This Ethernet port interface is designed for intra-building networks only.

**Warning**

Do not connect this port to networks that go outside of the building.

## EMC Notices

### US FCC Part 15

This equipment has been tested and found to comply with the limits for a class A Digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a Commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**Notice**

Changes or modifications to this equipment not expressly approved by Ross Video Ltd. could void the user's authority to operate this equipment.

### CANADA

This Class “A” digital apparatus complies with Canadian **ICES-003**.

Cet appareil numérique de la classe “A” est conforme a la norme **NMB-003** du Canada.

## EUROPE

This equipment is in compliance with the essential requirements and other relevant provisions of **CE Directive 93/68/EEC**.

## INTERNATIONAL

This equipment has been tested to **CISPR 22:1997** along with amendments **A1:2000** and **A2:2002** and found to comply with the limits for a Class A Digital device.



**Notice** This is a Class A product. In domestic environments, this product may cause radio interference, in which case the user may have to take adequate measures.

## Warranty and Repair Policy

The product is backed by a comprehensive one-year warranty on all components.



**Notice** Changes or modifications to this equipment not expressly approved by Ross Video Limited could void the user's authority to operate this equipment.

If an item becomes defective within the warranty period Ross will repair or replace the defective item, as determined solely by Ross.

Warranty repairs will be conducted at Ross, with all shipping FOB Ross dock. If repairs are conducted at the customer site, reasonable out-of-pocket charges will apply. At the discretion of Ross, and on a temporary loan basis, plug in circuit boards or other replacement parts may be supplied free of charge while defective items undergo repair. Return packing, shipping, and special handling costs are the responsibility of the customer.

This warranty is void if products are subjected to misuse, neglect, accident, improper installation or application, or unauthorized modification.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profit). Implied warranties, including that of merchantability and fitness for a particular purpose, are expressly limited to the duration of this warranty.

This warranty is TRANSFERABLE to subsequent owners, subject to Ross' notification of change of ownership.

## Extended Warranty


For customers that require a longer warranty period, Ross offers an extended warranty plan to extend the standard warranty period by one year increments. For more information, contact your regional sales manager.

## Environmental Information

The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.

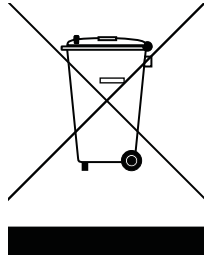

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You can also contact Ross Video for more information on the environmental performances of our products.

## Company Address

### **Ross Video Limited**

8 John Street  
Iroquois, Ontario  
Canada, K0E 1K0

### **Ross Video Incorporated**

P.O. Box 880  
Ogdensburg, New York  
USA 13669-0880

---

General Business Office: (+1) 613 • 652 • 4886

Fax: (+1) 613 • 652 • 4425

Technical Support: (+1) 613 • 652 • 4886

After Hours Emergency: (+1) 613 • 349 • 0006

E-mail (Technical Support): [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com)

E-mail (General Information): [solutions@rossvideo.com](mailto:solutions@rossvideo.com)

Website: <http://www.rossvideo.com>

# Contents

<b>Installation</b>	<b>1</b>
NK-NET Components .....	1-1
Overview .....	1-1
NK Switchboard in DashBoard .....	1-1
T-BUS Control System .....	1-1
Power Supply .....	1-2
Connecting the NK-NET .....	1-2
Overview .....	1-2
Connecting the NK-NET to a Network .....	1-2
Connecting the NK-NET Direct to a PC .....	1-3
Connecting the NK-NET to NK Series Devices .....	1-4
Installing DashBoard .....	1-4
Overview .....	1-4
System Requirements .....	1-4
<b>Configuration and Operation</b>	<b>2</b>
Overview .....	2-1
Configuring and Using the NK-NET .....	2-1
Default Configuration .....	2-1
Ethernet LEDs .....	2-1
Locating Devices Using Walkabout .....	2-2
Overview .....	2-2
Adding an NK-NET to DashBoard .....	2-2
NK-NET Configuration .....	2-4
Overview .....	2-4
NK-NET Tab .....	2-4
NK Switchboard Configuration and Operation .....	2-6
Switching .....	2-7
Source, Destination, and Level Buttons .....	2-7
Configure IPS .....	2-8
<b>Appendix A: NK-VCP and NK-Hub</b>	<b>A</b>
NK Virtual Control Panel .....	A-1
Overview .....	A-1
Starting the NK-VCP .....	A-1
Adding a NK-NET .....	A-1
Source, Destination, and Level Buttons .....	A-2
Switching .....	A-3
Protecting Outputs .....	A-3
Machine Control Button .....	A-4
Installing NK-VCP.....	A-4
Overview .....	A-4
System Requirements .....	A-4
Installing the Java Runtime Environment (JRE) .....	A-4
NK-Hub.....	A-5
<b>Appendix B: Troubleshooting</b>	<b>B</b>
NK-NET.....	B-1
Network/Connection Problems .....	B-1
GVG Settings .....	B-1

NK-VCP .....	B-1
Error Messages .....	B-1
Network/Connection Problems .....	B-2
General Problems .....	B-2



# Installation

## NK-NET Components

### Overview

NK-NET, with the DashBoard control system software, provides Ethernet connectivity to T-BUS supported NK routing system devices, enhancing the capability of any installed Ross products by providing access to the entire range of functions.



*Figure 1.1 NK-NET — Front View*

The NK-NET offers the following features:

- Enables Ethernet configuration of any NK router product from DashBoard.
- Allows you to configure both the router and up to four T-BUS connected panels.
- Replaces the need for an NK-IPS for simple router installations.

The NK-NET requires the router to host the connection, and therefore does not support panels directly. If setting up advanced mapping, the NK-VRC virtual routing core is required. NK-NET only supports one simultaneous DashBoard connection and does not support MC-1 or Carbonite eXtreme.

- ★ NK-NET mimics an NK-IPS when it communicates with other devices and software. As such, some actions and settings involving the NK-NET are done under ‘NK-IPS’ in other devices and software (for example, the Configure IPS dialog box and NK-IPS Connection window in DashBoard).

### NK Switchboard in DashBoard

The NK Switchboard, accessible through DashBoard, acts as a virtual panel for any router device. NK Switchboard enables control of multiple NK Series routers through NK-NET.

#### **For More Information on...**

- the NK Switchboard, please refer to “**NK Switchboard Configuration and Operation**” on page 2–6 or the NK Series plugin Help File in DashBoard.

### T-BUS Control System

The NK-NET connects and translates data from NK devices on the T-BUS Control System (a multi-drop RJ-45 control system supporting collision detection and half-duplex communication) to DashBoard via TCP Ethernet. The T-BUS Control System minimizes cable connections between devices, acting as both a reliable means to provide phantom power to devices and as the communications line between NK devices.

Devices on the T-BUS Control System with collision detection support ensure that if two devices transmit messages at the same time they will not send incorrect data to other devices on the line. T-Bus devices that support collision

detection are able to monitor communication on the line to ensure that no two devices are transmitting at the same time.

★ The NK-NET supports collision detection.

## Power Supply


The NK-NET receives phantom power from the router to which it is connected. Power consumption is limited to the power available over the T-BUS Control System from the router to which it is connected. However, the NK-NET cannot receive power from control panels or any other T-BUS devices that have PSUs but do not send power over T-BUS.

## Connecting the NK-NET

### Overview

The NK-NET has RJ-45 connectors for both Ethernet and T-BUS to allow connecting T-BUS devices to an Ethernet network. The typical use case is illustrated in **Figure 1.2**.

★ The NK-NET does not require Internet access for operation, but it does require TCP network access. Dashboard or Walkabout software is required for configuration.

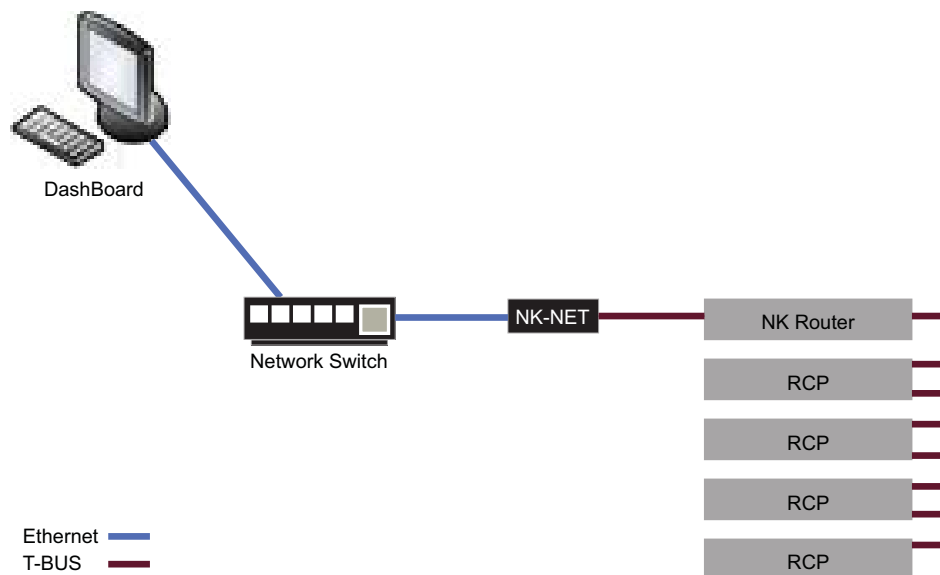

*Figure 1.2 NK-NET Connectivity*

## Connecting the NK-NET to a Network

The NK-NET can be connected directly to a network for configuration purposes. It is recommended that the NK-NET be connected directly to the network so that it can be interfaced from almost any computer on that network (the configuration information in “**Configuration and Operation**” on page 2–1 assumes that the NK-NET has been connected directly to a network).

After a physical connection has been established, Walkabout can be used to configure the network settings for the NK-NET.

★ If difficulties or problems are experienced when connecting the NK-NET to a network hub, or with assigning IP addresses, please contact your network administrator.

## Establishing a Physical Connection

When connecting the NK-NET directly to the network, a standard Cat 5/5e/6 cable must be used to connect the NK-NET to the network.

### To connect the NK-NET:

1. Connect one free end of the cable to a free port of the network hub.
2. Connect the other free end of the cable to the Ethernet port on the rear of the NK-NET.
3. Connect the cable from the T-BUS system to the T-BUS port.

## Connecting the NK-NET Direct to a PC

The NK-NET can be connected to a single PC (a computer that is on a network) or standalone PC (a computer that is not on a network) for configuration purposes.

If a PC that is on a network is used to interface the NK-NET, a spare network card is required to connect the two (the other network card is used to communicate with the network).

If a PC that is not on a network is used to interface the NK-NET, only one network card is required to connect the two.

After a physical connection has been established, the IP address of the PC can be configured and can be used to configure the IP address for the NK-NET.

★ If difficulties or problems are experienced when connecting the NK-NET to a network hub, or with assigning IP addresses, please contact your network administrator.

## Establishing a Physical Connection

When directly connecting the NK-NET to either a single or a standalone PC the following points must be taken into consideration:

- Use a standard Cat 5/5e/6 cable to connect the NK-NET and the PC (this is in contrast to connecting directly to a network, where a straight through CAT5 cable is used for the connection).
- If a small standalone Ethernet hub is accessible, two standard Cat 5/5e/6 cables can be used. The first cable is used to connect the PC to the Ethernet hub, while the second connects the Ethernet hub to the NK-NET.

The Walkabout program must be used to discover an NK-NET on the network. The NK-NET network settings can then be configured in Walkabout. Once the NK-NET settings have been configured using Walkabout, the NK-NET can be manually added to Device Finder if the network settings of the NK-NET are on the same subnet.

### To connect the NK-NET to a single PC that is on a network or a standalone PC that is not on a network:

1. Connect one free end of the CAT5 crossover cable to the free network card of the PC.
2. Connect the other free end of the CAT5 crossover cable to the Ethernet port on the rear of the NK-NET.

## Configuring the PC IP Address

Once either a single PC or a standalone PC has been physically connected to the NK-NET, the IP address for both the PC and the NK-NET needs to be configured. It is recommended that users familiar with networking configure the IP addresses for both a single and a standalone PC, as well as the NK-NET.

★ This topic only applies to single or standalone computers connecting to the NK-NET; it does not apply when the NK-NET is connected directly to the network.

★ NK-NET does not support DHCP. Use Walkabout for configuring the network settings of the NK-NET.

For More Information on...

- how to configure the NK-IPS when it is connected directly to a network, please refer to “**Locating Devices Using Walkabout**” on page 2–2.

## Connecting the NK-NET to NK Series Devices

To connect the NK-NET to NK Series devices (routers, panels, and control devices), connect a CAT5 cable to the T-BUS RJ-45 port on the rear of the NK-NET and connect the other end to either of the RJ-45 ports of the device. Most NK Series devices are equipped with two RJ-45 ports for looping or daisy chaining devices.

## Installing DashBoard

### Overview

DashBoard can be downloaded at <http://www.rossvideo.com/dashboard>.

DashBoard is used to configure and operate the NK-NET, NK systems, and individual NK Series devices. The IPS Connection window in DashBoard is used to locate and to configure NK-NET devices once they have been detected and configured for the network using Walkabout.

### System Requirements

#### For More Information on...

- DashBoard system requirements, please refer to the *DashBoard User Manual* available at <http://www.rossvideo.com/dashboard>.

# Configuration and Operation

## Overview

### Configuring and Using the NK-NET

The NK-NET is used for connecting to a T-BUS system and can be interfaced using DashBoard.

The NK-NET needs to be detected and the IP address for the LAN configured for use within a network using Walkabout. Once the NK-NET settings have been configured in Walkabout, the NK-NET can be detected in DashBoard using auto discovery via SLP.

Optionally, NK-NET can also be added manually using Device Finder if it is on the same subnet.

For More Information on...

- connecting the NK-NET to a PC, please refer to “**Connecting the NK-NET Direct to a PC**” on page 1–3.
- how to configure the NK-IPS when it is connected directly to a network, please refer to “**Locating Devices Using Walkabout**” on page 2–2.

### Default Configuration

The NK-NET can be connected and used straight out of the box provided the network settings match the default network settings of the NK-NET. There are no passwords set for configuration of devices. The default configuration is as follows:

- IP address: 192.168.20.120
- Netmask: 255.255.255.0
- Port: 5000
- T-BUS address: 254

### Ethernet LEDs

The two status LEDs on the Ethernet connector will display the following behavior:

- Green (LINK/ACT):
  - › Solid green when link is good.
  - › Flashing when sending or receiving data.
- Yellow (SPEED):
  - › On for 100 Mb/s.
  - › Off for 10 Mb/s.
- Alternating flashing yellow (SPEED) and green (LINK/ACT) when NK-NET is in locate status.

# Locating Devices Using Walkabout

## Overview

Walkabout enables users to locate and configure the network settings of the NK-NET.

No.	Device	ID	Name	Address	Netmask	Gateway	Reboot	Default	Locate	Link Quality
1	NK-NET	000F9B027055	NK-NET	10.65.1.190	255.255.255.0	10.65.0.1	Reboot	Default	Locate	100%

**Figure 2.1** The Walkabout User Interface

## User Interface

**No.** (read-only) – the discovery order number of the NK-NET in Walkabout.

**Device** (read-only) – the device type.

**ID** (read-only) – the MAC address of the NK-NET.

**Name** – the name assigned to the NK-NET. Double click inside the cell to enter or edit the name.

**Address** – the IP address assigned to the NK-NET. Double click inside the cell to enter or edit the address.

**Netmask** – the IP netmask assigned to the NK-NET. Double click inside the cell to enter or edit the netmask.

**Gateway** – the IP gateway assigned to the NK-NET. Double click inside the cell to enter or edit the gateway.

**Reboot** – click this button to reboot the NK-NET.

**Default** – click this button to return the NK-NET to its default address, netmask, and gateway.

**Locate** – click this button to query the network for NK-NET devices.

**Link Quality** (read-only) – displays the status of the connection:

- **100%** (green) indicates that the connection is good.
- **0%** (white) indicates that the connection has failed.
- Red indicates a slow connection.
- Any percentage from 1% to 99% is a relative measure of response time.

## Adding an NK-NET to DashBoard

The NK-NET can be added to DashBoard via automatic discovery or manually using The NK-IPS Connection window.

### Adding an NK-NET to DashBoard via Automatic Discovery

The NK-NET can be detected in DashBoard using auto discovery via SLP once the IP address for the LAN has been configured for use within a network using Walkabout.

#### To add an NK-NET to DashBoard:

**1.** Open **Walkabout**.

If necessary, click **Refresh** to query the network for NK-NET devices.

**2.** Locate the NK-NET you want to add to DashBoard and configure the following information if necessary:

- **Name** – double click inside the cell to enter a name for the NK-NET.
- **Address** – double click inside the cell to enter an IP address for the NK-NET.
- **Netmask** – double click inside the cell to enter an IP netmask for the NK-NET.
- **Gateway** – double click inside the cell to enter an IP gateway for the NK-NET.

3. In **DashBoard**, refresh the **Basic Tree View**.

The NK-NET is added to the devices listed in the **Basic Tree View**.

### Manually Adding an NK-NET to DashBoard

NK-NET can be added manually to DashBoard by entering its IP address using the **NK-IPS Connection** window once it has been detected and configured in Walkabout.

**To manually add an NK-NET to DashBoard:**

1. Open **Walkabout**.


If necessary, click **Refresh** to query the network for NK-NET devices.

2. Locate the NK-NET you want to add to DashBoard and configure the following information if necessary:

- **Name** – double click inside the cell to enter a name for the NK-NET.
- **Address** – double click inside the cell to enter an IP address for the NK-NET.
- **Netmask** – double click inside the cell to enter an IP netmask for the NK-NET.
- **Gateway** – double click inside the cell to enter an IP gateway for the NK-NET.

3. In **DashBoard**, click **File > New > NK-IPS Connection**.

The **NK-IPS Connection** window opens.

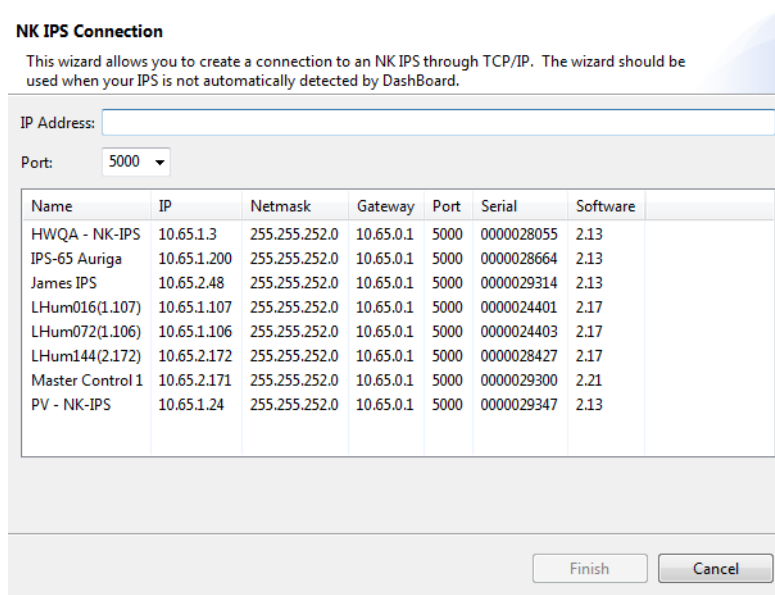

4. In the **IP Address** box, enter the IP address of the NK-NET you want to add to DashBoard.

5. Use the **Port** dropdown menu to select a port number.

The default is 5000. If the port number is changed in Walkabout, the port number in the NK-IPS Connection window must be configured to reflect this change.

6. Click **Finish**.

The **NK-IPS Connection** window closes and the NK-NET is added to the devices listed in the **Basic Tree View**.

# NK-NET Configuration

## Overview

The NK-NET uses the **NK-NET** device tab in DashBoard for user configuration.

## NK-NET Tab

The **NK-NET** tab allows users to configure the interface options for the NK-NET, as well as having the ability to assign a name and brief details to the device itself.

- ★ Any changes to the parameters on the **NK-NET** tab will need to be sent to the NK-NET using the **Send Configuration** button before they take effect.

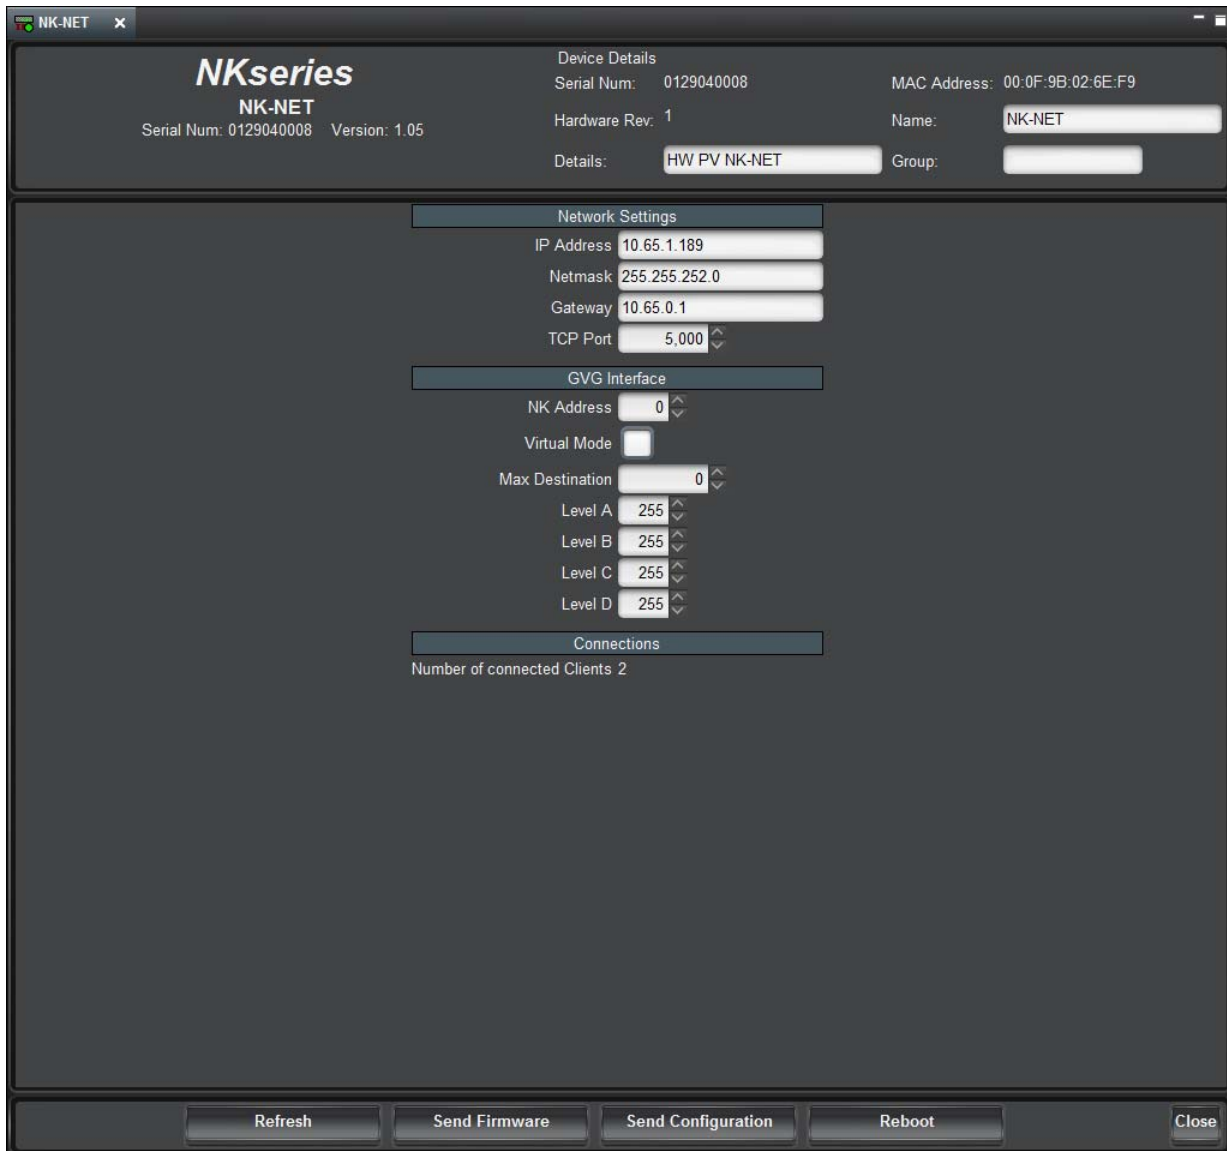


Figure 2.2 NK-NET tab



## Device Details

**Serial Num** (read-only) – the serial number is set in the factory before shipping and is unique to each device. This parameter is not user configurable.

**Version** (read-only) – the software version.

**Network Settings** – N/A

**Serial Num** (read-only) – the serial number is set in the factory before shipping and is unique to each device. This parameter is not user configurable.

**Hardware Rev** (read-only) – the hardware version of the NK-NET

**Details** – assigned by the user to give an NK-NET specific details. For example, a physical location or a brief description of its use.

This field has a maximum of 16 characters and is used for description and identification only.

**MAC Address** (read-only) – the Media Access Control address (MAC address) is the unique hardware address for the NK-NET on a network. This parameter is not user configurable.

**Name** – this field can be assigned by the user to uniquely name an NK-NET.

This field has a maximum of 16 characters and is used for description and identification only.

**Group** – a group number can be assigned by the user to organize devices into groups. For example, users can assign separate group numbers for devices in different physical areas.

This field has a maximum of 10 characters, and by default is blank.

## Network Settings

★ Newly assigned IP addresses and netmasks are checked for valid values before being applied to an NK-NET. If the new values are invalid they will be discarded silently. Only a refresh of the NK-NET tab will show that the values were not set.

**IP Address** – enter or edit the IP address of the device.

**Netmask** – enter or edit the IP netmask of the device.

**Gateway** – enter or edit the IP gateway of the device.

**TCP Port** – enter or select the Transmission Control Protocol port number used for network communication. By default, the TCP Port is 5000, and any client devices/apps should be setup with the same port number.

## GVG Interface

**NK Address** – enter the NK address the NK-NET will use when translating messages arriving from a device using GVG Native protocol to NK messages.

**Virtual Mode** – select this check box to make the switch requests arriving from GVG Native protocol devices as virtual switch requests (NK-VRC is required for this).

**Max Destination** – enter or select the maximum NK router destinations that the GVG Native protocol should handle. Using lower values improves performance.

**Level** – use the four boxes to enter or select NK level numbers to use for GVG Native protocol. Levels that don't match these values will be ignored. Set to zero if not used.

## Connections

Displays the number of clients connected to the NK-NET.

## Other Functions

**Refresh** – click this button to revert to the configuration previously sent to the NK-NET. The **NK-NET** tab will display the last settings that were sent to the NK-NET via the **Send Configuration** function.

**Send Firmware** – click this button to open a file browser to select a software/firmware file to send to the NK-NET.

**Send Configuration** – click this button to upload the settings to the NK-NET. All configuration items become active only after uploading.


**Reboot** – click this button to reboot the NK-NET. This function does not clear the NK-NET settings.

**Close** – click this button to close the **NK-NET** tab in DashBoard.

## NK Switchboard Configuration and Operation

The NK Switchboard enables the routing matrix to be monitored and optionally controlled on any router on any NK-NET detected on the network. The NK Switchboard is configured using the NK Switchboard tab in DashBoard.

★ It is recommended to configure the NK Switchboard globally before performing any switches.

Once DashBoard has been installed, the NK Switchboard can be accessed by clicking on the NK Switchboard button (  Switchboard ) from the toolbar. If the Switchboard has already been opened in the work area, activating it from either the menu or the toolbar will open it as a device tab in the device view of DashBoard.

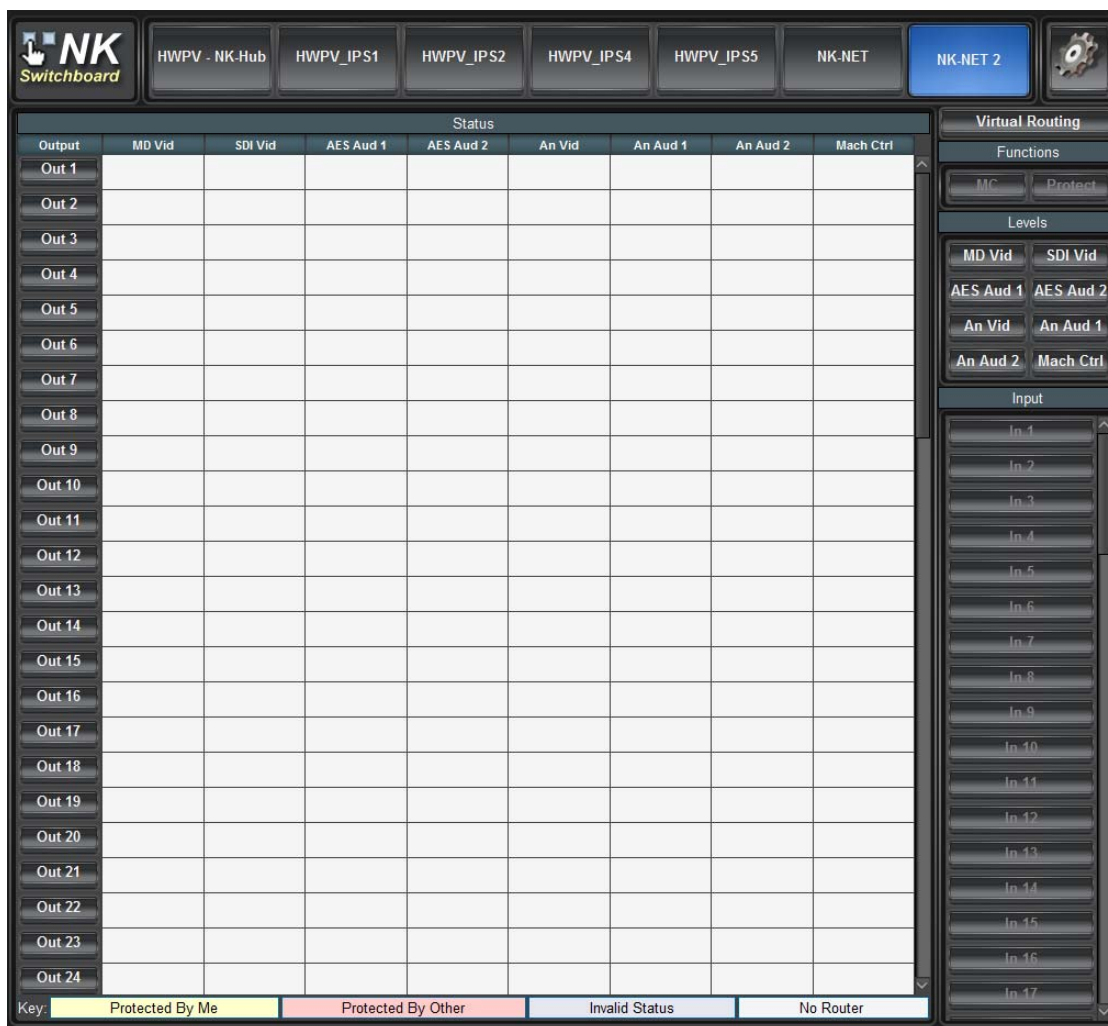


Figure 2.3 NK Switchboard tab


## Switching

The NK Switchboard is designed to emulate basic behaviour of the RCP-NK1. Switches are performed by first selecting the **Level(s)** required to be switched, then by selecting the **Output**, and finally selecting the **Input**.

When an **Output** has been selected, all **Input** buttons pressed thereafter will switch to that output. This is indicated by the blue line highlighting the current output selection.

## Source, Destination, and Level Buttons

The **Input** (Source), **Output** (Destination), and **Level** buttons displayed on the NK Switchboard can be edited individually on-the-fly as required by right-clicking on the desired button and editing the fields. The button edit menu enables users to define text labels for the buttons display (**Edit Text**), the relative input, output or level value (**Edit Value**), as well as **Add** or **Delete** buttons.

The number of inputs, outputs, and levels can be configured using the Configure IPS dialog box. Click the **Configure Switchboard** button (  ) to open the Configure IPS dialog box.

### For More Information on...

- the Configure IPS dialog box, please refer to “**Configure IPS**” on page 2–8.

## The Level Buttons

The **Level** buttons, when selected, enable switching on the corresponding levels. The total number of **Level** buttons shown is reliant on the number entered in the **Configure IPS** dialog box.

## The Input (Source) Buttons

The **Input** buttons select the source or sources to be switched on the levels previously selected. The total number of **Input** buttons shown is reliant on the number entered in the **Configure IPS** dialog box.

## The Output (Destination) Buttons

The **Output** buttons select the destination for the source to be switched on the levels previously selected. The total number of **Output** buttons shown is reliant on the number entered in the **Configure IPS** dialog box.

## Virtual Routing Button

Press the **Virtual Routing** button to have NK Switchboard perform all switches in virtual routing mode. If de-selected, any routing devices controlled through NK Switchboard will use physical switching.

- ★ The NK-VRC virtual routing core is required for virtual routing and resource management.

## The Function Keys

The NK Switchboard function keys provide Machine Control switching (the **MC** button) and protecting of selected inputs/outputs (the **Protect** button). For the **Protect** and **MC** buttons to be active, they must be enabled from the **Configure IPS** dialog box.

## Protects


The NK Switchboard displays protected outputs by either a yellow highlight, or a pink highlight (use the **Key** at the bottom of the **NK Switchboard** tab as a reference). Outputs that are highlighted yellow are protected by that computer and outputs that are highlighted pink are protected by another user or another panel in the system.

For the protect system to be accurate, each panel and computer operating DashBoard must have its own unique address, configured in the **Configure IPS** dialog box.

## Configure IPS

Use the **Configure IPS** dialog box to configure the number of inputs/outputs and levels, and to turn on protects and machine control functions.

In **NK Switchboard**, click the **Configure Switchboard** button (  ) to open the **Configure IPS** dialog box.

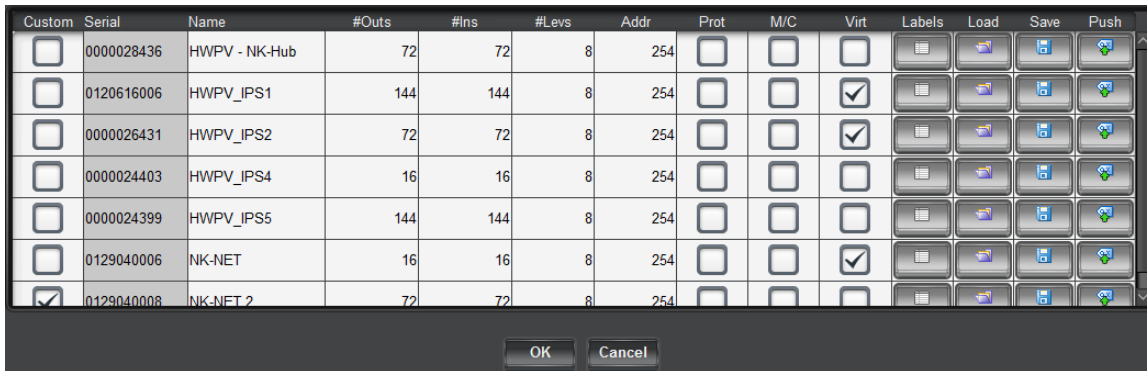

**Figure 2.4** Configure IPS dialog box

**Custom** – select this check box to save custom settings when saving a .nks file. Any changes to the settings of an NK-NET in the **Configure IPS** dialog box will automatically select the check box.

**Serial** (read-only) – the serial number of the device.

**Name** – the name of the device.

**#Outs** – double-click inside the box to enter the number of outputs (destinations).

**#Ins** – double-click inside the box to enter the number of inputs (sources).

**#Levels** – double-click inside the box to enter the number of levels.

**Addr** – By default, the NK Switchboard T-BUS address is the same as the NK-NET T-BUS address, but it can be changed. The most common reason for changing the address would be when using resource management.

**Prot** – select this check box to enable the protect function.

**M/C** – select this check box to enable the machine control function.

**Virt** – select this check box to enable virtual routing and resource management.

★ The **Virt** check box will be selected in the Configure IPS dialog box by default if an NK-VRC is installed as part of the system connected via T-BUS to the NK-NET.

**Labels** – click this button to import global labels. In order for the loaded .nks file to be applied to NK Switchboard, the selected NK-NET needs to be re-selected in NK Switchboard before any changes will be effected.

**Load** – click this button to load a saved configuration from a .nks file.

**Save** – click this button to save the configuration to a .nks file.

**OK** – click this button to load the changes and close the **Configure IPS** dialog box.

**Cancel** – click this button to close the **Configure IPS** without applying changes.

### For More Information on...

- on using resource management, please refer to the *NK-VRC User Guide*.

# Appendix A: NK-VCP and NK-Hub

## NK Virtual Control Panel


### Overview

The NK Virtual Control Panel (NK-VCP) is a software application that communicates via the NK-NET and enables monitoring and control of the router matrix. If required, it is also possible to control multiple systems, alternating between each as needed.

As the NK-VCP works in conjunction with the NK-NET, NK-VCP control can be password protected to only allow authorized users to perform router functions.

The NK-VCP runs in the Java platform, using version 1.4.2 or later of the Java Runtime Environment (JRE). This allows the application to run on any system that supports the Java Virtual Machine (VM). The program runs on Windows.

For the NK-VCP to load, the JRE must first be installed.

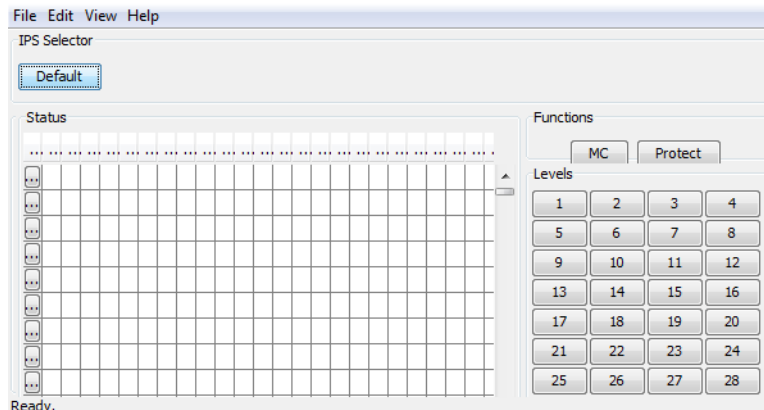

**Figure A.1** The NK Virtual Control Panel

### Note:

- Although the NK-VCP will operate with Java Runtime Environment 1.4.2 and later, it is recommended that users have the latest JRE installed on their computer before using the NK-VCP.

### For More Information on...

- installing the NK-VCP, please refer to “**Installing NK-VCP**” on page A-4.

## Starting the NK-VCP

After installation, the NK-VCP can be started from the link placed on the desktop or from the **Start** menu.


All communication requests and activity are shown in the bottom left corner of the NK-VCP interface.

## Adding a NK-NET

Multiple NK-NET devices can be added to the one NK-VCP. When the NK-VCP is first loaded, the default NK-NET will need to be configured. To add or change the settings for the default NK-NET, or add another NK-NET to the NK-VCP, first select **Preferences** from the **Edit** menu.

## The Preferences Dialog Box

The **Preferences** dialog box is used to add or change configuration of the NK-VCP, the NK-NET device(s) to be interfaced, and the network details required for the NK-VCP and the NK-NET to communicate with each other.

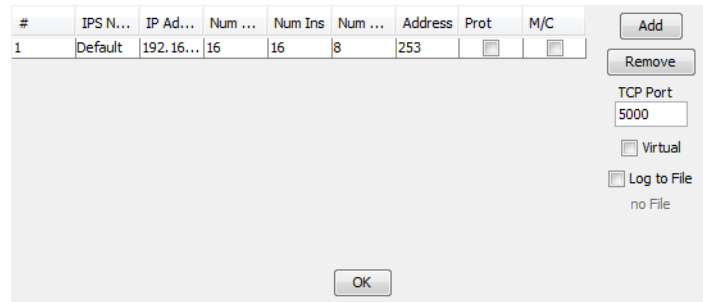

**Figure A.2** Preferences dialog box

**# (Number)** – indicates the NK-NET devices available to the NK-VCP.

**NK-IPS Name** – shows a unique name for each NK-NET added to the NK-VCP. Unique or descriptive names can be assigned to distinguish NK-NET devices from one another.

**IP Address** – The IP address is required for the NK-VCP to connect to an NK-NET and is the link for network communications. The IP address will first need to be detected via the NK-IPS Connection window in Dashboard and entered into this field.

**Num Outs** – specifies how many outputs are to be viewed and controlled by the NK-VCP for a particular NK-NET.

★ If the output range of routers connected to the NK-NET exceeds the number of outputs (**Num Outs**) specified in the **Preferences** dialog box, the remaining outputs will not be shown on the NK-VCP.

**Num Ins** – specifies how many inputs are to be viewed and controlled by the NK-VCP for a particular NK-NET.

★ If the input range of routers connected to the NK-NET exceeds the number of inputs (**Num Ins**) specified in the **Preferences** dialog box, the remaining inputs will not be shown on the NK-VCP.

**Num Levels** – specifies how many levels are to be viewed and controlled by the NK-VCP for a particular NK-NET. The maximum number of levels for the NK Series routers is eight, and the default value for any NK-NET added to the NK-VCP is also eight.

**Address** – defines the T-BUS address that the NK-VCP will use when sending switch requests to the NK-NET. By default, the NK-VCP's address is 253. If multiple NK-VCPs are to be used within the one NK system, it is strongly recommended that they be given different addresses within that system because it is necessary for proper function of protects.

**TCP Port** – defines which port is used for network communication. By default, the TCP Port is 5000 but must match the port defined on the NK-NET network settings.

### For More Information on...

- the NK-IPS Connection window, please refer to “**Locating Devices Using Walkabout**” on page 2–2.

## Source, Destination, and Level Buttons

The **In** (Source), **Out** (Destination), and **Level** buttons displayed on the NK-VCP can be edited as required by right-clicking on them. The button edit menu enables users to define the text the buttons display (**Edit text**), the respective input, output, or level value (**Edit value**), and **Add** or **Delete** buttons.

## The Level Buttons


The **Level** buttons, when selected, enable switching on the required levels. The total number of **Level** buttons shown is reliant on the number entered in the **Preferences** dialog box.



**Figure A.3** Level buttons

## The Input (Source) Buttons


The **Input** buttons select the source (or sources) to be switched on the levels previously selected. The total number of **Input** buttons shown is reliant on the number entered in the **Preferences** dialog box.

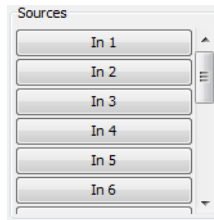

**Figure A.4** Source buttons

## The Output (Destination) Buttons

The **Output** buttons select the destination for the source to be switched on the levels previously selected. The total number of **Output** buttons shown is reliant on the number entered in the **Preferences** dialog box.



**Figure A.5** Output buttons

## Switching

The NK-VCP is designed to emulate basic behavior of the RCP-NK1.

### To perform switches:

1. Select the **Level(s)** required to be switched.
2. Select the **Output**.
3. Select the **Input**.

When an **Output** has been selected, all **Input** buttons pressed thereafter will switch to that output. This is indicated by the blue line highlighting the current output selection.

## Protecting Outputs

The **Protect** button is used to lock the current output (destination) from switching by other control panels or virtual control panels.

Clicking **Protect** will protect the current destination. Clicking **Protect** a second time will clear the protect.

If a switch is attempted for an output that has been protected, a message will be displayed describing the cause of the error.

## Machine Control Button

The Machine Control button (**MC**) is used to reciprocally switch the source (master) and destination (slave) selected. Click **MC** to enable machine control operation and then press the required destination and source.

### For More Information on...

- the Machine Control operation and reciprocal switching, refer to the *NK Series User Guide*.

## Installing NK-VCP

### Overview

To use the NK-VCP, the Java Runtime Environment must first be present on your system. If this software is not present on your system, or if you are unsure, follow the guidelines below to ascertain whether it needs to be installed or updated.

- ★ NK-VCP is only supported Windows-based operating systems and will launch in 32-bit environments only.

### System Requirements

- Intel Pentium 200Mhz or equivalent
- Microsoft Windows XP or later
- 32MB of RAM
- 150MB of available hard-disk space

## Installing the Java Runtime Environment (JRE)

The Java Runtime Environment is required for NK-VCP operation.

### Determining Previous JRE Installations

If you are unsure what version (if any) of the JRE is installed on your computer, you will need to open a command line prompt.

#### To determine previous JRE installations in Windows 7:

1. From the **Start** menu:
  - select **All Programs**→**Accessories**→**Command Prompt** or,
  - select **Run** and type `cmd`
2. Once you have opened the Command Prompt, type `java -version` and press **Enter**.

#### To determine previous JRE installations in Windows XP:

1. From the **Start** menu, select **All Programs**→**Accessories**→**Command Prompt**
2. Once you have opened the Command Prompt, type `java -version` and press **Enter**.

If you have JRE installed, a message will inform you of which version and build you are running, if you have an earlier version than 1.6, then you will need to download and install the latest version.

If you receive a message that says **java is not recognized as an internal or external command** then you will need to download and install the latest version.

#### To install the NK-VCP:

1. Double-click **install.exe**.
2. Follow the onscreen instructions.

The installation wizard will guide you through the rest of the installation process.



## NK-Hub

NK-Hub is a software application that allows multiple T-BUS segments to be bridged together via NK-NET gateways. It can be used to extend the range beyond the limit of T-BUS cabling.

To use the NK-Hub, the Java Runtime Environment is required.

### **For More Information on...**

- installing and operating the NK-Hub, please refer to the *NK-Hub User Guide*.



# Appendix B: Troubleshooting

## NK-NET

The following problems and questions are related to the NK-NET, with brief explanations and troubleshooting help. For questions regarding other problems or to report problems, contact Ross Technical Support.

### Network/Connection Problems

Most NK-NET network problems should be solved by your Network Administrator and are usually TCP/IP address or port problems. Contact your Network Administrator for networking and address problems.

### GVG Settings

If the GVG router isn't switching past a certain destination, the max destination settings should be checked.

## NK-VCP

The following problems and questions are related to the NK-VCP, with brief explanations and troubleshooting help. For questions regarding other problems or to report problems, please contact support staff.

### Error Messages

*NK-NET "NK-IPS Name" has maximum licensed number of virtual panels connected. Upgrade License.*

The NK-NET has the maximum number of NK-VCPs connected to it.

- Ensure that all NK-VCPs connected are being used, if they are not, close them to clear communication to the NK-NET.

*Cannot Switch - Output Protected*

The output for the attempted switch has been protected by another NK-VCP or control panel.

- To clear the protect, locate the NK-VCP or control panel that initially activated the protect and press the **Protect** button/key.

*Cannot Protect - No response from Level x*

The level that requires protection has briefly gone offline or is busy.

- Query the devices from in DashBoard and ensure that it is online.
- Check all physical connections to the router (T-Bus and power).
- Check for, and amend, alarms on the router's **Device Properties** page.

*Cannot Protect - Output already Protected by another*

The output for the attempted protect has been protected by another NK-VCP or control panel.

- To clear the protect, locate the NK-VCP or control panel that initially activated the protect and press the **Protect** button/key.

*Error using System Look and Feel. Defaulting to Cross Platform Look and Feel.*

The JRE encountered an error when applying the operating system look and feel, the default Java look and feel is used instead.

- Try installing the latest Java version.

## Network/Connection Problems

*The NK-VCP does not successfully connect to a NK-NET*

The NK-NET and NK-VCP must have matching TCP ports to enable communication within a network. Due to some Windows security problems, some network configurations will block port 4444 for all TCP/IP communications.

## General Problems

*Not all Inputs or Outputs are shown*

The Input and Output buttons do not show all available sources and destinations. By default, when a NK-NET is added in the **Preferences** dialog box, the **Number of Inputs** and **Number of Outputs** are set to 16. For a 32x32 size router, the inputs and outputs 17 to 32 will not be displayed.

- The **Number of Inputs** and **Number of Outputs** need to be configured to match or exceed the router size in the **Preferences** dialog box.
- In the case of the NK-S32, which actually has 34 inputs and 34 outputs, the **Number of Inputs** and **Number of Outputs** need to be configured to match or exceed the router size in the **Preferences** dialog box.