

Comfort Pro and T-Comfort 930 DSL Operation on Standard Terminals

User Manual



Contents

Systematic Telephony	5
■ You Need Authorisation	5
■ Glossary	6
■ Signals & Symbols	6
Making Calls	7
■ Seizing an External Line	7
■ Making Internal Calls	8
■ Making External Calls	8
■ Speed Dialling	8
■ Accepting a Call	9
■ Calls in the Queue	9
■ Parking a Call	10
■ Accessing Your Voicebox	10
Several Parties	12
■ Consultation	12
■ Toggling	12
■ Disconnecting a Call	12
■ Transferring a Call and Notifying the Destination Party	13
■ Transferring a Call without Notifying the Destination Party	13
■ Starting a Three-Party Conference	14

■ Ending a Three-Party Conference.	14
■ Connecting Two External Parties with Each Other	15
■ Connecting Two Parties (Internal/External) with Each Other	15
Call Protection	15
■ Call Waiting On/Off	15
■ Accepting a Waiting Call.	16
■ Rejecting a Waiting Call	16
■ Call Protection On/Off.	17
User Groups	17
■ Pick-up	17
■ Pick-up Selective	18
■ Logging out of/into All Hunt Groups	18
■ Logging out of/into Individual Hunt Groups.	18
Forwarding Calls	19
■ Call Forwarding “Immediately”	20
■ Call Forwarding “On Busy”	21
■ Call Forwarding “After Delay”	21
■ Call Forwarding for Other Users	22
■ MSN Call Forwarding	23
■ All Call Forwarding Off	25
■ Follow Me	25
■ Call Forwarding for Specific Call Numbers	26

Special Calls	27
■ VIP Call.....	27
■ Baby Call	27
■ Announcement.....	28
■ Intercom.....	28
■ Dialout for Another Terminal	29
■ Callback on Busy	29
■ Door Opener	30
■ Entrance Intercom Calls	30
■ Keypad Dialling.....	32
Even More Protection	32
■ Telephone Lock	32
■ Calling Line Identification Restriction (CLIR) on a Call-by-Call Basis	33
■ Changing the User PIN	33
■ Intercept.....	34
Special Modes	34
■ Deactivating Least Cost Routing (LCR).....	34
■ Calling Selectively via Routes	34
■ Time Control	35
■ Deleting All Call Forwarding in the Exchange	36

Remote-Controlled Functions	36
■ Remote-Controlled Dialling (Call Through).....	37
■ Remote-Programmable Call Forwarding.....	38
■ Calling a Voicebox from a Remote Terminal.....	39
■ Setting up an Internet Connection from Remote (ISP Trigger Call).....	40

Systematic Telephony

The Comfort Pro and T-Comfort 930 DSL communications systems, referred to hereafter as “the Comfort Pro/T-Comfort 930 DSL”, enables the connection of standard terminals (standard analogue telephones, ISDN telephones and cordless GAP telephones). SMS-enabled terminals can also be used. With this configuration you can telephone conveniently and use the features of the Comfort Pro/T-Comfort 930 DSL via code-number procedures.

This guide describes **how** you operate your telephone in order to use the desired functions. In most cases, you can do this by pressing the key combination ***#**, **R**, together with a specific sequence of digits.

Please note the specific operating characteristics of your telephone:

On standard analogue telephones featuring pulse dialling, it is not possible to enter data with the star key ***** or hash key **#**.

As a result, the functionality of the Comfort Pro/T-Comfort 930 DSL features is only available to you on a limited basis. It is thus better to use telephones equipped with dual-tone multi-frequency (DTMF) dialling. Modern telephones often allow you to switch between the two dialling modes.

In the case of **ISDN telephones**, certain features can be operated via menus or function keys. Refer to the operating instructions of these telephones for details.

On **telephones with a display**, you can read the caller's telephone number if the telephone supports this feature and the caller has activated it. What other information is displayed depends on the telephone. Charge display (ISDN telephones only) requires prior configuration by your network operator.

You Need Authorisation

Most of the features mentioned in this Quick Reference Guide are only available to you if you have appropriate authorisation. This will be set up by your system administrator when configuring the Comfort Pro/T-Comfort 930 DSL. If you are unable to use a particular feature or have any questions, consult your system administrator. Please refer to the chapter entitled “Frequently Asked Questions” in the “Mounting and Commissioning” user guide for tips on how to deal with any faults you may experience while using your telephone.

Glossary

If you would like more details about any of the system features described in this Quick Reference Guide, please refer to the "Glossary" supplied with your Comfort Pro/T-Comfort 930 DSL (see PDF file on the enclosed CD-ROM).

Signals & Symbols

Audio and ringer signals

You will find a table showing the audio and ringer signals on the inside back cover of this user guide (the page before last of the PDF file).

Symbols

 lift the handset

 **R** press the R key during the current call ("consultation call" mode)

 ***** press the star key

 **7** press digit key "x" (7 here)

 **#** press the hash key

 (xxx) dial the digits of the telephone number (tel. no.) "xxx"

 ... speak

 hang up the handset

Making Calls

Seizing an External Line

If your telephone is set to **manual** line seizure, all call keys on your telephone first seize an internal line, and you can dial an internal number straight away. When making external calls, you must first press the line seizure code digit (presetting: **0**).



Note: This also applies to all enquiry calls and call forwarding to external destinations, but not to call forwarding “MSN”.

Your system administrator configures this code digit for all subscribers on the Comfort Pro/T-Comfort 930 DSL system and will tell you what value is currently valid.

If your telephone is set to **automatic** line seizure, all call keys on your telephone seize an external line, and you can dial external numbers straight away. In order to reach internal subscribers, press the star key twice ***** ***** before dialling the internal number.



Note: This also applies to the destination numbers you specify when configuring call forwarding or a baby call.

If you hear the external dialling tone when you lift the handset, your terminal has been set to **automatic** seizure of the external line. If, on the other hand, you hear the internal dialling tone when you lift the handset, your terminal has been set to **manual** seizure of the external line.

Please refer to the table showing the audio and ringer signals on the inside back cover of this user guide (the page before last of the PDF file). If you have any questions regarding this topic, consult your system administrator.

Making Internal Calls

    (internal tel. no.) On automatic seizure of external line

  (internal tel. no.) On manual seizure of external line

Making External Calls

  (external tel. no.) On automatic seizure of external line

  (external access code, e.g.

) (external tel. no.)

Speed Dialling

    (speed-dialling no.)

For consultation calls:

 (speed-dialling no.)

You can use this procedure to retrieve a number from the **central** telephone book by entering its two-digit or three-digit speed-dialling number (speed-dialling no.). The two-digit speed-dialling numbers are in the range 00...99, the three-digit are in the range 000...999. Ask your system administrator how many digits are valid.

Alternatively:

 (speed-dialling no.) 

For consultation calls:

 (speed-dialling no.) 

The central telephone book is managed by users who have appropriate authorisation. The Comfort Pro/T-Comfort 930 DSL can store up to 2,000 telephone numbers, for each telephone number up to three speed-dialling numbers can be configured.

Accepting a Call



When your telephone rings, lift the handset or press the hands-free key. The type of ringing signal indicates (on a standard analogue telephone) whether it is an internal or external call.

Calls in the Queue



Your system administrator can configure and activate a queue feature for your telephone in the Comfort Pro/T-Comfort 930 DSL. New calls can enter this queue while you are making a call. The callers in the queue hear a ringing signal. The number of calls allowed in the queue is set by the system administrator during system configuration, e.g. 5 calls. When this number is reached, additional callers hear a busy signal. The calls in the queue are put through according to their priority (baby calls, doorway calls, VIP calls, other internal and external calls); calls in the same category are lined up according to the time of their arrival.

Calls which have been queued for too long a time are removed; these callers subsequently also hear the busy signal. The time until an external call is cleared from a queue is defined by the network operator. In Germany this is usually two minutes and in other European countries usually three minutes.

A queue for your telephone can also be administered when it is part of a user group, and at the same time it has an effect on the forwarding of calls. For details, please refer to **User Groups starting on page 17** and **Forwarding Calls starting on page 19**.



Note: If a queue for your telephone is active, it may be wise to activate call protection.

Parking a Call


Parking a call



(Park-Codes 0-9) 

You can park one or more calls to make other calls or put down the receiver and engage in other activities. Parked calls are recorded system internal in a list. You can park up to 10 calls.

Unparking a call



Parking and unparking a call can be made on different terminals. On ISDN telephones you can park/unpark calls using a menu.

Authorisation for parking connections and the period of time after which a recall will be executed are defined by the administrator during the configuration of the system.

Accessing Your Voicebox

If your system administrator has configured a voicebox for the telephone number of your terminal, calls which you do not (or cannot) accept are diverted to this box. A number of analogue telephones and ISDN telephones support the "Message Waiting Indication" feature, that is the notification of messages on the telephone. In this way you are notified, for example, of not listened to messages. Please review the user guide of the manufacturer.

You can access and edit voicebox messages from your telephone:

Calling your voicebox directly ...

(from a telephone whose number is assigned to your voicebox)

1. Enter the telephone number your system administrator has configured for the **Comfort Pro A IAB** (answering machine) application.
2. If the PIN query for the voicebox is activated, enter your PIN after the prompt. This query always appears for a new voicebox. The default PIN setting is "0000".

You will now be **directly** connected with your voicebox. The **Comfort Pro A IAB** (answering machine) application will inform you if there are any new messages in this voicebox.

3. You can now access and edit messages and make settings for the voicebox.
4. Please follow the instructions in the voice menu for all further operating steps.

Via the **Comfort Pro A IAB (answering machine) application ...**

(from a telephone whose number is not assigned to your voicebox)

1. Enter the internal telephone number which your system administrator has configured for the **Comfort Pro A IAB** (answering machine) application.

You hear a text prompting you to enter a voice-box number.

2. Now enter the telephone number of the terminal whose voice-box messages you wish to access. Confirm the input by pressing *** * ***.

It is not possible to access your voicebox unless the authorisation for "remote access" has been activated.

3. If the PIN query has been activated for the voicebox, enter your PIN after the prompt.

The **Comfort Pro A IAB** (answering machine) application will inform you if there are any new messages in this voicebox.

4. You can now access and edit messages and make settings for the voicebox.
5. Please follow the instructions in the voice menu for all further operating steps.



Note: For detailed information on the use and operation of the **Comfort Pro A IAB** (answering machine) application, please refer to the user guide for the optional component "Comfort Pro A IAB".

Several Parties

Consultation

Internal:  **R**  (internal tel. no. or speed-dialling no.)  ...

You can speak with a second internal or external party during a call by putting the first party on hold.

External:  **R**  (external tel. no. or speed-dialling no.)  ...

After ending (disconnecting) the consultation call, you can return to the party on hold (see **Disconnecting a Call** on page 12).

Toggling

 **R** **2**  ...

You can toggle (i.e. switch back and forth) between two calls.

On ISDN telephones you toggle between two connections by means of the corresponding function key or a menu.

If you want to talk to both parties at the same time, you can set up a three-party conference (see **Starting a Three-Party Conference** on page 14).

Disconnecting a Call

 **R** **1**  ...

When you have several calls, you can disconnect one (e.g. a consultation call) without hanging up the handset.

On ISDN telephones you disconnect calls by means of the corresponding function key or a menu.

Transferring a Call and Notifying the Destination Party

 **R** (external access code,
e.g. **0**)  (destination no.)
 ... 

You can transfer an incoming call to another internal or external number. After notifying the other party of the transfer, hang up the handset.

If the party to whom you want to transfer the call is unavailable or busy, disconnect this call by pressing the **R** key. You will again hear a dialling tone and can set up a new consultation, or press the **R** key once more to speak to the party on hold again.

To connect an external party with an external party use the procedure described in the section **Connecting Two External Parties with Each Other** on page 15.

Transferring a Call without Notifying the Destination Party

 **R** (external access code,
e.g. **0**)  (destination no.) 

You can transfer an incoming call to another internal or external destination. When you hear the ringing signal, hang up the handset.

If the call you wish to transfer is not accepted within a certain length of time, you will receive an automatic recall. You are reconnected with the original caller after lifting the handset. The length of time for the automatic recall is set by your system administrator in the **Configurator** for all Comfort Pro/T-Comfort 930 DSL users.

If the party to whom you want to transfer the call is busy, disconnect this call by pressing the **R** key. You will again hear a dialling tone and can set up a new consultation, or press the **R** key once more to speak to the party on hold again.

To connect an external party with an external party use the procedure described in the section **Connecting Two External Parties with Each Other** on page 15.

Starting a Three-Party Conference

 **R 3**  ...

You are speaking with someone on the telephone. You set up a further connection (e.g. by consultation or by accepting a call). You can toggle between these parties (see **Toggling** on page 12) or press the keys **R 3** to start a three-party conference and speak to both parties at the same time.

On ISDN telephones you start a three-party conference by means of the corresponding function key or a menu.

Ending a Three-Party Conference

Toggle:  **R 2**

End: 

To end a three-party conference and continue telephoning with only one of the other two parties, press the keys **R 2** to switch to the toggle mode. Then you can disconnect one of the parties (see **Disconnecting a Call** on page 12). You end a three-party conference by replacing the handset.

On ISDN telephones you end a three-party conference by means of the corresponding function key or a menu.

Connecting Two External Parties with Each Other



You are speaking with an external party and have another (external) call on hold. With this procedure you can connect the two parties with each other.

On ISDN telephones you use the corresponding function key or a menu.



Please note: If you connect two external parties whom you called, you will be charged for the cost of the resultant call.

Connecting Two Parties (Internal/External) with Each Other



You are speaking with an external party and have another (internal) call on hold. You can connect the two parties with each other by simply hanging up the handset.

Call Protection

Call Waiting On/Off

On: * 4 3 #

Off: # 4 3 #

If you are called while you yourself are telephoning, you will hear the call-waiting signal which tells you that there is a second party wishing to speak to you. You can deactivate the call-waiting signal (call waiting off, call-waiting protection on) and reactivate it (call waiting on, call-waiting protection off). When call-waiting protection is active, the caller hears a busy signal.

On ISDN telephones you activate/deactivate the call waiting tone by means of the corresponding function key or a menu.

Accepting a Waiting Call

End:     ...

Toggle:  **R** **2**  ...

While you are telephoning, the call-waiting signal tells you that there is a second party wishing to speak to you. You can end the first call and accept the new call; or you can hold the first call, accept the second call and toggle between the two.

If you toggle between the parties, you can also start a three-party conference (see **Starting a Three-Party Conference** on page 14).

On ISDN telephones you accept the call request indicated by the call-waiting signal by means of the corresponding function key or a menu.

Rejecting a Waiting Call

 **R** **0**  ...

While you are telephoning, the call-waiting signal tells you that there is a second party wishing to speak to you. You can reject the waiting call, in which case the caller will then hear a busy signal.

On ISDN telephones you reject a waiting call by means of the corresponding function key or a menu.

Call Protection On/Off

For all (internal and external) calls

On: * 4 2 #

Off: # 4 2 #

Only for internal calls

On: * 4 2 1 #

Off: # 4 2 1 #

Only for external calls

On: * 4 2 2 #

Off: # 4 2 2 #

You can protect your telephone against receiving internal and external calls (except VIP and hunt group calls).

When configuring your user group, your system administrator sets whether a caller hears a dial tone or an engaged tone when call protection is activated; ask him for the setting which applies to you.

When call protection is activated, you hear the special dialling tone after lifting the handset.

User Groups

Pick-up

* 0 # ...

For consultation calls:

* 0 # ...

If another telephone in your pick-up group rings, you can pick up the call on your telephone. If a **queue** is active for the other telephone, you will pick up the next call lined up in this queue. Pick-up groups are configured by your system administrator.



Note: If pick-up protection is activated in the called party's user group, you cannot pick up calls to his telephone number.

Pick-up Selective

 * 0 *

 (internal tel. no.) #  ...

For consultation calls:

 R * 0 *

 (internal tel. no.) #  ...



If a telephone outside your hunt group rings, you can pick up this call (with the telephone number of the party who is being called). If a **queue** is active for the telephone of this other party, you will pick up the next call lined up in this queue.

Note: If pick-up protection is activated in the called party's user group, you cannot pick up calls to his telephone number selectively.

Logging out of/into All Hunt Groups

Logout:  * 3 1 *

Login:  # 3 1 #

You can log out of or into all hunt groups configured for you.

Logging out of/into Individual Hunt Groups

Logout:  * 3 1 *

 (internal tel. no.) #

Login:  # 3 1 *

 (internal tel. no.) #



Using your own telephone number, you can log out of or into individual hunt groups configured for you.

All hunt group calls are configured by your system administrator.

Note: Your logout from a hunt group will not go into effect if you are the last available member of a hunt group. The system ensures that incoming calls for a group can always be signalled to at least one terminal.

Forwarding Calls

You can forward internal or external calls intended for yourself (with the exception of hunt group calls) to another (**internal** or **external**) telephone number. Call forwardings can also be made to speed dialling numbers which have been stored in the central telephone book (please refer to the section **Speed Dialling** on page 8). You can decide whether only internal, only external or both types of calls are forwarded. If the **Comfort Pro A IAB** (answering machine) application has been installed, calls can also be forwarded to a voicebox which has been configured for you.

Calls can be forwarded either immediately, after a specified period of time (delay) or if the line is busy. You can configure more than one call forwarding mode ("Immediately", "After Delay" or "On Busy"). However, only one forwarding function can be activated for each mode.

Example:

You can configure "Immediately forwarding of external calls" to the number 333, and "After Delay forwarding of internal calls" to the number 444.

Call forwarding is executed in the Comfort Pro/T-Comfort 930 DSL, or in the case of external calls, in the network operator's exchange. The time for "After Delay" forwarding is preset in the Comfort Pro/T-Comfort 930 DSL and can be changed by the system administrator in the Web console's **Configurator**.

If your system administrator has given you the authorisation, then you can also program call forwarding for call numbers of other users.

"MSN call forwarding" is available for ISDN multi-terminal accesses. Using this forwarding mode, you can forward incoming **external** calls to **external destinations** for each MSN (multiple-subscriber number) – providing you have the necessary authorisation (see also **MSN Call Forwarding** starting on page 23).

If a **queue** is active for your telephone, this is not taken into consideration when configuring "Immediately" or "On Busy" call forwarding, and its content is **not** transferred to the destination terminal. Calls already in the queue can only be accepted on the original terminal – after you have deactivated call forwarding. If you have configured "After Delay" call forwarding, an incoming call enters a queue if it is active and is forwarded after the delay. As with all other forwarded calls, you can accept the call on the destination terminal.

On ISDN telephones, "Immediately", "After Delay" and "On Busy" call forwarding can also be set by means of a menu for all calls, i.e. internal and external.

Least Cost Routing (LCR) can be evaluated for call forwarding to external numbers, providing your system administrator has configured LCR and the LCR application in the Comfort Pro/T-Comfort 930 DSL. Ask him about the applicable setting.

Call Forwarding “Immediately”

For internal and external calls

On:  * 2 1 *

(external access code, e.g. 0)

 (destination no.) ##

Off:  # 2 1 #

Calls (only internal, only external or all of them) are immediately forwarded to another telephone and not signalled at all on the telephone originally dialled. If you have activated call forwarding “immediately”, you will hear a special dialling tone when you lift the handset.

Only for internal calls

On:  * 2 1 1 *

(external access code, e.g. 0)

 (destination no.) ##

Off:  # 2 1 1 #

Only for external calls

On:  * 2 1 2 *

(external access code, e.g. 0)

 (destination no.) ##

Off:  # 2 1 2 #

Call Forwarding “On Busy”

For internal and external calls

On:  * 6 7 *

(external access code, e.g. 0)

 (destination no.) ##

Off:  # 6 7 #

Only for internal calls

On:  * 6 7 1 *

(external access code, e.g. 0)

 (destination no.) ##

Off:  # 6 7 1 #

Only for external calls

On:  * 6 7 2 *

(external access code, e.g. 0)

 (destination no.) ##

Off:  # 6 7 2 #

When a terminal is busy, calls (only internal, only external or all calls) are immediately forwarded to another specified terminal.

Call Forwarding “After Delay”

For internal and external calls

On:  * 6 1 *

(external access code, e.g. 0)

 (destination no.) ##

Off:  # 6 1 #

Calls (only internal, only external or both types) are signalled at the selected terminal and after the time set in the Comfort Pro/ T-Comfort 930 DSL, these calls are forwarded to another specified terminal.

Only for internal callsOn:  * 6 1 1 *

(external access code, e.g. 0)

 (destination no.) ##Off:  # 6 1 1 #**Only for external calls**On:  * 6 1 2 *

(external access code, e.g. 0)

 (destination no.) ##Off:  # 6 1 2 #**Call Forwarding for Other Users**

In order to program call forwarding for call numbers of other users, you must have the “Call forwarding for other user” authorisation. Also, you can only configure call forwarding only for those users whose terminal have not been blocked for this type of access (these users will themselves have the authorisation “Prevent call forwarding by other user”). Please consult your system administrator if you have questions regarding these authorisations.

Call forwarding for call numbers of other users always apply for internal and external calls.

ImmediatelyOn:  * 2 1 4 * (user's internal tel. no.)*  (destination no.) ##Off:  # 2 1 4 * (user's internal tel. no.) ##

Calls for the user will immediately be forwarded to the other terminal. When the user pick ups their headset they hear the special dialling tone.

On busy

If the terminal of the user is busy, then calls will immediately be forwarded to the other terminal.

On:  * 6 7 4 *

 (user's internal tel. no.) *

 (destination no.) ##

Off:  # 6 7 4 *

 (user's internal tel. no.) ##

After delay

Calls are signalled on the users terminal and after the specified time set in the Comfort Pro/T-Comfort 930 DSL are forwarded to the other terminal.

On:  * 6 1 4 *

 (user's internal tel. no.) *

 (destination no.) ##

Off:  # 6 1 4 *

 (user's internal tel. no.) ##

MSN Call Forwarding

Using “MSN Call Forwarding”, you can forward both a **single** MSN and **several** MSNs together to an external number. The individual MSNs are separated using *.

You do not need to enter the full MSNs – the last unique digits are all you need, as this is sufficient to distinguish them from one another.

Example:

“Immediately MSN” for several MSNs

Let's say you want to forward the MSNs 86013, 86014 and 86554 to the destination number 861234. To do this, enter the following:

 * 2 1 3 *

3 (for the MSN 86013) *

1 4 (for the MSN 86014) *

5 4 (for the MSN 86554) *

8 6 1 2 3 4 (the destination no.) ##

Immediately (for one MSN)On:  * 2 1 3 * (MSN) * (destination no.) ##Off:  # 2 1 3 * (MSN) ##

An external call for an MSN configured in the Comfort Pro/T-Comfort 930 DSL is forwarded immediately to the specified external destination and not signalled on the original terminal.

Immediately (for several MSNs)On:  * 2 1 3 * (MSN 1) *  (MSN 2) * (destination no.) ##Off:  # 2 1 3 * (MSN 1) *  (MSN 2) ##**On busy (for one MSN)**On:  * 6 7 3 * (MSN) * (destination no.) ##Off:  # 6 7 3 * (MSN) ##**On busy (for several MSNs)**On:  * 6 7 3 * (MSN 1) *  (MSN 2) * (destination no.) ##Off:  # 6 7 3 * (MSN 1) *  (MSN 2) ##

When a terminal is busy, an external call for an MSN configured in the Comfort Pro/T-Comfort 930 DSL is forwarded immediately to the specified external destination.

After delay (for one MSN)On:  * 6 1 3 * (MSN) * (destination no.) #Off:  # 6 1 3 * (MSN) #

An external call for an MSN configured in the Comfort Pro/T-Comfort 930 DSL is signalled on the destination terminal and forwarded to the specified external destination after the specified time set in the Comfort Pro/T-Comfort 930 DSL.

After delay (for several MSNs)On:  * 6 1 3 * (MSN 1) *  (MSN 2) * (destination no.) #Off:  # 6 1 3 * (MSN 1) * (MSN 2) #**All Call Forwarding Off** # 2 #

If you have programmed several instances of call forwarding, you can deactivate them all simultaneously with the above procedure.

Follow Me

You can activate and deactivate immediate internal call forwarding for your own telephone from any other telephone, providing you have the user PIN for your own telephone (see page 33). Calls are forwarded to the telephone (destination) on which you carry out the procedure.

Initiating the function on the destination telephone

 * 2 2 *

 (source PIN) *

 (source tel. no.) #

Calls are immediately forwarded to the other destination, and are not signalled on your own telephone. On the originally dialled telephone (the source) you will hear a special dialling tone on lifting the handset.

Switching the function off on your own telephone

 # 2 1 #

(= call forwarding off)

Use this procedure to deactivate the function on your own telephone.

Switching the function off on another telephone

 # 2 2 *

 (source PIN) *

 (source tel. no.) #

(= call forwarding off).

You can use this procedure to switch off the call forwarding for your telephone from any other telephone.

Call Forwarding for Specific Call Numbers

Besides the call forwarding that you can program at your telephone, the system administrator can program call forwarding where the call number of the caller is analysed ("SCF: Selective Call Forwarding"). Potentially this could be the reason why specific calls do not reach you. If you have any questions concerning this functionality, please consult your system administrator.

Special Calls

VIP Call

    (internal tel. no.)

For consultation calls:

     (internal tel. no.)

If you have VIP access rights and start an internal call with   , your calls will be signalled acoustically to internal parties even if they have activated their call protection (call-waiting protection or call protection). This function is also possible in a consultation call.

This also applies if the called party has activated immediate call forwarding.

Baby Call

On:

     (external access code, e.g. )  (destination no.)



Off:     

You can configure your telephone to dial a preprogrammed (internal or external) telephone number after a certain length of time after the handset has been lifted (default setting is 5 seconds).

To prevent the baby call from being made, you can dial another number within the defined length of time after lifting the handset. The time span is set to a value between 0 and 20 seconds in the Comfort Pro/T-Comfort 930 DSL. It is set by your system administrator for all Comfort Pro/T-Comfort 930 DSL users. Please ask him for the current value.

Announcement

 * 1 3 *

 (internal tel. no.) #

For consultation calls:

 R * 1 3 *

 (internal tel. no.) #

Using this procedure you can make announcements **to system telephones**. The loudspeaker of the destination telephone is activated without a ring, and your announcement is heard by those present in the room.

If you want to start an announcement on several system terminals to a hunt group phone number at which the call is signalled simultaneously for example, all called subscribers hear the announcement at that same time. If one of these subscribers responds to the announcement (by answering the call), the announcement connection to the other system terminals is terminated.



Note: If a called party is a member of a user group for which “Intercom protection” is activated, announcements will not be made for his telephone number.

Intercom

 * 1 3 1 *

 (device ID) #

For consultation calls:

 R * 1 3 1 *

 (device ID) #

After entering the device ID, you can initiate an announcement to a **single** system terminal. The microphone is activated on the terminal called and the person you are calling can immediately answer your announcement. The “intercom” function cannot be used for announcements to a group of terminals.



Note: If a called party is a member of a user group for which “Intercom protection” is activated, announcements will not be made for his telephone number.

Dialout for Another Terminal

 * 5 1 *

 (device ID) *

 (destination call number) #

You can also conduct automatic dialling for another terminal. Enter the device ID of the terminal from which the dialling is to be conducted. Then enter the call number to be called. The next time the subscriber whose device ID you entered picks up the handset, (or when using a headset, presses the headset Talk key), the saved destination call number will be dialled automatically. This programmed number remains saved for 30 seconds. After 30 seconds, the automatic dialling will be deactivated automatically.

Callback on Busy

If the internal or external number you have dialled is busy, you can leave a callback request. (This is not possible if the destination number is a hunt group telephone number.) Your telephone will ring as soon as the other party has ended his call. When you lift the handset, the number of the other party will be dialled.

Leaving a callback request

 * 3 7 #

On ISDN telephones you can activate “callback on busy” by means of the corresponding function key or a menu.

Alternatively:

 6 

Cancelling a callback request

You cancel your callback request with this procedure.

 # 3 7 #

Door Opener

 * 1 1

For consultation calls:

 R * 1 1

If an automatic door opener is connected, you can use this procedure to activate it from your telephone.

Entrance Intercom Calls

Calling the entrance intercom

 * 1 0 1

For consultation calls:

 R * 1 0 1

If an entrance intercom is connected to your system, you can use this procedure to speak with a visitor. Note that you can use this code procedure only with a T-Comfort 930 DSL communications system.

 * 1 0 2

For consultation calls:

 R * 1 0 2

If you use a "DoorLine" entrance intercom, you use this Code-number procedure to speak with a visitor.

Forwarding entrance intercom calls (on a T-Comfort 930 DSL)

On:  * 1 5 1 *

(external access code, e.g. 0)

 (destination no.) #

Off:  # 1 5 1 #

Forwarding entrance intercom calls (on a Comfort Pro)

On:  * 1 5 5 *

(external access code, e.g. 0)

 (destination no.) #

Off:  # 1 5 5 #

You can forward a call signalled from the doorbell to another (internal or external) call number, a so-called “pharmacy line”.

Several doorbells can be configured in the Comfort Pro/ T-Comfort 930 DSL. You can forward these doorbells using the corresponding code-number procedure. How many doorbells are available and with which code-number procedure these can be forwarded depends on the entrance intercom that is connected.

Standard Entrance Intercom (only connectable to a T-Comfort 930 DSL)	Doorbell
151	1
152	2
153	3
“DoorLine“ Entrance Intercom (connectable to a Comfort Pro and a T-Comfort 930 DSL)	Doorbell
155	1
156	2
157	3
158	4

All entrance intercom calls are terminated automatically after a certain length of time has elapsed. This ensures that the forwarding of entrance intercom calls does not unintentionally result in a permanent connection (e.g. to a mailbox).

The length of time can be set by your system administrator to a value between 30 and 300 seconds in the Comfort Pro/ T-Comfort 930 DSL. Please ask him for the current value.

Keypad Dialling

 * 1 2

 (keypad code digits)

For consultation calls:

 R * 1 2

 (keypad code digits)

Certain European network operators require the keypad protocol to be used in order for you to be able to set certain features (this is not the case in Germany).

You use the sequence * 1 2 to switch to the keypad protocol, and subsequently enter the code digits required by your network operator. These are transmitted directly to the exchange and evaluated there.

You will then generally hear an announcement as confirmation.

Even More Protection

Telephone Lock

Activating:

 * 3 3 *  (user PIN) #

Deactivating:

 # 3 3 *  (user PIN) #

You can lock your telephone as a safeguard against unauthorised use. Then only those features and functions of your telephone can be accessed that are preset in the Comfort Pro/T-Comfort 930 DSL **Configurator** for the “Guests” user group. You must enter your user PIN to activate the telephone lock (see **Changing the User PIN** on page 33).



Note: National emergency numbers can still be dialled although the telephone lock is activated, providing they have been defined in your user group’s special list in the Comfort Pro/T-Comfort 930 DSL. Ask your system administrator for these numbers.

Calling Line Identification Restriction (CLIR) on a Call-by-Call Basis

 * 1 4  (tel. no.)

For consultation calls:

 R * 1 4  (tel. no.)

Activating this function prevents your telephone number from being displayed on the terminal of the internal or external party for a single call. This procedure is not necessary:

- if the “Suppress phone number display permanently” function is set for your user group or
- if CLIR is activated for your number in the Comfort Pro/T-Comfort 930 DSL telephone book.

On ISDN telephones you can also activate the calling line identification restriction function on a call-by-call basis by means of a menu.

Changing the User PIN

 * 9 9 *

 (old user PIN) *

 (new user PIN) *

 (new user PIN) #

When your system is first commissioned, the user PIN is “0000”.

Code-number procedures requiring a PIN should be unavailable to other users.

For this reason, you should change the PIN when you start operating your telephone, and put the new number in a safe place. The user PIN can be up to six characters long.



Please note: Make sure you do not lose your new PIN. Contact your system administrator if you experience any problems.

Intercept

The telephone numbers of malicious callers can be stored in your network operator's exchange (if this service has been implemented). This function works even if the caller has already hung up!



Note: The feature can only be activated on ISDN telephones.

Special Modes

Deactivating Least Cost Routing (LCR)



(dialling code, tel. no.)

For consultation calls:



(dialling code, tel. no.)

If you wish, you can deactivate Least Cost Routing, which always uses the cheapest route for a call, and select a network operator yourself (this is known as "call by call").

This procedure is only necessary if LCR is activated in the Comfort Pro/T-Comfort 930 DSL for your user group.

Calling Selectively via Routes



(routing code, tel. no.)

For consultation calls:



(routing code, tel. no.)

A call to a desired party is set up automatically or selectively via **routes** in the Comfort Pro/T-Comfort 930 DSL. Your system administrator configures these routes in the Comfort Pro/T-Comfort 930 DSL and defines the assignment of each route. By

selectively dialling the **routing code** prior to the (internal or external) telephone number, you manually select a route for a particular call.

Selectively calling via routes allows you to reach parties in the branch offices of a large corporate network, for example. By manually entering a routing code, you can also administer the tariff charge data for private and professional calls separately.

Your system administrator will inform you of the current routes and their routing codes.

Time Control

Several time groups can be configured in the Comfort Pro/T-Comfort 930 DSL. Depending on the activated time group, incoming calls are signalled on different terminals. It is possible to automatically change between these time groups, according to a timetable set up by the system administrator, or to change them manually.

You can only program this function if the system administrator has activated the "Time control" authorisation for your user group.

Activating automatic time control



This key combination activates automatic time control. The setting remains unchanged until one of the available time groups is set manually.

Manually setting a time group

(number of the time group, e.g. **1**) **#**

You activate the required time group using this procedure; automatic time control is then deactivated. Ask your system administrator about the number of configured time groups.

Deleting All Call Forwarding in the Exchange

 * 1 8 4
 (system PIN) ##

Call forwarding can be set up in the network operator's exchange. For setting up new call forwarding or finding faults, it can be useful to delete all active call forwarding in the exchange. Using the above code-number procedure, you can do this from any telephone.

Deleting the call forwarding in the exchange is a background function. After you entered the procedure this process will take time (up to 15 seconds for each line). Please have patience with this.

The system PIN is issued by the system administrator. It must have been changed from the factory setting "0000" valid on delivery to another value.

Remote-Controlled Functions

The Comfort Pro/T-Comfort 930 DSL enables remote-controlled calls and remotely programmable call forwarding. These features are set up by the system administrator when he configures the system. To carry out these features the system PIN is required.

The system PIN is issued by the system administrator, who has to change the default value "0000" to another value before it is issued.

In addition, all the owners of voiceboxes can, with the corresponding authorisation, call their voiceboxes from external telephones. They can remotely access and edit their messages as well as modify the central settings of their voiceboxes.

Remote-Controlled Dialling (Call Through)

Without internal number assignment

 (reserved tel. no.)

Wait until the connection to the communications system has been established. You hear a positive acknowledgement tone.

 (system PIN)

 (external access code, e.g. **0**)

 (external tel. no.) **#**

With internal number assignment

 (reserved tel. no.)

Wait until the connection to the communications system has been established. You hear a positive acknowledgement tone.

 (system PIN)

 (external access code, e.g. **0**)

 (external tel. no.) 

 (internal tel. no.) **#**

You can call the Comfort Pro/T-Comfort 930 DSL from outside (from home, for example), then dial an external number and continue telephoning with the cost being charged to the Comfort Pro/T-Comfort 930 DSL connection. This way you take advantage of different tariff zones, for example.

The system administrator must have set up a number (for remote control) in the Comfort Pro/T-Comfort 930 DSL for this feature. In addition, the number reserved in the Comfort Pro/T-Comfort 930 DSL can also be assigned an internal telephone number, via which the dialling is to be performed. In the case of remote-controlled dialling, there is no check on authorisation.

Least Cost Routing (LCR) is used for remote-controlled dialling, provided your system administrator has correspondingly configured LCR and the LCR application in the Comfort Pro/T-Comfort 930 DSL. Ask him for the setting which applies to you.

Remote-Programmable Call Forwarding

Configuring the function

 (reserved tel. no.)

Wait until the connection to the communications system has been established. You hear a positive acknowledgement tone.

 (system PIN) 

 (your internal tel. no.)

 (external access code, e.g. **0**)

 (destination no.) 

Using the telephone number reserved in the Comfort Pro/T-Comfort 930 DSL for remote control, you can configure or delete immediate call forwarding for your own telephone number from a remote location. This remotely-programmed forwarding overwrites any other internally active forwarding. Forwarding “On Busy” and “After Delay” are not affected. Incorrect or non-existent telephone numbers are rejected. Your authorisation is checked in the same way as for forwarding within the Comfort Pro/T-Comfort 930 DSL. A correct entry is confirmed with a positive acknowledgement signal, and the external call subsequently ended.

Deleting the function

 (reserved tel. no.)

Wait until the connection to the communications system has been established. You hear a positive acknowledgement tone.

 (system PIN) 

 (your internal tel. no.) 



Note: The procedure will be aborted if there is a pause of longer than 60 seconds between the entry of two digits. Thanks to this time span, it is also possible to implement remote-controlled functions from GSM cellphones.

Calling a Voicebox from a Remote Terminal

If your system administrator has configured a voicebox with the authorisation for remote access, you can also access and configure the box from a remote terminal.

Using the telephone number of the **Comfort Pro A IAB (answering machine)** application ...

(this telephone number is included in the incoming call distribution)

1. Select the MSN or the system telephone number to which your system administrator has assigned the internal telephone number of **Comfort Pro A IAB (answering machine)** application. Wait until the connection to the communications system has been established. You hear a message from your voicebox.
2. Then enter the internal telephone number of your voicebox – i.e. the telephone number of the terminal which has been assigned to the voicebox. Confirm your input by pressing ***#**.
3. Enter the PIN of your voicebox.
4. Follow the instructions in the voice menu for all further operating steps.

Using the number of your telephone...

(the number of your telephone is included in the incoming call distribution; you have diverted the telephone to your voicebox)

1. Dial the MSN or the system extension number at which you can be reached externally.
2. You hear the welcome text for callers to your voicebox.
3. Enter the PIN of your voicebox.
4. Follow the instructions in the voice menu for all further operating steps.



Note: For detailed information on the use and operation of the **Comfort Pro A IAB (answering machine)** application, please refer to the user guide for the optional component “**Comfort Pro A IAB**”.

Setting up an Internet Connection from Remote (ISP Trigger Call)

 (reserved tel. no.)

Wait until the connection to the communications system has been established. You hear a positive acknowledgement tone.

 (system PIN) * #

If the communications system is connected to the Internet via a dialup connection, a user can initiate from external that the system establishes an Internet connection (ISP Trigger call). The system is then reachable via the Internet and enables to set up a connection for a VPN connection via RAS.



Note: This feature is only available on a Comfort Pro communications system.

Index


A		F	
Announcements		Features.....	5, 32
to system telephones	28	Follow Me	25
Authorisation.....	5	H	
B		Hunt groups	18
Baby call	27	I	
C		Intercom	
Call forwarding		to a system terminal	28
deleting active call forwarding	36	L	
deleting all active instances of	25	Least Cost Routing (LCR)	34
remote programming of	38	Line seizure	
time.....	19	Automatic	7
to voicebox	19	Manual	7
Call protection.....	9, 17	M	
Callback request.....	29	Malicious Call Identification (MCID).....	34
Calling Line Identification Restriction (CLIR)....	33	P	
Call-waiting protection	15	Parking a Call	10
Call-waiting signal		Pharmacy line	31
deactivation of	15	Pick-up group	17
Code-number procedures	5	Q	
Consultation	12	Queue	9, 19
consultation call mode.....	6	for user group.....	9
D		priority.....	9
Dialout for another terminal	29	R	
Disconnecting a call	12	Recall	13
Door opener	30	Routes.....	34
Doorbell	31	Routing code	35
E		S	
Emergency numbers	32	Seizing an external line.....	7
Entrance intercom.....	30	Speed dialling.....	8
		Speed-dialling code	8
		System PIN	36

T	
Telephone book	8
Telephone lock	32
Telephone number	
of the answering machine	39
Three-party conference	14
Time control	35
Time groups	35
Toggling	12
Transferring a call	
with notification	13
without notification	13
U	
Unparking a call	10
User PIN	25, 32
V	
VIP call	27
Voicebox	10
direct access	10
PIN	10, 39
remote access	11, 39


Notes

Notes

Time axis in seconds



Audio Signals

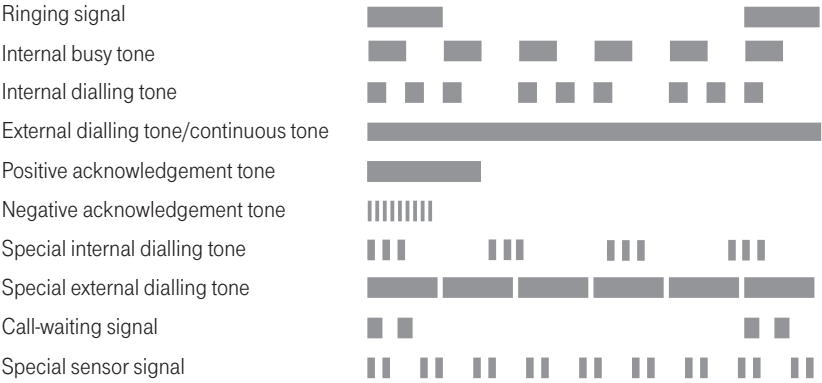

Ringer signals (analogue terminals)



* The first ring is a single ring, and all subsequent rings are periodic double rings.

The tones and ringer signals mentioned above are valid for Germany; in other countries they may differ.



User Manual for Comfort Pro and T-Comfort 930 DSL Operation on Standard Terminals
As of 01.03.2008

Publisher:
Deutsche Telekom AG
Zentrum Endgeräte
Postfach 2000
53105 Bonn

**If you have further questions phone us under:
freecall 0800 33 01300.**

**Please visit us in the Telekom Shop
or on the Internet at: www.t-home.de**

