



FELIX STORCH, INC.
770 Garrison Avenue
Bronx, New York 10474
www.summitappliance.com

TWO-DOOR REFRIGERATOR with BOTTOM FREEZER

Models **FFBF240W** **FFBF245SS**
FFBF280W **FFBF285SS**



User's Manual

<p>Thank you for purchasing our SUMMIT product. This easy-to-use manual will guide you in getting the best use of your refrigerator.</p> <p>Please record the model and serial numbers, which are found on a label inside the refrigerator.</p>	<p>_____</p> <p>Model number</p> <p>_____</p> <p>Serial number</p> <p>_____</p> <p>Date of purchase</p>
<p>Staple your receipt to this manual. You will need it to obtain warranty service.</p>	

IMPORTANT SAFEGUARDS

Read all of the instructions before using this appliance. If instructions are not followed, you may lose your right to free service during the warranty period. Please keep this manual in a safe place and pass it on to later users if applicable.

This unit is not designed to operate in enclosed spaces. When placing your unit, make sure you allow adequate airflow on all sides.

When using this appliance, always exercise basic safety precautions, including the following:

1. Do not connect your appliance to the power supply until all packing and transit protectors have been removed.
2. Let it stand upright for at least 4 hours before switching it on to allow the refrigerant system to settle if transported horizontally.
3. This appliance should not be used in a cold, unheated room such as a garage or shed, or on an outdoor patio.
4. Upon delivery, check to make sure that the product is not damaged and that all the parts and accessories are in perfect condition. Do not operate a damaged appliance.
5. Use this appliance only for its intended purpose, that is, the storing and freezing of edible foodstuffs.
6. This refrigerator must be properly installed in accordance with the *Installation* instructions before it is used. See "Electrical Requirements" in the *Installation* section.
7. Repair or replace immediately all electrical service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at the plug or connector end.
8. Unplug your refrigerator before cleaning or making any repairs.
NOTE: If for any reason this product requires service, we strongly recommend that a certified technician perform the service.
9. Never unplug your refrigerator by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
10. Do not use any electrical device or any sharp instrument in defrosting your refrigerator.
11. If your old refrigerator is not being used, we recommend that you remove the doors and leave the shelves in place. This will reduce the possibility of danger to children.
12. After your refrigerator is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.

13. Do not refreeze foods which have been thawed completely. The United States Department of Agriculture in *Home and Garden Bulletin No. 69* reads:
"...You may safely refreeze frozen foods that have thawed if they still contain ice crystals or if they are still cold – below 40°F.
"...Thawed ground meats, poultry or fish that have any off-odor or off-color should not be refrozen and should not be eaten. Thawed ice cream should be discarded. If the odor or color of any food is poor or questionable, discard it. The food may be dangerous to eat.

"...Even partial thawing and re-freezing reduce the eating quality of foods, particularly fruits, vegetables and prepared foods. The eating quality of red meats is affected less than that of many other foods. Use refrozen foods as soon as possible, to save as much of their eating quality as you can."
14. This refrigerator should not be recessed or built into an enclosed cabinet. It is designed for freestanding installation only. See *Installation* instructions.
15. Do not operate your refrigerator in the presence of explosive fumes.
16. Do not allow children to play with the appliance, or to sit or stand on the appliance or on pull-out parts.
17. Do not hang on the appliance doors.
18. Do not dispose of the appliance in a fire. The appliance contains substances in the insulation which are flammable.
19. Avoid touching the metal condenser wiring on the back of the appliance. There is a risk of injury.
20. In the event of a possible malfunction, disconnect the appliance from the power supply first.
21. Prior to cleaning, always unplug the appliance or switch off the circuit breaker.

DANGER! *Risk of child entrapment!*

Before you throw away your old refrigerator or freezer, take off the doors. Leave the shelves in place so that children may not easily climb inside.



WARNING!


- Keep ventilation openings on the appliance enclosure clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical devices inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

– SAVE THESE INSTRUCTIONS –

Table of Contents

Important Safeguards	1 - 2
Parts and Features	4
Installation	5 - 8
Transporting your appliance	5
Setting up the appliance	5
Location	5 - 6
Electrical requirements	6
Reversing the Door Swing	6 – 8
Before starting up the appliance	8
Operation	8 - 10
Setting the operating temperature	8 - 9
Refrigerator compartment	9
Freezer compartment	10
Food Storage Information	11 – 12
Fresh food	11
Frozen food	11
Examples of proper food storage	12
Cleaning and Care	12 - 14
Interior and exterior surfaces	12
Cleaning the accessories	13
Replacing the interior light bulb	13 - 14
If there is a power failure	14
Normal Operating Noises	14
Troubleshooting	15
Limited Warranty	16 - 17

Parts and Features

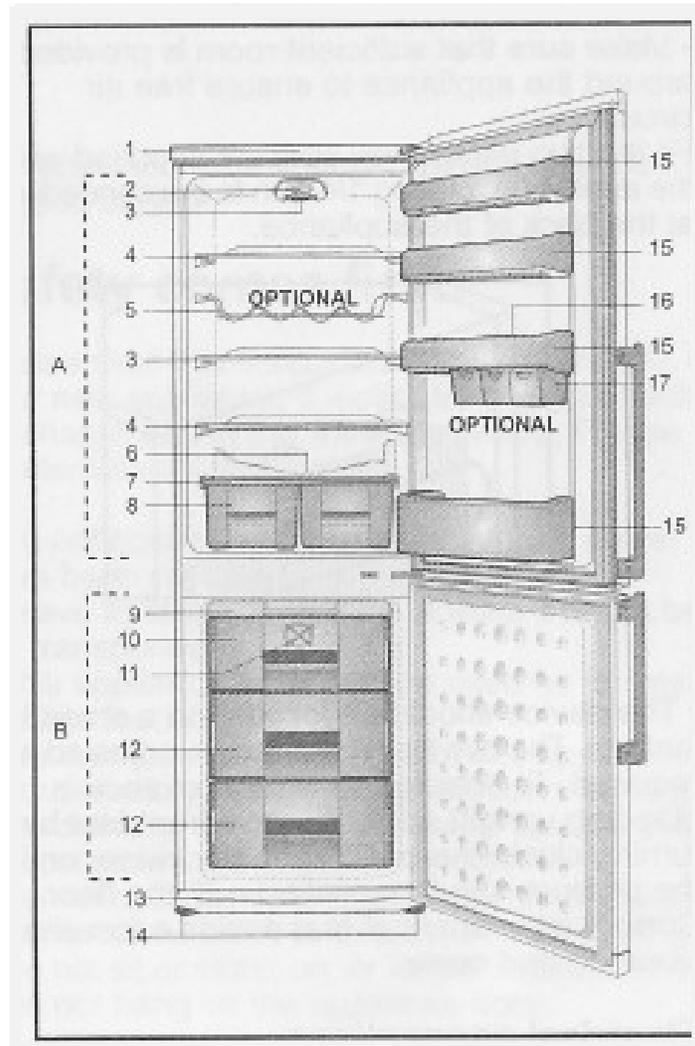

- | | |
|--------------------------------|--------------------------------------|
| 1. Front panel | 10. Fast-freeze compartment |
| 2. Interior light | 11. Freezer fan |
| 3. Thermostat knob | 12. Freezer compartment |
| 4. Movable shelves | 13. Ventilation grille |
| 5. Wine rack | 14. Adjustable front feet |
| 6. Defrost water drain channel | 15. Adjustable door shelves |
| 7. Crisper cover | 16. Egg tray |
| 8. Crisper | 17. Sliding storage boxes (optional) |
| 9. Ice bank | |

Note: Not every feature is on all models.

Installation

Transporting your appliance

1. The appliance should only be transported in the upright position.
2. The packaging as supplied must remain intact during transportation.
3. If the unit has been transported or carried in the horizontal position, it may only be plugged in after standing in the vertical position for 4 hours. Plugging in the appliance any sooner may result in damage to the refrigerator-freezer and affect your warranty.


Setting up the appliance

- Do not operate your appliance in a room where the temperature is likely to fall below 50°F at night and especially in winter. At lower temperatures the appliance may not operate, resulting in a reduction in the storage life of the food.
- The climate class rating of your appliance is given on the rating label located inside the appliance. It specifies the appropriate operating ambient temperatures as shown below:

Climatic class	Ambient temperatures
SN	50.0°F to 89.6°F
N	60.8°F to 89.6°F
ST	64.4°F to 100.4°F
T	64.4°F to 109.4°F
SN-ST	50.0°F to 100.4°F
SN-T	50.0°F to 109.4°F

Location

- The unit should be placed in a dry room which can be aired.
- Avoid direct sunlight or direct heat sources such as a stove or radiator.
- To make sure that sufficient room is provided around the appliance to ensure free air circulation, allow at least 1" at the back and top, and ¾" at the sides.
- Fit the two plastic wall spacers supplied with the appliance, to the condenser at the back of the appliance, rotating 1/4 turn. See illustration below.

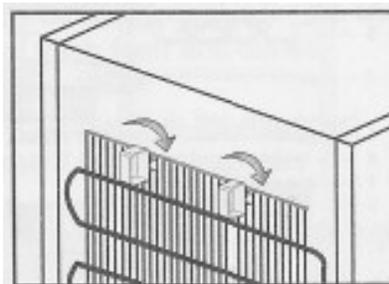

- The appliance should be located on a smooth surface. The two leveling legs at the front corners of the appliance can be adjusted as required.
- Leveling legs can be adjusted by turning them counter-clockwise to raise the refrigerator or clockwise to lower it. Correct adjustment of the feet avoids excessive vibration and noise.

Electrical requirements




WARNING! This appliance must be grounded!

- Make sure there is a suitable power outlet (115V AC, 60Hz, 15 amps) with proper grounding to power the refrigerator-freezer.
- The electrical safety of the appliance is only assured when the grounding system in the house is installed in accordance with regulations.
- When positioning the appliance, do not let the power cable get stuck under it; otherwise, the cable will be damaged.
- Ensure that the plug remains easily accessible. Do not use a multiple adapter bar or an extension cord.
- Avoid the use of three-to-two prong adapters or cutting off the third grounding prong in order to accommodate a two-prong outlet. This is a dangerous practice since it provides no effective grounding for the refrigerator and may result in shock hazard.

Reversing the door swing

This appliance allows you to reverse the door opening from left to right and back. You can select your preference of door opening by following this procedure to make the change.

1. Disconnect the appliance from the power supply.
2. Remove all food, loose items and fittings from the appliance and door shelves.
3. Unscrew the bolts and remove the middle hinge while holding the doors. **(1)**
4. Remove the fresh food (refrigerator) compartment door from the top hinge by sliding down and pulling forward. **(2)**
5. Remove the freezer compartment door by pulling up. **(3)**
6. Remove the plastic covers on the front top trim. **(4)**
7. Unscrew the bolts of the top hinge and remove top hinge. **(5)**
8. Reposition plugs on the opposite side. **(6)**
9. Remove the front bottom trim. **(7)**
10. Carefully lay the appliance on its back. **(8)** (Get someone to help you.)
11. Unscrew and remove the left-hand side front feet. **(9)**
12. Unscrew and remove the bottom hinge. **(10)**

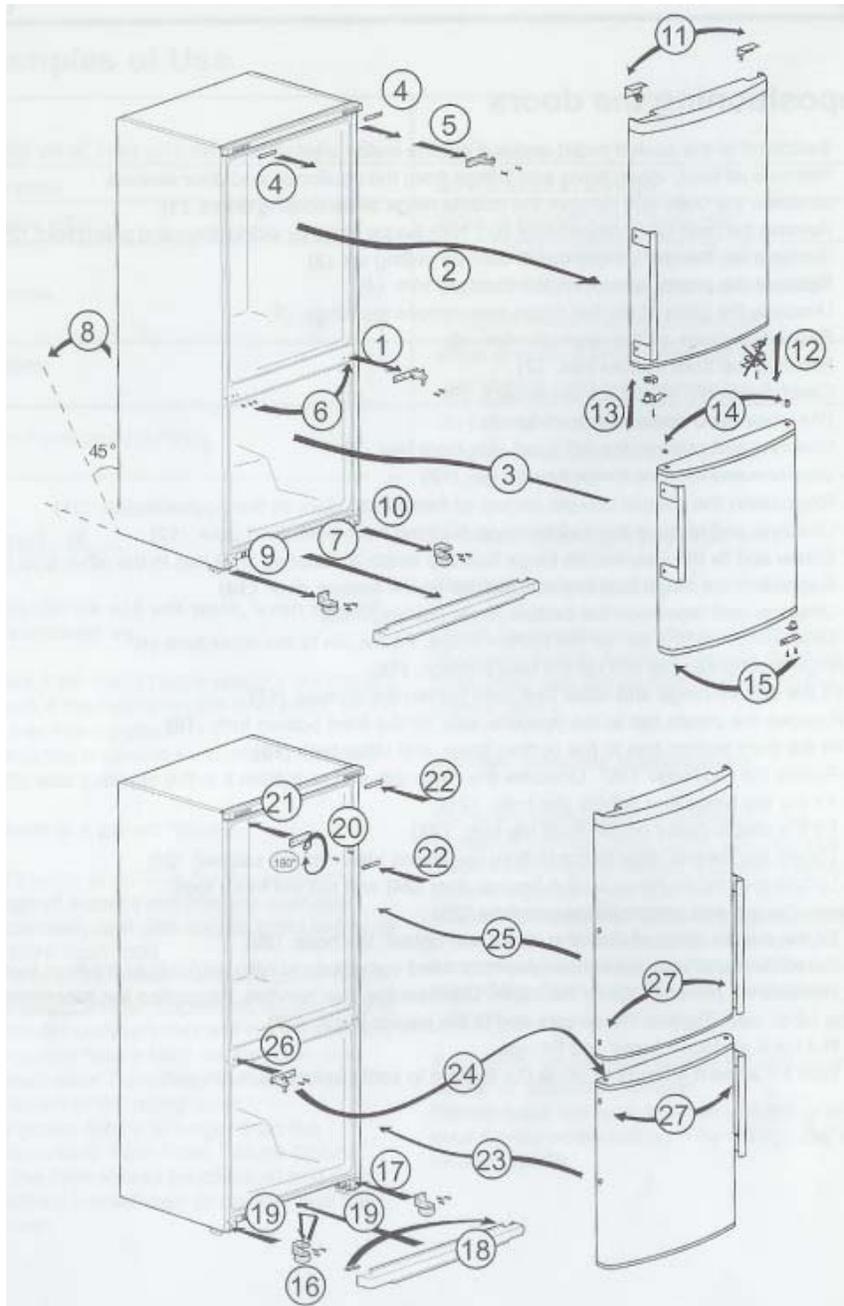

13. Reposition the plastic covers on top of the fresh food door on the opposite side. **(11)**
14. Unscrew and remove the middle hinge bushing from the fresh food door. **(12)**
15. Screw in and fix the new middle hinge bushing (supplied) to the other side. **(13)**
16. Reposition the hinge bushing and the tap on the freezer door. **(14)**
17. Unscrew and reposition the bottom hinge bushing. **(15)**
18. Unscrew bolt of the pin of the bottom hinge. Fit the pin to the other hole on the hinge and tighten the bolt on the new position. **(16)**
19. Fit the bottom hinge and other feet, and tighten the screws. **(17)**

20. Remove the plastic tap to the opposite side on the front bottom trim. **(18)**
21. Fit the front bottom trim to the bottom hinge and other feet. **(19)**
22. Rotate the top hinge 180°. Unscrew the hinge pin and re-tighten it to the opposite side. **(20)**
23. Fit the top hinge and tighten the bolts. **(21)**
24. Fit the plastic cover on the front top trim. **(22)**
25. Locate the freezer door to the bottom hinge and attach to the cabinet. **(23)**
26. Locate the middle hinge on the freezer door **(24)** and put the fresh food door between the top and middle hinge carefully. **(25)**
27. Fit the middle hinge. Adjust the doors and tighten the bolts. **(26)**
28. Carefully stand the appliance up (with someone's help) and adjust the front feet.
29. Remove the plastic plugs on the doors. Unscrew the door handles. Reposition the door handles on the other side. Tighten the screws and fit the plastic plugs. **(27)**
30. Put back all loose items and fittings.
31. Wait for at least 4 hours to allow the system to settle before switching on.

Before starting up the appliance


Before you begin operating your refrigerator-freezer, check the following points for safety:

- Is the appliance standing firmly on the floor?
- Is there sufficient space for good air circulation?
- Is the interior clean? (See *Cleaning and Care*.)
- Set the thermostat knob halfway between **1** and **5**, or **Min** and **Max**.
- Now connect the appliance to the power supply.

Operation

Setting the operating temperature

The operating temperature is regulated by the temperature control, or thermostat.

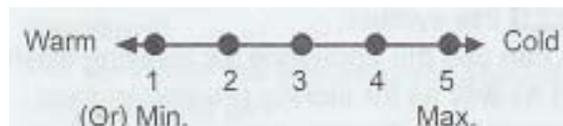

1 = Lowest cooling setting (warmest setting)

5 = Highest cooling setting (coldest setting), or

Min. = Lowest cooling setting (warmest setting)

Max. = Highest cooling setting (coldest setting)

The average temperature inside the refrigerator should be about 41°F (5°C). Choose the thermostat setting according to the desired temperature.

You can stop operation of your appliance by adjusting the thermostat knob to the **0** position.

Please note that there will be different temperatures in the cooling area. The coldest region is immediately above the vegetable crisper.

The interior temperature also depends on ambient temperature, the frequency with which the door is opened and the amount of food kept inside.

Frequently opening the door causes the interior temperature to rise. For this reason, it is recommended to close the door again as soon as possible after use.

Refrigerator compartment

Food storage:

The refrigerator compartment is for the short-term storage of fresh food and drinks.

Raw meat is best kept wrapped or in a sealed plastic bag near the bottom of the refrigerator compartment.


Allow hot foods and beverages to cool to room temperature prior to placing them in the refrigerator.

Defrosting:

The refrigerator compartment defrosts automatically. The thawing water flows through the drain channel into a collection container at the rear of the appliance.

If the fresh food section goes through a cycle defrost it is normal to see the formation of frozen water droplets on the evaporator if the water has not completely fallen off the evaporator.

Check the flow of the thawed water from time to time. The drain hole may become plugged occasionally. Clean it with a Q-tip or similar item. See figure below.

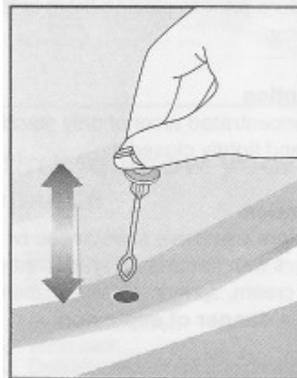

Freezer compartment

Freezing food:

You can use the appliance for freezing fresh food as well as for storing pre-frozen food. Please refer to the recommendations given on the food package.

Attention

Do not freeze carbonated beverages, as the bottle may burst when the liquid is frozen.

Do not exceed the freezing capacity of your appliance. See the rating label inside the unit. In order to maintain the quality of the food, the freezing must take place as rapidly as possible. Thus, the freezing capacity will not be exceeded and the temperature inside the freezer will not rise.

Attention

Keep freshly placed food separated from already deep-frozen foods.

If warm or hot food is placed in the freezer, the cooling compressor will work until the food is completely frozen. This can temporarily cause excessive cooling of the refrigerator compartment.

If you find the freezer door difficult to open just after you have closed it, don't worry. This is due to a pressure difference which will equalize and allow the door to open normally after a few minutes.

Defrosting:

The freezer compartment defrosts automatically.

WARNINGS!

- **The fan inside the freezer compartment circulates cold air.**
- **Never insert any object through the guard. Do not allow children to play with the freezer fan.**
- **Do not obstruct the freezer fan guard to ensure that you obtain the best possible performance from your appliance.**
- **Never store products that contain inflammable propellant gas (e.g., spray cans) or explosive substances.**
- Don't cover the shelves with any protective materials which may obstruct air circulation.
- Do not allow children to play with the appliance or tamper with the controls.

Food Storage Information

Fresh food

- When storing fresh food that is not prepackaged, be sure to wrap or store it in airtight and moisture-proof material unless otherwise noted. This will ensure proper shelf life and prevent the transfer of odors and tastes.
- Wipe containers before storing to avoid needless messes.
- Eggs should be stored in an upright position in their original carton or in the supplied egg tray to maximize shelf life.
- Fruit should be washed and dried, then stored in sealed plastic bags before storing in the refrigerator.
- Vegetables with skins should be stored in plastic bags or containers.
- Leafy vegetables should be washed and dried, then stored in plastic bags or containers.
- Hot food should be allowed to cool before storing in the refrigerator. This will prevent unnecessary energy use.
- Fresh seafood should be used the same day as purchased.
- When storing meats in the fresh food section, keep in the original packaging or rewrap as necessary. Follow the suggestions below for safe storage:

Chicken	1 - 2 days
Ground beef	1 - 2 days
Cold cuts	3 - 5 days
Steaks/roasts	3 - 5 days
Smoked/cured meats	7 - 10 days
All others	1 - 2 days

If longer periods of storage are required, store immediately in the freezer section.

Frozen Food

- Proper freezer storage requires correct packaging. All foods must be in packages that do not allow the flow of air or moisture in or out. Improper storage will allow the transfer of odors and taste and will result in the drying out of the improperly packaged food.
- Follow package or container instructions for proper storage.
- Packaging recommendations:
 - Plastic containers with air-tight lids
 - Heavy-duty aluminum foil
 - Plastic wrap made from saran film
 - Self-sealing plastic bags.
- Do not refreeze defrosted/thawed foods.
- It is recommended that the freezing date be marked on the packaging.

Examples of proper food storage

White wine, beer and mineral water	Chill before use.
Bananas	Do not store in refrigerator.
Fish or organ meats	Store in plastic bags only.
Cheese	Use airtight containers or plastic bags; for best results, take out of the refrigerator an hour before consumption.
Melons	Store only for a short period of time, use airtight packaging/wrapping.
Raw meat and poultry	Do not store unwrapped with delicate items like cooked food and milk.

Cleaning and Care

 **Warning!** To avoid electric shock, always unplug your refrigerator or switch off the circuit breaker before cleaning. Ignoring this warning may result in death or injury.

Interior and exterior surfaces

- Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use a sponge or soft cloth dampened with the cleaning solution to wipe down your appliance.
- Rinse with clean warm water and dry with a soft cloth.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.
- Wipe the inside compartments dry.
- Do not allow water to come into contact with the electrical connections on the temperature control or the interior light.
- If the appliance is not going to be used for a long time, switch it off and remove all food. Clean the appliance and keep the doors open.
- To preserve the appearance of your appliance, you can polish the exterior and the door accessories with a silicone wax.
- Clean the condenser coils at the back of the appliance once a year using a brush or a vacuum cleaner. Dust build-up leads to increased energy consumption.

Cleaning the accessories

Door shelves:

- Remove all food from the door shelves.
- Lift the cover of the shelf upwards and pull it off sideways.
- Remove the bottom of the door shelf by pushing it upwards.

Water-collecting pan:

Make sure that the pan at the back of the appliance is always clean.

1. Gently release the snap of the pan from the compressor by pushing it using a tool (like a screwdriver), so that the pan can be removed.
2. Lift the pan, clean it and wipe it dry.
3. Re-assemble in reverse order.

Crisper or drawers:

To clean a drawer, pull it out as far as possible, tilt it upwards and then pull it out completely.

Door Gaskets:

- Clean door gaskets every three months using a baking soda solution as described above. Gaskets must be kept clean and pliable to ensure a proper seal.
- Petroleum jelly applied lightly on the hinge side of gaskets will keep the gaskets pliable and ensure a good seal.


Replacing the interior light bulb

If the interior light should fail to work, proceed as follows (see figures on next page):

1. **Switch off the appliance and pull out the plug.** You may also find it helpful to remove shelves for easier access.
2. Use a flathead screwdriver to remove the cover of the light bulb.
3. First check that the bulb hasn't worked loose by ensuring it is screwed securely in the socket. Replace the plug and switch on. If the bulb works, replace the light cover by inserting the rear lug and pushing up to locate the two front lugs.
4. If the light still fails to work, switch off the unit and pull out the plug. Replace the bulb with a new 15-watt (max) appliance plug of the same type.
5. Carefully dispose of the burnt-out bulb.

Replacement bulbs should be available at most hardware stores and home improvement centers.

Replacing light bulb:

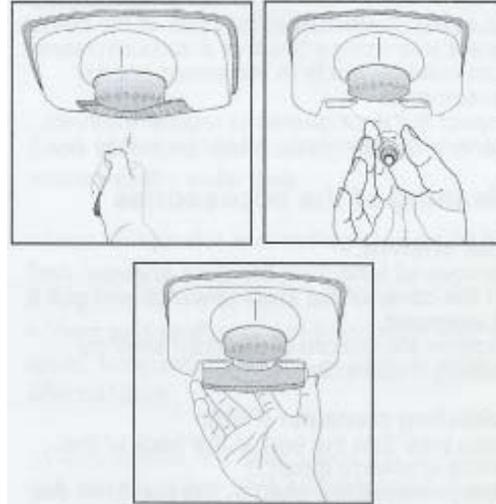

If there is a power failure

Try to avoid opening the doors during a power failure. Frozen food in the freezer compartment will not be affected if the power failure lasts shorter than the “Conservation Time from Failure (hours)” mentioned on the rating label.

If the power failure lasts longer than this amount of time, then the food should be checked and either consumed immediately or cooked and then re-frozen.

Normal Operating Noises

Various sounds you will hear are completely normal and are caused by the operation of the cooling system of your appliance:

- Gurgling, hissing, boiling or bubbling noises are caused by the refrigerant circulating inside the cooling system. These noises can still be heard for a short time after the compressor shuts off.
- Sudden sharp cracking or popping noises are caused by the expansion and contraction of the inside walls or some components inside the cabinets.
- Buzzing, whirring, pulsating or high-pitched humming noises are caused by the compressor. These noises are slightly louder at the start-up of the compressor cycle and reduce when the appliance reaches the operating temperatures.

To avoid disturbing vibrations and unnecessary noises, make sure that:

- Your refrigerator is standing level on all four feet.
- Your refrigerator is not in contact with the walls, surrounding objects or kitchen cabinets and furniture.
- Cans, bottle or dishes inside the refrigerator are not touching and rattling against each other.
- All shelves and bins are mounted correctly inside the refrigerator cabinets and doors.

Troubleshooting

Not every malfunction is a case for our customer service. Very often, you can easily resolve the problem without requesting service. Before requesting service, please check the list below to see if the call can be avoided.

Refrigerator does not operate

- Check that thermostat control is not in the OFF position.
- Check that refrigerator is plugged in.
- Check for power at the AC outlet by inspecting the fuse or circuit breaker.

Food temperature appears too warm

- There may have been frequent door openings.
- Allow time for recently added warm food to reach fresh food or freezer temperature.
- Check gaskets for proper seal.
- Adjust temperature control to colder setting.

Food temperature is too cold

- If temperature control setting is too cold, adjust to a warmer setting and allow several hours for temperature to adjust.

Refrigerator runs too frequently

- This may be normal to maintain constant temperature during days of high temperature and humidity.
- Doors may have been opened frequently or left open for a long period of time.
- Check gasket for proper seal.
- Check to see if doors are completely closed.

Moisture build-up on interior or exterior of the refrigerator

- This is normal during high humidity periods.
- Prolonged or frequent door openings.
- Check door gaskets for proper seal.

Refrigerator has an odor

- Interior needs cleaning.
- Foods improperly wrapped or sealed are giving off odors.

Refrigerator light does not work

- Check power supply.
- Tighten bulb in socket.
- Replace burned-out bulb.

Refrigerator/Freezer door does not shut properly

- Level the refrigerator.
- Realign refrigerator/freezer door.
- Check for blockages, e.g., food containers, crisper cover, shelves, bins, etc.

Limited Warranty

PARTS AND LABOR WARRANTY INFORMATION

SUMMIT Appliances are manufactured to provide outstanding value, and your satisfaction is our goal on every product. All SUMMIT major appliances carry a one year limited warranty on both parts and labor. All refrigerators and freezers carry an additional four years on the compressor. Certain exclusions may apply.

Certain models (including SUMMIT ranges, wall ovens, and cook tops) are manufactured for us in the U.S. and carry the manufacturer's warranty (also one year parts and on-site labor).

For details on specific warranty issues, please refer to the warranty packed with the product, or contact us.

GENERAL PARTS AND LABOR WARRANTY

Summit warrants, to the original purchaser of every new unit, the cabinet and all parts thereof, to be free from defects in material or workmanship, under normal and proper use and maintenance service as specified by Summit and upon proper installation and start-up in accordance with the instruction packet supplied with each Summit unit. Summit's obligation under this warranty is limited to a period of 12 months from the date of original purchase.

Any parts covered under this warranty that are determined by Summit to have been defective, within the above said period, are limited to the repair or replacement, including labor charges, of defective parts or assemblies. The labor warranty shall include pre-approved standard straight time labor charges only and reasonable travel time, as determined by Summit.

COMPRESSOR WARRANTY

In addition to the warranty period stated above, Summit warrants its hermetically sealed compressor to be free from defects in both material and workmanship, under normal and proper use and maintenance, for a period of 60 months from the date of original purchase. Compressors determined by Summit to have been defective within this extended time period will, at Summit's option, be either repaired or replaced with a compressor or compressor parts of similar design and capacity. The above said extended compressor warranty applies only to hermetically sealed parts of the compressor and DOES NOT apply to any other parts or components, including, but not limited to, cabinet, paint finish, temperature control, refrigerant, metering device, driers, motor starting equipment, fan assembly, or any other electrical component, etc.

WARRANTY CLAIMS

All claims for labor or parts must be made directly through Summit. All claims should include: model number of the unit, the serial number of the cabinet, proof of purchase, date of installation, and all pertinent information supporting the existence of the alleged defect. In case of compressor warranty, the compressor model tag must be returned to Summit along with the above listed information. All claims should be filed within 30 days of completed repair or the warranty claim could be refused.

THINGS NOT COVERED BY THIS WARRANTY

Summit's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than those expressly covered by this warranty.

- **NO CONSEQUENTIAL DAMAGES:** Summit is not responsible for economic loss; profit loss; or special, direct, indirect, or consequential damages, including without limitation, losses or damages arising from food or product spoilage claims whether or not on account of refrigeration failure.
- **WARRANTY IS NOT TRANSFERRABLE:** This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall

- **IMPROPER USE:** Summit assumes no liability for parts or labor coverage for component failure or other damages resulting from improper usage or installation or failure to clean and/or maintain product as set forth in the warranty packet provided with the unit.
- **ALTERATION, NEGLIGENCE, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FLOOD, ACTS OF GOD:** Summit is not responsible for the repair or replacement of any parts that Summit determines have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, damage during transit or installation, fire, flood, or act of God.
- **IMPROPER ELECTRICAL CONNECTIONS:** Summit is not responsible for the repair or replacement of failed or damaged components resulting from electrical power failure, the use of extension cords, low voltage, or voltage drops to the unit.
- **NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE:** There are no other warranties, expressed, implied or statutory, except the parts & labor warranty and the extended compressor warranty specifically described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no other warranties which extend beyond the description on the face hereof.
- **OUTSIDE CONTIGUOUS UNITED STATES:** This warranty does not apply to, and Summit is not responsible for, any warranty claims made on products sold or used outside the contiguous (48) United States. To be clear, this warranty excludes the states of Alaska and Hawaii and all off-shore territories.

REQUESTING SERVICE

If you are in need of service, please either fill out a service request on our website, <http://www.summitappliance.com/support>, or call us at 800-932-4267 or 718-893-3900. Please be prepared to give us the following information: your name, address, phone, email, model, serial number, date of purchase, place of purchase, and the problem you are having.

WARNING! This product may contain chemicals known to the state of California to cause cancer or birth defects or other reproductive harm. For more information, visit: www.summitappliance.com/prop65

Chemicals known by the manufacturer to be present in this product in concentrations higher than threshold limits: NONE.



FELIX STORCH, INC.

770 Garrison Avenue
Bronx, NY 10474

TEL 718-893-3900

FAX 718-842-3093

✉ info@summitappliance.com

www.summitappliance.com