

STANDARD HORIZON

Nothing takes to water like Standard Horizon

EXPLORER GPS GX1700E

**25 Watt VHF/FM
Marine Transceiver**

Owner's Manual

- Integrated 12 Channel WAAS GPS receiver
- GPS antenna built-in to the front panel allows reception when bracket or flush mounted
- Ultra thin and compact rear case design (90 mm depth)
- Meets ITU-R M493-13 Class D DSC (Digital Selective Calling)
- Navigation to a DSC Call with compass page
- DSC test call and Auto DSC channel change selection
- Automatically poll the GPS position of up to 4 ships using DSC
- Enter, Save, and Navigation to a waypoint with Compass page
- Navigation (LAT/LON, SOG, and COG) information shown on display
- Submersible JIS-8 1.5M for 30 minutes
- Noise canceling microphone with channel selection, 16/9 and H/L keys
- Programmable Scan, Priority Scan, and Dual Watch
- Preset key stores up to 10 favorite channels, with scan function
- Oversized dot matrix display with customizable channel names and GPS Compass display
- NMEA Input and Output of GPS information to other NMEA compatible devices
- Programmable soft keys
- Capable of connecting to a Second Station Remote-Access Microphone CMP30
- Die-cast chassis
- Dimensions: 154 W x 88 H x 97 D (mm)
- Flush mount cutout: 137 W x 72 H x 65 (mm)
- 2 Year Waterproof Warranty



TABLE OF CONTENTS

Quick Reference Guide.....	4	8.9	PRESET CHANNELS (0 ~ 9): INSTANT ACCESS.....	33
1 GENERAL INFORMATION.....	5	8.9.1	Preset Channel Programming.....	33
2 PACKING LIST.....	5	8.9.2	Operation.....	33
3 OPTIONS.....	5	8.9.3	Deleting a Preset Channel.....	33
4 SAFETY/WARNING INFORMATION.....	6	8.10	INTERCOM OPERATION.....	34
5 GETTING STARTED.....	7	8.10.1	Communication.....	34
5.1 ABOUT VHF RADIO.....	7	8.10.2	Calling.....	34
5.2 SELECTING AN ANTENNA.....	7	9	DIGITAL SELECTIVE CALLING.....	35
5.2.1 Coaxial Cable.....	8	9.1	GENERAL.....	35
5.3 EMERGENCY (CHANNEL 16 USE).....	8	9.2	MARITIME MOBILE SERVICE IDENTITY (MMSI).....	35
5.4 CALLING ANOTHER VESSEL (CHANNEL 16 OR 9).....	9	9.2.1	What is an MMSI?.....	35
5.5 OPERATING ON CHANNELS 13 AND 67.....	10	9.2.2	Programming the MMSI.....	36
6 INSTALLATION.....	12	9.3	DSC DISTRESS ALERT.....	37
6.1 LOCATION.....	12	9.3.1	Transmitting a DSC Distress Alert.....	37
6.2 MOUNTING THE RADIO.....	12	9.3.1.1	Transmitting a DSC Distress Alert with Nature of Distress.....	38
6.2.1 Supplied Mounting Bracket.....	12	9.3.1.2	Transmitting a DSC Distress Alert by Manually Entering a Position.....	39
6.2.2 Optional MMB-97 Flush Mount Bracket.....	13	9.3.1.3	Pausing a DSC Distress Call.....	40
6.3 ELECTRICAL CONNECTIONS.....	14	9.3.1.4	Cancel a DSC Distress Call.....	40
6.4 ACCESSORY CABLE.....	16	9.3.2	Receiving a DSC Distress Call.....	40
6.4.1 Internal GPS (DSC Output to a Chart Plotter).....	16	a.	ACCEPT.....	40
6.4.2 External GPS or Chart Plotter (for GPS).....	16	b.	PAUSE.....	40
6.4.2.1 GPS Input - Standard Horizon GPS Antenna.....	16	c.	QUIT.....	40
6.4.2.2 GPS Input and DSC Output GPS Chart Plotter (RS422 Connection).....	17	9.4	ALL SHIPS CALL.....	42
6.4.2.3 Standard Horizon Chart Plotter or Other Chart Plotter (RS232 Connection).....	17	9.4.1	Transmitting an All Ships Call.....	42
6.5 CHECKING GPS STATUS.....	18	9.4.2	Receiving an All Ships Call.....	43
6.6 CHANGING THE GPS TIME.....	19	9.5	INDIVIDUAL CALL.....	44
6.7 CHANGING THE TIME AREA.....	20	9.5.1	Individual / Position Call Directory Setup.....	44
6.8 CHANGING THE TIME DISPLAY.....	20	9.5.2	Individual Reply Setup.....	45
6.9 CHANGING COG TO TRUE OR MAGNETIC.....	21	9.5.3	Individual Acknowledgment Setup.....	46
6.10 OPTIONAL RAM3 (CMP30) INSTALLATION.....	21	9.5.4	Individual / Group Call Ringer Setup.....	46
6.10.1 Connecting an External Speaker to the RAM3 Mic Cable.....	23	9.5.5	Transmitting an Individual Call.....	47
6.10.2 External Speaker AF Selection.....	23	9.5.5.1	Individual Call using the Individual Directory.....	47
7 CONTROLS AND INDICATORS.....	24	9.5.5.2	Individual Call by Manually Entering a MMSI.....	48
7.1 FRONT PANEL.....	24	9.5.6	Receiving an Individual Call.....	49
7.2 REAR PANEL.....	26	9.6	DSC LOG OPERATION.....	50
7.3 MICROPHONE.....	27	9.6.1	Reviewing and Resending a Transmitted Logged Call.....	50
8 BASIC OPERATION.....	28	9.6.2	Reviewing a DSC Distress Logged Calls.....	50
8.1 RECEPTION.....	28	9.6.3	Reviewing a Other Logged Calls.....	51
8.2 TRANSMISSION.....	28	9.6.4	Deleting a Call from the "DSC LOG" Directory.....	51
8.3 TRANSMIT TIME-OUT TIMER (TOT).....	28	9.7	GROUP CALL.....	53
8.4 SIMPLEX / DUPLEX CHANNEL USE.....	29	9.7.1	Group Call Setup.....	53
8.5 DISPLAY TYPE.....	29	9.7.2	Transmitting a Group Call.....	54
8.6 USA, CANADA, AND INTERNATIONAL MODE.....	30	9.7.2.1	Group Call using the Individual Directory.....	54
8.7 DUAL WATCH (TO CHANNEL 16).....	30	9.7.2.2	Group Call by Manually Entering a MMSI.....	55
8.8 SCANNING.....	31	9.7.3	Receiving a Group Call.....	56
8.8.1 Scan Type Selection.....	31			
8.8.2 Scan and P-Scan Memory Programming.....	31			
8.8.3 Memory Scanning (M-SCAN).....	32			
8.8.4 Priority Scanning (P-SCAN).....	32			


TABLE OF CONTENTS

9.8	POSITION REQUEST	57	12.5	PRIORITY CHANNEL	81
9.8.1	Position Reply Setup	57	12.6	CHANNEL NAME	82
9.8.2	Position Request Ringer Setup	58	13 DSC SETUP	83	
9.8.3	Transmitting a Position Request to Another Vessel	58	13.1	INDIVIDUAL DIRECTORY	83
	9.8.3.1 Position Request using the Individual Directory	58	13.2	INDIVIDUAL REPLY	83
	9.8.3.2 Position Request by Manually Entering a MMSI	59	13.3	INDIVIDUAL ACKNOWLEDGMENT	83
9.8.4	Receiving a Position Request	60	13.4	INDIVIDUAL RINGER	83
9.9	POSITION REPORT	61	13.5	GROUP DIRECTORY	83
9.9.1	Position Report Ringer Setup	61	13.6	POSITION REPLY	84
9.9.2	Transmitting a DSC Position Report Call	61	13.7	AUTO POSITION INTERVAL	84
	9.9.2.1 DSC Position Report Call using the Individual Directory	61	13.8	DSC BEEP	84
	9.9.2.2 DSC Position Report Call by Manually Entering a MMSI	62	13.9	AUTO CHANNEL SWITCH TIME	85
9.9.3	Receiving a DSC Position Report Call	63	14 WAYPOINTS	86	
9.9.4	Navigating to a Position Report	63	14.1	MARKING A POSITION	86
9.9.5	Stop Navigating to Position Report	63	14.2	ADDING A WAYPOINT	87
9.9.6	Saving a Position Report Call as a Waypoint	64	14.3	EDITING A WAYPOINT	88
9.9.7	Navigating to a Saved Waypoint	64	14.4	DELETING A WAYPOINT	89
9.9.8	Stop Navigating to a Saved Waypoint	64	14.5	SAVING A DSC POSITION CALL AS A WAYPOINT	89
9.10	MANUAL INPUTTING A GPS POSITION (LAT/LON)	65	14.6	NAVIGATING TO A SAVED WAYPOINT	90
9.11	AUTO POS POLLING	66	14.7	STOP NAVIGATING TO A WAYPOINT	90
9.11.1	Polling Time Interval Setup	66	14.8	WAYPOINT SETUP	91
9.11.2	Selecting Stations to be Automatically Polled (tracked)	66		14.8.1 Waypoint Range Selection	91
9.11.3	Enable/Disable Auto POS Polling	67		14.8.2 Direction Selection	91
9.12	DSC TEST	68	15 GPS SETUP	92	
9.12.1	Programming MMSI into Individual Directory	68	15.1	UNIT POWER	92
9.12.2	DSC Test Call by using Individual Directory	68	15.2	COORDINATE SYSTEM	92
9.12.3	DSC Test Call by Manually Entering MMSI	69	15.3	PINNING	93
10 ATIS SETUP	70		15.4	TIME OFFSET	93
10.1	ATIS CODE PROGRAMMING	70	15.5	TIME AREA	93
10.2	ATIS CHANNEL GROUP	71	15.6	TIME DISPLAY	93
11 GENERAL SETUP	72		15.7	MAGNETIC	93
11.1	DISPLAY	72	15.8	POSITION INPUT	94
11.2	DIMMER ADJUSTING	73	15.9	GPS SELECTION	94
11.3	CONTRAST	73	15.10	SBAS (WAAS, EGNOS, MSAS)	95
11.4	UNIT OF MEASURE	74	15.11	NMEA OUTPUT	95
11.5	KEY BEEP	75	16 RAM3 (CMP30) REMOTE MIC OPERATION	96	
11.6	STATION NAME	76	16.1	REMOTE MIC CONTROLS	96
11.7	SOFT KEYS	77	16.2	ASSIGNING SOFT KEYS	98
	11.7.1 Selecting the Number of Soft Keys	77	17 MAINTENANCE	100	
	11.7.2 Assigning Soft Keys	77	17.1	REPLACEMENT PARTS	100
	11.7.3 Selecting How Long the Soft Keys are Shown	78	17.2	FACTORY SERVICE	100
12 CHANNEL FUNCTION SETUP	79		17.3	TROUBLESHOOTING CHART	101
12.1	CHANNEL GROUP (INTERNATIONAL, USA or CANADA BAND SELECTION)	79	18 CHANNEL ASSIGNMENTS	102	
12.2	SCAN MEMORY CHANNEL	79	19 RESET PROCEDURES	104	
12.3	SCAN TYPE	80	19.1	MEMORY CLEAR	104
12.4	SCAN RESUME	80	19.2	MICROPROCESSOR RESET	104
			20 SPECIFICATIONS	105	
			20.1	GENERAL	105
			20.2	TRANSMITTER	105
			20.3	RECEIVER	106
			20.4	GPS UNIT	106
			20.5	NMEA INPUT OUTPUT	106
			20.6	DIMENSIONS	107

QUICK REFERENCE GUIDE

This transceiver is equipped with the E2O (Easy-To-Operate) system. You can do the basic operation in numerical order in the illustration below.

- ① Press and hold the  button to turn on or off the radio.
- ② Rotate the **SQL** knob counter clockwise to unsquelch the radio.
- ③ Rotate the **VOL** knob to adjust the speaker audio volume.
- ④ Rotate the **SQL** knob clockwise to the point where the noise not heard from the speaker.
- ⑤ Press the  (or microphones ) button to select the operating channel.
- ⑥ Press the  (or microphones ) button to toggle the transmit power between High (25W) and Low (1W).
- ⑦ Press the  (or microphones ) button to recall channel 16.
Press and hold the  (or microphones ) button to recall channel 9.
Press again to revert to the last selected channel.
- ⑧ Place your mouth about 1/2 inch away from Mic hole and speak in a normal voice level while pressing the **PTT** switch.

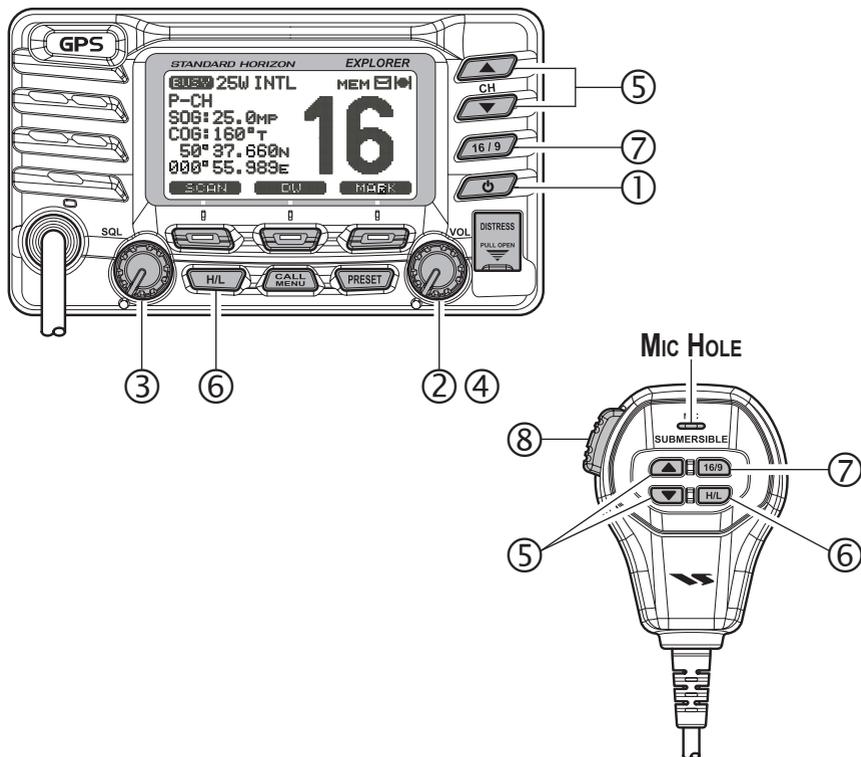

1 GENERAL INFORMATION

The STANDARD HORIZON **EXPLOPER GPS GX1700E** Marine VHF/FM Marine transceiver is capable of ITU-R 493-13 DSC (Digital Selective Calling) Class D operation with a 12 channel internal GPS. Class D operation allows continuous receiving of Digital Selective Calling functions on channel 70 even if the radio is receiving a call. The **GX1700E** VHF operates on all currently-allocated marine channels which are switchable for USA, International, or Canadian regulations. Emergency channel 16 can be immediately selected from any channel by pressing the red  key.

The **GX1700E** can be operated from 11 to 16 VDC and has a switchable RF output power of 1 watt or 25 watts.

Other features of the **GX1700E** VHF's include: Slim design only 90 mm deep, Noise canceling microphone with controls, optional **RAM3** second station remote-control microphone with display, intercom between radio and optional **RAM3**, scanning, priority scanning, Dual Watch, DSC Position Polling up to 4 vessels, high and low voltage warning, and GPS repeatability.

2 PACKING LIST

When the package containing the transceiver is first opened, please check it for the following contents:

- **GX1700E** Transceiver
- Power Cord
- Mounting Bracket and hardware
- Owner's Manual
- Flush Mount Template
- Ferrite Core
- Warranty Card

3 OPTIONS

HC1600	Dust Cover (White)
MMB-97	Flush-Mount Bracket
CMP30B/W	Remote-Access Microphone (RAM3 Mic, Black/White)
CT-100	7 m Extension Cable for RAM3 Mic
MLS-310	10W amplified External Speaker with on/off Volume control
MLS-300	External Loud Speaker
Q7000619A	External GPS antenna with 15 m of cable

4 SAFETY/WARNING INFORMATION

IMPORTANT SAFETY INFORMATION

Please read this manual carefully to become familiar with the features of this transceiver before using it for the first time.

The installation of this equipment should be made in such a manner as to respect the EC recommended electromagnetic field exposure limits (1999/519/EC).

The maximum RF power available from this device is 25 W. The antenna should be mounted as high as possible for maximum efficiency and that this installation height should be at least 5 meters above ground (or accessible) level. In the case that an antenna can not be installed at a reasonable height, then the transmitter should neither be continuously operated for long periods if any person is within 5 metres of the antenna, nor operated at all if any person is touching the antenna. non compliance with these recommendations and transmitting for more than 50% of the total radio use time (50 % duty cycle) may cause RF compliance exposure requirements to be exceeded.

In all cases any possible risk depends on the transmitter being activated for long periods (actual recommendation limits are specified as an average of 6 minutes). Normally the transmitter is not active for long periods of time. Some radio licenses will require that a timer circuit automatically cuts the transmitter after 1 - 2 minutes.

Do not transmit without an antenna connected to the radio. When transmitting speak into the microphone holding it between 1.5 cm and 5 cm from your mouth.

The radio must be used with a maximum operating duty cycle not exceeding 10 % in normal PTT configurations. Do not transmit for more than 10 % of the total radio use time (1:9 duty cycle).

The rear case of the radio can become hot when the radio is used on transmit for long periods that exceed the Duty Cycle as stated above. In order to protect the user from the risk of burning if touched in these circumstances, the rear case enclosure must be fitted and permanently attached to the radio using the fixing screws provided whenever the unit is installed in a position where it is possible during normal usage to touch the rear of the radio.

5 GETTING STARTED


5.1 ABOUT VHF RADIO

The radio frequencies used in the VHF marine band lie between 156 and 158 MHz with some shore stations available between 161 and 163 MHz. The marine VHF band provides communications over distances that are essentially “line of sight” (VHF signals do not travel well through objects such as buildings, hills or trees). Actual transmission range depends much more on antenna type, gain and height than on the power output of the transmitter. On a fixed mount 25W radio transmission expected distances can be greater than 25 km, for a portable 5W radio transmission the expected distance can be greater than 8 km in “line of sight”.

5.2 SELECTING AN ANTENNA

Marine antennas are made to radiate signals equally in all horizontal directions, but not straight up. The objective of a marine antenna is to enhance the signal toward the horizon. The degree to which this is accomplished is called the antenna’s gain. It is measured in decibels (dB) and is one of the major factors in choosing an antenna. In terms of effective radiated power (ERP), antennas are rated on the basis of how much gain they have over a theoretical antenna with zero gain. A 1 m, 3dB gain antenna represents twice as much gain over the imaginary antenna.


Typically a 1 m 3dB gain stainless steel whip is used on a sailboat mast. The longer 2.5 m 6dB fiberglass whip is primarily used on power boats that require the additional gain.

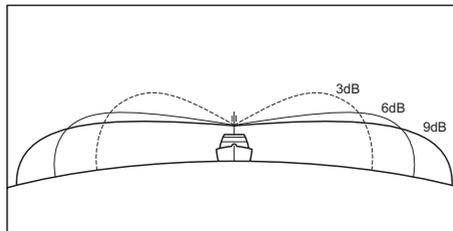

5.2.1 Coaxial Cable

VHF antennas are connected to the transceiver by means of a coaxial cable – a shielded transmission line. Coaxial cable is specified by its diameter and construction.

For runs less than 6 m, RG-58/U (about 6 mm in diameter), is a good choice. For runs over 6 m but less than 15 m, the larger RG-8X or RG-213/U should be used. For cable runs over 15 m RG-213/U should be used. For installation of the connector onto the coaxial cable refer to the figure below.

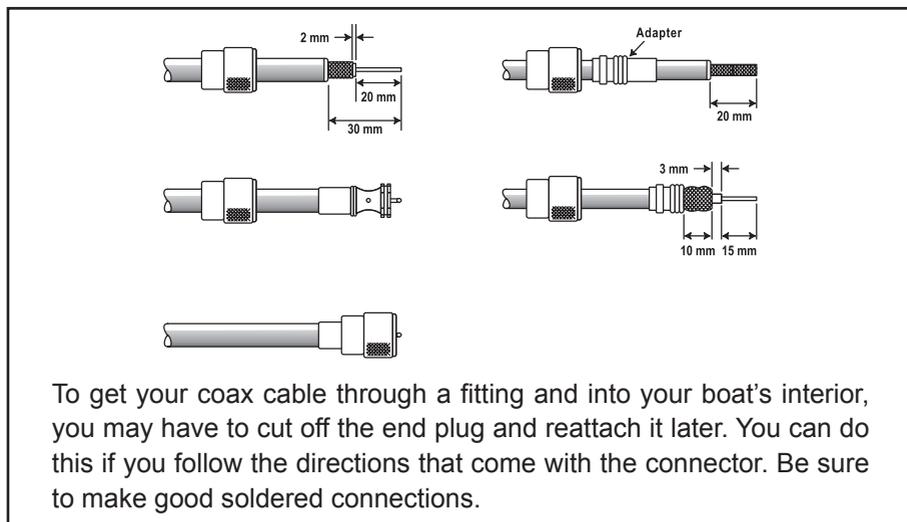

5.3 EMERGENCY (CHANNEL 16 USE)

Channel 16 is known as the Hail and Distress Channel. An emergency may be defined as a threat to life or property. In such instances, be sure the transceiver is on and set to CHANNEL 16. Then use the following procedure:

1. Press the microphone push-to-talk switch and say "**Mayday, Mayday, Mayday**. This is _____, _____, _____" (your vessel's name).
2. Then repeat once: "**Mayday**, _____" (your vessel's name).
3. Now report your position in latitude/longitude, or by giving a true or magnetic bearing (state which) to a well-known landmark such as a navigation aid or geographic feature such as an island or harbor entry.
4. Explain the nature of your distress (sinking, collision, aground, fire, heart attack, life-threatening injury, etc.).
5. State the kind of assistance your desire (pumps, medical aid, etc.).
6. Report the number of persons aboard and condition of any injured.

7. Estimate the present seaworthiness and condition of your vessel.
8. Give your vessel's description: length, design (power or sail), color and other distinguishing marks. The total transmission should not exceed 1 minute.
9. End the message by saying "**OVER**". Release the microphone button and listen.
10. If there is no answer, repeat the above procedure. If there is still no response, try another channel.

NOTE

The **GX1700E** have DSC Distress calling, that can transmit a distress call digitally to all ships with compatible DSC radios. Refer to section "**9 DIGITAL SELECTIVE CALLING**".

5.4 CALLING ANOTHER VESSEL (CHANNEL 16 OR 9)

Channel 16 may be used for initial contact (hailing) with another vessel. However, its most important use is for emergency messages. This channel must be monitored at all times except when actually using another channel.

It is monitored by the U.S. and Canadian Coast Guards and by other vessels. **Use of channel 16 for hailing must be limited to initial contact only.** Calling should not exceed 30 seconds, but may be repeated 3 times at 2-minute intervals. In areas of heavy radio traffic, congestion on channel 16 resulting from its use as a hailing channel can be reduced significantly in U.S. waters by using **channel 9** as the initial contact (hailing) channel for non-emergency communications. Also hailing on channel 9, the calling time should not exceed 30 seconds but may be repeated 3 times at 2-minute intervals.

Prior to making contact with another vessel, refer to the channel charts in this manual, and select an appropriate channel for communications after initial contact. For example, Channels 68 and 69 of the U.S. VHF Charts are some of the channels available to non-commercial (recreational) boaters. Monitor your desired channel in advance to make sure you will not be interrupting other traffic, and then go back to either channel 16 or 9 for your initial contact.

When the hailing channel (16 or 9) is clear, press the **PTT** button on the mic and state the name of the other vessel you wish to call and then "**this is**" followed by the name of your vessel and your Station License (Call Sign) then release the **PTT** button on the mic. When the other vessel returns your call, immediately request another channel by pressing the **PTT** button on the mic and saying "**go to**," the number of the other channel, say "over" and release

the **PTT** button on the mic. Then switch to the new channel. When the new channel is not busy, call the other vessel.

After a transmission, say “**over**,” and release the microphone’s push-to-talk (**PTT**) switch. When all communication with the other vessel is completed, end the last transmission by stating your Call Sign and the word “**out**.” Note that it is not necessary to state your Call Sign with each transmission, only at the beginning and end of the contact.

Remember to return to Channel 16 when not using another channel. Some radios automatically monitor Channel 16 even when set to other channels or when scanning.

5.5 OPERATING ON CHANNELS 13 AND 67 (USA Channel Group Only)

Channel 13 is used at docks and bridges and by vessels maneuvering in port. Messages on this channel must concern navigation only, such as meeting and passing in restricted waters.

Channel 67 is used for navigational traffic between vessels.

By regulation, power is normally limited to 1 Watt on these channels. Your radio is programmed to automatically reduce power to this limit on these channels. However, in certain situations it may be necessary to temporarily use a higher power. See page 25 ( key) for means to temporarily override the low-power limit on these two channels.

6 INSTALLATION

6.1 LOCATION

The radio can be mounted at any angle. Choose a mounting location that:

- is far enough from any compass to avoid any deviation in compass reading due to the speaker magnet
- provides accessibility to the front panel controls
- allows connection to a power source and an antenna
- has nearby space for installation of a microphone hanger
- choose a mounting location that is at least 1 m away from the radio's antenna.
- choose a mounting location that the signal from the GPS satellite can receive sufficiently.

Note: To insure the radio does not affect the compass or radios performance is not affected by the antenna location, temporarily connect the radio in the desired location and:


- a. Examine the compass to see if the radio causes any deviation
- b. Connect the antenna and key the radio. Check to ensure the radio is operating correctly by requesting a radio check.

6.2 MOUNTING THE RADIO

6.2.1 Supplied Mounting Bracket

The supplied mounting bracket allows overhead or desktop mounting.

See illustration on next page, use a 5.2 mm bit to drill the holes to a surface which is more 10 mm thick and can support more than 1.5 kg and secure the bracket with the supplied screws, spring washers, flat washers, and nuts.

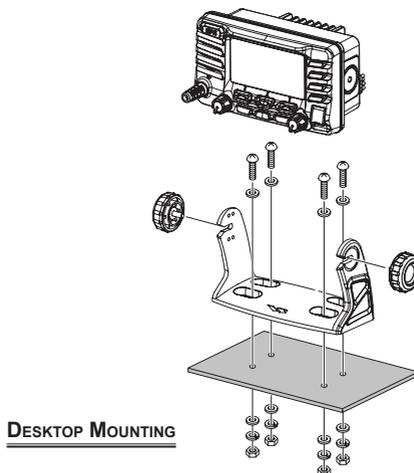

DESKTOP MOUNTING

6.2.2 Optional MMB-97 Flush Mount Bracket

A GPS receiver and antenna is located in the front panel of the **GX1700E**. In many cases the radio may be flush mounted, however before cutting holes to flush mount the radio it is recommended to temporarily connect the radio to power and turn on in the location where it will be flush mounted to confirm it is able to receive a GPS location on it's display. If the radio is not able to receive a location, a GPS Chart plotter with NMEA 0183 output or the optional Standard Horizon external GPS antenna may be needed to receive GPS satellite signals.

To use the optional Standard Horizon external GPS antenna (Q7000619A), the **GX1700E** internal GPS Unit Power must be turned OFF (refer to section “**15.1 UNIT POWER**”) and the GPS Selection changed to External GPS (refer to section “**15.9 GPS SELECTION**”). To mount the **GX1700E** to a bulkhead or underside of a shelf, with the bracket on the top of the radio, please follow these instructions:

1. Remove the heat shield cover from the radio by undoing the screws holding the cover in place. Store the screws for use later.
2. Identify the hole associated with the Aerial connector at the bottom Right.
3. Using a round 1 cm file remove a 2 mm arc from adjacent to the letter “T” of the molded word “ANT”.
4. Using the same round 1 cm file remove 2 mm arc from the centre of the square cutout at the top right hand corner of the heat sink cover.
5. Rotate the heat sink cover 180 degrees so that the Aerial connector hole is now top left and offer up to the radio. Ensure that the cables for the DC power supply, extension loudspeaker and NMEA data cable pass through the square hole. Secure in place with the two screws from Step 1 above.
6. Verify that the U mounting Bracket can now be positioned to go over the top of the radio and fits correctly, and can be fixed using the two knurled knobs.

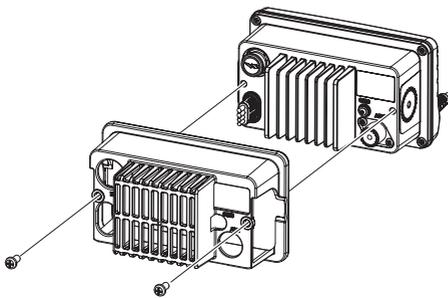


Figure 1

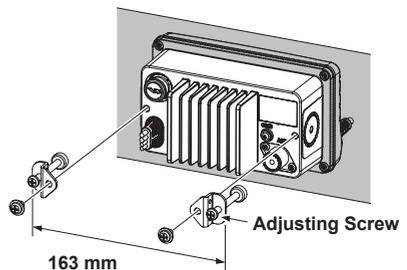


Figure 2


6.3 ELECTRICAL CONNECTIONS

CAUTION

Reverse polarity battery connections will damage the radio!

Connect the power cord and antenna to the radio. Antenna and Power Supply connections are as follows:

1. Mount the antenna at least 1 m away from the radio. At the rear of the radio, connect the antenna cable. The antenna cable must have a PL259 connector attached. RG-8/U coaxial cable must be used if the antenna is 7.6 m or more from the radio. RG58 cable can be used for distances less than 7.6 m.
2. Connect the red power wire to a 11.0 V to 16.5 V DC power source (Normal: 13.8 VDC). Connect the black power wire to a negative ground.
3. If an optional remote extension speaker is to be used, refer to section “**6.4 ACCESSORY CABLE**” for connections.
4. It is advisable to have a Certified Marine Technician check the power output and the standing wave ratio of the antenna after installation.

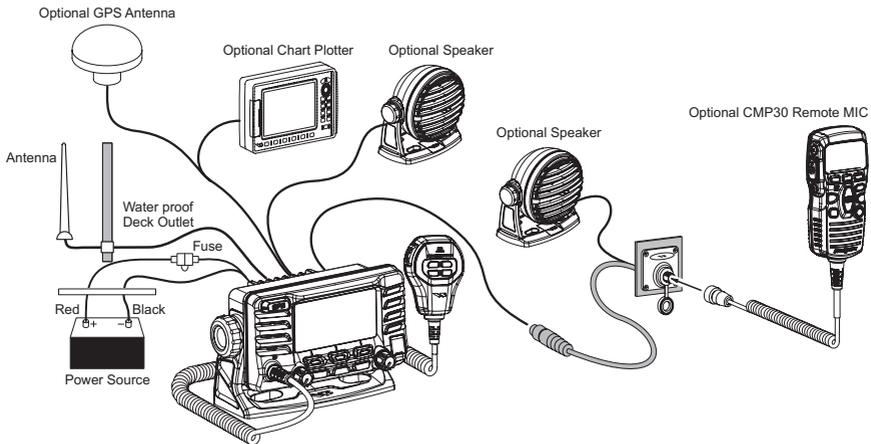


Ferrite Core Installation

To suppress RF interference that can cause abnormal operation of the transceiver, attach the supplied ferrite core to the DC Input Cable, Accessory Connection Cable, and External Speaker Cable together, then snap its two halves together, per the illustration below.


Attach the ferrite core as close as possible to the transceiver body, as shown.

Finally, wind some plastic tape around the ferrite core, to prevent vibration from causing the two halves to split apart.

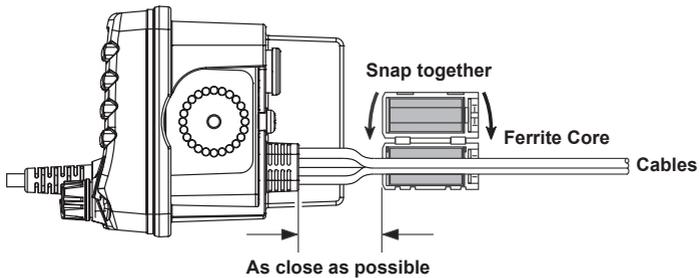

Fuse Replacement (125V 6A)

To take out the Fuse from the Fuse Holder, hold both ends of the Fuse Holder and pull the Fuse Holder apart without bending the Fuse Holder. When you replace the Fuse, please confirm that the Fuse is tightly fixed on the metal contact located inside the Fuse Holder. If the metal contact holding the fuse is loose, the Fuse holder may heat up.

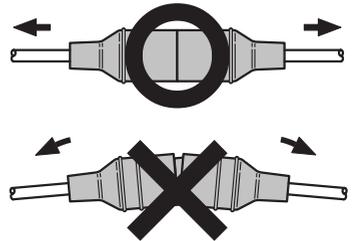


6.4 ACCESSORY CABLE

Wire Color/Description	Connection Examples
WHITE - External Speaker (+)	Connect to external 4 Ohm audio speaker
SHIELD - External Speaker (-)	Connect to external 4 Ohm audio speaker
BLUE - NMEA GPS Input (+)	Connect to NMEA (+) output of GPS
GREEN - NMEA GPS Input (-)*	Connect to NMEA (-) output or common ground of GPS
GRAY - NMEA DSC Output (+)	Connect to NMEA (+) input of GPS
BROWN - NMEA GPS Output (-)*	Connect to NMEA (-) input or common ground of GPS

*: Some GPS Chart plotters have a single wire for NMEA Signal Ground, if this is the case connect the NMEA Input (-) and NMEA output (-) to the GPS Chart Plotters single NMEA Signal Ground wire.


6.4.1 Internal GPS (DSC Output to a Chart Plotter)

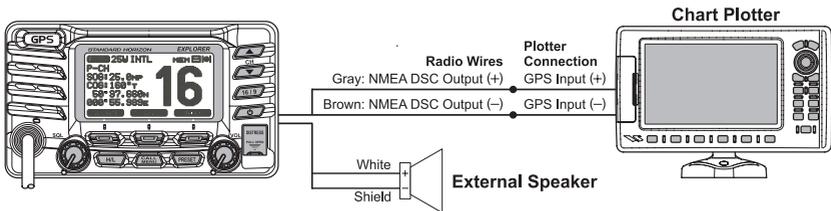

6.4.2 External GPS or Chart Plotter (for GPS)


The connections below are used when the internal GPS cannot receive a Fix. The **GX1700E** Internal GPS must be turned off (refer to section “**15.1 UNIT POWER**”) and the GPS Selection must be selected to External GPS (refer to section “**15.9 GPS SELECTION**”).

6.4.2.1 GPS Input - Standard Horizon GPS Antenna

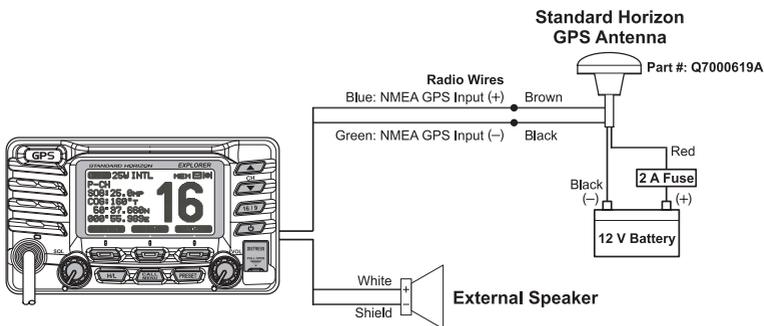


Note: The GPS antenna is supplied with 9 m of cable and a connector. To connect the GPS antenna to the radio, cut off the 5 pin antenna connector, strip the white insulation to expose the Red, Black and Brown wires and connect as shown in the diagram. All other wires are not used and may be cut off. The 2 amp fuse is not included.

6.4.2.2 GPS Input and DSC Output GPS Chart Plotter (RS422 Connections)

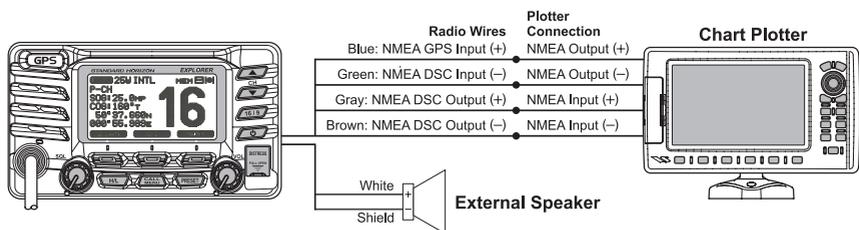

6.4.2.3 Standard Horizopn GPS Chart Plotter or Other Chart Plotter (RS232 Connections)

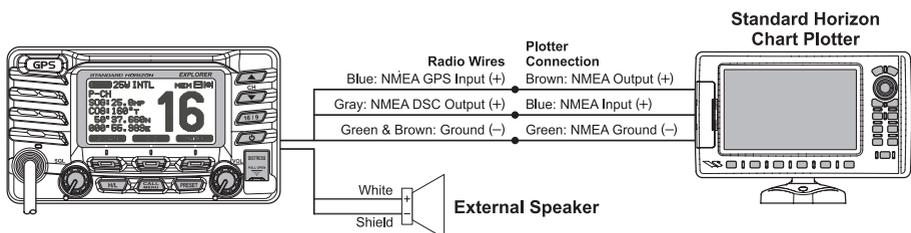

When connecting the External Speaker, Chart Plotter, or External GPS Antenna, strip off about 2.5 cm of the specified wire's insulation, then splice the ends together.

CAUTION

Care must be taken not to touch any of the NMEA wires (blue, gray or brown) to positive 12 VDC or the radio may be damaged.

External GPS Connections (4800 baud)

When the GPS reception is limited, such as the flush mounting of the **GX1700**, the NMEA input (+) (Blue) and NMEA input (-) (Green) wires may be connected to the NMEA output connections of a external GPS antenna or GPS Chart Plotter. To change the **GX1700E** from using the internal GPS antenna to the external GPS antenna, refer to section “**15.9 GPS SELECTION**” (for selection), and “**15.1 UNIT POWER**” (for turn off).

NMEA INPUT (GPS Information)

- The GPS must have the NMEA Output turned on and set to 4800 Baud in the setup menu. If there is a selection for parity select none.
- For further information on interfacing /setting up your GPS. Please contact the manufacturer of the GPS receiver.
- **GX1700E** can read NMEA-0183 version 2.0 or higher.

- The NMEA 0183 input sentences are GLL, GGA, RMC and GNS (RMC sentence is recommended).
NMEA Output (DSC)
The NMEA 0183 output sentences are DSC and DSE.

6.5 CHECKING GPS STATUS

When the **GX1700E** receives the GPS signal from the internal GPS, or from an External GPS antenna or Chart plotter, a small satellite icon (📶) will appear on the top right corner of the display and your current location (Latitude/Longitude) is shown on the display.




The **GX1700E** has a GPS status display which shows the satellites currently being received, along with a graphical (bar-graph) representation of the relative signal strengths from the satellites.

NOTE

For the **GX1700E** to properly show the GPS status page when an external GPS antenna or a Chart Plotter is connected it must be setup to output GSA and GSV NMEA 0183 sentences.

- Press and hold down the **CALL MENU** key until "Setup Menu" appears, then select "GENERAL SETUP" with the **▲/▼** key.
- Press the **SELECT** soft key, then select "DISPLAY" with the **▲/▼** key.
- Press the **SELECT** soft key, then select "GPS STATUS" with the **▲/▼** key.
- Press the **ENT** soft key to display the GPS status currently being received.
- Press any key to return to normal operation.

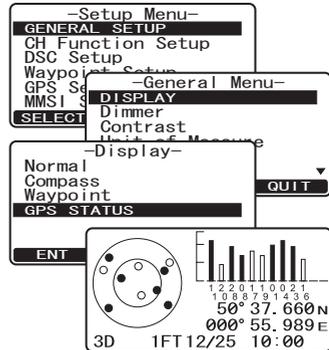




NOTE

When the **GX1700E** is first turned on, it may take several minutes to compute a fix of your position. This is normal, as the **GX1700E** is downloading "almanac" information from the GPS satellites.

6.6 CHANGING THE GPS TIME

From the Factory the **GX1700E** shows GPS satellite time or UTC (Universal Time Coordinated or GPS Satellite Time). A time offset is needed to show the local time in your area. Please see the Offset Time Table at the bottom of this page.

1. Press and hold down the **CALL MENU** key until "Setup Menu" appears, then select "GPS SETUP" with the **▲/▼** key.
2. Press the **SELECT** soft key, then select "TIME OFFSET" with the **▲/▼** key.
3. Press the **SELECT** soft key, then press the **▲/▼** key to select time offset of your location. See illustration below to find your offset time. If "00:00" is assigned, the time is the same as UTC (Universal Time Coordinated or GPS Satellite Time).
4. Press the **ENT** soft key to store the time offset.
5. Press the **QUIT** soft key several times to return to radio operation.

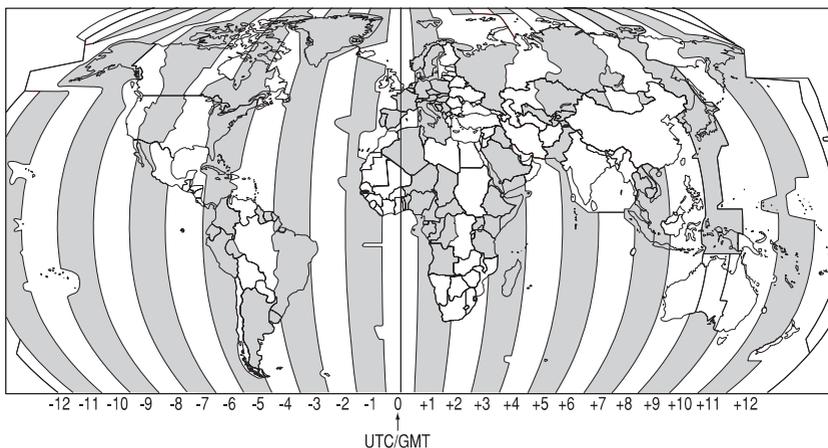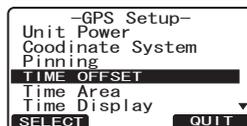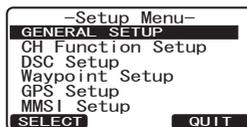


TIME OFFSET TABLE

6.7 CHANGING THE TIME AREA

This menu selection allows the radio to show UTC (Universal Time Coordinated or GPS Satellite Time) or local time with the offset.

1. Press and hold down the  key until "Setup Menu" appears, then select "GPS SETUP" with the  key.
2. Press the **SELECT** soft key, then press the  /  key to "TIME AREA".
3. Press the **SELECT** soft key.
4. Press the  /  key to select "UTC" or "LOCAL".
5. Press the **ENT** soft key to store the selected setting.
6. Press the **QUIT** soft key several times to return to radio operation.

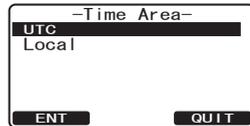

6.8 CHANGING THE TIME DISPLAY

This menu selection allows the radio to setup to show time in 12-hour or 24-hour format.



1. Press and hold down the  key until "Setup Menu" appears, then select "GPS SETUP" with the  key.
2. Press the **SELECT** soft key, then press the  /  key to select "TIME DISPLAY".
3. Press the **SELECT** soft key.
4. Press the  /  key to select "12 HOUR" or "24 HOUR".
5. Press the **ENT** soft key to store the selected setting.
6. Press the **QUIT** soft key several times to return to radio operation.



6.9 CHANGING COG TO TRUE OR MAGNETIC

Allows the GPS Course Over Ground to be selected to show in True or Magnetic. Factory default is True however by following the steps below the COG can be changed to Magnetic.



1. Press and hold down the  key until "Setup Menu" appears, then select "GPS SETUP" with the  key.
2. Press the **SELECT** soft key, then press the  /  key to select "MAGNETIC".
3. Press the **SELECT** soft key.
4. Press the  key to select "MAGNETIC" or "TRUE".
5. Press the **ENT** soft key to store the selected setting.
6. Press the **QUIT** soft key several times to return to radio operation.

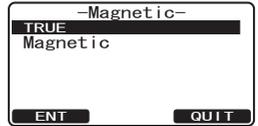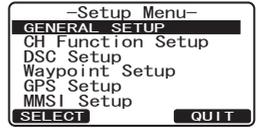


6.10 OPTIONAL RAM3 (CMP30) INSTALLATION

The **GX1700E** is capable of using a **RAM3 (CMP30)** Remote Station Microphone to remotely control the Radio and DSC functions. In addition the **GX1700E** can operate as a full function intercom system between the **RAM3** and the radio.

1. Connect the Extension Cable to the Remote Mic eight pin connector on the rear panel, then tighten the Cable Nut (see illustration at the right).
2. Install the ferrite core (supplied with the **RAM3 (CMP30)** Remote Station Microphone) to the Extension Cable, then snap its two halves together, per the illustration below.
3. Attach the ferrite core as close as possible to the MIC plug, as shown.
4. Finally, wind some plastic tape around each ferrite core, to prevent vibration from causing the two halves to split apart.

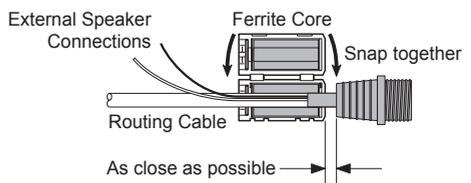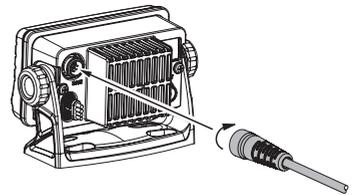

5. Referring to illustration below, make a 30 mm hole in the wall, then insert the Extension Cable into this hole. Connect the Gasket and Mount Base to the Extension Cable Connector using the Nut.
6. Drill the four Screw holes (approx. 2 mm) on the wall, then install the Mounting Base to the wall using four screws.
7. Put the Rubber Cap on to the Nut. The installation is now complete.

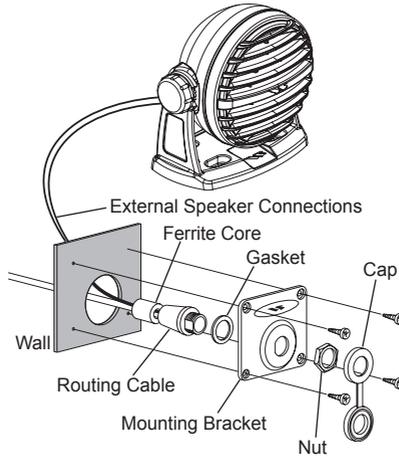

NOTE

The routing cable can be cut and spliced, however care needs to be taken when reconnecting the wires to ensure water integrity.

Before cutting the cable make sure it is not plugged into the radio.

After cutting you will notice there are the following wires:



Brown, Purple, Blue, Green, White*, Shield*

* The White and shield wires are wrapped in foil. Remove the foil, and separate the White and shield wires.

6.10.1 Connecting an External Speaker to the RAM3 Mic Cable

In noisy locations and optional external speaker may be connected to the white speaker wires on the **RAM3** routing cable (refer to previous page). The **RAM3** can drive the internal speaker or the external speaker one at a time. When connecting an external speaker, follow the procedure below to turn off the **RAM3** audio and enable the external speaker wires on the **RAM3** routing cable.




1. On the RAM3 mic, press and hold the  key until "Setup Menu" appears, then select "GENERAL SETUP" with the  /  key.
2. Press the  soft key.
3. Press the  key to until "EXT SPEAKER" is shown and press the  soft key.
4. Press the  or  key to select "OFF" (External speaker off) or "ON" (External speaker on).
5. Press the  soft key to save the selection.
6. Press the  key to exit this mode.

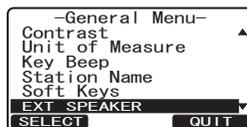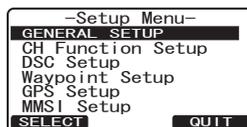

6.10.2 External Speaker AF Selection

The "AF Select" menu allows you to set the audio output level of the **RAM3** external speaker wires (on routing cable) to a fixed level regardless of the volume level setting of the **RAM3**. This is useful when using the optional **MLS-310** amplified speaker with on/off volume control.

1. On the RAM3 mic, press and hold the  key until "Setup Menu" appears, then select "GENERAL SETUP" with the  /  key.
2. Press the  soft key.
3. Press the  key to until "AF SELECT" is shown and press the  soft key.
4. Press the  or  key to select "PRE-OUT" (External Speaker Level is "Fixed") or "PA-OUT" (External Speaker Level is "Adjustable").
"Fixed" use when **MLS-310** is connected.
"Adjustable" use when **MLS-300** or other speaker without volume control is connected.
5. Press the  key to save the selection.
6. Press the  key to exit this mode.

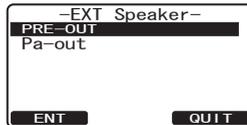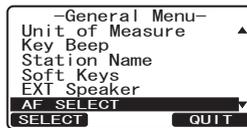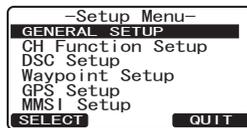


7 CONTROLS AND INDICATORS

NOTE

This section defines each control of the transceiver. For operating instructions refer to section "8 BASIC OPERATION".

7.1 FRONT PANEL

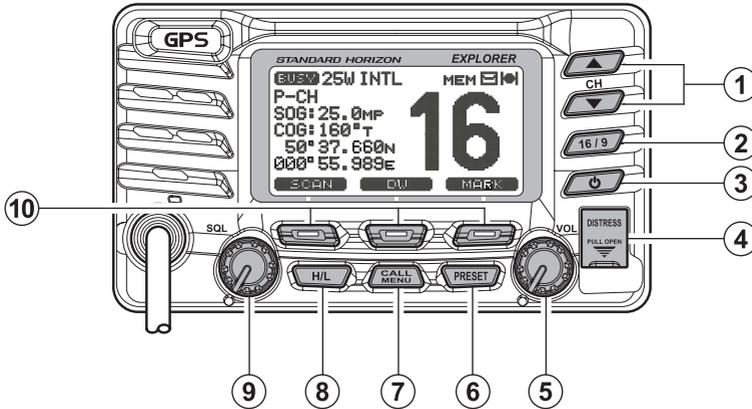

① Key

The keys are used to select channels and to choose menu items (such as the DSC menu, Radio Setup and DSC Setup menu). / keys on the microphone can also be used to select channels and menu items.

SECONDARY USE

While holding down the **SCAN** soft key and pressing key, you can confirm memory channels that have been programmed for scanning.

② Key

Press the key briefly to recall channel 16 from any channel.


Press and hold the key to recall channel 9. Pressing the key again reverts to the previous selected working channel.

③ Key

Turns the transceiver on and off. To turn the transceiver on, press and hold this key until the LCD turns on. To turn it off, press and hold this key until the LCD turns off. When the power is turned on, the transceiver is set to the last-selected channel.

- ④  Key
Used to send a DSC Distress Alert. To transmit a Distress Alert refer to section “**9.2.2 Programming the MMSI**” and “**9.3.1 Transmitting a DSC Distress Alert**”.
- ⑤ **VOL** Knob (Volume Control Knob)
Adjusts the audio volume level. Turn this knob clockwise to increase the audio volume level.
SECONDARY USE
When a **RAM3** is connected and intercom mode is selected, controls the listen volume of the audio from the **RAM3**.
- ⑥  Key
Press this key to select the Preset Memory Bank, “**P SET**” will be shown on the display. To exit Preset Memory bank, press the  key again or press the  key. Press the  or  key to select the desired preset channel. Refer to section “**8.9.1 Preset Channel Programming**” to program the Preset channels.
- ⑦  Key
Press the  key to access the “DSC MENU”.
SECONDARY USE
Press and hold the  key to access the “SETUP MENU”.
- ⑧  Key
Press the  key to toggle between 25 W (High) and 1 W (Low) power. Channel 16 and 67 (navigation/Bridge channels) are set 1 W, however when the  key is pressed the power on these channels may be temporarily changed to 25 W until the **PTT** on the microphone is pressed and released. The  key does not function on transmit inhibited and low power only channels.
- ⑨ **SQL** Knob (Squelch Control)
Adjusting this control clockwise, sets the point at which random noise on the channel does not activate the audio circuits but a received signal does. This point is called the squelch threshold. Further adjustment of the squelch control will degrade reception of wanted transmissions.
- ⑩ Soft Keys
The 3 soft keys functions can be customized by the Setup Menu mode section “**11.7 SOFT KEYS**”. When one of the soft keys is pressed briefly, the functions will appear above each key on the display.
The factory defaults are Key 1: , Key 2: , and Key 3:  function.

7.2 REAR PANEL

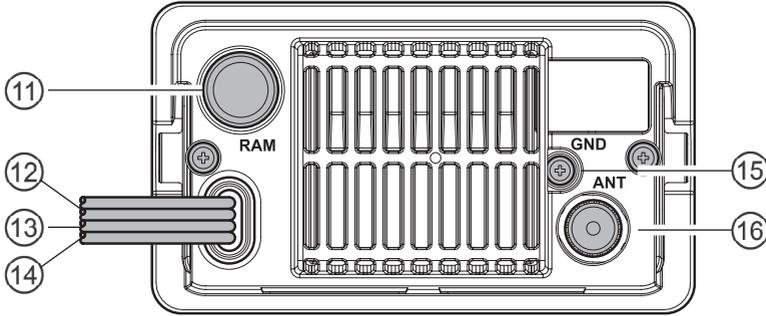


- ⑪ **RAM3 Connector (Remote Station Microphone Connector)**
Connects the **GX1700E** to the **RAM3 (CMP30)** Remote Station Microphone. Refer to section “**16 RAM3 (CMP30) REMOTE MIC OPERATION**” for details
- ⑫ **DC Input Cable**
Connects the radio to a DC power supply capable of delivering 11 to 16V DC.
- ⑬ **Accessory Connection Cable (Green, Blue, Gray, & Brown)**
Connects the **GX1700E** to a Chart Plotter or external GPS Antenna. Refer to section “**6.4 ACCESSORY CABLE**”.
- ⑭ **External Speaker Connection Cable (White & Shield)**
Connects the **GX1700E** to an external speaker. See section “**3 OPTIONS**” for a list of optional STANDARD HORIZON Speakers.
- ⑮ **GND Terminal (Ground Terminal)**
Connecting a Ground wire to this connection will help reduce engine noise when receiving and transmitting.
Use the screw supplied with the radio only.
- ⑯ **ANT Jack (Antenna Jack)**
Connects an antenna to the transceiver. Use a marine VHF antenna with an impedance of 50 ohms.

7.3 MICROPHONE

- ⑰ **PTT (Push-To-Talk) Switch**
When in radio mode and the **PTT** switch pressed, the transmitter is enabled for voice communications to another vessel.

When a optional **RAM3** second station microphone is connected and intercom mode is selected, pressing the **PTT** switch enables voice communications from the **GX1700E** to the **RAM3** second station microphone.

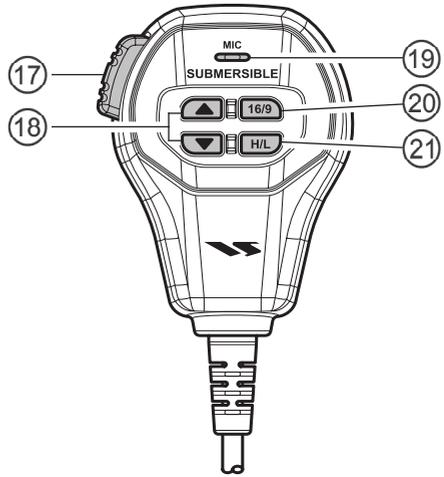

- ⑱ **▲ / ▼ Keys**
The ▲ and ▼ keys on the microphone function the same as the ▲ and ▼ keys on the front panel of the transceiver.
- ⑲ **Microphone**
When spoken into transmits your voice with reduction of background noise, using Clear Voice Noise Reduction Technology.

NOTE

Be sure your mouth is about 1.5 cm from the mic hole for best performance.

- ⑳ **16/9 Key**
The 16/9 key on the microphone functions the same as the 16/9 key on the front panel of the transceiver.
Immediately recalls channel 16 from any channel location. Holding down this key recalls channel 9. Pressing the 16/9 key again reverts to the previously selected working channel.
- ㉑ **H/L Key**
The H/L key on the microphone functions the same as the H/L key on the front panel of the transceiver.
Press this key to toggle the transmit output power between 25 W (High) and 1 W (Low) power.

8 BASIC OPERATION

8.1 RECEPTION

1. After the transceiver has been installed, ensure that the power supply and antenna are properly connected.
2. Press and hold the  key until the radio turns on.
3. Rotate the **SQL** knob fully counterclockwise until "**BUSY**" is shown on the display. This state is known as "unsquelched".
4. Rotate the **VOL** knob until noise or audio from the speaker is at a comfortable level.
5. Rotate the **SQL** knob clockwise until the random noise disappears and the "**BUSY**" icon is turned off. This state is known as the "squelch threshold."
6. Press the  key to select the desired channel. Refer to section "**18 CHANNEL ASSIGNMENTS**" for available channels.
7. When a message is received, adjust the volume to the desired listening level. The "**BUSY**" indicator on the display indicates communications is being received or the radio is unsquelched.

8.2 TRANSMISSION

1. Perform steps 1 through 6 of RECEPTION.
2. Before transmitting, monitor the channel to ensure it is clear.
3. Press the **PTT** (push-to-talk) switch. The "**TX**" indicator on the LCD is displayed.
4. Speak slowly and clearly into the microphone.
5. When the transmission is finished, release the **PTT** switch.

NOTE

This is a noise-canceling microphone. Position the Oval Slot label "**MIC**" within 1.5 cm from the mouth for optimum performance.

8.3 TRANSMIT TIME - OUT TIMER (TOT)

When the **PTT** switch on the microphone is held down, transmit time is limited to 5 minutes. This limits unintentional transmissions due to a stuck **PTT** switch inside the microphone. About 10 seconds before automatic transmitter shutdown, a warning beep will be heard from the speaker(s). The transceiver will automatically go to receive mode, even if the **PTT** switch is continually held down. Before transmitting again, the **PTT** switch must first be released and then pressed again.

8.4 SIMPLEX/DUPLEX CHANNEL USE


Refer to section “18 CHANNEL ASSIGNMENTS” for instructions on use of simplex and duplex channels.

NOTE


All channels are factory-programmed in accordance with FCC (USA), Industry Canada, and International regulations. Mode of operation cannot be altered from simplex to duplex or vice-versa.

8.5 DISPLAY TYPE


The **GX1700E** display can be setup to show displays other than the default “NORMAL” display by using the procedure below:

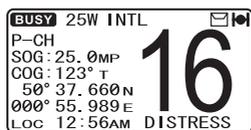


“NORMAL” DISPLAY

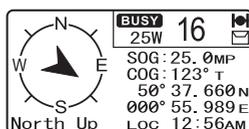

“COMPASS” DISPLAY



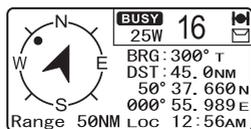


“WAYPOINT” DISPLAY

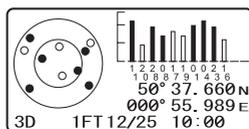

“GPS STATUS” DISPLAY

1. Press and hold down the **CALL MENU** key until “Setup Menu” appears, then select “GENERAL SETUP” with the **▲/▼** key.
2. Press the **SELECT** soft key, then press the **▲/▼** key to select “DISPLAY”.
3. Press the **SELECT** soft key.
4. Press the **▲/▼** key to select desired screen “NORMAL”, “COMPASS”, “WAYPOINT” or “GPS STATUS”.
5. Press the **SELECT** soft key to store the selected setting.
6. Press the **QUIT** soft key several times to return to radio operation.

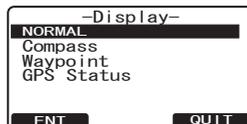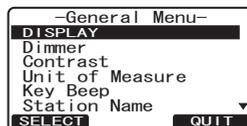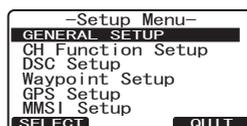


NOTE

When the “GPS STATUS” mode is selected in step “4” above, the display will stay the GPS Status until a key is pressed.

8.6 USA, CANADA, AND INTERNATIONAL MODE

To change the channel group from USA to Canada or International:

1. Press and hold down the  key until "Set-up Menu" appears.
2. Press the  key to select "CH FUNCTION SETUP".
3. Press the  soft key, then press the  key to select "CH GROUP".
4. Press the  soft key.
5. Press the  key to select desired channel group "USA", "INTL", or "CANADA".
6. Press the  soft key to store the selected setting.
7. Press the  soft key several times to return to radio operation.

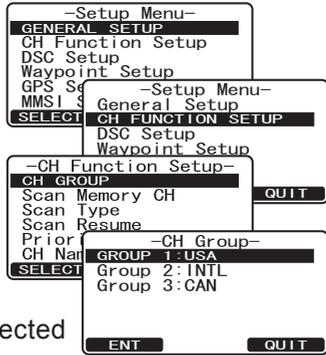

8.7 DUAL WATCH (TO CHANNEL 16)

Dual watch is used to scan two channels for communications. One channel is a normal VHF channel and the other is the priority, channel 16. When a signal is received on the normal channel the radio briefly switches between the normal channel and Channel 16 to look for a transmission. If the radio receives communications on channel 16 the radio stops and listens to Channel 16 until communication ends and then starts Dual watch scan again.

1. Adjust the **SQL** knob until the background noise disappears.
2. Select the channel you wish to dual watch to the priority channel 16.
3. Press the one of the Soft keys, then press the  soft key.

The display show "DW-16" and will scan between CH16 and the channel that was selected in step 2.

If a transmission is received on the channel selected in step 2, the **GX1700E** will dual watch to CH16.

4. To stop Dual Watch, press the one of the soft keys, then press the  soft key again.



NOTE




The priority channel may be changed from Ch16 to another channel. Refer to section "**12.5 PRIORITY CHANNEL**".

8.8 SCANNING

Allows the user to select the scan type from Memory scan or Priority scan. “Memory scan” scans the channels that were programmed into memory. “Priority scan” scans the channels programmed in memory with the priority channel.


8.8.1 Scan Type Selection

1. Press and hold down **CALL MENU** key until “Setup Menu” appears.
2. Press the **▲/▼** key to select “CH FUNCTION SETUP”.
3. Press the **SELECT** soft key, then press the **▲/▼** key to select “SCAN TYPE”.
4. Press the **SELECT** soft key.
5. Press the **▲/▼** key to select “PRIORITY SCAN” or “MEMORY SCAN”.
6. Press the **ENT** soft key to store the selected setting.
7. Press the **QUIT** soft key several times to return to radio operation.

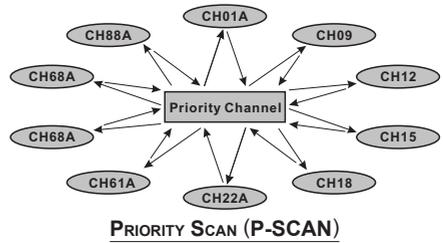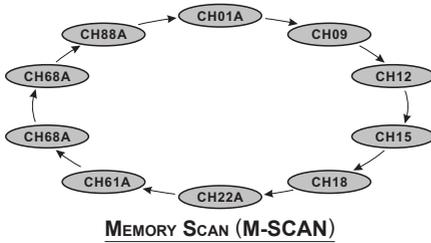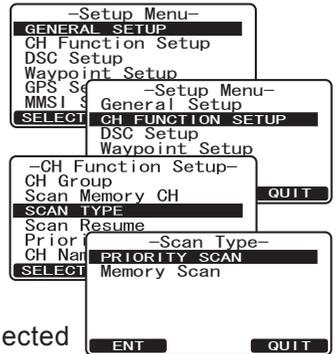

8.8.2 Scan and P-Scan Memory Programming

1. Press and hold down the **CALL MENU** key until “Setup Menu” appears.
2. Press the **▲/▼** key to select “CH FUNCTION SETUP”.
3. Press the **SELECT** soft key, then press the **▲/▼** key to select “SCAN MEMORY CH”.
4. Press the **SELECT** soft key.
5. Press the **▲/▼** key to select a desired channel to be scanned, the press the **ADD** soft key. “MEM” icon appears on the display, which indicates the channel has been selected to the scan

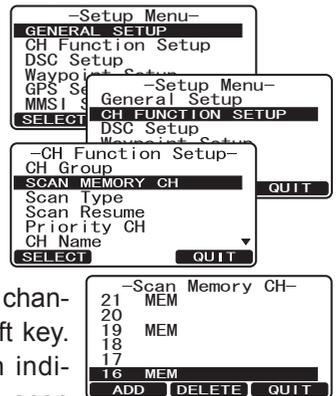


channel.

- Repeat step 5 for all the desired channels to be scanned.
- To DELETE a channel from the list, select the channel then press the **DELETE** soft key. “MEM” icon disappears from the display.
- When you have completed your selection, press the **QUIT** soft key several times to return to radio operation.

8.8.3 Memory Scanning (M-SCAN)


- Adjust the **SQL** knob until background noise disappears.
- Press the one of the Soft keys momentarily, then press the **SCAN** soft key. “M-SCAN” appears on the display. Scanning will proceed from the lowest to the highest programmed channel number and Preset channel (described in the next chapter) and will stop on a channel when a transmission is received.
- The channel number will blink during reception.
- To stop scanning, press the  key.

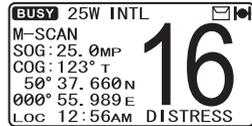

8.8.4 Priority Scanning (P-SCAN)

By default, Channel 16 is set as the priority channel. You may change the priority channel to the desired channel from Channel 16 by the Radio Setup Mode, refer to section “12.5 PRIORITY CHANNEL”.

- Adjust the **SQL** knob until background noise disappears.
- Press the one of the Soft keys momentarily, then press the **SCAN** soft key. “P-SCAN” appears on the display. Scanning will proceed between the memorized channels and Preset channel (described in next chapter) and the priority channel. The priority channel will be scanned after each programmed channel.
- To stop scanning, press the  key.



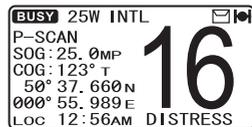


8.9 PRESET CHANNELS (0 ~ 9): INSTANT ACCESS

10 Preset Channels can be programmed for instant access. Pressing the  key activates the preset channel bank. If the  key is pressed and no channels have been assigned, an alert beep will be emitted from the speaker.



8.9.1 Preset Channel Programming

1. Press the  key to select the channel to be programmed.
2. Press and hold the  key until the channel number is blinking.
3. Press the  key to select the desired Preset channel position (“SET 0” - “SET 9”) you wish to program.
4. Press the  soft key momentarily to program the channel into the Preset channel.
5. Repeat steps 1 through 4 to program the desired channels into Preset Channels “0” ~ “9”.

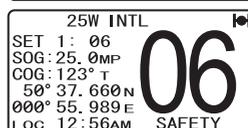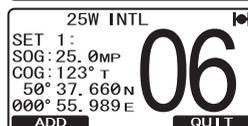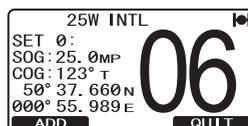



8.9.2 Operation

1. Press the  key to recall the Preset Channel. The “P SET” icon will appear on the display.
2. Press the  key to select the desired Preset Channel (“0” ~ “9”). The Preset Channel number appears (“P-SET0” - “P-SET9”) while selecting the Preset Channel.
3. Press the  key again to return to the last selected channel. The “P SET” icon will disappear from the display.

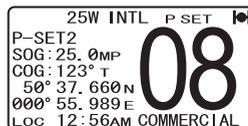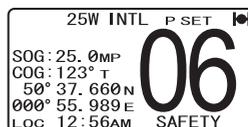

8.9.3 Deleting a Preset Channel

1. Press the  key.
2. Press the  key to select the Preset Channel to be deleted.
3. Press and hold the  key until the channel number is blinking.
4. Press the  soft key momentarily to delete the channel from the Preset Channel.
5. Repeat steps 2 through 4 to delete the desired channels from Preset Channels “0” ~ “9”.
6. To finish the deleting the Preset Channel, press the  soft key

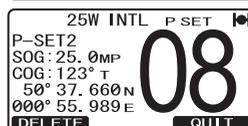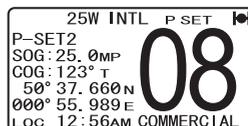

8.10 INTERCOM OPERATION

An optional **RAM3 (CMP30)** must be connected to perform intercom functions between the radio and the **RAM3 (CMP30)**.

In addition, To access the following Intercom functions one of the soft keys must be setup as **IC**. Refer to section “11.7 SOFT KEYS.

8.10.1 Communication

1. Press the one of the Soft keys momentarily, then press the **IC** soft key to enable the intercom mode.

Note: Depending on the programming of the **IC** soft key, the **NEXT** soft key may have to be pressed to see the **IC** soft key.



2. When the intercom mode is enabled, “Intercom” is displayed on the radio and **RAM3 (CMP30)** Remote Station Microphone.



(GX1700E's PTT switch is pressed)

3. Press the **PTT** switch on the radio. “Talk” will be shown on the display.

Note: A warning beep will be heard if the **PTT** button on the **GX1700E** and **RAM3 (CMP30)** microphone are pushed simultaneously.



(RAM3's PTT switch is pressed)

4. Speak slowly and clearly into the microphone, hold the microphone about 1/2 inch away from your mouth.
5. When finished, release the **PTT** switch.
6. Press the **QUIT** soft key to exit intercom mode and revert to radio mode.

8.10.2 Calling

Press the **BELL** soft key when in intercom mode on either the radio or **RAM3 (CMP30)** mic will produce a calling beep to the other station.

9 DIGITAL SELECTIVE CALLING

9.1 GENERAL

WARNING

This radio is designed to generate a digital maritime distress and safety call to facilitate search and rescue. To be effective as a safety device, this equipment must be used only within communication range of a shore-based VHF marine channel 70 distress and safety watch system. The range of signal may vary but under normal conditions should be approximately 20 nautical miles.

Digital Selective Calling is a semi-automated method of establishing a radio call, it has been designated by the International Maritime Organization (IMO) as an international standard for establishing VHF, MF and HF radio calls. It has also been designated as part of the Global Maritime Distress and Safety System (GMDSS).

Digital Selective Calling allows mariners to instantly send a distress call with GPS position (when connected to the transceiver) to the US Coast Guard and other vessels within range of the transmission. DSC will also allow mariners to initiate or receive Distress, Urgency, Safety, Routine, Position Request, Position Report, Automatic Position Polling and Group calls to or from another vessel equipped with a DSC transceiver.

9.2 MARITIME MOBILE SERVICE IDENTITY (MMSI)

9.2.1 What is an MMSI?

An MMSI is a nine digit number used on Marine Transceivers capable of using Digital Selective Calling (DSC). This number is used like a telephone number to selectively call other vessels.

THIS NUMBER MUST BE PROGRAMMED INTO THE RADIO TO OPERATE DSC FUNCTIONS.

How can I obtain an MMSI assignment?




Please contact the Radio Licensing Authority for your country for information on how to obtain an MMSI number.

9.2.2 Programming the MMSI

WARNING

A user MMSI can be inputted only once. Therefore please be careful not to input the incorrect MMSI number. If you need to change the MMSI number after it has been entered, the radio will have to be returned to Factory Service. Refer to the section “17.2 FACTORY SERVICE.”

1. Press and hold down the  key until the “Setup Menu” appears.
2. Press the  key to select “MMSI SETUP”.
3. Press the **SELECT** soft key. (To cancel, press the **QUIT** soft key.)
4. Press the  key to select the first number of your MMSI, then press the **ENT** soft key to step to the next number.
5. Repeat step 4 to set your MMSI number (nine digits).
6. If a mistake was made entering in the MMSI number, press the **BACK** soft key until the wrong number is selected, then press the  key to correct the entry and press the **ENT** soft key.
7. When finished programming the MMSI number, press and hold the **ENT** soft key. The radio will ask you to input the MMSI number again. Use steps 4 - 6 above.
8. After the second number has been input, press and hold the **ENT** soft to store the MMSI.
9. Press the **OK** soft key to return to radio operation.

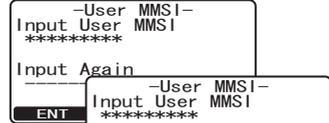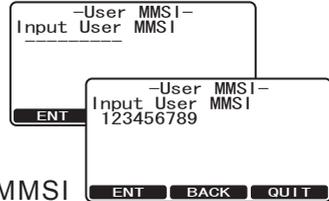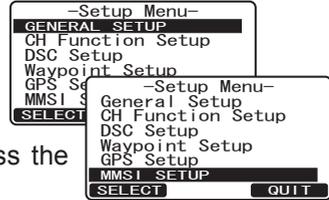

NOTE

To view your MMSI after programming to ensure it is correct, perform steps 1~3. Look that the MMSI number shown on the display is correct.

9.3 DSC DISTRESS ALERT

The **GX1700E** is capable of transmitting and receiving DSC Distress messages with your vessels position.

9.3.1 Transmitting a DSC Distress Alert

NOTE

For the **GX1700E** to be able to transmit a DSC Distress call with your ships location, the internal GPS must be able to receive a fix or a optional GPS Antenna/Chart Plotter must be connected. Refer to section “**6.4 ACCESSORY CABLE.**”

1. Lift the red spring loaded DISTRESS cover and press the **DISTRESS** key. The “DISTRESS ALERT” menu will appear on the display.
2. Press and hold the **DISTRESS** key. The radios display will count down (3-2-1) and then transmit the Distress Alert. The backlight of the display and keypad flashes while the radios display is counting down.
3. When the distress signal is sent, the transceiver watches for a transmission between CH16 and CH70 until an acknowledgment signal is received.
4. If no acknowledgment is received, the distress call is repeated in 4 minute intervals until a DSC acknowledgment is received.
5. When a DSC Distress acknowledgment is received, a distress alarm sounds and channel 16 is automatically selected. The display shows the MMSI of the ship responding to your distress.
RECEIVED ACK: acknowledgment signal is received.
RECEIVED RLY: relay signal is received from another vessel or coast station.
6. Press the **PTT** button and state your name, vessel name, number of persons on board and the distress situation, then say over and wait for a reply from the acknowledging ship.

```
!DISTRESS ALERT!  
Nature of:Undesignated  
Position: 50° 37.660N  
000° 55.989E  
POS Time: 10:00  
Time for 3 sec  
NATURE POS/TM QUIT
```

```
!DISTRESS ALERT!  
Nature of:Undesignated  
Position: 50° 37.660N  
000° 55.989E  
POS Time: 10:00  
Time for 3 sec
```

```
!DISTRESS ALERT!  
Nature of:Undesignated  
Position: 50° 37.660N  
000° 55.989E  
POS Time: 10:00  
Transmitting
```

```
!DISTRESS ALERT!  
Nature of:Undesignated  
Position: 50° 37.660N  
000° 55.989E  
POS Time: 10:00  
TX in: 02:25  
Wait for ACK  
PAUSE CANCEL
```


```
!DISTRESS ALERT!  
Received Acknowledged  
Name:USCG  
ID:101234567  
Since: 00:15  
OK
```

9.3.1.1 Transmitting a DSC Distress Alert with Nature of Distress


The **GX1700E** is capable of transmitting a DSC Distress Alert with the following “Nature of Distress” categories you may have:

Undesignated, Fire, Flooding, Collision, Grounding, Capsizing, Sinking, Adrift, Abandoning, Piracy, MOB

1. Lift the red spring loaded DISTRESS cover and press the **DISTRESS** key. The “DISTRESS ALERT” menu will appear on the display.

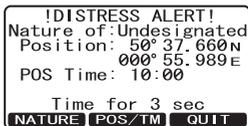


2. Press the **NATURE** soft key, then press the **▲** / **▼** key to select the desired nature of distress category.

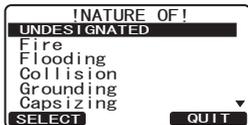


Nature of Distress Categories: Fire, Flood, Collision, Grounding, Capsizing, Sinking, Adrift, Abandoning, Piracy, and MOB.


3. Press and hold the **DISTRESS** key. The radios display will count down (3-2-1) and then transmit the Distress Alert. The backlight of the display and keypad flashes while the radios display is counting down.

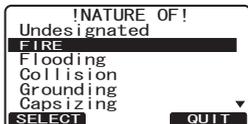


4. When the distress signal is sent, the transceiver watches for a transmission between CH16 and CH70 until an acknowledgment signal is received.

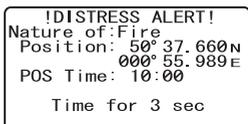


5. If no acknowledgment is received, the DSC distress call is repeated in 4 minute intervals until an acknowledgment is received.

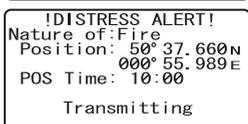

6. When a DSC Distress acknowledgment is received, a distress alarm sounds and channel 16 is automatically selected. The display shows the MMSI of the ship responding to your distress.

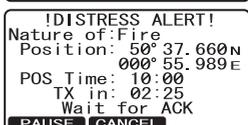

RECEIVED ACK: acknowledgment signal is received.

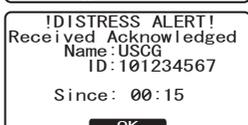









RECEIVED RLY: relay signal is received from another vessel or coast station.

7. Press the **PTT** button and state your name, vessel name, number of persons on board and the distress situation, then say over and wait for a reply from the acknowledging ship.

9.3.1.2 Transmitting a DSC Distress Alert by Manually Entering a Position

The **GX1700E** allows you to manually enter a latitude/Longitude of your vessel to be able to transmit a DSC Distress alert.

1. Lift the red spring loaded **DISTRESS** cover and press the **DISTRESS** key. The "DISTRESS ALERT" menu will appear on the display.
2. Press the **POS/TM** soft key.
3. Enter the latitude/longitude of your vessel and your local UTC time in the 24-hour notation. Press the / key to select the number and press the **ENT** soft key to move the cursor to the next character. You may backspace the cursor by pressing the **BACK** soft key, if you make a mistake.
4. When you have completed your selection, press and hold in the **ENT** soft key for two seconds to save the setting.
5. Press and hold the **DISTRESS** key. The radios display will count down (3-2-1) and then transmit the Distress Alert. The backlight of the display and keypad flashes while the radios display is countdown.
6. When the distress signal is sent, the transceiver "shadow-watches" for a transmission between CH16 and CH70 until an acknowledgment signal is received.
7. If no acknowledgment is received, the distress call is repeated in 4 minute intervals until an acknowledgment is received.
8. When a DSC Distress acknowledgment is received, a distress alarm sounds and channel 16 is automatically selected. The display shows the MMSI of the ship responding to your distress.
RECEIVED ACK: acknowledgment signal is received.
RECEIVED RLY: relay signal is received from another vessel or coast station.
9. Press the **PTT** button and state your name, vessel name, number of persons on board and the distress situation, then say over and wait for a reply from the acknowledging ship.

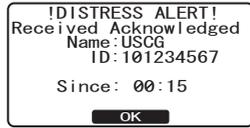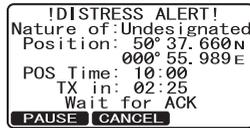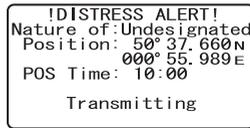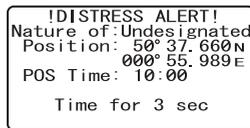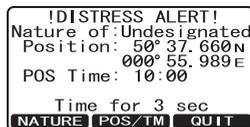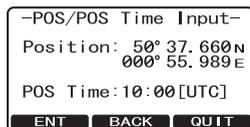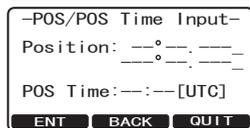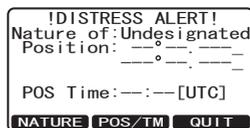

9.3.1.3 Pausing a DSC Distress Call

After a DSC Distress call is transmitted, the DSC distress call is repeated every 4 minutes until the call is canceled by the user or until the radio is turned on and off again. The **GX1700E** has provision to suspend (Pause) the retransmitting of the distress call by the procedure below.

1. After the distress call is transmitted, the radio will show the top display to the right.
Looking at this display you will notice TX in: 02:25, this is the time when the radio will re-transmit the DSC distress call.
2. To suspend re-transmitting the DSC call, press the **PAUSE** soft key.
3. To resume counting down to transmit the DSC Distress call, press the **RESUME** soft key.

```
!DISTRESS ALERT!
Nature of:Undesignated
Position: 50° 37.600N
          000° 55.989E
POS Time: 10:00
TX in: 02:25
Wait for ACK
PAUSE CANCEL
```

```
!DISTRESS ALERT!
Retransmission is
now pausing!
TX in: 02:25
RESUME CANCEL
```

9.3.1.4 Cancel a DSC Distress Call

If a DSC Distress call was sent by error the **GX1700E** allows you to send a message to other vessels to cancel the Distress Call that was made.

Press the **CANCEL** soft key, then press **YES** soft key.

```
!DISTRESS ALERT!
Nature of:Undesignated
Position: 50° 37.600N
          000° 55.989E
POS Time: 10:00
TX in: 02:25
Wait for ACK
PAUSE CANCEL
```

```
!DISTRESS ALERT!

Transmit?
YES NO
```

9.3.2 Receiving a DSC Distress Call

1. When a DSC Distress call is received, an emergency alarm sounds.
2. Press any key to stop the alarm.
3. The display shows the position of the vessel in distress. To show additional information of the vessel in distress, press the  key (refer to the second display).

On the display you will notice 3 soft key selections. These selections are described below:

- a. **ACCEPT**: Press to immediately select Channel 16.

Note: If a key is not pressed for 30 seconds or longer the radio will automatically select Channel 16.

- b. **PAUSE**: Temporarily suspend switching to channel 16.

- c. **QUIT**: Exit to the working channel.

4. Press the **WPT** soft key to enter the “Waypoint Input” menu, then enter the desired waypoint name (up to 11 characters), described previously (select



```
Received DISTRESS
Name: YAESU
ID: XXXXXXXX
Since: 01:03
-DISTRESS INFO-
Nature of:Undesignate
DIST ID: XXXXXXXX
ACCEPT PAUSE QUIT
```

```
Received DISTRESS
DIST ID: XXXXXXXX ▲
Position: 50° 25.846N
          001° 01.623E
POS Time: 10:00
DIST: 12.3NM
BRG: 163°
ACCEPT PAUSE QUIT
```

```
Received DISTRESS
Name: YAESU
ID: XXXXXXXX
Since: 01:03
-DISTRESS INFO-
Nature of:Undesignate
DIST ID: XXXXXXXX ▼
WPT QUIT
```

the letter/number by pressing the  /  key and move the cursor by pressing the **ENT** / **BACK** soft key).

5. The ID is the MMSI from the vessel in distress.
6. When you are finished entering the waypoint name, press and hold the **ENT** soft key to replace the display to the “WAYPOINT” Screen. The display indicates the distance and direction of the vessel in distress by a dot (●).
7. To stop navigating to a waypoint, press the one of the Soft keys, then press the **STOP** soft key. The radio is switched to Normal Mode.

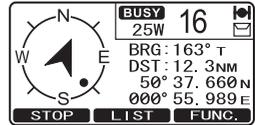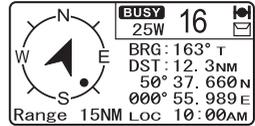

NOTE

You must continue monitoring channel 16 as a coast station may require assistance in the rescue attempt.

9.4 ALL SHIPS CALL


The All Ships Call function allows contact to be established with DSC equipped vessels without having their MMSI in the individual calling directory. Also, priority for the call can be designated as Urgency or Safety.

URGENCY Call: This type of call is used when a vessel may not truly be in distress, but have a potential problem that may lead to a distress situation. This call is the same as saying PAN PAN PAN on channel 16.

SAFETY Call: Used to transmit boating safety information to other vessels. This message usually contains information about an overdue boat, debris in the water, loss of a navigation aid or an important meteorological message. This call is the same as saying Securite, Securite, Securite.”

9.4.1 Transmitting an All Ships Call

1. Press the **CALL MENU** key. The “DSC Menu” will appear.
2. Press the **▲/▼** key to select “All SHIPS”.
3. Press the **SELECT** soft key. (To cancel, press the **QUIT** soft key.)
4. Press the **▲/▼** key to select the nature of call (“SAFETY” or “URGENCY”), then press the **SELECT** soft key.
5. Press the **▲/▼** key to select the operating channel you want to communicate on, then press the **SELECT** soft key. If the channel you want to use is not listed, press the **MANUAL** soft key, then press the **▲/▼** key to select the operating channel you want to communicate on (default is channel 16), then press the **SELECT** soft key.
6. Press the **YES** soft key to transmit the selected type of all ships DSC call.
7. After the All Ships Call is transmitted, the transmitter will switch to the selected channel.
8. Listen to the channel to make sure it is not busy, then press the microphone’s **PTT** switch and say PAN PAN PAN or “Securite, Securite, Securite” depending on the priority of the call and state your message.
9. Press the **QUIT** soft key to exit the ALL ship call menu.

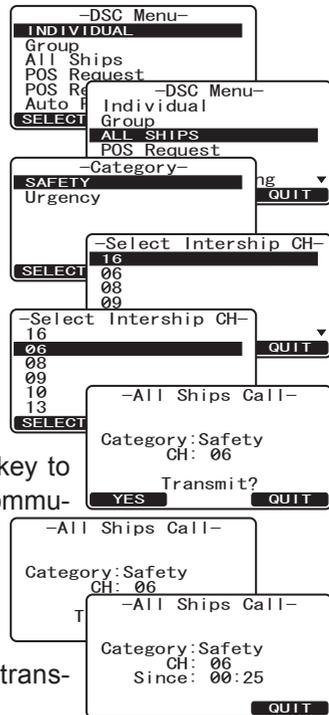

9.4.2 Receiving an All Ships Call

1. When an all ships call is received, an emergency alarm will sound.

The display shows the MMSI of the vessel transmitting the All Ships Call and the radio will change to the requested channel after 10 seconds.

2. Press any key to stop the alarm.
3. Monitor the requested channel until the ALL SHIPS voice communication is completed.

On the display you will notice 3 soft key selections. These selections are described below:



- a. **ACCEPT**: Accept to auto switching to Channel 16.

Note: If a key is not pressed for 30 seconds or longer the radio will automatically select Channel 16.

- b. **PAUSE**: Temporarily suspend switching to channel 16.

- c. **QUIT**: Exit to the working channel.

4. Press the **QUIT** soft key to return to the channel display.

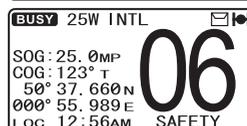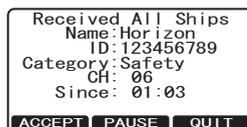

9.5 INDIVIDUAL CALL






This feature allows the **GX1700E** to contact another vessel with a DSC VHF radio and automatically switch the receiving radio to a desired communications channel. This feature is similar to calling a vessel on CH16 and requesting to go to another channel (switching to the channel is private between the two stations). Up to 80 Individual contacts may be programmed.

9.5.1 Individual / Position Call Directory Setup

The **GX1700E** has a DSC directory that allows you to store a vessel or person's name and the MMSI number associated with vessels you wish to transmit Individual calls, Auto Polling, Position Request, and Position Report transmissions.


To transmit an Individual call you must program this directory with information of the persons you wish to call, similar to a cellular phones telephone directory.

1. Press and hold down the  key until "Setup Menu" appears.
2. Press the  key to select "DSC SETUP" menu.
3. Press the **SELECT** soft key, then select "INDIVIDUAL DIRECTORY" with the  key.
4. Press the **SELECT** soft key.
5. Select "ADD" with the  key, then press the **SELECT** soft key.
6. Press the  key to scroll through the first letter of the name of the vessel or person you want to reference in the directory.
7. Press the **ENT** soft key to store the first letter in the name and step to the next letter to the right.
8. Repeat step 6 and 7 until the name is complete. The name can consist of up to eleven characters, if you do not use all eleven characters press the **ENT** soft key to move to the next space. This method can also be used to enter a blank space in the name. If a mistake was made entering in the name repeat pressing the **BACK** soft key until the wrong character is selected, then press the  key to correct the entry.
9. After the eleventh letter or space has been entered, press and hold the **ENT** soft key to advance to the MMSI (Maritime Mobile Service Ident-

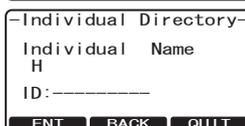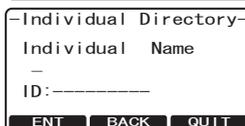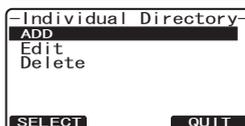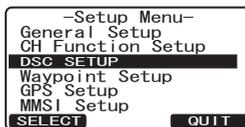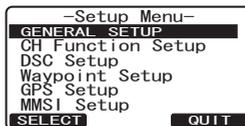

tity Number) number entry.





10. Press the / key to scroll through numbers, 0-9. To enter the desired number and move one space to the right by pressing the **ENT** soft key. Repeat this procedure until all nine space of the MMSI number are entered.
11. If a mistake was made entering in the MMSI number repeat pressing the **BACK** soft key until the wrong number is selected, then press the / key to correct the entry.
12. To store the data entered, press and hold the **ENT** soft key.
13. To enter another individual address, repeat steps 5 through 12.
14. Press the **QUIT** soft key several times to return to radio operation.

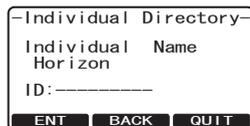

9.5.2 Individual Reply Setup

This menu item sets up the radio to automatically or manually (default setting) respond to a DSC Individual call requesting you to switch to a working channel for voice communications. When Manual is selected the MMSI of the calling vessel is shown allowing you to see who is calling. This function is similar to caller id on a cellular phone.

1. Press and hold down the  key until "Setup Menu" appears.
2. Press the / key to select "DSC SETUP" menu.
3. Press the **SELECT** soft key, then select "INDIVIDUAL REPLY" with the / key.
4. Press the **SELECT** soft key.
5. Press the / key to select "AUTOMATIC" or "MANUAL".
6. Press the **ENT** soft key to store the selected setting.
7. Press the **QUIT** soft key several times to return to radio operation.

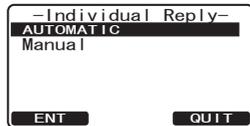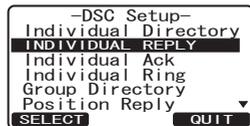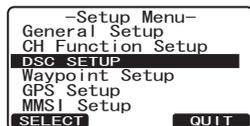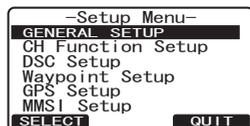


9.5.3 Individual Acknowledgment Setup

The **GX1700E** can select either reply message “Able” (default) or “Unable” when the Individual Reply setting (described previous section) is set to “AUTOMATIC”.

When the Individual Reply setting (described previous section) is set to “AUTOMATIC”, the **GX1700E** can be setup to reply “Able” (default) or not reply “Unable” to an received Individual Call. When “Unable” is selected the **GX1700E** will transmit a “Unable” reply to the calling station to inform them you are away from your radio.

1. Press and hold down the  key until “Setup Menu” appears.
2. Press the  key to select “DSC SETUP” menu.
3. Press the **SELECT** soft key, then select “INDIVIDUAL ACK” with the  key.
4. Press the **SELECT** soft key.
5. Press the  key to select “ABLE TO COMPLY” or “UNABLE”.
6. Press the **ENT** soft key to store the selected setting, then press the **QUIT** soft key several times to return to radio operation.

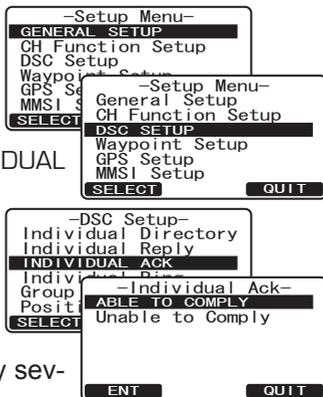

9.5.4 Individual/Group Call Ringer Setup


When a Individual Call or Group Call is received the radio will produce a ringing sound for 2 minutes. This selection allows the Individual Call ringer time to be changed.

1. Press and hold down the  key until “Setup Menu” appears.
2. Press the  key to select “DSC SETUP” menu.
3. Press the **SELECT** soft key, then select “INDIVIDUAL RING” with the  key.
4. Press the **SELECT** soft key.
5. Press the  key to select ringing time of a Individual Call.
6. Press the **ENT** soft key to store the selected setting, then press the **QUIT** soft key several times to return to radio operation.



The **GX1700E** has the capability to turn off the Individual and Group call ringer.

1. Press and hold down the  key until "Set-up Menu" appears.
2. Press the  key to select "DSC SETUP" menu.
3. Press the  soft key, then select "DSC BEEP" with the  key.
4. Press the  soft key.
5. Press the  key to select "Individual" if you wish to disable the Individual call ringer, or "Group" if you wish to disable the Group call ringer, then press the  soft key.
6. Press the  key to select "Off".
7. Press the  soft key to store the selected setting, then press the  soft key several times to return to radio operation.

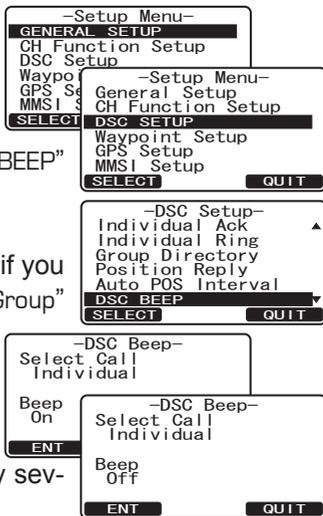

To re-enable the ringer, repeat the above procedure, pressing the  key to select "On" in step "6" above.

NOTE

The **GX1700E** may turn on and off the call ringer of the All Ships, POS Request, POS Report, and Geographical as well as the Individual and Group call.

9.5.5 Transmitting an Individual Call

This feature allows the user to contact another vessel with a DSC radio. This feature is similar to calling a vessel on CH16 and requesting to go to another channel.

9.5.5.1 Individual Call using the Individual Directory



1. Press the  key. The "DSC Menu" will appear.
2. Press the  key to select "INDIVIDUAL". (To cancel, press the  soft key.)
3. Press the  soft key.
4. Press the  key to select the "Individual" you want to contact.



NOTE

To make it easier to make Individual calls, the **GX1700E** shows the NAME of last Individual calls transmitted.


- Press the **SELECT** soft key, then press the  key to select the nature of call (“ROUTINE”, “SAFETY”, or “URGENCY”).
- Press the **SELECT** soft key, then press the  key to select the operating channel you want to communicate on, then press the **SELECT** soft key. If the channel is not shown in the list, press the **MANUAL** soft key, then press the  key to select the operating channel you want to communicate on, then press the **SELECT** soft key.
- Press the **YES** soft key to transmit the individual DSC signal.
- When an individual call acknowledgment is received, the established channel is automatically changed to the channel selected in step 5 above and a ringing tone sounds.
- Press the **QUIT** soft key to listen to the channel to make sure it is not busy, then press the microphone’s **PTT** switch and talk into the microphone to the other vessel.

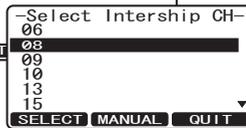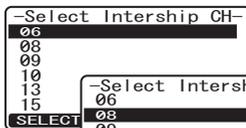

9.5.5.2 Individual Call by Manually Entering a MMSI

You may enter an MMSI number manually to contact another vessel.

- Press the  key. The “DSC Menu” menu will appear.
- Confirm “INDIVIDUAL” is selected. (To cancel, press the **QUIT** soft key.)
- Press the **SELECT** soft key.

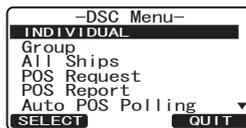

NOTE




If you have transmitted a Individual call before, the radio will show the name of the last person you called as shown in the display at the right. If this is the case press the **NEW ID** soft key and the following steps.



- Confirm “MANUAL” is selected, then press the **SELECT** soft key.
- Press the  key to select the first number of the MMSI which you want to contact, then press the **SELECT** soft key to step to the next number.




6. Repeat step 5 to set the MMSI number (nine digits).
7. If a mistake was made entering in the MMSI number, repeat pressing the **BACK** soft key until the wrong number is selected, then press the  /  key to correct the entry.
8. When finished entering the MMSI number, press and hold the **SELECT** soft key.
9. Press the **SELECT** soft key, then press the  /  key to select the nature of call ("ROUTINE", "SAFETY", or "URGENCY").
10. Press the  /  key to select the operating channel you want to communicate on, then press the **SELECT** soft key. If the channel is not shown in the list, press the **MANUAL** soft key, then press the  /  key to select the operating channel you want to communicate on, then press the **SELECT** soft key.
11. Press the **YES** soft key to transmit the individual DSC signal.
12. When an individual call acknowledgment is received, the established channel is automatically changed to the channel which is selected on step 5 above and a ringing tone sounds.
13. Press the **QUIT** soft key to listen to the channel to make sure it is not busy, then press the microphone's **PTT** switch and talk into the microphone to the other vessel.

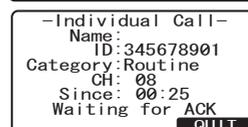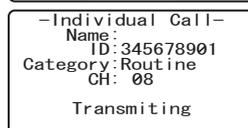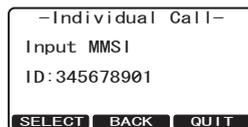

9.5.6 Receiving an Individual Call

When a Individual DSC call is received, the radio will automatically respond (Default setting) to the calling ship, and switch to the requested channel for voice communications. Refer to section “9.5.2 Individual Reply Setup” to change the reply to manual if you want to see who is calling before replying to the call.

1. When an individual call is received, an individual call ringing alarm sounds.
The radio automatically switches to the requested channel. The display shows the MMSI of the vessel calling.

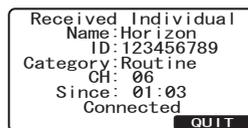

2. Press any key to stop the alarm.
3. Press the **QUIT** soft key to return to radio operation
4. Press the microphone's **PTT** switch and talk into the microphone to the other vessel.




9.6 DSC LOG OPERATION

The **GX1700E** logs transmitted calls, received distress calls, and other calls (Individual, Group, All Ship etc.). The DSC Log feature is similar to an answer machine where calls are recorded for review and a “✉” icon will appear on the radios display. The **GX1700E** can store up to 24 Transmitted calls, up to 27 Distress, and up to 64 other calls (All Ships Calls, Individual Calls, Group Calls, Position Report, Position Request Ack, and Test Call Ack).

9.6.1 Reviewing and Resending a Transmitted Logged Call

The **GX1700E** radios allows Transmitted Logged Calls to be reviewed and resend the call.


1. Press the **CALL MENU** key. The “DSC menu” will appear.
2. Press the **▲/▼** key to select “DSC LOG” menu.
3. Press the **SELECT** soft key, then confirm “TRANSMITTED LOG” is selected.
4. Press the **SELECT** soft key, then press the **▲/▼** key to select the station (name or MMSI number) you want to review and/or resend the call.
5. Press the **SELECT** soft key, to review details for the selected station.
6. Press the **CALL** soft key to resend the call, if desired.

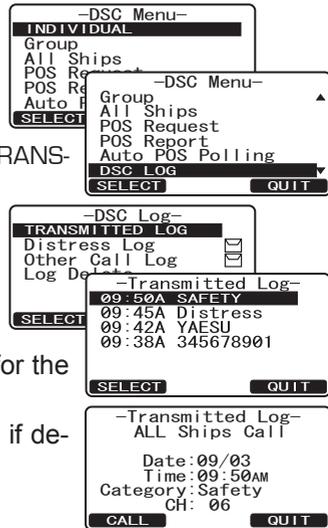


9.6.2 Reviewing DSC Distress Logged Calls

The **GX1700E** radios allows DSC Distress Logged Calls to be reviewed.

1. Press the **CALL MENU** key. The “DSC menu” will appear.
2. Press the **▲/▼** key to select “DSC LOG” menu.
3. Press the **SELECT** soft key, then press the **▲** key

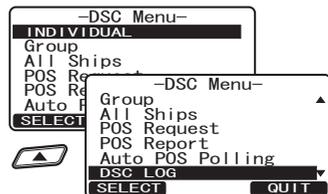


- /  key to select "DISTRESS LOG".
- Press the **SELECT** soft key, then press the  /  key to select the station (name or MMSI number) you want to review.
Note: When there is an unread received call,  icon will appear behind the station name (or MMSI number).
 - Press the **SELECT** soft key, to review details for the selected station.

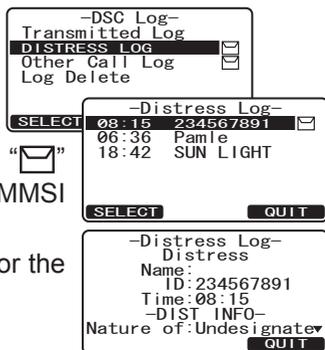

9.6.3 Reviewing Other Logged Calls


Reviewing other logged calls (All Ships Calls, Individual Calls, Group Calls, Position Report, Position Request Ack, and Test Call Ack).

- Press the  key. The "DSC Menu" will appear.
- Press the  /  key to select "DSC LOG" menu.
- Press the **SELECT** soft key, then press the  key to select "OTHER CALL LOG".
- Press the **SELECT** soft key, then press the  /  key to select the station (name or MMSI number) you want to review.
Note: When there is an unread received call,  icon will appear behind the station name (or MMSI number).
- Press the **SELECT** soft key, to review details for the selected station.

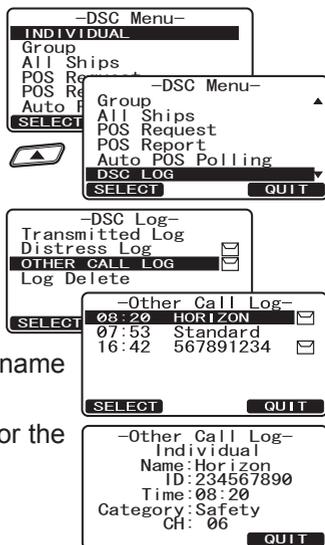


9.6.4 Deleting a Call from the "DSC LOG" Directory

- Press the  key. The "DSC Menu" will appear.
- Press the  /  key to select "DSC LOG" menu.
- Press the **SELECT** soft key, then press the  key to select "LOG DELETE" menu.
- Press the **SELECT** soft key, then press the  /  key to select the category ("TRANSMITTED LOG", "DISTRESS LOG", or "OTHER CALL LOG") to be deleted.

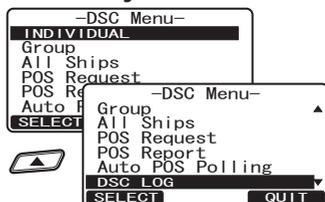


5. Press the **SELECT** soft key.

1) If you want to delete all stations at a time, select "ALL LOG DELETE" with the  /  key, then press the **SELECT** soft key, then press the **OK** soft key. Press the **QUIT** soft key several times to return to radio operation.

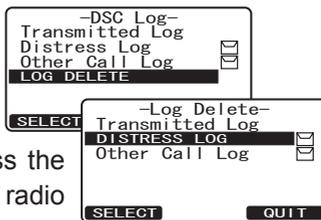

2) If you want to delete one of the logged stations, select "VIEW LOG LIST" with the  /  key, then press the **SELECT** soft key. Press the  /  key to select the station (name or MMSI number) to be deleted, then press the **DELETE** soft key. The display will show "Are your sure?". Press the **OK** soft key.

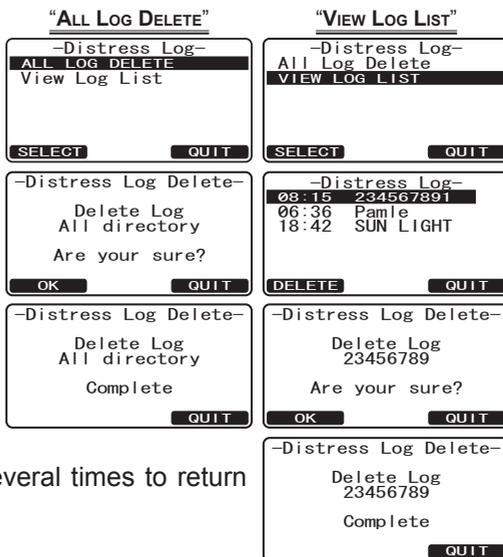

6. Press the **QUIT** soft key several times to return to radio operation.

9.7 GROUP CALL

This feature allows the user to contact a group of specific vessels (example members of a yacht club) using DSC radios with Group call function to automatically switch to a desired channel for voice communications. This function is very useful for yacht clubs and vessels traveling together that want to collectively make announcements on a predetermined channel. Up to 32 Group MMSI may be programmed.

9.7.1 Group Call Setup

For this function to operate, the same Group MMSI must be programmed into all the DSC VHF radios within the group of vessels that will be using this feature. To understand Group MMSI programming, first a Ship MMSI has to be understood.


Ship MMSI: The first three digits called a MID (Mobile Identity Group) of a Ship MMSI denote the country the ship registered for a MMSI. The last 6 digits are specific to the Ships ID.

Ship MMSI Example: If your MMSI is “366123456”, “366” is MID which denote the country and “123456” is your ships MMSI.




Group MMSI:

- Group MMSI numbers are not assigned by the FCC or other organizations licensed to assign ship MMSI numbers.
- The first digit of a Group MMSI is always set to “0” by International rules. All Standard Horizon radios are preset so when programming a Group MMSI the first digit is set to “0”.
- The USCG recommends programming the MID of a ships MMSI into the Second, Third and Fourth digits of the Group MMSI as it denotes the area the ship is located in.
- The last 5 digits are decided upon by persons in the Group. This is an important step as all radios in the Group must contain the same Group MMSI so they can be contacted by each other. There is a chance that another group of vessels may program in the same Group MMSI. If this happens, simply change one or more of the last 5 digits of the Group MMSI.

1. Press and hold down the  key until “Setup Menu” appears.
2. Press the  key to select “DSC SETUP” menu.
3. Press the  soft key, then select “GROUP DIRECTORY” with the  key.
4. Press the  soft key, then select “ADD” with the  key.

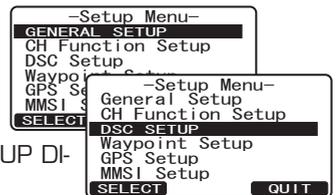


5. Press the **SELECT** soft key.
6. Press the key to scroll through the first letter of the name of the group you want to reference in the directory.
7. Press the **SELECT** soft key to store the first letter in the name and step to the next letter to the right.
8. Repeat step 6 and 7 until the name is complete. The name can consist of up to eleven characters, if you do not use all eleven characters press the **ENT** soft key to move to the next space. This method can also be used to enter a blank space in the name. If a mistake was made entering in the name repeat pressing the **BACK** soft key until the wrong character is selected, then press the key to correct the entry.
9. After the eleventh letter or space has been entered, press and hold the **ENT** soft key to advance to the GROUP MMSI (Maritime Mobile Service Identity Number) number entry.
10. Press the key to select the second number of the MMSI (nine digits: first digit permanently set to "0") which you want to contact, then press the **ENT** soft key to step to the next number. Repeat this procedure until all eight space of the MMSI number are entered.
11. If a mistake was made entering in the MMSI number repeat pressing the **BACK** soft key until the wrong number is selected, then press the key to correct the entry.
12. To store the data entered, press and hold the **ENT** soft key.
13. To enter another group address, repeat steps 5 through 12.
14. Press the **QUIT** soft key several times to return to radio operation.

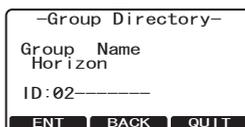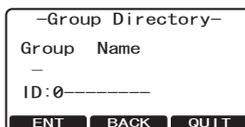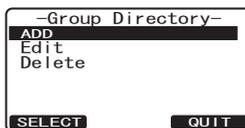


9.7.2 Transmitting a Group Call

9.7.2.1 Group Call using the Individual Directory

1. Press the key. The "DSC Menu" will appear.
2. Press the key to select "GROUP". (To cancel, press the **QUIT** key.)
3. Press the **SELECT** soft key. The transceiver will beep, and the "Last Group Call" will appear.
4. Press the key to select the "Group" you want to contact.

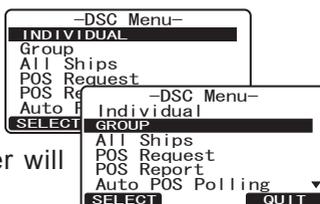


- Press the **SELECT** soft key, then press the key to select the operating channel you want to communicate on, then press the **SELECT** soft key. If the channel you want is not shown, press the **MANUAL** soft key, then press the key to select the operating channel you want to communicate on, then press the **SELECT** soft key.
- Press the **YES** soft key to transmit the Group Call signal.
- When the Group Call signal is sent, the display will be as shown in the illustration at the right.
- After the Group Call is transmitted, all the radios in the group will switch to the designated channel.
- Listen to the channel to make sure it is not busy, then press the microphone's **PTT** switch and call the other vessel you desire to communicate with.

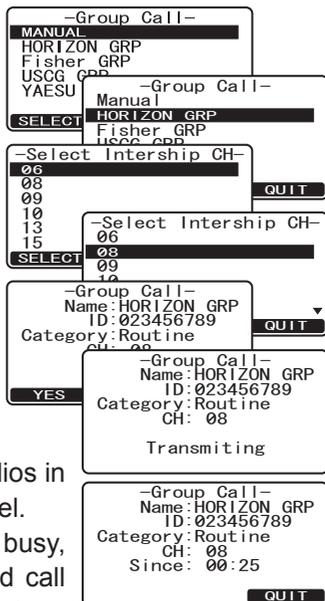

9.7.2.2 Group Call by Manually Entering a MMSI


This feature allows you to contact a group of vessels by entering in their Group MMSI manually.

- Press the key. The “DSC Menu” will appear.
- Press the key to select “GROUP”. (To cancel, press the **QUIT** soft key.)
- Press the **SELECT** soft key. The transceiver will beep, and the “Last Group Call” will appear.
- Confirm “MANUAL” is selected and press the **SELECT** soft key.
- Press the key to select the first number of the MMSI (nine digits: first digit permanently set to “0”) which you want to contact, then press the **SELECT** soft key to step to the next number.
- Repeat step 5 to set the MMSI number.
- If a mistake was made entering in the MMSI number, repeat pressing the **BACK** soft key until the wrong number is selected, then press the key to correct the entry.
- When finished entering the MMSI number, press

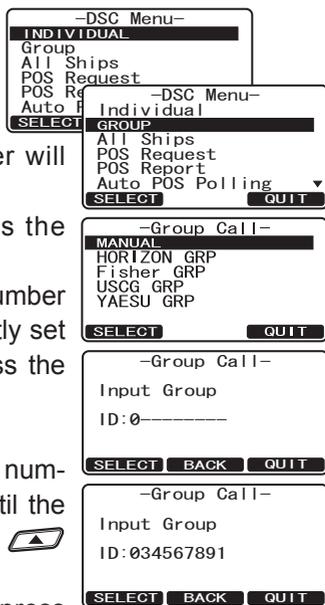

and hold the **SELECT** soft key.

9. Press the  key to select the operating channel you want to communicate on, then press the **SELECT** soft key. If the channel you want is not shown, press the **MANUAL** soft key, then press the  key to select the operating channel you want to communicate on, then press the **SELECT** soft key.
10. Press the **YES** soft key to transmit the Group Call signal.
11. After the Group Call is transmitted, all the radios in the group will switch to the designated channel.
12. Listen to the channel to make sure it is not busy, then press the microphone's **PTT** switch and talk into the microphone to the group of vessels.

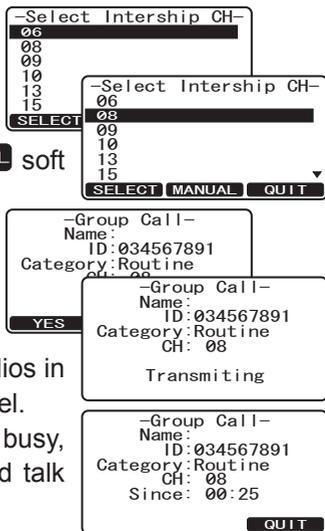

9.7.3 Receiving a Group Call

1. When a group call is received, the **GX1700E** will produce a ringing alarm sound.
2. The display shows the GROUP MMSI number.
3. Press the any key to stop the alarm.
4. Monitor the channel for the person calling the Group for a message.




On the display you will notice 3 soft key selections. These selections are described below:

- a. **ACCEPT**: Press to immediately select Channel 16.
 - Note**: If a key is not pressed for 30 seconds or longer the radio will automatically select Channel 16.
 - b. **PAUSE**: Temporarily suspend switching to channel 16.
 - c. **QUIT**: Exit to the working channel.
5. If you want to respond, monitor the channel to make sure it is clear, then press the microphone's **PTT** switch and talk into the microphone to the group of vessels.



6. Press the **QUIT** soft key to return to radio operation.

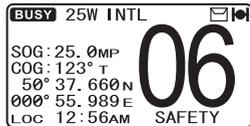

9.8 POSITION REQUEST

Advancements in DSC have made it possible to poll the location of another vessel and show the position of that vessel on the display of the **GX1700E**. Standard Horizon has taken this feature one step further, if any compatible GPS chart plotter is connected to the **GX1700E**, the polled position of the vessel is shown on the display of the GPS chart plotter making it easy to navigate to the location of the polled vessel. This is a great feature for anyone wanting to know the position of another vessel. For example your buddy that is catching fish, or finding the location of a person you are cruising with.




NOTE

The other vessel must have an operating GPS receiver connected to its DSC radio and must not have its radio set not to deny position requests. (Refer the section “**9.5 INDIVIDUAL CALL**” to enter information into the individual directory).

9.8.1 Position Reply Setup

The **GX1700E** can be set up to automatically (default setting) or manually send your position when requested by another vessel. This selection is important if you are concerned about someone polling the position of your vessel that you may not want to. In the manual mode you will see the MMSI or persons name shown on the display allowing you to choose to send your position to the requesting vessel.


1. Press and hold down the  key until “Setup Menu” appears.
2. Press the  key to select “DSC SETUP” menu.
3. Press the  soft key, then select “POSITION REPLY” with the  key.
4. Press the  soft key, then select “AUTOMATIC” or “MANUAL”. In “AUTOMATIC” mode, after a DSC POS Request is received, the radio will automatically transmit your vessels position. In “MANUAL” mode, the display of the **GX1700E** will show who is requesting the position and the  soft key on radio has to be pressed to send your position to the requesting.
5. Press the  soft key to store the selected setting.
6. Press the  soft key several times to return to radio operation.

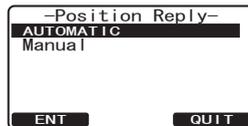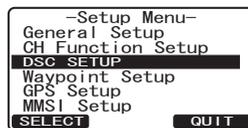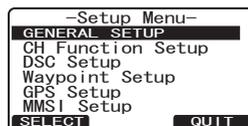

9.8.2 Position Request Ringer Setup

The **GX1700E** has the capability to turn off the Position Request ringer.

1. Press and hold down the **CALL MENU** key until “Setup Menu” appears.
2. Press the **▲/▼** key to select “DSC SETUP” menu.
3. Press the **SELECT** soft key, then select “DSC BEEP” with the **▲/▼** key.
4. Press the **SELECT** soft key, then select “POS Request” with the **▲/▼** key.
5. Press the **ENT** soft key, then select “Off” with the **▲/▼** key.
6. Press the **ENT** soft key to store the selected setting.
7. Press the **QUIT** soft key several times to return to radio operation.

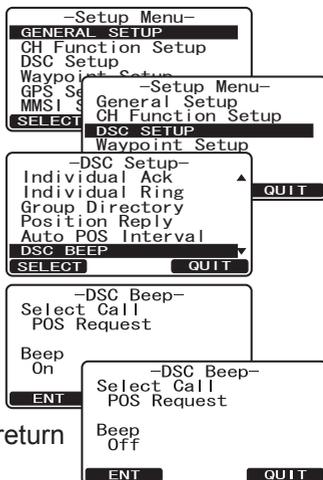


To re-enable the ringer tone, repeat the above procedure, pressing the **▲/▼** key to select “On” in step “5” above.

9.8.3 Transmitting a Position Request to Another Vessel

9.8.3.1 Position Request using the Individual Directory

1. Press the **CALL MENU** key. The “DSC Menu” will appear.
2. Press the **▲/▼** key to select “POS REQUEST”, then press the **SELECT** soft key.
3. Press the **▲/▼** key to select a name that was stored in the Individual DSC directory, then press the **SELECT** soft key.
4. Press the **▲/▼** key to select the nature of call (“ROUTINE” or “SAFETY”), then press the **SELECT** soft key.
5. Press the **YES** soft key to transmit the Position Request DSC call.
6. When the **GX1700E** receives the position from the polled vessel it is shown on the radio display and also transferred to a GPS Chart plotter with NMEA DSC and DSE sentences.
7. Press the **QUIT** soft key to return to radio operation.

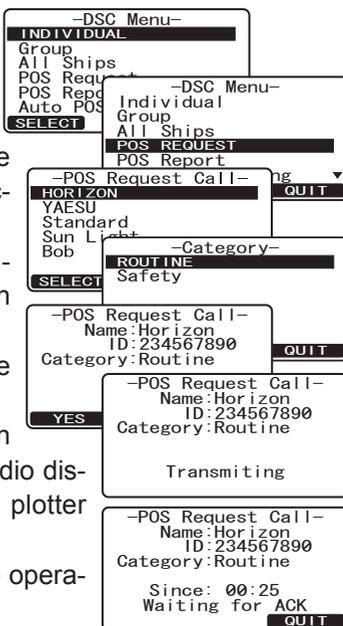

NOTE

If the **GX1700E** does not receive a position data from the polled vessel, the display will show “NO POSITION DATA.”

9.8.3.2 Position Request by Manually Entering a MMSI

This feature allows you to request the position of vessel by manually entering the MMSI of the ship you want to send your position to.

1. Press the **CALL MENU** key. The “DSC Menu” will appear.
2. Press the **▲/▼** key to select “POS REQUEST”.
3. Press the **SELECT** soft key to show the “Last Individual Call”.
4. Press the **▲/▼** key to select the “MANUAL,” then press the **SELECT** soft key.
5. Press the **▲/▼** key to select the first number of the MMSI (nine digits) which you want to contact, then press the **SELECT** soft key to step to the next number.
6. Repeat step 5 to set the MMSI number.
7. If a mistake was made entering in the MMSI number, repeat pressing the **BACK** soft key until the wrong number is selected, then press the **▲/▼** key to correct the entry.
8. When finished entering the MMSI number, press and hold the **SELECT** soft key.
9. Press the **▲/▼** key to select the nature of call (“ROUTINE” or “SAFETY”), then press the **SELECT** soft key.
10. Press the **YES** soft key to transmit the position request DSC call.
11. When the **GX1700E** receives the position from the polled vessel it is shown on the radio display and also transferred to the GPS Chart plotter with NMEA DSC and DSE sentences.
12. Press the **QUIT** soft key to return to radio operation.

The screenshots illustrate the following steps:

- Screenshot 1:** Shows the main DSC menu with options: INDIVIDUAL, Group, All Ships, POS Report, POS Request, and Auto Polling. The 'POS REQUEST' option is highlighted.
- Screenshot 2:** Shows the 'Last Individual Call' menu with options: Individual, Group, All Ships, POS REQUEST, POS Report, and Auto POS Polling. The 'MANUAL' option is highlighted.
- Screenshot 3:** Shows the 'MANUAL' menu with options: Horizon, YAESU, Standard, Sun Light, and Bob. The first digit '1' is highlighted.
- Screenshot 4:** Shows the 'Input MMSI' screen with 'ID: _____'.
- Screenshot 5:** Shows the 'Input MMSI' screen with 'ID: 345678901'.
- Screenshot 6:** Shows the 'Category' menu with options: ROUTINE and Safety. 'ROUTINE' is highlighted.
- Screenshot 7:** Shows the 'Transmit?' confirmation screen with 'Name: ID: 345678901 Category: Routine' and a 'Transmit?' prompt.
- Screenshot 8:** Shows the 'Transmitting' status screen with 'Name: ID: 345678901 Category: Routine' and a 'Transmitting' status.
- Screenshot 9:** Shows the 'Waiting for ACK' screen with 'Name: ID: 345678901 Category: Routine' and a 'Since: 00:25 Waiting for ACK' status.

9.8.4 Receiving a Position Request

When a position request call is received from another vessel, a ringing alarm sounds and POS REQUEST will be shown in the display. Operation and transceiver function differs depending on “Position Reply” in the “DSC Setup” menu.

Automatically reply:

1. When a position request call is received, a calling alarm sounds 4 times. Then requested position coordinates are transmitted automatically to the vessel requesting your vessels position.
2. To exit from position request display, press the **QUIT** soft key.

```
Received POS Request
Name:Horizon
ID:123456789
Category:Routine
Since: 01:03
QUIT
```

Manually reply:

1. When a position request call is received from another vessel, the display will be as shown in the illustration at the right.
2. A ringing alarm sounds 2 minutes. To send your vessels position to the requesting vessel, press the **REPLY** soft key. Or to exit from position request display, press the **QUIT** soft key.

```
Received POS Request
Name:Horizon
ID:123456789
Category:Routine
Since: 01:03
REPLY QUIT
```

```
Received POS Request
Name:Horizon
ID:123456789
Category:Routine
Since: 01:03
Transmitted
QUIT
```

9.9 POSITION REPORT

The feature is similar to Position Request, however instead of requesting a position of another vessel this function allows you to send your position to another vessel. Your vessel must mark the internal GPS receiver for the **GX1700E** to send the position.


NOTE

To transmit a Position Report Call, a GPS must be connected to the radio and the **GX1700E** Individual directory must be programmed with stations you wish to send your position to. To setup this directory refer to section “**9.5.1 Individual / Position Call Directory Setup.**”

9.9.1 Position Report Ringer Setup

The **GX1700E** has the capability to turn off the Position Report ringer.

1. Press and hold down the  key until “Setup Menu” appears.
2. Press the  key to select “DSC SETUP” menu.
3. Press the  soft key, then select “DSC BEEP” with the  key.
4. Press the  soft key, then select “POS Report” with the  key.
5. Press the  soft key, then select “Off” with the  key.
6. Press the  soft key to store the selected setting.
7. Press the  soft key several times to return to radio operation.

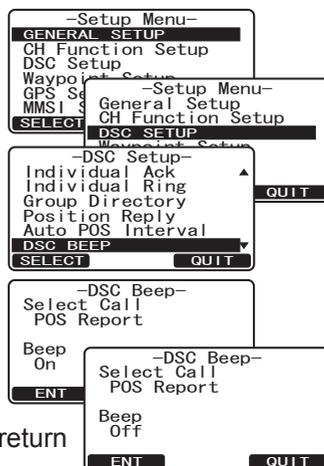


To re-enable the ringer tone, repeat the above procedure, pressing the  /  key to select “On” in step “5” above.


9.9.2 Transmitting a DSC Position Report Call

9.9.2.1 DSC Position Report Call using the Individual Directory

1. Press the  key. The “DSC Menu” will appear.
2. Press the  key to select “POS REPORT”. (To cancel, press the  soft key.)
3. Press the  soft key.

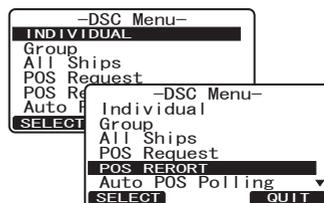


- Press the / key to select the name in the directory, then press the **SELECT** soft key.
- Press the / key to select the nature of call (“ROUTINE” or “SAFETY”), then press the **SELECT** soft key.
- Press the **YES** soft key to send your position to the selected vessel.
- Press the **QUIT** key to return to radio operation.

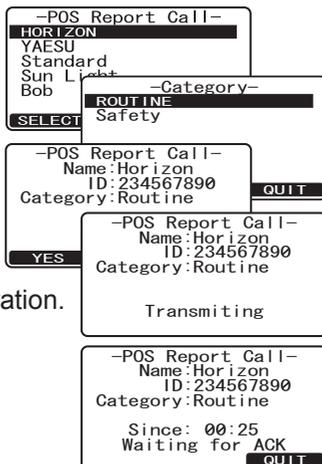


9.9.2.2 DSC Position Report Call by Manually Entering a MMSI

This feature allows you to send your position to another vessel by manually entering the MMSI of the ship you want to send your position to.

- Press the key. The “DSC Menu” will appear.
- Press the / key to select “POS REPORT”. (To cancel, press the **QUIT** soft key.)
- Press the **SELECT** soft key. The transceiver will beep, and the “Position Report Call” menu will appear.
- Press the / key to select “MANUAL”, then press the **SELECT** soft key.
- Press the / key to select the first number of the MMSI which you want to contact, then press the **SELECT** soft key to step to the next number.
- Repeat step 5 to set the MMSI number.
- If a mistake was made entering in the MMSI number, repeat pressing the **BACK** soft key until the wrong number is selected, then press the / key to correct the entry.
- When finished entering the MMSI number, press and hold the **SELECT** soft key.
- Press the / key to select the nature of call (“ROUTINE” or “SAFETY”), then press the **SELECT** soft key.

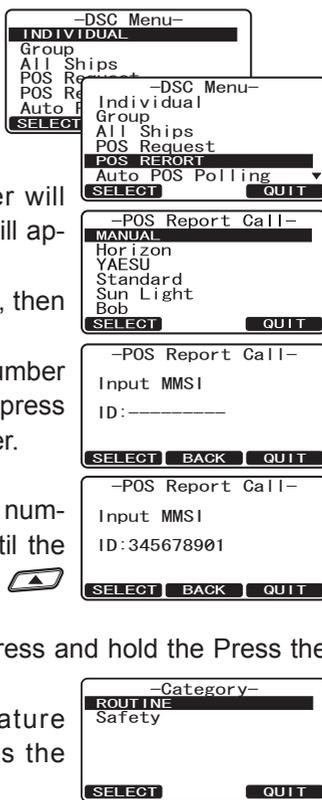


- Press the **YES** soft key to send your position to the selected vessel.
- Press the **QUIT** soft key to return to radio operation.

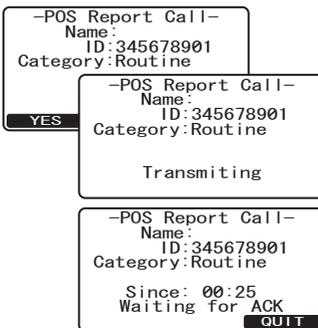

9.9.3 Receiving a DSC Position Report Call

When another vessel transmits their vessels location to the **GX1700E** the following will happen:


- A ringing sound will be produced when the call is received and NMEA sentences DSC, DSE are outputted so the position can be shown on a connected chart plotter or a computer.
- Press the any key to stop ringing.
- Press the key to see position information of the station.
- To exit to radio mode, press the **QUIT** soft key.

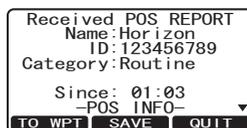

9.9.4 Navigating to a Position Report


The **GX1700E** has a feature that allows navigation to a received Position Report call by using the Compass display. Navigating to the location of a Position Report call may be enabled by the procedure below.

- After the Position Report call has been received: press the **TO WPT** soft key.
- To start navigating using the compass display, press and hold the **ENT** soft key until the Compass Page is shown. The display indicates the distance and direction of the received vessel, and the compass indicates the received vessel by a dot (●) icon.

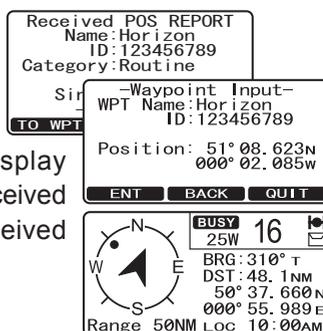

9.9.5 Stop Navigating to Position Report


To stop navigating to a waypoint, press the one of the Soft keys, then press the **STOP** soft key. The radio is switched to Normal Mode.

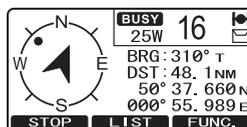

9.9.6 Saving a Position Report Call as a Waypoint


The **GX1700E** can save a Position Report call in the radios memory as a waypoint.

1. After the Position Report call has been received:
Press the **SAVE** soft key.
2. Press the **▲/▼** key to change the first letter in the name of the waypoint and press the **ENT** soft key.
3. Repeat step 2 until the WPT Name is entered.
4. Press and hold the **ENT** soft key to save the waypoint into memory.

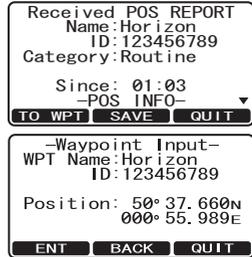


9.9.7 Navigating to a Saved Waypoint

1. Press and hold down the **CALL MENU** key until "Setup Menu" appears.
2. Select "GENERAL SETUP" with the **▲/▼** key.
3. Press the **SELECT** soft key, then select "DISPLAY" with the **▲/▼** key.
4. Press the **▲/▼** key to select "WAYPOINT" and press the **ENT** soft key.
5. Press the **▲/▼** key to select the waypoint name and press the **ENT** soft key.
6. Press the **ENT** key so show the compass display and to navigate to the waypoint. The display indicates the distance and direction of the saved waypoint, and the compass indicates the saved waypoint by a dot (●) icon.

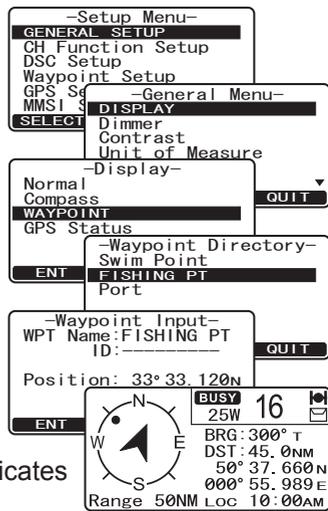

9.9.8 Stop Navigating to a Saved Waypoint




1. Press and hold down the **CALL MENU** key until "Setup Menu" appears.
2. Select "GENERAL SETUP" with the **▲/▼** key.
3. Press the **SELECT** soft key.
4. Select "DISPLAY" with the **▲/▼** key, and press the **SELECT** soft key.
5. Select "NORMAL" with the **▲/▼** key, and press the **ENT** soft key.

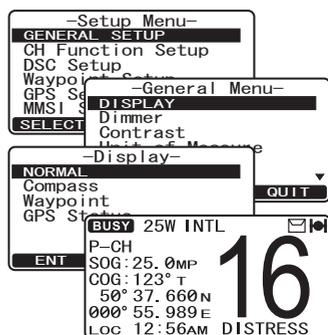

9.10 MANUAL INPUTTING A GPS POSITION (LAT/LON)

This selection allows the Latitude/Longitude of your vessel to be manually entered so DSC Distress or a Position Report call will contain position information. This feature maybe useful when the **GX1700E** is located in an area where GPS reception is limited.

1. Press and hold down the **CALL MENU** key until "Setup Menu" appears, then select "GPS SETUP" with the **▲/▼** key.
2. Press the **SELECT** soft key, then select "POSITION INPUT" with the **▲/▼** key.
3. Press the **SELECT** soft key. The transceiver will beep, and the display will be as shown in the illustration on the right.
4. Enter the latitude/longitude of your vessel and your local UTC time in the 24-hour notation by the **▲/▼** key. Press the **▲/▼** key to select the number and press the **ENT** soft key to move the cursor to the next character. You may backspace the cursor by pressing the **BACK** soft key, if you make a mistake.
5. To store the data entered, press and hold the **ENT** soft key.
6. Press the **QUIT** soft key several times to return to radio operation.

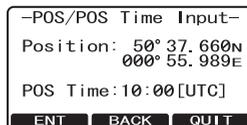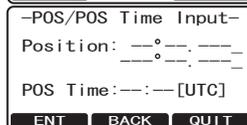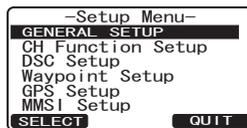


9.11 AUTO POS POLLING

The **GX1700E** has the capability to automatically track four stations programmed into the Individual directory.

9.11.1 Polling Time Interval Setup

The following steps allows the radio to setup the interval time between DSC Position Request Transmissions.

1. Press and hold down the **CALL MENU** key until “Setup Menu” appears.
2. Press the **▲/▼** key to select “DSC SETUP” menu.
3. Press the **SELECT** soft key, then select “AUTO POS INTERVAL” with the **▲/▼** key.
4. Press the **▲/▼** key to select the desired interval time (30 second, 1, 2, 3, 4, 5, 10, 20, 30, and 40 minutes) and press the **ENT** soft key.
5. Press the **QUIT** soft key numerous times to exit to the radio mode.

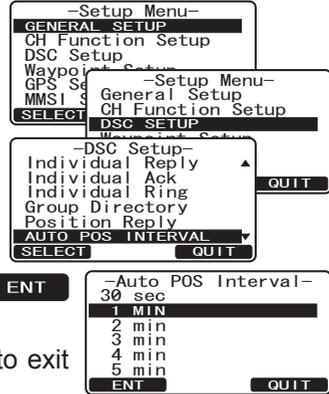


9.11.2 Selecting Stations to be Automatically Polled (tracked)


NOTE

The radio uses the Individual directory to select stations. Refer to section “**9.5.1 Individual / Position Call Directory Setup**” and to enter MMSI of stations you want to poll before proceeding.

1. Press the **CALL MENU** key. The “DSC Menu” will appear.
2. Press the **▲/▼** key to select “AUTO POS POLLING”, then press the **SELECT** soft key.
3. Press the **▲/▼** key to select the “SELECT ADDRESS”, then press the **SELECT** soft key.
4. The radio will show 4 calling stations to be selected, select “CALL 1” and press the **SELECT** soft key.
5. The radio will show the stations programmed in the Individual directory. Press the **▲/▼** key to select the desired station and press the **SELECT** soft key.

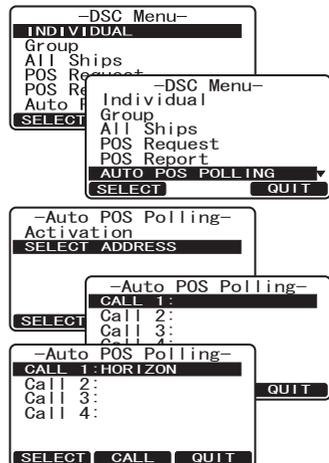


- Repeat steps 4 and 5 for CALL 2, CALL 3 and CALL 4 entries.
- When finished, press the **QUIT** soft key numerous times to exit to the radio mode.

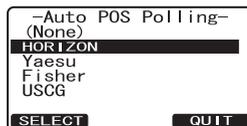


9.11.3 Enable/Disable Auto POS Polling

- Press the **CALL MENU** key. The "DSC Menu" will appear.
- Press the **▲/▼** key to select "AUTO POS POLLING", then press the **SELECT** soft key.
- Press the **▲/▼** key to select the "ACTIVATION", then press the **SELECT** soft key.
- Select "START" to enable transmissions to the stations or "STOP" to disable transmissions to stations.
- Press the **ENT** soft key.
- Press the **QUIT** soft key numerous times to exit to the radio mode.

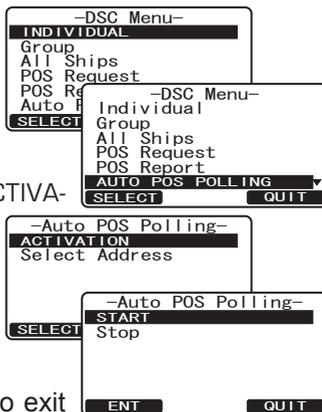

NOTE

When the radio receives position reports from a called vessel the display will show the image to the right also NMEA 0183 DSC and DSE sentences are outputted to a connected GPS Chart Plotter or PC.

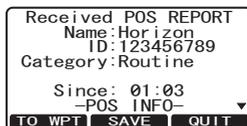

9.12 DSC TEST

This function is used to contact another DSC equipped vessel or USCG station to ensure the DSC functions of the radio are operating.

NOTE


To use this feature, the radio you will be transmitting the test call to needs to have the DSC Test feature.


To perform the DSC test you will need to enter a MMSI of another vessel into the Individual directory or manually enter in the MMSI using the procedure below.

9.12.1 Programming MMSI into Individual Directory

Refer to section “9.5.1 Individual / Position Call Directory Setup”.


9.12.2 DSC Test Call by using Individual Directory

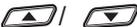1. Press the  key. The “DSC Menu” will appear.
2. Press the  key to select “DSC TEST”, then press the  soft key.
3. Press the  key to select the Ship name and press the  soft key.
4. Press the  soft key to transmit the DSC test call to the other vessel.

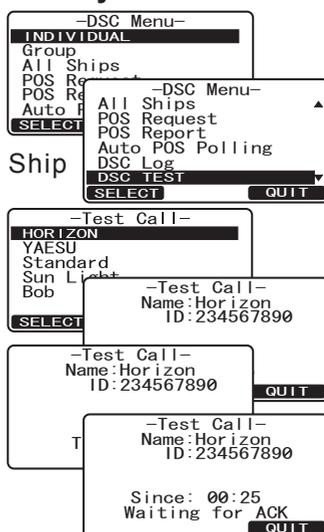


NOTE

After the radio receive a Test Call reply from vessel that was called, the radio will ring and show TEST ACK display, which confirms the radio you called received the test call.

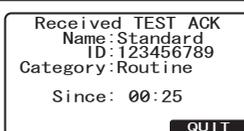

9.12.3 DSC Test Call by Manually Entering a MMSI

1. Press the **CALL MENU** key. The "DSC Menu" will appear.
2. Press the **▲/▼** key to select "DSC TEST", then press the **SELECT** soft key.
3. Press the **▲/▼** key to select "MANUAL" and press the **SELECT** soft key.
4. Press the **▲/▼** key to select the first digit in the MMSI and press the **SELECT** soft key.
5. Repeat step 4 until all the numbers of the MMSI are shown on the display.
6. Press and hold the **SELECT** soft key to show the Test Call page.
7. Press the **YES** soft key to transmit the DSC Test Call to the other vessel.

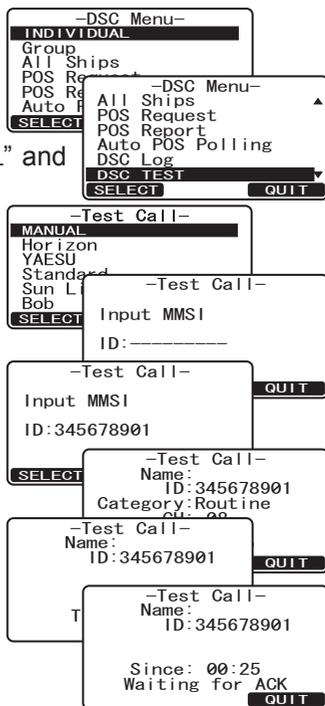

NOTE

After the radio receive a Test Call reply from vessel that was called, the radio will ring and show TEST ACK display, which confirms the radio you called received the test call.


Received TEST ACK
 Name: _____
 ID: 345678901
 Category: Routine
 Since: 00:25
QUIT

10 ATIS SETUP

The **GX1700E** supports the ATIS (Automatic Transmitter Identification System) used in Inland waterways in Europe. When enabled ATIS mode transmits a unique ATIS code each time the Microphone's **PTT** button is released at the end of a transmission. Users should check with their local marine regulatory authority in their country for assistance in obtaining an ATIS code.

10.1 ATIS CODE PROGRAMMING


1. Press and hold down the  key until "SETUP MENU" appears.
2. Press the  key to select "ATIS SETUP" menu.
3. Press the  soft key, the select "ATIS CODE" with the  key.
4. Press the  soft key.
5. Press the  key to select the first number of your ATIS, then press the  soft key to step to the next number.
6. Repeat step 5 to set your ATIS (nine digits).
7. If a mistake was made entering, repeatedly press the  soft key until the wrong number is selected, then press the  key to correct entry.
8. When finished programming the ATIS number, press and hold the  soft key. The radio will ask you to input the ATIS number again. Use steps 5 - 7 above, then press and hold the  soft key.
9. Press the  soft key to store the ATIS number in memory.
10. Press the  soft key several times to return to radio operation.

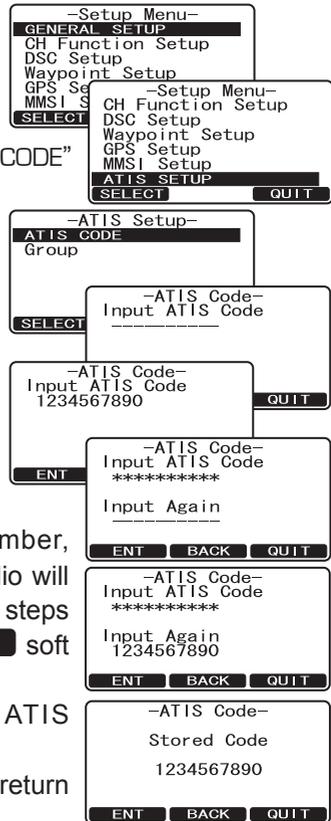

10.2 ATIS CHANNEL GROUP

The **GX1700E** has the capability to turn on and off the ATIS feature for each channel group.

1. Press and hold down the **CALL MENU** key until “SET-UP MENU” appears.
2. Press the **▲/▼** key to select “ATIS SETUP” menu.
3. Press the **SELECT** soft key, the select “GROUP” with the **▲/▼** key.
4. Press the **SELECT** soft key, then press the **▲/▼** key to select the channel group you wish to change the setting.
5. Press the **ENT** soft key, then press the **▲/▼** key to select “On” or “Off”.
6. Press the **ENT** soft key to store the selected setting.
7. Press the **QUIT** soft key several times to return to radio operation.

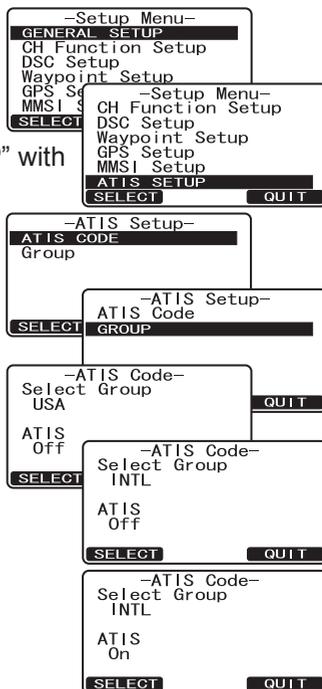

NOTE


- The “SCAN” and “Dual Watch” features do not activate on the Channel Group which turned on the ATIS feature.
- The TX output power is set to “1W” automatically on the following channels of the Channel Group which turned on the ATIS feature.
CH 06, 08, 10, 11, 12, 13, 14, 15, 17, 71, 72, 74, 75, 76, and 77

11 GENERAL SETUP


The optional **RAM3 (CMP30)** Remote Station Microphone can also adjust items in the setup menu using the following procedures.

11.1 DISPLAY


The **GX1700E** can select additional screens other than the default “NORMAL” (Radio) Display by using the procedure below.

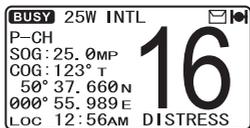


“NORMAL” DISPLAY

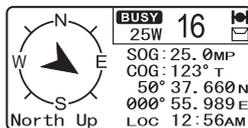

“COMPASS” DISPLAY


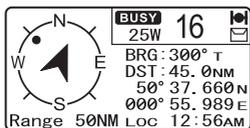


“WAYPOINT” DISPLAY

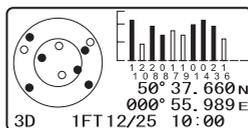

“GPS STATUS” DISPLAY


1. Press and hold down the **CALL MENU** key until “Setup Menu” appears, then select “GENERAL SETUP” with the **▲/▼** key.
2. Press the **SELECT** soft key, then press the **▲/▼** key to select “DISPLAY”.
3. Press the **SELECT** soft key.
4. Press the **▲/▼** key to select desired screen type “NORMAL”, “COMPASS”, “WAYPOINT”, or “GPS STATUS”.
5. Press the **ENT** soft key to store the selected setting.
6. Press the **QUIT** soft key several times to return to radio operation.

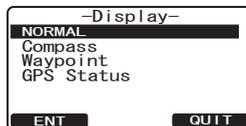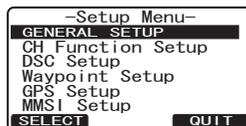

11.2 DIMMER ADJUSTING

This menu selection adjusts the backlight intensity of the display and keypad.




1. Press and hold down the  key until "Setup Menu" appears, then select "GENERAL SETUP" with the / key.
2. Press the  soft key, then press the / key to select "DIMMER".
3. Press the  soft key, then press the / key to select the desired level ("HIGH" is default). When "OFF" is selected, the lamp is turned off.
4. Press the  soft key to store the selected level.
5. Press the  soft key several times to return to radio operation.

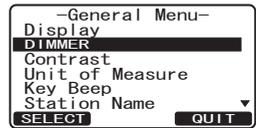

11.3 CONTRAST

This selection sets up the display contrast for overhead or dash installations.

1. Press and hold down the  key until "Setup Menu" appears, then select "GENERAL SETUP" with the / key.
2. Press the  soft key, then press the / key to select "CONTRAST".
3. Press the  soft key.
4. Press the / key to select the desired level. The contrast level can be set from "0" to "31".
5. Press the  soft key to store the selected level.
6. Press the  soft key several times to return to radio operation.

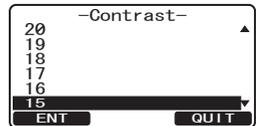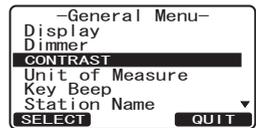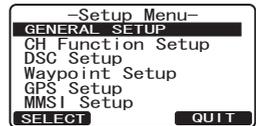





11.4. UNIT OF MEASURE

Allows Navigation displays to be shown in “Knot”, “Mile/Hour” or “Kilo-Meter/Hour” (for speed), “Nautical Mile” or “Kilo-Meter” (for distance), and “Feet” or “Meter” (for altitude).

NOTE

GPS fix from the internal antenna or a NMEA signal from an external GPS or Chart plotter must be received.




1. Press and hold down the  key until “Setup Menu” appears, then select “GENERAL SETUP” with the / key.
2. Press the  soft key, then press the / key to select “UNIT OF MEASURE”.
3. Press the  soft key.
4. Press the / key to select “SPEED”, “DISTANCE”, or “ALTITUDE” which you wish to change.
5. Press the  soft key, then press the / key to select desired unit. Available selections are KTS (knot), MPH (Mile/Hour), or KMH (Kilo-Meter/Hour) for speed, NM (Nautical Mile), SM (Statute Mile) or KM (Kilo-Meter) for distance, and FT (feet) or M (Meter) for altitude.
6. Press the  soft key to store the selected setting.
7. Press the  soft key several times to return to radio operation.

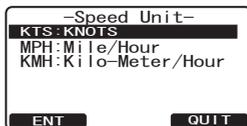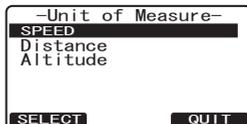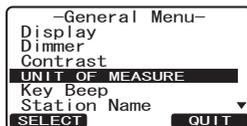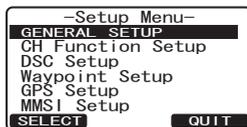

11.5 KEY BEEP

This selection is used to select the beep tone volume level when a key is pressed.

1. Press and hold down the  key until "Setup Menu" appears, then select "GENERAL SETUP" with the / key.
2. Press the  soft key, then press the / key to select "KEY BEEP".
3. Press the  soft key.
4. Press the / key to select the desired level. The beep level can be set from "LEVEL 1" to "LEVEL 6", "HIGH", or "OFF".
5. Press the  soft key to store the selected level.
6. Press the  soft several times to return to radio operation.

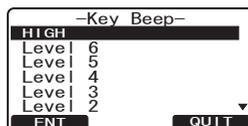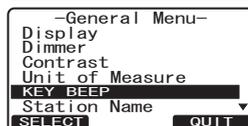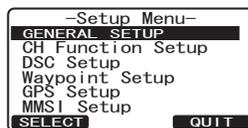

11.6 STATION NAME

This function allows you to change the name of the radio or **RAM3** second station microphone. Example: "Radio - Cabin", "RAM1 - Flybridge".

1. Connect the **RAM3** second station microphone to the **GX1700E**.

2. Press and hold down the  key until "Setup Menu" appears, then select "GENERAL SETUP" with the  key.

3. Press the  soft key, then press the  /  key to select "STATION NAME".

4. Press the  soft key.

5. Press the  key to select the Unit ("Radio" or "RAM1") to be named, then press the  soft key.

6. Press the  key to scroll through the first letter of the new channel name.

7. Press the  soft key to store the first letter in the name and step to the next letter to the right.



8. Repeat step 6 and 7 until the name is complete. The name can consist of up to 8 characters, if you do not use all 8 characters press the  soft key to move to the next space. This method can also be used to enter a blank space in the name.

If a mistake was made entering in the name repeat pressing the  key until the wrong character is selected, then press the  key to correct the entry.

9. Press and hold the  soft key to enter the name.

10. If you want to enter the name of the connected **RAM3** or Radio, repeat steps 5 through 9.

11. Press the  soft key several times to return to radio operation.

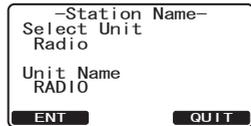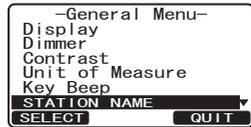


11.7 SOFT KEYS

This menu item assigns the number of soft keys, soft key selection and how long the display will show the soft key icon after a soft key is pressed.


11.7.1 Selecting the Number of Soft Keys

1. Press and hold down the **CALL MENU** key until “Setup Menu” appears, then select “GENERAL SETUP” with the **▲/▼** key.
2. Press the **SELECT** soft key, then press the **▲/▼** key to “SOFT KEY ASSIGNMENT”.
3. Press the **SELECT** soft key, then press the **▲/▼** key to “NUMBER OF SOFT KEYS”.
4. Press the **SELECT** soft key, then press the **▲/▼** key to select the number of soft keys (3 through 10).
5. Press the **ENT** soft key to store the selected setting.
6. Press the **QUIT** soft key several times to return to radio operation.

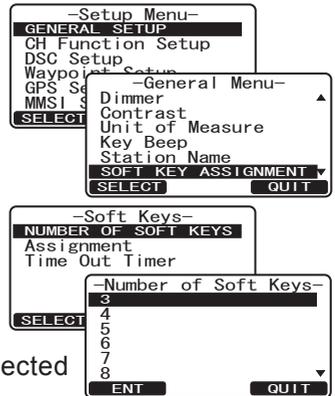

11.7.2 Assigning Soft Keys

1. Press and hold down the **CALL MENU** key until “Setup Menu” appears, then select “GENERAL SETUP” with the **▲/▼** key.
2. Press the **SELECT** soft key, then press the **▲/▼** key to “SOFT KEY ASSIGNMENT”.
3. Press the **SELECT** soft key, then press the **▲/▼** key to select “ASSIGNMENT” (to change the use of selected soft keys).
4. Press the **SELECT** soft key, then press the **▲/▼** key to select the key (“KEY1”, “KEY2”, or “KEY3”).
5. Press the **SELECT** soft key, then press the **▲/▼** key to select the new function to be assigned, and press the **SELECT** soft key. Available functions are listed below.

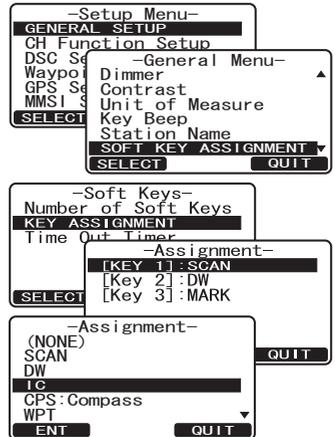


DISPLAY	FUNCTION
SCAN	Starts and stops Scanning.
DW	Starts and stops Dual Watch Scan.
IC	Activates Intercom between radio and RAM3 mic (optional RAM3 required).
CMP: COMPASS	Shows to the “Compass” display.
WPT	Shows to the “Waypoint” Navigation display.
PRESET	Saves or deletes the preset memory channel.
WX	Immediately recalls the last select the weather channel.
MARK	Marks the current position for a “Waypoint”.
PRESET 0-9	Immediately recalls the Preset Memory Channel.

6. Repeat steps 4 and 5 to program the other soft keys. The factory defaults are Key 1: **SCAN**, Key 2: **DW**, and Key 3: **MARK** function.
7. Press the **ENT** soft key to store the selected setting.
8. Press the **QUIT** soft key several times to return to radio operation.

11.7.3 Selecting How Long the Soft Keys are Shown

1. Press and hold down the **CALL MENU** key until "Setup Menu" appears, then select "GENERAL SETUP" with the **▲/▼** key.
2. Press the **SELECT** soft key, then press the **▲/▼** key to "SOFT KEY ASSIGNMENT".
3. Press the **SELECT** key, then press the **▲/▼** key to select "TIME OUT TIMER" (selects how long the soft key icon will be shown on the display after a soft key is pressed, default is 4 seconds). Then, press the **SELECT** soft key.
4. Press the **▲/▼** key to select the time.
5. Press the **ENT** soft key to store the selected setting.
6. Press the **QUIT** soft key several times to return to radio operation.

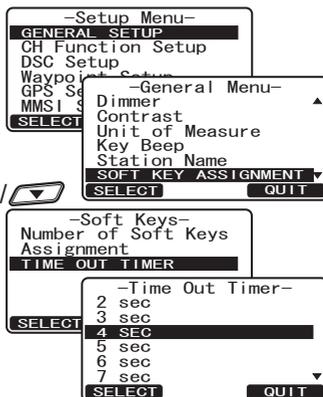


12 CHANNEL FUNCTION SETUP

12.1 CHANNEL GROUP

(INTERNATIONAL, USA or CANADA BAND SELECTION)

This section selects a channel group from International, USA and Canada.


1. Press and hold down the **CALL MENU** key until "Setup Menu" appears.
2. Press the **▲/▼** key to select "CH FUNCTION SETUP".
3. Press the **SELECT** soft key, then press the **▲/▼** key to select "CH GROUP".
4. Press the **SELECT** soft key.
5. Press the **▲/▼** key to select desired channel group "USA", "INTL", or "CANADA".
6. Press the **ENT** soft key to store the selected setting.
7. Press the **QUIT** soft key several times to return to radio operation.

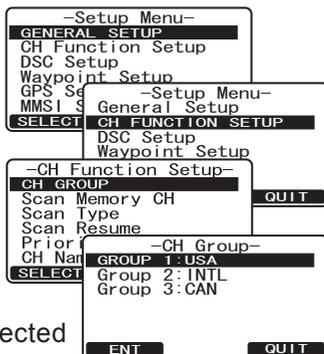

12.2 SCAN MEMORY CHANNEL

To be able to scan channels the radio must be programmed. This section allows channels to be stored in scan memory.


1. Press and hold down the **CALL MENU** key until "Setup Menu" appears.
2. Press the **▲/▼** key to select "CH FUNCTION SETUP".
3. Press the **SELECT** soft key, then press the **▲/▼** key to select "SCAN MEMORY CH".
4. Press the **SELECT** soft key.
5. Press the **▲/▼** key to select a desired channel to be scanned, then press the **ADD** key. "MEM" icon appears on the display, which indicates the channel has been selected to the scan channel.
6. Repeat step 5 for all the desired channels to be scanned.
7. To DELETE a channel from the list, select the channel then press the **DELETE** key. "MEM" icon disappears from the display.
8. When you have completed your selection, press the **QUIT** soft key several times to return to radio operation.

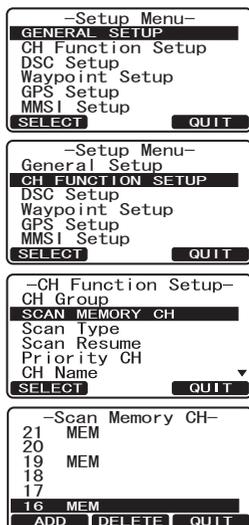

12.3 SCAN TYPE

This selection is used to select the scan mode between “Memory Scan” and “Priority Scan”. The default setting is Priority Scan.


1. Press and hold down the  key until “Setup Menu” appears.
2. Press the  key to select “CH FUNCTION SETUP”.
3. Press the **SELECT** soft key, then select “SCAN TYPE” with the  key.
4. Press the **SELECT** soft key.
5. Press the  key to select “PRIORITY SCAN” or “MEMORY SCAN”.
6. Press the **ENT** soft key to store the selected setting.
7. Press the **QUIT** soft key several times to return to radio operation.

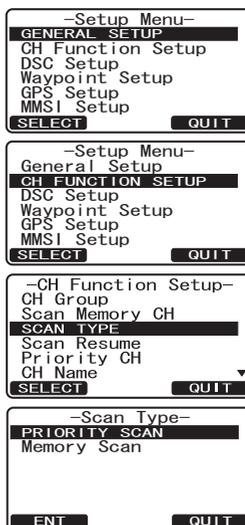

12.4 SCAN RESUME

This selection is used to select the time the **GX1700E** waits after a transmission ends before the radio start to scan channels again. The default setting is 2 seconds.


1. Press and hold down the  key until “Setup Menu” appears.
2. Press the  key to select “CH FUNCTION SETUP”.
3. Press the **SELECT** soft key, then select “SCAN RESUME” with the  key.
4. Press the **SELECT** soft key.
5. Press the  key to select the desired resume time, default is 2 seconds. The resume time can be set to “1SEC” through “5SEC”, or “OFF”. In the “OFF” selection, the scanner will resume after the other station stops transmitting (carrier drops).
6. Press the **ENT** soft key to store the selected setting.
7. Press the **QUIT** soft key several times to return to radio operation.

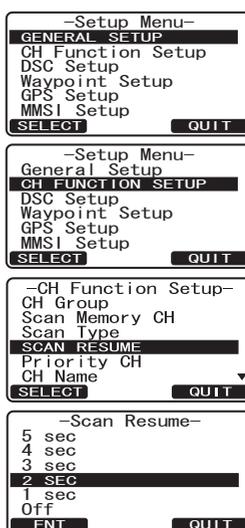

12.5 PRIORITY CHANNEL

By default the radio priority channel is set to channel 16. This procedure allows the radio to use a different priority channel used when priority scanning.

1. Press and hold down the  key until "Setup Menu" appears.
2. Press the  key to select "CH FUNCTION SETUP".
3. Press the  soft key, then select "PRIORITY CH" with the  key.
4. Press the  soft key.
5. Press the  key to select the desired channel to be a priority.
6. Press the  soft key to store the selected setting.
7. Press the  soft key several times to return to radio operation.







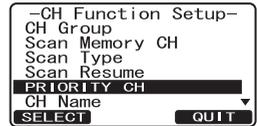


12.6 CHANNEL NAME

When radio mode (NORMAL) is selected, the display will show a name under the channel number. This name describes the use of the channel. The radio has the capability to customize the name by the procedure below.

Example: CH69 PLEASURE to HOOKUP

1. Press and hold down the  key until "Setup Menu" appears.
2. Press the  key to select "CH FUNCTION SETUP".
3. Press the  soft key, then select "CH NAME" with the  key.
4. Press the  soft key.
5. Press the  key to select the channel to be named, then press the  soft key.
6. Press the  key to scroll through the first letter of the new channel name.
7. Press the  soft key to store the first letter in the name and step to the next letter to the right.
8. Repeat step 6 and 7 until the name is complete. The name can consist of up to 16 characters, if you do not use all 16 characters press the  soft key to move to the next space. This method can also be used to enter a blank space in the name. If a mistake was made entering in the name repeat pressing the  key until the wrong character is selected, then press the  key to correct the entry.
9. Press and hold the  soft key to save the name.
10. If you want to enter the name of another channel, repeat steps 5 through 9.
11. Press the  soft key several times to return to radio operation.

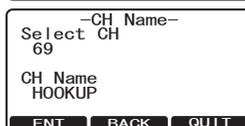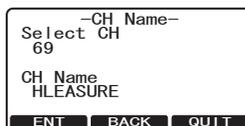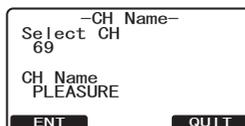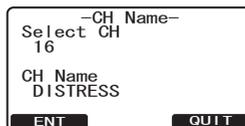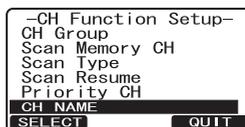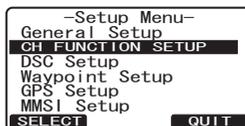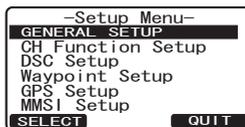

13 DSC SETUP

13.1 INDIVIDUAL DIRECTORY

The **GX1700E** has a DSC directory that allows you to store a vessel or person's name and the MMSI number associated with vessels you wish to transmit Individual calls, Position Requests and Position Send transmissions.

To transmit an Individual call you must program this directory with information of the persons you wish to call, similar to a cellular phones telephone directory.

Refer to section “**9.5.1 Individual / Position Call Directory Setup**” for programming.

13.2 INDIVIDUAL REPLY

This menu item sets up the radio to automatically or manually (default setting) respond to a DSC Individual call requesting you to switch to a working channel for voice communications. When Manual is selected the MMSI of the calling vessel is shown allowing you to see who is calling. This function is similar to caller id on a cellular phone.

Refer to section “**9.5.2 Individual Reply Setup**” for setting.

13.3 INDIVIDUAL ACKNOWLEDGMENT

The radio can be setup to transmit a reply automatically (default) or set so the radio will not reply to an individual call.

Refer to section “**9.5.3 Individual Acknowledgment Setup**” for setting.

13.4 INDIVIDUAL RINGER

The radio can be setup to ring like a telephone to alert you the radio received a DSC Individual call. The default setting is 2 minutes, however this can be changed to 15, 10 or 5 seconds.

Refer to section “**9.5.4 Individual/Group Call Ringer Setup**” for setting.

13.5 GROUP DIRECTORY

For this function to operate, the same Group MMSI must be programmed into all the DSC VHF radios within the group of vessels that will be using this feature. To understand Group MMSI programming, first a Ship MMSI has to be understood.

Refer to section “**9.7.1 Group Call Setup**” for programming.

13.6 POSITION REPLY

The **GX1700E** can be set up to automatically (default setting) or manually send your position when requested by another vessel. This selection is important if you are concerned about someone polling the position of your vessel that you may not want to. In the manual mode you will see the MMSI or persons name shown on the display allowing you to choose to send your position to the requesting vessel.

Refer to section “**9.8.1 Position Reply Setup**” for setting.

13.7 AUTO POSITION INTERVAL

The **GX1700E** has the capability to automatically track four stations programmed into the Individual directory.



Selecting Auto POS Polling time interval between position request transmissions to be setup.

Refer to section “**9.11 AUTO POS POLLING**” for setting.

13.8 DSC BEEP

This feature allows the alarm beeps to be turned on (default setting) or off when a DSC call is received. The DSC calls that can be customized are: Individual, Group, All Ships, Position Request, Position Report, Geographical Call using the procedure below:

1. Press and hold down the  key until “Setup Menu” appears.
2. Press the  /  key to select “DSC SETUP” menu.
3. Press the **SELECT** soft key, then select “DSC BEEP” with the  /  key.
4. Press the **SELECT** soft key, then press the  /  key to the desired DSC call type and press the **ENT** soft key.
5. Press the  /  key to turn “On” or “Off” the DSC beep and press the **ENT** soft key.
6. Press the **QUIT** soft key several times to return to radio operation.


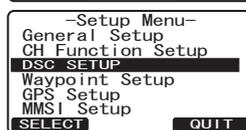
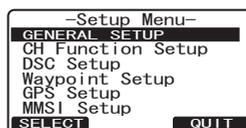


13.9 AUTO CHANNEL SWITCH TIME

When a DSC Distress or ALL Ships (Urgency or Safety) call is received, the **GX1700E** will automatically switch to channel 16.

This menu selection allows the automatic switch time to be changed. The default selection is 30 seconds.

1. Press and hold down the  key until "Setup Menu" appears.
2. Press the  key to select "DSC SETUP" menu.
3. Press the **SELECT** soft key, then select "AUTO CH SWITCH TIME" with the  key.
4. Press the **SELECT** soft key, then press the  /  key to the desired time and press the **ENT** soft key.
5. Press the **QUIT** soft key several times to return to radio operation.

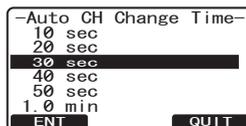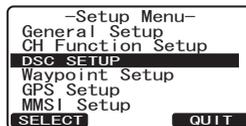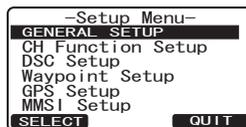

14 WAYPOINTS

The **GX1700E** is capable of storing up to 100 waypoints and navigating to them using the compass page.

In addition DSC distress calls with position or a position received from another DSC radio using DSC polling can be navigated to.

14.1 MARKING A POSITION

This feature allows the radio to mark the current position of the vessel.

1. Press the one of the Soft keys momentarily, then press the **MARK** soft key.
2. Enter the Waypoint Name, by pressing the  /  key to select the first letter.






Note: The GX1700E assign a name of the Waypoint with "WPT xxx" automatically.

3. Press the **ENT** soft key to store the first letter and to move to the second letter in the name.
4. Repeat step 2 and 3 until the name is shown. Press the **ENT** soft key to skip a letter if needed. You may backspace the cursor by pressing the **BACK** soft key, if you make mistake.
5. Press and hold the **ENT** soft key two times to save the waypoint into memory.
6. Press the **QUIT** soft key several times to return to radio operation.



14.2 ADDING A WAYPOINT


1. Press and hold down the  key until "Setup Menu" appears.
2. Press the  key to select "WAYPOINT SETUP".
3. Press the  soft key, then select "WAYPOINT DIRECTORY" with the  key.
4. Press the  soft key, then select "ADD" with the  key.
5. Press the  soft key.
6. Enter the Waypoint Name, by pressing the  /  key to select the first letter.
7. Press the  soft key to store the first letter and to move to the second letter in the name.
8. Repeat step 6 and 7 until the name is shown. Press the  soft key to skip a letter if needed.
9. Press and hold the  soft key, then enter the coordinates of the waypoint POSITION, by pressing the  key to select the first digit in the Latitude.
10. Press the  soft key to store the first number and to move to the second number in the position.
11. Repeat step 9 and 10 until the latitude is shown include N or S in the last digit.
12. Press the  soft key to select the first digit of the Longitude is blinking.
13. Press the  key to select the first digit in the Longitude.
14. Press the  soft key to store the first number and to move to the second number in the position.
15. Repeat step 13 and 14 until the Latitude is shown include E or W in the last digit.
16. After all information is entered, press and hold the  soft key to store the waypoint into memory.
17. Press the  soft key several times to return to radio operation.

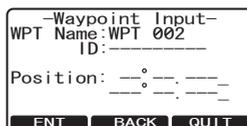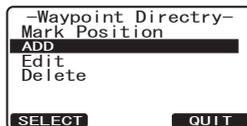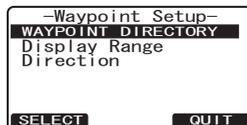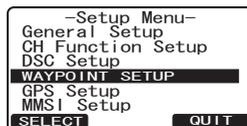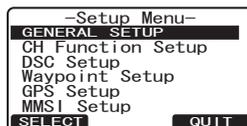

14.3 EDITING A WAYPOINT


This function allows a previously entered waypoint to be edited.

1. Press and hold down the **CALL MENU** key until "Set-up Menu" appears.
2. Press the **▲/▼** key to select "WAYPOINT SETUP".
3. Press the **SELECT** soft key, then select "WAYPOINT DIRECTORY" with the **▲/▼** key.
4. Press the **SELECT** soft key, then select "EDIT" with the **▲/▼** key.
5. Press the **SELECT** soft key, then press the **▲/▼** key to select the waypoint to be edited.
6. Press the **ENT** soft key to show the waypoint Input display.
7. Press the **ENT** soft key repeatedly until the number or letter is selected that is to be changed.
8. Press the **▲/▼** key to change the letter or number.
9. Repeat step 7 and 8 until the waypoint is updated.
10. Press and hold the **ENT** soft key to store the edited waypoint into memory.
11. Press the **QUIT** soft key several times to return to radio operation.

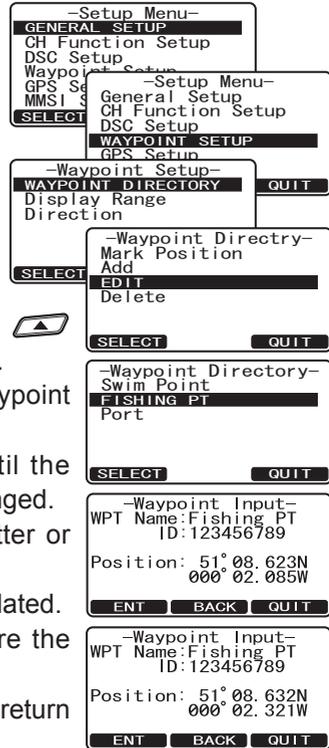

14.4 DELETING A WAYPOINT


1. Press and hold down the **CALL MENU** key until "Set-up Menu" appears.
2. Press the **▲/▼** key to select "WAYPOINT SETUP".
3. Press the **SELECT** soft key, then select "WAYPOINT DIRECTORY" with the **▲/▼** key.
4. Press the **SELECT** soft key, then select "DELETE" with the **▲/▼** key.
5. Press the **SELECT** soft key, then press the **▲/▼** key to highlight the waypoint to be deleted.
6. Press and hold the **ENT** soft key until the radio beeps and the waypoint directory is removed from the display.
7. Press the **QUIT** soft key several times to return to radio operation.

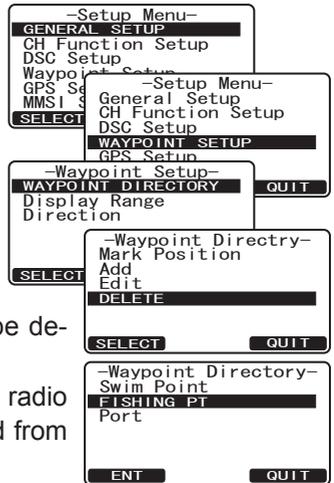

14.5 SAVING A DSC POSITION CALL AS A WAYPOINT


When a DSC POSITION REPORT call is received from a another DSC radio the **GX1700E** allows the position to be saved as a waypoint.

1. After a position has been received, press the **SAVE** soft key.
2. The first digit in the WPT Name will be flashing, press the **▲/▼** key to the first letter of the name you want to input.
3. Press the **ENT** soft key, then press the **▲/▼** key to select the second letter in the name.
4. Repeat step 3 until the name is shown.
5. Press and hold the **ENT** soft key to save the waypoint to memory and return to radio operation.

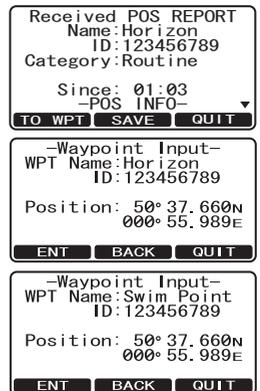

14.6 NAVIGATING TO A SAVED WAYPOINT

1. Press and hold down the **CALL MENU** key until “Setup Menu” appears.
2. Press the **▲/▼** key to select “GENERAL SETUP”.
3. Press the **SELECT** soft key, then select “DISPLAY” with the **▲/▼** key.
4. Press the **ENT** soft key, and select “WAYPOINT”, and press the **SELECT** soft key.
5. Select the waypoint name and press the **SELECT** soft key to show the waypoint data display.
6. Press the **ENT** soft key to start navigating the waypoint and show the Waypoint Nav display.

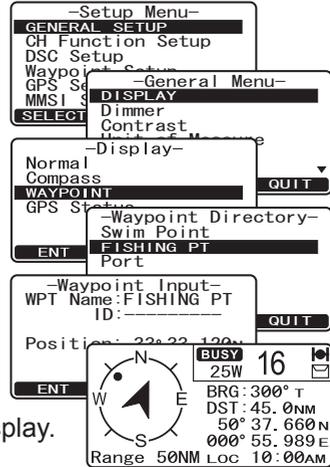


NOTE

The radio must be connected to a GPS to be able to navigate to a waypoint.

14.7 STOP NAVIGATING TO A WAYPOINT

To stop navigating to a waypoint, press the one of the Soft keys, then press the **STOP** soft key. The radio is switched to Normal Mode.

Press the **LIST** soft key to open the “Waypoint Directory” to select and navigate to a new waypoint.

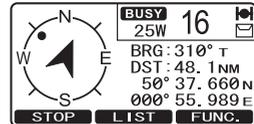


14.8 WAYPOINT SETUP

14.8.1 Waypoint Range Selection

This menu item allows setting of the range rings on the display. The default setting is “Automatic”.


1. Press and hold down the  key until “Set-up Menu” appears.
2. Press the  key to select “WAYPOINT SETUP”.
3. Press the **SELECT** soft key, then select “DISPLAY RANGE” with the  key.
4. Press the **SELECT** soft key.
5. Press the  key to select desired range. Available selections are “Automatic”, “0.5NM”, “1NM”, “2NM”, “5NM”, “10NM”, “15NM”, “20NM”, “30NM”, “40NM”, and “50NM”.
6. Press the **ENT** soft key to store the selected setting.
7. Press the **QUIT** soft key several times to return to radio operation.

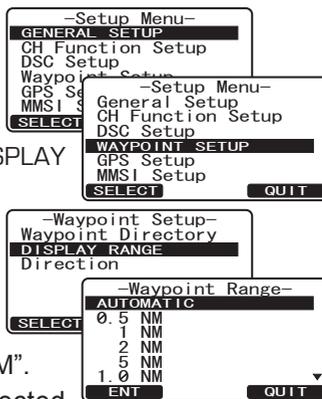

14.8.2 Direction Selection

This menu item allows you to select the top of the Waypoint Compass to be oriented in “North Up” or “Course Up”. The default setting is “North Up”.

1. Press and hold down the  key until “Set-up Menu” appears.
2. Press the  key to select “WAYPOINT SETUP”.
3. Press the **SELECT** soft key, then select “DIRECTION” with the  key.
4. Press the **SELECT** soft key.
5. Press the  key to select desired direction.
6. Press the **ENT** soft key to store the selected setting.
7. Press the **QUIT** soft key several times to return to radio operation.

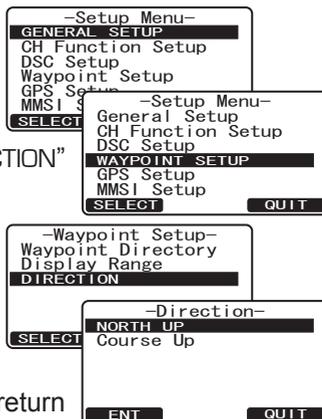


15 GPS SETUP

The **GX1700E**'s "GPS Setup" mode allows a number of the **GX1700E** internal GPS unit's parameters to be custom-configured for your operating requirements.

15.1 UNIT POWER

This selection allows the internal GPS unit to be turned on or off. When you use the optional Standard Horizon GPS Antenna (Q7000619A) or the radio is connected to an external Chart plotter, set this selection to "OFF". The default setting is "ON".


1. Press and hold down the  key until "Setup Menu" appears.
2. Press the  key to select "GPS SETUP".
3. Press the **SELECT** soft key, then select "UNIT POWER" with the  key.
4. Press the **SELECT** soft key, then press the  key to select "On" or "Off".
5. Press the **ENT** soft key to save the new setting.
6. Press the **QUIT** soft key several times to return to radio operation.

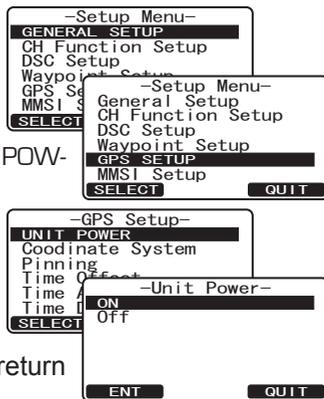

15.2 COORDINATE SYSTEM

This menu item selects the Coordinate System to be shown on the **GX1700E** display. The default setting is "ddd mm.mmm".

1. Press and hold down the  key until "Setup Menu" appears.
2. Press the  key to select "GPS SETUP".
3. Press the **SELECT** soft key, then select "COORDINATE SYSTEM" with the  key.
4. Press the **SELECT** soft key, then press the  key to select the desired Coordinate System. The Coordinate System can be select to "ddd mm ss", "ddd mm.mm", or "ddd mm.mmm".
5. Press the **ENT** soft key to save the new setting.
6. Press the **QUIT** soft key several times to return to radio operation.

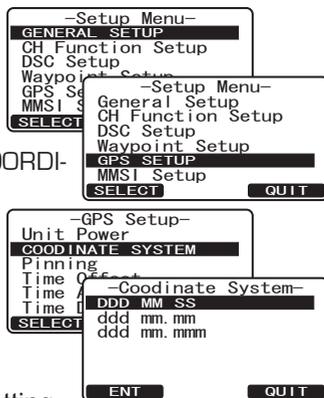

15.3 PINNING


This selection is used to enable or disable position updates when the vessel is not underway. The default setting is “on”.

1. Press and hold down the  key until “Setup Menu” appears.
2. Press the  key to select “GPS SETUP”.
3. Press the  soft key, then select “PINNING” with the  key.
4. Press the  soft key, then press the  key to select “On” or “Off”.

On: When pinning is turned “on”, the **GX1700E** will not update its position unless the vessel travels over 10Ft.

Off: When the vessel is underway or stopped, the **GX1700E** continuously updates its position (unless transmitting). This improves accuracy of the position fix.

5. Press the  soft key to save the new setting.
6. Press the  soft key several times to return to radio operation.

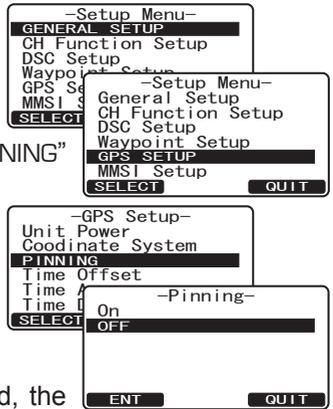

15.4 TIME OFFSET

From the Factory the **GX1700E** shows GPS satellite time or UTC time. A time offset is needed to show the local time in your area. The Time Offset must be changed in order for the radio to display the current time in your area. Refer to section “6.6 CHANGING THE GPS TIME” for setting.

15.5 TIME AREA

This selection allows the radio to show UTC time or local time with the offset. Refer to section “6.7 CHANGING THE TIME AREA” for setting.

15.6 TIME DISPLAY

This selection allows the radio to setup to show time in 12-hour or 24-hour format. Refer to section “6.8 CHANGING THE TIME DISPLAY” for setting.

15.7 MAGNETIC

This selection allows the GPS Course Over Ground to be selected to show in True or Magnetic. Factory default is True however by following the steps below the COG can be changed to Magnetic. Refer to section “6.9 CHANGING COG TO TRUE OR MAGNETIC” for setting.

15.8 POSITION INPUT

This selection allows the Latitude/Longitude of your vessel to be manually entered so DSC Distress or a Position Report call will contain position information. This feature maybe useful when the **GX1700E** is located in an area where GPS reception is limited. Refer to section “9.10 MANUAL INPUTTING A GPS POSITION (LAT/LON)” for setting.

15.9 GPS SELECTION




This selection allows the **GX1700E** to:

- use the internal GPS to compute and display position information (default setting).
- use the NMEA output of Standard Horizon GPS Antenna (Q7000619A) to input position information into the **GX1700E** when the GPS reception is limited, such as the flush mounting of the **GX1700E**. Refer to page 15 for connections. This is a useful feature when the **GX1700E** is located in an area where GPS reception is limited.

NOTE

When using an external GPS antenna or Chart plotter to input position data, turn off the GPS receiver, refer to section “15.1 UNIT POWER”.


- Press and hold down the  key until “Setup Menu” appears.
- Press the  key to select “GPS SETUP”.
- Press the  soft key, then select “GPS SELECTION” with the  key.
- Press the  soft key, then press the  /  key to select “INTERNAL GPS” or “EXTERNAL GPS”.
- Press the  soft key to save the new setting.
- Press the  soft key several times to return to radio operation.

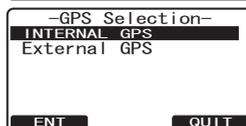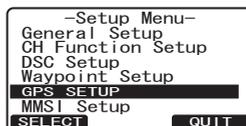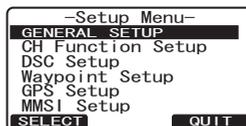

15.10 SBAS (Satellite Based Augmentation System)

This selection enables or disables Satellite Based Augmentation Systems such as WAAS, EGNOS and MSAS as some areas (Australia for example) can have problems with GPS reception with SBAS enabled. The default setting is “on”.


1. Press and hold down the  key until “Setup Menu” appears.
2. Press the  key to select “GPS SETUP”.
3. Press the  soft key, then select “SBAS” with the  key.
4. Press the  soft key, then press the  key to select “ON” or “OFF”.
5. Press the  soft key to save the new setting.
6. Press the  soft key several times to return to radio operation.

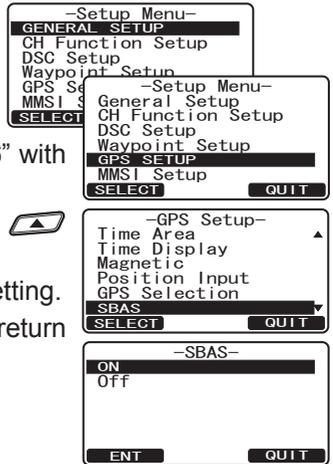

15.11 NMEA OUTPUT

This selection is used to setup the NMEA output sentences of the **GX1700E**. By default, all the NMEA sentences are turned “off”.


1. Press and hold down the  key until “Setup Menu” appears.
2. Press the  key to select “GPS SETUP”.
3. Press the  soft key, then select “NMEA OUTPUT” with the  key.
4. Press the  soft key, then press the  key to select the desired sentence. Available sentences are “GLL”, “GGA”, “GSA”, “GSV”, and “RMC”.
5. Press the  soft key, then press the  key to select “On” or “Off”.
6. Press the  soft key to save the new setting.
7. Press the  soft key several times to return to radio operation.

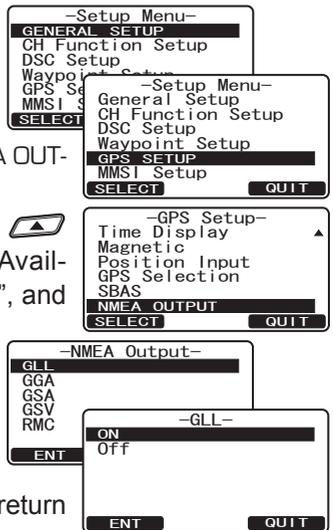

16 RAM3 (CMP30) REMOTE MIC OPERATION

When an optional **RAM3** Remote mic is connected to the **GX1700E**, all VHF, DSC, setup menus, AIS, Waypoint, and Compass functions can be remotely operated. The **RAM3**'s operation is same as **GX1700E** except the receiver audio volume setting and squelch level setting. The reason for the same operation is to make the operation of the radio and **RAM3** mic easy. For specific operation of the **RAM3** mic review sections in the radio manual. The **RAM3** is supplied with 7 m of routing cable and can be extended up to 21 m using three 7 m extension cables model **CT-100**. The Intercom feature can be used between the **RAM3** and the **GX1700E**. In addition, speaker wires are supplied at the panel mount of the routing cable for external speakers to be connected in noisy environments.

16.1 REMOTE MIC CONTROLS

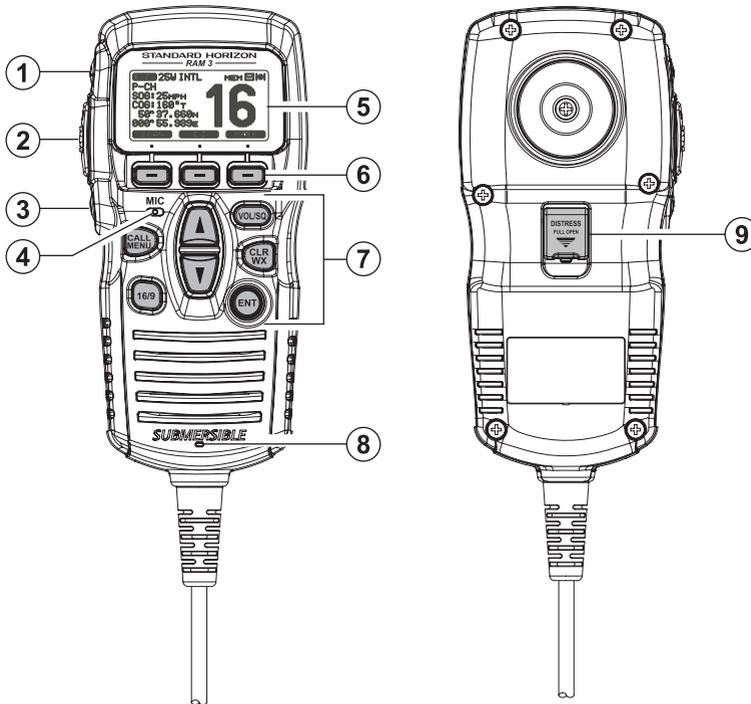

① (H/L) KEY

Toggles between high and low power. When the (H/L) key is pressed while the transceiver is on CH13 or CH67, the power is temporarily switched from LO to HI until the **PTT** switch is released. The (H/L) key does not function on transmit inhibited and low-power only channels.

② **PTT (Push-To-Talk) Key**

Push this key to enable the transmitter.

③  **(POWER) Key**

Press and hold down this key to turn the transceiver and Remote MIC on or off.

④ **MICROPHONE**

The internal ClearVoice Noise Canceling mic is located here.

When transmitting, position your mouth about 1.5 ~ 2.5 cm away from the small mic hole. Speak slowly and clearly into the microphone.

⑤ **DISPLAY**

Full dot matrix display.

⑥ **SOFT KEY**

These three key's functions can be customized by the Setup Menu mode. When press one of these key briefly, the key functions will appear at the bottom of the display. Refer to section "**16.2 ASSIGNING SOFT KEYS**" for details.

⑦ **KEY PAD**



Key

Press this key to access the DSC menu.

Press and hold this key to access the SETUP menu.



Key

First press: channel 16 is immediately selected.

Second press: recalls the last selected channel.

Press and hold: selects channel 9.



(UP) /  **(DOWN) Key**

These keys are used to select channels, adjust the volume and squelch level, and to choose DSC calls, DSC setup and Radio setup function.



Key (Volume Control / Squelch Control)

First press: Volume adjustment mode

Second press: Squelch adjustment mode

Third press: exits adjustment mode

When in volume or squelch mode, press the  or  keys to adjust the level.

Key

Press to CLEAR a function or menu selection. Press and hold to select NOAA Weather channels. Press and hold again to exit Weather mode and revert to radio mode.

Note

The WX function does not work on the **GX1700E**.

Secondary use

Hold down the  key while pressing the  key to change the mode from International to USA or Canadian.

Key

This key functions as the enter key.

8 SPEAKER

The internal speaker is located here.


9 [DISTRESS] KEY

Used to send a DSC Distress call. Refer to section “9 DIGITAL SELECTIVE CALLING”.

16.2 ASSIGNING SOFT KEYS


This menu item allows selection of the number of soft keys, soft key selection and how long the display will show the soft key icon after a soft key is pressed. The keys maybe setup to control the following functions:

1. Press and hold down the  key until “Setup Menu” appears, then select “GENERAL SETUP” with the  or  key.
2. Press the **SELECT** soft key, then press the  key to select “SOFT KEYS”.
3. Press the **SELECT** soft key, then press the  key to select “NUMBER OF SOFT KEYS”.
4. Press the **SELECT** soft key, then press the  or  key to select the number of soft keys (3 through 10).
5. Press the **ENT** soft key, then press the  key to select “ASSIGNMENT” (to change the use of selected soft keys). Then press the **SELECT** soft key.
6. Press the  or  key to select the key (“KEY1”, “KEY2”, “KEY3” etc), and press the **SELECT** soft key. Then press the  or  key to select the new function to be

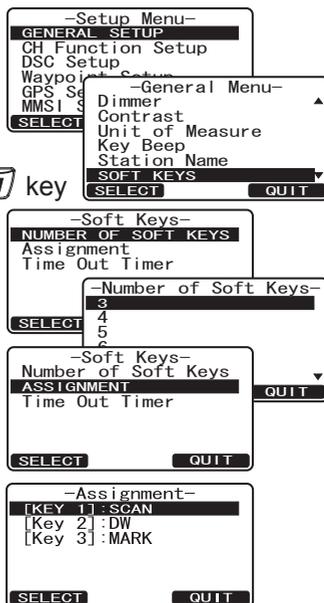

assigned, and press the **ENT** soft key. Available functions are listed next page. Repeat step 6 to program the other soft keys.

- Press the **QUIT** soft key, then press the  or  key to select "KEY TIMER" (selects how long the soft key icon will be shown on the display after a soft key is pressed, default is 5 seconds). Then, press the **SELECT** soft key.

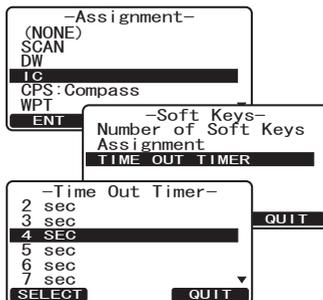

- Press the  or  key to select the time.
- Press the **ENT** soft key to store the selected setting.
- Press the **QUIT** soft key several times to return to radio operation.

DISPLAY	FUNCTION
SCAN	Starts and stops Scanning.
DW	Starts and stops Dual Watch Scan.
IC	Activates Intercom between radio and RAM3 mic (optional RAM3 required).
CMP: COMPASS	Shows to the "Compass" display.
WPT	Shows to the "Waypoint" Navigation display.
PRESET	Saves or deletes the preset memory channel.
WX	Immediately recalls the last select the weather channel.
MARK	Marks the current position for a "Waypoint".
PRESET 0-9	Immediately recalls the Preset Memory Channel.

17 MAINTENANCE

The inherent quality of the solid-state components used in this transceiver will provide many years of continuous use. Taking the following precautions will prevent damage to the transceiver.

- Keep the microphone connected or the jack covered at all times to prevent corrosion of electrical contacts;
- Never key the microphone unless an antenna or suitable dummy load is connected to the transceiver.
- Ensure that the supply voltage to the transceiver does not exceed 16 VDC or fall below 11 VDC.
- Use only STANDARD HORIZON-approved accessories and replacement parts.

In the unlikely event of serious problems, please contact your Dealer or our repair facility.

17.1 REPLACEMENT PARTS

- **Dust Cover (HC1600):** AAH79X101
- **Power Cord:** T9025406
- **VOL and SQL Knob:** RA1282500 (White), RA1282600 (Black)
- **Mounting Bracket:** RA1283100 (White), RA1283200 (Black)
- **Mounting Bracket Knob:** RA0978500 (White), RA0978600 (Black)
- **Microphone Hanger:** RA0436000 (White), RA0458800 (Black)
- **RAM3 Mic Routing Cable Assembly:** S8101512

17.2 FACTORY SERVICE

In the unlikely event that the radio fails to perform or needs servicing, please contact your Dealer.

An "RA" Return Authorization number is not necessary to send a product in for service. Include a brief note describing the problem along with your name, return address, phone number, and proof of purchase.

17.3 TROUBLESHOOTING CHART

SYMPTOM	PROBABLE CAUSE	REMEDY
Transceiver fails to power up.	No DC voltage to the transceiver, or blown fuse.	a. Check the 12VDC battery connections and the fuse. b. The  key needs to be pressed and held to turn the radio on.
Transceiver blows fuse when connected to power supply.	Reversed power wires.	Check the power cable for DC voltage, or replace the fuse (6A). Make sure the red wire is connected to the positive (+) battery post, and the black wire is connected to the negative (-) battery post. If the fuse still blows, contact your Dealer.
Popping or whining noise from the speaker while engine runs.	Engine noise.	Re-route the DC power cables away from the engine. Add noise suppressor on power cable. Change to resistive spark plug wires and/or add an alternator whine filter.
Sound is not emitted from the internal or external speaker.	Accessory cable.	Check the connections of the accessory cable. External speaker cable (WHITE/SHIELD) shorted together.
Receiving station reports low transmit power, even with transceiver set to HI power.	Antenna.	Have the antenna checked or test the transceiver with another antenna. If the problem persists, contact your Dealer for servicing.
"HI BATTERY" or "LO BATTERY" message appears when the power is turned on.	The power supply voltage is too high or too low.	Confirm that the connected power supply voltage is not 17 volts or lower than 10 volts.
Your position is not displayed on the Chart Plotter.	Accessory cable.	Check the accessory cable connection. Some GPS Chart Plotters use the battery ground for NMEA connection.

18 CHANNEL ASSIGNMENTS

CH	TX (MHz)	RX (MHz)	SIMPLEX/DUPLEX	LOW PWR	CHANNEL USE
01	156.050	160.650	DUPLEX	–	TELEPHONE
02	156.100	160.700	DUPLEX	–	TELEPHONE
03	156.150	160.750	DUPLEX	–	TELEPHONE
04	156.200	160.800	DUPLEX	–	INTL
05	156.250	160.850	DUPLEX	–	INTL
06	156.300	156.300	SIMPLEX	–	SAFETY
07	156.350	160.950	DUPLEX	–	INTL
08	156.400	156.400	SIMPLEX	–	COMMERCIAL
09	156.450	156.450	SIMPLEX	–	CALLING
10	156.500	156.500	SIMPLEX	–	COMMERCIAL
11	156.550	156.550	SIMPLEX	–	VTS
12	156.600	156.600	SIMPLEX	–	VTS
13	156.650	156.650	SIMPLEX	–	BRG/BRG
14	156.700	156.700	SIMPLEX	–	VTS
15	156.750	156.750	SIMPLEX	LOW	COMMERCIAL
16	156.800	156.800	SIMPLEX	–	DISTRESS
17	156.850	156.850	SIMPLEX	LOW	SAR
18	156.900	161.500	DUPLEX	–	INTL
19	156.950	161.550	DUPLEX	–	INTL
20	157.000	161.600	DUPLEX	–	PORT OPR
21	157.050	161.650	DUPLEX	–	INTL
22	157.100	161.700	DUPLEX	–	INTL
23	157.150	161.750	DUPLEX	–	INTL
24	157.200	161.800	DUPLEX	–	TELEPHONE
25	157.250	161.850	DUPLEX	–	TELEPHONE
26	157.300	161.900	DUPLEX	–	TELEPHONE
27	157.350	161.950	DUPLEX	–	TELEPHONE
28	157.400	162.000	DUPLEX	–	TELEPHONE
60	156.025	160.625	DUPLEX	–	TELEPHONE
61	156.075	160.675	DUPLEX	–	INTL
62	156.125	160.725	DUPLEX	–	INTL
63	156.175	160.775	DUPLEX	–	INTL
64	156.225	160.825	DUPLEX	–	TELEPHONE
65	156.275	160.875	DUPLEX	–	INTL
66	156.325	160.925	DUPLEX	–	INTL
67	156.375	156.375	SIMPLEX	–	BRG/BRG
68	156.425	156.425	SIMPLEX	–	SHIP-SHIP
69	156.475	156.475	SIMPLEX	–	PLEASURE
70	-	156.525	SIMPLEX	–	DSC
71	156.575	156.575	SIMPLEX	–	PLEASURE
72	156.625	156.625	SIMPLEX	–	SHIP-SHIP
73	156.675	156.675	SIMPLEX	–	PORT OPR
74	156.725	156.725	SIMPLEX	–	PORT OPR
75	156.775	156.775	SIMPLEX	LOW	PORT OPR

CH	TX (MHz)	RX (MHz)	SIMPLEX/DUPLEX	LOW PWR	CHANNEL USE
76	156.825	156.825	SIMPLEX	LOW	PORT OPR
77	156.875	156.875	SIMPLEX	–	PORT OPR
78	156.925	161.525	DUPLEX	–	INTL
79	156.975	161.575	DUPLEX	–	INTL
80	157.025	161.625	DUPLEX	–	INTL
81	157.075	161.675	DUPLEX	–	INTL
82	157.125	161.725	DUPLEX	–	INTL
83	157.175	161.775	DUPLEX	–	INTL
84	157.225	161.825	DUPLEX	–	TELEPHONE
85	157.275	161.875	DUPLEX	–	TELEPHONE
86	157.325	161.925	DUPLEX	–	TELEPHONE
87	157.375	157.375	SIMPLEX	–	PORT OPR
88	157.425	157.425	SIMPLEX	–	PORT OPR
M1	157.850	157.850	SIMPLEX	–	–
M2	161.425	161.425	SIMPLEX	–	–

NOTE 1: Channel M1 and M2 are assigned to only U.K. version.

2: Channel Assignment is different depending on the transceiver version.

19 RESET PROCEDURES

19.1 MEMORY CLEAR

To clear the Scan memory and Preset memory:

1. Turn the radio off.
2. Press and hold in the three [Programmable] keys while turning the radio on.

19.2 MICROPROCESSOR RESET

To clear all memories and other settings to factory defaults (except the Channel Group, MMSI number, and DSC directory information):

1. Turn the radio off.
2. Press and hold in the ,  and  keys while turning the radio on.

While resetting the radio, the display will show the display to the right for about 10 seconds, then turn on.

EE-PROM
Resetting

20 SPECIFICATIONS

Performance specifications are nominal, unless otherwise indicated, and are subject to change without notice.

20.1 GENERAL

Channels	All USA, International and Canadian
Normal Input Voltage	13.8 V DC
Operating Voltage Range	11 V to 16.5 V
Current Drain	
Standby	0.45 A
Receiver (at Maximum AF Output)	0.8 A
Transmit.....	5.0 A (Hi), 1.0 A (Lo)
Operating Temperature Range	-15 °C to +55 °C
Distress Call Log	27
Individual Call Log	64
Individual Call Directory.....	80
Group Call Directory	32
Waypoint Directory	100
LCD Display Type.....	70 x 34 mm Full Dot Matrix (132 x 64 pixels)
Dimensions (WxHxD) (approx.).....	154 x 88 x 97 mm
Flush-Mount Dimensions (WxHxD) (approx.).....	137 x 72 x 65 mm
Weight (approx.).....	0.9 kg

20.2 TRANSMITTER

Frequency Range	156.025 MHz to 157.425 MHz
RF Output Power.....	25 W (Hi), 1 W (Lo)
Conducted Spurious Emissions.....	Less than -80 dBc (Hi), -66 dBc (Lo)
Audio Response	within +1/-3dB of a 6 dB/Octave pre-emphasis characteristic at 300 to 3000 Hz
Audio Distortion	Less than 5 %
Modulation	16K0G3E (for Voice), 16K0G2B (for DSC)
Frequency Stability	±0.0003 % (-20 °C to +60 °C)
FM Hum and Noise.....	50 dB

20.3 RECEIVER

Frequency Range	156.050 MHz to 162.000 MHz
Sensitivity	
20 dB Quieting	0.6 μ V
20 dB SINAD	0.5 μ V
Squelch Sensitivity (Threshold)	0.5 μ V
Modulation Acceptance Bandwidth	\pm 7.5 kHz
Selectivity (Typical)	
Spurious and Image Rejection	80 dB for Voice (75 dB for DSC)
Intermodulation and Rejection	70 dB for Voice (70 dB for DSC)
Audio Output	4.5 W (at 4 ohms external speaker output)
Audio Response	within +1/-3dB of a 6 dB/Octave de-emphasis characteristic at 300 to 3000 Hz
Frequency Stability	\pm 0.0003 % (-15 °C to +55 °C)
Channel Spacing	25 kHz
DSC Format	ITU-R M.493-13




20.4 GPS UNIT




Receiver Channels	12 Channels
Sensitivity	Less than -130 dBm
Time to First Fix	1 minute typical (@Cold Start) 40 seconds typical (@ Warm Start)
Geodetic Datum	WGS84

20.5 NMEA INPUT/OUTPUT

NMEA 0183 GPS Input (4800 baud)	GSA, GSV, GGA, GLL, GNS, RMC
NMEA 0183 DSC Output (4800 baud)	DSC and DSE

20.6 DIMENSIONS

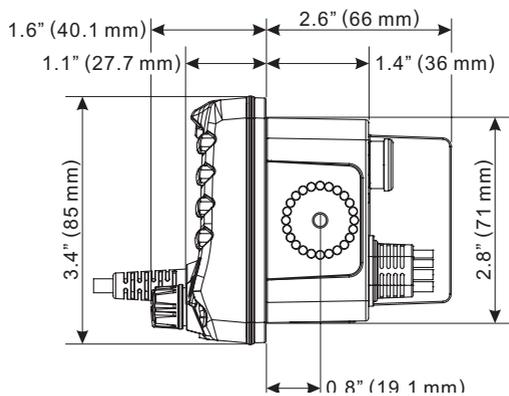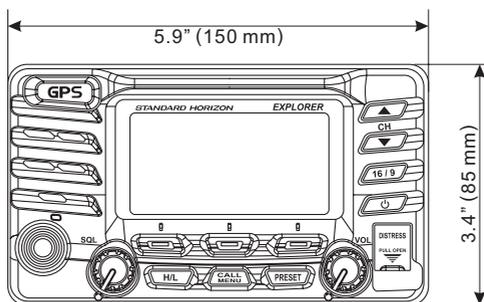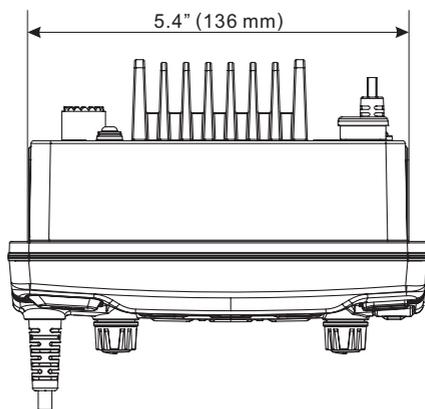

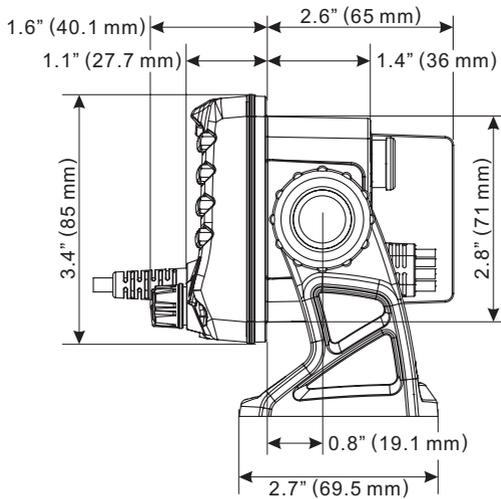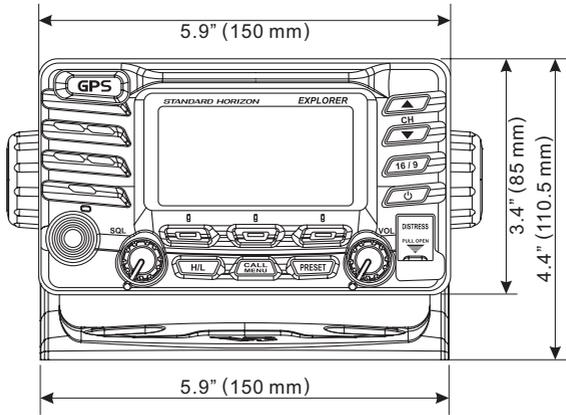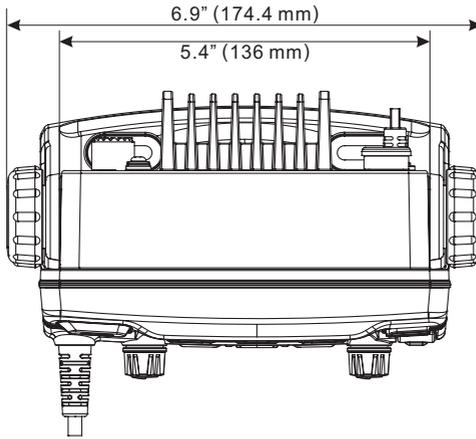

Attention in case of use

This transceiver works on frequencies which are not generally permitted. For frequency allocation, apply for a licence at your local spectrum management authority. For actual usage contact your dealer or sales shop in order to get your transceiver adjusted to the allocated frequency range.

List of the practicable area						
AUT	BEL	BGR	CYP	CZE	DEU	DNK
ESP	EST	FIN	FRA	GBR	GRC	HUN
IRL	ITA	LTU	LUX	LVA	MLT	NLD
POL	PRT	ROM	SVK	SVN	SWE	CHE
ISL	LIE	NOR	-	-	-	-

Disposal of your Electronic and Electric Equipment

Products with the symbol (crossed-out wheeled bin) cannot be disposed as household waste.

Electronic and Electric Equipment should be recycled at a facility capable of handling these items and their waste byproducts.

In EU countries, please contact your local equipment supplier representative or service center for information about the waste collection system in your country.



Declaration of Conformity

Nr. YUK-DOC-0511-12

We, Yaesu UK Ltd. certify and declare under our sole responsibility that the following equipment complies with the essential requirements of the Directive 1999/5/EC with the provisions of Annex III (Conformity Assessment procedure referred to in article 10)

Type of Equipment:	VHF Transceiver
Brand Name:	STANDARD HORIZON
Model Number:	GX1700E
Manufacturer:	Yaesu Musen Co. Ltd
Address of Manufacturer:	Tennozu Parkside Building, 2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

Applicable Standards:

This equipment is tested to and conforms to the essential requirements of directive, as included in following standards:

Radio Standard:	EN 301 025-2 V1.4.1
	EN 301 025-3 V1.4.1
	EN 300 698-1 V1.4.1
	EN 300 698-2 V1.2.1
	EN 300 698-3 V1.2.1
	IEC 62238 (2003-03)
EMC Standard:	IEC 61108-1:2003
	EN 301 843-1 V1.2.1
	EN 301 843-2 V1.2.1
Safety Standard:	IEC 61108-1:2003
	EN 60950-1:2006+A11:2009+A1:2010
	EN 50385:2002: RF Safety

The technical documentation as required by the Conformity Assessment procedures is kept at the following address:

Company: Yaesu UK Ltd
 Address: Unit 12, Sun Valley Business Park,
 Winnall Close, Winchester SO23 0LB

Technical Construction File: Issued by Yaesu Musen Co. Ltd, Tokyo, Japan
 File No: YETA0047

Drawn up in: Winchester, United Kingdom
 Date: 18th May 2012



Name and position: PCJ Bigwood,
 Technical Sales Manager

STANDARD HORIZON

Nothing takes to water like Standard Horizon

YAESU MUSEN CO., LTD.

Tennozu Parkside Building
2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

YAESU USA

6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

YAESU UK LTD.

Unit 12, Sun Valley Business Park, Winnall Close
Winchester, Hampshire, SO23 0LB, U.K.

YAESU HK LTD.

Unit 1306-1308, 13F., Millennium City 2, 378 Kwun Tong Road,
Kwun Tong, Kowloon, Hong Kong

Copyright 2012

YAESU MUSEN CO., LTD.

All rights reserved.

No portion of this manual
may be reproduced
without the permission of
YAESU MUSEN CO., LTD.



E M O 4 8 N 2 5 0

Printed in China