

Battery Analyzer User's Manual

---Model:SC-100---

Warning

 **NOTE:** It means that you can learn about the important information to use this equipment better.

 **CAUTION:** It means potential damage to the parts; and gives you attention how to prevent it.

 **WARNING:** It means potential property damage, body hurt or death.

The information in this document is subject to change without notice.
Reprints of this manual or its parts require the written approval of our company.
The trade-mark in this manual has registered.
02/2012 Revised edition 02

Catalog

| | |
|---|-----------|
| 1.Preface..... | 01 |
| 2.Product Specifications..... | 01 |
| 3.Graphic Representation Of The Product..... | 02 |
| 4.Operation Procedure..... | 03 |
| Get Ready For Work..... | 03 |
| Battery Test..... | 03 |
| Start System Test..... | 05 |
| Charging System Test..... | 06 |
| Max.load Test..... | 06 |
| 5.Caution..... | 08 |
| 6.Battery Standard..... | 09 |
| Appendix: The Conversion Tables Of Battery Size Range. | |

Preface

The plate of the battery will be oxidized after used for a long period of time. The result is the surface of the plate is oxidized, and the effective chemical reaction can not go on. It is the main reason that the battery can not be used.

The IEEE has been determined that the conductance technology is one kind of the lead-acid battery testing standard. It is shown clearly in IEEE standard 1118-1996: The conductance technology is that adding a constant frequency and amplitude A.C. to the battery terminals, the electric current is divided by the voltage is the conductance value. The product is designed according to the principle.

Specifications

DC Voltage: 9V~18V

Working Temperature: -20℃~+50℃

Accuracy: ±5%

Frequency Of Testing Range: 100Hz

Display: LCD Screen

Cool start Current: 100-1700CCA

Product Dimensions: 280x120x90mm

Graphic Representation Of The Product




1. Body: The shell of this analyzer.
2. Display: Show different functions and the measured data.
3. Left key ◀: Page up or input value
4. Right Key ▶: Page down or input value.
5. Up key ▲: Select function or input value.
6. Down key ▼: Select function or input value
7. EXIT: Quit current function or cancel inputed value.
8. ENTER: Into selected function or ensure inputed file value


Operation Procedure

Get Ready For Work

1. Connect the terminal post clips(red and black)to the appropriate terminal of the battery, the red to the positive and the black to the negative, keep them connected well.
2. After the equipment initializing, it will display automaticly as the picture shows, press any key to go on.

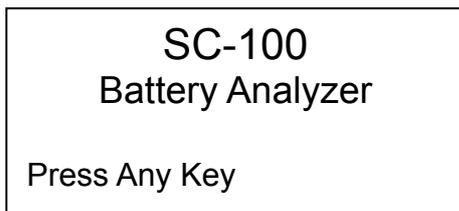


3. After starting, the main menu screen will be displayed,, changing the current item with"▲▼◀▶" key.

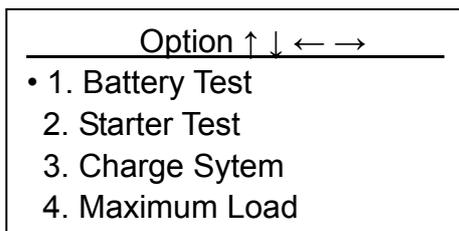

Battery Test

1. In main manu screen press the "▲▼"key, select "Battery Test", then press "ENTER" to start battery test function.
2. If the voltage is too low, the analyzer will display the information as the picture shows, suggesting to charge it beforetesting. In this case, push any one key will over the show.

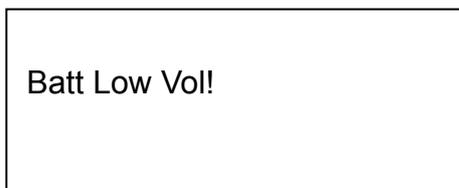

3. Select the standard according to the data plate on the battery or the user's manual of the battery as the picture shows. The operating procedure is as follows:

" ▲▼ " Left or right move the cursor.




“ ◀ ▶ ” Page up or page down

“ ETNER ” Ensure the current standard.

“ EXIT ” Return to the upper menu screen.



4. When press the “ ETNER “ key, the display will show:

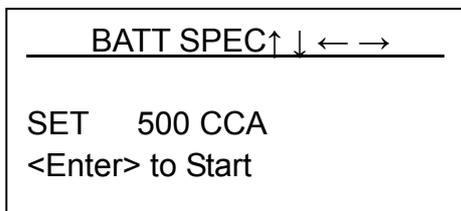


“ ▲ ▼ ” Increase or reduce at 5 amount one step for battery size range (CCA). It is get from the data plate on waiting test battery or user’s manual.

“ ◀ ▶ ” Increase or reduce at 100 amount one step for battery size range (CCA). It is get from the data plate on waiting test battery or user’s manual.


“ ETNER ” Ensure the current standard and start test.

“ EXIT ” Return to the upper menu screen.

5. After input the value, press “ ENTER “ , the display will show as the below figure:

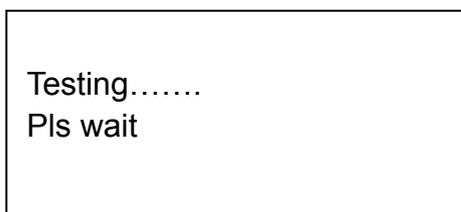

6. The results will be shown on the display as below:

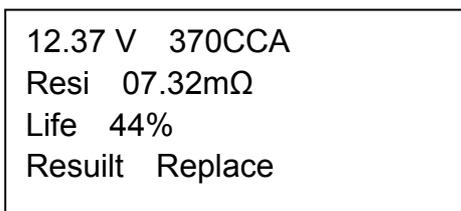

Resi: The internal resistance of the battery, the CCA is bigger, the resistance will be small.

 Note: The internal resistance standard will be different as it is made of different materials used by various manufactures, so there is no unified standard.

CCA: The full loud cold cranking current from the tested battery, it's used to determine the battery condition. CCA is bigger, the internal resistance will be smaller.

V: The current voltage of the battery.

Life: Life-Span, indicating the battery condition, suggested to replace it when the life-span is below 45%.

| Life-Span | Testing Result | Remarks |
|----------------|-----------------|----------------------------------|
| Life >80% | Good | Good Condition |
| 80%> Life >60% | OK | Normal Condition |
| 60%> Life >45% | Caution | Life-Span will be over, caution |
| Life <45% | Suggest Replace | Life-Span has been over, replace |

Press "EXIT" or "ENTER" key will return to the upper menu screen.

 Note:

a) Before testing, make sure that the engine is not started and all electronic equipments are turned off.

b) After the automobile runs a period time, do not test it at once, because the available voltage of the battery is a little higher than normal, please turn on the headlight for about 2~3 minutes, waiting the voltage get down to normal before testing.

Start System Test

1. Turn off the engine. Connect the clip of the analyzer to the terminal of the battery, the red clip to the positive and the black to the negative.
2. In the main menu, select "Starter Test" function (the second item), press "ENTER" key to confirm, the result data will be shown as the following figure:

| |
|------------------|
| Starter Sys. |
| CURR 12.30V |
| Min 12.29V start |
| Min ≥9.6V |

3. Start engine.
4. The available starting voltage will be got in the analyzer.
5. If the starting voltage is over 9.6V, it means the starting system is Ok, otherwise it means the starting system is bad. Please check the connected points of the parts interrelated, the wire and the starter.
6. Press “EXIT” or “ENTER” key will return to the upper menu screen.

Charging System Test

1. Connect the clip of the analyzer to the terminal of the battery. The red clip to the positive, the black to the negative.
2. In the main menu screen,after selecting ” Charge Sytem” (The third item) by press ” ▲▼” key, press “ENTER” key to start Charging System Test, the tested data is shown as blew:

| | |
|-------------|---------|
| Chare Sys. | Normal |
| MAX 13.49V | ↓ 15.0V |
| CURR 13.35V | |
| MIN 12.29V | ↑ 13.3V |

Press “EXIT” or “ENTER” key will return to the upper menu screen.



Note:

- 1) The normal voltage of the charging system is at 13.3~15V.
- 2) If the available voltage is over 15V, please check the regulator. If it is below 13V, please check the connected point, the wire and the alternator.
- 3) To check the charging system is OK or not, start the engine and accelerate it exceed 2000rpm for about 15 seconds, read the voltage in the left of the screen under the display(Max) and the right(Min), if the voltage is 13.3V to 15V, it means the charging system is OK.

Max.load Test

1. Start the engine. Connect the clips to the battery, the red to the positive and the black to the negative.
2. After pressing “▲▼◀▶” key to select in the main menu, press the “ENTER” key to get into the Max.load test, switch on all the electronic equipments according to the pointing out on the display, press any key to continue, as the following figure shows.



Turn ON
All Elec
Pres Any Key

Max Load
CURR 13.86V Elec
Min 13.73V Full
Min Above 12.8V

3. Accelerate the engine to 2000rpm, and keeping 15 seconds.
4. Read the lowest volage, it is also the “full load” volage, if the voltage is below 12.8V, it probably means the load has problem. Pleas check whether the alternator belt is weared, and whether the wire is shorted.
5. Press “EXIT” or “ENTER” key will return to the upper menu screen.

Caution

1. This analyzer is used to test 12V batteries of automobile.
2. The DC voltage for the analyzer is in the range of 9V~18V, do not test the batteries contacted.
3. The vlotage of just charged battery will be over the normal a bit, please turn on the headlights for about 2~3 minutes, waiting the voltage to get down to normal before testing.
- 4 Please do not store up the tseter and use it at high temperature and high humidity place.
5. The battery size range is fit for the analyzer:
 - a) CCA: 100-1700
 - b) IEC:100-1000
 - c) EN: 100-1700
 - d) JIS: Should look up the coversion table to compare CCA.
 - e) DIN: 100-1000
 - f) Other size range: Should test the internal resistance, CCA and the voltage

Battery Standards

- 1.CCA: Cold Cranking Ampere(International Battery Association standards), it means in the provision of a low temperature(general provision in 0°F or -18°C condition) the maximum output current value from the battery.
- 2.DIN: German standard, in 0°F or -18°C condition, the current can reach a value and keep for 30 seconds at 9.0V, or at 8.0V for 150 seconds.
- 3.IEC: International Battery Association standars, in 0°F or -18°C condition, the average strenth of the current can keep for 60 seconds at 8.4V.
- 4.BSR: British standard, in 0°F or -18°C condition, the average strenth of the current can keep for 180 seconds at 6.0V.
- 5.BCI: International Battery Association standards, in 0°F or -18°C condition, the current can keep for 30 seconds at 7.2V.

Appendix: The Conversion Tables Of Battery Size Range

Table 1

| EN and DIN Conversion Tables | | | | | | | | | |
|------------------------------|-----------|--------|-----|-----|---------------|-----------|--------|-----|-----|
| Specification | | | CCA | | Specification | | | CCA | |
| Type | Same Type | | DIN | EN | Type | Same Type | | DIN | EN |
| 52805 | 52815 | | 180 | 240 | 56420 | 56322 | 88066 | 300 | 510 |
| 53517 | | | 175 | 300 | 56530 | 56618 | 56638 | 300 | 510 |
| 53520 | 53521 | 53522 | 150 | 240 | 56618 | 56619 | 56620 | 300 | 510 |
| 53625 | 53638 | 53836 | 175 | 300 | 56633 | 56647 | 56641 | 300 | 510 |
| 53646 | 53621 | 88038 | 175 | 300 | 56820 | 56821 | | 315 | 540 |
| 53653 | 53624 | 53890 | 175 | 300 | 57024 | 57029 | | 315 | 540 |
| 54038 | 54039 | | 175 | 300 | 57113 | 57539 | | 400 | 680 |
| 54232 | | | 175 | 300 | 57114 | 56821 | 88074 | 400 | 680 |
| 54313 | 54324 | 54464 | 220 | 330 | 57218 | 57219 | | 420 | 720 |
| 54317 | 54312 | 88146 | 210 | 360 | 57220 | 57217 | | 420 | 720 |
| 54437 | 54466 | 54459L | 210 | 360 | 57230 | | | 380 | 640 |
| 54459 | 54434 | 88046 | 210 | 360 | 57412 | 57413 | 57412L | 400 | 680 |
| 54469 | 54449 | 54465 | 210 | 360 | 57512 | 57513 | 57531 | 350 | 570 |
| 54519 | 54533 | 54612 | 210 | 360 | 58515 | 58424 | | 450 | 760 |
| 54523 | 54524 | | 220 | 300 | 57521 | 58513 | | 320 | 540 |
| 54537 | 54545 | 54801 | 190 | 300 | 58522 | 58514 | | 320 | 540 |
| 54551 | 54580 | | 220 | 300 | 58815 | 58821 | | 395 | 640 |
| 54533 | 54577 | 54579 | 220 | 300 | 58820 | 58515 | 58527 | 395 | 640 |
| 54584 | 54578 | | 220 | 300 | 58827 | | | 400 | 640 |
| 54590 | | | 210 | 330 | 58838 | 58833 | 88092 | 400 | 640 |
| 54827 | | | 240 | 360 | 59040 | 59017 | 59018 | 360 | 600 |
| 55040 | 88056 | | 265 | 450 | 59218 | 59219 | | 290 | 480 |
| 55041 | 55042 | | 220 | 360 | 59226 | 59215 | | 450 | 760 |
| 55044 | 55414 | 88056 | 265 | 450 | 59514 | | | 320 | 540 |
| 55046 | | | 300 | 510 | 59518 | 59519 | | 395 | 640 |
| 55056 | | | 320 | 540 | 59615 | 59616 | | 360 | 600 |
| 55057 | 54827 | 88156 | 320 | 540 | 60018 | 30019 | | 250 | 410 |
| 55068 | 55069 | 55548 | 220 | 390 | 60026 | 58811 | | 440 | 720 |
| 55218 | | | 255 | 420 | 60044 | 60038 | | 500 | 760 |
| 55414 | 55415 | 55421 | 265 | 450 | 60527 | 60528 | | 410 | 680 |
| 55422 | 55566 | 55040 | 265 | 450 | 61017 | 61018 | | 400 | 680 |
| 55428 | 55423 | 55427 | 300 | 510 | 61023 | 62529 | | 450 | 760 |
| 55457 | | | 265 | 450 | 61047 | 61048 | | 450 | 760 |
| 55529 | | | 220 | 360 | 62034 | 62038 | 62045 | 420 | 680 |
| 55531 | 55545 | 55559L | 255 | 420 | 63013 | | | 470 | 680 |
| 55559 | 55530 | 88056 | 255 | 420 | 63545 | 63549 | | 420 | 680 |

| | | | | | | | | | |
|-------|-------|--------|-----|-----|-------|-------|-------|-----|------|
| 55564 | 55552 | 55563 | 255 | 420 | 64020 | 64317 | 64318 | 325 | 550 |
| 55564 | 55565 | 55548 | 255 | 420 | 64028 | 64035 | | 520 | 760 |
| 55570 | 55567 | 55565L | 255 | 420 | 64036 | | | 460 | 760 |
| 56012 | | | 230 | 390 | 64317 | 64318 | 64323 | 540 | 900 |
| 56048 | 56068 | 56069 | 250 | 390 | 65513 | | | 540 | 900 |
| 56049 | 56069 | 56073 | 250 | 390 | 65514 | 65515 | | 570 | 900 |
| 56077 | 56530 | | 300 | 510 | 67043 | 67045 | | 600 | 1000 |
| 56091 | 55800 | | 360 | 540 | 68032 | 68034 | | 600 | 1000 |
| 56111 | 55048 | | 300 | 540 | 70029 | 70038 | 70027 | 630 | 1050 |
| 56218 | 55092 | | 300 | 510 | 70036 | 68040 | 68021 | 570 | 950 |
| 56219 | 56216 | | 300 | 510 | 71014 | 71015 | | 700 | 1150 |
| 56220 | | | 280 | 510 | 72512 | | | 680 | 1150 |
| 56225 | 56323 | | 300 | 510 | 73011 | | | 740 | 1200 |
| 56318 | 56312 | 56311 | 300 | 510 | | | | | |

Table 2

| JIS Specification Conversion tables of batteries | | | | | | | | | |
|--|-----------|-----|-----|-----|---------------|-----------|-----|-----|-----|
| Specification | | CCA | | | Specification | | CCA | | |
| JIS(New) | JIS(Old) | | MF | CMF | JIS(New) | JIS(Old) | | MF | CMF |
| 26A17R | | 200 | | | 55B24RS | NT80-S6S | 430 | 420 | 500 |
| 26A17L | | 200 | | | 55B24LS | NT80-S6LS | 430 | 420 | 500 |
| 26A19R | 12N24-4 | 200 | 220 | 264 | 55D26R | N50Z | 350 | 440 | 525 |
| 26A19L | 12N24-3 | 200 | 220 | 264 | 55D26L | N50ZL | 350 | 440 | 525 |
| 28A19R | NT50-N24 | 250 | | | 60D23R | | 520 | | |
| 28A19L | NT50-N24L | 250 | | | 60D23L | | 520 | | |
| 32A19R | NX60-N24 | 270 | 295 | | 65D23R | | 420 | 540 | 580 |
| 32A19L | NX60-N24L | 270 | 295 | | 65D23L | | 420 | 540 | 580 |
| 26B17R | | 200 | | | 65D26R | NS70 | 415 | 520 | 625 |
| 26B17L | | 200 | | | 65D26L | NS70L | 415 | 520 | 625 |
| 28B17R | | 245 | | | 65D31R | N70 | 390 | 520 | 630 |
| 28B17L | | 245 | | | 65D31L | N70L | 390 | 520 | 630 |
| 28B19R | NS40S | 245 | | | 70D23R | 35-60 | 490 | 540 | 580 |
| 28B19L | NS40LS | 245 | | | 70D23L | 25-60 | 490 | 540 | 580 |
| 32B20R | NS40 | 270 | | | 75D23R | | 500 | 520 | 580 |
| 32B20L | NS40LS | 270 | | | 75D23L | | 500 | 520 | 580 |
| 32C24R | N40 | 240 | 325 | 400 | 75D26R | F100-5 | 490 | | |
| 32C24L | N40L | 240 | 325 | 400 | 75D26L | F100-5L | 490 | | |
| 34B17R | | 280 | | | 75D31R | N70Z | 450 | 540 | 735 |
| 34B17L | | 280 | | | 75D31L | N70ZL | 450 | 540 | 735 |
| 34B19R | NS40ZA | 270 | 325 | 400 | 80D23R | | 580 | | |

| | | | | | | | | | |
|---------|-----------|-----|-----|-----|---------|-----------|------|------|------|
| 34B19L | NS40ZAL | 270 | 325 | 400 | 80D26L | | 580 | | |
| 36B20R | NS40Z | 275 | 300 | 360 | 85B60K | | | | 500 |
| 36B20L | NS40ZL | 275 | 300 | 360 | 85BR60K | | | | 500 |
| 36B20RS | NS40ZS | 275 | 300 | 360 | 95D31R | NX120-7 | 620 | 660 | 850 |
| 36B20LS | NS40ZLS | 275 | 300 | 360 | 95D31L | NX120-7L | 620 | 660 | 850 |
| 38B20R | NX60-N24 | 330 | 340 | 410 | 95E41R | N100 | 515 | 640 | 770 |
| 38B20RS | NT60-N24S | 330 | 340 | 410 | 95E41L | N100L | 515 | 640 | 770 |
| 38B20L | NX60-24L | 330 | 340 | 410 | 105E41R | N100Z | 580 | 720 | 880 |
| 38B20LS | NX60-24LS | 330 | 340 | 410 | 105E41L | N100ZL | 580 | 720 | 880 |
| 40B20L | | 330 | | | 105F51R | N100Z | 580 | | |
| 40B20R | | 330 | | | 105F51L | N100ZL | 580 | | |
| 42B20R | | 330 | | | 115E41R | NS120 | 650 | 800 | 960 |
| 42B20L | | 330 | | | 115E41L | NS120L | 650 | 800 | 960 |
| 40B20RS | | 330 | | | 115F51R | N120 | 650 | 800 | 960 |
| 40B20LS | | 330 | | | 115F51L | N120L | 650 | 800 | 960 |
| 46B24R | NS60 | 325 | 360 | 420 | 130E41R | NX200-10 | 800 | | |
| 46B24L | NS60L | 325 | 360 | 420 | 130E41L | NX200-10L | 800 | | |
| 46B24RS | NS60S | 325 | 360 | 420 | 130F51R | | | 800 | |
| 46B24LS | NS60LS | 325 | 360 | 420 | 130F51L | | | 800 | |
| 46B26R | | 360 | | | 145F51R | NS150 | 780 | 920 | |
| 46B26L | | 360 | | | 145F51L | NS150L | 780 | 920 | |
| 46B26RS | | 360 | | | 145G51R | N150 | 780 | 900 | 1100 |
| 34B19RS | NS40ZAS | 270 | 325 | 400 | 80D26R | NX-110-5 | 580 | 280 | 630 |
| 34B19LS | NS40ZALS | 270 | 325 | 400 | 80D26L | NX110-5L | 580 | 280 | 630 |
| 46B26LS | | 360 | | | 145G51L | N150L | 780 | 900 | 1100 |
| 48D26R | N50 | 280 | 360 | 420 | 150F51R | NT200-12 | 640 | | |
| 48D26L | N50L | 280 | 360 | 420 | 150F51L | NT200-12L | 640 | | |
| 50D20R | | 310 | 380 | 480 | 165G51R | NS200 | 935 | 980 | |
| 50D20L | | 310 | 380 | 480 | 165G51L | NS200L | 935 | 980 | |
| 50D23R | 85BR60K | 500 | | | 170F51R | NX250-12 | 1045 | | |
| 50D23L | 85B60K | 500 | | | 170F51L | NX250-12L | 1045 | | |
| 50B24R | NT80-S6 | 390 | | | 180G51R | NT250-15 | 1090 | | |
| 50B24L | NT80-S6L | 390 | | | 180G51L | NT250-15L | 1090 | | |
| 50D26R | 50D20R | | 370 | | 195G51R | NX300-51 | 1145 | | |
| 50D26L | 50D20L | | 370 | | 195G51L | NX300-51L | 1145 | | |
| 55D26R | | 355 | 480 | 500 | 190H52R | N200 | 925 | 1100 | 1300 |
| 55D23L | | 355 | 480 | 500 | 190H52L | N200L | 925 | 1100 | 1300 |
| 55B24R | NX100-S6 | 435 | 420 | 500 | 245H52R | NX400-20 | 1530 | 1250 | |
| 55B24L | NX100-S6L | 435 | 420 | 500 | 245H52L | NX400-20L | 1530 | 1250 | |