

Technical Manual
Of
Intel Bay Trail Series CPU
Based Mini-ITX M/B

NO.G03-NF9U-F

Revision: 1.0

Release date: September 25, 2014

Trademark:

* Specifications and Information contained in this documentation are furnished for information use only, and are subject to change at any time without notice, and should not be construed as a commitment by manufacturer.

Environmental Protection Announcement

Do not dispose this electronic device into the trash while discarding. To minimize pollution and ensure environment protection of mother earth, please recycle.



TABLE OF CONTENT

| | |
|--|----|
| ENVIRONMENTAL SAFETY INSTRUCTION | iv |
| USER'S NOTICE | v |
| MANUAL REVISION INFORMATION | v |
| ITEM CHECKLIST | v |
| CHAPTER 1 INTRODUCTION OF THE MOTHERBOARD | |
| 1-1 FEATURE OF MOTHERBOARD | 1 |
| 1-2 SPECIFICATION | 2 |
| 1-3 LAYOUT DIAGRAM | 3 |
| CHAPTER 2 HARDWARE INSTALLATION | |
| 2-1 JUMPER SETTING..... | 8 |
| 2-2 CONNECTORS AND HEADERS | 16 |
| 2-2-1 CONNECTORS | 16 |
| 2-2-2 HEADERS..... | 20 |
| CHAPTER 3 INTRODUCING BIOS | |
| 3-1 ENTERING SETUP..... | 26 |
| 3-2 BIOS MENU SCREEN | 27 |
| 3-3 FUNCTION KEYS..... | 27 |
| 3-4 GETTING HELP..... | 28 |
| 3-5 MEMU BARS..... | 28 |
| 3-6 MAIN MENU | 29 |
| 3-7 ADVANCED MENU | 30 |
| 3-8 CHIPSET MENU | 41 |
| 3-9 SECURITY MENU | 44 |
| 3-10 BOOT MENU | 45 |
| 3-11 SAVE & EXIT MENU | 46 |



Environmental Safety Instruction

- Avoid the dusty, humidity and temperature extremes. Do not place the product in any area where it may become wet.
- 0 to 60 centigrade is the suitable temperature. (The figure comes from the request of the main chipset)
- Generally speaking, dramatic changes in temperature may lead to contact malfunction and crackles due to constant thermal expansion and contraction from the welding spots' that connect components and PCB. Computer should go through an adaptive phase before it boots when it is moved from a cold environment to a warmer one to avoid condensation phenomenon. These water drops attached on PCB or the surface of the components can bring about phenomena as minor as computer instability resulted from corrosion and oxidation from components and PCB or as major as short circuit that can burn the components. Suggest starting the computer until the temperature goes up.
- The increasing temperature of the capacitor may decrease the life of computer. Using the close case may decrease the life of other device because the higher temperature in the inner of the case.
- Attention to the heat sink when you over-clocking. The higher temperature may decrease the life of the device and burned the capacitor.

USER'S NOTICE

COPYRIGHT OF THIS MANUAL BELONGS TO THE MANUFACTURER. NO PART OF THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT MAY BE REPRODUCED, TRANSMITTED OR TRANSLATED INTO ANY LANGUAGE IN ANY FORM OR BY ANY MEANS WITHOUT WRITTEN PERMISSION OF THE MANUFACTURER.

THIS MANUAL CONTAINS ALL INFORMATION REQUIRED TO USE THIS MOTHER-BOARD SERIES AND WE DO ASSURE THIS MANUAL MEETS USER'S REQUIREMENT BUT WILL CHANGE, CORRECT ANY TIME WITHOUT NOTICE. MANUFACTURER PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, AND WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFIT, LOSS OF BUSINESS, LOSS OF USE OF DATA, INTERRUPTION OF BUSINESS AND THE LIKE).

PRODUCTS AND CORPORATE NAMES APPEARING IN THIS MANUAL MAY OR MAY NOT BE REGISTERED TRADEMARKS OR COPYRIGHTS OF THEIR RESPECTIVE COMPANIES, AND THEY ARE USED ONLY FOR IDENTIFICATION OR EXPLANATION AND TO THE OWNER'S BENEFIT, WITHOUT INTENT TO INFRINGE.

Manual Revision Information

| Reversion | Revision History | Date |
|-----------|------------------|--------------------|
| 1.0 | First Edition | September 25, 2014 |

Item Checklist

- Motherboard
- User's Manual
- CD for motherboard utilities
- Cable(s)

Chapter 1

Introduction of the Motherboard

1-1 Feature of Motherboard

- Onboard Intel® Bay Trail series processor, with low power consumption never denies high performance
- Support DDR3L SO-DIMM 1066/1333 MHz up to 8GB
- Support Mini-PCIE connector
- Support m-SATA connector
- Support 2 * SATAII device
- Integrated with 1 * 24-bit dual channel LVDS header
- Support HDMI display output
- Support USB 3.0 data transport demand
- Support CPU Smart FAN
- Compliance with ErP standard
- Support Watchdog function


1-2 Specification

| Spec | Description |
|-----------------------|--|
| Design | <ul style="list-style-type: none"> ● 6-layers; Mini-ITX; PCB size: 17x 17 cm |
| Embedded CPU | <ul style="list-style-type: none"> ● Integrated with Intel® Bay Trail-D/M/I series CPU |
| Memory Slot | <ul style="list-style-type: none"> ● 1* DDR3L SODIMM Slot for un-buffered DDR3L 1066* Mhz or 1333* Mhz SDRAM, expandable to 8GB <p><i>*Memory clock supporting range is decided by specific CPU of the model. For more memory compatibility information please consults your local dealer.</i></p> |
| Expansion Slot | <ul style="list-style-type: none"> ● 1* Half-size Mini-PCIE slot ● 1* PCIE x1 slot |
| LAN Chip | <ul style="list-style-type: none"> ● Integrated with dual Realtek 8111G PCI-E Gigabit LAN chips ● Support Fast Ethernet LAN function of providing 10/100/1000Mbps Ethernet data transfer rate |
| Audio Chip | <ul style="list-style-type: none"> ● Realtek ALC662 2-CH HD Audio Codec integrated ● Audio driver and utility included |
| Storage | <ul style="list-style-type: none"> ● 2* SATAII 3Gb/s port ● 1* mSATA slot (shared with SATA2 port) |
| BIOS | <ul style="list-style-type: none"> ● AMI 64MB Flash ROM |
| Rear I/O | <ul style="list-style-type: none"> ● 1* DC 9V~24V power-in connector ● 1* VGA port ● 1* Parallel port ● 1* RJ-11 port ● 1* PS/2 keyboard & mouse combo port ● 1* HDMI port ● 1* COM port ● 2* RJ-45 LAN port ● 3* USB 2.0 port ● 1* USB 3.0 port ● 1* Line-out port |


| | |
|----------------------------|---|
| | <ul style="list-style-type: none"> ● 1* MIC port |
| <p>Internal I/O</p> | <ul style="list-style-type: none"> ● 1* DC 9V~24V internal power connector ● 1* SATA Power connector ● 1* CPU FAN connector ● 2* SYSFAN connector ● 1* Front panel audio header ● 1* SPEAK_CON header ● 2* LAN LED activity header ● 5* Serial port header ● 2* 9-pin USB 2.0 header (Expansible to 4* USB 2.0 ports) ● 1* Front panel header ● 1* Power LED & speaker header ● 1* GPIO_CON header ● 1* SMBUS header ● 1* LVDS inverter ● 1* LVDS header |

1-3 Layout Diagram

Rear IO Panel Diagram:

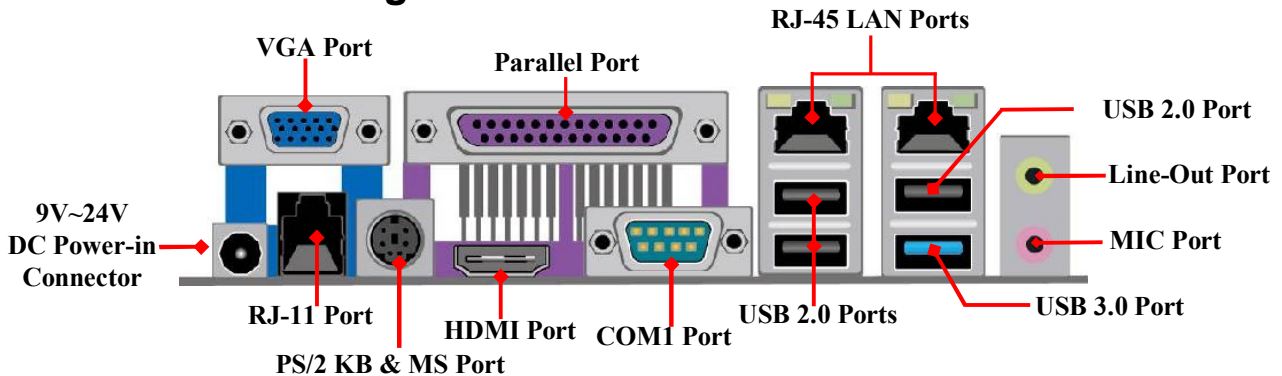


Motherboard Internal Diagram

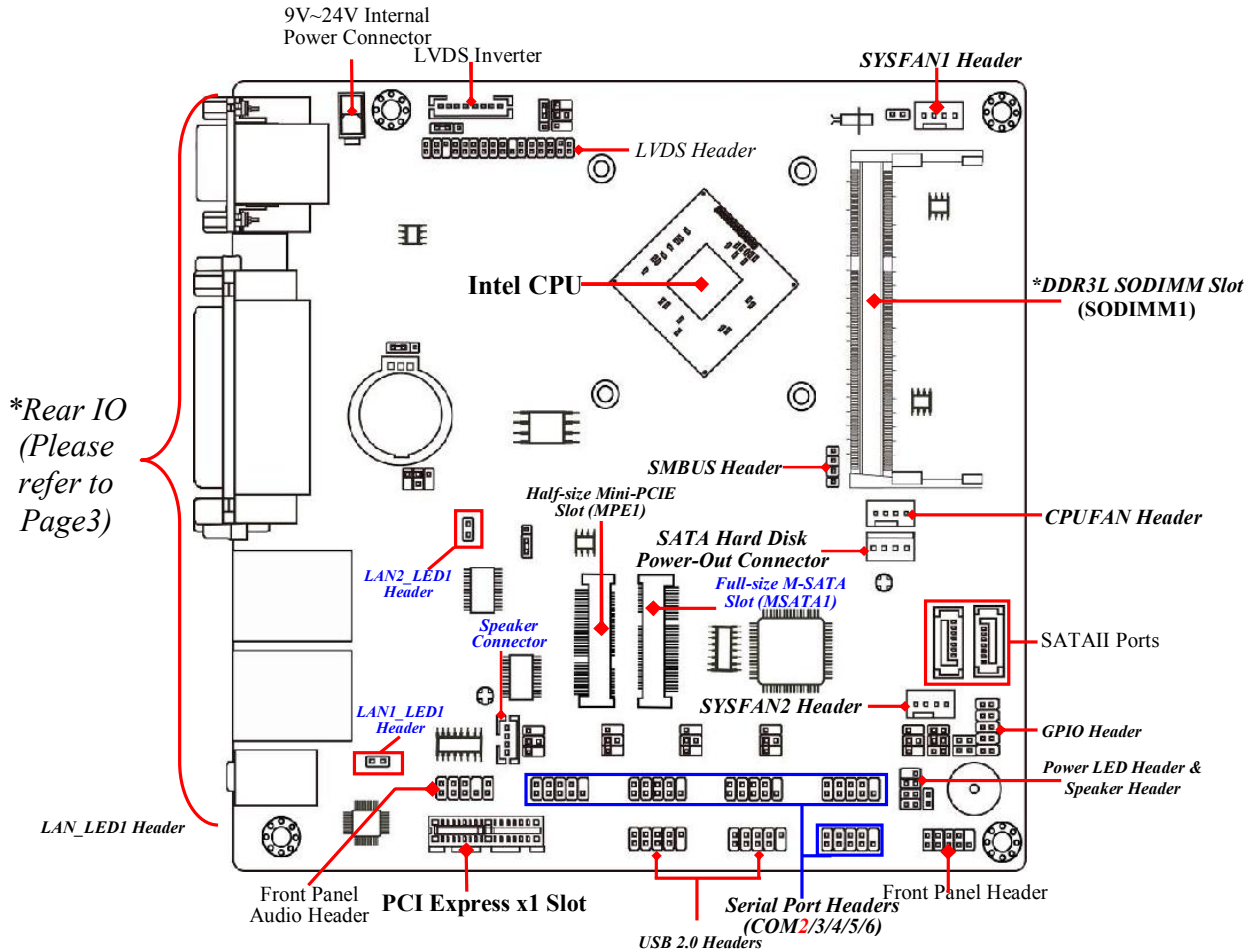

Note: 1. The module for **SODIMM1** should be **DDR3L 1.35V SODIMM** and **not exceeding 8GB total capacity**. 2. The SODIMM installed should be of or above the memory clock the model supported, otherwise the board will not start. 3. **MSATA** slot shares function with **SATA2** port; i.e. only one can function at a time.

Jumper Position:

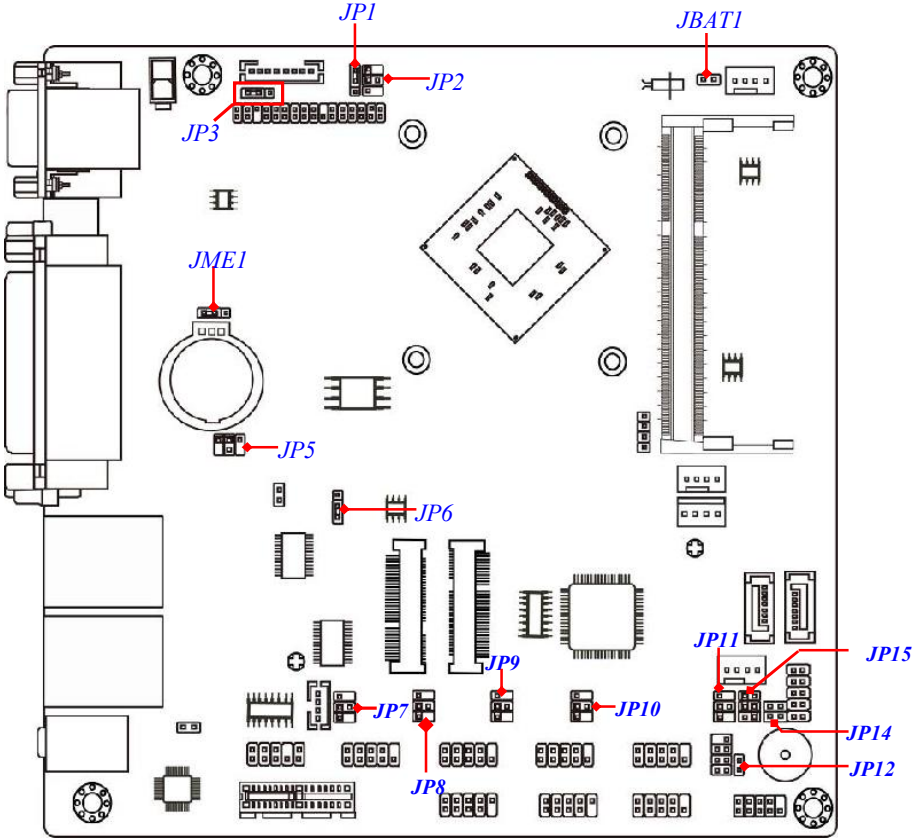

Jumper

| Jumper | Name | Description |
|------------------|--|--------------------|
| JP1 | INVERTER1 VCC 5V/12V Select | 3-Pin Block |
| JP2 | LVDS1 PVCC 3.3V/5V/12V Select | 4-Pin Block |
| JP3 | LCD Back Light PWM/DC Mode Select | 3-Pin Block |
| JP6 | Mini PCI-E Slot (MPE1) VCC 3.3V /3VSB Select | 3-Pin Block |
| JP5 | COM1 Port Pin9 Function Select | 4-Pin Block |
| JP7 | COM2 Header Pin9 Function Select | 4-Pin Block |
| JP8 | COM3 Header Pin9 Function Select | 4-Pin Block |
| JP9 | COM4 Header Pin9 Function Select | 4-Pin Block |
| JP10 | COM5 Header Pin9 Function Select | 4-Pin Block |
| JP11 | COM6 Header Pin9 Function Select | 4-Pin Block |
| JBAT1 | CMOS RAM Clear Function Select | 2-Pin Block |
| JP12 | Disable ME Function Select | 2-Pin Block |
| JP14(Pin 1&2) | AT Mode Function Select | 2-Pin Block |
| JP14(Pin 3&4) | Case Open Message Display Function | 2-Pin Block |
| JME1 | Clear ME RTC Function Setting | 3-Pin Block |
| JP15 (Pin 1&3&5) | RJ-11 Port VCC 12V/24V Select | 3-Pin Block |
| JP15 (Pin 2&4&6) | SYSFAN1/SYSFAN2 R.P.M. Select | 3-Pin Block |

Connectors

| Connector | Name |
|------------------|--|
| DCIN1 | DC 9V~24V Power-in Connector |
| VGA1 | VGA Port Connector |
| RJ1 | RJ-11 Port Connector |
| PS1 | PS2 KB & MS Combo Connector |
| HDMI1 | High-Definition Multimedia Interface Connector |
| COM1 | Serial Port Connector |

| | |
|-----------------|--|
| LPT1 | Parallel Port Connector |
| UL1 | Top: RJ-45 LAN Port Connector Middle: USB 2.0 Port Connector Bottom: USB 3.0 Port Connector |
| UL2 | Top: RJ-45 LAN Port Connector Middle & Bottom: USB 2.0 Port Connector X 2 |
| AUDIO1 | Top: Audio Line Out Connector Bottom: Audio MIC In Connector |
| ATXPWR1 | DC 9V~24V Internal Power Connector |
| SATA1/SATA2 | SATAII Port Connector |
| SATAPW1 | SATA Power out Connector |
| CPUFAN1 | CPU Fan Connector |
| SYSFAN1/SYSFAN2 | SYSTEM Fan Connector X 2 |

Headers


| Header | Name | Description |
|---------------------|---|--------------|
| FP_AUDIO1 | Front Panel Audio Header | 9-pin Block |
| SPEAK_CON1 | Audio Speaker Header | 4-pin Block |
| LAN1_LED1/LAN2_LED1 | LAN Activity LED Header X2 | 2-pin Block |
| COM2/3/4/5/6 | Serial Port Header X5 | 9-pin Block |
| F_USB1/ F_USB2 | USB 2.0 Header X2 | 9-pin Block |
| FP1 | Front Panel Header(PWR LED/ HDD LED/Power Button /Reset) | 9-pin Block |
| SPK-LED1 | Power LED & Speaker Header | 7-pin Block |
| GPIO_CON1 | GPIO Header | 10-pin Block |
| SMBUS1 | SMBUS Header | 4-pin Block |
| INVERTER1 | LVDS Inverter | 8-pin Block |
| LVDS1 | LVDS Header | 30-pin Block |

Chapter 2


Hardware Installation

2-1 Jumper Setting


JP1 (3-pin): INVERTER1 VCC 5V/12V Select

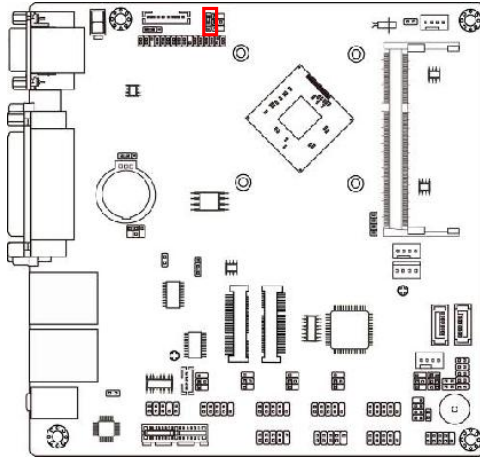

JP1 → INVERTER1 VCC




1-2 Close: INVERTER1 VCC= +5V;




2-3 Close: INVERTER1 VCC= +12V.


JP2 (4-pin): LVDS1 PVCC 3.3V/5V/12V Select

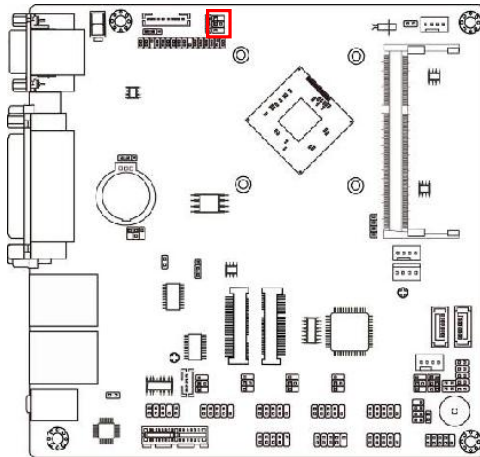


JP2 → LVDS1 PVCC



**2-4 Close:
VCC=+3.3V;**




**3-4 Close:
VCC= +5V;**




**4-6 Close:
VCC= +12V.**


JP3 (3-pin): INVERTER1 Back Light PWM/DC Mode Select

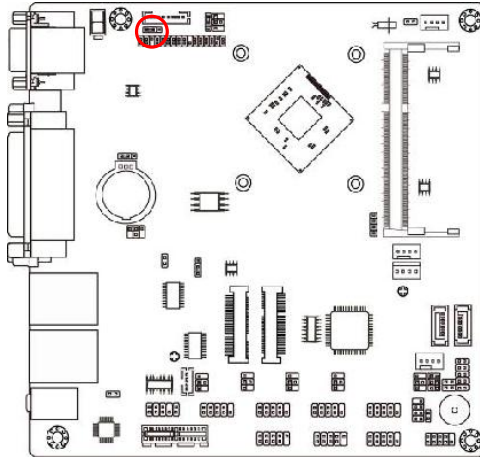

JP3 → INVERTER1 Back light




1-2 Close: PWM Mode Selected;




2-3 Close: DC Mode Selected.


JP6 (3-pin): Mini PCI-E Slot (MPE1) Power VCC3.3V/ 3VSB Select

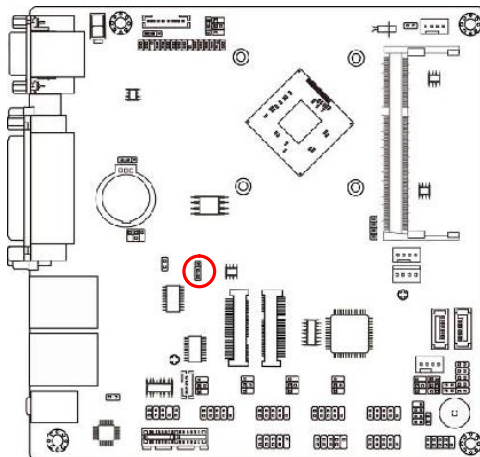

JP6 → MPE1 Slot




1-2 Close: MPE Slot VCC= 3.3V;




2-3 Close: MPE Slot VCC= 3VSB.


JP5 (4-pin): COM1 Port Pin9 Function Select

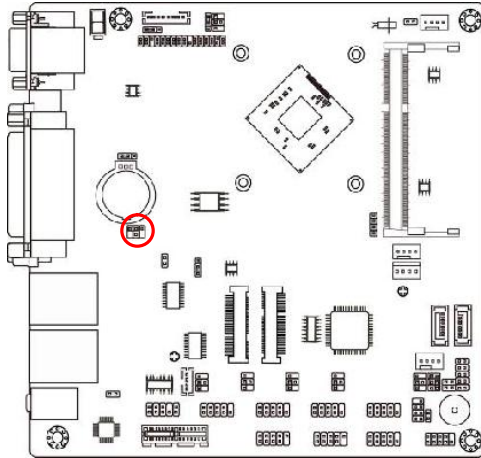


JP5 → COM1 Port



2-4 Close:
RI=RS232;




3-4 Close:
RI= +5V;




4-6 Close:
RI= +12V.


JP7 (4-pin): COM2 Header Pin9 Function Select

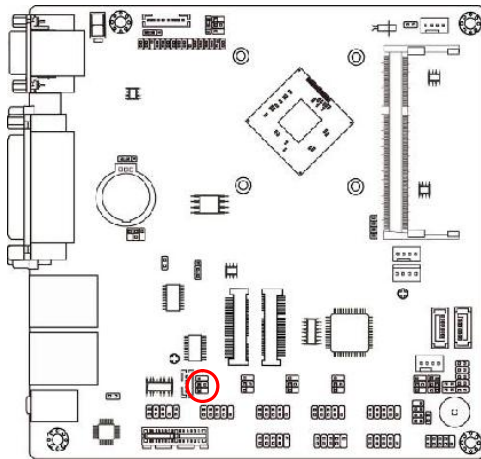


JP7 → COM2 Header



2-4 Close:
RI=RS232;




3-4 Close:
RI= +5V;




4-6 Close:
RI= +12V.


JP8 (4-pin): COM3 Header Pin9 Function Select

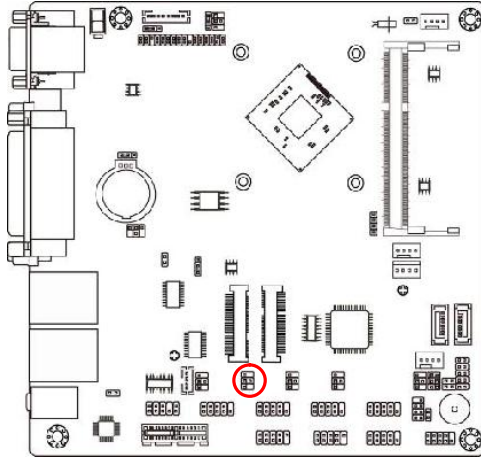


JP8→COM3 Header



2-4 Close:
RI=RS232;




3-4 Close:
RI= +5V;




4-6 Close:
RI= +12V.


JP9 (4-pin): COM4 Header Pin9 Function Select

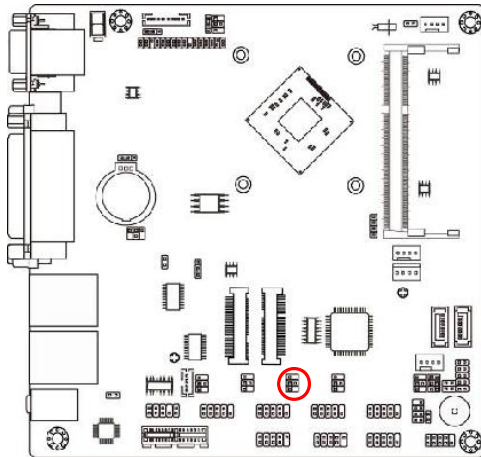


JP9→COM4 Header



2-4 Close:
RI=RS232;




3-4 Close:
RI= +5V;




4-6 Close:
RI= +12V.


JP10 (4-pin): COM5 Header Pin9 Function Select

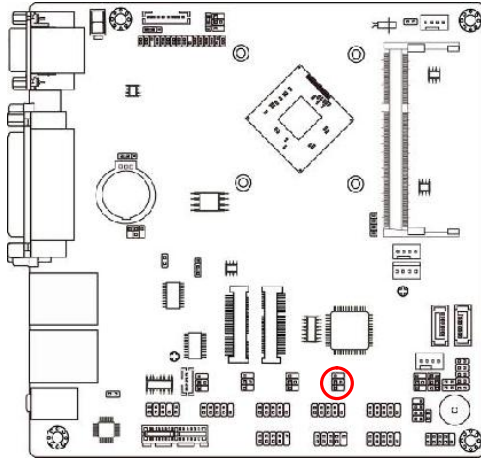


JP10 → COM5 Header



2-4 Close:
RI=RS232;




3-4 Close:
RI= +5V;




4-6 Close:
RI= +12V.


JP11 (4-pin): COM6 Header Pin9 Function Select

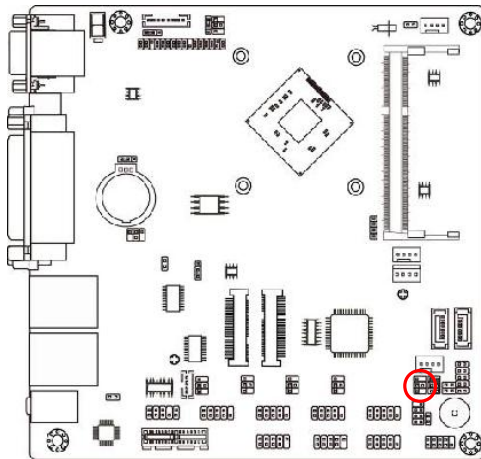


JP11 → COM6 Header



2-4 Close:
RI=RS232;




3-4 Close:
RI= +5V;



4-6 Close:
RI= +12V.

JBAT1(2-pin): Clear CMOS RAM Setting

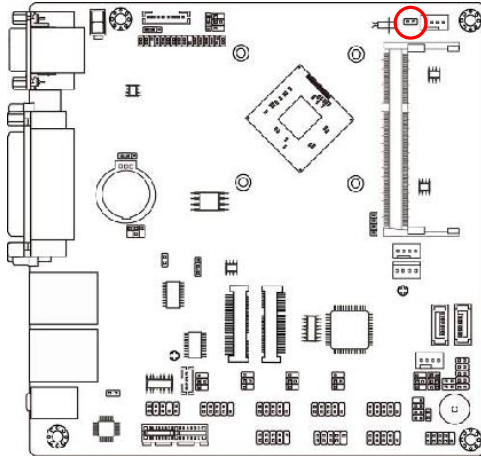

JBAT1 → Clear CMOS




1-2 Open: Normal;



2-3 Close: Clear CMOS.

JP12 (2-pin): Disable ME Function Select

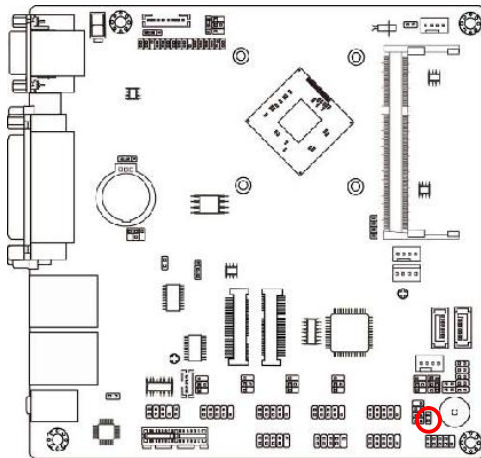

JP12 → Disable ME Function




1-2 Open: Normal;




1-2 Close: Disable ME Function Selected.


Pin 1 & 2 of JP14 (4-pin): AT Mode Function Select

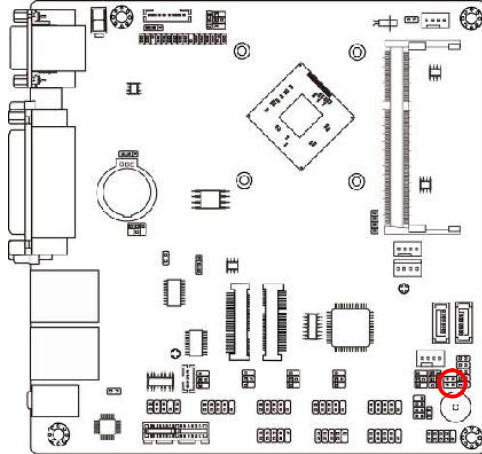

Pin 1 & 2 of JP14 → AT Mode Select




1-2 Open: ATX Mode Selected;




1-2 Close: AT Mode Selected.

***ATX Mode Selected:** Press power button to power on after power input ready;
AT Mode Selected: Directly power on as power input ready.


Pin 3 & 4 of JP14 (4-pin): Case Open Message Display Function Select

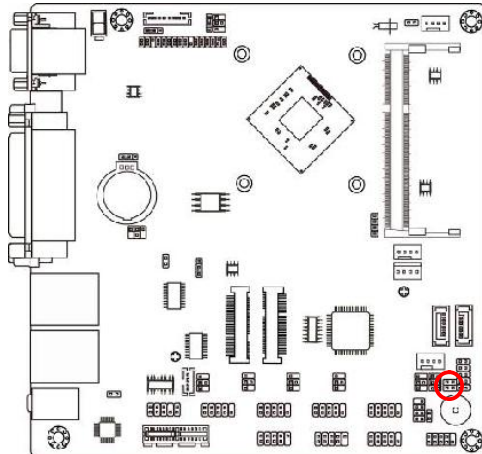

Pin 3 & 4 of JP14 → Case Open Function Select




3-4 Open: Normal;




3-4 Close: Case Open Function Selected (One Touch).

Pin 3-4 Close: When Case open function pin short to GND, the Case open function was detected. When Used, needs to enter BIOS and enable 'Case Open Detect' function. In this case if your case is removed, next time when you restart your computer, a message will be displayed on screen to inform you of this.


JME1 (3-pin): Clear ME_RTC Function Setting

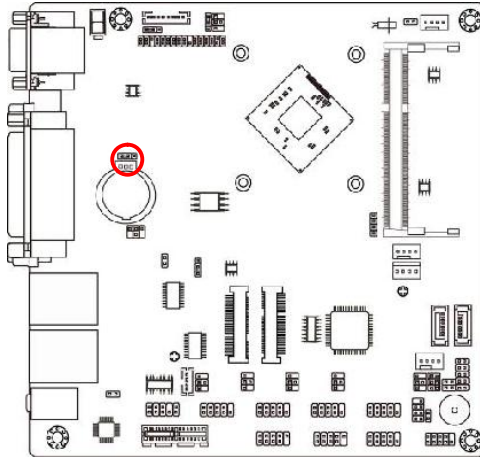

JME1 → Clear ME_RTC




1-2 Close: Normal;




2-3 Close: Clear ME_RTC.


Pin 1&3&5 of JP15 (6-pin): RJ-11 Port VCC 12V/24V Select

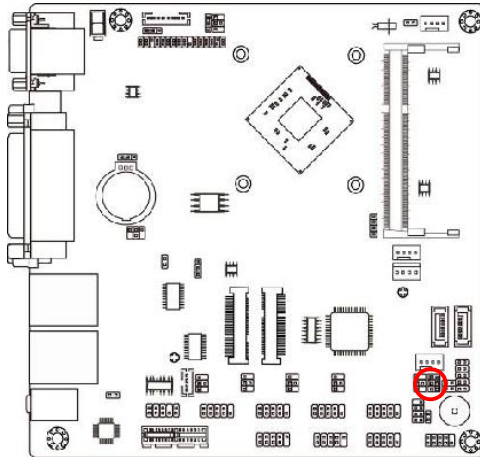

Pin 1 & 3 & 5 of JP15 → RJ-11 Port




1-3 Close: RJ-11 VCC=12V;




3-5 Close: RJ-11 VCC=24V.


Pin 2&4&6 of JP15 (6-pin): SYSFAN1/SYSFAN2 R.P.M. Select

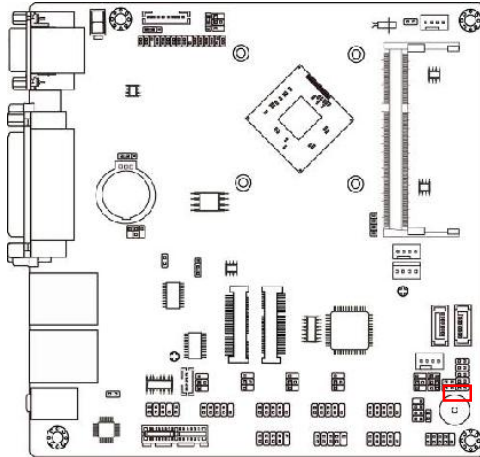

Pin 2 & 4 & 6 of JP15 → SYSFAN1/2 R.P.M.



2-4 Close: SYSFAN1 R.P.M. Selected;




4-6 Close: SYSFAN2 R.P.M. Selected.

2-2 Connectors and Headers

2-2-1 Connectors


(1) Rear I/O Connectors

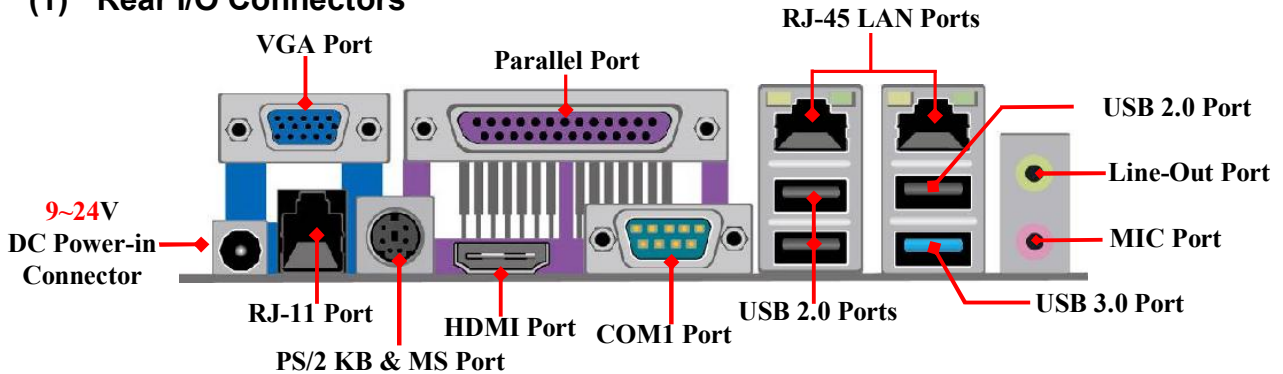


(2) COM1 (9-pin Block): RS232/422/485 Port

COM1 port can function as RS232/422/485 port. In normal settings COM1 functions as RS232 port. With compatible COM cable COM1 can function as RS422 or RS 485 port.

User also needs to go to BIOS to set '**Transmission Mode Select**' for COM1 (refer to Page 32) at first, before using specialized cable to connect different pins of this port.


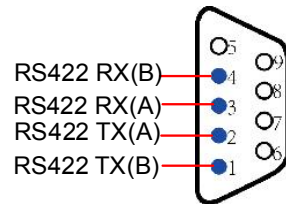


For RS422 Mode

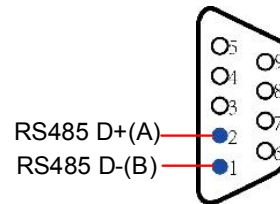

For RS485 Mode


(3) ATXPWR1 (2-pin Block): DC9V~24V Power-in Internal Connector

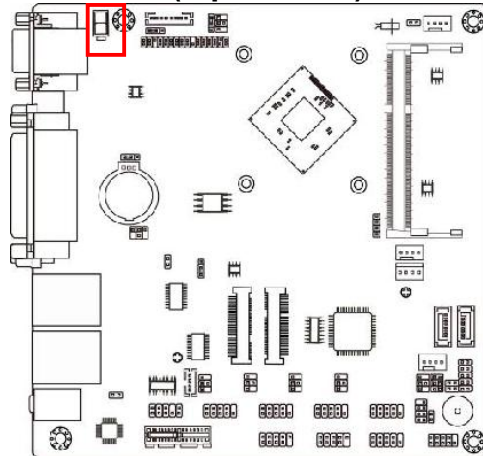


| Pin No. | Definition |
|---------|-------------------|
| 1 | GND |
| 2 | +9V~+24V DC_IN |

(4) SATA1/SATA2(7-pin Block): SATAII Port connector

These are high-speed SATAII ports that support 3GB/s transfer rate.


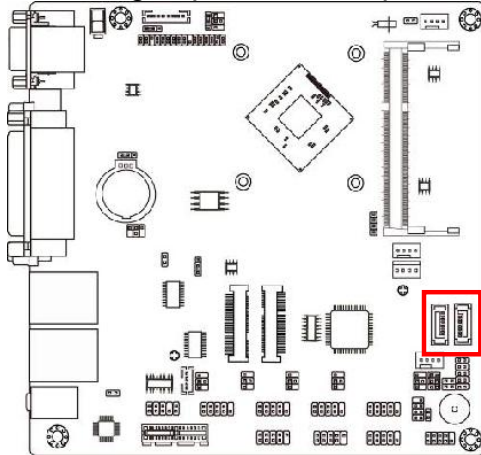


| Pin No. | Definition |
|---------|------------|
| 1 | GND |
| 2 | TXP |
| 3 | TXN |
| 4 | GND |
| 5 | RXN |
| 6 | RXP |
| 7 | GND |

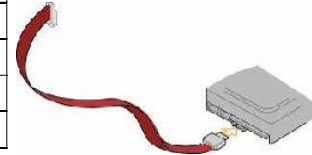


** Note: SATA2 shares with MSATA1(Mini-SATA slot).*

(5) SATAPW1 (4-pin): SATA Power Connector

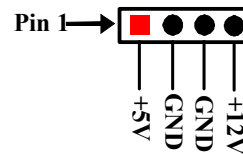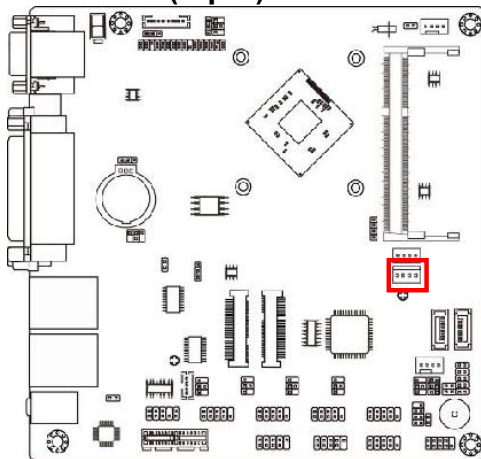

(6) CPUFAN/SYSFAN1/SYSFAN2 (4-pin): Fan Connectors


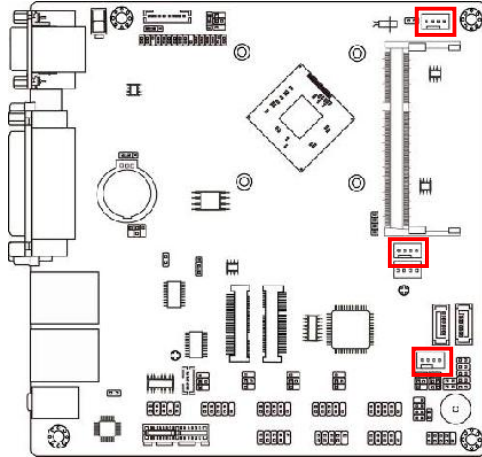


| No. | Definition |
|-----|----------------|
| 1 | GND |
| 2 | +12V Fan Power |
| 3 | Fan Speed |
| 4 | Control |

2-2-2 Headers


(1) FP_AUDIO1 (9-pin): Line-Out, MIC-In Header

This header connects to Front Panel Line-out, MIC-In connector with cable.

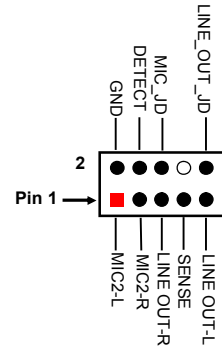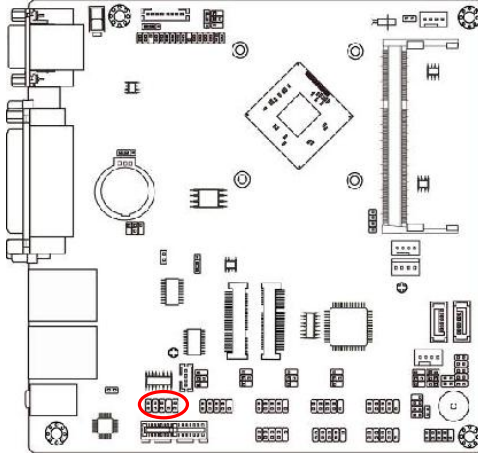



Line-Out, MIC Header

(2) SPEAK_CON1 (4-pin): Amplifier Connector

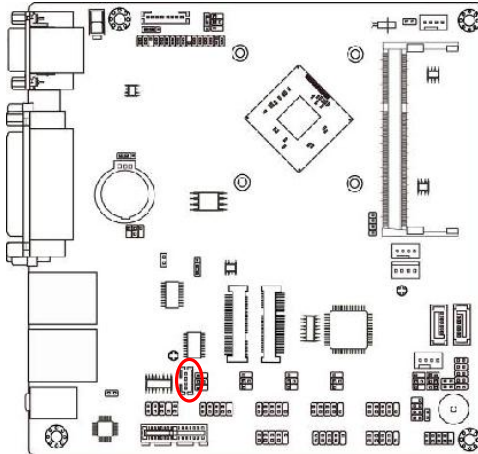


| Pin No. | Definition |
|---------|------------|
| 1 | L- |
| 2 | L+ |
| 3 | R+ |
| 4 | R- |

(3) LAN1_LED1/LAN2_LED1 (2-pin): LAN Activity LED Header


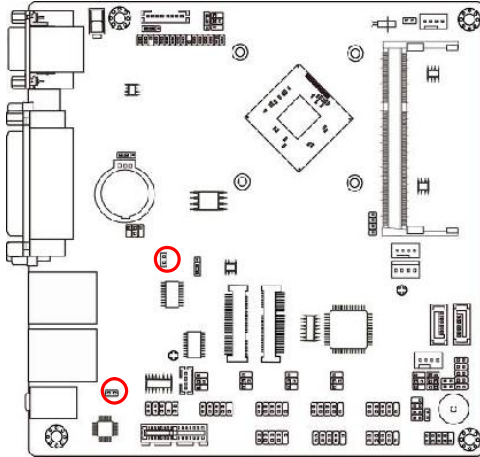


LAN2_LED1


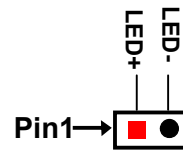


LAN1_LED1



(4) COM2/COM3/COM4/COM5/COM6 (9-pin): Serial Port Headers

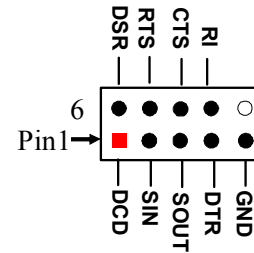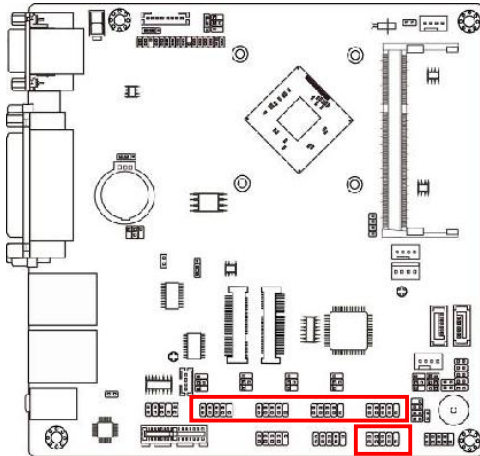



(5) F_USB1/F_USB2 (9-pin): USB 2.0 Port Headers

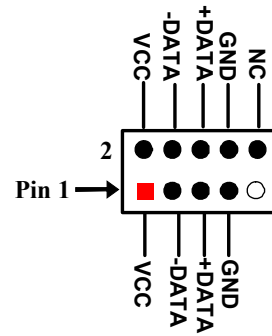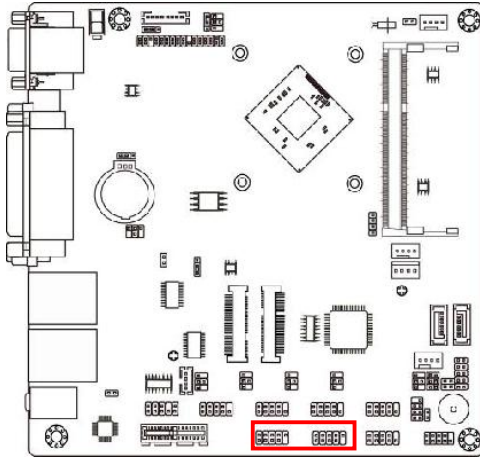



(6) FP1 (9-pin): Front Panel Header

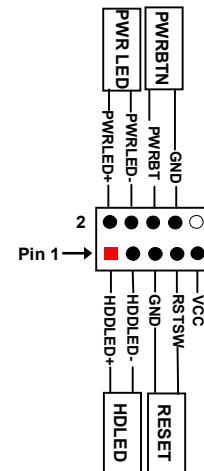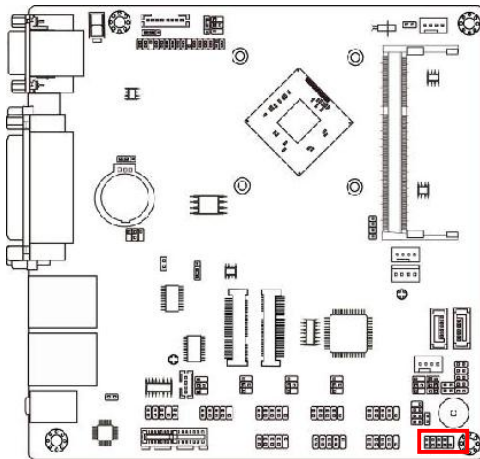



(7) SPK-LED (7-pin): Speaker Header & PWR LED Header

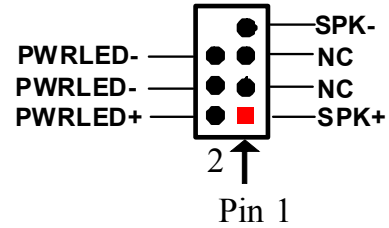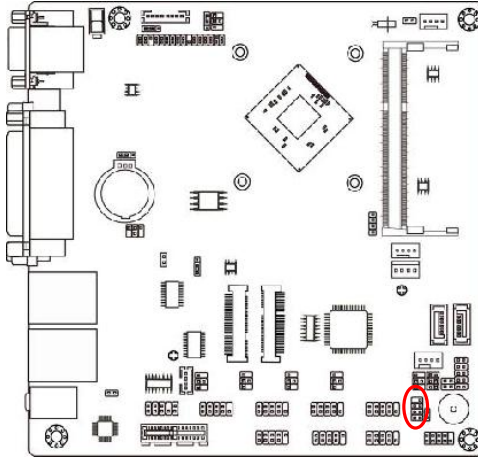



(8) GPIO_CON1 (10-pin): GPIO Header

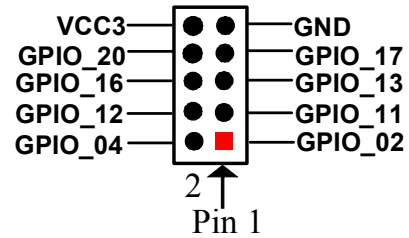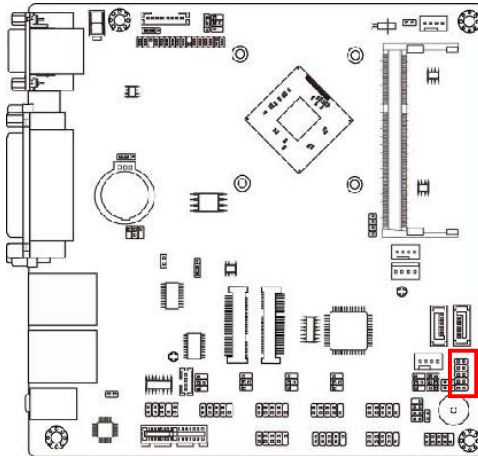

(9) SMBUS1 (4-Pin): SM BUS Header

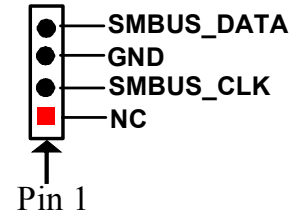
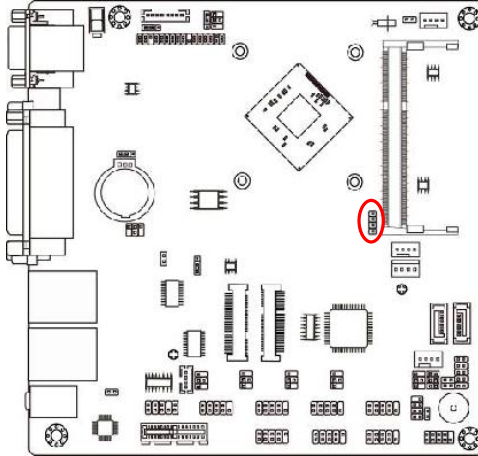


(10) INVERTER (8-pin): LVDS Inverter Connector

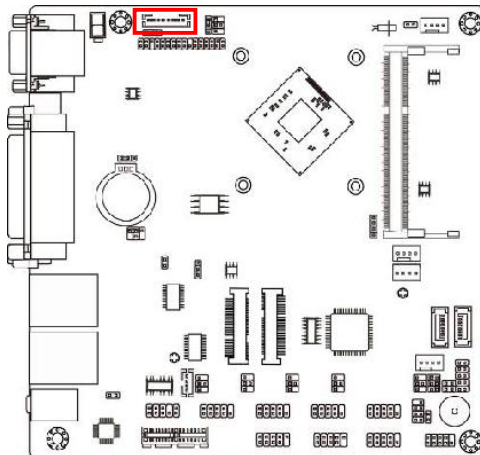

| Pin No. | Definition |
|---------|-------------------|
| 1 | Backlight Enable |
| 2 | Backlight PWM |
| 3 | Backlight VCC |
| 4 | Backlight VCC |
| 5 | GND |
| 6 | GND |
| 7 | Backlight Up SW |
| 8 | Backlight Down SW |

(11) LVDS (30-pin): 24-bit Dual Channel LVDS Header

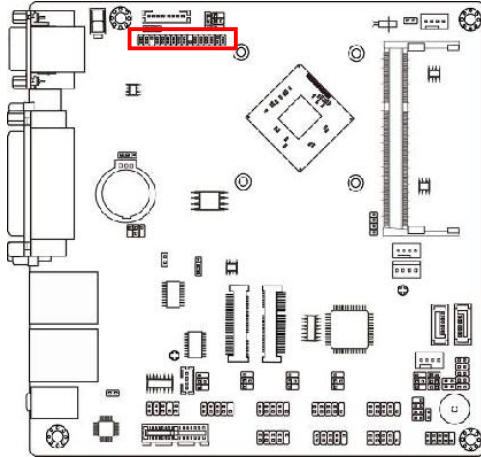

LVDS Header

| Pin NO. | Pin Define | Pin NO. | Pin Define |
|---------|--------------|---------|--------------|
| Pin 1 | LVDSB_DATAN3 | Pin 2 | LVDSB_DATAP3 |
| Pin 3 | LVDS_CLKBN | Pin 4 | LVDS_CLKBP |
| Pin 5 | LVDSB_DATAN2 | Pin 6 | LVDSB_DATAP2 |
| Pin 7 | LVDSB_DATAN1 | Pin 8 | LVDSB_DATAP1 |
| Pin 9 | LVDSB_DATAN0 | Pin 10 | LVDSB_DATAP0 |
| Pin 11 | NC | Pin 12 | NC |
| Pin 13 | N/A | Pin 14 | GND |
| Pin 15 | GND | Pin 16 | GND |
| Pin 17 | LVDSA_DATAP3 | Pin 18 | LVDSA_DATAN3 |
| Pin 19 | LVDS_CLKAP | Pin 20 | LVDS_CLKAN |
| Pin 21 | LVDSA_DATAP2 | Pin 22 | LVDSA_DATAN2 |
| Pin 23 | LVDSA_DATAP1 | Pin 24 | LVDSA_DATAN1 |
| Pin 25 | LVDSA_DATAP0 | Pin 26 | LVDSA_DATAN0 |
| Pin 27 | PVDD | Pin 28 | N/A |
| Pin 29 | PVDD | Pin 30 | PVDD |
| Pin 31 | GND | Pin 32 | GND |

Chapter 3

Introducing BIOS

Notice! The BIOS options in this manual are for reference only. Different configurations may lead to difference in BIOS screen and BIOS screens in manuals are usually the first BIOS version when the board is released and may be different from your purchased motherboard. Users are welcome to download the latest BIOS version form our official website.

The BIOS is a program located on a Flash Memory on the motherboard. This program is a bridge between motherboard and operating system. When you start the computer, the BIOS program will gain control. The BIOS first operates an auto-diagnostic test called POST (power on self test) for all the necessary hardware, it detects the entire hardware device and configures the parameters of the hardware synchronization. Only when these tasks are completed done it gives up control of the computer to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate, it is the key factor for system stability, and in ensuring that your system performance as its best.


3-1 Entering Setup

Power on the computer and by pressing immediately allows you to enter Setup. If the message disappears before your respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the “RESET” button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to

Press **** to enter Setup

3-2 BIOS Menu Screen

The following diagram show a general BIOS menu screen:

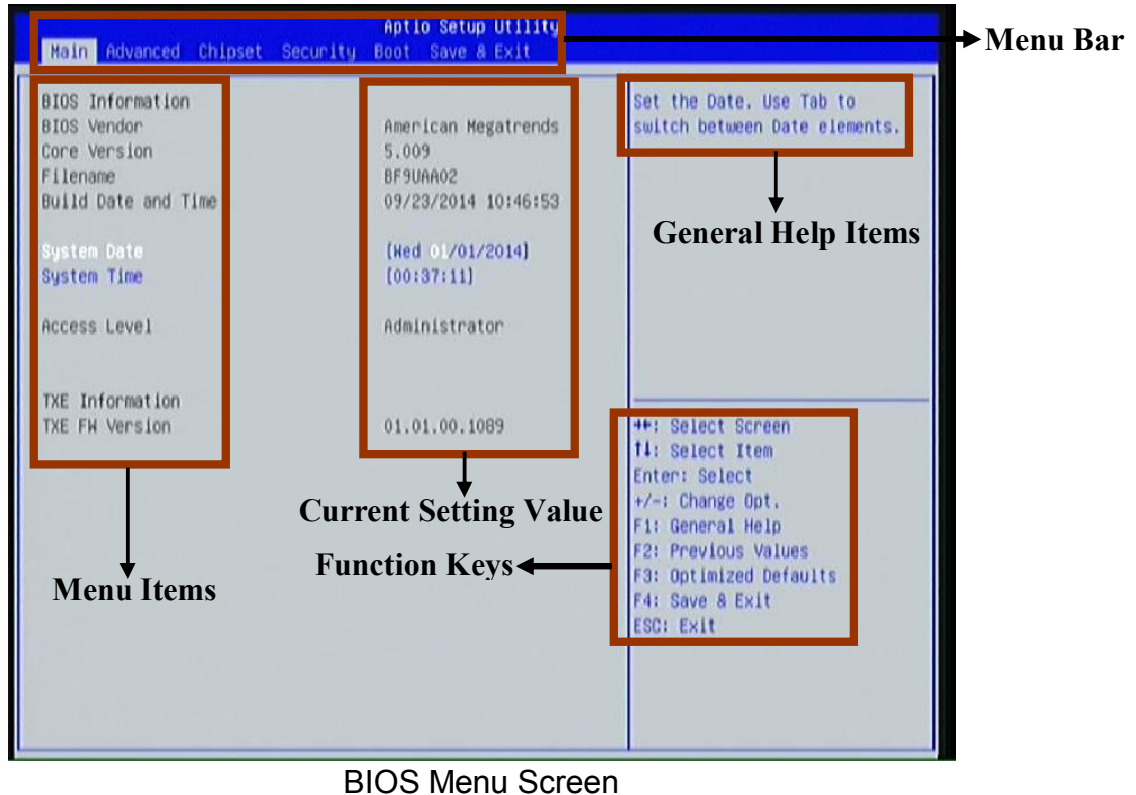

3-3 Function Keys

In the above BIOS Setup main menu of, you can see several options. We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- Press ←→ (left, right) to select screen;

-
-
- Press ↑↓ (up, down) to choose, in the main menu, the option you want to confirm or to modify.
 - Press <Enter> to select.
 - Press <+>/<-> keys when you want to modify the BIOS parameters for the active option.
 - [F1]: General help.
 - [F2]: Previous value.
 - [F3]: Optimized defaults.
 - [F4]: Save & Exit.
 - [F7]: To enter Boot Menu.
 - Press <Esc> to exit from the BIOS Setup.

3-4 Getting Help

Main Menu

The on-line description of the highlighted setup function is displayed at the top right corner the screen.

Status Page Setup Menu/Option Page Setup Menu

Press [F1] to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press <Esc>.

3-5 Menu Bars


There are six menu bars on top of BIOS screen:

| | |
|------------------------|---|
| Main | To change system basic configuration |
| Advanced | To change system advanced configuration |
| Chipset | To change chipset configuration |
| Security | Password settings |
| Boot | To change boot settings |
| Save & Exit | Save setting, loading and exit options. |

User can press the right or left arrow key on the keyboard to switch from menu bar. The selected one is highlighted.

3-6 Main Menu

Main menu screen includes some basic system information. Highlight the item and then use the <+> or <-> and numerical keyboard keys to select the value you want in each item.

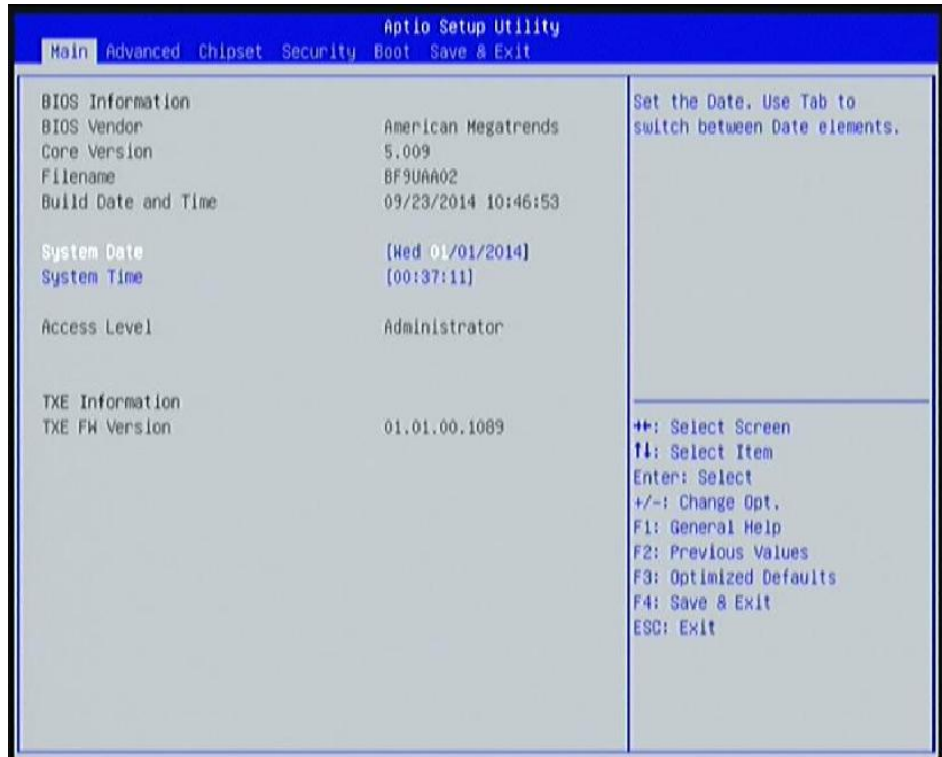


System Date

Set the date. Please use [Tab] to switch between data elements.

System Time

Set the time. Please use [Tab] to switch between time elements.

3-7 Advanced Menu

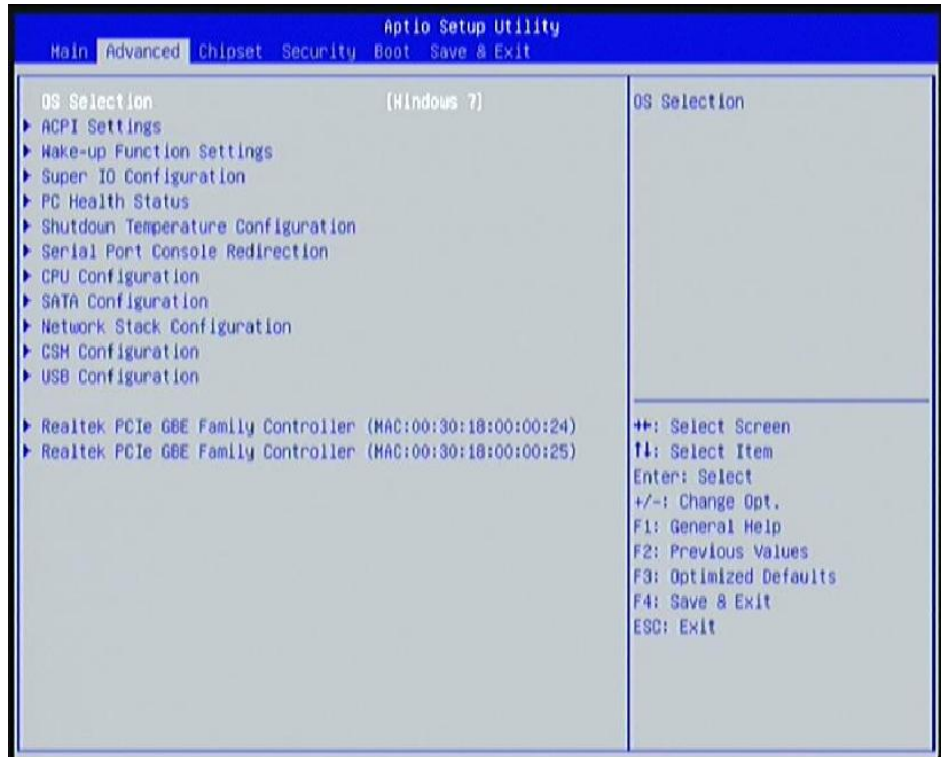

OS Selection

The optional settings: [Android]; [Windows 8.X]; [Windows 7].

***Note:** User needs to go to this item to select OS before installing OS.

If Windows Embedded standard 8, Please select [Windows 8x] and set "USB 3.0 Support" as [Disabled], "USB 2.0 Support" as [Enabled] (refer to Page 43).

▶ **ACPI Settings**

Press [Enter] to make settings for the following sub-item:

ACPI Settings

ACPI Sleep State

Use this item to select the highest ACPI sleep state the system will enter when the suspend button is pressed.

The optional settings are: [Suspend Disabled]; [S3 (Suspend to RAM)].

▶ **Wakeup Function Settings**

Press [Enter] to make settings for the following sub-items:

Wake-up System with Fixed Time

Use this item to enable or disable system wake-up on alarm event.

The optional settings: [Disabled]; [Enabled].

When set as [Enabled], system will wake on the hour/min/sec specified.

Wake-up System with Dynamic Time

Use this item to enable or disable system wake-up by RTC alarm.

The optional settings: [Disabled]; [Enabled].

When set as [Enabled], system will wake on the current time + increased minute(s).

PS2 KB/MS Wakeup

Use this item to enable or disable PS2 KB/MS wakeup from S3/S4/S5 state. This function is only supported when ERP function is disabled.

**This item is only supported when 'ERP Support' is set as [Disabled].*

USB S3/S4 Wakeup

Use this item to enable or disable USB S3/S4 wakeup. This function is only supported when ERP function is disabled.

**This item is only supported when 'ERP Support' is set as [Disabled].*

▶ **Super I/O Configuration**

Press [Enter] to make settings for the following sub-items:

Super IO Configuration

ERP Function

The optional settings: [Disabled]; [Auto].

This item should be set as **[Disabled]** if you wish to have all active wake-up functions.

▶ **Serial Port 1 Configuration**

Press [Enter] to make settings for the following items:

Serial Port 1 Configuration

Serial Port

Use this item to enable or disable serial port (COM).

Change Settings

Use this item to select an optimal setting for super IO device.

Transmission Mode Select

The optional settings are: [RS422]; [RS232]; [RS485].

Mode Speed Select

The optional settings are: [RS232/RS422/RS485=250kbps]; [RS232=1Mbps, RS422/RS485=10Mbps].

Serial Port FIFO Mode

The optional settings are: [16-Byte FIFO]; [32-Byte FIFO]; [64-Byte FIFO]; [128-Byte FIFO].

▶ **Serial Port 2 Configuration/ Serial Port 3 Configuration/ Serial Port 4 Configuration/ Serial Port 5 Configuration/ Serial Port 6 Configuration**

Press [Enter] to make settings for the following items:

Serial Port 2/3/4/5/6 Configuration

Serial Port

Use this item to enable or disable serial port (COM).

Change Settings

Use this item to select an optimal setting for super IO device.

Serial Port FIFO Mode

The optional settings are: [16-Byte FIFO]; [32-Byte FIFO]; [64-Byte FIFO]; [128-Byte FIFO].

OS Select For Serial Port

The optional settings: [Windows]; [Linux].

▶ **Parallel Port Configuration**

Press [Enter] to make settings for the following items:

Parallel Port Configuration

Parallel Port

Use this item to enable or disable parallel port (LPT/LPTE).

Change Settings

Use this item to select an optimal setting for super IO device.

Device Mode

Use this item to change the printer port mode.

The optional settings are: [STD Printer Mode]; [SPP Mode]; [EPP-1.9 and SPP Mode]; [EPP-1.7 and SPP Mode]; [ECP Mode]; [ECP and EPP 1.9 Mode]; [ECP and EPP 1.7 Mode].

WatchDog Timer

Use this item to enable or disable WatchDog Timer Control.

When set as [Enabled], the following sub-items shall appear:

WatchDog Timer Value

User can set a value in the range of [4] to [255].

WatchDog Timer Unit

The optional settings are: [Sec.]; [Min.].

WatchDog Wake-up Timer in ERP

This item support WDT wake-up while ERP function is set as [Auto].

The optional settings are: [Enabled]; [Disabled].

When set as [Enabled], the following sub-items shall appear:

WatchDog Timer Value in ERP

User can set a value in the range of [10] to [4095].

WatchDog Timer Unit

The optional settings are: [Sec.]; [Min.].

ATX Power Emulate AT Power

This item support Emulate AT power function, MB power On/Off control by power supply. Use needs to select 'AT or ATX Mode' on MB jumper at first (ATX Mode &

AT Mode Select).

Case Open Detect

This item controls detect case open function.

The optional settings are: [Enabled]; [Disabled].

PS2 KB/MS Connect

Use this item to set PS/2 connect primary device.

The optional settings are: [Keyboard First]; [Mouse First].

▶ **PC Health Status**

Press [Enter] to view current hardware health status and make further settings in 'SmartFan Configuration'.

▶ **SmartFan Configuration**

Press [Enter] to make settings for SmartFan Configuration:

SmartFan Configuration

CPUFAN / SYSFAN1Type

The optional settings are: [4-Pin]; [3-Pin].

CPUFAN / SYSFAN1/2 Smart Mode

The optional settings are: [Disabled]; [Enabled].

When set as [Enabled], the following sub-items shall appear:

CPUFAN / SYSFAN1/2 Full-Speed Temperature

Use this item to set CPUFAN/SYSFAN1/2 full speed temperature. Fan will run at full speed when above this pre-set temperature.

CPUFAN / SYSFAN1/2 Full-Speed Duty

Use this item to set CPUFAN/SYSFAN1/2 full speed duty. Fan will run at full speed when above the pre-set duty.

CPUFAN / SYSFAN1/2 Idle-Speed Temperature

Use this item to set CPUFAN/SYSFAN1/2 idle speed temperature. Fan will run at idle speed when below this temperature.

CPUFAN / SYSFAN1/2 Idle-Speed Duty

Use this item to set CPUFAN/SYSFAN1/2 idle speed duty.. Fan will run at idle speed when below the pre-set duty.

▶ **Shutdown Temperature Configuration**

Use this item to select system shutdown temperature.

The optional settings are: [Disabled]; [70°C/158°F]; [75°C/167°F]; [80°C/176°F]; [85°C/185°F].

▶ **Serial Port Consol Redirection**

Press [Enter] to make settings for serial port redirection settings:

COM1

Console Redirection

The optional settings are: [Disabled]; [Enabled].

When set as [Enabled], user can make further settings in:

▶ **Console Redirection Settings**

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

Press [Enter] to make settings for the following sub-items.

Terminal Type

The optional settings are: [VT100]; [VT100+]; [VT-UTF8]; [ANSI].

Bits per second

The optional settings are: [9600]; [19200]; [38400]; [57600]; [115200].

Data Bits

The optional settings are: [7]; [8].

Parity

The optional settings are: [None]; [Even]; [Odd]; [Mark]; [Space].

Stop Bits

The optional settings are: [1]; [2].

Flow Control

The optional settings are: [None]; [Hardware RTS/CTS].

VT-UTF8 Combo Key Support

The optional settings are: [Disabled]; [Enabled].

Recorder Mode

The optional settings are: [Disabled]; [Enabled].

Resolution 100x31

Use this item to disable or enable extended terminal resolution.

The optional settings are: [Disabled]; [Enabled].

Legacy OS Redirection Resolution

The optional settings are: [80x24]; [80x25].

Putty Keypad

The optional settings are: [VT100]; [Linux]; [XTERMR6]; [SC0]; [ESCN]; [VT400].

Redirection After BIOS POST

The optional settings are: [Always Enable]; [BootLoader].

Serial Port for Out-of-Band Management/ Windows Emergency Management Services (EMS)

Console Redirection

The optional settings are: [Enabled]; [Disabled].

When set as [Enabled], user can make further settings in 'Console Redirection Settings':

▶ Console Redirection Settings

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

Press [Enter] to make settings for the following sub-items.

Out-of-Band Mgmt Port

The default setting is [COM1].

**This item may or may not show up, depending on different configuration.*

Terminal Type

The optional settings are: [VT100]; [VT100+]; [VT-UTF8]; [ANSI].

Bits per second

The optional settings are: [9600]; [19200]; [57600]; [115200].

Flow Control

The optional settings are: [None]; [Hardware RTS/CTS]; [Software Xon/Xoff].

Data Bits

The default setting is: [8].

**This item may or may not show up, depending on different configuration.*

Parity

The default setting is: [None].

**This item may or may not show up, depending on different configuration.*

Stop Bits

The default setting is: [1].

**This item may or may not show up, depending on different configuration.*

▶ **CPU Configuration**

Press [Enter] to view current CPU configuration and make settings for the following sub-items:

Limit CPUID Maximum

The optional settings: [Disabled]; [Enabled].

This item should be set as [Disabled] for Windows XP.

Execute Disable Bit

The optional settings: [Disabled]; [Enabled].

Hardware Prefetcher

The optional settings are: [Disabled]; [Enabled].

Use this item to enable the Mid Level Cache (L2) streamer prefetcher.

Adjacent Cache Line Prefetch

The optional settings are: [Disabled]; [Enabled].

Use this item to enable prefetching of adjacent cache lines.

Intel Virtualization Technology

The optional settings: [Disabled]; [Enabled].

When set as [Enabled], a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

EIST

The optional settings: [Disabled]; [Enabled].

Use this item to enable or disable Intel SpeedStep.

CPU C6 Report

Use this item to enable or disable CPU C6 (ACPI C3) report to OS.

The optional settings: [Disabled]; [Enabled].

CPU C7 Report

Use this item to enable or disable CPU C6 (ACPI C3) report to OS.

The optional settings: [Disabled]; [Enabled].

Package C-state Limit

The optional settings: [C0]; [C1]; [C3] [C6]; [C7]; [No Limit].

▶ **SATA Configuration**

Press [Enter] to make settings for the following sub-items:

SATA Configuration

SATA Port

The optional settings are: [Enabled]; [Disabled].

SATA Mode

The optional settings are: [IDE Mode]; [AHCI Mode].

SATA Speed Support

The item is for user to set the maximum speed the SATA controller can support.

The optional settings are: [Gen1]; [Gen2].

SATA Port1

The optional settings are: [Enabled]; [Disabled].

mSATA/SATA Port2

The optional settings are: [Enabled]; [Disabled].

▶ **Network Stack Configuration**

Press [Enter] to go to 'Network Stack' screen to make further settings.

Network Stack

The optional settings are: [Enabled]; [Disabled].

When set as [Enabled], the following sub-items shall appear:

Ipv4 PXE Support

The optional settings are: [Disabled]; [Enabled].

Use this item to enable Ipv4 PXE Boot Support. When set as [Disabled], Ipv4 boot optional will not be created.

Ipv6 PXE Support

The optional settings are: [Disabled]; [Enabled].

Use this item to enable Ipv6 PXE Boot Support. When set as [Disabled], Ipv6 boot optional will not be created.

PXE boot wait time

Use this item to set wait time to press [ESC] key to abort the PXE boot.

▶ **CSM Configuration**

Press [Enter] to make settings for the following sub-items:

Option ROM execution order

Network

This item controls the execution of UEFI and legacy PXE OpROM.

The optional settings are: [Do not launch]; [UEFI only]; [Legacy only].

Storage

This item controls the execution of UEFI and Legacy Storage OpROM.

The optional settings are: [Do not launch]; [UEFI only]; [Legacy only]; [Legacy first]; [UEFI first].

Other PCI devices

This item determines OpROM execution policy for devices other than Network, storage or video.

The optional settings are: [UEFI first]; [Legacy Only].

▶ **USB Configuration**

Press [Enter] to make settings for the following sub-items:

USB Configuration

Legacy USB Support

The optional settings are: [Enabled]; [Disabled]; [Auto].

[Enabled]: To enable legacy USB support.

[Disabled]: To keep USB devices available only for EFI specification,

[Auto]: To disable legacy support if no USB devices are connected.

XHCI Hand-off

This is a workaround for Oses without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

The optional settings are: [Enabled]; [Disabled].

EHCI Hand-off

This is a workaround for Oses without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.

The optional settings are: [Disabled]; [Enabled].

USB Mass Storage Driver Support

The optional settings are: [Disabled]; [Enabled].

USB hardware delay and time-outs:

USB Transfer time-out

Use this item to set the time-out value for control, bulk, and interrupt transfers.

The optional settings are: [1 sec]; [5 sec]; [10 sec]; [20 sec].

Device reset time-out

Use this item to set USB mass storage device start unit command time-out.

The optional settings are: [10 sec]; [20 sec]; [30 sec]; [40 sec].

Device power-up delay

Use this item to set maximum time the device will take before it properly reports itself to the host controller. 'Auto' uses default value: for a root port it is 100 ms, for a hub port the delay is taken from hub descriptor.

The optional settings: [Auto]; [Manual].

Select [Manual] you can set value for the following sub-item: '**Device Power-up delay in seconds**'.


Device Power-up delay in seconds

The delay range is from [1] to [40] seconds, in one second increments.

- ▶ **Realtek PCIe GBE Family Controller (MAC:XX:XX:XX:XX...)/ Realtek PCIe GBE Family Controller (MAC:XX:XX:XX:XX...)**

Use this item to get driver information and configure gigabit ethernet device parameter.

3-8 Chipset Menu

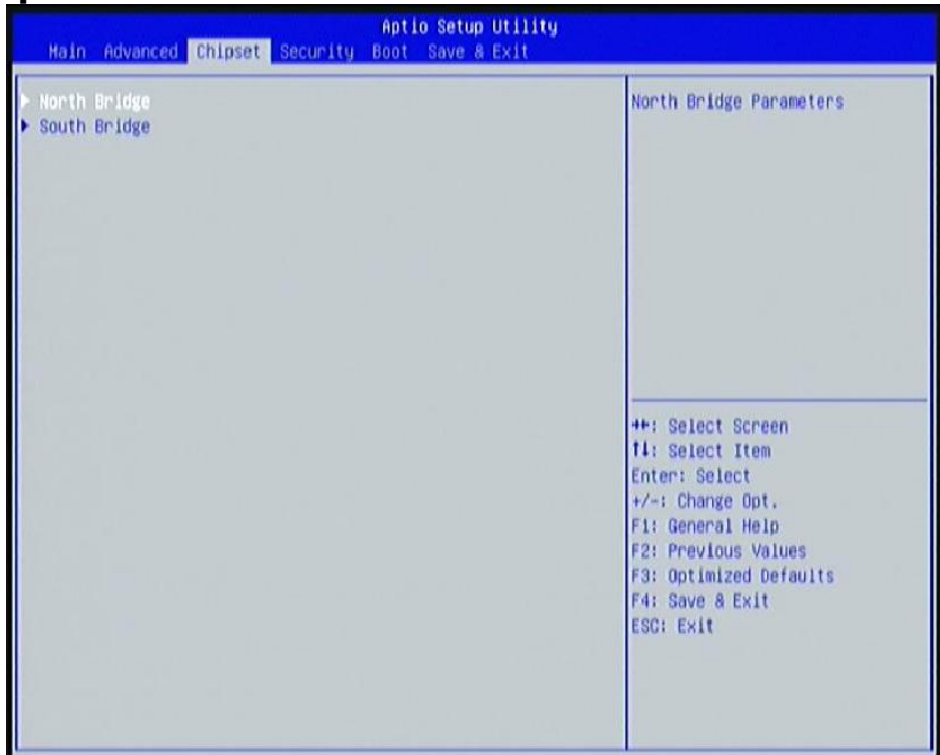

▶ North Bridge

Press [Enter] to view current using memory information and make settings for the following sub-items:

Intel IGD Configuration

PAVC

Use this item to enable or disable protected audio video control.

The optional settings are: [Disabled]; [LITE Mode];[SERPENT Mode].

DVMT Pre-Allocated

Use this item to select DVMT 5.0 pre-allocated (fixed) graphics memory size used

by the internal graphics device.

The optional settings are: [64M]; [96M]; [128M]; [160M]; [192M]; [224M]; [256M]; [268M]; [320M]; [352M]; [384M]; [416M]; [448M]; [480M]; [512M].

DVMT Total Gfx Mem

Use this item to select DVMT 5.0 total graphics memory size used by the internal graphics device.

The optional settings are: [128M]; [256M]; [MAX].

Aperture Size

The optional settings are: [128MB]; [256MB]; [512MB].

GTT Size

The optional settings are: [1MB]; [2MB].

IGD Turbo Enable

The optional settings are: [Enabled]; [Disabled].

Spread Spectrum Clock

The optional settings are: [Enabled]; [Disabled].

IGD Boot Type

Use this item to select preference display interface used when system boot.

The optional settings are: [Auto]; [CRT]; [HDMI]; [LVDS].

** **Note:** User needs to set 'Active LFP' as [Enabled], otherwise the optional setting [LVDS] will not be available.*

Active LVDS

The optional settings are: [Disabled]; [Enabled].

[Disable]: VBIOS disable LVDS.

[Enable]: VBIOS enable LVDS.

** **Note:** When set as 'Enabled', user can make further settings in 'LVDS Panel Type'.*

LVDS Panel Type

Use this item to manually select LVDS panel type.

The optional setting are: [800x 600 18bit Single]; [800x 600 24bit Single]; [1024 x 600 18bit Single]; [800x 480 18bit Single]; [1024 x 768 18bit Single]; [1024 x 768 24bit Single]; [1280 x 768 24bit Single]; [1280 x 1024 24bit Dual]; [1366 x 768 18bit

Single]; [1366 x 768 24bit Single]; [1440 x 900 18bit Dual]; [1440 x 900 24bit Dual]; [1280 x 800 18bit Single]; [1280 x 800 24bit Single]; [1680 x 1050 24bit Dual]; [1920 x 1080 24bit Dual].

▶ **South Bridge**

Press [Enter] to set south bridge parameters.

▶ **USB Configuration**

Press [Enter] to make settings for the following sub-items:

USB Configuration

USB 3.0 Support

The optional settings are: [Enabled]; [Disabled]; [Auto]; [Smart Auto].

* **Note:** *When set as [Disable], USB 2.0 Support is applicable, for user to make further settings.*

USB 3.0 Link Power Management

The optional settings are: [Enabled]; [Disabled].

* **Note:** *This item only show up when 'USB 3.0 Support' set as [Enabled], [Auto] or [Smart Auto].*

USB 2.0 Support

The optional settings are: [Auto]; [Disabled].

Audio Controller

The optional settings are: [Disabled]; [Enabled]

Azalia HDMI Codec

Use this item to enable or disable internal HDMI codec for Azalia.

The optional settings are: [Disabled]; [Enabled].

PCI-E Slot Speed

The optional settings are: [Auto]; [Gen2]; [Gen1].

MPE Controller

The optional settings are: [Enabled];[Disabled];

Speed

The optional settings are: [Auto]; [Gen2]; [Gen1].

Onboard Lan1 Controller/ Onboard Lan2 Controller


The optional settings are: [Enabled]; [Disabled].

System State after Power Failure

Use this item to select AC power state when power is re-applied after a power failure.


The optional settings are: [Always Off]; [Always On]; [Former State].

3-9 Security Menu

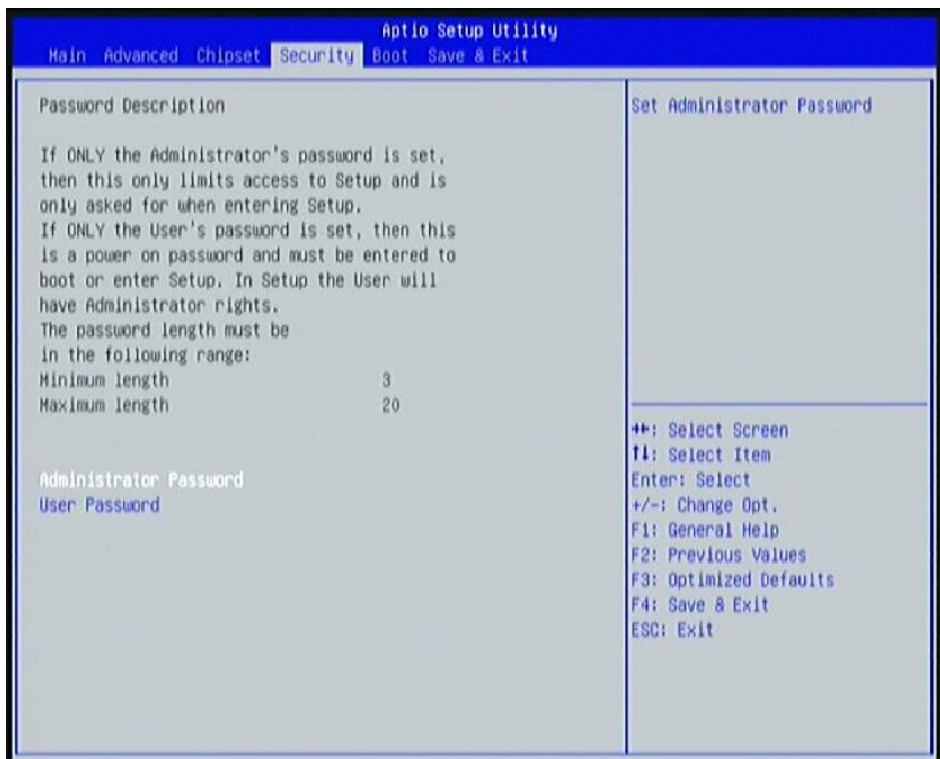

Security menu allow users to change administrator password and user password settings.

3-10 Boot Menu

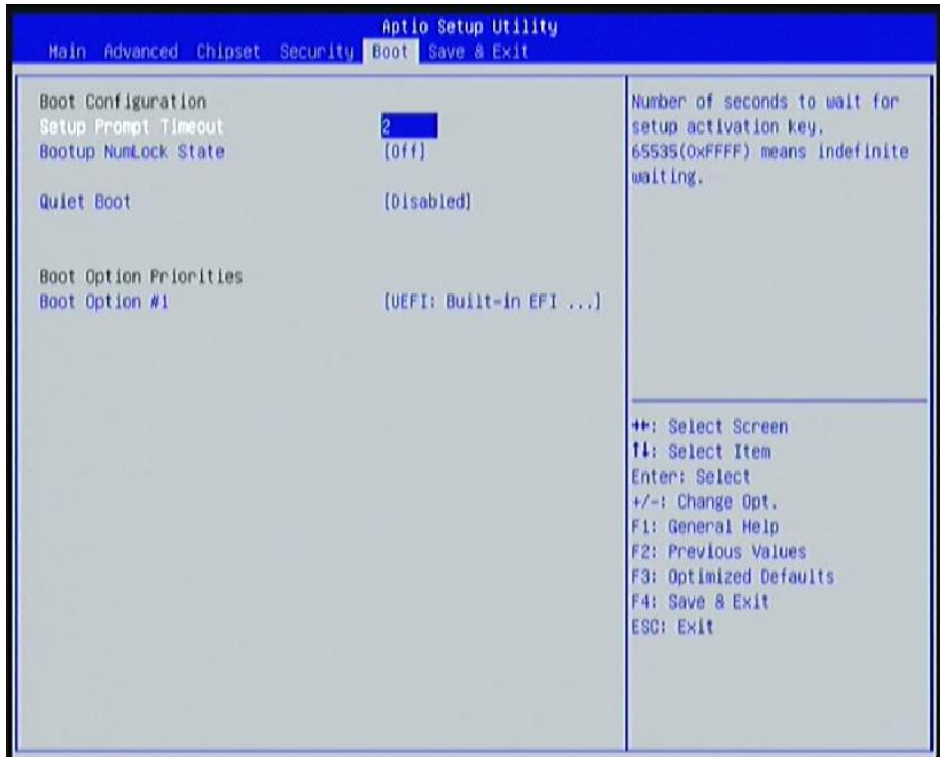

Boot Configuration

Setup Prompt Timeout

Use this item to set number of seconds to wait for setup activation key.

Bootup Numlock State

Use this item to select keyboard numlock state.

The optional settings are: [On]; [Off].

Quiet Boot


The optional settings are: [Disabled]; [Enabled].

Boot Option Priorities

Boot Option

The optional settings are: [UEFI: Built-in EFI Shell]; [Disabled].

3-11 Save & Exit Menu

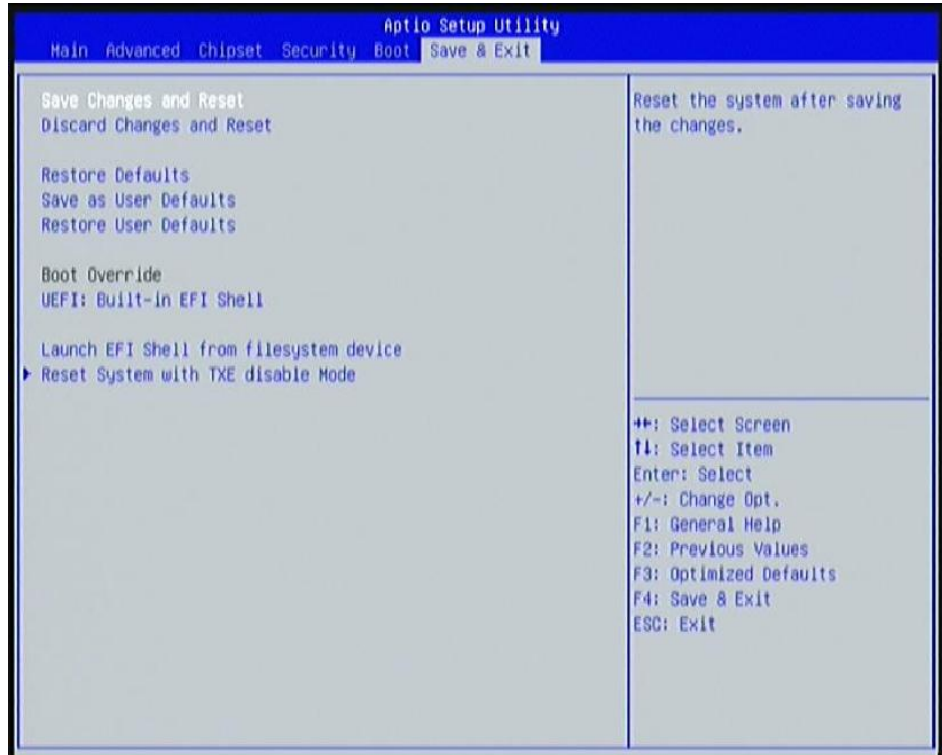

Save Changes and Reset

This item allows user to reset the system after saving the changes.

Discard Changes and Reset

This item allows user to reset the system without saving any changes.

Restore Defaults

Use this item to restore /load default values for all the setup options.

Save as User Defaults

Use this item to save the changes done so far as user defaults.

Restore User Defaults

Use this item to restore defaults to all the setup options.

Boot Override**UEFI: Built-in EFI Shell**

Launch Internal EFI shell application (shell.efi).

Launch EFI Shell from filesystem device

Use this item to launch EFI shell application (shell.efi) from one of the available filesystem device.

Reset System with TXT disable Mode

Press [Enter] for TXE to run into the temporary disable mode. Ignore if TXE Ignition FM.