

TouchKit TouchScreen Controller User Manual

**for Windows NT4
Version: 3.4.0**

CONTENT

CHAPTER 1. TOUCH PANEL CONTROLLER.....	2
1.1 CONTROLLER.....	2
1.2 SPECIFICATIONS AND FEATURES	2
CHAPTER 2. INSTALLING TOUCHKIT	4
CHAPTER 3. CONFIGURATION UTILITY AND RIGHT BUTTON EMULATOR	7
CHAPTER 4. UNINSTALLING TOUCHKIT.....	21

Chapter 1. Touch Panel Controller

This touch panel controller provides the optimal performance of analog resistive touch panels for 5 wire model. It communicates with PC system directly through RS232, PS/2 or USB connector. Users can see how superior the design is in sensitivity, accuracy and friendly operation. The touch panel driver emulates mouse left and right button functions and supports operating systems including Microsoft Windows 95/98/ME/NT4/2000/XP/XP Tablet PC Edition, Windows CE 2.12/3.0/.NET, Linux, iMac and DOS.

1.1 Controller

Interface	RS232	USB	PS/2
5-wire	Ready	Ready	Ready

Table 1. Controllers match with different interfaces

1.2 Specifications and Features

Specifications	
Power requirements	+5VDC (Maximum 100mA, typical 70mA, 50mV peak to peak maximum ripple)
Operating temperature	0 to 50
Storage Temperature	-40 to 80
Relative Humidity	95% at 60
Protocol	RS232 Model: 9600 bauds, None parity, 8 data bits and 1 stop bit USB Model: USB 1.1 Low speed PS/2 Model: PS/2 mouse
Resolution	2048 X 2048
Report rate	RS232 Model: Max. 160 points/sec USB Model: Max. 160 points/sec PS/2 Model: Max. 140 points/sec
Response time	Resistive: Max. 35 ms Capacitive: Max. 20 ms
Pin out definition	5 wire model: UL, UR, COM, LR, LL
Panel resistance	5 wire resistive model: 50 ~ 200 ohm (pin to pin on drive layer)
Regulatory Approvals	FCC-B, CE

Table 2. Specifications for **TouchKit** controller

Features	
Calibration	Fast full 4 points positioning
Compensation	Accuracy 25 points linearity compensation.
Draw Test	Position and linearity verification
Language	Support 10 languages for Windows
Advanced Feature	1. Support monitor / display rotation 2. Support multiple monitor / display 3. Support QVGA and Half-VGA function 4. Support edge compensation 5. Support constant touch
Controller Setting	1. Support multiple controllers 2. Dynamical add / remove controllers 3. Change Controller interface without reboot.
Mouse Emulator	1. Right / Left button emulation 2. Normal / Click on touch / Click on release mode 3. Auto right button
Sound Notification	1. Sound option (No Sound / Touch Down / Lift Up) 2. Frequency adjustment 3. Duration adjustment
Double Click	1. Configurable double click speed 2. Configurable double click area
OS support	1. Windows 95 / 98 / ME / NT4 / 2000 / XP / Windows XP Tablet PC Edition 2. Windows CE 2.12 / 3.0 / .NET 3. Linux (RedHat / Fedora / Mandrake / Suse / YellowDog) 4. iMac. OS9.x / OSX 5. MS-DOS: Support display resolution: 320x200, 640x200, 640x350, 640x480, 800x600, 1024x768 and 1280x1024
COM port support	1. Support COM 1 ~ COM 256 for Windows and Linux 2. Support COM 1 ~ COM 8 for DOS

Table 3. Features for **TouchKit** software

Chapter 2. Installing TouchKit

TouchKit is software, which contains drivers of the touch panel controllers for the specified communication connectors, RS232, PS/2 and USB, and the other two utilities:

- **Touch Tray support**


This utility is for emulating the right and left buttons of the mouse. Users can toggle between right or left mouse buttons through this utility.

- **Configuration support**


The calibration and draw test of touch panel are done by this utility. Users can add or remove new RS-232, PS/2 or USB touch panel devices.

Follow these steps to install **TouchKit**.

1. Put the **TouchKit** CD to CD-ROM.
2. Change directory to **WinNT4**
3. Double click the **Setup.exe**, then windows starts to run the installation program.
4. Just click [**Next >**] button to continue installation.

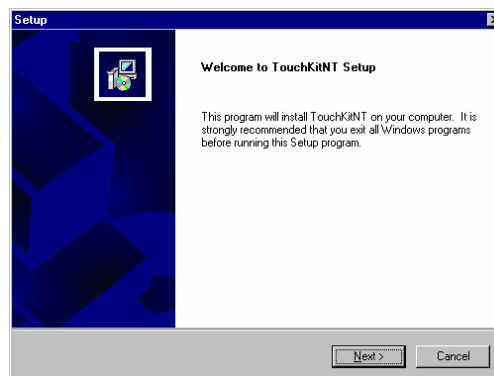


5. Then check the check box if PS/2 touch controller is to be installed. The default is unchecked. Then Press **[Next >]** to continue installation.

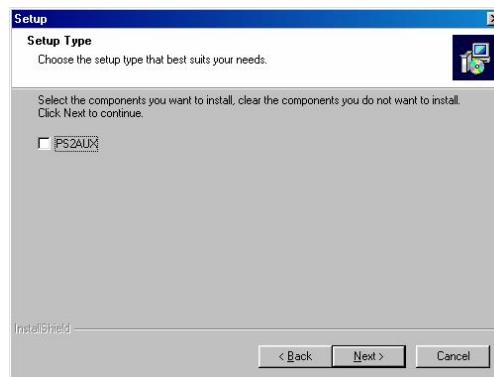


System will give you a warning, if users check the PS2AUX check box,


6. Select the appropriate folder where set-up files will be installed. Then Press **[Next >]** to continue installation.

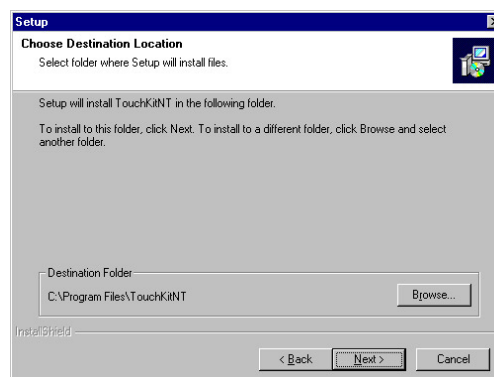

7. Then type in the name of program folder for **TouchKit** or press **[Next >]** to continue. There will be a default name for it.

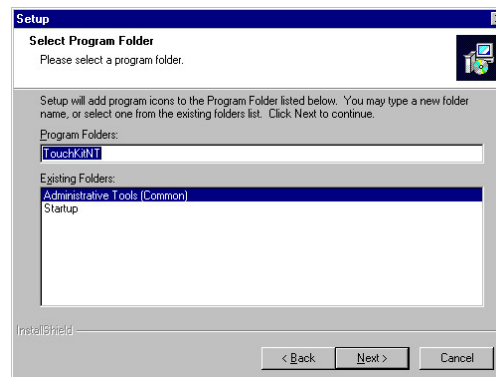


During driver installation, the setup program will scan COM port for RS232 **Touchkit** controller. Once the controller was scanned, the setup program will display a dialog as

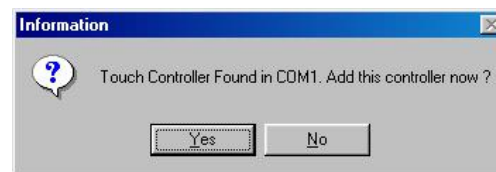


Click Yes to add the controller on the specified COM port automatically.

8. Windows will copy files to the disk and the setup is complete. It will request re-booting the computer. Press **[Yes >]** to re-boot immediately or **[No >]** to re-boot later. The installation will not be finished until system is re-booted.

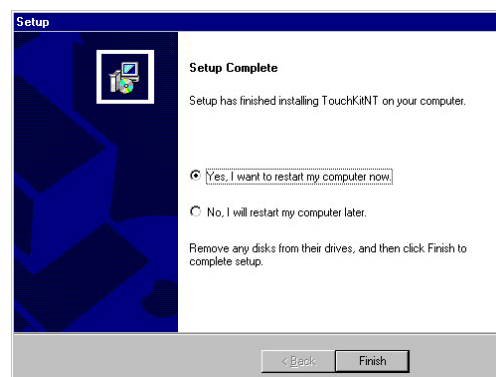


Chapter 3. Configuration Utility and Right Button Emulator

There are five property pages in **TouchKit** utility, they are **General**, **Setting**, **Edge coefficient**, **Monitors** and **About**. Each property page contains different functions for users to do the adjustments. Therefore, users can easily manage all the **TouchKit** controllers through **TouchKit** Utility.

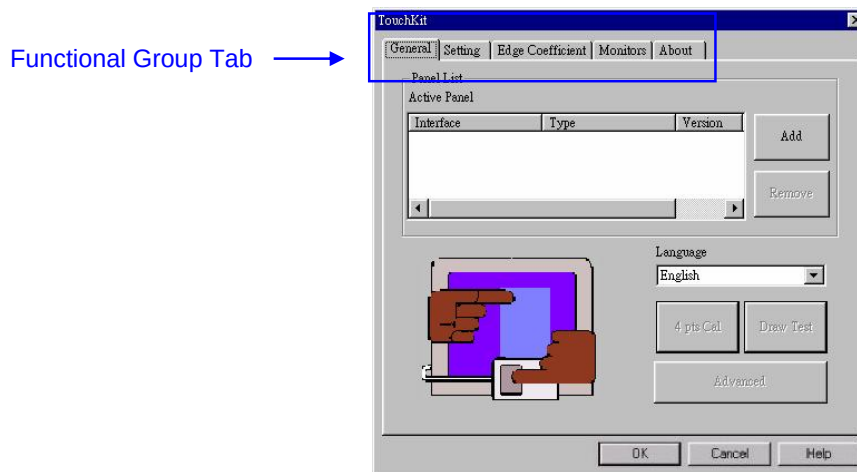


General

General property page contains the functions of **language selection**, **devices add/remove**, **4 points calibration**, **Draw test** and **advanced**.

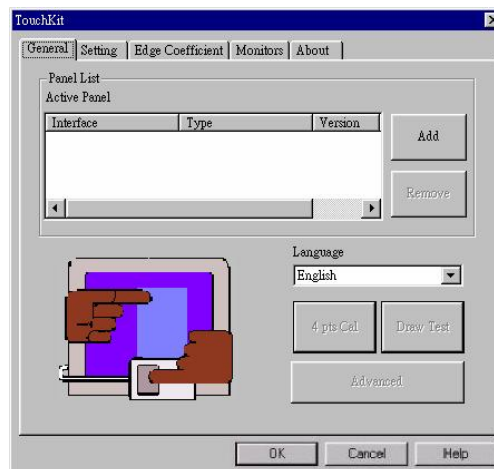

<Language>

TouchKit supports multi-language user interface. Users should select native language that is compatible to operation system support. For example, if the operation system is a traditional Chinese version, users should see the normal display words under the traditional Chinese and English mode. There are ten different languages, **English, Traditional Chinese, Simplified Chinese, French, Spanish, German, Japanese, Italian, Korean** and **Dutch** supported in this feature of **TouchKit**.

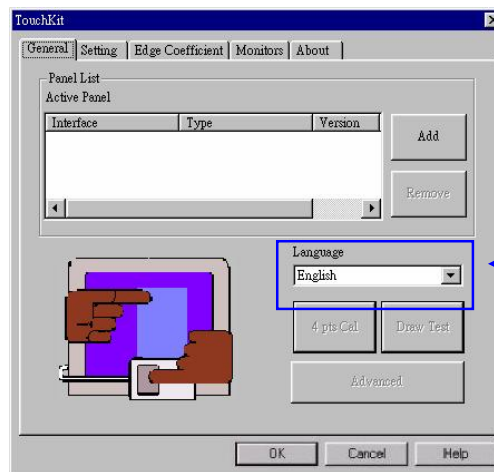


Note to select the compatible language first.


Select the compatible language first or users may not see the normal display of each button.

<Add> / <Remove>


Please make sure the touch panel devices (including its controller) are equipped well, then click **[Add]** button to add all of those RS-232 and PS/2 devices to the **Panel List** dialogue box.

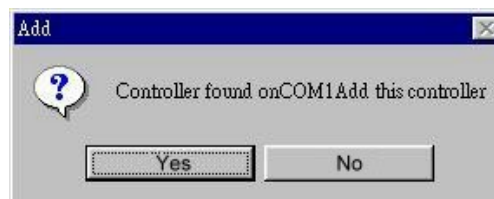

There is one devices found. Press **[Yes]** to continue.

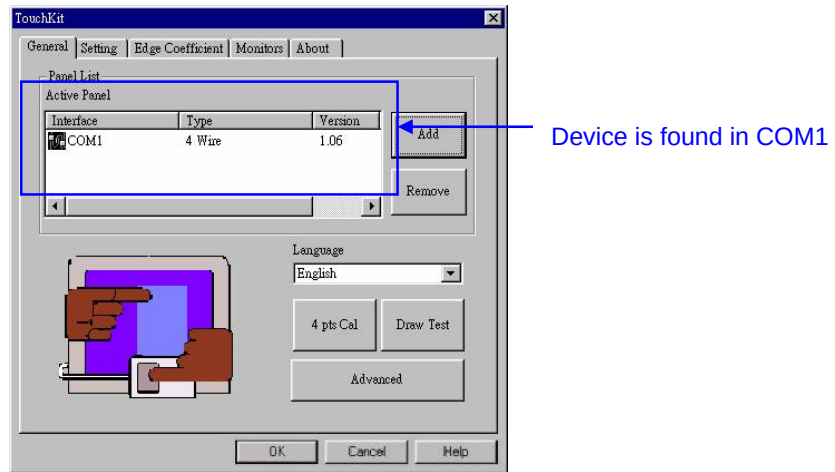

The controller is displayed on the Panel List box. Users can get the information of interface, type, firmware version and baud rate for each controller. Select an interface to activate the panel, and remember to do the calibration before starting to use touch panel.

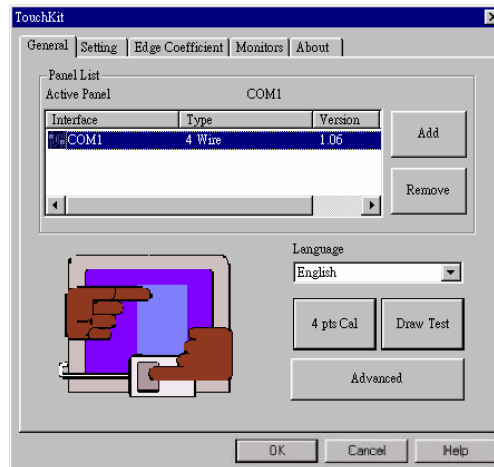

There are three buttons, **[4pts Cal]** **[Draw Test]** **[Advanced]**, at the lower section of the **General** property page.

<4pts Cal>


Calibrate the 4 point locations on screen with the panel. Press **[4 pts Cal]**, screen displays as follows.



Touch the blinking symbol on panel until it beeps or stops blinking.

<Draw Test>

Test the drawing position related to the display screen on panel.
Click on the **[Draw Test]** button. There will be a squared blue display showing.

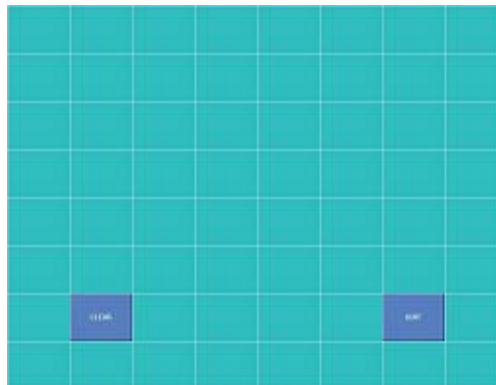


In the drawing test window, users can click **[Clear]** button to clear the window. Also, users can click **[Quit]** or press mouse right button to quit from the drawing test.


In the drawing test window, users can verify the panel linearity, calibration capability, and drawing line quality.

<Advanced>

Touchkit provides more accurate 25 points calibration for the touch sensor. In addition, **Touchkit** provides controller settings for capacitive touch sensor. If the capacitive controller is selected, a capacitive setting property page appears on the advanced sheet. In general case, it does not need to do 25 points calibration.

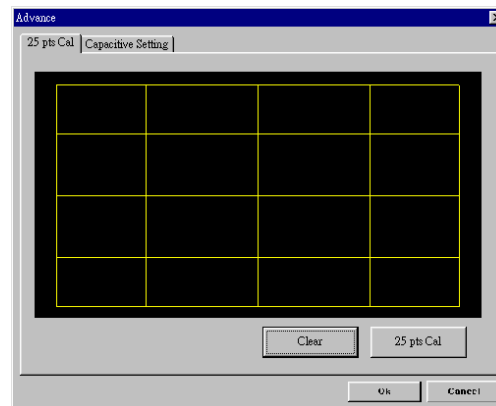

Press **[Clear]** to clear the previous calibration records.

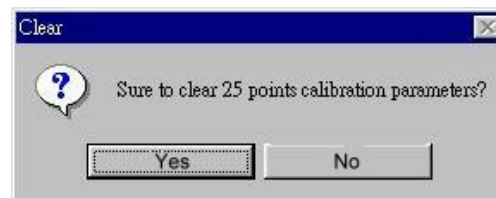

Press **[Yes]** to clear previous records. The record will become default record.


Press **[25ptCal]** to do 25 points calibration. Calibrate 25 point locations on screen with the panel.




Touch the blinking symbol on panel until it beeps or stops blinking.

After the calibration, the new record will overwrite the old one.

If the selected controller is capacitive type, an extra property page for capacitive setting adjustments will be available:

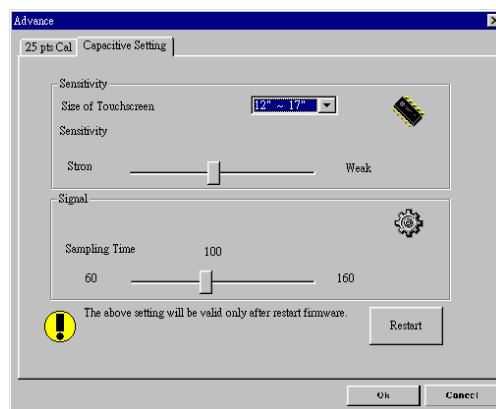

Please select property size of capacitive screen first, and press **[Restart]**

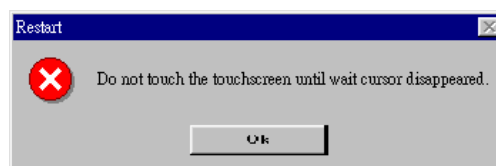


The capacitive controller will restart, and do not touch the screen before the warning message disappears

Warning: Do not adjust the sensitive and sampling time without RD help

Setting

There are three functional groups in **Setting** property page, **sound option**, **Mouse Mode**, and **Double Click Adjustment**.

The **Sound** options provide users the click feedback while touching the panel. Select preferred option first.

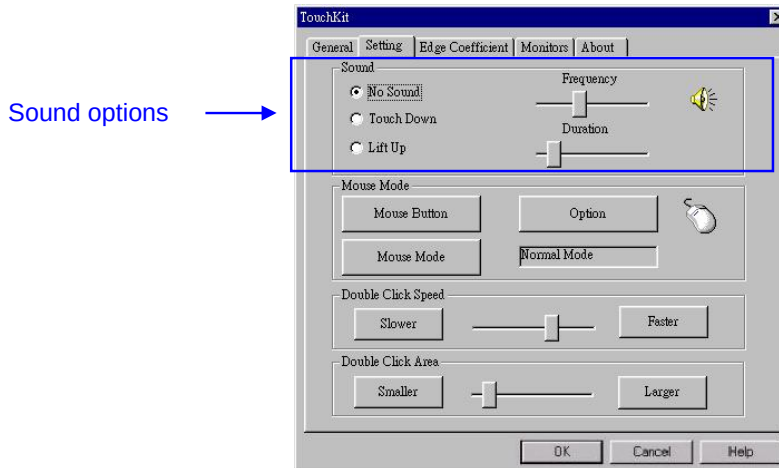

<No Sound>

Users could choose to make no sound while using the touch panel.

<Touch Down>

The system will make a sound while touching the panel.

<Lift Up>

The system will not make any sound until finger leaves the touch panel.


<Frequency>

Sound frequency, drag the cursor from left<low> to right<high>.

<Duration>

Sound duration, drag the cursor from left<short> to right<long>.


The **Mouse Mode** provides users different operating options. They are as follows:

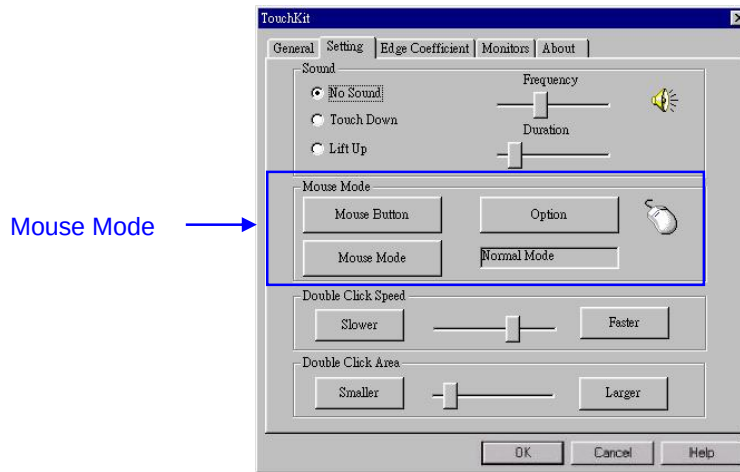

<Mouse Button>

Click it to **show / hide Touch Tray** on the right bottom corner of the desktop. The touch panel system starts with the computer booting, and a mouse icon shows in the taskbar.

Users can choose show or hide **Touch Tray** from the mouse icon in the taskbar. Just click the mouse icon to choose show or hide.

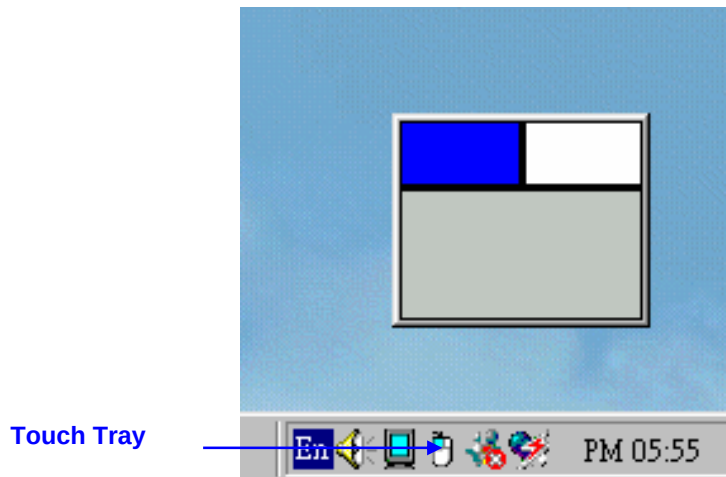

Change **right / left** button by clicking the upper small rectangular box of **Touch Tray**. Blue area expresses what button has been selected.

<Mouse Mode>

There are three kinds of mouse modes users could choose,

[Normal Mode]

It provides all the mouse functions, including the dragging function.

[Click on Touch]


Click action is executed as soon as users touch the panel.

[Click on Release]

Click action will not be executed until finger leaves the panel.

<Option>

Touchkit provides an option for advanced Mouse Emulation settings. When the **Option** button is pressed, a setting property sheet will pop up. **Support Constant Touch** and **Support Auto Right Button** check boxes are shown in the property sheet to **enable / disable Constant touch** and **Auto right button** support.

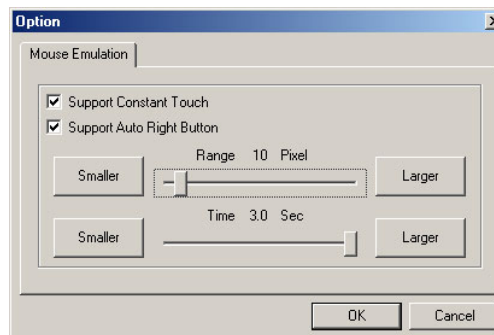

[Constant Touch]

Enable **Constant Touch** to force driver to stop reporting touch point when the movement is within the range which users can adjust. Therefore, the user can see a stabilized cursor instead of a chattering cursor when user touches the same point.


[Auto Right Button]

Enable **Auto Right Button** to force driver to report a **right click mouse event** to OS when users do a continuing touch till time out. Users no longer need to touch the **right button** in the **Touchtray** to activate a **right click**.

This feature makes **right clicking** easy with the touchscreen.


<Cursor Visibility>

Cursor visibility function provides users the ability to hide the cursor in the display. Please go to **Start / Control Panel / Mouse / Pointers / Scheme**, and choose **TouchKit Hide Cursor**. Press **[Apply]** to make setting change, and press **[OK]** to escape the property page.

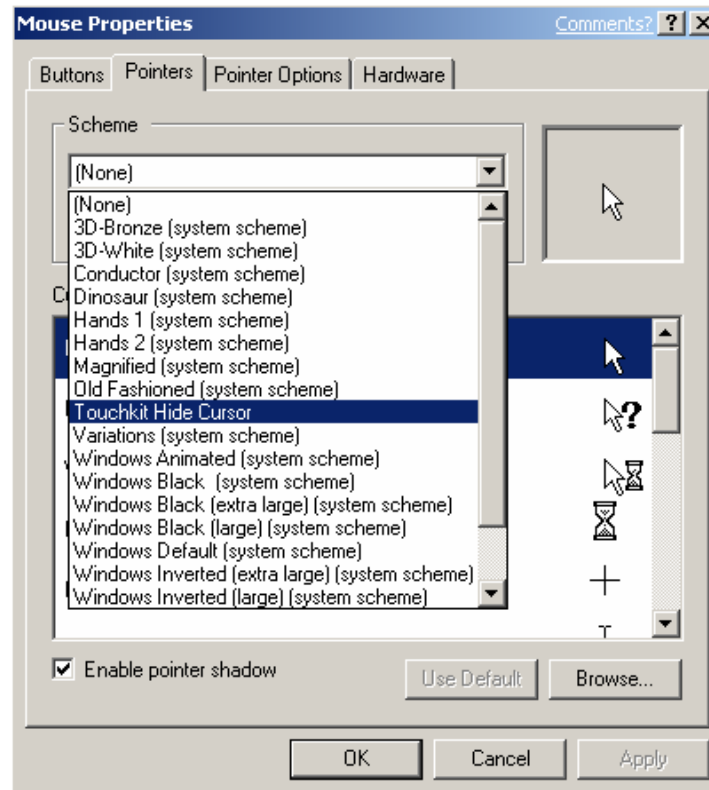

If users want to cancel the function of TouchKit Hide Cursor, do the steps again and choose the other scheme.

The **Double Click adjustment** allows users to set up the tolerance while double clicking. They are as follows:

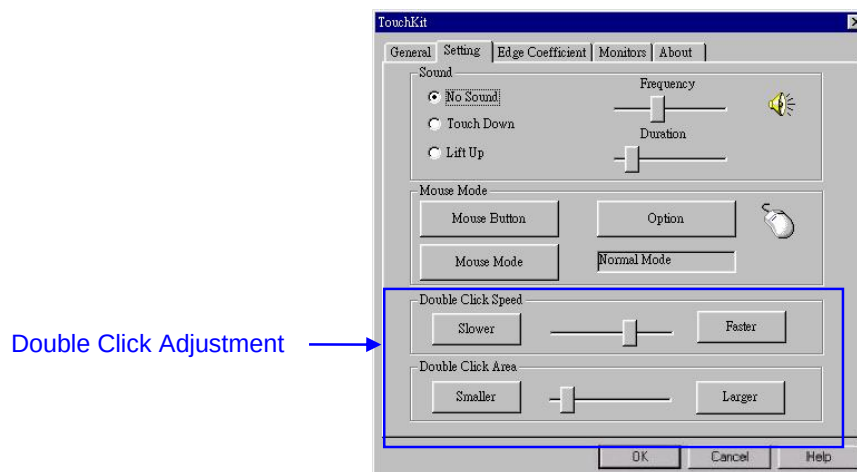

<Double Click Speed>


Double Click Speed is the double click response time for the Windows system. Users can adjust the proper double click speed for easy double clicking by the touch panel.

<Double Click Area>

Each touch screen has its own touch tolerance. So if users set the Double Click Area to **<Smaller>**, the panel will be very sensitive about micro-movement while on a fixed point. If users set it to **<Larger>**, it tolerates the larger touch point movement while on a fixed position.

Edge Coefficient

Edge Coefficient property page contains the functions of **Edge Compensation for Top, Bottom, Left, Right, X Axis and Y Axis**.

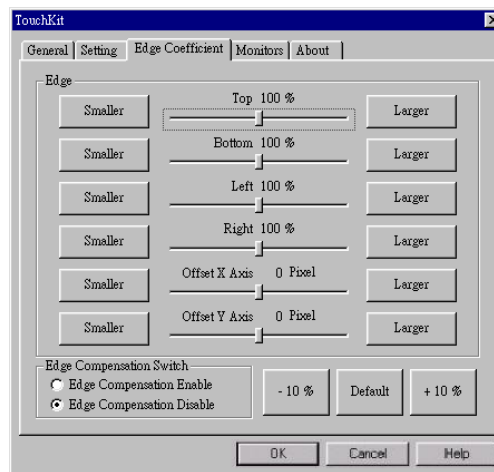

In some cases, if it is difficult to touch items at the edges of the touch panel, users can set adjustment to reach the edges of the screen image.

<Top>

If user sets the Edge to **<Smaller>**, **TouchKit** will reduce the horizontal position of the top edge. If user sets the Edge to **<Larger>**, **TouchKit** will extend the horizontal position of the top edge.

<Bottom>

If user sets the Edge to **<Smaller>**, **TouchKit** will reduce the horizontal position of the bottom edge. If user sets the Edge to **<Larger>**, **TouchKit** will extend the horizontal position of the bottom edge.

<Left>

If user sets the Edge to **<Smaller>**, **TouchKit** will reduce the vertical position of the left edge. If user sets the Edge to **<Larger>**, **TouchKit** will extend the vertical position of the left edge.

<Right>

If user sets the Edge to **<Smaller>**, **TouchKit** will reduce the vertical position of the right edge. If user sets the Edge to **<Larger>**, **TouchKit** will extend the vertical position of the right edge.


In some cases, cursor will be behind the finger when users touch the panel. If users can not see the cursor when they touch down on the panel, users can set X Axis or Y Axis to move the cursor.

<Offset X Axis>

If users set the Offset X Axis to **<Smaller>**, cursor will be moved a pixel of X Axis to left. If users set the Offset X Axis to **<Larger>**, cursor will be moved a pixel of X Axis to right.

<Offset Y Axis>

If users set the Offset Y Axis to **<Smaller>**, cursor will be moved a pixel of Y Axis to top. If users set the Offset Y Axis to **<Larger>**, cursor will be moved a pixel of Y Axis to bottom.

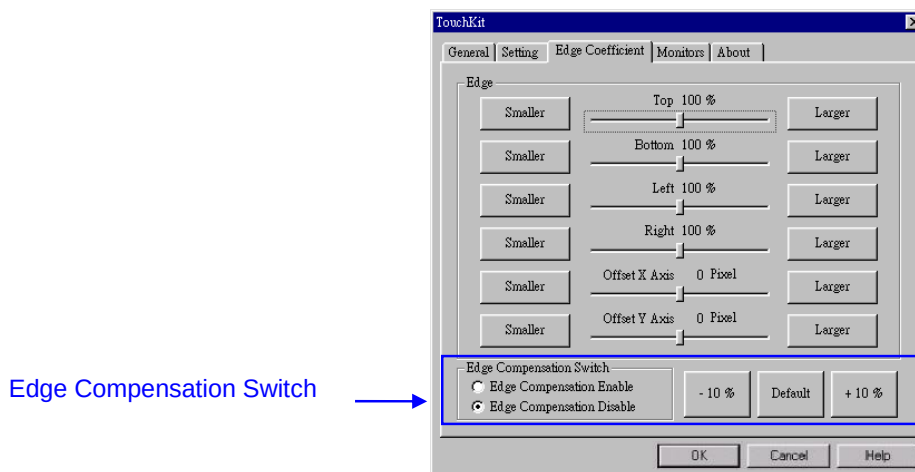

<Edge Compensation Switch>


Users can choose Edge compensation **Enable / Disable** from left bottom corner of **Touchkit** Utility.

Using **+10%** and **-10%** button to adjust the smaller or larger of the edge. If users press **+10%** button, the top, bottom, left and right edges will extend 10% of orientation to touch screen, and cursor will be moved 10 pixel of X and Y Axis to right and top. If users press **-10%** button, the top, bottom, left and right edges will contract 10% of orientation to touch screen, and cursor will be moved 10 pixel of X and Y Axis to left and bottom.

If users want the value back to the default value, choose **Default** button.

Monitors

There are three functions in this property page, they are **Multiple Monitors**, **Split Monitor** and **One Point Calibration**.

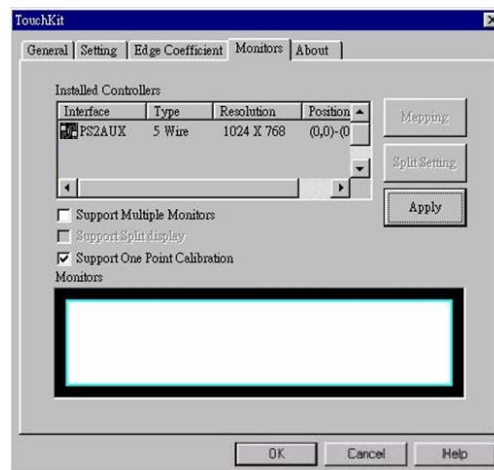


<Multiple Monitors>

This function is not supported for WindowsNT4.

<Split Monitors>

To use the Split Monitor function, users need to select which controller you want to launch this function, then check the Multiple Monitors box and Split Monitor at the same time as showing as the follow picture. Press the **[Split Setting]** button to set up the activate area.

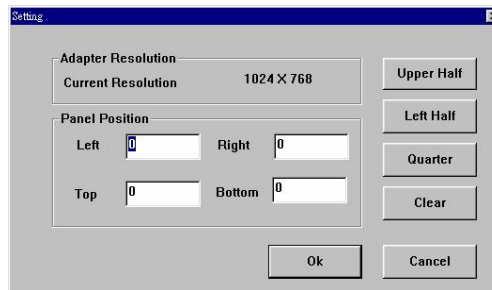


It shows the current resolution of the display and users can set up the activate area by inputting the value by yourself or use the default button [**Upper Half**], [**Left Half**] or [**Quarter**]. The default value of panel resolution should be full screen as Left: **0** , Right: **0**, Top: **0** and Bottom: **0**.

<One Point Calibration>

Touchkit utility provides a fast tool to identify the touchscreen orientation when the monitor display was rotated by 90 degrees. Enable this **One Point Calibration** feature, *Touchtray* will pop up this **One Point Calibration** tool for users to identify and correct the touchscreen / monitor orientation whenever the monitors is rotated by 90 degrees. Disabling this feature, *Touchtray* does not pop up this **One Point Calibration** tool. Then, the user has to do four point calibration to correct the orientation whenever the monitor is rotated.

About


Information about **TouchKit**.

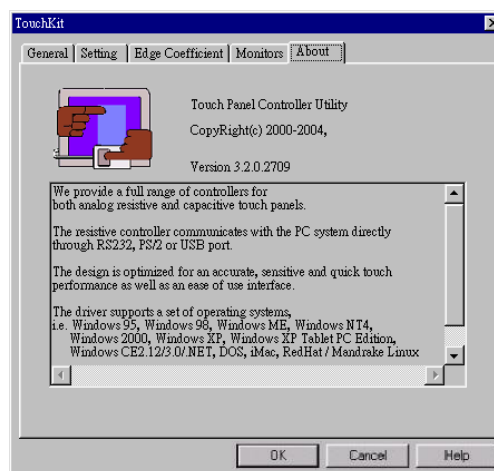

Chapter 4. Uninstalling TouchKit

Follow these steps to uninstall **TouchKit**.

1. Go to **Start / Programs / TouchKit / Uninstall**, and execute it.

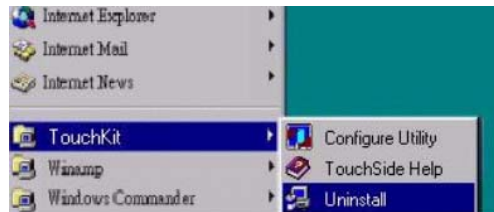


2. **TouchKit** setup dialog appears, and prepares to uninstall.



3. Confirm dialog, press **[OK]** to start un-installation; **[Cancel]** to cancel.



4. Start to uninstall **TouchKit**.

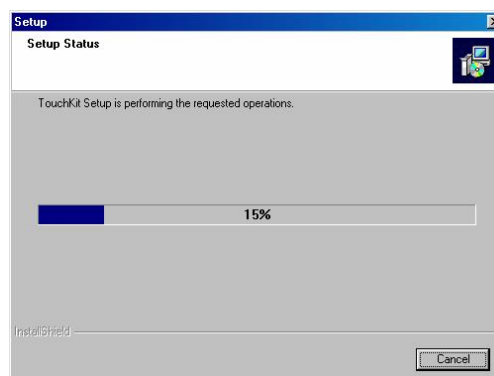

If users do not want to uninstall **TouchKit** at this moment, press **[Cancel]** to terminate the uninstall process.

5. **TouchKit** will not be removed until system is re-booted. Press **[Yes]** to re-boot immediately or **[No]** to re-boot later.

