

ROKSAN

Caspian

M SERIES - 1

Mono Power Amplifier
USER MANUAL

ROKSAN AUDIO LIMITED

6 NORTHFIELD INDUSTRIAL ESTATE
BERESFORD AVENUE ALPERTON
MIDDLESEX HA0 1NW ENGLAND

TEL. +44 (0)208 900 6801
+44 (0)208 900 6802
FAX. +44 (0)208 900 0734

www.roksan.co.uk
email info@roksan.co.uk

Congratulations on your purchase of the ROKSAN Caspian Mono Power Amplifier. This Power Amplifier is designed and manufactured to the highest specification and rigorously tested to offer you many years of trouble-free pleasure.

Your Caspian Mono Power Amplifier is at the heart of your hi-fi system. Correct installation, set-up and operation of this Power Amplifier and its partnering equipment will have a profound influence on the sonic performance of the entire system.

Please read the contents of this manual thoroughly. It will help you to understand your hi-fi equipment better and enhance your listening pleasure.

This manual is divided into the following sections:

- Safety Instructions (*Accompanying card*)
- Introduction
- Cautions
- Installation
- Setup
- Operation
- Troubleshooting
- Guarantee
- Specifications
- Notes

UNPACKING

Included in the packing of your Caspian Mono Power Amplifier you will find:

- One mains lead fitted with the correct mains power plug for your country
- One information pack and warranty card

After removing these items please retain **all** packing materials. Correct packing is necessary for safe transportation of your Caspian Power Amplifier.

MAINTENANCE

After disconnecting the Power Amplifier from the mains supply, the cabinet and front panel may be cleaned with a lightly dampened soft cloth or chamois leather. **Avoid using abrasives or solvents.**

EU DIRECTIVES

This product is designed to comply with the legal provisions of EU Directives 89/336/EC and 72/23/EC. The standards which have been applied are those which were in force at the time of the introduction of this product.

This product bears the CE mark.



This product is compliant to EN 60065.

This product must be earthed. Please ensure that other equipment connected to it is earthed according to the manufacturer's instructions.

AC MAINS SUPPLY

Your Caspian Power Amplifier is set to operate from a fixed supply voltage which is marked on a label next to the mains input plug. Before connecting the mains lead please check that your mains supply corresponds to this label as below:

230V Products	Voltage Range: 220V – 240V
115V Products	Voltage Range: 100V – 120V
100V Products	Voltage Range: 90V – 110V

The mains lead supplied with this product has an IEC mains socket which plugs into the IEC connector on the unit's rear panel. The other end is normally attached to the appropriate mains plug for your country. In the UK this is the standard UK13A plug.

This plug should ordinarily not be removed from the lead. If you *do* remove it, please dispose of it safely so that it cannot be plugged into a mains socket whilst in a potentially dangerous condition. We suggest that you obtain from your dealer a complete replacement lead.

Should you move to another area where either the mains voltage or the mains plugs are different from those as supplied with your Power Amplifier, please contact the appointed ROKSAN distributor for assistance.

Please observe correct mains polarity at all times.

The Power Amplifier mains fuses are located on the rear panel next to the IEC mains connector. These must only be replaced by the fuse type and rating as described on the fuse rating label on the rear panel of the unit.

If the equipment is likely to be unused for some time, unplug it from the mains supply.

GENERAL CAUTIONS**FCC WARNING**

This equipment may generate or use Radio Frequency energy. The user may lose the right to operate this equipment if unauthorised modifications are made.

INTERFERENCE

Properly installed, this unit should not cause harmful interference to radio communications, There is, however, no guarantee that such interference will not occur in a specific installation. If interference arises (which you can determine by switching the unit off and on) you could try to remedy this problem by the following:

- Re-orient or re-locate the receiving antenna
- Increase the distance between the Power Amplifier and receiver
- Connect the unit to a different mains circuit from that of the receiver
- Consult your ROKSAN appointed dealer or an experienced Radio/TV technician for help and advice


LOCATION

Your Caspian Power Amplifier should be located in a well ventilated area and kept away from sources of heat, dust, humidity and direct sunlight.

The Power Amplifier may be positioned either as a free standing unit or alongside another audio/video product. Never place the Power Amplifier on carpet or any surface likely to hinder normal ventilation. Never allow liquids or other objects to fall into the unit.


This unit contains no user serviceable parts. **Do Not remove any panels or attempt to service it yourself. Unauthorised servicing will void the warranty.**

ROKSAN Caspian Mono Power Amplifier- Front Panel View

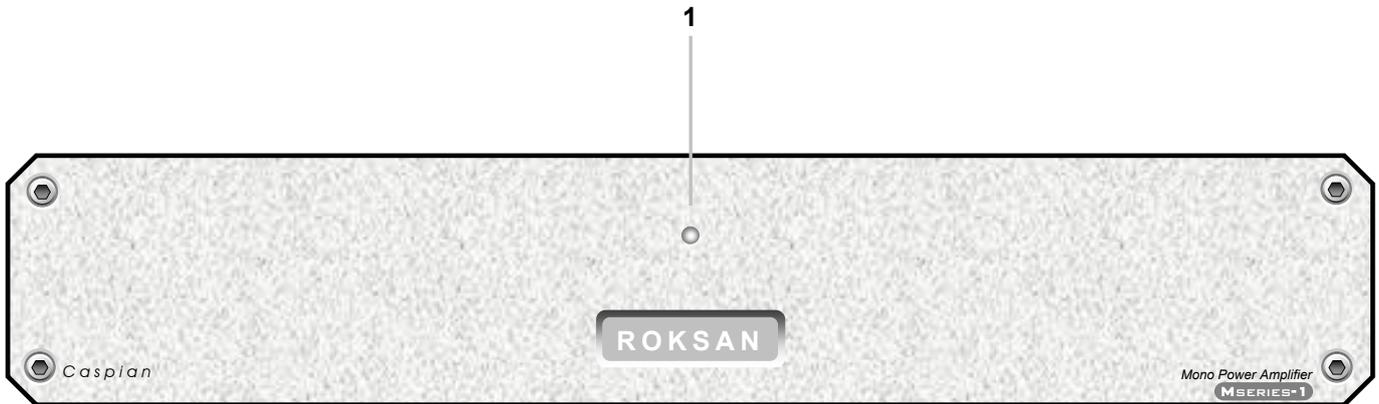

1. Mode Indicator

ROKSAN Caspian Mono Power Amplifier - Rear Panel View

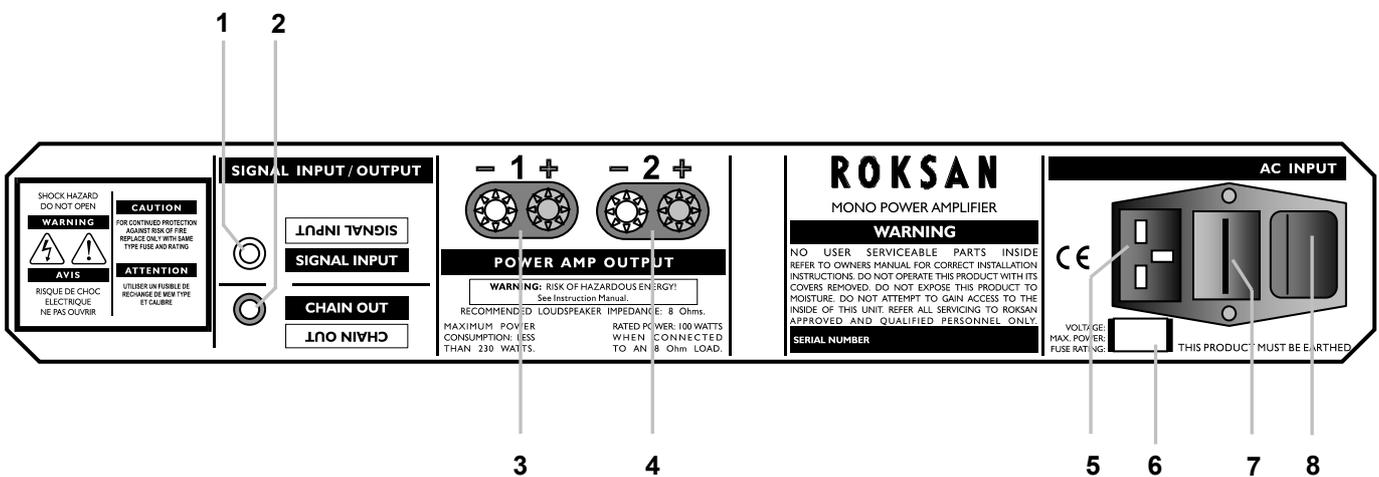

1. Power Amp Input
2. Chain Output
3. Speaker Output (1st Set)
4. Speaker Output (2nd Set)
5. AC Mains Input
6. Voltage & Fuse Label
7. AC Mains Fuseholder
8. AC Mains Power Switch

CONNECTING MAINS POWER

Please refer to rear panel view on Page 4. The moulded IEC connector of the supplied mains lead should be plugged into the socket (5) on the rear of the unit first and then plugged into the mains supply. The Mains power switch (8) is on the rear panel of the Power Amplifier. This switch is normally left on. If the unit is likely to be unattended for a long period, switch it off and unplug the mains lead from the wall.

SIGNAL CONNECTIONS

Signal Input connections:

Input socket is high quality gold plated RCA Phono Socket and should be connected to corresponding preamplifier output.

Connecting a Preamplifier:

Connect the Preamplifier Output to the INPUT SIGNAL Sockets (1) on the rear panel of the Caspian Mono Power Amplifier.

Chain Connecting Multiple Amplifiers:

If the preamplifier used does not have sufficient number of pre outs, connect the CHAIN OUT Socket (2) on the rear panel of the first Caspian Power Amplifier to the INPUT SIGNAL Sockets of the second unit, and so on. Several amplifiers can operate together in this way.

Bi-amplifying with the Caspian Dual Mono Preamplifier:

Connect the PRE 1 OUT Sockets on the rear panel of the Caspian PreAmplifier to the INPUT SIGNAL Sockets (1) of the first pair of Caspian Mono Amplifiers and the PRE 2 OUT Sockets to the INPUT SIGNAL Sockets (1) of the second pair of Caspian Mono Amplifiers (See diagram on Page 6).

IMPORTANT NOTE: For optimum performance it is recommended to use high quality inter-connect cables such as ROKSAN HDC-02A high definition analogue Cable.

LOUDSPEAKER CONNECTIONS

The loudspeakers are connected to the amplifier via the rear panel binding posts (3) and/or (4). There are two basic types of cable –


- **Figure 8 cable** has two insulated conductors which lie parallel, either side by side, or spaced by insulation.
- **Overall sheathed cable** has both conductors insulated and enclosed in an overall plastic sheath.

Carefully remove any overall sheath or split the figure 8 cable to a depth of about 75mm (3").

Carefully strip the insulation on each wire to a depth of about 12mm (1/2") exposing the bare core. If the conductor is stranded, twist the strands together on each conductor. Unscrew the binding post. There is a cross-hole about 5mm from the panel end of the binding post. Insert the bared conductor through the hole and tighten the binding post securely making sure that there are no loose strands or bare ends protruding through the post.


Carefully observe polarity ensuring that the RED (+) speaker terminal is connected to the RED (+) amplifier terminal and the BLACK (-) speaker terminal to the BLACK (-) amplifier terminal.

When both left and right channels are connected to their respective speakers the amplifiers are ready for use.

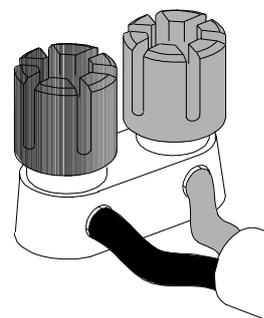

IMPORTANT NOTE: For optimum performance it is recommended to use high quality cables such as ROKSAN HDC-02S high definition Loudspeaker Cable. Many speaker cables such as the ROKSAN HDC-02S are directional. Please observe this directionality. DO NOT use speaker cable with conductor size less than 16 AWG (1.6mm Diameter). The Binding posts accept conductor sizes up to 12 AWG.

MULTI-WIRING AND MULTI-AMPING

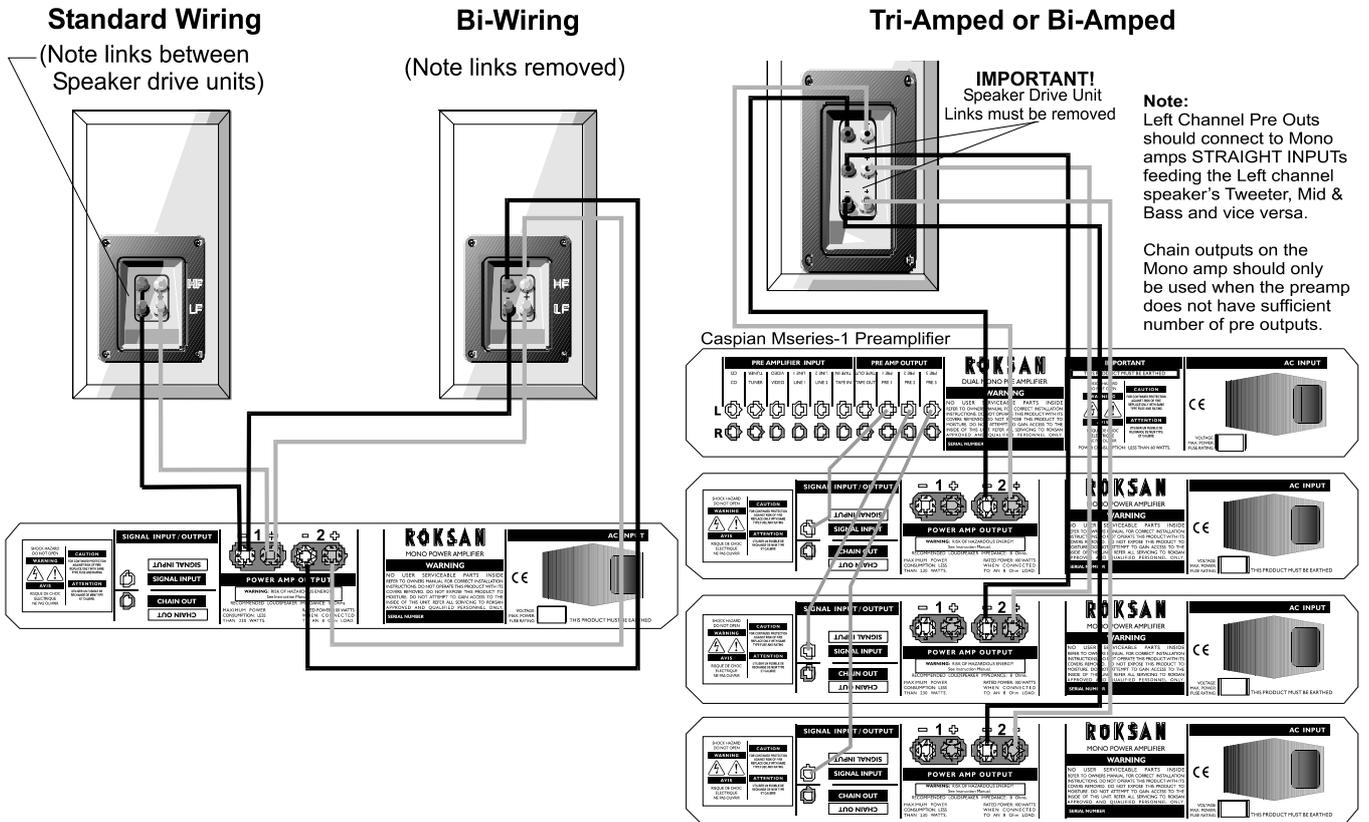

Multi-Amping The Loudspeakers

Operation

If the Loudspeakers utilise more than one drive unit with individual input terminals, for example a Tweeter and a Woofer, then the loudspeaker performance will benefit from Bi-Amping. Dedicating one amplifier to the Tweeter and another to the Woofer isolates them from each other hence reducing distortion and increasing reserved power. Speakers work far better with most amplifiers when Multi-Amped than using one yet more powerful amplifier. *Note: Bi-Wiring reduces the impedance seen by the Woofer and the Tweeter and is a first step towards Bi-Amping.*

OPERATION

Caspian Mono Power Amplifier

Please refer to the front and rear panel views on page 4.

SWITCHING ON

The Mains power switch (8) is located on the rear panel of the amplifier. This switch should be left ON for normal operation. If unattended for a long period, the Mains power should be switched OFF and the lead disconnected from the Mains socket on the wall.

When switched ON from the rear panel, after running a quick self-test your Caspian Mono Power Amplifier enters operational mode. The MODE Indicator Light (1) will glow RED.

The Caspian Mono Power Amplifier auto senses the audio signal and remains operational while there is a signal present with the MODE indicator RED. It will prepare itself for standby after approximately 2 minutes of no signal and the MODE indicator will change colour to ORANGE. If there is still no signal for about 20 minutes, it will go into stand by and the MODE indicator will glow GREEN. As soon as a signal is detected, it will come out of standby and revert to operational mode with the MODE indicator will glow RED again.

With this facility the Caspian Mono Power Amplifier is ideal for Multi-amping, high-end A/V installations or in any application, (e.g. multi-room), where the amplifier is required to switch ON and OFF with the rest of the system with no loss of functionality.

KNOW YOUR CASPIAN

- When you first power up from the Mains Switch on the rear panel, the amplifier runs a quick self-test and then enters operational mode with the Indicator glowing RED.
- During Standby, the power consumption of the amplifier is reduced thus reducing generated heat.
- If the amplifier detects a fault, such as power rail failure, over current etc. it will go into protection mode and the indicator will flash. You can only bring the amplifier out of this mode when the fault is cured by simply switching it off and on.
- If the amplifier overheats through overload or lack of ventilation, it will also enter protection mode. When it has cooled down you will be able to bring it out of this mode.

In the unlikely event of an internal fault such as a power supply fault, the amplifier will go to permanent Standby.

TROUBLESHOOTING

Caspian Mono Power Amplifier

If you suspect that your ROKSAN Caspian Mono Power Amplifier is not operating properly, you should check all the connections carefully. Pay particular attention to speaker phasing and signal connections. Phono plugs should be fully inserted- a frequent cause of problems is that Phono plug surrounds do not make proper contact. Below are some commonly encountered problems with suggestions for possible cure. The list is not exhaustive: If you have any unresolved problems, please consult your appointed ROKSAN dealer or distributor.

SYMPTOM	LIKELY CAUSE	SUGGESTED REMEDY
No power	AC Mains lead not inserted properly Unit not switched ON at rear panel	Ensure AC Mains lead is fully inserted Switch unit ON at rear panel
No output	(Indicator Light RED) Amplifier in stand-by mode. Bad speaker connections (Indicator Light RED) No input signal. Missing or bad input signal connection	Check speaker output connections on rear panel Check source is connected and playing. Check all input connections
Poor speaker imaging, lack of Bass output	Over heating Loudspeakers connected out of phase	Allow amplifier to cool, increase ventilation or use at lower volume Check polarity of speaker connections (especially important if Multi-wiring, Multi-Amping)
Hum from speakers	Incorrect Grounding	Check Mains polarity and grounding on all connected equipment

There are no user-serviceable parts inside your Caspian Power Amplifier. If a fault should develop, refer any servicing to your appointed ROKSAN dealer, distributor or ROKSAN approved service agent.

Your ROKSAN Caspian Mono Power Amplifier is guaranteed against any defect in materials and workmanship for a period of **two years** from the date of purchase.

This guarantee only becomes effective if the warranty card is validated by the ROKSAN retailer from whom the equipment was purchased and returned to ROKSAN within **28 days** of purchase.

This guarantee excludes:

1. Damage caused due to accident, missuse, neglect and incorrect installation, adjustment or repair.
2. Liability for damage or loss during transit from the retailer or purchaser to ROKSAN or its authorised distributor for the purposes of repair or inspection.

Carriage costs to ROKSAN shall be borne by the consignor.

All claims under this guarantee must be made through an authorised ROKSAN retailer.

If equipment returned for repair to ROKSAN is found on inspection to comply with the product specification ROKSAN reserves the right to make a charge for examination and return carriage.

Unauthorised servicing will void this guarantee.

SPECIFICATIONS**Caspian Mono Power Amplifier**

Input Impedance	38 k Ω
Input Sensitivity	700mV RMS
Signal Inputs	Signal In x1
Signal Outputs	Chain Output x1
Power Outputs	Loudspeaker x2
Output Power	100 Watts, into 8 Ω 175 Watts, into 4 Ω 250 Watts, into 2 Ω 330 Watts, into 1 Ω
	<i>(Note: Low impedance loads driven continuously at high power may cause the amp to trip into protection mode)</i>
Power Supply	350VA Ultra Low Noise Toroidal Transformer
Current Output	80 Amps Peak to Peak
Damping Factor	400 (8 Ω)
Frequency response	-3dB, <2Hz – >150kHz
Gain	30.7dB
Harmonic Distortion	0.0015% 1kHz, 0.008% 20kHz 10W - 8 Ω 0.002% 1kHz, 0.02% 20kHz 50W - 8 Ω
Signal to Noise Ratio	>116dB (ref 85W, 8 Ω)
Power Source	100V – 120V 50Hz / 60Hz 220V – 240V 50Hz / 60Hz (via Mains inlet filter)
Power Consumption	< 230 W
Dimension	432 x 330 x 70 (W x D x H) mm 432 x 330 x 80 (including feet)
Weigth	12 Kg

Caspian Mono Power Amplifier Mseries-1

Serial Number:

Purchase Date

Year Month Day

ROKSAN Retailer

Name:

Location:

Please keep a record for future reference

