

# **EUROBOOR**

FOR PROFESSIONALS BY PROFESSIONALS

# **USER MANUAL**

TO REDUCE THE RISK OF INJURY USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL



## **ECO.80/4**

### **Magnetic Drilling Machine**

SERIAL NO. \_\_\_\_\_ DATE OF PURCHASE \_\_\_\_\_

# **1 - Table of Contents**

1	Table of Contents .....	page 1
2	Safety .....	page 2
	Before Use .....	page 3
3	Items Included in Delivery .....	page 4
4	The Hole Cutter	
	Hole Cutter Selection .....	page 5
	Cooling/Lubrication .....	page 6
4	Tool Assembly	
	Morse Taper Assembly .....	page 6
	Hole Cutter Assembly .....	page 6
	Drill Chuck Assembly .....	page 7
	Installation of 13mm Chuck by using Adaptor IBK.14 .....	page 7
	Installation of 13mm Chuck directly on the motor unit .....	page 7
4	The Magnetic Drilling Machine	
	The Magnetic Base .....	page 7
	The Control Panel .....	page 8
	4 Speed Gearbox .....	page 8
	Drilling .....	page 10
5	Maintenance .....	page 11
6	Spareparts & Exploded View.....	page 12



**Read these directions and safety instructions completely and attentively and carefully follow these recommendations.**

**All safety measures must be observed at all times when using magnetic drilling machines. Improper use and carelessness increase the risk of accidents.**

**This is for your own safety.**

**Should you have any doubts about the use of this machine, please contact your supplier.**



## **2 - Safety**

1. During any work on non-horizontal components, the machine must always be secured with the supplied safety chain.
2. The magnetic drilling machine may only be used on a flat and clean foundation.
3. If the machine or the lead show signs of damage, the magnetic drilling machine must be switched off immediately.
4. Wearing safety glasses, hearing protection and protective clothing is necessary.
5. Do not wear any loose clothing or jewellery that may get entangled in the moving parts of the magnetic drilling machine.
6. Use only accessories or parts that are recommended by Euroboor.
7. During drill operations, the hole cutter must be cooled and lubricated with good quality cutting or lubrication oil.
8. The motor must be switched off when tightening the machine with the safety chain.
9. When changing a hole cutter, the magnetic drilling machine must be disconnected from power supply.
10. Clean the area around the machine regularly. Keep the bottom of the magnet and keep it clean and dry.
11. Regularly inspect whether all screws, nuts and bolts are tight.
12. Remove the burr or slug from the hole cutter after each hole. Caution, the part may be hot!
13. Before using the machine make sure it is connected to the correct voltage and that all grips and parts are tightly attached.
14. When using the drill on non-horizontal surfaces, you must use a drilling compound or cutting paste.
15. Do not use oil because the oil can drip into the motor unit.



***When using this machine, you MUST wear ear and eye protection.  
Euroboor has included these articles as standard accessories for  
your own safety. Do NOT touch the drill when it is running.  
Always follow the recommendations for personal protection  
when using this tool.***



## **Before use**

Euroboor magnet drilling machines are specially designed for drilling holes in steel, possibly expanded by the possibility of tapping/reaming/countersinking (depending on model). Euroboor magnetic drilling machines may not be adapted and/or used for applications other than those they were designed for, including driving other machines.

Make sure that you can oversee the entire work area from where you are operating this machine. Use barriers to keep others away. Do not use the machine in places subject to hazard of explosion- electrical tools produce sparks which may ignite flammable materials or gases. To prevent electrical shocks, do not use the machine in moist or wet conditions or environments. Always operate this tool using both hands. Make sure the work piece is always clamped down safely.

This magnetic drilling machine is equipped with a lead and plug approved for the country or region it is to be used in. The yellow-green wire in the lead is the earth wire. Never connect this to a pole under voltage. All Euroboor magnetic drilling machines are manufactured to use with AC current and not suitable to work on DC current. Make sure the magnetic drilling machine is connected to a stable power supply. Euroboor does not recommend the use of a generator or other mobile power supply for power supply. Euroboor does not recommend the use of extension cables. If there is no other way, use good quality cables and keep extension cables as short as possible. Be aware that long power leads can cause less current.

## **3 - Items Included in Delivery**

Magnetic Drilling Machine	YES	Pilot Pin	NO
Carrying Case	YES	Morse Taper	YES
Drill Chuck 13mm	NO	Morse Taper Ejector Pin	YES
Tap Collets M10-M12-M14-M16	NO	Manual	YES
Allen Key 2.5	YES	Safety Chain	YES
Allen Key 4	YES	Drilling Oil	YES
Allen Key 5	YES	Safety Ear Protection	YES
Allen Key 6	YES	Safety Glasses	YES
Wrench 8	YES	Safety Gloves	YES

## 4 - The Hole Cutter

### Hole Cutter selection

There are many different types of steel. It is not possible to drill all these types of steel with 1 type of cutter. Euroboor recommended the following :

#### **Euroboor+ HSS Series      For drilling holes in general 37/52 steel and aluminium**

HCS	12 mm - 130 mm	Hole cutters with cutting depth 30 mm	increasing by 1 mm
HCL	12 mm - 130 mm	Hole cutters with cutting depth 55 mm	increasing by 1 mm
HCY	20 mm - 50 mm	Hole cutters with cutting depth 75 mm	increasing by 1 mm
HCX	20 mm - 50 mm	Hole cutters with cutting depth 100 mm	increasing by 1 mm

#### Also available in inch sizes:

HCS	7/16" - 5"	Hole cutters with cutting depth 30 mm	increasing by 1/16"
HCL	7/16" - 5"	Hole cutters with cutting depth 55 mm	increasing by 1/16"
HCY	3/4" - 2 1/16"	Hole cutters with cutting depth 75 mm	increasing by 1/16"
HCX	3/4" - 2 1/16"	Hole cutters with cutting depth 100 mm	increasing by 1/16"

#### **Euroboor Cobalt Series      For processing steel, stainless steel and other high-quality steel alloy types**

IBS	12 mm - 130 mm	Hole cutters with cutting depth 30 mm	increasing by 1 mm
IBL	13 mm - 130 mm	Hole cutters with cutting depth 55 mm	increasing by 1 mm

#### **Euroboor TCT Series      Tungsten Carbide Tipped. Cutters with hard metal teeth**


HMS	14 mm - 50 mm	Hole cutters with cutting depth 35 mm	increasing by 1 mm
HML	14 mm - 130 mm	Hole cutters with cutting depth 50 mm	increasing by 1 mm

#### **Euroboor TRC Series      With hard metal teeth, For drilling holes in rails**

TRCS.190	19 mm	Hole cutter with cutting depth 35 mm
TRCS.300	30 mm	Hole cutter with cutting depth 35 mm
TRCS.330	33 mm	Hole cutter with cutting depth 35 mm

**NOTE :**      Hole cutters    12mm - 60mm    have a 19,05 mm Weldon shank  
                    Hole cutters    61mm - 130mm    have a 31,75 mm Weldon shank

## Cooling/Lubrication

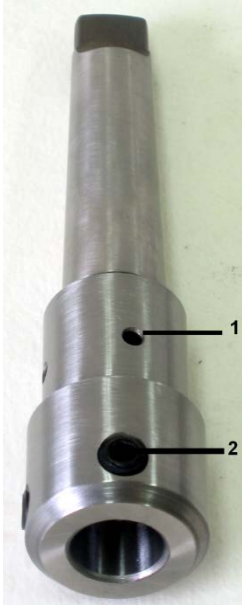

- 1 Holes for cooling and lubrication oil
- 2 Fixing screws of Morse Conus

Euroboor recommends the use of cooling and lubrication agents. Not only do these assist in drilling but they will also lengthen the lifespan of your tools. One of the advantages of the use of hole cutters is that cooling and lubrication agent can be supplied from the inside, so that the agents end up in the right place. All magnetic drilling machines from Euroboor can be equipped with a automatic cooling system which provides a guaranteed supply of the cooling and lubrication agents from the inside. If your machine is not be equipped with an automatic coolant system it will still be possible to cool from the inside. Use the holes in the morse conus (number 1 in picture) for this purpose by squirting the cooling and lubrication agent through them and fill the morse conus.

### **NOTE :**


For vertical or upside-down processing, Euroboor recommends the use of a drilling compound or paste like IBP50/2.

## **4 - Tool Assembly**


### **Morse Taper Assembly**

Mount the Morse Taper into your machine by push it firm into the shaft ectending from the motorunit. Beware that the tip on top of the Morse Conus is in line with the shaft. To take the Morse Conus out use the Ejector Pin to force it out.

### **Hole Cutter Assembly**

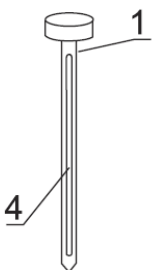

- 1 : Pilot Pin
- 2 : Center hole in shank of Hole Cutter
- 3 : Shank of Hole Cutter
- 4 : Groove or flatted surface for oil pass
- 5 : Flat surface for fixing Hole Cutter

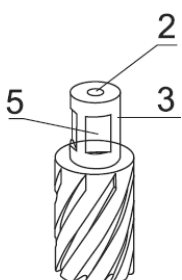

Clean the inner wall and the shaft of the Hole Cutter to ensure proper oil supply. First insert the Pilot Pin into the center hole of the Shank. After that you can slide the Hole Cutter assembly into the spindle or morse conus of your Magnetic Drilling Machine. After sliding the Hole Cutter Assembly into the morse conus, make sure the two flat surfaces (number 5 in picture) are located exactly in front of the two fixing screws of your spindle (see number 2 in picture of cooling/lubrication. Tighten them both subsequently with the included 5mm Allen Key.

## Drill Chuck Assembly

The option of making our machines suitable for the use of standard spiral drills and other tools by using a cylindrical shaft is an important characteristic of Euroboor magnetic drilling machines. Please see the technical data for maximum capacity.

### Installation of 13mm Chuck by using adapter IBK.14

The IBK.14 is a adaptor from 1/2"x20 UNF to 3/4" Weldon.

Attach a Drill Chuck (like Euroboor IBK.13) with internal 1/2"x20 UNF on the IBK.14 adaptor.

To attach the assembly into your Spindle, follow the instructions (with exception of the Pilot Pin) for installation of a Hole Cutter. Adaptor IBK.14 can be used on most machines in our program.

### Installation of 13mm Chuck directly on the motor unit

For the ECO.80 and ECO.100/4 magnetic drilling machines it is possible to install a drill Chuck directly to the shaft extending from the motor unit. Attach to the drill chuck with article number IBK.13-B16 a adaptor with article number B16-MC3. This way the drill chuck can be mounted as a Morse Conus in your machine.

## 4 - The Magnetic Drilling Machine

### The Magnetic base

Material of minimum 10mm thickness is required for the magnet to work the best.

The attachment force generated by the magnet depends on various factors.

- Thickness of the material the magnet is placed on
- Paint or coating of the material the magnet is placed on.
- Metal chips, oil or other dirt under the magnet.

If the LED indicator lights up GREEN, the magnet is generating sufficient attachment force. If the LED indicator lights up RED, the magnet may not generating sufficient attachment force.

**We would like to point out that this is only an indication and not a certainty that the magnet will not release from the material. Euroboor accepts no liability ensuring from the magnet indicator not functioning or functioning poorly.**

Make sure that the magnet attaches tightly to the work piece before turning on the motor unit of the magnetic drilling machine. Euroboor magnets have 2 coils; make sure that both coils are in contact with the material. Do not connect any other machines to the electrical outlet the magnetic drilling machine is plugged into, as it may result in the loss of magnetic force. Always use the safety chain included. Drilling above your head is extremely dangerous and is not recommended. For the use of magnetic drilling machines on pipes, not-flat or non-magnetic materials, we refer to our brochure or our website [www.euroboor.com](http://www.euroboor.com) where several vacuum tightening systems and pipe clamping systems are mentioned.

## The Control Panel

The control panel on your magnetic drilling machine is designed for maximum operating facility and safety.

### 1 - The Magnet Switch:


This switch is used to switch the main power and also the magnet On and Off. This switch is included on every Euroboor magnetic drilling machine

### 2 - The On/Off Switch:

This switch is used to switch the motor unit On and Off and is included on every Euroboor Magnetic Drilling Machine

### 3 - The Fuse holder with Fuse:

This Fuse holder is included on every Euroboor Magnetic Drilling Machine and holds the fuse type : 5x20, F2A.

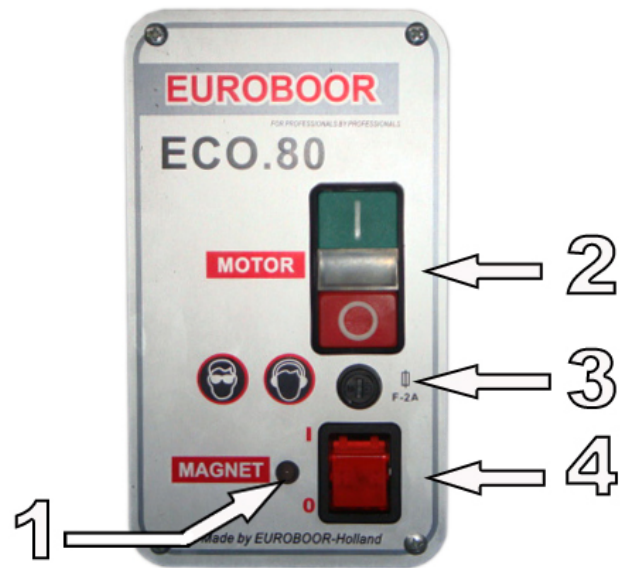

### 4 - The Magnet LED Indicator:

This LED indicator shows the generated magnetic force.

## 4-speed Manual Gearbox

The ECO.80/4 is equipped with a 4-speed gearbox. The two gear switches makes it possible to choose 4 manual speeds. Important is that the closest mechanical gear is selected for the used cutter.

- |         |   |
|---------|---|
| 385rpm: | left switch up, right switch down                               |
| 245rpm: | left switch up, right switch up<br>For hole cutters 20-40mm     |
| 175rpm: | left switch down, right switch down<br>For hole cutters 40-60mm |
| 110rpm: | left switch down, right switch up<br>For hole cutters 60-80mm.  |

("left" and "right" is seen from front of motorunit)



Note that the mentioned cutter sizes is only a indication. Depending on variables as the condition of the used cutter, hardness of material or if oil is used the best drilling speed can be slight different as mentioned above.

To select other gear, turn off motorunit and main power. Push the black switch on the side of the gearbox and slide to other position. A slight turn of the output shaft by hand while sliding the black switch to the other position can be necessary to line up the gears inside. Proof that the gear is locked if the black switch comes back to front.



## Drilling

Now that you have read the explanatory information and safety recommendations above, you are ready to actually start drilling. Follow these 10 steps for best drilling result :

- 1     Use the tip of the pilot pin to determine the center of the hole to be drilled.
- 2     Turn the magnet on and verify that the drill is in the right position and that the machine is pushed tight against the work piece.`
- 3     If your machine is equipped with a auto coolant system, put open the valve to release the oil. If your machine does not have a auto coolant system, fill the holes of the spindle with oil.
- 4     Turn the motor on at the highest setting and allow it to run at full speed.
- 5     Turn the arms to start drilling. Apply only a slight pressure when the hole cutter touch the metal. Do not push the hole cutter with force into the metal.
- 6     Apply a regular pressure while drilling. The drilling performance does not improve by putting more pressure on the tool. Too much pressure will overload the motor and your hole cutter will be worn sooner. ***Let the cutter do the job and give it time to cut the metal !!!***
- 7     Adjust the oil supply when necessary, if your drill does not have a auto coolant system, stop drilling regularly, refill the holes of the spindle and continue drilling.
- 8     Apply less pressure when the drill cuts through the material.
- 9     Turn the arms to put the motor in highest position and turn off the motor unit.
- 10    Remove the burr, metal chips and clean the cutter and surface without getting injuries.  
Caution : The metal piece drilled out can be sharp and very hot!!

## **5 - Maintenance**

Just as every magnetic drilling machine with moving parts, your Euroboor magnetic drilling machine also needs regular maintenance service. A few recommendations follow :

- Clean all dirt, dust, metal chips and burrs of your magnetic drilling machine
- Regularly check the carbon brushes for wear
- Replace any defective parts immediately. This prevents properly function parts from being damaged.
- Adjust your guide regularly and make sure it is clean and greased. This prevents any movement from being created and the spindle, triangular guide (steady) and guide parts from excessive wear or damage. The guide can be adjusted by loosening the setting nut (#7 on spare part drawing) with included wrench 8, tightening the setting screws (#5 on spare part drawing) with included Allen key 2.5 and tightening the setting nut (#7) again with included wrench 8. The adjustment is done well when the motor unit can be turned to every possible position without falling down by its own weight.
- Check the grease in the gearbox regularly and replace it if necessary. We recommend you to store your machine on its side regularly so that the gear box grease can run back to where the gears are. This is very important when you have used your machine non-horizontal or upside down. Repair, modification and inspection of Euroboor Magnetic drilling machines must be done by a Euroboor authorized dealer. The parts list will be helpful if presented with the machine to the Euroboor dealer for service when requesting repair or other maintenance. Euroboor machines are constantly being improved and modified to incorporate the latest technological advancements. Accordingly, some parts (ie part numbers and/or design) may be changed without prior notice. Also, due to Euroboor's continuing program of research and development, the specifications of machines are subject to change without prior notice.


### **!!! IMPORTANT !!!**

**When using your magnetic drilling machine non-horizontal or upside-down be aware that no oil, drilling compound or metal chips can fall into the motor unit.  
Euroboor accepts no responsibility for damage done to your machine  
by such action under coverage of the warranty.**

## 6 - Spare parts & Exploded view

1	100.0001	Frame	62	080.4312	Friction Clutch complete
2	100.0006	Screw	63	100.0372	Carbon Brush Holder
3	100.0031	Washer M8	64	080.0381	Field 230v
4	020.0096	Setting Nut			Field 110v
5	020.0138	Setting Screw		080.0382	
6	100.0038	Magneet	65	100.4388	Housing
7	020.0201	Sensor	66	100.0391	Baffle
8	080.0041	Slide	67	080.4401	Inner Gear Plate
9	100.0076	Rack	68	100.0458	Gasket
10	100.0066	Screw	69	040.0161	Needle Bearing
11	100.0046	Motorholder	70	080.4320	Double Gear 2
12	100.0071	Screw	71	080.4321	Axle 1
13	020.0106	Screw	72	100.0426	Circlip
14	100.0081	Brass rail set (stick)	73	080.4431	Spindle Key
15	100.0084	Pressing strip	74	080.4324	Spindle Gear
16	100.0101	Capstan hub assembly	75	080.4411	Adaptor Ring
17	020.0077	End Plate	76	100.0446	Bearing
18	020.0081	Ens Screw	77	100.0451	Circlip
19	100.0116	Arm for Capstan	78	080.4326	Gear Casing
20	100.0122	Motor Fixing Cap	79	080.4461	Spindle Drive Shaft
21	100.0126	Screw SSM8x35	80	100.0466	Bearing
22	020.0151	Magnet spring ball	81	100.0471	Circlip
23	020.0106	Screw SSM6x16	82	080.4476	Adaptor Ring
24	020.0136	Motorcable	83	100.0481	Needle Bearing
		Coupling nut for	84	080.4486	Washer
25	020.0041	motorcable	85	080.4491	Double Gear 1
		Coupling nut for	86	080.4496	Key
26	020.0031	maincable	87	080.4332	Axle 2
27	020.0036	Main Cable (euro)	88	080.0351	Bearing
28	020.0182	Screw+washer+nut	89	080.4334	Axle 3
29	PP.RLEU	Rear plate	90	080.4336	Clutch Shaft 2
30	020.0101	Panel screw	92	080.4526	Key 3 (L)
31	PP.80/4EU	Front plate	93	080.4621	Plate for Gear Casing
32	020.0206	Sensor LED+cable	94	080.4342	Clutch Shaft 1
33	020.0006	On/Off Switch	95	040.0286	Gear Switch
34	020.0016	Fuse holder	96	080.4344	First Gear
35	020.0017	Fuse F2A	97	100.4346	Cylinder
36	020.0011	Magnet Switch	98	100.4348	Shell 25
37	020.0001	Control Unit 220v	99	100.4350	Nut
	020.0002	Control Unit 110v	99A	100.4351	Washer
	080.0110	Control Unit 30A 110v	99B	100.4338	Friction Disk 1
38	020.0037	Cable clamp	99C	100.4340	Brass Disk 1
39	080.0001	Motorunit 1700W / 220v	99D	100.4349	Brass Disk 2
	080.0002	Motorunit 1700W / 110v	99E	100.4353	Friction Disk 2
			100	100.4352	Shell 28
			101	100.0581	Circlip
51	100.0306	Screw	102	080.0576	Bearing
52	100.0459	Screw	103	100.0571	Circlip
53	080.0318	Armature 230v	109	080.0661	Cable Housing
	080.0319	Armature 110v	110	100.0549	Casing Pin
54	100.0322	End Cover	111	100.0617	Screw 6x45
57	100.0346	Rubber Fitting Ring			
60	100.0506	Bearing			
61	100.0368	Carbon Brush set			

# ECO.80/4

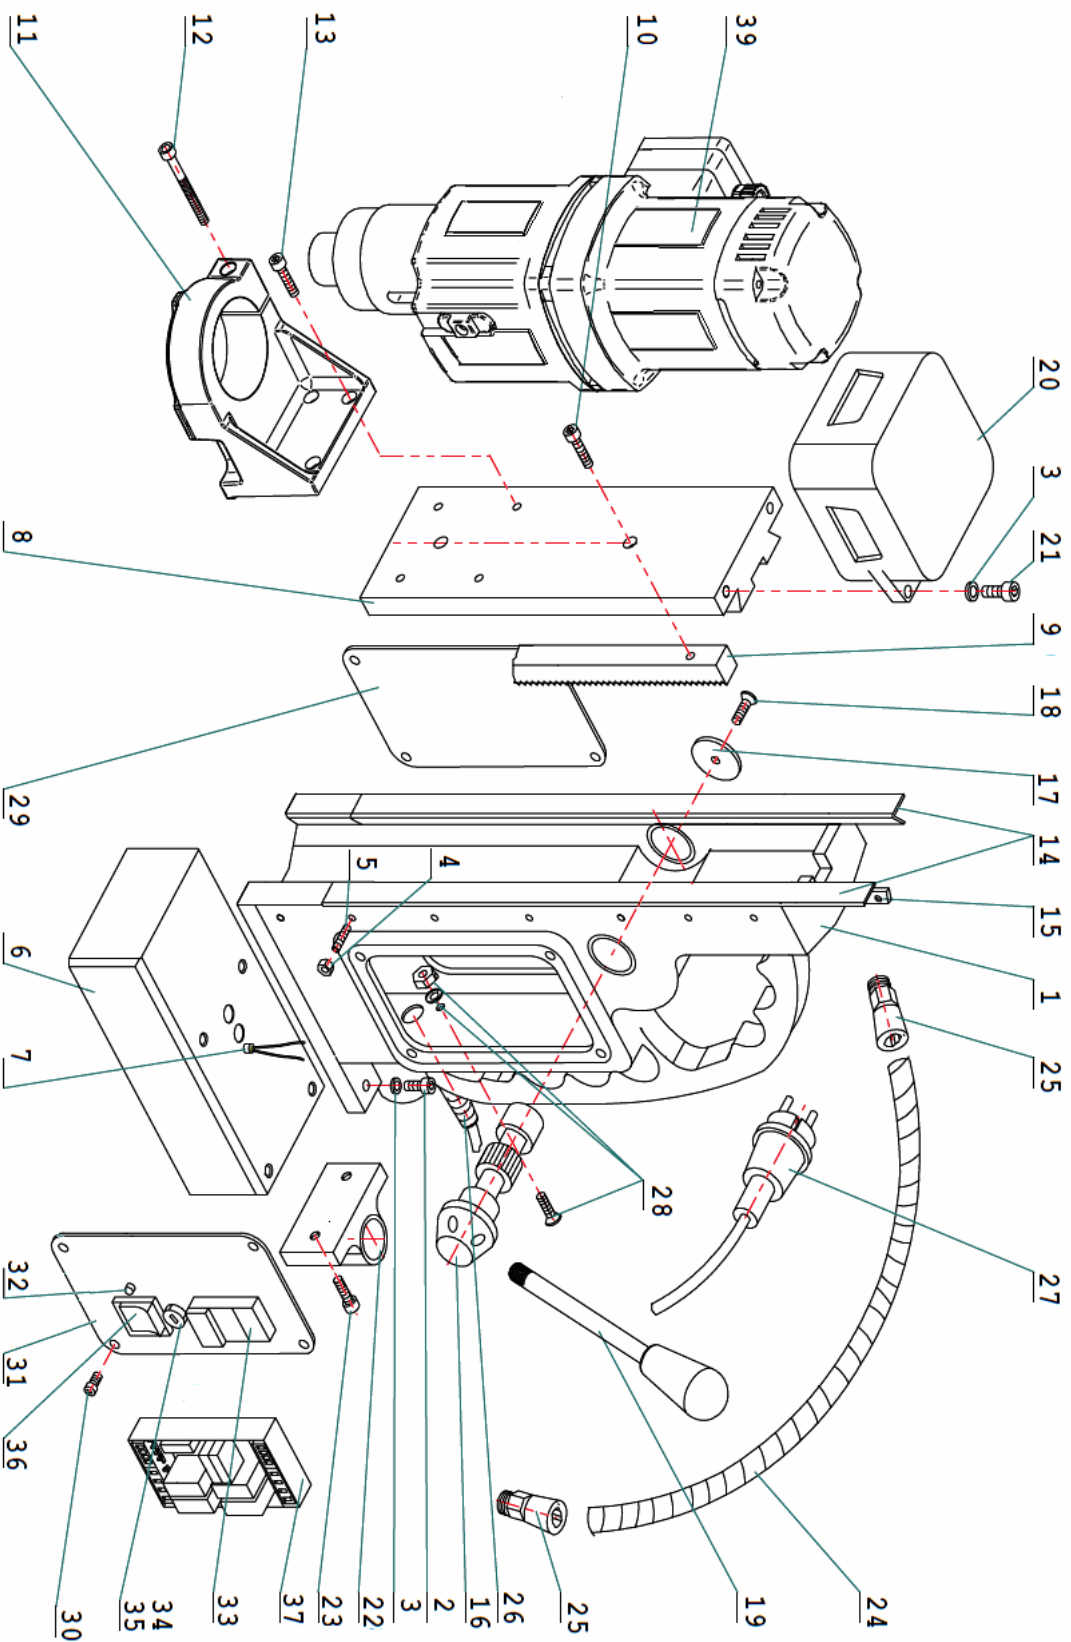

# ECO.80/4

