

WMBX-1011-5250

User Manual

Rev.01, Jul. 2011



Statement

All rights reserved. No part of this publication may be reproduced in any forms or by any means without prior written permission of the publisher.

All trademarks are property of the respective owners.

All product specifications are subject to change without prior notice.

Packing List

- WMBX-1011-5250 x 1
- 60W DC12V Adapter x 1
- Power cord (US) x 1
- Food pad x 4
- Screws pack x 1
- RJ50 to COM cable x 1
- Y cable x 1
- Driver CD (Include user's manual) x 1

Ordering Information

STANDARD:

- WMBX-1011-5250

Mini-BOX with Atom D525 CPU with 1xVGA, 6xCOM, 1xLAN, 6xUSB, DDR3 SODIMM max up to 4GB, CF and 2.5" HDD support, mini-PICe expansion, 60W DC12V Adapter, Smart fan design.

OPTION:

- Wall mount kit
- VESA mount kit

Contents

1.1 General Description	4
1.2 Features	5
1.3 Dimensions	6
1.4 I/O Outlets	7
1.5 M/B PCB Layout	9
1.6 Jumper Setting	10
1.7 Connector Function List	13
1.8 Internal Connector Pin Define	14
Chapter 2 Hardware Installation (waiting modify)	21
2.1 Open the cover	21
2.2 Install the Memory Module	21
2.3 Install the HDD	22
2.6 Installing the Wall Mount Kit (option)	23
Chapter 3 BIOS Setup	25
3.1 Main Menu	25
3.2 Standard CMOS Features	26
3.3 Advanced BIOS Features	27
3.4 Advanced Chipset Features	29
3.5 Integrated Peripherals	31
3.6 Power Management Setup	39
3.7 PnP/PCI Configurations	41
3.8 PC Health Status	42
3.9 Frequency/Voltage Control	43
3.10 Load Fail-Safe Defaults	44
3.11 Load Optimized Defaults	45
3.12 Set Supervisor Password	46
3.13 Set User Password	47
3.14 Save & Exit Setup	48
3.15 Exit Without Saving	49
Chapter 4 Drivers Installation	50
4.1 Intel Chipset Device Software	50
4.2 Intel Graphic Media Accelerator Driver	53
4.3 LAN Driver	56
4.4 Audio Driver	58
Appendix-A Watchdog	59
Appendix-B GPIO	61

Chapter 1 Product Information

This chapter introduces the product features, jumper and connector information.

1.1 General Description

WMBX-1011-5250 is a Mini BOX PC system that can support Atom D525 processor.


WMBX-1011-5250 supports Windows® 2000, Windows® XP, Windows® XP embedded, Windows® 7, which is suitable for the most durable operation.

1.2 Features

Construction	Heave duty steel
CPU	Intel Atom D525 Dual core 1.8GHz processor onboard
System memory	1 x 204-pin DDR3 800 SO DIMM SDRAM, max. up to 4GB
Chipset	Intel D525 + ICH8M
BIOS	Award 16MB SPI
System I/O	Front I/O: 2 x USB Rear I/O: 4 x USB, 6 x COM(1 x RJ50, 4 x RS-232, 1 x RS-232/422/485; All support 12V/5V/RI by jumper selector), 1 x VGA, 1 x LAN, 1 x Audio-out, 1 x PS2
Watch dog timer	Interval: Programmable 1~255 sec.
Storage support	1 x CF and 1 x 2.5" HDD
Expansion slot	1 x mini-PCle
System Indicators	1 x Power LED, 1 x HDD LED
System controls	1 x Power on switch, 1 x Reset switch
Mounting Kit	Wall mount kit (option) VESA mount kit (option)
Power Supply	AC 60W adapter, Input: AC 100~240V~2A 50-60Hz, Output: DC12V@5A
Operating Temperature	0°C~50°C (32°F~140°F)
Storage temperature	-20°C~80°C (-68°F~176°F)
Relative Humidity	0%~90% (non-condensing)
Dimensions	230mm(W) x 215mm(D) x 65mm(H) 9.1"(W) x 8.5"(D) x 2.6"(H)
Weight	Gross: 2.7Kg/5.94Lb Net: 2.4Kg/5.28Lb
Standard Color	Black

1.3 Dimensions

The following diagrams show you dimensions and outlines of **WMBX-1011-5250 series**.

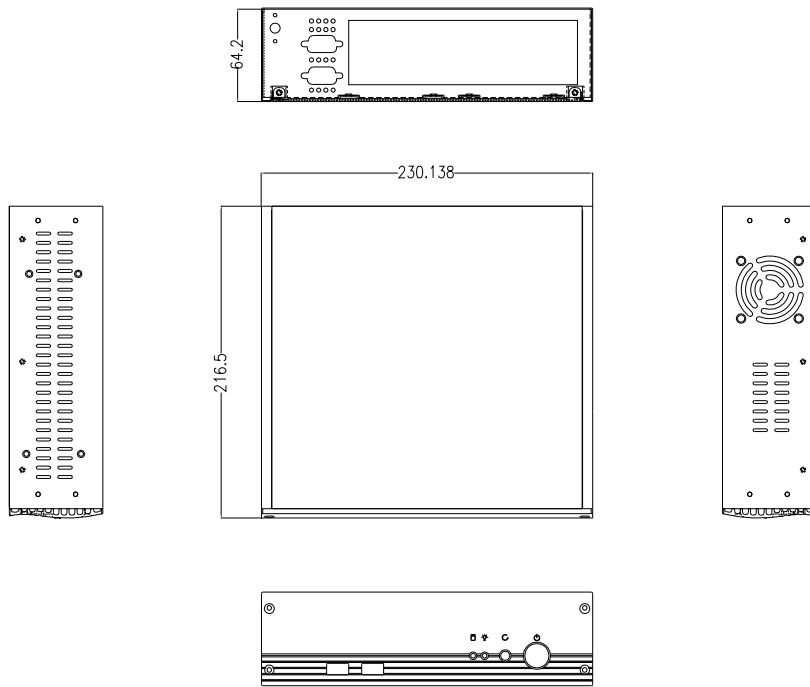


1.4 I/O Outlets

FRONT




1. USB
2. USB
3. HDD status LED
4. Power status LED
5. Reset button
6. Power button

BACK

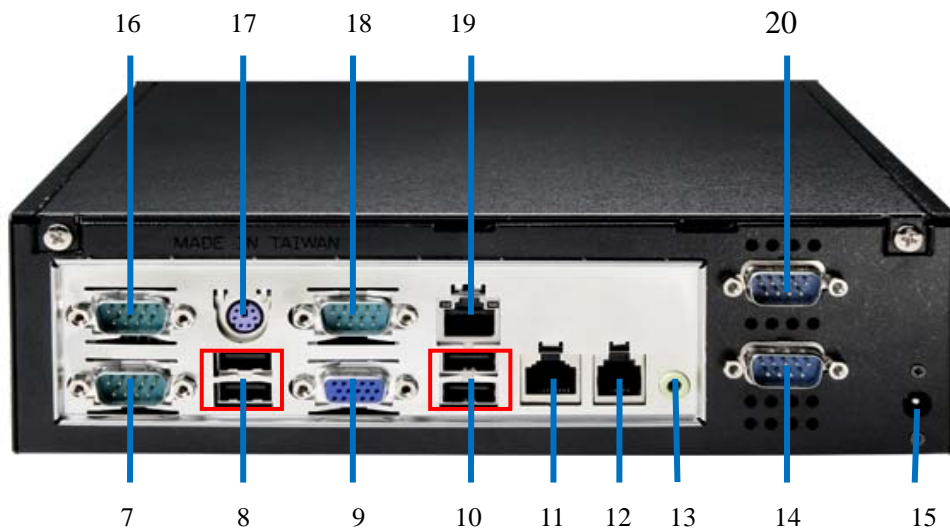

- 7. COM1
- 8. USB (2 PORT)
- 9. VGA
- 10. USB (2 PORT)
- 11. COM4 (RJ50 TYPE)
- 12. Cash Drawer
- 13. Audio out
- 14. COM5
- 15. DC12V power input
- 16. COM2
- 17. PS2
- 18. COM3
- 19. LAN
- 20. COM6



1.5 M/B PCB Layout

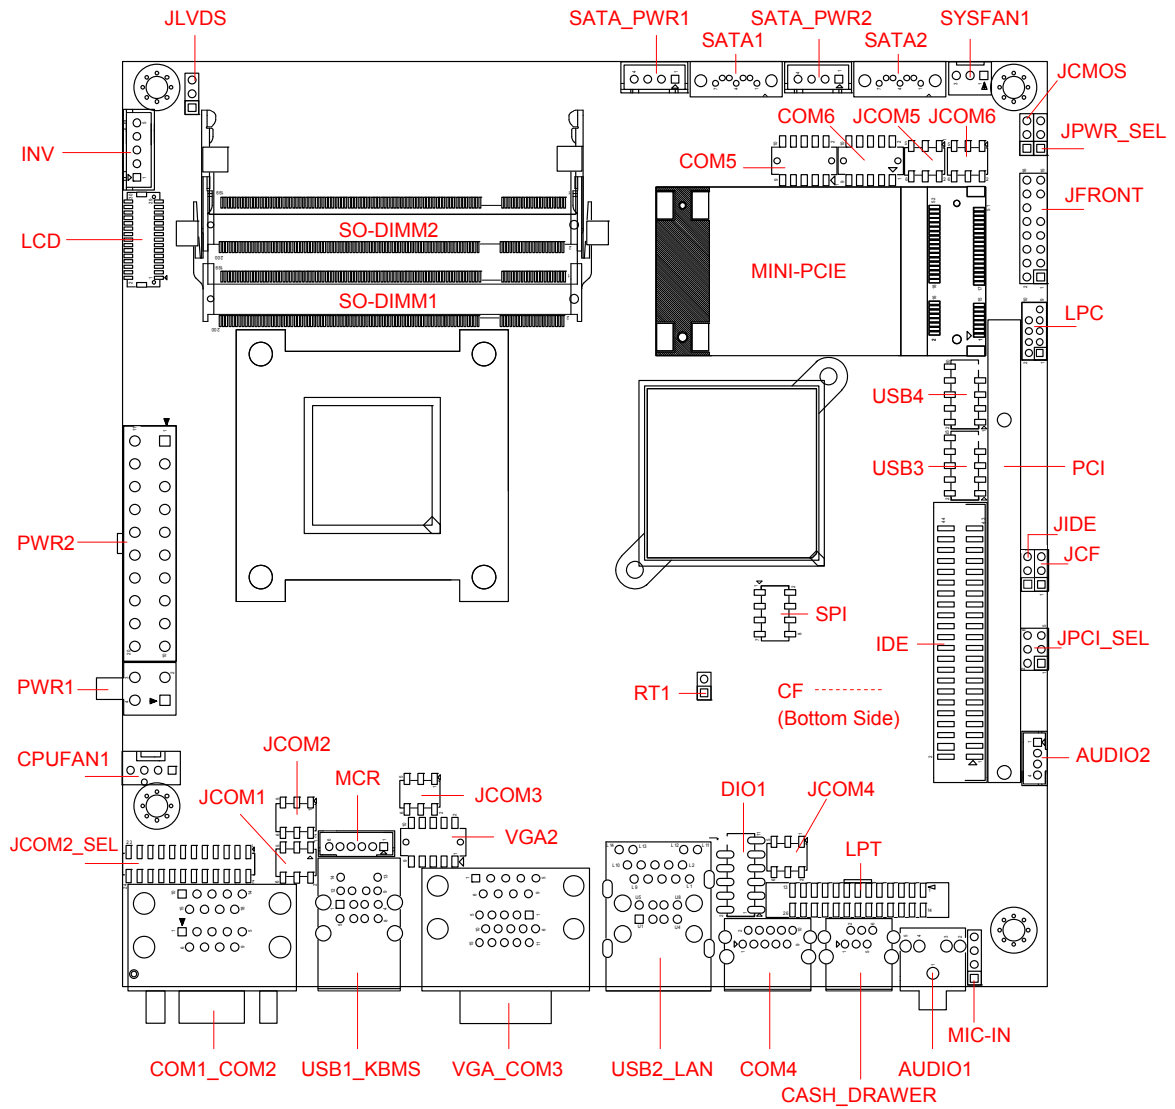




1.6 Jumper Setting

WNA-1011-5250 series has a number of jumpers inside the chassis that allow you to configure your system to suit your application. The table below lists the functions of the various jumpers.



JCMOS : CMOS Clear

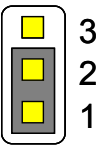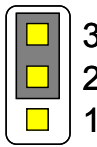Pin No.	1-2	2-3
Function	Normal Operation (Default)	Clear CMOS Contents
Jumper Setting		

JCOM1 / JCOM2 / JCOM3 / JCOM4 / JCOM5 / JCOM6 : (5V/12V/RI) Select

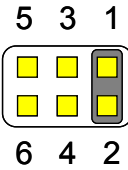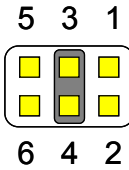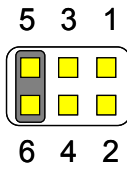Pin No.	1-2	3-4	5-6
Function	+5V	Modem Ring In (Default)	+12V
Jumper Setting			

JCOM2 SEL : COM2 (RS-232/RS-422/RS-485) Select (1/3)

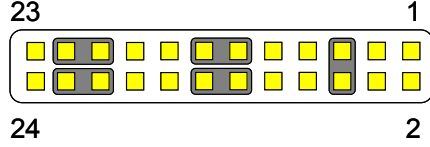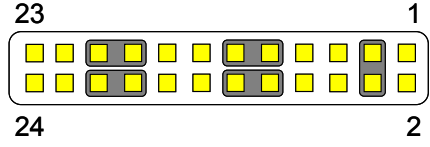Pin No.	5-6, 11-13, 12-14, 19-21, 20-22	3-4, 9-11, 10-12, 17-19, 18-20
Function	RS-232 (Default)	RS-422
Jumper Setting		

JCOM2 SEL : COM2 (RS-232/RS-422/RS-485) Select (2/3)

Pin No.	1-2, 9-11, 10-12, 23-24	15-16
Function	RS-485	RS-422 RX 100Ω Termination
Jumper Setting		

JCOM2 SEL : COM2 (RS-232/RS-422/RS-485) Select (3/3)

Pin No.	7-8	
Function	RS-422 TX 100Ω / RS-485 Termination	
Jumper Setting		

Note: Not Recommended for RS-422 TX 100Ω Termination



JCF: Compact Flash (Master / Slave) Select

Pin No.	1-2	2-3
Function	Master	Slave (Default)
Jumper Setting		



JIDE: IDE ATA Mode Select

Pin No.	1-2	2-3	All Open
Function	Max. UDMA Mode 1 (33M)	Auto Detect UDMA Mode (Default)	Min. UDMA Mode 2 (66M)
Jumper Setting			



JLVDS : LCD Power (+3.3V / +5V) Select

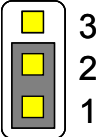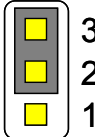Pin No.	1-2	2-3
Function	LCD Power +3.3V (Default)	LCD Power +5V
Jumper Setting		

JPCI_SEL : PCI Riser card support slot select

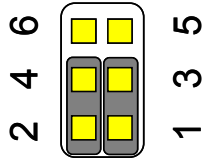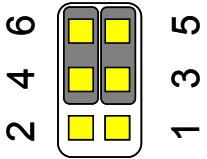Pin No.	1-3, 2-4	3-5, 4-6
Function	Not support PCI Riser card slot 3 (Default)	Support PCI Riser card slot 3
Jumper Setting		

JPWR_SEL: AT / ATX Mode Select

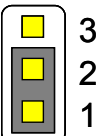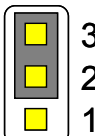
Pin No.	1-2	2-3
Function	AT Mode	ATX Mode (Default)
Jumper Setting		

1.7 Connector Function List

Connector	Function	Note
AUDIO1	Line-out connector	
AUDIO2	6W amplifier Line-out connector	
CASH_DRAWER	Cash Drawer with RJ11-6P6C connector	
COM1_COM2	Serial port connector	
CF	Copact Flash connector	
COM4	Serial port with RJ50-10P10C connector	
COM5,COM6	Serial port with Box-header	
CPUFAN1	CPUFAN 4-pin connector	
DIO1	Digital Input/output with Pin-header	
IDE	IDE with Box-header	
INV	LCD inverter connector	
JFRONT	Front Panel with Pin-header	
LCD	LVDS connector	
LPC	Reserved for debug	
LPT	Parallel Port with Box-header	
MCR	MCR with Box-header	
MIC-IN	Micro phone input with Pin-header	
MINI-PCIE	Mini PCI Express connector	
PCI	PCI slot	
PWR1	ATX 2x2 connector	
PWR2	ATX 2x10 connector (Reserved)	
RT1	Reserved for external thermistor	
SATA1, SATA2	SATA connector	
SATA_PWR1,	SATA Power with Box-header	
SO-DIMM1,	DDR3 SO-DIMM connector	
SPI	Reserved for debug	
SYSFAN1	System FAN connector	
USB1_KBMS	USBx2, PS2 Keyboard and PS2 Mouse	
USB2_LAN	USBx2 and RJ45 connector	
USB3, USB4	USBx2 with Pin-header	
VGA_COM3	VGA and serial port connector	
VGA2	VGA with Box-header	


1.8 Internal Connector Pin Define

AUDIO2 : Audio Amplifier Output with Wafer connector (2.0 mm)




Pin No.	Signal
1	Audio Amplifier Out Right
2	Ground
3	Ground
4	Audio Amplifier Out Left

CASH DRAWER : Digital IO with RJ-11-6P6C connector

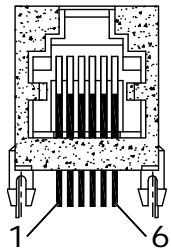


Pin No.	Signal
1	Ground
2	DIO_Out1 (bit1)
3	+12V
4	DIO_IN0 (bit2)
5	DIO_Out0 (bit0)
6	Ground

COM4 : Serial Port with RJ50-10P10C connector

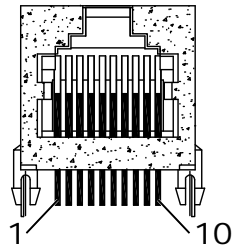


Pin No.	Signal	Pin No.	Signal
1	NC	2	DCD
3	DSR	4	RXD
5	RTS	6	TXD
7	CTS	8	DTR
9	Ground	10	RI/+5V/+12V

COM5, COM6 : Serial Port with Box-header (2.0 mm)

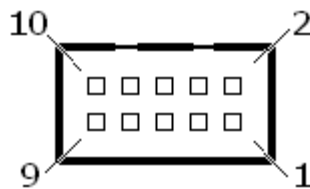


Pin No.	Signal	Pin No.	Signal
1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8,10	RI/+5V/+12V
9	Ground		

CPUFAN1 : 4Pin FAN connector

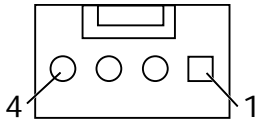


Pin No.	Signal
1	Ground
2	Fan Power (+12V)
3	Speed Sense
4	Control

DIO1 : Digital I/O with Pin-header (2.54mm)

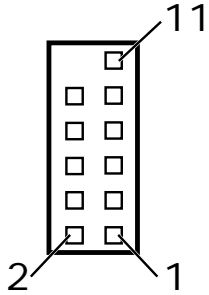


Pin No.	Signal	Pin No.	Signal
1	DIO-Out0 bit0	2	DIO-In0 bit2
3	DIO-Out1 bit1	4	DIO-In1 bit3
5	DIO-Out2 bit6	6	DIO-In2 bit4
7	DIO-Out3 bit7	8	DIO-In3 bit5
9	+12V	10	+5V
11	Ground	12	NC

IDE : IDE with Box-header (2.0mm)

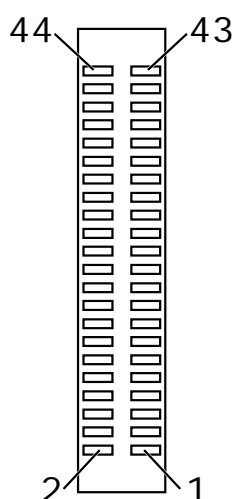


Pin No.	Signal	Pin No.	Signal
1	RESET#	2	Ground
3	Data 7	4	Data 8
5	Data 6	6	Data 9
7	Data 5	8	Data 10
9	Data 4	10	Data 11
11	Data 3	12	Data 12
13	Data 2	14	Data 13
15	Data 1	16	Data 14
17	Data 0	18	Data 15
19	Ground	20	NC
21	DMA REQ	22	Ground
23	IOW#	24	Ground
25	IOR#	26	Ground
27	IOCHRDY	28	Pull-down
29	DMA ACK#	30	Ground
31	INT REQ	32	NC
33	SA1	34	UDMA DETECT
35	SA0	36	SA2
37	HDC CS1#	38	HDC CS3#
39	HDD Active#	40	Ground
41	+5V	42	+5V
43	Ground	44	NC

INV : Inverter with Box-header (2.50 mm)

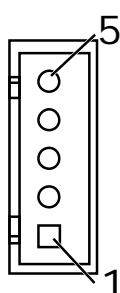


Pin No.	Signal
1	+12V
2	+12V
3	Ground
4	Inverter Brightness Abject
5	Inverter Enable

JFRONT : Front Panel with Pin-header (2.54mm)

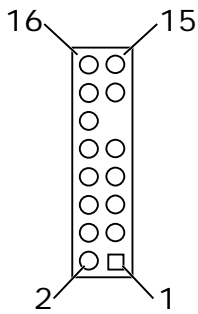

Pin No.	Signal	Pin No.	Signal
1	+5V (470 Ohm), (Power LED+)	2	+5V (470 Ohm), (HDD LED+)
3	NC	4	HDD LED#, (HDD LED-)
5	Ground, (Power LED-)	6	5VSB (470 Ohm), (Suspend LED+)
7	RESET#, (Reset Button Pin1)	8	Suspend LED#, (Suspend LED-)
9	Ground, (Reset Button Pin2)	10	FSPK# (Beep), (Speaker-)
11	NC	12	NC
13	SW_PWR#, (Power ON Button Pin1)	14	NC
15	Ground, (Power ON Button Pin2)	16	+5V, (Speaker+)


LCD : LVDS Panel Signal with Box-header (1.0 mm)

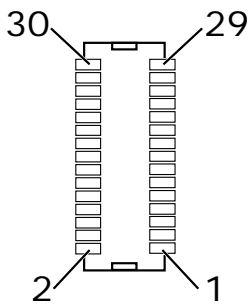

Pin No.	Signal	Pin No.	Signal
1	Ground	2	Ground
3	NC	4	NC
5	NC	6	NC
7	NC	8	NC
9	NC	10	NC
11	NC	12	NC
13	Ground	14	Ground
15	L_DC3P	16	L_DC3N
17	L_CLKP	18	L_CLKN
19	L_DC2P	20	L_DC2N
21	L_DC1P	22	L_DC1N
23	L_DC0P	24	L_DC0N
25	Ground	26	Ground
27	LVDS Power	28	LVDS Power
29	LVDS Power	30	LVDS Power


Note1 : LVDS Power = +5V or +3.3V (Default)

Note2 : Pin15-Pin24 for LVDS 18/24 bit

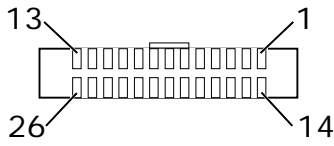

LPT : Parallel Port with Box-header (2.0 mm)

Pin No.	Signal	Pin No.	Signal
1	Strobe#	14	Auto Form Feed#
2	Data 0	15	Error#
3	Data 1	16	Initialization#
4	Data 2	17	Printer Select IN#
5	Data 3	18	Ground
6	Data 4	19	Ground
7	Data 5	20	Ground
8	Data 6	21	Ground
9	Data 7	22	Ground
10	Acknowledge#	23	Ground
11	Busy	24	Ground
12	Paper Empty	25	Ground
13	Printer Select	26	Ground



MCR : Internal Keyboard with Box-header (2.0 mm)


Pin No.	Signal
1	+5V
2	KCLK_CON
3	KCLK_KBC
4	KDAT_CON
5	KDAT_KBC
6	Ground

Note : If not use MCR need short (Pin2 to Pin3) and (Pin4 to Pin5) to enable PS2 Keyboard




MIC-IN : Micro phone input with Pin-header

Pin No.	Signal
1	MIC Input Left
2	MIC Jack Detection
3	Audio Ground
4	MIC Input Right

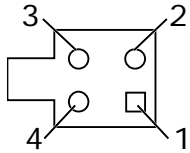


PWR1 : ATX 2x2 +12V Input

Pin No.	Signal	Pin No.	Signal
1	Ground	2	Ground
3	+12V	4	+12V




SATA PWR1, SATA PWR2 : SATA Power with Box-header (2.50mm)

Pin No.	Signal
1	+5V
2	Ground
3	Ground
4	+12V



SYSFAN : System FAN 3 Pin connector


Pin No.	Signal
1	Ground
2	Fan Power (+12V)
3	Speed Sense

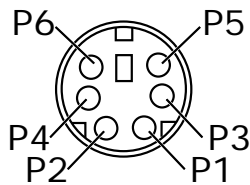

USB1_KBMS: USBx2, PS2 Keyboard and PS2 Mouse connector (PS2 Y-Cable)


Pin No.	Signal
U1	USB Power (+5V)
U2	USB Data0N
U3	USB Data0P
U4	USB_Ground
U5	USB Power (+5V)
U6	USB Data1N
U7	USB Data1P
U8	USB_Ground
P1	PS2_Ground
P2	PS2 Keyboard Data
P3	PS2 Mouse Data
P4	PS2 Power (+5V)
P5	PS2 Keyboard Clock
P6	PS2 Mouse Clock

USB3: USB3/4 Port with Pin-header (2.54mm)

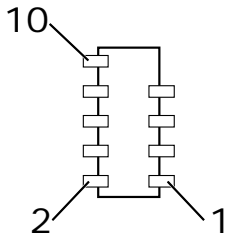


Pin No.	Signal	Pin No.	Signal
1	USB Power (+5V)	2	USB Power (+5V)
3	USB DATA4N	4	USB DATA5N
5	USB DATA4P	6	USB DATA5P
7	USB Ground	8	USB Ground
9	NC	10	Shield Ground

USB4 : USB6/7 Port with Pin-header (2.54mm)

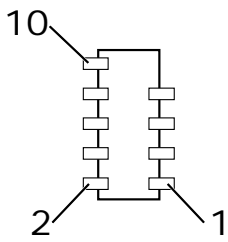

Pin No.	Signal	Pin No.	Signal
1	USB Power (+5V)	2	USB Power (+5V)
3	USB DATA6N	4	USB DATA7N
5	USB DATA6P	6	USB DATA7P
7	USB Ground	8	USB Ground
9	NC	10	Shield Ground

VGA2 : VGA with Box-header (2.0 mm)

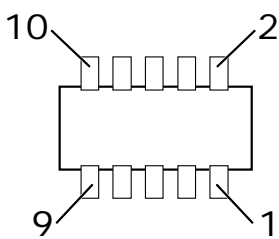

Pin No.	Signal	Pin No.	Signal
1	VGA_RED	2	VGA_DDC_DATA
3	VGA_GREEN	4	VGA_DDC_CLK
5	VGA_BLUE	6	Ground
7	VGA_HSYNC	8	Ground
9	VGA_VSYNC	10	Ground

Chapter 2 Hardware Installation

WMBX-1011-5250 is convenient for various hardware configurations, such as Memory Module, HDD, Compact Flash. The chapter 2 will show you how to install the hardware. The information is shown as bellow:


2.1 Open the cover

Step 1: Remove the cover screws at the bottom (2pcs).




2.2 Install the Memory Module

Insert the memory module.

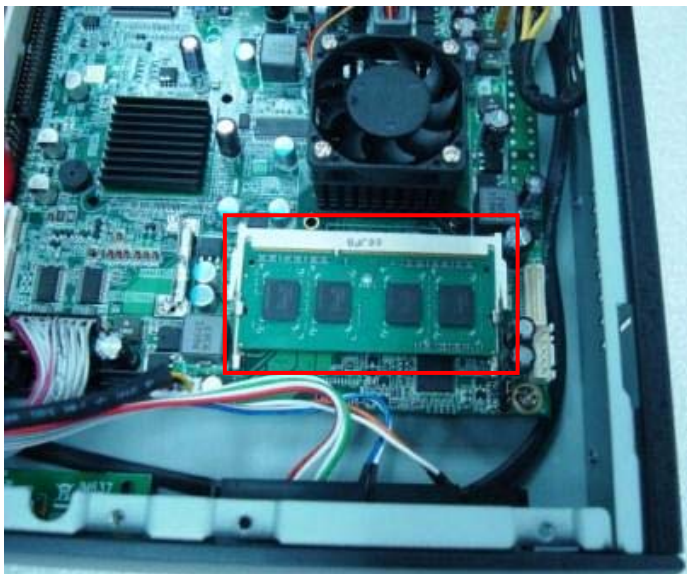

2.3 Install the HDD


Step 1: Remove HDD holder screw(4pcs).

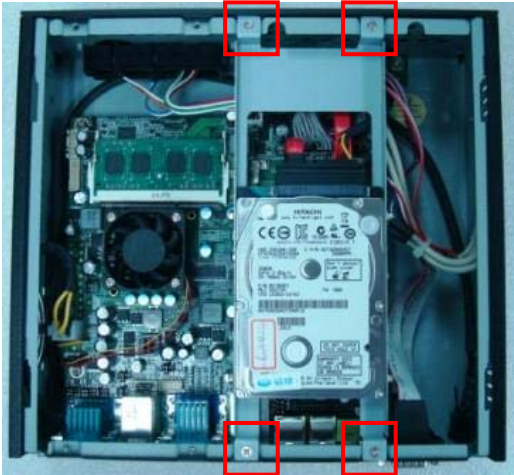

Step 2: Put HDD on holder and slide screw(4pcs).




Step 3: Put back screws the holde(4pcs), connector the SATA + Power cable.

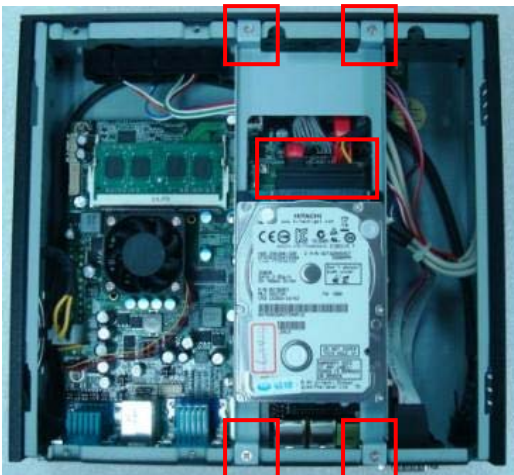


2.4 Install the mini-PCIe Expansion Module

Insert the mini-PCIe module (full size only).

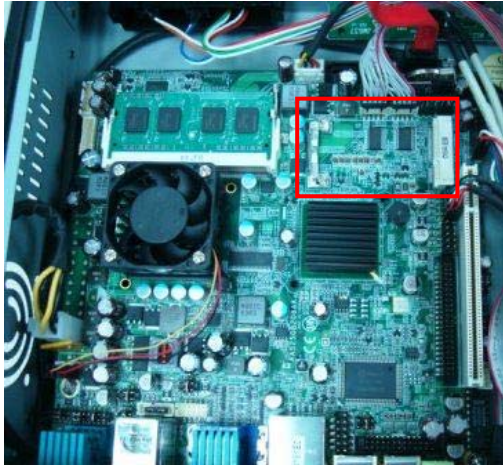

2.5 Install the Foot Pad

Connect the foot pad (4pcs).

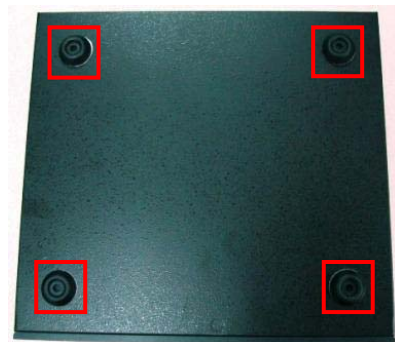

2.6 Install Wall Mount Kit (option)

Connect the wall mount kit screws (4pcs).




2.7 Install VESA Mount Kit (option)

Step 1: Connect VESA mount kit screws (4pcs) on WMBX-1011-5250.



Step 2: Connect VESA mount kit screws (4pcs) and put WMBX-1011-5250 on VESA mount kit.

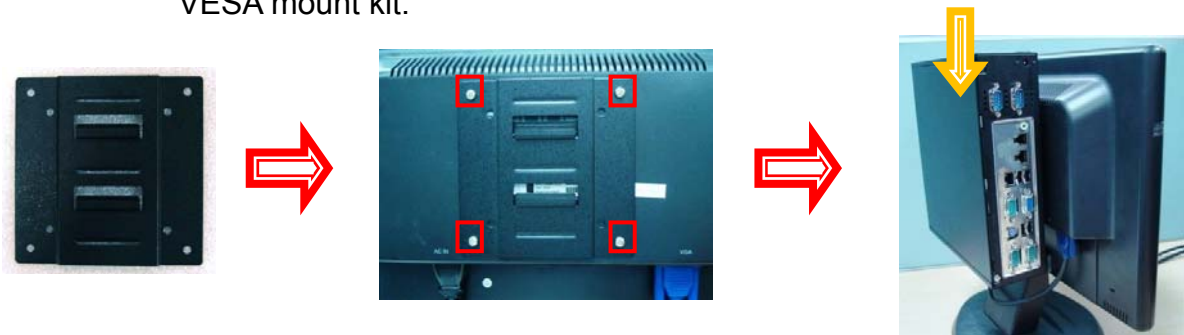

Chapter 3 BIOS Setup


This chapter introduces BIOS setup information.

Power on or reboot the system board, when screen appears message as “Press DEL to enter SETUP“. Press key to run BIOS SETUP Utility.


Note: The BIOS configuration for reference only, it may subject to change without prior notice.

3.1 Main Menu

Please use arrow keys to select item, then press <Enter> key to accept or enter the sub-menu.

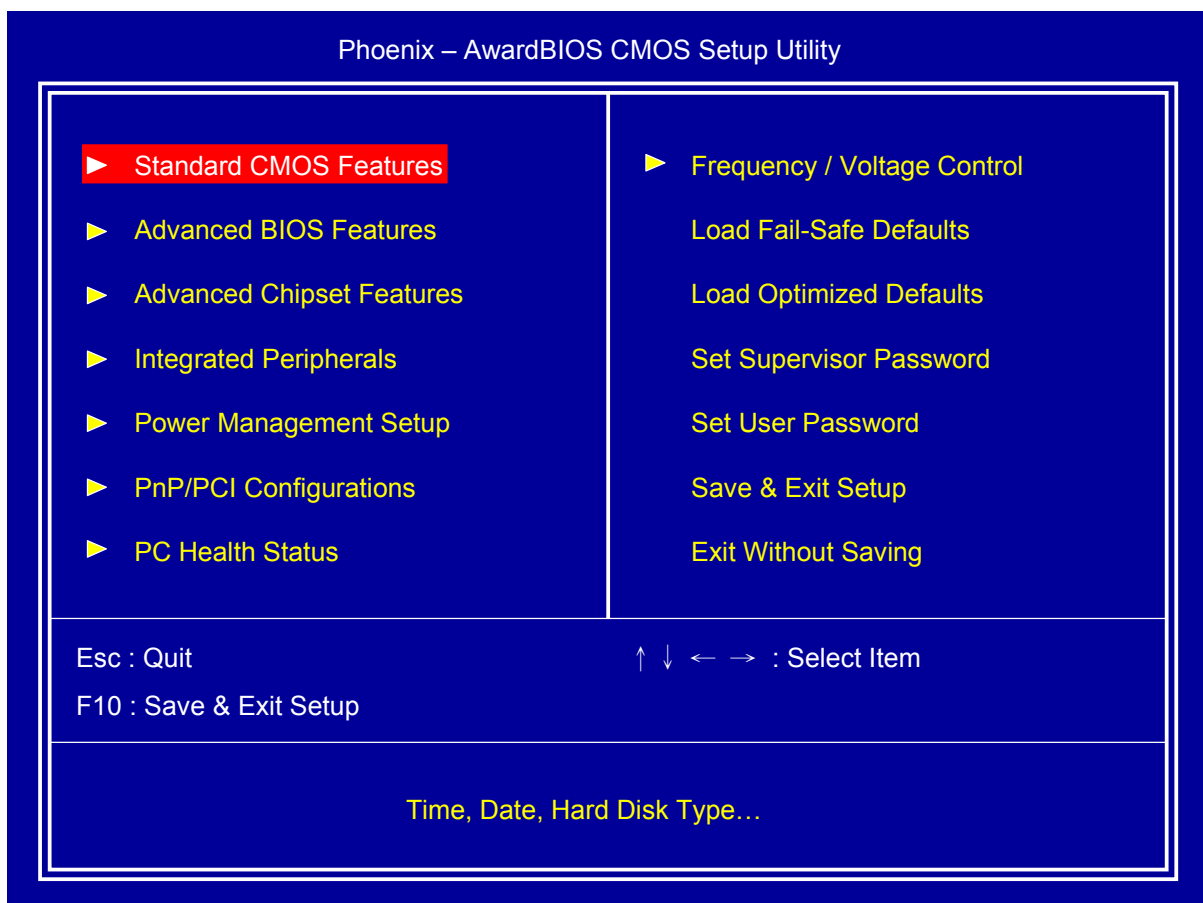

3.2 Standard CMOS Features

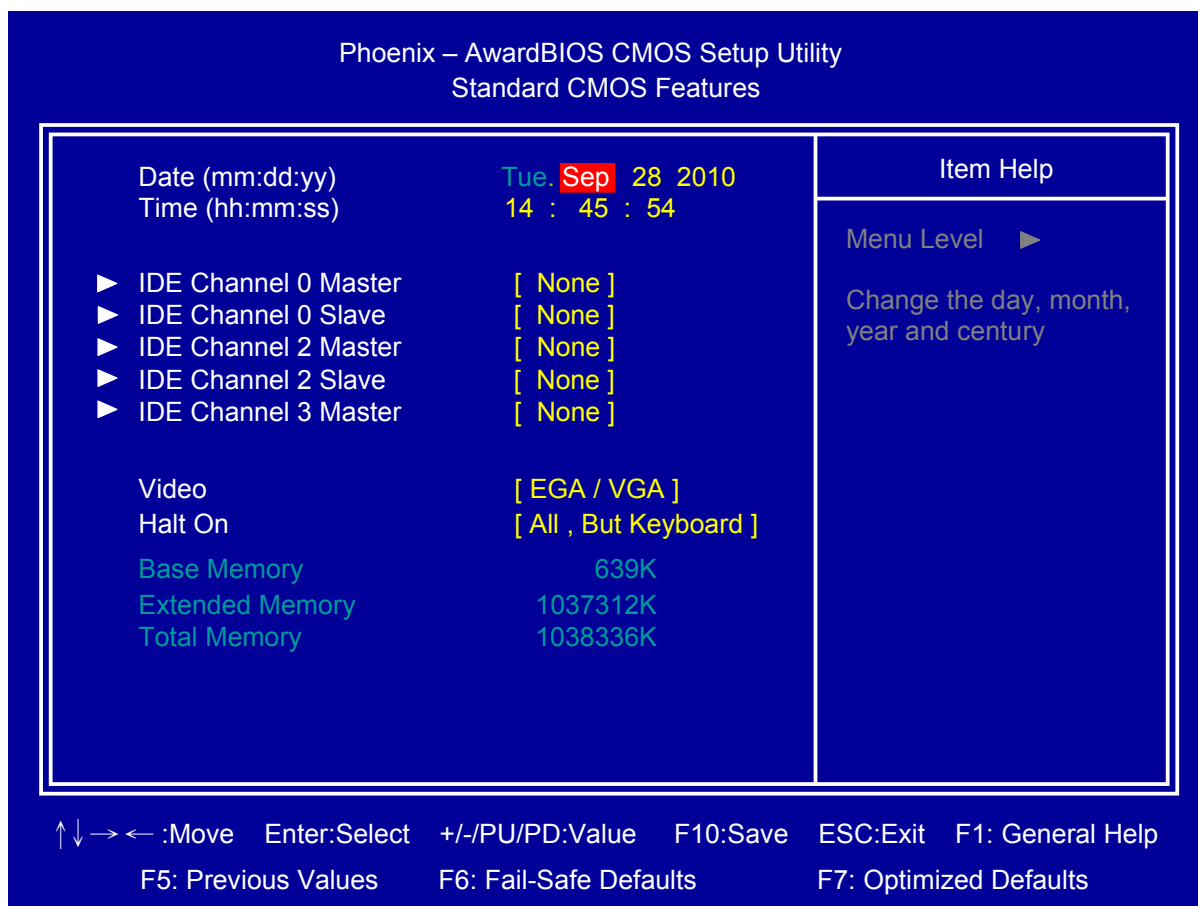

Date

Set system date.

Time

Set system time.

IDE Channel 0 Master/Slave

Press <Enter> for IDE device automatic detection.

IDE Channel 2 Master/Slave

Press <Enter> for IDE device automatic detection.

IDE Channel 3 Master

Press <Enter> for IDE device automatic detection.


Video

Select Video device type.

Halt on

Select stop procedure or ignore when error detected during POST (Power On Self Test).

3.3 Advanced BIOS Features

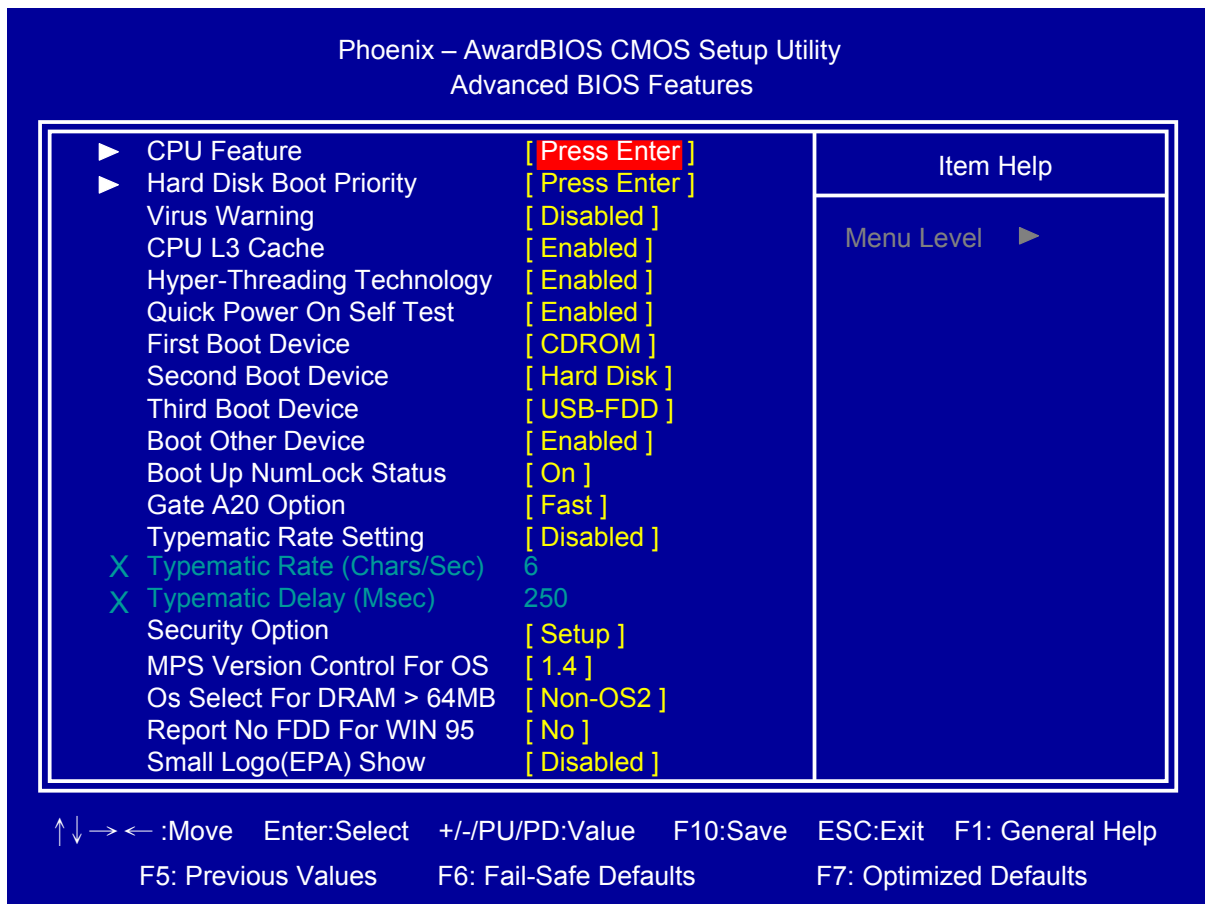

CPU Feature

Press <Enter> to select CPU parameter.

Hard Disk Boot Priority

Press <Enter> to select Hard Disk boot device priority.

Virus Warning

Select "Virus Warning"
Enabled/Disabled.

CPU L3 Cache

Select "CPU L3 Cache"
Enabled/Disabled.

Hyper-Threading Technology

Select "Hyper-Threading Technology"
Enabled/Disabled

Quick Power On Self Test

Select "Quick Power On Self Test"
Enabled/Disabled.

First/Second/Third Boot Device

Select boot device priority.

Boot Other Device

Select "Boot Other Device"
Enabled/Disabled.

Boot Up NumLock Status

Select <NumLock> key ON/Off when system boot up.

Gate A20 Option

Select Gate A20 controlled by Keyboard controller (Normal) or Port 92 (Fast).

Typematic Rate Setting

Select "Typematic Rate Setting" Enabled to set,

Typematic Rate (Chars/Sec): Number of characters repeated in one second.

Typematic Delay (Msec): When holding one key, set the time between the first and second character displayed.

Security Option

Select security mode,

Setup: Require password to permit BIOS setup utility.

System: Require password to permit boot-up and BIOS setup utility.

MPS Version Control For OS

Select MPS (Multiprocessor Specification) Version 1.4 to added extended configuration tables to improve support for multiple PCI bus configurations and improve future expandability. It is also required for a secondary PCI bus to work without the need for a bridge. Select Version 1.1 for older Operating Systems.

OS Select For DRAM > 64M

Select "OS2" only if you are running older version of IBM OS/2 Operating System with greater than 64MB of RAM on the system. Otherwise select "Non-OS/2" setting.


Report No FDD For WIN 95

If running Windows 95/98 without floppy diskdrive, select "Enabled" to release IRQ6. This is required to pass Windows 95/98's SCT test, If select "Disabled", BIOS will not report missing floppy drive to Win95/98.

Small Logo(EPA) Show

Select EPA (Environmental Protection Agency) Energy Star logo appears during the system boot-up process.

3.4 Advanced Chipset Features

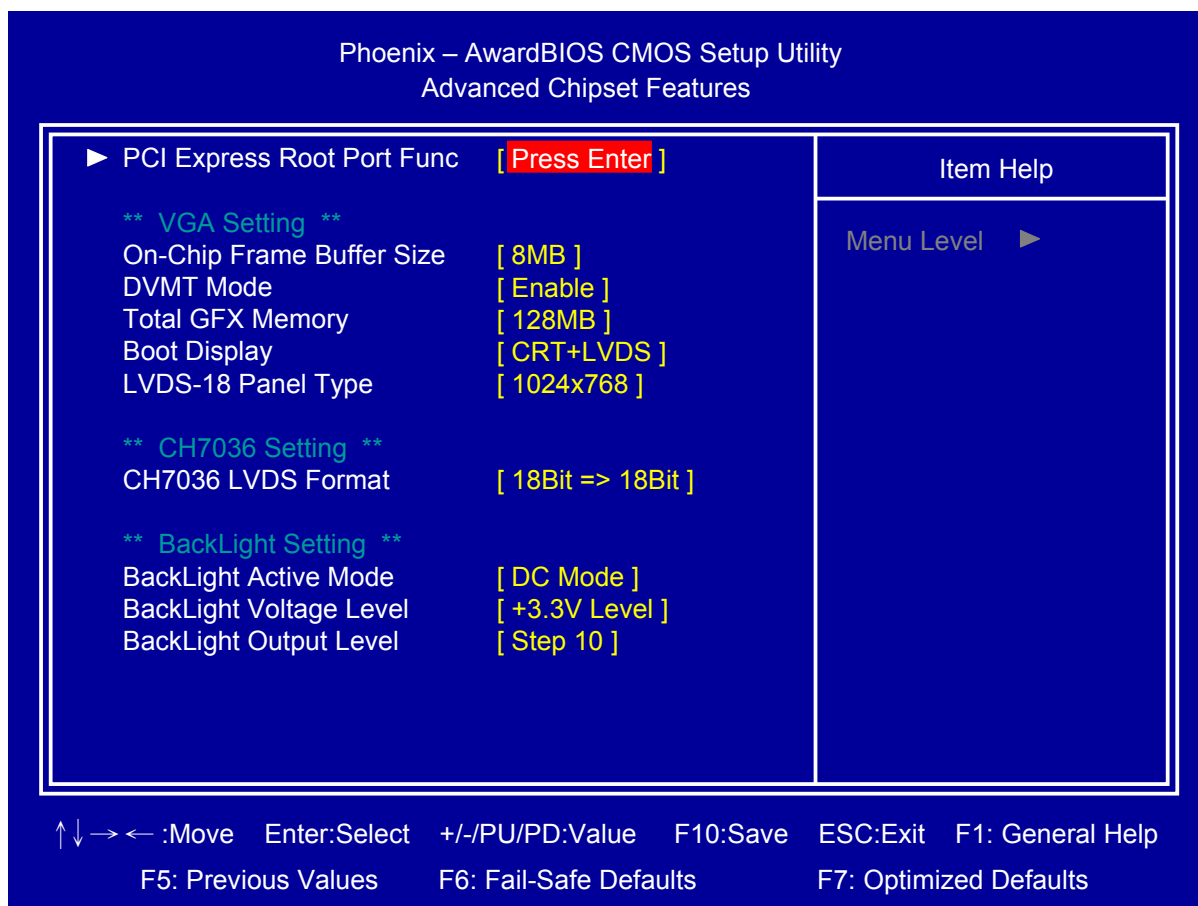

PCI Express Root Port Func

Press <Enter> to setting PCI Express function

On-Chip Frame Buffer Size

Select share system memory 1MB or 8MB.

DVMT Mode

DVMT (Dynamic Video Memory Technology) allowing the system to dynamically allocate memory resources according to the demands of the system at any point in time, that improve efficiency of the memory allocated to either system or graphics processor.

Total GFX Memory

Select Total GFX Memory: 128MB, 256MB, or MAX. (For Win XP, the MAX Value is base on system memory size, 512MB for 1GB DRAM, 768MB for 1.5GB to 2GB, 1GB fro above 2GB.)

Boot Display

Select boot display device type: CRT, LVDS, or CRT+LVDS.

LVDS-18 Panel Type

Select LCD 18 bit resolution

CH7036 LVDS Format

Select CH7036 LVDS Format type: 18Bit→18Bit or 18Bit→24Bit.

BackLight Active Mode

Select BackLight Active Mode: PWN Mode or DC Mode.

BackLight Voltage Mode

Select BackLight Voltage Mode: +5.0V Level or +3.3V Level.

BackLight Output Mode

Select BackLight Output Mode: Step1 to Step 10.

3.5 Integrated Peripherals

Phoenix – AwardBIOS CMOS Setup Utility
Integrated Peripherals

▶ OnChip IDE Device	[Press Enter]	Item Help
▶ Onboard Device	[Press Enter]	
▶ Super IO Device	[Press Enter]	
▶ SecondIO Device	[Press Enter]	
▶ USB Device Setting	[Press Enter]	

Menu Level ▶

↑↓→← :Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

OnChip IDE Device

Press <Enter> to set IDE and SATA device configuration.

Phoenix – AwardBIOS CMOS Setup Utility
OnChip IDE Device

	Item Help
IDE HDD Block Mode [Enabled]	Menu Level ▶
IDE DMA transfer access [Enabled]	
*** On-Chip Serial ATA Setting ***	
SATA Mode [IDE]	If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support
On-Chip Serial ATA [Enhanced Mode]	
*** On-Chip PATA Setting ***	
On-Chip Primary PCI IDE [Enabled]	
IDE Primary Master PIO [Auto]	
IDE Primary Slave PIO [Auto]	
IDE Primary Master UDMA [Auto]	
IDE Primary Slave UDMA [Auto]	
On-Chip Secondary PCI IDE [Enabled]	
IDE Secondary Master PIO [Auto]	
IDE Secondary Slave PIO [Auto]	
IDE Secondary Master UDMA [Auto]	
IDE Secondary Slave UDMA [Auto]	

↑↓→← :Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sector read/write.

IDE DMA transfer access

UDMA (Ultra DMA) is a DMA data transfer protocol that utilizes ATA commands and the ATA bus to allow DMA commands to transfer data at a maximum burst rate of 33 MB/s.

On-Chip Serial ATA Setting

There have three selections in “SATA mode”:

- IDE: Default
- RAID: Set this item to enable SATA AHCI function for WinXP-SPI+IAA driver support AHCI mode.
- AHCI: Enable SATA RAID function

If you select IDE, there will show “On chip Serial ATA” for you to set. There have five selections in “On chip Serial ATA”:

- Disabled: Disable on-board serial ATA function.
- Auto: Auto detect Serial ATA device.
- Combined Mode: SATA and PATA drives are auto-detected and placed in Legacy mode.
- Enhanced Mode: Default, SATA and PATA drives are auto-detected and placed in Native mode.
- SATA Only: Serial ATA function only.

On-Chip Primary PCI IDE

On-Chip Secondary PCI IDE

The chipset contains a PCI IDE interface with support for two IDE channels. Select Enabled to activate the IDE interface. Select Disabled to deactivate this interface, if you install a primary and/or secondary add-in IDE interface.

IDE Primary Master PIO

IDE Primary Slave PIO

Secondary Master PIO

Secondary Slave PIO

The four IDE PIO (Programmed Input/Output) fields let you set a PIOmode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

IDE Primary Master UDMA


IDE Primary Slave UDMA

IDE Secondary Master UDMA

IDE Secondary Slave UDMA

UDMA (Ultra DMA) is a DMA data transfer protocol that utilizes ATA commands and the ATA bus to allow DMA commands to transfer data at a maximum burst rate of 33 MB/s. When you select Auto in the four IDE UDMA fields (for each of up to four IDE devices that the internal PCI IDE interface supports), the system automatically determines the optimal data transfer rate for each IDE device.

Onboard Device

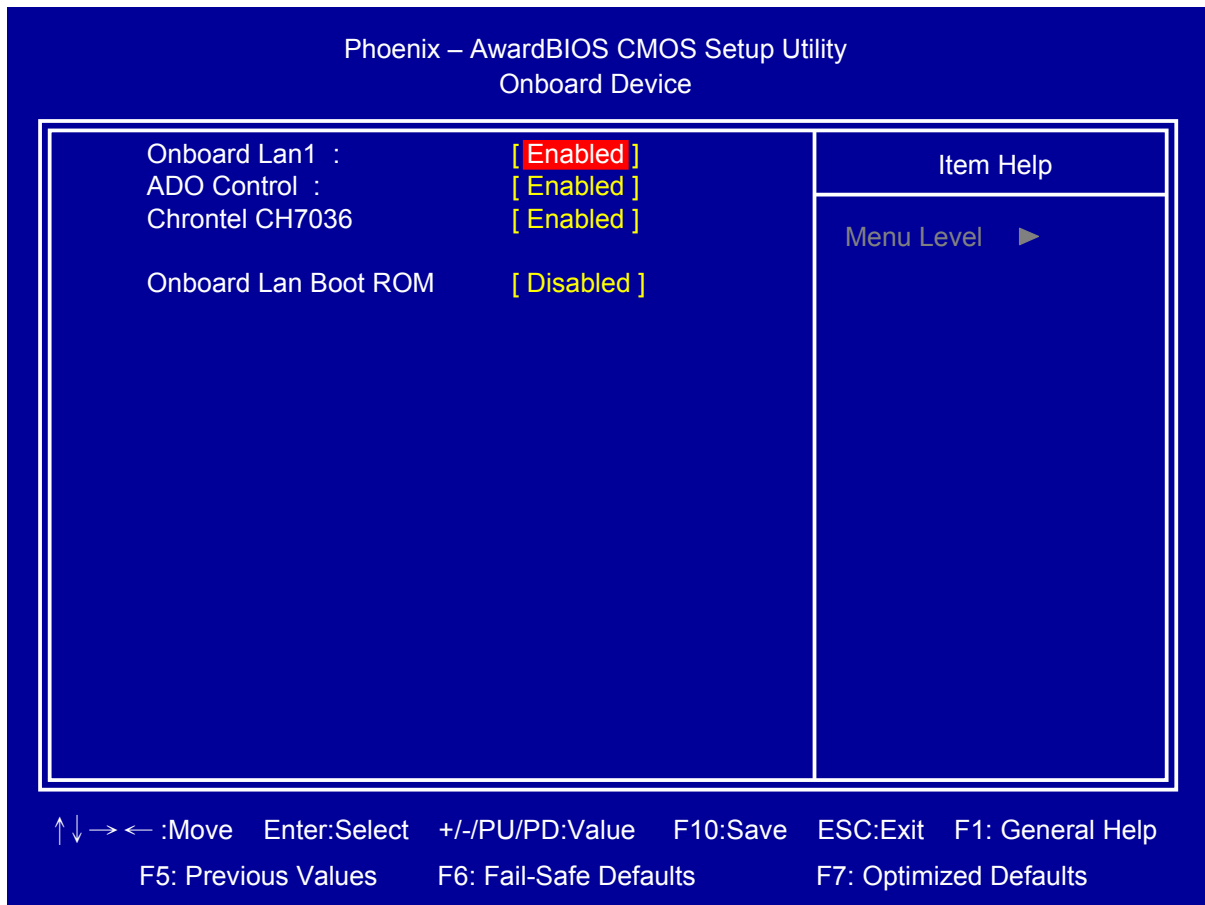

Onboard Lan1

Enable/Disable onboard Lan1.

ADO Control

Enable/Disable Audio control.

Chrontel CH7036


Select Enable or Disabled Chrontel CH7036.

Onboard Lan Boot ROM

Decide whether to invoke the boot ROM of the onboard LAN chip

Super IO Device

Press <Enter> to select Serial, Parallel and "I" configuration.

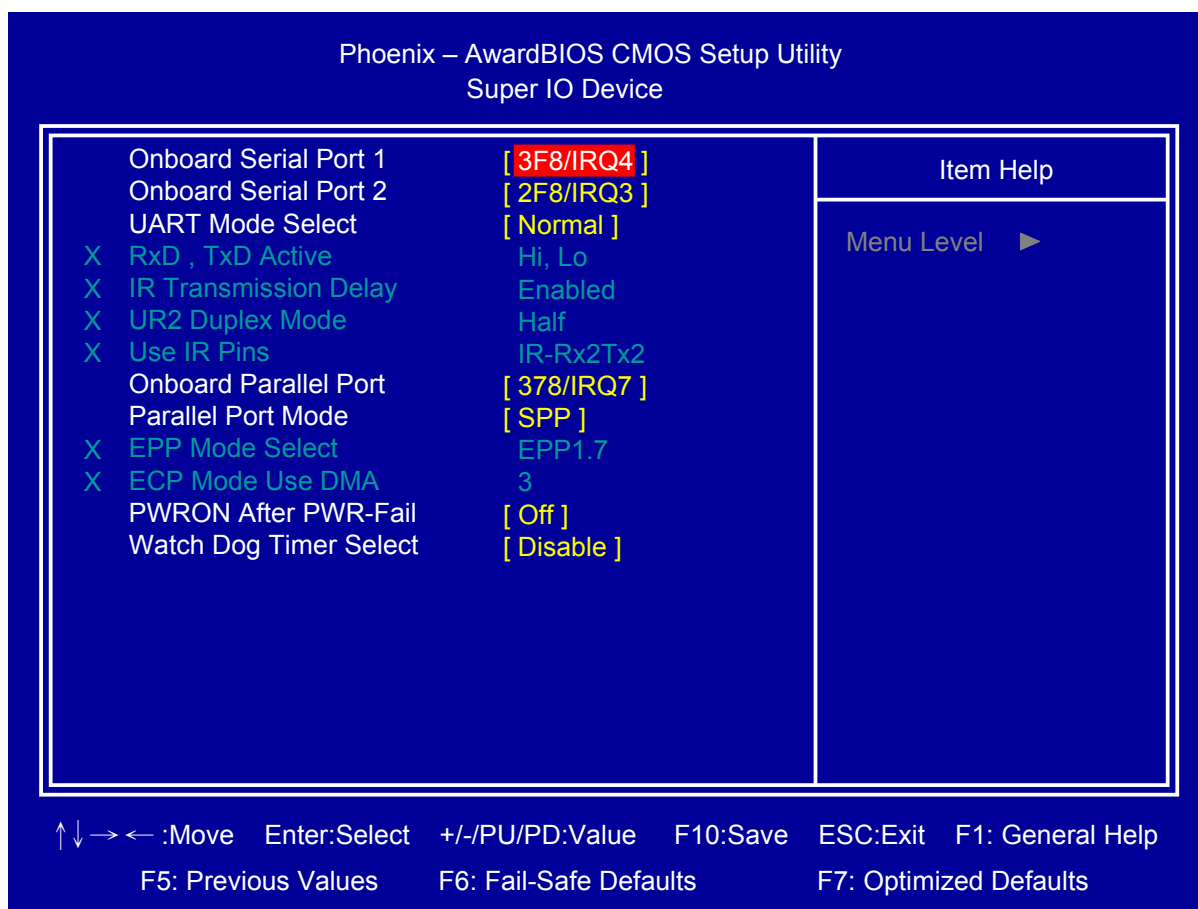

Onboard Serial Port 1

Select serial port 1 address: Disabled, 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, or Auto.

Onboard Serial Port 2

Select serial port 2 address: Disabled, 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, or Auto.

UART Mode Select

Select UART Mode: IrDA, ASKIR, or Normal.

Onboard Parallel Port

Select onblard parallel port: Disabled, 378/IRQ7, 278/IRQ5, or 3BC/IRQ7.

Parallel Port Mode

Select Parallel Port Mode: SPP, EPP, ECP, ECP+EPP, or Normal.


PWRON After PWR-Fail

Select Power ON after Off/On

Watch Dog Timer Select

Select Watch dog Disabled or set timer value: 10sec, 20sec, 30sec, 40sec, 1 min, 2min, or 4min.

Second IO Device

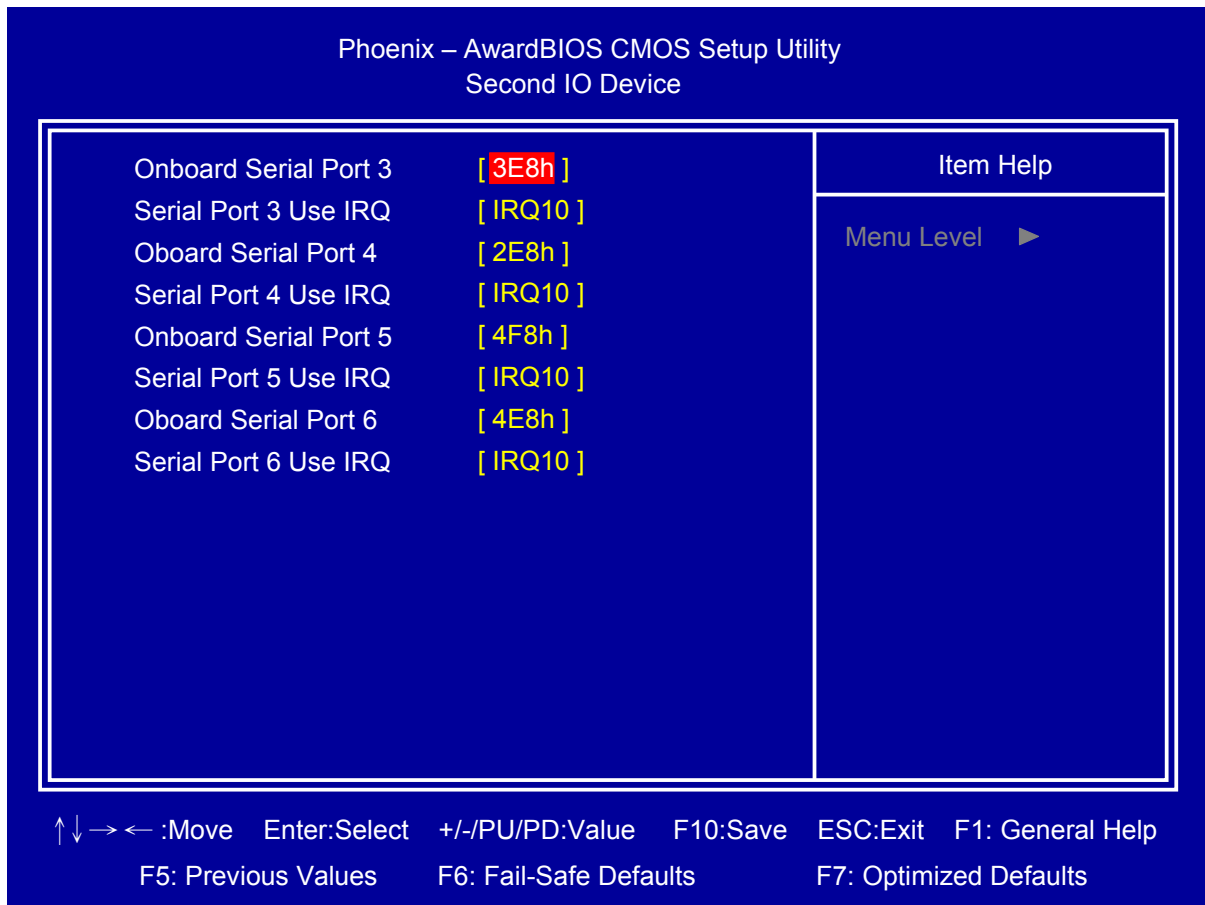

Onboard Serial Port 3/4/5/6

Select serial port address.

Serial Port 3/4/5/6 Use IRQ

Select serial port IRQ. Support IRQ sharing mode.

USB Device Setting


Press <Enter> to select USB device configuration.

Phoenix – AwardBIOS CMOS Setup Utility
USB Device Setting

USB 1.0 Controller	[Enabled]	Item Help Menu Level ► [Enable] or [Disable] Universal Host Controller Interface for Universal Serial Bus.
USB 2.0 Controller	[Enabled]	
USB Operation Mode	[High Speed]	
USB Keyboard Function	[Enabled]	
USB Mouse Function	[Enabled]	
USB Storage Function	[Enabled]	
*** USB Mass Storage Device Boot Setting ***		

↑↓→← :Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

3.6 Power Management Setup

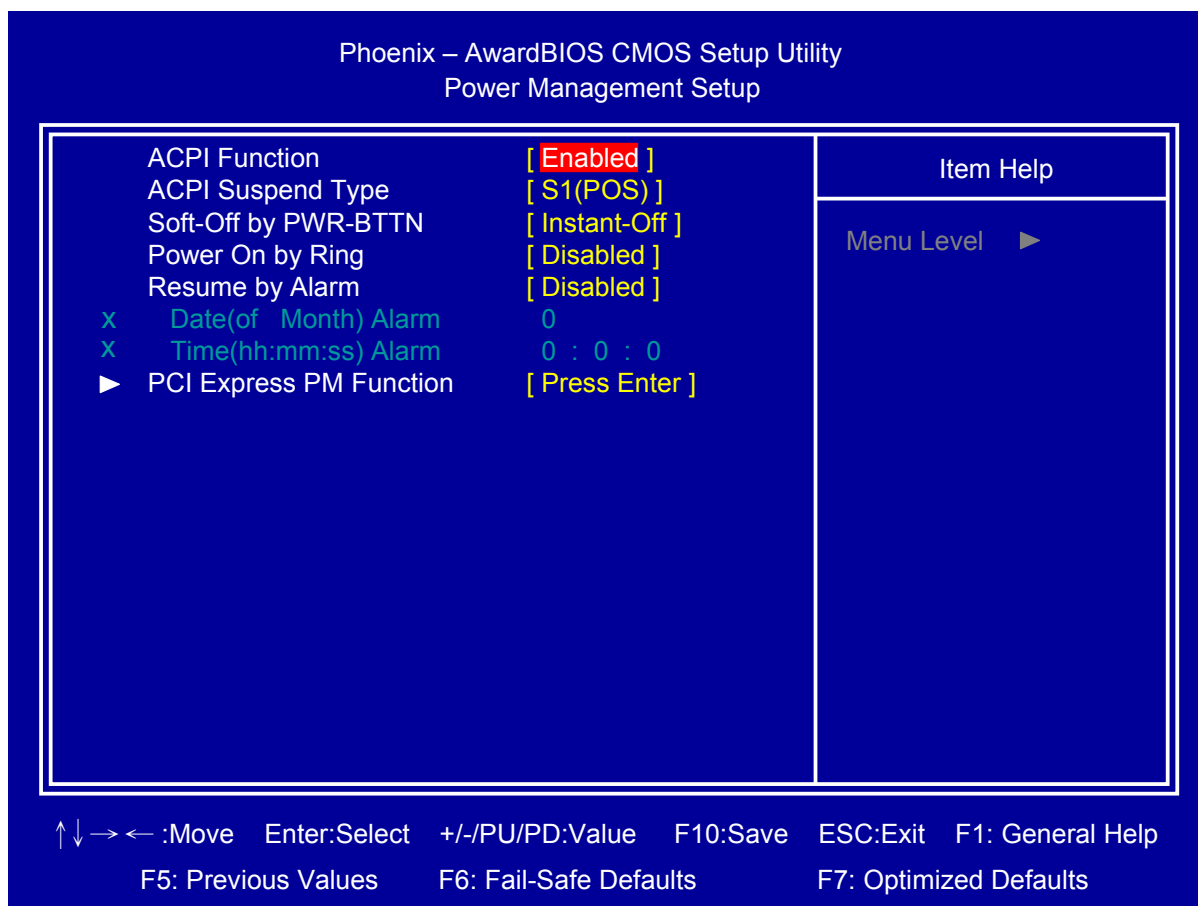

ACPI Function

Select ACPI (Advanced Configuration and Power Management) Enabled/Disabled.

ACPI Suspend Type

Select S1(POS) type.

Soft-Off by PWR_BTTN

Select power button function,

Instant-off: Press power button will power off instantly.

Delay 4 Sec: Press power button 4 second to power off.

Power On by Ring


Select Power on by Ring Indicator signal from Modem.

Resume by Alarm

Set date and time to power on system from soft-off state.

PCI Express PM Function


Press <Enter> to select “Wake-up by LAN” Enabled/Disabled.

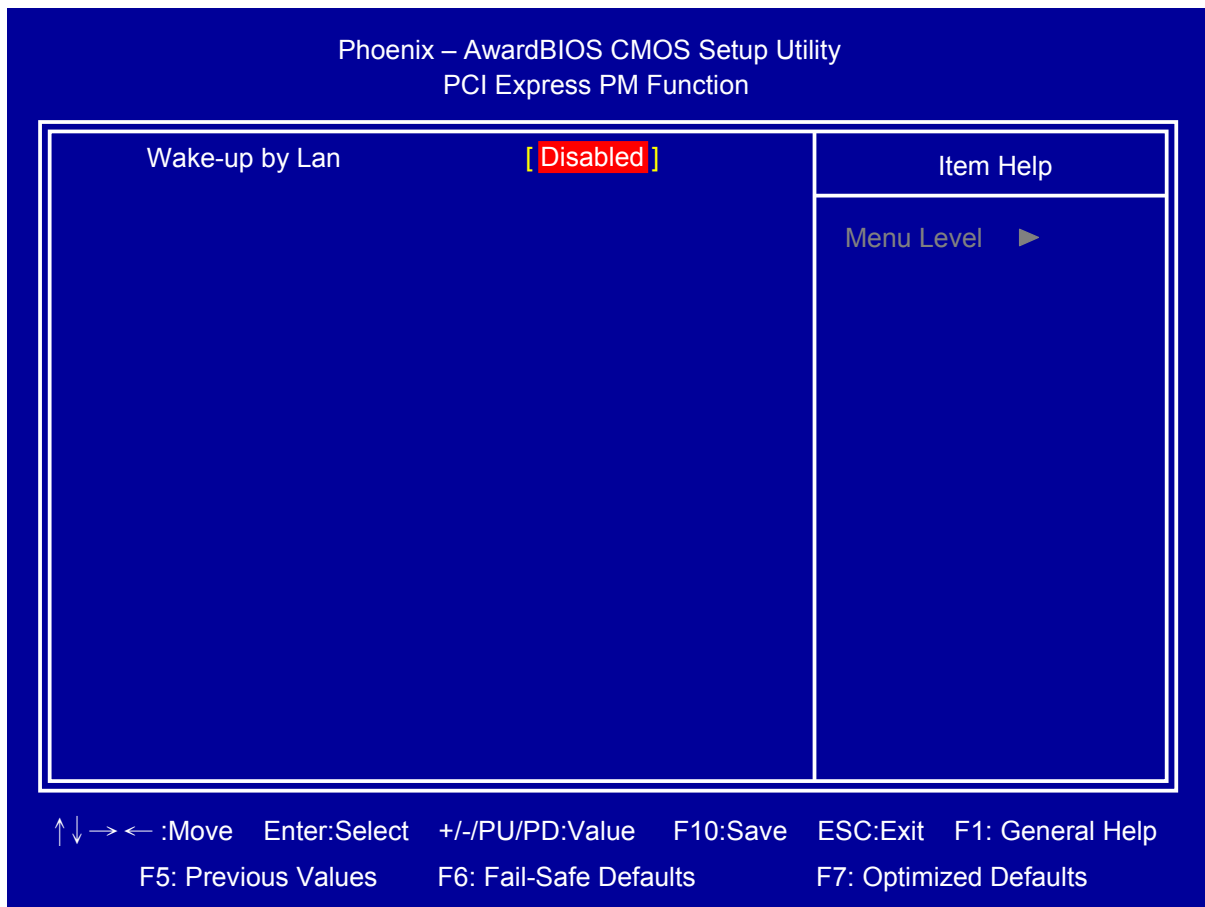

Wake-up by Lan

Select wake-up by Lan Enabled/Disabled.

3.7 PnP/PCI Configurations

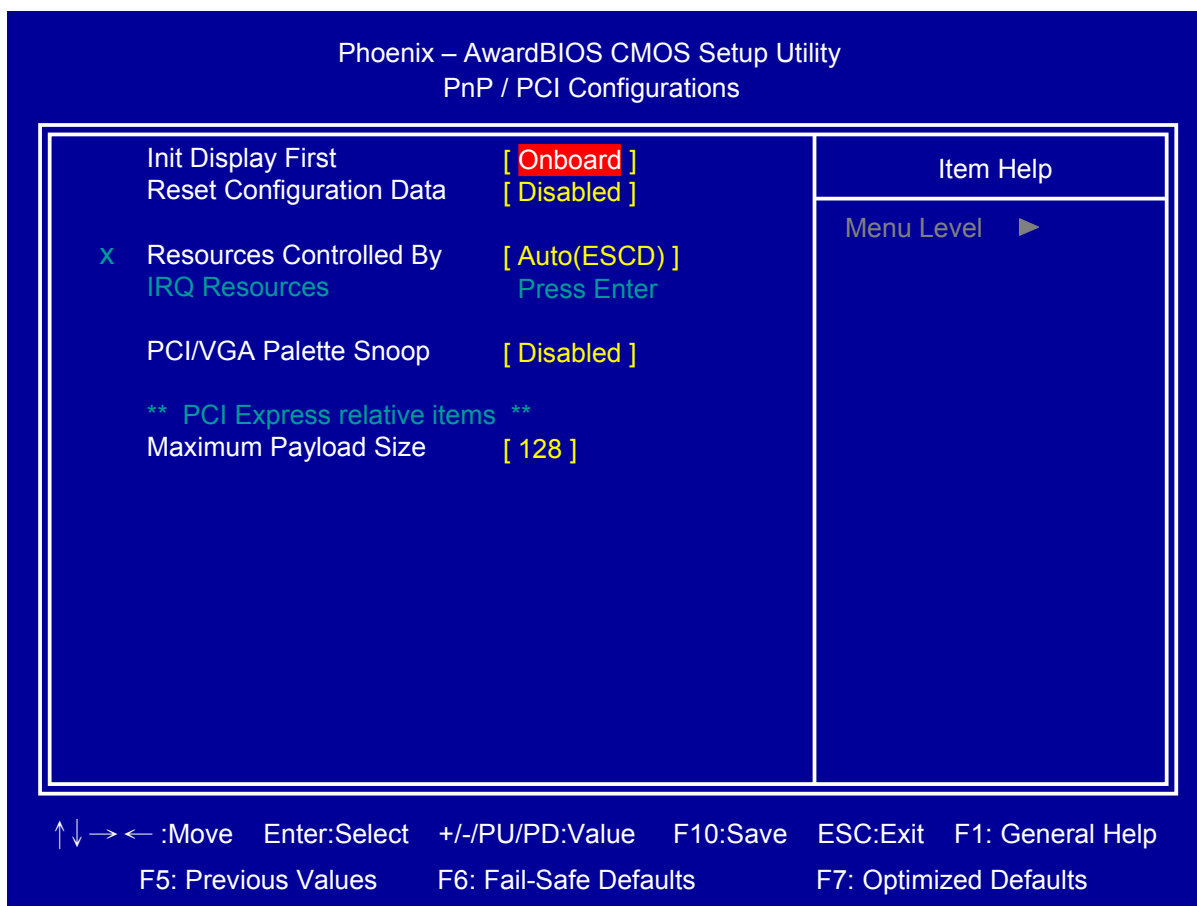

Init Display First

Select initial display by PCI or Onboard device.

Reset Configuration Data

Select Enabled to reset Extended System Configuration Data (ESCD) when you exit BIOS setup utility, if you have installed new add-on card and the system reconfiguration has caused such a serious conflict that the OS cannot boot.

Resources Controlled By

BIOS can automatically configure all the boot and Plug and Play compatible devices.

If you choose Auto, you cannot select IRQ DMA and memory base address fields, since BIOS automatically assigns them.


PCI/VGA Palette Snoop

Select PCI/VGA Palette Snoop Enabled/Disabled.

Maximum Payload Size

Set maximum TLP payload size for the PCI Express devices. The unit is byte.

3.8 PC Health Status

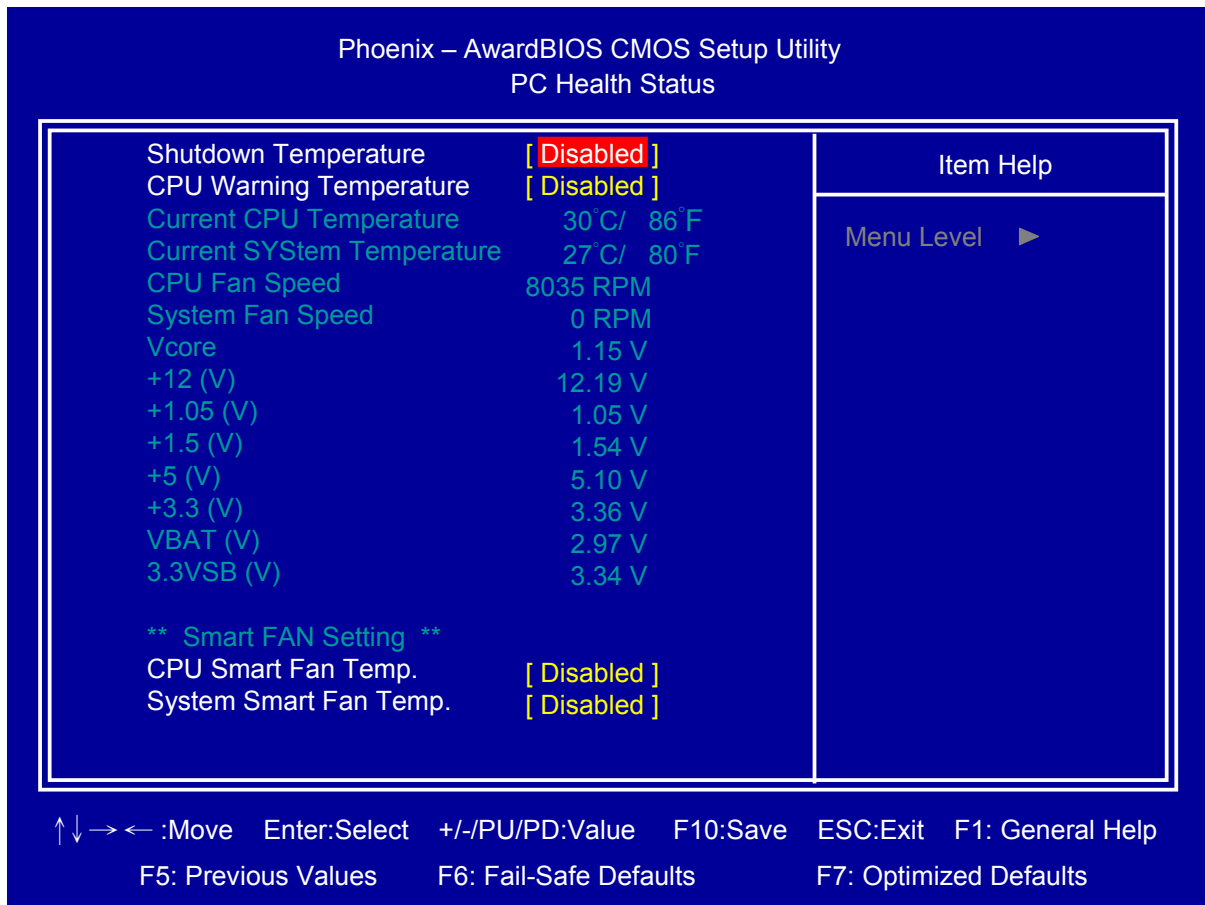

Shutdown Temperature

If CPU temperature reaches the setting value will automatic shutdown system.

CPU Warning Temperature

If CPU temperature reaches the setting value will beep in DOS mode.


CPU Smart Fan Temperature

Setup CPU Smart FAN temperature.

System Smart Fan Temp.

Setup System Smart FAN temperature.

3.9 Frequency/Voltage Control

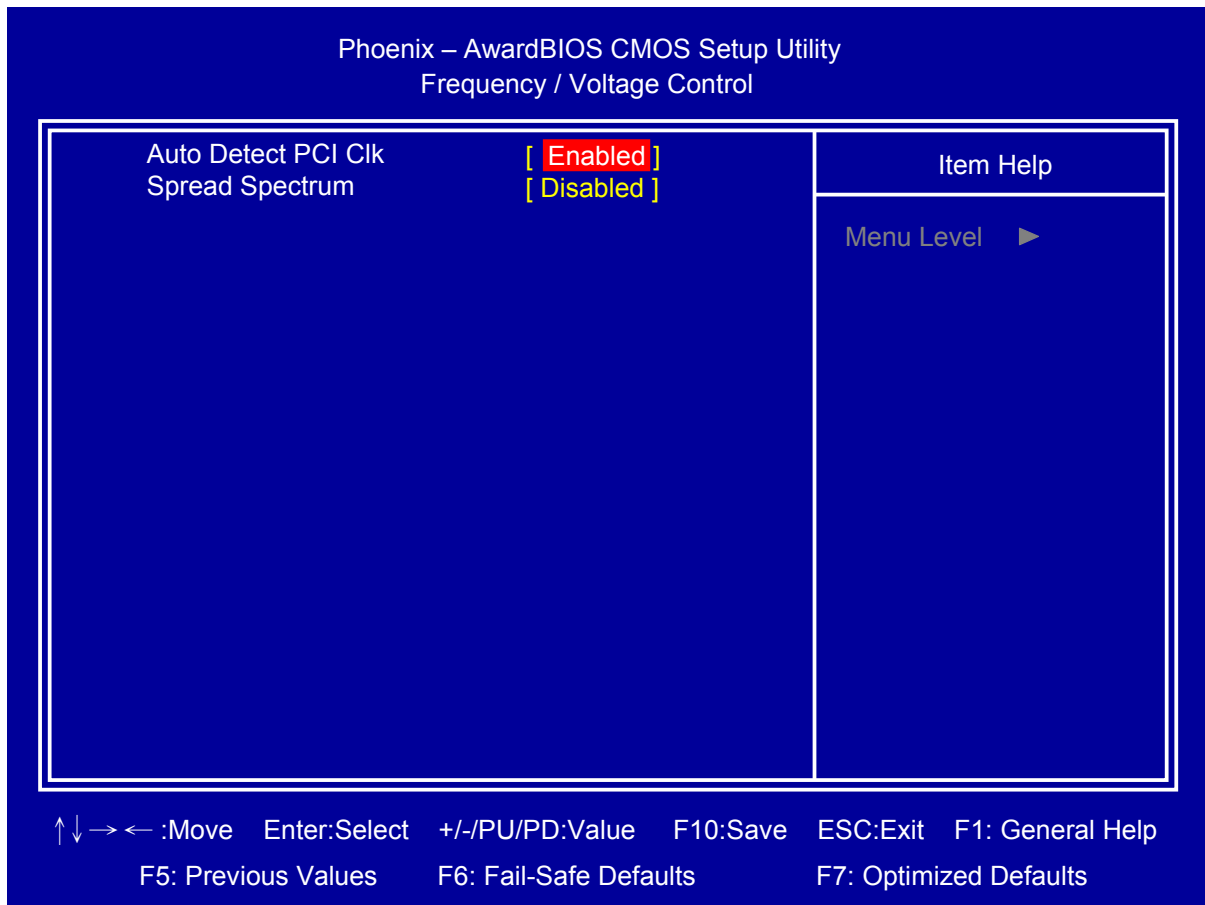


Auto Detect PCI Clk

Select "Auto Detect PCI Clk" Enabled/Disabled

Spread Spectrum


Select "Spread Spectrum" Enabled/Disabled.

3.10 Load Fail-Safe Defaults

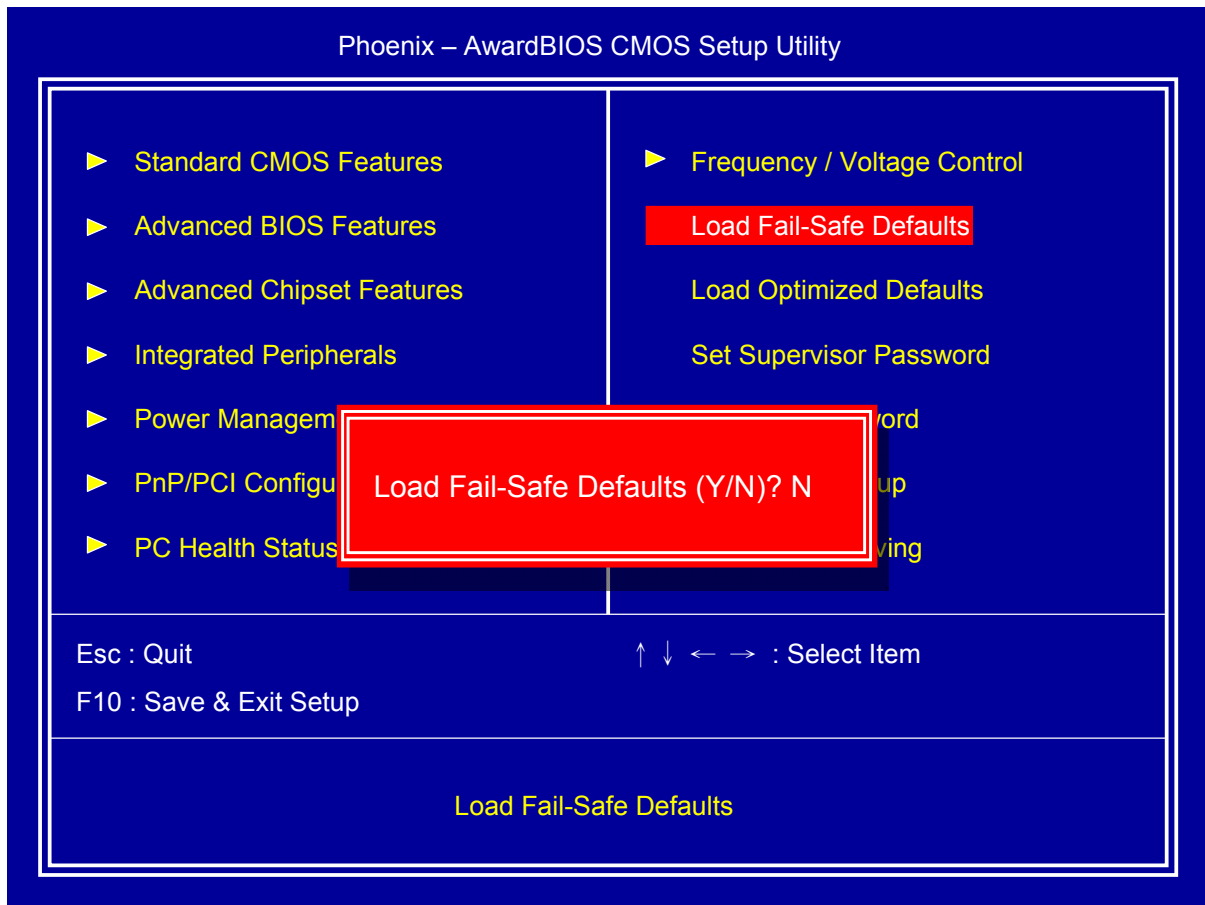


This item will set configuration for non optimized system operation.

3.11 Load Optimized Defaults

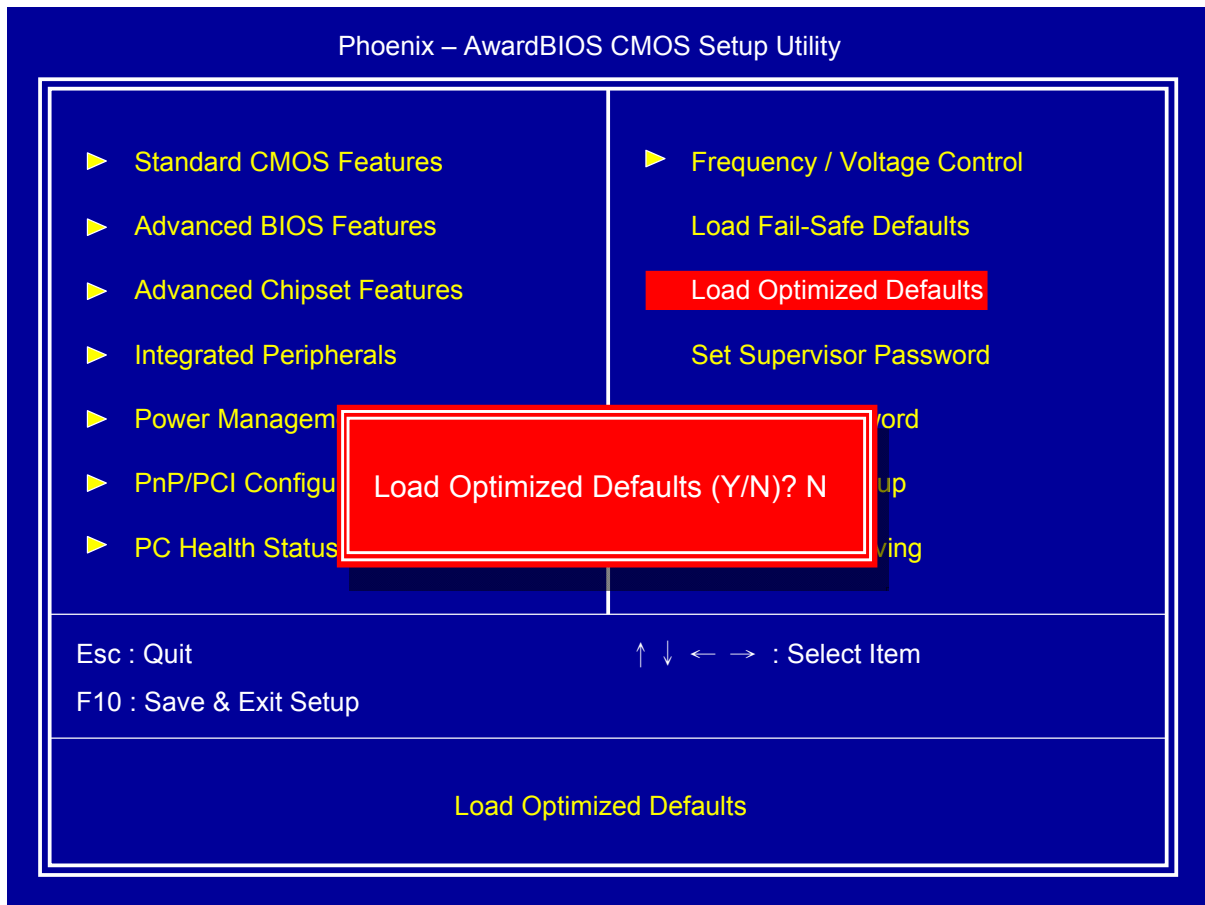


This item will restore factory default setting for optimized system operation.

3.12 Set Supervisor Password

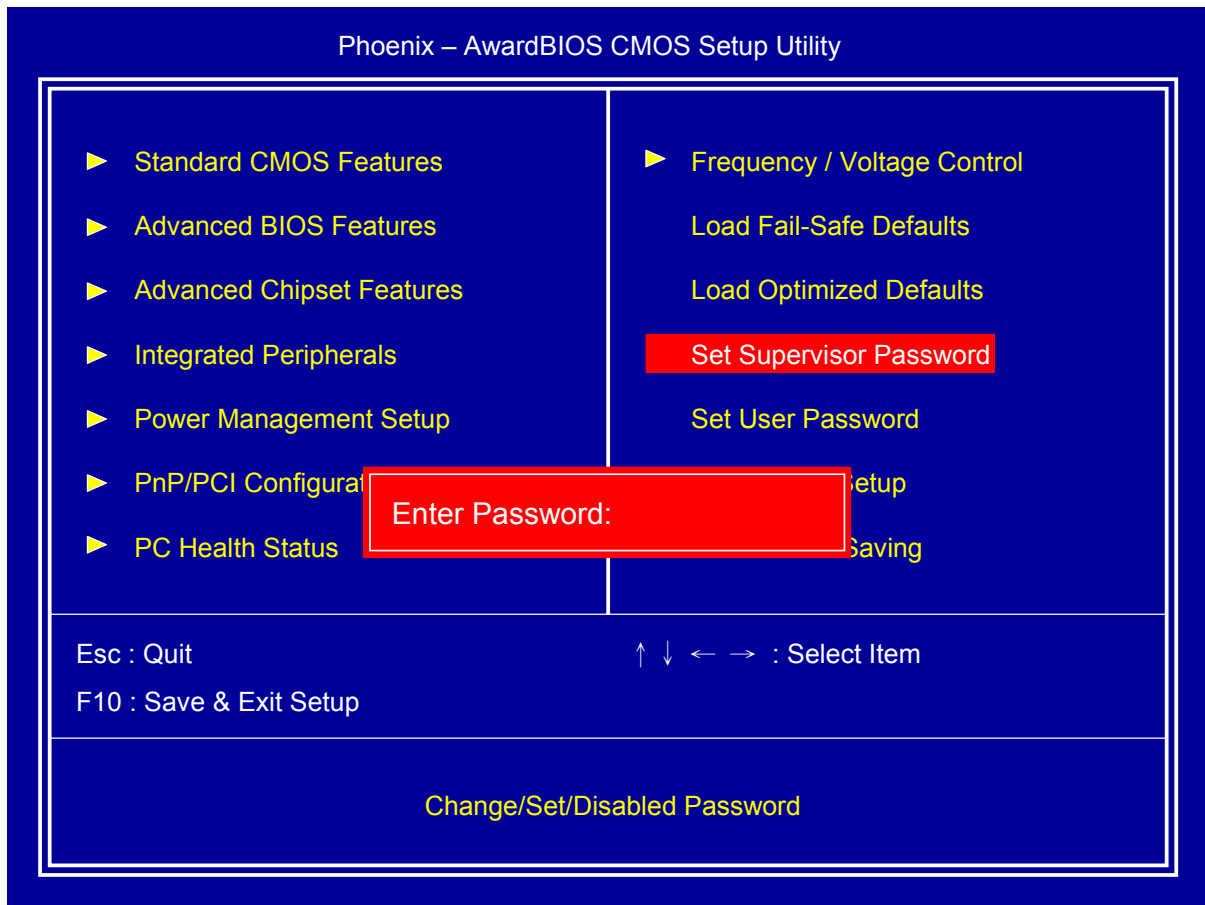


If set supervisor password, it will request typing password to enter BIOS setup utility.

3.13 Set User Password

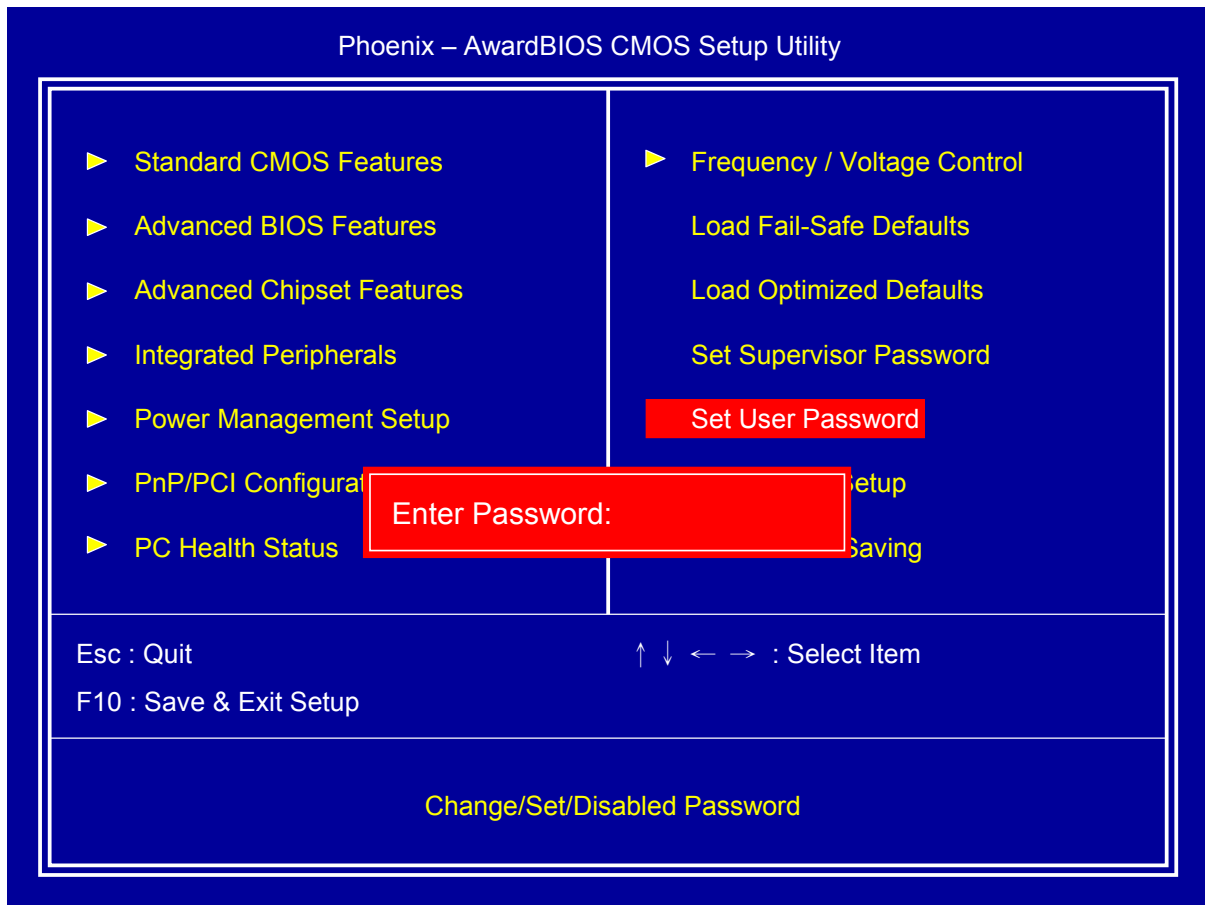


If set user password will request typing password to enter BIOS setup utility, and does not allow modifying configuration.

3.14 Save & Exit Setup

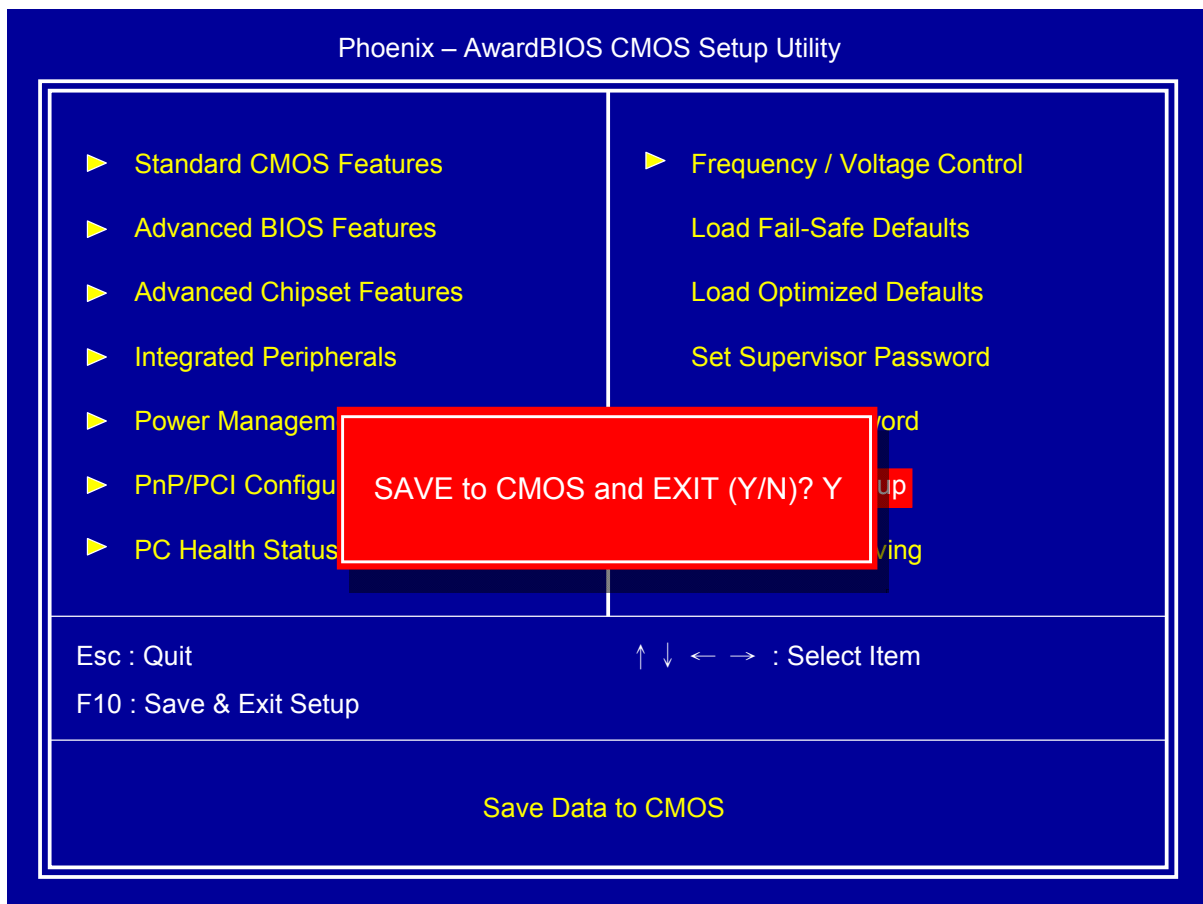

This item confirm save configuration or not before exit BIOS setup utility, Press <Y> and <Enter> to save configuration, then reboot system. Press <N> and <Enter> will back to BIOS setup utility.

3.15 Exit Without Saving

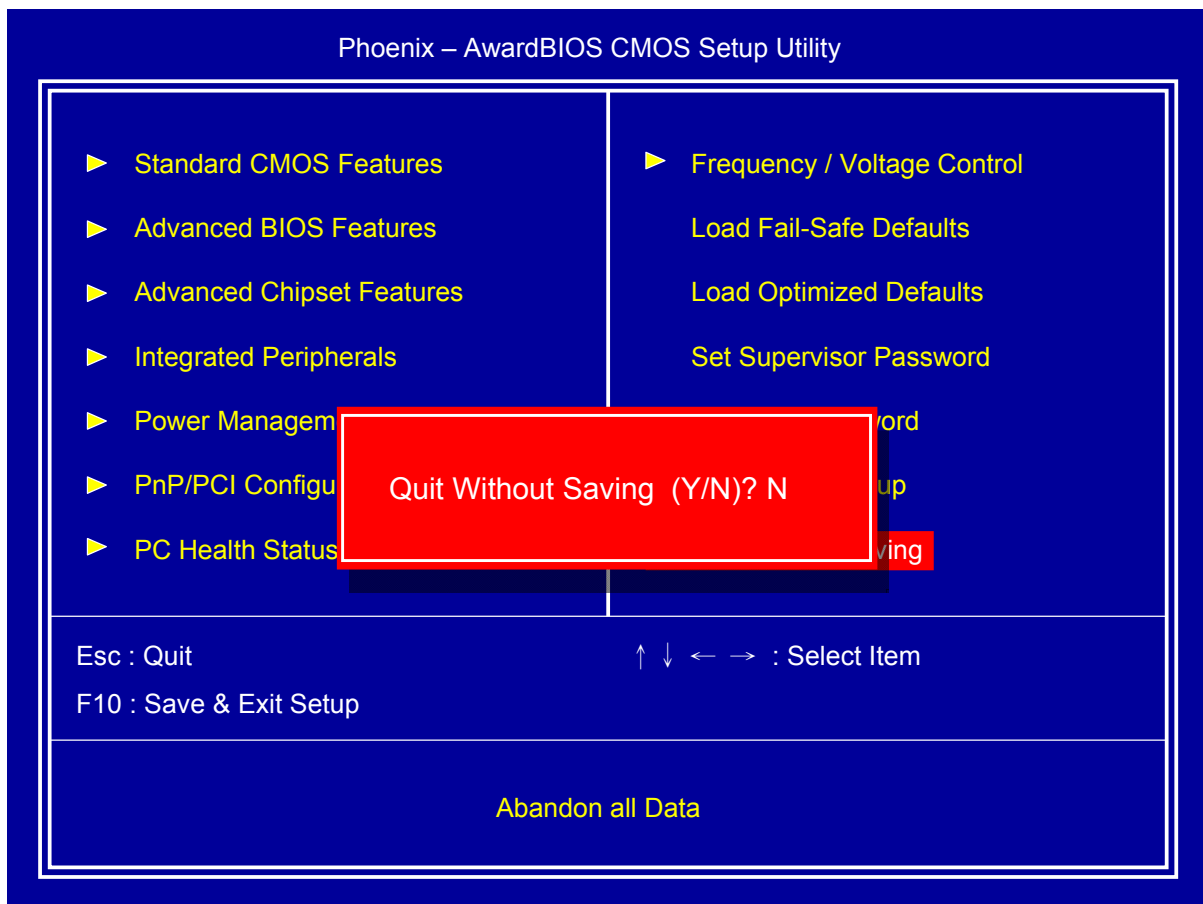

This item confirm save configuration or not before quit BIOS setup utility, Press <Y> and <Enter> will not save configuration, then reboot system. Press <N> and <Enter> will back to BIOS setup utility.

Chapter 4 Drivers Installation

This chapter introduces driver installation information.

Please insert the utility CD to CD-ROM drive, the install menu will appear automatically, if the install menu does not list suitable driver of Operate System or appear automatically, please select corresponding driver of utility CD to install.

The Windows XP driver installation steps are as below.

4.1 Intel Chipset Device Software

Step 1. Click “Next” to continue.



Step 2. Read License Agreement and click “Yes” to continue.



Step 3. Click “Next” to continue.



Step 4. Click “Finish” to complete setup.




4.2 Intel Graphic Media Accelerator Driver


Step 1. Click “Next” to continue.




Step 2. Read License Agreement and click “Yes” to continue.

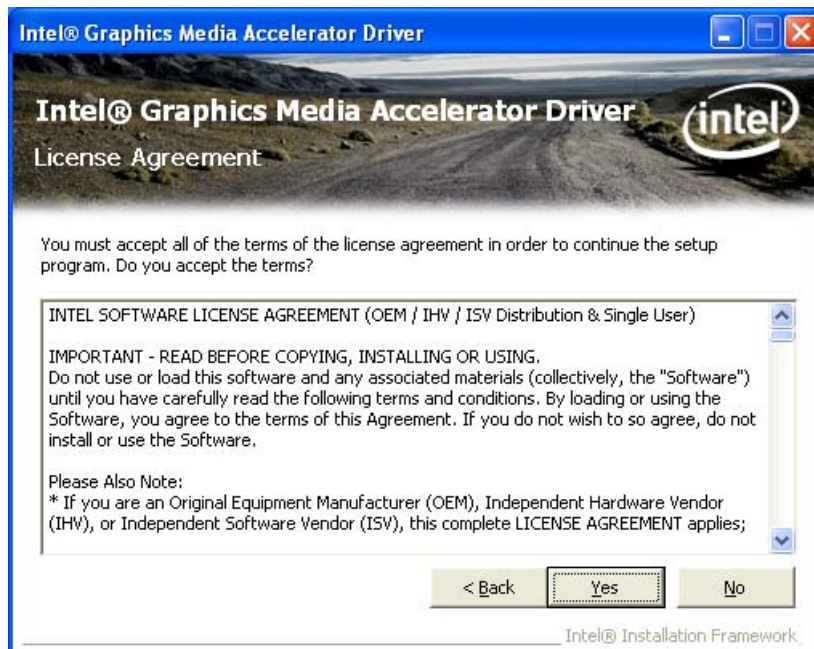


Step 3. Click “Next” to continue.

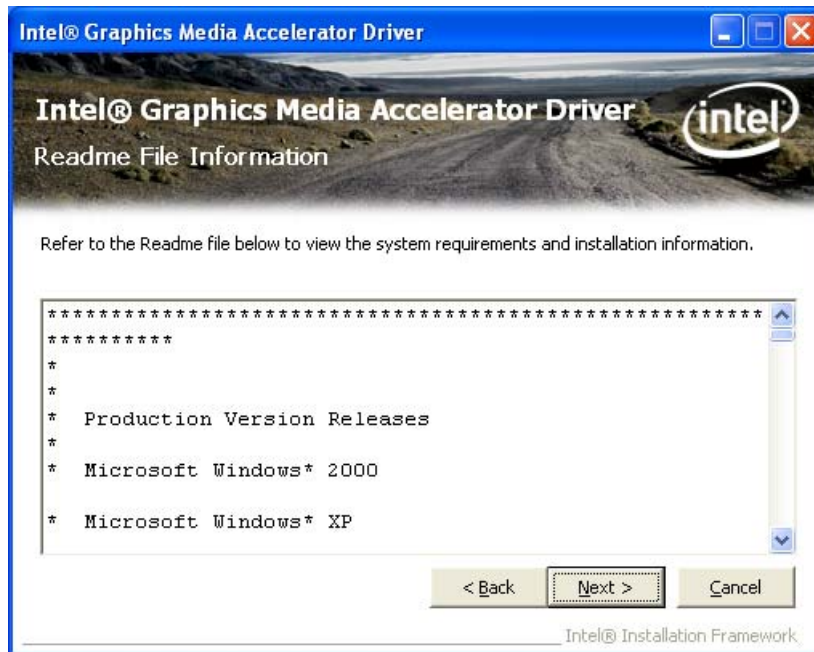

Step 4. Click “Next” to continue.

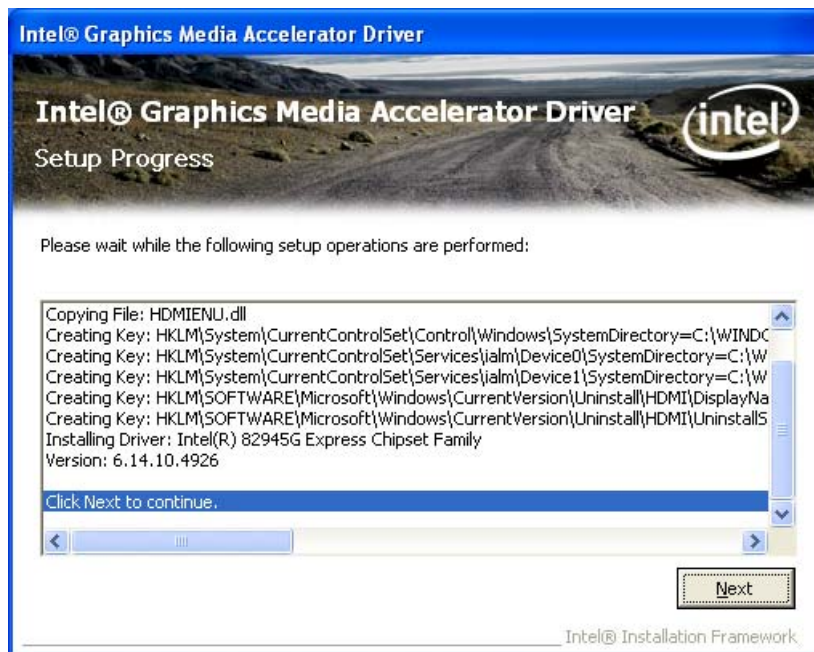


Step 5. Click “Finish” to complete setup.

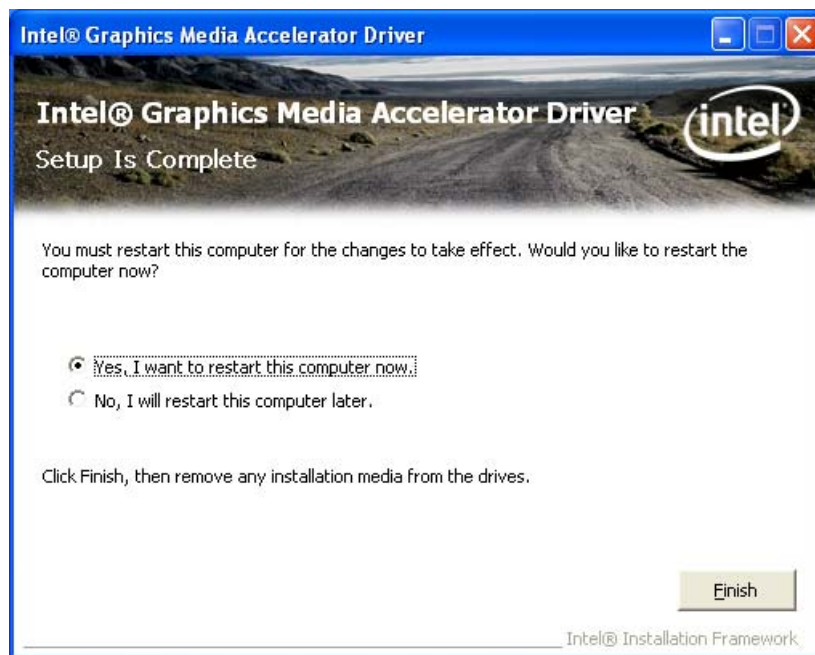


4.3 LAN Driver


Step 1. Click “Next” to continue.

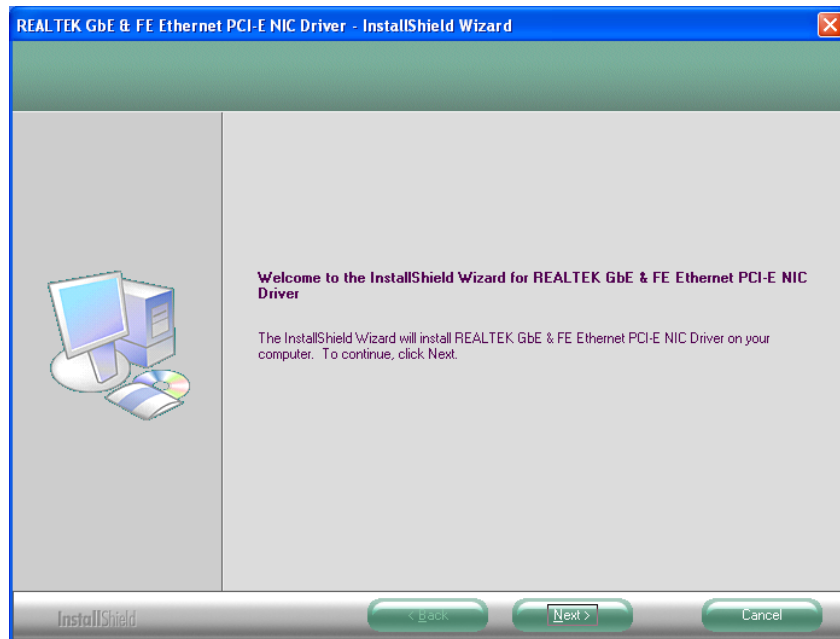

Step 2. Click “Install” to continue.

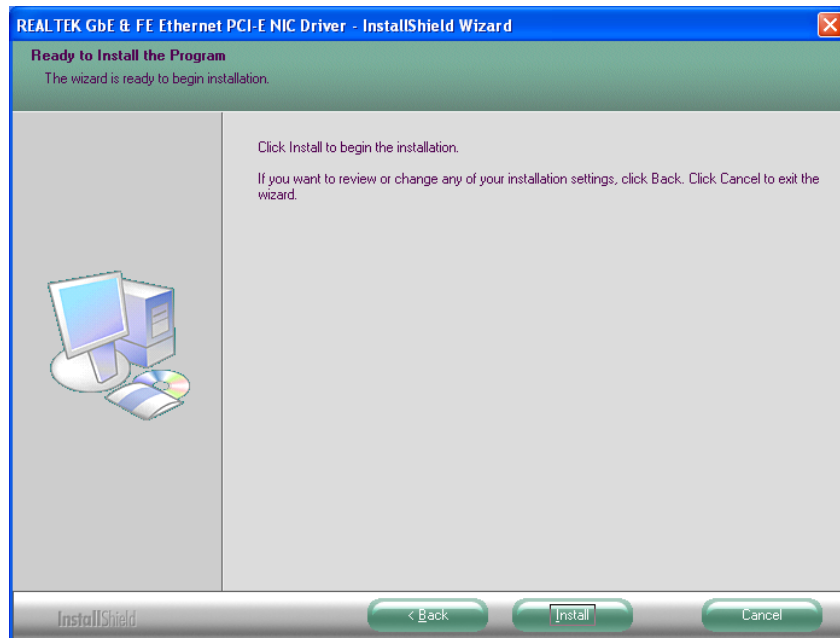


Step 3. Click “Finish” to complete setup.

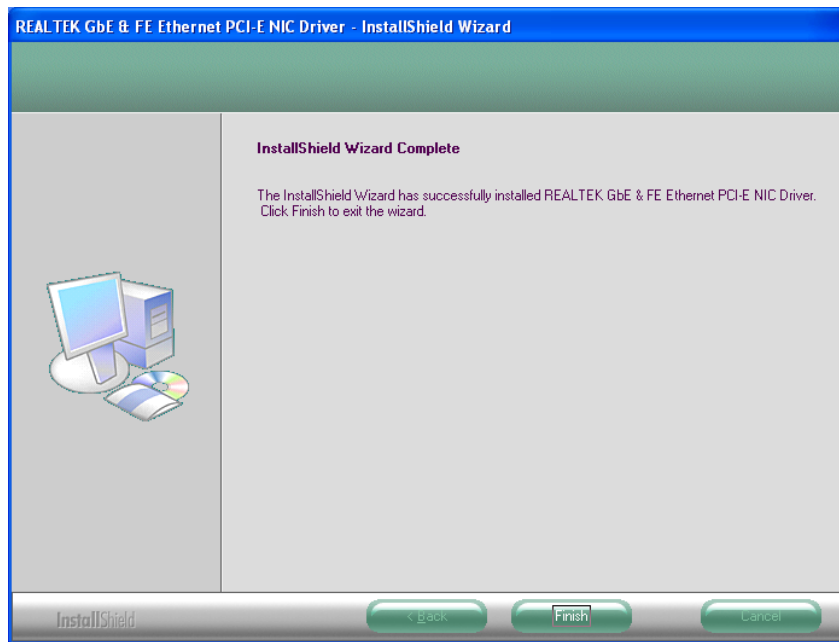


4.4 Audio Driver

Step 1. Click “Next” to continue.

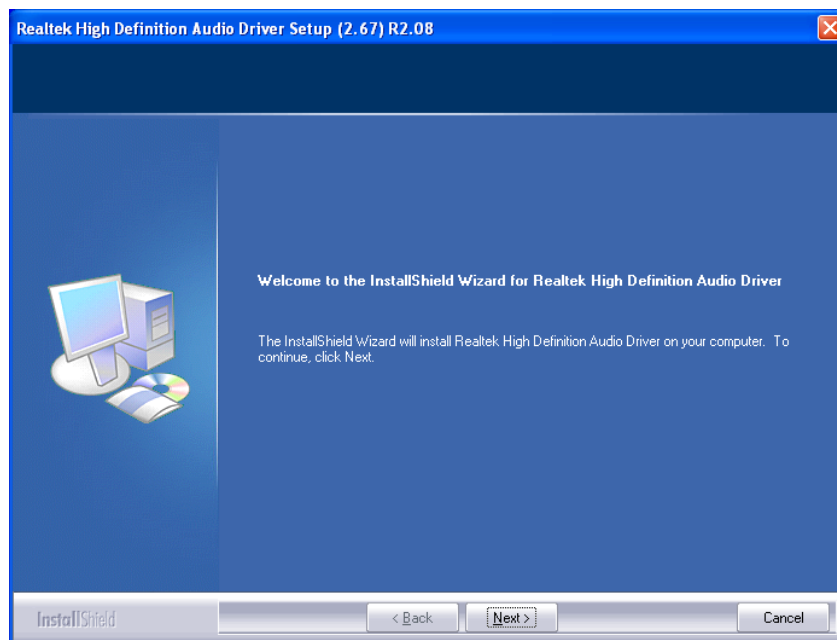

Step 2. Click “Finish” to complete setup.

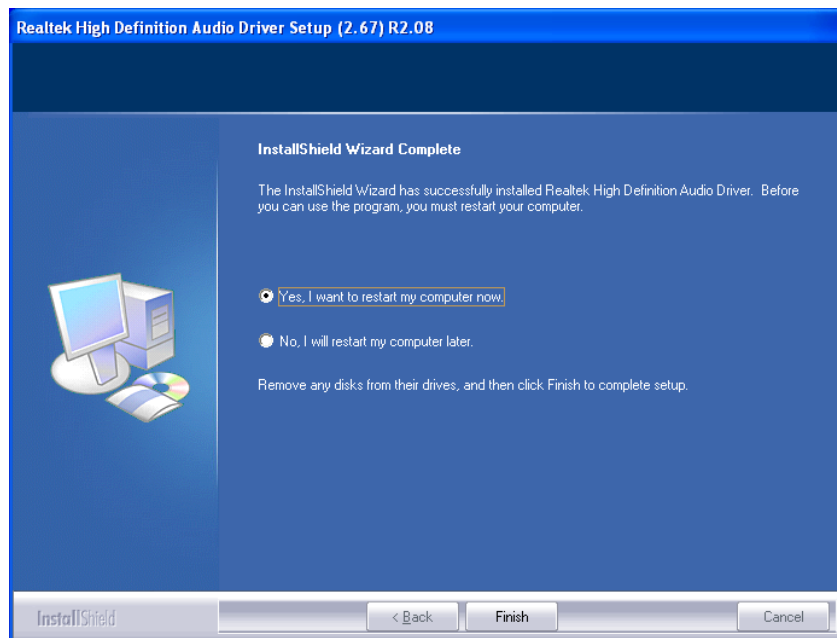

Appendix-A Watchdog

The working algorithm of the WDT function can be simply described as a counting process. The Time-Out Interval can be set through software programming. The availability of the time-out interval settings by software.

The System Board allows users control WDT through dynamic software programming. The WDT starts counting when it is activated. It sends out a signal to system reset, when time-out interval ends. To prevent the time-out interval from running out, a re-trigger signal will need to be sent before the counting reaches its end. This action will restart the counting process.

WDT program should keep the counting process running under normal condition. WDT should never generate a system reset unless the system runs into troubles.

The related Control Registers of WDT are all included in the following sample program that is written in C language. User can fill a non-zero value into the Time-out Value Register to enable/refresh WDT. System will be reset after the Time-out Value to be counted down to zero. Or user can directly fill a zero value into Time-out Value Register to disable WDT immediately.

To ensure a successful accessing to the content of desired Control Register, the sequence of following program codes should be step-by-step run again when each register is accessed.

For more information about WDT, please refer to Winbond W83627EHF data sheet.

There are two PnP I/O port addresses that can be used to configure WDT,

- 1) 0x2E:EFIR (Extended Function Index Register, for identifying CR index number)
- 2) 0x2F:EFDR (Extended Function Data Register, for accessing desired CR)

Below are some example codes, which demonstrate the use of WDT.

```

// Enter Extended Function Mode
outp(0x002E, 0x87);
outp(0x002E, 0x87);

// Assign Pin 77 to be a WDTO# Signal
outp(0x002E, 0x2D);
outp(0x002F, inp(0x002F) & 0xFE);

// Select Logic Device 8
outp(0x002E, 0x07);
outp(0x002F, 0x08);

// Active Logic Device 8
outp(0x002E, 0x30);
outp(0x002F, 0x01);

//Clear WDTO# Status
outp(0x002E, 0xF7);
outp(0x002F, inp(0x2F) & 0xEF);

// Select Count Mode (Second / Minute)
outp(0x002E, 0xF5);
outp(0x002F, (inp(0x002F) & 0xF7) | (Count-mode Register & 0x08));

// Set Time-out Value
outp(0x002E, 0xF6);
outp(0x002F, Time-out Value Register);

// Exit Extended Function Mode
outp(0x002E, 0xAA);

```

Definitions of Variables:

- Value of **Count-mode Register**:
- 1) 0x00 -- Count down in seconds (Bit3=0)
 - 2) 0x08 -- Count down in minutes (Bit3=1)
- Value of **Time-out Value Register**:
- 1) 0x00 -- Time-out Disable
 - 2) 0x01~0xFF -- Value for counting down

Appendix-B GPIO

The System Board provides 4 dedicated output ports and 4 programmable I/O ports that can be individually configured to perform a simple I/O function. Users can configure 4 programmable I/O ports to become an input or output port by programming register bit of I/O Selection . *To invert port value, the setting of Inversion Register has to be made* (Note). Port values can be set to read or write through Data Register.

Note: Only 4 programmable I/O ports support.

Additionally, 4 Digital Output ports amplified signals from GPIO ports. There are open-drain buffers, which can offer greater driving capacity up to 100mA.

For more information about GPIO, please refer to Winbond W83627EHF data sheet.

The related Control Registers of GPIO are all included in the following sample program that is written in C language. To ensure a successful accessing to the content of desired Control Register, the sequence of following program codes should be step-by-step run again when each register is accessed.

There are two PnP I/O port addresses that can be used to configure GPIO ports,

- 1) 0x2E - EFER (Extended Function Enable Register, for entering Extended Function Mode)
 - EFIR (Extended Function Index Register, for identifying CR index number)

- 2) 0x2F - EFDR (Extended Function Data Register, for accessing desired CR)

Below are some example codes, which demonstrate the use of GPIOs.

```
// Enter Extended Function Mode
outp(0x002E, 0x87);
outp(0x002E, 0x87);

// Assign Pin121-128 to be GPIO port
outp(0x002E, 0x29);
outp(0x002F, inp(0x002F) | 0x01);
```

```

// Select Logic Device 7
outp(0x002E, 0x07);
outp(0x002F, 0x07);

// Active Logic Device 7
outp(0x002E, 0x30);
outp(0x002F, 0x01);

// Select Inversion Mode
outp(0x002E, 0xF2);
outp(0x002F, (inp(0x002F) & 0x3C) | (Inversion Register & 0xC3));

// Select I/O Mode
outp(0x002E, 0xF0);
outp(0x002F, (inp(0x002F) & 0x3C) | (I/O Selection Register & 0xC3));

// Access GPIO ports
outp(0x002E, 0xF1);
outp(0x002F, (inp(0x002F) & 0x3C) | (Output Data & 0xC3));
or
Input Data = inp(0x002F);

// Exit Extended Function Mode
outp(0x002E, 0xAA);

```

Definitions of Variables:

Each bit in the lower nibble of each Register represents the setting of a GPIO port.

Super IO Pin	Bit	GPIO DIO
128	0	GPIO DIO-Out0
127	1	GPIO DIO-Out1
126	2	GPIO DIO-In0
125	3	GPIO DIO-In1
124	4	GPIO DIO-In2
123	5	GPIO DIO-In3
122	6	GPIO DIO-Out2
121	7	GPIO DIO-Out3

Value of **Inversion Register**:

When set to a '1', the incoming/outgoing port value is inverted.

When set to a '0', the incoming/outgoing port value is the same as in Data Register.

Value of **I/O Selection Register**:

When set to a '1', respective GPIO port is programmed as an input port.

When set to a '0', respective GPIO port is programmed as an output port.

Value of **Output Data** / **Input Data**:

If a port is assigned to be an output port, then its respective bit can be read/written.

If a port is assigned to be an input port, then its respective bit can be read only.

Note :

DIO_IN0/DIO_IN1/DIO_IN2/DIO_IN3 are programmed as **Inputs** by BIOS default.

Parameter	Conditions
VinH	min +1.857V
VinL	max +0.525V
Rated Vin	-8V ~ +12V
NC Status	High by Default

** Attention : If **DIO_IN0/DIO_IN1/DIO_IN2/DIO_IN3** are programmed as **Output signal**, they can only offer a normal signal transfer.(NOT amplified signals.)

Parameter	Conditions
VoutH	3.3V thru 10k
VoutL	0V thru 1k

DIO_OUT0/DIO_OUT1/DIO_OUT2/DIO_OUT3 are fixed as **Outputs** by BIOS.

Parameter	Conditions
Open-drain buffer	Power-on default = Open
Driving Capacity	max 100mA continue