

3U 2-slot ATCA Shelf

User's Manual



Product Numbers:
11990-800/801/802/803

Schroff®

D1.0	April 2015	Draft Release
R1.0	April 2015	Initial Release

Impressum:

Pentair Technical Solutions GmbH

Langenalber Str. 96 - 100
75334 Straubenhardt, Germany

The details in this manual have been carefully compiled and checked - supported by certified Quality Management System to EN ISO 9001/2000

The company cannot accept any liability for errors or misprints. The company reserves the right to amendments of technical specifications due to further development and improvement of products.

Copyright © 2015

All rights and technical modifications reserved.

Table of Contents

1	Safety	1
1.1	Safety Symbols used in this document.....	1
1.2	General Safety Precautions	1
1.3	References and Architecture Specifications.....	2
1.4	Product Definition	2
1.5	Terms and Acronyms.....	2
1.6	Hardware Platform.....	3
1.7	Shelf Front and Rear View.....	4
1.8	ESD Wrist Strap Terminals.....	4
2	ATCA Backplane.....	5
2.1	Logical to Physical Slot Mapping	5
2.2	Interfaces	5
2.2.1	Fabric Interface	5
2.2.2	Synchronization Clock Interface	5
2.2.3	Update Channel Interface	5
2.2.4	Intelligent Platform Management Interface	5
2.2.5	Base Interface	6
2.2.6	Backplane Topology	7
2.3	Shelf FRU SEEPROM	8
2.4	Logic Ground	8
3	Air Filter.....	9
3.1	Introduction	9
4	Shelf Ground Connection	10
4.1	Specification for the Shelf Ground connection cable.....	10
5	Fan Trays	11
5.1	Introduction	11
5.2	Fan Control	11
5.3	Fan Tray NTC Assignment.....	12
5.4	Fan Control DIP Switch Settings	12
5.5	Airflow	12
5.6	Fan Tray Block Diagram.....	13
5.7	Fan Tray Connectors and Indicators.....	14
6	Power	15
6.1	Power Input.....	15
6.2	Specification for the power connection cables	15
7	Technical Data	16
7.1	Part Numbers	17
7.2	Dimensions.....	18

1 Safety

The intended audience of this User's Manual is system integrators and hardware/software engineers.

1.1 Safety Symbols used in this document

	Hazardous voltage! <i>This is the electrical hazard symbol. It indicates that there are dangerous voltages inside the Shelf.</i>
---	--

	Caution! <i>This is the user caution symbol. It indicates a condition where damage of the equipment or injury of the service personnel could occur. To reduce the risk of damage or injury, follow all steps or procedures as instructed.</i>
---	---

	Danger of electrostatic discharge! <i>The Shelf contains static sensitive devices. To prevent static damage you must wear an ESD wrist strap.</i>
---	---

1.2 General Safety Precautions

	Warning! <i>Voltages over 42 V_{AC} or 60 V_{DC} can be present in this equipment. As defined in the PICMG 3.0 Specification, this equipment is intended to be accessed, to be installed and maintained by qualified and trained service personnel only.</i>
---	--

- Service personnel must know the necessary electrical safety, wiring and connection practices for installing this equipment.
- Install this equipment only in compliance with local and national electrical codes.
- For additional information about this equipment, see the PICMG 3.0 Specification (www.picmg.com).

1.3 References and Architecture Specifications

- PICMG® 3.0 Revision 3.0 AdvancedTCA® Base Specification
(www.picmg.com)

1.4 Product Definition

The Schroff 11990-800/801/802/803 are 3 U / 2 Slot AdvancedTCA 40G Shelves with enhanced per-slot power and cooling capability along with 40G backplane connectivity for fault tolerant/high availability applications.

Different versions are available:

11990-800: Base Interface in a NODE/NODE configuration, bussed IPMB

11990-801: Base Interface in a HUB/HUB configuration, bussed IPMB

11990-802: Base Interface in a NODE/NODE configuration, radial IPMB

11990-803: Base Interface in a HUB/HUB configuration, radial IPMB

1.5 Terms and Acronyms

Table 1: Terms and Acronyms

Term	Definition
ATCA	Advanced Telecom Computing Architecture
Backplane	Passive circuit board providing the connectors for the front boards. Power distribution, management and auxiliary signal connections are supported
CDM	Shelf FRU Data Module
ECN	Engineering Change Notice
ESD	Electrostatic Discharge
ETSI	European Telecommunications Standards Institute
FRU	Field Replaceable Unit
IPMB	Intelligent Platform Management Bus
IPMC	Intelligent Platform Management Controller
IPMI	Intelligent Platform Management Interface
PCB	Printed Circuit Board
PEM	Power Entry Module
RTC	Real Time Clock
RTM	Rear Transition Module
Shelf	Enclosure containing subrack, Backplane, boards, cooling devices, PEMs and Fan Trays
VRTN	Voltage Return

1.6 Hardware Platform

The Shelf is 3 U high and 19" rack mountable. The chassis is designed for easy access of any Field Replaceable Units (FRU).

- Powder-coated 3 U / 19" chassis with front card cage for ATCA boards and rear card cage for ATCA RTM boards
- 2 slot ATCA Backplane with 6 x interconnected Fabric Interface, Base Interface in HUB/HUB or Node/Node configuration, bussed or radial IPMB interface, supporting two 8 U ATCA hub boards
- Mounting brackets for 19" racks and rear fixing points
- ESD Wrist Strap Terminals at the front and the rear
- Two dedicated Shelf Manager bays accepting Schroff Shelf Managers
- Two rear pluggable, hot swappable Fan Trays
- Front pluggable air filter that meets the requirements of the Telcordia GR-78-CORE specification.
- Bay for front pluggable Shelf Alarm Panel (SAP):
Provides Alarm Status LEDs, Telco Alarm interface and serial interfaces for the Shelf Managers
- Electrical power 450 W/slot
- Enhanced cooling capability with 450 W/slot



All pictures in this manual may differ from the latest series.

1.7 Shelf Front and Rear View

Figure 1: Shelf Front View



12715813

- | | |
|----------------------------|--------------------------------------|
| 1 ESD Wrist Strap Terminal | 7 ShMC 2 (optional) |
| 2 ShMC 1 (optional) | 8 Shelf Alarm Panel (SAP) (optional) |
| 3 ESD Wrist Strap Terminal | 9 Cover Power Input |
| 4 Circuit Breaker | 10 Air Filter |
| 5 Fan Tray 2 | 11 Fan Tray 1 |
| 6 Power Input | 12 Shelf Ground Terminal |

1.8 ESD Wrist Strap Terminals



Danger of electrostatic discharge!

The Shelf contains static sensitive devices. To prevent static damage you must wear an ESD wrist strap.

One ESD Wrist Strap Terminal is located at the Shelf's upper front side, one ESD Wrist Strap Terminal is located at the left rear side of the Shelf.

2 ATCA Backplane

The 2-slot ATCA monolithic Backplane is completely passive and is not field replaceable. The backplane provides 40 Gb/s connectivity (4 lanes with 10Gb/s) and 2 ATCA slots in a **Hub/Hub** or **NODE/NODE** configuration.

2.1 Logical to Physical Slot Mapping

The physical and logical slots are sequentially numbered from the lower to the upper slot.

Table 2: 2-Slot ATCA Backplane physical to logical slot mapping

Physical Slot #	Logical Slot #	HW-Address (Hex)	IPMB-Address (Hex)
2	2	42	84
1	1	41	82

2.2 Interfaces

2.2.1 Fabric Interface

All 15 Fabric Channels of slot 1 are routed to the respective Fabric Channels of slot 2.

2.2.2 Synchronization Clock Interface

6 pairs of synchronization clocks are bused between both ATCA slots and terminated at both ends.

2.2.3 Update Channel Interface

The Update Channels are wired between both ATCA slots. The Update Channel can be used to pass data or routing information between two redundant ATCA Boards.

2.2.4 Intelligent Platform Management Interface

The Shelf uses an Intelligent Platform Management Bus (IPMB) for management communications among all ATCA Boards. The reliability of the IPMB is improved by the addition of a second IPMB, with the two IPMBs referenced as IPMB-A and IPMB-B.

2.2.5 Base Interface

Node/Node configuration


All 16 Base Channels of slot 1 are routed to the respective Base Channels of slot 2.

Hub/Hub configuration

All Base Channels 2 - 16 of slot 1 are routed to the respective Base Channels of slot 2.

Base Channel 1 (ShMC) of slot 1 and 2 is cross connected to both dedicated Shelf Manager slots.


Figure 2: Base Channel routing

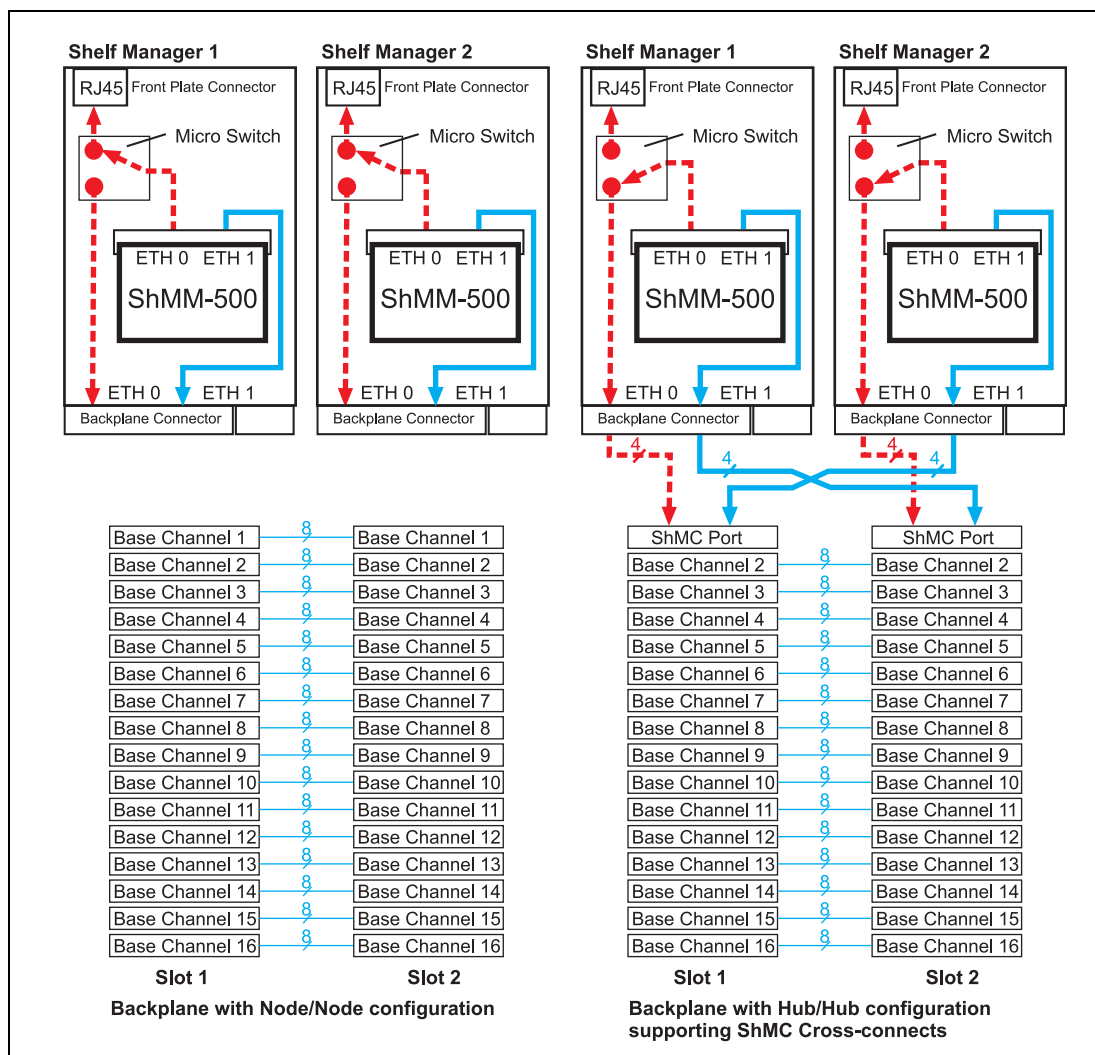

12710854

2.2.6 Backplane Topology

Figure 3: Backplane Topology

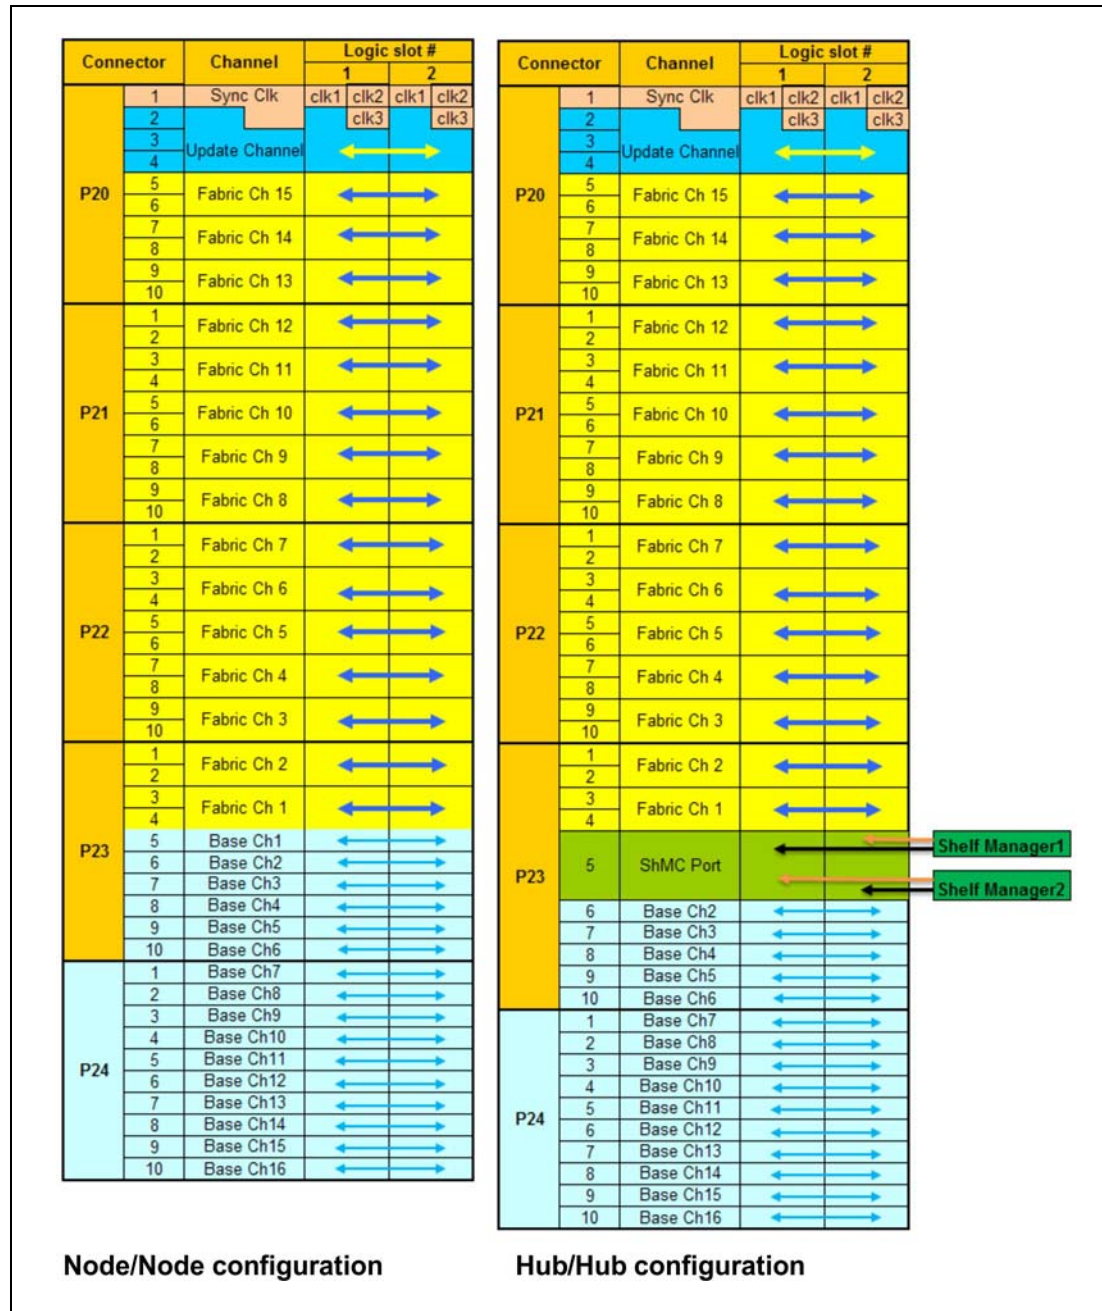

2.3 Shelf FRU SEEPROM

2 Shelf FRU SEEPROMS are located on the Backplane. The hardware address for these SEEPROMs is 0xA4.

The SEEPROMs are the repository of the shelf specific information capabilities of the system and other user configurable options. The SEEPROMs contain the list of which slots are connected together, how the update channels are routed, how many slots are in the system, what the maximum power is to each slot, serial number of the shelf, backplane topology, etc. The Shelf Manager uses this information to provide functions such as electronic keying, controlling the power state of the system, etc.

The Shelf allows for 2 methods to access the chassis FRU data:

- An I²C connection from each Schroff Shelf Manager directly to the SEEPROMs on the backplane.
- SEEPROMs on the backplane exposed as a FRU of the Fan Tray for on-blade shelf management.


2.4 Logic Ground



The default factory assembly connects Logic Ground to Shelf Ground.

3 Air Filter

Figure 4: Air Filter

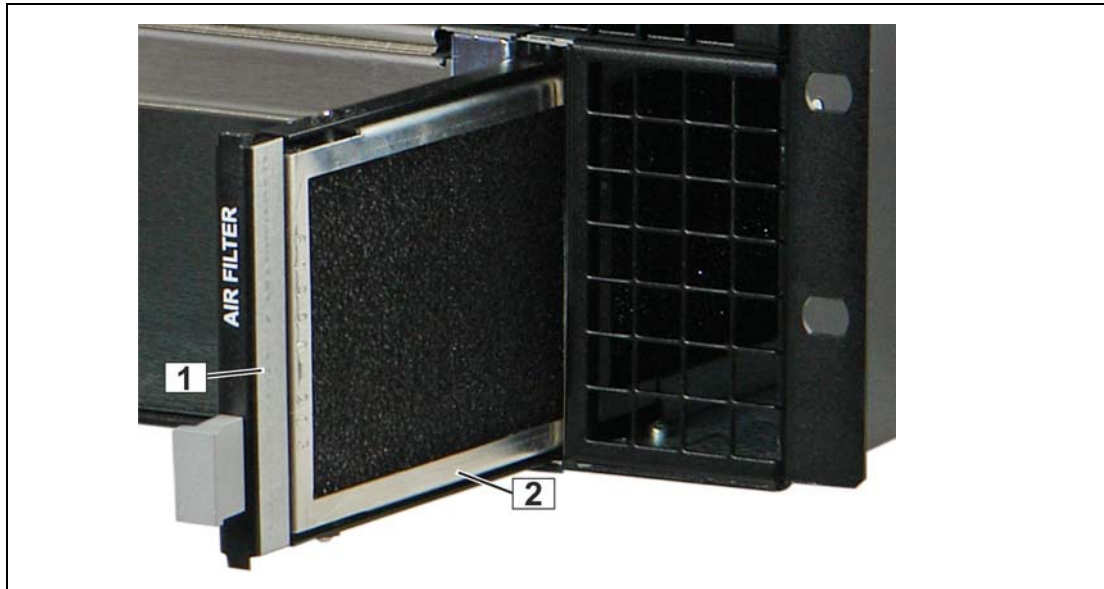

12714817

1 Air Filter Tray

2 Filter Element

3.1 Introduction

The ATCA Shelf provides a front replaceable air filter. The filter element is an open cell polyurethane foam special coating to provide improved fire retardation and fungi resistance.

The filter meets the requirements of the Telcordia Technologies Generic Requirements GR-78-CORE specification.

4 Shelf Ground Connection




Hazardous voltage!

Before powering-up the Shelf, make sure that the Shelf Ground terminals are connected to Protective Earth (PE) of the building.

The ATCA Shelf provides a Shelf ground terminal at the left rear side. The Shelf ground terminal provides two threads (M6) with a 15.90 mm (5/8") spacing between thread centers to connect a two hole lug Shelf ground terminal cable.

Figure 5: Shelf Ground Terminal

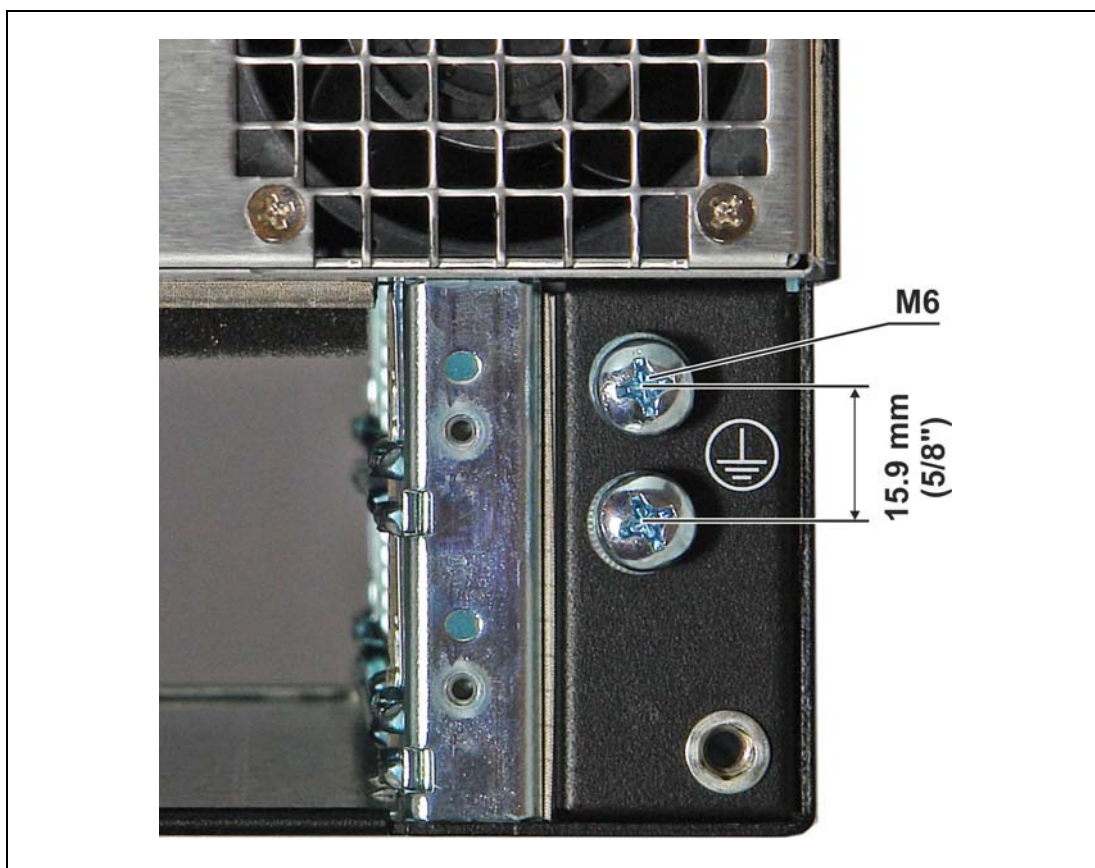

12714815

4.1 Specification for the Shelf Ground connection cable

Required wire size: #10 AWG maximum length 3 m.

Required terminals: Use only two hole lug terminals.

5 Fan Trays

5.1 Introduction

Two hot-swappable Fan Trays are arranged in a side to side configuration for maximum air flow.

Each Fan Tray contains 4 high air flow fans in a twin configuration controlled as a group by the controller inside the Fan Tray.

The Fan Tray is locked into the Shelf with a captive screw.

5.2 Fan Control

The Fan Controller located on the Fan Tray and has 2 operation modes:

1. Shelf Manager Mode

The tachometer signals from the Fan Trays are routed through the Backplane to the Shelf Manager slots. The active Shelf Manager monitor these signals and controls the speed via a PWM signal. Via an I2C-bus the Shelf Manager can access an LM75 temperature sensor and FRU-Data EEPROM on the Fan Control Module and can control the red (Fail) LED.

Note: As soon as a Shelf Manager is plugged-in and becomes active, the Fan Controller switches automatically into the Shelf Manager mode. The Fan Trays can only be controlled by Schroff ACB IV/V Shelf Managers by proprietary signals. The control via the I2C-bus is not possible.

2. Autonomous Mode

When no Shelf Manager is present, the fans are controlled by the fan controller in a Master-Slave configuration. The fan tray with the hardware address pin grounded becomes the master (fan tray 1) and controls the bus. The other fan tray acts as slave. Data exchange between the master and slave fan trays is done via the local I2C bus.

The master fan controller adjusts the fan speed according to the difference between the intake temperature and the outlet temperature. The intake temperature is determined by an NTC temperature sensor on the backplane, the outlet temperature by an NTC sensors located on the fan controller inside fan tray 1.

4 different temperature differences are user-selectable by a micro DIP-switch on the master fan controller, the default temperature difference is 20 K.

In Shelf manager mode, no I2C communication between the both fan trays is active.

Control behaviour:


When the shelf is powered up, all fans are turning with a speed of 30% PWM. If the temperature difference is over selected value, the controller gradually increases the fan speed until the set temperature difference has been reached.

The controller monitors the fan speed, when a speed signal is lost the speed of all fans is set to maximum. If the I2C connection between the fan trays is lost, the fan speed is set to full speed.

The system is designed to run indefinitely with any single fan failure.

5.3 Fan Tray NTC Assignment

Figure 6: Fan Tray NTC Assignment

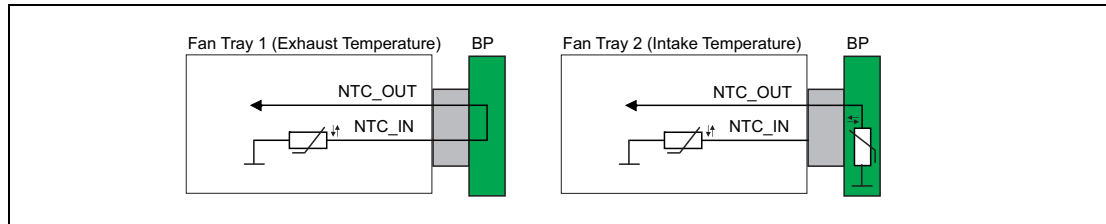


5.4 Fan Control DIP Switch Settings

With a DIP switch on the fan controller of the master fan tray (fan tray 1) 4 different temperature differences (fan curves) can be set. Other DIP switch settings are reserved for future use.

Fan Curve	ΔT [K]	Bit 1	Bit 1	Bit 3	Bit 4
0	5	0	0	0	0
1	10	1	0	0	0
2	15	0	1	0	0
3	20	1	1	0	0

Figure 7: DIP Switch

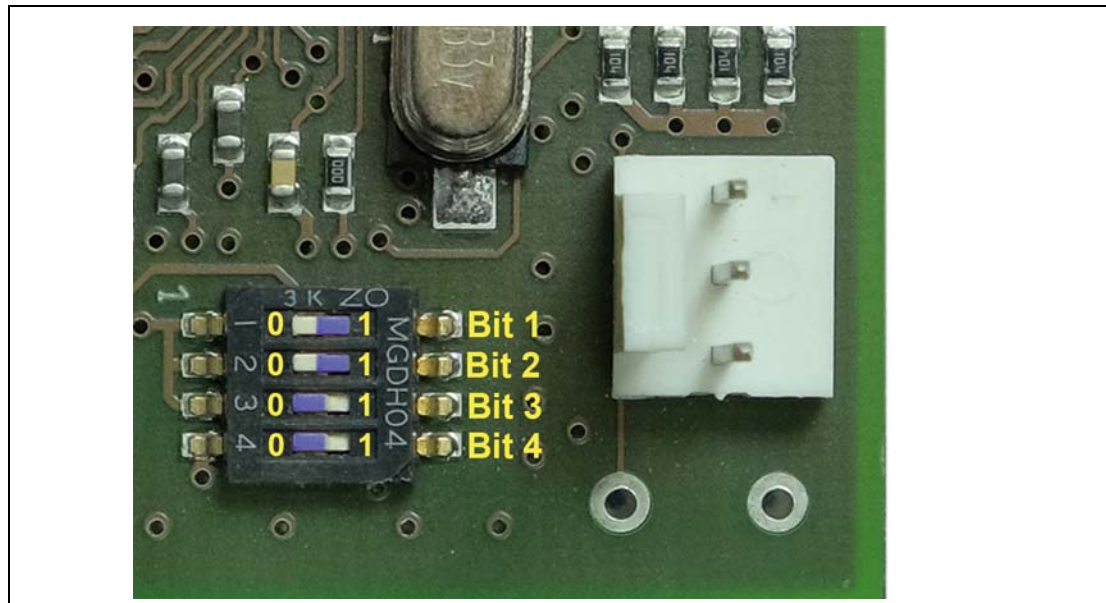

12715811

5.5 Airflow

	Zone 1	Zone 2	Zone 3	Zone 4	RTM
Slot 1 [m³/h]	31,2	31,5	28	27,6	23,4
Slot 2 [m³/h]	31,9	32,2	28,9	28,1	23

The airflow is measured with impedance boards acc. to the PICMG 3.0 R3.0 specification.

Front board pressure drop: 37 Pa at 0,85 m³/min

Rear board pressure drop: 24 Pa at 0,14 m³/min

5.6 Fan Tray Block Diagram

Figure 8: Fan Tray Block Diagram


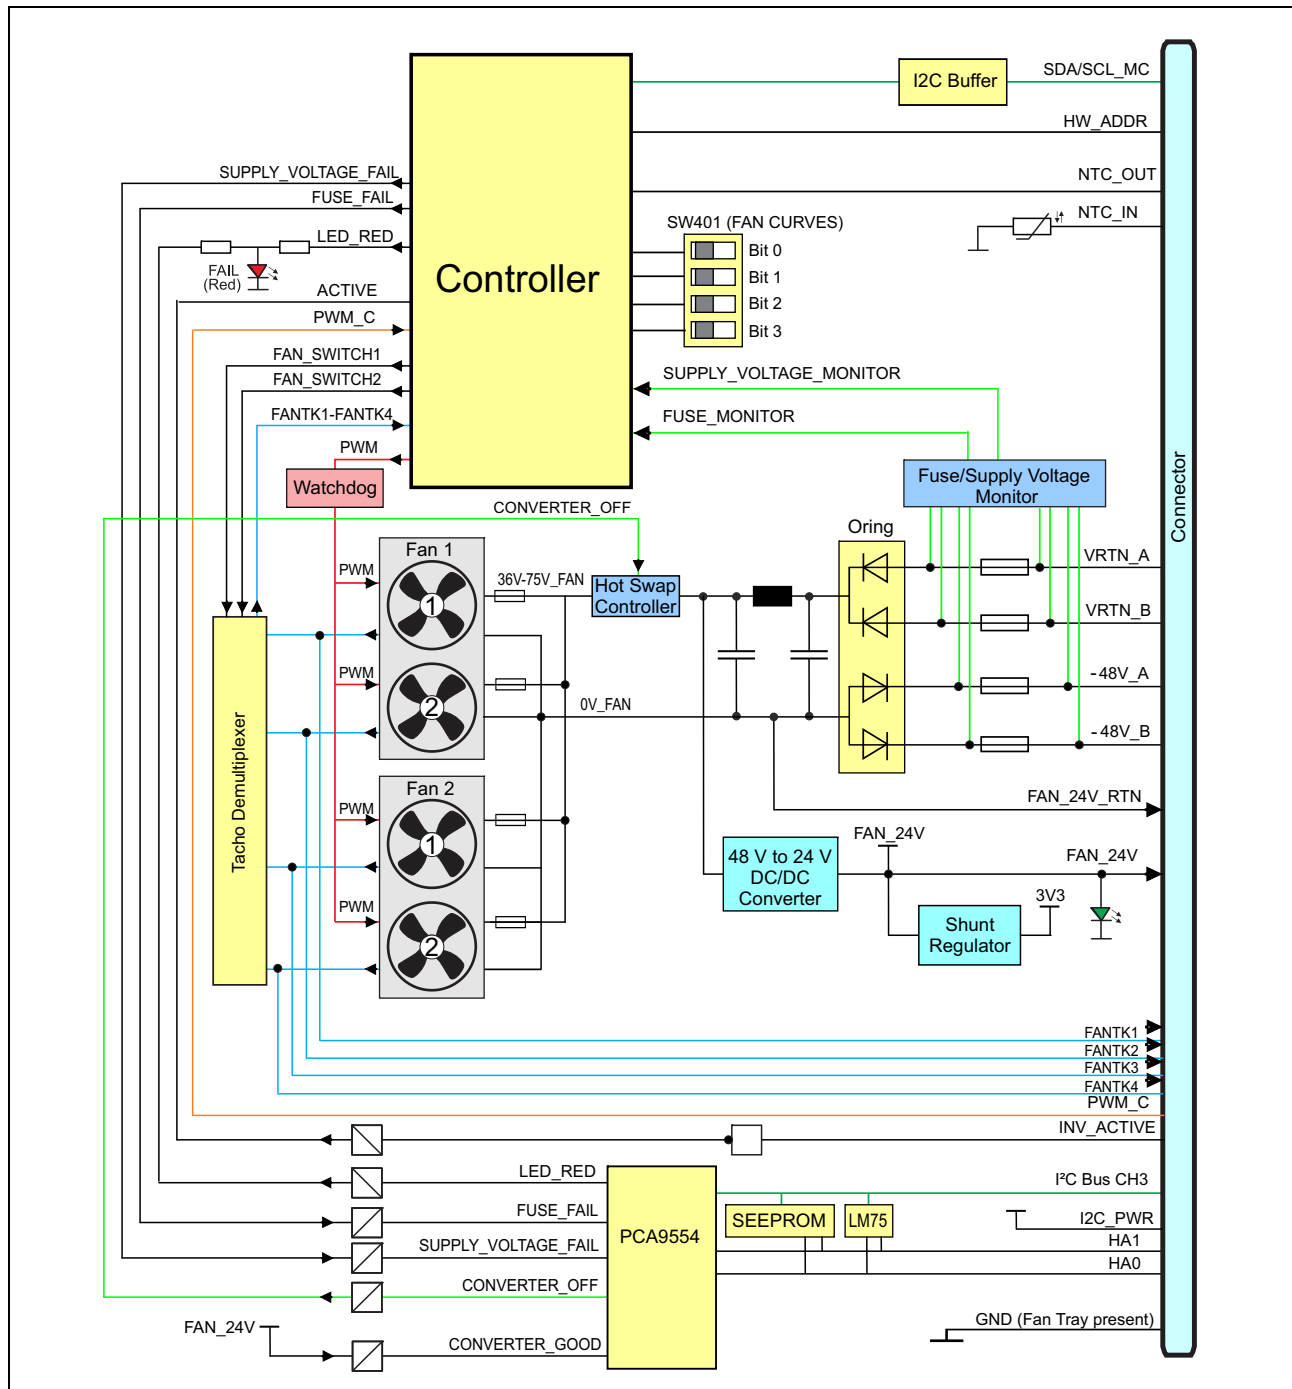


Figure 9: Fan Tray

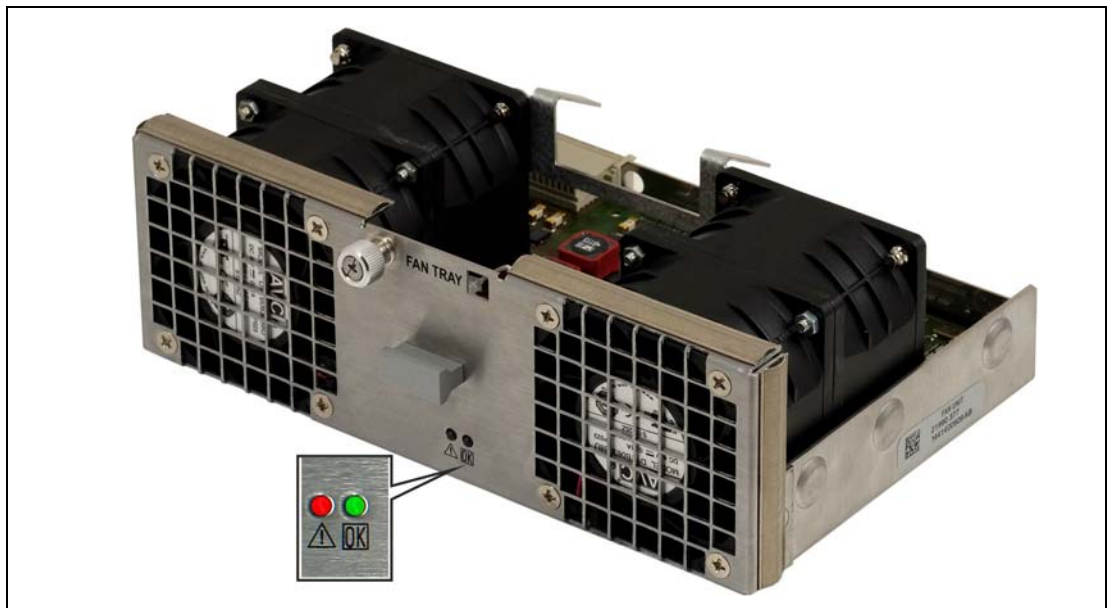

12715812

5.7 Fan Tray Connectors and Indicators

The front panel includes a green and red status LED.

Table 3: LEDs on Fan Tray front panel

Color	Description	Status	Condition
Green	OK LED	Off	No Power to the Fan Tray
		Solid green	Normal Operation
Red		Solid red	Attention Status (error condition)

6 Power



Hazardous voltage!

Before working ensure that the power is removed from the power connection cables.



The DC-PEM can be powered using a regular telecommunication power supply of -48/-60 V_{DC} with a V_{DC} return. The specified voltage range is from -40 V_{DC} to -75 V_{DC}. The Shelf supports redundant power inputs but the two inputs should be independently powered.


The Power Input is located at the left rear side of the Shelf. The power input provides power terminals for two 30 A power feeds. Each power feed consists of a -48 VDC cable and its corresponding return cable. The feed is protected by a 30 A fused switch.

The power filtering consists of filtered power terminals and discrete line-filters.

The input voltage range for the Shelf is from -40 V_{DC} to -75 V_{DC}.

6.1 Power Input

Figure 10: Power Input

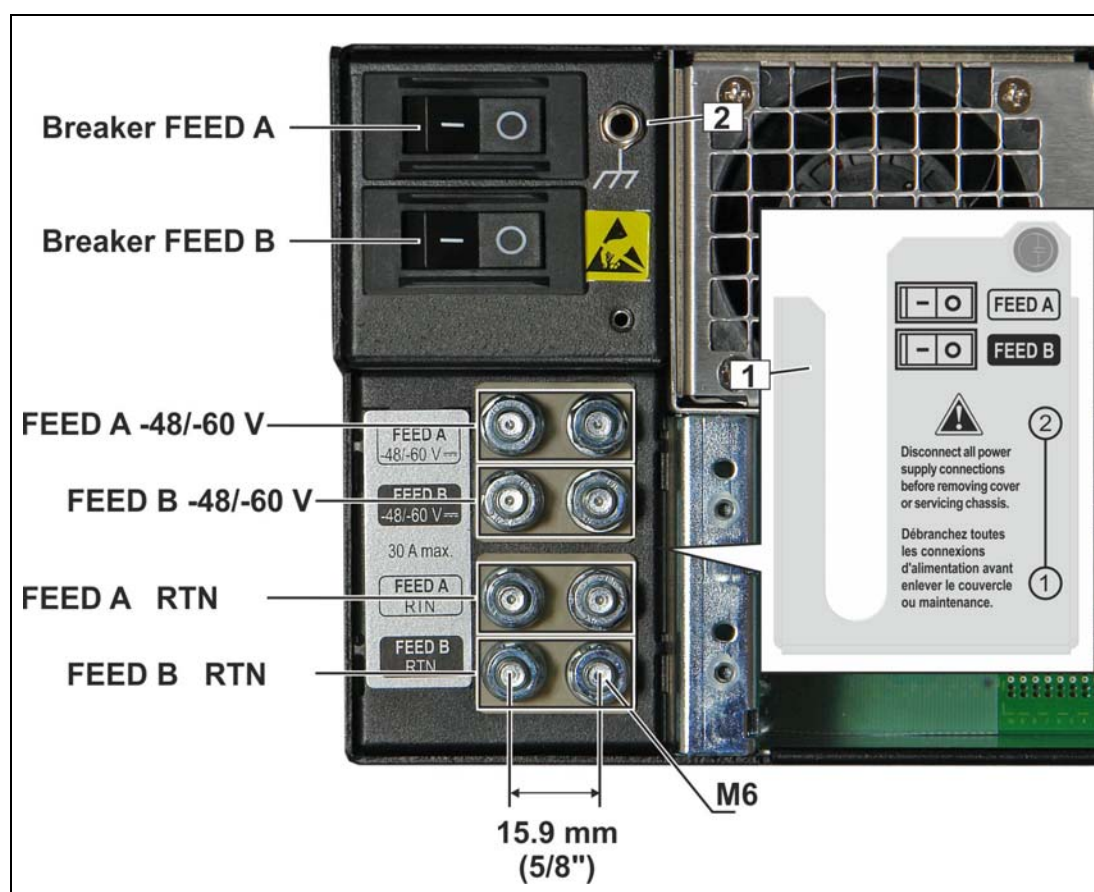

12715807

1 Cover Power Input

2 ESD Wrist Strap Terminal

6.2 Specification for the power connection cables

Required wire size: #10 AWG maximum length 3 m.

Required terminals: Use only two hole lug terminals.

7 Technical Data

Table 4: Technical Data

Physical Dimensions	
Height	3 U
Width	482.6 mm
Depth (with handles)	457 mm
Weight	
w.o. package	approx. 12 kg
with package	approx. 14.6 kg
Power	
Input voltage nom.	-48/-60 V _{DC}
Input voltage range	-40 V _{DC} to -75 V _{DC}
Input Power Protection	30 A
Cooling Capacity	
Front Boards	400 W / Board*
RTM	50 W / Board*
	* $\Delta t = 12 \text{ K}$
Environmental	
Ambient temperature (long term)	+5°C...+40°C (41°F to 104°F)
Ambient temperature (short term)	-5°C...+55°C (23°F to 131°F)
Humidity	+5%...+85%, no condensation
EMI	
Conducted Emissions	EN 55022 Class A
Radiated Emissions	EN 55022 Class A
Safety	
Protected Earth Test	EN50514, test current 25 A, resistance <100 mOhm
Hipot Test (AC system)	EN50116 Mains Input primary - PE: 2200 V _{DC} -48 V/RTN - PE: 700 V _{DC}
Hipot Test (DC system)	EN60950 -1000 V _{DC}


7.1 Part Numbers

Table 5: Part Numbers

[illegible]

7.2 Dimensions

Figure 11: Dimensions

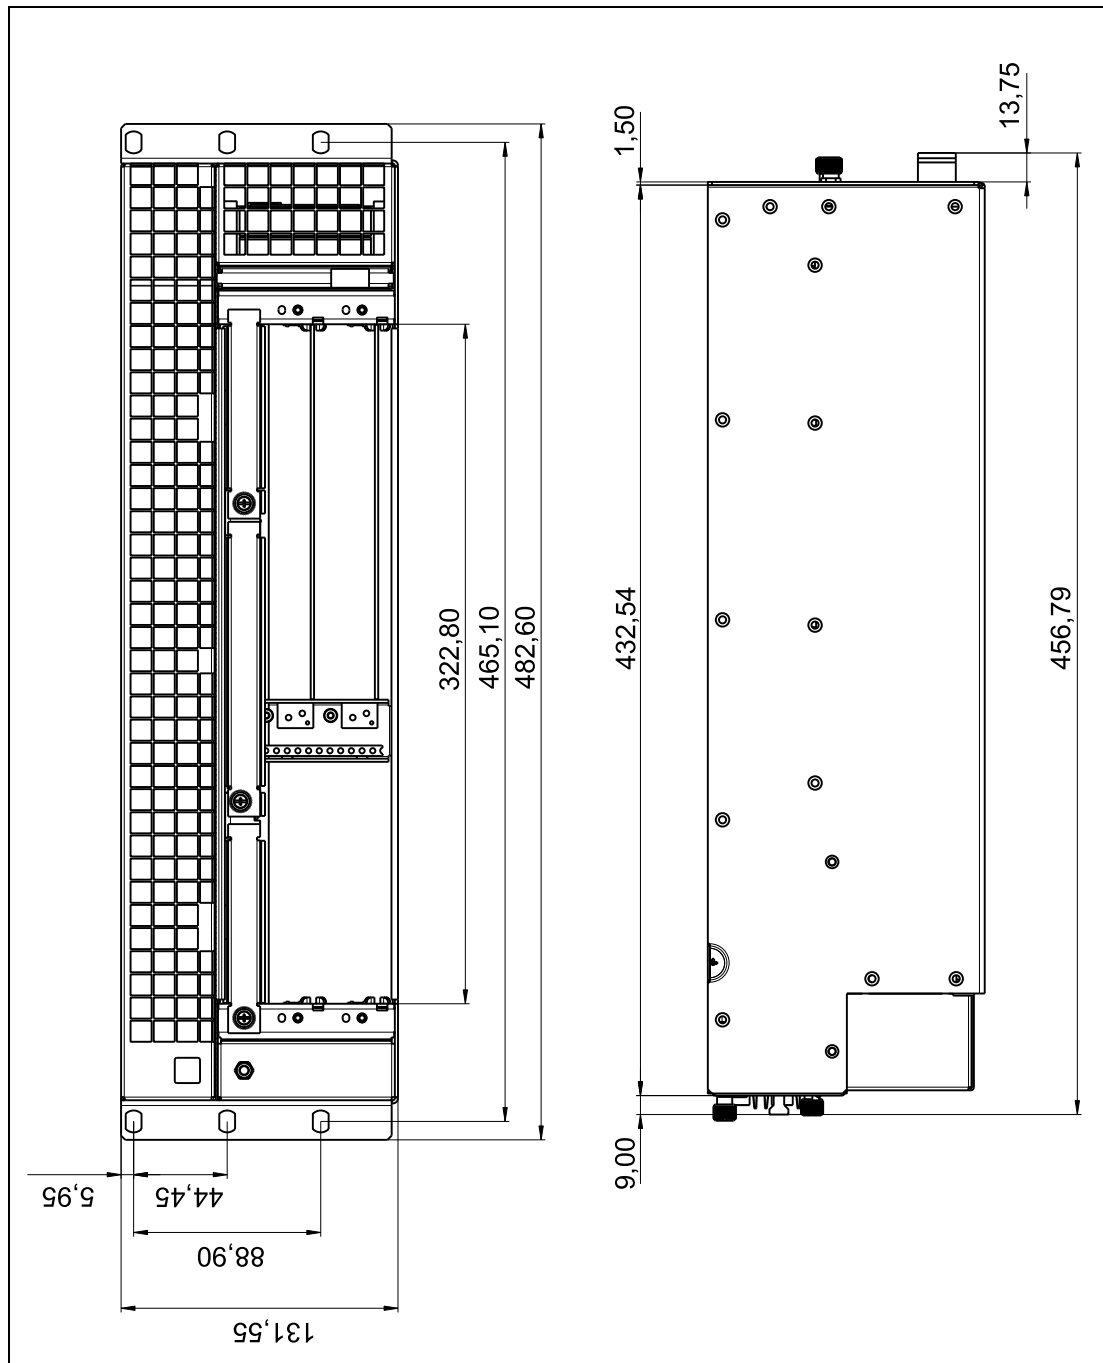

12714810

Pentair Technical Solutions GmbH

Langenalber Str. 96 - 100
75334 Straubenhardt, Germany
Tel +49.7082.794.0
Fax +49.7082.794.200