



USB WiMAX modem

User Manual

Suitable for:
UM6223, UM6225, UM6235, UM6238



LEGAL NOTICE

Copyright © 2011 TELTONIKA Ltd. All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of TELTONIKA Ltd is prohibited. The manufacturer reserves the right to modify the product and manual for the purpose of technical improvement without prior notice.

Other product and company names mentioned herein may be trademarks or trade names of their respective owners.

ATTENTION



Before using the device we strongly recommend reading this user manual first.



Do not rip open the device. Do not touch the device if the device block is broken.



All wireless devices for data transferring may be susceptible to interference, which could affect performance.



The device is not water-resistant. Keep it dry.

Table of contents

LEGAL NOTICE	2
ATTENTION	2
TABLE OF CONTENTS	3
SAFETY INFORMATION	4
PRODUCT OVERVIEW	5
INTRODUCTION.....	5
PACKAGE CONTENTS	5
SYSTEM REQUIREMENTS	5
HARDWARE, LED'S AND CONNECTIONS	5
WEBUI OVERVIEW	6
CONNECTING TO THE WEBUI	6
WEBUI STRUCTURE	7
STATUS.....	7
ABOUT.....	7
TECHNICAL SPECIFICATION	8
ELECTRICAL, MECHANICAL & ENVIRONMENTAL.....	8

SAFETY INFORMATION


In this document you will be introduced on how to use a UM6223 / UM6225 / UM6235 / UM6238 modem safely. We suggest you to adhere to the following recommendations in order to avoid personal injuries and or property damage.

You have to be familiar with the safety requirements before using the device!

To avoid burning and voltage caused traumas, of the personnel working with the device, please follow these safety requirements.



The PC to which the device is connected, should satisfy LST EN 60950-1 standard. The device can be used on first (Personal Computer) or second (Notebook) computer safety class.

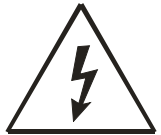

Do not mount or serve device during a thunderstorm.

To avoid mechanical damages to the device it is recommended to transport it packed in a damage-proof pack. While using the device, it should be placed so, that its indicating LEDs would be visible as they inform in which working mode the device is and if it has any working problems.

Protection against overcurrents, short circuiting and earth faults should be provided as a part of the building installation. To disconnect the device plug it off the USB (Universal Serial Bus) port.

Signal level of the device depends on the environment in which it is working. In case the device starts working insufficiently, please refer to qualified personnel in order to repair this product. We recommend forwarding it to a repair centre or the manufacturer. There are no exchangeable parts inside the device.

PRODUCT OVERVIEW

Introduction

Teltonika UM6223, UM6225, UM6235 and UM6238 are compact USB modems offering high speed data rate connectivity to WiMAX networks. It supports the IEEE 802.16e connection standard, thus it is flexible and can be used in a set of different environments: the office, home, a public place or even a bus or a car. In addition, our product uses a hostless solution, which makes it run evenly well on different platforms with all the popular operating systems.

Package contents

UM6223/UM6225/UM6235/UM6238

- WiMAX modem
- Leaflet "Quick Start Guide"

Note: The provisioning information is provided by your service provider, thus the questions regarding connection problems should be addressed to it.

Note: If any of the components are missing or damaged, please contact the retailer or reseller from which this product was purchased.

System requirements

- USB port
- Windows XP, Windows Vista, Windows 7, MAC OS X, or most of the Linux-based operating systems.
- A web browser must have a flash player plug-in (version 10 or higher) to access the WebUI for network configuration.

Hardware, LED's and connections



USB modem LED

Two LED indicators show the state of the device.
Status LED – modem started successfully.
Activity LED – indicates data transfer.

WebUI OVERVIEW


In this section you will be briefly introduced to our user interface.

Note: we use the tool tip system in our web user interface in order to show additional information. To see this data hover your mouse cursor above the field. Also, if the frame of the field becomes red, it usually means that the data in the field is incorrect, in this case look into the red tool tip for more information.

Connecting to the WebUI

To connect to the configuration web page do the following steps:

1. Type **192.168.0.1** to your favorite internet browser. Skip the step 2 if the password is disabled (default: disabled).
2. Window asking for authentication will pop up. Enter your username and password (default: username: user, password: user) and press enter.

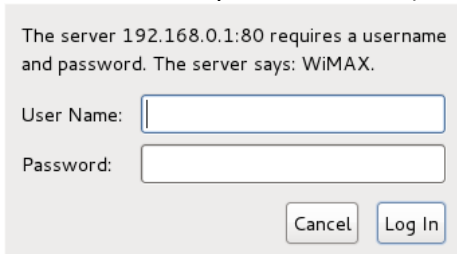


The server 192.168.0.1:80 requires a username and password. The server says: WiMAX.

User Name:

Password:

Cancel Log In

3. Status window will appear in a few seconds:

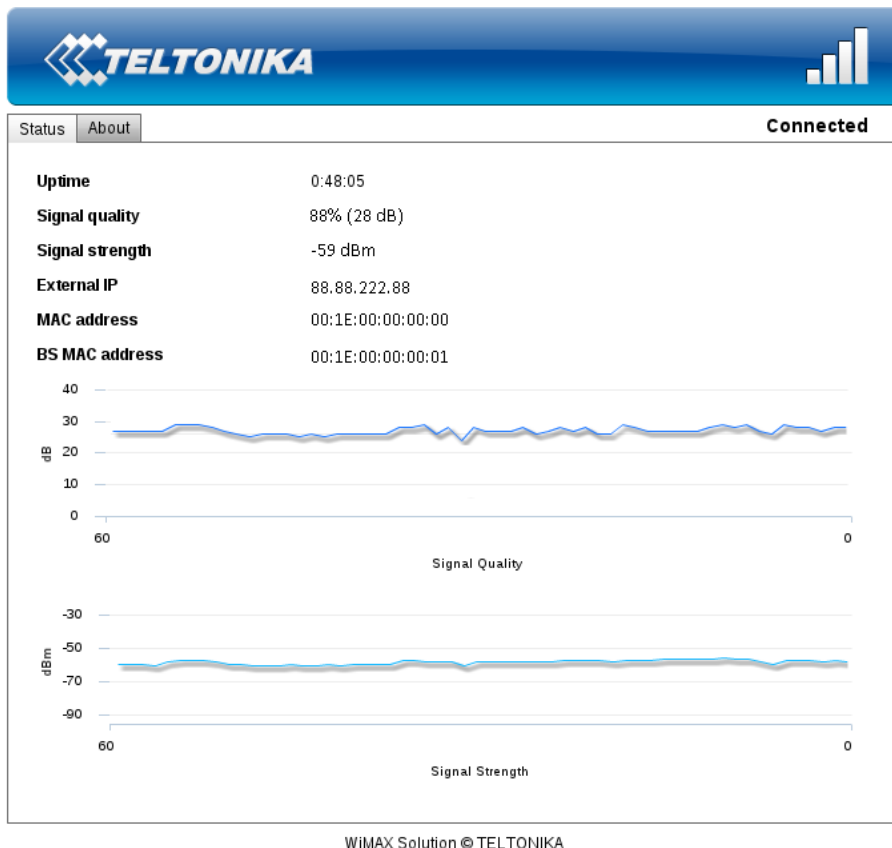

WebUI structure

Our modern web user interface provides you with all the tools needed within the two main pages: **Status, About.**

Status

Status	About
Uptime	0:48:05
Signal quality	88% (28 dB)
Signal strength	-59 dBm
External IP	88.88.222.88
MAC address	00:1E:00:00:00:00
BS MAC address	00:1E:00:00:00:01

Status page

Status page consists of 6 properties that define the current state of the modem:

1. **Uptime** – the time since the modem was plugged in.
2. **Signal quality** – the quality of a signal in percents (and decibels).
 - <30% poor
 - >30% <50% decent
 - >50% <90% good
 - >90% very good

Note: signal quality depends on the distance between your device and the base station and other factors: interference with other devices, etc.

3. **Signal strength** – the strength of a signal in dBm.
4. **External IP** – IP which was assigned to your device by the base station.
5. **MAC address** – physical address of the WiMAX connection module.
6. **BS MAC address** - physical address of the base station.

About

Status	About	Connected
Firmware version	4.6.3.0-40086	
Microcode version	6.7.8739	
Driver version	2.0.11141	
Daemon version	4.6.3.0-40086	
OS version	Linux (none) 2.6.25-uc0-sqn #36 Mon Dec 5 13:57:37 EET 2011 armv5teb 64k	
Server version	4.6.3.0-40086	
UI version	2.0	

About page

The About page displays the versions of your firmware and software that are currently running on your device. This helps you decide whether or not you need to update your firmware.

Note: The last part in the OS version string refers to the sector size (64 kilobytes in this case) of the flash memory. It is important that the firmware you update is made for the same flash sector size as the flash memory in the device.

TECHNICAL SPECIFICATION

Standard Compliant	IEEE 802.16e-2005
Air Interface	S-OFDMA
Frequency Band	2.3 – 2.4 GHz (UM6223), 2.5 – 2.7 GHz (UM6225), 3.3 – 3.6 GHz (UM6235) or 3.3 – 3.8 GHz (UM6238)
Channel Bandwidth	3 MHz, 3.5 MHz, 5 MHz, 6 MHz, 7 MHz, 8.75 MHz and 10 MHz
Modulation	Adaptive QPSK, 16QAM, 64QAM
MIMO	MRC, Matrix A + MRC, Matrix B
Beamforming	All I/O Beamforming Items
RF Output Power	2x25 dBm @ 2.3 – 2.7GHz; 2x23dBm @ 3.3 – 3.8GHz
RX Sensitivity:	QPSK1/2: -99.5 @ 2.5 GHz and 10 MHz BW 16QAM1/2: -94.29 @ 2.5 GHz and 10 MHz BW QPSK1/2: -99 @ 3.5 GHz and 10 MHz BW 16QAM1/2: -93.8 @ 3.5 GHz and 10 MHz BW
Antenna Gain	>2.5 dBi @ 2.6 GHz, >1.2 dBi @ 3.55 GHz
Antenna Type	Internal Omni-Directional
Handover	Hard / Optimized Handover
QoS Mechanism	UGS, Real-Time-VR, Non Real-Time-VR, Best Effort, ERT-VR
Authentication	EAP-TLS, EAP-TTLS-MSCHAPv2
Encryption	3 CCM-Mode 128-bit AES
Error Handling	HARQ UL and DL, up to Category 7
Throughput	40 Mbps Total DL + UL
OS Support	Windows XP/Vista/7, Linux, MAC OS
Installation	CD-free, Self Install
LEDs	Link Status and Link Activity
Software	Hostless Operation

Electrical, Mechanical & Environmental

Dimensions (H x W x D)	93mm x 27mm x 10mm
Weight	21g
Power Supply	USB
Power Consumption	< 2.5W
Operating Temperature	0° to 50° C
Storage temperature	-20° to 70° C
Operating Humidity	10% to 90% Non-condensing
Storage humidity	5% to 95% Non-condensing