

TAINET

Scorpio 1400RL

G.SHDSL Termination Unit

User's Manual



The Professional Partner

TAINET COMMUNICATION SYSTEM CORP.

Headquarters:

No. 25, Alley 15, Lane 120,

Sec. 1. Nei-Hu Rd,

Taipei 114, Taiwan

TEL: 886-2-26583000

FAX: 886-2-26583232

Beijing Branch:

3F, A Building, 113 Zhi Chun Lu,

HaiDian District, Beijing, China

Zip Code: 100086

TEL: 86-10-62522081~87

FAX: 86- 10-62522077

Copyright © 2002 TAINET COMMUNICATION SYSTEM CORP.

All right reserved

Printed in Taiwan R.O.C.

Notice

This document is protected by the international copyright law. No part of this publication may be reproduced by any means without the permission of Tainet Communication System Corporation.

TAINET is a registered trademark, and Scorpio 1000, Scorpio 1400RL is a trademark of Tainet Communication System Corporation.

Other product names mentioned in this manual are used for identification purposes only and may be trademarks or trademarks of their respective companies.

The information provided from Tainet Communication System Corporation is believed to be accurate. Any changes and enhancements to the product and to the information thereof will be documented and issued as a new release to this manual.

Trademark

All products and services mentioned herein are the trademarks, service marks, registered trademarks or registered service marks of their respective owners.

ABOUT THIS MANUAL

This section guides you on how to use the manual effectively. The manual contains information needed to install, configure, and operate TAINET's Scorpio 1400RL termination units. The summary of this manual is as follows:

- Chapter 1: INTRODUCTION**
Describes Scorpio 1000 and how to use Scorpio 1400 in several applications.
- Chapter 2: SPECIFICATIONS**
Describes the features, specifications and applications of Scorpio 1400RL.
- Chapter 3: INTERFACING**
Introduces all the interfaces, including front panel and rear pane of Scorpio 1400RL.
- Chapter 4: INSTALLATION**
Assist user to install and verify the Scorpio 1400RL Step-by-step.
- Chapter 5: OPERATION OF CID**
Gives a description of the CID (Craft Interface Device).
- Appendix A: ORDER INFORMATION**
Describes all the Scorpio 1400RL series products.
- Appendix B: MENU TREE**
Describes the LCD and VT-100 menu tree.
- Appendix C: PIN ASSIGNMENT**
Describes all cables and connectors with pin definition.
- Appendix D: TROUBLESHOOTING**
Provides brief trouble shooting list.
- Appendix E: TROUBLE REPORT**
Trouble Report Form

SYMBOLS USED IN THIS MANUAL

3 types of symbols are used throughout this manual. These symbols are used to advise the users when a special condition arises, such as a safety or operational hazard, or to present extra information to the users. These symbols are explained below:

**Warning:**

This symbol and associated text are used when death or injury to the user may result if operating instructions are not followed properly.

**Caution:**

This symbol and associated text are used when damages to the equipment or impact to the operation may result if operating instructions are not followed properly.

**Note:**

This symbol and associated text are used to provide the users with extra information that may be helpful when following the main instructions in this manual.

WARRANTY AND SERVICE

Contact: *If there are any questions, contact your local sales representative, service representative, or distributor directly for any help needed. You might use one of the following methods..*

Via the Internet: visit our World Wide Web site at <http://www.tainet.net>

Via the Sales Representatives:

HQ

No. 25, Alley 15, Lane 120, Sec. 1. Nei-Hu Rd. Taipei, Taiwan, R.O.C.

Phone: (886) 2-2658-3000

E-mail: sales@tainet.net

Fax: (886) 2-2658-3232

URL: <http://www.tainet.net/>

Moscow Branch

111024, Shosse Entuziastov Building 14, Room 425, Moscow, Russia

Phone: (7) 095-7850-377

URL: <http://www.tainet.ru>

Fax: (7) 095-7850-378

Beijing Branch

3F, A Building, 113 Zhi Chun Lu,

HaiDian District, Beijing, China

Zip Code: 100086

TEL: (86) 10-62522081~87

E-mail: marketing@tainet.com.cn

FAX: (86) 10-62522077

URL: <http://www.tainet.com.cn>

CONTENTS

Chapter 1. Introduction	1
1.1 OVERVIEW.....	2
1.2 APPLICATIONS	2
Chapter 2. Specification.....	5
2.1 MAIN FEATURES.....	6
2.2 SHDSL INTERFACE.....	6
2.3 NETWORK SIDE INTERFACE.....	7
2.3.1 ETHERNET INTERFACE.....	7
2.4 TIMING AND SYNCHRONIZATION	7
2.5 OAM.....	7
2.6 TECHNICAL SPECIFICATIONS	8
2.7 APPLICATIONS	9
2.7.1 CAMPUS NETWORK.....	9
Chapter 3. Interfacing.....	11
3.1 FRONT PANEL	12
3.1.1 STATUS INDICATORS	12
3.1.2 THE BUTTONS	13
Chapter 4. Installation	15
4.1 UNPACKING.....	16
4.2 CONFIGURATION PROCEDURES.....	16
4.2.1 ESTABLISH CONNECTION.....	16
4.2.2 LOCAL LOOPBACK TEST.....	17
Chapter 5. Operation of CID.....	19
5.1 OVERVIEW.....	20
5.2 MAIN MENU.....	21
5.3 QCONFIG	22
5.3.1 QCONFIG-OpMODE	22
5.3.2 QCONFIG-LAN	22
5.3.3 QCONFIG-WAN	23
5.3.4 QCONFIG-ENDPOINTMODE	23
5.4 CONFIG.....	23
5.4.1 CONFIGURE-SYSTEM.....	24
5.4.2 CONFIGURE-INTERFACE	24
5.4.3 CONFIG-SHDSL.....	24
5.4.4 CONFIG-PROTOCOL	25

5.4.5	CONFIG-ROUTING	28
5.4.6	CONFIG-BRIDGE	28
5.4.7	CONFIG-ACCESSCONF	28
5.4.8	CONFIG-RESET2DFT	29
5.5	MAINTENANCE	29
5.5.1	MAINTENANCE-SHDSL1(SHDSL2)	29
5.5.2	MAINTENANCE-ROUTE	31
5.5.3	MAINTENANCE-BRIDGE	31
5.5.4	MAINTENANCE-LANPKTSTATISTIC	31
5.5.5	MAINTENANCE-WANPKTSTATISTIC	32
5.5.6	MAINTENANCE-TIME	32
5.6	SHOWCONF	33
5.6.1	SHOWCONF-SYSINFO	34
5.6.2	SHOWCONF-INTERFACE	34
5.6.3	SHOWCONF-SHDSL	34
5.6.4	SHOWCONF-DHCP	35
5.6.5	SHOWCONF-DNSPROXY	35
5.6.6	SHOWCONF-IPSHARE	35
5.6.7	SHOWCONF-RIP	36
5.6.8	SHOWCONF-ROUTE	36
5.6.9	SHOWCONF-BRIDGE	36
5.6.10	SHOWCONF-STP	37
5.6.11	SHOWCONF-ACCESSCONF	37
5.6.12	SHOWCONF-BERT	37
5.7	UTILITY	38
5.7.1	UTILITY-UPGRADE	38
5.7.2	UTILITY-PING	39
5.7.3	UTILITY-BERT	40
5.7.4	UTILITY-LOOPBACK	41
5.7.5	UTILITY-SETTIME	41
5.8	WRITE	42
5.9	REBOOT & EXIT	43
Appendix A Ordering Information		45
Appendix B Menu Tree		47
Appendix C Pins Assignment		57
Appendix D Troubleshooting		59
Appendix E Trouble Report		61

FIGURES

FIGURE 1-1	APPLICATION OF BACK-TO-BACK	3
FIGURE 1-2	APPLICATION OF S1000/S1400 SYSTEM	3
FIGURE 1-3	POSSIBLE INTERFACE CONFIGURATION OF S1000/S1400 SYSTEM	4
FIGURE 2-1	CAMPUS NETWORK APPLICATION OF THE SCORPIO 1400RL WITH ETHERNET I/F	10
FIGURE 3-1	FRONT PANEL OF THE SCORPIO 1400	12
FIGURE 3-2	REAR PANEL OF THE SCORPIO 1400	13
FIGURE 3-3	G.SHDSL RJ-45 PIN ASSIGNMENT	14
FIGURE 3-4	RJ-45 PIN ASSIGNMENT	14
FIGURE 5-1	STU-C SIDE ACTIVATED LOOPBACK	40
FIGURE 5-2	STU-R SIDE ACTIVATED LOOPBACK	41
FIGURE C-1	DB-9 INTERFACE	57
FIGURE C-2	RJ-45 INTERFACE	57

TABLES

TABLE 2-1	TIMING AND SYNCHRONIZATION	7
TABLE 2-2	TECHNICAL SPECIFICATIONS OF THE SCORPIO 1400RL.....	8
TABLE 3-1	INDICATORS ON FRONT PANEL	12
TABLE 5-1	SHDSL ALARMS DESCRIPTION	32
TABLE A-1	ORDER INFORMATION	45
TABLE B-1	LCD MENU TREE.....	47
TABLE B-2	VT-100 MENU TREE	49
TABLE C-1	DB-9 CONNECTOR PIN DEFINITION.....	57
TABLE C-2	DSL RJ-45 CONNECTOR PIN DEFINITION	58
TABLE C-3	LAN RJ-45 CONNECTOR PIN DEFINITION.....	58

Chapter 1. Introduction

ABOUT THIS CHAPTER

This chapter begins with a general description of Scorpio 1000 (S1000), which is a high-density universal rack mounted system. Then, the chapter describes how to use TAINET Scorpio 1400 (S1400) in several applications and show the possible interface configurations of S1000/S1400 System. There are two types of Scorpio 1400 series, one is S1400 and the other is S1400RL. This user manual is focus on Scorpio 1400RL.

1.1 Overview

DSL (Digital Subscriber Loop) technologies increase the bandwidth capacity of existing ubiquitous telephone line (the local copper loops). G.SHDSL is designed for business applications, where high speed is required in both transmission directions. It provides symmetrical data rates from 64Kbps to 2.304Mbps in 2-wire with a transmission distance up to 20Kft using SHDSL technology. The data rates will be increased to 4.624Mbps in 4-wire link. The speeds obtainable using DSL technologies are tied to the distance between the customer premise and the Telco central office. Performance varies with loop characteristics, such as line conditions, loop distance, wire gauge, noise, and the number and locations of bridged taps and gauge changes. The G.SHDSL bit rate can be configured (or rate adapted) to adapt to the line conditions.

The Scorpio 1000 (S1000) provides full coverage of the Last Mile with a variety of technologies, rates, interfaces and media. The system supports standard technologies such as G.SHDSL. Each card in the S1000 is in a point-to-point configuration opposite to a remote unit with no connection to the adjacent cards. This allows totally independent operation among the ports and cards on the S1000. Three types of technologies will be provided in S1000: 2-wire G.SHDSL modems, 4-wire G.SHDSL modems, and fiber optic modems.

S1000 is a high-density universal rack mounted system. The chassis has 14 slots that accommodate up to 14 modems, or 28 modems if dual-port cards are used. Using modular interface cards, S1000 can support SHDSL or fiber in the same chassis under a single management system.

Its hot-swappable feature allows any card or cable to be replaced or removed during equipment operation, without causing interference to data transmission to / from other cards in the chassis.

Modular data interfaces allow modem connectivity via a wide range of DTE interfaces. These interfaces include T1, E1, DATA (V.35, V.36 / RS449, X.21, RS-530), and Ethernet.

1.2 Applications

The SHDSL System consists of a central unit, STU-C (SHDSL Transceiver Unit - Central), at central office, and a remote unit, STU-R (SHDSL Transceiver Unit - Remote), at customer premises.

The services are extended through the ubiquitous copper wires or leased lines with the technologies of G.SHDSL or fiber. Various interface extensions are supported on S1400: E1, T1, DATA (V.35, V.36 / RS449, X.21, RS-530), and S1400RL only supports Ethernet.

Figure 1-1 and Figure 1-2 show two typical applications. Figure 1-3 depicts the possible interface configurations.

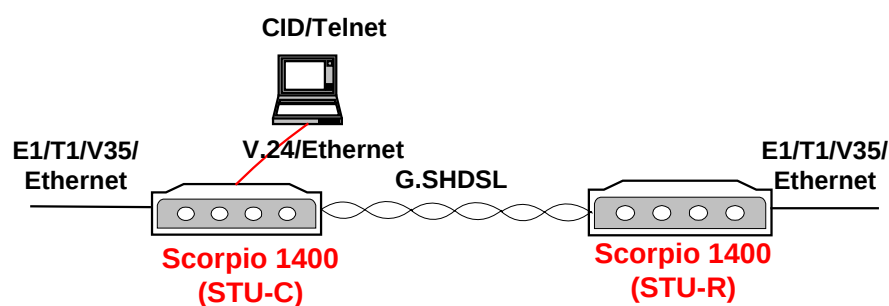


Figure 1-1 Application of Back-to-back

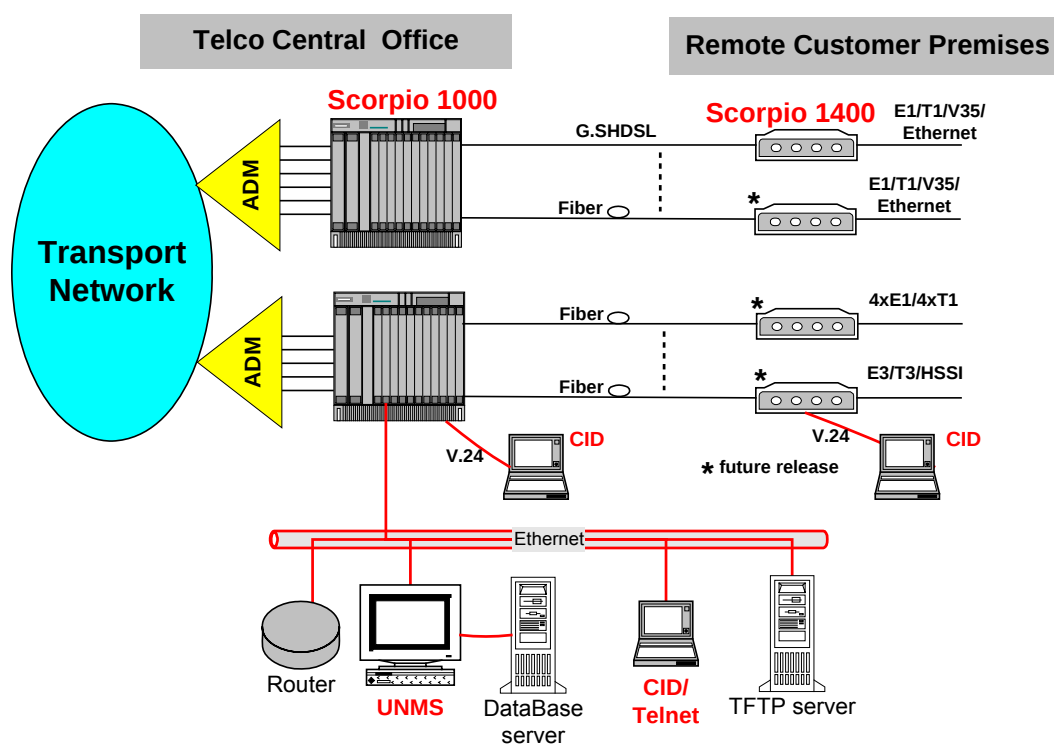


Figure 1-2 Application of S1000/S1400 System

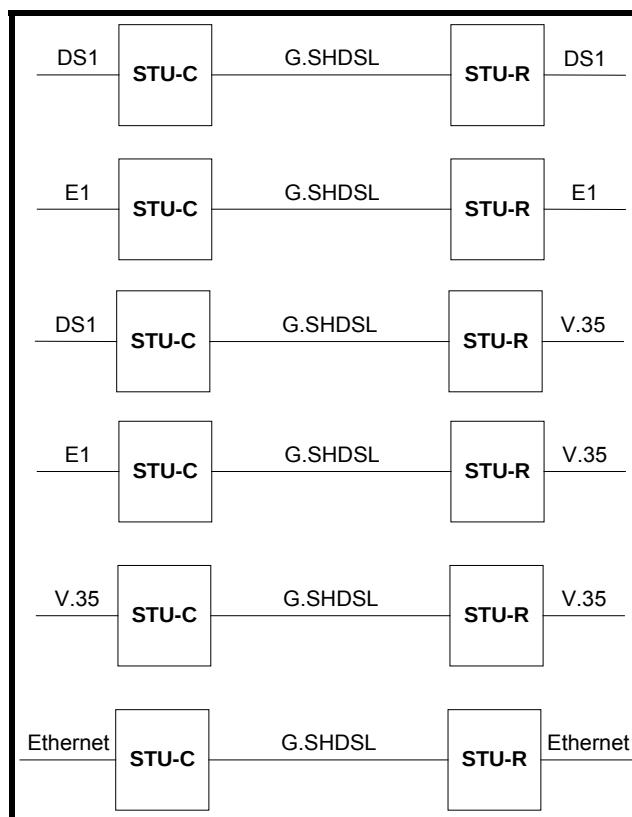


Figure 1-3 Possible Interface Configuration of S1000/S1400 System

Note that Scorpio 1400 (S1400) can be configured as STU-C or STU-R, whereas S1400 should be an STU-R when connected with S1000. There are two types of S1400 series, one is S1400 and the other is S1400RL. S1400RL only equipped with Ethernet port, it could not carry any other DTE interface (T1/E1 or DATA interface).

Chapter 2. Specification

ABOUT THIS CHAPTER

To let the user understand the TAINET Scorpio 1400RL, this chapter begins with its main features. Then, the chapter continues to present the SHDSL interface, the network side interface, timing and synchronization, OAM (Operation, Administration and Maintenance) and technical specifications. The last part of this chapter is devoted to the applications of TAINET Scorpio 1400RL in campus network.

2.1 Main Features

Listed below are the main features of the Scorpio 1400RL:

- Support loop interface G.SHDSL.
- S1400RL supports Ethernet interface.
- Carrying symmetrical 2048 Kbps payload for up to 2.4 miles / 3.9 Km over 26-AWG single pair copper wire.
- Carrying symmetrical 4096 Kbps payload for two pairs copper wires.
- Automatic line rate selection.
- Supports static route, RIP and RIPv2 (future).
- Support SHDSL payload rates of $n \times 64\text{Kbps}$, where n is 3 to 36 in 2 wires, where n is 3 to 72 in 4 wires.
- Support Timing and Synchronization: Local (internal) timing, Line timing (loop received clock), DTE timing.
- For test and diagnostic purpose the S1000 / S1400 system provides various loopback paths and loopback code words for end-to-end loopback function.
- Management by UNMS or CID.
- Remote control / monitoring via Telnet and Ethernet.
- Remote in-band control / monitoring CPE via G.SHDSL EOC.
- Remote software upgrade via TFTP.

2.2 SHDSL Interface

- Meet ITU-T G.991.2 relative requirements
- Support Wetting Current function for feeding of a low current (between 1.0 mA and 20 mA) on the pair to mitigate the effect of corrosion of contacts.
- Support power back off functions.
- Data rate of 64K to 2.304M bps (2 wires) or 128k to 4.624M bps (4 wires), (incrementing step: 64K bps).
- Modulation Method: 16-TCPAM (16 levels Trellis Coded Pulse Amplitude Modulation).
- Physical Connection Type: Standard RJ-45 jack, 135 ohm balanced via 2 wires or 4 wires twisted pair.
- Port enabled / disabled configurable.

2.3 Network Side Interface

2.3.1 Ethernet Interface

- Provide a 10/100 BaseTx auto sensing and half/full duplex configurable Ethernet Interface.
- Comply with the IEEE 802.3/ IEEE 802.3u.
- Physical Connection Type: Standard RJ-45 connector.
- Operate as a self-learning bridge specified in the IEEE 802.1d full protocol transparent bridging function
- Supporting up to 128 MAC learning addresses.
- Supporting Bridge filter function based on source MAC addresses.

2.4 Timing and Synchronization

Table 2-1 shows three modes for S1400DL field selectable. But for S1400RL it always uses local oscillator and no necessary to select others.

Table 2-1 Timing and Synchronization

<i>Mode Number</i>	<i>STU-C Symbol Clock Reference</i>	<i>STU-R Symbol Clock Reference</i>	<i>Example Application</i>	<i>Mode</i>
1	Local oscillator (internal timing)	Received symbol clock	"Classic" HDSL	Plesiochronous
2 (For 1400DL only)	Transmit data clock (DTE timing)	Received symbol clock	Main application is synchronous transport in both directions.	Synchronous
3 (For 1400DL only)	Hybrid Transmit data clock (Hybrid DTE timing)	Received symbol clock	Synchronous downstream transport and bit-stuffed upstream is possible.	Hybrid: downstream is synchronous and upstream is Plesiochronous

2.5 OAM

OAM (Operation, Administration and Maintenance) of the Scorpio 1400RL is listed below:

- UNMS manages S1000 system via SNMP interface and provides a user-friendly GUI-based operational interface under PC / Windows or HP Open-View systems.

- CID Console: user-friendly menu-driven operation
- SNMP management message interface
- Remote control / monitoring S1400RL via Telnet and Ethernet
- Remote in-band control/monitoring CPE via G.SHDSL EOC
- Remote Software Upgrade: Remotely via Ethernet port with TFTP protocol, Locally CID console terminal with XMODEM protocol.
- Automatically and manually configuration backup and restoration to / from local nonvolatile memory
- Support default configuration setup
- Support Alarm Surveillance function
- Support Performance Monitoring function
- For test and diagnostic purpose the S1000 / S1400 system provides various loopback paths, which are depicted in Figure 5-1 and Figure 5-2
- For each STU-C and STU-R, the built-in PRBS generation and detection are provided for loopback performance test on per channel basis. Test results are displayed. The supported PRBS patterns include 211-1, 215-1, 220-1, 223-1.

2.6 Technical Specifications

Table 2-2 gives the technical specifications of the Scorpio 1400RL.

Table 2-2 Technical Specifications of the Scorpio 1400RL

DSL	
Modulation	PAM
Mode	Full duplex with echo cancellation
Number of loops	Single
Loop rate	N*64+8K(N=1~36) up to 2320Kbit/S (2 wire), (N=2~72) 4624kbit/S (4 wire)
Data rate	64K to 4608kbit/S
Loop impedance	135 ohms
Clock source	Internal clock
Clock accuracy	± 32 ppm
Interface	
Ethernet	10/100BaseTx Auto sensing
	IEEE 802.3/ IEEE 802.3u
	IEEE 802.1d full protocol transparent bridging function
	Half and full duplex

Diagnostics		
Loop test	LL	: Local loop back
	RL	: Remote Loop Back
Status Indicators	PWR	: Power indicator
	DSL	: DSL status indicator
	LINK	: Ethernet link indicator
	ACK	: Packet transmitted/received indicator
	ALM	: Alarm indicator
	TST	: Test status indicator
Craft port	115200 BPS	
	8 bit data length	
	None parity	
	1 stop bit	
	9-pin/D-sub/female connector	
Ethernet port	10/100M BPS	
	RJ-45 jack	
Power Requirement		
Input	AC Power adapter	110/220 VAC ± 10 %
	DC Power adapter	36~72 VDC
Power Consumption	< 12 W	
Environments		
Temperature	Operating	+0℃ ~ +50℃
	Storage	-40℃ ~ 70℃
Humidity	Operating	10% ~ 80% non-condensing
	Storage	5% ~ 90% non-condensing

2.7 Applications


This section describes how to apply TAINET Scorpio 1400RL in the network systems.

2.7.1 Campus network

The Scorpio 1400RL is well suited to the campus applications. Figure 2-1 show the general campus applications where remote routers are interconnected across

a campus using two Scorpio 1400RL. One unit is configured as a central office site (CO) unit and the other is the customer premise equipment (CPE) unit.

Figure 2-1 Campus Network Application of the Scorpio 1400RL with Ethernet I/F

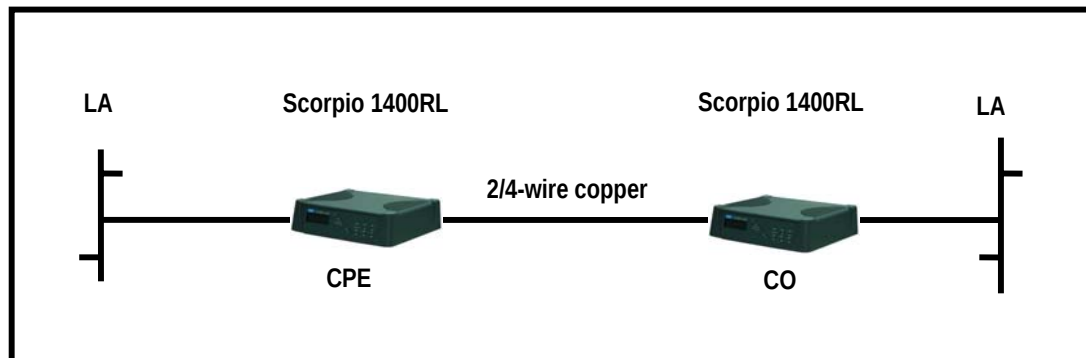

Chapter 3. Interfacing

ABOUT THIS CHAPTER

In this chapter, we will focus our attention on the interfaces of the Scorpio 1400RL. First, the front panel of the Scorpio 1400RL will be discussed. After that, we will examine in more detail the rear panel of the Scorpio 1400RL.

3.1 Front Panel

The front panel of Scorpio 1400RL, as illustrated in Figure 3-1, contains three main sections, i.e. the LCD displayer, status indicators and buttons. Via the front panel of Scorpio 1400RL, users can perform the functions as listed below:

- Configuring system
- Displaying system status
- Setting loopback test

From the status indicators of front panel, users can obtain useful information to monitor the status of the Scorpio 1400RL. In addition, users can set some loopback tests by pressing the buttons on the front panel.



Figure 3-1 Front Panel of the Scorpio 1400

3.1.1 Status Indicators

The status indicators of the Scorpio 1400RL are depicted in Table 3-1. There are six LEDs, which are **PWR**, **DSL**, **LINK**, **ACT**, **ALM** and **TST**. These six LEDs display the system status.

Table 3-1 Indicators on Front Panel

LED	Description	Color	Off	Flashing	Always On
PWR	Power	Green	No Power	N/A	Power OK
DSL	Loop	Green	Failure	Handshaking/Training	Connected
LINK	LAN connected	Green	Unequipped	N/A	Link connected
ACT	Packet transmit/receive	Green	No packet	Packets active	Packets active
ALM	Alarm	Red	Normal	Major Alarm	Minor Alarm
TST	Testing	Amber	Normal	N/A	Loopback activated

3.1.2 The Buttons

The buttons of Scorpio 1400RL are depicted. There are six keys, including **HOME**, **REM/LOC**, **▲**, **▼**, **◀** and **▶**. By pressing these buttons, users may perform configuration, testing for setting up and diagnostic purpose.

The default password for unlocking front panel is “**14001400**” if the front panel was locking.

Rear Panel

Figure 3-2 illustrates the rear panel of the Scorpio 1400RL. Users may connect the Scorpio 1400RL to other devices or equipments via these interfaces.

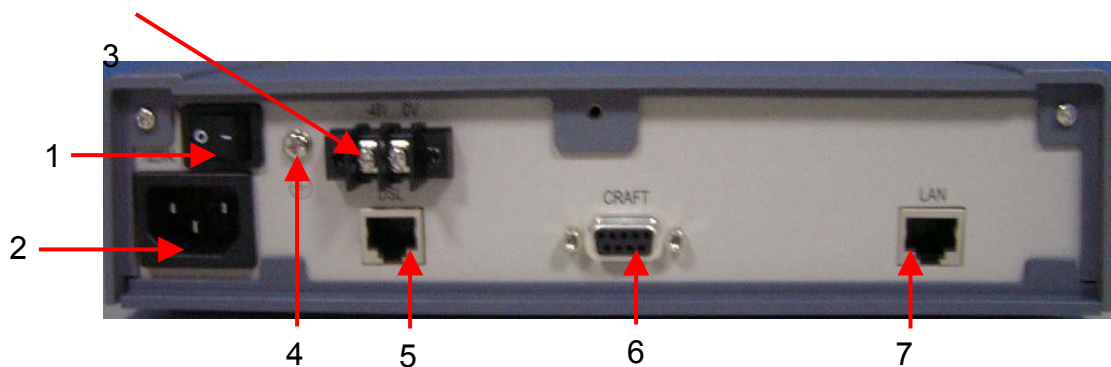
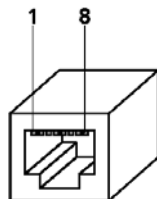


Figure 3-2Rear Panel of the Scorpio 1400

The following connectors/devices appear on the rear panel of the Scorpio 1400RL.


- | | |
|------------------------|--|
| ■ 1 Power On/Off | : The Scorpio 1400RL's power switch |
| ■ 2 Power Receptacle | : Power plug for a AC power cable |
| ■ 3 DC power connector | : Power connector for DC power |
| ■ 4 Ground Terminal | : Ground output terminal, connect to earth |
| ■ 5 DSL Jack | : RJ-45 jack for SHDSL link |
| ■ 6 Craft Interface | : 9 pin female serial D-sub connector |
| ■ 7 LAN Interface | : LAN port interface |

3.1.2.1 **G.SHDSL RJ-45 Pin Assignment****Figure 3-3G.SHDSL RJ-45 Pin Assignment**

Pin	Description
1	-
2	-
3	Tip-(2)
4	Tip-(1)
5	Ring-(1)
6	Ring-(2)
7	-
8	-

The pin assignment of G.SHDSL line is shown in Figure 3-3. The Scorpio 1400RL supports LAN interface port as shown in Figure 3-4.

3.1.2.2

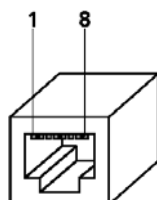

Pin	Description
1	TX_+
2	TX_-
3	Rx_+
4	NC
5	NC
6	Rx_-
7	NC
8	NC

Figure 3-4RJ-45 Pin Assignment

Chapter 4. Installation

ABOUT THIS CHAPTER

In this chapter, we will present the installation guide for the Scorpio 1400RL. It begins with a checklist for unpacking the shipping package. The chapter continues with the configuration procedures that includes “Loop Back Test” and “Establish Connection”.

4.1 Unpacking

The Scorpio 1400RL's shipping package includes the following items:

- 1 Scorpio 1400RL standalone unit
- 1 User's manual CD Pack
- 1 Power cable
- 1 24-AWG RJ-45 cable

4.2 Configuration Procedures

This section guides the user through some basic operations on the front panel and makes sure the Scorpio 1400RL unit is correctly configured. These operations include Local Loop back Test, Establish Connection, System setup and others. All detail menu tree of the system, please refer to Appendix A.

There are six buttons on the front panel- REM/LOC, HOME, ▲ up arrow, ▼ down arrow, ◀ left arrow and ▶ right arrow.

The LCD will display the current S/W version of S1400RL in the beginning. Users can enter the LCD configuration menu by pressing ▼ button.

Users can go to previous or next page by pressing ◀ or ▶ button respectively.

When the value is selected, users can press ▼ (it represents enter) button. If users aim to escape current screen and return to previous screen, just press the ▲ button.

The HOME button is used to return to main menu screen.

Users may configure the S1400RL in remote side or local side by toggling the REM/LOC button. Once it is set for remote side, an R character will be displayed on the LCD screen. It will return to local configuration by pressing the REM/LOC button again.

4.2.1 Establish Connection

1. Connect all the necessary wires and turn on the Scorpio 1400RL.
2. Wait for few seconds, press ▼ to enter the menu tree. Keep pressing ▶ or ◀ until LCD displayed "Configuration" then press ▼ to enter the configuration menu. Repeat the same steps to enter the "Configuration==> system==> OpMode" (Bridge or Router), "Configuration==> Modem==> Modem Type"(CO or CPE), "Configuration==> Modem==> Rate Mode",

“Configuration==> Modem==> Max Data Rate”, “Configuration==> Interface==> LAN IP Address”, “Configuration==> Interface==> LAN NetMask”, “Configuration==> Interface==> WAN==> WAN Enable”(router mode only), “Configuration==> Interface==> WAN==> WAN IP Address”(router mode only), “Configuration==> Interface==> WAN==> Link Type” and “Configuration==> Interface==> WAN==> WAN NetMask”(router mode only) menu to set up the desirous value respectively. Please enter the “Write Config” menu and enable it after all configurations are finished. Reboot the system.

3. Configure the Scorpio 1400RL CO side by pressing button on the front panel in according to the LCD menu tree *Table B-1*. Note: One side must be configured as CO and the other side as CPE in back to back connection.
4. Configure the Scorpio 1400RL CPE side (Specify same data rate and Line Type as CO side but different LAN/WAN IP address). Note: In back-to-back connecting application, the “Modem==> Rate Mode” of one side must be set to “Adaptive” and the other side is set on “Fixed”.
5. Any user specified configurations are different from descriptions as above; please configure them by pressing button on the front panel.
6. Wait for several seconds, DSL LED will be ON, LCD displays “Connected” and the data rate of connection, it shows SHDSL link having been established.

4.2.2 Local Loopback Test

1. Go to Test ==> Loopback menu by pressing the button on front panel.
2. Press the button on front panel to configure the loop back test if users aim to do it. For running the loop back test, please refer to Utility==> Loopback in chapter 5, Figure 5-1 and Figure 5-2.
3. Wait for several seconds, the Scorpio 1400RL will complete the test and the TST LED will turn on.
4. Return the setting value of loop back to normal by pressing the key button on the front panel.

Chapter 5. Operation of CID

ABOUT THIS CHAPTER

In this chapter, you will be introduced to the CID (Craft Interface Device) VT-100 operation of Scorpio 1400RL. The chapter starts with an overview of Scorpio 1400RL's CID. In addition, each main menu item of the Scorpio 1400RL's CID, such as Configuration, Monitor and other utility will be discussed.

5.1 Overview

The craft port for configuration is set to Speed: 115200, Data bit: 8, Parity: n, Stop bit: 1, Flow control: n. When startup the S1400RL, the following messages will appear before the screen displays the Application software code.

```

-----
                Scorpio 1400R

TAINET Communication System corp.
URL: http://www.tainet.net
E-mail: tac@tainet.net
-----

Boot ver 1.21  build at 2004/04/28

Downloading Xilinx Code ...?
.....

Download Xilinx Code Successfully ...

lcd reset ok

System loading ...

```

```

Welcome to Tainet Scorpio 1400RL          ...?
Press Space or Enter key to enter console mode ...?

```

At startup of the AP, press Enter, the CID will prompt user to enter the password for access into the system. The default username and password are **tainet**. (Earlier version before V1.47 is **root**)

```


User Name : tainet
User Password : *****

```

The CID offers user-friendly menu-driven user interface. The following figure depicts the structure of the interface. The top tier command options include **QConfig**, **Config**, **Monitor**, **ShowConf**, **Utility**, **Write**, **Reboot** and **Exit**.



Note: *There are some differences between LCD and CID menu tree, ex: the Utility item, but most of them are almost the same.*

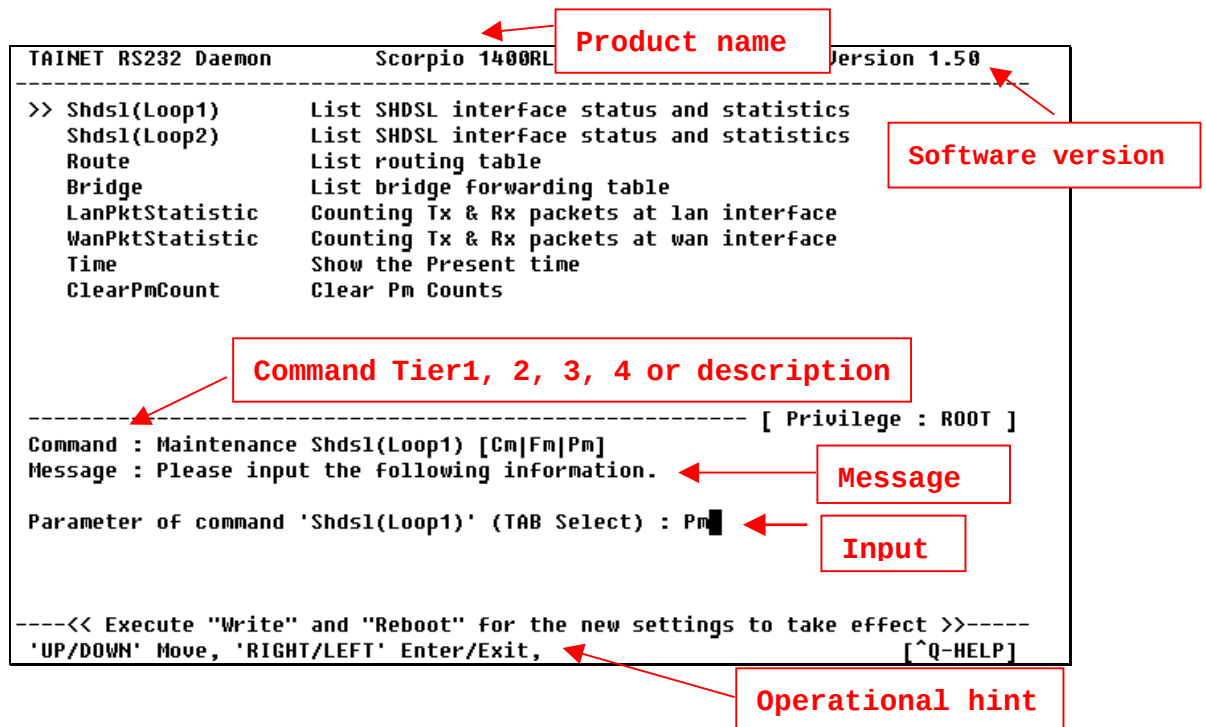

- **Product Name:** TAINET Scorpio 1400RL.
- **Software Version:** the software version number.
- **Tier 2:** The second tier of the current screen.
- **Tier 3:** The next tier of the current screen.
- **Tier 4 or description:** The fourth tier of the current screen and / or its description.
- **Message:** System prompt message.
- **Input:** the values to be set by the user.
- **Operational hint:** a hint for the user during operation. Some operation asks to write the new configuration and reboot system for the new settings to take effect.

5.2 Main menu

After the password checks out, the CID will bring up the top page or the main menu. There are eight items on this page, **QConfig**, **Config**, **Monitor**, **ShowConf**, **Utility**, **Write**, **Reboot** and **Exit**. The **Qconfig** is used to configure the system very roughly. Users can configure the detail parameters in **Config** menu. The **Monitor** menu is used to monitor status and check any alarm log of system. Users can see all configurations of system through **ShowConf** menu. Some useful tools for diagnostic or testing in **Utility** menu.

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> QConfig	Quick system parameter configuration	
Config	All system parameter configuration	
Maintenance	Monitor the system status	
ShowConf	Show system configuration	
Utility	Some utility functions	
Write	Write configuration to flash	
Reboot	Restart system and activate new system configuration	
Exit	Disconnect	

5.3 Qconfig

5.3.1 Qconfig-OpMode

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> OpMode	Setup the operation mode	
Lan	Setup LAN interface configuration	
Wan	Setup WAN configuration	
EndpointMode	SHDSL endpoint side	

There are two operation mode of Scorpio 1400RL, Bridge Router mode, for users can specify the network mode through the menu. And need to write the new configuration and reboot system for the new settings to take effect.

5.3.2 Qconfig-Lan

```
TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
>> Address              Setup LAN interface IP and netmask

----- [ Privilege : ROOT ]
Command : QConfig Lan Address <ip> <netmask>
Message : Please input the following information.

IP address (ENTER for default) <0.0.0.0> : 192.168.8.5
Subnet mask (ENTER for default) <0.0.0.0> : 255.255.255.0

----<< Execute "Write" and "Reboot" for the new settings to take effect >>----
'UP/DOWN' Move, 'RIGHT/LEFT' Enter/Exit.      [^Q-HELP]
```

Users can specify the IP address/subnet mask of LAN interface.

5.3.3 Qconfig-Wan

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> State	Setup interface to be enable or not	
Address	Setup WAN interface IP address, netmask	
LinkType	Setup interface link type	

- **State:** There are two possible values for WAN state - Enable or Disable.
- **Address:** Users can specify the IP address/subnet mask of WAN interface.
- **LinkType:** Specify the Wan link type of PPP or Ethernet.

5.3.4 Qconfig-EndpointMode

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

OpMode	Setup the operation mode	
Lan	Setup LAN interface configuration	
Wan	Setup WAN configuration	
>> EndpointMode	SHDSL endpoint side	

Configure the system as a *CO* or *CPE* device.

5.4 Config

There are two interface types on the S1400RL, which are LAN and WAN available for the S1400RL. In addition to the interfaces of LAN and WAN, the SHDSL line interface should be configured in this menu.

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> System	System parameter configuration	
Interface	Interface parameter configuration	
Shdsl	Shdsl parameter configuration	
Protocol	Protocol parameter configuration	
Route	Routing parameter configuration	
Bridge	Transparent bridging parameter configuration	
AccessConf	Telnet/RS232 configure server parameter setting	
Reset2Dft	Reset system configuration to factory default	

5.4.1 Configure-System

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

OpMode	Setup the operation mode	
HostName	Setup local hostname	
>> PHYType	Setup the EtherPHY Full/Half type	

- **OpMode:** Set up the operation mode as Router or Bridge, as Qconfig menu did.
- **HostName:** Users can specify the name of the device, which can be identified in the network.
- **PHYType:** Specify the system interface as Full or Half duplex.

5.4.2 Configure-Interface

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> Lan	Config LAN interface profile	
Wan	Config WAN interface profile	

- **Lan:** Set up the IP address/subnet mask of LAN interface.
- **Wan:** Users can specify the following parameters of WAN interface.
 - State: set up the interface as *Enable* or *Disable*
 - Address: Set up the IP address/Subnet mask of WAN interface.
 - LinkType: Set up the link type as *PPP* or *Ethernet*.

5.4.3 Config-Shdsl

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> EndpointMode	SHDSL endpoint side	
RateMode	Configure G.shdsl bit rate mode	
MinRate	Configure min line rate(n x 64Kbps)	
MaxRate	Configure max line rate(n x 64Kbps)	
Rate1544Enabled	Set the rate 1544	
PsdMode	Configure power spectral density mode	
TransmissionMode	Configure transmission mode	
PowerBackoff	SHDSL power backoff	
4WireMode	SHDSL 4 Wire Mode	
PmThreshold	Set PM 15-min and 1-day thresholds	

- **EndpointMode:** Set up the SHDSL active mode as CO or CPE.
- **RateMode:** Configure the bit rate mode as Adaptive or Fixed.
- **MinRate:** Configure the minimum line rate (n*64Kbps); the possible value of n is from 1 to 72.

- **MaxRate**: Configure the maximum line rate (n*64Kbps); the possible value of n is from 1 to 72.
- **Rate1544Eabled**: Set the rate of 1544kbps to Enable or Disable.
- **PsdMode**: Set the power spectral density to Symmetrical or Asymmetric. Used to let SHDSL transceiver to use a symmetrical or asymmetrical power spectral density mask as specified in G.991.2 standard.
- **TransmissionMode**: Configure the transmission mode to Annex-A or Annex-B. Which is specified in ITU-T G.991.2 standard.
- **PowerBackoff**: The possible value is Enable or Disable. When enabled, the transmit power from the other end of STU will be reduced in 1-dB step from 0 to 6dBs according to the received power.
- **4WireMode**: The possible value is Enable or Disable.
- **PmThreshold**: Set the PM threshold of 15-min and 1-day
- **15minFirst**: set up the ES(0-900), SES(0-900) 15min threshold.
- **15minSecond**: Set up the UAS(0-900), LOSWS(0-900) 15min threshold.
- **1dayFirst**: set up the ES(0-86400), SES(0-86400) 1day threshold.
- **1daySecond**: Set up the UAS(0-86400), LOSWS(0-86400) 1day threshold.
- **SNM_Att_Thr**: Setup the SNR margin(0-900) and Loop Attenuation threshold(0-900).

5.4.4 Config-Protocol

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> Dhcp	DHCP parameter configuration	
DnsProxy	DNS proxy parameter configuration	
IpShare	NAT parameter configuration	
Rip	Config RIP protocol module parameter	
Stp	Config spanning tree protocol parameter	

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> State	Trigger DHCP service	
Generic	Config generic DHCP parameter	
Fixed	Config fixed host IP address list	

- **Dhcp**: Set up DHCP parameters as follow:
 - State: *Enable* or *Disable* the DHCP service.
 - Generic: Set up the following parameters-
 - Gateway: Specify the default gateway to all clients.
 - Netmask: Specify the subnet mask to all clients.
 - IpRange: Specify the range of assigned IP to all clients.

- Dns1: Specify IP address of the first DNS to all clients
- Dns2: Specify IP address of the second DNS to all clients
- Dns3: Specify IP address of the third DNS to all clients
- Fixed:
 - Add: Add some fixed IP addresses to hosts. Users must enter a MAC address and associated with an IP address.
 - Delete: Delete any host of fixed IP address (the number of host is from 1 to 10).

■ **DnsProxy:** Configure the IP address of DNS proxy (Dns1 to Dns3).

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50
State	Trigger NAT and PAT service	
>> Nat	Config network address translation	
Pat	Config port address translation	

■ **IpShare:** Configure the NAT parameters as follow:

- State: Enable or Disable the NAT/PAT service.
- Nat: Configure NAT parameters as follow:
 - Local:
 - Range- NAT entry number<1 to 5>, Base address<IP>, number of address<1 to 253>.
 - Delete- Delete entry number<1 to 5> defined in Range.
 - Global:
 - Range- NAT global address entry number<1 to 5>, Base address<IP>, number of address<1 to 253>.
 - Interface- NAT global address entry number<1 to 5>, Active interface number<Wan1/2>.
 - Delete- Delete NAT global entry number<1 to 5>.
 - Fixed:
 - Modify- fixed entry number<1 to 128>, local address<IP>, global address<IP>.
 - Interface- Fixed NAT mapping entry number<1 to 128>, Active interface number<Wan1/2>.
 - Delete- Delete fixed mapping entry number<1 to 128>.
- Pat: Configure PAT parameters as follow:
 - Add:
 - Name- Specify any service name<name>.
 - Protocol- configure the transmit protocol<TCP or UDP>.

Port- Specify a port number<1 to 65534>.

Interface- Active interface number <Wan1/2>.

Server- Specify a LAN host<IP>, port number<1 to 65534>

➤ Modify: Modify virtual server entry number<1 to 10>:

Name- Specify any service name<name>.

Protocol- configure the transmit protocol<TCP or UDP>.

Port- Specify a port number<1 to 65534>.

Interface-Active interface number <Wan1/2>.

Server- Specify a LAN host<IP>, port number<1 to 65534>

Delete: Delete PAT entry number <1 to 10>.

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

State	Config operation state	
>> Lan	Config LAN interface RIP parameter	
Wan	Config WAN interface RIP parameter	

■ **Rip:** Configure parameters of RIP protocol as follow:

- State: Enable or Disable the RIP protocol.
- Lan: Configure RIP LAN parameters as follow:
 - Version: configure the version of RIP<1 or 2 >
 - Attrib: RIP attribute as:
 - Rip mode- <Disable or Enable>
 - Poison reserve- <Disable or Enable>
- Wan: Configure RIP WAN parameters as follow:
 - Version: configure the version of RIP<1 or 2 >
 - Attrib: RIP attribute as:
 - Rip mode- <Disable or Enable>
 - Poison reserve-<Disable or Enable>

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> State	Config STP module status	
Priority	Config bridging priority	
Lan	Config LAN port operation and priority	
Wan	Config WAN port operation and priority	

■ **Stp:** Configure Spanning tree protocol parameters:

- State: Enable or Disable the STP.
- Priority: Configure bridging priority<0 to 65535>
- LAN: Configure LAN port operation and priority.
 - Port operation: <Enable or Disable >
 - Port priority: <number>

- Wan: Configure WAN port operation and priority.
 - Port operation: <Enable or Disable >
 - Port priority: <number>

5.4.5 Config-Routing

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> Add	Add static route entry	
Delete	Delete static route entry	

- **Add:** Configure the static route: network<IP>, Subnet mask<mask>, default gateway<IP>.
- **Delete:** Delete the static route entry <1 to 20>

5.4.6 Config-Bridge

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> Add	Add static MAC entry	
Modify	Modify specific static MAC entry	
Delete	Delete static MAC entry	

- **Add:** Add a static entry, the parameters are as follow:
 - MacAddress: Specify the MAC address.
 - Lan1Port: Specify the bridge type of LAN1<Filter, Forward, Dynamic>
 - Wan1Port: Specify the bridge type of WAN1<Filter, Forward, Dynamic>
- **Modify:** Modify one entry number <1 to 20>.
 - MacAddress: Specify the MAC address.
 - Lan1Port: Specify the bridge type of LAN1<Filter, Forward, Dynamic>
 - Wan1Port: Specify the bridge type of WAN1<Filter, Forward, Dynamic>
- **Delete:** Delete the entry number<1 to 20>

5.4.7 Config-AccessConf

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> MaxUser	Maximum allow telnet access user number	
GuestName	Change guest name	
GuestPwd	Change guest password	
SuName	Change superuser name	
SuPwd	Change superuser password	

- **MaxUser:** Configure the maximum number of telnet users<1 to 5>
- **GuestName:** Change a guest's name. The default is "guest".
- **GuestPwd:** Change a guest's password. The default is "guest"

- **SuName:** Change superuser's name. The default is "tainet".
- **SuPwd:** Change superuser's password. The default is "tainet"

5.4.8 Config-Reset2Dft

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50
System	System parameter configuration	
Interface	Interface parameter configuration	
Shdsl	Shdsl parameter configuration	
Protocol	Protocol parameter configuration	
Route	Routing parameter configuration	
Bridge	Transparent bridging parameter configuration	
AccessConf	Telnet/RS232 configure server parameter setting	
>> Reset2Dft	Reset system configuration to factory default	
----- [Privilege : ROOT]		
Command : Config Reset2Dft <CR>		
Message : Please input the following information.		
Are you sure ? (y/n) :		

Reset all configurations to factory default value. Users can enter *y* or *n*.

5.5 Maintenance

5.5.1 Maintenance-Shdsl1(Shdsl2)

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50
>> Shdsl(Loop1)	List SHDSL interface status and statistics	
Shdsl(Loop2)	List SHDSL interface status and statistics	
Route	List routing table	
Bridge	List bridge forwarding table	
LanPktStatistic	Counting Tx & Rx packets at lan interface	
WanPktStatistic	Counting Tx & Rx packets at wan interface	
Time	Show the Present time	
ClearPmCount	Clear Pm Counts	

- **None:** Monitor the circuit status, Fault and Performance.
- **Cm:** Monitor the circuit status.
- **Fm:** Fault monitor
- **Pm:** Performance monitor

```

TAINET RS232 Daemon          Scorpio 1400RL          Version 1.50
-----
Monitoring Window...

<SHDSL CM Information>
=====
                                Local          Remote
                                -----
Endpoint Side      :          CPE            CO
Link Operation Status :          Data          Data
Actual Line Rate   :        1984 Kbps        1024 Kbps
Received Gain      :           6 db          7 db
Transmission power :           7 db          7 db
Current SNR Margin :          15 db          15 db
Loop Attenuation   :           1 db          1 db
Power Backoff      :          Enable

Press Any Key to Return Menu Window...

```

```

TAINET RS232 Daemon          Scorpio 1400RL          Version 1.50
-----
Monitoring Window...

<SHDSL FM Information>
=====
Losw                : Cleared
ES_QTR_TCA          : Cleared
SES_QTR_TCA         : Cleared
UAS_QTR_TCA         : Raised
LOSWS_QTR_TCA       : Raised
CRC_QTR_TCA         : Raised
ES_DAY_TCA          : Cleared
SES_DAY_TCA         : Cleared
UAS_DAY_TCA         : Raised
LOSWS_DAY_TCA       : Raised
CRC_DAY_TCA         : Cleared
SNR_MARGIN_TCA      : Cleared
LOOP_ATTEN_TCA      : Cleared

Press Any Key to Return Menu Window...

```

```

TAINET RS232 Daemon          Scorpio 1400RL          Version 1.50
-----
Monitoring Window...

<SHDSL PM Information>
=====
current 15 minutes          current 1 day
-----
ES      :    30              30
SES     :    30              30
UAS     :   382             382
LOSWS   :   378             378
history 15 minutes          history 1 day
-----
ES      :
-----
1 ~ 8 :    0    0    0    0    0    0    0    0    1:    0
9 ~ 16 :    0    0    0    0    0    0    0    0    2:    0
17 ~ 24 :    0    0    0    0    0    0    0    0    3:    0
25 ~ 32 :    0    0    0    0    0    0    0    0    4:    0
33 ~ 40 :    0    0    0    0    0    0    0    0    5:    0
41 ~ 48 :    0    0    0    0    0    0    0    0    6:    0
--- MORE ---

'UP/DOWN' Move, 'RIGHT/LEFT' Enter/Exit,          [^Q-Help]

```

There are four types of PM parameter thresholds for combination of 15 minutes, and one day performance monitoring. A TCA will be issued whenever the monitored value has crosses the threshold setting. The PM parameter count in seconds of the current 15-minute/1 day period and stores up to the 96 of the latest 15-minute PM parameter count records.

5.5.2 Maintenance-Route

TAINET RS232 Daemon		Scorpio 1400RL		Version 1.50	

Monitoring Window...					
Flags: C - connected					
S - static					
R - RIP					
Flags	Interface	Destination /	Netmask /	Gateway	

C	192.168.8.5	192.168.8.0/	255.255.255.0/	directly	
		Portname: IF1			
C	127.0.0.1	127.0.0.1/255.255.255.255/	directly		
		Portname: IF0			

Monitor the routing table of system.

5.5.3 Maintenance-Bridge

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

Monitoring Window...		
MAC address is : 00-90-bb-11-97-72		
forwarding database : (default max. = 300 s)		
Press Any Key to Return Menu Window...█		

Monitor the MAC forwarding table of system.

5.5.4 Maintenance-LanPktStatistic

TAINET RS232 Daemon		Scorpio 1400RL		Version 1.50	

Monitoring Window...					
<Packets statistic at lan interface>					
=====					
Transmitted Packets		: 1			
Press Any Key to Return Menu Window...					

- **None:** Show the number of total transmitted and received packets on LAN interface.
- **Tx:** Show the number of total transmitted packets on LAN interface.

- **Rx:** Show the number of total received packets on LAN interface.

5.5.5 Maintenance-WanPktStatistic

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
Monitoring Window...

<Packets statistic at wan interface>
=====
    Transmitted Packets      : 1
Press Any Key to Return Menu Window...

```

- **None:** Show the number of total transmitted and received packets on WAN interface.
- **Tx:** Show the number of total transmitted packets on WAN interface.
- **Rx:** Show the number of total received packets on WAN interface.

5.5.6 Maintenance-Time

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
Monitoring Window...

<Present Time Information>
=====

    Year / Month / Day      : 2005/   5/   24
    Hour / Minute / Second  : 15/   53/   22
Press Any Key to Return Menu Window...

```

Monitor the time and date setting of the system.

All TCA (Threshold Crossing Alert) are classified as WARNING. Table 5-1 show all SHDSL alarms.

Table 5-1 SHDSL Alarms Description

<i>Alarm Type</i>	<i>Severity Class</i>	<i>Description</i>
SHDSL_LOSW	MAJOR	Failure of LOSW
SHDSL_LOSW_QTR_TRHD	WARNING	15-minute LOSW TCA
SHDSL_LOSW_DAY_TRHD	WARNING	1-day LOSW TCA
SHDSL_ES_QTR_TRHD	WARNING	15-minute ES TCA
SHDSL_ES_DAY_TRHD	WARNING	1-day ES TCA
SHDSL_SES_QTR_TRHD	WARNING	15-minute SES TCA
SHDSL_SES_DAY_TRHD	WARNING	1-day SES TCA
SHDSL_UAS_QTR_TRHD	WARNING	15-minute UAS TCA

SHDSL_UAS_DAY_TRHD	WARNING	1-day UAS TCA
SHDSL_LOSW_FQ_QTR_TRHD	WARNING	15-minute FE LOSW TCA
SHDSL_LOSW_FQ_DAY_TRHD	WARNING	1-day FE LOSW TCA
SHDSL_ES_FQ_QTR_TRHD	WARNING	15-minute FE ES TCA
SHDSL_ES_FQ_DAY_TRHD	WARNING	1-day FE ES TCA
SHDSL_SES_FQ_QTR_TRHD	WARNING	15-minute FE SES TCA
SHDSL_SES_FQ_DAY_TRHD	WARNING	1-day FE SES TCA
SHDSL_UAS_FQ_QTR_TRHD	WARNING	15-minute FE UAS TCA
SHDSL_UAS_FQ_DAY_TRHD	WARNING	1-day FE UAS TCA
SHDSL_ATN_TRHD	WARNING	Attenuation TCA
SHDSL_FQ_ATN_TRHD	WARNING	FE Attenuation TCA
SHDSL_SNM_TRHD	WARNING	SNR Margin TCA
SHDSL_FQ_SNM_TRHD	WARNING	FE SNR Margin TCA

Up to 200 alarm records can be stored without the use UNMS. Many more can be logged in Database if UNMS is used.

- **Line Status:** The possible SHDSL operational states are "Idle_State", "Handshaking", "Training", "Sync Hunting", "Connected", "Disconnect", "Analog_Loopback", "Remote_Digital_Loopback", "Digital_Loopback", "Analog_Loopback_fail", "Remote_Digital_Loopback_fail", "Digital_Loopback_fail", "Port_disable", "Port_Has_Been_Reset", "Unknown_State".

Users can view any historical performance by selecting ether port.

5.6 ShowConf

ShowConf menu is used to show all the configurations of entire equipment.

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
>> SysInfo      Show system information
   Interface    Show interface configuration
   Shdsl        Show SHDSL configuration parameters
   Dhcp         Show DHCP configuration
   DnsProxy     Show RIP configuration
   IpShare      Show IP address sharing configuration
   Rip          Show RIP configuration
   Route        Show static routes configuration
   Bridge       Show bridging configuration
   Stp          Show STP configuration
   AccessConf   Show system information
   Bert         Show Bert configuration
----- [ Privilege : ROOT ]
Command : ShowConf SysInfo <CR>
Message :
```

5.6.1 ShowConf-SysInfo

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
Status Window...

(1) General system information
Model      : Scorpio 1400RL
Software Version : 2005-04-25 version 1.50
Firmware Version : 2.0
Operation Mode  : Bridge
Lan IP Address  : 192.168.8.5
Lan Network Mask : 255.255.255.0
Lan Mac Address  : 00:90:bb:11:97:72
Hostname       : SOHO

Press Any Key to Return Menu Window...

```

5.6.2 ShowConf-Interface

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
Status Window...

(1) LAN Interface Parameters
Int.   Link   IP Address/Netmask  Admin   NAT   Bridge
-----
LAN 1 Ethernet      192.168.8.5/24  Enable  Global Enable

Press Any Key to Return Menu Window...

```

- **None:** Show parameters of both LAN and WAN interface.
- **LAN:** Show the parameter of LAN interface.
- **WAN:** Show the parameter of WAN interface.

5.6.3 ShowConf-Shdsl

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
Status Window...

(1) SHDSL Configuration Parameters
Endpoint Side      : CPE
Conf-Min-Line Rate : 3
Conf-Max-Line Rate : 31
Psd Mode           : Symmetrical
Transmission Mode   : Annex-A
Power Backoff       : Enable
4 Wire Mode         : Disable

Press Any Key to Return Menu Window...

```

5.6.4 ShowConf-Dhcp

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
Status Window...

(1) Generic DHCP Parameters
  Service(TAB)      : Disable
  Interface(TAB)    : LAN1
  Default Gateway   : 192.168.1.1
  Subnet Mask       : 255.255.255.0
  DHCP Start IP     : 140.92.64.130
  DHCP IP Count     : 20
  Name Server IP    : 192.168.1.1

Press Any Key to Return Menu Window...

```

- **None:** Show parameters of both Generic and Fixed DHCP settings.
- **Generic:** Show the parameter of Generic DHCP parameter.
- **Fixed:** Show the parameter of Fixed DHCP parameter.

5.6.5 ShowConf-DnsProxy

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
Status Window...

(1) Domain Name Server
  No.      Domain Name Server
-----
  1        140.92.61.55
  2        140.92.1.50
  3

Press Any Key to Return Menu Window...

```

5.6.6 ShowConf-IpShare

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
Status Window...

(1) Fixed NAT Mapping Pool
  No      Local Address      Global Address      Interface
-----
  1        172.16.1.20        10.1.1.20          WAN 1
  2          (Empty)
  3          (Empty)
  4          (Empty)
  5          (Empty)

Press Any Key to Return Menu Window...

```

5.6.7 ShowConf-Rip

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
Status Window...

(1) Rip Parameters
  <Generic RIP Parameters>
    RIP mode      : Disable
    Auto summary: Disable

  <Interface RIP Parameters>
    Net    Mode    Ver  Poison Rev.
    -----
    LAN 1   Disable  2      Enable
    WAN 1   Disable  2      Enable

Press Any Key to Return Menu Window...

```

5.6.8 ShowConf-Route

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
Status Window...

(1) Static Route Parameters
  No   Network Address      Subnet Mask      Gateway
  ----
  1     10.0.0.0             255.0.0.0        192.168.8.5

Press Any Key to Return Menu Window...

```

5.6.9 ShowConf-Bridge

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
Status Window...

(1) Static Bridging Parameters
  No data in the static bridge entry!!

Press Any Key to Return Menu Window...

```

5.6.10 ShowConf-Stp

```

TAINET RS232 Daemon          Scorpio 1400RL          Version 1.50
-----
Status Window...

(1) Spanning Tree Protocol Configuration
    State       : Disable
    Bridge Priority : 32768

    Port        Operation    Priority
    -----
    LAN 1       Enable       128
    WAN 1       Enable       128

Press Any Key to Return Menu Window...

```

5.6.11 ShowConf-AccessConf

```

TAINET RS232 Daemon          Scorpio 1400RL          Version 1.50
-----
Status Window...

(1) Telnet/RS232 Access Configuration
    Access-User Max No : 5
    Guest Name         : user
    Guest Password     : user
    SuperUser Name     : tainet
    SuperUser Password : tainet

Press Any Key to Return Menu Window...

```

5.6.12 ShowConf-Bert

```

TAINET RS232 Daemon          Scorpio 1400RL          Version 1.50
-----
Status Window...

(1) Bert Test Configuration

    Bert Pattern Type   : 10E23
    Bert Test Start/Stop : Stop
    Bert Test Period    : 100
    Bert Error Insert    : 0

Press Any Key to Return Menu Window...

```

5.7 Utility

5.7.1 Utility-Upgrade

```

TAINET RS232 Daemon          Scorpio 1400RL          Version 1.50
-----
>> TftpServer                Default TFTP parameter configuration
   ApImage                   Upgrade kernal image file
   Bootstrap2                Upgrade boot strap

----- [ Privilege : ROOT ]
Command : Utility Upgrade TftpServer <ip>
Message : Please input the following information.

TFTP server ip address (ENTER for default) <172.16.5.33> :

```

TFTP software upgrade is supported. Users can specify the IP address of TFTP server for downloading.

- **Tftpserver:** Users must specify an IP address of TFTP server for downloading.
- **ApImage:**
 - TFTP server: <IP>.
 - Filename: <name>.
- **Bootstrap2:**
 - TFTP server: <IP>.
 - Filename: <name>.

```

TAINET RS232 Daemon          Scorpio 1400RL          Version 1.50
-----
TftpServer                Default TFTP parameter configuration
>> ApImage                   Upgrade kernal image file
   Bootstrap2                Upgrade boot strap

----- [ Privilege : ROOT ]
Command : Utility Upgrade ApImage <ip> <file>
Message : Please input the following information.

TFTP server ip address (ENTER for default) <172.16.5.33> :
Upgrade filename (ENTER for default) <SOHO.BIN> : █

```

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
  TftpServer      Default TFTP parameter configuration
  ApImage         Upgrade kernal image file
>> Bootstrap2    Upgrade boot strap

----- [ Privilege : ROOT ]
Command : Utility Upgrade Bootstrap2 <ip> <file>
Message : Please input the following information.

TFTP server ip address (ENTER for default) <172.16.5.33> :
Upgrade filename (ENTER for default) <BOOT2.BIN> :

```

Users may press “Ctrl+C” to stop the download procedure if TFTP server got problem to send codes.

5.7.2 Utility-Ping

```

TAINET RS232 Daemon      Scorpio 1400RL      Version 1.50
-----
  Upgrade         Upgrade system to new version
>> Ping          Ping test
  Bert            Bert parameter configuration
  Loopback        Loopback parameter configuration
  SetTime         Set the global time

----- [ Privilege : ROOT ]
Command : Utility Ping <ip> [1~65534|-t] [1~1399]
Message : Please input the following information.

IP address <ip> : 192.168.8.1
Number of ping request packets to send (TAB Select) : -t
Data size [1~1399] : 256

```

Users can do the ping test between two equipments. Specify an IP address of remote site, number of packets to send (- t means the ping test continue until users press “Ctrl-C” to stop it.) and data size.

5.7.3 Utility-Bert

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

BertStart	Set Bert Start/Stop	
>> BertTP	Set Bert Pattern Type	
SetBertTimer	Configure Bert Period	
BertErrorInsert	Configure Error Rate Insert(0,1:no error,2~7:10E(-x)	
ResetErrorCount	Reset Bert Error Counts	
BertMonitor	List Status of Bert	

- **BertStart:** Start or Stop the Bert test.
- **BertTP:** Generate test pattern. Possible values are 10E11, 10E15, 10E20 and 10E23.
- **SetBertTimer:** Set the test period. The possible value is from 1 to 1000000 seconds.
- **BertErrorInsert:** Set the error rate, the possible value are 0~7. (0,1 is no error, x=2~7: 10E-x).
- **ResetErrorCount:** Reset Bert error count. The possible value is y or n.
- **BertMonitor:** Monitor the Bert status. As shown below:

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50
-----Remote LoopBack--		
Monitoring Window...		
<Bert Status Information>		
=====		
Bert Status	:	Running
Elapsed Time	:	10 / 100
In Sync Situation	:	SYNC
Error Count(s)	:	0 / 15872929
Press Any Key to Return Menu Window...		

For test and diagnostic purpose the S1400RL system provides various Loopback paths, which are depicted in Figure 5-1 and Figure 5-2. They are Local Loopback and Remote Loopback.

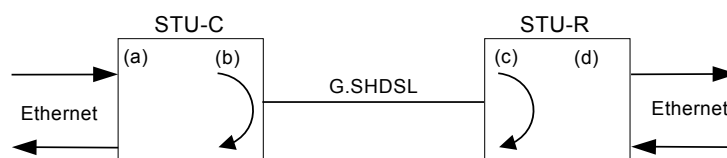


Figure 5-1 STU-C Side Activated Loopback

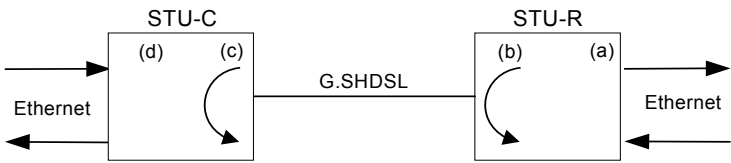


Figure 5-2STU-R Side Activated Loopback

5.7.4 Utility-Loopback

TAINET RS232 Daemon	Scorpio 1400RL	Version 1.50

>> Loopback	Set the loopback mode	
Loopback_Status	Show the loopback status	

- **Lookback:** The possible modes are Normal, Local and Remote.
- **Loopback_Status:** To start or stop the test. Possible values are START and STOP.

5.7.5 Utility-SetTime

```
TAINET RS232 Daemon          Scorpio 1400RL          Version 1.50
-----
>> Time1                    set year/month/day
   Time2                    set hour/minute/second

-----
[ Privilege : ROOT ]
Command : Utility SetTime Time1 [2000~2300] [1~12] [1~31]
Message : Please input the following information.

Set the Year [2000~2300] : 2005
Set the Month [1~12] : 05
Set the Date [1~31] : 24█
-----
'UP/DOWN' Move, 'RIGHT/LEFT' Enter/Exit,          [ ^Q-HELP ]
```

The system provides RTC (Real Time Clock) and supports BCD coded century, year, month, date, day, hours, minutes, and seconds with automatic leap year compensation valid up to the year 2300. Set the Date/Time to correctly time-stamping the alarm or PM data report. The date/time will be stored in non-volatile memory, so data will not be lost even when powering off the system.

- **Time1:** Configure the date of the system as the time stamp:
 - Year: <2000 to 2300>.
 - Month: <1 to 12>.
 - Day: <1 to 31>.
- **Time2:** Configure the date of the system as the time stamp:
 - Hour: <0~24>.
 - Minute: <0~60>.
 - Second: <0~60>.

5.8 Write

```

TAINET RS232 Daemon          Scorpio 1400RL          Version 1.50
-----
  QConfig      Quick system parameter configuration
  Config       All system parameter configuration
  Maintenance  Monitor the system status
  ShowConf     Show system configuration
  Utility      Some utility functions
>> Write      Write configuration to flash
  Reboot       Restart system and activate new system configuration
  Exit         Disconnect

----- [ Privilege : ROOT ]
Command : Write <CR>
Message : Please input the following information.

Are you sure ? (y/n) : █

-----
'UP/DOWN' Move, 'RIGHT/LEFT' Enter/Exit,          [ ^Q-HELP ]

```

Before reboot the system, any modified parameters users made must be written into flash memory through “**write**” or they will be invalid for next time system restart. As it wrote after several seconds, the system will show “write configuration successful!!” if the new configurations are written into memory successfully.

5.9 Reboot & Exit

```

TAINET RS232 Daemon          Scorpio 1400RL          Version 1.50
-----
  QConfig      Quick system parameter configuration
  Config       All system parameter configuration
  Maintenance  Monitor the system status
  ShowConf     Show system configuration
  Utility      Some utility functions
  Write        Write configuration to flash
>> Reboot     Restart system and activate new system configuration
  Exit         Disconnect

----- [ Privilege : ROOT ]
Command : Reboot <CR>
Message : Please input the following information.

Do you want to reboot system to activate new configuration(y/n) ? : █

-----
'UP/DOWN' Move, 'RIGHT/LEFT' Enter/Exit,          [ ^Q-Help ]

```

Reboot: Part of new parameters users configured will be effective after system reboot. Especially for LAN, WAN and routing configuration. A “Write” action should be done before reboot, otherwise it will loose current configuration.

Exit: The operator can log out through “Exit” menu. And console port also support automatic logout ability (auto-exit) if user did not operate any key in 5 minutes.

Appendix A Ordering Information

[Table A-1](#) is the order information for your reference.

Table A-1 Order Information

Ordering No.	Product Code	Description
Scorpio 1400 SHDSL Modem/ NTU/ Router with LCD Panel		
000-101-0061	Scorpio 1400RL /AC/?	2-wire SHDSL standalone unit with LCD and keypad operation panel, with Ethernet interface, with built-in AC power module;
000-101-0062	Scorpio 1400RL /DC	2-wire SHDSL standalone unit with LCD and keypad operation panel, with Ethernet interface, with built-in DC power module;
000-101-0059	Scorpio 1400RL/4W /AC/?	4-wire SHDSL standalone unit with LCD and keypad operation panel, with Ethernet interface, with built-in AC power module;
000-101-0060	Scorpio 1400RL/4W /DC	4-wire SHDSL standalone unit with LCD and keypad operation panel, with Ethernet interface, with built-in DC power module;
000-101-0049	Scorpio 1400RL/4W /AC+DC/?	4-wire SHDSL standalone unit with LCD and keypad operation panel, with Ethernet interface, with built-in AC and DC power module;
	/?	Specify power cord
330-010-0001	/A	North American power cord, 3-pin, 10A/125V, 6 feet
330-010-0002	/E	European power cord, 3-pin (round pin), 10A/250V, 1.83M
330-010-0003	/B	British power cord, 3-pin, 10A/250V, 13A fuse
330-010-0006	/I	India power cord, 3-pin, 6A/250V, 1.83M
330-010-0007	/C	China power cord, 3-pin, 10A/250V, 1.83M

Appendix B Menu Tree

The menu tree of LCD screen is shown in [Table B-1](#). The default value of each parameter is also listed for users' reference.

Table B-1 LCD Menu Tree

<i>Tier 1/ Tier 2</i>	<i>Tier 3</i>	<i>Tier 4</i>	<i>Tier 5</i>	<i>Default Value</i>
Configuration/System	OpMode	Bridge		<
		Router		
	LCD Backlight	Enable		<
		Disable		
	Set2Dft	Disable		<
		Enable		
Configuration/Modem	Modem Type	CPE		<
		CO		
	Rate Mode	Adaptive		<
		Fixed		
	MAX Data Rate	<1,72>		36
	MIN Data Rate	<1,72>		3
	1544 Mode	Disable		<
		Enable		
Configuration/Interface	SHDSL	Power Backoff	Enable	<
			Disable	
		PSD	Sym	<
			Asym	
		4 WIRE	Off	<
			On	
		TransmisMode	Annex_A	<
			Bnnrx_B	
	LAN	LAN IP Address		0.0.0.0
		LAN NetMask		0.0.0.0
	WAN	WAN Enable	Enable	<
			Disable	
		WAN IP Address		0.0.0.0
		Link Type	Ethernet	<
			PPP	
		WAN Netmask		0.0.0.0
Status/SW Version				V1.50
Status/Modem Status	DSL1 Snr Margin			0

Appendix B

<i>Tier 1/ Tier 2</i>	<i>Tier 3</i>	<i>Tier 4</i>	<i>Tier 5</i>	<i>Default Value</i>
	DSL2 Snr Margin			0
Test/Loopback	Normal			<
	CO LL			
	CO RL			
	CPE LL			
	CPE RL			
Test/ Pattern test	Test Patten	2E23		<
		2E11		
		2E15		
		2E20		
	Test Start	Stop		<
		Start		
	Test Times	10		
		100		<
		1000		
		10000		
		100000		
	Insert error	<0~7>		0
	Reset Error	Disable		<
		Enable		
	Test Status	Error Count		0
		Bit Count		0
		Elapse Time		0
Security/ Password Edit				14001400
Security/ Front Lock	Enable			<
	Disable			
Write Config	Disable			<
	Enable			
Reboot	Disable			<
	Enable			

In addition to LCD menu tree, there is a VT-100 menu tree for CID port used, as [Table B-2](#). Both of them are almost the same but a little bit different. As the detail descriptions for each menu, please refer to the chapter 5. The tree structure is as follow for reference:

Table B-2 VT-100 Menu Tree

Tier 1 / Tier 2	Tier 3	Tier 4	Tier 5	Tier 6	Tier 7	Default Value
QConfig/OpMode	Bridge					<
	Router					
QConfig/ Lan	Address	IP Address				0.0.0.0
		net Mask				0.0.0.0
QConfig/ Wan	State	Disable				<
		Enable				
	Address	IP Address				0.0.0.0
		net Mask				0.0.0.0
	LinkType	Ethernet				<
		PPP				
QConfig/ EndpointMode	CPE					<
	CO					
Config/ System	OpMode	Bridge				<
		Router				
	HostName	(name)				SOHO
	PHYType	Ful				<
		Half				
Config/ Interface	Lan <1~1>	Lan1	Address	IP Address		0.0.0.0
				Subnet Mask		0.0.0.0
	Wan<1~1>	Wan1	State	Enable		<
				Disable		
			Address	IP Address		0.0.0.0
				Subnet Mask		0.0.0.0
		LinkType	Ethernet			<
			PPP			
Config/ Shdsl	EndpointMode	CPE				<
		CO				
	RateMode	Adaptive				<
		Fixed				
	MinRate	<1~36>				3 (2Wire mode)

Appendix B

<i>Tier 1 / Tier 2</i>	<i>Tier 3</i>	<i>Tier 4</i>	<i>Tier 5</i>	<i>Tier 6</i>	<i>Tier 7</i>	<i>Default Value</i>
		<2~72>				6 (4Wire mode)
	MaxRate	<1~36>				6 (2Wire mode)
		<2~72>				72 (4Wire mode)
	Rate1544Enable	Disable				<
		Enable				
	PsdMode	Symmetrical				<
		Asymmetrical				
	TransmissionMode	Annex-A				<
		Annex-B				
	PowerBackoff	Enable				<
		Disable				
	4WireMode	Disable				<
		Enable				
	PmThreshold	15minFirst	(ES)	<0~900>		60
			(SES)	<0~900>		60
		15minSecond	(UAS)	<0~900>		60
			(LOSWS)	<0~900>		60
		1dayFirst	(ES 1 day)	<0~86400>		300
			(SES 1 day)	<0~86400>		300
		1daySecond	(UAS 1 day)	<0~86400>		300
			(LOSWS 1 day)	<0~86400>		300
		SNM_Att_Thr	(SNR Margin)	<0~900>		0
			(Attenuator)	<0~900>		35
Config/ Protocol	Dhcp	State	Disable			<
			Enable			
		Generic	Gateway	(IP Address)		192.168.1.1
			Netmask	(net mask)		255.255.255.0
			IpRange	(IP Address)		140.92.64.130
				(number)		20
			Dns1	(IP Address)		192.168.1.1

Tier 1 / Tier 2	Tier 3	Tier 4	Tier 5	Tier 6	Tier 7	Default Value
			Dns2	(IP Address)		
			Dns3	(IP Address)		
		Fixed	Add	(MAC)		
				(IP Address)		
			Delete	<1~10>		
	DnsProxy	Dns1	(IP Address)			140.92.61.55
		Dns2	(IP Address)			140.92.1.50
		Dns3	(IP Address)			
	IpShare	State	Disable			
			Enable			
		Nat	Local	Range	<1~5>	
					(IP Address)	172.16.1.10
					<1~253>	10
				Delete	<1~5>	
			Global	Range	<1~5>	
					(IP Address)	10.1.1.10
					<1~253>	
				Interface	<1~5>	
					<2>	2
				Delete	<1~5>	
			Fixed	Modify	<1~128>	
					(IP Address)	172.16.1.120
					(IP Address)	10.1.1.120
				Interface	<1~128>	
					<2>	2
				Delete	<1~128>	
		Pat	Add	Name	(name)	
				Protocol	TCP	<
					UDP	
				Port	<1~65534>	
				Interface	<2>	
				Server	(IP Address)	
					<1~65534>	
			Modify	<1~10>		
				<more...>		
			Delete	<1~10>		

Appendix B

<i>Tier 1 / Tier 2</i>	<i>Tier 3</i>	<i>Tier 4</i>	<i>Tier 5</i>	<i>Tier 6</i>	<i>Tier 7</i>	<i>Default Value</i>
	Rip	State	Disable			<
			Enable			
		Lan	Version	<1,2>		2
			Attrib	RIP Mode	Disable	<
					Enable	
				Poison Reserve	Enable	<
					Disable	<
		Wan<1~1>	Version	<1,2>		2
			Attrib	RIP Mode	Disable	<
					Enable	
				Poison Reserve	Enable	<
					Disable	<
	Stp	State	Disable			<
			Enable			
		Priority	<0~65535>			32768
		Lan<1~1>	Port Operation	Enable		<
				Disable		
			Port Priority	<number>		128
		Wan<1~1>	Port Operation	Enable		<
				Disable		
			Port Priority	<number>		128
Config/ Route	Add	(net mask)				
		(IP address)				
		(Gateway)				
	Delete	<1~20>				
Config/ Bridge	Add	MacAddress	(MAC)			00:00:00:00:00:00
		Lan1Port	Filter			<
			Forward			
			Dynamic			
		Wan1Port	Filter			<
			Forward			
			Dynamic			
	Modify	<1~20>	MacAddress	(MAC)		
			Lan1Port	Filter		
				Forward		
				Dynamic		

Tier 1 / Tier 2	Tier 3	Tier 4	Tier 5	Tier 6	Tier 7	Default Value
			Wan1Port	Filter		
				Forward		
				Dynamic		
	Delete	<1~20>				
Config/ AccessConf	MaxUser	<1~5>				5
	GuestName	(name)				user
	GuestPwd	(pass_conf)				user
	SuName	(name)				tainet
	SuPwd	(pass_conf)				tainet
Config/ Reset2Dft	Disable					<
	Enable					
Maintenance/ Shdsl<loop1>	None					<
	Cm					
	Fm					
	Pm					
Maintenance / Shdsl<loop2>	None					<
	Cm					
	Fm					
	Pm					
Maintenance / Route	<CR>					
Maintenance / Bridge	<CR>					
Maintenance / LanPktStatistic	None					<
	Tx					
	Rx					
Maintenance / WanPktStatistic	None					<
	Tx					
	Rx					
Maintenance / Time	<CR>					
Maintenance / ClearPmCount	<CR>					
ShowConf/ SysInfo	<CR>					
ShowConf/ Interface	None					<

Appendix B

<i>Tier 1 / Tier 2</i>	<i>Tier 3</i>	<i>Tier 4</i>	<i>Tier 5</i>	<i>Tier 6</i>	<i>Tier 7</i>	<i>Default Value</i>
	Lan					
	Wan					
ShowConf/ Shdsl	<CR>					
ShowConf/ Dhcp	None					<
	Generic					
	Fixed					
ShowConf/ DnsProxy	<CR>					
ShowConf/ Ipshare	None					<
	PAT					
	Local					
	Global					
	Fixed					
ShowConf/ Rip	<CR>					
ShowConf/ Route	<CR>					
ShowConf/ Bridge	<CR>					
ShowConf/ Stp	<CR>					
ShowConf/ AccessConf	<CR>					
ShowConf/ Bert	<CR>					
Utility/ Upgrade	TftpServer	(IP address)				172.16.5.33
	AplImage	(IP address)				172.16.5.33
		(File name)				
	BootStrap2	(IP address)				172.16.5.33
		(File name)				
Utility/ Ping	(IP address)	No. of ping	<1~65534,-t>			None
		Data Size	<1~1399>			
Utility/ Bert	Bertstart	Stop				<
		Start				
	BertTP	2E23				2E23-1
		2E11				
		2E15				

Tier 1 / Tier 2	Tier 3	Tier 4	Tier 5	Tier 6	Tier 7	Default Value
		2E20				
	SetBertTimer	<1~1000000>				100
	BertErrorInsert	<0~7>				0
	ResetErrorCount	Yes/No				
	BertMonitor	<CR>				
Utility/ Loopback	Loopback	Normal				<
		Local				
		Remote				
	Loopback_status	<CR>				
Utility/ SetTime	Timer1	<2000~2300>				
		<1~12>				
		<1~31>				
	Timer2	<0~24>				
		<0~60>				
		<0~60>				
Write	<Yes,No>					
Reboot	<Yes,No>					
Exit	<Yes,No>					

Appendix C Pins Assignment

The pin assignment for different interface of Scorpio 1400RL is depicted in the following sections.

DB-9 Interface

The DB-9 connector interface is shown as [Figure C-1](#).

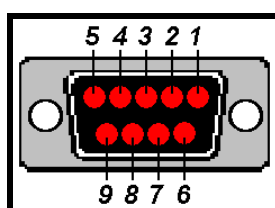


Figure C-1 DB-9 Interface

For the pin definition of DB-9 interface, see [Table C-1](#).

Table C-1 DB-9 Connector Pin Definition

<i>DB9 Female</i>	<i>Signal</i>	<i>Source</i>
2	TXD	DCE
3	RXD	DTE
5	Signal Ground	
7	CTS	DTE
8	RTS	DCE

RJ-45 Interface

[Figure C-2](#) illustrates the RJ-45 interface.

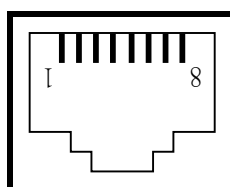


Figure C-2 RJ-45 Interface

Refer to [Table C-2](#), [Table C-3](#), see the pin definition of DSL RJ-45 connector and LAN RJ-45 connector respectively.

Table C-2 DSL RJ-45 Connector Pin Definition

<i>RJ-45</i>	<i>Signal</i>
3	Tip-2
4	Tip-1
5	Ring-1
6	Ring-2

Table C-3 LAN RJ-45 Connector Pin Definition

<i>RJ-45</i>	<i>10Base-T Signal</i>
1	TxD Twist Pair +
2	TxD Twist Pair -
3	RxD Twist Pair +
6	RxD Twist Pair -

Appendix D Troubleshooting

Trouble Shooting Table

1	Configured parameter values are lost after equipment restart	
	When user modifies or changes the parameters, the user should “write” the configurations into the flash memory by entering the “Enable” menu, and then reboot the system by entering the “Reboot--Enable” menu.	
2	Console / Telnet / Web User Name and Password	
	When accessing the device through Telnet or the Web, the user will be prompted to enter the password. User can try the default user name “tinet” (or “root”) and password “tinet” (or “root”) to login.	
3	Access denied	
	There are several conditions that will disable user's access to the device via Console, Telnet or the Web.	
	Message	Solution
	Incorrect user	The password entered is incorrect. Check the user name and password again.

Appendix E Trouble Report

Company			
Local Representation			
Purchase Order No			
Equipment Serial No			
Software Version			
Please describe:	1. Testing Network Structure	2. Configuration	
	3. Testing Network Equipment	4. Trouble Description	
E-MAIL:			
TEL:		FAX:	
Signature:		Date: / /	

TAINET COMMUNICATION SYSTEM CORP. FAX: 886-2-2658-3232

E-MAIL: sales@tainet.net