

GeoMax Zenith10/20

User Manual



Version 2.0.1

Introduction



This manual contains important safety directions as well as instructions for setting up the product and operating it. Refer to "1 Safety Directions" for further information.
Read carefully through the User Manual before you switch on the product.

Product identification

The type and serial number of your product are indicated on the type plate.
Enter the type and serial number in your manual and always refer to this information when you need to contact your agency or GeoMax authorised service workshop.

Type: _____

Serial No.: _____

Trademarks

- Windows is a registered trademark of Microsoft Corporation in the United States and other countries
 - *Bluetooth*® is a registered trademark of Bluetooth SIG, Inc.
 - microSD Logo is a trademark of SD-3C, LLC.
- All other trademarks are the property of their respective owners.
-

Validity of this manual

This manual applies to the Zenith10/20 instruments. Differences between the models are marked and described.

Table of Contents

In this manual	Chapter	Page
1	Safety Directions	4
1.1	General Introduction	4
1.2	Definition of Use	4
1.3	Limits of Use	5
1.4	Responsibilities	5
1.5	Hazards of Use	5
1.6	Electromagnetic Compatibility EMC	8
1.7	FCC Statement, Applicable in U.S.	9
2	Description of the System	10
2.1	System Components	10
2.2	Container Contents	10
2.3	System Concept	11
2.3.1	Software Concept	11
2.3.2	Power Concept	11
2.3.3	Data Storage Concept	11
2.4	Instrument Components	11
2.5	Pin Assignments and Sockets	12
2.6	The Mechanical Reference Plane, MRP	12
3	User Interface	13
3.1	Keyboard	13
3.2	Operating Principles	14
4	Operation	15
4.1	Guidelines for Correct Results with GNSS Surveys	15
4.2	Equipment Setup	15
4.2.1	Setting up as a Real-Time Base	15
4.2.2	Setting up as a Post-Processing Base	16
4.2.3	Setting Up as a Real-Time Rover	17
4.2.4	Fixing the handheld to a holder and pole	17
4.2.5	Connecting to a Personal Computer	18
4.2.6	Configuring the Instrument	18
4.3	Batteries	18
4.3.1	Operating Principles	18
4.3.2	Inserting and removing the Battery	19
4.4	Working with the Data Storage Device	19
4.5	Working with the RTK Device	20
4.6	LED Indicators	21
5	Care and Transport	22
5.1	Transport	22
5.2	Storage	22
5.3	Cleaning and Drying	22
6	Technical Data	23
6.1	Zenith10/20 Technical Data	23
6.1.1	Characteristics	23
6.1.2	Accuracy	23
6.1.3	Technical Data	23
6.2	Conformity to National Regulations	25
6.2.1	Zenith10/20	25
7	Software Licence Agreement	26
	Index	27

1 Safety Directions

1.1 General Introduction

Description

The following directions enable the person responsible for the product, and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that all users understand these directions and adhere to them.

About Warning Messages





Warning messages are an essential part of the safety concept of the instrument. They appear wherever hazards or hazardous situations can occur.

Warning messages...

- make the user alert about direct and indirect hazards concerning the use of the product.
- contain general rules of behaviour.

For the users' safety, all safety instructions and safety messages shall be strictly observed and followed! Therefore, the manual must always be available to all persons performing any tasks described herein.

DANGER, WARNING, CAUTION and **NOTICE** are standardized signal words for identifying levels of hazards and risks related to personal injury and property damage. For your safety it is important to read and fully understand the table below with the different signal words and their definitions! Supplementary safety information symbols may be placed within a warning message as well as supplementary text.

Type	Description
 DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a potentially hazardous situation or an unintended use which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor or moderate injury.
NOTICE	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in appreciable material, financial and environmental damage.
	Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

1.2 Definition of Use

Intended use

- Computing with software.
- Carrying out measurement tasks using various GNSS measuring techniques.
- Recording GNSS and point related data.
- Data communication with external appliances.
- Measuring raw data and computing coordinates using carrier phase and code signal from GNSS satellites.

Adverse use

- Use of the product without instruction.
- Use outside of the intended use and limits.
- Disabling safety systems.
- Removal of hazard notices.
- Opening the product using tools, for example screwdriver, unless this is permitted for certain functions.
- Modification or conversion of the product.
- Use after misappropriation.
- Use of products with recognisable damages or defects.
- Use with accessories from other manufacturers without the prior explicit approval of GeoMax.
- Inadequate safeguards at the working site.
- Controlling of machines, moving objects or similar monitoring application without additional control- and safety installations.

1.3

Limits of Use

Environment

Suitable for use in an atmosphere appropriate for permanent human habitation: not suitable for use in aggressive or explosive environments.



DANGER

Local safety authorities and safety experts must be contacted before working in hazardous areas, or close to electrical installations or similar situations by the person in charge of the product.

1.4

Responsibilities

Manufacturer of the product

GeoMax AG, CH-9443 Widnau, hereinafter referred to as GeoMax, is responsible for supplying the product, including the user manual and original accessories, in a safe condition.

Person responsible for the product

The person responsible for the product has the following duties:

- To understand the safety instructions on the product and the instructions in the user manual.
- To ensure that it is used in accordance with the instructions.
- To be familiar with local regulations relating to safety and accident prevention.
- To inform GeoMax immediately if the product and the application becomes unsafe.
- To ensure that the national laws, regulations and conditions for the operation of e.g. radio transmitters or lasers are respected.

1.5

Hazards of Use



DANGER

Because of the risk of electrocution, it is dangerous to use poles and extensions in the vicinity of electrical installations such as power cables or electrical railways.

Precautions:

Keep at a safe distance from electrical installations. If it is essential to work in this environment, first contact the safety authorities responsible for the electrical installations and follow their instructions.



WARNING

During dynamic applications, for example stakeout procedures there is a danger of accidents occurring if the user does not pay attention to the environmental conditions around, for example obstacles, excavations or traffic.

Precautions:

The person responsible for the product must make all users fully aware of the existing dangers.



WARNING

Inadequate securing of the working site can lead to dangerous situations, for example in traffic, on building sites, and at industrial installations.

Precautions:

Always ensure that the working site is adequately secured. Adhere to the regulations governing safety and accident prevention and road traffic.



CAUTION

If the accessories used with the product are not properly secured and the product is subjected to mechanical shock, for example blows or falling, the product may be damaged or people can sustain injury.

Precautions:

When setting-up the product, make sure that the accessories are correctly adapted, fitted, secured, and locked in position.

Avoid subjecting the product to mechanical stress.



WARNING

If the product is used with accessories, for example masts, staffs, poles, you may increase the risk of being struck by lightning.

Precautions:

Do not use the product in a thunderstorm.

⚠ DANGER

If the product is used with accessories, for example on masts, staffs, poles, you may increase the risk of being struck by lightning. Danger from high voltages also exists near power lines. Lightning, voltage peaks, or the touching of power lines can cause damage, injury and death.

Precautions:

- Do not use the product in a thunderstorm as you can increase the risk of being struck by lightning.
- Be sure to remain at a safe distance from electrical installations. Do not use the product directly under or close to power lines. If it is essential to work in such an environment contact the safety authorities responsible for electrical installations and follow their instructions.
- If the product has to be permanently mounted in an exposed location, it is advisable to provide a lightning conductor system. A suggestion on how to design a lightning conductor for the product is given below. Always follow the regulations in force in your country regarding grounding antennas and masts. These installations must be carried out by an authorised specialist.
- To prevent damages due to indirect lightning strikes (voltage spikes) cables, for example for antenna, power source or modem should be protected with appropriate protection elements, like a lightning arrester. These installations must be carried out by an authorised specialist.
- If there is a risk of a thunderstorm, or if the equipment is to remain unused and unattended for a long period, protect your product additionally by unplugging all systems components and disconnecting all connecting cables and supply cables, for example, instrument - antenna.

Lightning conductors

Suggestion for design of a lightning conductor for a GNSS system:

1) On non-metallic structures


Protection by air terminals is recommended. An air terminal is a pointed solid or tubular rod of conducting material with proper mounting and connection to a conductor. The position of four air terminals can be uniformly distributed around the antenna at a distance equal to the height of the air terminal.

The air terminal diameter should be 12 mm for copper or 15 mm for aluminium. The height of the air terminals should be 25 cm to 50 cm. All air terminals should be connected to the down conductors. The diameter of the air terminal should be kept to a minimum to reduce GNSS signal shading.

2) On metallic structures


Protection is as described for non-metallic structures, but the air terminals can be connected directly to the conducting structure without the need for down conductors.

Air terminal arrangement, plan view

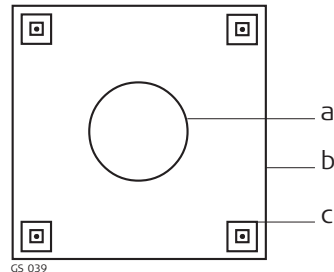

- a) Antenna
- b) Support structure
- c) Air terminal

Grounding the instrument/antenna

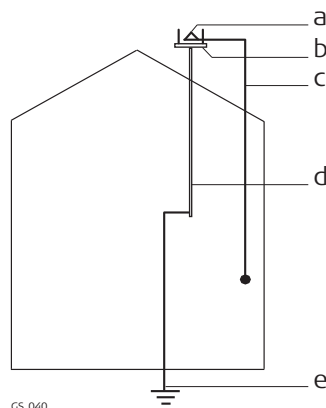

- a) Antenna
- b) Lightning conductor array
- c) Antenna/instrument connection
- d) Metallic mast
- e) Connection to earth



CAUTION

During the transport, shipping or disposal of batteries it is possible for inappropriate mechanical influences to constitute a fire hazard.

Precautions:

Before shipping the product or disposing of it, discharge the batteries by running the product until they are flat.

When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping contact your local passenger or freight transport company.



WARNING

High mechanical stress, high ambient temperatures or immersion into fluids can cause leakage, fire or explosions of the batteries.

Precautions:

Protect the batteries from mechanical influences and high ambient temperatures. Do not drop or immerse batteries into fluids.



WARNING

If battery terminals are short circuited e.g. by coming in contact with jewellery, keys, metalized paper or other metals, the battery can overheat and cause injury or fire, for example by storing or transporting in pockets.

Precautions:

Make sure that the battery terminals do not come into contact with metallic objects.



WARNING

Incorrect fastening of the external antenna to vehicles or transporters poses the risk of the equipment being broken by mechanical influence, vibration or airstream. This may result in accident and physical injury.

Precautions:

Attach the external antenna professionally. The external antenna must be secured additionally, for example by use of a safety cord. Ensure that the mounting device is correctly mounted and able to carry the weight of the external antenna (>1 kg) safely.



WARNING

If the product is improperly disposed of, the following can happen:

- If polymer parts are burnt, poisonous gases are produced which may impair health.
- If batteries are damaged or are heated strongly, they can explode and cause poisoning, burning, corrosion or environmental contamination.
- By disposing of the product irresponsibly you may enable unauthorised persons to use it in contravention of the regulations, exposing themselves and third parties to the risk of severe injury and rendering the environment liable to contamination.

Precautions:



The product must not be disposed with household waste.

Dispose of the product appropriately in accordance with the national regulations in force in your country.






Always prevent access to the product by unauthorised personnel.

Product-specific treatment and waste management information is available from GeoMax AG.



WARNING

Only GeoMax authorised service workshops are entitled to repair these products.

Description	The term Electromagnetic Compatibility is taken to mean the capability of the product to function smoothly in an environment where electromagnetic radiation and electrostatic discharges are present, and without causing electromagnetic disturbances to other equipment.
 WARNING	<p>Electromagnetic radiation can cause disturbances in other equipment.</p> <p>Although the product meets the strict regulations and standards which are in force in this respect, GeoMax cannot completely exclude the possibility that other equipment may be disturbed.</p>
 CAUTION	<p>There is a risk that disturbances may be caused in other equipment if the product is used with accessories from other manufacturers, for example field computers, personal computers or other electronic equipment, non-standard cables or external batteries.</p> <p>Precautions: Use only the equipment and accessories recommended by GeoMax. When combined with the product, they meet the strict requirements stipulated by the guidelines and standards. When using computers or other electronic equipment, pay attention to the information about electromagnetic compatibility provided by the manufacturer.</p>
 CAUTION	<p>Disturbances caused by electromagnetic radiation can result in erroneous measurements. Although the product meets the strict regulations and standards which are in force in this respect, GeoMax cannot completely exclude the possibility that the product may be disturbed by intense electromagnetic radiation, for example, near radio transmitters, two-way radios or diesel generators.</p> <p>Precautions: Check the plausibility of results obtained under these conditions.</p>
 CAUTION	<p>If the product is operated with connecting cables attached at only one of their two ends, for example external supply cables, interface cables, the permitted level of electromagnetic radiation may be exceeded and the correct functioning of other products may be impaired.</p> <p>Precautions: While the product is in use, connecting cables, for example product to external battery, product to computer, must be connected at both ends.</p>
Radios or digital cellular phones	Use of product with radio or digital cellular phone devices:
 WARNING	<p>Electromagnetic fields can cause disturbances in other equipment, in installations, in medical devices, for example pacemakers or hearing aids and in aircraft. It can also affect humans and animals.</p> <p>Precautions: Although the product meets the strict regulations and standards which are in force in this respect, GeoMax cannot completely exclude the possibility that other equipment can be disturbed or that humans or animals can be affected.</p> <ul style="list-style-type: none"> • Do not operate the product with radio or digital cellular phone devices in the vicinity of filling stations or chemical installations, or in other areas where an explosion hazard exists. • Do not operate the product with radio or digital cellular phone devices near to medical equipment. • Do not operate the product with radio or digital cellular phone devices in aircraft.

1.7

FCC Statement, Applicable in U.S.



The greyed paragraph below is only applicable for products without radio.

WARNING


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


WARNING

Changes or modifications not expressly approved by GeoMax for compliance could void the user's authority to operate the equipment.


Labelling Zenith10/20

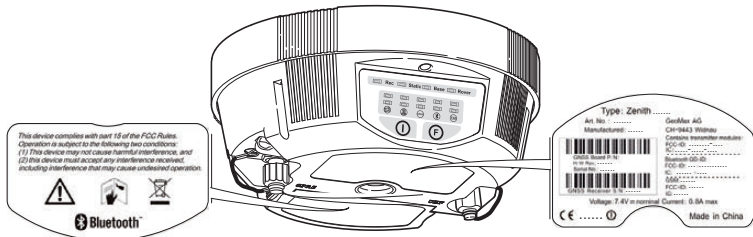

Labelling internal battery ZBA202

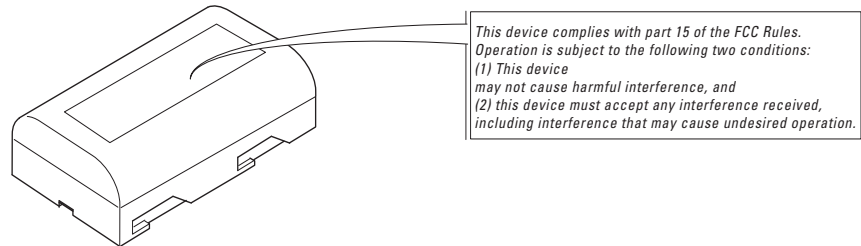

Labelling battery charger ZCH202

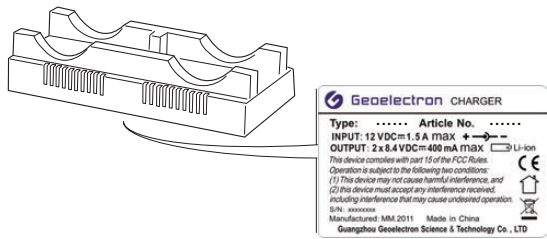

2 Description of the System

2.1 System Components

Main components

Component	Description
Instrument	To receive the satellite signals and calculate a position from the computed ranges to all visible GNSS (Global Navigation Satellite System) satellites.
Getac handheld	Handheld to operate the instrument.
Survey field software	The software used on the handheld for performing various surveying applications.


Available models

Model	Internal radio modem	Internal GSM modem	Internal battery*1	Bluetooth
Zenith10 GSM-UHF	✓	✓	✓	✓
Zenith10 GSM	-	✓	✓	✓
Zenith20 GSM-UHF	✓	✓	✓	✓
Zenith20 GSM	-	✓	✓	✓

*1 removable

2.2 Container Contents

Container for instrument and accessories

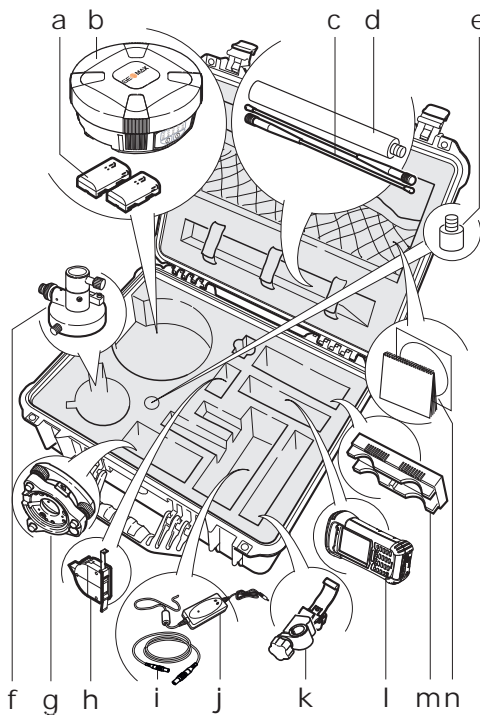

- a) ZBA202 batteries
- b) Zenith10/20 instrument
- c) Antennas of device
- d) ZPC210 base pole
- e) Connection screw
- f) ZCA102 carrier
- g) Tribrach
- h) Measuring tape
- i) ZDC220 USB cable
- j) Adapter for charger
- k) ZHR200 holder
- l) Getac handheld
- m) ZCH202 battery charger
- n) Manual and CD

2.3

System Concept

2.3.1


Software Concept

Instrument software

Software type	Description
Instrument firmware (xx.bin)	This important software covers all functions of the instrument.

Software upload

The firmware can be uploaded using GeoMax Assistant.

 Uploading instrument firmware can take some time. Ensure that the battery is at least 75% full before beginning the upload, and do not remove the battery during the upload process.

The instrument has to be restarted after the firmware upload.

2.3.2

Power Concept

General

Use the GeoMax batteries, chargers and accessories or accessories recommended by GeoMax to ensure the correct functionality of the instrument.

Power options

Power for the instrument can be supplied either internally or externally.

Internal power supply: One ZBA202 battery fitting into the instrument.

External power supply: 9 V to 18 V DC power supply via cable.

2.3.3

Data Storage Concept

Description

Data (GNSS raw data and RINEX data) can be recorded on a microSD card or internal memory.

Data storage device

microSD card: The instrument has a microSD card holder fitted as standard.
A microSD card can be inserted and removed. Capacity: Up to 4 GB.

Internal memory: The instrument has an internal memory fitted as standard.
Available capacity: 256 MB.




Unplugging connecting cables or removing the microSD card during the measurement can cause loss of data. Only remove the microSD card or unplug connecting cables when the instrument is switched off.

2.4

Instrument Components

Instrument components

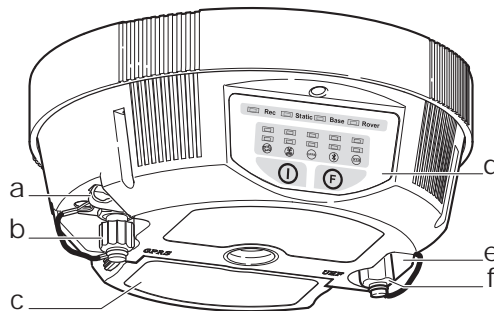

- a) LEMO port 1
- b) TNC connector for GSM antenna
- c) Battery compartment with SIM card and microSD card holder
- d) LEDs, ON/OFF button and Function button
- e) LEMO port 2
- f) TNC connector for UHF antenna




A Bluetooth port is included inside the instrument to enable connectivity to a controller.

2.5


Pin Assignments and Sockets

Ports at the instrument underside

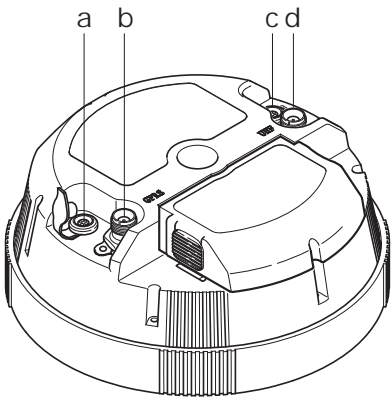

- a) Port 1 (LEMO connector for USB)
- b) TNC connector for GSM antenna
- c) TNC connector for UHF antenna
- d) Port 2 (LEMO connector for power and serial)

Pin assignments for port 1

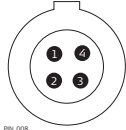

Pin	Signal Name	Function	Direction
1	PWR	5 V power supply (USB)	In
2	USB_D-	USB data line	In or out
3	USB_D+	USB data line	In or out
4	GND	Signal ground	-

Pin assignments for port 2



Pin	Signal Name	Function	Direction
1	PWR	12 V power supply in	In
2	GND	Signal and chassis ground	-
3	TxD	RS232, transmit data	Out
4	GND	Signal ground	-
5	RxD	RS232, receive data	In

Sockets

Port 1:

Port 2:

LEMO-1, 4 pin, LEMO EEG.OB.304.CLN

LEMO-1, 5 pin, LEMO EEG.OB.305.CLN

2.6

The Mechanical Reference Plane, MRP


Description

The **M**echanical **R**eference **P**lane:

- is where the instrument heights are measured to.
- is where the phase centre variations refer to.
- varies for different instruments.

MRP for instrument

The MRP for the instrument is shown in the diagram.

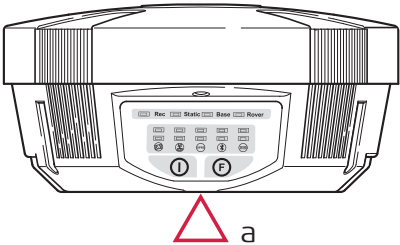


- a) The mechanical reference plane is the underside of the instrument.

3 User Interface




3.1 Keyboard

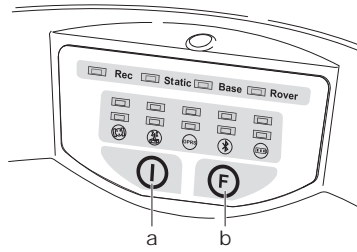Keyboard





- a) ON/OFF button
b) Function button

ON/OFF button


Button	Function
ON/OFF 	<ul style="list-style-type: none"> Turn on instrument: Hold button for 1 s.  While the instrument is booting all LEDs are lighted (except the blue Bluetooth LED and the red Power LED). Once the instrument has started, the normal LED behaviour starts. Turn off instrument: Hold button for 3 s until instrument beeps 3 times and only the red power LED is lighted. Instrument self-check: While the instrument is turned on hold button for 10 s until the instrument beeps once. The instrument performs a self-check.  An instrument self-check can be performed to check if the communication of the internal GNSS board, radio module and GSM module is working correctly. <ul style="list-style-type: none"> If the green Satellite, UHF and GPRS LED are on, the communication of the internal GNSS board, radio module and GSM module is working correctly. The instrument reboots 5 s after finishing the self-check. If the red Satellite, UHF or GPRS LED is on, the communication of the internal GNSS board, radio module or GSM module might not work correctly. The instrument starts beeping. Press any key to reboot the instrument and contact your local GeoMax dealer.



Function button

 The function described assumes that the instrument is turned on.

Button	Function
Function 	<ul style="list-style-type: none"> Switch datalink Press and hold button for 1 s to switch between the datalink options UHF, GPRS and Bluetooth. The corresponding green LED flashes. To select the datalink, press and hold the power button for 1 s.

Button combination

 The function described assumes that the instrument is turned off.

Button	Function
ON/OFF 	<ul style="list-style-type: none"> Switch working mode
Function 	<p>Press and hold buttons for 6 s until all LEDs flash (except for the blue Bluetooth LED). Press and hold Function button for 1 s to switch between the working mode options Static, Base and Rover. The corresponding LED flashes. To select the working mode, press and hold the ON/OFF button for 1 s.</p>

Operating the instrument

The instrument is operated either by the pressing its buttons (ON/OFF button, Function button) or by a handheld.

Operation by buttons

The instrument is operated by pressing its buttons. Refer to "3.1 Keyboard" for a description of the buttons and their function.

Operation by handheld

The instrument is operated by a handheld. Refer to the Field Software User Manual for more information.

Turn on instrument

To turn on the instrument press and hold the ON/OFF button for 1 s.

Turn off instrument

To turn off the instrument press and hold the ON/OFF button for 3 s until the instrument beeps 3 times and only the red power LED is lighted.

4

Operation

4.1

Guidelines for Correct Results with GNSS Surveys

Undisturbed satellite signal reception

Successful GNSS surveys require undisturbed satellite signal reception, especially at the instrument which serves as a base. Set up the instrument in locations which are free of obstructions such as trees, buildings or mountains.

Steady instrument for static surveys

For static surveys, the instrument must be kept perfectly steady throughout the whole occupation of a point. Place the instrument on a tripod or pillar.

Centred and levelled instrument

Centre and level the instrument precisely over the marker.

4.2

Equipment Setup


4.2.1

Setting up as a Real-Time Base

Use

The following equipment setup is used for real-time base stations with the need of optimal radio coverage. Raw observation data can also be collected for post-processing.

Equipment setup - Zenith10/20

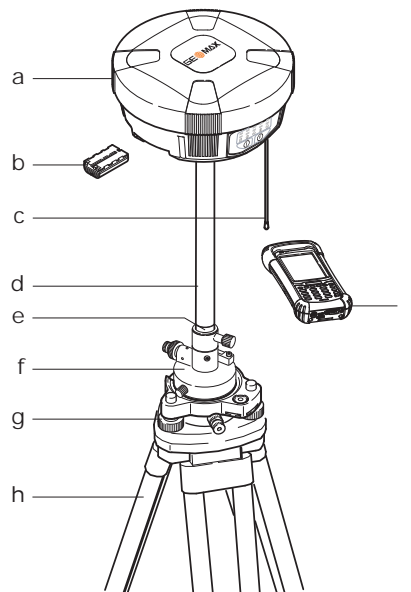

- a) Zenith10/20 instrument
- b) ZBA202 battery
- c) RTK antenna
- d) ZPC210 base pole
- e) Connection screw
- f) ZCA102 carrier
- g) Tribrach
- h) Tripod
- i) Getac handheld

Equipment setup step-by-step

Step	Description
1.	Set up the tripod.
2.	Mount the tribrach on the tripod.
3.	Ensure that the tribrach is over the marker.
4.	Mount and level the carrier on the tribrach.
5.	Mount the connection screw on the carrier.
6.	Screw the base pole to the connection screw.
7.	Insert the battery into the instrument.
8.	Connect the RTK antenna to the instrument.
9.	Press the ON/OFF button on the instrument for 1s to switch on the instrument.
10.	Screw the instrument onto the base pole.
11.	Check that the tribrach and carrier are still level.
12.	Connect the handheld to the instrument through Bluetooth.
13.	Measure the antenna height using the measuring tape. Refer to "2.6 The Mechanical Reference Plane, MRP" for information on the antenna height.


4.2.2

Setting up as a Post-Processing Base

Use

The following equipment setup is used for static operations over markers.

Equipment setup - Zenith10/20

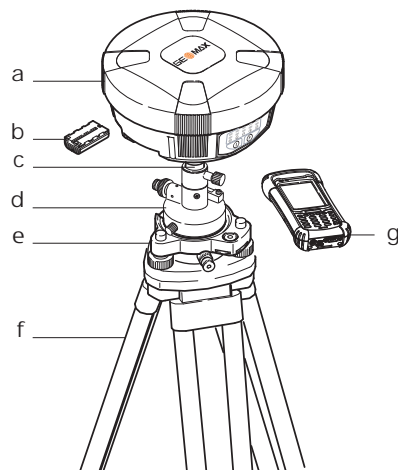

- a) Zenith10/20 instrument
- b) ZBA202 battery
- c) Connection screw
- d) ZCA102 carrier
- e) Tribrach
- f) Tripod
- g) Getac handheld

Equipment setup step-by-step

Step	Description
1.	Set up the tripod.
2.	Mount the tribrach on the tripod.
3.	Ensure that the tribrach is over the marker.
4.	Mount and level the carrier on the tribrach.
5.	Mount the connection screw on the carrier.
6.	Insert the battery into the instrument.
7.	Press the ON/OFF button on the instrument for 1 s to switch on the instrument.
8.	Screw the instrument onto the connection screw.
9.	Check that the tribrach and carrier are still level.
10.	Connect the handheld to the instrument through Bluetooth.
11.	Measure the antenna height using the measuring tape. Refer to "2.6 The Mechanical Reference Plane, MRP" for information on the antenna height.


4.2.3

Setting Up as a Real-Time Rover

Use

The following equipment setup is used for real-time rover.

Equipment setup - Zenith10/20

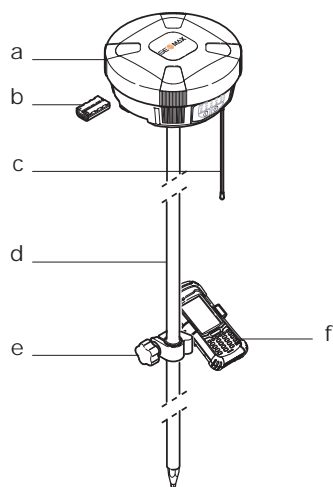

- a) Zenith10/20 instrument
- b) ZBA202 battery
- c) RTK antenna
- d) ZPC200 pole
- e) ZHR200 holder
- f) Getac handheld


Equipment setup step-by-step

Step	Description
1.	Attach the ZHR200 holder to the ZPC200 pole. Refer to "4.2.4 Fixing the handheld to a holder and pole".
2.	Clip the handheld into the holder and lock it by tighten the screw on the holder.
3.	Turn on the handheld.
4.	Insert the battery into the instrument.
5.	Connect the RTK antenna to the instrument.
6.	Press ON/OFF button on the instrument for 1 s to switch on the instrument.
7.	Screw the instrument to the top of the pole.
8.	Connect the handheld to the instrument through Bluetooth.

4.2.4

Fixing the handheld to a holder and pole

Components of the ZHR200 holder

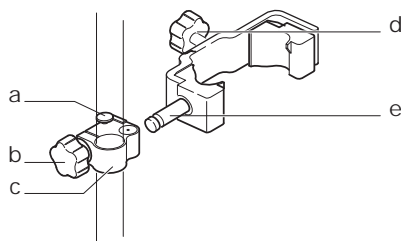

Clamp

- a) Locking pin
- b) Tightening screw
- c) Pole clamp

Holder

- d) Tightening screw
- e) Pin

Fixing the handheld to the holder step-by-step

Step	Description
1.	Insert the pole into the clamp hole.
2.	Tighten the clamp with the tightening screw.
3.	To attach the holder to the clamp insert the pin into the catch of the clamp while pushing down the locking pin.
4.	Place the handheld in the holder.
5.	Tighten the screw of the holder to fix the handheld to the holder.

4.2.5

Connecting to a Personal Computer


Description

The instrument is connected to a Personal Computer via USB cable. After establishing a connection, the GeoMax Assistant software can be used to set up and configure the instrument, export data from the internal memory or microSD card, enter licence keys and upload firmware.

Install USB drivers

Step	Description
1.	Start the PC.
2.	Insert the GeoMax Zenith10/20 CD.
3.	Run the Setup.exe to install the drivers necessary for the USB cable.

Connect instrument to PC

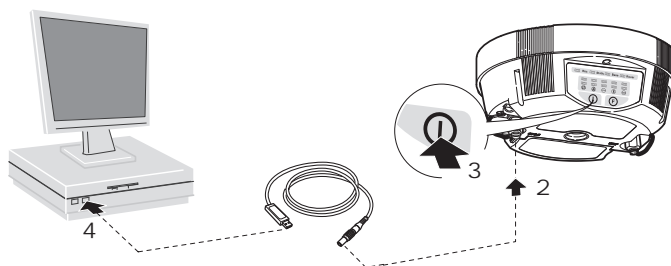


Step	Description
1.	Start the PC.
2.	Start GeoMax Assistant by double-clicking the shortcut from the desktop of your PC.
3.	Plug the ZDC220 cable into Port 1 of the instrument.
4.	Turn on the instrument.
5.	Plug the ZDC220 cable into the USB port of the PC. For Windows XP operating systems: The Found New Hardware Wizards starts up automatically. Check Close .

4.2.6

Configuring the Instrument

Description

The instrument can be set up as real-time rover or as real-time base by configuring the instrument with the handheld, using GeoMax Assistant or pressing a button combination.

 Refer to "Button combination".

4.3

Batteries

4.3.1

Operating Principles

Charging / first-time use

- The battery must be charged prior to using it for the first time because it is delivered with an energy content as low as possible.
- The permissible temperature range for charging is between 0°C to +40°C/+32°F to +104°F. For optimal charging we recommend charging the batteries at a low ambient temperature of +10°C to +20°C/+50°F to +68°F if possible.
- It is normal for the battery to become warm during charging. Using the chargers recommended by GeoMax, it is not possible to charge the battery if the temperature is too high.
- For new batteries or batteries that have been stored for a long time (> three months), it is effectual to make only one charge/discharge cycle.
- For Li-Ion batteries, a single discharging and charging cycle is sufficient. We recommend carrying out the process when the battery capacity indicated on the charger or on a GeoMax product deviates significantly from the actual battery capacity available.


Operation / Discharging

- The batteries can be operated from -20°C to +55°C/-4°F to +131°F.
- Low operating temperatures reduce the capacity that can be drawn; high operating temperatures reduce the service life of the battery.

4.3.2

Inserting and removing the Battery

Insert and remove battery step-by-step

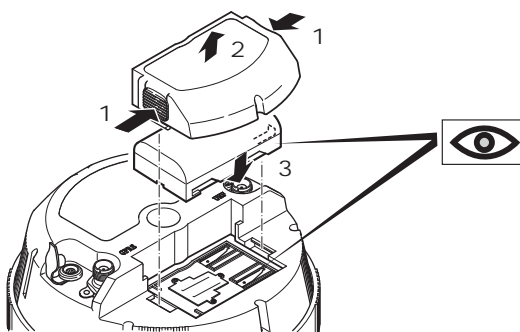

Step	Description
1.	Turn the instrument over to gain access to the battery compartment.
2.	Press in the two push buttons located on both sides of the battery housing and pull the housing from the battery compartment. The battery is attached to the housing.
3.	<ul style="list-style-type: none"> To insert the battery: Push the battery into the battery housing with the battery contacts facing upwards until the battery locks into position. To remove the battery: Hold the battery housing and pull the battery from the housing.
4.	Place the battery housing on top of the battery compartment and press the housing down until it locks into position.

4.4

Working with the Data Storage Device




- Keep the card dry.
- Use it only within the specified temperature range.
- Do not bend the card.
- Protect the card from direct impacts.



Failure to follow these instructions could result in data loss and/or permanent damage to the card.

Insert and remove a microSD card step-by-step

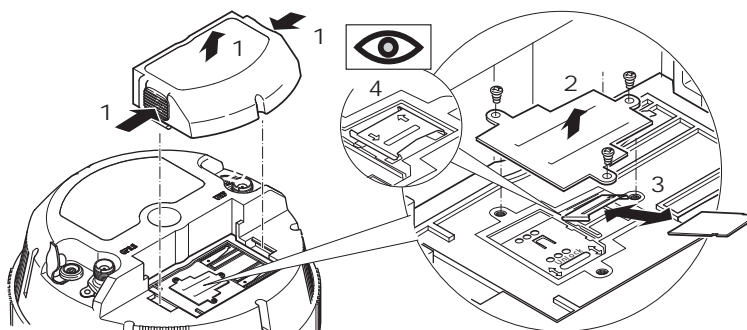

Step	Description
	The microSD card is inserted into a holder inside the battery compartment of the instrument.
1.	Remove the battery housing from the battery compartment. Refer to "Insert and remove battery step-by-step" for further information.
2.	Loosen the screws of the metal plate and remove the plate to gain access to the microSD card holder.
3.	Slide back the lid of the microSD card holder and lift it.
4.	Place the card into the holder with the contacts facing downwards and toward the lid.
5.	<ul style="list-style-type: none"> To insert a microSD card: Place the card into the holder with the contacts facing downwards and toward the lid. To remove a microSD card: Remove the microSD card from the holder.

Step	Description
6.	Close the lid and slide it until it locks into position.
7.	Cover the compartment with the metal plate and tighten the screws.
8.	Place the battery housing on top of the battery compartment and press the housing down until it locks into position.

4.5


Working with the RTK Device

Devices fitted into the instrument

Devices fitted into the instrument:

GSM: Telit GC864-QUAD
Radio: SATEL SATELLINE M3-TR1, transceiver

Insert and remove a SIM card step-by-step

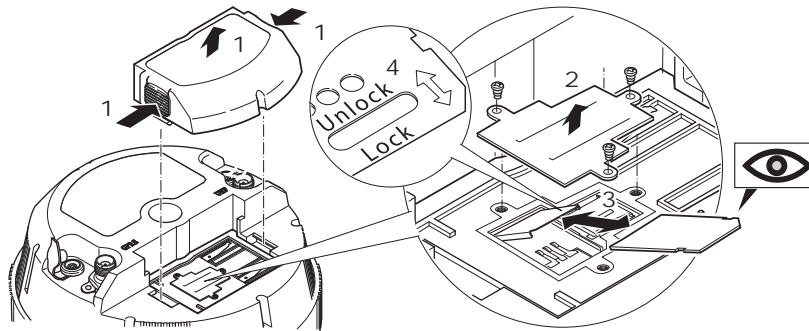


Step	Description
	The SIM card is inserted into a holder inside the battery compartment of the instrument.
	Only use SIM cards without PIN protection.
1.	Remove the battery housing from the battery compartment. Refer to "Insert and remove battery step-by-step" for further information.
2.	Loosen the screws of the metal plate and remove the plate to gain access to the SIM card holder.
3.	Slide back the lid of the SIM card holder and lift it.
4.	<ul style="list-style-type: none"> To insert a SIM card: Place the SIM card into the SIM card holder with the contacts facing downwards. To remove a SIM card: Remove the SIM card from the holder.
5.	Close the lid and slide it until it locks into position.
6.	Cover the compartment with the metal plate and tighten the screws.
7.	Place the battery housing on top of the battery compartment and press the housing down until it locks into position.

LED indicators

Description

The instrument has **L**ight **E**mitting **D**iode indicators. They indicate the basic instrument status.

Diagram

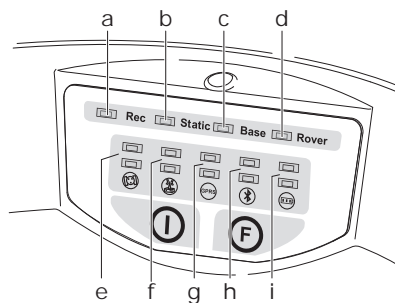

- a) Record LED
- b) Static LED
- c) RTK Base LED
- d) RTK Rover LED
- e) Satellite LEDs
- f) UHF LEDs
- g) GPRS LEDs
- h) Bluetooth LEDs
- i) Power LEDs

Description of the LEDs

IF the	is	THEN
Record LED	flashing red	data is recorded.
Static LED	red	the instrument is in static mode.
Base LED	red	the instrument is in base mode.
Rover LED	red	the instrument is in rover mode.
Satellite LED	flashing green	satellite signals are tracked. The number of times the LED flashes corresponds to the number of satellites being tracked. After indicating the number of satellites tracked, the LED turns off. This behaviour repeats.
	flashing red	less than 4 satellites are being tracked.
UHF LED	flashing green	data is transmitted or received.
	green	Datalink is selected but no RTK data is transmitted or received.
	flashing red	signal strength is low.
GPRS LED	flashing green	data is received.
	green	Datalink is selected but no RTK data is received.
	flashing red	signal strength is low.
Bluetooth LED	green	a datalink via Bluetooth is available.
	blue	a Bluetooth connection has established.
Power LED	green	power is on.
	red	power is low (< 20%).

5 Care and Transport

5.1 Transport

Transport in the field	When transporting the equipment in the field, always make sure that you <ul style="list-style-type: none">• either carry the product in its original transport container,• or carry the tripod with its legs splayed across your shoulder, keeping the attached product upright.
Transport in a road vehicle	Never carry the product loose in a road vehicle, as it can be affected by shock and vibration. Always carry the product in its transport container and secure it.
Shipping	When transporting the product by rail, air or sea, always use the complete original GeoMax packaging, transport container and cardboard box, or its equivalent, to protect against shock and vibration.
Shipping, transport of batteries	When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping, contact your local passenger or freight transport company.

5.2 Storage

Product	Respect the temperature limits when storing the equipment, particularly in summer if the equipment is inside a vehicle. Refer to "Technical Data" for information about temperature limits.
Li-Ion batteries	<ul style="list-style-type: none">• Refer to "Technical Data" for information about storage temperature range.• Remove batteries from the product and the charger before storing.• After storage recharge batteries before using.• Protect batteries from damp and wetness. Wet or damp batteries must be dried before storing or use.• A storage temperature range of 0°C to +30°C / +32°F to +86°F in a dry environment is recommended to minimize self-discharging of the battery.• At the recommended storage temperature range, batteries containing a 40% to 50% charge can be stored for up to one year. After this storage period the batteries must be recharged.

5.3 Cleaning and Drying

Product and accessories	<ul style="list-style-type: none">• Use only a clean, soft, lint-free cloth for cleaning. If necessary, moisten the cloth with water or pure alcohol. Do not use other liquids; these may attack the polymer components.
Damp products	Dry the product, the transport container, the foam inserts and the accessories at a temperature not greater than 40°C/104°F and clean them. Do not repack until everything is dry. Always close the transport container when using in the field.
Cables and plugs	Keep plugs clean and dry. Blow away any dirt lodged in the plugs of the connecting cables.
Connectors with dust caps	Wet connectors must be dry before attaching the dust cap.

6

6.1

6.1.1

Technical Data

Zenith10/20 Technical Data

Characteristics

Type	Zenith10	Zenith20
Satellite reception	Maximum 36 satellites tracked simultaneously, 72 channels	Maximum 60 satellites tracked simultaneously, 120 channels
Signals tracked		
GPS	L1, L2, L2C	L1, L2, L2C
GLONASS	L1, L2	L1, L2
BeiDou	-	B1, B2
Galileo	-	*
SBAS	-	EGNOS, WAAS, MSAS, GAGAN

* The optional Galileo will be made available once there are sufficient of these satellites.

6.1.2

Accuracy



Accuracy is dependent upon various factors including the number of satellites tracked, constellation geometry, observation time, ephemeris accuracy, ionospheric disturbance, multipath and resolved ambiguities.

The following accuracies, given as **root mean square**, are based on measurements processed using GeoMax Geo Office and on real-time measurements.

The use of multiple GNSS systems can increase accuracy by up to 30% relative to GPS only.

Differential code

The baseline precision of a differential code solution for static and kinematic surveys is 25 cm.

Differential phase in post-processing

Static and rapid static

Static		Kinematic	
Horizontal	Vertical	Horizontal	Vertical
5 mm + 0.5 ppm	10 mm + 0.5 ppm	10 mm + 1 ppm	20 mm + 1 ppm

Differential phase in real-time

Static		Kinematic	
Horizontal	Vertical	Horizontal	Vertical
5 mm + 0.5 ppm	10 mm + 0.5 ppm	10 mm + 1 ppm	20 mm + 1 ppm

6.1.3

Technical Data

Dimensions

The dimensions are given for the housing without the sockets.

Height [m]	Diameter [m]
0.094	0.188

Weight

Instrument weight with battery and UHF radio: 1.20 kg/2.65 lbs

Recording

Data (GNSS raw data and RINEX data) can be recorded on a microSD card or internal memory.

Type	Capacity [MB]	Data capacity
Internal memory	256	256 MB is typically sufficient for about 60 days data logging at 15 s rate.

Power

Power consumption: Instrument, radio excluded: 3.2 W typically, 270 mA
External supply voltage: Nominal 12V DC, 9 V to 18 V DC

Battery internal

Type: Li-Ion
Voltage: 7.4 V
Capacity: ZBA202: 2.5 Ah

Operating times

The given operating times are valid for

- Zenith10/20: instrument; one fully charged ZBA202 battery.
- room temperature. Operating times will be shorter when working in cold weather.

Equipment			Operating time
Type	Radio	GSM	
Static	-	-	6 h continuously
Rover	SATEL SATELLINE M3-TR1, receive	-	4 h continuously
Rover	-	Telit GC864-QUAD	4.5 h continuously

Electrical data

Type	Zenith10	Zenith20
Voltage	7.4 V	7.4 V
Nominal current	max. 0.8 A	max. 0.8 A
Frequency	GPS L1 1575.42 MHz GPS L2 1227.60 MHz GLONASS L1 1602.5625 MHz-1611.5 MHz GLONASS L2 1246.4375 MHz-1254.3 MHz	GPS L1 1575.42 MHz GPS L2 1227.60 MHz GLONASS L1 1602.5625 MHz-1611.5 MHz GLONASS L2 1246.4375 MHz-1254.3 MHz
	-	BeiDou, Galileo
Gain	Typically 2.1 dBi	Typically 2.1 dBi
Noise Figure	Typically < 2 dBi	Typically < 2 dBi

Environmental specifications**Temperature**

Type	Operating temperature [°C]	Storage temperature [°C]
Instrument	-30 to +60	-40 to +80
UHF Tx 0.5 W	-30 to +50	-40 to +80
Battery internal	-20 to +55	-40 to +70

Protection against water, dust and sand

Type	Protection
Instrument	IP67 (IEC 60529) Dust tight Waterproof to 1 m temporary immersion
Battery compartment	IP65 (IEC 60529) Dust tight Protected against spray water

Humidity

Type	Protection
Instrument	Up to 100 % The effects of condensation are to be effectively counteracted by periodically drying out the instrument.

6.2

Conformity to National Regulations

Conformity to national regulations

For products which do not fall under R&TTE directive:



Hereby, GeoMax AG, declares that the product/s is/are in compliance with the essential requirements and other relevant provisions of the applicable European Directives. The declaration of conformity is available from GeoMax AG.

6.2.1

Zenith10/20

Conformity to national regulations

- FCC Part 15, 22 and 24 (applicable in US)
- Hereby, GeoMax AG, declares that the product Zenith10/20 GSM is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity is available from GeoMax AG.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.

- The conformity for countries with other national regulations not covered by the FCC part 15, 22 and 24 or European directive 1999/5/EC has to be approved prior to use and operation.

Conformity to national regulations

- FCC Part 15, 22 and 24 (applicable in US)
- Hereby, GeoMax AG, declares that the product Zenith10/20 GSM-UHF, is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity is available from GeoMax AG.



Class 2 equipment according European Directive 1999/5/EC (R&TTE) for which following EEA Member States apply restrictions on the placing on the market or on the putting into service or require authorisation for use:

- France
- Italy
- Norway (if used in the geographical area within a radius of 20km from the centre of Ny-Ålesund)

- The conformity for countries with other national regulations not covered by the FCC part 15, 22 and 24 or European directive 1999/5/EC has to be approved prior to use and operation.

Frequency band

Type	Frequency band [MHz]
Zenith10/20	1227.60 1246.4375 - 1254.3 1575.42 1602.4375 - 1611.5
Bluetooth	2402 - 2480
SATEL SATELLINE M3-TR1	403 - 470
Telit GC864-QUAD	Quad-Band EGSM850 / EGSM900 / GSM1800 / GSM1900

Output power

Type	Output power [mW]
GNSS	Receive only
Bluetooth	2.5 (Class 2)
SATEL SATELLINE M3-TR1	500-1000
Telit GC864-QUAD, EGSM850/900	2000
Telit GC864-QUAD, GSM1800/1900	1000

Antenna

Type	Antenna	Gain [dBi]	Connector	Frequency band [MHz]
GNSS	Internal GNSS antenna element (receive only)	-	-	-
Bluetooth	Internal Microstrip antenna	0.5	-	-
ZRA101	Detachable $\lambda/2$ antenna	4	TNC	380 - 435
ZRA100	Detachable $\lambda/2$ antenna	4	TNC	435 - 470
TQX-440AE	Detachable $\lambda/2$ antenna	2.15	TNC	430 - 450
TQX-0918EL	Detachable $\lambda/2$ antenna	-	TNC	824 - 960 / 1710 - 1880

Software Licence Agreement

This product contains software that is preinstalled on the product, or that is supplied to you on a data carrier medium, or that can be downloaded by you online according to prior authorisation from GeoMax. Such software is protected by copyright and other laws and its use is defined and regulated by the GeoMax Software Licence Agreement, which covers aspects such as, but not limited to, Scope of the Licence, Warranty, Intellectual Property Rights, Limitation of Liability, Exclusion of other Assurances, Governing Law and Place of Jurisdiction. Please make sure, that at any time you fully comply with the terms and conditions of the GeoMax Software Licence Agreement.

Such agreement is provided together with all products and can also be referred to and downloaded at the GeoMax home page at <http://www.geomax-positioning.com> or collected from your GeoMax distributor.

You must not install or use the software unless you have read and accepted the terms and conditions of the GeoMax Software Licence Agreement. Installation or use of the software or any part thereof, is deemed to be an acceptance of all the terms and conditions of such Licence Agreement. If you do not agree to all or some of the terms of such Licence Agreement, you must not download, install or use the software and you must return the unused software together with its accompanying documentation and the purchase receipt to the distributor from whom you purchased the product within ten (10) days of purchase to obtain a full refund of the purchase price.

Index

A		
Antenna		
Instrument	25	
Available instrument models	10	
B		
Batteries		
Operation, Discharging	18	
Battery		
Change in instrument	19	
For internal power supply	11	
Internal, instrument	24	
Bluetooth		
LED	21	
Buttons		
Combined pressing	13	
Function	13	
ON/OFF	13	
C		
Capacity, memory		
Instrument	23	
D		
Data recording		
GNSS raw data	23	
RINEX	23	
Data storage device		
Available	11	
Definition of Use	4	
Description of the system	10	
Dimensions		
Instrument	23	
E		
Electrical data		
instrument	24	
Environmental specifications		
Instrument	24	
External power supply	11	
F		
FCC Statement	9	
Firmware		
Instrument	11	
Upload	11	
Frequency band		
Instrument	25	
SATEL SATELLINE M3-TR1	25	
Telit GC864-QUAD	25	
G		
GPRS		
LED	21	
I		
Indicators		
LED	21	
Insert		
microSD card	19	
SIM card	20	
Instrument		
Status	21	
Instrument components	11	
Internal power supply	11	
K		
Keyboard	13	
L		
Labelling		
ZBA202	9	
ZCH202	9	
Zenith10/20	9	
LED, Description		
instrument	21	
Light Emitting Diode		
instrument	21	
Li-Ion battery	24	
Storage	22	
M		
Mechanical Reference Plane	12	
Memory device		
Available	11	
microSD card		
Insert	19	
Remove	19	
MRP	12	
O		
Operating times		
Instrument	24	
Output power		
instrument	25	
Satel SATELLINE M3-TR1	25	
Telit GC864-QUAD	25, 25	
P		
Pin Assignment	12	
Power		
LED	21	
Power supply	11	
Power, instruments	23	
R		
Raw data logging		
GeoMax GNSS	23	
GNSS	11	
RINEX	11, 23	
Record		
LED on instrument	21	
Recording	23	
Remove		
microSD card	19	
SIM card	20	
Responsibilities	5	
RTK Base		
LED on instrument	21	
RTK Rover		
LED on instrument	21	
S		
Safety Directions	4	
Satellite		
LED	21	
SD card		
Memory device	11	

SIM card	
Insert	20
Remove	20
Software	
Instrument	11
Upload	11
Software Licence Agreement	26
Specifications, environmental	
Instrument	24
Static	
LED on instrument	21
Status	
Instrument	21
T	
Technical data	23
Temperature	
Battery internal	
Operating	24
Storage	24
Instrument	
Operating	24
Storage	24, 24
Temperature range	
Product, drying	22
Time, operating	24
TQX-0918EL, antenna	25
U	
UHF	
LED	21
Upload firmware	11
Upload software	11
User Interface	13
User Manual	
Validity of	2
W	
Weight	
Instrument	23
Z	
Zenith10	
Technical data	23
Zenith20	
Technical data	23
ZRA100, antenna	25
ZRA101, antenna	25

GeoMax Zenith10/20



792356-2.0.1en

Original text

© 2013 GeoMax AG, Widnau, Switzerland

GeoMax AG
www.geomax-positioning.com