

VF-ICE Series

SKOPE Ice Storage Cabinet



VF1000-ICE



SKOPE Warranty Protection

Register now for peace of mind

It's quick and simple. Take a few minutes to register your SKOPE product and enjoy more efficient support plus other warranty benefits. When registering, make sure you have your cabinet serial number at hand.

To register online:

Visit our website at www.skope.com/warrantyprotection then complete and submit the online registration form.



Or freephone:

1800 121 535 (Australia)

0800 947 5673 (New Zealand)

SKOPE 1-year Extended Warranty

Extend your Warranty Protection by 1 year during registration. Please check you have not already organised an extended warranty through your dealer at time of purchase. For pricing information on an extended warranty visit www.skope.com/warrantyprotection

Service & Support

We know you will get years of satisfaction from your new SKOPE product when you follow a few simple preventative maintenance guidelines.

Helpful information is available on our website
www.skope.com/serviceandsupport



Thank you for purchasing a SKOPE refrigeration product.

CONTENTS

1 Installation

Safety First	4
Positioning the Cabinet	5
Power Cord	5
Location	5
Ventilation	5
Shelves	6
Optional Door Lock	6

2 Operation

Automatic Start-Up	7
Loading Product	7
Electronic Controller	8
Introduction	8
Faceplate	8
Defrost	9
Continuous Cycle	9
Temperature Setpoint	9
Controller Reset	10
Alarms	11

3 Servicing

Cleaning	12
Cabinet	12
Condenser Coil	12
Lighting	13
Interior Light	13
Sign Light	14
Troubleshooting	15

1 Installation

Safety First Always observe safety precautions when using any electrical appliance. Read these instructions carefully and retain them for future reference.

- When the appliance is used by or near young children or infirm persons, close supervision is necessary, especially to ensure children do not play with it.
- Do **not** use this appliance for other than its intended use.
- Do **not** cover the grilles or block the entry or exhaust of airflow by placing objects up against the refrigeration cassette.
- Do **not** probe any opening.
- Do **not** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Only use this appliance with the voltage specified on the cabinet rating label affixed to the refrigeration cassette.
- Ensure the appliance has adequate ventilation as this is essential to economical, high performance.
- Be careful not to touch moving parts and hot surfaces.
- For your own safety and that of others, ensure that all electrical work is done by authorised personnel.
- If the power supply flexible cord becomes damaged, it must be replaced by an authorised service agent or similarly qualified person in order to avoid a hazard.
- Ensure all necessary safety precautions are observed during installation or removal of the refrigeration unit.
- This appliance is not designed to be stable while in motion. Use extreme caution when moving or transporting the appliance.

WARNING

Always isolate the ice storage cabinet from the mains power supply before attempting any maintenance.

WARNING

Twin unit ice storage cabinets have two separate power supplies. Ensure both supplies are disconnected before undertaking any service or maintenance work.

CAUTION

Never overload the power supply, which could damage the ice storage cabinet and product. See the rating label inside the cabinet for the safe power supply and current draw.

Positioning the Cabinet


Power Cord The power cord exits from the top rear of the cabinet and is fitted with a 3-pin plug. Pull the power cord around so that it's not trapped before you position the cabinet. **Note:** Single unit ice storage cabinets are fitted with one power cord. Twin unit ice storage cabinets are fitted with two power cords, one for each refrigeration unit.

Location The location of the ice storage cabinet may be the single most important decision that will extend its life and ensure economical, high performance. We recommend that you put the ice storage cabinet in the coolest place possible because it will use less power and last longer. Although the ice storage cabinet operates in environs up to 32°C, we suggest that you not constantly run it at the upper end.

Avoid direct sunlight, warm draughts etc. Allow adequate space for doors to open and close properly. Self-closing doors have internal torsion bars pretensioned at the factory, and must be unobstructed. Ensure the cabinet sits on a level surface so that the doors shut and correctly seal. Level footing also prevents the condensate tray from overflowing.

Ventilation See diagram below for ventilation guidelines. When positioning the ice storage cabinet, ensure there is at least a 200mm space above the top panel. Adequate ventilation around the refrigeration unit is essential for efficient operation. The air surrounding the refrigeration unit must not exceed 32°C. Keep the ventilation slots at the top of the cabinet clear at all times and **never** store cardboard cartons or other objects on top of the ice storage cabinet.

Note: Remote cabinets require a minimum of 300mm clearance above the top panel to allow for service access.

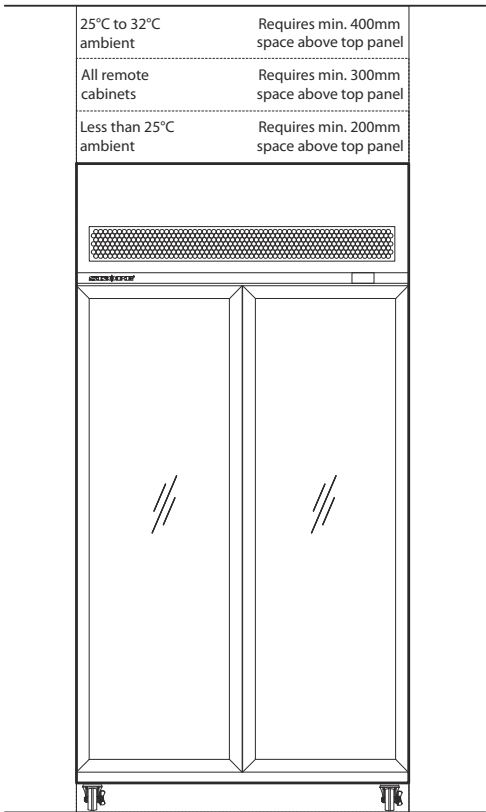

Shelves

The ice storage cabinet is supplied with heavy duty ice shelves which may be positioned at different heights. Refer to the table below for shelf numbers and dimensions.

Heavy duty ice shelves

Model	Quantity	Dimensions
VF650-ICE	1	619mm wide × 475mm deep
VF1000-ICE	1	1009mm wide × 460mm deep
VF1300-ICE	2	677mm wide × 460mm deep
VF1500-ICE	3	Side ×2: 502mm wide × 460mm deep Middle ×1: 571mm wide × 460mm deep

Always ensure that the shelf clips are securely engaged in each of the shelf support strips. Support strips are marked '+' for easy location of shelf clips.

To fit the wire shelves

1. Unpack the shelves and shelf clips from inside the cabinet.
2. Establish the desired position for the shelves and securely engage a shelf clip in each of the shelf support strips.
3. Sit the shelves on the shelf clips.

Optional Door Lock

Ice storage cabinets fitted with optional door locks have a key barrel type lock at the top of each door. Use the supplied keys to lock and unlock the door as necessary.

2 Operation

Automatic Start-Up

After the ice storage cabinet has been positioned in a suitable place, plug it in and check the following activity.

Item	Activity
Condenser Fan	The condenser fan starts and runs at a slow speed. When the compressor starts, the condenser fan will run at full speed.
Lighting	The lights that illuminate cabinet interior and top sign (where applicable) will come on when the ice storage cabinet is turned on. The light/s can be switched on and off via the electronic controller (see over page). Cabinets fitted with solid doors use an automatic light switch to turn the light on and off with door openings.
Electronic Controller	An electronic controller runs the ice storage cabinet and is visible on the control panel above the door/s. The electronic controller display panel shows the cabinet temperature. Note: Twin unit ice storage cabinets are fitted with two electronic controllers, one for each refrigeration unit. Only one electronic controller is visible.
Compressor	The compressor starts about one minute after the lights go on. The compressor turns off when the product temperature reaches around -12°C and turns on again when it reaches about -9°C.
Evaporator Fan	The evaporator fan will not operate until the evaporator probe senses a temperature of -8°C on the evaporator coil. When the evaporator coil is below -8°C, the evaporator will run at slow speed or fast speed as required.

Loading Product

Let the ice storage cabinet run for 30 minutes before loading it with product for the first time. When loading the ice storage cabinet:

- Do not load product above the load limit indicators shown on the cabinet interior sides (see image below).




- If fitted with shelf/s, do not exceed a maximum load of 300kg per shelf, remove some product if the shelves are flexing and do not let anything overhang the shelves because this might stop the doors from shutting or even break something.

Electronic Controller

Introduction The electronic controller controls the ice storage cabinet, displays the cabinet temperature and signals temperature alarms. It uses temperature probes to collect data and runs the ice storage cabinet accordingly. The electronic controller is pre-programmed and usually requires no initial setup or additional programming. SKOPE does not recommend that the settings be changed unless necessary. **Note:** Twin unit ice storage cabinets are fitted with two electronic controllers, one for each refrigeration unit.

Faceplate Because the electronic controller plays such an important role, it's helpful to know the parts of the faceplate you may use.

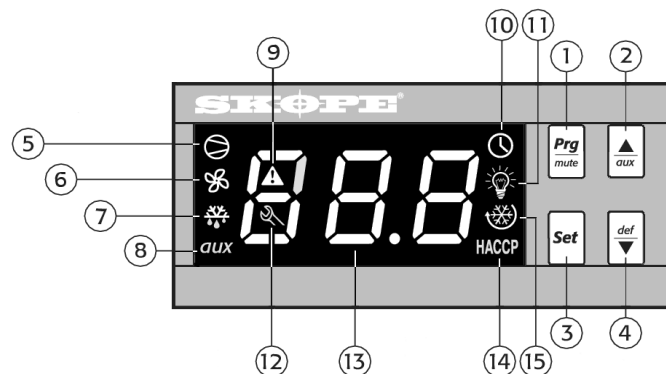

No.	Item	Description
1		Prg / mute: To initiate program sets, press for 5 seconds. Mutes the audible alarm (buzzer).
2		UP / aux: To switch light/s on and off. To scroll settings UP (in program mode).
3		Set: If pressed for more than 2 seconds displays and / or enables changing the temperature setpoint (see page 9).
4		DOWN / def: To scroll settings DOWN (in programme mode).
5		COMPRESSOR: ON when the compressor and condenser fan starts. Flashes when activation of the compressor is temporarily delayed.
6		FAN: Shows when fan is operational.
7		DEFROST: ON when the defrost is activated. Flashes when the activation of the defrost is temporarily delayed due to procedures in progress.
8	aux	AUX: n.a.
9		ALARM: Flashes in the event of alarms.
10		CLOCK: On when real time clock is enabled.
11		LIGHT: On when the cabinet lighting is activated.
12		SERVICE: Flashes in the event of malfunctions.
13		DISPLAY: Shows the cabinet temperature.
14	HACCP	HACCP: n.a.
15		CONTINUOUS CYCLE: On when ice storage cabinet is running in continuous run mode.


Defrost To ensure efficient operation, the electronic controller forces a defrost cycle when required. During a defrost cycle, the compressor stops, **DEF** and the ❄️ will display on the electronic controller faceplate. The ice storage cabinet will resume normal operation once the defrost cycle has finished. A manual defrost can also be initiated by pressing and holding the $\frac{def}{\nabla}$ button.

Continuous Cycle The continuous cycle can be used to pull down the temperature of product inside the ice storage cabinet quickly. During a continuous cool down the compressor runs continuously for a set time.

To start a continuous cycle

1. While the ice storage cabinet is switched on and running, press and hold the $\frac{aux}{\blacktriangle}$ and $\frac{def}{\nabla}$ buttons for five seconds.


The ❄️ symbol will display during a continuous cycle.

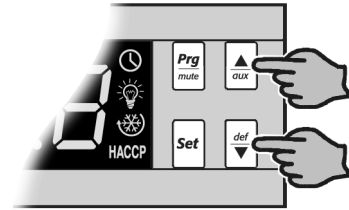

To stop a continuous cycle

1. The electronic controller will automatically stop the continuous cycle after a period of time.


The continuous cycle can be stopped by pressing and holding the $\frac{aux}{\blacktriangle}$ and $\frac{def}{\nabla}$ buttons for five seconds.

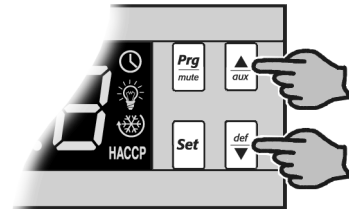


Temperature Setpoint The ice storage cabinet is manufactured with a pre-set control temperature set point of -12°C. If this set point does not match your required storage temperature it is recommended that you change the set point accordingly. The set point can be adjusted between -12°C and -18°C.

To view and adjust the temperature setpoint


1. To view the setpoint: press and hold the **Set** key for 2 seconds, until the setpoint value flashes

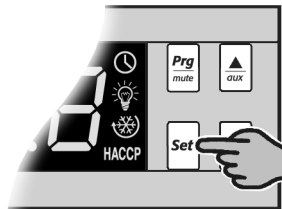

2. To adjust the setpoint: press either the $\frac{aux}{\blacktriangle}$ and $\frac{def}{\nabla}$ keys to display the required setpoint value.

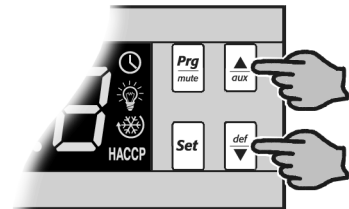

3. Press the **Set** key again to memorise the new setpoint value. If this is not done within 60 seconds, changes will be lost and you will need to repeat the above procedure.

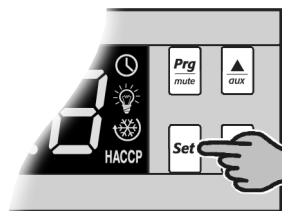


Controller Reset To delete program modifications and reset the controller to SKOPE default program or when a replacement controller is being fitted, a 'Controller Reset' must be performed.


To reset the controller

1. Disconnect the ice storage cabinet from the power supply.


2. Press and hold the **Prg** mute key while plugging the ice storage cabinet into the power supply (this may require two people). After a few seconds the controller is reset and program mode '**bn0**' is displayed. The controller must never be left in program mode '**bn0**' as failure will occur.

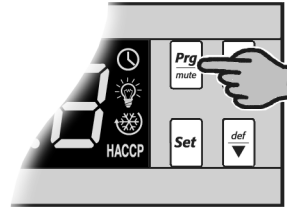

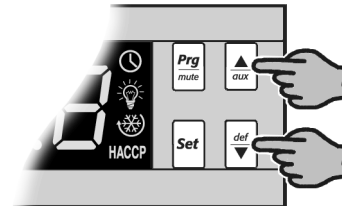



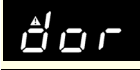




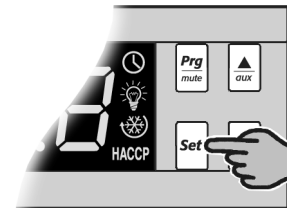



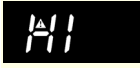


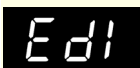
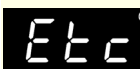







3. Press the **▲** aux or **▼** def keys to select '**bn3**' for SKOPE default program.



4. Immediately press the **Set** key to confirm the preferred program. If not confirmed within 60 seconds the ice storage cabinet will remain in program mode '**bn0**' (and cause failure). If this occurs, repeat the above procedure.



Alarms The following table explains messages that the electronic controller displays and related alarms. Alarms signal unexpected operational changes in the ice storage cabinet and stop when action is taken to resolve the problem.

Code	Display Icon	Alarm Description	Initial Action
	 Flashing	Product HIGH temperature alarm	1. Check the cabinet product loading to ensure ventilation slots are not blocked and that product does not overhang the shelves. 2. Ensure the cabinet is installed with good refrigeration unit ventilation. 3. Check and clean the condenser coil (see page 12). 4. Unplug cabinet from the power supply for 1 minute, then reconnect to power supply. If problems persist, contact SKOPE
	 Flashing	Product LOW temperature alarm	
		Door open alarm	Check door is closed.
		High ambient alarm	Check ventilation and operating conditions (see page 5).
		High pressure alarm	Check and clean the condenser coil (see page 12).
	 Flashing	Control probe fault	Contact an authorised service agent to replace probe.
	 Flashing	Evaporator probe fault	
	 Flashing	Ambient probe fault	
	None	Defrost over-time limit	Unplug cabinet from the power supply for 1 minute, then reconnect to power supply. If problems persist, contact an authorised service agent.
	 Flashing	Real-time clock fault	
	 Flashing	Controller E prom error	
	 Flashing	Controller E prom error	None
	None	Start defrost request	
	None	End defrost request	

3 Servicing

Cleaning

Ensure the ice storage cabinet is disconnected from the power supply before cleaning.

WARNING

Twin unit ice storage cabinets have two separate power supplies. Ensure both supplies are disconnected before undertaking any service or maintenance work.

Cabinet Periodically wipe the inside and outside of the cabinet with a damp cloth, taking care to keep moisture away from electrical parts.

Condenser Coil To ensure trouble-free performance, we strongly urge monthly cleaning with a soft brush to remove dust and fluff. A more thorough cleaning is recommended every six months, by qualified service personnel. The condenser coil **must** be kept clean for efficient and reliable operation.


WARNING

Disconnect the ice storage cabinet from the power supply before cleaning the condenser coil.

To clean the condenser coil

1. Disconnect the ice storage cabinet from the power supply.
 2. Remove the sign assembly. Lift the assembly up and off the sign sides and if necessary unplug it from the cabinet.
-

3. Clean the condenser coil with a soft brush.

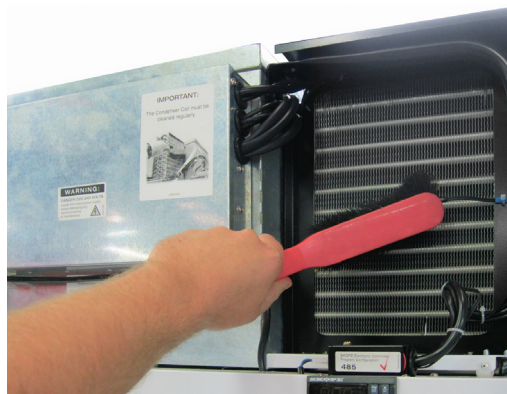

4. Refit the sign assembly and reconnect the ice storage cabinet to the power supply.
-
-

Lighting

This ice storage cabinet is designed for use with LED tubes and is not compatible with fluorescent tubes.

As with any maintenance, ensure the ice storage cabinet is disconnected from the power supply before replacing light tubes.

IMPORTANT

DO NOT use fluorescent tubes.

Interior Light The cabinet interior is lit by side or centre pillar lights (see table below for details), which can be replaced without moving shelves or removing product.

Interior light specifications

Model	LED Tube Specification
VF650-ICE	1 x side light: 22 Watt T8 LED tube (Ø26mm x 1500mm)
VF1000/VF1300-ICE	1 x pillar light: Twin 22 Watt T8 LED tube (Ø26mm x 1500mm)
VF1500-ICE	2 x pillar lights: Twin 22 Watt T8 LED tube (Ø26mm x 1500mm)

To replace the cabinet interior side light (VF650-ICE)

1. Disconnect the ice storage cabinet from the power supply.
2. Remove the diffuser by squeezing it until it is released from the aluminium housing, and then push the diffuser out of the way.
3. Rotate the LED tube until the pins on the ends of the tube align with the slots, then slide it out.
4. Fit a new LED tube. Ensure the LED tube is fitted with the power end at the top.
5. Refit the diffuser by slipping the back section into the housing, then squeezing and snapping the front section of the diffuser into place as you work down the length of the light.



To replace the cabinet interior pillar light (VF1000/1300/1500-ICE)

1. Disconnect the ice storage cabinet from the power supply.
2. Remove the diffuser by squeezing it until it is released from the housing, and then push the diffuser out of the way.
3. Rotate the LED tube until the pins on the ends of the tube align with the slots, then slide it out.
4. Fit a new LED tube. Ensure the LED tube is fitted with the power end at the top.

Sign Light Not as standard - lit sign ice storage cabinets only. The sign unit is lit by one LED tube (see table below for details) which can be replaced by removing the front sign panel.

Sign light specifications

Model	LED Tube Specification
VF650-ICE	1 x 9 Watt T8 Frosted LED tube (Ø26 x 600mm)
VF1000-ICE	1 x 12 Watt T8 Frosted LED tube (Ø26 x 900mm)
VF1300-ICE	1 x 20 Watt T8 Frosted LED tube (Ø26 x 1200mm)
VF1500-ICE	1 x 22 Watt T8 Frosted LED tube (Ø26 x 1500mm)

To replace the sign light

1. Disconnect the chiller from the mains power supply.
2. Remove the sign assembly. Lift the assembly up and off the sign sides and unplug it from the cabinet.

3. Separate the light sign assembly from the sign panel by undoing the two fixing screws on each side of the sign panel.



4. Remove the top of the sign light assembly by undoing the four fixing screws on the top of the sign light assembly.



5. Remove the plastic sign panel (and artwork if present) from the sign light assembly.

6. Rotate and remove the failed LED tube.



7. Fit the new LED tube.
8. Refit the clear front panel (and artwork if present) and screw the sign top cover back onto the top of the sign assembly.
9. Refit and fix the sign light back onto the sign panel assembly.
10. Plug the sign assembly back into the cabinet and slot the assembly back onto the sign sides.

Troubleshooting

For questions about the electronic controller, see page 11. For problems with the cabinet and refrigeration cassette, use the following table.

Problem	Possible Cause	Suggestions
<ul style="list-style-type: none"> • Cabinet not operating • No controller display 	<ul style="list-style-type: none"> • Loss of power supply 	<ul style="list-style-type: none"> • Check mains power supply.
<ul style="list-style-type: none"> • Interior light not on 	<ul style="list-style-type: none"> • Failed LED tube • Blown cabinet fuse 	<ul style="list-style-type: none"> • Replace LED tube (see page 13). • Contact an authorised service agent to replace it.
<ul style="list-style-type: none"> • Power consumption is higher than expected 	<ul style="list-style-type: none"> • Unit operating too hot • Cabinet doors are opened excessively 	<ul style="list-style-type: none"> • Clean the condenser coil (see page 12). • Ensure the cabinet has good ventilation around the refrigeration unit (see page 5). • Ensure the cabinet is in a cool spot. • Ensure doors are closed more often.
<ul style="list-style-type: none"> • Product is too warm 	<ul style="list-style-type: none"> • Restricted airflow to cabinet 	<ul style="list-style-type: none"> • Ensure product is not blocking airflow slots. • Ensure there is space around individual product pieces.
<ul style="list-style-type: none"> • Warm cabinet temperatures • Compressor operating for long periods (more than 1 hour) 	<ul style="list-style-type: none"> • Blocked condenser • Poor ventilation around refrigeration unit 	<ul style="list-style-type: none"> • Clean the condenser coil (see page 12). • Ensure the cabinet has good ventilation around the refrigeration unit (see page 5).

SKOPE Industries Limited

NEW ZEALAND CONTACT

Head Office
PO Box 1091, Christchurch
New Zealand
Freephone: 0800 947 5673
Fax: (03) 983 3896
E-mail: enquiry@skope.co.nz
Website: www.skope.co.nz

AUSTRALIAN CONTACT

A.B.N. 73 374 418 306
PO Box 7543, Baulkham Hills B.C.
NSW 2153, Australia
Freephone: 1800 121 535
Fax: 1800 121 533
E-mail: enquiry@skope.com.au
Website: www.skope.com.au

Trademark Infringement

The SKOPE trademark on this product is infringed if the owner, for the time being, does any of the following:

- Applies the trade mark to the product after their state, condition, get-up or packaging has been altered in any manner
- Alters, removes (including part removal) or obliterates (including part obliteration) the trade mark on the product
- Applies any other trade mark to the product
- Adds to the product any written material that is likely to damage the reputation of the trade mark

Notice of the above contractual obligations passes to:

- Successors or assignees of the buyer
- Future owners of the product

VF-ICE Series
SKOPE Ice Storage Cabinet
User Manual
MAN10751
Rev. 3.2 Feb. 2015

© 2013 SKOPE Industries Limited. All rights reserved.
SKOPE Industries Limited reserve the right to alter specifications without notice.

SKOPE® is a registered trademark of SKOPE Industries Limited.