


USER MANUAL

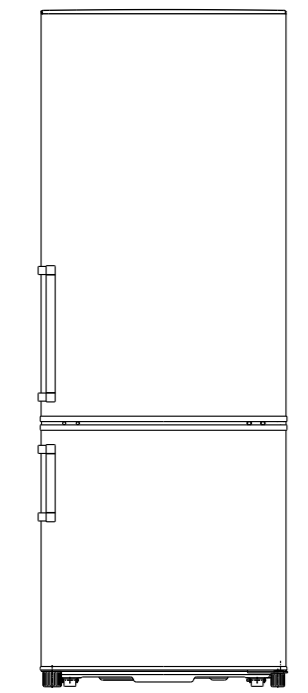

CONTENTS

Structure Illustration 2

Instructions for Installation 3

Cautions for Safety 4

Operation 4

Cleaning and Maintenance 6

Troubleshooting-----7

Technical Specifications -----8

- Please read this users operation manual before using.
- Appearance of refrigerator refer to production.
- Because of production improvement, your refrigerator may not be consistent with this user manual fully.


REFRIGERATOR

MODEL: RHBF340SS1

General

This type of refrigerator is to be used for domestic purposes only.


Structure Illustration

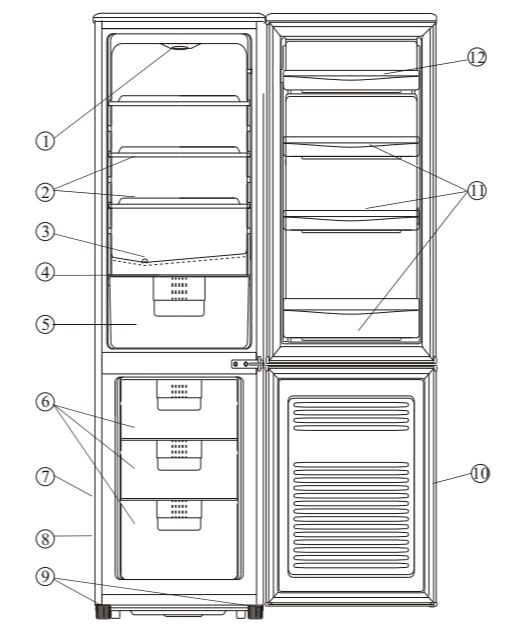


- | | |
|-------------------|-------------------------|
| ① Thermostat | ⑦ Drain hose (Back) |
| ② Shelf | ⑧ Compressor (Back) |
| ③ Drain Port | ⑨ Leveling Feet |
| ④ Crisper Cover | ⑩ Gasket |
| ⑤ Crisper | ⑪ Bracket |
| ⑥ Freezing Drawer | ⑫ Eggs bracket (Inside) |

Instructions for Installation :


- Do not tilt the refrigerator by more than 45° from an upright position when moving it. Avoid collision and violent vibration during transportation. Do not apply force to any part such as the condenser, the door and its handle in order to prevent the refrigerator from deforming, or else its performance will be affected.

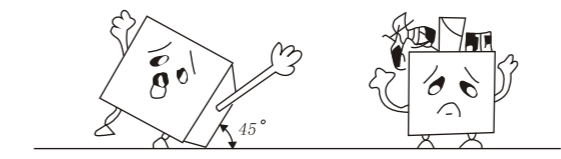

- Ensure that there is enough space around the refrigerator in order to let it work well.

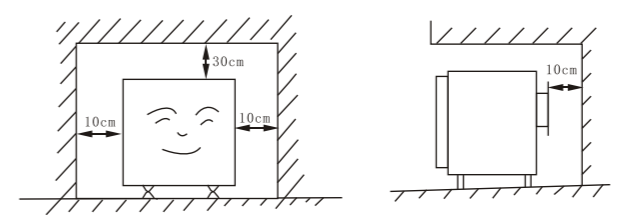

- The refrigerator should be kept away from high temperature, sunshine or humid conditions.

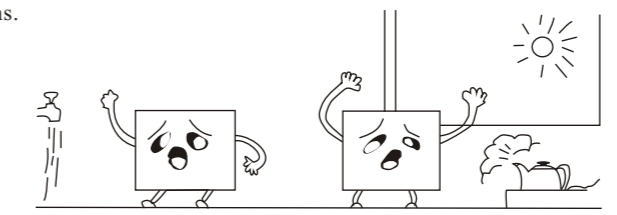

- The refrigerator should be placed on solid floor to avoid much noise.
- For your safety and protection, this unit is grounded through the power cord plug when plugged into a matching wall outlet. If you are not sure whether your wall outlet properly grounded, please consult a qualified electrician.

Cautions for Safety :

- It must be checked that the voltage used should be the same as the rated voltage before the refrigerator is used.
- The power plug should have its own separated socket in order to prevent the electric wire from being over heated by other plugs.
- Do Not allow children to tamper with the controls or play with the product.
- Do Not hang heavy objects onto the door of the product to avoid the refrigerator turning over..
- It is dangerous to alter the specifications or attempt to modify this products in any way
- Do not place sealed container or carbonated liquids such as fizzy drinks into the freezer as it creates pressure on the container which may cause it to explode resulting in damage to the freezer or people.
- Do not spray water on to the refrigerator. Otherwise it may cause malfunctions of the refrigerator or electric shock.
- Do not store flammable materials such as alcohol, gasoline, LP gas and glue etc, in the refrigerator.
- Ice cubes and ice lollies should not be consumed immediately after removal from the freezer as it may result in low temperature skin abrasions.
- When you change the light bulb or when the refrigerator is not in use for long periods, disconnect it from the electricity supply..
- Wait for 5 minutes before restarting the unit after the power supply has been stopped..

Operation :

- When operating the refrigerator for the first time, set the thermostat dial at 3, connect the electric wire and run it without loading any food. Usually this takes 2 or 3 hours. Then set the thermostat dial at the desired setting and place foods into the refrigerator.


2. The temperature of the refrigerator can be adjusted by turning the thermostatic dial, which has 7 settings. The most suitable setting for general operation would be 3 - 4. The higher the setting, the lower the temperature inside the refrigerator.

	Refrigerator	Freezer
Setting 1	5°C to 10°C	-16°C to -10°C
Setting 2	4°C to 10°C	-17°C to -13°C
Setting 3	3°C to 8°C	-19°C to -15°C
Setting 4	2°C to 8°C	-20°C to -15°C
Setting 5	0°C to 7°C	-21°C to -17°C
Setting 6	-1°C to 5°C	-22°C to -17°C
Setting 7	-3°C to 3°C	-25°C to -18°C


The variation in temperature of each setting is dependant on ambient temperature and where therefrigerator is positioned.

3. Do not put too much food in the refrigerator .

Open the door less frequently in order to maintain the temperature of the refrigerator and always leave warm food to cool down to room temperature before putting into the refrigerator to save electric consumption.

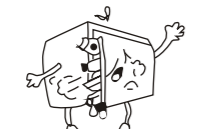

4. When making ice cubes, fill the ice tray with drinkable water. And put it into the freezer . It takes about 2 or 3 hours to make ice cubes. Pieces of ice cube can be removed by twisting it . Do not press it up and down , otherwise , the ice tray may break.

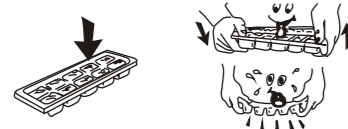


5. Frost in the fridge will defrost automatically and the water can flow to the water collection pan above the compressor. The water will evaporate by the heat of compressor. Defrost the freezer whenever the layer of frost on the surface reaches 3 or 4 mm . When defrosting , remove all foods , set the thermostat to position 0 and open the door. After the frost has melted , discard the water and dry up the interior of the freezer , The refrigerator can then be restarted by turning its thermostat to the desired setting .


6. Do not heat the freezer directly with hot water or a hair dryer , This may cause deformation of the inner casing .
7. Do not scrape ice or separate food using a sharp tool or a wooden bar so as not to damage the casing .

Cleaning and Maintenance:

1. When cleaning the refrigerator , disconnect the electric wire . Rub it carefully with a piece of cloth soaked with neutral cleanser , then wipe it clean with fresh Water. Donot wash the refrigerator with water directly to prevent the unit from rust and breakdown.

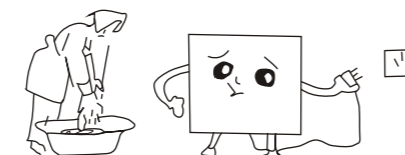

2. Never use acids , chemical solution , thinner , gasoline or the likes to clean the refrigerator because they may damage the painting cover and plastic parts of it

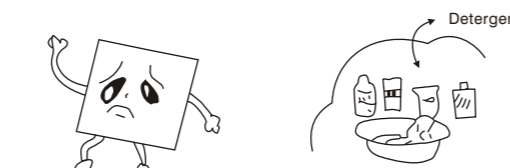

- 3 . Once or twice a year dust the compressor at the back of the appliance with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.

Troubleshooting

- When the refrigerator does not operate :ensure that
 - The electric power is supplied and the voltage is normal.
 - The fuse is not burned out .
 - The power plug is plugged in firmly in the socket .
 - The thermostat setting is not in 0 position.
- When the refrigerator is not cool enough: ensure that
 - The thermostat is at the correct setting .
 - There are enough space around the refrigerator .
 - The doors are not opened too frequently and for too long .
 - The refrigerator is not under direct sunlight or placed near the heat source .
 - There are not too many foods and hot foods in the refrigerator.
- When the foods in the refrigerator is frozen: ensure that
 - The thermostat is at the correct setting .
 - There is not too much food that contains a lot of moisture in the refrigerator .
- When the refrigerator operates too noisily : ensure that
 - The refrigerator is properly levelled .
 - The refrigerator is not touching objects around it .
 - The containers or solid packages stored inside are not touching each other .
- When the refrigerator does not run in winter : ensure that
 - The compensata switch is off. It should be turned on as the ambient temperature is less than 10 degree.
- When there is a water leak on the ground : check if
 - The drain hole is blocked .
 - The drain hose in compressor compartment is not installed well.
- When the compressor runs continuously without stopping : check if
 - There are too much food in the refrigerator .
 - The thermostat dial is at higher position such as 7 etc.
 - The door of refrigerator is opened too frequently.
 - The ventilation is not good around the refrigerator.
 - The door is not closed well or the door gasket is deformed.

Note:

During the period of high relative humidity , moisture may form on the surface of the refrigerator . It is not malfunction . You may just wipe it up yourself. If your refrigerator is still not functioning properly after making the above checks , please contact with the maintenance service department without any delay .

Technical Specifications

* For the detailed specifications please refer to the nameplate at the back of the refrigerator.

* The specifications are subject to change without prior notice due to product improvement.

Russell Hobbs® REFRIGERATOR		RHBF 340SS1 CB CE	
		CLIMATIC CATEGORY	N
		PROTECTIVE CLASSIFICATION OF ELECTRIC SHOCK	I
		RESISTANCE	220-240V~
		RATED VOLTAGE	50Hz
		RATED FREQUENCY	0.75A
		RATED CURRENT	115W
		TOTAL INPUT POWER	1W
		RATED POWER OF LAMP	R600a(70g)
		REFRIGERANT	55kg
		NET WEIGHT	340L
		GROSS CAPACITY	W550XD580XH1757
		Product Dimension (mm)	S / N: XXXXXXXXXX

Service Information:

If you experiencing problems with your Russell Hobbs appliance please contact your nearest store or contact our customer care department on our toll free number 0123300287.