



**Wireless ADSL2+ Router**

# User Manual

1.0 About This Manual .....	3
1.1 Document Objectives .....	3
1.2 Product Overview .....	3
1.3 Product Description .....	3
2.0 Specification .....	4
2.1 LED Meaning .....	5
2.2 Back Panel Connectors .....	6
3.0 Hardware Requirements .....	7
3.1 Setting up the Hardware Environment .....	7
3.2 Powering on WLAN ADSL2+ Router .....	8
4.0 Installation & Setup .....	9
5.0 Configuration Procedures .....	11
6.0 WLAN ADSL2+ Router Configuration .....	15
7.0 Technology Glossary .....	21
8.1 Web Configuration Overview .....	25
8.2 Accessing WLAN ADSL2+ Router Web Configuration .....	25
9.1 Universal Plug and Play Overview .....	61
9.2 How do I know if I'm using UPnP? .....	61
9.3 NAT Traversal .....	61
9.4 Cautions with UPnP .....	62
9.5 Configuring UPnP .....	63
9.6 Installing UPnP in Windows Example .....	64
9.7 Installing UPnP in Windows Me .....	64
9.8 Installing UPnP in Windows XP .....	65
9.9 Using UPnP in Windows XP Example .....	66
9.10 Auto-discover Your UPnP-enabled Network Device .....	66
10.0 Web Configuration Easy Access .....	69
11.0 Troubleshooting .....	71
A.1 Using LEDs to Diagnose Problems .....	71
A.1.1 Power LED .....	71
A.1.2 LAN LED .....	71
A.1.3 DSL LED ( ACT & LINK) .....	72
A.2 Telnet .....	72
A.3 Web Configuration .....	73
A.4 Login Username and Password .....	74
A.5 LAN Interface .....	74
A.6 WAN Interface .....	75
A.7 Internet Access .....	75
A.8 Remote Node Connection .....	76

## 1.0 About This Manual

This manual is developed for users, system managers, network managers, and contains installation, configuration, and operation of the WLAN ADSL2+ Router.

### 1.1 Document Objectives

The objectives of this manual are to describe all the initial hardware installation and basic configuration procedure for the WLAN ADSL2+ Router. After completing the installation and basic configuration procedures, you can then use the appropriate contents to more completely configure your system.

### 1.2 Product Overview

This section provides an overview of the WLAN ADSL2+ Router. It also describes the general applications available with the WLAN ADSL2+ Router.

**Note!** This section documents general product features available in the ADSL2+ Router product series. Please refer to the release notes for a current list of upgraded hardware and software specifications.

### 1.3 Product Description

WLAN ADSL2+ Router is a low cost, high performance and high-speed device that provides a full rate ADSL2+ Router with the superb reliability and a complete solution for home and office router. WLAN ADSL2+ Router can have a maximum downstream data rate of up to 24Mbps and an upstream of up to 1Mbps. When configured as a DHCP server, it will assign IP address to every connected PC and acts as the only externally recognized Internet device on your local area network. With build-in NAT, WLAN ADSL2+ Router serves as an Internet firewall, protecting your network from being accessed by outside users. You can safely enjoy the new generation broadband Internet with WLAN ADSL2+ Router.

## 2.0 Specification

### ADSL Standards supported

- Compliant to ITU-T G.992.1 (G.dmt), G.992.2 (G.lite), G.992.3 (ADSL2), G.992.4 (splitterless ADSL2), G.992.5 (ADSL2+) for Annex A, B
- G.lite (G.992.2) with line rate support of up to 1.5Mbps downstream and 512Kbps upstream.
- Supports Multi-Mode standard (ANSI T1.413, Issue 2; G.dmt (G.992.1); G.994.1 and G.996.1(for ISDN only); G.991.1;G.lite (G992.2)).
- Supports OAM F4/F5 loop-back, AIS and RDI OAM cells.
- ATM Forum UNI 3.1/4.0 PVC.
- Supports up to 8 PVCs (UBR, CBR, VBR).
- Multiple Protocols over AAL5 (RFC 1483).
- PPP over AAL5 (RFC 2364).
- PPP over Ethernet (RFC 2516).

### Wireless Ethernet 802.11g

With built-in 802.11g access point for extending the communication media to WLAN while providing the WEP and WPA for securing your wireless networks.

### Network Address Translation (NAT)

Network Address Translation (NAT) allows the translation of an Internet protocol address used within one network (for example a private IP address used in a local network) to a different IP address known within another network (for example a public IP address used on the Internet).

### Universal Plug and Play (UPnP)

Using the standard TCP/IP protocol, the WLAN ADSL2+ Router and other UPnP enabled devices can dynamically join a network, obtain an IP address and convey its capabilities to other devices on the network.

### 10/100M Auto-negotiation Ethernet/Fast Ethernet Interface

This auto-negotiation feature allows the WLAN ADSL2+ Router to detect the speed of incoming transmissions and adjust appropriately without manual intervention. It allows data transfer of either 10 Mbps or 100 Mbps in either half-duplex or full-duplex mode depending on your Ethernet network.

### Dynamic DNS Support

With Dynamic DNS support, you can have a static hostname alias for a dynamic IP address,

### Multiple PVC (Permanent Virtual Circuits) Support

Your WLAN ADSL2+ Router supports up to 8 PVC's.


### DHCP Support

DHCP (Dynamic Host Configuration Protocol) allows individual clients (computers) to obtain TCP/IP configuration at start-up from a centralized DHCP server. The WLAN ADSL2+ Router has built-in DHCP server capability enabled by default. It can assign IP addresses, an IP default gateway and DNS servers to DHCP clients. The WLAN ADSL2+ Router can now also act as a surrogate DHCP server (DHCP Relay) where it relays IP address assignment from the actual real DHCP server to the clients.

## 2.1 LED Meaning

Your WLAN ADSL2+ Router has indicator lights on the front side. Please see below for an explanation of the function of each indicator light.

- PWR : Power indicator
- @ACT : ADSL Active indicator
- @LINK : ADSL Link indicator
- 10/100Mbps 1~4 : Ethernet active indicator
-  ACT : Wireless active indicator

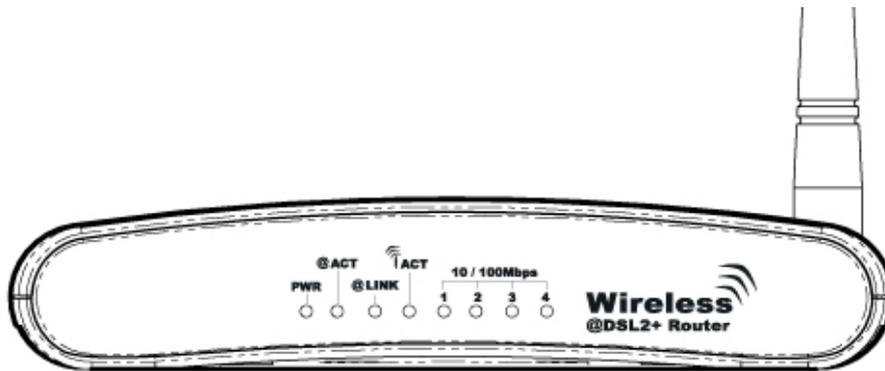

**Table 1.1: LED function**

Label	Color	On	Flash	Off
<b>PWR</b>	Green	Ready	Not Ready	Power Off
<b>@ACT</b>	Green	N/A	ADSL Active	ADSL IDLE
<b>@LINK</b>	Green	Connect to DSLAM	Disconnect to DSLAM	N/A
<b>10/100Mbps 1~4</b>	Green	Ethernet Connected	Transmit / Receive Data	Ethernet Disconnected
 <b>ACT</b>	Green	N/A	Wireless Active	N/A


## 2.2 Back Panel Connectors

Table 2 shows the function of each connector and switch of the WLAN ADSL2+ Router's back panel. Figure 1 illustrate the connectors.

**Table 2:Function Description of Connectors**

Connector	Description
<b>RST</b>	Reset bottom, RESET the ADSL2+ router to its default settings
<b>SW</b>	Power Switch
<b>PWR</b>	Connects to your ADSL2+ router 12V AC power adaptor
<b>LAN1~4</b>	RJ-45 Jack (Ethernet Cable) connection to your PC, or HUB
<b>LINE</b>	Connects to your ADSL2+ line –for ADSL2+ Line input

**Figure1: Rear View of the WLAN ADSL2+ Router**

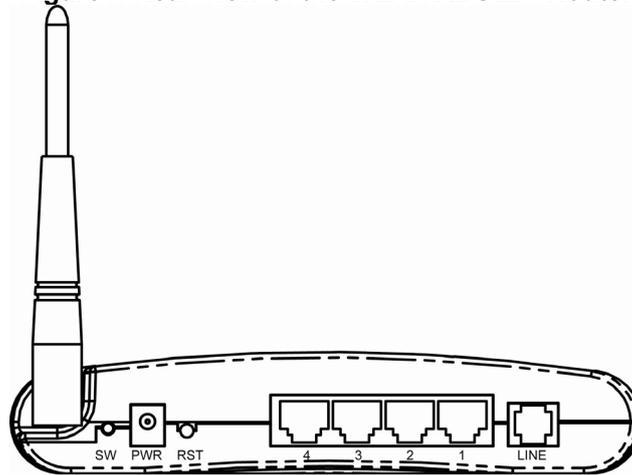

## 2.3 Factory Default Settings

Before configure your, you need to know the following default settings.

### **Web interface:**

Username: admin

Password: 1234

### **LAN IP Settings:**

IP Address: 192.168.1.1

Subnet Mask: 255.255.255.0

### **DHCP:**

DHCP Server: Enable

## 3.0 Hardware Requirements

The following hardware is necessary to configure and use the WLAN ADSL2+ Router:

A PC with Pre-installed Ethernet Adapter (Required)  
12Vac ADSL2+ router power adaptor (Included in the package)  
RJ-45 Ethernet crossover cable (Included in the package)  
RJ-11 (ADSL Ready) phone Line

### 3.1 Setting up the Hardware Environment

**Note!** Be sure that you are well insulated from any power source to avoid electricity shock.

Please kindly refer to chapter 4.0 “Installation & Setup”

## 3.2 Powering on WLAN ADSL2+ Router

**Note!** Use only the manufacturer-approved power supply that shipped with the ADSL2+ Router.

1. Connect the power to the WLAN ADSL2+ Router by plugging the power supply into an appropriate electrical outlet.
2. If the Power LED is off, refer to “Troubleshooting” for information.

**Please kindly refer to chapter 4.0 “Installation & Setup”**

**Important Notice!**


For software installation, please refer to the file inside your CD.  
CD ROM : \MANUAL\Manual.pdf.

## 4.0 Installation & Setup

Follow each STEP carefully and only go to the next step once you have complete the previous STEP.


### Connection of WLAN ADSL2+ Router

If you have an ISDN telephone line connect the modem router as shown below:

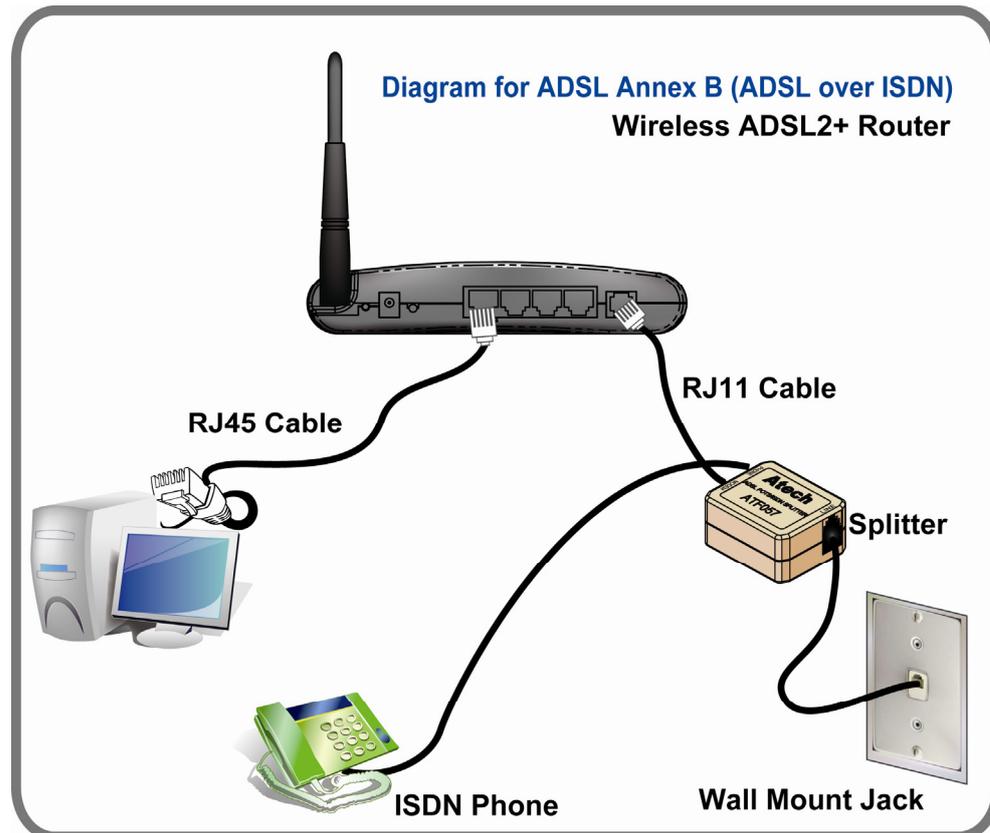

1. Connect the supplied RJ45 Ethernet cable from your PC's Ethernet port to any of the 4 WLAN ADSL2+ Router's LAN Ports.
2. Connect the supplied RJ11 telephone cable from your home's telephone jack to the "LINE" port of the supplied splitter. Connect another RJ11 telephone cable to the "MODEM" port of the splitter and connect the other end of this cable to the LINE port of your WLAN ADSL2+ Router.
3. Connect a RJ11 telephone cable to the "PHONE" port of the splitter and connect the other end to your telephone.
4. Connect the power adapter to the power inlet (PWR) of the WLAN ADSL2+ Router and turn the power switch (SW) of your WLAN ADSL2+ Router on.

If you have a PSTN telephone line (normal analog line) connect the router as shown below:

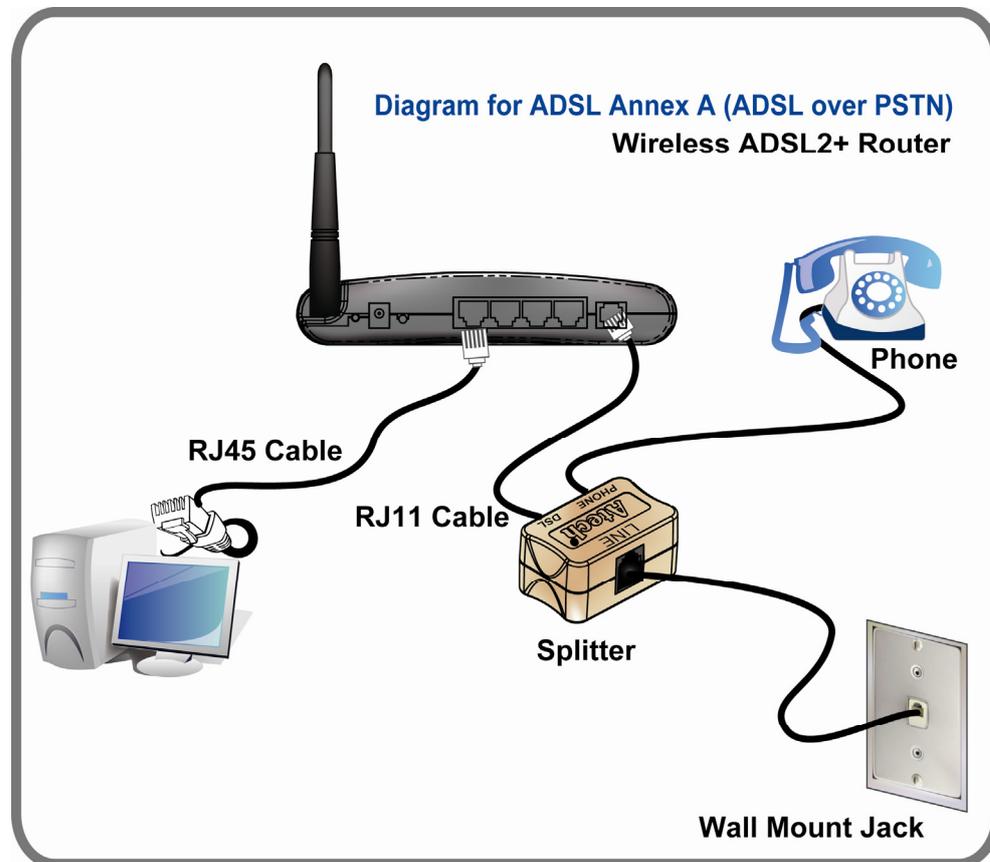

1. Connect the supplied RJ45 Ethernet cable from your PC's Ethernet port to any of the 4 WLAN ADSL2+ Router's LAN Ports.
2. Connect the supplied RJ11 telephone cable from your home's telephone jack to the "LINE" port of the supplied splitter. Connect the other supplied RJ11 telephone cable to the "DSL" port of the splitter and connect the other end of this cable to the "LINE" port of your WLAN ADSL2+ Router.
3. Connect a RJ11 telephone cable to the "PHONE" port of the splitter and connect the other end to your telephone.
4. Connect the power adapter to the power inlet (PWR) of the WLAN ADSL2+ Router and turn the power switch (SW) of your WLAN ADSL2+ Router on.


## 5.0 Configuration Procedures

Before starting the WLAN ADSL2+ Router configuration, please kindly configure the PC computer as below, to have automatic IP address / DNS Server.

### For Windows 98SE/ME/2000/XP


#### Step 01:

Click on "**Start**" -> "**Control Panel**" (in **Classic View**). In the Control Panel, double click on "**Network Connections**" to continue.

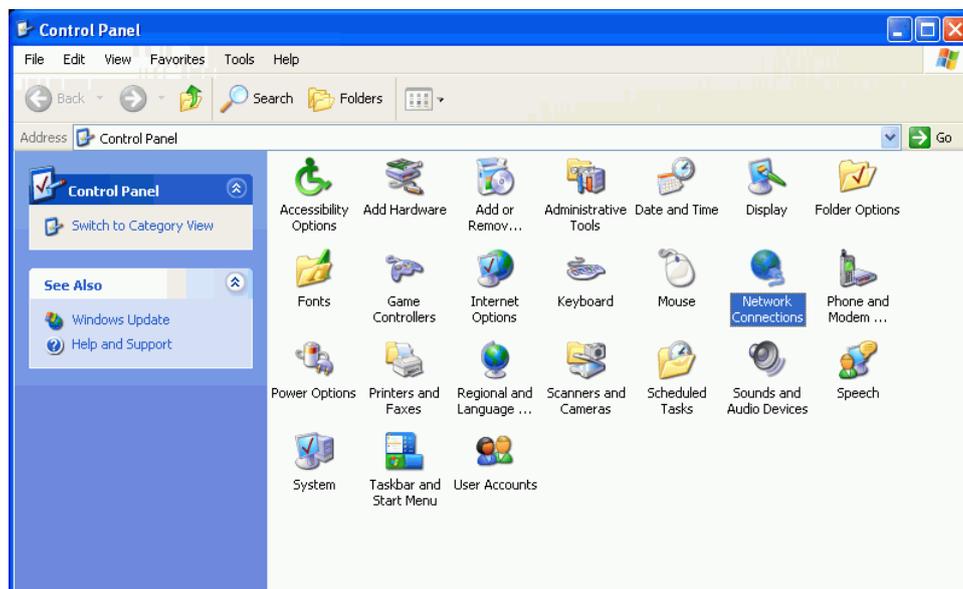


#### Step 02:

Single right click on "**Local Area connection**", then click "**Properties**".

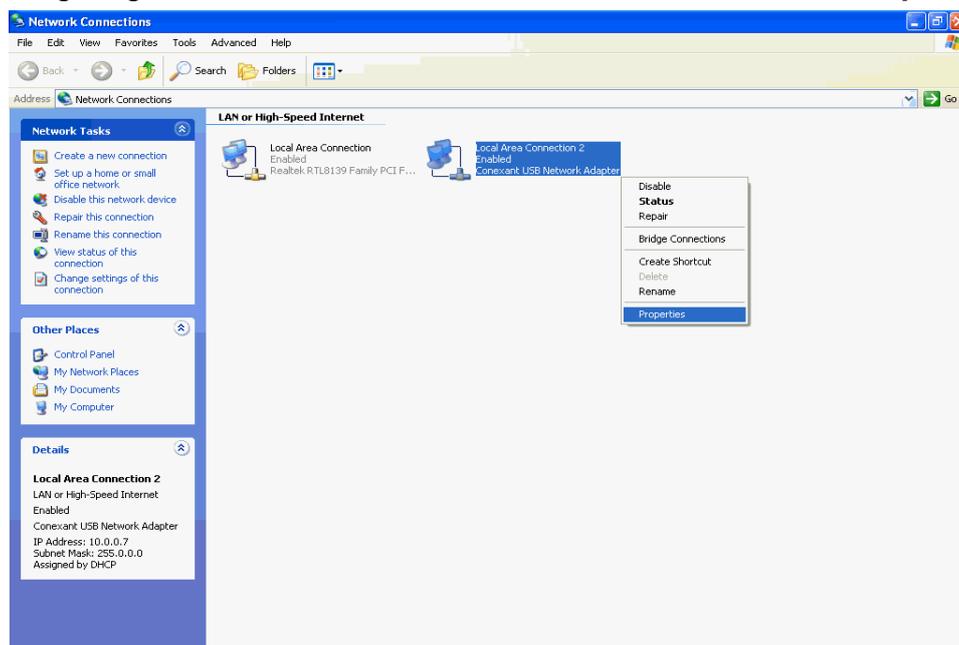


**Step 03:**

Double click on **"Internet Protocol (TCP/IP)"**.

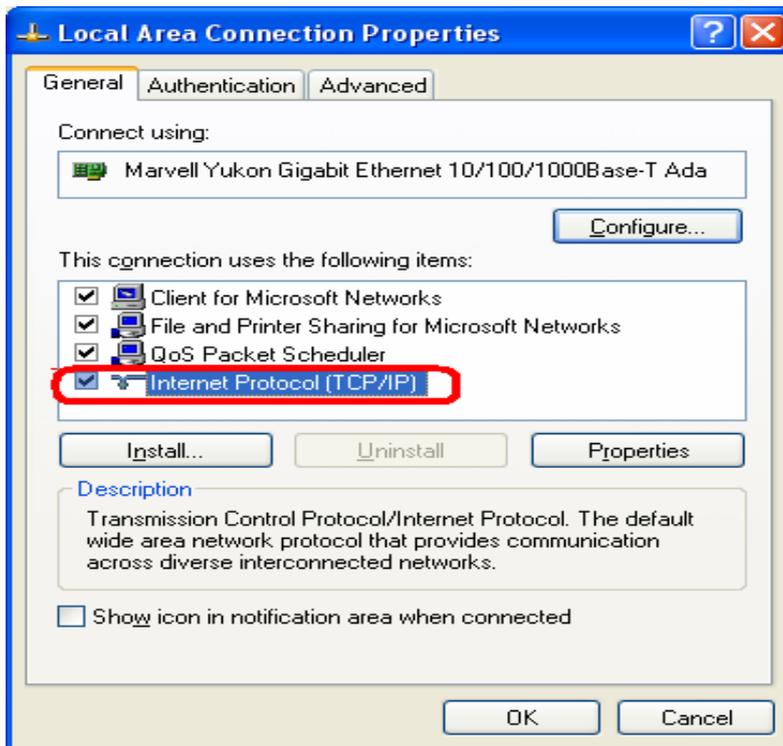

**Step 04:**

Check **"Obtain an IP address automatically"** and **"Obtain DNS server address automatically"** then click on **"OK"** to continue.

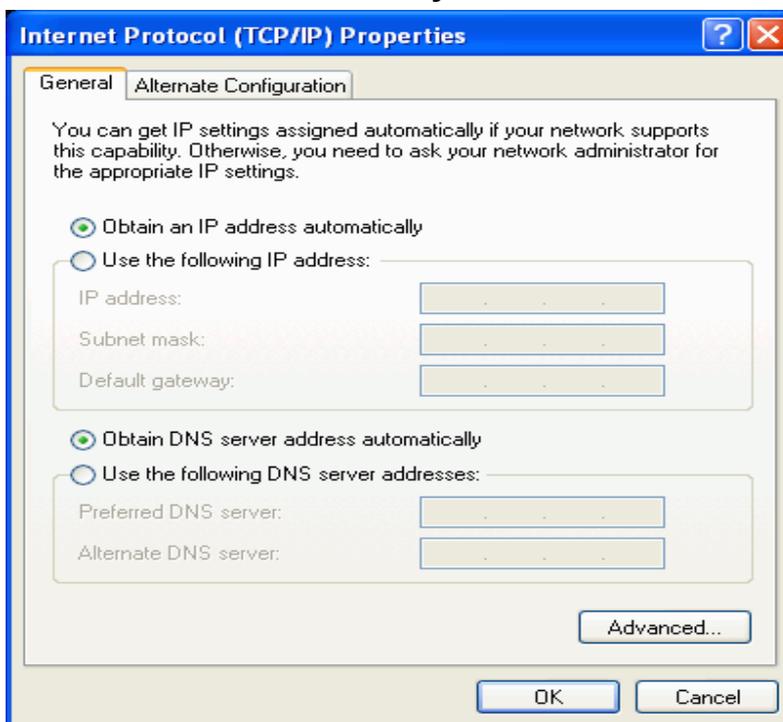


**Step 05:**


Click **"Show icon in notification area when connected"** (see screen image in 3. above) then Click on **"OK"** to complete the setup procedures.

## For Windows Vista-32/64

1. Click on **"Start"** -> **"Control Panel"** (in Classic View) -> **"Network and Sharing Center"**. In the Manage network connections, double click on **"Manage network connections "** to continue.

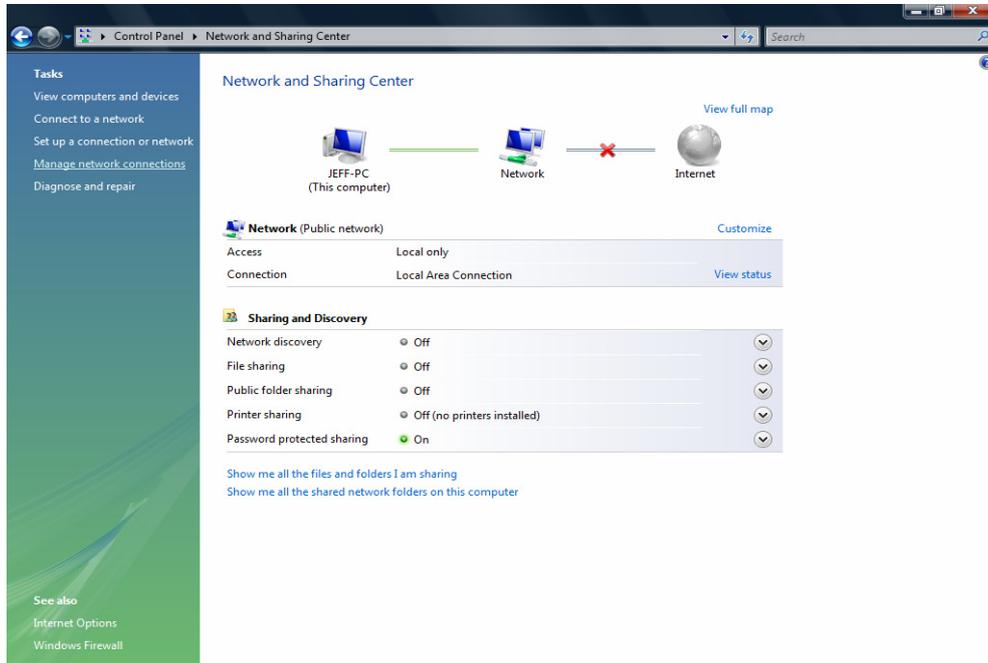


2. Single right click on **"Local Area connection"**, then click **"Properties"**.

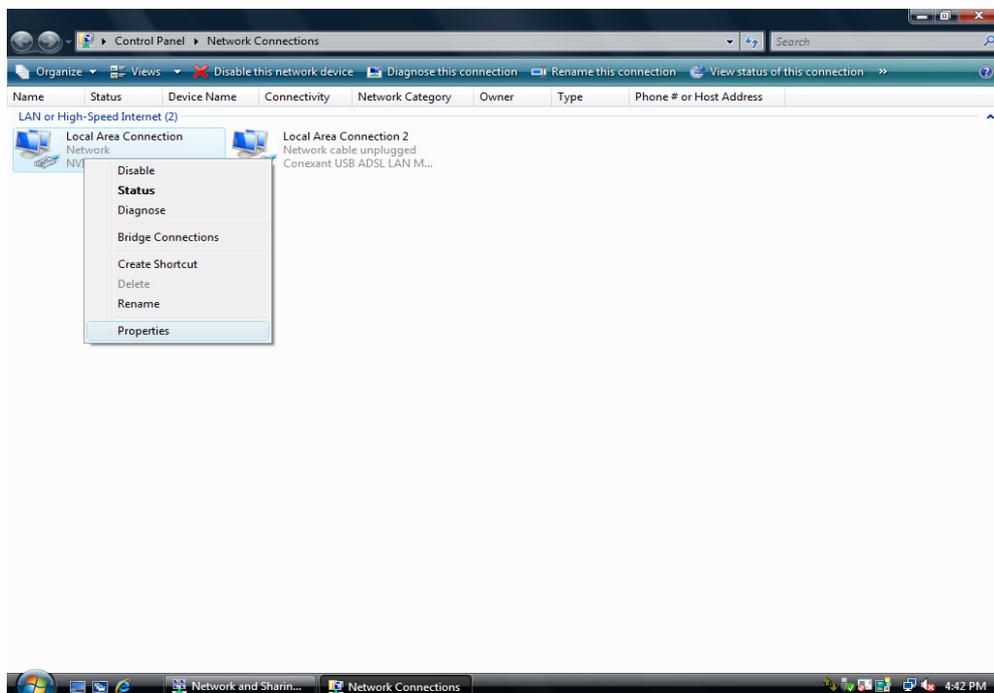


3. The screen will display the information **"User Account Control"** and click **"Continue"** to continue.

4. Double click on "Internet Protocol Version 4(TCP/IPv4)"

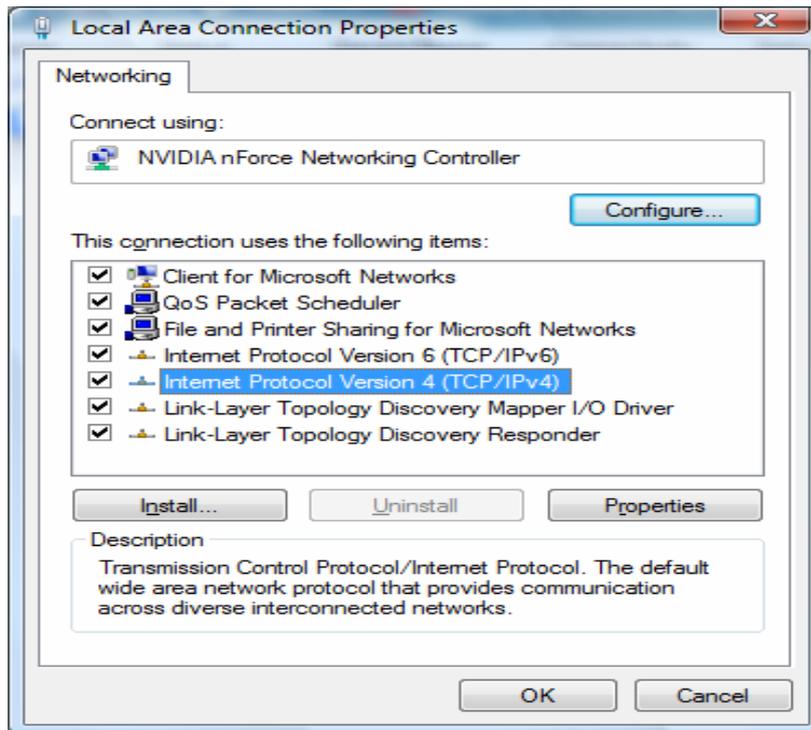

5. Check "Obtain an IP address automatically" and "Obtain DNS server address automatically" then click on "OK" to continue.

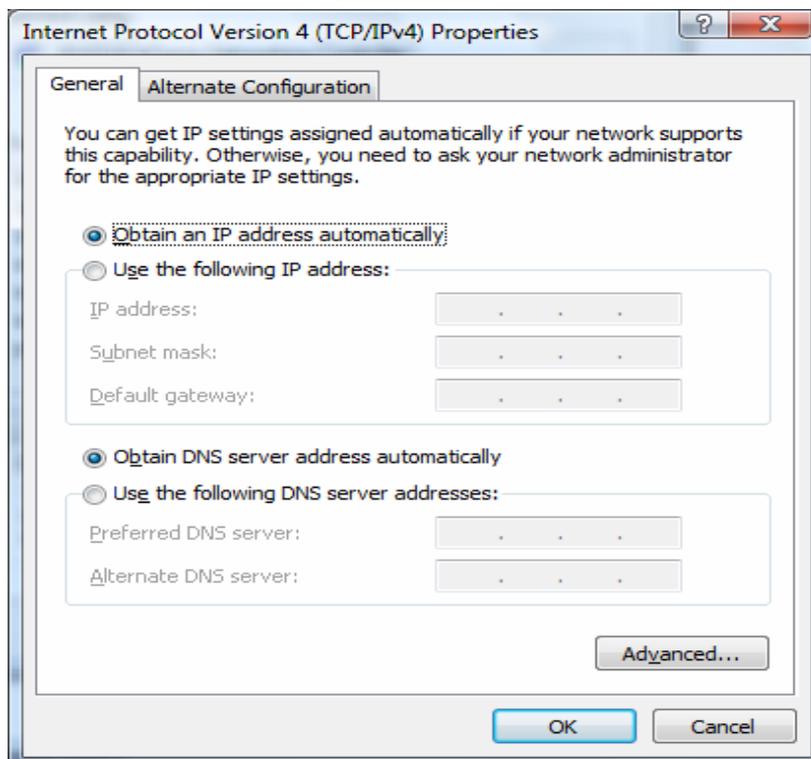

6. Click "Show icon in notification area when connected" (see screen image in 4. above) then Click on "OK" to complete the setup procedures.

## 6.0 WLAN ADSL2+ Router Configuration

1. Please insert the supplied CD into your CD-ROM drive.
2. The CD should auto-start, displaying the window shown in 3. below. If your CD does not start automatically go to Windows Explorer, Select your CD drive and double click “**setup.exe**”.
3. Please click “**Ethernet connection**” button to continue.



4. Enter the VPI, VCI, Username and Password your ISP(Internet Services Provider) provided, and choose your required configuration. Then press **“Save Configuration”**. Please wait for about 30 seconds.

**Wireless**  
@DSL2+ Router

VPI :  ( range : 0~255 )

VCI :  ( range : 32~65535 )

Choose your required configuration

PPPoE LLC

PPPoE Vc-Mux

1483 Bridged IP LLC

PPPoA LLC

PPPoA Vc-Mux

Password

Save configuration Back Exit

5. When the **“information”** screen pop-up, please click **“OK”** button to configure the WLAN setting, or click **“EXIT”** button to exit program.

**Wireless**  
@DSL2+ Router

VPI : 0 ( range : 0~255 )

VCI : 33 ( range : 32~65535 )

Choose your required configuration

PPPoE LLC

Username

user

Password

xxxxx

Information

Please click the "OK" button to configure the WLAN setting,  
or click the "EXIT" button to exit program

OK EXIT

Save configuration Back Exit

6. Please enter the SSID and wireless channel if you want to change (the default setting SSID=RT2561\_6, Channel=6). Choose the Authentication type if necessary, as Disable/ WEP-64bits/ WEP-128bits/ WPA-PSK and WPA2-PSK. For example, you choose the WEP 64bits type and save the authentication keys in key 1, displaying the screen shown in 7. below.




**Wireless**  
**@DSL2+ Router**

SSID :

Channel :  ( range : 0~13, 0:auto )

Authentication type :   
Disable  
WEP-64Bits  
WEP-128Bits  
WPA-PSK  
WPA2-PSK


7. Please click on “**Save configuration**” button. When the procedure is completed, the program will exit.

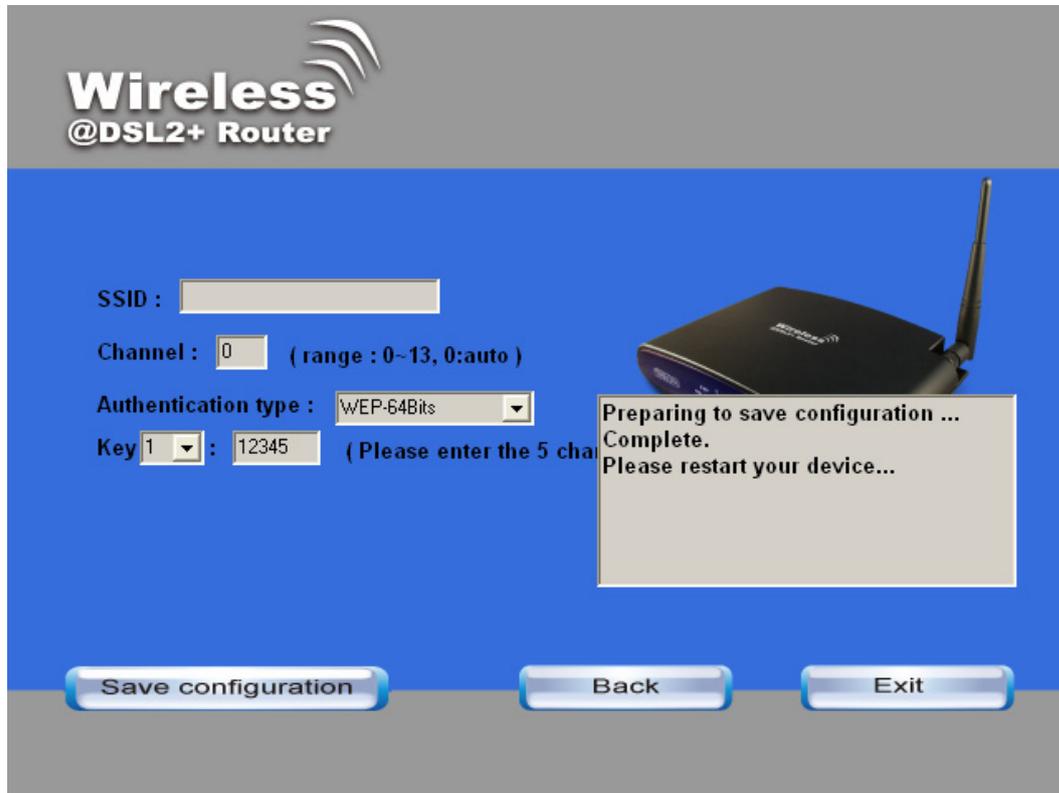


## 6.1 Connect Wirelessly

For easy installation it is saved to keep the settings. You can later change the wireless settings via the wireless configuration menu. (see user manual on the CD – Chapter 8 and other)


1. Double click on the wireless icon on your computer and search for the wireless network that you enter SSID name.

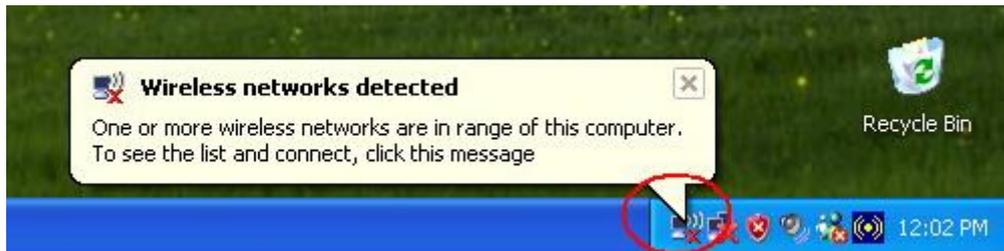

2. Click on the wireless network that you enter SSID name to connect

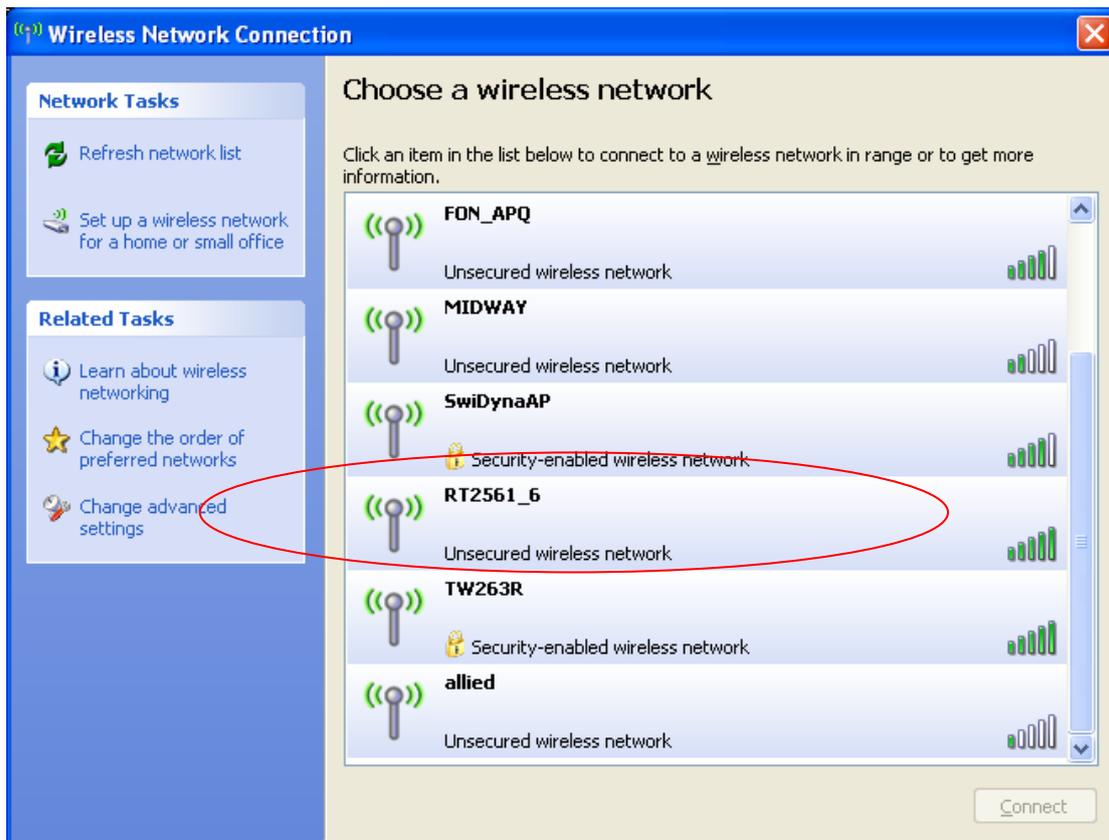

3. Enter the network key that belongs to your authentication type and key. You can later change this network key via the wireless configuration menu. (see user manual on the CD – Chapter 8 and other)

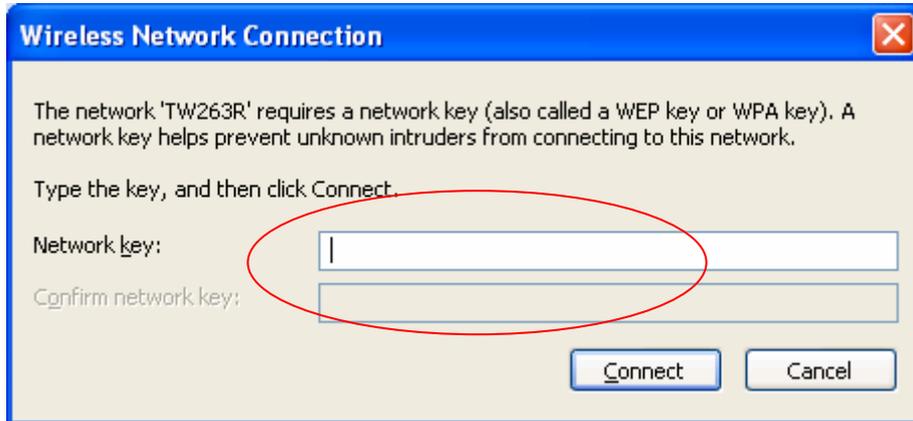

4. Click on “**Connect**” or Apply



Now, the WLAN ADSL2+ Router has been configured, and able to connect to ISP/ Website.

# 7.0 Technology Glossary

## **10Base-T**

An adaptation of the Ethernet standard for Local Area Network (LAN). 10Base-T uses a twisted pair cable with maximum length of 100 meters.

## **AAL**

ATM Adaptation Layer that defines the rules governing segmentation and reassembly of data into cells. Different AAL types are suited to different traffic classes.

## **Address mask**

A bit mask used to select bits from an Internet address for subnet addressing. The mask is 32 bits long and selects the network portion of the Internet address and one or more bits of the local portion. Sometimes called subnet mask.

## **ADSL**

Asymmetric Digital Subscriber Line, as its name showing, is an asymmetrical data transmission technology with high traffic rate downstream and low traffic rate upstream. ADSL technology satisfies the bandwidth requirement of applications, which demand "asymmetric" traffic, such as web surfing, file download and Video-on-demand (VOD).

## **ATM**

Asynchronous Transfer Mode is a layer 2 protocol supporting high-speed asynchronous data with advanced traffic management and quality of service features.

## **bps**

Bits per second. A standard measurement of digital transmission speeds.

## **Bridge**

A device that connects two or more physical networks and forwards packets between them. Bridges can usually be made to filter packets, that is, to forward only certain traffic. Related devices are: repeaters which simply forward electrical signals from one cable to the other, and full-fledged routers which make routing decisions based on several criteria.

## **CPE**

Customer Premises Equipment, such as ADSL router, USB modem.

## **DHCP**

Dynamic Host Configuration Protocol. Used for assigning dynamic IP address to devices on a network. Used by ISPs for dialup users.

**DNS**

Domain Name Server, translates domain names into IP addresses to help user recognize and remember. However, the Internet actually runs on numbered IP addresses, DNS servers needs to translate domain names back to their respective IP addresses.

**DSL**

Digital Line Subscriber (DSL) technology provides high-speed access over twisted copper pair for connection to the Internet, LAN interfaces, and to broadband services such as video-on-demand, distance learning, and video conferencing.

**FTP**

File Transfer Protocol. The Internet protocol (and program) used to transfer files between hosts.

**IPoA (RFC 1577)**

Classical IP and ARP over ATM. Considers ATM configured as a Logic IP Sub-network(LIS) to replace Ethernet local LAN segments.

**ISP**

Internet service provider. A company that allows home and corporate users to connect to the Internet.

**LAN**

Local area network. A limited distance (typically under a few kilometers or a couple of miles) high-speed network (typically 4 to 100 Mbps) that supports many computers.

**MAC**

Media Access Control Layer. A sub-layer of the Data Link Layer (Layer 2) of the ISO OSI Model responsible for media control.

**MTU**

Maximum Transmission Unit

**NAT**

Network Address Translator as defined by RFC 1631. Enables a LAN to use one set of IP address for internal traffic. A NAT box located where the LAN meets the Internet provides the necessary IP address translation. This helps provide a sort of firewall and allow for a wider address range to be used internally without danger of conflict.

**PPP**

Point-to-Point-Protocol. The successor to SLIP, PPP provides router-to-router and host-to-network connections over both synchronous and asynchronous circuits.

**PPPoA (RFC 2364)**

The Point-to-Point Protocol (PPP) provides a standard method for transporting multi-protocol datagrams over point-to-point links. This document describes the use of ATM Adaptation Layer 5 (AAL5) for framing PPP encapsulated packets.

**PPPoE (RFC 2516)**

This document describes how to build PPP sessions and encapsulate PPP packets over Ethernet. PPP over Ethernet (PPPoE) provides the ability to connect a network of hosts over a simple bridging access device to a remote Access Concentrator.

**PVC**

Permanent Virtual Circuit. Connection-oriented permanent leased line circuit between end-stations on a network over a separate ATM circuit.

**RFC**

Request for Comments. The document series, begun in 1969, which describes the Internet suite of protocols and related experiments. Not all RFCs describe Internet standards, but all Internet standards are written up as RFCs

**RFC 1483**

Multi-protocol encapsulation over AAL-5. Two encapsulation methods for carrying network interconnect traffic over ATM AAL-5. The first method allows multiplexing of multiple protocols over a single ATM virtual circuit. The protocol of a carried PDU is identified by prefixing the PDU by an IEEE 802.2 Logical Link Control (LLC) header. This method is in the following called "LLC Encapsulation". The second method does higher-layer protocol multiplexing implicitly by ATM Virtual Circuits (VCs). It is in the following called "VC Based Multiplexing".

**Router**

A system responsible for making decisions about which of several paths network (or Internet) traffic will follow. To do this, it uses a routing protocol to gain information about the network and algorithms to choose the best route based on several criteria known as "routing metrics".

**Spanning Tree**

Spanning-Tree Bridge Protocol (STP). Part of an IEEE standard. A mechanism for detecting and preventing loops from occurring in a multi-bridged environment. When bridges connect three or more LAN segments, a loop can occur. Because a bridge forwards all packets that are not recognized as being local, some packets can circulate for long periods of time, eventually degrading system performance. This algorithm ensures only one path connects any pair of stations, selecting one bridge as the 'root' bridge, with the highest priority one as identifier, from which all paths should radiate.

**TELNET**

The virtual terminal protocol in the Internet suite of protocols. Allows users of one host to log into a remote host and act as normal terminal users of that host.

**VCI**

Virtual Circuit Identifier. Part of the ATM cell header, a VCI is a tag indicating the channel over which a cell will travel. The VCI of a cell can be changed as it moves between switches via Signaling.

**VPI**

Virtual Path Identifier. Part of the ATM cell header, a VPI is a pipe for a number of Virtual Circuits.

**WAN**

Wide area network. A data communications network that spans any distance and is usually provided by a public carrier (such as a telephone company or service provider)

## 8.0 Introduction of the Web Configuration

### 8.1 Web Configuration Overview

The embedded web configuration allows you to manage WLAN ADSL2+ Router from anywhere through a browser such as Microsoft Internet Explorer or Netscape Navigator. Use Internet Explorer 6.0 and later or Netscape Navigator 7.0 and later versions with JavaScript enabled. It is recommended that you set your screen resolution to 1024 by 768 pixels

### 8.2 Accessing WLAN ADSL2+ Router Web Configuration

**Step 1.** Make sure your WLAN ADSL2+ Router is properly connected

**Step 2.** Prepare your computer/computer network to connect to the Router

**Step 3.** Launch your web browser.

**Step 4.** Type "192.168.1.1" .

**Step 5.** An Enter Network Password window displays. Enter the user name ("**admin**" is the default), password ("**1234**" is the default) and click OK.



**Step 6.** You should now see the Site Map screen.


**TRENDCHIP** ADSL Router

Status	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help																
	Device Info		System Log	Statistics																			
<b>Device Information</b>	Firmware Version : 2.7.0.22(RUE0.B1)3.5.6.0 MAC Address : 00:13:33:00:ea:a9																						
<b>LAN</b>	IP Address : 192.168.1.1 Subnet Mask : 255.255.255.0 DHCP Server : Enabled																						
<b>WAN</b>	Virtual Circuit : <input type="text" value="PVC0"/> <input type="button" value="v"/> Status : Not Connected Connection Type : PPPoE IP Address : 0.0.0.0 Subnet Mask : 0.0.0.0 Default Gateway : Node1 DNS Server : 0.0.0.0																						
<b>ADSL</b>	ADSL Firmware Ver : FwVer:3.5.6.0_A_TC3084 HwVer:T14.F7_0.0 Line State : Showtime Modulation : ADSL2 PLUS Annex Mode : ANNEX_A																						
							<table border="1"> <thead> <tr> <th></th> <th>Downstream</th> <th>Upstream</th> <th></th> </tr> </thead> <tbody> <tr> <td>SNR Margin :</td> <td>6.6</td> <td>6.3</td> <td>db</td> </tr> <tr> <td>Line Attenuation :</td> <td>2.0</td> <td>2.3</td> <td>db</td> </tr> <tr> <td>Data Rate :</td> <td>24281</td> <td>1000</td> <td>kbps</td> </tr> </tbody> </table>		Downstream	Upstream		SNR Margin :	6.6	6.3	db	Line Attenuation :	2.0	2.3	db	Data Rate :	24281	1000	kbps
	Downstream	Upstream																					
SNR Margin :	6.6	6.3	db																				
Line Attenuation :	2.0	2.3	db																				
Data Rate :	24281	1000	kbps																				

## Quick Start Guide

You can use "**Quick Start**" to setup the router as follows, and the router will connect to the Internet via ADSL line.

Click "**Quick Start**" to get into the quick setup procedures.

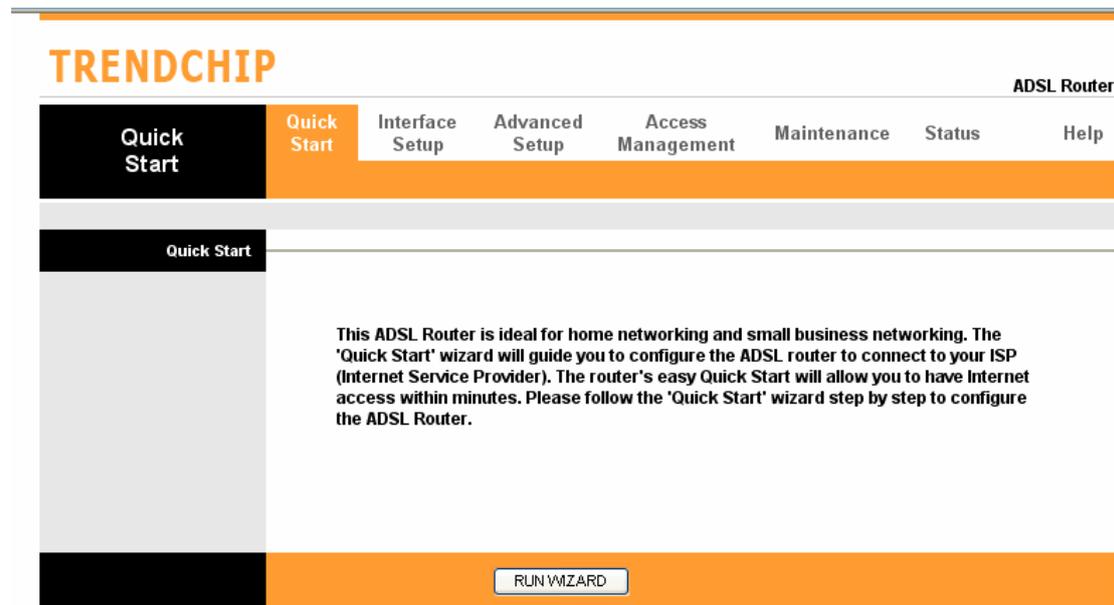

**TRENDCHIP** ADSL Router


Quick Start   Quick Start   Interface Setup   Advanced Setup   Access Management   Maintenance   Status   Help

Quick Start

This ADSL Router is ideal for home networking and small business networking. The 'Quick Start' wizard will guide you to configure the ADSL router to connect to your ISP (Internet Service Provider). The router's easy Quick Start will allow you to have Internet access within minutes. Please follow the 'Quick Start' wizard step by step to configure the ADSL Router.

RUN WIZARD

Click "**RUN WIZARD**" to start up this procedure.

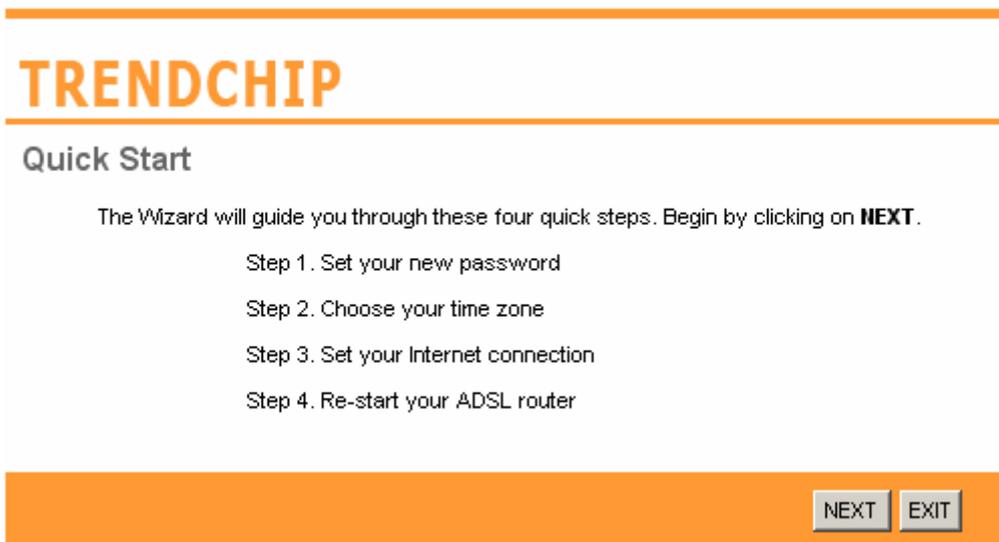

**TRENDCHIP**

### Quick Start

The Wizard will guide you through these four quick steps. Begin by clicking on **NEXT**.

- Step 1. Set your new password
- Step 2. Choose your time zone
- Step 3. Set your Internet connection
- Step 4. Re-start your ADSL router

NEXT   EXIT

**Step 1** – Please click "Next" to setup your new administrator's password.

---

# TRENDCHIP

---

## Quick Start - Password

You may change the **admin** account password by entering in a new password. Click **NEXT** to continue.

New Password :

Confirmed Password :

BACK

NEXT

EXIT

**Step 2** – Please click "Next" to setup your time zone.

---

# TRENDCHIP

---

## Quick Start - Time Zone

Select the appropriate time zone for your location and click **NEXT** to continue.

(GMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London

BACK

NEXT

EXIT

**Step 3** – Please click "**Next**" to setup your Internet connection type. You can have this information from your Internet Service Provider.

---

## TRENDCHIP

---

### Quick Start - ISP Connection Type

Select the Internet connection type to connect to your ISP. Click **NEXT** to continue.

- Dynamic IP Address      Choose this option to obtain a IP address automatically from your ISP.
- Static IP Address      Choose this option to set static IP information provided to you by your ISP.
- PPPoE/PPPoA      Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users)
- Bridge Mode      Choose this option if your ISP uses Bridge Mode.

BACK   NEXT   EXIT

**Step 4** - Enter the connection information provided by your ISP and click "**Next**".

---

## TRENDCHIP

---

### Quick Start - PPPoE/PPPoA

Enter the PPPoE/PPPoA information provided to you by your ISP. Click **NEXT** to continue.

Username:

Password:

VPI:  (0~255)

VCI:  (1~65535)

Connection Type:  ▼

BACK   NEXT   EXIT

**Step 5** - Enter the connection information provided by your ISP and click "**Next**".

---

## TRENDCHIP

---

### Quick Start Complete !!

The Setup Wizard has completed. Click on **BACK** to modify changes or mistakes. Click **NEXT** to save the current settings.

BACK NEXT EXIT

**Step 6** – Please click "**CLOSE**" to finish Quick Start.

---

## TRENDCHIP

---

### Quick Start Completed !!

Saved Changes.

CLOSE

## System Time

Go to **Maintenance->Time Zone** and select system time as you wish.

The screenshot displays the TRENDCHIP ADSL Router web interface. At the top, the brand name 'TRENDCHIP' is on the left and 'ADSL Router' is on the right. Below this is a navigation menu with tabs for 'Quick Start', 'Interface Setup', 'Advanced Setup', 'Access Management', 'Maintenance', 'Status', and 'Help'. The 'Maintenance' tab is selected, and a sub-menu below it shows 'Administration', 'Time Zone', 'Firmware', 'SysRestart', and 'Diagnostics'. The 'Time Zone' sub-tab is active. The main content area shows 'Current Date/Time : 01/01/2000 00:12:14'. Under the 'Time Synchronization' section, there are three radio buttons: 'NTP Server automatically' (selected), 'PC's Clock', and 'Manually'. Below these is a 'Time Zone' dropdown menu set to '(GMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London'. There are also radio buttons for 'Daylight Saving' set to 'Disabled'. At the bottom, the 'NTP Server Address' is set to '0.0.0.0' with '(0.0.0.0: Default Value)' in parentheses. 'SAVE' and 'CANCEL' buttons are at the bottom right.

Connecting to a Simple Network Time Protocol (SNTP) server allows the router to synchronize the system clock to the global Internet.

The synchronized clock in the router is used to record the security log and control client filtering.

## Admin Setting

Go to **Maintenance-> Administration** to set a new username and password to restrict management access to the router.

The default is **admin (Username)** and **1234 (Password)**

---

# TRENDCHIP

ADSL Router

<b>Maintenance</b>	Quick Start	Interface Setup	Advanced Setup	Access Management	<b>Maintenance</b>	Status	Help
	Administration	Time Zone	Firmware	SysRestart	Diagnostics		

<b>Administrator</b>	
	Username : <b>admin</b>
	New Password : <input type="password"/>
	Confirm Password : <input type="password"/>
	<input type="button" value="SAVE"/> <input type="button" value="CANCEL"/>

## Firmware Update

Go to **Maintenance -> Firmware** to upgrade the firmware. The new firmware for your router can improve functionality and performance.

Enter the path and name of the upgrade file then click the **UPGRADE** button below. You will be prompted to confirm the upgrade.

The screenshot shows the TrendChip ADSL Router web interface. At the top, the 'TRENDCHIP' logo is on the left and 'ADSL Router' is on the right. Below the logo is a navigation menu with 'Maintenance' selected. Under 'Maintenance', there are sub-menus: 'Administration', 'Time Zone', 'Firmware', 'SysRestart', and 'Diagnostics'. The 'Firmware' sub-menu is active, showing the 'Firmware/Romfile Upgrade' page. The page displays the current firmware version as '2.9.7.99(UE0.B1C)3.3.2.5'. There are two input fields for 'New Firmware Location' and 'New Romfile Location', each with a 'Browse...' button. A 'Romfile Backup' button labeled 'ROMFILE SAVE' is also present. A status message with a red warning icon states: 'It might take several minutes, don't power off it during upgrading. Device will restart after the upgrade.' At the bottom, there is a large orange 'UPGRADE' button.

Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
Administration	Time Zone	Firmware	SysRestart	Diagnostics		

Current Firmware Version : 2.9.7.99(UE0.B1C)3.3.2.5

New Firmware Location :  Browse...

New Romfile Location :  Browse...

Romfile Backup : ROMFILE SAVE

Status :  
ⓘ It might take several minutes, don't power off it during upgrading. Device will restart after the upgrade.

UPGRADE

## System Log

Go to **Status -> System Log** and you can see the system log file. Click **“Save Log”** to save system log file.

**TRENDCHIP** ADSL Router

<b>Status</b>	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	<b>Status</b>	Help
	Device Info	System Log	Statistics				

**System Log**

```
1/1/2000 0:0:1> MPOA Link Down
1/1/2000 0:0:1> LAN promiscuous mode <1>
1/1/2000 0:0:1> Last errorlog repeat 1 Times
1/1/2000 0:0:1> SNMP TRAP 0: cold start
1/1/2000 0:0:1> main: init completed
1/1/2000 0:0:3> SNMP TRAP 3: link up
1/1/2000 0:0:3> adjtime task pause 1 day
1/1/2000 0:11:0> No DNS server available
1/1/2000 0:11:0> adjTimeTask fail: wrong domain name
1/1/2000 0:11:0> No DNS server available
1/1/2000 0:11:0> Last errorlog repeat 10 Times
1/1/2000 0:11:0> adjTimeTask fail: no server available
1/1/2000 0:11:0> adjtime task pause 60 seconds
1/1/2000 0:12:0> No DNS server available
1/1/2000 0:12:0> adjTimeTask fail: wrong domain name
1/1/2000 0:12:0> No DNS server available
1/1/2000 0:12:0> Last errorlog repeat 10 Times
1/1/2000 0:12:0> adjTimeTask fail: no server available
1/1/2000 0:12:0> adjtime task pause 60 seconds
1/1/2000 0:13:0> No DNS server available
1/1/2000 0:13:0> adjTimeTask fail: wrong domain name
1/1/2000 0:13:0> No DNS server available
1/1/2000 0:13:0> Last errorlog repeat 10 Times
1/1/2000 0:13:0> adjTimeTask fail: no server available
1/1/2000 0:13:0> adjtime task pause 1 day
```

## System Reset

Go to **Maintenance** -> **SysRestart** to restart your system. In the event that the router stops responding correctly or in some way stops functioning, you can perform a reset. Your settings will not be changed. To perform the reset, select "**Current Setting**" and click on the "**RESTART**" button below. The router will reboot with current setting. Select "**Factory Default Setting**" and click on the "**RESTART**" button, the router will reboot with factory default setting.

---

# TRENDCHIP

ADSL Router

Maintenance	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	Administration	Time Zone	Firmware	SysRestart	Diagnostics		
<b>System Restart</b>	System Restart with : <input checked="" type="radio"/> Current Settings <input type="radio"/> Factory Default Settings						
	<input type="button" value="RESTART"/>						

## ADSL Status

Go to **Status->Device Info**. The 'ADSL Line Status' enables you to check the status of your ADSL connection including how fast data is being transferred.

**TRENDCHIP** ADSL Router

**Status** | Quick Start | Interface Setup | Advanced Setup | Access Management | Maintenance | **Status** | Help

Device Info | System Log | Statistics

---

**Device Information**

Firmware Version : 2.7.0.22(RUE0.B1)3.5.6.0  
MAC Address : 00:13:33:00:ea:a9

---

**LAN**

IP Address : 192.168.1.1  
Subnet Mask : 255.255.255.0  
DHCP Server : Enabled

---

**WAN**

Virtual Circuit :    
Status : Not Connected  
Connection Type : PPPoE  
IP Address : 0.0.0.0  
Subnet Mask : 0.0.0.0  
Default Gateway : Node1  
DNS Server : 0.0.0.0

---

**ADSL**

ADSL Firmware Ver : FwVer:3.5.6.0\_A\_TC3084 HwVer:T14.F7\_0.0  
Line State : Showtime  
Modulation : ADSL2 PLUS  
Annex Mode : ANNEX\_A

	Downstream	Upstream	
SNR Margin :	6.6	6.3	db
Line Attenuation :	2.0	2.3	db
Data Rate :	24281	1000	kbps

## ADSL Statistics

Go to **Status-> Statistics** and select **ADSL** interface. You can see the traffic Statistics of ADSL interface.

---

# TRENDCHIP

ADSL Router

<b>Status</b>	<b>Quick Start</b>	<b>Interface Setup</b>	<b>Advanced Setup</b>	<b>Access Management</b>	<b>Maintenance</b>	<b>Status</b>	<b>Help</b>
	Device Info	System Log	Statistics				

---

### Traffic Statistics

Interface :  Ethernet  ADSL

Transmit Statistics		Receive Statistics	
Transmit total PDUs	0	Receive total PDUs	0
Transmit total Error Counts	0	Receive total Error Counts	0

---

## VC Configuration

Go to **Interface Setup -> Internet**. To add or delete ADSL VC configuration, these information provide by ISP.

### TRENDCHIP ADSL Router

InterfaceQuick StartInterface SetupAdvanced SetupAccess ManagementMaintenanceStatusHelp

Internet

LAN

**ATM VC**

Virtual Circuit: PVC0 PVCs Summary

Status:  Activated  Deactivated

VPI: 0 (range: 0~255)

VCI: 33 (range: 1~65535)

---

ATM QoS: UBR

PCR: 0 cells/second

SCR: 0 cells/second

MBS: 0 cells

---

ISP:  Dynamic IP Address

Static IP Address

PPPoA/PPPoE

Bridge Mode

## WAN Configuration

Go to **Interface Setup -> Internet**. The router can be connected to your service provider in any of the following ways.

**Dynamic IP Address:** Obtain an IP address automatically from your service provider.

**Static IP Address:** Uses a static IP address. Your service provider gives a static IP address to access Internet services.

**PPPoE:** PPP over Ethernet is a common connection method used for xDSL

**PPPoA:** PPP over ATM is a common connection method used for xDSL

**Bridge:** Bridge mode is a common connection method used for xDSL modem.

<b>Encapsulation</b>	ISP : <input type="radio"/> Dynamic IP Address <input type="radio"/> Static IP Address <input checked="" type="radio"/> PPPoA,PPPoE <input type="radio"/> Bridge Mode
<b>PPPoE/PPPoA</b>	Username : <input type="text"/> Password : <input type="text"/> Encapsulation : PPPoE LLC <input type="button" value="v"/> Bridge Interface : <input type="radio"/> Activated <input checked="" type="radio"/> Deactivated
<b>Connection Setting</b>	Connection : <input checked="" type="radio"/> Always On (Recommended) <input type="radio"/> Connect On-Demand (Close if idle for <input type="text" value="0"/> minutes) TCP MSS Option : TCP MSS(0:default) <input type="text" value="0"/> bytes
<b>IP Address</b>	Get IP Address : <input type="radio"/> Static <input checked="" type="radio"/> Dynamic Static IP Address : <input type="text" value="0.0.0.0"/> IP Subnet Mask : <input type="text" value="0.0.0.0"/> Gateway : <input type="text" value="0.0.0.0"/> NAT : Enable <input type="button" value="v"/> Default Route : <input checked="" type="radio"/> Yes <input type="radio"/> No TCP MTU Option : TCP MTU(0:default) <input type="text" value="0"/> bytes Dynamic Route : RIP1 <input type="button" value="v"/> Direction None <input type="button" value="v"/> Multicast : Disabled <input type="button" value="v"/>
	<input type="button" value="SAVE"/>

## WAN Status

Go to **Status** -> **Device Info** and select **the Virtual Circuit** to see the connection status.

# RENDECHIP

Status	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status
	Device Info	System Log	Statistics			
<b>Device Information</b>	Firmware Version : 2.7.0.22(RUE0.B1)3.5.6.0 MAC Address : 00:13:33:00:ea:a9					
<b>LAN</b>	IP Address : 192.168.1.1 Subnet Mask : 255.255.255.0 DHCP Server : Enabled					
<b>WAN</b>	Virtual Circuit : PVC0 <input type="button" value="v"/> Status : Not Connected Connection Type : PPPoE IP Address : 0.0.0.0 Subnet Mask : 0.0.0.0 Default Gateway : Node1 DNS Server : 0.0.0.0					
<b>ADSL</b>	ADSL Firmware Ver : FwVer:3.5.6.0_A_TC3084 HwVer:T14.F7_0.0 Line State : Showtime Modulation : ADSL2 PLUS Annex Mode : ANNEX_A					

## DNS

Go to **Interface -> LAN** to enable DHCP server. Then you can set DNS server for the router. A Domain Name system (DNS) server is like an index of IP addresses and Web addresses. If you type a Web address into your browser, a DNS server will find that name in its index and find the matching IP address.

Most ISPs provide a DNS server for speed and convenience. Since your Service Provider may connect to the Internet with dynamic IP settings, it is likely that the DNS server IP addresses are also provided dynamically. However, if there is a DNS server that you would rather use, you need to specify the IP address below.

**TRENDCHIP** ADSL Router

Interface	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	Internet	LAN	Wireless				
<b>Router Local IP</b>	IP Address: <input type="text" value="192.168.1.1"/> IP Subnet Mask: <input type="text" value="255.255.255.0"/> Dynamic Route: <input type="text" value="RIP2-B"/> Direction: <input type="text" value="None"/> Multicast: <input type="text" value="Disabled"/>						
<b>DHCP</b>	DHCP: <input type="radio"/> Disabled <input checked="" type="radio"/> Enabled <input type="radio"/> Relay						
<b>DHCP Server</b>	Starting IP Address: <input type="text" value="192.168.1.5"/> IP Pool Count: <input type="text" value="32"/> Lease Time: <input type="text" value="259200"/> seconds (0 sets to default value of 259200)						
<b>DNS</b>	DNS Relay: <input type="text" value="Use Auto Discovered DNS Server Only"/> Primary DNS Server: <input type="text" value="N/A"/> Secondary DNS Server: <input type="text" value="N/A"/>						
<input type="button" value="SAVE"/> <input type="button" value="CANCEL"/>							

## DDNS

Go to **Access Management** -> **DDNS** to setup your DDNS parameters. Dynamic DNS allows you to update your dynamic IP address with one or many dynamic DNS services. So anyone can access your FTP or Web service on your computer using DNS-like address.

## TRENDCHIP

Access Management	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance
	ACL	IP Filter	SNMP	UPnP	DDNS

Dynamic DNS
<p>Dynamic DNS : <input type="radio"/> Activated <input checked="" type="radio"/> Deactivated</p> <p>Service Provider : www.dyndns.org</p> <p>My Host Name : <input type="text"/></p> <p>E-mail Address : <input type="text"/></p> <p>Username : <input type="text"/></p> <p>Password : <input type="text"/></p> <p>Wildcard support : <input type="radio"/> Yes <input checked="" type="radio"/> No</p> <p><input type="button" value="SAVE"/></p>

## LAN Configuration

Go to Interface Setup -> LAN. The 'LAN Settings' option enables you to configure the LAN port.

If the DHCP Relay is selected, the DHCP requests from local PCs are forward to the DHCP server runs on WAN side. To have this function working properly, disable the NAT to run on router mode only, disable the DHCP server on the LAN port, and make sure the routing table has the correct routing entry.

**TRENDCHIP** ADSL Router

Interface	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	Internet	LAN	Wireless				

---

<b>Router Local IP</b>	IP Address: <input type="text" value="192.168.1.1"/>
	IP Subnet Mask: <input type="text" value="255.255.255.0"/>
	Dynamic Route: <input type="text" value="RIP2-B"/> Direction: <input type="text" value="None"/>
	Multicast: <input type="text" value="Disabled"/>

---

<b>DHCP</b>	DHCP: <input type="radio"/> Disabled <input checked="" type="radio"/> Enabled <input type="radio"/> Relay
-------------	---

---

<b>DHCP Server</b>	Starting IP Address: <input type="text" value="192.168.1.5"/>
	IP Pool Count: <input type="text" value="32"/>
	Lease Time: <input type="text" value="259200"/> seconds (0 sets to default value of 259200)

---

<b>DNS</b>	DNS Relay: <input type="text" value="Use Auto Discovered DNS Server Only"/>
	Primary DNS Server: <input type="text" value="N/A"/>
	Secondary DNS Server: <input type="text" value="N/A"/>

---

## Wireless Settings

Go to **Interface -> Wireless** to setup the wireless parameters.

### SSID

The identifier for the network. You can change the SSID. Only devices with the same SSID can interconnect.

### Channel ID

The channel number is used for wireless networking. The channel setting of the wireless devices within a network should be the same.

Interface	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status
	Internet	LAN	Wireless			
<b>Wireless LAN</b>	Access Point : <input checked="" type="radio"/> Activated <input type="radio"/> Deactivated SSID : <input type="text" value="RT2561_6"/> Broadcast SSID : <input checked="" type="radio"/> Yes <input type="radio"/> No Channel ID : <input type="text" value="Channel06 2437MHz"/> Authentication Type : <input type="text" value="Disabled"/>					
<b>Advanced Setting</b>	Beacon Interval : <input type="text" value="100"/> (range: 20~1000) RTS/CTS Threshold : <input type="text" value="2347"/> (range: 1500~2347) Fragmentation Threshold : <input type="text" value="2346"/> (range: 256~2346, even numbers only) DTIM : <input type="text" value="3"/> (range: 1~255) 802.11 b/g : <input type="text" value="802.11b+g"/>					
<b>Wireless MAC Address Filter</b>	Active : <input type="radio"/> Activated <input checked="" type="radio"/> Deactivated Action : <input type="text" value="Allow Association"/> the follow Wireless LAN station(s) association. Mac Address #1 : <input type="text" value="00:00:00:00:00:00"/> Mac Address #2 : <input type="text" value="00:00:00:00:00:00"/> Mac Address #3 : <input type="text" value="00:00:00:00:00:00"/> Mac Address #4 : <input type="text" value="00:00:00:00:00:00"/> Mac Address #5 : <input type="text" value="00:00:00:00:00:00"/> Mac Address #6 : <input type="text" value="00:00:00:00:00:00"/> Mac Address #7 : <input type="text" value="00:00:00:00:00:00"/> Mac Address #8 : <input type="text" value="00:00:00:00:00:00"/>					
<input type="button" value="SAVE"/> <input type="button" value="CANCEL"/>						

## Wireless Security

Go to **Interface** -> **Wireless** to setup the wireless security.

The Authentication type supports “shared key WEP 64bits”, “shared key WEP 128bits”, “WPA-PSK”.

Interface	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	Internet	LAN	Wireless				
<b>Wireless LAN</b>							
Access Point : <input checked="" type="radio"/> Activated <input type="radio"/> Deactivated							
SSID : <input type="text" value="RT2561_6"/>							
Broadcast SSID : <input checked="" type="radio"/> Yes <input type="radio"/> No							
Channel ID : <input type="text" value="Channel06 2437MHz"/>							
Authentication Type : <input type="text" value="WEP-128Bits"/>							
<b>WEP</b>							
WEP 64-bits Please enter exactly 5 characters or 10 hexadecimal digits ("0-9", "A-F") preceded by 0x for each Key(1-4).							
WEP 128-bits Please enter exactly 13 characters or 26 hexadecimal digits ("0-9", "A-F") preceded by 0x for each Key(1-4).							
<input checked="" type="radio"/> Key #1 : <input type="text" value="0x00000000000000000000000000000000"/>							
<input type="radio"/> Key #2 : <input type="text" value="0x00000000000000000000000000000000"/>							
<input type="radio"/> Key #3 : <input type="text" value="0x00000000000000000000000000000000"/>							
<input type="radio"/> Key #4 : <input type="text" value="0x00000000000000000000000000000000"/>							

Interface	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status
	Internet	LAN	Wireless			
<b>Wireless LAN</b>						
Access Point : <input checked="" type="radio"/> Activated <input type="radio"/> Deactivated						
SSID : <input type="text" value="RT2561_6"/>						
Broadcast SSID : <input checked="" type="radio"/> Yes <input type="radio"/> No						
Channel ID : <input type="text" value="Channel06 2437MHz"/>						
Authentication Type : <input type="text" value="WPA-PSK"/>						
<b>WPA-PSK</b>						
Encryption : <input type="text" value="TKIP"/>						
Pre-Shared Key : <input type="text" value=""/> (8~64 characters)						

## IP Filtering

Go to **Access Management -> IP Filtering** to block some packets form WAN.The router provides extensive firewall protection by restricting connection parameters to limit the risk of intrusion and defending against a wide array of common hacker attacks. The user can set different IP filter rules of a given protocol(TCP, UDP or ICMP) and a specific direction(incoming, outgoing, or both) to filter the packets.

TRENDCHIP
ADSL Router

Access Management
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

ACL
Filter
SNMP
UPnP
DDNS

Filter

Filter Type

Filter Type Selection : IP / MAC Filter

IP / MAC Filter Set Editing

IP / MAC Filter Set Index : 1

Interface : PVC0

Direction : Both

IP / MAC Filter Rule Editing

IP / MAC Filter Rule Index : 1

Rule Type : IP

Active :  Yes  No

Source IP Address :  (0.0.0.0 means Don't care)

Subnet Mask :

Port Number :  (0 means Don't care)

Destination IP Address :  (0.0.0.0 means Don't care)

Subnet Mask :

Port Number :  (0 means Don't care)

Protocol : TCP

Rule Unmatched : Forward

IP / MAC Filter Listing

IP / MAC Filter Set Index 1      Interface      -      Direction      -

#	Active	Src Address/Mask	Dest IP/Mask	Src Port	Dest Port	Protocol	Unmatched
1	-	-	-	-	-	-	-
2	-	-	-	-	-	-	-
3	-	-	-	-	-	-	-
4	-	-	-	-	-	-	-
5	-	-	-	-	-	-	-
6	-	-	-	-	-	-	-

SAVE
DELETE
CANCEL

## ACL Setting

Go to **Access Management** -> **ACL** to enable remote management. The user may remotely access the WLAN ADSL2+ Router once setting his IP as a Secure IP Address through selected applications. With the default IP 0.0.0.0, any client would be allowed to remotely access the WLAN ADSL2+ Router.

Access Management	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status
	ACL	IP Filter	SNMP	UPnP	DDNS	

---

Access Control Setup
ACL: <input type="radio"/> Activated <input checked="" type="radio"/> Deactivated

---

Access Control Editing
ACL Rule Index: <input type="text" value="1"/>
Active: <input type="radio"/> Yes <input checked="" type="radio"/> No
Secure IP Address: <input type="text" value="0.0.0.0"/> (0.0.0.0 means all IPs)
Application: <input type="text" value="Web"/>
Interface: <input type="text" value="Both"/>

---

Access Control Listing				
Index	Active	Secure IP Address	Application	Interface

---

<input type="button" value="SAVE"/>	<input type="button" value="DELETE"/>	<input type="button" value="CANCEL"/>
-------------------------------------	---------------------------------------	---------------------------------------

## NAT Setting

Go to **Advanced Setup->NAT** to setup the NAT features. Network Address Translation (NAT) allows multiple users at your local site to access the Internet through a single public IP address or multiple public IP addresses. NAT can also prevent hacker attacks by mapping local addresses to public addresses for key services such as the Web or FTP.

The screenshot shows the configuration page for NAT. The navigation menu at the top includes 'Advanced', 'Quick Start', 'Interface Setup', 'Advanced Setup', 'Access Management', and 'Maintenance'. Under 'Advanced Setup', there are sub-menus for 'Firewall', 'Routing', 'NAT', 'QoS', 'VLAN', and 'ADSL'. The 'NAT' sub-menu is selected. The main content area is titled 'NAT' and contains the following settings:

- Virtual Circuit: PVC0 (dropdown menu)
- NAT Status: Activated
- Number of IPs:  Single  Multiple
- [▶ DMZ](#)
- [▶ Virtual Server](#)

## Virtual Server

Go to **Advanced Setup** ->**NAT** -> **Virtual Server** to set virtual server as you need.(known as Port Mapping).You can configure the router as a virtual server so that remote users accessing services such as the Web or FTP at your local site via public IP addresses can be automatically redirected to local servers configured with private IP addresses. In other words, depending on the requested service (TCP/UDP port numbers), the router redirects the external service request to the appropriate server (located at another internal IP address). For some applications, you need to assign a set or a range of ports (example 4000-5000) to a specified local machine to route the packets. The router allows the user to configure the needed port mappings to suit such applications.

# TRENDCHIP

ADSL Router

Advanced	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	Routing	NAT	QoS	VLAN			

Virtual Server
Virtual Server for : Single IP Account
Rule Index : <input type="text" value="1"/>
Start Port Number : <input type="text" value="0"/>
End Port Number : <input type="text" value="0"/>
Local IP Address : <input type="text" value="0.0.0.0"/>

Virtual Server Listing			
Rule	Start Port	End Port	Local IP Address
1	0	0	0.0.0.0
2	0	0	0.0.0.0
3	0	0	0.0.0.0
4	0	0	0.0.0.0
5	0	0	0.0.0.0
6	0	0	0.0.0.0
7	0	0	0.0.0.0
8	0	0	0.0.0.0
9	0	0	0.0.0.0
10	0	0	0.0.0.0
11	0	0	0.0.0.0
12	0	0	0.0.0.0
13	0	0	0.0.0.0
14	0	0	0.0.0.0
15	0	0	0.0.0.0
16	0	0	0.0.0.0

<input type="button" value="SAVE"/>	<input type="button" value="DELETE"/>	<input type="button" value="BACK"/>	<input type="button" value="CANCEL"/>
-------------------------------------	---------------------------------------	-------------------------------------	---------------------------------------

## DMZ Setting

Go to **Advanced Setup** ->**NAT** -> **DMZ** to set DMZ parameters. If you have a local client PC that cannot run an Internet application properly from behind the NAT firewall, you can open the client up to unrestricted two-way Internet access by defining a virtual DMZ Host.

---

# TRENDCHIP

ADSL Router

<b>Advanced</b>	Quick Start	Interface Setup	<b>Advanced Setup</b>	Access Management	Maintenance	Status	Help
	Firewall	Routing	NAT	QoS	VLAN	ADSL	

---

<b>DMZ</b>	<p>DMZ setting for : Single IP Account</p> <p>DMZ : <input type="radio"/> Enabled <input checked="" type="radio"/> Disabled</p> <p>DMZ Host IP Address : <input type="text" value="0.0.0.0"/></p> <p style="text-align: center;"><input type="button" value="SAVE"/> <input type="button" value="BACK"/></p>
------------	--

## Static Routing

Go to **Advance Setup -> Routing ->Add** to setup static route features.

The static routing function determines the path that router follows over your network before and after it passes through your router. You can use static routing to allow different IP domain users to access the Internet through this device.

---

# TRENDCHIP

ADSL Router

<b>Advanced</b>	Quick Start	Interface Setup	<b>Advanced Setup</b>	Access Management	Maintenance	Status	Help
	Firewall	Routing	NAT	QoS	VLAN	ADSL	

---

### Static Route

Destination IP Address:	<input type="text" value="0.0.0.0"/>
IP Subnet Mask:	<input type="text" value="0.0.0.0"/>
Gateway IP Address:	<input checked="" type="radio"/> <input type="text" value="0.0.0.0"/> <input type="radio"/> PVC0 <input type="text" value=""/>
Metric:	<input type="text" value="0"/>
Announced in RIP:	<input type="text" value="Yes"/>

## Dynamic Routing

Go to **Interface Setup -> Internet** to select Dynamic Route as you need.

The dynamic routing feature of the router can be used to allow the router to automatically adjust to physical changes in the network's layout. The router uses the dynamic RIP protocol. It determines the route that the network packets take based on the fewest number of hops between the source and the destination. The RIP protocol regularly broadcasts routing information to other routers on the network.

**TRENDCHIP**ADSL Router

InterfaceQuick StartInterface SetupAdvanced SetupAccess ManagementMaintenanceStatusHelp

InternetLANPPPoE

Bridge Mode

ServiceName :

Username :

Password :

Encapsulation : PPPoE LLC

Bridge Interface :  Activated  Deactivated

Connection :  Always On (Recommended)

Connect On-Demand (Close if idle for  minutes)

Connect Manually

TCP MSS Option : TCP MSS(0:default)  bytes

Get IP Address :  Static  Dynamic

Static IP Address :

IP Subnet Mask :

Gateway :

NAT : Enable

Default Route :  Yes  No

TCP MTU Option : TCP MTU(0:default)  bytes

Dynamic Route : RIP1 Direction Both

Multicast : Disabled

MAC Spoofing :  Enabled  Disabled

SAVE

## Routing Table

Go to **Advanced Setup -> Routing** to see the Routing Table. The Routing table allows you to see how many routings on your routing table and interface information

## TRENDCHIP

ADSL Router

<b>Advanced</b>	Quick Start	Interface Setup	<b>Advanced Setup</b>	Access Management	Maintenance	Status	Help
	Firewall	Routing	NAT	QoS	VLAN	ADSL	

Routing Table List								
#	Dest IP	Mask	Gateway IP	Metric	Device	Use	Edit	Drop
1	192.168.1.0	24	192.168.1.1	1	enet0	543		
2	default	0	Node1	2	poe0	0		



## SNMP

Go to **Access Management -> SNMP** to setup SNMP feature. Simple Network Management Protocol is used for exchanging information between network device.

**Get Community** : Select to set the password for the incoming Get- and GetNext requests from the management station.

**Set Community** : Select to set the password for incoming Set requests from the management station.

---

**TRENDCHIP** ADSL Router

<b>Access Management</b>	Quick Start	Interface Setup	Advanced Setup	<b>Access Management</b>	Maintenance	Status	Help
	ACL	Filter	SNMP	UPnP	DDNS		

**SNMP**

Get Community :

Set Community :

## QoS Setting

Go to **Advanced Setup** -> **QoS** to setup QoS features. This option will provide better service of selected network traffic over various technologies.

Advanced	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	Firewall	Routing	NAT	QoS	VLAN	ADSL	

---

### Quality of Service

QoS :  Activated  Deactivated  
Summary : [QoS Settings Summary](#)

---

**Rule**

Rule Index : 1

Active :  Activated  Deactivated

Application :

Physical Ports :  WLAN  Enet1  Enet2  Enet3  Enet4

Destination MAC :

IP :

Mask :

Port Range :  ~

Source MAC :

IP :

Mask :

Port Range :  ~

Protocol ID :

Vlan ID Range :  ~

IPP/DS Field :  IPP/TOS  DSCP

IP Precedence Range :  ~

Type of Service :

DSCP Range :  ~  (Value Range: 0 ~ 63)

802.1p :  ~

---

**Action**

IPP/DS Field :  IPP/TOS  DSCP

IP Precedence Remarking :

Type of Service Remarking :

DSCP Remarking :  (Value Range: 0 ~ 63)

802.1p Remarking :  ~

Queue # :

[ADD](#) [DELETE](#) [CANCEL](#)

## VLAN

Go to **Advanced Setup** -> **VLAN** to enable VLAN features. Virtual LAN (VLAN) is a group of devices on one or more LANs that are configured so that they can communicate as if they were attached to the same wire, when in fact they are located on a number of different LAN segments. Because VLANs are based on logical instead of physical connections, it is very flexible for user/host management, bandwidth allocation and resource optimization..

The screenshot shows the TrendChip ADSL Router configuration interface. At the top, the brand name 'TRENDCHIP' is displayed in orange, and 'ADSL Router' is in the top right corner. A navigation menu includes 'Advanced' (highlighted in black), 'Quick Start', 'Interface Setup', 'Advanced Setup' (highlighted in orange), 'Access Management', 'Maintenance', 'Status', and 'Help'. Below the menu, a sub-menu for 'Advanced Setup' contains 'Firewall', 'Routing', 'NAT', 'QoS', 'VLAN', and 'ADSL'. The 'VLAN' sub-menu is selected, showing a 'VLAN Function' section with radio buttons for 'Activated' and 'Deactivated' (selected). Below this are two links: 'Assign VLAN PVID for each Interface' and 'Define VLAN Group'. The interface uses a color scheme of black, orange, and light gray.

## VLAN PVID

Go to **Advanced Setup -> VLAN-> Assign VLAN PVID for each interface** to setup VLAN PVID features. Each physical port has a default VID called PVID (Port VID). PVID is assigned to untagged frames or priority tagged frames (frames with null (0) VID) received on this port.

---

# TRENDCHIP

ADSL Router

<b>Advanced</b>	Quick Start	Interface Setup	<b>Advanced Setup</b>	Access Management	Maintenance	Status	Help
	Firewall	Routing	NAT	QoS	VLAN	ADSL	

<b>PVID Assign</b>	
	ATM VC #0 : pvid <input type="text" value="1"/>
	VC #1 : pvid <input type="text" value="1"/>
	VC #2 : pvid <input type="text" value="1"/>
	VC #3 : pvid <input type="text" value="1"/>
	VC #4 : pvid <input type="text" value="1"/>
	VC #5 : pvid <input type="text" value="1"/>
	VC #6 : pvid <input type="text" value="1"/>
	VC #7 : pvid <input type="text" value="1"/>
	Ethernet Port #1 : pvid <input type="text" value="1"/>

## VLAN Group

Go to **Advanced Setup -> VLAN-> Define VLAN Group** to setup VLAN group features.

# TRENDCHIP

ADSL Router

Advanced | Quick Start | Interface Setup | **Advanced Setup** | Access Management | Maintenance | Status | Help

Firewall | Routing | **NAT** | QoS | **VLAN** | ADSL

---

### VLAN Group Setting

VLAN Index :

Active :  Yes  No

VLAN ID :  (Decimal)

ATM VCs :

Tagged	<input type="checkbox"/>							
Port #	<input checked="" type="checkbox"/>							
	0	1	2	3	4	5	6	7

Ethernet :

Tagged	<input type="checkbox"/>
Port #	<input checked="" type="checkbox"/>
	1

---

### VLAN Group Summary

Group	Active	ID	VLAN Group Ports	VLAN Tagged Ports
1	Yes	1	e1,p0,p1,p2,p3,p4,p5,p6,p7	

p:pvc, e:ethernet

## Firewall

Go to **Advanced Setup ->Firewall** to setup Firewall features. Select this option can automatically detect and block Denial of Service (DoS) attacks, such as Ping of Death, SYN Flood, Port Scan and Land Attack.

The screenshot shows the configuration interface for a TRENDCHIP ADSL Router. The main navigation bar includes 'Advanced', 'Quick Start', 'Interface Setup', 'Advanced Setup', 'Access Management', 'Maintenance', 'Status', and 'Help'. The 'Advanced Setup' menu is expanded to show 'Firewall', 'Routing', 'NAT', 'QoS', 'VLAN', and 'ADSL'. The 'Firewall' sub-menu is selected, displaying the following settings:

- Firewall:  Enabled  Disabled
- SPI:  Enabled  Disabled

A warning message is displayed: (WARNING: If You enabled SPI, all traffics initiated from WAN would be blocked, including DMZ, Virtual Server, and ACL WAN side.)

At the bottom of the configuration area, there are 'SAVE' and 'CANCEL' buttons.

## 9.0 Universal Plug-and-Play (UPnP)

### 9.1 Universal Plug and Play Overview

Universal Plug and Play (UPnP) is a distributed, open networking standard that uses TCP/IP for simple peer-to-peer network connectivity between devices. An UPnP device can dynamically join a network, obtain an IP address, convey its capabilities and learn about other devices on the network. In turn, a device can leave a network smoothly and automatically when it is no longer in use.

### 9.2 How do I know if I'm using UPnP?

UPnP hardware is identified as an icon in the Network Connections folder (Windows XP). Each UPnP compatible device installed on your network will appear as a separate icon. Selecting the icon of a UPnP device will allow you to access the information and properties of that device.

### 9.3 NAT Traversal

UPnP NAT traversal automates the process of allowing an application to operate through NAT. UPnP network devices can automatically configure network addressing, announce their presence in the network to other UPnP devices and enable exchange of simple product and service descriptions. NAT traversal allows the following:

- Dynamic port mapping
- Learning public IP addresses
- Assigning lease times to mappings

Windows Messenger is an example of an application that supports NAT traversal and UPnP. See the *Network Address Translation (NAT)* chapter for further information about NAT.

## 9.4 Cautions with UPnP

The automated nature of NAT traversal applications in establishing their own services may present network security issues. Network information and configuration may also be obtained and modified by users in some network environments.


All UPnP-enabled devices may communicate freely with each other without additional configuration. Disable UPnP if this is not your intention.

*UPnP broadcasts are only allowed on the LAN.*

*See later sections for examples of installing UPnP in Windows XP and Windows Me as well as an example of using UPnP in Windows.*

## 9.5 Configuring UPnP

From the Site Map in the main menu, click UPnP under Access Management to display the screen shown next.

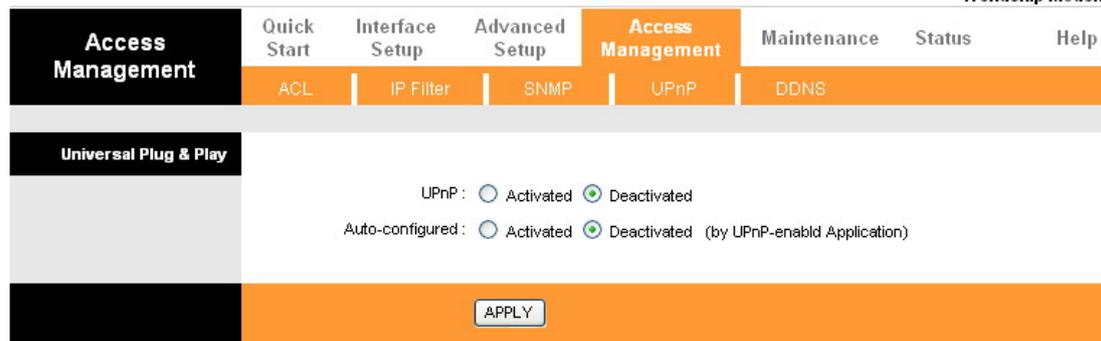

The following table describes the labels in this screen.

LABEL	DESCRIPTION
UPnP	Select this checkbox to activate UPnP. Be aware that anyone could use a UPnP application to open the web configuration's login screen without entering ADSL2+ Router's IP address (although you must still enter the password to access the web configuration).
Auto configured	Select this check box to allow UPnP-enabled applications to automatically configure ADSL2+ Router so that they can communicate through ADSL2+ Router, for example by using NAT traversal, UPnP applications automatically reserve a NAT forwarding port in order to communicate with another UPnP enabled device; this eliminates the need to manually configure port forwarding for the UPnP enabled application.
Apply	Click <b>Apply</b> to save your settings back to home screen.

## 9.6 Installing UPnP in Windows Example


This section shows how to install UPnP in Windows Me and Windows XP.

## 9.7 Installing UPnP in Windows Me

Follow the steps below to install the UPnP in Windows Me.

**Step 1.** Click Start and Control Panel. Double-click Add/Remove Programs.

**Step 2.** Click on the Windows Setup tab and select Communication in the Components

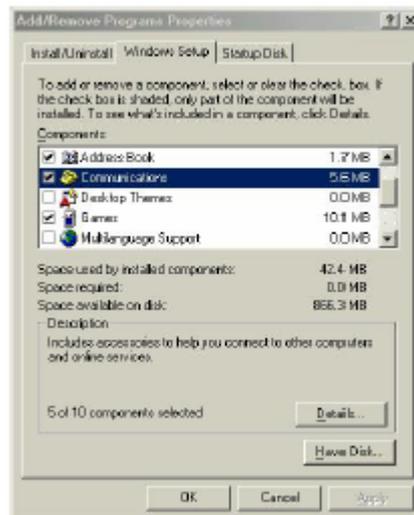

selection box. Click Details.

**Step 3.** In the Communications window, select the Universal Plug and Play check box in the



Components selection box.

**Step 4.** Click OK to go back to the Add/Remove Programs Properties window and click Next.

**Step 5.** Restart the computer when prompted.


## 9.8 Installing UPnP in Windows XP

Follow the steps below to install the UPnP in Windows XP.

**Step 1.** Click Start and Control Panel.


**Step 2.** Double-click Network Connections.

**Step 3.** In the Network Connections window, click Advanced in the main menu and select Optional Networking Components ....

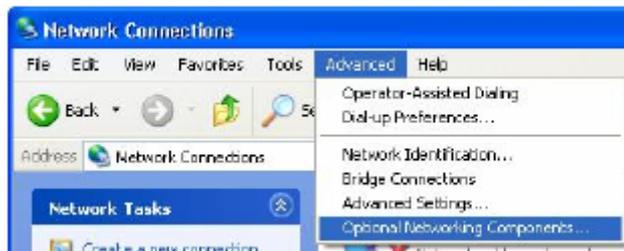


The Windows Optional Networking Components Wizard window displays.

**Step 4.** Select Networking Service in the Components selection box and click Details.

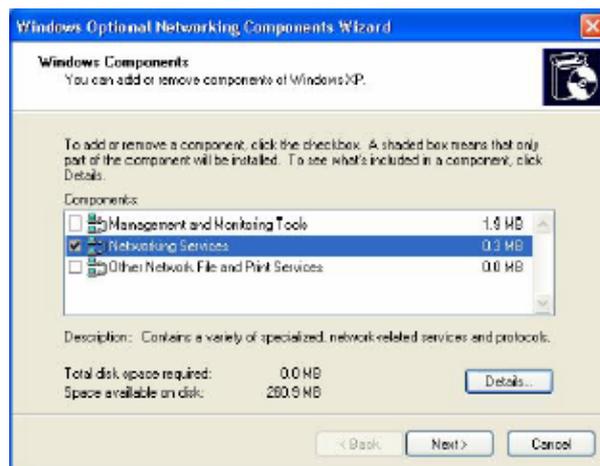

**Step 5.** In the Networking Services window, select the Universal Plug and Play check box.

**Step 6.** Click OK to go back to the Windows Optional Networking Component Wizard window

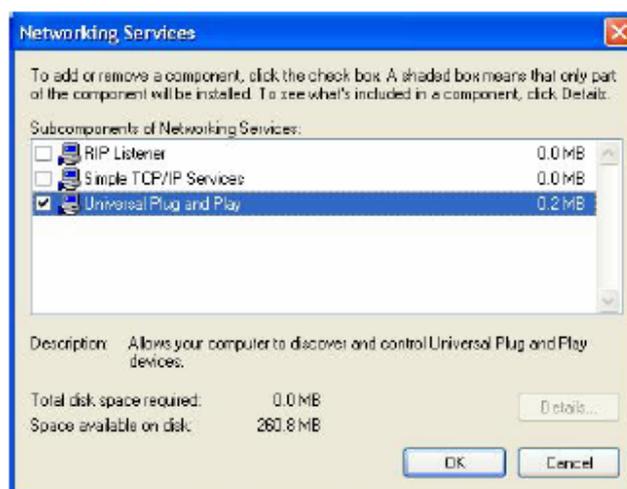

and click Next.

## 9.9 Using UPnP in Windows XP Example

This section shows you how to use the UPnP feature in Windows XP. You must already have UPnP installed in Windows XP and UPnP activated on ADSL2+ Router.

Make sure the computer is connected to a LAN port of ADSL2+ Router. Turn on your computer and ADSL2+ Router.


## 9.10 Auto-discover Your UPnP-enabled Network Device

**Step 1.** Click start and Control Panel. Double-click Network Connections. An icon displays under Internet Gateway.





**Step 2.** Right-click the icon and select Properties.

**Step 3.** In the Internet Connection Properties window, click Settings to see the port mappings

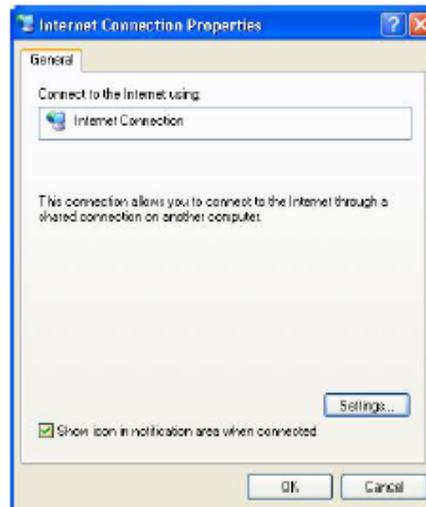


there were automatically created.

**Step 4.** You may edit or delete the port mappings or click Add to manually add port mappings.

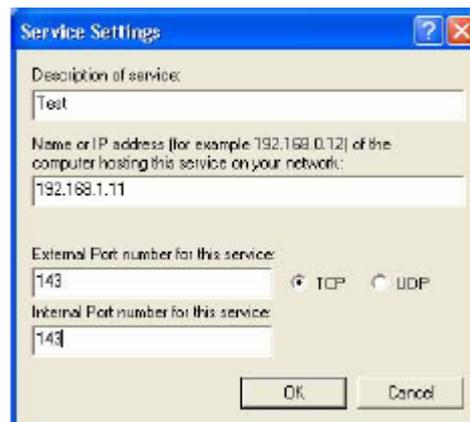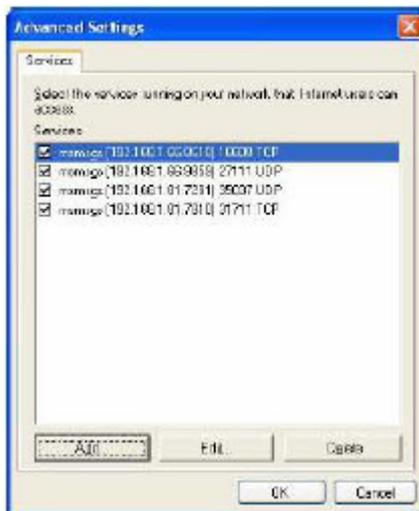


**Step 5.** Select Show icon in notification area when connected option and click OK. An icon

displays in the system tray

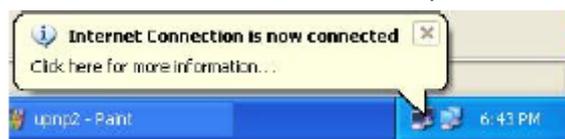

**Step 6.** Double-click on the icon to display your current Internet connection status.

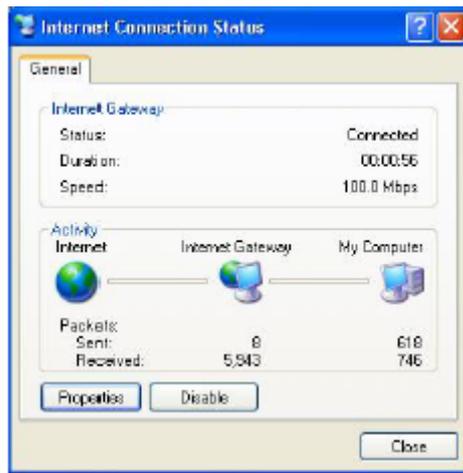

## 10.0 Web Configuration Easy Access

With UPnP, you can access the web-based configuration on ADSL2+ Router without finding out the IP address of ADSL2+ Router first. This comes helpful if you do not know the IP address of ADSL2+ Router.

Follow the steps below to access the web configuration.

**Step 1.** Click Start and then Control Panel.

**Step 2.** Double-click Network Connections.

**Step 3.** Select My Network Places under Other Places.



**Step 4.** An icon with the description for each UPnP-enabled device displays under Local Network.

**Step 5.** Right-click on the icon for your ADSL2+ Router and select Invoke. The web configuration login screen displays.



**Step 6.** Right-click on the icon for yourADSL2+ Router and select Properties. A properties window displays with basic information about ADSL2+ Router.



# 11.0 Troubleshooting

## A.1 Using LEDs to Diagnose Problems

The LEDs are useful aides for finding possible problem causes.

### A.1.1 Power LED

The PWR LED on the front panel does not light up.

STEPS	CORRECTIVE ACTION
1	Make sure that ADSL2+ Router's power adaptor is connected to ADSL2+ Router and plugged in to an appropriate power source. Use only the supplied power adaptor.
2	Check that ADSL2+ Router and the power source are both turned on and ADSL2+ Router is receiving sufficient power.
3	Turn the ADSL2+ Router off and on.
4	If the error persists, you may have a hardware problem. In this case, you should contact your vendor.

### A.1.2 LAN LED

The LAN LED on the front panel does not light up.

STEPS	CORRECTIVE ACTION
1	Check the Ethernet cable connections between your ADSL2+ Router and the computer or hub.
2	Check for faulty Ethernet cables.
3	Make sure your computer's Ethernet card is working properly.
4	If these steps fail to correct the problem, contact your local distributor for assistance.

### A.1.3 DSL LED ( ACT & LINK)

The DSL LED on the front panel does not light up.

STEPS	CORRECTIVE ACTION
1	Check the telephone wire and connections between ADSL2+ Router DSL port and the wall jack.
2	Make sure that the telephone company has checked your phone line and set it up for DSL service.
3	Reset your ADSL line to reinitialize your link to the DSLAM.
4	If these steps fail to correct the problem, contact your local distributor for assistance.

### A.2 Telnet

I cannot telnet into ADSL2+ Router.

STEPS	CORRECTIVE ACTION
1	Check the LAN port and the other Ethernet connections.
2	Make sure you are using the correct IP address of ADSL2+ Router. Check the IP address of ADSL2+ Router.
3	Ping ADSL2+ Router from your computer. If you cannot ping ADSL2+ Router, check the IP addresses of ADSL2+ Router and your computer. Make sure your computer is set to get a dynamic IP address; or if you want to use a static IP address on your computer, make sure that it is on the same subnet as ADSL2+ Router.
4	Make sure you entered the correct password. The default password is "1234".
5	If these steps fail to correct the problem, contact the distributor.

## A.3 Web Configuration

I cannot access the web configuration.

STEPS	CORRECTIVE ACTION
1	Make sure you are using the correct IP address of ADSL2+ Router. Check the IP address of ADSL2+ Router.
2	Make sure that there is not a console session running.
3	Check that you have enabled web service access. If you have configured a secured client IP address, your computer's IP address must match it.
4	For WAN access, you must configure remote management to allow server access from the Wan (or all).
5	Your computer's and ADSL2+ Router's IP addresses must be on the same subnet for LAN access.
6	If you changed ADSL2+ Router's LAN IP address, then enter the new one as the URL.
7	Remove any filters in LAN or WAN that block web service.

The web configuration does not display properly.

STEPS	CORRECTIVE ACTION
1	Make sure you are using Internet Explorer 5.0 and later versions.
2	Delete the temporary web files and log in again. In Internet Explorer, click <b>Tools, Internet Options</b> and then click the <b>Delete Files ...</b> button. When a <b>Delete Files</b> window displays, select <b>Delete all offline content</b> and click <b>OK</b> . (Steps may vary depending on the version of your Internet browser.)

## A.4 Login Username and Password

I forgot my login username and/or password.

STEPS	CORRECTIVE ACTION
1	If you have changed the password and have now forgotten it, you will need to upload the default configuration file. This will erase all custom configurations and restore all of the factory defaults including the password.
2	Press the <b>RST</b> button for five seconds, and then release it. When the <b>LINK</b> LED begins to blink, the defaults have been restored and ADSL2+ Router restarts.
3	The default username is "admin". The default password is "1234". The <b>Password</b> and <b>Username</b> fields are case-sensitive. Make sure that you enter the correct password and username using the proper casing.
4	It is highly recommended to change the default username and password. Make sure you store the username and password in a save place.

## A.5 LAN Interface

I cannot access ADSL2+ Router from the LAN or ping any computer on the LAN.

STEPS	CORRECTIVE ACTION
1	Check the Ethernet LEDs on the front panel. A LAN LED should be on if the port is connected to a computer or hub. If the LAN LEDs on the front panel are off, refer to <i>Section A.1.2</i> .
2	Make sure that the IP address and the subnet mask of ADSL2+ Router and your computer(s) are on the same subnet.

## A.6 WAN Interface

Initialization of the ADSL connection failed.

STEPS	CORRECTIVE ACTION
1	Check the cable connections between the ADSL port and the wall jack. The DSL LEDs on the front panel of ADSL2+ Router should be on.
2	Check that your VPI, VCI, type of encapsulation and type of multiplexing settings are the same as what you collected from your telephone company and ISP.
3	Restart ADSL2+ Router. If you still have problems, you may need to verify your VPI, VCI, type of encapsulation and type of multiplexing settings with the telephone company and ISP.

I cannot get a WAN IP address from the ISP.

STEPS	CORRECTIVE ACTION
1	The ISP provides the WAN IP address after authenticating you. Authentication may be through the user name and password, the MAC address or the host name.
2	The username and password apply to PPPoE and PPOA encapsulation only. Make sure that you have entered the correct <b>Service Type</b> , <b>User Name</b> and <b>Password</b> (be sure to use the correct casing).

## A.7 Internet Access

I cannot access the Internet.

STEPS	CORRECTIVE ACTION
1	Make sure ADSL2+ Router is turned on and connected to the network.
2	If the DSL LEDs are off, refer to <i>Section A.1.3</i> .
3	Verify your WAN settings.
4	Make sure you entered the correct user name and password.

Internet connection disconnects.

STEPS	CORRECTIVE ACTION
1	Check the schedule rules.
2	If you use PPPoA or PPPoE encapsulation, check the idle time-out setting.
3	Contact your ISP.

## A.8 Remote Node Connection

I cannot connect to a remote node or ISP.

STEPS	CORRECTIVE ACTION
1	Check WAN screen to verify that the username and password are entered properly.
2	Verify your login name and password for the remote node.
3	If these steps fail, you may need to verify your login and password with your ISP.