

SERVICE MANUAL

Level 1&2

NOKIA

6600

FOLD

RM-325



Transceiver characteristics

Band:

RM-325: GSM Quadband 850/900/1800/1900,
WCDMA 850/2100

Display:

Main display: 2.13" QVGA 240x320 OLED display
with 16M colours, active area 32.4 mm x 43.2 mm

Secondary/hidden display: 1.36" 128x160 OLED
white colour display, active area 21.5 mm x 26.9
mm

Camera:

2 Mpix with 8x digital zoom

Operating System:

Series 40 5th edition

Connections:

DC 2 mm charging jack, microUSB connector,
Bluetooth 2.0 EDR

Transceiver with BL-4CT battery pack

Talk time	Standby	Note
GSM: Up to 4 hours WCDMA: Up to 150 min	GSM: Up to 300 hours WCDMA: Up to 250 hours	Depends on network parameters and phone settings

1.	Change history	3
2.	Copyright	4
3.	Warnings and cautions	5
3.1	Warnings	5
3.2	Cautions	5
4.	ESD protection	6
5.	Care and maintenance	7
6.	Battery information	8
7.	Exploded view	9
8.	Service devices	10
9.	SW-update	11
10.	Disassembly instruction	12
11.	Assembly hints	19
12.	Solder components	20

1. CHANGE HISTORY

Status	Version No.	Date	Comments
Draft	0.1	25.07.2008	Draft
Approved	1.0	25.07.2008	Approved version
Updated	2.0	06.08.2008	Exploded view corrected

The purpose of this document is to help NOKIA service levels 1 and 2 workshop technicians to carry out service to NOKIA products. This Service Manual is to be used only by authorized NOKIA service suppliers, and the content of it is confidential. Please note that NOKIA provides also other guidance documents (e.g. Service Bulletins) for service suppliers, follow these regularly and comply with the given instructions.

While every endeavor has been made to ensure the accuracy of this document, some errors may exist. If you find any errors or if you have further suggestions, please notify NOKIA using the address below:

CMO Operation & Logistics
Training and Vendor Development
Multimedia Creation & Support
<mailto:Service.Manuals@nokia.com>

Please keep in mind also that this documentation is continuously being updated and modified, so watch always out for the newest version.

2. COPYRIGHT

Copyright © 2008 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, and Nokia X and Y are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region.

IMPORTANT

This document is intended for use by qualified service personnel only.

3. WARNINGS AND CAUTIONS

Please refer to the phone's user guide for instructions relating to operation, care and maintenance including important safety information. Note also the following:

3.1 Warnings

1. CARE MUST BE TAKEN ON INSTALLATION IN VEHICLES FITTED WITH ELECTRONIC ENGINE MANAGEMENT SYSTEMS AND ANTI-SKID BRAKING SYSTEMS. UNDER CERTAIN FAULT CONDITIONS, EMITTED RF ENERGY CAN AFFECT THEIR OPERATION. IF NECESSARY, CONSULT THE VEHICLE DEALER/MANUFACTURER TO DETERMINE THE IMMUNITY OF VEHICLE ELECTRONIC SYSTEMS TO RF ENERGY.
2. THE HANDPORTABLE TELEPHONE MUST NOT BE OPERATED IN AREAS LIKELY TO CONTAIN POTENTIALLY EXPLOSIVE ATMOSPHERES, EG PETROL STATIONS (SERVICE STATIONS), BLASTING AREAS ETC.
3. OPERATION OF ANY RADIO TRANSMITTING EQUIPMENT, INCLUDING CELLULAR TELEPHONES, MAY INTERFERE WITH THE FUNCTIONALITY OF INADEQUATELY PROTECTED MEDICAL DEVICES. CONSULT A PHYSICIAN OR THE MANUFACTURER OF THE MEDICAL DEVICE IF YOU HAVE ANY QUESTIONS. OTHER ELECTRONIC EQUIPMENT MAY ALSO BE SUBJECT TO INTERFERENCE.

3.2 Cautions

1. Servicing and alignment must be undertaken by qualified personnel only.
2. Ensure all work is carried out at an anti-static workstation and that an anti-static wrist strap is worn.
3. Use only approved components as specified in the parts list.
4. Ensure all components, modules screws and insulators are correctly re-fitted after servicing and alignment.
5. Ensure all cables and wires are repositioned correctly

4. ESD PROTECTION



Nokia requires that service points have sufficient ESD protection (against static electricity) when servicing the phone.

Any product of which the covers are removed must be handled with ESD protection. The SIM card can be replaced without ESD protection if the product is otherwise ready for use.

To replace the covers ESD protection must be applied.

All electronic parts of the product are susceptible to ESD. Resistors, too, can be damaged by static electricity discharge.

All ESD sensitive parts must be packed in metallized protective bags during shipping and handling outside any ESD Protected Area (EPA).

Every repair action involving opening the product or handling the product components must be done under ESD protection.

ESD protected spare part packages MUST NOT be opened/closed out of an ESD Protected Area.

For more information and local requirements about ESD protection and ESD Protected Area, contact your local Nokia After Market Services representative.

5. CARE AND MAINTENANCE

This product is of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to the product, battery, charger or any accessory.

6. BATTERY INFORMATION

Note: A new battery's full performance is achieved only after two or three complete charge and discharge cycles! The battery can be charged and discharged hundreds of times but it will eventually wear out.

When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery. Use only batteries approved by the phone manufacturer and recharge the battery only with the chargers approved by the manufacturer.

Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime.

If left unused a fully charged battery will discharge itself over time. Temperature extremes can affect the ability of your battery to charge.

For good operation times with Ni-Cd/NiMH batteries, discharge the battery from time to time by leaving the product switched on until it turns itself off (or by using the battery discharge facility of any approved accessory available for the product).

Do not attempt to discharge the battery by any other means. Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F).

A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.


Do not dispose batteries in a fire! Dispose of batteries according to local regulations (e.g. recycling).

Do not dispose as household waste.

7. EXPLODED VIEW

See corresponding ITEM/CIRCUIT REF in the Spare Parts Service Bulletins on NOL.

6600 FOLD RM-325 EXPLODED VIEW

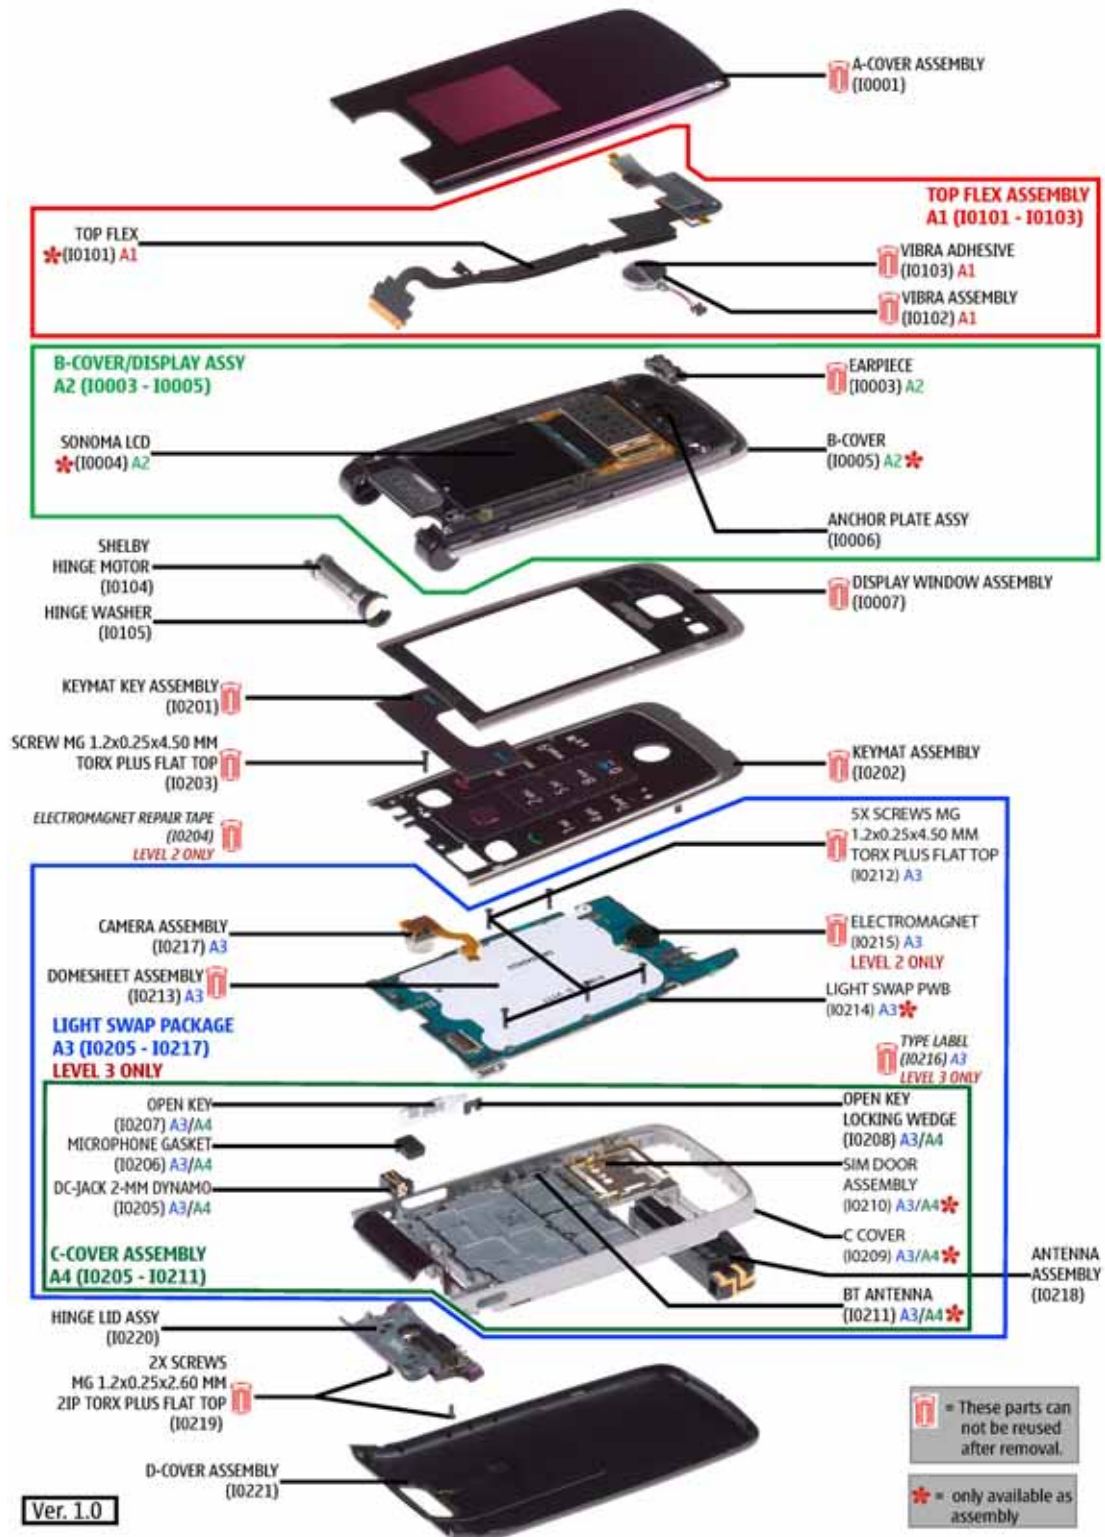

8. SERVICE DEVICES


 <p>FLS-5</p> <p>FLS-5 Flash device</p>	 <p>BL-4CT</p> <p>BL-4CT Battery</p>	 <p>RJ-230</p> <p>RJ-230 Universal Soldering Jig</p>
 <p>AC-4 Travel Charger</p>	 <p>CA-101 100cm</p> <p>CA-101 Service Cable</p>	 <p>SS-124</p> <p>SS-124 Domesheet Alignment Jig</p>
 <p>SS-125</p> <p>SS-125 Window and Anchor Plate Tool</p>	 <p>SS-152</p> <p>SS-152 Screw Bit TX2IP</p>	 <p>NOKIA Standard Toolkit V2</p> <p>NMP standard toolkit (v2)</p> <p>For more information, refer to the Service Bulletin (SB-011) on NOKIA Online. Supplier or manufacturer contacts for tool re-order can be found in "Recommended service equipment" document on NOKIA Online.</p>

9. SW-UPDATE

Flash concept – (Point of Sales)

To use the FLS-5 Flash Dongle, you have to follow the user guide inside the sales package.

Please check always for the latest version of flash software, which is available on Nokia Online.

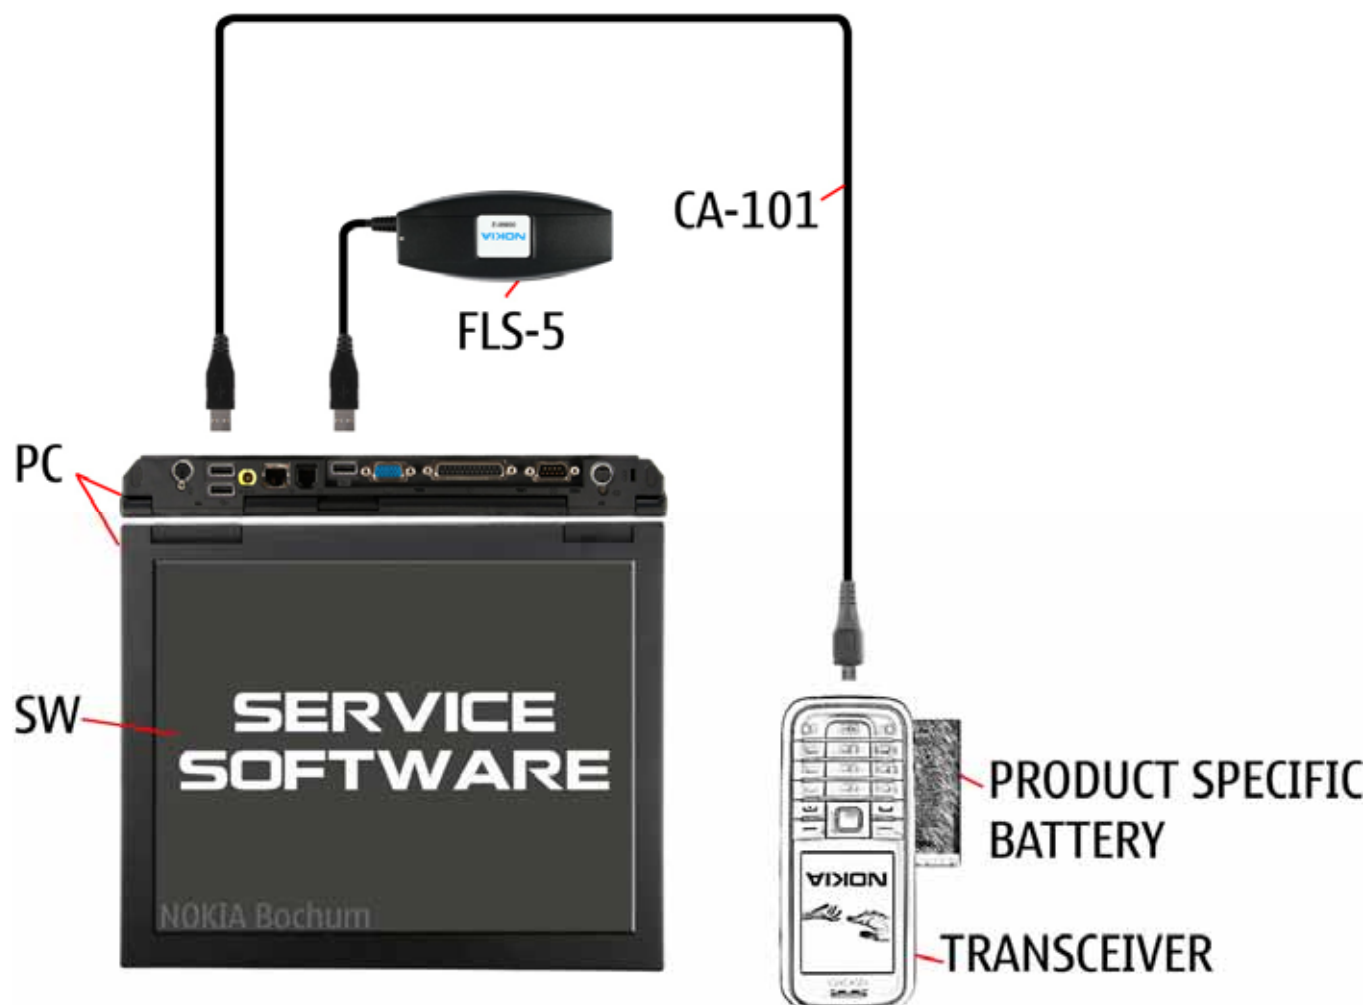

10. DISASSEMBLY INSTRUCTION



1.) Remove the D-COVER ASSEMBLY.



2.) Remove the battery if necessary.



3.) Detach the A-COVER ASSEMBLY as shown in the picture and start to release the cover.




4.) Release the cover by sliding with the dental tool along the sides as shown in this picture.



5.) Lift up the A-COVER carefully with SS-93. Pay attention to the display under the A-COVER.



6.) Remove the A-COVER ASSEMBLY.

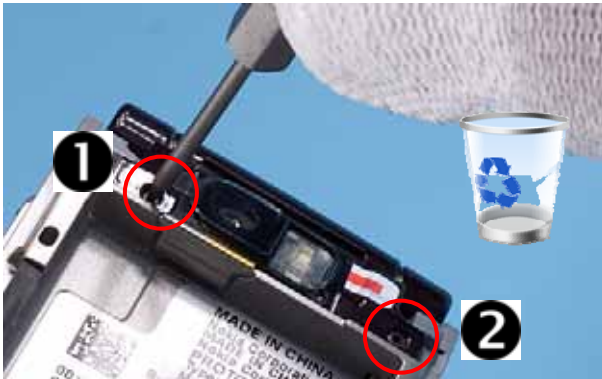

7.) Unscrew the two screws with SS-152 (SCREW BIT TX2IP) in the order shown.
Always use new screws after disassembling!



8.) Remove the HINGE LID ASSY.




9.) Upper and lower block can be separated a little.



10.) Disconnect the TOP FLEX ASSEMBLY carefully from the PWB with SS-93.



11.) Separatate the upper and lower blocks.

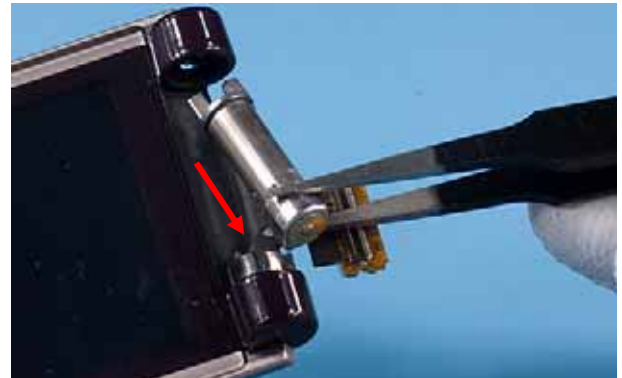

12.) Remove the HINGE MOTOR with a tweezers.




13.) Remove the HINGE WASHER with tweezers.



14.) Start to detach the DISPLAY WINDOW with SRT-6 carefully as shown in picture.




15.) Slide along the sides with SRT-6...

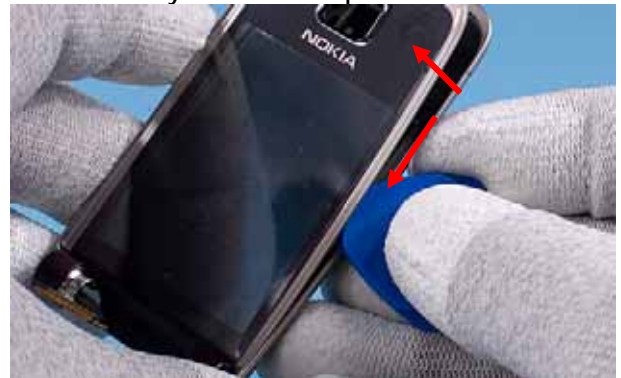


16.) ... to lift up the DISPLAY WINDOW.




17.) Remove the DISPLAY WINDOW.

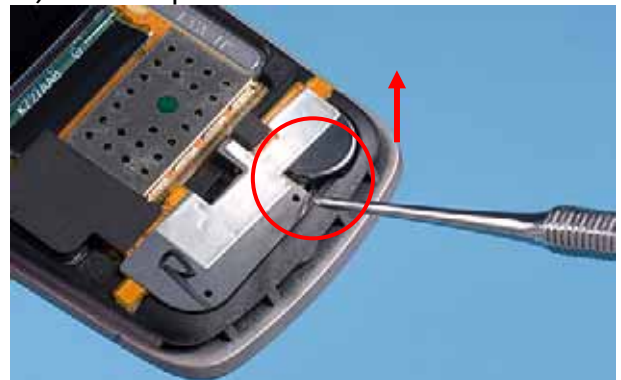

18.) Use the dental tool to release the VIBRA MOTOR and lift up the TOP FLEX.

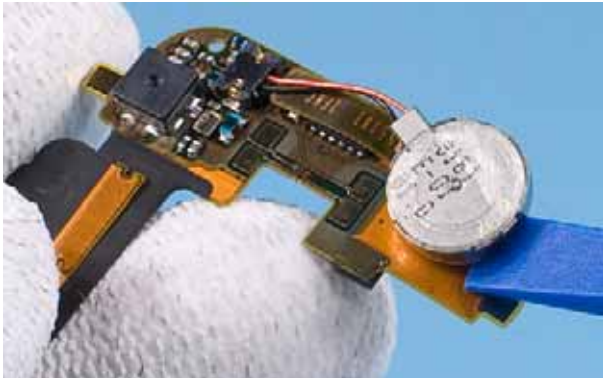


19.) Release the VIBRA MOTOR from TOP FLEX with SS-93 carefully.

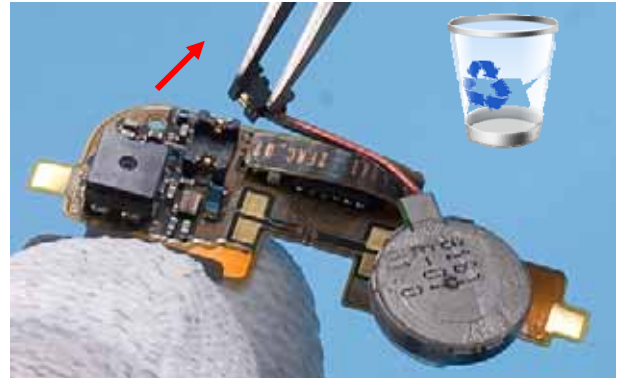

20.) Disconnect the VIBRA MOTOR with tweezers before removing the VIBRA MOTOR.



21.) Detach the TOP FLEX from the clip as shown.

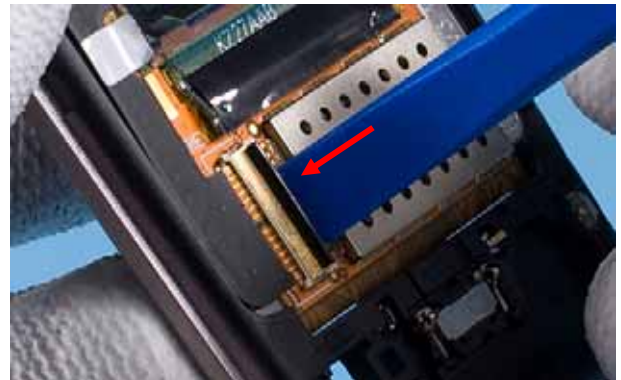

22.) Open the locking mechanism of the TOP FLEX with SS-93.



23.) Disconnect and remove the TOP FLEX.



24.) Use the dental tool to remove the EARPIECE.



25.) Use the SRT-6 to open the KEYMAT KEY.



26.) Remove the KEYMAT KEY.



27.) Open the screw with SS-152 (SCREW BIT TX2IP).




28.) Lift up the KEYMAT with SRT-6.




29.) Slide SRT-6 along the sides ...




30.) ... until the KEYMAT can be removed easily.

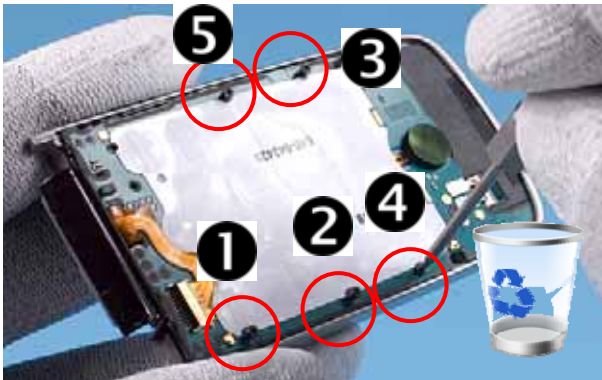


31.) Open the five screws with SS-152 (SCREW BIT TX2IP) in the order shown.
Always use new screws after disassembling!

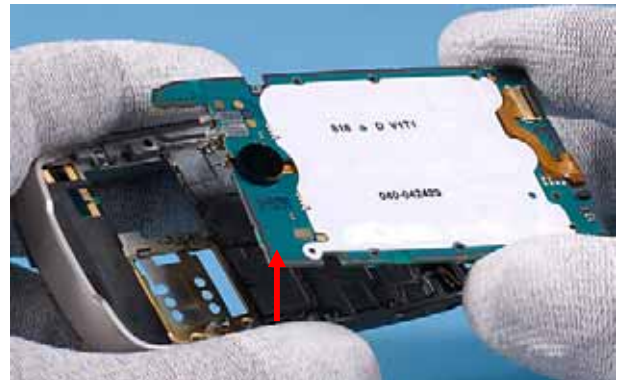

32.) Remove the PWB.

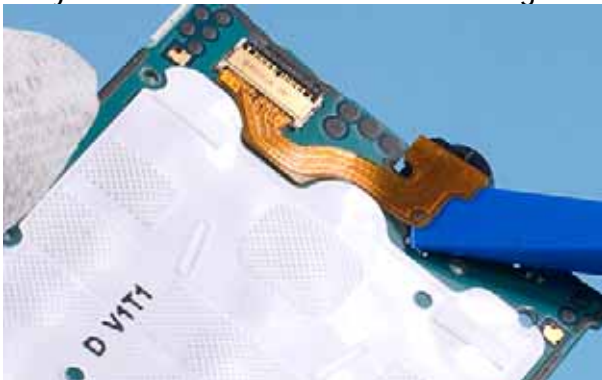

33.) Release the CAMERA ASSEMBLY with SS-93 carefully.

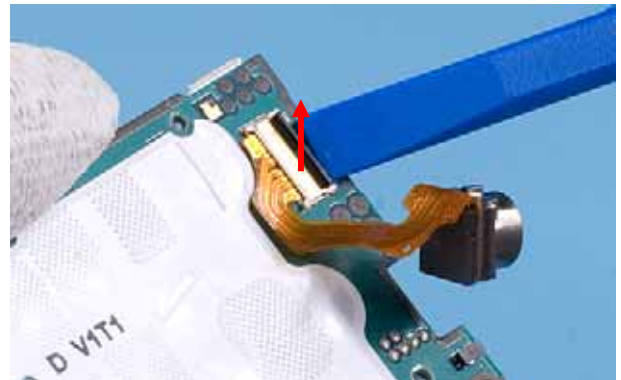

34.) Open the locking mechanism of the CAMERA ASSEMBLY with SS-93.




35.) Disconnect and remove the CAMERA ASSEMBLY.



36.) Remove the MICROPHONE GASKET with tweezers.



37.) Release DC-JACK with DC-Plug.

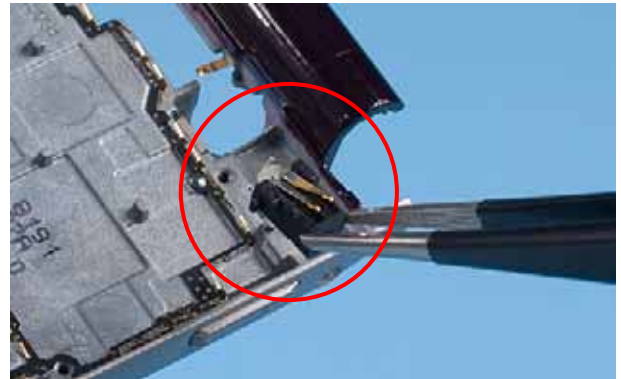

38.) Remove the DC-JACK with tweezers.



39.) Lift up the ANTENNA ASSEMBLY with SS-93 and remove it carefully.






40.) Remove the OPEN KEY LOCKING WEDGE with tweezers.



41.) Remove the OPEN KEY with tweezers.

- END OF DISASSEMBLING -

11. ASSEMBLY HINTS

	
<p>1) Tighten the screws to the torque of 6 Ncm in the order shown.</p>	<p>2) Tighten the screw to the torque of 6 Ncm</p>
	
<p>3) Tighten the screws to the torque of 6 Ncm in the order shown.</p>	

12. SOLDER COMPONENTS

6600 fold RM-325 Components overview

Solder components only for Level 2

