


TOSHIBA

FILE NO. 050-200601GR
(MFR'S VERSION B)

SERVICE MANUAL

COLOR TELEVISION

20AF46
20AF46C

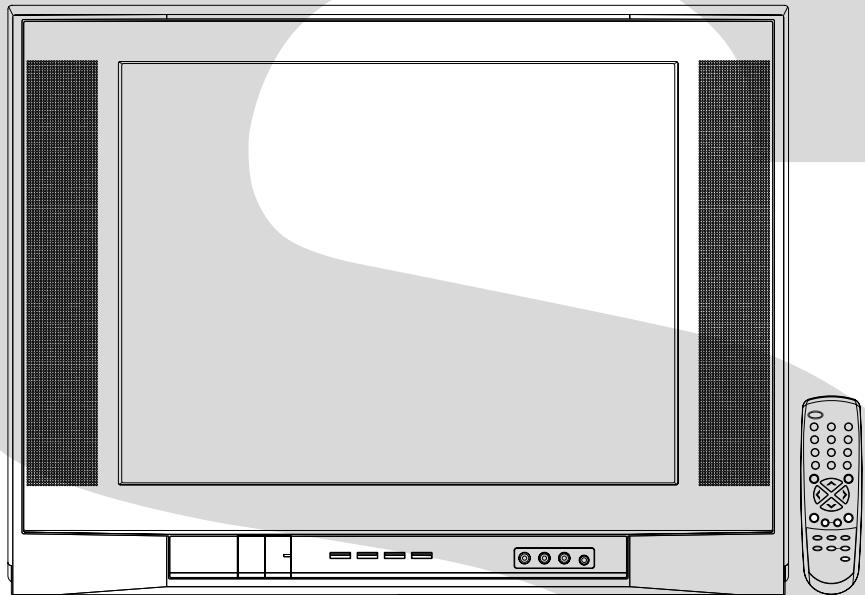

The above model is classified as a green product (*1), as indicated by the underlined serial number. This Service Manual describes replacement parts for the green product. When repairing this green product, use the part(s) described in this manual and lead-free solder (*2).

For (*1) and (*2), see the next page.

(*1)

GREEN PRODUCT PROCUREMENT

The EC is actively promoting the WEEE & RoHS Directives that define standards for recycling and reuse of Waste Electrical and Electronic Equipment and for the Restriction of the use of certain Hazardous Substances. From July 1, 2006, the RoHS Directive will prohibit any marketing of new products containing the restricted substances.

Increasing attention is given to issues related to the global environmental. Toshiba Corporation recognizes environmental protection as a key management tasks, and is doing its utmost to enhance and improve the quality and scope of its environmental activities. In line with this, Toshiba proactively promotes Green Procurement, and seeks to purchase and use products, parts and materials that have low environmental impacts.

Green procurement of parts is not only confined to manufacture. The same green parts used in manufacture must also be used as replacement parts.

(*2)

LEAD-FREE SOLDER

This product is manufactured using lead-free solder as a part of a movement within the consumer products industry at large to be environmentally responsible. Lead-free solder must be used in the servicing and repair of this product.

WARNING

This product is manufactured using lead free solder.

DO NOT USE LEAD BASED SOLDER TO REPAIR THIS PRODUCT !

The melting temperature of lead-free solder is higher than that of leaded solder by 86°F to 104°F (30°C to 40°C). Use of a soldering iron designed for lead-based solders to repair product made with lead-free solder may result in damage to the component and or PCB being soldered. Great care should be made to ensure high-quality soldering when servicing this product — especially when soldering large components, through-hole pins, and on PCBs — as the level of heat required to melt lead-free solder is high.

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the eternal exposure metal [Note 2] should be more than 1M ohm by using the 500V insulation resistance meter [Note 1].
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Headphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

IMPORTANT

When you exchange IC and Transistor with a heat sink, apply silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

TABLE OF CONTENTS

GREEN PRODUCT PROCUREMENT	A1-1
LEAD-FREE SOLDER	A1-1
SERVICING NOTICES ON CHECKING	A1-2
HOW TO ORDER PARTS	A1-2
IMPORTANT	A1-2
TABLE OF CONTENTS	A2-1
GENERAL SPECIFICATIONS	A3-1~A3-10
DISASSEMBLY INSTRUCTIONS	
1. REMOVAL OF ANODE CAP	B1-1
2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC	B2-1, B2-2
SERVICE MODE LIST	C-1
CONFIRMATION OF HOURS USED	C-1
WHEN REPLACING EEPROM (MEMORY) IC	C-2
ELECTRICAL ADJUSTMENTS	D-1~D-5
BLOCK DIAGRAM	E-1, E-2
PRINTED CIRCUIT BOARDS	
MAIN/CRT	F-1~F-4
SCHEMATIC DIAGRAMS	
MICON	G-1, G-2
CHROMA	G-3, G-4
DEFLECTION	G-5, G-6
POWER	G-7, G-8
SOUND	G-9, G-10
TUNER/STEREO	G-11, G-12
COMB FILTER/AV	G-13, G-14
CRT	G-15, G-16
WAVEFORMS	H-1, H-2
MECHANICAL EXPLODED VIEWS	I-1, I-2
MECHANICAL REPLACEMENT PARTS LIST	J1-1, J1-2
ELECTRICAL REPLACEMENT PARTS LIST	J2-1~J2-8

GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	20 inch / 508mmV
		CRT Type	Flat	
		Magnetic Field	BV/BH	+0.45G/0.18G
		Color System		NTSC
		Speaker		2 Speaker
		Position		Front Side
		Size		2 x 4.7 Inch
		Impedance		8 ohm
		Sound Output	MAX	2.5+2.5 W
			10%(Typical)	— W
		NTSC3.58+4.43 /PAL60Hz		No
G-2	Tuning System	Broadcasting System	US System M	
		Tuner and System	1Tuner	
		Receive CH Destination	USA(W/ Cable)	
		CH Coverage	2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84	
		Intermediate Frequency	Picture(FP) Sound(FS) FP-FS	45.75MHz 41.25MHz 4.50MHz
		Preset CH		No
		Stereo/Dual TV Sound		Yes
		Tuner Sound Muting		Yes
G-3	Power	Power Source	AC	120V AC 60Hz
		DC		
		Power Consumption	at AC	105 W at AC 120 V 60 Hz 3 W at AC 120 V 60 Hz -- kWh/Year
		Protector	Power Fuse Safety Circuit IC Protector(Micro Fuse)	Yes Yes No
		Safety Radiation X-Radiation		UL FCC DHHS
G-4	Regulation	Operation		+50C ~ +400C
G-5	Temperature	Storage		-20oC ~ +60oC
G-6	Operating Humidity			Less than 80% RH

GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu		Yes
		Menu Type		Icon
		Picture		Yes
		Contrast		Yes
		Brightness		Yes
		Color		Yes
		Tint		Yes
		Sharpness		Yes
		Sound		Yes
		Bass		Yes
		Treble		Yes
		Balance		Yes
		BBE On/Off		No
		Stable Sound On/Off		Yes
		Surround On/Off		Yes
		Set Up		Yes
		TV/Cable		Yes
		Auto CH Memory		Yes
		Add/ Delete		Yes
		Option		Yes
		Language		Yes
		CH Label		Yes
		Favorite CH		Yes
		V-Chip		Yes
		Lock		Yes
		On/Off Timer		Yes
		Color Stream DVD/DTV		Yes
		Control Level		Yes
		Volume		Yes
		Brightness		Yes
		Contrast		Yes
		Color		Yes
		Tint		Yes
		Sharpness		Yes
		Tuning		No
		Bass		Yes
		Treble		Yes
		Balance		Yes
		Back Light		No
		Stereo,Audio Output,SAP		Yes
		Video		Yes
		Color Stream		Yes
		Channel(TV/Cable)		Yes
		CH Label		Yes
		Game Timer		Yes
		Sleep Timer		Yes
		Sound Mute		Yes
		V-chip Rating		Yes
		16: 9		Yes
G-8	OSD Language		English French Spanish	
G-9	Clock and Timer	Sleep Timer	Max Time Step	120 Min 10 Min
		On/Off Timer	Program(On Timer / Off Timer / Clock)	Yes
		Wake Up Timer		No
		Timer Back-up (at Power Off Mode)	more than	-- Min Sec

GENERAL SPECIFICATIONS

G-10	Remote Control	Unit	RC-GQ
		Glow in Dark Remocon	Yes
		Format	Toshiba
		Remocon Format	Toshiba
		Custom Code	<u>TV:40-BF h</u>
		Power Source	3V
		UM size x pcs	UM-4 x 2 pcs
		Total Keys	<u>30 Keys</u>
		Keys	
		Power	Yes
		1	Yes
		2	Yes
		3	Yes
		4	Yes
		5	Yes
		6	Yes
		7	Yes
		8	Yes
		9	Yes
		0	Yes
		100	Yes
		CH Up	Yes
		CH Down	Yes
		Volume Up	Yes
		Volume Down	Yes
		Cap/Text(TV/Caption/Text)	Yes
		1/2(CH1/CH2)	Yes
		TV/Video(TV/AV)	Yes
		CH RTN(Quick View)	Yes
		Sleep	Yes
		RECall(Call)	Yes
		Reset	Yes
		Menu/Enter	Yes
		Mute	Yes
		Exit	Yes
		MTS(Audio Select)	Yes
		Fav.Up	Yes
		Fav.Down	Yes
		16: 9	Yes
		Multi Brand Keys	
		CH Up(VCR)	No
		CH Down(VCR)	No
		Pause/Still	No
		TV/VCR(VCR)	No
		FF	No
		Rew	No
		Rec	No
		Play	No
		Stop	No
		TV	No
		VCR	No
		Cable	No
		DVD	No
		CODE	No
		DVD MENU <	No
		DVD MENU >	No
		DVD CLEAR	No
		TOP MENU	No
		DVD MENU	No

GENERAL SPECIFICATIONS

G-11	Features	Auto Degauss	Yes
		Auto Shut Off	Yes
		Canal+	No
		Cable	Yes
		Anti-theft	No
		Rental	No
		Memory(Last CH)	Yes
		Memory(Last Volume)	Yes
		V-Chip	Yes
		Type	<u>USA,Toshiba Type</u>
		BBE	No
		Auto Search	No
		CH Allocation	No
		SAP	Yes
		Just Clock Function	No
		CH Label	Yes
		VM Circuit	No
		Full OSD	No
		Premiere	No
		Comb Filter	Yes <u>2 Lines</u>
		Auto CH Memory	Yes
		Hotel Lock	No
		Closed Caption	Yes
		Stable Sound	Yes
		FBT Leak Test Protect	Yes
		CH Lock	Yes
		Video Lock	Yes
		Game Timer (Max Time:120 Min)	Yes
		Energy Star	No
		Favorite CH	Yes
		Surround	Yes
		16:9 Mode	Yes
G-12	Accessories	Owner's Manual	Language
			W/ Warranty
		Remote Control Unit	Yes
		Rod Antenna	No
		Poles	
		Terminal	
		Loop Antenna	No
		Terminal	-
		U/V Mixer	No
		DC Car Cord (Center+)	No
		Guarantee Card	No
		Warning Sheet	No
		Circuit Diagram	No
		Antenna Change Plug	No
		Service Station List	No
		Important Safety Instruction	No
		Dew/AHC Caution Sheet	No
		AC Plug Adapter	No
		Quick Set-up Sheet	No
		Battery	Yes
		UM size x pcs	UM-4 x 2
		OEM Brand	No
		AC Cord	No
		AV Cord (2Pin-1Pin)	No
		Registration Card (NDL Card)	Yes
		PTB Sheet	No
		ESP Card	No
		300 ohm to 75 ohm Antenna Adapter	No

GENERAL SPECIFICATIONS

G-13	Interface	Switch	Front	Power	Yes
				System Select	No
				Main Power SW	No
				Sub Power	No
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
		Rear	AC/DC		No
			TV/Cable Selector		No
			Degauss		No
			Main Power SW		No
	Indicator	Indicator	Power	Yes(RED)	
			Stand-by	No	
			On Timer	No	
	Terminals	Front	Video Input = VIDEO2	RCA	
			Audio Input = VIDEO2	RCA x 2(L/MONO,R)	
			Other Terminal	Head Phone	
		Rear	Video Input(Rear1) = VIDEO1	RCA	
			Video Input(Rear2) = VIDEO2	No	
			Audio Input(Rear1) = VIDEO1	RCA x 2(L/MONO,R)	
			Audio Input(Rear2) = VIDEO2	No	
			Video Output	No	
			Audio Output	No	
			Euro Scart	No	
			Color Stream	RCA x 3	
			S Input	Yes	
			Diversity	No	
			Ext Speaker	No	
			DC Jack 12V(Center +)	No	
			VHF/UHF Antenna Input	F Type	
			AC Outlet	No	
G-14	Set Size	Approx.	W x D x H (mm)	<u>590 x 484 x 446.5</u>	
G-15	Weight	Net (Approx.)		<u>23 kg</u>	(<u>50.6 lbs</u>)
		Gross (Approx.)		<u>26.5 kg</u>	(<u>58.3 lbs</u>)
G-16	Carton	Master Carton		No	
			Content	---	Sets
			Material	--	/--
			Dimensions W x D x H(mm)	--	x -- x --
			Description of Origin	No	
		Gift Box	Material	Double/Brown	
			Dimensions W x D x H(mm)	<u>695 x 575 x 549</u>	
			Description of Origin	Yes	
		Drop Test		Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces	
			Height (cm)	60 (ORION SPEC:46)	
		Container Stuffing		<u>272</u>	Sets/40' container
G-17	Cabinet Material	Cabinet	Cabinet Front	PS 94V0 DE CABROM	
			Cabinet Rear	PS 94V0 DE CABROM	
		PCB	Non-Halogen Demand	No	
			Eyelet Demand	Yes	
G-18	Environment	Environmental standard requirement		Green procurement of TOSHIBA	
		Pb-free		Phase3(Phase3A)	

GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	20 inch / 508mmV
		CRT Type	Flat	
		Magnetic Field	BV/BH	+0.45G/0.18G
		Color System		NTSC
		Speaker		2 Speaker
		Position		Front Side
		Size		2 x 4.7 Inch
		Impedance	8	ohm
		Sound Output	MAX	2.5+2.5 W
			10%(Typical)	- W
		NTSC3.58+4.43 /PAL60Hz		No
G-2	Tuning System	Broadcasting System	US System	M
		Tuner and System	1Tuner	
		Receive CH Destination	USA(W/ Cable)	
		CH Coverage	2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84	
		Intermediate Frequency	Picture(FP) Sound(FS) FP-FS	45.75MHz 41.25MHz 4.50MHz
		Preset CH		No
		Stereo/Dual TV Sound		Yes
		Tuner Sound Muting		Yes
		Power Source	AC DC	120V AC 60Hz
G-3		Power Consumption	at AC	105 W at AC 120 V 60 Hz 3 W at AC 120 V 60 Hz -- kWh/Year
		Stand by (at AC) Per Year		
		Protector	Power Fuse Safety Circuit IC Protector(Micro Fuse)	Yes Yes No
		Safety Radiation X-Radiation		CSA IC HWC
G-4	Regulation	Operation Storage		+5oC ~ +40oC -20oC ~ +60oC
G-5	Temperature			
G-6	Operating Humidity			Less than 80% RH

GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu		Yes
		Menu Type		Icon
		Picture		Yes
		Contrast		Yes
		Brightness		Yes
		Color		Yes
		Tint		Yes
		Sharpness		Yes
		Sound		Yes
		Bass		Yes
		Treble		Yes
		Balance		Yes
		BBE On/Off		No
		Stable Sound On/Off		Yes
		Surround On/Off		Yes
		Set Up		Yes
		TV/Cable		Yes
		Auto CH Memory		Yes
		Add/ Delete		Yes
		Option		Yes
		Language		Yes
		CH Label		Yes
		Favorite CH		Yes
		V-Chip		No
		Lock		Yes
		On/Off Timer		Yes
		Color Stream DVD/DTV		Yes
		Control Level		Yes
		Volume		Yes
		Brightness		Yes
		Contrast		Yes
		Color		Yes
		Tint		Yes
		Sharpness		Yes
		Tuning		No
		Bass		Yes
		Treble		Yes
		Balance		Yes
		Back Light		No
		Stereo, Audio Output, SAP		Yes
		Video		Yes
		Color Stream		Yes
		Channel(TV/Cable)		Yes
		CH Label		Yes
		Game Timer		Yes
		Sleep Timer		Yes
		Sound Mute		Yes
		V-chip Rating		No
		16: 9		Yes
G-8	OSD Language		English French Spanish	
G-9	Clock and Timer	Sleep Timer	Max Time Step	120 Min 10 Min
		On/Off Timer	Program(On Timer / Off Timer / Clock)	Yes
		Wake Up Timer		No
		Timer Back-up (at Power Off Mode)	more than	-- Min Sec

GENERAL SPECIFICATIONS

G-10	Remote Control	Unit	RC-GQ
		Glow in Dark Remocon	Yes
		Format	Toshiba
		Remocon Format	Toshiba
		Custom Code	TV:40-BF h
		Power Source	3V
			UM size x 2 pcs
		Total Keys	30 Keys
		Keys	
		Power	Yes
		1	Yes
		2	Yes
		3	Yes
		4	Yes
		5	Yes
		6	Yes
		7	Yes
		8	Yes
		9	Yes
		0	Yes
		100	Yes
		CH Up	Yes
		CH Down	Yes
		Volume Up	Yes
		Volume Down	Yes
		Cap/Text(TV/Caption/Text)	Yes
		1/2(CH1/CH2)	Yes
		TV/Video(TV/AV)	Yes
		CH RTN(Quick View)	Yes
		Sleep	Yes
		RECall(Call)	Yes
		Reset	Yes
		Menu/Enter	Yes
		Mute	Yes
		Exit	Yes
		MTS(Audio Select)	Yes
		Fav.Up	Yes
		Fav.Down	Yes
		16:9	Yes
	Multi Brand Keys	CH Up(VCR)	No
		CH Down(VCR)	No
		Pause/Still	No
		TV/VCR(VCR)	No
		FF	No
		Rew	No
		Rec	No
		Play	No
		Stop	No
		TV	No
		VCR	No
		Cable	No
		DVD	No
		CODE	No
		DVD MENU <	No
		DVD MENU >	No
		DVD CLEAR	No
		TOP MENU	No
		DVD MENU	No

GENERAL SPECIFICATIONS

G-11	Features	Auto Degauss	Yes
		Auto Shut Off	Yes
		Canal+	No
		Cable	Yes
		Anti-theft	No
		Rental	No
		Memory(Last CH)	Yes
		Memory(Last Volume)	Yes
		V-Chip	No
		Type	- Type
		BBE	No
		Auto Search	No
		CH Allocation	No
		SAP	Yes
		Just Clock Function	No
		CH Label	Yes
		VM Circuit	No
		Full OSD	No
		Premiere	No
		Comb Filter	Yes 2 Lines
		Auto CH Memory	Yes
		Hotel Lock	No
		Closed Caption	Yes
		Stable Sound	Yes
		FBT Leak Test Protect	Yes
		CH Lock	Yes
		Video Lock	Yes
		Game Timer (Max Time:120 Min)	Yes
		Energy Star	No
		Favorite CH	Yes
		Surround	Yes
		16:9 Mode	Yes
G-12	Accessories	Owner's Manual	Language W/ Warranty
		Remote Control Unit	Yes
		Rod Antenna	No
		Poles	
		Terminal	
		Loop Antenna	No
		Terminal	-
		U/V Mixer	No
		DC Car Cord (Center+)	No
		Guarantee Card	No
		Warning Sheet	No
		Circuit Diagram	No
		Antenna Change Plug	No
		Service Station List	No
		Important Safety Instruction	No
		Dew/AHC Caution Sheet	No
		AC Plug Adapter	No
		Quick Set-up Sheet	No
		Battery	Yes UM-4 x 2
		UM size x pcs	
		OEM Brand	No
		AC Cord	No
		AV Cord (2Pin-1Pin)	No
		Registration Card (NDL Card)	No
		PTB Sheet	No
		ESP Card	No
		300 ohm to 75 ohm Antenna Adapter	No

GENERAL SPECIFICATIONS

G-13	Interface	Switch	Front	Power	Yes
				System Select	No
				Main Power SW	No
				Sub Power	No
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
		Rear		AC/DC	No
				TV/Cable Selector	No
				Degauss	No
				Main Power SW	No
	Indicator			Power	Yes(RED)
				Stand-by	No
				On Timer	No
	Terminals	Front		Video Input = VIDEO2	RCA
				Audio Input = VIDEO2	RCA x 2(L/MONO,R)
				Other Terminal	Head Phone
		Rear		Video Input(Rear1) = VIDEO1	RCA
				Video Input(Rear2) = VIDEO2	No
				Audio Input(Rear1) = VIDEO1	RCA x 2(L/MONO,R)
				Audio Input(Rear2) = VIDEO2	No
				Video Output	No
				Audio Output	No
				Euro Scart	No
				Color Stream	RCA x 3
				S Input	Yes
				Diversity	No
				Ext Speaker	No
				DC Jack 12V(Center +)	No
				VHF/UHF Antenna Input	F Type
				AC Outlet	No
G-14	Set Size		Approx.	W x D x H (mm)	590 x 484 x 446.5
G-15	Weight		Net (Approx.)	23 kg	(50.6 lbs)
			Gross (Approx.)	26.5 kg	(58.3 lbs)
G-16	Carton	Master Carton			No
			Content	---	Sets
			Material	--	/--
			Dimensions W x D x H(mm)	-- x -- x --	
			Description of Origin		No
		Gift Box	Material	Double/Brown	
			Dimensions W x D x H(mm)	695 x 575 x 549	
			Description of Origin		Yes
		Drop Test			Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces
			Height (cm)	60 (ORION SPEC:46)	
			Container Stuffing	272	Sets/40' container
G-17	Cabinet Material	Cabinet	Cabinet Front	PS 94V0	DECABROM
			Cabinet Rear	PS 94V0	DECABROM
		PCB	Non-Halogen Demand		No
			Eyelet Demand		Yes
G-18	Environment		Environmental standard requirement		Green procurement of TOSHIBA
			Pb-free		Phase3(Phase3A)

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- * After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- * Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 1-1.)**

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.

A cracking noise will be heard as the voltage is discharged.

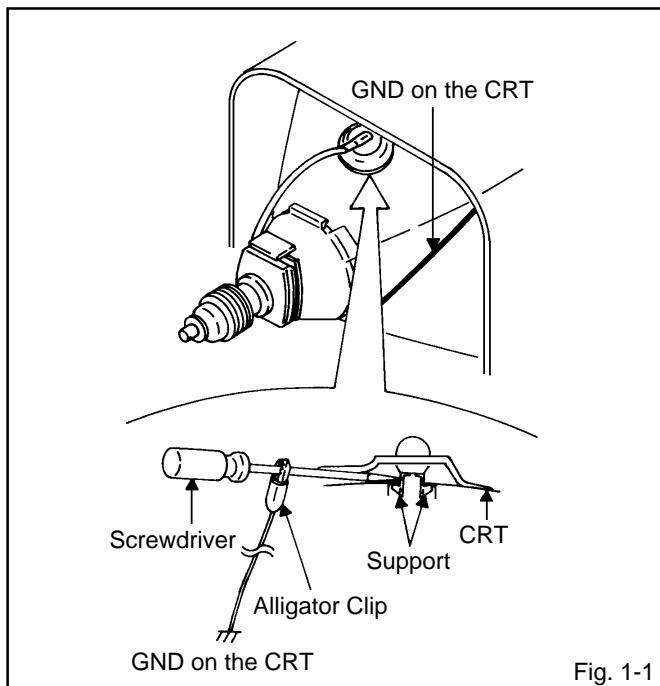


Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 1-2.)**

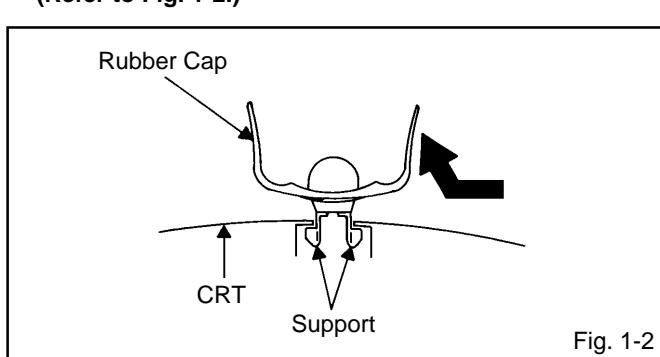


Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 1-3.)**

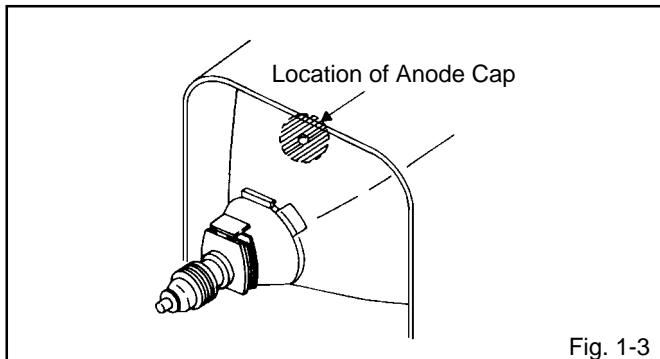


Fig. 1-3

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 1-4.)**

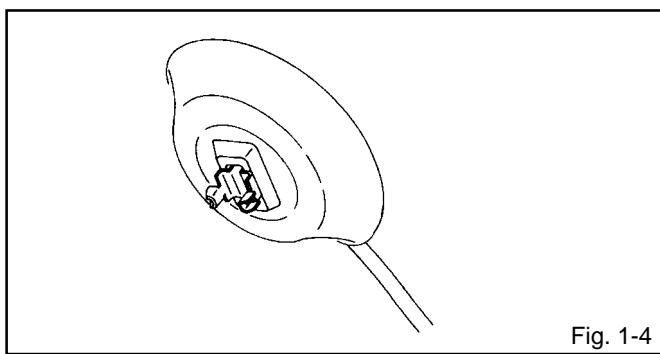


Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in **Fig. 1-5.**

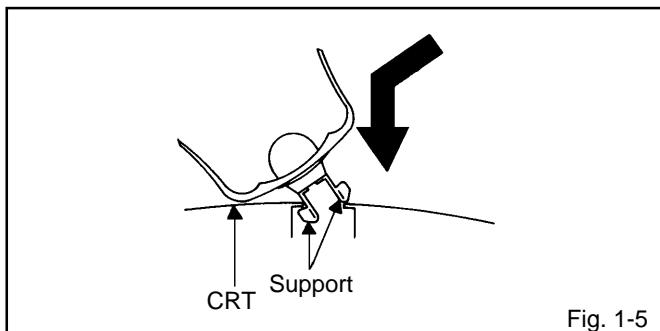


Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS


2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 2-1.)

NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

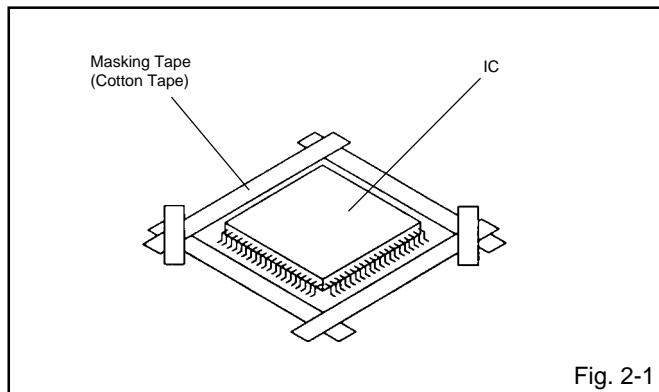

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 2-2.)

NOTE


Do not rotate or move the IC back and forth , until IC can move back and forth easily after desoldering the leads completely.

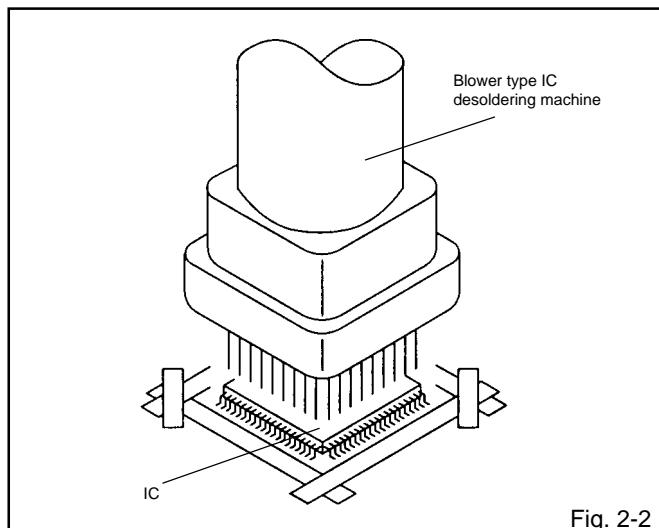

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 2-3.)

NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

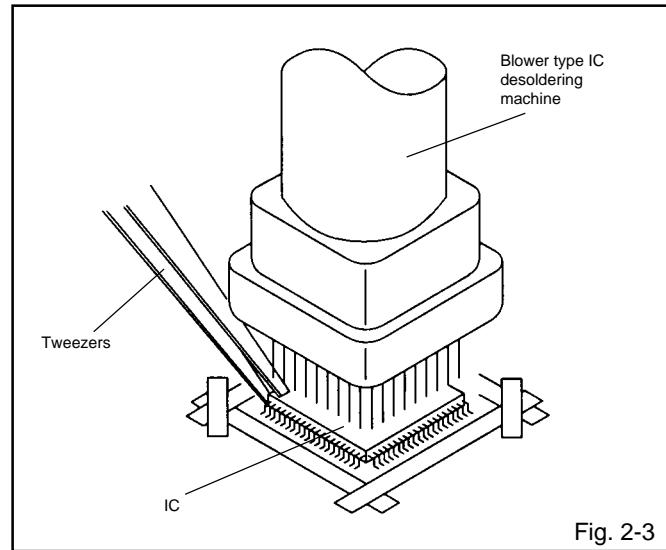

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 2-4.)

NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

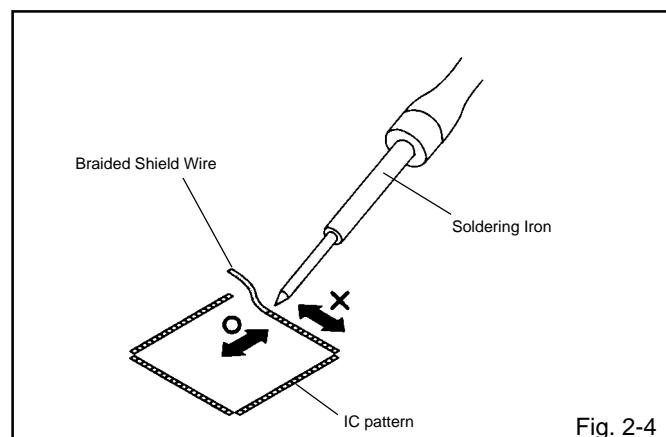


DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily.
(Refer to Fig. 2-5.)

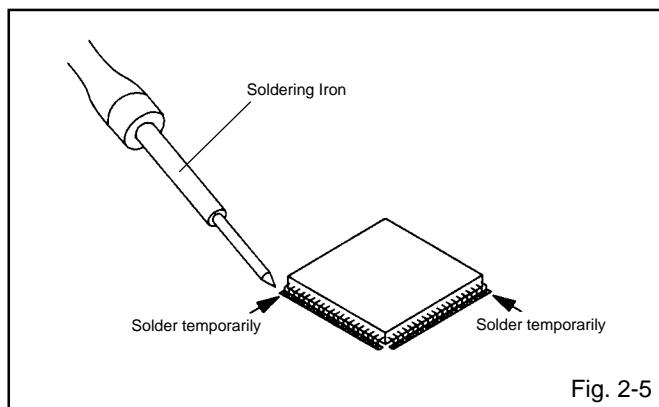


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads.
(Refer to Fig. 2-6.)

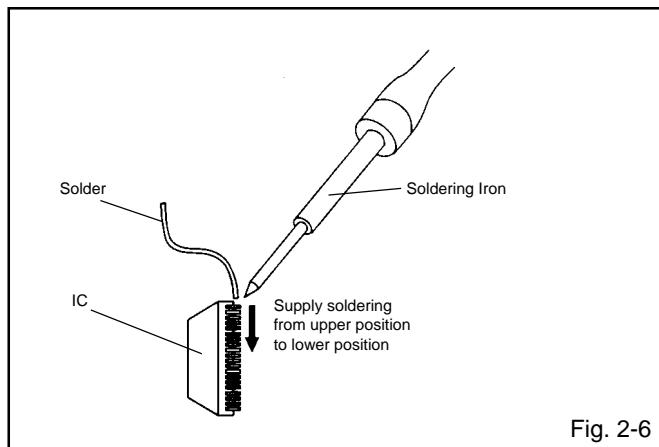


3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 2-7.)**

NOTE

Do not absorb the solder to excess.

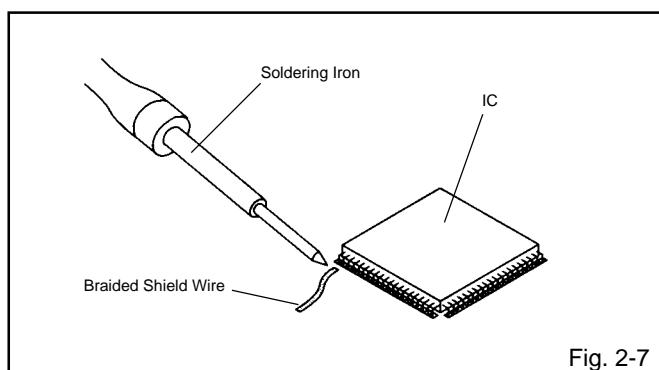

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 2-8.)**

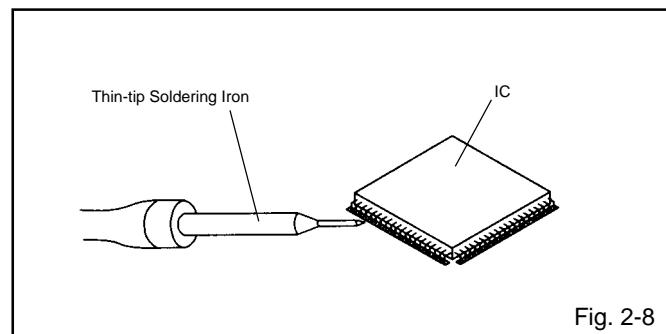

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, always be sure to replace the IC in this case.

SERVICE MODE LIST

This unit is provided with the following SERVICE MODES so you can repair, examine and adjust easily.
To enter to the Service Mode, press both set key and remote control key for more than 1 second.


Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of factory data. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED". Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

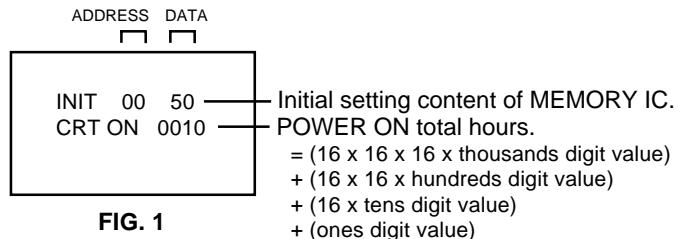

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: No need setting for after INI 5F due to the adjustment value.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	50	E8	0A	45	5E	B3	24	B5	*1	AC	0B	84	40	40	40	7F
10	50	00	00	00	03	00	00	00	3F	0F	0D	E2	94	88	3F	00
20	01	04	07	09	0B	0D	0F	10	11	12	13	14	15	16	17	18
30	18	19	19	1A	1A	1B	1B	1B	1C	1C	1C	1D	1D	1E	1E	1F
40	1F	1F	20	20	20	21	21	21	22	22	23	23	24	24	25	25
50	26	26	27	27	28	28	29	29	2A	2A	2B	2B	2C	2C	2D	2D

*1

INI	USA	CANADA
08	3B	3A

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second. ADDRESS and DATA should appear as FIG 1.
3. ADDRESS is now selected and should "blink". Using the VOL. UP/DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using VOL. UP/DOWN button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.
After the data input, set to the initializing of shipping.
9. Turn POWER on.
10. Press both VOL. DOWN button on the set and Channel button **(1)** on the remote control for more than 1 second.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.
The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. ADJUSTMENT PROCEDURE

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Multi-sound Generator
4. Pattern Generator

On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button (9) on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

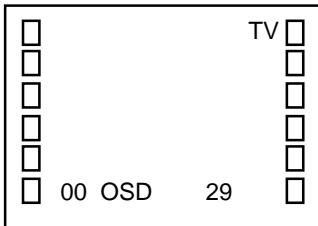


Fig. 1-1

2. Use the Channel UP/DOWN button or Channel button (0-9) on the remote control to select the options shown in **Fig. 1-2**.
3. Press the MENU button on the remote control to end the adjustments.

NO. FUNCTION	NO. FUNCTION
00 OSD H	18 CONTRAST MAX
01 CUT OFF	19 CONTRAST CENT
02 H. VCO	20 CONTRAST MIN
03 H. PHASE	21 COLOR MAX
04 AFC GAIN	22 COLOR CENTER
05 V. SHIFT	23 COLOR MIN
06 H. SIZE	24 TINT
07 V. SIZE	25 SHARPNESS
08 V. LINERITY	26 CB DL
09 VS CORRECTION	27 CR DL
10 R DRIVE	28 CB PED
11 B DRIVE	29 CR PED
12 R CUT OFF	30 PARABOLA
13 G CUT OFF	31 CORNER
14 B CUT OFF	32 TRAPWZIUM
15 BRIGHT MAX	33 LEVEL
16 BRIGHT CENT	34 SEPARATION1
17 BRIGHT MIN	35 SEPARATION2

Fig. 1-2

2. BASIC ADJUSTMENTS

2-1: CONSTANT VOLTAGE

1. Set condition is AV MODE without signal.
2. Connect the digital voltmeter to the **TP003**.
3. Adjust the **VR502** until the digital voltmeter is $115 \pm 0.5V$.

2-2: CUT OFF

1. Place the set with Aging Test for more than 15 minutes.
2. Set condition is AV MODE without signal.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (01) on the remote control to select "CUT OFF".
5. Adjust the **Screen Volume** until a dim raster is obtained.

2-3: WHITE BALANCE, WHITE BALANCE CS

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the gray scale pattern from the Pattern Generator with Brust On.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (12) on the remote control to select "R. BIAS".
5. Press the CH. UP/DOWN button on the remote control to select the "R. BIAS", "G. BIAS", "B. BIAS", "B. DRIVE" or "R. DRIVE".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R. BIAS, G. BIAS, B. BIAS, B. DRIVE and R. DRIVE at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.
8. Press the TV/VIDEO button on the remote control to set to the CS mode.
9. Receive the gray scale pattern from the Pattern Generator with Brust On.
10. If the picture is too much green. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (28) on the remote control to select "CB PED".
11. Adjust the VOL. UP/DOWN button on the remote control to select the step up.
12. If the picture is too much red. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (29) on the remote control to select "CR PED".
13. Adjust the VOL. UP/DOWN button on the remote control to select the step down.

2-4: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

ELECTRICAL ADJUSTMENTS

2-5: VERTICAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Adjust the **VR401** until the horizontal line becomes fit to the notch of the shadow mask.

2-6: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(07)** on the remote control to select "V. SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes $9 \pm 2\%$.

2-7: VERTICAL LINEARITY

NOTE: Adjust after performing adjustments in section 2-6.
After the adjustment of Vertical Linearity, reconfirm the Vertical Position and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness, contrast, to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(08)** on the remote control to select "V. LINEARITY".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

2-8: LEVEL

1. Connect the AC voltmeter to **pin 6 of CP101**.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(33)** on the remote control to select "LEVEL".
3. Press the VOL. UP/DOWN button on the remote control until the AC voltmeter is $90 \pm 2\text{mV}$.

2-9: HORIZONTAL PHASE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(03)** on the remote control to select "H.PHASE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

2-10: CONTRAST MAX

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(18)** on the remote control to select "CONT. MAX".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "95".
3. Receive a broadcast and check if the picture is normal.
4. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 1~3.
5. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 1~3.

2-11: SEPARATION 1, 2

Please do the method (1) or method (2) adjustment.

Method (1)

1. Set the multi-sound signal generator for each different L-ch and R-ch frequency (Ex. L-ch=2KHz, R-ch=400Hz) and receive the RF.
2. Connect the oscilloscope to the **pin 6 and pin 7 of CP101**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(34)** on the remote control to select "SEP 1".
4. Press the VOL. UP/DOWN button on the remote control to adjust it until the audio output wave becomes a fine sine wave.
5. Press the CH UP button once the set to "SEP 2" mode. Then perform the above adjustment 4.

Method (2)

1. Set the multi-sound signal generator L-ch=1KHz, R-ch =Non input and receive the RF.
2. Connect the oscilloscope to the **pin 6 of CP101**.
3. Press the AUDIO SELECT button on the remote control to set to the stereo mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(34)** on the remote control to select "SEP 1".
5. Press the VOL. UP/DOWN button on the remote control to adjust it until the R-ch output becomes minimum.
6. Set the multi-sound signal generator L-ch=Non input, R-ch=1KHz and receive the RF.
7. Connect the oscilloscope to the pin 7 of CP101.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(35)** on the remote control to select "SEP 2".
9. Press the VOL. UP/DOWN button on the remote control to adjust it until the L-ch output becomes minimum. The output difference of the between with Filter and without Filter should be more than 25db for both L and R.

2-12: OSD POSITION

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. (**Refer to Fig. 2-1**)

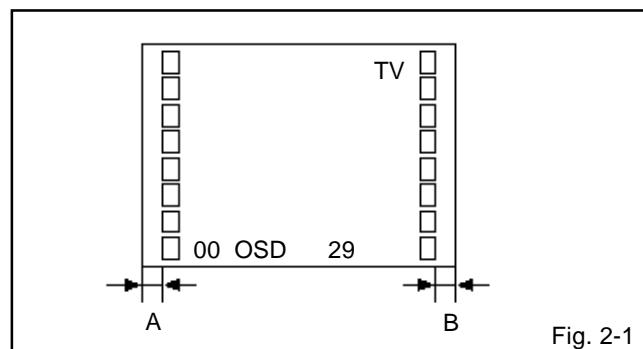


Fig. 2-1

ELECTRICAL ADJUSTMENTS

2-13: BRIGHT CENT

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI CENT".
4. Press the VOL. UP/DOWN button on the remote control until the white 10% is starting to be visible.
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.
7. Press the TV/VIDEO button on the remote control to set to the CS mode.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI CENT".
9. Press the VOL. UP/DOWN button on the remote control until the brightness step No. becomes "80".

2-14: COLOR CENT

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP022**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "COL. CENT".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales on the screen of the oscilloscope.
6. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to $120 \pm 5\%$ of the white level. (**Refer to Fig. 2-2**)
7. Receive the video color bar pattern. (Audio Video Input)
8. Set to the AV mode. Then perform the above adjustments 2~6.
9. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 2~4.
10. Press the VOL. UP/DOWN button on the remote control until the color step No. becomes "66".

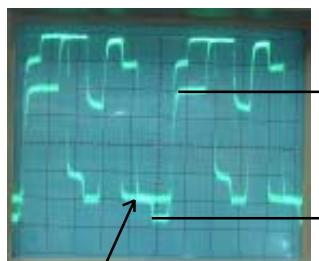


Fig. 2-2

2-15: TINT

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP024**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(24)** on the remote control to select "TINT".
5. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes as straight line. (**Refer to Fig. 2-3**)
6. Receive the video color bar pattern. (Audio Video Input)
7. Set to the AV mode. Then perform the above adjustments 2~5.
8. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 2~4.
9. Press the VOL. UP/DOWN button on the remote control until the tint step No. becomes "52".

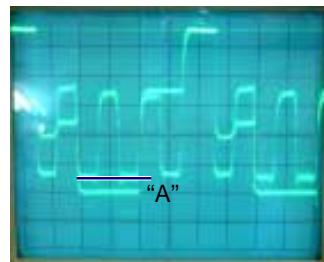


Fig. 2-3

2-16: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	RF	AV	CS
02	H.VCO	03	03	03
04	AFC GAIN	07	07	07
05	V.SHIFT	02	02	02
06	H.SIZE	01	01	01
09	VS CORRECTION	34	34	34
15	BRI.MAX	125	125	125
17	BRI.MIN	75	75	75
19	CONT.CENT	50	50	50
20	CONT.MIN	18	18	18
21	COL.MAX	90	90	90
23	COL.MIN	00	00	00
25	SHARPNESS	40	40	40
26	CB DL	00	00	00
27	CR DL	00	00	00
30	PARABOLA	31	31	31
31	CORNER	31	31	31
32	TRAPEZIUM	31	31	31

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. (**Refer to Fig. 3-1**)
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
3. Adjust the pair of purity magnets so the color at the ends are equally wide.
4. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
5. Confirm red and blue color.
Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

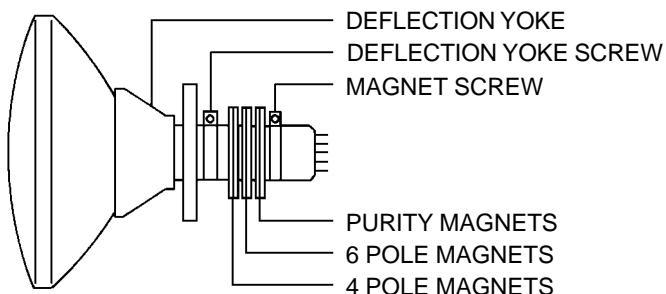


Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. (**Refer to Fig. 3-2-a**)
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. (**Refer to Fig. 3-2-b**)

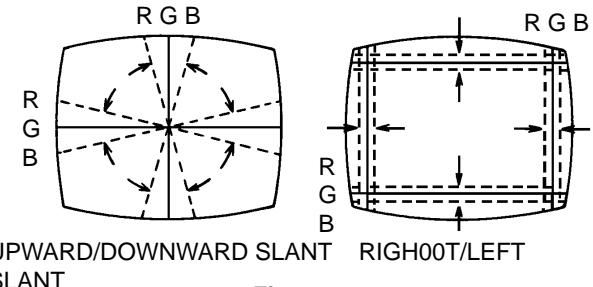


Fig. 3-2-a


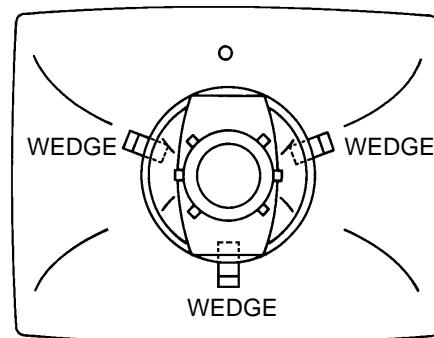



Fig. 3-2-b

ELECTRICAL ADJUSTMENTS


4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

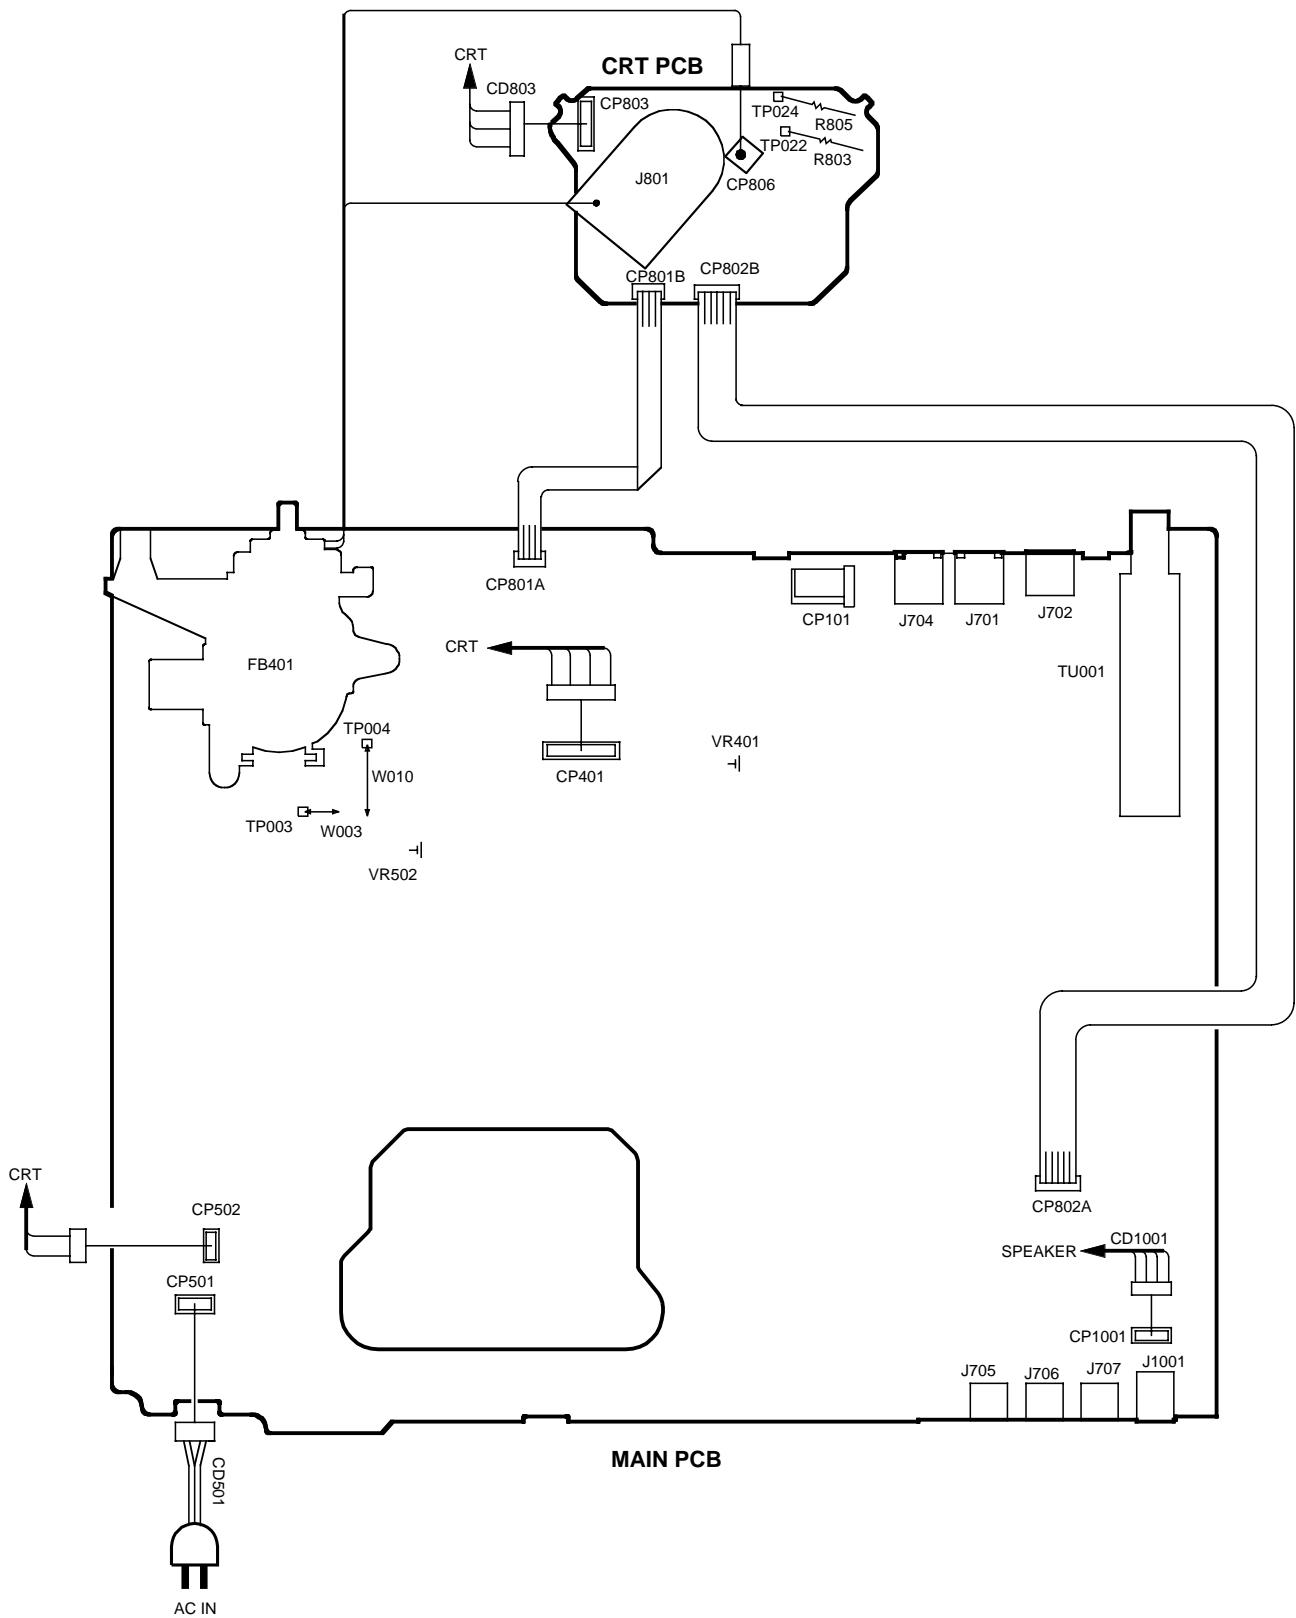


BLOCK DIAGRAM

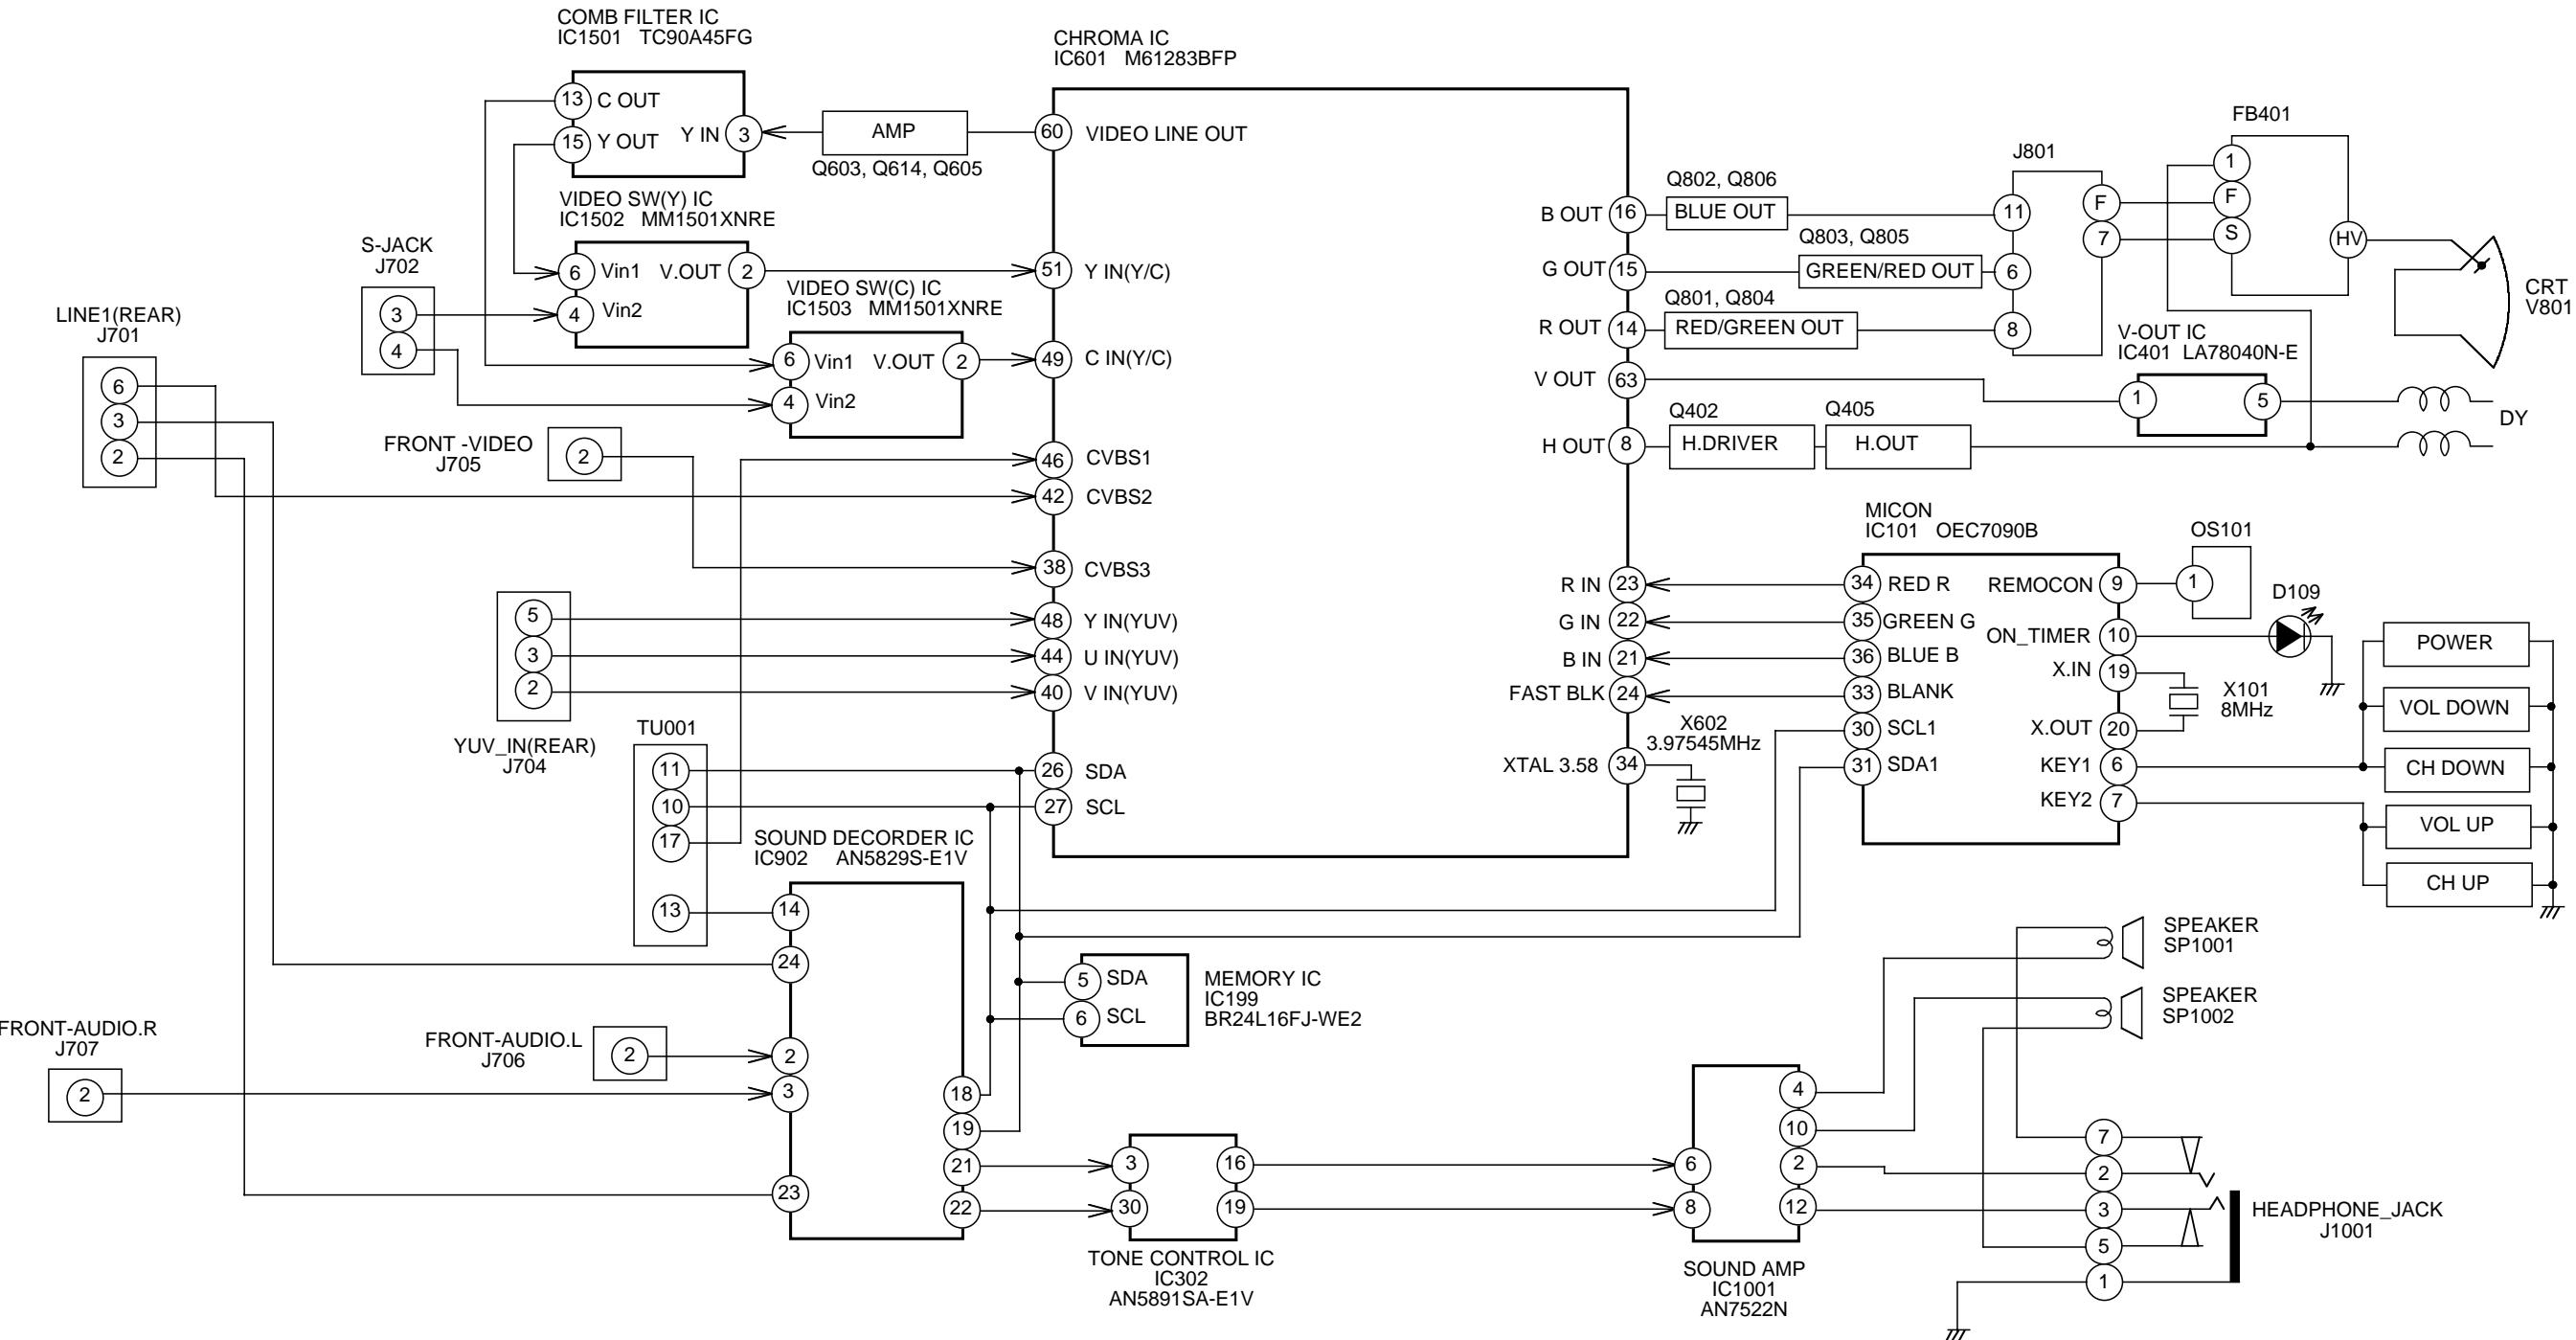


**PRINTED CIRCUIT BOARDS
MAIN/CRT (INSERTED PARTS)
SOLDER SIDE**

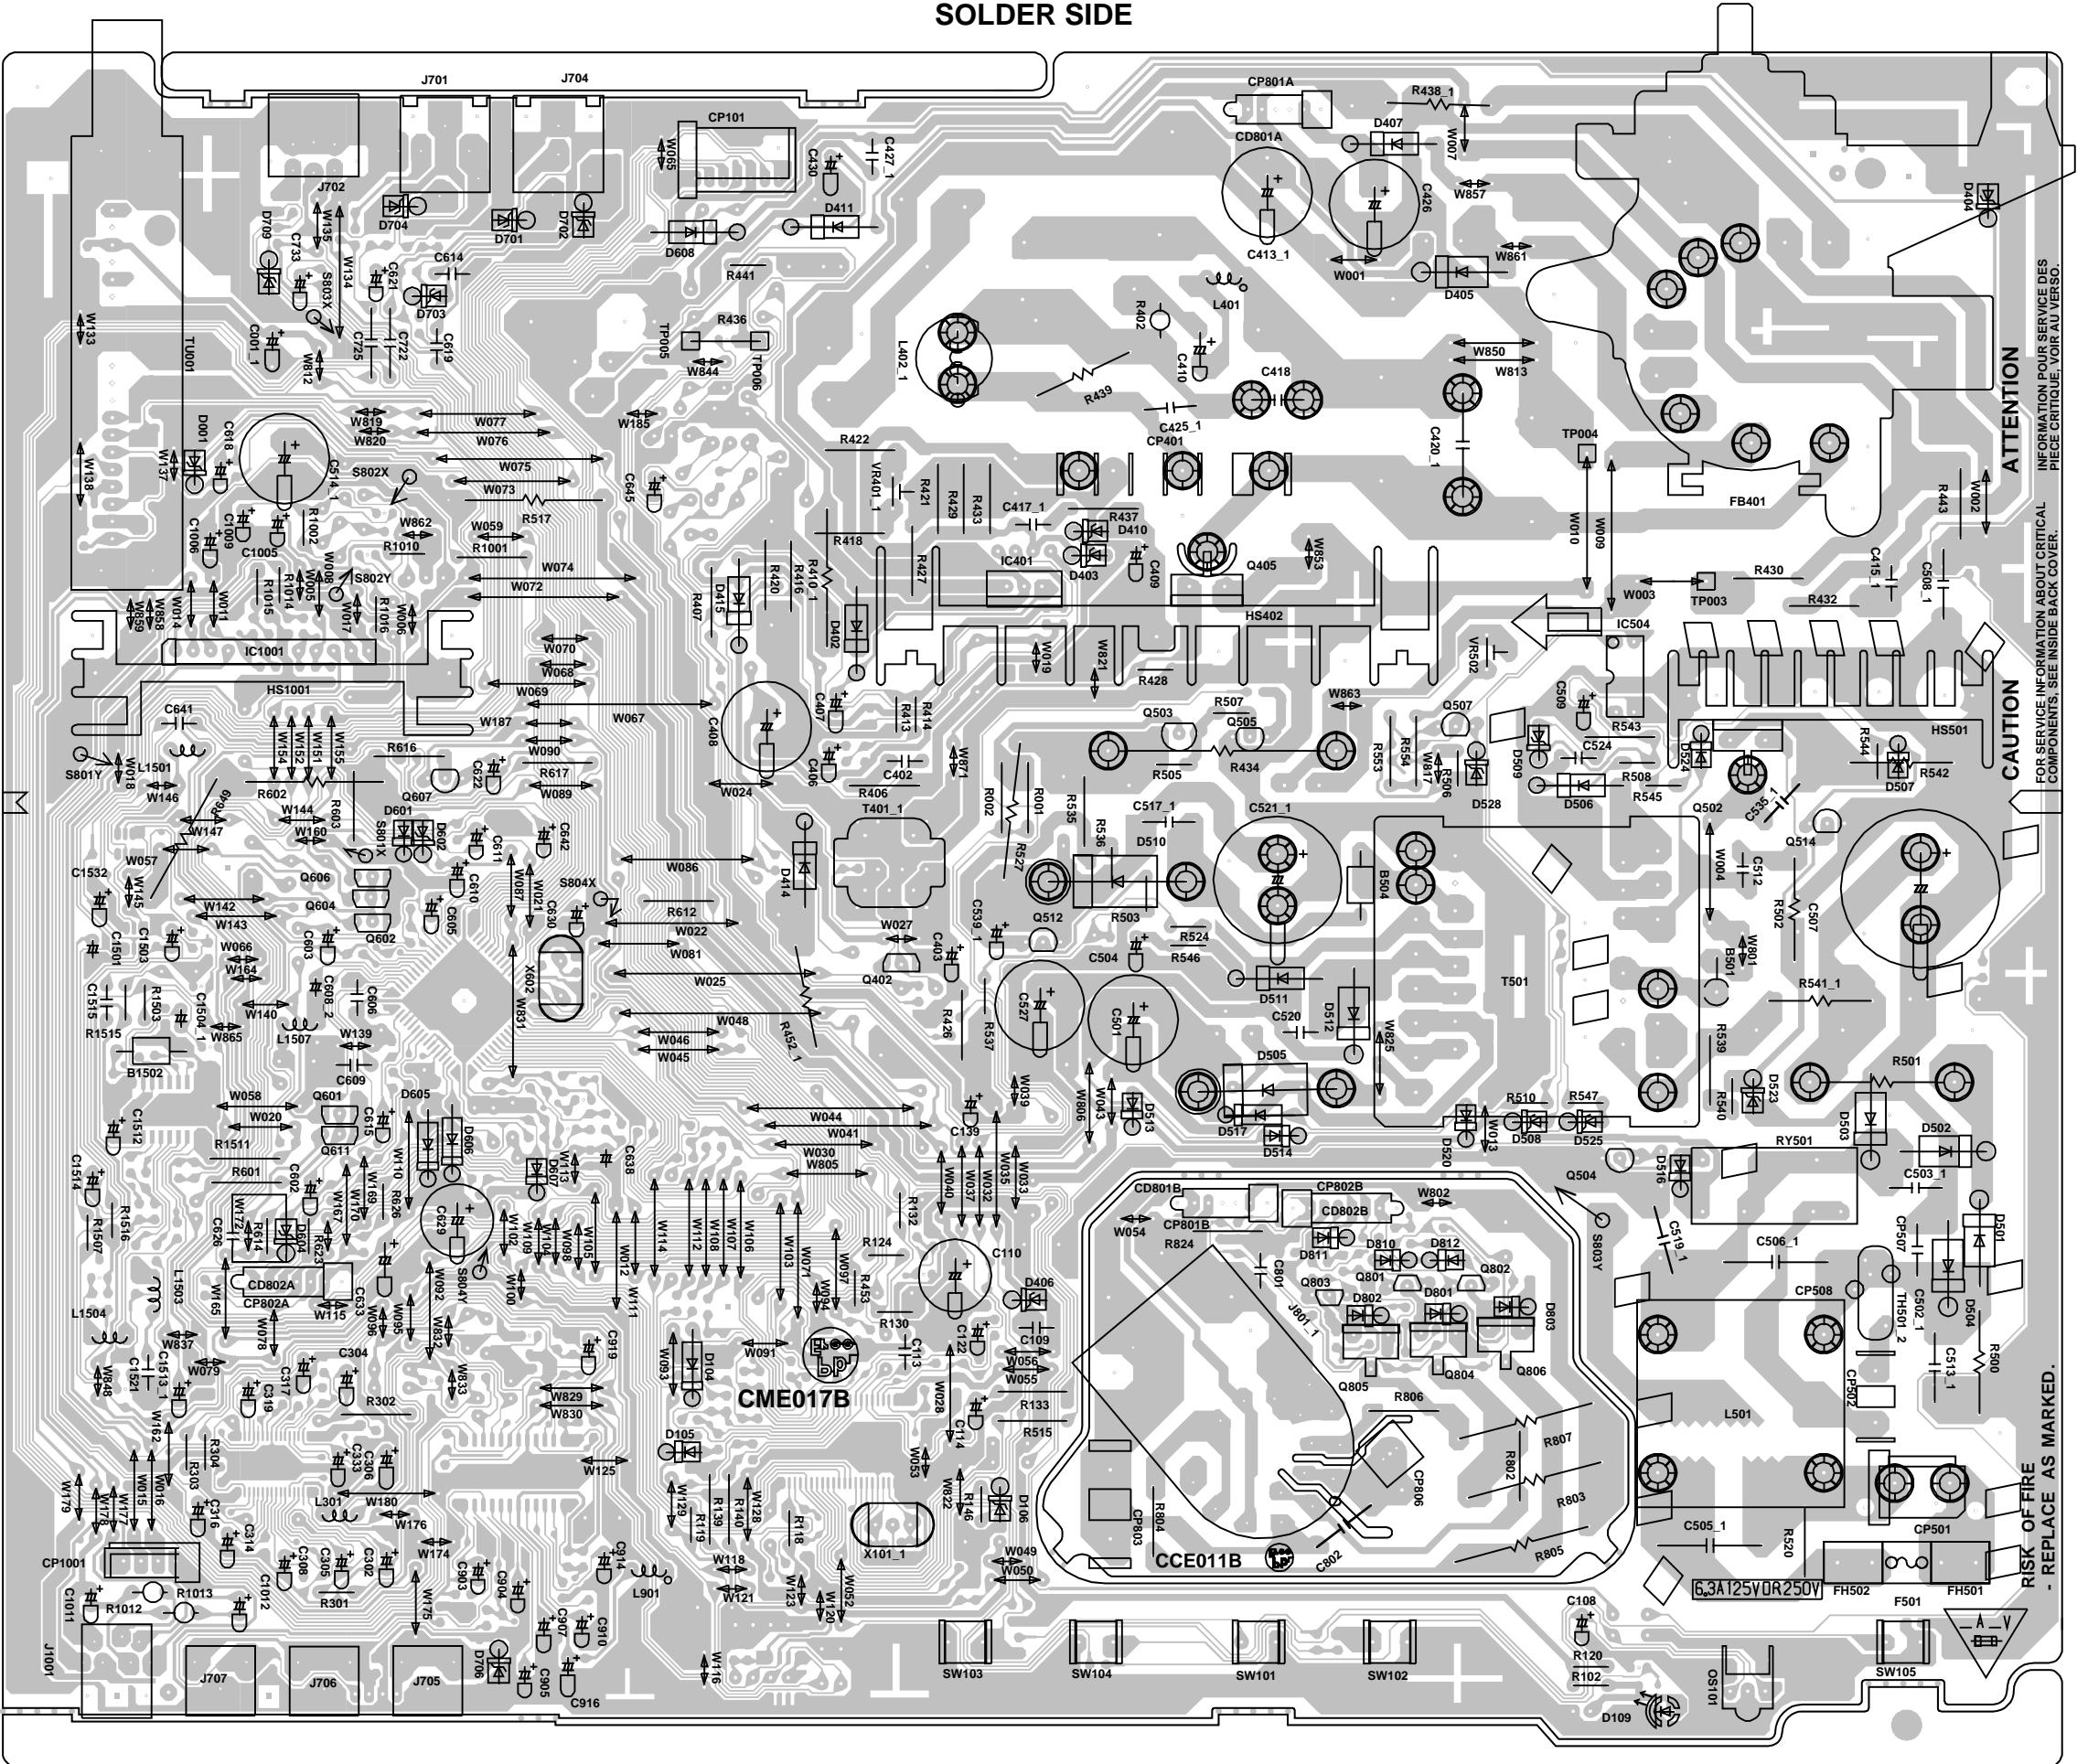

**PRINTED CIRCUIT BOARDS
MAIN/CRT (CHIP MOUNTED PARTS)
SOLDER SIDE**

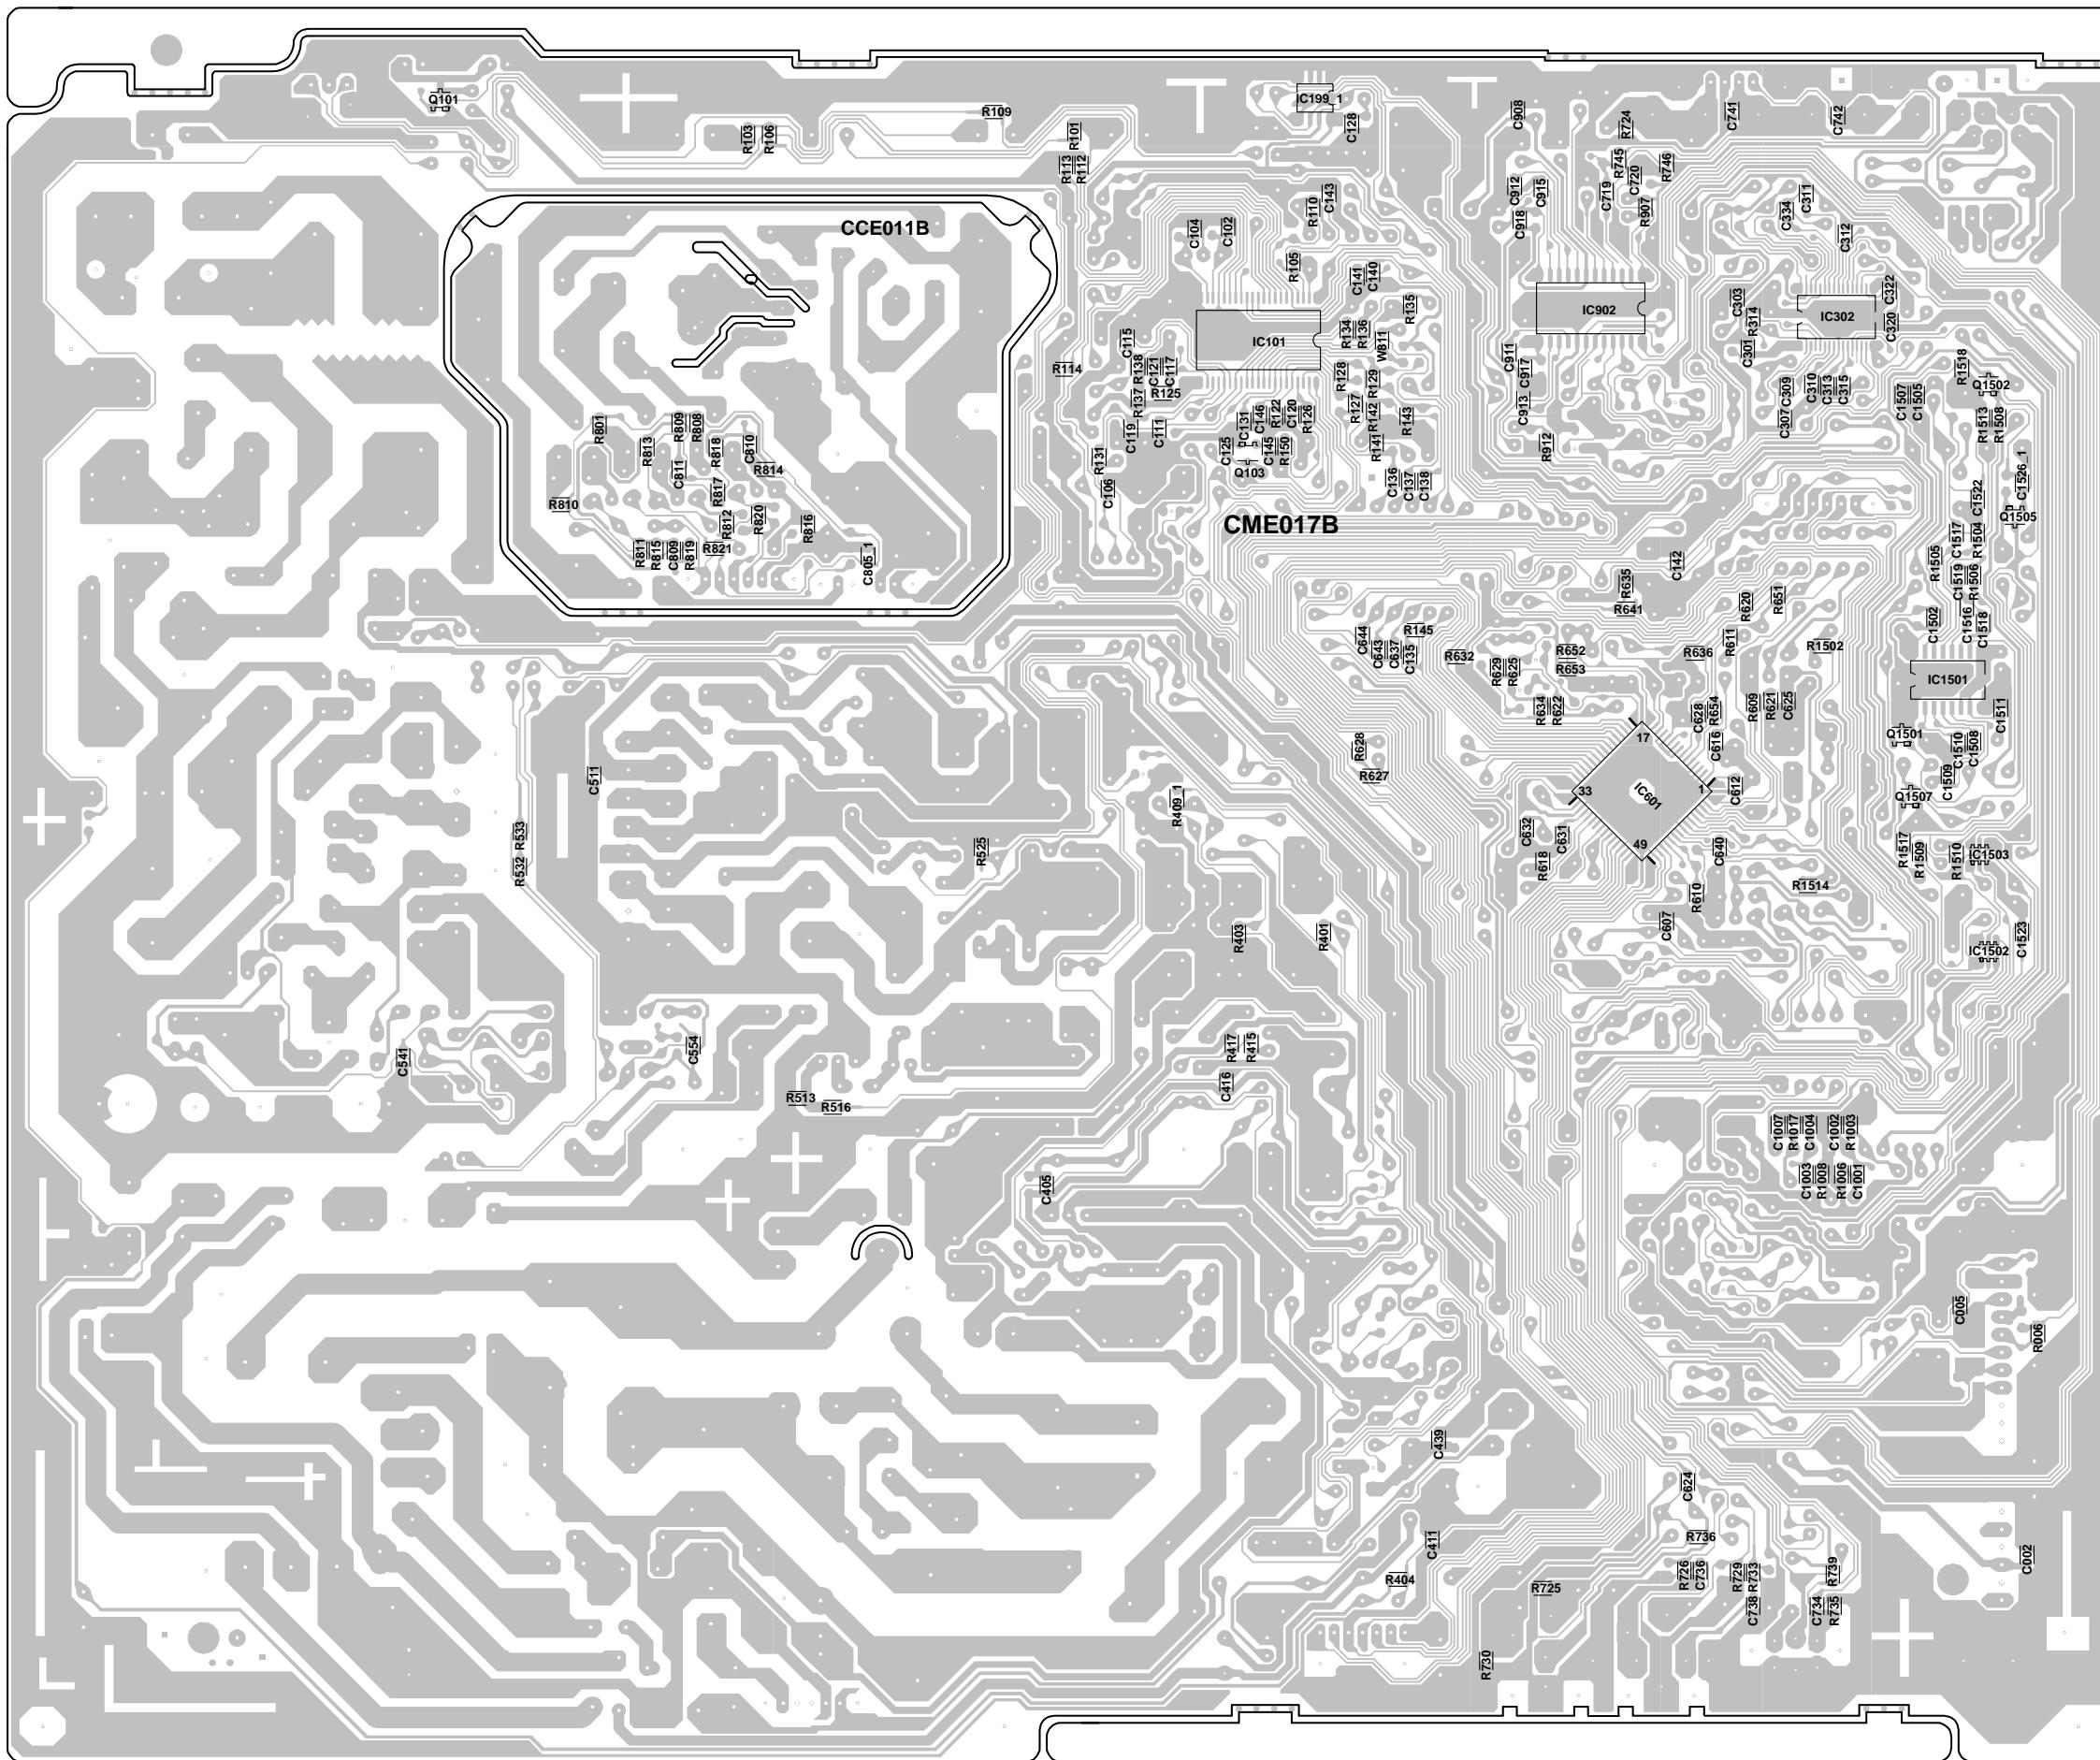

MICON SCHEMATIC DIAGRAM (MAIN PCB)

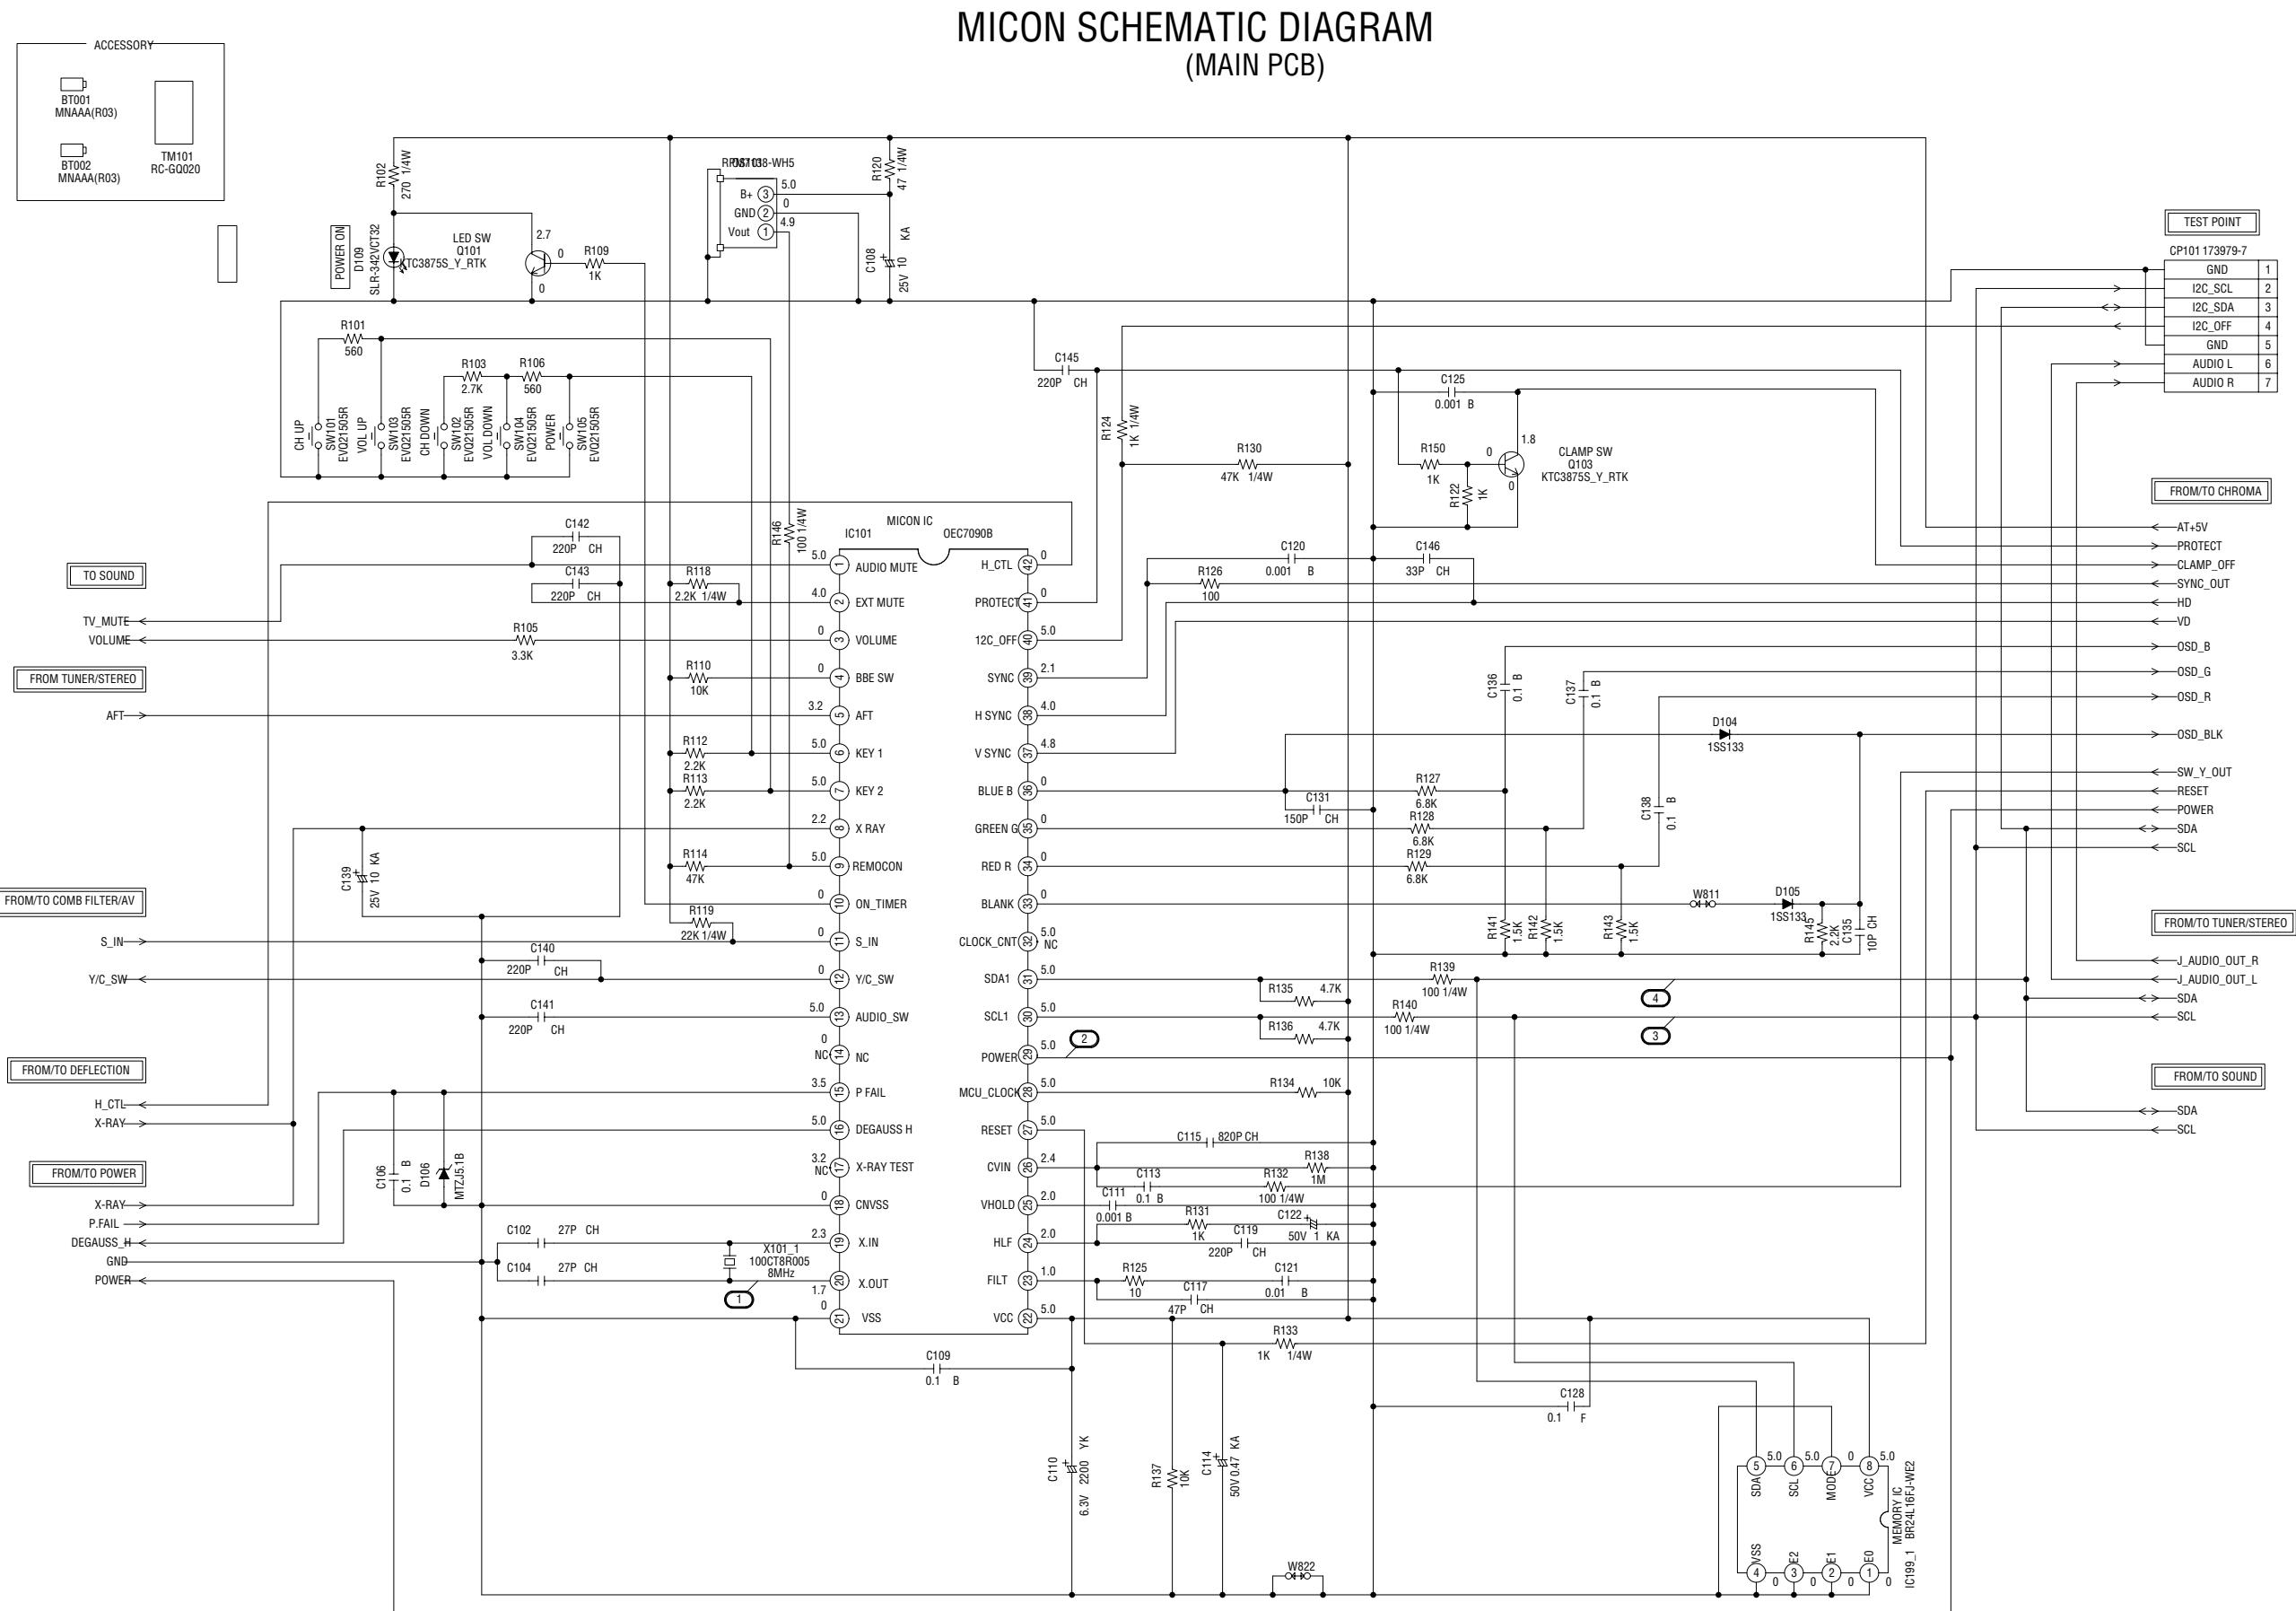


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMA

CAUTION: DIGITAL TRANSISTOR



CHROMA SCHEMATIC DIAGRAM (MAIN PCB)

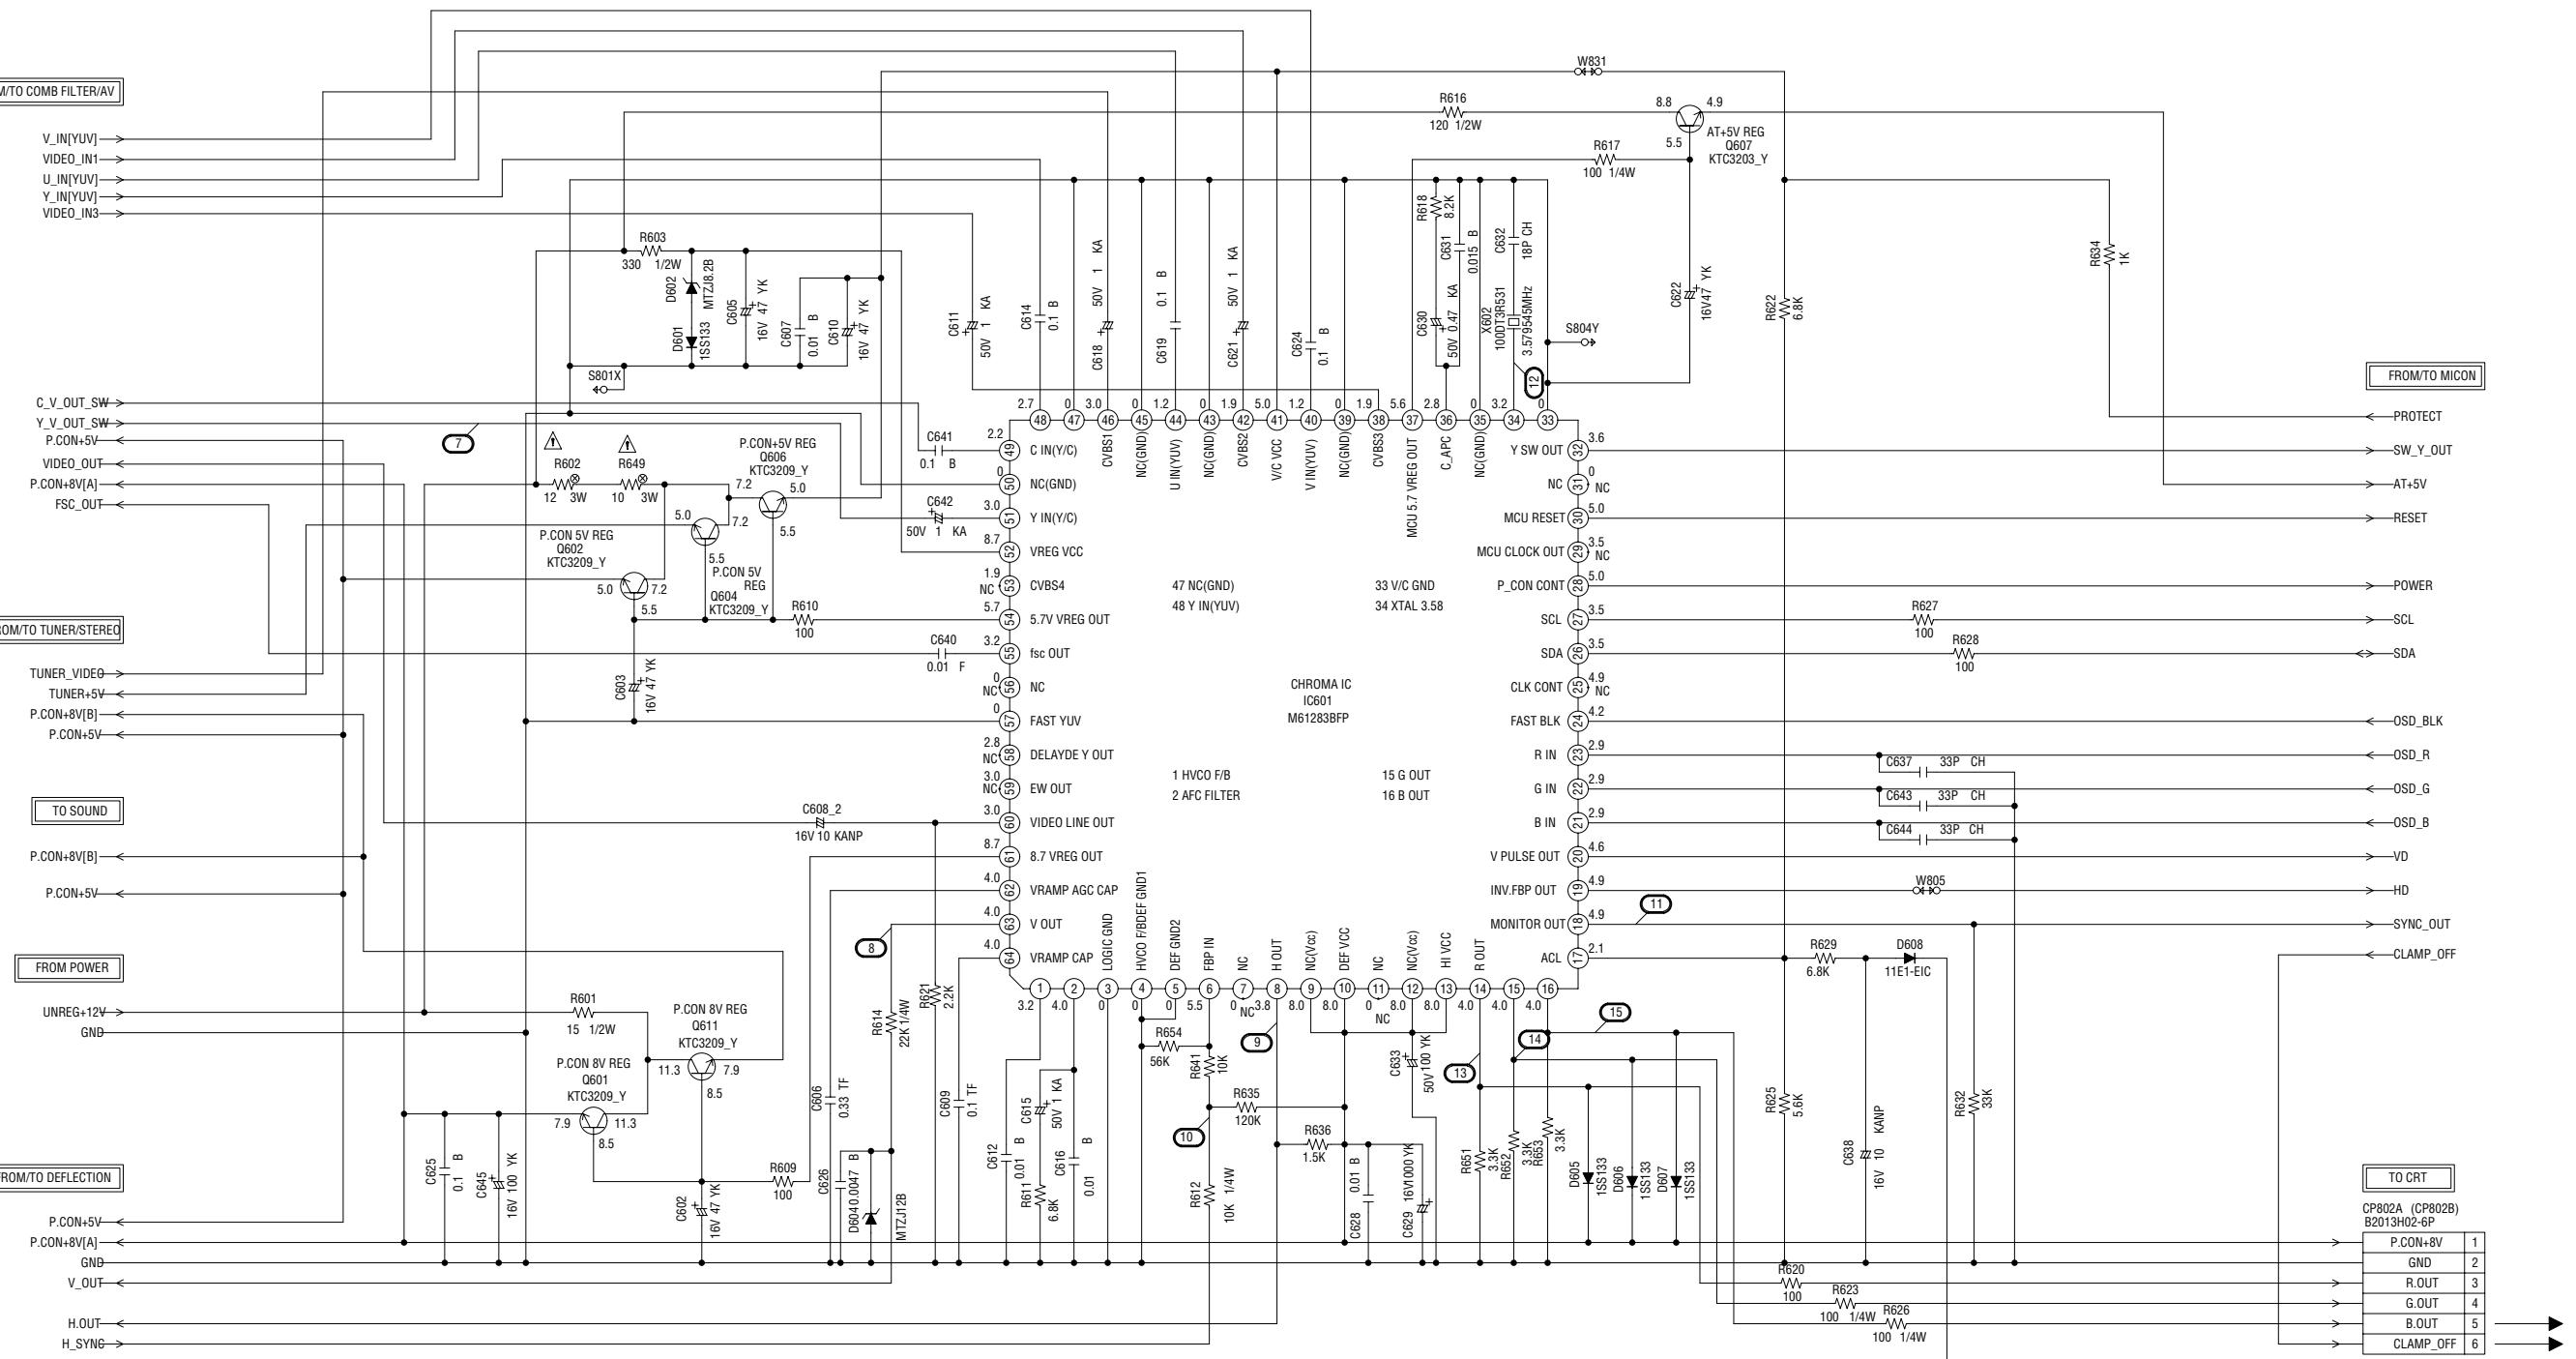

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL


ATTENTION: LES PIECES REPARÉES PAR UN  ETANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION SINCE THESE PARTS MARKED BY  ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.


CAUTION: DIGITAL TRANSISTOR




DEFLECTION SCHEMATIC DIAGRAM (MAIN PCB)

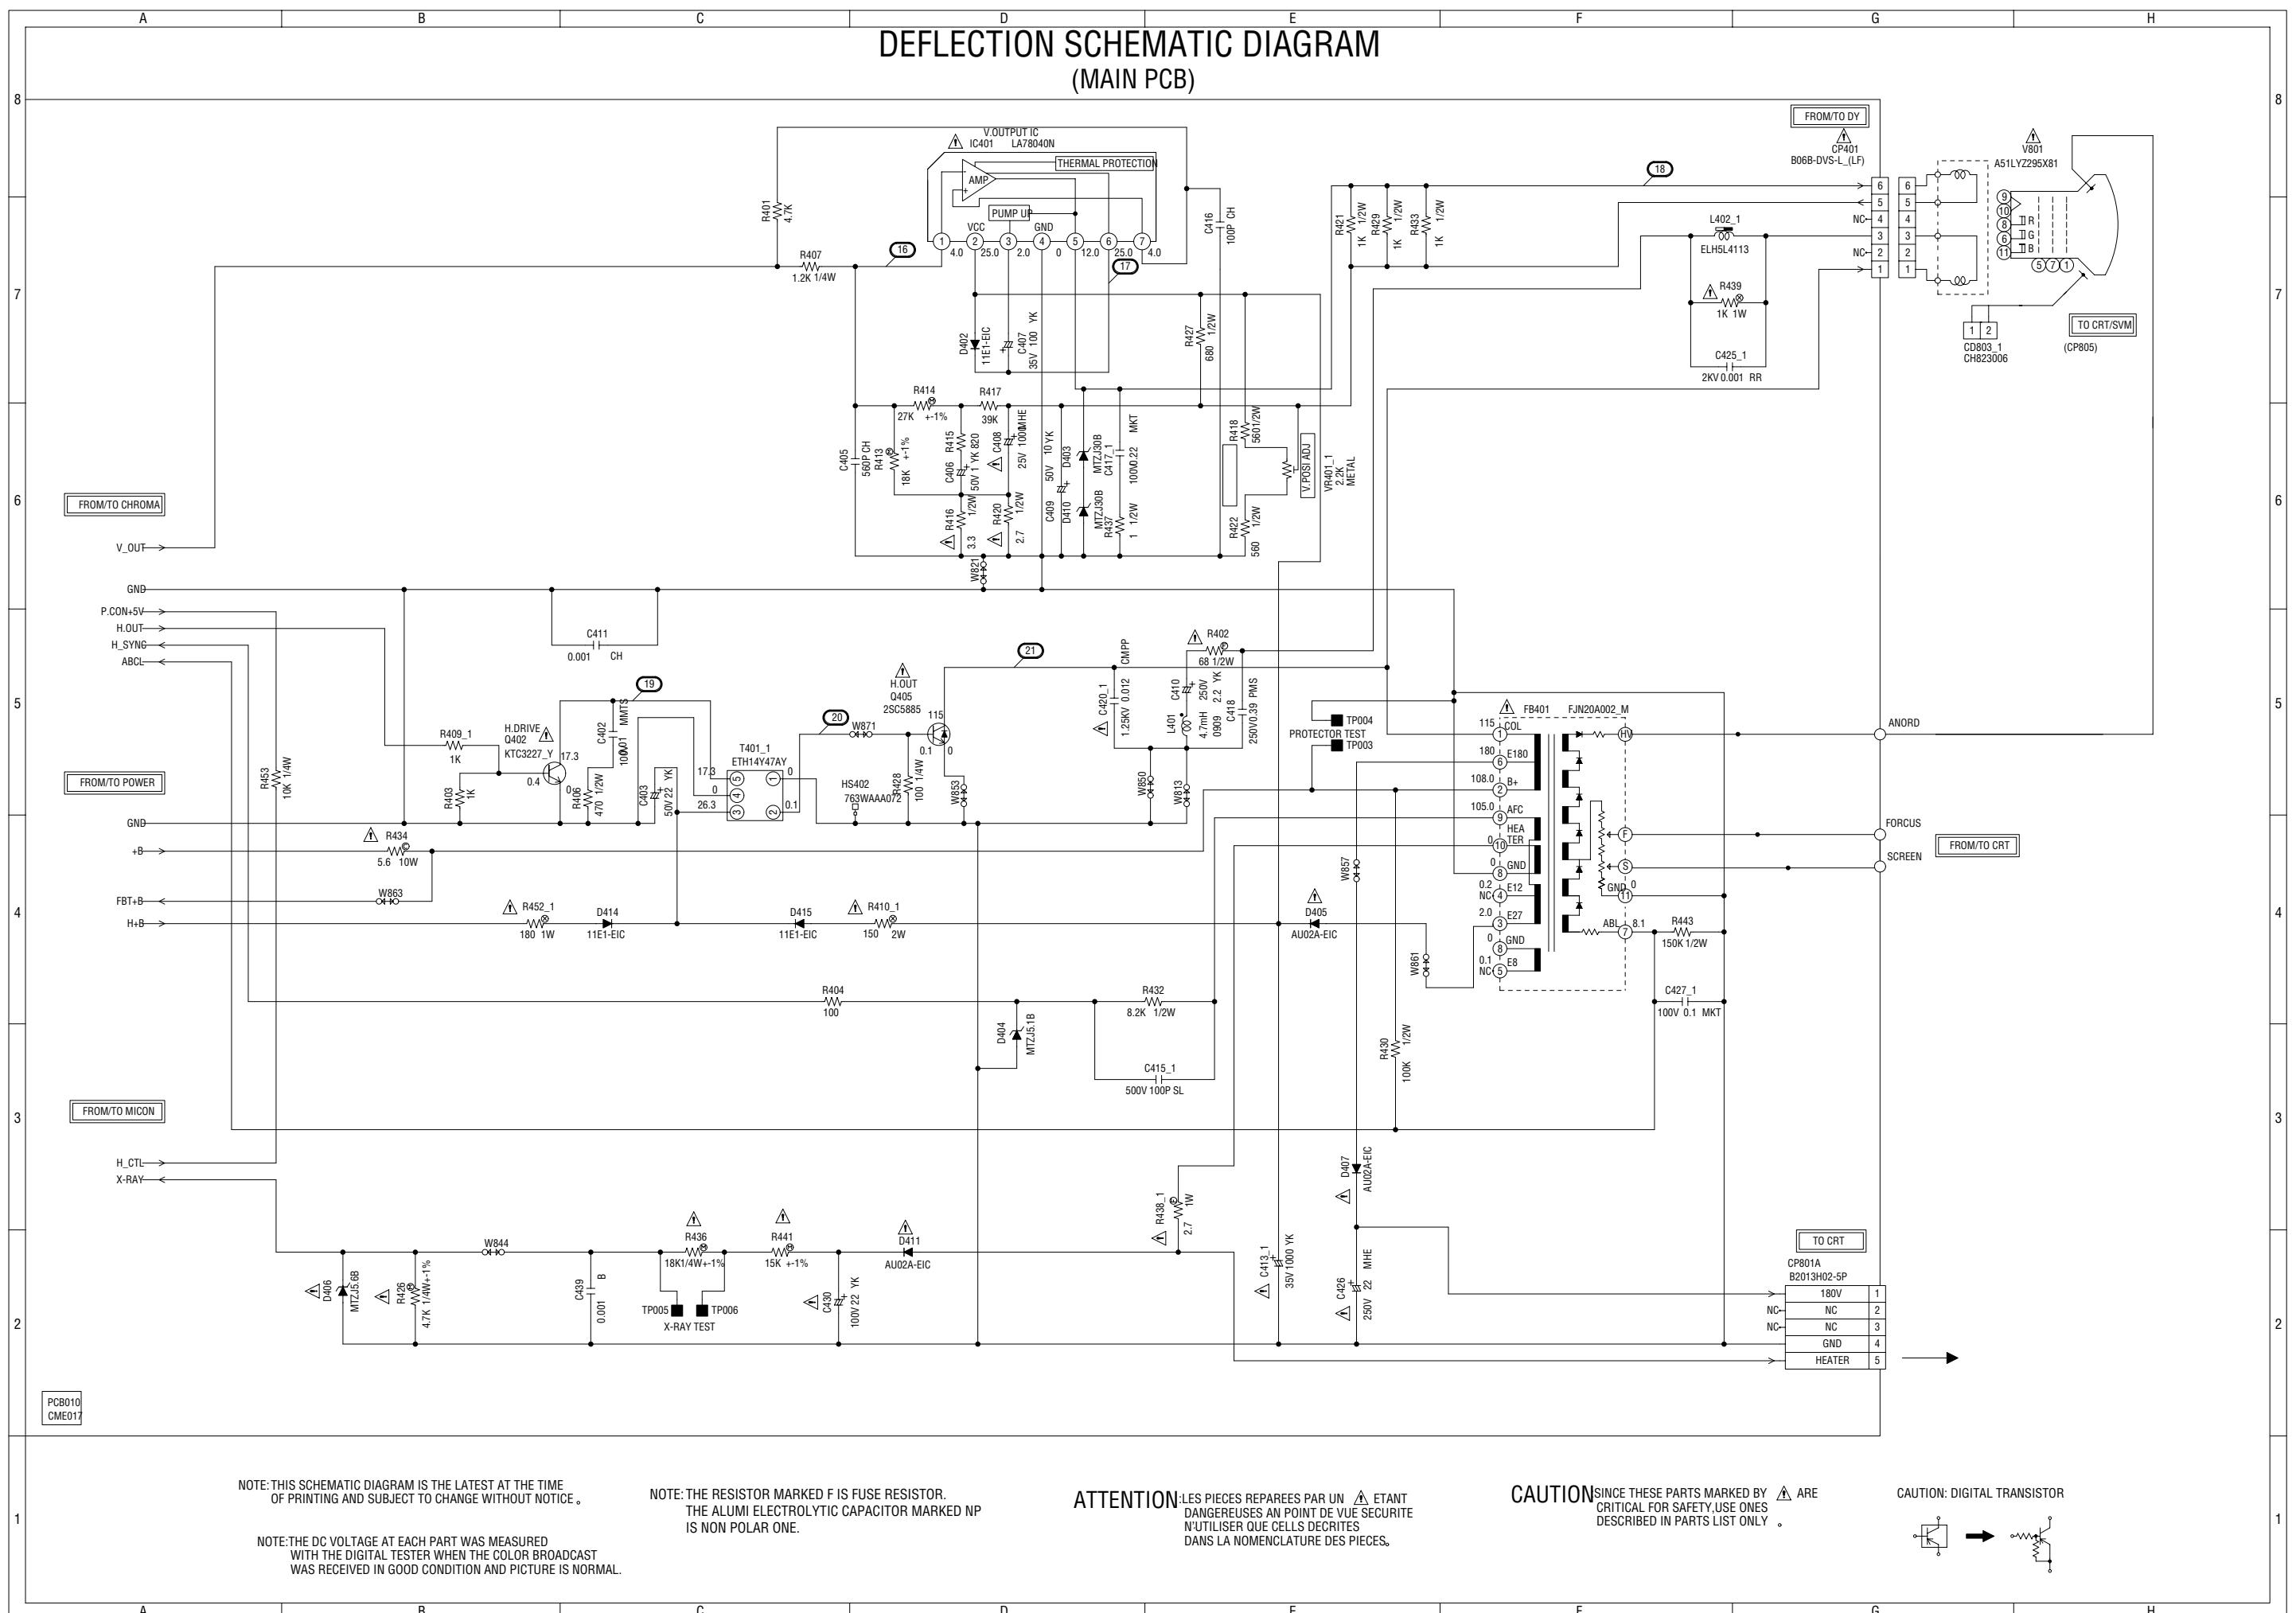

POWER SCHEMATIC DIAGRAM (MAIN PCB)

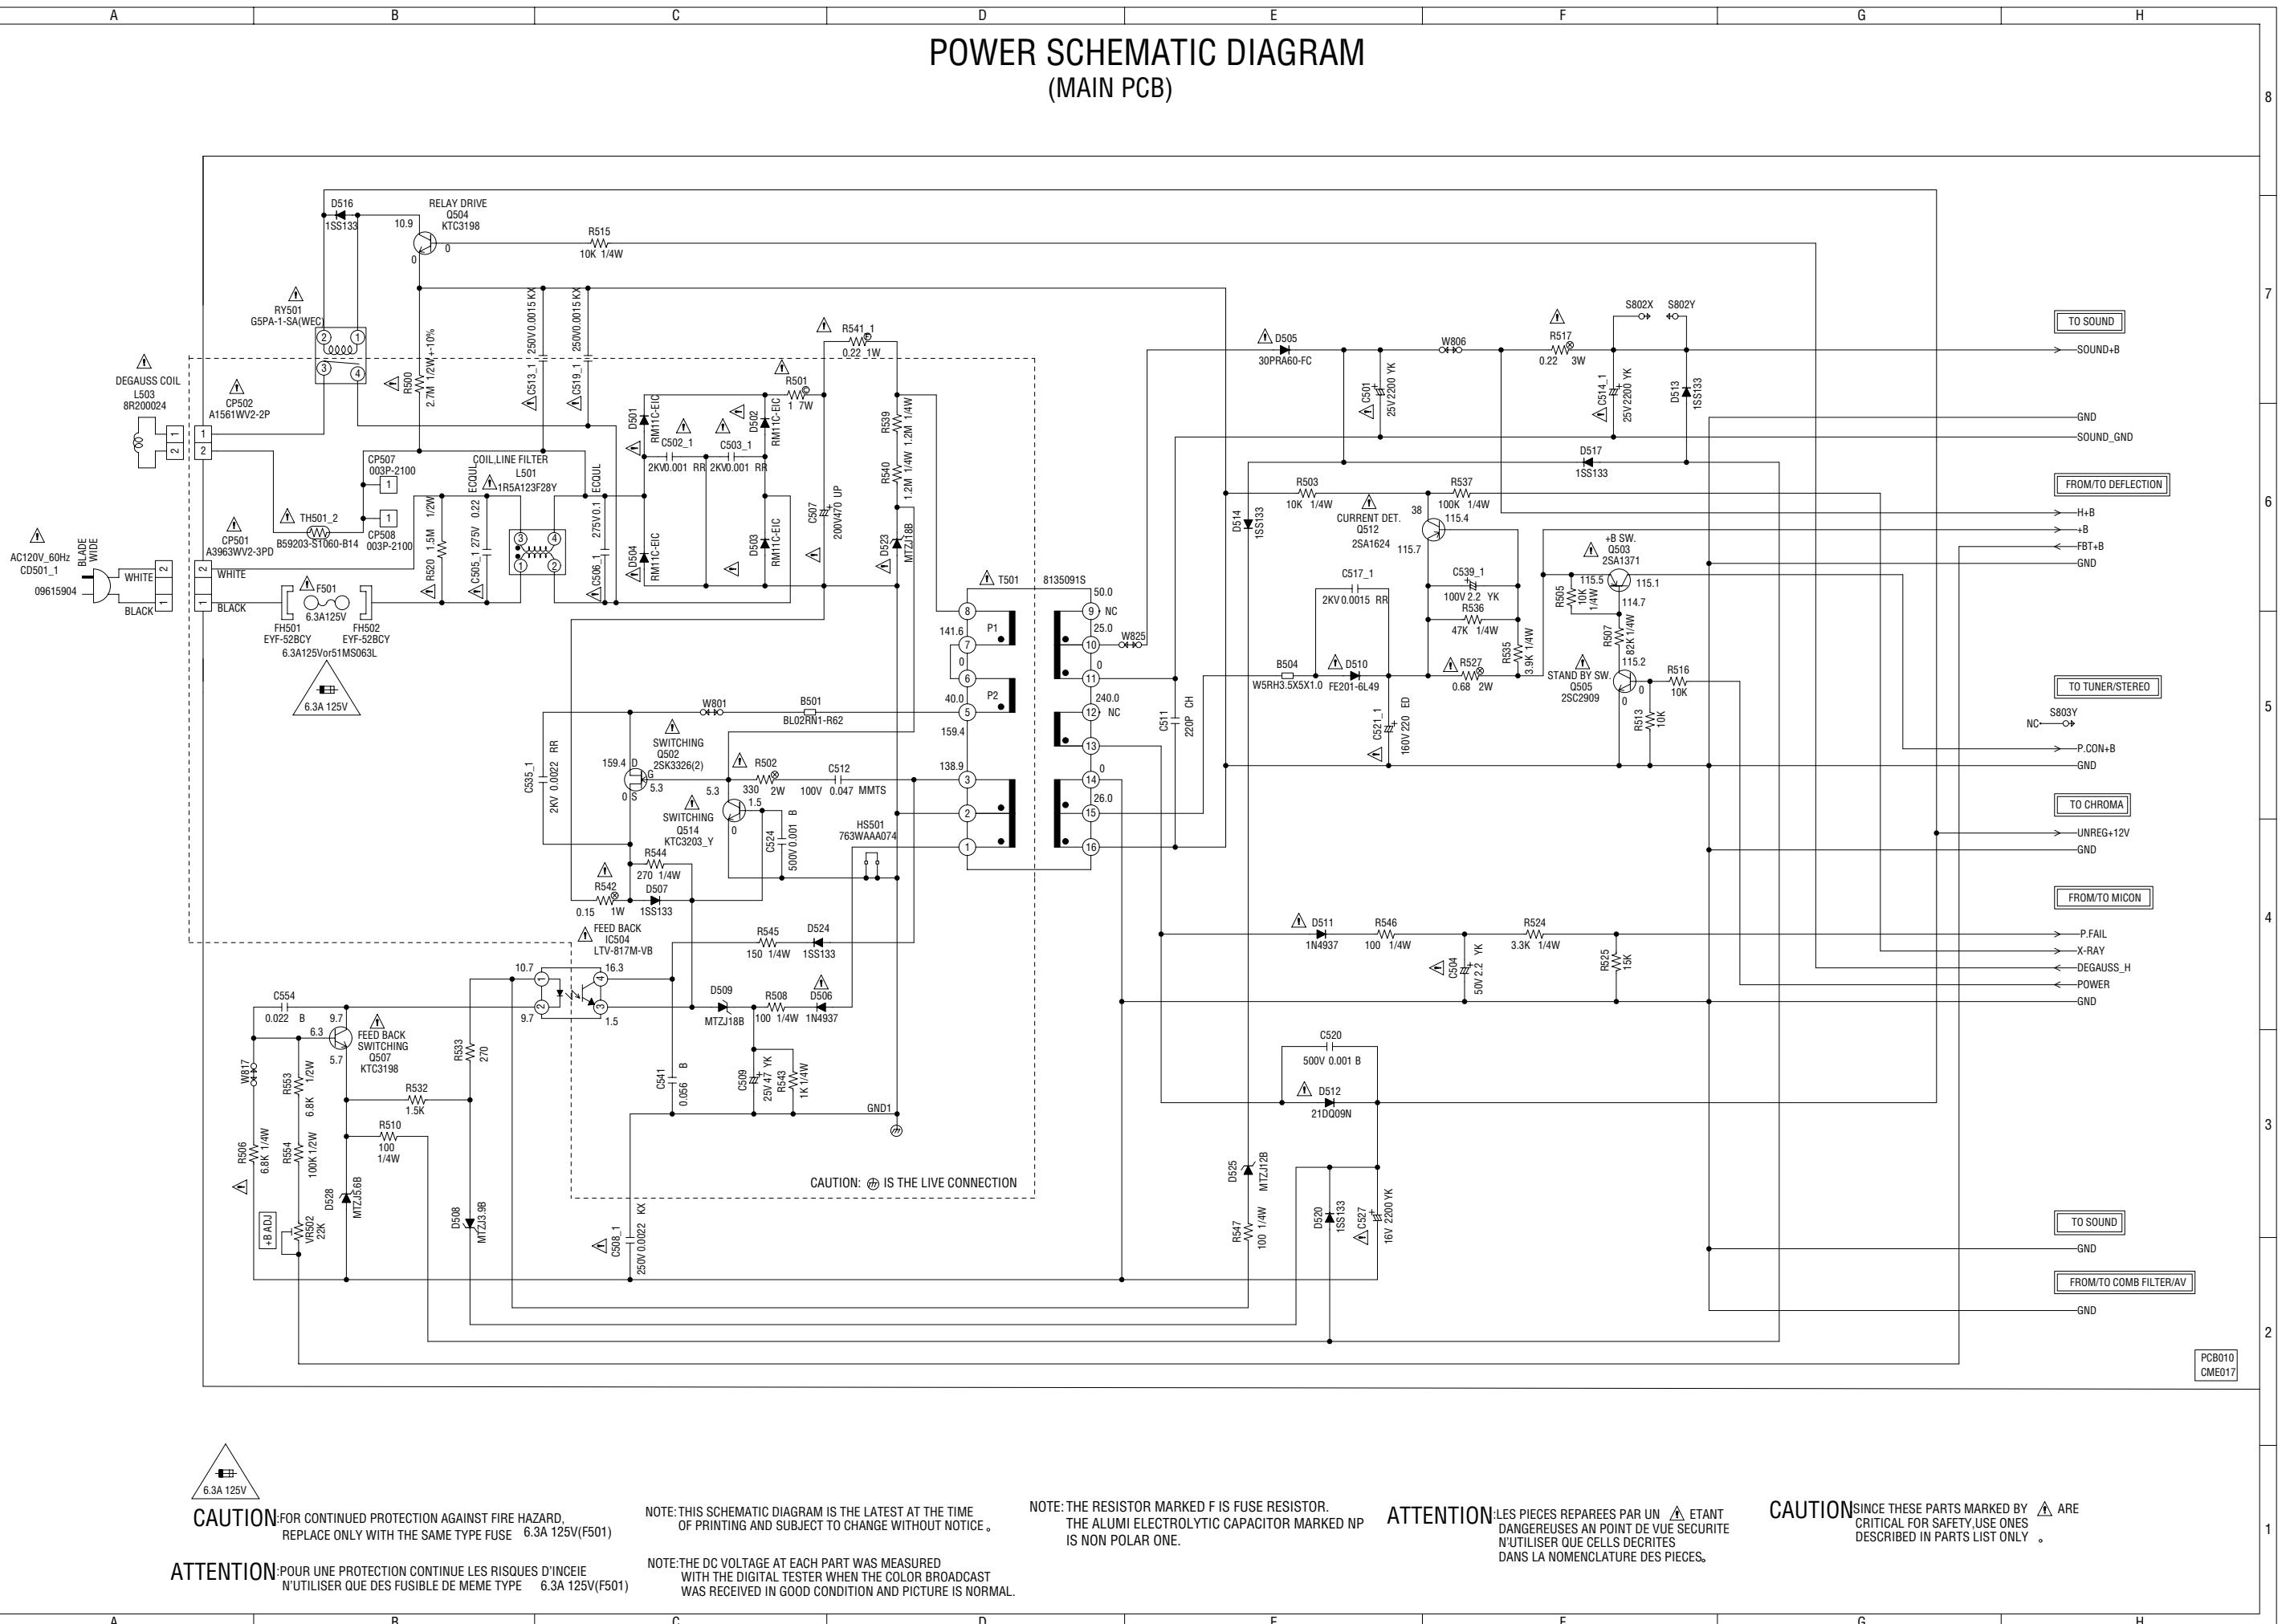

SOUND SCHEMATIC DIAGRAM (MAIN PCB)

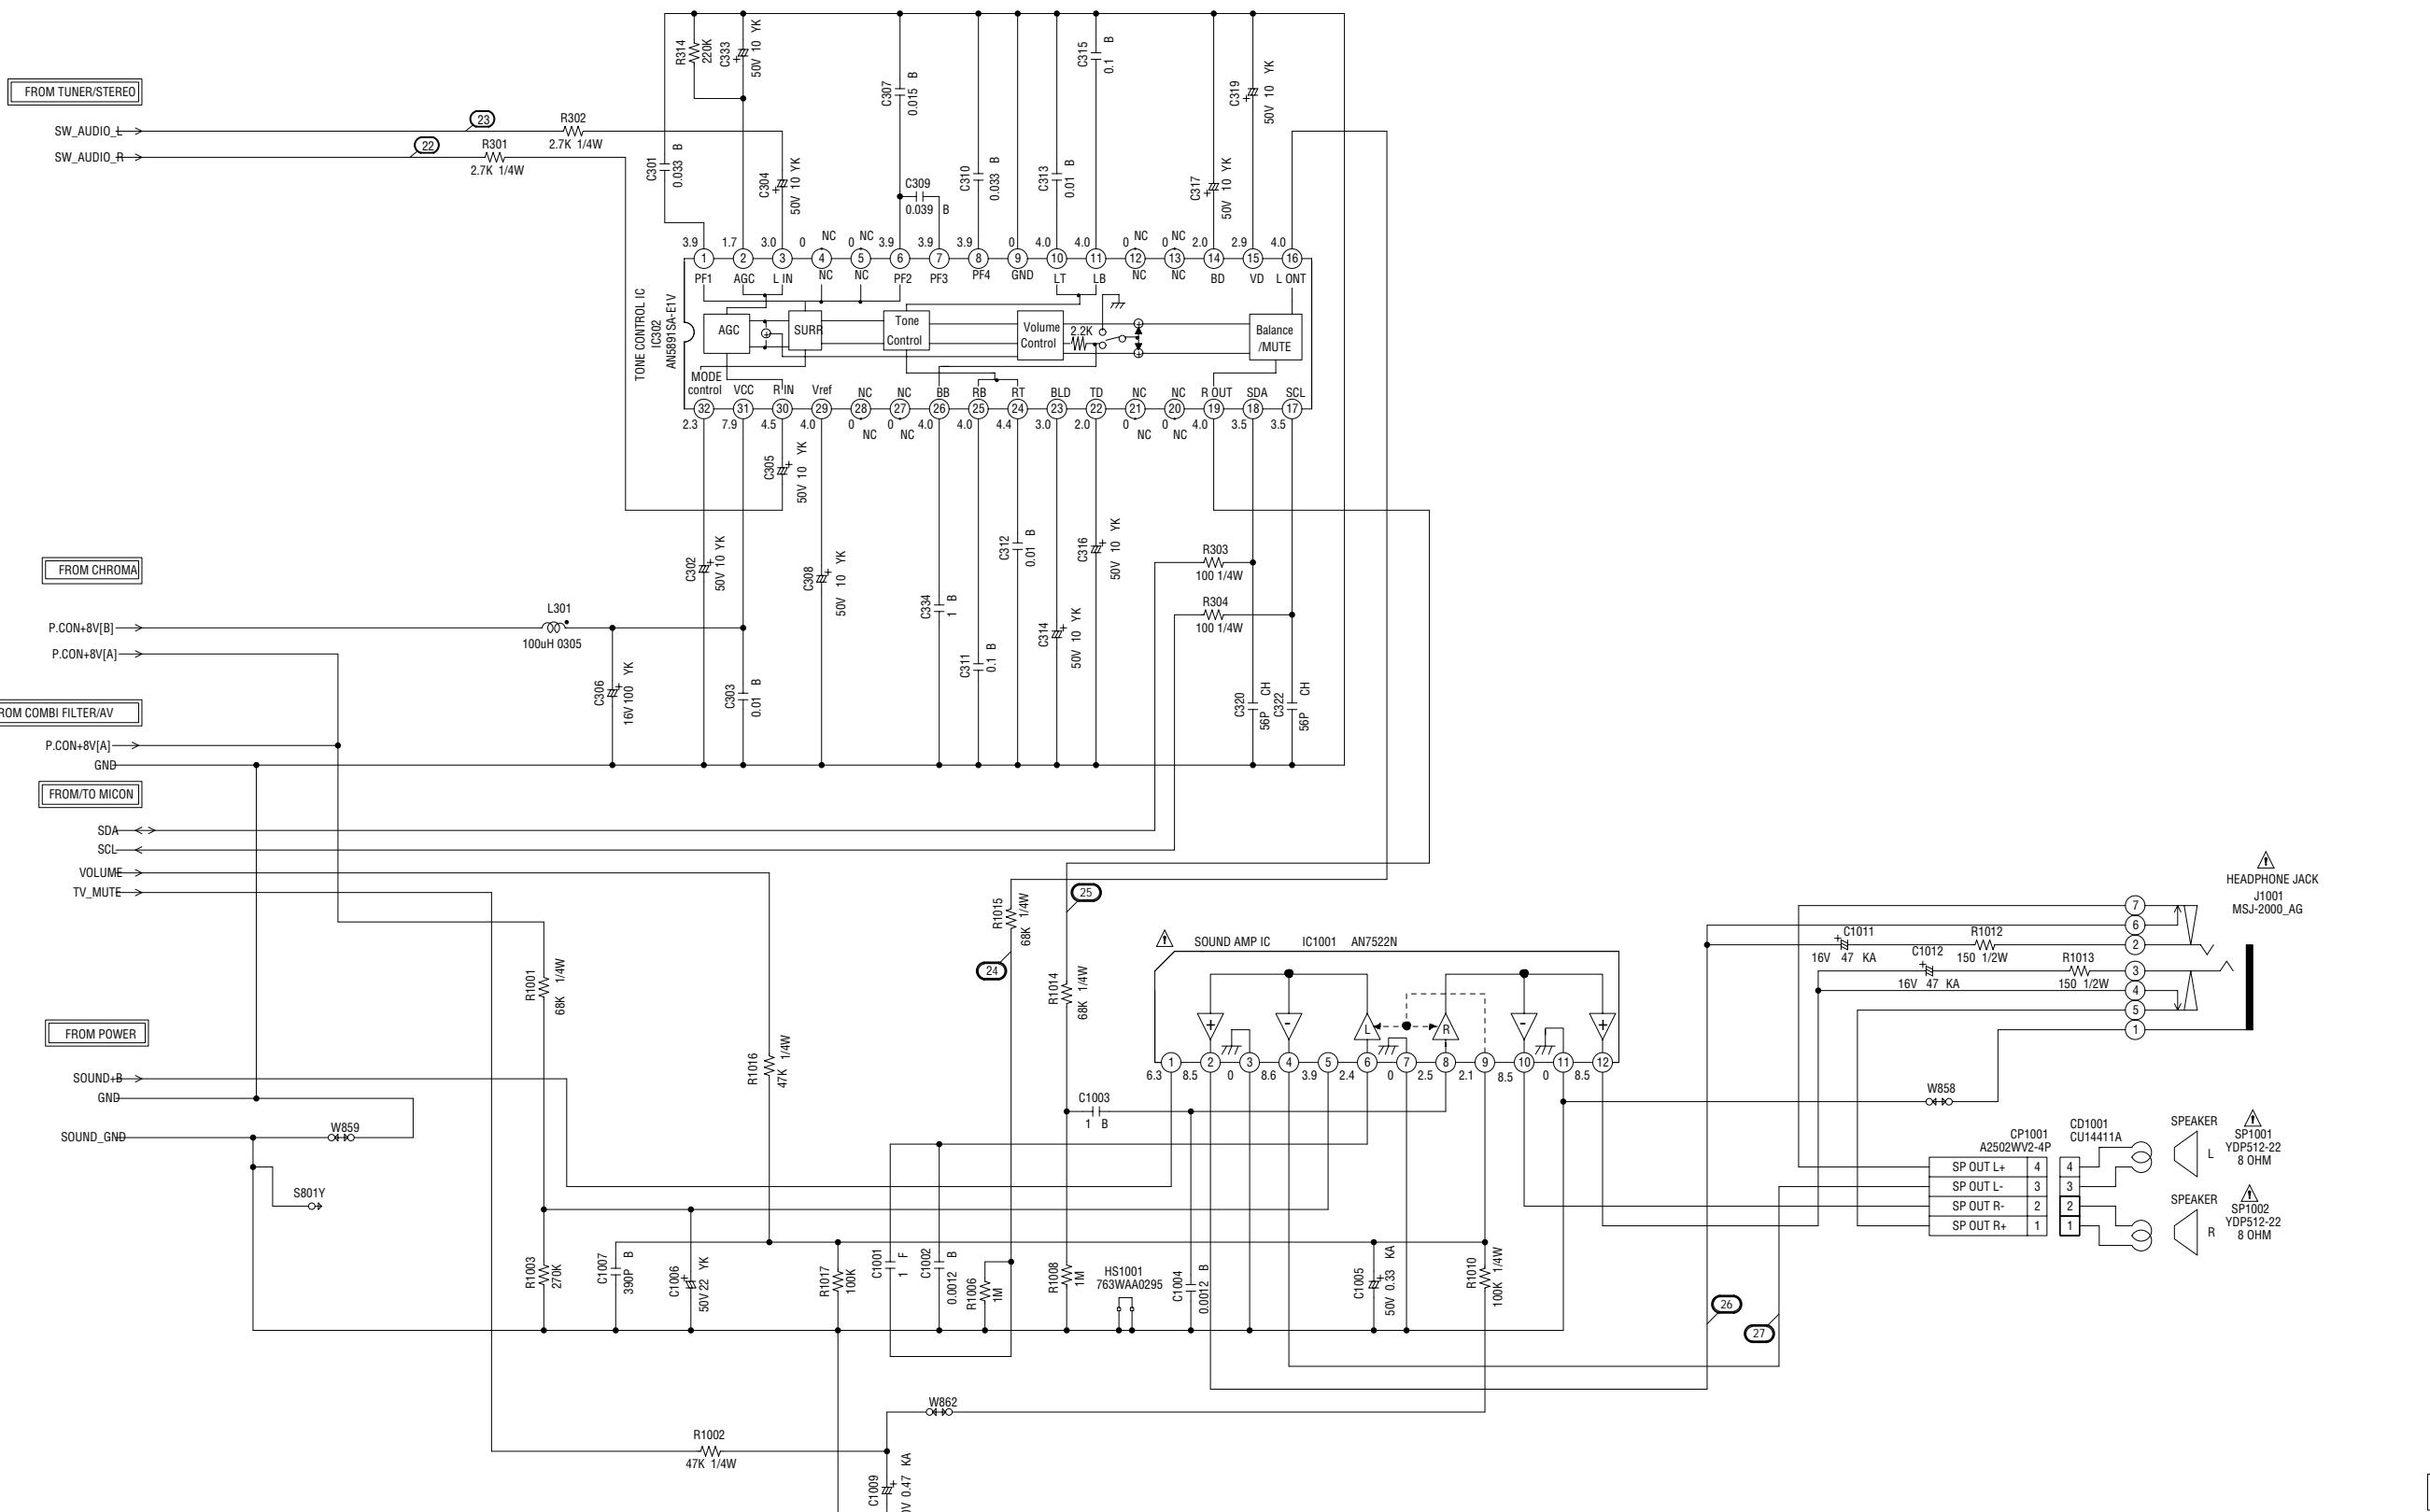


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION: LES PIECES REPEREES PAR UN ETANT DANGEREUSES AU POINT DE VUE SECURITE N'UTILISER QUE CELLES DECrites DANS LA NOMENCLATURE DES PIECES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

TUNER/STEREO SCHEMATIC DIAGRAM (MAIN PCB)

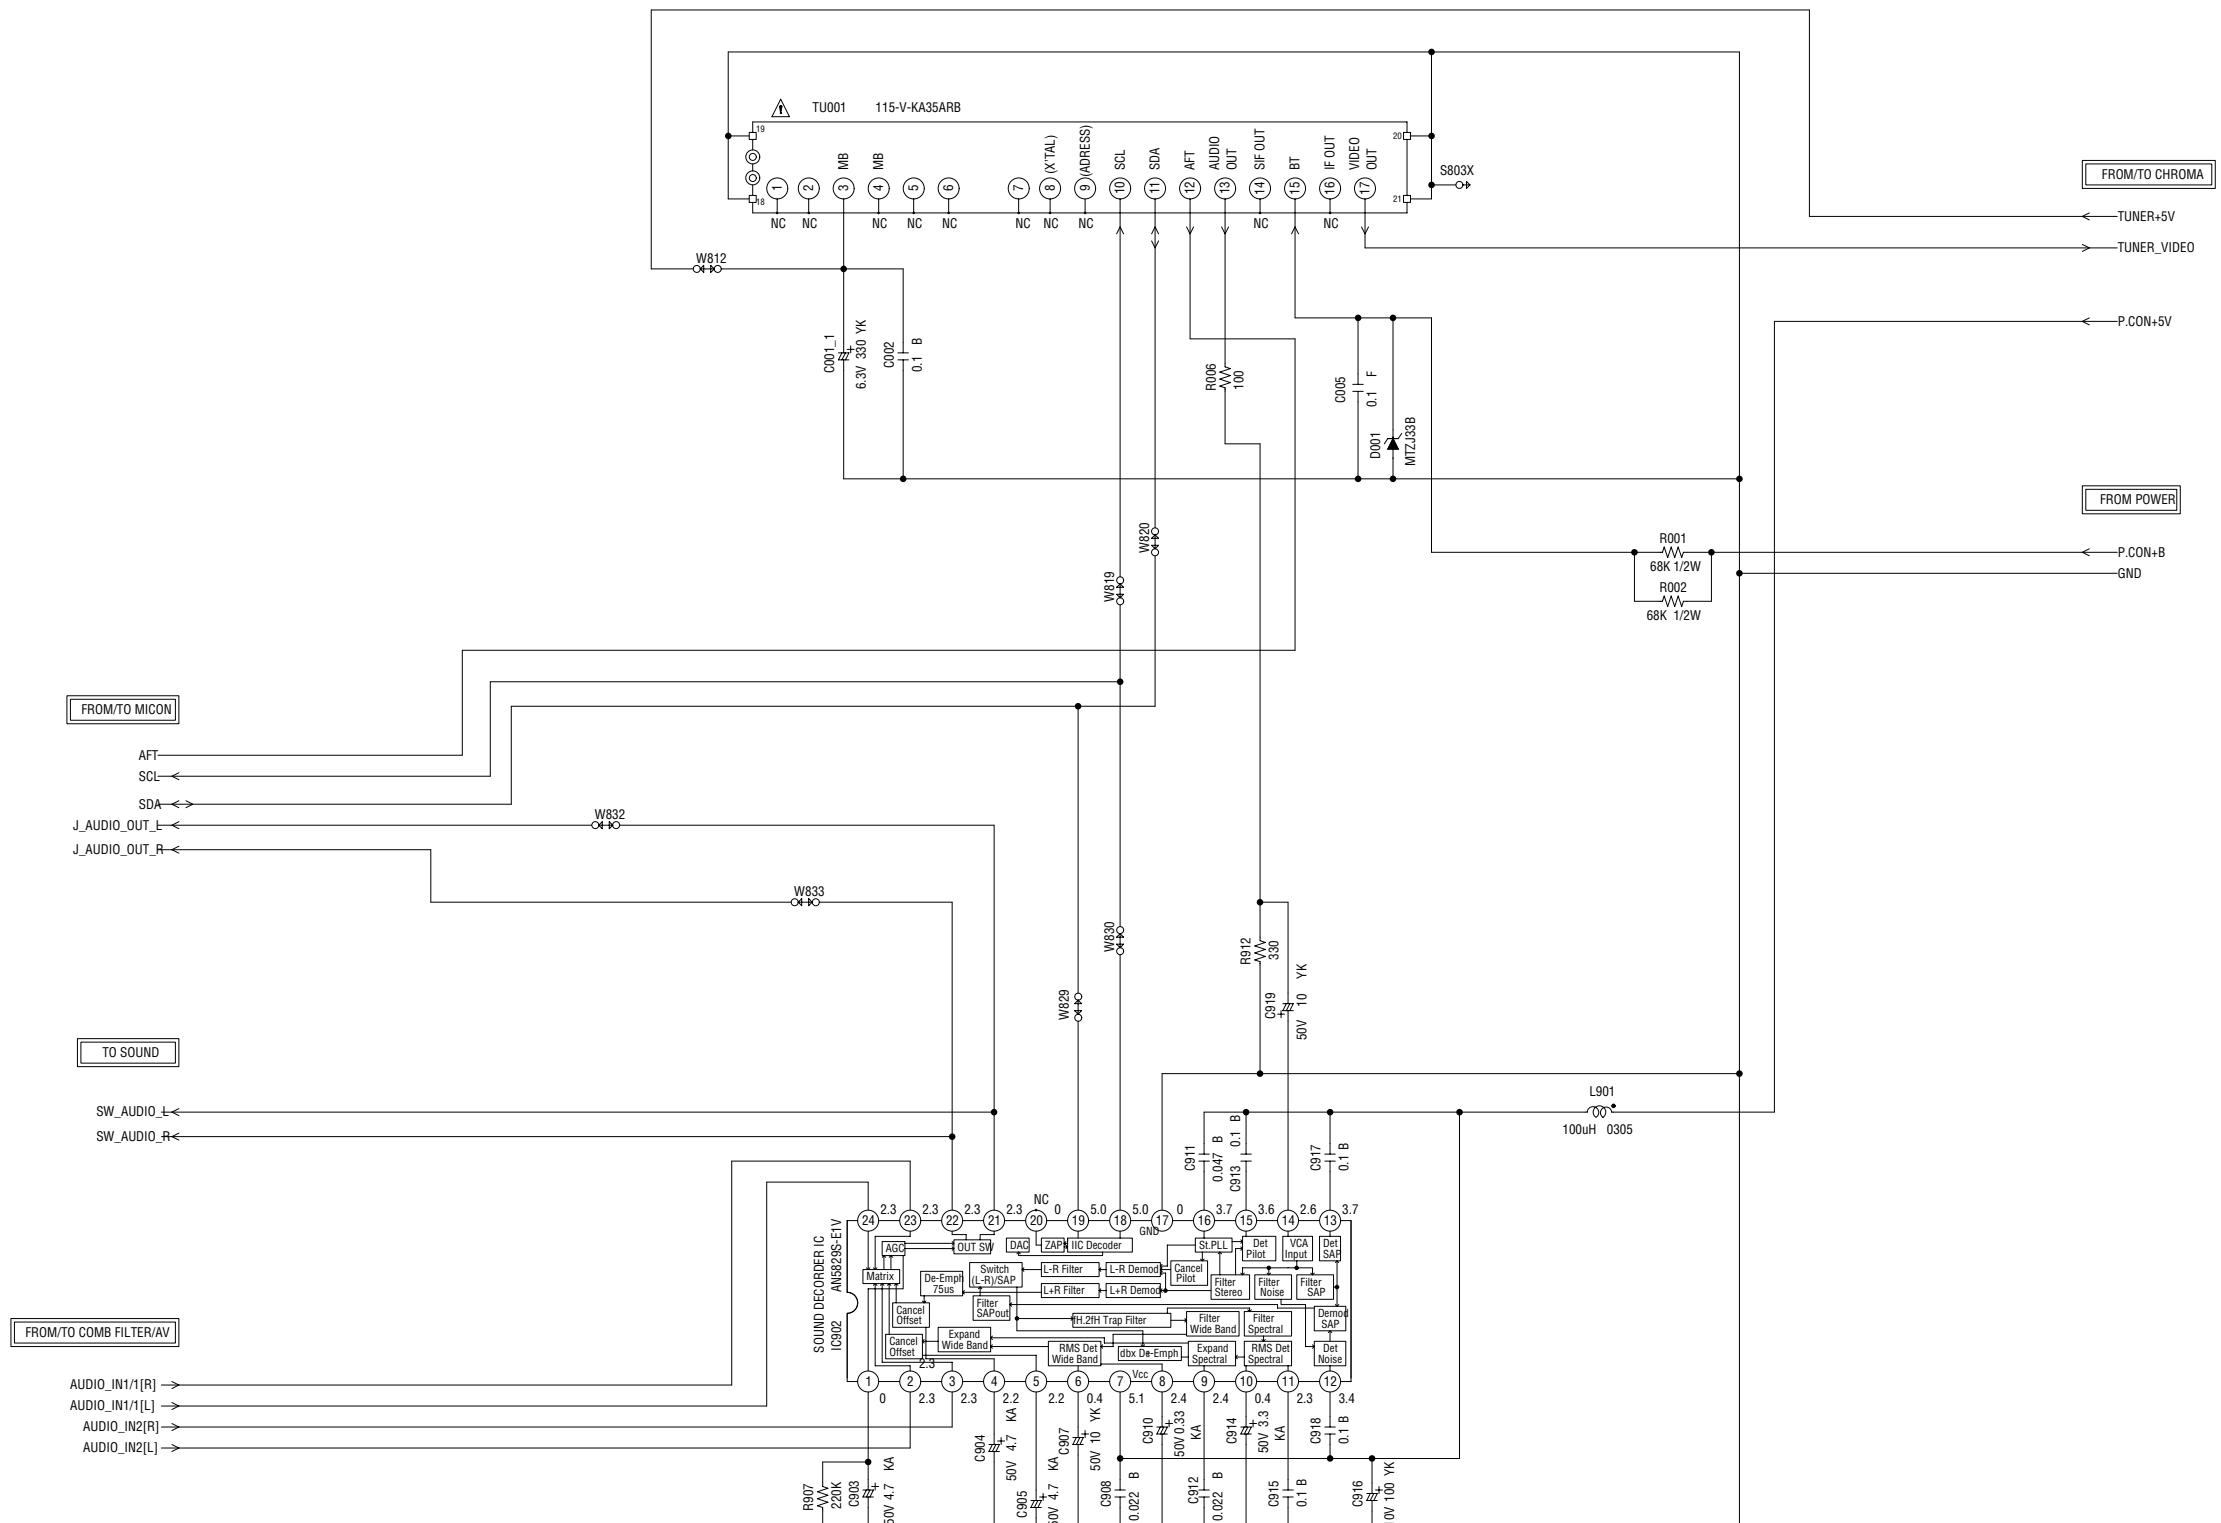

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE


NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORM

ATTENTION: LES PIECES REPARÉES PAR UN ⚠ ETANT DANGEREUSES AU POINT DE VUE SÉCURITÉ, N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.


CAUTION SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

COMB FILTER/AV SCHEMATIC DIAGRAM

(MAIN PCB)

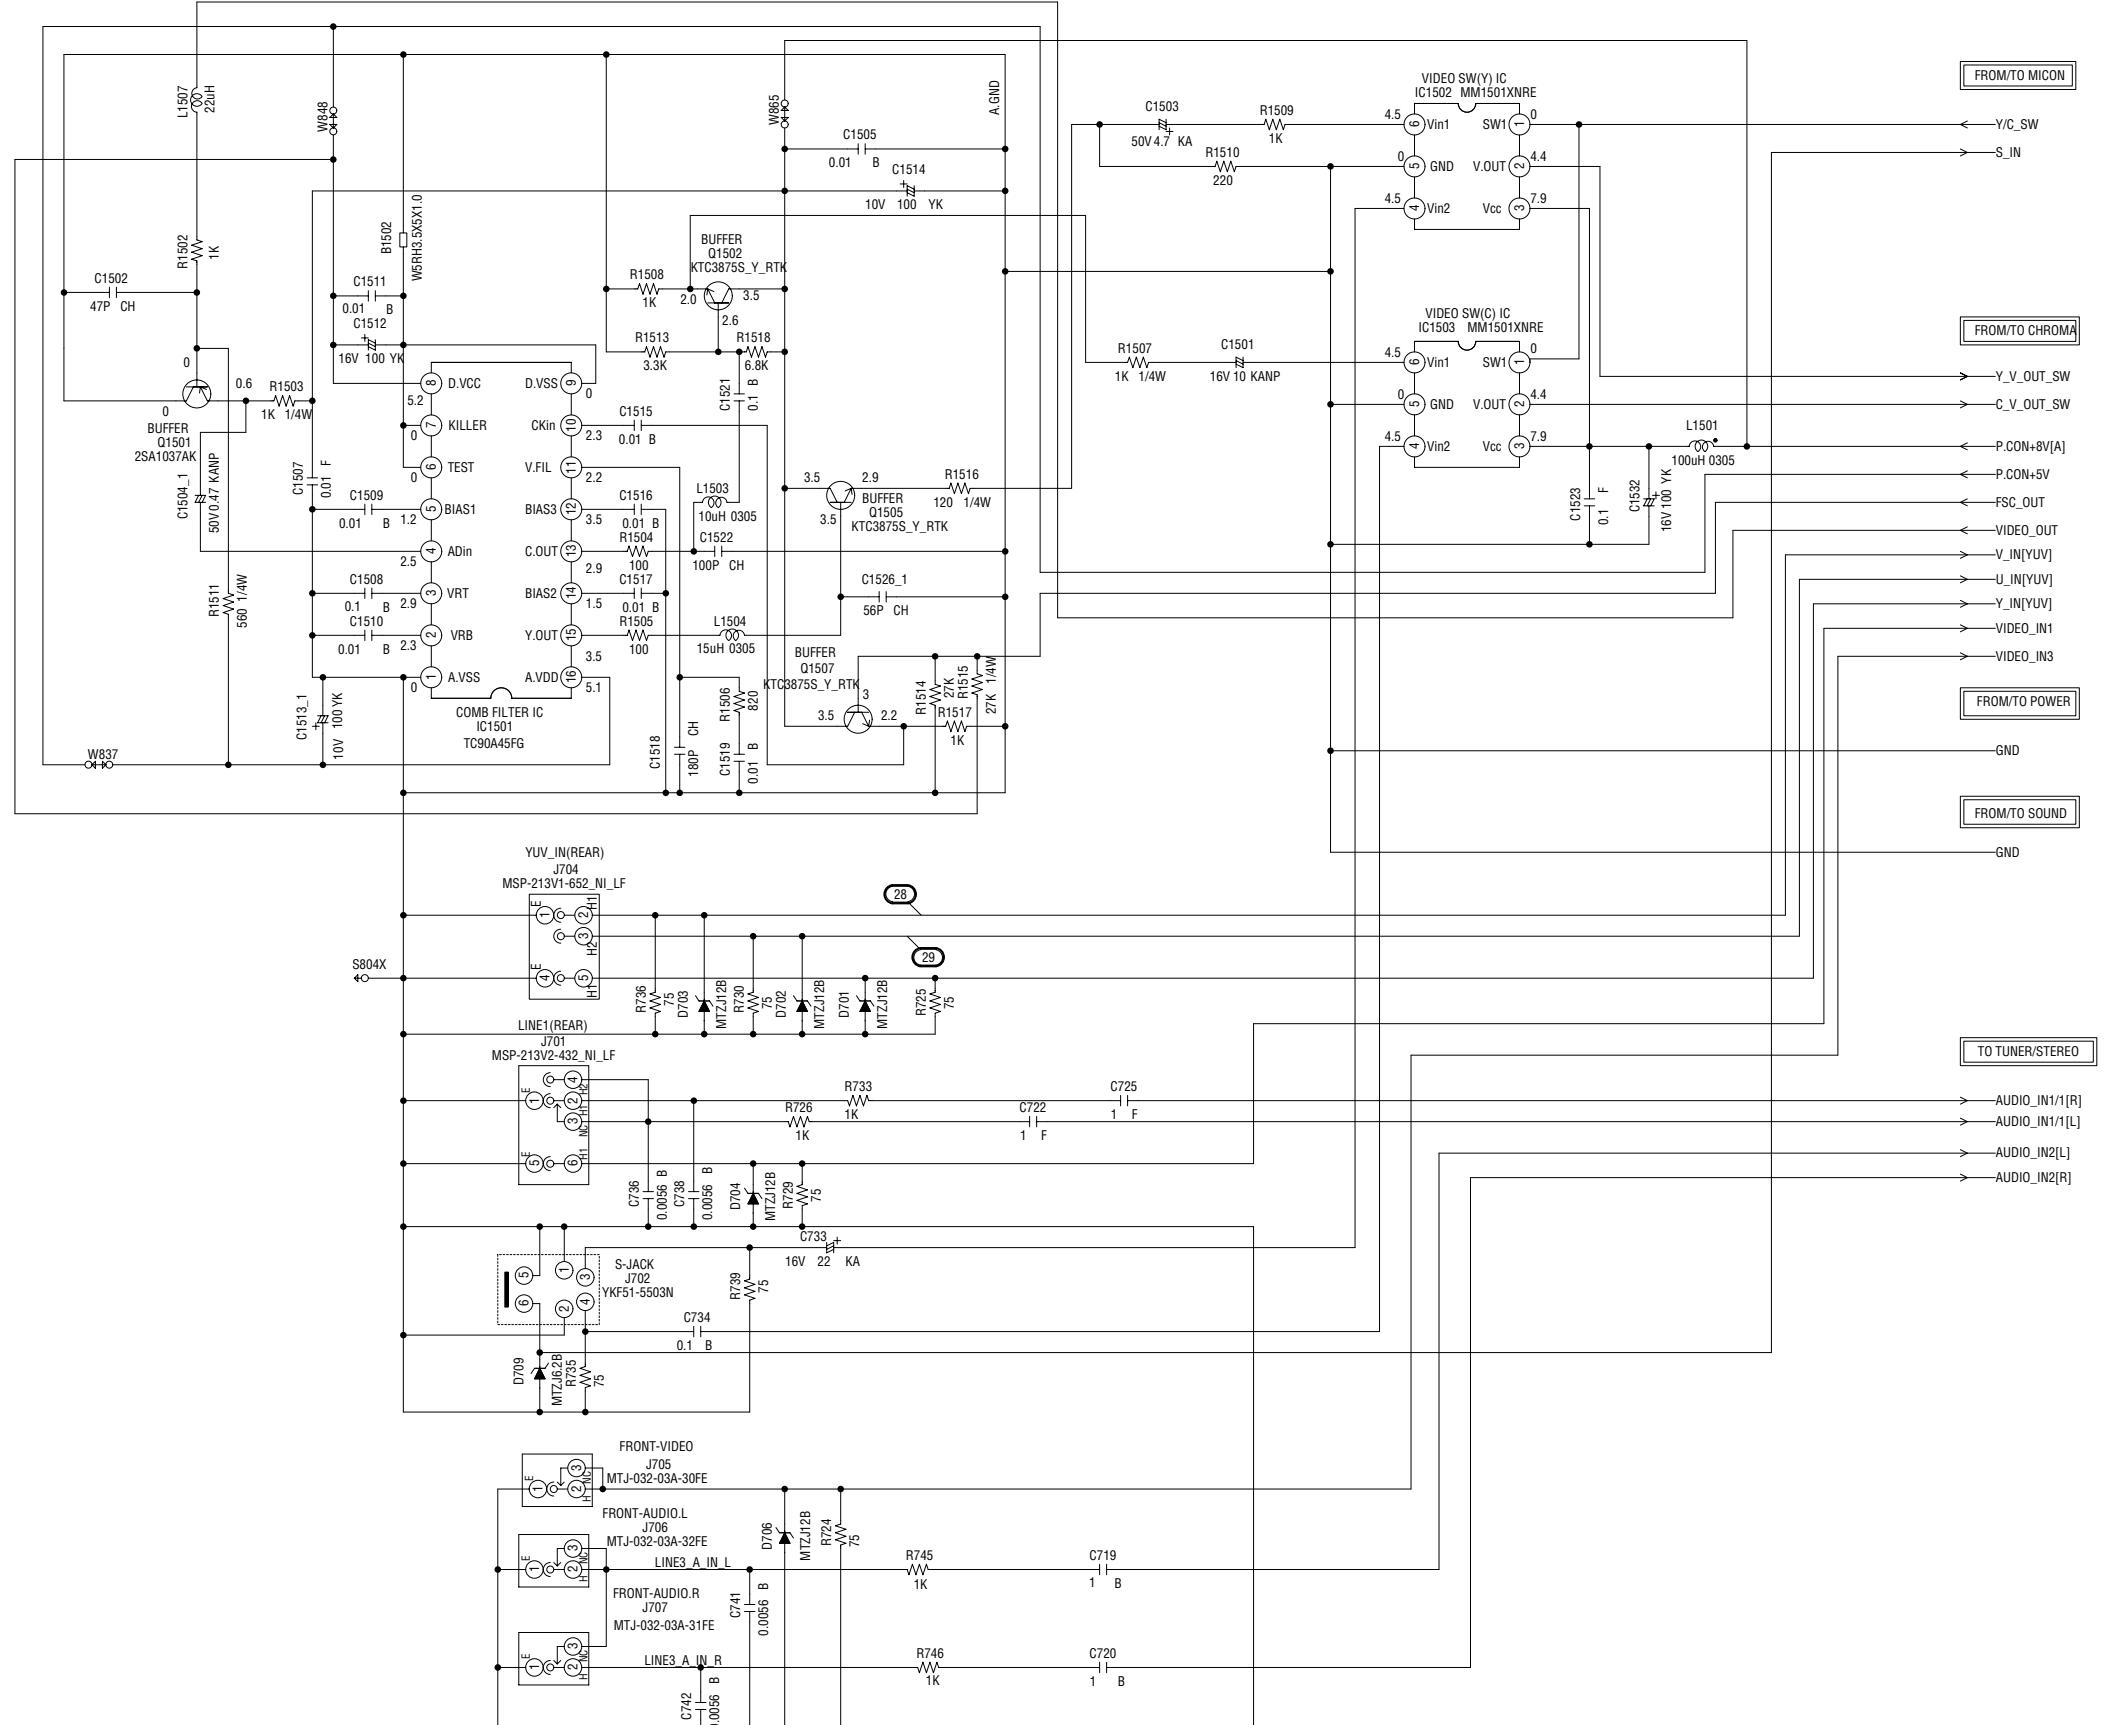

CRT SCHEMATIC DIAGRAM (CRT PCB)

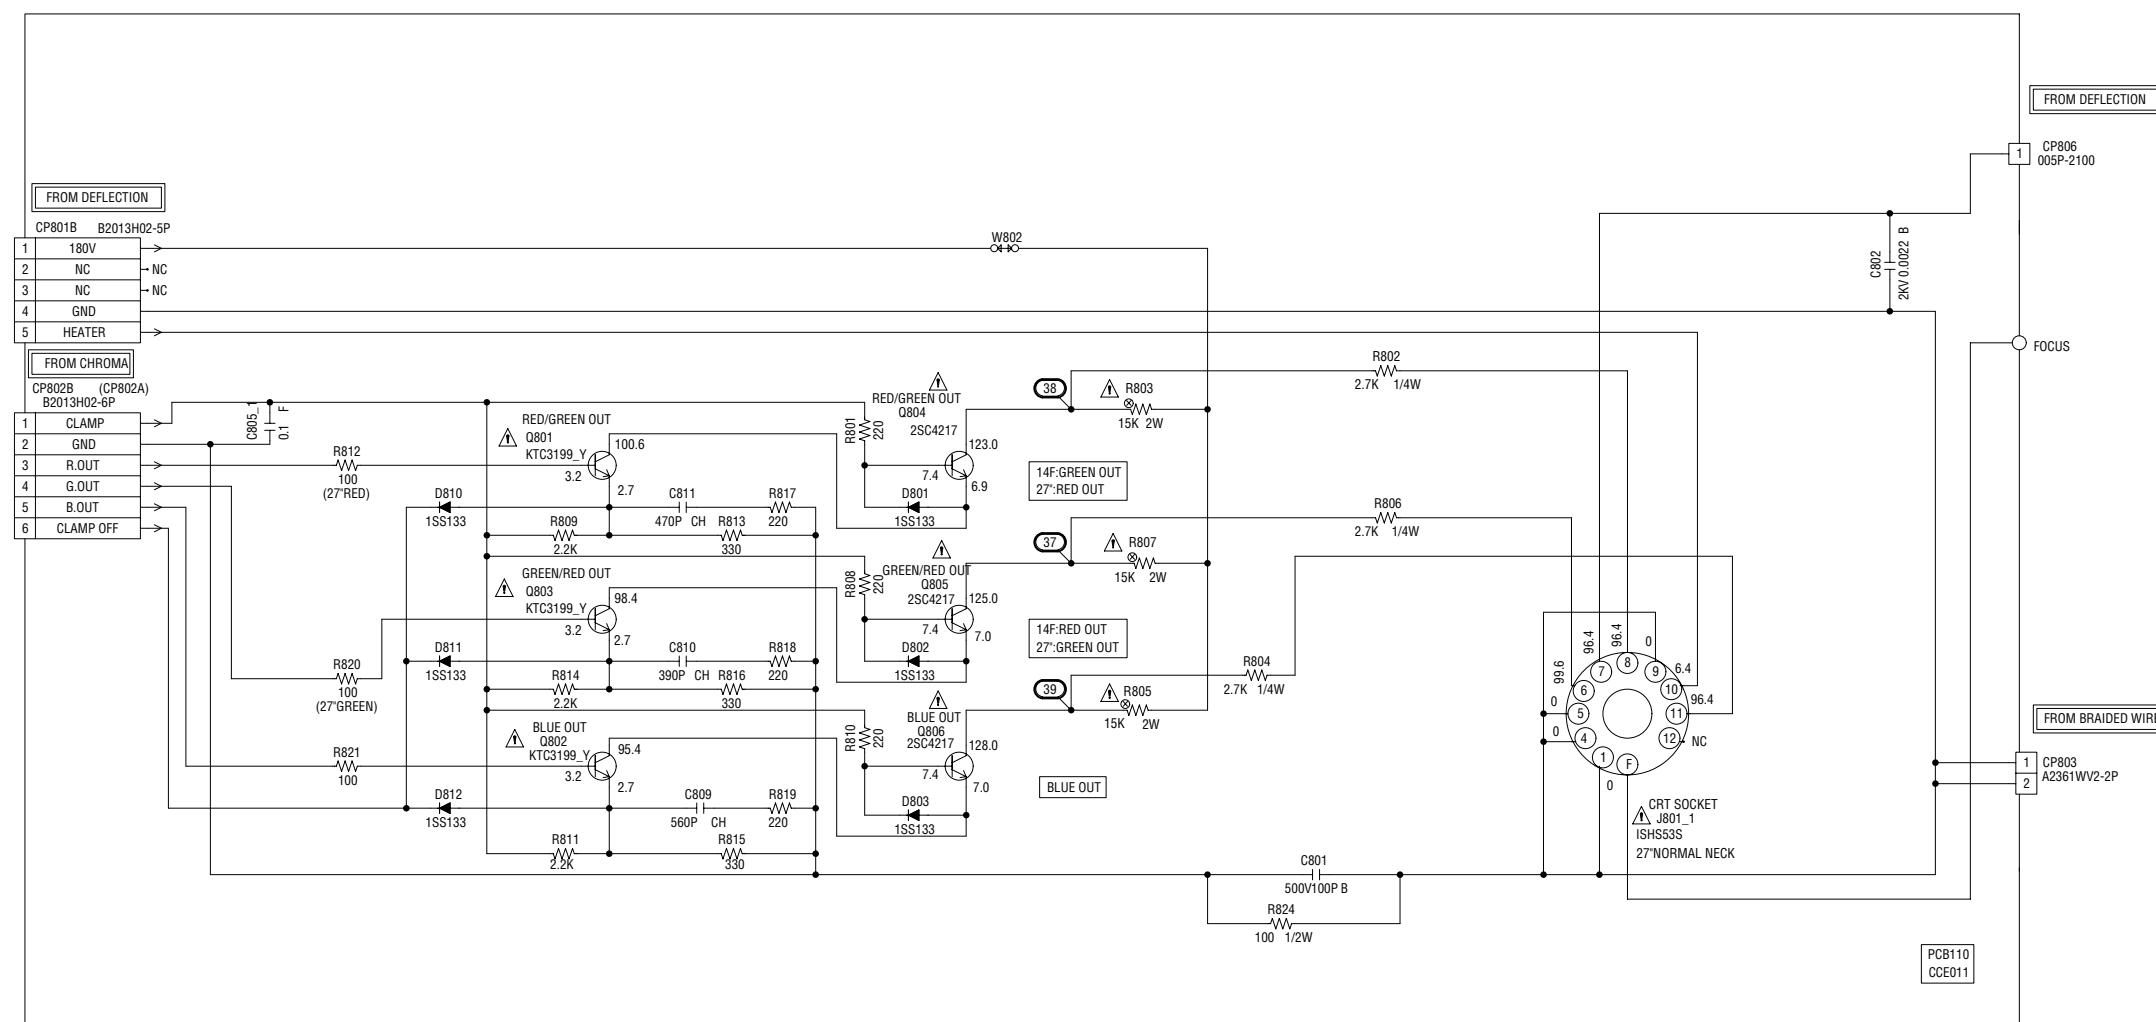

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTIONS SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.


ATTENTION: LES PIECES REPEREES PAR UN ETANT DANGEREUSES AU POINT DE VUE SECURITE N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

WAVEFORMS


MICON

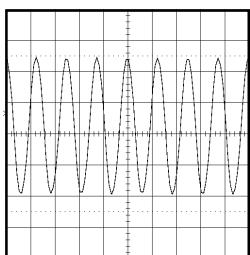


① 1V 0.1 μ s/div

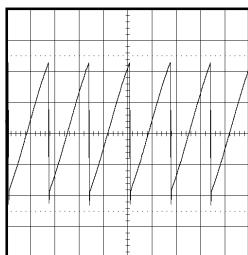


⑧ 0.5V 10ms/div

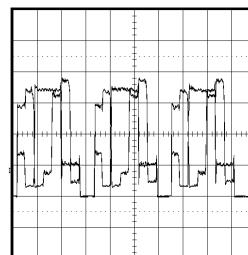


⑬ 1V 20 μ s/div

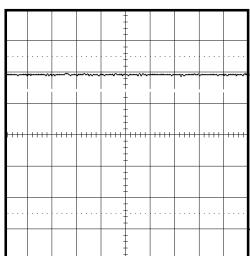


② 1V 1 μ s/div

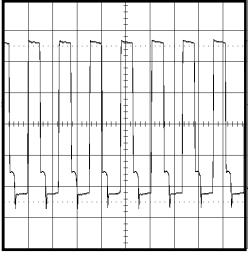


⑨ 1V 50 μ s/div

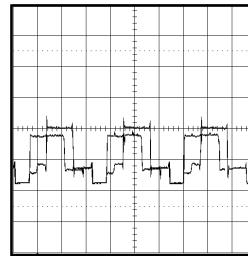


⑭ 2V 20 μ s/div

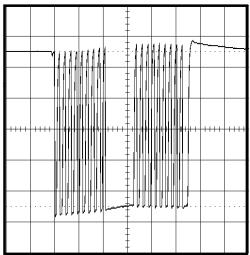

③ 1V 50 μ s/div

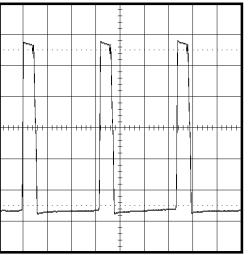


⑩ 2V 20 μ s/div

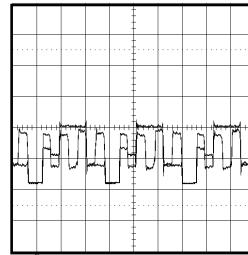


⑯ 2V 20 μ s/div


DEFLECTION

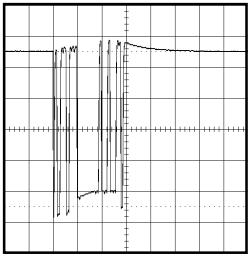

④ 1V 0.1ms/div

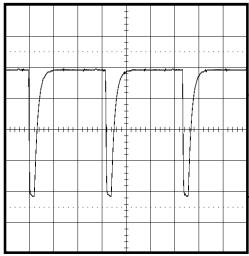


⑪ 0.5V 20 μ s/div

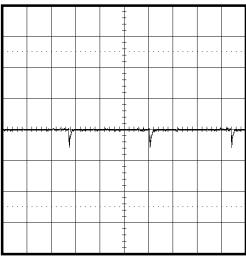


⑯ 2V 5ms/div


CHROMA

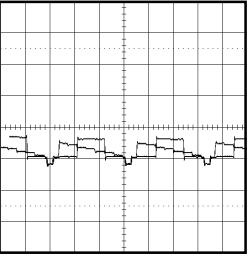

⑦ 1V 20 μ s/div

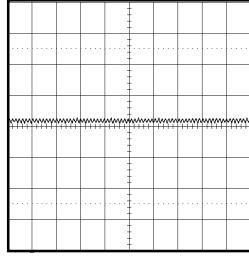


⑫ 1V 2 μ s/div

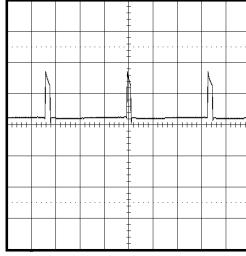


⑰ 20V 5ms/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


WAVEFORMS

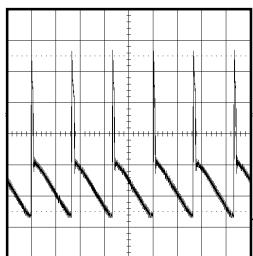


⑯ 10V 10ms/div

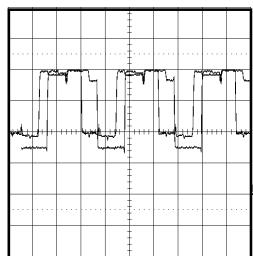


⑰ 50V 20μs/div

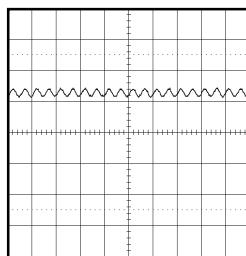


⑮ 2V 5ms/div

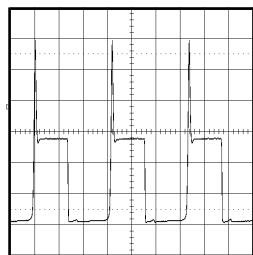

⑯ 20V 20μs/div

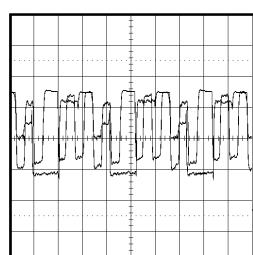


⑰ 50V 20μs/div

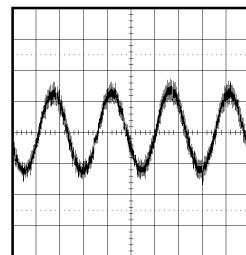


⑯ 0.5V 1ms/div


SOUND

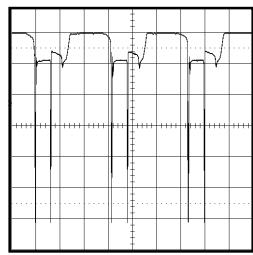

⑯ 2V 20μs/div

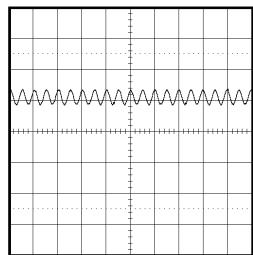


⑰ 2V 5ms/div

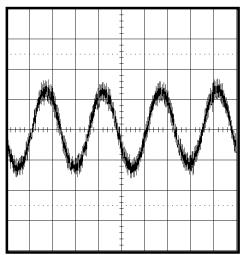


⑯ 0.5V 1ms/div


COMB FILTER/AV

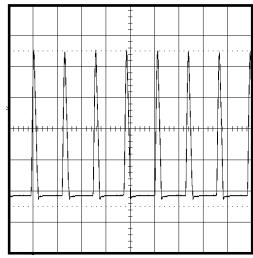

⑯ 200V 50μs/div

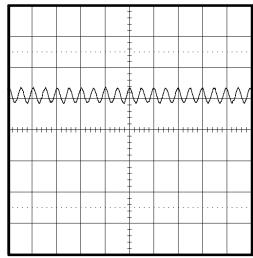


⑰ 2V 5ms/div

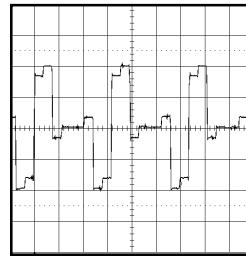


⑯ 200mV 20μs/div


CRT

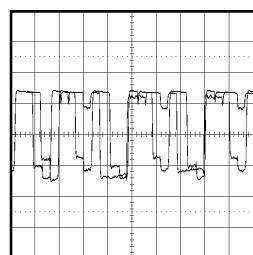

⑯ 50V 20μs/div

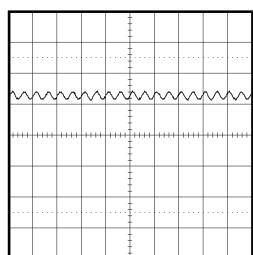


⑰ 2V 5ms/div

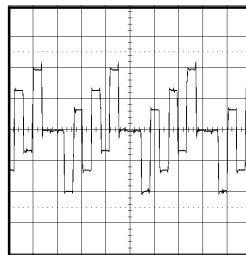


⑯ 200mV 20μs/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

MECHANICAL EXPLODED VIEW

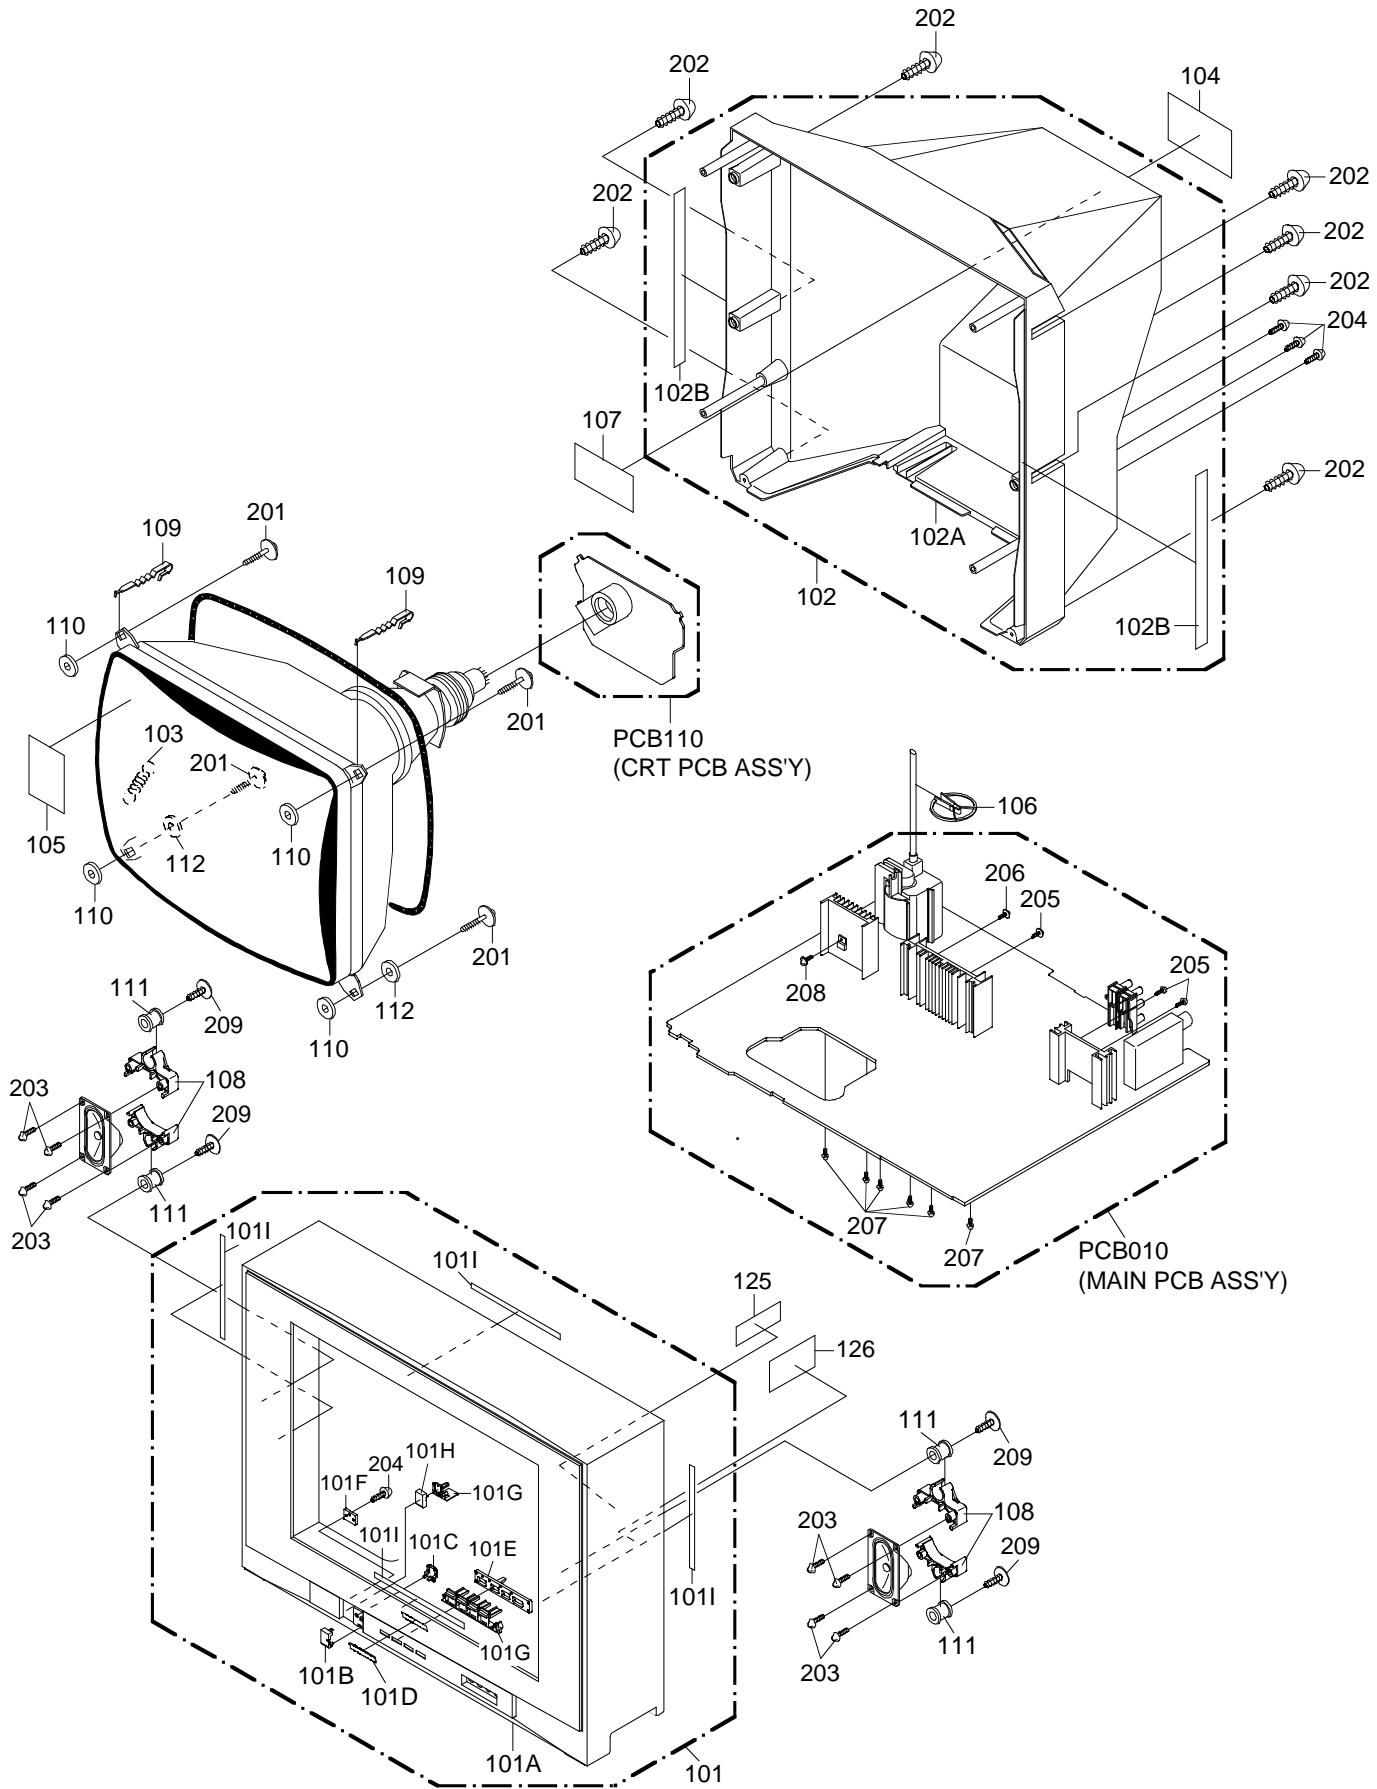

MECHANICAL EXPLODED VIEW (PACKING DIAGRAM)

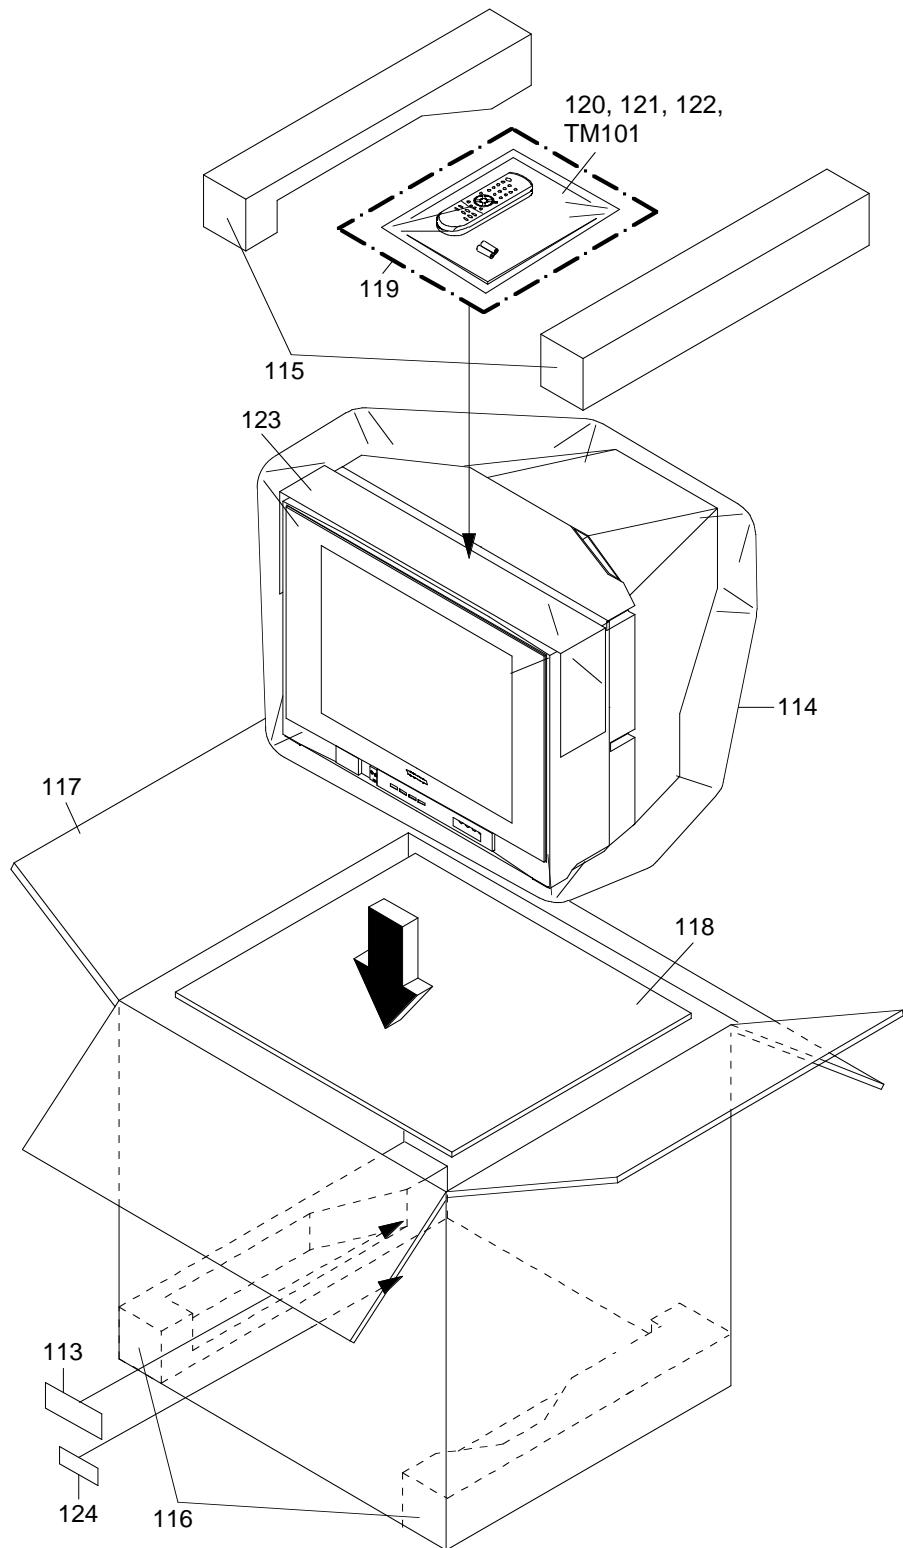

MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
101	72781165	7A701A423A	FRONT CABI ASS'Y
101A	72799331	701WPJD026	CABINET FRONT
101B	72782969	711WPA0184	PLATE FRONT
101C	72782972	713WPA0263	GLASS LED
101D	72799677	7235490049	BADGE BRAND
101E	72783010	735WPA0728	STOPPER BUTTON 1
101F	72794719	735WPA0732	STOPPER BUTTON 2
101G	72799770	735WPBB393	BUTTON FRAME
101H	72799793	735WPJA853	BUTTON POWER
101I	72794722	800WQ0A070	FELT SHEET
102	72781183	7A702A089A	BACK CABI ASS'Y
102A	72799347	702WPAA806	CABINET BACK
102B	72798774	800WQ0A045	FELT SHEET
103	72795687	741WUA0021	SPRING EARTH
104	72783310	722549A582	SHEET RATING
105	72783311	723000D284	POP LABEL
106	72794734	899HV3T000	HOLDER ANODE WIRE
107	72783312	726000A134	SHEET CRT SERVICEMAN
108	72798661	761WPA0220	HOLDER SPEAKER
109	72798684	762WPA0011	HOLDER CRT WIRE
110	72798781	800WR0A002	SHEET CRT SUPPORT
111	72794733	801WR00001	DAMPER SPEAKER
112	72798782	800WR0A026	SHEET CRT SUPPORT (D)
113	72783313	723000D285	SHEET BARCODE
114	72795702	791WHA114	FILM BAG
115	72798704	792WHA0432	PACKAGE TOP
116	72798705	792WHA0433	PACKAGE BOTTOM
117	72783314	793WCDD103	GIFT BOX
118	72781105	795WCDA011	PAD
119	72783330	A3S1032975	INSTRUCTION BOOK KIT
120	72781628	JA4ND200	POLYBAG INSTRUCTION(RED CAUTION)
121	72781569	J3N51617A	REGISTRATION CARD
122	72783315	J3S10321A	INSTRUCTION BOOK(E/S)
123	72795703	791WHA134	LIGHTRON SHEET
201	72781287	8141J50C5U	SCREW TAP TITE(P) GW22 5*35 CH HEXAGON
202	72781279	8117540A6U	SCREW TAP TITE(B0) TRUSS 4*16 CH
203	72781276	8117140A2U	SCREW,TAPPING(B0) PAN 4*12 CH
204	72798791	8110630A0U	SCREW TAP TITE(P) BRAZIER 3*10 CH
205	72798786	810763080U	SCREW TAP TITE(S) BRAZIER 3*8 CH
206	72798789	8109I30A0U	SCREW TAP TITE(B) WH7 3*10 CH
207	72781251	810963080Q	SCREW TAP TITE(B) BRAZIER 3*8 STAINLESS
208	72781255	8109I3080U	SCREW TAP TITE(B) WH7 3*8 CH
209	72781295	8162540A6U	SCREW TAPPING (BO) WASHER 18

MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
101	72781165	7A701A423A	FRONT CABI ASS'Y
101A	72799331	701WPJD026	CABINET FRONT
101B	72782969	711WPA0184	PLATE FRONT
101C	72782972	713WPA0263	GLASS LED
101D	72799677	7235490049	BADGE BRAND
101E	72783010	735WPA0728	STOPPER BUTTON 1
101F	72794719	735WPA0732	STOPPER BUTTON 2
101G	72799770	735WPBB393	BUTTON FRAME
101H	72799793	735WPJA853	BUTTON POWER
101I	72794722	800WQ0A070	FELT SHEET
102	72781183	7A702A089A	BACK CABI ASS'Y
102A	72799347	702WPAA806	CABINET BACK
102B	72798774	800WQ0A045	FELT SHEET
103	72795687	741WUA0021	SPRING EARTH
104	72783321	722549A573	SHEET RATING
105	72783322	723000D261	POP LABEL
106	72794734	899HV3T000	HOLDER ANODE WIRE
107	72783312	726000A134	SHEET CRT SERVICEMAN
108	72798661	761WPA0220	HOLDER SPEAKER
109	72798684	762WPA0011	HOLDER CRT WIRE
110	72798781	800WR0A002	SHEET CRT SUPPORT
111	72794733	801WR00001	DAMPER SPEAKER
112	72798782	800WR0A026	SHEET CRT SUPPORT (D)
113	72783323	723000D262	SHEET BARCODE
114	72795702	791WHAA114	FILM BAG
115	72798704	792WHA0432	PACKAGE TOP
116	72798705	792WHA0433	PACKAGE BOTTOM
117	72783324	793WCDD079	GIFT BOX
118	72781105	795WCDA011	PAD
119	72783325	A3S007S975	INSTRUCTION BOOK KIT
120	72795600	JA4ND100	POLYBAG INSTRUCTION(RED CAUTION)
122	72783326	J3S00721A	INSTRUCTION BOOK(E/F)
123	72795703	791WHAA134	LIGHTRON SHEET
124	72798549	7230007398	SECURITY TAG
125	72795593	722000A023	SHEET HWC
126	72795594	722000A267	SHEET CSA WARNING
201	72781287	8141J50C5U	SCREW TAP TITE(P) GW22 5*35 CH HEXAGON
202	72781279	8117540A6U	SCREW TAP TITE(B0) TRUSS 4*16 CH
203	72781276	8117140A2U	SCREW,TAPPING(B0) PAN 4*12 CH
204	72798791	8110630A0U	SCREW TAP TITE(P) BRAZIER 3*10 CH
205	72798786	810763080U	SCREW TAP TITE(S) BRAZIER 3*8 CH
206	72798789	8109I30A0U	SCREW TAP TITE(B) WH7 3*10 CH
207	72781251	810963080Q	SCREW TAP TITE(B) BRAZIER 3*8 STAINLESS
208	72781255	8109I3080U	SCREW TAP TITE(B) WH7 3*8 CH
209	72781295	8162540A6U	SCREW TAPPING (BO) WASHER 18

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
RESISTORS			
△R402	72781748	R638U2680J	R,FUSE
△R410	72795508	R3X18A151J	R,METAL OXIDE
△R416	72797795	R002T23R3J	RC
△R420	72794682	R002T22R7J	RC
△R426	72794599	R4X5T4472F	R,METAL
△R434	72795116	R5X2CF5R6J	R,CEMENT
△R436	72795517	R4X5T4183F	R,METAL
△R438	72781753	R655812R7J	R,FUSE
△R439	72796031	R3K181102J	R,METAL OXIDE
△R441	72795516	R4X5T6153F	R,METAL
△R452	72797842	R3X181181J	R,METAL OXIDE
△R500	72794631	R0G3K2275K	RC
△R501	72795523	R5X2AE010J	R,C
△R502	72795503	R3X28A331J	R,METAL OXIDE
△R506	72794616	R002T4682J	RC
△R517	72796002	R3X28BR22J	R,METAL OXIDE
△R520	72795500	R002T2155J	RC
△R527	72794624	R3X18AR68J	R,METAL OXIDE
△R541	72794633	R63881R22J	R,FUSE
△R542	72795513	R3X181R15J	R,METAL OXIDE
△R602	72797913	R3X28B120J	R,METAL OXIDE
△R649	72794641	R3X28B100J	R,METAL OXIDE
△R803	72796459	R3X18A153J	R,METAL OXIDE
△R805	72796459	R3X18A153J	R,METAL OXIDE
△R807	72796459	R3X18A153J	R,METAL OXIDE
CAPACITORS			
C408	72794410	E5EZF3102M	CE
△C413	72797426	E0ELF4102M	CE
C418	72794389	P4J7F3394J	CMPP
△C420	72797697	P4N8FJ123H	CMPP
C425	72794399	C0PLRR713K	CC
△C426	72794394	E5EZF220M	CE
△C430	72794396	E02LU8220M	CE
△C501	72795574	E02LF3222M	CE
△C502	72794399	C0PLRR713K	CC
△C503	72794399	C0PLRR713K	CC
△C504	72795091	E02LU52R2M	CE
△C505	72795566	P2122B224M	CMP
△C506	72795567	P2122B104M	CMP
△C507	72795573	E51CGC471M	CE
△C508	72794403	CD39E0MH3M	CC
△C513	72797128	CD39E0ME3M	CC
△C514	72795574	E02LF3222M	CE
△C517	72795581	C0PLRR7E3K	CC
△C519	72797128	CD39E0ME3M	CC
△C520	72795629	C0JTB0513K	CC
△C521	72781390	E61DFB221M	CE
△C527	72796330	E02LF2222M	CE
C535	72796327	C0PLRR7H3K	CC
C626	72795577	CQGB04Q3K	CC
C802	72794440	C0JBB07H3K	CC
DIODES			
D001	72794465	D97U03301B	DIODE,ZENER
D104	72794491	D1VT001330	DIODE,SILICON
D105	72794491	D1VT001330	DIODE,SILICON
D106	72794469	D97U05R11B	DIODE,ZENER
D109	72795529	0021721150	LED
D402	72794488	D2WT011E10	DIODE,SILICON
D403	72794471	D97U03001B	DIODE,ZENER
D404	72794469	D97U05R11B	DIODE,ZENER
△D405	72794472	D2WTAU02A0	DIODE,SILICON
△D406	72794489	D97U05R61B	DIODE,ZENER
△D407	72794472	D2WTAU02A0	DIODE,SILICON
D410	72794471	D97U03001B	DIODE,ZENER
△D411	72794472	D2WTAU02A0	DIODE,SILICON
D414	72794488	D2WT011E10	DIODE,SILICON
D415	72794488	D2WT011E10	DIODE,SILICON
△D501	72794473	D2WTRM11C0	DIODE,SILICON
△D502	72794473	D2WTRM11C0	DIODE,SILICON
△D503	72794473	D2WTRM11C0	DIODE,SILICON
△D504	72794473	D2WTRM11C0	DIODE,SILICON
△D505	72794474	D28F0PRA60	DIODE,RECTIFIER
△D506	72794483	D2WXN49370	DIODE,SILICON
D507	72794491	D1VT001330	DIODE,SILICON
D508	72795542	D97U03R91B	DIODE,ZENER

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
DIODES				
D509	72795541	D97U01801B	DIODE,ZENER	MTZJ18B T-77
△D510	72794475	D2CF2016L0	DIODE,SILICON	FE201-6L49
△D511	72794483	D2WXN49370	DIODE,SILICON	1N4937
△D512	72794480	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D513	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D514	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D516	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D517	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D520	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
△D523	72795541	D97U01801B	DIODE,ZENER	MTZJ18B T-77
△D524	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D525	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D528	72794489	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D601	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D602	72794486	D97U08R21B	DIODE,ZENER	MTZJ8.2B T-77
D604	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D605	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D606	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D607	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D608	72794488	D2WT011E10	DIODE,SILICON	11E1-EIC
D701	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D702	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D703	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D704	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D706	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D709	72794490	D97U06R21B	DIODE,ZENER	MTZJ6.2B T-77
D801	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D802	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D803	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D810	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D811	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D812	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
ICS				
IC101	72795533	I56F07090B	IC	OEC7090B
IC199	72782885	A3S001U015	INIT DATA	BR24L16FJ-WE2
IC302	72794498	I01FF58910	IC	AN5891SA-E1V
△IC401	72795534	I03TD804N0	IC	LA78040N-E
△IC504	72795524	0002E00610	PHOTO COUPLER	LTV-817M-VB
IC601	72794514	I06FC1283B	IC	M61283BFP
IC902	72795535	I01FF58290	IC	AN5829S-E1V
△IC1001	72795908	I0FSP7522N	IC	AN7522N
IC1501	72794500	I05FEA45FG	IC	TC90A45FG
IC1502	72794502	I0UF015010	IC	MM1501XNRE
IC1503	72794502	I0UF015010	IC	MM1501XNRE
TRANSISTORS				
Q101	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q103	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
△Q402	72794561	TCAT03227Y	TRANSISTOR,SILICON	KTC3227_Y-AT
△Q405	72782813	TC1G058850	TRANSISTOR,SILICON	2SC5885
△Q502	72795540	T220033260	FET	2SK3326(2)
△Q503	72795475	TA3T1371A0	TRANSISTOR,SILICON	2SA1371(D,E)-AE
Q504	72794577	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
△Q505	72795474	TC3T029090	TRANSISTOR,SILICON	2SC2909(S,T)-AA
△Q507	72794577	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
△Q512	72794569	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA
△Q514	72795476	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q601	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q602	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q604	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q606	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q607	72795476	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q611	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
△Q801	72794573	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
△Q802	72794573	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
△Q803	72794573	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
△Q804	72795971	TC3F042170	TRANSISTOR,SILICON	2SC4217(D,E)-RAC
△Q805	72795971	TC3F042170	TRANSISTOR,SILICON	2SC4217(D,E)-RAC
△Q806	72795971	TC3F042170	TRANSISTOR,SILICON	2SC4217(D,E)-RAC
Q1501	72795970	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q1502	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1505	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1507	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
COILS & TRANSFORMERS				
L301	72794540	02167F101J	COIL	100 UH
L401	72794527	021679472K	COIL	4.7 MH

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
COILS & TRANSFORMERS			
L402	72794528	022100027A	COIL,LINEARITY
△L501	72796630	029T000097	COIL,LINE FILTER
△L503	72795933	028R200024	COIL,DEGAUSS
L901	72794540	02167F101J	COIL
L1501	72794540	02167F101J	COIL
L1503	72795062	02167F100J	COIL
L1504	72795932	02167F150J	COIL
L1507	72796571	021LA6220J	COIL
T401	72796055	045013003J	TRANS,HORIZONTAL DRIVE
△T501	72798977	048135091S	TRANSFORMER,SWITCHING
JACKS			
J701	72794518	060J431020	RCA JACK
J702	72794517	063Q700011	JACK
J704	72795493	060J411032	RCA JACK
J705	72794519	060J401104	RCA JACK
J706	72794520	060J401106	RCA JACK
J707	72794521	060J401105	RCA JACK
△J801	72795490	066F130020	SOCKET,CATHODE RAY,TUBE
△J1001	72794516	060J131016	HEADPHONE JACK
SWITCHES			
SW101	72794688	0504101T34	SWITCH,TACT
SW102	72794688	0504101T34	SWITCH,TACT
SW103	72794688	0504101T34	SWITCH,TACT
SW104	72794688	0504101T34	SWITCH,TACT
SW105	72794688	0504101T34	SWITCH,TACT
VARIABLE RESISTORS			
VR401	72795471	V1K63H3BTE	VOLUME,SEMI FIXED
VR502	72794701	V1163H4BTC	VOLUME,SEMI FIXED
P.C.BOARD ASSEMBLIES			
PCB010	72783316	A3S006S010L	PCB ASS'Y
PCB110	72783317	A3S006S110L	PCB ASS'Y
MISCELLANEOUS			
B501	72795549	024AT03481	CORE,BEADS
B504	72794357	024HT03553	CORE,BEADS
B1502	72794357	024HT03553	CORE,BEADS
BT001	72783174	141U004016	BATTERY,MANGAN
BT002	72783174	141U004016	BATTERY,MANGAN
△CD501	72795553	1209615904	CORD,AC BUSH
CD801	72798401	WCL6836038	FLAT CABLE
CD802	72798421	WDL6046038	FLAT CABLE
CD803	72783318	06CH823006	CORD,CONNECTOR
CP101	72782677	0694270139	CONNECTOR PCB SIDE
△CP401	72782003	069X460109	CONNECTOR PCB SIDE
△CP501	72796817	069S320419	CONNECTOR PCB SIDE
△CP502	72796821	069S420110	CONNECTOR PCB SIDE
CP507	72796768	069D01001A	CONNECTOR PCB SIDE
CP508	72796768	069D01001A	CONNECTOR PCB SIDE
CP803	72796816	069S320010	CONNECTOR PCB SIDE
CP806	72796824	069W010010	CONNECTOR PCB SIDE
CD1001	72783319	06CU14411A	CORD,CONNECTOR
CP1001	72796793	069S140419	CONNECTOR PCB SIDE
CP801A	72796751	067U005049	WIRE HOLDER
CP801B	72796751	067U005049	WIRE HOLDER
CP802A	72796752	067U006049	WIRE HOLDER
CP802B	72796752	067U006049	WIRE HOLDER
CUS011	72795888	800WFAA008	CUSHION C
EL001	72797070	124120301A	EYE LET
EL002	72797069	124116281A	EYE LET
△F501	72794493	081PC6R305	FUSE
△FB401	72796667	043220060F	TRANSFORMER,FLYBACK
FH501	72794496	06710T0009	HOLDER,FUSE
FH502	72794496	06710T0009	HOLDER,FUSE
OS101	72794541	0773071001	REMOTE RECEIVER
△RY501	72794686	0560X20118	RELAY
△SP1001	72799164	070N457008	SPEAKER
△SP1002	72799164	070N457008	SPEAKER
△TH501	72794693	D8EE0B1400	DEGAUSS ELEMENT
TM101	72799199	076N0GQ020	TRANSMITTER
△TU001	72795492	0163300018	RF UNIT
△V801	72783320	0981210468	CRT W/DY
X101	72794702	100CT8R005	CRYSTAL
X602	72794704	100DT3R531	CRYSTAL

ELECTRICAL REPLACEMENT PARTS LIST

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
CE..... ALUMI ELECTROLYTIC CAPACITOR
CP..... POLYESTER CAPACITOR
CPP..... POLYPROPYLENE CAPACITOR
CPL..... PLASTIC CAPACITOR
CMP..... METAL POLYESTER CAPACITOR
CMPL..... METAL PLASTIC CAPACITOR
CMPP..... METAL POLYPROPYLENE CAPACITOR

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
RESISTORS			
△R402	72781748	R638U2680J	R,FUSE
△R410	72795508	R3X18A151J	R,METAL OXIDE
△R416	72797795	R002T23R3J	RC
△R420	72794682	R002T22R7J	RC
△R426	72794599	R4X5T4472F	R,METAL
△R434	72795116	R5X2CF5R6J	R,CEMENT
△R436	72795517	R4X5T4183F	R,METAL
△R438	72781753	R655812R7J	R,FUSE
△R439	72796031	R3K181102J	R,METAL OXIDE
△R441	72795516	R4X5T6153F	R,METAL
△R452	72797842	R3X181181J	R,METAL OXIDE
△R500	72794631	R0G3K2275K	RC
△R501	72795523	R5X2AE010J	R,CEMENT
△R502	72795503	R3X28A331J	R,METAL OXIDE
△R506	72794616	R002T4682J	RC
△R517	72796002	R3X28BR22J	R,METAL OXIDE
△R520	72795500	R002T2155J	RC
△R527	72794624	R3X18AR68J	R,METAL OXIDE
△R541	72794633	R63881R22J	R,FUSE
△R542	72795513	R3X181R15J	R,METAL OXIDE
△R602	72797913	R3X28B120J	R,METAL OXIDE
△R649	72794641	R3X28B100J	R,METAL OXIDE
△R803	72796459	R3X18A153J	R,METAL OXIDE
△R805	72796459	R3X18A153J	R,METAL OXIDE
△R807	72796459	R3X18A153J	R,METAL OXIDE
CAPACITORS			
C408	72794410	E5EZF3102M	CE
△C413	72797426	E0ELF4102M	CE
C418	72794389	P4J7F3394J	CMPP
△C420	72797697	P4N8FJ123H	CMPP
C425	72794399	C0PLRR713K	CC
△C426	72794394	E5EZF220M	CE
△C430	72794396	E02LU8220M	CE
△C501	72795574	E02LF3222M	CE
△C502	72794399	C0PLRR713K	CC
△C503	72794399	C0PLRR713K	CC
△C504	72795091	E02LU52R2M	CE
△C505	72795566	P2122B224M	CMP
△C506	72795567	P2122B104M	CMP
△C507	72795573	E51CGC471M	CE
△C508	72794403	CD39E0MH3M	CC
△C513	72797128	CD39E0ME3M	CC
△C514	72795574	E02LF3222M	CE
△C517	72795581	C0PLRR7E3K	CC
△C519	72797128	CD39E0ME3M	CC
△C520	72795629	C0JTB0513K	CC
△C521	72781390	E61DFB221M	CE
△C527	72796330	E02LF2222M	CE
C535	72796327	C0PLRR7H3K	CC
C626	72795577	CQGB04Q3K	CC
C802	72794440	C0JBB07H3K	CC
DIODES			
D001	72794465	D97U03301B	DIODE,ZENER
D104	72794491	D1VT001330	DIODE,SILICON
D105	72794491	D1VT001330	DIODE,SILICON
D106	72794469	D97U05R11B	DIODE,ZENER
D109	72795529	0021721150	LED
D402	72794488	D2WT011E10	DIODE,SILICON
D403	72794471	D97U03001B	DIODE,ZENER
D404	72794469	D97U05R11B	DIODE,ZENER
△D405	72794472	D2WTAU02A0	DIODE,SILICON
△D406	72794489	D97U05R61B	DIODE,ZENER
△D407	72794472	D2WTAU02A0	DIODE,SILICON
D410	72794471	D97U03001B	DIODE,ZENER
△D411	72794472	D2WTAU02A0	DIODE,SILICON
D414	72794488	D2WT011E10	DIODE,SILICON
D415	72794488	D2WT011E10	DIODE,SILICON
△D501	72794473	D2WTRM11C0	DIODE,SILICON
△D502	72794473	D2WTRM11C0	DIODE,SILICON
△D503	72794473	D2WTRM11C0	DIODE,SILICON
△D504	72794473	D2WTRM11C0	DIODE,SILICON
△D505	72794474	D28F0PRA60	DIODE,RECTIFIER
△D506	72794483	D2WXN49370	DIODE,SILICON
D507	72794491	D1VT001330	DIODE,SILICON
D508	72795542	D97U03R91B	DIODE,ZENER

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
DIODES				
D509	72795541	D97U01801B	DIODE,ZENER	MTZJ18B T-77
△D510	72794475	D2CF2016L0	DIODE,SILICON	FE201-6L49
△D511	72794483	D2WXN49370	DIODE,SILICON	1N4937
△D512	72794480	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D513	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D514	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D516	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D517	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D520	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
△D523	72795541	D97U01801B	DIODE,ZENER	MTZJ18B T-77
△D524	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D525	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D528	72794489	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D601	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D602	72794486	D97U08R21B	DIODE,ZENER	MTZJ8.2B T-77
D604	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D605	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D606	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D607	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D608	72794488	D2WT011E10	DIODE,SILICON	11E1-EIC
D701	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D702	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D703	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D704	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D706	72794487	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D709	72794490	D97U06R21B	DIODE,ZENER	MTZJ6.2B T-77
D801	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D802	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D803	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D810	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D811	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
D812	72794491	D1VT001330	DIODE,SILICON	1SS133T-77
ICS				
IC101	72795533	I56F07090B	IC	OEC7090B
IC199	72783327	A3S002U015L	INIT DATA	
IC302	72794498	I01FF58910	IC	AN5891SA-E1V
△IC401	72795534	I03TD804N0	IC	LA78040N-E
△IC504	72795524	0002E00610	PHOTO COUPLER	LTV-817M-VB
IC601	72794514	I06FC1283B	IC	M61283BFP
IC902	72795535	I01FF58290	IC	AN5829S-E1V
△IC1001	72795908	I0FSP7522N	IC	AN7522N
IC1501	72794500	I05FEA45FG	IC	TC90A45FG
IC1502	72794502	I0UF015010	IC	MM1501XNRE
IC1503	72794502	I0UF015010	IC	MM1501XNRE
TRANSISTORS				
Q101	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q103	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
△Q402	72794561	TCAT03227Y	TRANSISTOR,SILICON	KTC3227_Y-AT
△Q405	72782813	TC1G058850	TRANSISTOR,SILICON	2SC5885
△Q502	72795540	T220033260	FET	2SK3326(2)
△Q503	72795475	TA3T1371A0	TRANSISTOR,SILICON	2SA1371(D,E)-AE
Q504	72794577	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
△Q505	72795474	TC3T029090	TRANSISTOR,SILICON	2SC2909(S,T)-AA
△Q507	72794577	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
△Q512	72794569	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA
△Q514	72795476	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q601	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q602	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q604	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q606	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q607	72795476	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q611	72794570	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
△Q801	72794573	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
△Q802	72794573	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
△Q803	72794573	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
△Q804	72795971	TC3F042170	TRANSISTOR,SILICON	2SC4217(D,E)-RAC
△Q805	72795971	TC3F042170	TRANSISTOR,SILICON	2SC4217(D,E)-RAC
△Q806	72795971	TC3F042170	TRANSISTOR,SILICON	2SC4217(D,E)-RAC
Q1501	72795970	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q1502	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1505	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1507	72794571	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
COILS & TRANSFORMERS				
L301	72794540	02167F101J	COIL	100 UH
L401	72794527	021679472K	COIL	4.7 MH

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
COILS & TRANSFORMERS			
L402	72794528	022100027A	COIL,LINEARITY
△L501	72796630	029T000097	COIL,LINE FILTER
△L503	72795933	028R200024	COIL,DEGAUSS
L901	72794540	02167F101J	COIL
L1501	72794540	02167F101J	COIL
L1503	72795062	02167F100J	COIL
L1504	72795932	02167F150J	COIL
L1507	72796571	021LA6220J	COIL
T401	72796055	045013003J	TRANS,HORIZONTAL DRIVE
△T501	72798977	048135091S	TRANSFORMER,SWITCHING
JACKS			
J701	72794518	060J431020	RCA JACK
J702	72794517	063Q700011	JACK
J704	72795493	060J411032	RCA JACK
J705	72794519	060J401104	RCA JACK
J706	72794520	060J401106	RCA JACK
J707	72794521	060J401105	RCA JACK
△J801	72795490	066F130020	SOCKET,CATHODE RAY,TUBE
△J1001	72794516	060J131016	HEADPHONE JACK
SWITCHES			
SW101	72794688	0504101T34	SWITCH,TACT
SW102	72794688	0504101T34	SWITCH,TACT
SW103	72794688	0504101T34	SWITCH,TACT
SW104	72794688	0504101T34	SWITCH,TACT
SW105	72794688	0504101T34	SWITCH,TACT
VARIABLE RESISTORS			
VR401	72795471	V1K63H3BTE	VOLUME,SEMI FIXED
VR502	72794701	V1163H4BTC	VOLUME,SEMI FIXED
P.C.BOARD ASSEMBLIES			
PCB010	72783328	A3S007S010L	PCB ASS'Y
PCB110	72783317	A3S006S110L	PCB ASS'Y
MISCELLANEOUS			
B501	72795549	024AT03481	CORE,BEADS
B504	72794357	024HT03553	CORE,BEADS
B1502	72794357	024HT03553	CORE,BEADS
BT001	72783174	141U004016	BATTERY,MANGAN
BT002	72783174	141U004016	BATTERY,MANGAN
△CD501	72795553	1209615904	CORD,AC BUSH
CD801	72798401	WCL6836038	FLAT CABLE
CD802	72798421	WDL6046038	FLAT CABLE
CD803	72783318	06CH823006	CORD,CONNECTOR
CP101	72782677	0694270139	CONNECTOR PCB SIDE
△CP401	72782003	069X460109	CONNECTOR PCB SIDE
△CP501	72796817	069S320419	CONNECTOR PCB SIDE
△CP502	72796821	069S420110	CONNECTOR PCB SIDE
CP507	72796768	069D01001A	CONNECTOR PCB SIDE
CP508	72796768	069D01001A	CONNECTOR PCB SIDE
CP803	72796816	069S320010	CONNECTOR PCB SIDE
CP806	72796824	069W010010	CONNECTOR PCB SIDE
CD1001	72783319	06CU14411A	CORD,CONNECTOR
CP1001	72796793	069S140419	CONNECTOR PCB SIDE
CP801A	72796751	067U005049	WIRE HOLDER
CP801B	72796751	067U005049	WIRE HOLDER
CP802A	72796752	067U006049	WIRE HOLDER
CP802B	72796752	067U006049	WIRE HOLDER
CUS011	72795888	800WFAA008	CUSHION C
EL001	72797070	124120301A	EYE LET
EL002	72797069	124116281A	EYE LET
△F501	72794493	081PC6R305	FUSE
△FB401	72796667	043220060F	TRANSFORMER,FLYBACK
FH501	72794496	06710T0009	HOLDER,FUSE
FH502	72794496	06710T0009	HOLDER,FUSE
OS101	72794541	0773071001	REMOTE RECEIVER
△RY501	72794686	0560X20118	RELAY
△SP1001	72799164	070N457008	SPEAKER
△SP1002	72799164	070N457008	SPEAKER
△TH501	72794693	D8EE0B1400	DEGAUSS ELEMENT
TM101	72799199	076N0GQ020	TRANSMITTER
△TU001	72795492	0163300018	RF UNIT
△V801	72783320	0981210468	CRT W/DY
X101	72794702	100CT8R005	CRYSTAL
X602	72794704	100DT3R531	CRYSTAL

ELECTRICAL REPLACEMENT PARTS LIST

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
CE..... ALUMI ELECTROLYTIC CAPACITOR
CP..... POLYESTER CAPACITOR
CPP..... POLYPROPYLENE CAPACITOR
CPL..... PLASTIC CAPACITOR
CMP..... METAL POLYESTER CAPACITOR
CMPL..... METAL PLASTIC CAPACITOR
CMPP..... METAL POLYPROPYLENE CAPACITOR

TOSHIBA CORPORATION

1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN