

# Frequency Converter Installation Instructions

**8040520**  
**Rev. A (2/98)**



**View our inventory**

The information in this document is believed to be accurate and reliable. However, CTI-CRYOGENICS - Helix Technology Corporation, cannot accept any financial or other responsibilities that may result from the use of this information. No warranties are granted or extended by this document.

CTI-CRYOGENICS - Helix Technology Corporation reserves the right to change any or all information contained herein without prior written notice. Revisions may be issued at the time of such changes and/or deletions.

Any duplication of this manual or any of its parts without expressed written permission from CTI-CRYOGENICS - Helix Technology Corporation is strictly prohibited.

Any correspondence regarding this document should be forwarded to:

CTI-CRYOGENICS  
Helix Technology Corporation  
Mansfield Corporate Center  
Engineering Services Department  
Nine Hampshire Street  
Mansfield, Massachusetts 02048-9171 U.S.A.

Telephone: (508) 337-5000  
FAX: (508) 337-5464

The following CTI-CRYOGENICS - Helix Technology Corporation trademarks and service marks may appear in this document:

CTI-CRYOGENICS®	GUTS®
Cryo-Torr®	Cryodyne®
On-Board®	RetroFast®
Value Line™	RetroEase®
FastRegen™	TurboPlus™
TurboLink™	
ThinLine™	

All other trademarks or registered trademarks are the property of their respective holders.

# Table of Contents

## Section 1 - Introduction

Purpose .....	1-1
Frequency Converter Applications .....	1-1
Specifications .....	1-1

## Section 2 - Installation

Introduction .....	2-1
9600 Compressor with On-Board Cryopumps .....	2-1
9600 Compressor with Cryo-Torr Cryopumps .....	2-3
8200 Single Phase Compressor with an On-Board Cryopump .....	2-5
8200 Single Phase Compressor with Cryo-Torr Cryopumps .....	2-7
8200 Three Phase Compressor with an On-Board Cryopump .....	2-9
8200 Three Phase Compressor with Cryo-Torr Cryopumps .....	2-11
8510 Compressor with On-Board Cryopumps .....	2-13
8500 Compressor with On-Board Cryopumps .....	2-15
8500 Compressor with Cryo-Torr Cryopumps .....	2-17
1020R Compressor with On-Board Cryopumps .....	2-19
1020R Compressor with Cryo-Torr Cryopumps .....	2-21

## Appendix A - Customer Support Centers

## Appendix B - Drawings

# Table of Contents (continued)

## Figures

Figure 1-1: Frequency Converter Chassis Front and Rear Views ..... 1-2

Figure 1-2: Frequency Converter Dimensions ..... 1-3

Figure 2-1: 9600 LV Compressor with On-Board Cryopumps ..... 2-2

Figure 2-2: 9600 LV Compressor with an Cryo-Torr Cryopumps ..... 2-4

Figure 2-3: 8200 Single Phase Compressor with an On-Board Cryopump ... 2-6

Figure 2-4: 8200 for Single Phase Compressor with Cryo-Torr Cryopumps .. 2-8

Figure 2-5: 8200 Three-Phase Compressor with an On-Board Cryopump ... 2-10

Figure 2-6: 8200 Three-Phase Compressor with Cryo-Torr Cryopumps .... 2-12

Figure 2-7: 8510 Compressor with On-Board Cryopumps ..... 2-14

Figure 2-8: 8500 Compressor with an On-Board Cryopump ..... 2-16

Figure 2-9: 8500 Compressor with Cryo-Torr Cryopumps ..... 2-18

Figure 2-10: 1020R Compressor with On-Board Cryopumps ..... 2-20

Figure 2-11: 1020R Compressor with Cryo-Torr Cryopumps ..... 2-22

Figure B-1: Frequency Converter Electrical Schematic  
P/N 8043194P001 Rev. A ..... B-2

## Tables

Table 1-1:Frequency Converter General Specifications ..... 1-1

Table A-1:Customer Support Center Locations ..... A-2

# Section 1 - Introduction

## Purpose

The Frequency Converter, P/N 8043202G001 - G005 allows CTI-CRYOGENICS' equipment to operate efficiently when connected to a supply voltage with a line frequency of 50Hz.

The Frequency Converter, shown in Figure 1-1, is designed for use with CTI-CRYOGENICS' 9600, 8200, 8510, 8500, and 1020R compressors, and On-Board and Cryo-Torr Cryopumps.


## Frequency Converter Applications

There are different configurations of the Frequency Converter to support various configurations of CTI-CRYOGENICS' compressors and cryopumps. Refer to **Section 2 - Installation** for information on installing the Frequency Converter for your particular compressor and cryopump application.


## Specifications

**Table 1-1: Frequency Converter General Specifications**

Parameter	Value
Weight	50 lbs (22.67 kg)
Ambient Temperature	50 - 100° F (10 - 38° C)

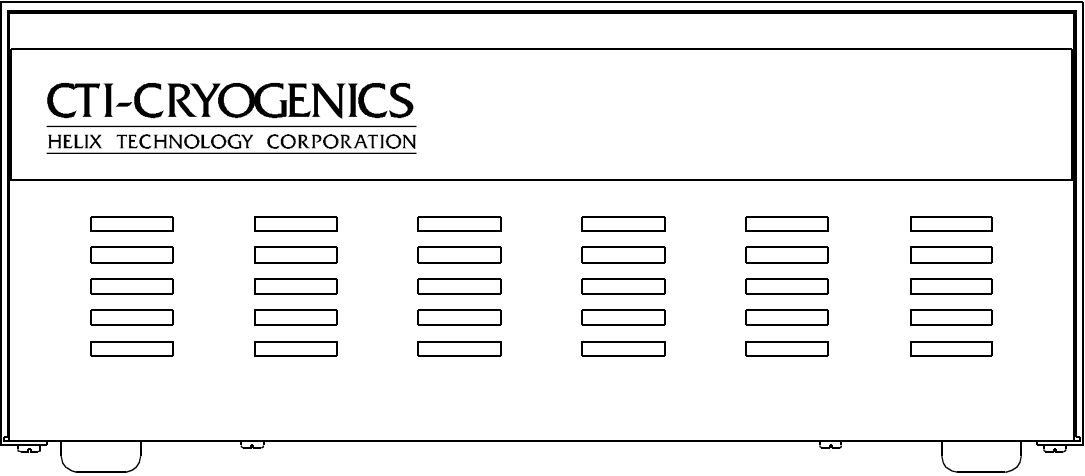


Front Panel View

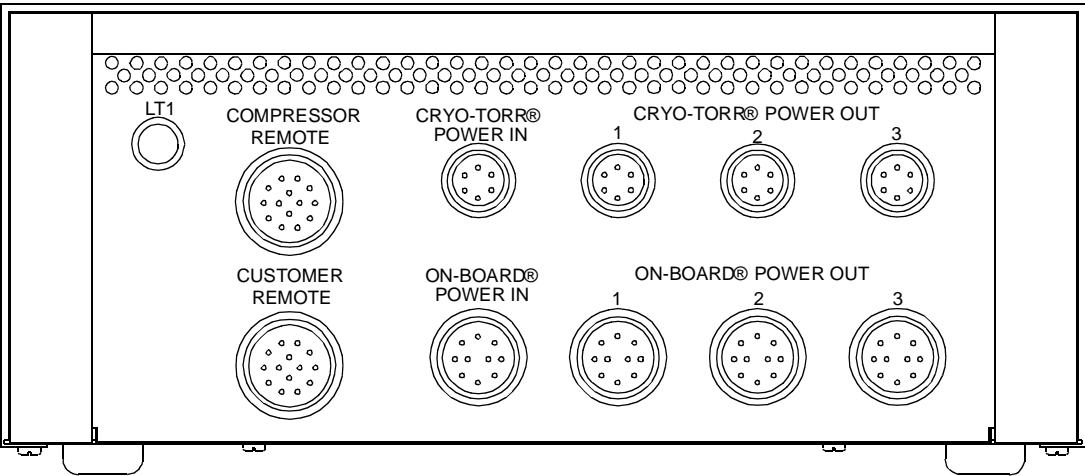

Rear Panel View

**Figure 1-1: Frequency Converter Chassis Front and Rear Views**

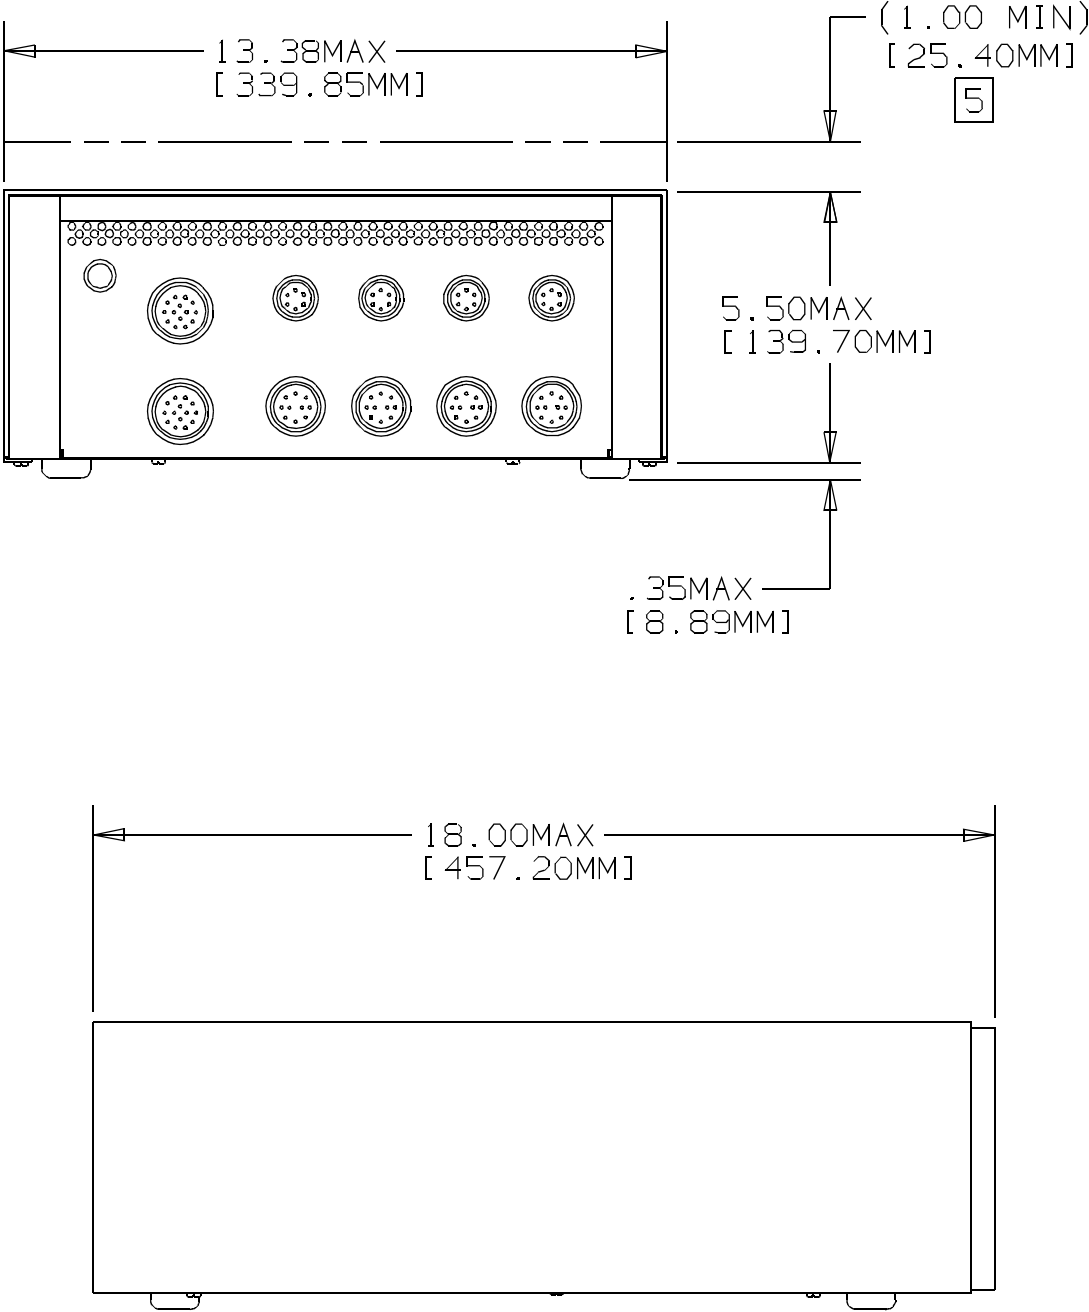

**Figure 1-2: Frequency Converter Dimensions**

## Section 2 - Installation

### Introduction

Section 2 provides all required information for connecting the Frequency Converter to the 9600, 8200, 8510, 8500, and 1020R Compressors which are connected to On-Board or Cryo-Torr Cryopumps.

### 9600 Compressor with On-Board Cryopumps


This procedure involves the following components:

- 9600 Low-Voltage Compressor, CTI-CRYOGENICS P/N 8135900G001
- Frequency Converter, CTI-CRYOGENICS P/N 8043202G002, which includes On-Board Power Cable, CTI-CRYOGENICS P/N 8112463G050
- On-Board Cryopumps

**NOTE:** *If installing a new 9600 Compressor along with the Frequency Converter, refer to the **9600 Compressor Installation, Operation, and Service Instructions** manual CTI-CRYOGENICS P/N 8040444.*

1. Carefully place the Frequency Converter on top of the 9600 Compressor as shown in Figure 2-1.
2. Connect the three On-Board power cables to the ON-BOARD POWER OUT outputs 1, 2 and 3 on the Frequency Converter.
3. Connect the On-Board Cryopump power cable, P/N 8112463G050 (supplied), between the ON-BOARD POWER IN, input on the Frequency Converter and the cryopump electrical outlet on the 9600 compressor.
4. Set the control circuit breaker on the rear panel of the 9600 compressor to the ON position.



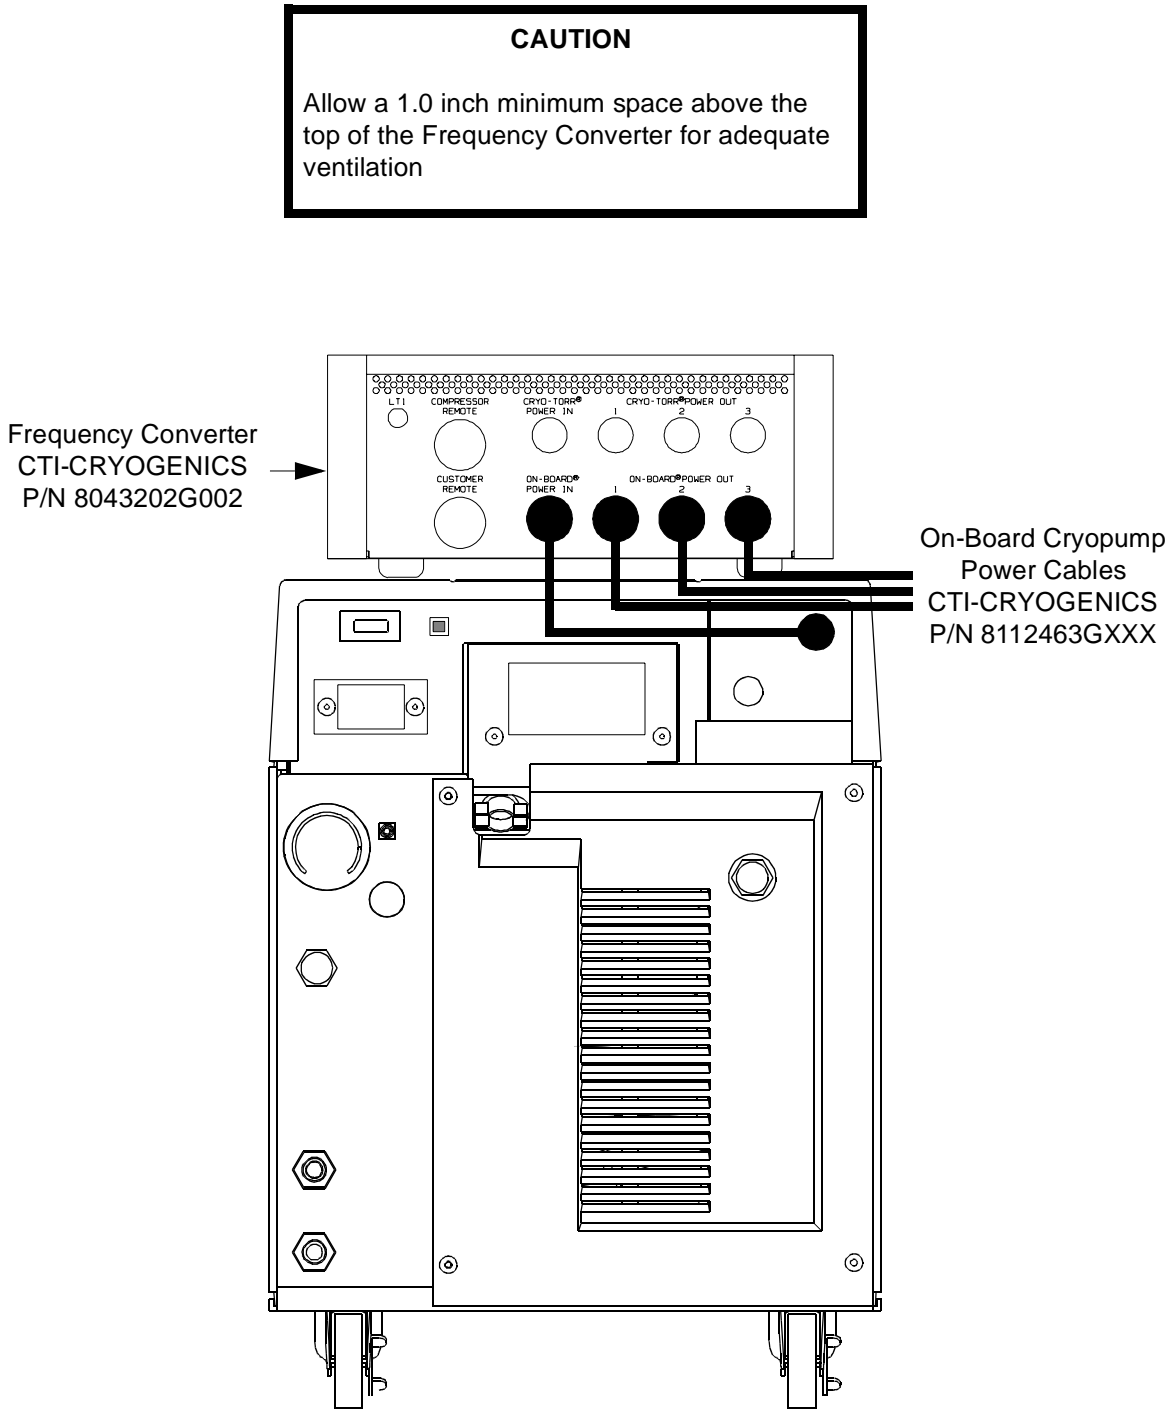

**Figure 2-1: 9600 LV Compressor with On-Board Cryopumps**


## 9600 Compressor with Cryo-Torr Cryopumps

This procedure involves the following components:

- 9600 Low-Voltage Compressor, CTI-CRYOGENICS P/N 8135900G001
- Frequency Converter, CTI-CRYOGENICS P/N 8043202G005, which includes a cryopump power cable, CTI-CRYOGENICS P/N 8043209G050
- Cryo-Torr Cryopumps

**NOTE:** *If installing a new 9600 Compressor along with the Frequency Converter, refer to the **9600 Compressor Installation, Operation, and Service Instructions** manual CTI-CRYOGENICS P/N 8040444.*

1. Carefully place the Frequency Converter on top of the 9600 Compressor as shown in Figure 2-2.
2. Connect the three cryopump power cables to the CRYO-TORR POWER OUT outputs 1, 2 and 3 on the Frequency Converter.
3. Connect the cryopump power cable, P/N 8043209G050 (supplied), between the CRYO-TORR POWER IN, input on the Frequency Converter and the cryopump electrical outlet on the 9600 compressor.
4. Set the control circuit breaker on the rear panel of the 9600 compressor to the ON position.

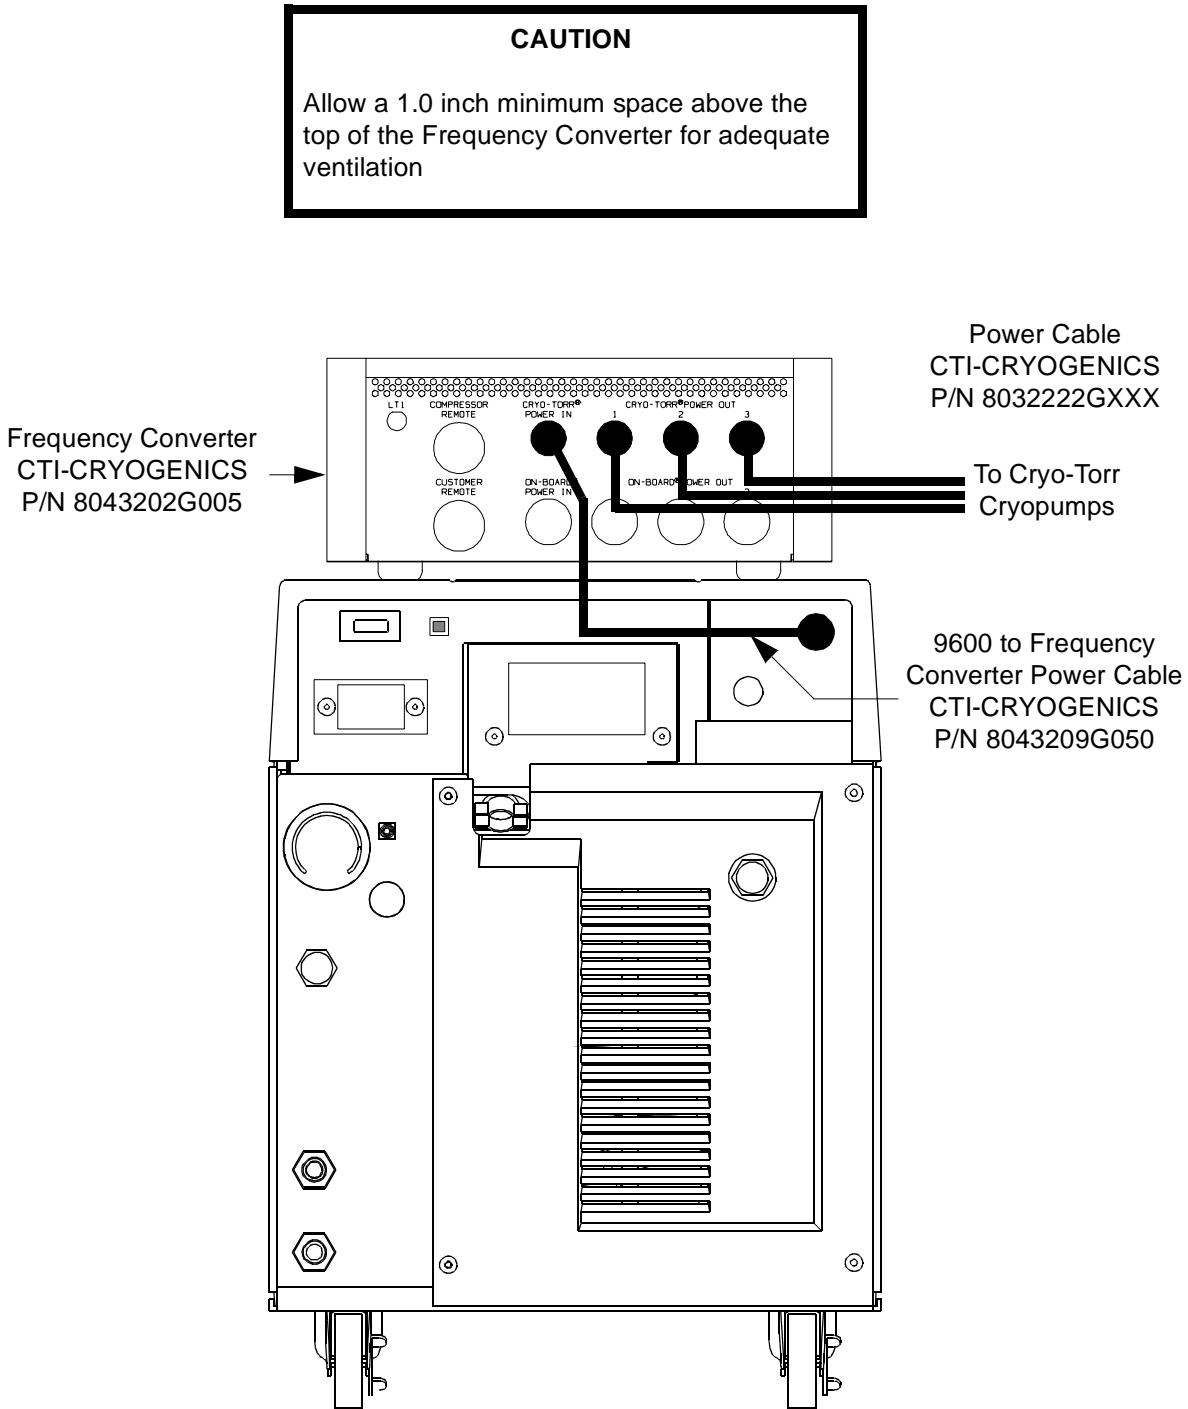

**Figure 2-2: 9600 LV Compressor with an Cryo-Torr Cryopumps**

## 8200 Single Phase Compressor with an On-Board Cryopump

This procedure involves the following components:


- 8200 Single Phase, Water or Air Cooled Compressor
- Frequency Converter, CTI-CRYOGENICS P/N 8043202G004, which includes power cable CTI-CRYOGENICS P/N 8043071G050
- One On-Board Cryopump

**NOTE:** *If installing a new 8200 Compressor along with the Frequency Converter, refer to the **8200 Compressor Installation, Operation, and Service** manual CTI-CRYOGENICS P/N 8040353 for information on setting the control module to the proper operating voltage range before installing the Frequency Converter.*

1. Carefully place the Frequency Converter on top of the 8200 Compressor as shown in Figure 2-3.
2. Connect the On-Board Cryopump power cable CTI-CRYOGENICS P/N8112463GXXX between one of the ON-BOARD POWER OUT connectors on the rear panel of the Frequency Converter and the POWER IN connector on the On-Board Cryopump Module.
3. Connect the power cable CTI-CRYOGENICS P/N 8043071G050 between the ON-BOARD POWER IN connector on the rear panel of the Frequency Converter and the ON-BOARD POWER connector on the rear panel of the 8200 compressor as shown in Figure 2-3.

**NOTE:** *Make sure the Frequency Selector Switch is set to the 60Hz position. Failure to do so will result in improper system operation.*

4. Set the Frequency Selector Switch on the front panel of the 8200 compressor to the 60Hz position.
5. Set the Power Switch on the front panel of the 8200 compressor to the ON position.

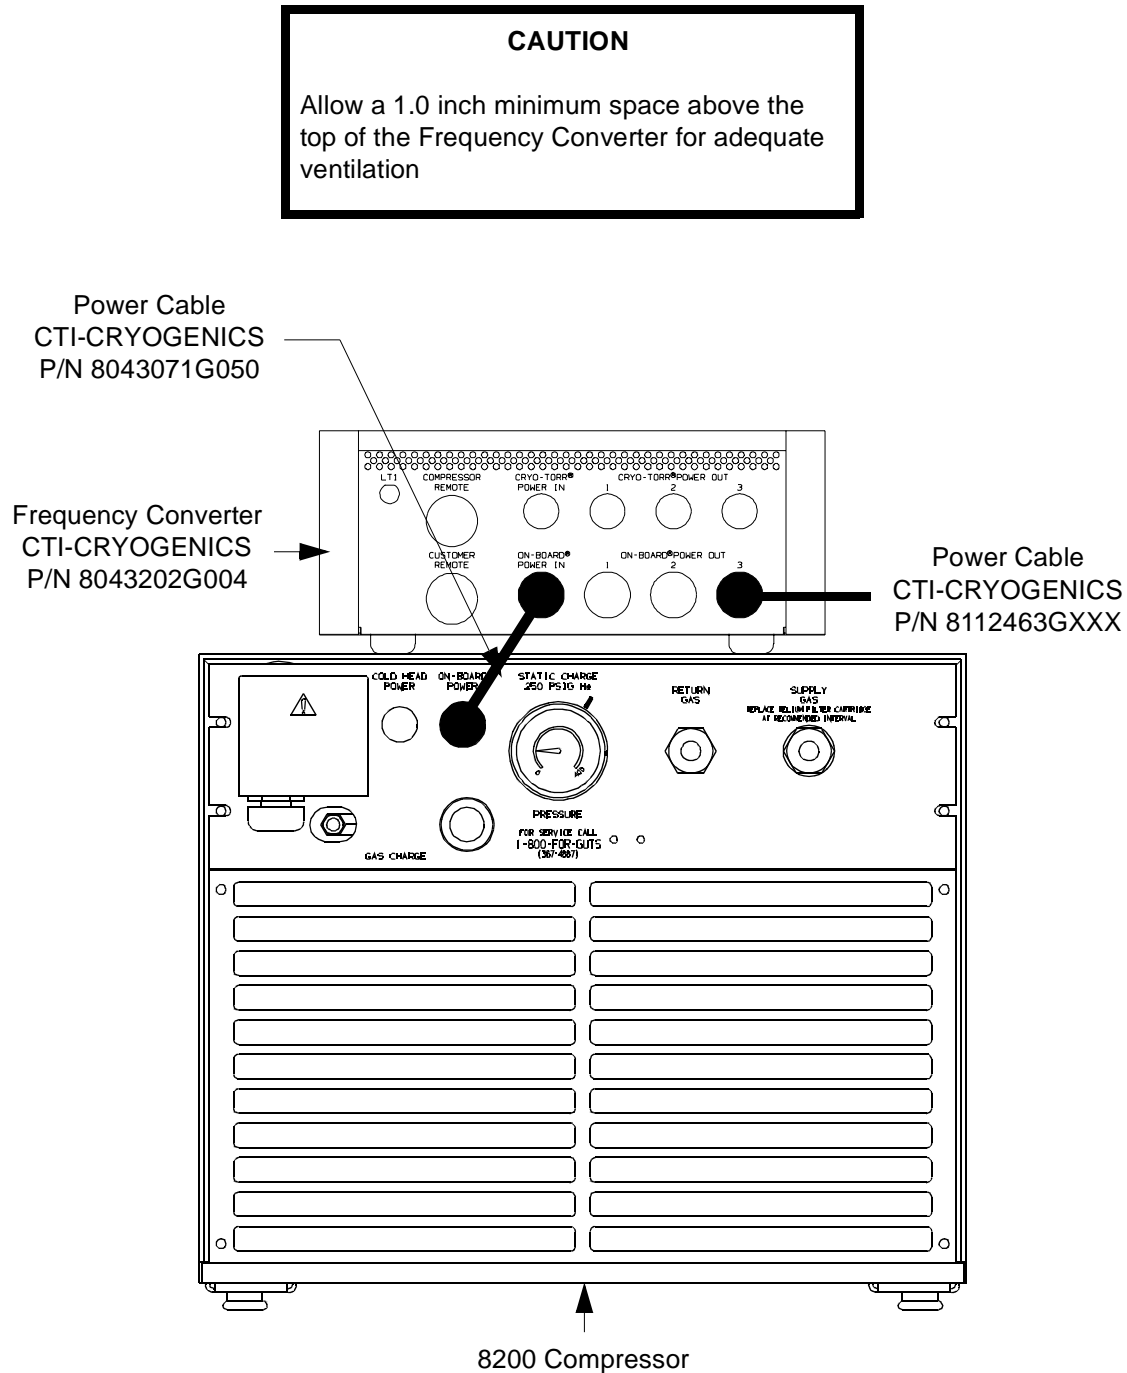

**Figure 2-3: 8200 Single Phase Compressor with an On-Board Cryopump**

## 8200 Single Phase Compressor with Cryo-Torr Cryopumps

This procedure involves the following components:


- 8200 Single Phase, Water or Air Cooled Compressor
- Frequency Converter, CTI-CRYOGENICS P/N 8043202G003, which includes power cable CTI-CRYOGENICS P/N 8043072G050
- Cryo-Torr Cryopumps

**NOTE:** *If installing a new 8200 Compressor along with the Frequency Converter, refer to the **8200 Compressor Installation, Operation, and Service** manual CTI-CRYOGENICS P/N 8040353 for information on setting the control module to the proper operating voltage range before installing the Frequency Converter.*

1. Carefully place the Frequency Converter on top of the 8200 Compressor as shown in Figure 2-4.
2. Connect the Cryo-Torr Cryopump power cable CTI-CRYOGENICS P/N 8032222GXXX between one of the CRYO-TORR POWER OUT connectors on the rear panel of the Frequency Converter and the connector on the Cryo-Torr Cryopump as shown in Figure 2-4.
3. Connect the power cable CTI-CRYOGENICS P/N 8043072G050 between the CRYO-TORR POWER IN connector on the rear panel of the Frequency Converter and the COLD HEAD POWER connector on the rear panel of the 8200 compressor as shown in Figure 2-4.

**NOTE:** *Make sure the Frequency Selector Switch is set to the 60Hz position. Failure to do so will result in improper system operation.*

4. Set the Frequency Selector Switch on the front panel of the 8200 compressor to the 60Hz position.
5. Set the Power Switch on the front panel of the 8200 compressor to the ON position.

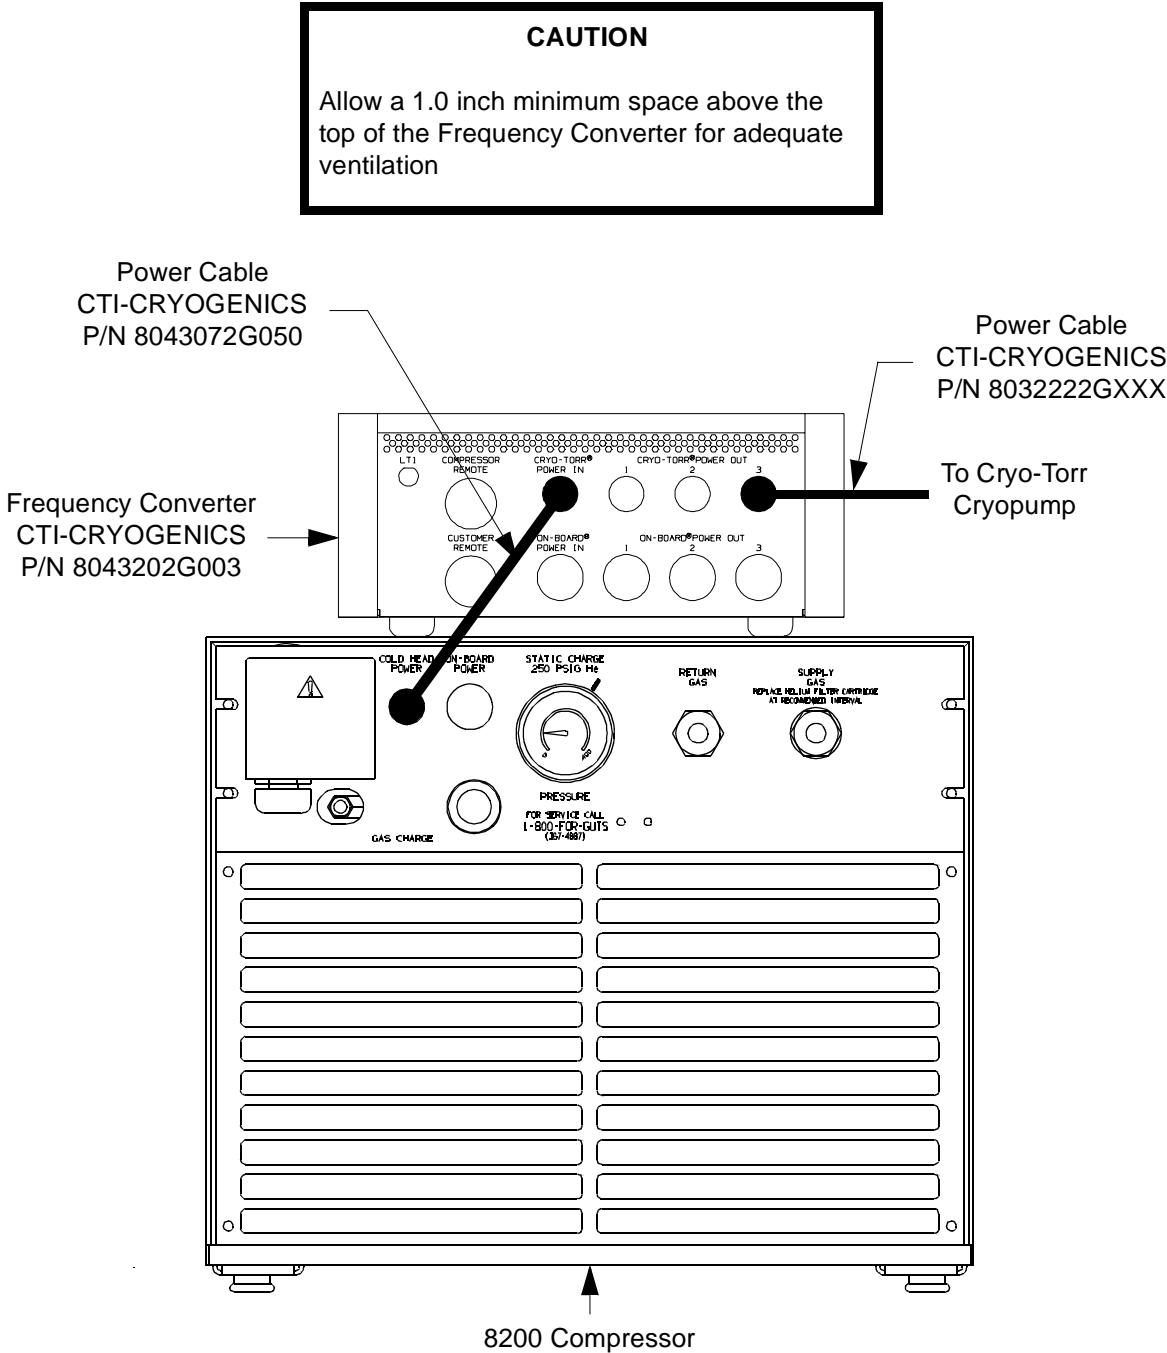

**Figure 2-4: 8200 for Single Phase Compressor with Cryo-Torr Cryopumps**

## 8200 Three Phase Compressor with an On-Board Cryopump


This procedure involves the following components:

- 8200 Three Phase Compressor
- Frequency Converter, CTI-CRYOGENICS P/N 8043202G002, which includes On-Board Cryopump power cable CTI-CRYOGENICS P/N 8112463G050
- One On-Board Cryopump

**NOTE:** *If installing a new 8200 Compressor along with the Frequency Converter, refer to the **8200 Compressor Installation, Operation, and Service** manual CTI-CRYOGENICS P/N 8040353 for information on setting the control module to the proper operating voltage range before installing the Frequency Converter.*

1. Carefully place the Frequency Converter on top of the 8200 Compressor as shown in Figure 2-5.
2. Connect the On-Board Cryopump power cable CTI-CRYOGENICS P/N 8112463GXXX between one of the ON-BOARD POWER OUT connectors on the rear panel of the Frequency Converter and the POWER IN connector on the On-Board Cryopump Module as shown in Figure 2-5.
3. Connect the power cable CTI-CRYOGENICS P/N 8112463G050 (supplied) between the ON-BOARD POWER IN connector on the rear panel of the Frequency Converter and the ON-BOARD POWER connector on the rear panel of the 8200 compressor as shown in Figure 2-5.
4. Set the Power Switch on the front panel of the 8200 compressor to the ON position.



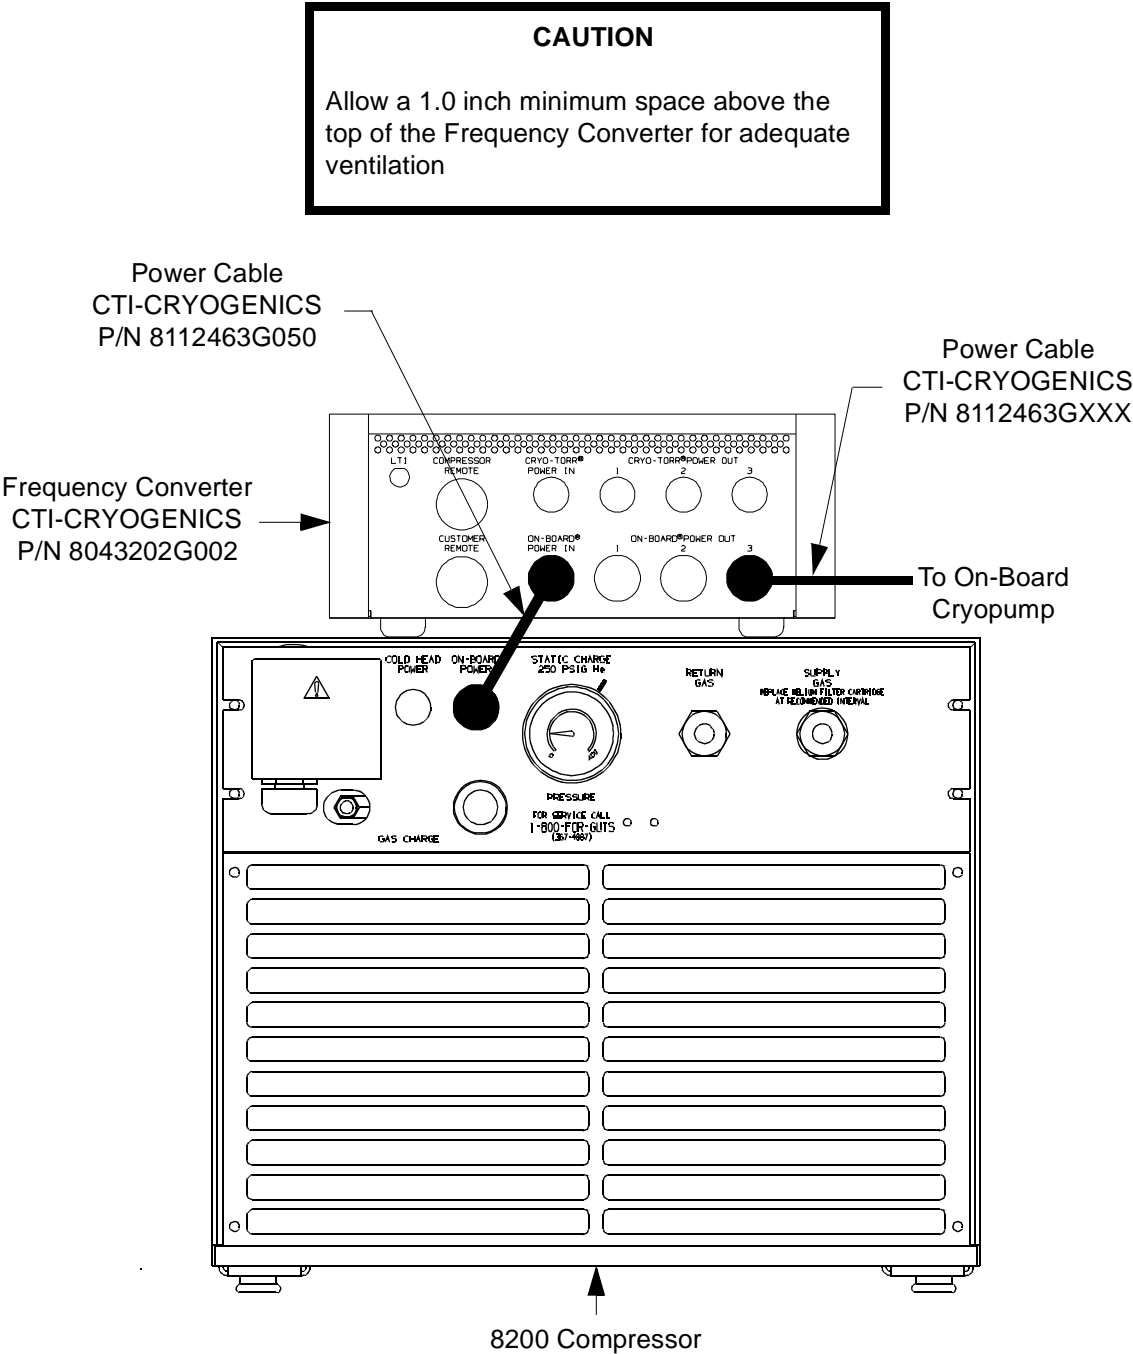

**Figure 2-5: 8200 Three-Phase Compressor with an On-Board Cryopump**

## 8200 Three Phase Compressor with Cryo-Torr Cryopumps


This procedure involves the following components:

- 8200 Three Phase Water Cooled Compressor
- Frequency Converter, CTI-CRYOGENICS P/N 8043202G001, which includes Frequency Converter Cable Kit, CTI-CRYOGENICS P/N 8080005K012
- Cryo-Torr Cryopumps

**NOTE:** An 8200 Three Phase Compressor does not support Cryo-Torr Cryopump Remote ON/OFF capability.

**NOTE:** If installing a new 8200 Compressor along with the Frequency Converter, refer to the **8200 Compressor Installation, Operation, and Service** manual CTI-CRYOGENICS P/N 8040353 for information on setting the control module to the proper operating voltage range before installing the Frequency Converter.

1. Carefully place the Frequency Converter on top of the 8200 Compressor as shown in Figure 2-6.
2. Connect the Cryo-Torr Cryopump power cable CTI-CRYOGENICS P/N 8032222GXXX between one of the CRYO-TORR POWER OUT connectors on the rear panel of the Frequency Converter and the connector on the Cryo-Torr Cryopump as shown in Figure 2-6.
3. Connect the power cable CTI-CRYOGENICS P/N 8043054G050 between the CRYO-TORR POWER IN connector on the rear panel of the Frequency Converter and the COLD HEAD POWER connector on the rear panel of the 8200 compressor as shown in Figure 2-6.
4. Set the Power Switch on the front panel of the 8200 compressor to the ON position.

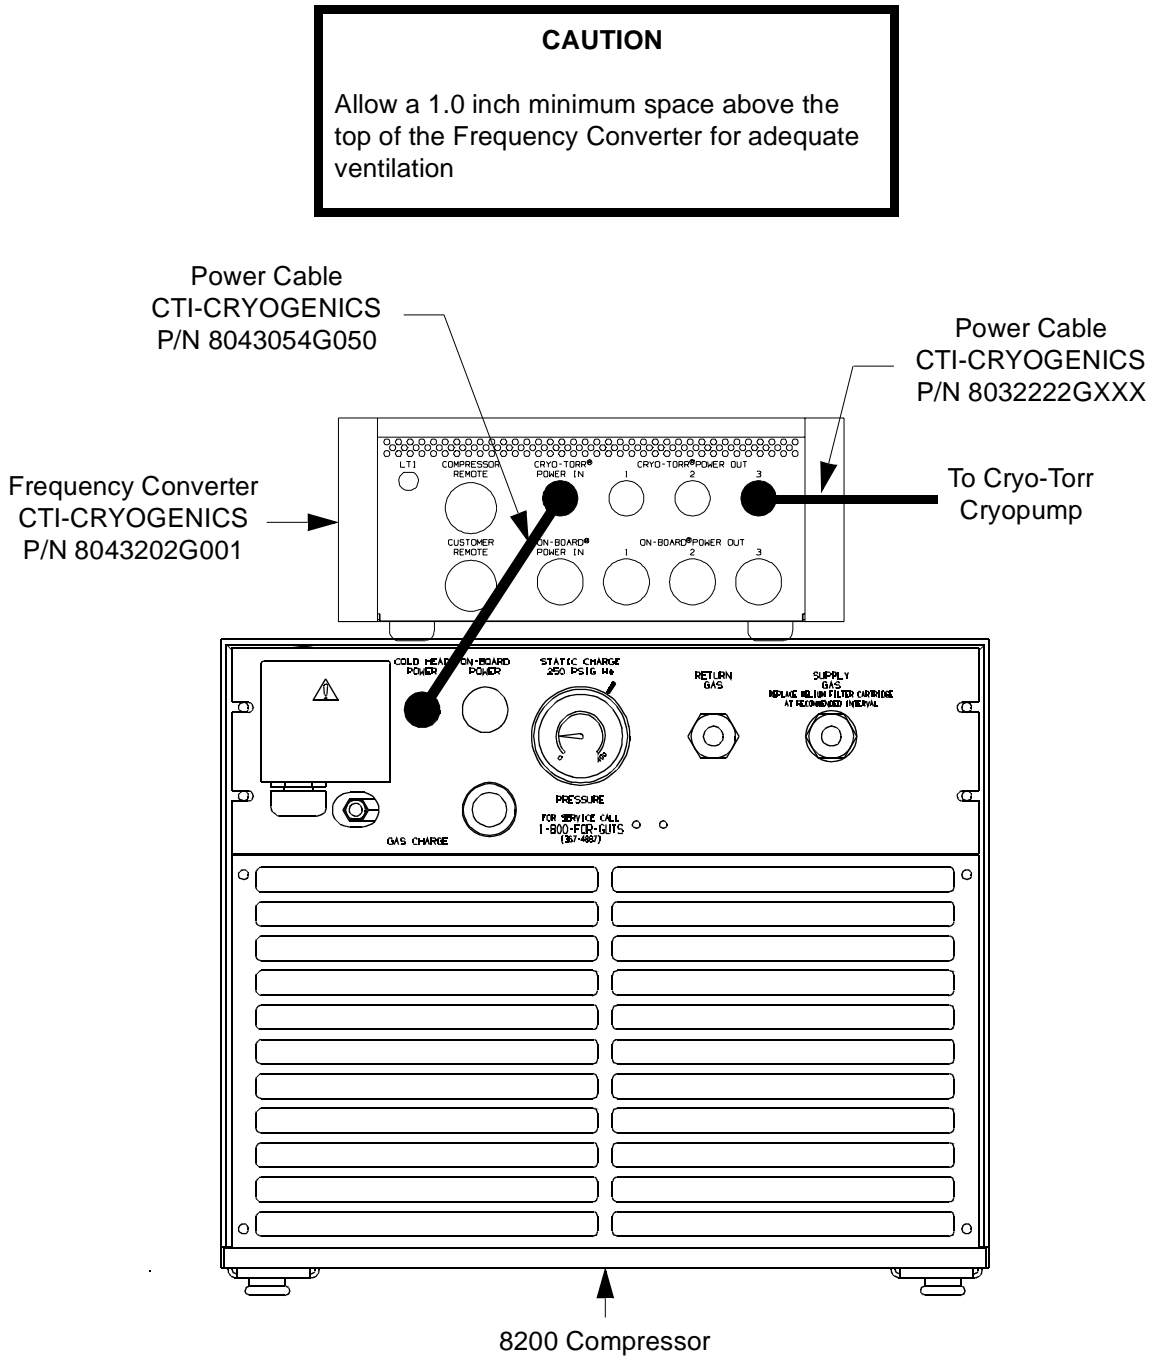

**Figure 2-6: 8200 Three-Phase Compressor with Cryo-Torr Cryopumps**

## 8510 Compressor with On-Board Cryopumps

This procedure involves the following components:


- 8510 Low-Voltage Compressor, CTI-CRYOGENICS P/N 8031315
- Frequency Converter, CTI-CRYOGENICS P/N 8043202G002, which includes On-Board Power Cable, CTI-CRYOGENICS P/N 8112463G050
- On-Board Cryopumps

**NOTE:** If installing a new 8510 Compressor along with the Frequency Converter, refer to the **8510 Compressor Installation, Operation, and Service** manual CTI-CRYOGENICS P/N 8040232 for information on setting the control module to the proper operating voltage range before installing the Frequency Converter.

1. Carefully place the Frequency Converter on top of the 8510 Compressor as shown in Figure 2-7.
2. Connect the three On-Board power cables to the ON-BOARD POWER OUT outputs 1, 2 and 3 on the Frequency Converter.

**NOTE:** Make sure the On-Board Cryopump Power cable is connected to COLD HEAD 3 output on the compressor in step 3. The CUSTOMER REMOTE capability will not function if connected to output 1 or 2.

3. Connect the On-Board Cryopump power cable, P/N 8112463G050 (supplied), between the ON-BOARD POWER IN, input on the converter and the COLD HEAD 3 output on the compressor.
4. Set the Power Switch on the front panel of the 8510 compressor to the ON position.

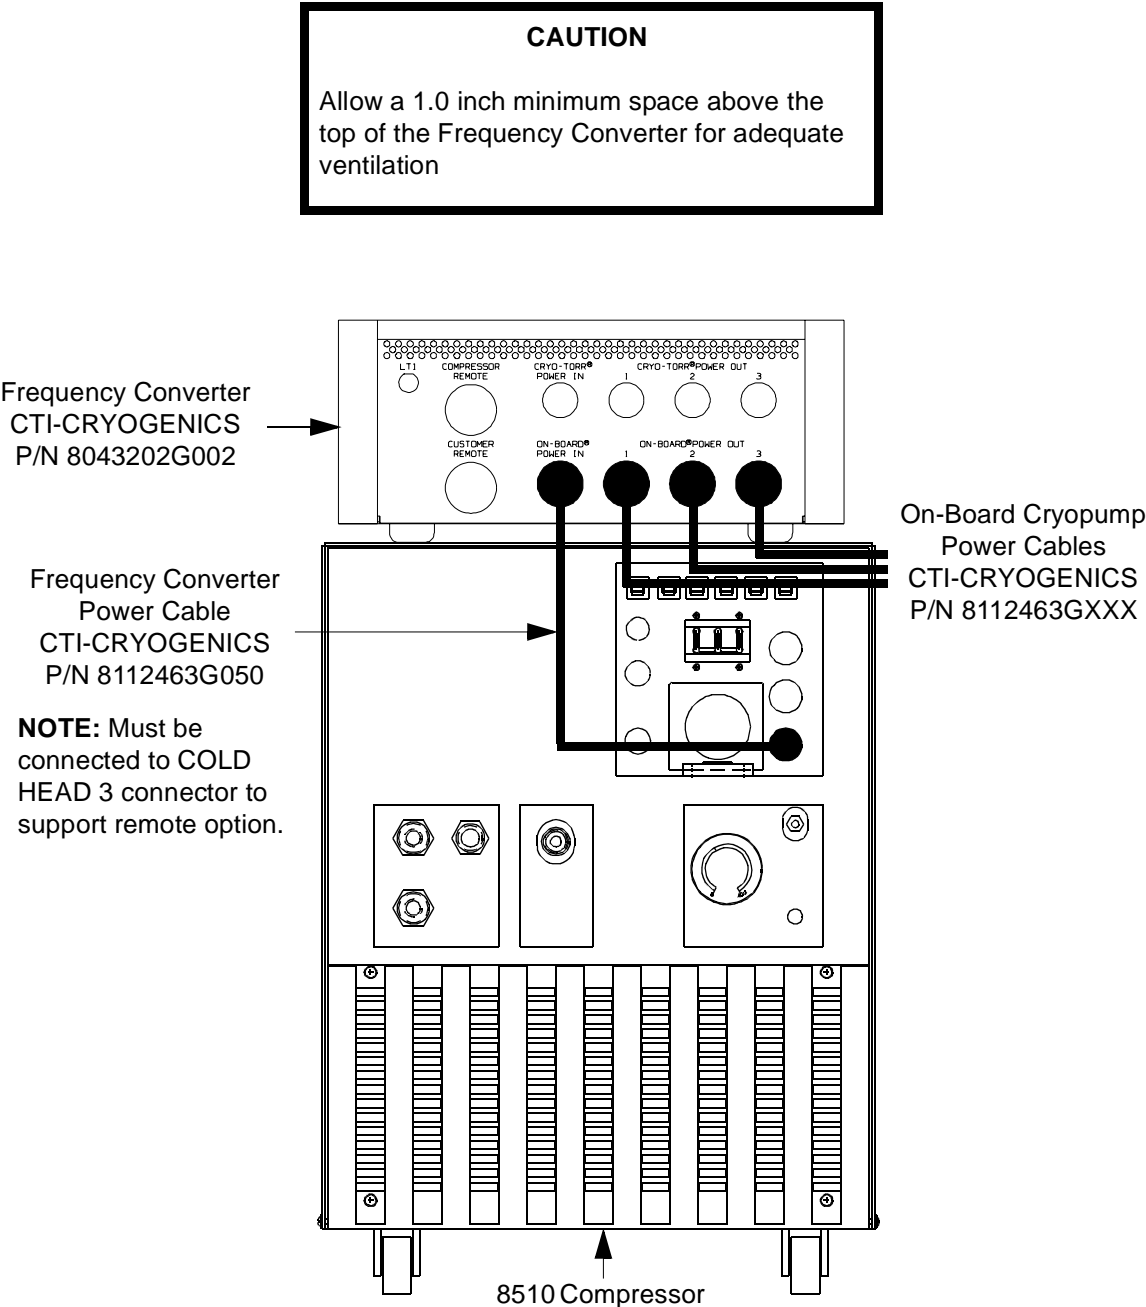

**Figure 2-7: 8510 Compressor with On-Board Cryopumps**

## 8500 Compressor with On-Board Cryopumps

This procedure involves the following components:

- 8500 Compressor, CTI-CRYOGENICS P/N 8031348G001 or G002
- Frequency Converter, CTI-CRYOGENICS P/N 8043202G002, which includes Frequency Converter Cable Kit, CTI-CRYOGENICS P/N 8080005K012 8011 Compressor Controller
- On-Board Cryopumps

**NOTE:** If installing a new 8500 Compressor along with the Frequency Converter, refer to the **8500 Compressor Installation, Operation, and Service** manual CTI-CRYOGENICS P/N 8040324 for information on setting the control module to the proper operating voltage range before installing the Frequency Converter.

If installing a new 8011 Controller along with the Frequency Converter, refer to the **8011 Controller and 8011 Control Module** manual CTI-CRYOGENICS P/N 8040309 for proper setup before installing the Frequency Converter.

1. Carefully place the 8011 Controller on top of the 8500 compressor as shown in Figure 2-8.
2. Carefully place the Frequency Converter on top of the 8011 Controller as shown in Figure 2-8.


**NOTE:** Make sure the cryopump cable is connected to COLD HEAD 3 output on the compressor. The CUSTOMER REMOTE capability will not function if connected to output 1 or 2.

3. Connect the cryopump cable CTI-CRYOGENICS P/N 8043054P050 between COLD HEAD 3 connector on the 8500 Compressor and 1 IN connector on the 8011 Controller.
4. Connect the On-Board power cable CTI-CRYOGENICS P/N 8112463G050 between the 1 OUT connector on the 8011 Controller and the ON-BOARD POWER IN connector on the Frequency Converter.
5. Connect the On-Board Cryopump power cables CTI -CRYOGENICS P/N 8112463GXXX between the ON-BOARD POWER OUT connectors on the Frequency Converter and the On-Board Cryopumps.

6. Set the Power Switch on the front panel of the 8500 compressor to the ON position.

**CAUTION**

Allow a 1.0 inch minimum space above the top of the Frequency Converter for adequate ventilation

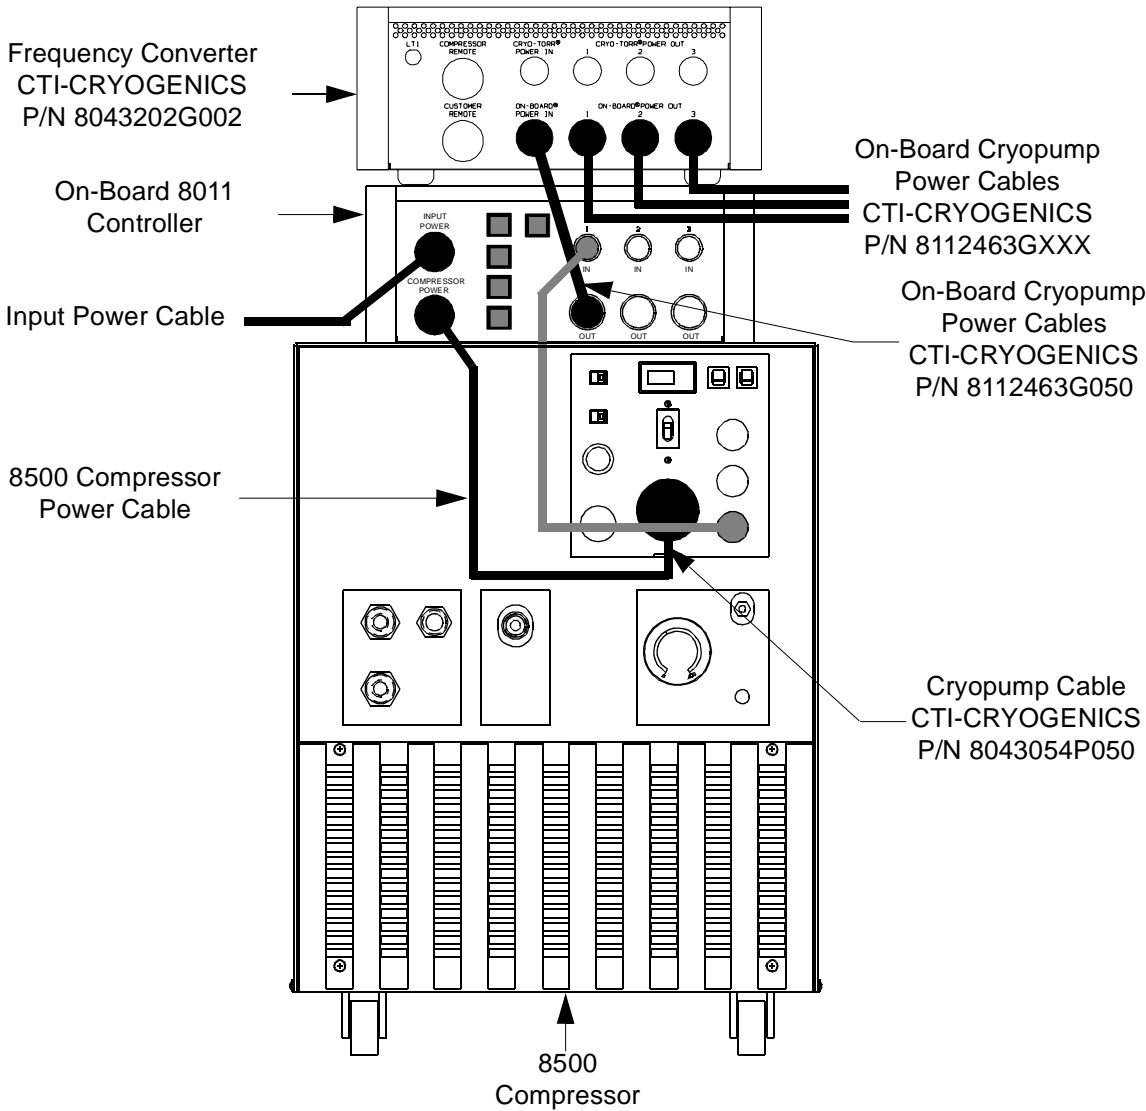

**Figure 2-8: 8500 Compressor with an On-Board Cryopump**

## 8500 Compressor with Cryo-Torr Cryopumps

This procedure involves the following components:

- 8500 Compressor, CTI-CRYOGENICS P/N 8031348G001 or G002
- Frequency Converter, CTI-CRYOGENICS P/N 8043202G001, which includes Frequency Converter Cable Kit, CTI-CRYOGENICS P/N 8080005K012 which can be used with an optional remote
- Cryo-Torr Cryopumps


**NOTE:** If installing a new 8500 Compressor along with the Frequency Converter, refer to the **8500 Compressor Installation, Operation, and Service** manual CTI-CRYOGENICS P/N 8040324 for information on setting the control module to the proper operating voltage range before installing the Frequency Converter.

1. Carefully place the Frequency Converter on top of the 8500 Compressor as shown in Figure 2-9.
2. Connect the cables to the corresponding CRYO-TORR POWER outputs 1, 2 and 3 on the Frequency Converter.
3. Connect the standard remote cable between the COMPRESSOR REMOTE input on the converter and the REMOTE input on the compressor (optional).
4. Connect the Power Cable between the CRYO-TORR POWER IN input on the converter and the COLD HEAD 3 output on the compressor.

**NOTE:** Make sure the cryopump cable is connected to COLD HEAD 3 output on the compressor. The CUSTOMER REMOTE capability will not function if connected to output 1 or 2.

5. Set the Power Switch on the front panel of the 8500 compressor to the ON position.



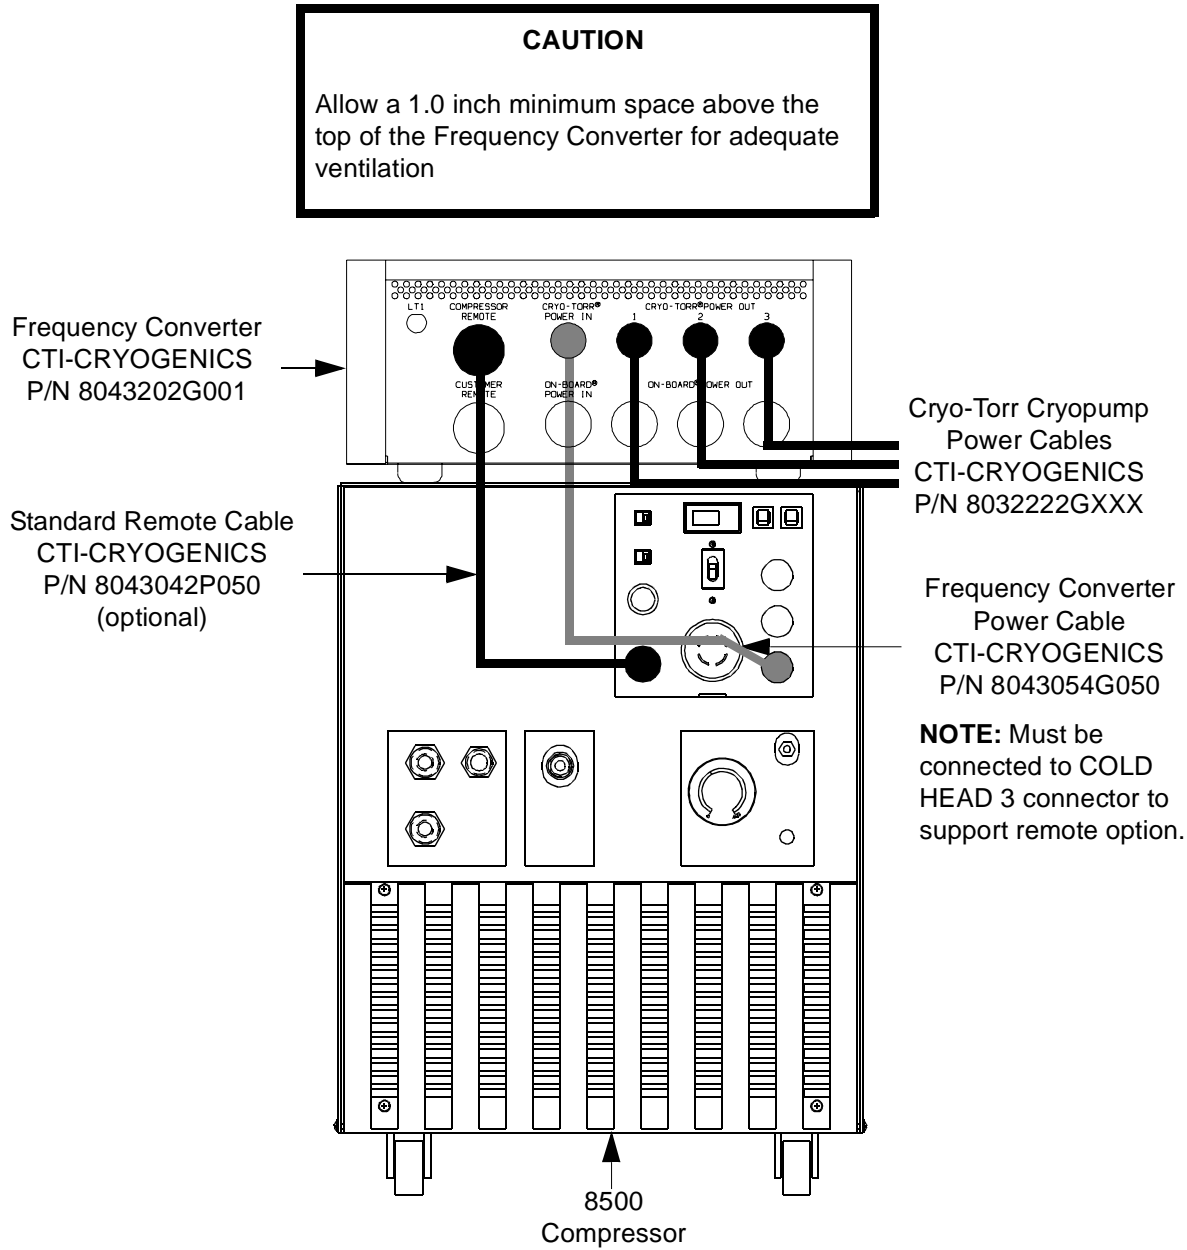

**Figure 2-9: 8500 Compressor with Cryo-Torr Cryopumps**

## 1020R Compressor with On-Board Cryopumps


This procedure involves the following components:

- 1020R Compressor, CTI-CRYOGENICS P/N 8031023G001 and G002
- On-Board 8011 Controller
- Frequency Converter, CTI-CRYOGENICS P/N 8043202G002 which includes On-Board Power Cable, CTI-CRYOGENICS P/N 8112463G050
- On-Board Cryopumps

**NOTE:** If installing a new 1020R Compressor along with the Frequency Converter, refer to the **1020R Compressor Installation, Operation, and Service** manual CTI-CRYOGENICS P/N 8040274 for information on setting the control module to the proper operating voltage range before installing the Frequency Converter.

If installing a new 8011 Controller along with the Frequency Converter, refer to the **8011 Controller and 8011 Control Module** manual CTI-CRYOGENICS P/N 8040309 for proper setup information before installing the Frequency Converter.

1. Carefully place the On-Board 8011 Controller on top of the 1020R Compressor as shown in Figure 2-10.
2. Carefully place the Frequency Converter on top of the 8011 Controller as shown in Figure 2-10.
3. Connect the three On-Board cryopump power cables CTI-CRYOGENICS P/N 81122463GXXX into the ON-BOARD POWER OUT connectors 1, 2 and 3 on the Frequency Converter as shown in Figure 2-10.
4. Connect the cryopump power cable, hard wired to the compressor, to the COLD HEADS 1 IN connector on the 8011 Controller.
5. Connect the On-Board power cable, CTI-CRYOGENICS P/N 8112463G050 (supplied) to the On-Board POWER IN input on the converter and the CRYOPUMPS 1 OUT connector on the 8011 Controller.
6. Turn on SYSTEM POWER at the compressor.

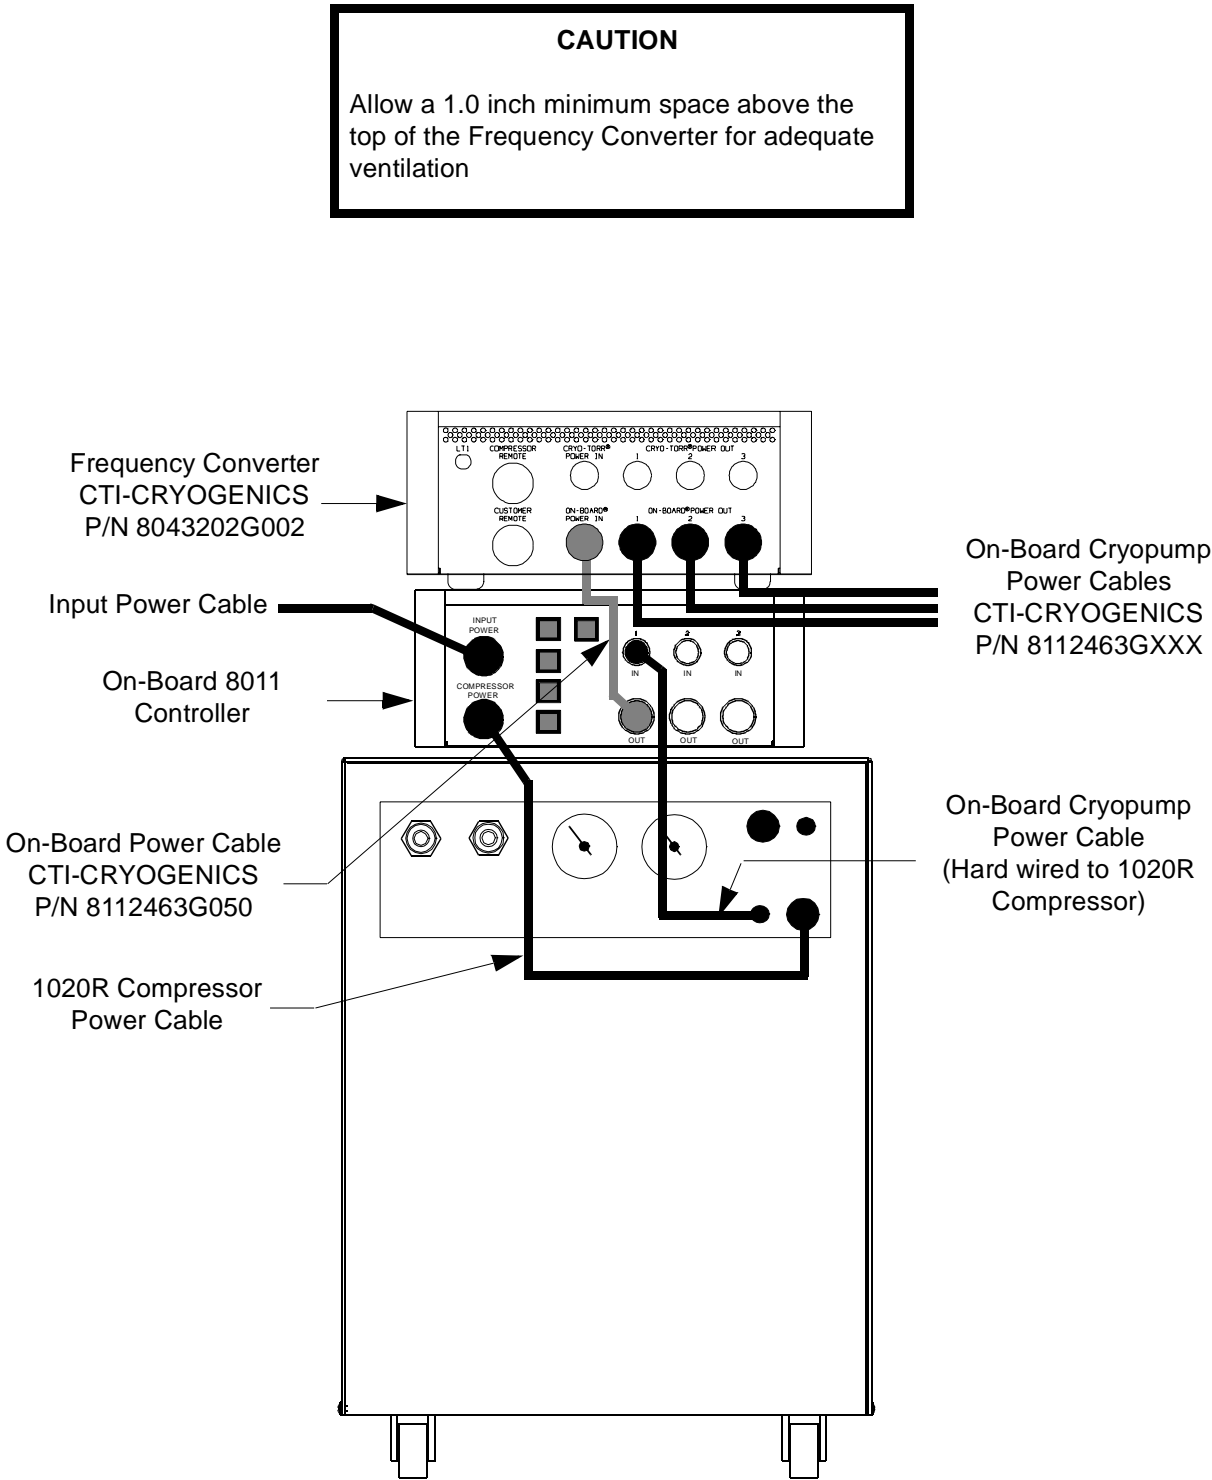

**Figure 2-10: 1020R Compressor with On-Board Cryopumps**


## 1020R Compressor with Cryo-Torr Cryopumps

This procedure involves the following components:

- 1020R Compressor, CTI-CRYOGENICS P/N 8031023G001 and G002
- Frequency Converter, CTI-CRYOGENICS P/N 8043202G001, which includes the Frequency Converter Cable Kit CTI-CRYOGENICS P/N 8080005K012
- Cryo-Torr Cryopumps

**NOTE:** *If installing a new 1020R Compressor along with the Frequency Converter, refer to the **1020R Compressor Installation, Operation, and Service** manual CTI-CRYOGENICS P/N 8040274 for information on setting the control module to the proper operating voltage range before installing the Frequency Converter.*

1. Carefully place the Frequency Converter on top of the 1020R Compressor as shown in Figure 2-11.
2. Connect the three Cryo-Torr cryopump power cables CTI-CRYOGENICS P/N 8032222GXXX into the CRYO-TORR POWER OUT connectors 1, 2 and 3 on the Frequency Converter as shown in Figure 2-11.
3. Connect the Cryo-Torr Cryopump Power Cable to the CRYO-TORR POWER IN connector on the Frequency Converter.
4. Turn on SYSTEM POWER at the compressor.

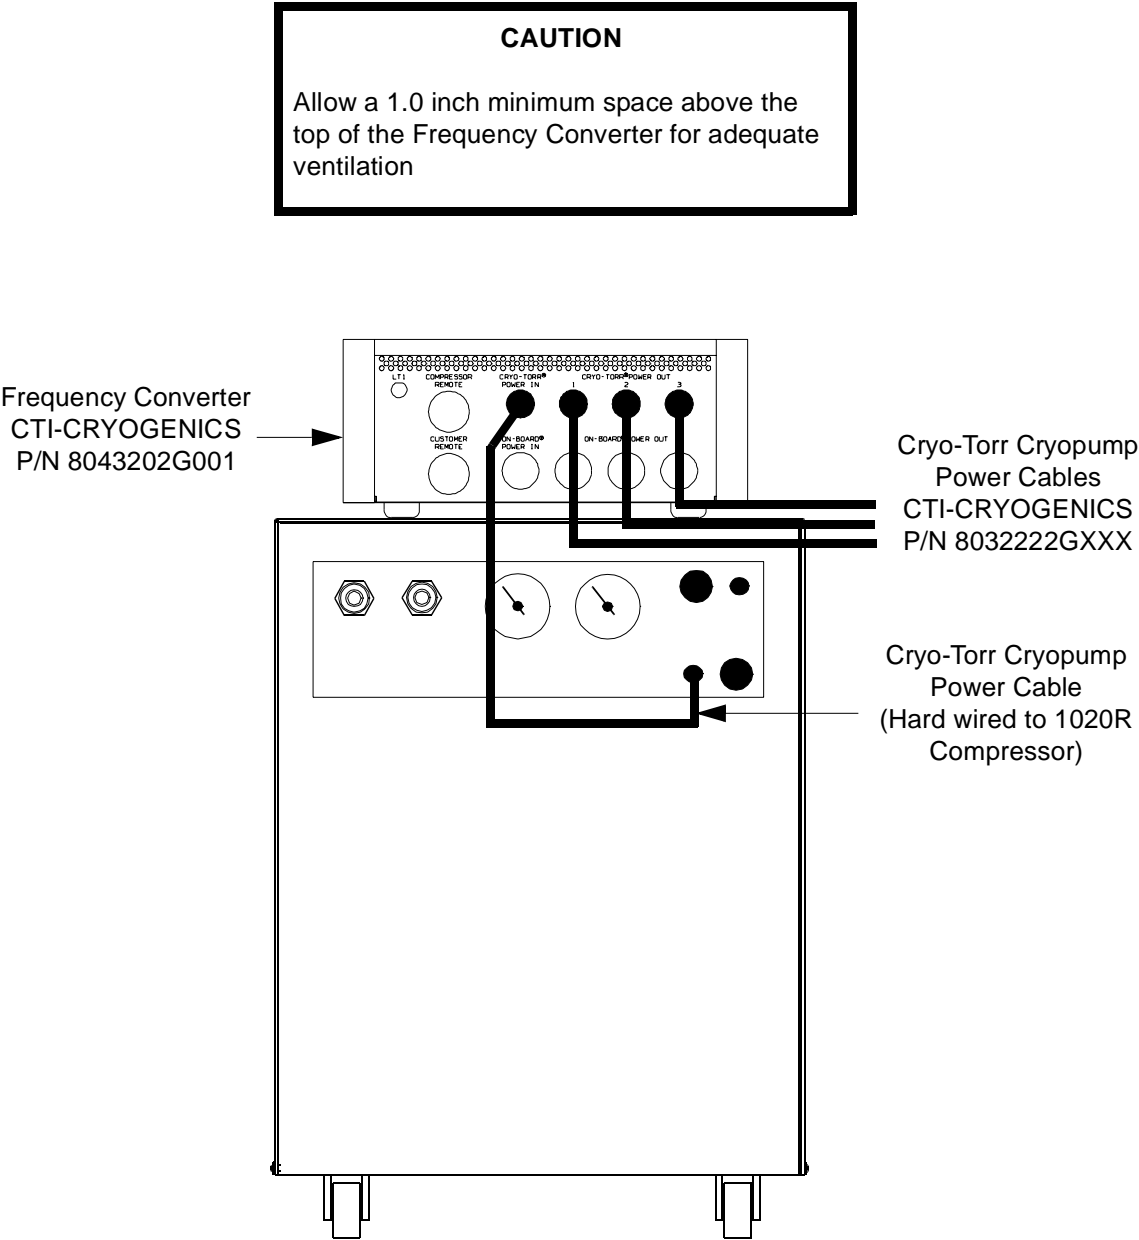

**Figure 2-11: 1020R Compressor with Cryo-Torr Cryopumps**

# Appendix A - Customer Support Centers

## Introduction

Refer to Table A-1 for the nearest Customer Support Center for technical assistance or service. North American customers may call 1-800-FOR-GUTS (1-800-367-4887) 24 hours a day, seven days a week. All other customers must call their local Customer Support Center.

Please have the following information available when calling so that we may assist you:

- Product Part Number
- Product Serial Number
- Product Application
- Specific Problem Area
- Hours of Operation
- Equipment Type
- Vacuum System Brand/Model/Date of Manufacture

**Table A-1: Customer Support Center Locations**

<b>United States and Canada</b>  CTI-CRYOGENICS Mansfield Corporate Center Nine Hampshire Street Mansfield, Massachusetts 02048, U.S.A. Tel: 508-337-5000 or 800-447-5007 Fax: 508-337-5169  Dial 1-800-FOR-GUTS (1-800-367-4887) 24 hours a day, seven days a week.	<b>United States and Canada</b>  CTI-CRYOGENICS 3350 Montgomery Drive Santa Clara, CA 95054, U.S.A. Tel: 408-727-8077 or 800-447-5007 Fax: 408-988-6630  Dial 1-800-FOR-GUTS (1-800-367-4887) 24 hours a day, seven days a week.
<b>United States and Canada</b>  CTI-CRYOGENICS 4120 Freidrich Lane, Suite 600 Austin, TX 78744, U.S.A. Tel: 512-912-2800 Fax: 512-912-2888  Dial 1-800-FOR-GUTS (1-800-367-4887) 24 hours a day, seven days a week.	<b>Germany</b>  CTI-CRYOGENICS, GmbH Haasstrasse 15 D-64293 Darmstadt Germany Tel: 49-6151-871377 Fax: 49-6151-891635
<b>France</b>  CTI-CRYOGENICS, SA Domaine Technologique de Saclay 4, rue Rene Razel, Bat Apollo F-91892 Orsay Cedex France Tel: 331-6935-2600 Fax: 331-6985-3725	<b>United Kingdom</b>  CTI-CRYOGENICS Ltd. Fleming Road Kirkton Campus Livingston, West Lothian Scotland EH54 7BN Tel: 441-506-460017 Fax: 441-506-411122


**Table A-1: Customer Support Center Locations (Continued)**

<b>Japan</b>  CTI-CRYOGENICS Daido Hoxan Engineering Co., Ltd. 1-8, Nakahama-cho Amagasaki-shi Hyogo 660 Japan Tel: 81-6-412-5071 Fax: 81-6-412-7408	<b>Korea</b>  CTI-CRYOGENICS Zeus Company, Ltd. Zeus Building 3-16, Yangjae-Dong, Sochu-Ku Seoul, 137-130 South Korea Tel: 82-2-577-3181 Tel: 82-2-577-3186 Fax: 82-2-576-3199
<b>Taiwan, Hong Kong, and China</b>  CTI-CRYOGENICS Challentech International Corporation No. 1, Lane 9, Pateh Road Hsin-Chu 300, Taiwan, R.O.C. Tel: 886-35-614211 Fax: 886-35-614210	<b>Australia, New Zealand, and Tasmania</b>  CTI-CRYOGENICS AVT Services Pte. Ltd Unit 1, 12 Pioneer Avenue Thornleigh NSW 2120 Sydney, Australia Tel: 612-9-4810748 Fax: 612-9-4810910
<b>Singapore, Malaysia, Philippines, and Indonesia</b>  CTI-CRYOGENICS APP Systems Services Pte Ltd.. 2 Corporation Road #06-14 Corporation Place Singapore 2261 Tel: 65-268-2024 Fax: 65-268-6621	



# Appendix B - Drawings

Drawing Title	Drawing Number	Page
Frequency Converter Schematic	P/N 8043194P001	B-2

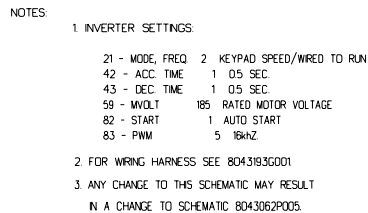

**Figure B-1: Frequency Converter Electrical Schematic P/N 8043194P001 Rev. A**