



Fujitsu RackCDU™ Service Manual

October 2015

Table of Contents

1	Introduction	3
2	Spare Parts List.....	3
3	Unique Tools	3
4	Standard Tools	4
5	Routine Maintenance	5
5.1	Refilling Server Coolant Reservoir.....	5
6	Servicing the RackCDU Monitoring System	6
6.1	Update Firmware for RackCDU Monitoring System	6
6.2	Determining the Network Address of a RackCDU Monitoring Box	9
6.3	Trouble Shooting the RackCDU Monitoring System	10
6.4	Resetting the Monitoring box.....	11
6.5	Replacing the Monitoring Box.....	12
6.6	Replace the Power Supply	13
6.7	Replacing the Facilities Pressure Sensor	14
6.8	Replacing the Server Coolant Pressure Sensor	16
6.9	Replacing the Facilities Flow Sensor	18
6.10	Replacing the LED Indicator	20
6.11	Replacing the Leak Sensor	21
6.12	Replace Level Sensor	22
7	Replacing Quick Connectors	24

1 Introduction

This manual provides guidelines for servicing RackCDU systems. Server coolant is the only item with a routine service interval. This service consists of topping off the server coolant reservoir at the top of the RackCDU. This service is required following roughly 50,000 hours of operation.

From time-to-time firmware updates may become available for the RackCDU monitoring system. Each firmware update will come with its own firmware updating instructions. However this manual includes general guideline for updating the firmware in a monitoring box.

The other serviceable items on the RackCDU include the sensors and monitoring system in the RackCDU and the RackCDU and quick connectors. These items are not expected to fail during normal operation of a RackCDU. The only reason to service these items is if they become damaged, lost or cease to function during the operational life of the RackCDU. A full list of the serviceable items appears in the Spare Parts List below.

Servicing some of the items on a RackCDU will require disconnecting the RackCDU from facilities water or the rack from power. Guidelines for disconnecting and connecting facilities liquid are included in this manual. Servicing some items requires unique tools. These tools are listed in the unique tools list below. These tools are available from Asetek.

2 Spare Parts List

Asetek P/N	Description
11-900-0000100	Quick Connector, Male, Thread, RED
11-900-0000101	Quick Connector, Male, Thread, BLUE
11-900-0000102	Hex-Head Plug 1/2" (Reservoir Cap)
	Fujitsu CP500623-01 AC Adaptor
11-900-0000104	Control Box for RackCDU
11-900-0000108	Server Pressure Sensor RackCDU
11-900-0000115	LED cable RackCDU
11-900-0000107	Level sensor RackCDU
11-900-0000106	Leak sensor RackCDU
11-900-0000105	Flow sensor RackCDU
11-900-0000099	Facility Pressure Sensor
35-650-0000004	Coolant, 35% Glycol, 10L
35-650-0000006	Coolant, 35% Glycol, 5L

3 Unique Tools

Asetek P/N	Description
35-699-0000002	Tool kit, Pump Priming Kit, Server Coolers
35-699-0000003	Tool kit, Quick Connector Wrench Set
35-699-0000004	Tool kit, RackCDU Test Cables
35-699-0000005	Tool kit, Air Bleeding - Schrader valve
35-699-0000006	Tool kit, Flow Tester, Asetek QC
35-699-0000007	RackCDU draining kit.

4 Standard Tools

Step Ladder
Funnel with a small end opening of 18 mm or less
Screwdriver, #2 Philips
Screwdriver, #3 Philips
Low-sided Pan, ~10 cm (4 inches) tall, minimum 4 liter (4 quart) capacity
Hex Wrench, size: 16mm
Hex Wrench, size: 22mm
Hex Wrench, size: 24mm
Adjustable Wrench

5 Routine Maintenance

5.1 Refilling Server Coolant Reservoir

There is a reservoir at the top of the RackCDU extension. As the liquid cooling system runs, liquid gradually permeates through the rubber tubing and plastic parts in the system. The reservoir contains sufficient fluid to replenish the liquid that permeates out of the system for more than 50,000 hours of 24/7/365 operation. The RackCDU monitoring system will alert you when the fluid in the reservoir reaches a low point. I

When a low coolant alert is received additional coolant may be added to the reservoir via a fill port at the top of the RackCDU. The RackCDU must be filled with manufacturer provided server coolant. Using water or other types of coolant will damage the server cooling system!

5.1.1 Parts Needed:



Asetek P/N	Description
35-650-0000006	Asetek Coolant, 35% Glycol, 5L

5.1.2 Tools Needed:

Asetek P/N	Description
n/a	Hex Wrench, size: 22 mm
n/a	Funnel with a small end opening of 18 mm or less
n/a	Step Ladder


5.1.3 Work Steps:

1. Remove power from the entire rack. This is to avoid the risk of electrical shock in the event of a spill.
2. Remove the fill cap and set to the side.
3. Place a funnel in the reservoir opening and add server coolant
4. Inspect the fluid level inside with a flashlight and wooden stick to confirm that it is no more than $\frac{3}{4}$ full.
5. Replace the cap:
6. Screw the cap fully into the reservoir.
7. Unscrew the cap until the line on the cap is aligned with the "OPERATION" line on the top cover of the RackCDU as shown at right. This allows the tank to breathe with changing temperature and fluid volume.

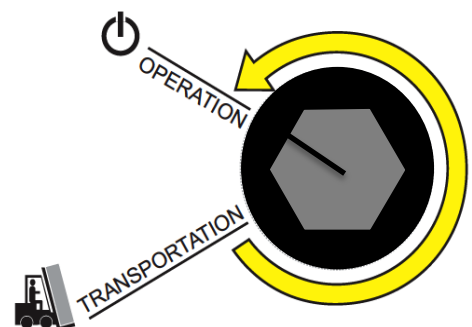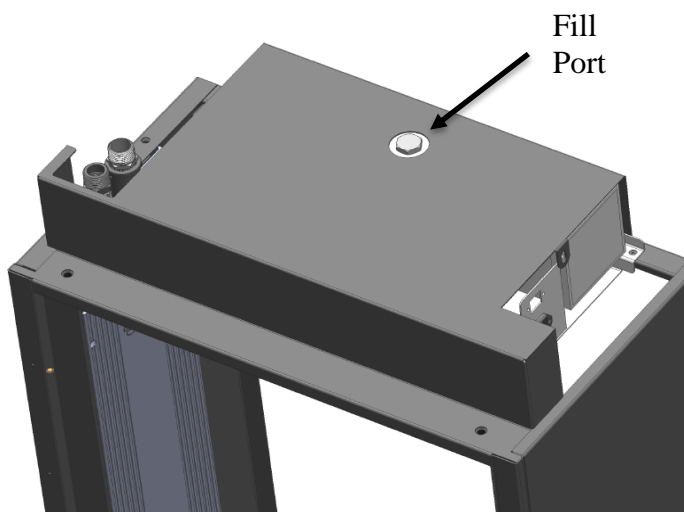

6 Servicing the RackCDU Monitoring System

The RackCDU Monitoring system provides real time information on the operating condition of a RackCDU and can be configured to send warnings and alarms when operating conditions move beyond acceptable limits. The RackCDU monitoring system consists of the RackCDU Monitoring System box, a power supply, a network connection and an array of sensors. The diagram below illustrates the RackCDU monitoring system. This section focuses on the Control Unit and Power Supply. Servicing of sensors is covered in subsequent chapters.

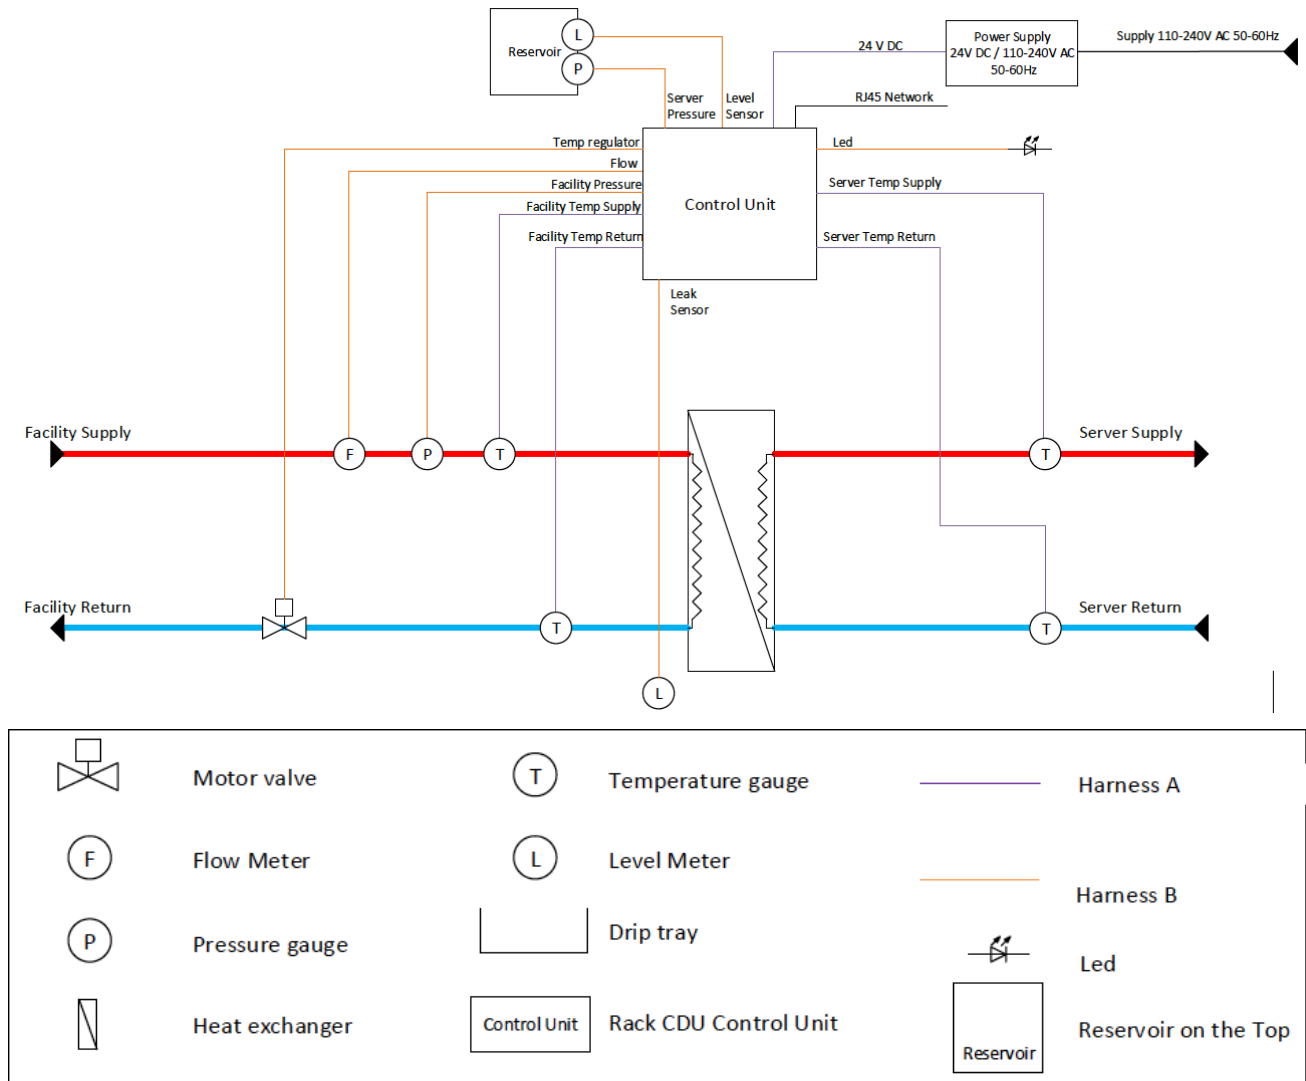

6.1 Update Firmware for RackCDU Monitoring System

Before you begin you will need to have a copy of the new firmware on a laptop computer and know the network address of the RackCDU monitoring box that you want to update. If you do not know the network address of the RackCDU Monitoring box you can discover it using Asetek's RackCDU TCP/IP Discoverer software, see section 6.2 Determining the Network Address of a RackCDU Monitoring Box

Firmware updates may be accomplished from either Windows or Linux operating systems. Trivial File Transport Protocol TFTP is used to move the new firmware from the computer to the RackCDU. The commands used are different between Windows and Linux systems. Both command sets are below.

The DOS command "tftp" is used to transfer the new firmware into the monitoring box.

6.1.1 Parts Needed:

Asetek P/N	Description
n/a	WebAgent.hex file (this file contains the new firmware)

6.1.2 Tools Needed:

Asetek P/N	Description
n/a	Laptop PC
n/a	Network Cable terminating with RJ45 connector
n/a	Step Ladder

6.1.3 Work Steps when Updating Firmware from a Windows PC:



In the example used here the "WebAgent.Hex" file is saved in a folder named "c:\test" and the RackCDU Monitoring box has the network address 192.168.0.45.

1. Save the file "WebAgent.hex" in a folder on a laptop.
2. Make sure that TFTP is enabled in Windows. Do this by opening the Control Panel and navigating to **Control Panel\Programs\Programs and Features** and selecting **Turn Windows features on or off**. In the left navigation menu make sure that **TFTP Client** is checked.
3. Connect the network port of this laptop to the network port of the RackCDU, or to the network to which the monitoring box is connected.
4. Open a Windows Command Prompt window.
5. Navigate to the **folder** where the file "WebAgent.hex" is saved using the "change directory" command "cd". In this example type:

```
cd..  
cd..  
cd test
```

6. Once in the directory containing the file called "WebAgent.hex", type the "tftp" command. In this example type:
tftp -i 192.168.0.45 put WebAgent.hex WebAgent.hex

7. After about 15 second the "Transfer successful" will appear.
8. Close the command prompt.
9. Confirm that the firmware has been updated by using a web browser to open the RackCDU monitoring page and checking the software revision on About screen

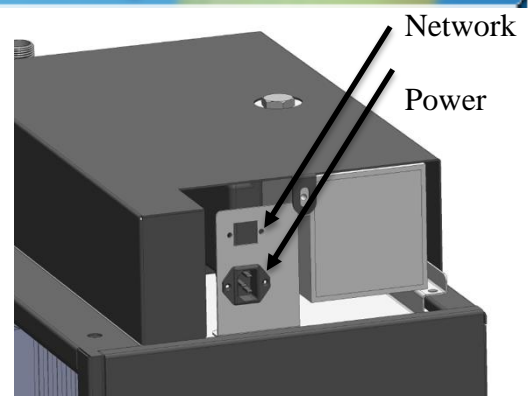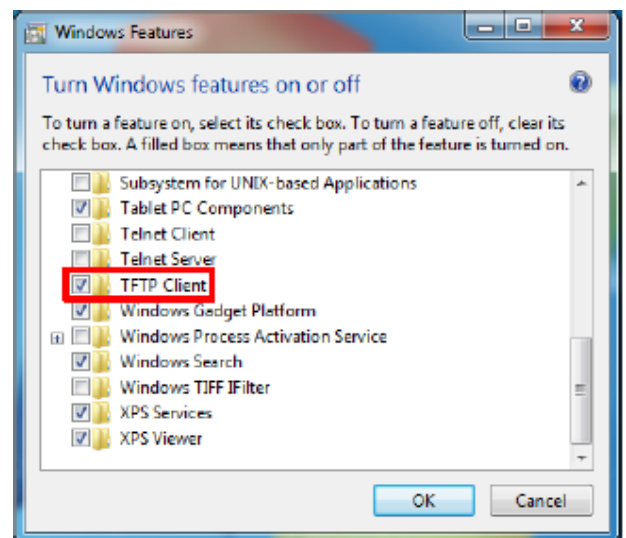

```
C:\> Administrator: Kommandoprompt
Microsoft Windows [Version 6.3.9600]
(c) 2013 Microsoft Corporation. Alle rettigheder forbeholdes.

C:\WINDOWS\system32>cd..
C:\Windows>cd..
C:\>cd test
C:\test>dir
Volume in drive C is Windows
Volume Serial Number is 0CF0-DE94

Directory of C:\test

21/10/2013  12:50    <DIR>          .
21/10/2013  12:50    <DIR>          ..
21/10/2013  12:50                1,297,366 WebAgent.hex
               1 File(s)                1,297,366 bytes
               2 Dir(s)  149,025,402,880 bytes free

C:\test>tftp 192.168.0.45 put WebAgent.hex WebAgent.hex
Transfer successful: 1297366 bytes in 13 second(s), 99797 bytes/s
C:\test>
```

6.1.4 Work Steps when Updating Firmware Update a Linux Computer

In the example used here the "WebAgent.Hex" file is saved in a folder named "c:\test" and the RackCDU Monitoring box has the network address 192.168.0.118.

1. Save the file "WebAgent.hex" in a folder on the Linux computer.
2. Connect the network port of this computer to the network port of the RackCDU, or to the network to which the monitoring box is connected.
3. From the Linux command line
4. Navigate to the **folder** where the file "WebAgent.hex" is saved using "change directory" commands.
5. From the directory where the "WebAgent.hex" file is stored type:
tftp
connect 192.168.0.118
binary
put WebAgent.hex
6. Linux will respond with a message that tells you the number of bytes sent and the time spent sending them
7. Open the RackCDU web site and confirm that the firmware has been updated by looking at the software version number on the About tab.

```
kfj@atl:~/Skrivebord > tftp
tftp> ?
Commands may be abbreviated.  Commands are:

connect      connect to remote tftp
mode         set file transfer mode
put          send file
get          receive file
quit         exit tftp
verbose      toggle verbose mode
trace        toggle packet tracing
status       show current status
binary       set mode to octet
ascii        set mode to netascii
rexmt        set per-packet retransmission timeout
timeout      set total retransmission timeout
?            print help information
tftp> connect 192.168.0.118
tftp> binary
tftp> put WebAgent.hex
Sent 1043608 bytes in 18.4 seconds
tftp> █
```


6.2 Determining the Network Address of a RackCDU Monitoring Box

If the RackCDU Monitoring is getting its network address assigned to it by a DHCP server, the address assigned by the DHCP server can be discovered using Asetek TCPIP Discoverer software. Asetek TCPIP Discoverer is a Java application that can run on any PC with Java installed. This PC must be connected to the same network as the DHCP server and the RackCDU Monitoring Box.

6.2.1 Tools Needed:


Asetek P/N	Description
	Asetek RackCDU TCPIP Discoverer software
n/a	Laptop PC
n/a	Network Cable terminating with RJ45 connector

6.2.2 Work Steps:

1. Connect a PC with Java and the TCPIP Software (TCPIP Discoverer.jar) on it to the network with the DHCP server and the RackCDU Monitoring system on it.
2. Open the program TCPIP Discover.jar from the desktop or at the Command line type:

java -jar TCPIP Discoverer.jar.

3. Click the “Discover Devices” button to scan for connected RackCDU monitoring boxes.
4. The program will automatically find all the control boxes on the same subnet.

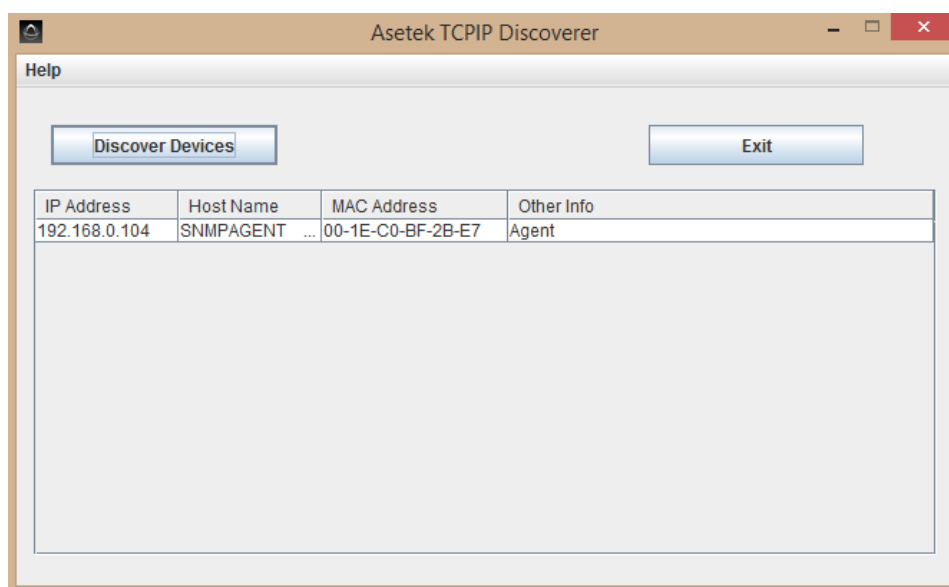

6.3 Troubleshooting the RackCDU Monitoring System

This section covers replacing the monitoring box and/or its power supply. Both the monitoring box and its power supply are located at the top of the RackCDU under the top cover.

6.3.1 Tools Needed:

Asetek P/N	Description
	#2 Philips Screwdriver
	Step Ladder
	Laptop PC
	Network Cable terminating with RJ45 connector
	Multi-meter

6.3.2 Troubleshooting a RackCDU Monitoring Box

When the RackCDU monitoring system is functioning properly the white LED near the top of the RackCDU should be illuminated and the web interface should be viewable by pointing a web browser at the network address of the monitoring box.

If the white LED is off and the web page from the monitoring box does not display: begin by checking the power system for the RackCDU.

1. Check that the power cord for the monitoring box is fully plugged into a power strip and that the strip is on.
2. Check that the power cord is fully plugged into the socket on the top right side of the RackCDU below the network port.
3. Remove the 4 screws holding the top cover of the RackCDU in place. Two are located bottom far side edge of the cover and two more are located at either end of the reservoir.
4. Lift off the cover and set it aside
5. Check that the cord from the rear of the power cable socket is fully plugged into the power supply
6. Check that the cable from the power supply and the cable to the monitoring box are fully connected.

If all of these elements are in good working order, begin by testing the power supply.

7. Disconnect the cable between the power supply and the monitoring box. Check that the power supply is delivering 19VDC. If it is not delivering the required voltage, replace the power supply.

If the power supply is working, check the power to the LED indicator:

8. Disconnect the LED cable from the monitoring box and test that the monitoring box is delivering 3VDC to the LED. If it is not change the monitoring box. If 3VDC is being delivered, replace the LED assembly.

If the LED Light is on but the web page from the monitoring box does not display, begin by checking the network address of the monitoring system using TCPIP Discoverer. If you are unable to determine the network address by using the TCPIP Discoverer program it may be necessary to reset the monitoring box.

6.4 Resetting the Monitoring box


Resetting the monitoring box will replace all of the current settings in the box with the original factory defaults. Doing this turns on automatic network address assigning from a DHCP server and resets the static network address of the box to the factory defaults. The user name and password are both reset to “admin”. This allows direct access to the monitoring box web page using a browser and by connecting directly from a notebook to the box with a network cable. Configure the notebook’s network adaptor to use the same subnet mask and gateway as the monitoring box and an address in the subnet besides 199. Point your browser at the box using the following address information. Use your browser to reset the network address

IP address: 192.168.0.199

Gateway: 192.168.0.1

Subnet mask: 255.255.255.0

1. Remove the 4 screws holding the top cover of the RackCDU in place. Two are located bottom far side edge of the cover and two more are located at either end of the reservoir.
2. Lift off the cover and set it aside
3. Disconnect all of the sensor cables that share the same block header to the monitoring box as the power supply.
4. Disconnect the remaining block header.
5. Remove the screw holding the box in place and take both the power supply and the control box out of the RackCDU.
6. On a bench, separate the block header section of the monitoring box from the main housing by pinching the latches on the narrow sides of the box and pull out the PCA.
7. Connect the power supply to power.
8. With power on the monitoring PCB, press and hold the switch at location SW2 for about 10 seconds.
9. Use the default network address information above to directly connect to the monitoring box with a PC.
10. When the web page displays, you can reset the network addressing to what it needs to be for your network. If the web page does not display (and your PC’s network card is setup properly to access this address directly via a local connection), replace the monitoring box.

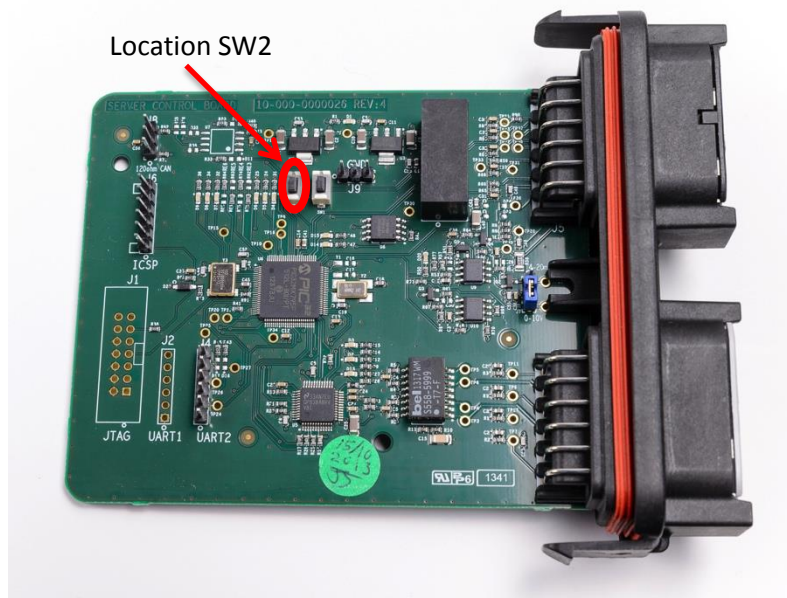

6.5 Replacing the Monitoring Box

The monitoring box is located at the top of the RackCDU under the top cover. All of the connections to the monitoring box are made with a pair of connectors that are easily disconnected from the box should it need to be replaced.

6.5.1 Parts needed:

Asetek P/N	Description
11-900-0000104	Control Box for RackCDU




6.5.2 Tools needed:

Asetek P/N	Description
	#2 Philips Screwdriver
	#3 Philips Screwdriver
	Step Ladder

6.5.3 Work Steps:

1. Disconnect Power to the Power supply.
2. Disconnect these two cable harnesses from the control box
3. Remove the Control Box by removing the 2 bolts; one in each side.
4. Replace the new Control Box by reverting step 3.
5. Connect the two cables harness to the control box
6. Connect the power to the power supply

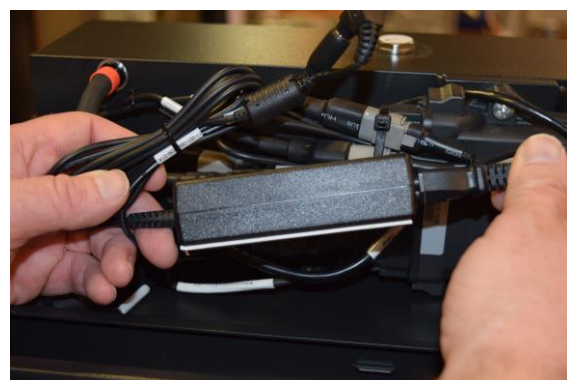

6.6 Replace the Power Supply

The power supply is located at the top of the RackCDU immediately behind the top cover. All of the connections to the power supply are made with plugs that are easily disconnected from the supply should it need to be replaced.

6.6.1 Parts needed:

Asetek P/N	Description
	Fujitsu CP500623-01 AC Adaptor
	Double adhesive tape (RS: 685-1661)



6.6.2 Tools needed:

Asetek P/N	Description
	Double adhesive tape (RS: 685-1661)
	#2 Philips Screwdriver
	Step Ladder

6.6.3 Work Steps:

1. Disconnect the power cable on the right outside face of the RackCDU top enclosure.
2. Remove the 4 screws holding the top cover of the RackCDU in place. Two are located bottom far side edge of the cover and two more are located at either end of the reservoir.
3. Set the cover aside.
4. Disconnect the power to the Power Supply
5. Disconnect the power core to the Control Box
6. Remove the Power Supply, which is fixed with tape.
7. Tape in the new Power Supply in at the same spot.
8. Connect the power core to the Control Box.
9. Connect the power cable to the power supply.
10. Replace the top cover
11. Reconnect the power cable on the right outside face of the RackCDU top enclosure.

Power Supply



6.7 Replacing the Facilities Pressure Sensor

The facilities side pressure sensor is located at the top of the RackCDU. The only service available for a Facilities Pressure Sensor is to remove and replace it. This service requires shutting down all the servers attached to the RackCDU, disconnecting the RackCDU from facilities liquid and at least partially draining facilities liquid from the RackCDU.

Once the malfunctioning sensor is replaced the RackCDU must be reconnected to facilities liquid and in the case of a RackCDU that receives liquid from the bottom, air must be bled from the system.

6.7.1 Parts Needed:

Asetek P/N	Description
11-900-0000099	Facility Pressure Sensor
n/a	Plumber's putty




6.7.2 Tools Needed:

Asetek P/N	Description
35-699-0000005	Tool Kit Air bleeding – Schrader valve
n/a	#2 Philips Screwdriver
n/a	Step Ladder
n/a	Wrench, 24mm
n/a	Low-sided pan
n/a	Wet/dry vacuum

6.7.3 Work Steps:

1. Shut down (power off) all servers connected to the RackCDU.
2. Shut off the valves on both the supply and return side of the facilities liquid loop. These valves are part of the facilities loop and are not located in the RackCDU.
3. Remove the 4 screws holding the top cover of the RackCDU in place. Two are located bottom far side edge of the cover and two more are located at either end of the reservoir.
4. Set the cover aside.
5. Use the Tool Kit Air bleeding – Schrader valve and the low sided pan to take the pressure off of the liquid in the RackCDU and to partially drain the system.
 - a. Put the open end of the tool in the low-sided pan and hold in place. Pressure will cause the tube to come out of the pan if not held in place.
 - b. Put the hose from the wet/dry vacuum into the low-sided pan and hold in place. Turn on the wet/dry vacuum.
 - c. Put the Schrader valve end on the tool on the Schrader valve and allow the pressure to bleed off into the pan. The Schrader valve is located at the opposite end of the RackCDU from where the RackCDU is connected to facilities liquid. Schrader valve is on the top for bottom fed RackCDUs and on the bottom for top fed RackCDUs.
 - i. For top fed RackCDUs allow all of the liquid to drain into the pan and get sucked into the wet/dry vacuum (there are about 3 liters of liquid in the RackCDU plus the liquid in the tubes/plumbing between the RackCDU and shutoff valve. Then remove the Schrader Bleed kit.
 - ii. For bottom fed units, install a second bleed kit and use the wet/dry vacuum to draw about a quarter of a liter of liquid out of the RackCDU. Then remove both Schrader bleed kits.

6. The pressure sensor is located at the top of the RackCDU. It screwed into a "T" at the top of the facilities liquid supply line.
7. Disconnect the pressure sensor from the RackCDU Monitoring system cable harness.
8. Use the 24mm wrench to remove the malfunctioning flow meter
9. Install the new flow meter into the T fitting with plumber's putty and the wrench.
10. Connect the flow meter cable to the cable harness for of the monitoring system.
11. Check the Sensors page on RackCDU monitoring system web page. Both the "Facility pressure:" and "Facilities water flow:" should read zero and show red indicators.
12. Open the valves on both the supply and return side of the facilities liquid loop.
13. Recheck the RackCDU Monitoring system. Facilities pressure: should show a positive pressure and both Facilities pressure and Facilities water flow should have green indicators. A red on Facilities water flow would indicate that at least one facilities side valve was not opened properly. If there is a red, recheck the valves.
14. For bottom fed systems, place the open end of a Schrader bleed valve kit in the low-sided pan. Then bleed the air from the system by attaching the kit to one of the two Schrader valves until bubbles stop flowing from the tube. Repeat this process on the second Schrader valve. If the low-sided pan starts to fill, use the wet/dry vacuum to suck the liquid out of the pan. (Air bleeding is not needed for top fed RackCDUs.)
15. Replace the top cover.
16. Once the "Facilities water flow: shows green, power on all of the servers connected to the RackCDU.

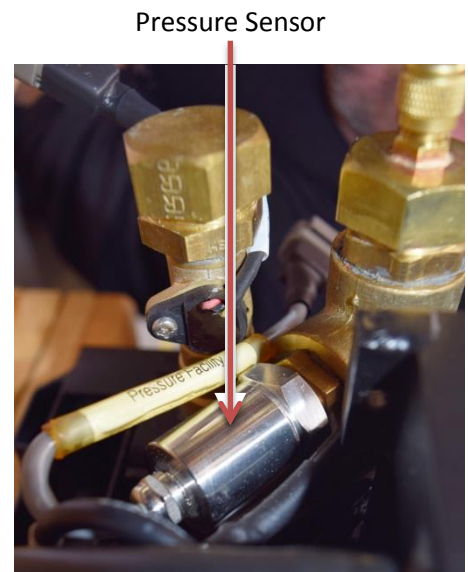

6.8 Replacing the Server Coolant Pressure Sensor

The server coolant pressure sensor is connected to the server coolant reservoir located at the top of the RackCDU extension. The only service available for the server coolant pressure sensor is to remove and replace it.

6.8.1 Parts Needed:

Asetek P/N	Description
11-900-0000108	Server Pressure Sensor RackCDU
n/a	Plumber's putty




6.8.2 Tools Needed:


Asetek P/N	Description
n/a	#2 Philips Screwdriver
n/a	Step Ladder
n/a	Wrench, 24mm
	Low-sided Pan
	Funnel with a small end opening of 18 mm or less

6.8.3 Work Steps:

1. Remove the 4 screws holding the top cover of the RackCDU in place. Two are located bottom far side edge of the cover and two more are located at either end of the reservoir.
2. Set the cover aside.
3. Disconnect the power to the control box.
4. Disconnect Reservoir from the Server Coolant Supply and Return manifolds by disconnecting the top quick connector on each manifold. (Push the quick connector toward the RackCDU until it stops. While still pushing, rotate it counter-clockwise until it stops and pull the connector away from the manifold.)
5. Remove the 5 screws holding the reservoir to the extension: one in each side and two at the lower rear edge of Reservoir and one below the shelf holding the Reservoir.
6. Disconnect level sensor and the pressure sensor cables from the cable harness.
7. Uninstall the control box from the Reservoir by removing the 2 screws at the top and bottom of the box.
8. Lift the reservoir from the extension and move it to a workbench.
9. Remove the cap on the top of the reservoir.
10. Make sure the low-sided pan is clean and then invert the reservoir over the pan to drain the cooling liquid from the reservoir.
11. Set the pan and coolant aside.
12. Use the 24mm wrench to remove the old pressure sensor.
13. Apply plumber's putty and install the new pressure sensor, using the 24mm wrench to tighten it into place.
14. Use the funnel and return the coolant from the low-sided pan to the reservoir
15. Replace the cap screwing it fully into the reservoir with your fingers.

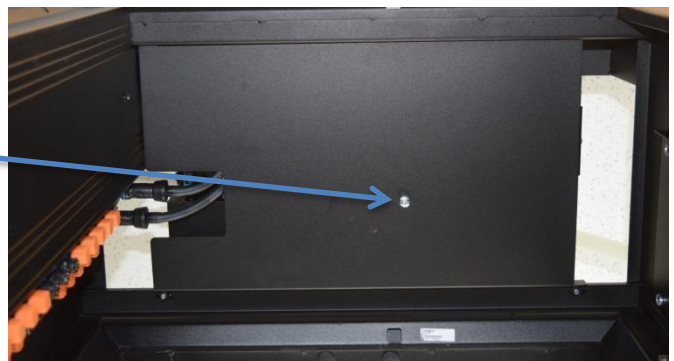

16. Reattach the reservoir to the RackCDU extension – five screws.
17. Connect the pressure sensor and level sensor cables to the harness.
18. Reinstall control box on Reservoir.
19. Reconnect power to the control box.
20. Replace the top cover.
21. Reconnect the Reservoir to the RackCDU by connecting the Red Female Connector from the Reservoir to the top Red Male Connector on the RackCDU and the Blue Female Connector from the Reservoir to the top Blue Male Connector on the RackCDU.
22. Rotate the reservoir cap counter-clockwise until the line on the cap aligns with the “OPERATION” line on the top cover.

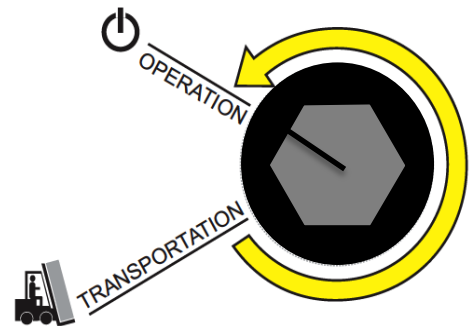

6.9 Replacing the Facilities Flow Sensor

The flow sensor is located at the top or the bottom of a RackCDU at the point where the RackCDU is connected to facilities liquid. The only service available for this sensor is to remove and replace it. This service requires shutting down all the servers attached to the RackCDU, disconnecting the RackCDU from facilities liquid and at least partially draining facilities liquid from the RackCDU.

Once the malfunctioning sensor is replaced the RackCDU must be reconnected to facilities liquid and in the case of a RackCDU that receives liquid from the bottom, air must be bled from the system.

6.9.1 Parts needed:

Asetek P/N	Description
11-900-0000105	Flow sensor RackCDU
n/a	Plumber's putty




6.9.2 Tools needed:

Asetek P/N	Description
35-699-0000005	Tool Kit Air bleeding – Schrader valve
n/a	#2 Philips Screwdriver
n/a	Step Ladder
n/a	2 Adjustable Wrenches, 8 inch
n/a	Low-sided pan, ~10 cm (4 inches) tall, minimum 4 liter (4 quart) capacity
n/a	Wet/dry vacuum

6.9.3 Work Steps:

1. Shut down (power off) all servers connected to the RackCDU.
2. Shut off the valves on both the supply and return side of the facilities liquid loop. These valves are part of the facilities loop and are not located in the RackCDU.
3. Remove the 4 screws holding the top cover of the RackCDU in place. Two are located bottom far side edge of the cover and two more are located at either end of the reservoir.
4. Set the cover aside.
5. Use the Tool Kit Air bleeding – Schrader valve and the low sided pan to take the pressure off of the liquid in the RackCDU and to partially drain the system.
 - a. Put the open end of the tool in the low-sided pan and hold in place. Pressure will cause the tube to come out of the pan if not held in place.
 - b. Put the hose from the wet/dry vacuum into the low-sided pan and hold in place. Turn on the wet/dry vacuum.
 - c. Put the Schrader valve end on the tool on the Schrader valve and allow the pressure to bleed off into the pan. The Schrader valve is located at the opposite end of the RackCDU from where the RackCDU is connected to facilities liquid. Schrader valve is on the top for bottom fed RackCDUs and on the bottom for top fed RackCDUs.
 - i. For top fed RackCDUs allow all of the liquid to drain into the pan and get sucked into the wet/dry vacuum (there are about 3 liters of liquid in the RackCDU plus the liquid in the tubes/plumbing between the RackCDU and shutoff valve). Then remove the Schrader Bleed kit.

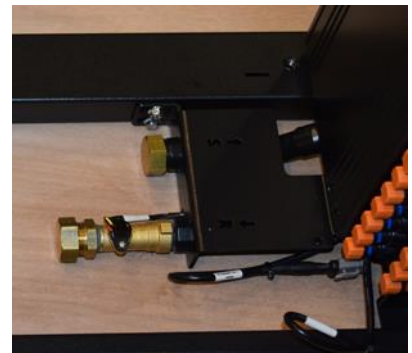

- ii. For bottom fed units, move the low-sided pan to a location under where the facilities liquid lines connect to the RackCDU, re-secure the wet/dry vacuum hose in the low-sided pan and turn it on.
6. Disconnect the facilities liquid line that connects to the RackCDU line with the flow sensor. On bottom fed units allow the RackCDU and the hose to drain into the low-sided pan and get sucked up by the wet/dry vacuum.
7. Use the wrenches to remove the hose connection hardware (CamLock or Tri-Clamp fittings) from the facilities return connection on the RackCDU.
8. Disconnect the flow sensor cable from the RackCDU sensor harness. For bottom fed units this connection should be near the bottom of the RackCDU and for top fed units it will be near the RackCDU monitoring box
9. Use a wrench to remove the malfunctioning flow sensor
10. Use a wrench to install the new flow sensor.
11. Connect the flow sensor cable to the RackCDU Monitor wire harness.
12. Use the wrenches to reinstall the hose connection hardware (CamLock or Tri-Clamp fittings) on the facilities return connection of the RackCDU.
13. Open the valves on both the supply and return side of the facilities liquid loop.
14. Recheck the RackCDU Monitoring system. Facilities water flow should have green indicators. A red on Facilities water flow would indicate that at least one facilities side valve was not opened properly. If there is a red, recheck the valves.
15. For bottom fed systems, place the open end of a Schrader bleed valve kit in the low-sided pan. Then bleed the air from the system by attaching the kit to one of the two Schrader valves until bubbles stop flowing from the tube. Repeat this process on the second Schrader valve. If the low-sided pan starts to fill, use the wet/dry vacuum to suck the liquid out of the pan. (Air bleeding is not needed for top fed RackCDUs.)
16. Replace the top cover.
17. Once the "Facilities water flow: shows green, power on all of the servers connected to the RackCDU.

6.10 Replacing the LED Indicator

The LED indicator is mounted in a dispersing lens near the top of the decorative wing on the RackCDU.

6.10.1 Parts needed:

Asetek P/N	Description
11-900-0000115	LED cable RackCDU



6.10.2 Tools Needed:

Asetek P/N	Description
n/a	#2 Philips Screwdriver
n/a	Step Ladder

6.10.3 Work Steps:

1. Remove the 4 screws holding the top cover of the RackCDU in place. Two are located bottom far side edge of the cover and two more are located at either end of the reservoir.
2. Set the cover aside.
3. Disconnect the LED cable from the harness attached to the control box; the cable is labeled "LED".
4. Slowly push out the LED and cable through the LED pocket in the RackCDU.
5. Insert the new LED into the LED pocket in the RackCDU.
6. When in place connect the LED cable to the harness attached to the Control Box.
7. Replace the top cover.

6.11 Replacing the Leak Sensor

The leak sensor is mounted in the spill tray at the bottom of the RackCDU, and is slightly underneath the decorative wig on the RackCDU manifold. There are two connectors on the leak sensor cable, one in the top of the RackCDU near the control box and another at the bottom of the RackCDU. When changing the leak sensor only disconnect the bottom connection.

6.11.1 Parts needed

Asetek P/N	Description
11-900-0000106	Leak sensor RackCDU



6.11.2 Tools needed

Asetek P/N	Description
	Wrench: 16 mm

6.11.3 Work Steps:

1. Lift the right side of the spill tray up while sliding it to the right. The leak sensor is on the left side of the drip pan.
2. Unplug the Leak sensor from the cable in the bottom of the RackCDU. The cable is tucked up under the decorative wing.
3. Remove the spill tray fully from the RackCDU extension.
4. Remove the Leak Sensor from the bracket by rotating it out with wrench.
5. Install the new Leak Sensor to the bracket.
6. Plug the Leak Sensor cable to the cable in the bottom of the RackCDU.
7. Slide the left end of the spill tray under the decorative wig of the RackCDU manifold while lowering the right edge down and into place.



6.12 Replace Level Sensor

The server coolant level sensor is connected to the server coolant reservoir located at the top of the RackCDU extension. The only service available for the sever coolant level sensor is to remove and replace it.

6.12.1 Parts needed

Asetek P/N	Description
11-900-0000107	Level sensor RackCDU





6.12.2 Tools needed


Asetek P/N	Description
n/a	#2 Philips Screwdriver
n/a	Step Ladder
n/a	Wrench, 24mm
	Wrench: 16 mm
	Low-sided Pan
	Funnel with a small end opening of 18 mm or less

6.12.3 How to replace the Level Sensor

1. Remove the 4 screws holding the top cover of the RackCDU in place. Two are located bottom far side edge of the cover and two more are located at either end of the reservoir.
2. Set the cover aside.
3. Disconnect the power to the control box.
4. Disconnect Reservoir from the Server Coolant Supply and Return manifolds by disconnecting the top quick connector on each manifold. (Push the quick connector toward the RackCDU until it stops. While still pushing, rotate it counter-clockwise until it stops and pull the connector away from the manifold.)
5. Remove the 5 screws holding the reservoir to the extension: one in each side and two at the lower rear edge of Reservoir and one below the shelf holding the Reservoir.
6. Disconnect level sensor and the pressure sensor cables from the cable harness.
7. Uninstall the control box from the Reservoir by removing the 2 screws at the top and bottom of the box.
8. Lift the reservoir from the extension and move it to a workbench.
9. Remove the cap on the top of the reservoir.
10. Make sure the low-sided pan is clean and then invert the reservoir over the pan to drain the cooling liquid from the reservoir.
11. Set the pan and coolant aside.
12. Use the 16mm wrench rotate the old level sensor counter-clockwise and remove it from the reservoir.
13. Install the new level sensor.
14. Use the funnel and return the coolant from the low-sided pan to the reservoir
15. Replace the cap screwing it fully into the reservoir with your fingers.

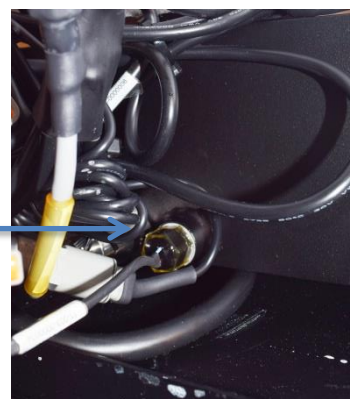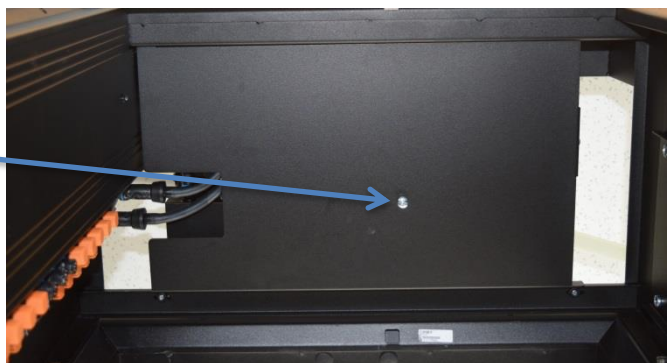

16. Reattach the reservoir to the RackCDU extension – five screws.
17. Connect the pressure sensor and level sensor cables to the harness.
18. Reinstall control box on Reservoir.
19. Reconnect power to the control box.
20. Replace the top cover.
21. Reconnect the Reservoir to the RackCDU by connecting the Red Female Connector from the Reservoir to the top Red Male Connector on the RackCDU and the Blue Female Connector from the Reservoir to the top Blue Male Connector on the RackCDU.
22. Rotate the reservoir cap counter-clockwise until the line on the cap aligns with the “OPERATION” line on the top cover.

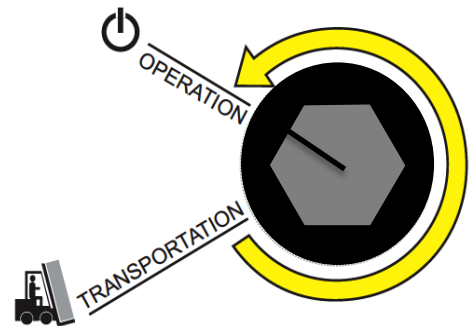

7 Replacing Quick Connectors

Replacing quick connectors requires shutting down and disconnecting all of the servers from the RackCDU. The reservoir must also be disconnected and the RackCDU manifolds drained to the quick connector one below the connector being replace. The two manifolds are connected to one another through the heat exchangers in the RackCDU. Draining one manifold also drains the other.

There is no normal maintenance that requires draining server coolant from a RackCDU and in general this should not be done. Should a RackCDU be drained of coolant while servers are still connected to the RackCDU will likely cause some of the server coolers to be drained as well. The pumps inside a server cooler are not self-priming. Should a server cooler become drained, use the Pump Priming Kit to make sure the cooler is fully primed before starting the server.

7.1.1 Parts needed:

Asetek P/N	Description
11-900-0000100	Quick Connector, Male, Thread, RED
11-900-0000101	Quick Connector, Male, Thread, BLUE
35-650-0000006	Coolant, 35% Glycol, 5L
	Loctite thread locking glue

7.1.2 Tools needed:

Asetek P/N	Description
35-699-0000007	RackCDU draining kit
35-699-0000002	Tool kit, Pump Priming Kit, Server Coolers
35-699-0000003	Tool kit, Quick Connector Wrench Set
	Low-sided Pan
	Funnel
	Torque wrench set to 4Nm.

7.1.3 Work Steps

1. Shut down (turn off) all servers in the RackCDU.
2. Disconnect all external power from the Rack
3. Disconnect the quick connectors for the reservoir tubes at the very top of RackCDU manifolds. (Push the quick connector in until it stops. While still pushing rotate the connector counter-clockwise until it stops. Then slide the connectors apart.)
4. Disconnect all servers connected to both manifolds above, at the same level and one level below the quick connector that will be changed.
5. Make sure the low-sided pan is clean.
6. Place the open end of the tube from the RackCDU Draining tool into the low-sided pan
7. Connect the quick connector end of the RackCDU Draining tool on the quick connector immediately below the connector that is being changed.
8. Place the vent quick connector from the RackCDU Draining tool on the top quick connector on one of the manifolds.
9. Drain all of the coolant that will come out into the low-sided pan.
10. Set the pan of coolant aside and out of the way.
11. Disconnect the drain tube and the vent quick connector from the RackCDU.
12. Place the tool for removing male quick connectors over the connector to be removed and unscrew the old quick connector from the RackCDU.

13. If the body of the male quick connector breaks use the hex key (Allen Wrench) in the quick connector wrench kit to remove the base of the connector from the RackCDU.
14. Clean threads in RackCDU of any remaining glue.
15. Install a new male quick connector using appropriate quick connector wrench and a torque wrench set to 4Nm.
16. Connect the reservoir to RackCDU and remove the filling cap from the reservoir.
17. With the funnel, pour the server coolant from the low-sided pan into the reservoir. CAUTION: the connecting tube between the reservoir and the RackCDU manifold is small and the reservoir does not drain rapidly into the manifold. Refill the reservoir in small steps allowing the liquid to drain from the reservoir into the manifold. If needed the pump priming kit can be used to speed up the draining process. Connect the Pump Priming Kit between the top cold manifold quick connector and the reservoir and squeeze the bladder repeatedly until liquid is flowing into the manifold.
18. If some server coolant spilled and was not captured in the low-sided pan, replace it with coolant from the 5L bottle—DO NOT use water or some other coolant to refill the server side of the RackCDU. Doing so will void your warranty and will very likely result in damage to the cooling system over time.
19. Once all of the server coolant is returned to the reservoir begin re-connecting servers. Start with the lowest servers and periodically use the pump priming to make sure that the servers are getting coolant. If the rack was drained before the servers were disconnected use the pump priming tool on every server as it is reconnected.
20. Once the filling process is completed, replace the reservoir cap screwing it all the way into the reservoir then rotating it counter-clockwise until the line on the cap aligns with the "OPERATION" line on the RackCDU cover.
21. Reconnect the rack to external power.
22. Restart the servers.