

# HCD-NEZ31

## SERVICE MANUAL

*Mexican Model*

Ver. 1.0 2006.08



- HCD-NEZ31 is the amplifier, CD player, tape deck and tuner section in CMT-NEZ31.

|              |                                    |                |
|--------------|------------------------------------|----------------|
| CD Section   | Model Name Using Similar Mechanism | HCD-NEZ30      |
|              | Base Unit Name                     | BU-K8BD83S-WOD |
|              | Optical Pick-up block Name         | KSM-213CDP     |
| TAPE Section | Model Name Using Similar Mechanism | HCD-NEZ30      |
|              | Tape Transport Mechanism Type      | CMAL5Z235A     |

### SPECIFICATIONS

#### Amplifier section

Continuous RMS power output (reference): 15 + 15 W (6 ohms at 1 kHz, 10% THD)

The following are measured at AC 120 V, 60 Hz

DIN power output (rated): 11 + 11 W (6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference): 15 + 15 W (6 ohms at 1 kHz, 10% THD)

#### Inputs

AUDIO IN: Sensitivity 250 mV, impedance 47 kilohms

#### Outputs

PHONES: Accepts headphones with an impedance of 8 ohms or more

SPEAKER: Accepts impedance of 6 to 16 ohms

#### CD player section

System: Compact disc and digital audio system

#### Laser Diode Properties

Emission Duration: Continuous

Laser Output\*: Less than 44.6μW

\* This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7mm aperture.

#### Tape deck section

Recording system: 4-track 2-channel, stereo

#### Tuner section

FM stereo, FM/AM superheterodyne tuner

#### FM tuner section:

Tuning range

87.5 – 108.0 MHz (50 kHz step)

Antenna: FM lead antenna

Antenna terminals: 75 ohms unbalanced

Intermediate frequency: 10.7 MHz

#### AM tuner section:

Tuning range

530 – 1,710 kHz (with 10 kHz tuning interval)

531 – 1,710 kHz (with 9 kHz tuning interval)

Antenna: AM loop antenna, external antenna terminal

Intermediate frequency: 450 kHz

#### General

Power requirements

AC 120 V, 60 Hz

Adjustable with voltage selector

Power consumption:

45 watts

Dimensions (w/h/d) (excl. speakers):

Approx. 164 × 235 × 265 mm

Mass (excl. speakers):

Approx. 3.3 kg

Design and specifications are subject to change without notice.

## COMPACT DISC DECK RECEIVER

**Notes on chip component replacement**

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

**Flexible Circuit Board Repairing**

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

**CAUTION**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**TABLE OF CONTENTS**

|                                                  |    |
|--------------------------------------------------|----|
| <b>1. SERVICING NOTES</b>                        | 3  |
| <b>2. GENERAL</b>                                | 5  |
| <b>3. DISASSEMBLY</b>                            |    |
| 3-1. Disassembly Flow                            | 7  |
| 3-2. Cabinet                                     | 7  |
| 3-3. Cabinet (Top) Section                       | 8  |
| 3-4. Base Unit (BU-K8BD83S-WOD)                  | 8  |
| 3-5. Front Panel Section                         | 9  |
| 3-6. Mechanical Deck (CMAL5Z235A)                | 9  |
| 3-7. MAIN Board                                  | 10 |
| 3-8. Tuner (FM/AM)                               | 10 |
| <b>4. TEST MODE</b>                              | 11 |
| <b>5. MECHANICAL ADJUSTMENTS</b>                 | 12 |
| <b>6. ELECTRICAL ADJUSTMENTS</b>                 | 13 |
| <b>7. DIAGRAMS</b>                               |    |
| 7-1. Block Diagram – CD SERVO Section –          | 15 |
| 7-2. Block Diagram – MAIN Section –              | 16 |
| 7-3. Printed Wiring Board – CD Board –           | 18 |
| 7-4. Schematic Diagram – CD Board –              | 19 |
| 7-5. Printed Wiring Boards – MAIN Section –      | 20 |
| 7-6. Schematic Diagram – MAIN Section (1/2) –    | 21 |
| 7-7. Schematic Diagram – MAIN Section (2/2) –    | 22 |
| 7-8. Printed Wiring Board – PANEL Board –        | 24 |
| 7-9. Schematic Diagram – PANEL Board –           | 25 |
| 7-10. Printed Wiring Boards – DC Section –       | 26 |
| 7-11. Printed Wiring Board – AC Board –          | 27 |
| 7-12. Schematic Diagram – POWER SUPPLY Section – | 28 |
| <b>8. EXPLODED VIEWS</b>                         |    |
| 8-1. Cabinet Section                             | 34 |
| 8-2. Mechanical Deck Section                     | 35 |
| 8-3. Panel Board Section                         | 36 |
| 8-4. Cabinet (Top) Section                       | 37 |
| 8-5. MAIN Board Section                          | 38 |
| 8-6. AC Board, DC Board Section                  | 39 |
| <b>9. ELECTRICAL PARTS LIST</b>                  | 40 |

**SAFETY-RELATED COMPONENT WARNING!!**

COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

## SECTION 1 SERVICING NOTES

### NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

### NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

### UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)

### **LF**: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.

Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.

Soldering irons using a temperature regulator should be set to about 350 °C.

Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!

- Strong viscosity  
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder  
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

### LASER DIODE AND FOCUS SEARCH OPERATION CHECK

During normal operation of the equipment, emission of the laser diode is prohibited unless the upper lid is closed while turning ON the S820. (push switch type)


The following checking method for the laser diode is operable.

#### • Method

**Emission of the laser diode is visually checked.**

1. Open the upper lid.
  2. Push the S820 as shown in Fig.1.
- Note:** Do not push the detection lever strongly, or it may be bent or damaged.
3. Press the  button.
  4. Check the object lens for confirming normal emission of the laser diode. If not emitting, there is a trouble in the automatic power control circuit or the optical pick-up.

In this operation, the object lens will move up and down 2 times along with inward motion for the focus search.

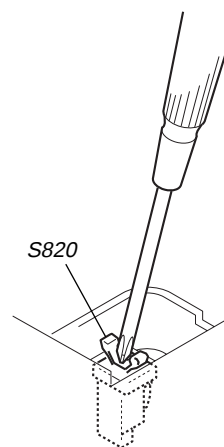


**Fig.1 Method to push the S820**


# HCD-NEZ31

## SERVICE POSITION

### – CD BOARD –

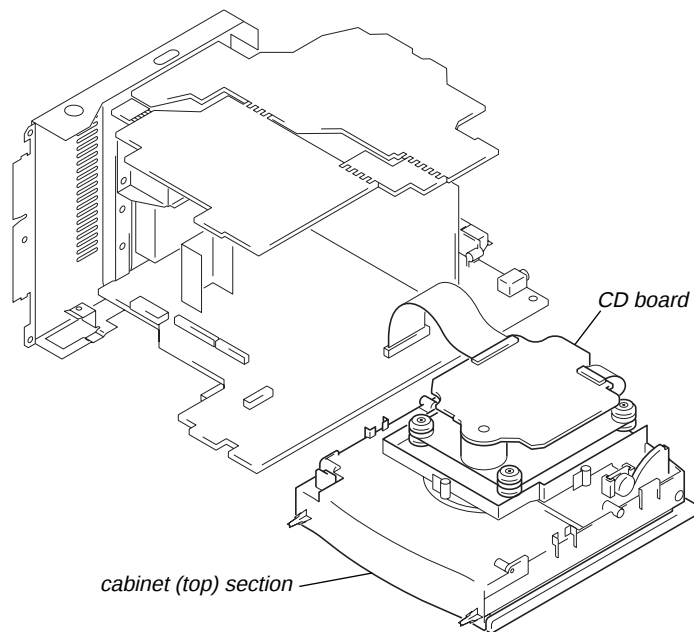



### – TAPE MECHANICAL DECK –

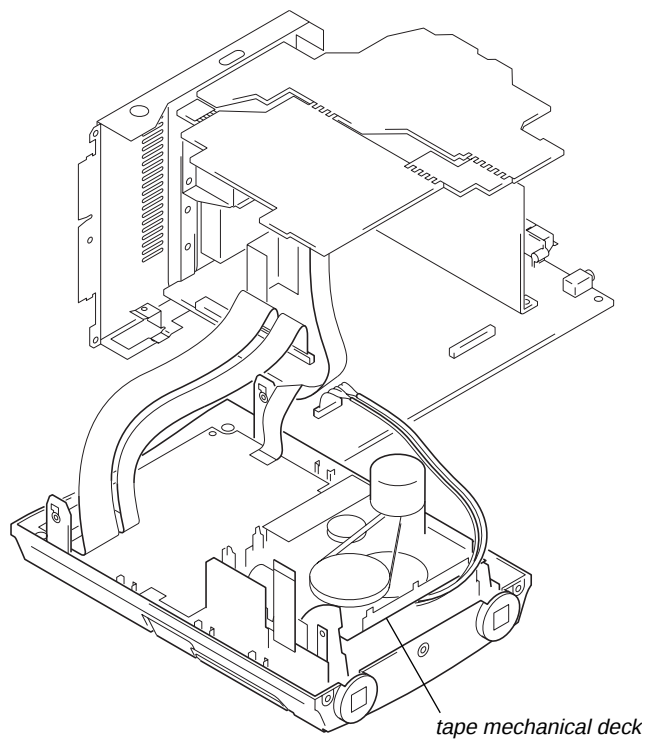

## SECTION 2 GENERAL

This section is extracted from instruction manual.


### Basic Operations

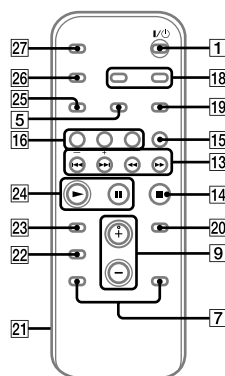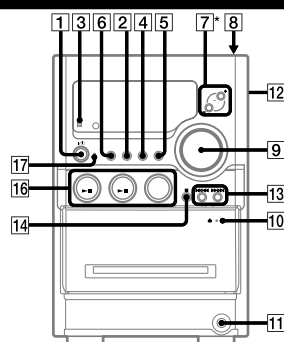

### Before using the system

#### To use the remote

Slide and remove the battery compartment lid [21], and insert the two supplied R6 (size AA) batteries, side first, matching the polarities shown below.

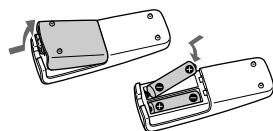

#### Notes on using the remote

- With normal use, the batteries should last for about six months.
- Do not mix an old battery with a new one or mix different types of batteries.
- If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.

#### To set the clock

- 1 Turn on the system.  
Press (power) [1].
- 2 Select the clock set mode.  
Press CLOCK/TIMER SET [18] on the remote. If the current mode appears on the display, press [13] on the remote repeatedly to select "CLOCK" and then press ENTER [20] on the remote.
- 3 Set the time.  
Press [13] on the remote repeatedly to set the hour, and then press ENTER [20] on the remote. Use the same procedure to set the minute.  
The clock settings are lost when you disconnect the power cord or if a power failure occurs.

### Selecting a music source

Press the following buttons (or press FUNCTION [15] repeatedly).

| To select                                 | Press                                              |
|-------------------------------------------|----------------------------------------------------|
| CD                                        | CD [16] on the remote.                             |
| Tuner                                     | TUNER/BAND [16].                                   |
| Tape                                      | TAPE [16] on the remote.                           |
| Component (connected using an audio cord) | FUNCTION [15] repeatedly until "AUDIO IN" appears. |

### Adjusting the sound

#### To adjust the volume

Press VOLUME +/- on the remote (or turn the VOLUME control on the unit) [9].

#### To add a sound effect


| To                                                            | Press                 |
|---------------------------------------------------------------|-----------------------|
| Generate a more dynamic sound (Dynamic Sound Generator X-tra) | DSGX [6] on the unit. |

#### Set the sound effect

EQ [22] on the remote repeatedly to select "BASS" or "TREBLE," and then press [13] repeatedly to adjust the level.

### Playing a CD/MP3 disc

- 1 Select the CD function.  
Press CD [16] on the remote.
- 2 Place a disc.  
Press [8] on the unit, and place a disc with the label side up on the CD compartment.  
To close the CD compartment, press [8] on the unit.

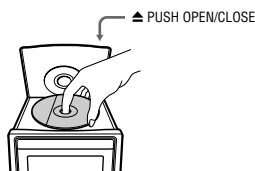

- 3 Start playback.  
Press [24] on the remote (or CD/PAUSE [16] on the unit).

| To                              | Press                                                                                                    |
|---------------------------------|----------------------------------------------------------------------------------------------------------|
| Pause playback                  | [24] on the remote (or CD/PAUSE [16] on the unit). To resume play, press the button again.               |
| Stop playback                   | [14].                                                                                                    |
| Select a folder on an MP3 disc  | +/- (select folder) [7].                                                                                 |
| Select a track or file          | [13] (go back/go forward) [13].                                                                          |
| Find a point in a track or file | Hold down  [13] (rewind/fast forward) [13] during playback, and release the button at the desired point. |
| Select Repeat Play              | REPEAT [19] on the remote repeatedly until "REPEAT" or "REPEAT 1" appears.                               |

#### To change the play mode

All tracks or files on a disc are played repeatedly while the player is stopped. You can select normal play ("") for all MP3 files in the folder on the disc, shuffle play ("SHUF" or " SHUF"), or program play ("PGM").

\* When playing a CD-DA disc, (SHUF) Play performs the same operation as normal (SHUF) Play.

#### Notes on Repeat Play

- All tracks or files on a disc are played repeatedly up to five times.
- "REPEAT 1" indicates that a single track or file is repeated until you stop it.

#### Notes on playing MP3 discs


- Do not save other types of files or unnecessary folders on a disc that has MP3 files.
- Folders that have no MP3 files are skipped.
- MP3 files are played back in the order that they are recorded onto the disc.
- The system can only play MP3 files that have a file extension of ".MP3".
- If there are files on the disc that have the ".MP3" file extension, but that are not MP3 files, the unit may produce noise or may malfunction.
- The maximum number of:
  - folders is 150 (including the root folder).
  - MP3 files is 255.
  - MP3 files and folders that can be contained on a single disc is 256.
  - folder levels (the tree structure of files) is 8.
- Compatibility with all MP3 encoding/writing software, recording device, and recording media cannot be guaranteed. Incompatible MP3 discs may produce noise or interrupted audio or may not play at all.

#### Notes on playing multisession discs

- If the disc begins with a CD-DA (or MP3) session, it is recognized as a CD-DA (or MP3) disc, and playback continues until another session is encountered.
- A disc with a mixed CD format is recognized as a CD-DA (audio) disc.

### Listening to the radio

- 1 Select "FM" or "AM."  
Press TUNER/BAND [16] repeatedly.
- 2 Select the tuning mode.  
Press TUNING MODE [5] repeatedly until "AUTO" appears.
- 3 Tune in the desired station.  
Press +/- on the remote (or TUNING +/- on the unit) [13]. Scanning stops automatically when a station is tuned in, and then "TUNED" and "STEREO" (for stereo programs) appear.



#### To stop automatic scanning

Press (stop) [14].

#### To tune in a station with a weak signal

If "TUNED" does not appear and the scanning does not stop, press TUNING MODE [5] repeatedly until "AUTO" and "PRESET" disappear, and then press +/- on the remote (or TUNING +/- on the unit) [13] repeatedly to tune in the desired station.

#### To reduce static noise on a weak FM stereo station

Press FM MODE [19] on the remote repeatedly until "STEREO" disappears to turn off stereo reception.

### Playing a tape

- 1 Select the tape function.  
Press TAPE [16] on the remote.
- 2 Insert a tape.  
Press PUSH OPEN/CLOSE [10] on the unit, and insert the TYPE I (normal) tape into the cassette holder with the side you want to play facing forward. Make sure there is no slack in the tape to avoid damaging the tape or the tape deck. Press PUSH OPEN/CLOSE [10] on the unit again to close the cassette holder.
- 3 Start playback.  
Press [24] on the remote (or TAPE/PAUSE [16] on the unit).

| To                     | Press                                                                                        |
|------------------------|----------------------------------------------------------------------------------------------|
| Pause playback         | [24] on the remote (or TAPE/PAUSE [16] on the unit). To resume play, press the button again. |
| Stop playback          | [14].                                                                                        |
| Rewind or fast forward | [13] (rewind/fast forward) [13].                                                             |

### Changing the display

| To change                   | Press                                                         |
|-----------------------------|---------------------------------------------------------------|
| Information on the display* | DISPLAY [28] on the remote repeatedly when the system is on.  |
| Display mode (See below.)   | DISPLAY [28] on the remote repeatedly when the system is off. |

\* For example, you can view CD/MP3 disc information, such as the track or file number or folder name during normal play, or the total play time while the player is stopped.

The system offers the following display modes.

| Display mode                    | When the system is off, <sup>1)</sup>                                                 |
|---------------------------------|---------------------------------------------------------------------------------------|
| Clock                           | The clock is displayed.                                                               |
| Power Saving Mode <sup>2)</sup> | The display is turned off to conserve power. The timer and clock continue to operate. |

<sup>1)</sup> The STANDBY indicator lights up when the system is off.

<sup>2)</sup> When the system is in Power Saving Mode, the following functions are unavailable:

- setting the clock.
- changing the AM tuning interval
- changing the CD power manage function

#### Notes on the display information

- The following are not displayed:
  - total playing time for a CD-DA disc depending on the play mode.
  - total playing time for an MP3 disc.
  - remaining playing time for an MP3 file.
- The following are not displayed correctly:
  - elapsed playing time of an MP3 file encoded using a VBR (variable bit rate).
  - folder and file names that do not follow either the ISO9660 Level 1, Level 2 or Joliet in the expansion format.
- The following are displayed:
  - ID3 tag information for MP3 files when ID3 version 1 and version 2 tags are used.
  - up to 30 characters of ID3 tag information using uppercase letters (A to Z), numbers (0 to 9), and symbols (" \$ % ' ( ) \* + , - . / < = > @ [ \ ] \_ ` { | } ).

### Using optional audio components

#### To connect an optional headphones

Connect headphones to the PHONES jack [12] on the unit.

#### To connect an optional component

Connect additional audio component to the AUDIO IN jack [12] on the unit using an audio analog cord (not supplied). Turn down the volume on the system, and then press FUNCTION [15] repeatedly to select the AUDIO IN function.

## Other Operations

### Creating your own CD program (Program Play)

Use buttons on the remote to create your own program.

- 1 Press CD [16] to select the CD function.
- 2 Press PLAY MODE [5] repeatedly until "PGM" appears while the player is stopped.
- 3 Press [13] repeatedly until the desired track number appears.

When programming MP3 files, press [7] (select folder) repeatedly to select the desired folder, and then select the desired file.

Selected track or file number



Total playing time of program (including selected track or file)

- 4 Press ENTER [20] to add the track or file to the program.  
"---:--" appears when the total time exceeds 100 minutes for a CD, or when you select an MP3 file.
- 5 Repeat steps 3 through 4 to program additional tracks or files, up to a total of 25 tracks or files.
- 6 To play your program of tracks or files, press [24].  
The program remains available until you open the CD compartment. To play the same program again, select the CD function, and press [24].

#### To cancel Program Play

Press PLAY MODE [5] repeatedly until both "PGM" and "SHUF" disappear while the player is stopped.

**To delete the last track or file of the program**  
Press CLEAR [23] while the player is stopped.

**To view program information, such as total track number of the program**  
Press DISPLAY [28] repeatedly.

### Presetting radio stations

You can preset your favorite radio stations and tune them in instantly by selecting the corresponding preset number.

Use buttons on the remote to preset stations.

- 1 Tune in the desired station (see "Listening to the radio").
- 2 Press TUNER MEMORY [25].

Preset number



- 3 Press +/- [13] repeatedly to select your desired preset number.  
If another station is already assigned to the selected preset number, the station is replaced by the new stations.
- 4 Press ENTER [20].
- 5 Repeat steps 1 through 4 to store other stations.  
You can preset up to 20 FM and 10 AM stations. The preset stations are retained for about half a day even if you disconnect the power cord or if a power failure occurs.
- 6 To call up a preset radio station, press TUNING MODE [5] repeatedly until "PRESET" appears, and then press +/- [13] repeatedly to select the desired preset number.

### Recording onto a tape

You can record on a TYPE I (normal) tape in two ways:

#### CD Synchro Recording:

You can record an entire CD onto a tape.

#### Manual Recording:

You can record just the portions you like from a sound source, including connected audio components.

Use buttons on the unit to control tape recording.

- 1 Load a recordable tape with the side you want to record facing forward.

- 2 Prepare the recording source.

For CD Synchro Recording:

Press CD [16] on the remote to select the CD function. Load the disc you want to record.

When recording a folder from an MP3 disc, press PLAY MODE [5] repeatedly to select [ ] and then press +/- (select folder) [7] repeatedly to select the desired folder.

To record only your favorite CD tracks in your desired order, perform steps 2 through 5 of "Creating your own CD program."

For Manual Recording:

Select the desired source to record.

- 3 Set the tape deck to stand by for recording.

For CD Synchro Recording:

Press CD SYNC [2].

For Manual Recording:

Press [4].

- 4 Start recording.

While recording, you cannot listen to other sources.

For CD Synchro Recording:

Press [4]. When the recording is completed, the CD player and the tape deck stop automatically. If you are recording onto a tape and the tape reaches the end of the front side part-way through a track or file, "TURN TAPE" appears. Turn the tape over to the reverse side, re-insert it, and "PUSH REC" appears. And then press [4].

For Manual Recording:

Press [4], and then start playing the desired recording source.

If there is noise while recording from the tuner, reposition the appropriate antenna to reduce the noise.

#### To stop recording

Press [14].

#### Note

Recording stops if you change to a different function.

### Using the Timers

The system offers three timer functions. You cannot activate both the Play Timer and the Rec Timer at the same time. If you use either with the Sleep Timer, the Sleep Timer has priority.

#### Sleep Timer:

You can fall asleep to music. This function works even if the clock is not set.

Press SLEEP on the remote repeatedly. If you select "AUTO," the system automatically turns off after the current disc or tape stops or in 100 minutes.

Do not select "AUTO" during Synchro Recording of a tape.

#### Play Timer:

You can wake up to CD, tape or tuner at a preset time.

#### Rec Timer:

You can record a preset radio station at a specified time.

Use buttons on the remote to control the Play Timer and the Rec Timer. Make sure you have set the clock.

- 1 Prepare the sound source.

For Play Timer:

Prepare the sound source, and then press VOLUME +/- [9] to adjust the volume.

To start from a specific CD track or MP3 file, create your own CD program.

For Rec Timer:

Tune in the preset radio station.

- 2 Press CLOCK/TIMER SET [18].

- 3 Press [13] repeatedly to select "PLAY SET" or "REC SET" then press ENTER [20].

"ON TIME" appears, and the hour indication flashes.

- 4 Set the time to start playing or recording.

Press [13] repeatedly to set the hour, and then press ENTER [20].

The minute indication flashes. Use the procedure above to set the minute.

- 5 Use the same procedure as in step 4 to set the time to stop playing or recording.

- 6 Select the sound source or prepare the tape.

For Play Timer:

Press [13] repeatedly until the desired sound source appears, and then press ENTER [20]. The display shows the timer settings.

For Rec Timer:

Load a recordable tape. The display shows the timer settings.

- 7 Press [1] to turn off the system.

The system turns on 15 seconds before the preset time. If the system is on at the preset time, the Play Timer and the Rec Timer will not play or record.

#### To activate or check the timer again

Press CLOCK/TIMER SELECT [18], press [13] repeatedly until "PLAY SEL" or "REC SEL" appears, and then press ENTER [20].

#### To cancel the timer

Repeat the same procedure as above until "OFF" appears, and then press ENTER [20].

#### To change the setting

Start over from step 1.


#### Tips

- The Play Timer setting remains as long as the setting is not canceled manually.
- The volume is reduced to minimum during the Rec Timer.
- The Rec Timer is canceled automatically after the Rec Timer has been activated.

## SECTION 3 DISASSEMBLY


- This set can be disassembled in the order shown below.

### 3-1. DISASSEMBLY FLOW

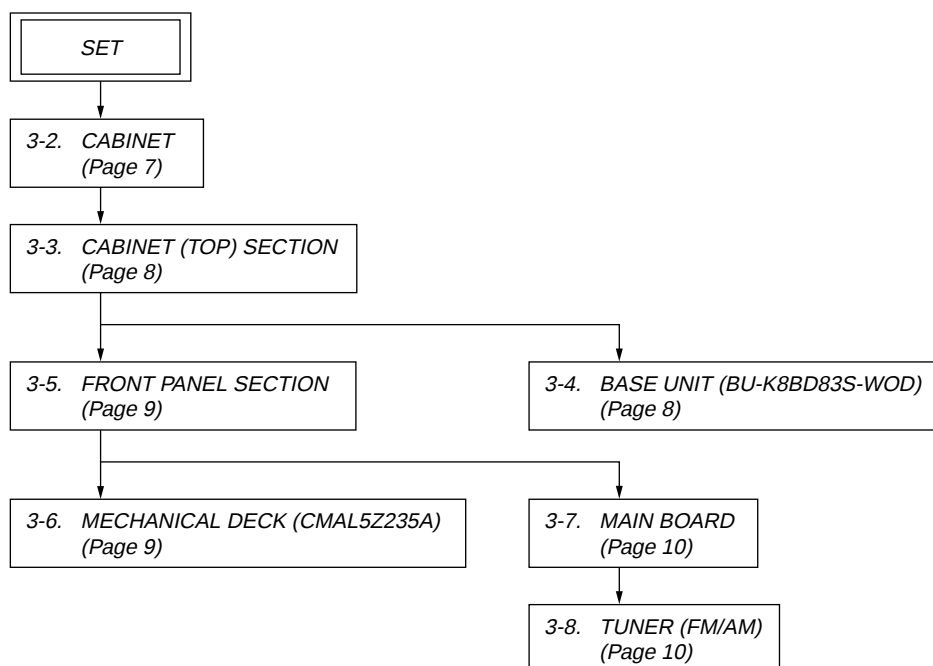


**Note:** Follow the disassembly procedure in the numerical order given.


### 3-2. CABINET

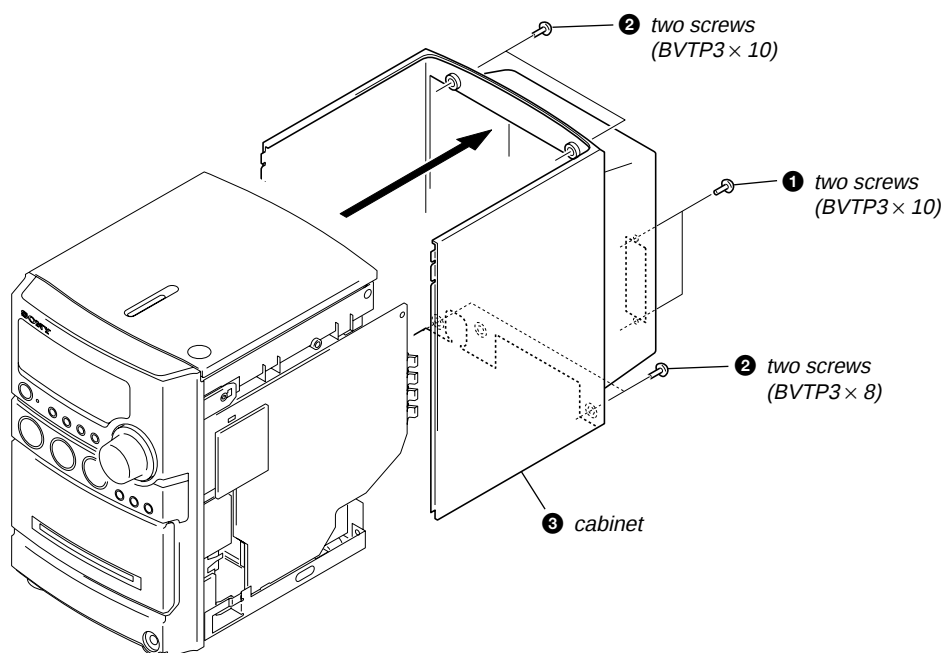


## 3-3. CABINET (TOP) SECTION

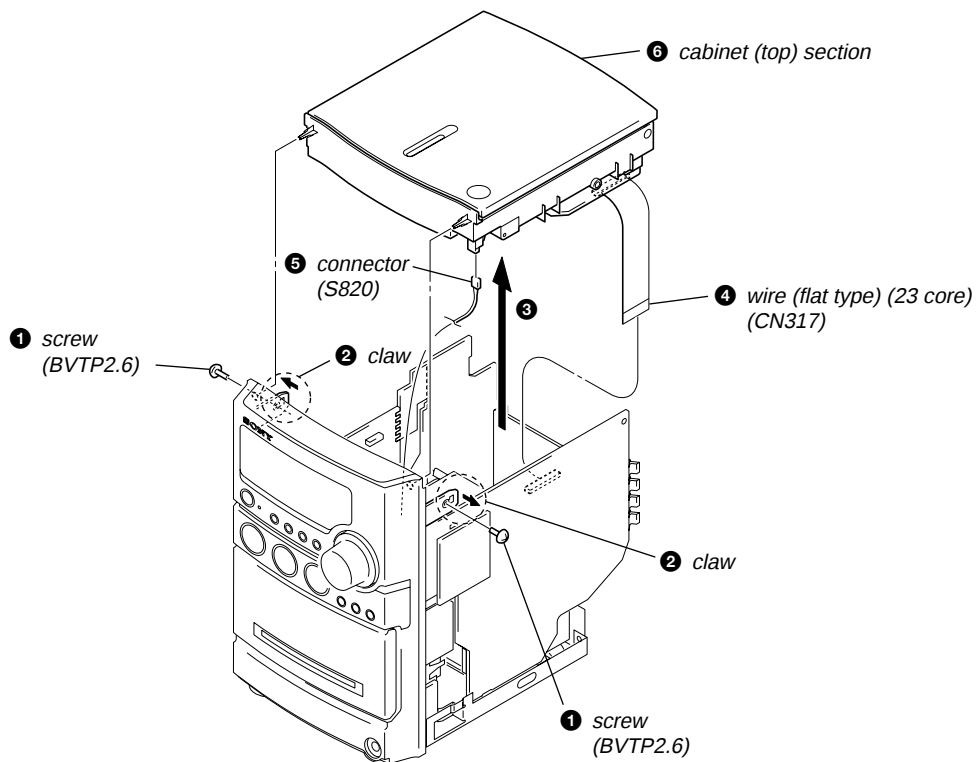


## 3-4. BASE UNIT (BU-K8BD83S-WOD)

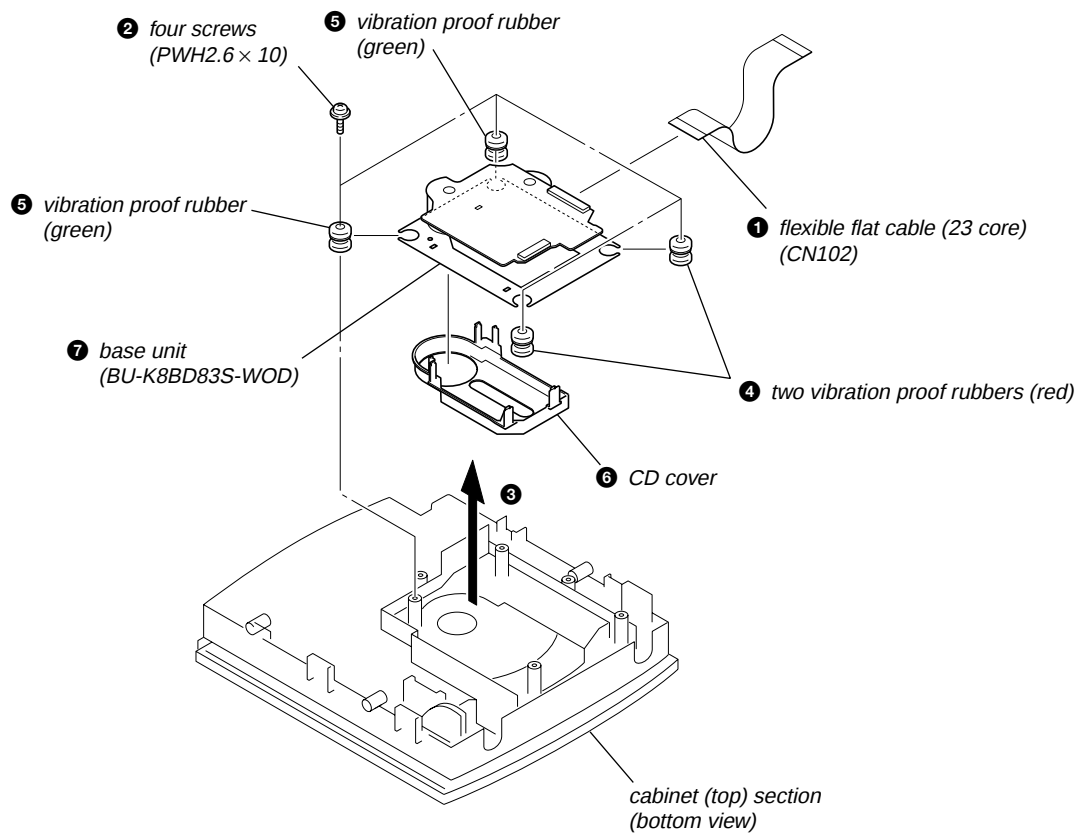


### 3-5. FRONT PANEL SECTION

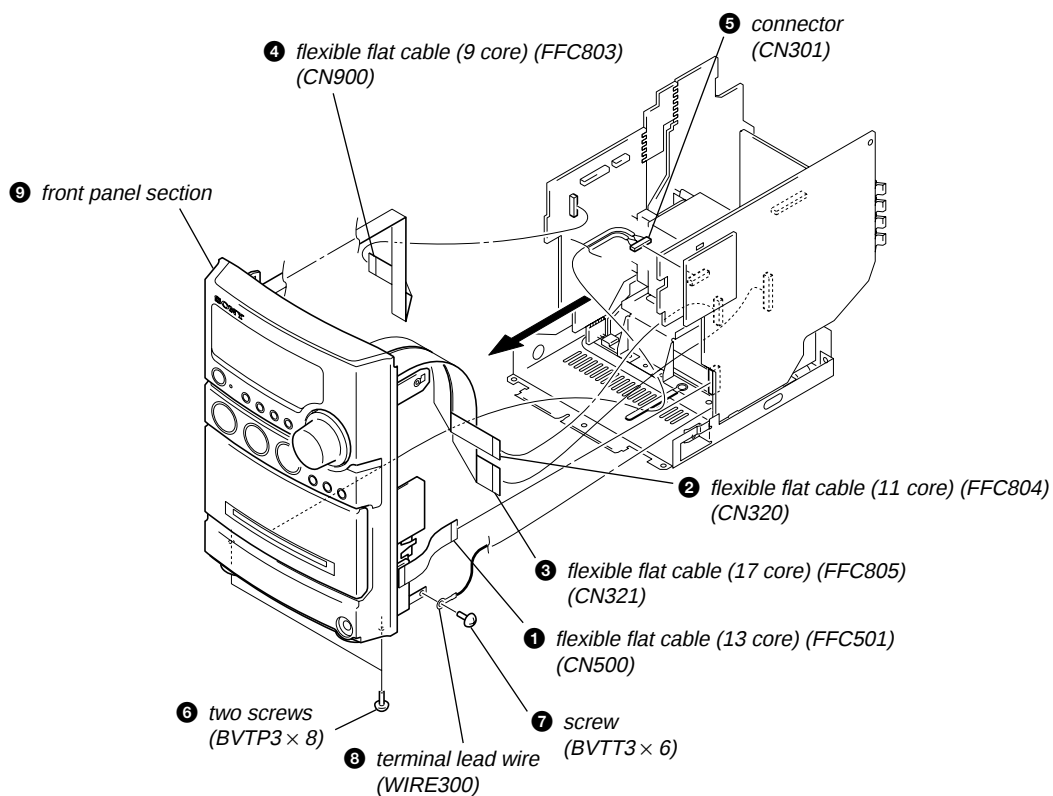


### 3-6. MECHANICAL DECK (CMAL5Z235A)

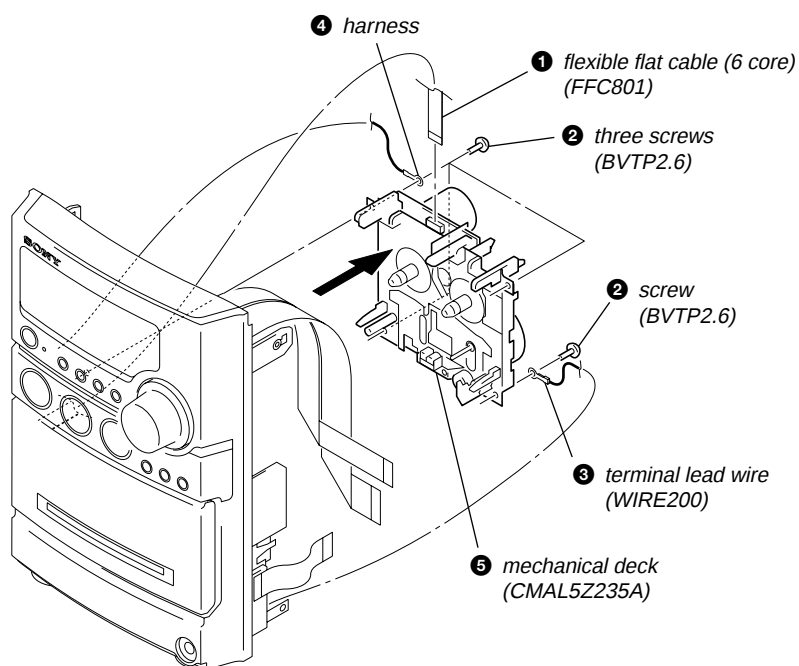

## 3-7. MAIN BOARD

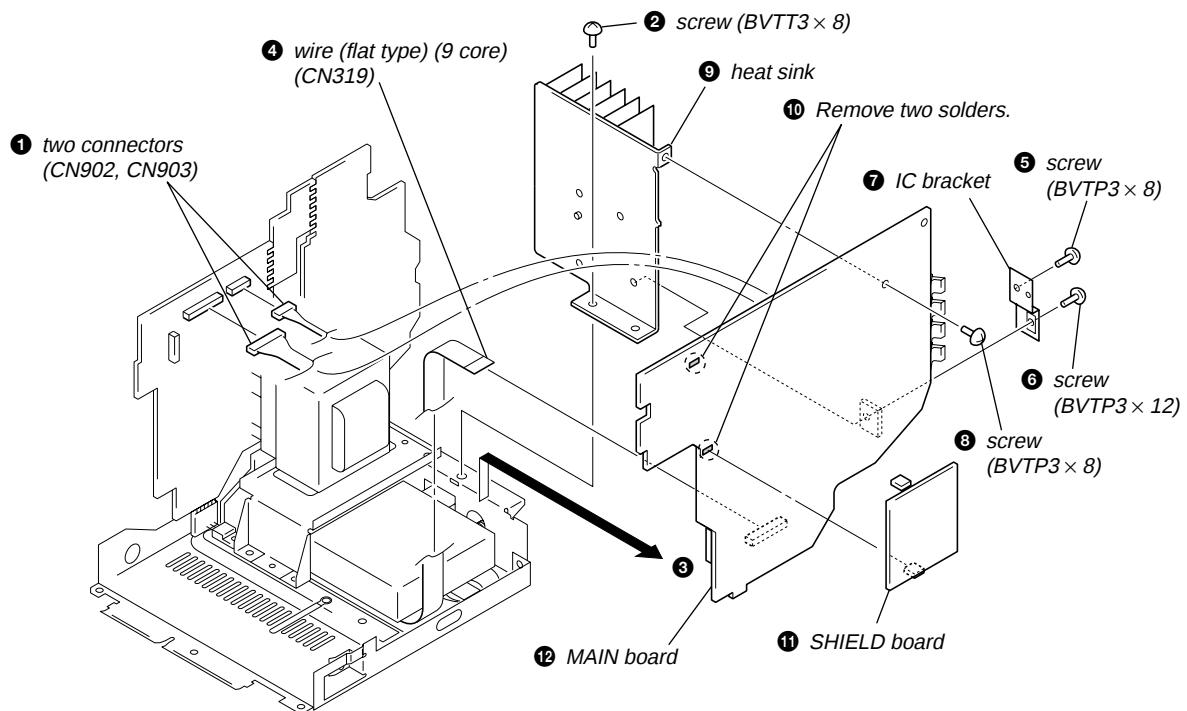

## 3-8. TUNER (FM/AM)

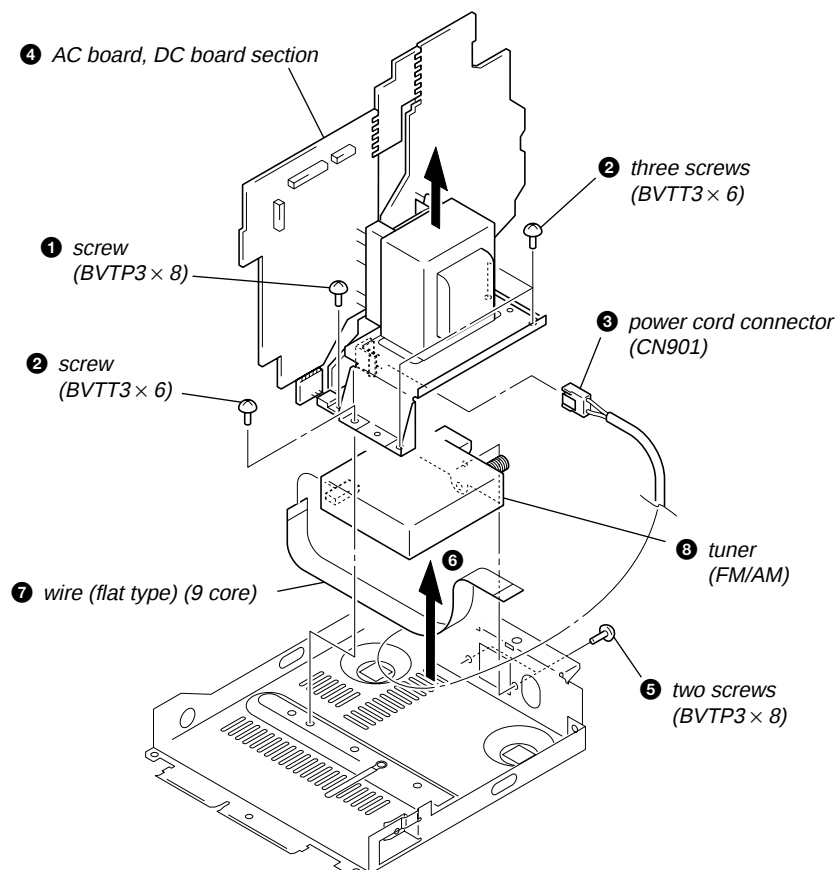

## SECTION 4 TEST MODE

### COLD RESET

The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customer.

#### Procedure:

1. Press the  button to turn the power on.
2. While pressing the  button, press the  button and turn the **VOLUME** knob in the counter-clock wise.
3. The message "RESET" is displayed and the set is reset.

### PANEL TEST

All segments of liquid crystal display are tested, and the version and released date of the micro computer are displayed.

#### Procedure:

1. Press the  button to turn the power on.
2. While pressing the **DSGX** button, press the  button and turn the **VOLUME** knob in the counter-clock wise. Then all segments of liquid crystal display are turned on.
3. Press the **DSGX** button, the version and released date of the micro computer are displayed.

#### example of display:

**1104 V104**

Version of micro computer  
(In this case, version 104)

released date of micro computer  
(In this case, released of November 4)

4. Press the **TUNER/BAND** button, the model name and destination are displayed.

#### example of display:

**6NE NA**

destination  
(In this case, North American model)

model name  
(In this case, HCD-NEZXX)

5. Press the **PLAY MODE/TUNING MODE** button, "KEY 0 0" is displayed on the liquid crystal display, and key test mode in. Each time a key is pressed, the numerical value corresponding to each key is displayed on the liquid crystal display.
6. To exit from this mode, perform the "COLD RESET".

### TUNER STEP CHANGE-OVER

Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.

#### Procedure:

1. Set the FUNCTION to AM, and press the  button to turn the power off.
2. While depressing the **TUNER/BAND** button, press the  button.
3. The message "9K STEP" or "10K STEP" is displayed on the liquid crystal display, and thus the channel step is changed over.

### CD ERROR HISTORY

When this mode is entered, optical pick-up error code is displayed with the 8-character format on the fluorescent indicator tube.

#### Procedure:

1. Set the FUNCTION to CD.
2. While pressing the **DSGX** button, press the **CD ►||** button and turn the **VOLUME** knob in the counter-clock wise.
3. CD error history is displayed on the liquid crystal display.

#### The first digit from the left indicates:

The first digit from the left indicates which mode the error history is. In the optical pick-up error code mode, "D" is displayed on the liquid crystal display.

#### The second digit from the left indicates:

##### (Error history No. display)

The second digit from the left indicates which order the error history is. "1" indicates the latest error history, and each time the number increases by one, the error history goes back to one-previous error.

#### The third and 4th digit from the left indicates:

##### (Error status display)

The third and 4th digit from the left indicates which error status is indicated.

| Display | Status                                                |
|---------|-------------------------------------------------------|
| 0 1     | Not focused (TOC read without a disc)                 |
| 0 2     | GFS NG (TOC read with a disc chucked)                 |
| 0 3     | Start operation time-over                             |
| 0 4     | Defocused continuously (Defocused during TOC reading) |
| 0 5     | Q code not entered for specified time                 |
| 0 6     | Tracking not turned ON                                |
| 0 7     | Blank disc (Blank disc TOC read)                      |

#### The 5th and 6th digit from the left indicates:

##### (Error step display)

The 5th and 6th digit from the left indicates which processing when a trouble occurred

| Display | Contents                                      |
|---------|-----------------------------------------------|
| 0 1     | Power OFF in progress                         |
| 0 2     | Power ON in progress                          |
| 0 3     | Initialize in progress                        |
| 0 4     | Oscillation stopping                          |
| 0 5     | From oscillation stop, oscillation starting   |
| 0 6     | Stopping                                      |
| 0 7     | Stop operation is under way                   |
| 0 8     | Start operation in progress                   |
| 0 9     | TOC read in progress                          |
| 0 A     | Search operation is under way                 |
| 0 B     | Playback operation is under way               |
| 0 C     | Pause operation is under way                  |
| 0 D     | Playback manual search operation is under way |
| 0 E     | Pause manual search operation is under way    |

#### The 7th and 8th digit from the left indicates:

The 7th and 8th digit from the left indicates which operation in progress when a trouble occurred. (Step of each processing of the 5th and 6th digits is indicated)

## SECTION 5

### MECHANICAL ADJUSTMENTS

#### CD POWER MANEGE

This mode is for switch the CD power supply on/off. Even if this state pulls out AC plug, it is held.

##### Procedure:

1. Press the  button to turn the power on.
2. Set the FUNCTION to CD.
3. Press the  button again to turn the power off (standby).
4. While pressing the  button, press the  button.
5. If turns power on and display “CD POWER”, then display “ON” or “OFF”.

#### PRECAUTION

1. Clean the following parts with a denatured-alcohol-moistened swab :
 

|                      |              |
|----------------------|--------------|
| record/playback head | pinch roller |
| erase head           | rubber belts |
| capstan              | idlers       |
2. Demagnetize the record/playback head with a head demagnetizer. (Do not bring the head magnetizer close to the erase head.)
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

#### TORQUE MEASUREMENT

| Mode                | Torque Meter | Meter Reading                                                          |
|---------------------|--------------|------------------------------------------------------------------------|
| FWD                 | CQ-102C      | 2.95 – 6.86 mN·m<br>(30 – 70 g·cm)<br>(0.42 – 0.97 oz·inch)            |
| FWD<br>Back Tension | CQ-102C      | 0.15 – 5.39 mN·m<br>(1.5 – 5.5 g·cm)<br>(0.021 – 0.076 oz·inch)        |
| FF                  | CQ-201B      | more than 5.89 mN·m<br>(more than 60 g·cm)<br>(more than 0.83 oz·inch) |
| REW                 | CQ-201B      | more than 5.89 mN·m<br>(more than 60 g·cm)<br>(more than 0.83 oz·inch) |

#### TAPE TENSION MEASUREMENT

| Mode | Tension Meter | Meter Reading                          |
|------|---------------|----------------------------------------|
| FWD  | CQ-403A       | more than 100 g<br>(more than 3.53 oz) |

## SECTION 6 ELECTRICAL ADJUSTMENTS

**DECK SECTION**

0 dB=0.775 V


1. Demagnetize the record/playback head with a head demagnetizer.
2. Do not use a magnetized screwdriver for the adjustments.

**• Test Tape**


| Tape     | Signal          | Used for           |
|----------|-----------------|--------------------|
| P-4-A063 | 6.3 kHz, -10 dB | Azimuth Adjustment |

**RECORD/PLAYBACK HEAD AZIMUTH ADJUSTMENT**


**Note:** Remove the cassette lid assy before this adjustment.

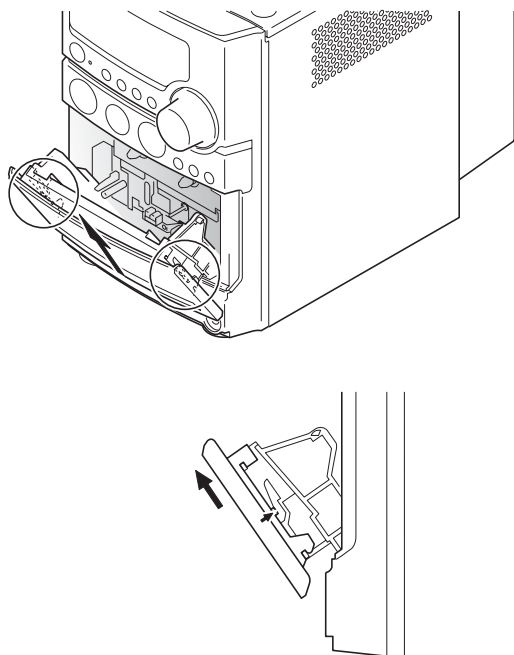**Procedure:**



1. Mode: Playback

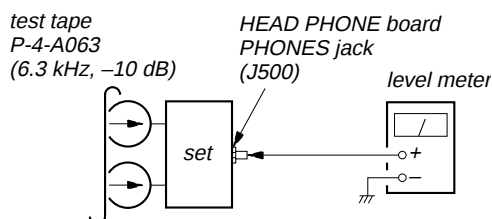

2. Turn the adjustment screw and check output peaks. If the peaks do not match for L-CH and R-CH, turn the adjustment screw so that outputs match within 1dB of peak.

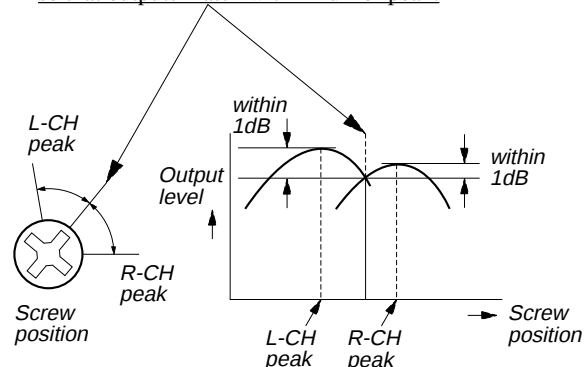


3. Mode: Playback

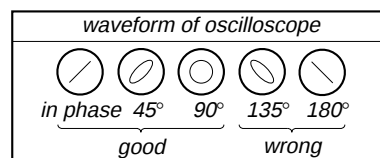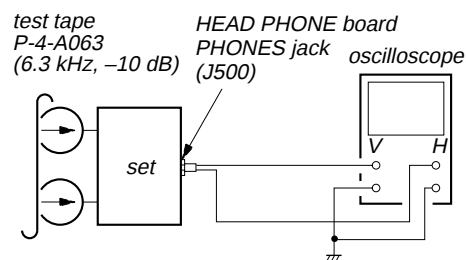

4. After the adjustments, apply suitable locking compound to the parts adjusted.

**Adjustment Location:** Record/Playback/Erase Head

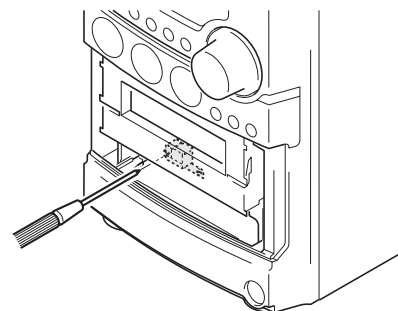


CD SECTION

Note:


- 1. CD Block is basically constructed to operate without adjustment.
- 2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
- 3. Use an oscilloscope with more than 10 MΩ impedance.
- 4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.
- 5. Check the focus bias check when optical pick-up block is replaced.

FOCUS BIAS CHECK

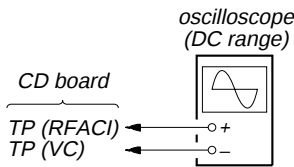


Procedure :

- 1. Connect oscilloscope to TP (RFACI) and TP (VC) on the CD board.
- 2. Press the button to turn the power ON.
- 3. Set disc (YEDS-18) on the tray and press the button to playback.
- 4. Confirm that oscilloscope waveform is as shown in the figure below. (eye pattern)  
A good eye pattern means that the diamond shape (◇) in the center of the waveform can be clearly distinguished.

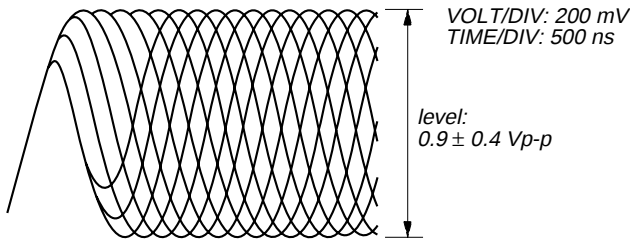


Checking Location:

– CD Board (Conductor Side) –

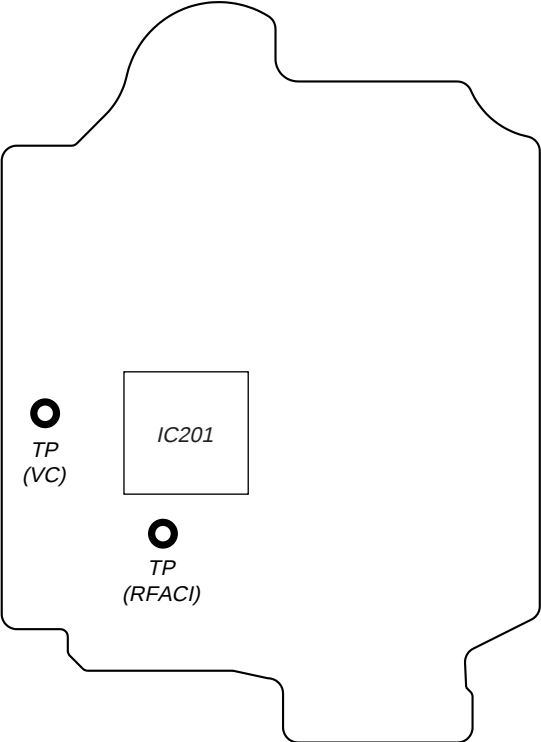


## SECTION 7 DIAGRAMS

### 7-1. BLOCK DIAGRAM – CD SERVO Section –

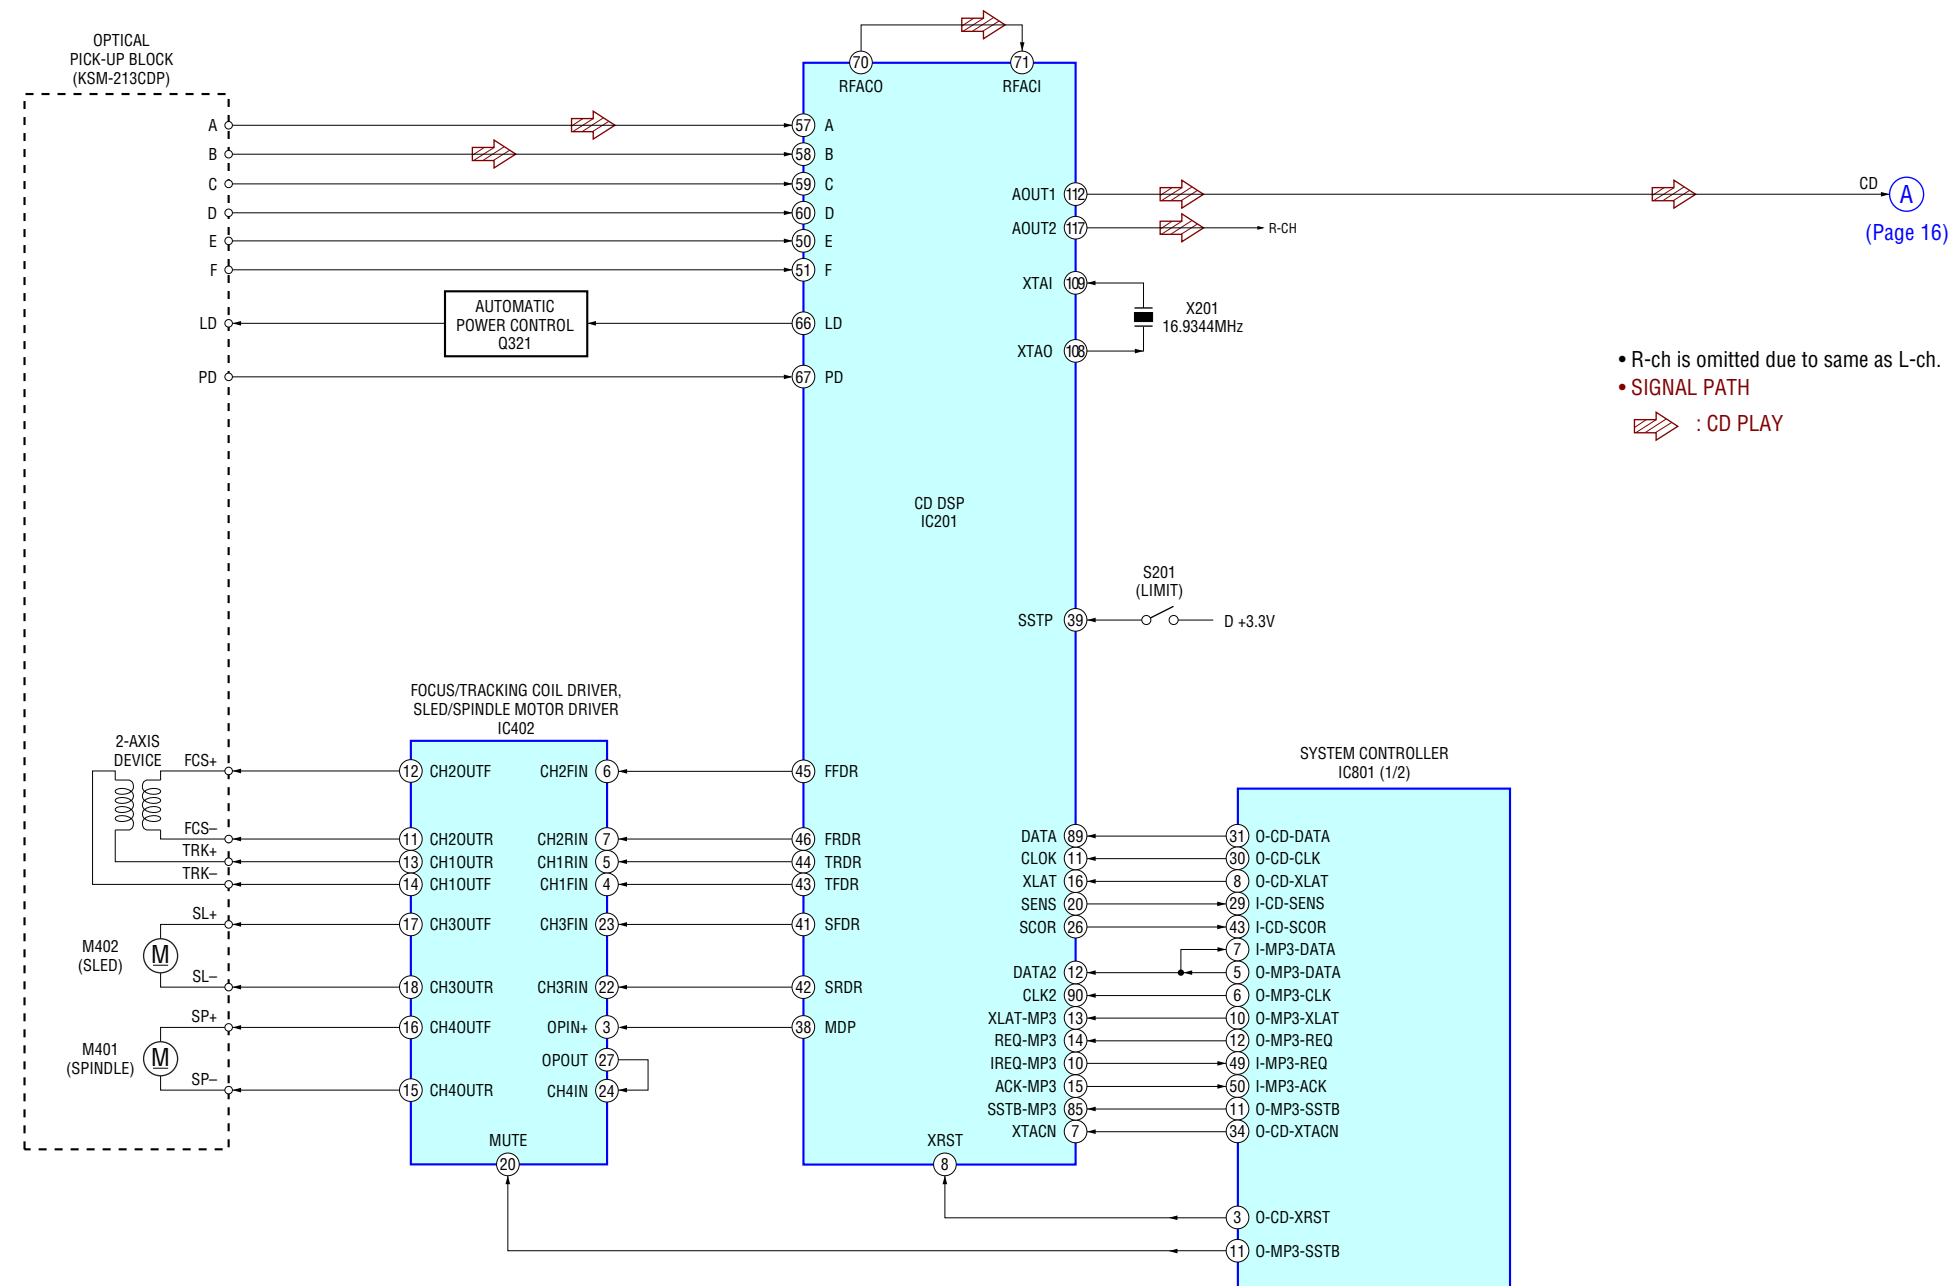

7-2. BLOCK DIAGRAM – MAIN Section –

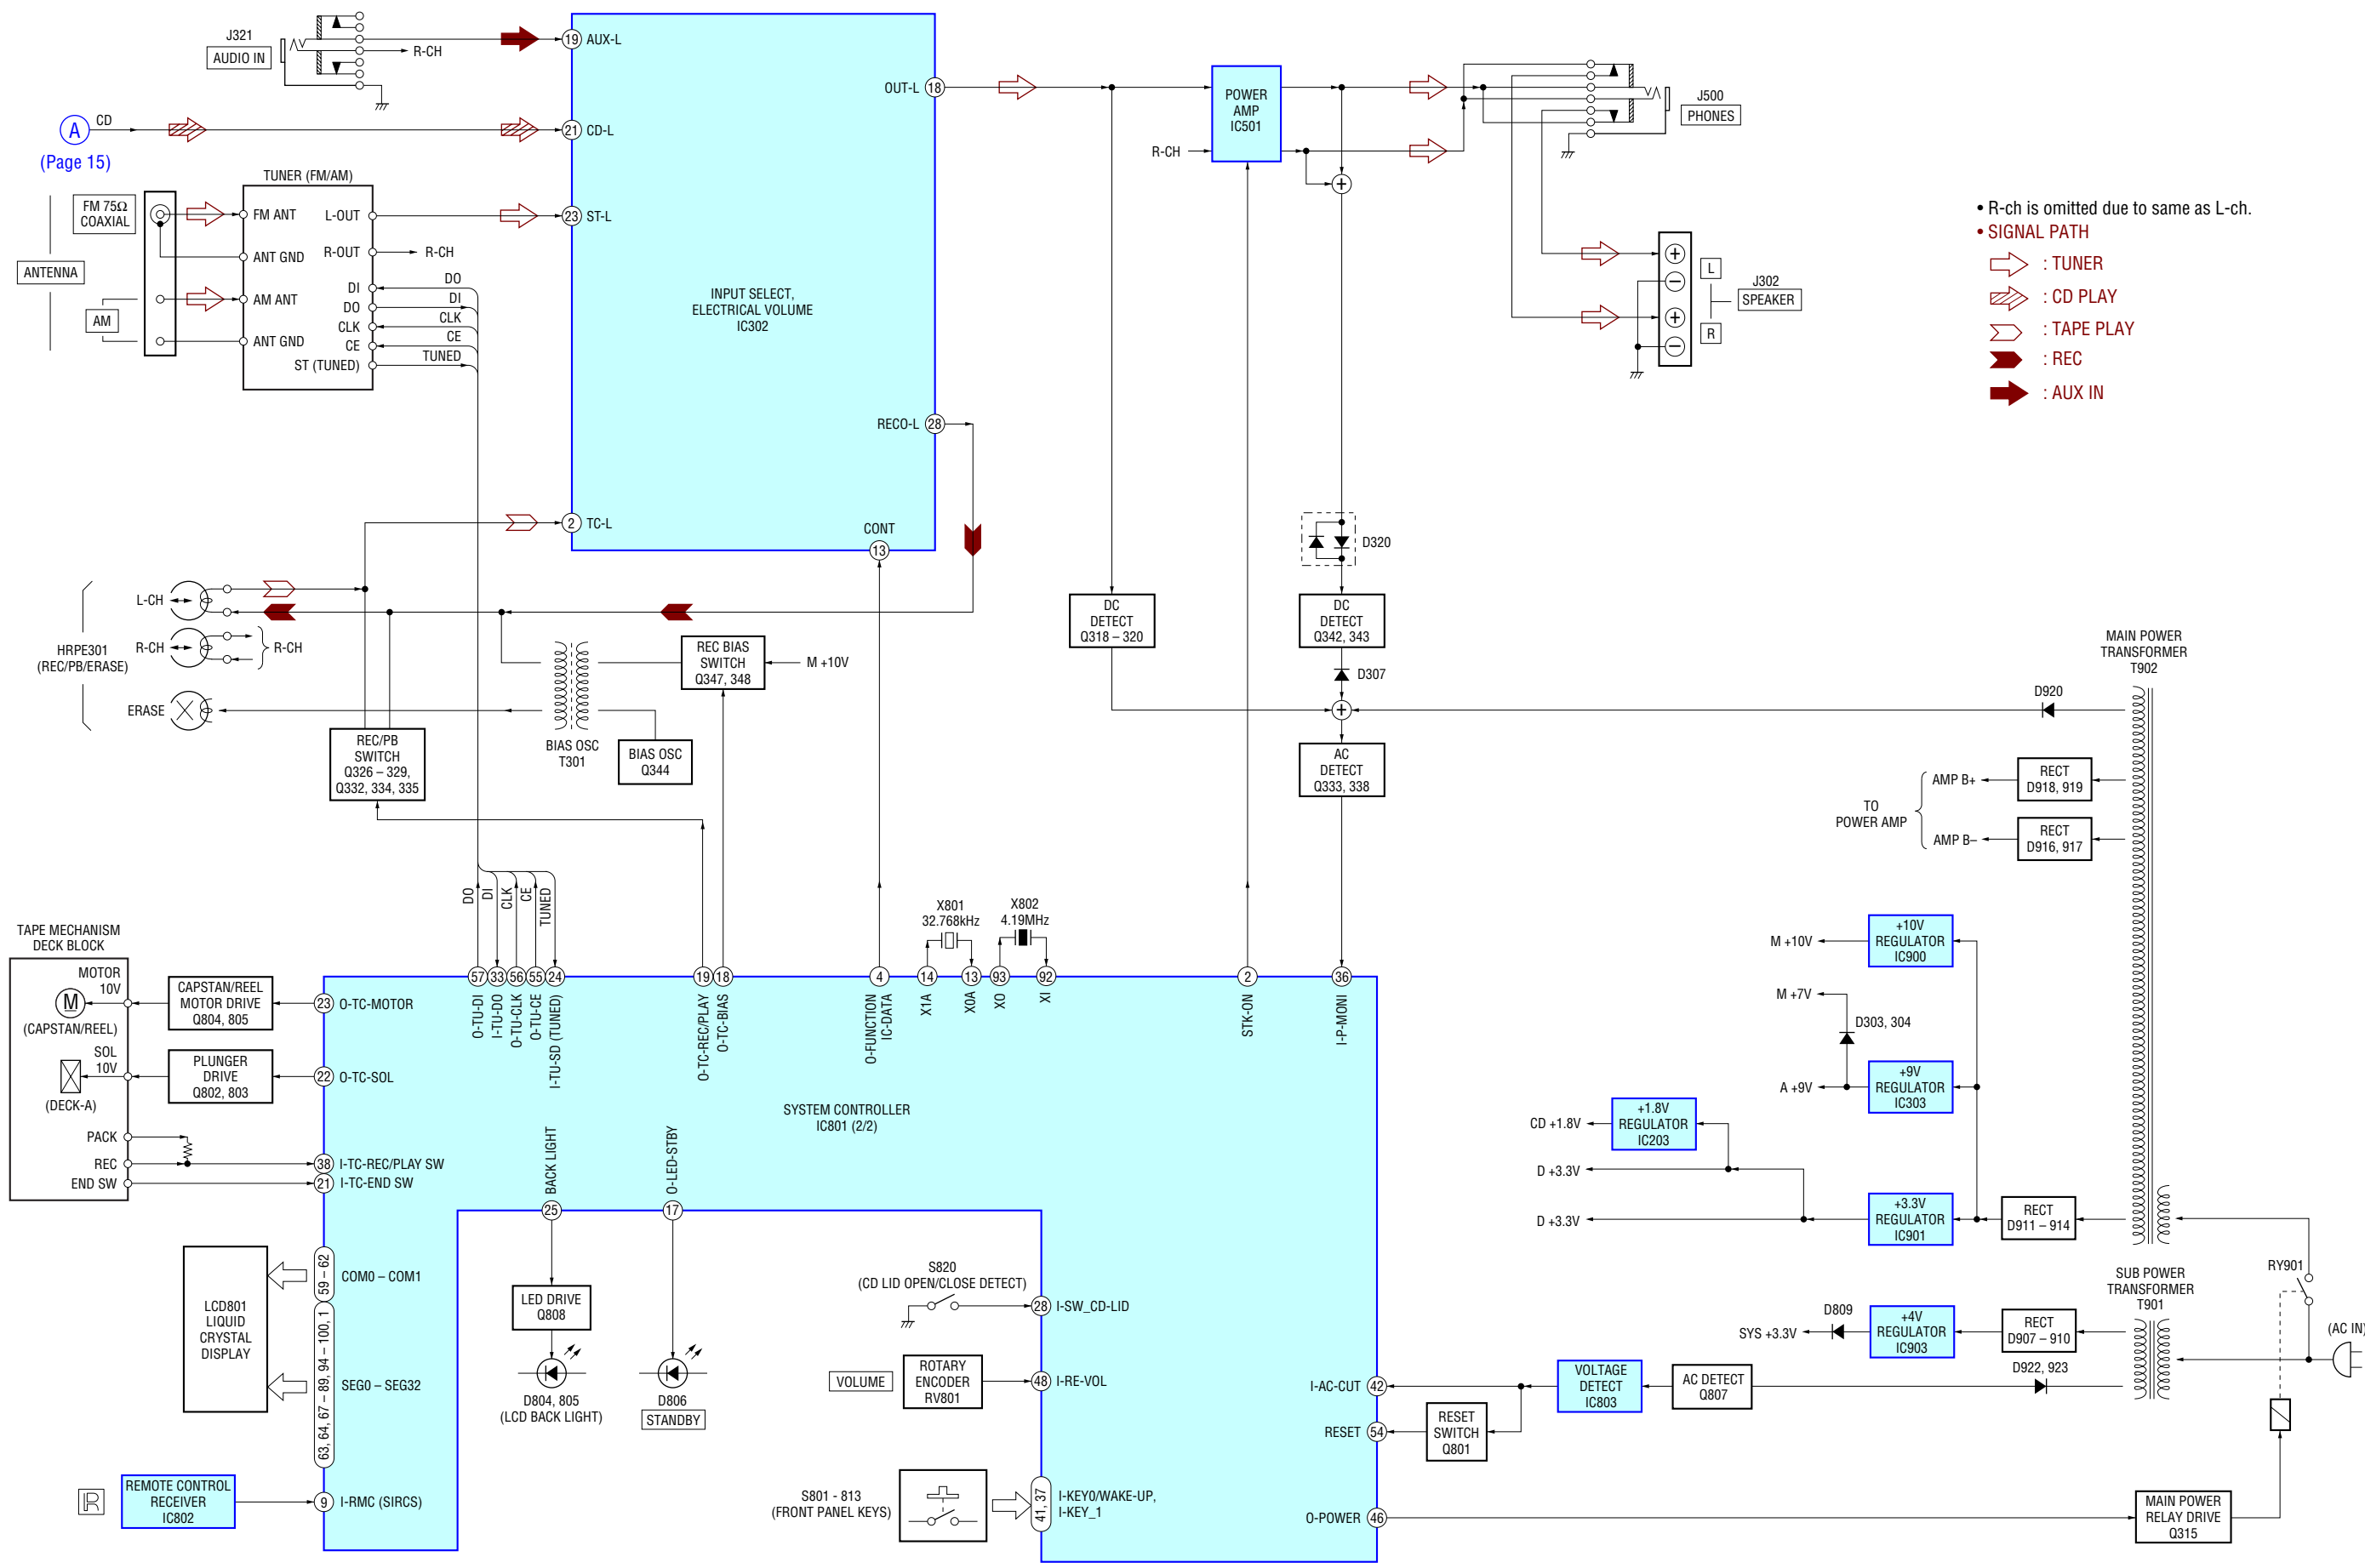


• Note for Printed Wiring Boards and Schematic Diagrams

**Note on Printed Wiring Board:**

- — : parts extracted from the component side.
- : parts extracted from the conductor side.
- △ : internal component.
- : Pattern from the side which enables seeing.  
(The other layers' patterns are not indicated.)

**Caution:**  
Pattern face side: Parts on the pattern face side seen from  
(Conductor Side) the pattern face are indicated.  
Parts face side: Parts on the parts face side seen from  
(Component Side) the parts face are indicated.

• Indication of transistor

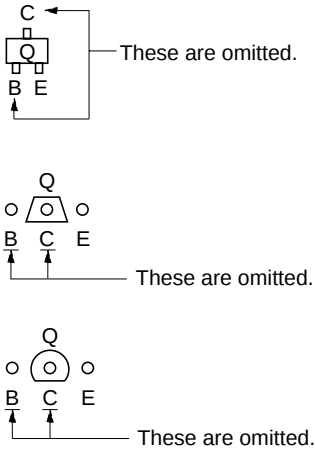


**Note on Schematic Diagram:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted. (p: pF) 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{4}\text{W}$  or less unless otherwise specified.
- △ : internal component.
- ⎓ : nonflammable resistor.
- ⎓ : fusible resistor.
- : panel designation.


**Note:** The components identified by mark △ or dotted line with mark △ are critical for safety.  
Replace only with part number specified.

- : B+ Line.
- : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
  - CD Board —
    - no mark : CD PLAY
  - Other Section —
    - no mark : TUNER
    - ( ) : CD PLAY
    - << >> : TAPE PLAY
    - { } : REC
- Voltages are taken with a VOM (Input impedance 10 M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  - ⇒ : TUNER
  - ⇒ : CD PLAY
  - ⇒ : TAPE PLAY
  - ⇒ : REC
  - ⇒ : AUX IN


• Circuit Boards Location

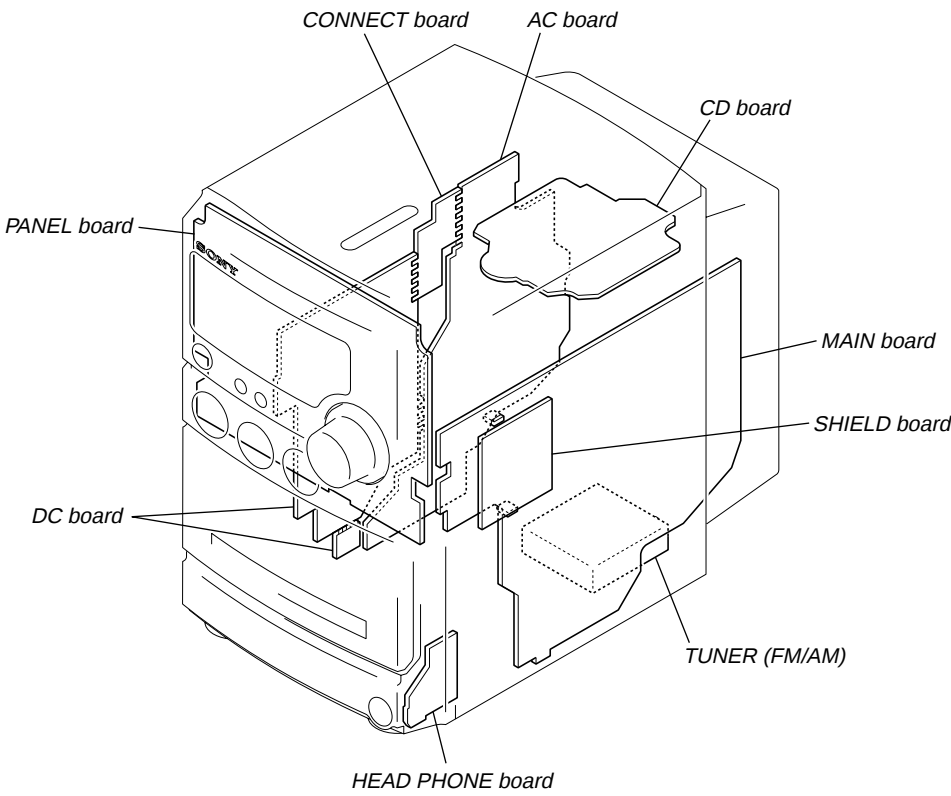



7-3. PRINTED WIRING BOARD – CD Board –    • See page 17 for Circuit Boards Location.     : Uses unleaded solder.

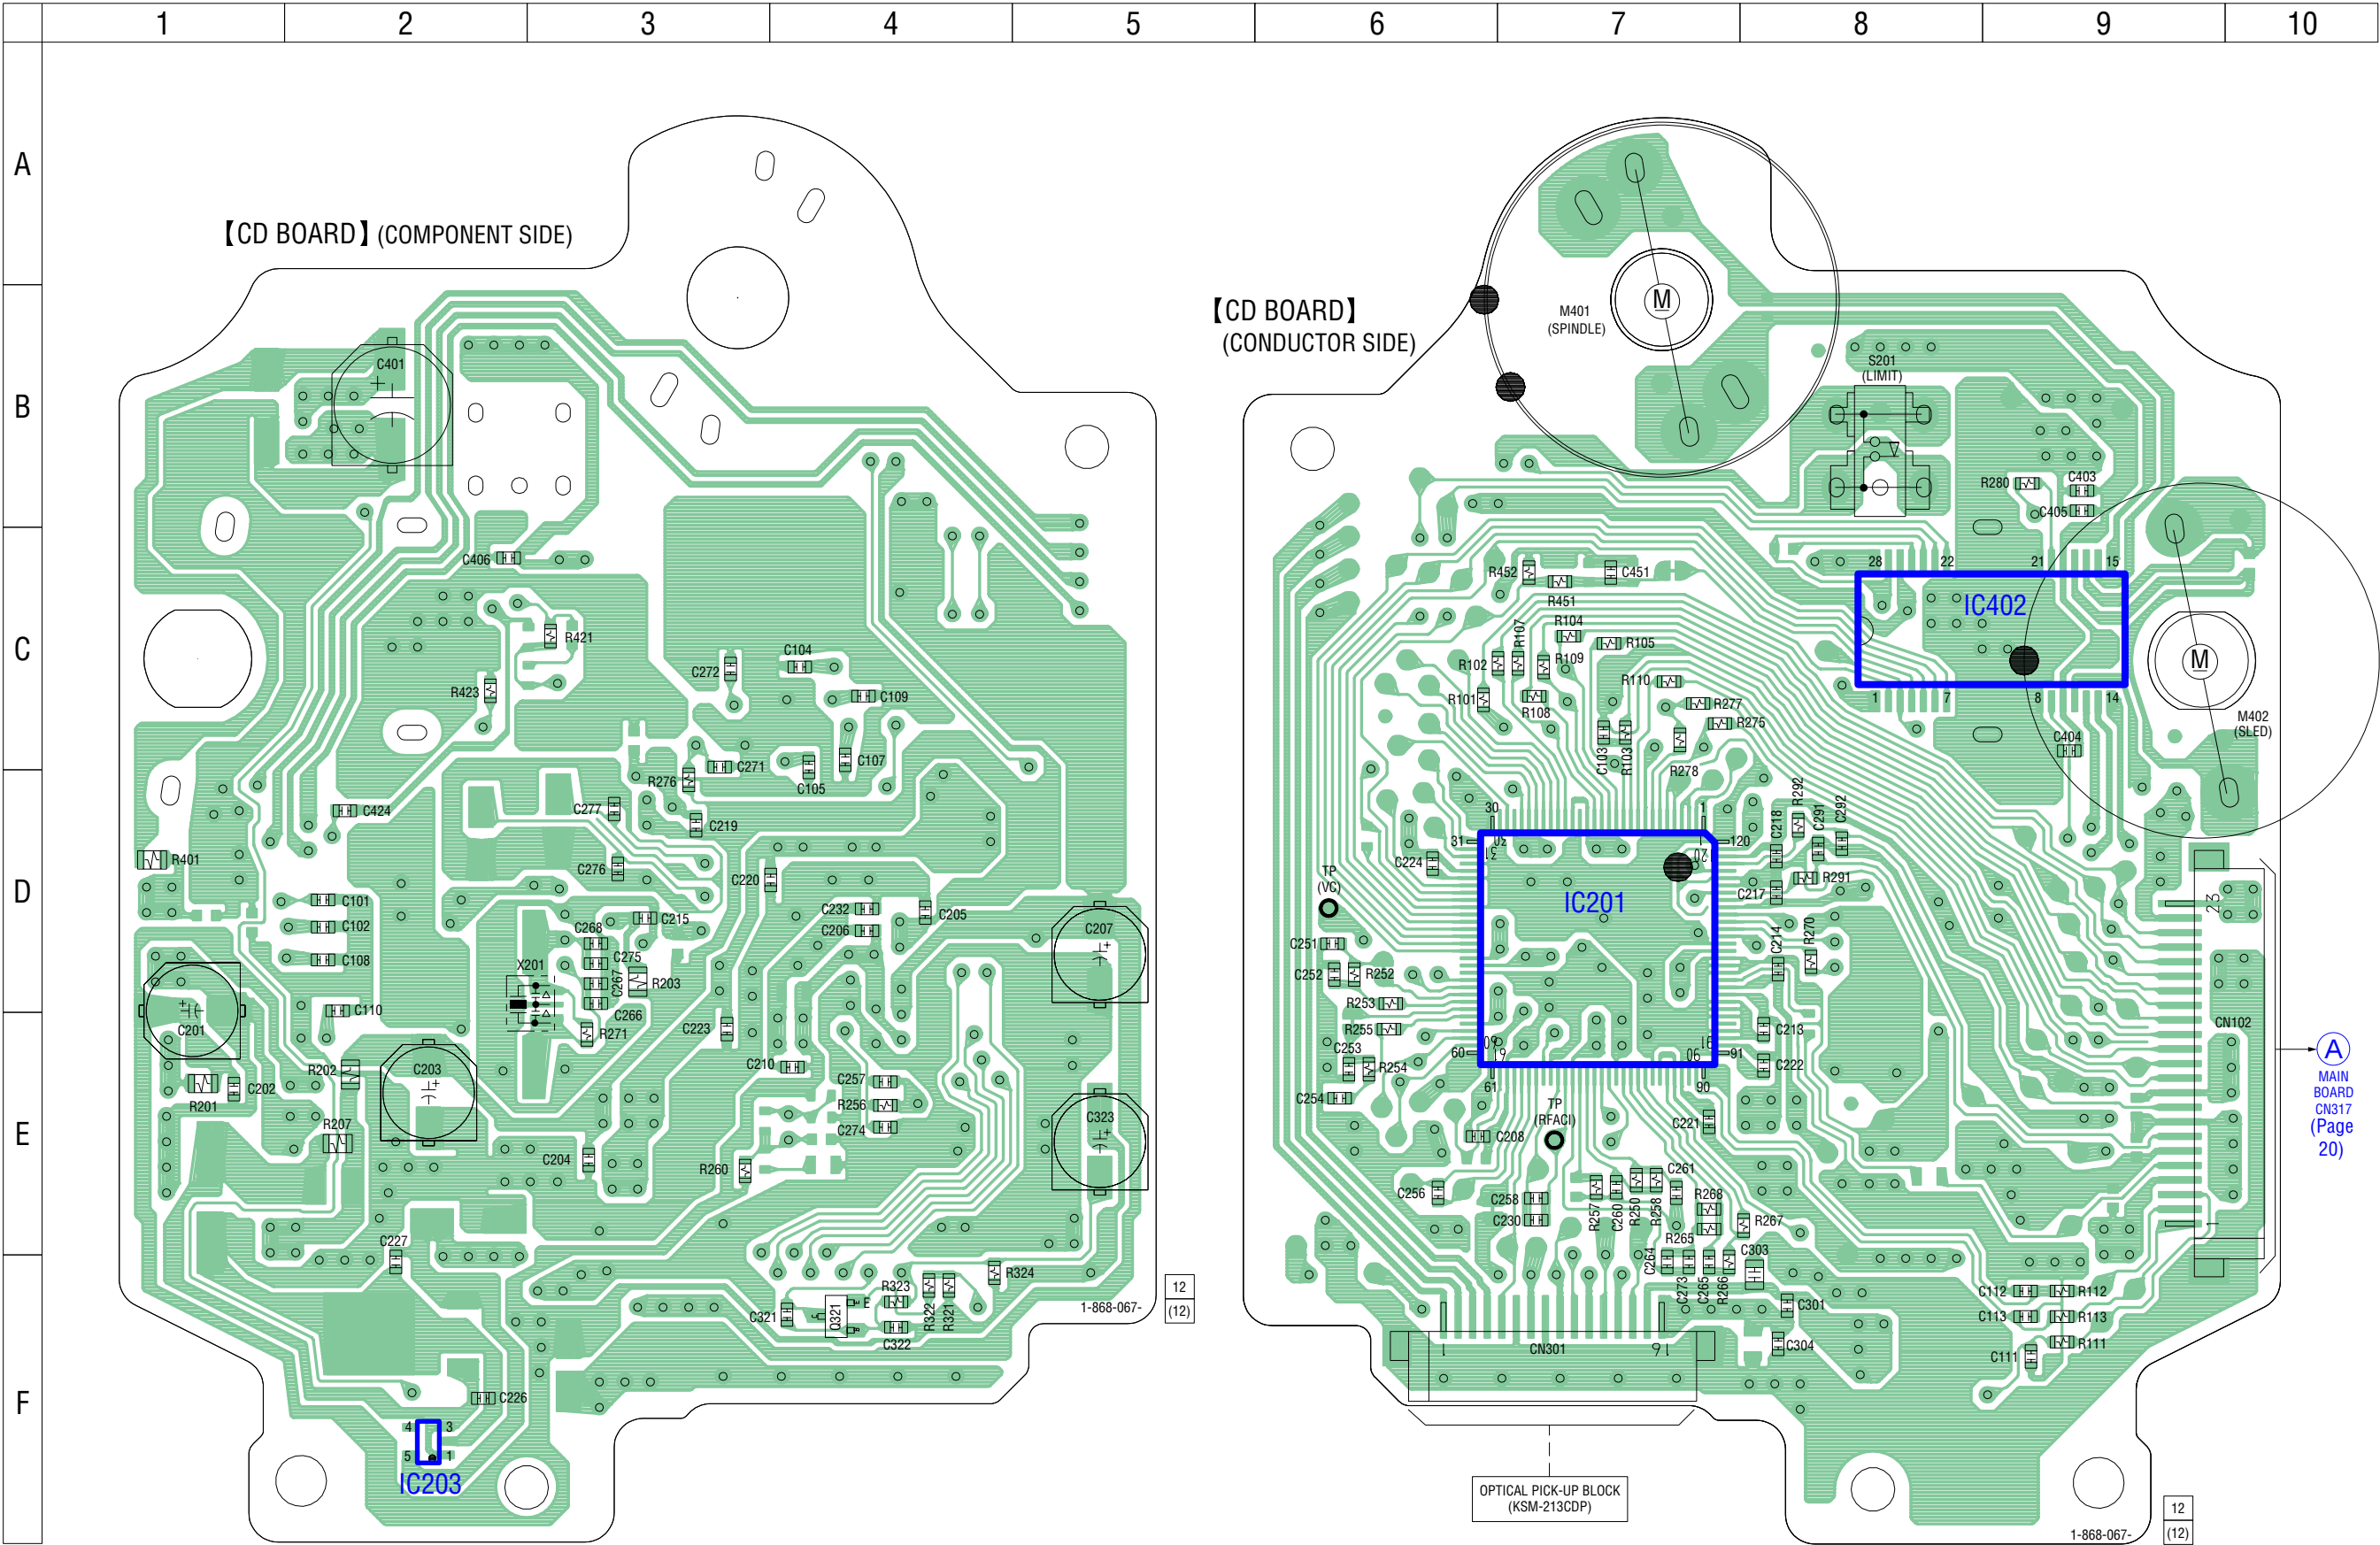

7-4. SCHEMATIC DIAGRAM – CD Board – • See page 23 for Waveforms. • See page 23 for IC Block Diagrams. • See page 29 for IC Pin Function Description.

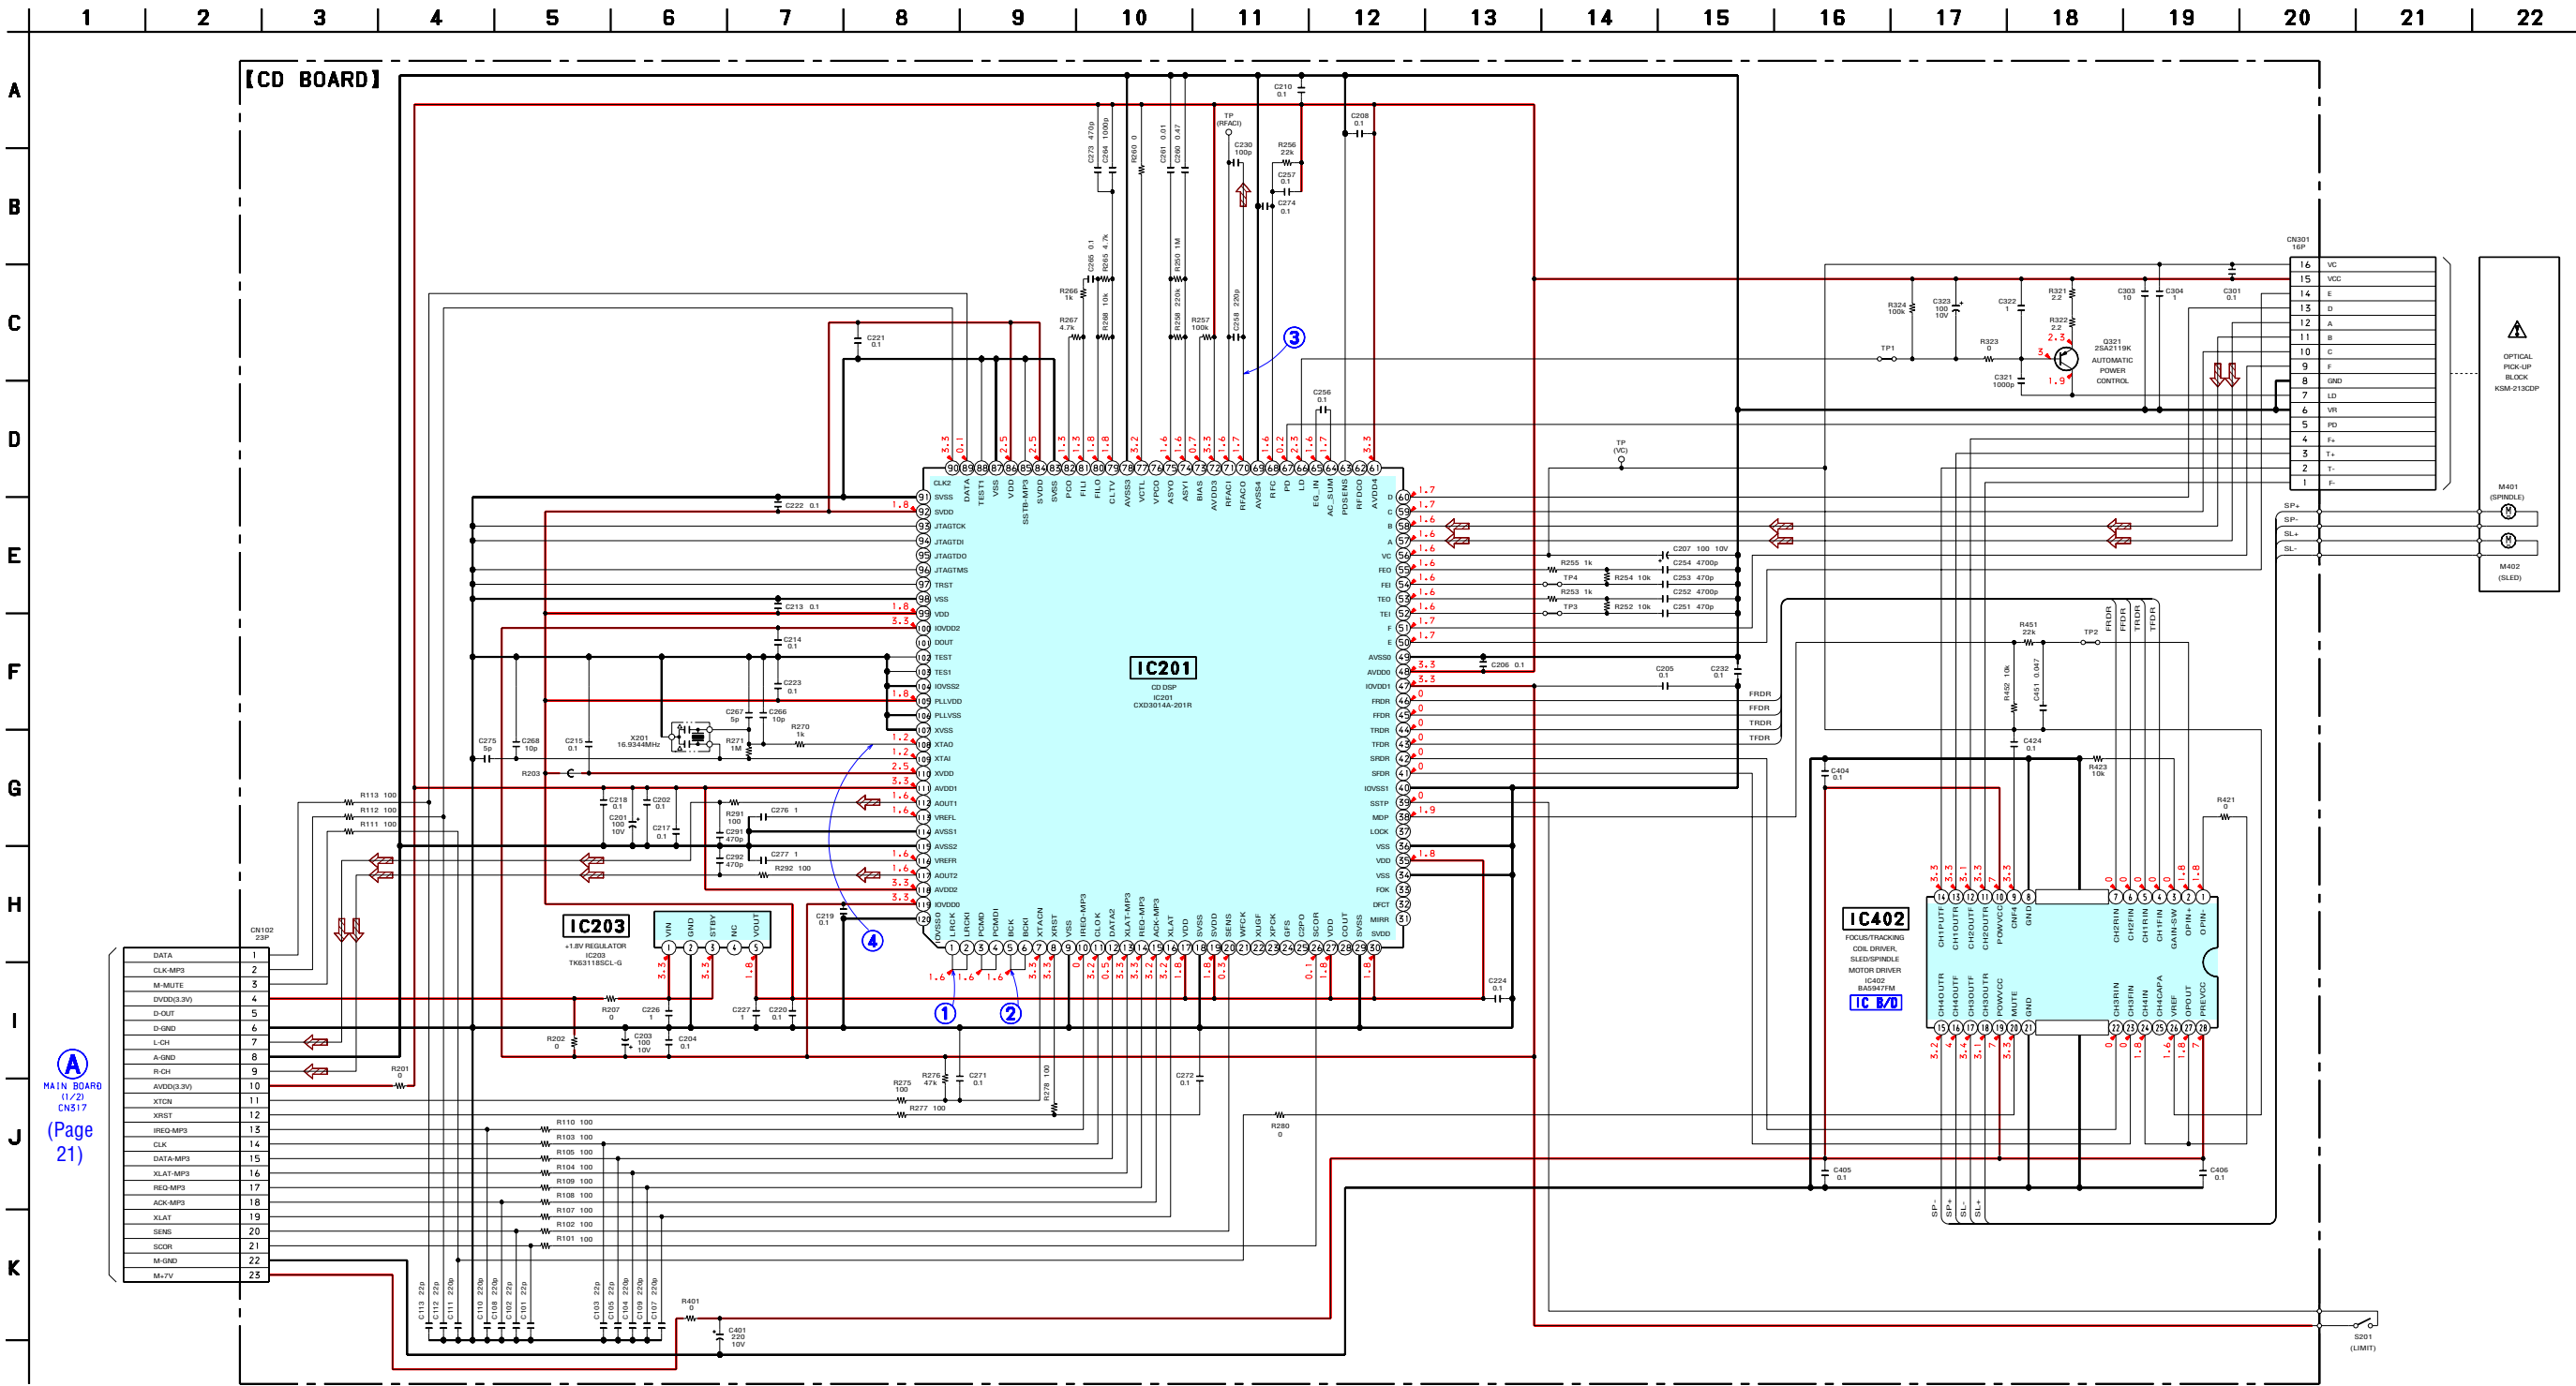

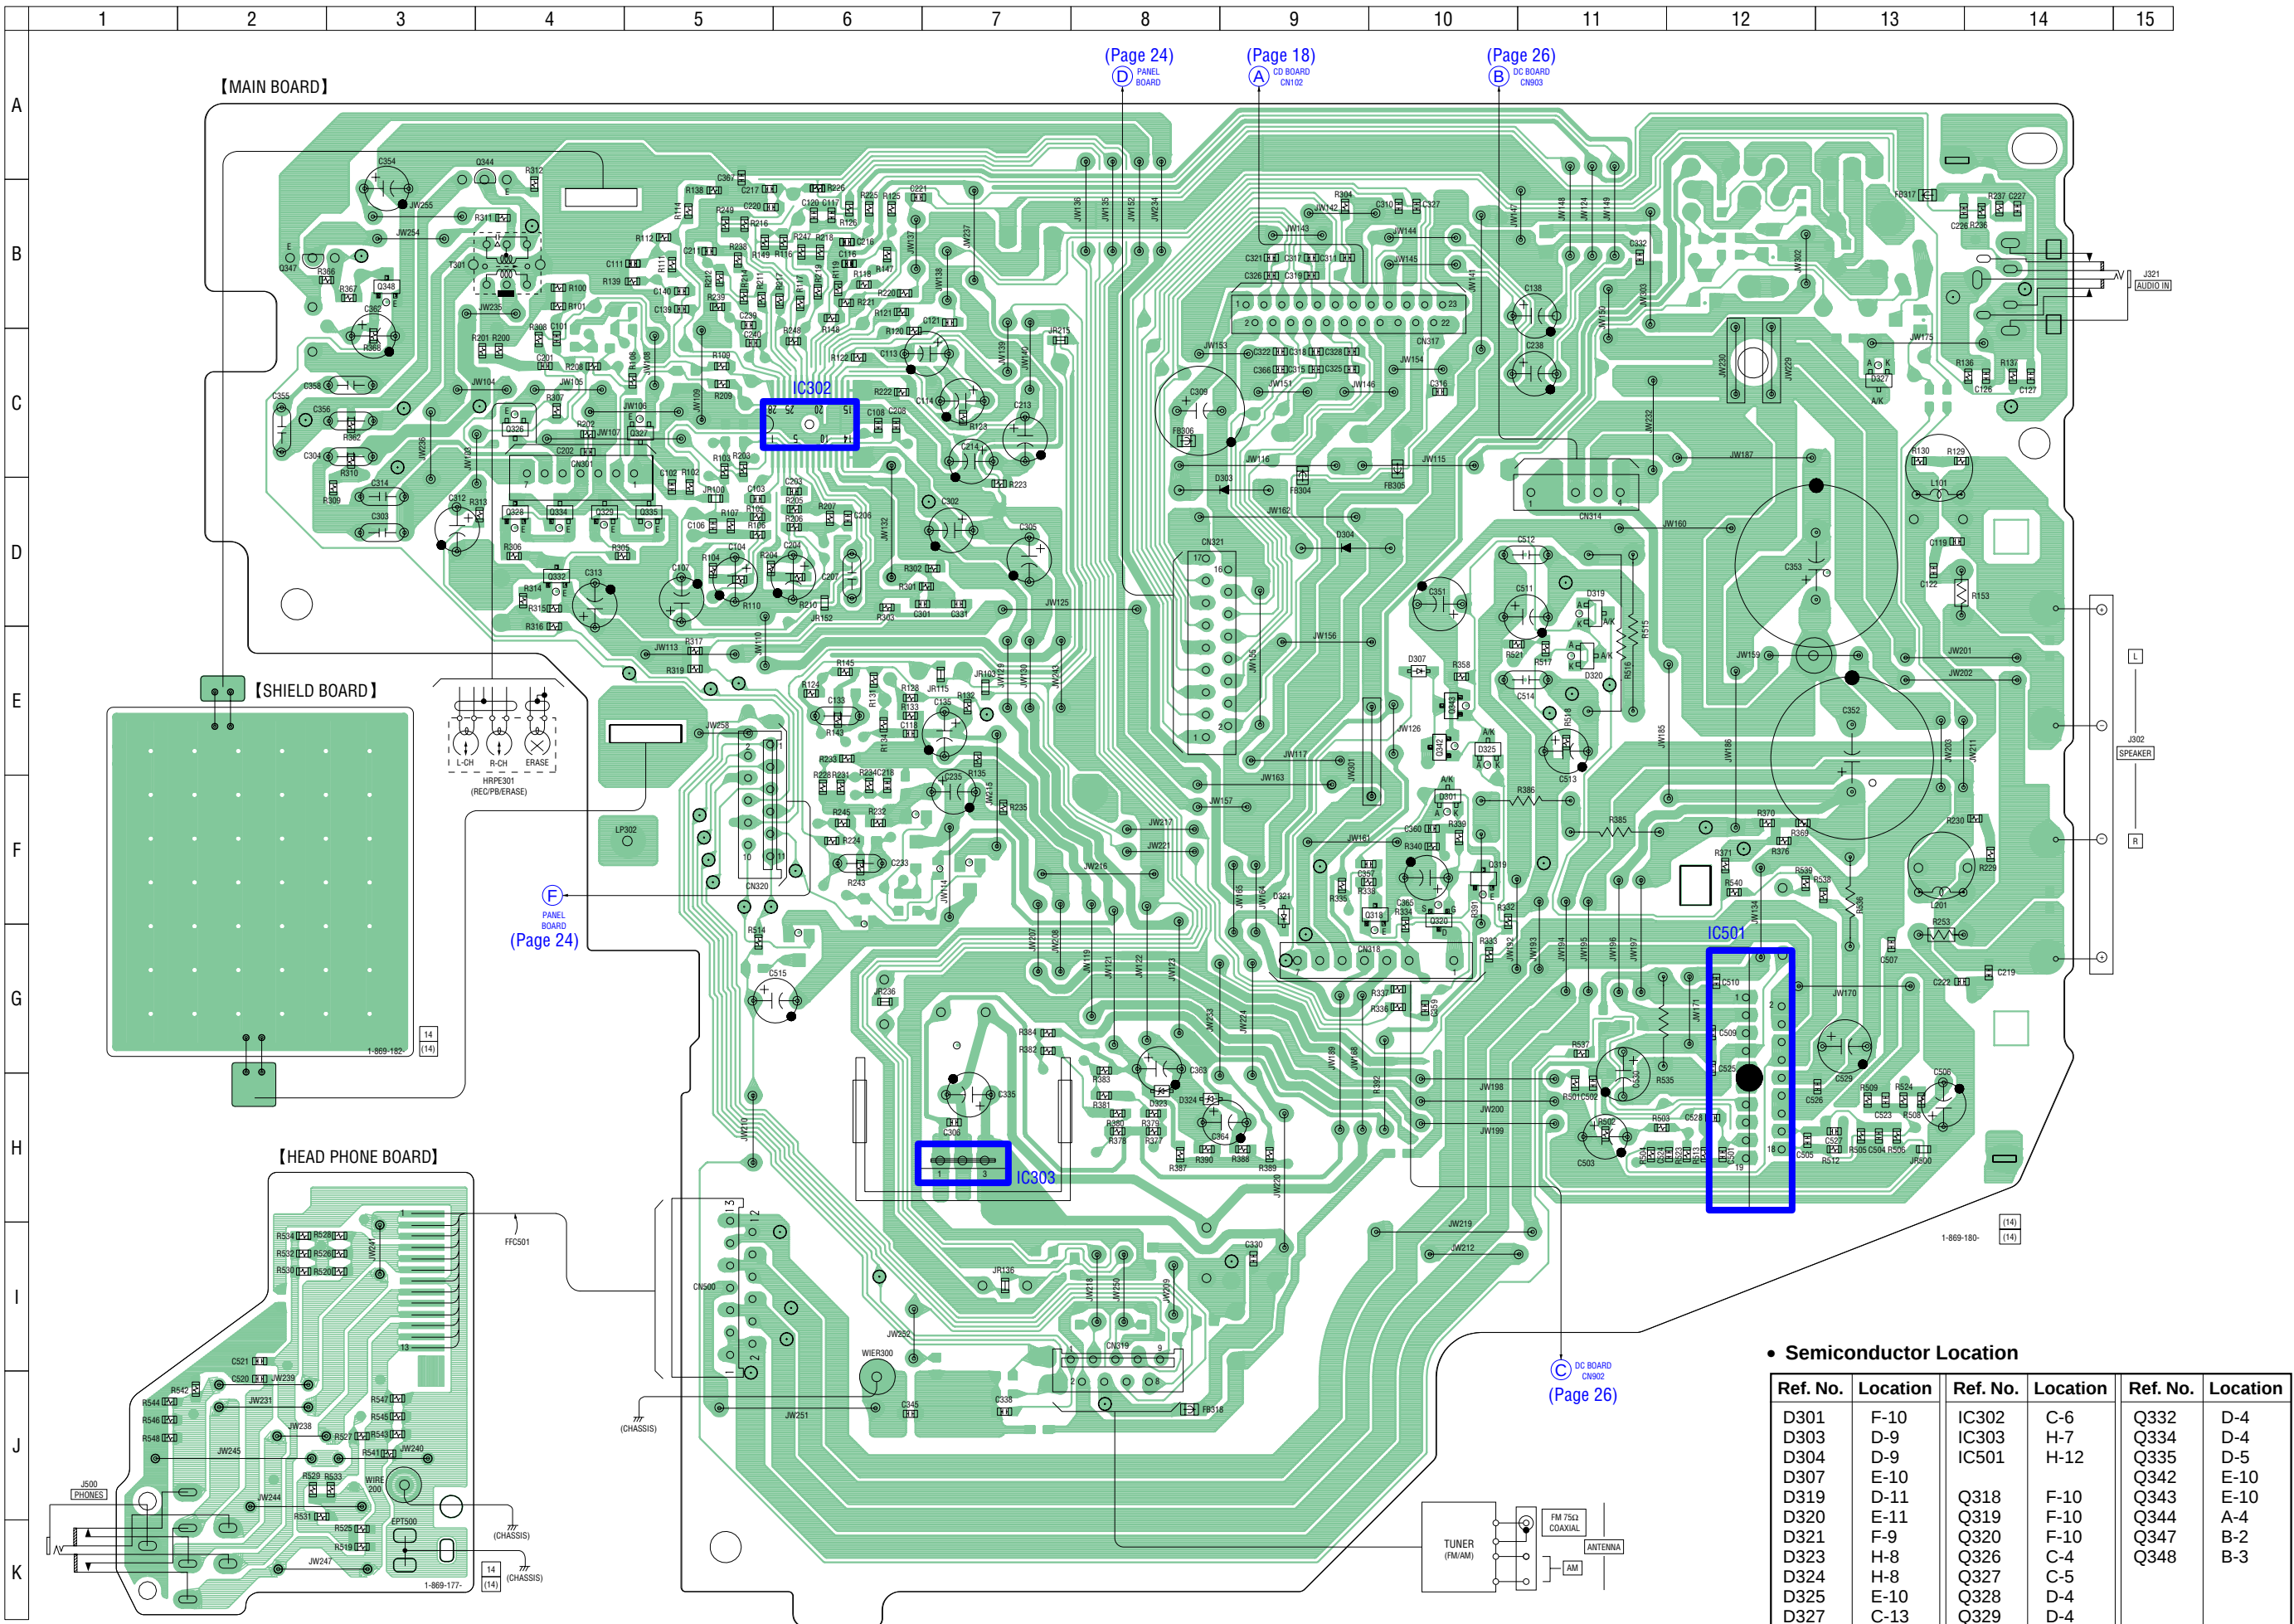

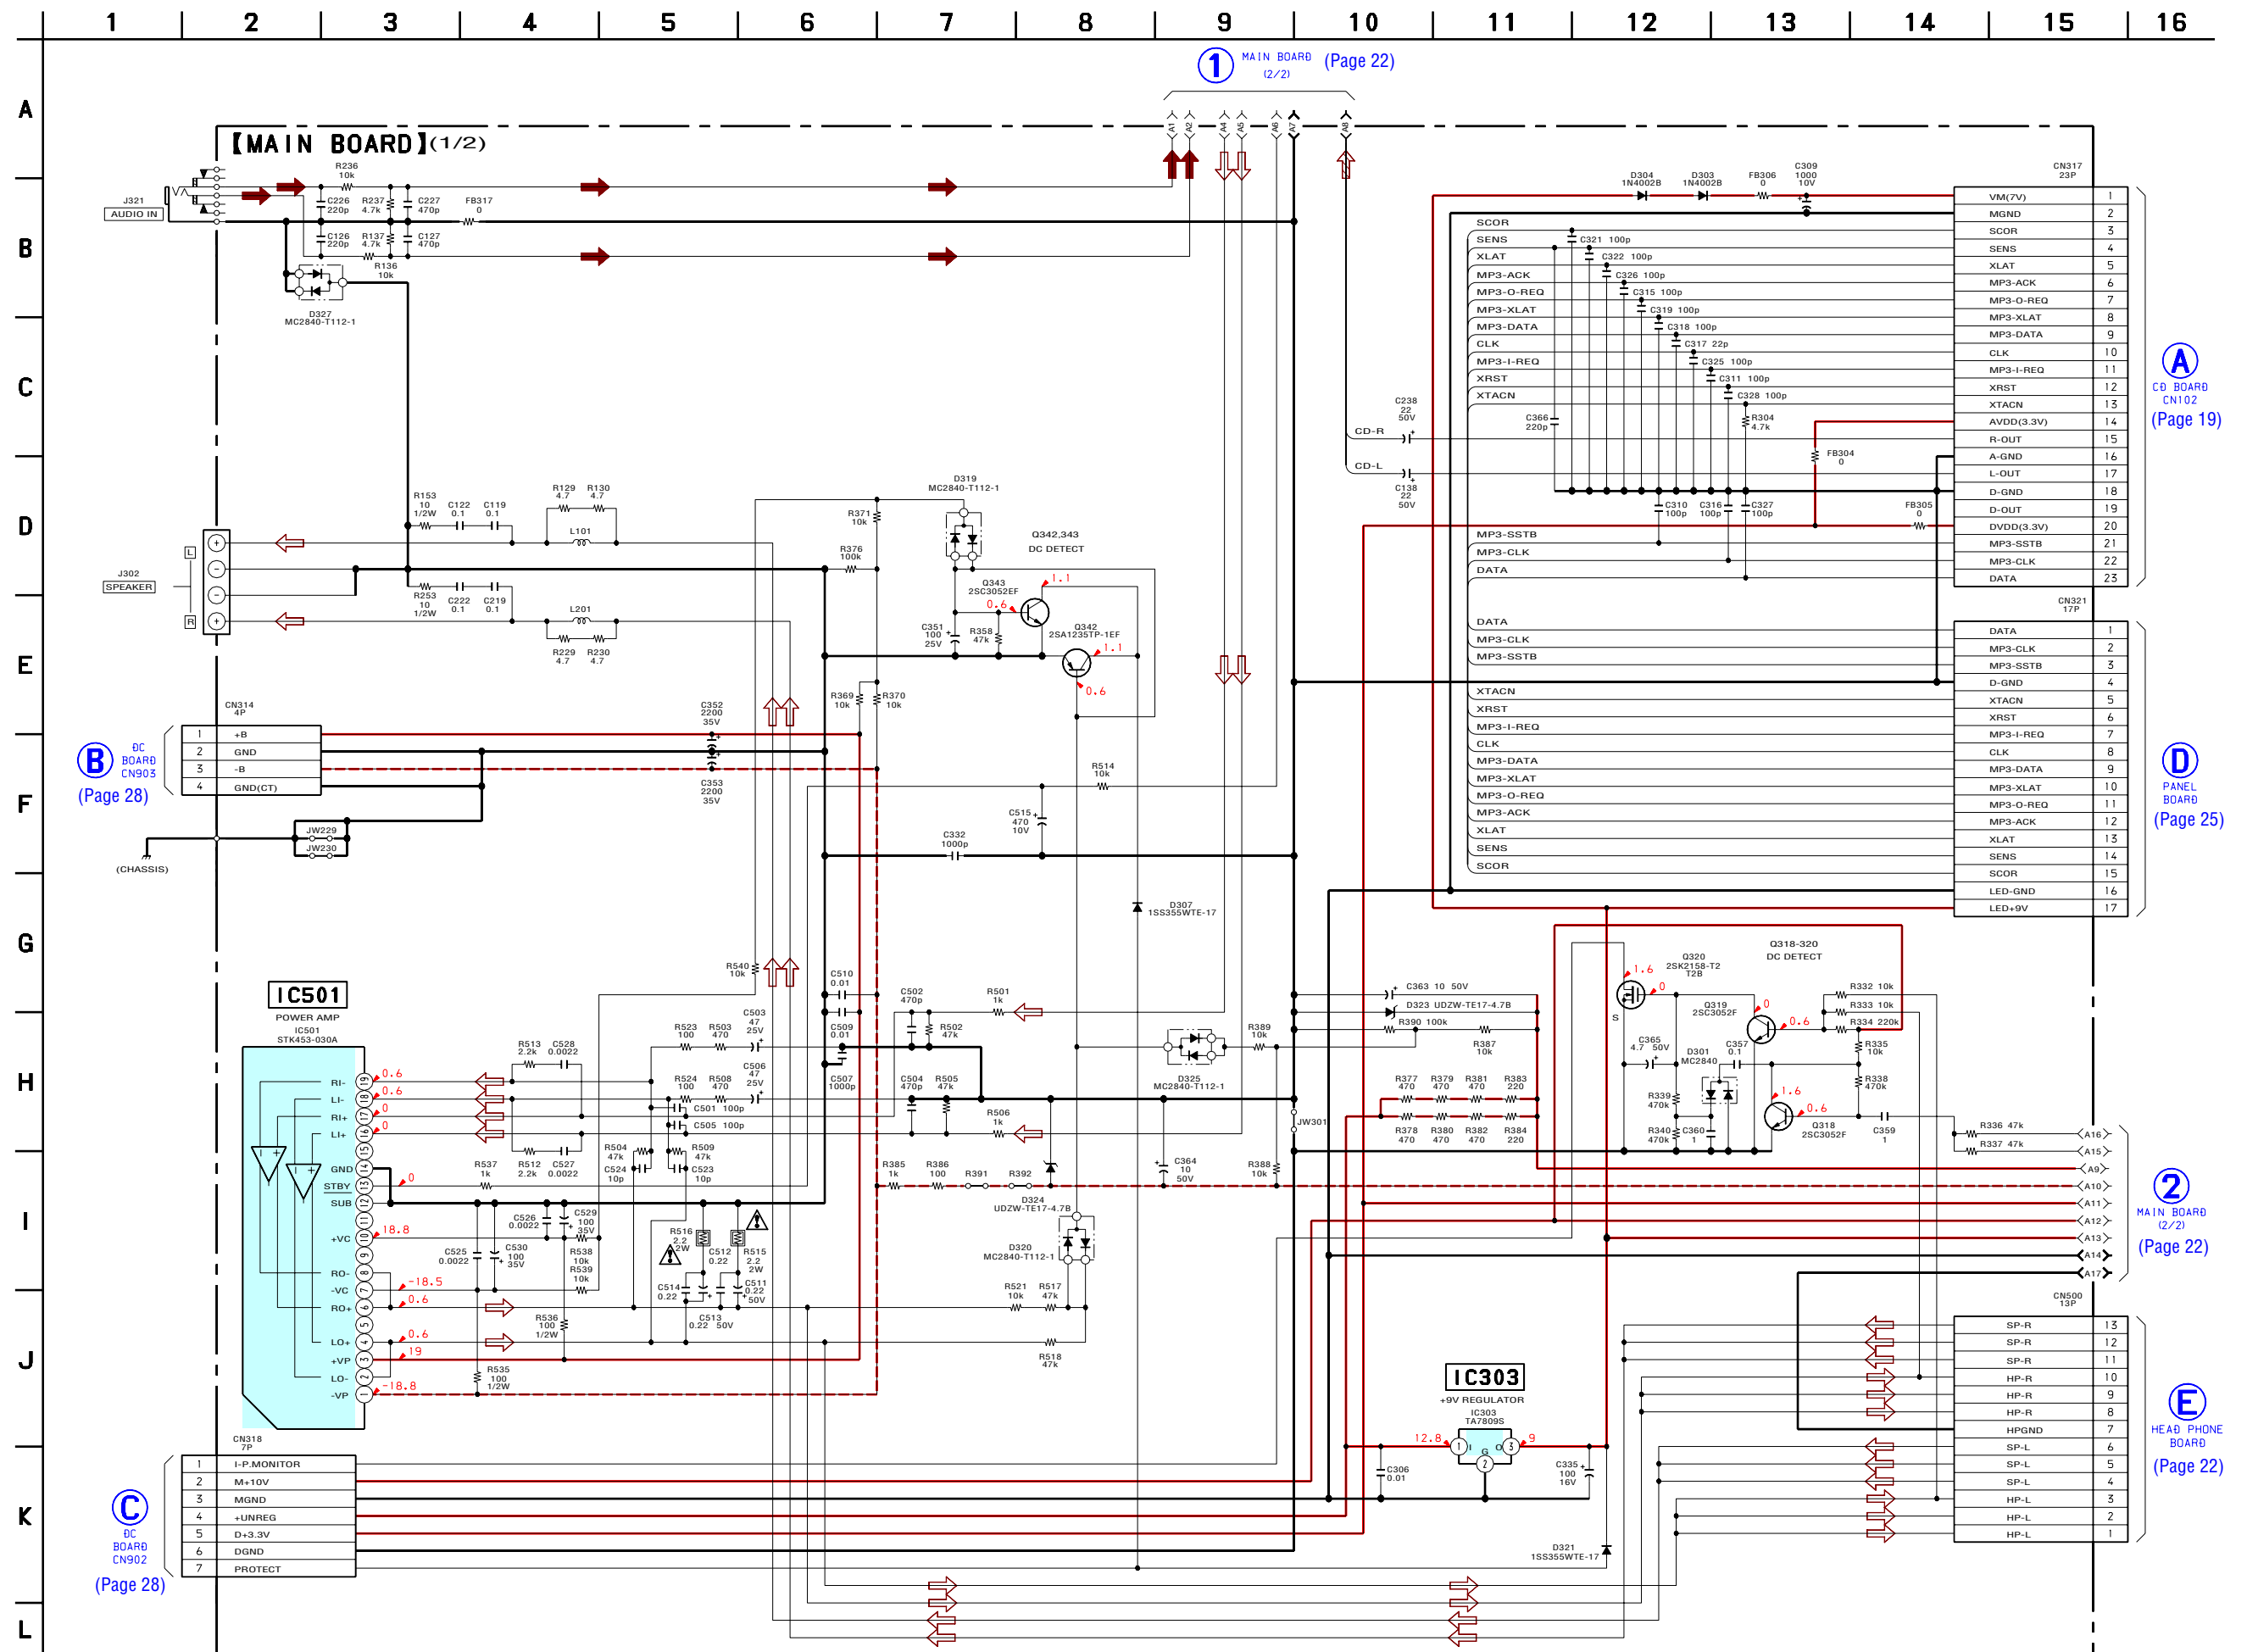


## 22 22




• Waveforms


– CD Board –

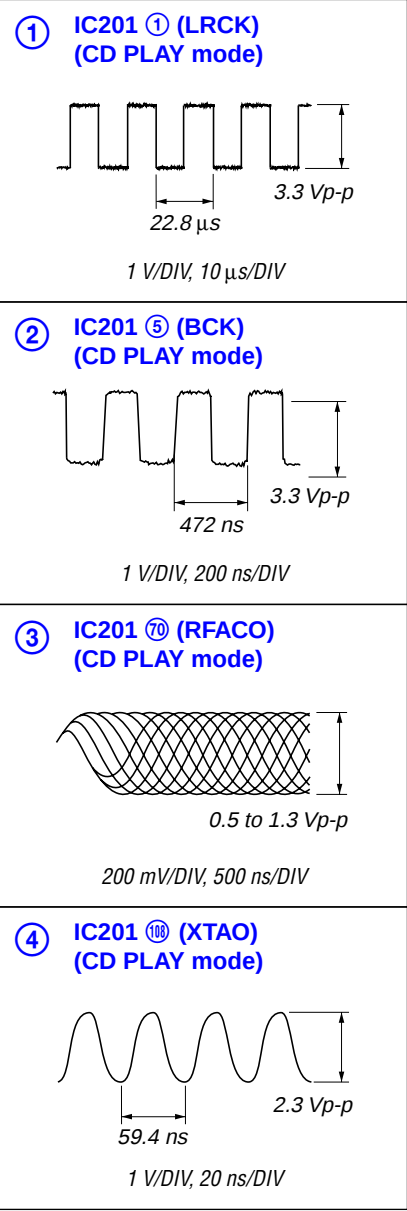

– MAIN Board –

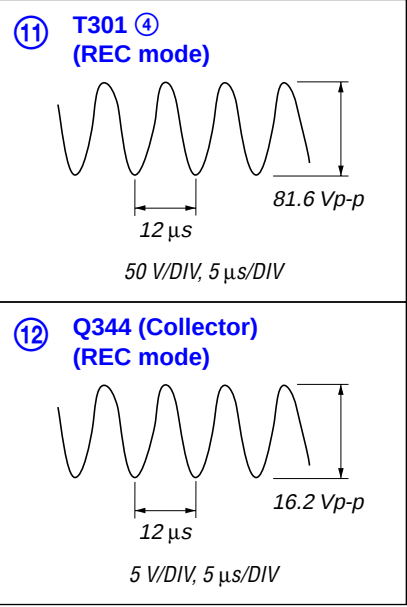


– PANEL Board –

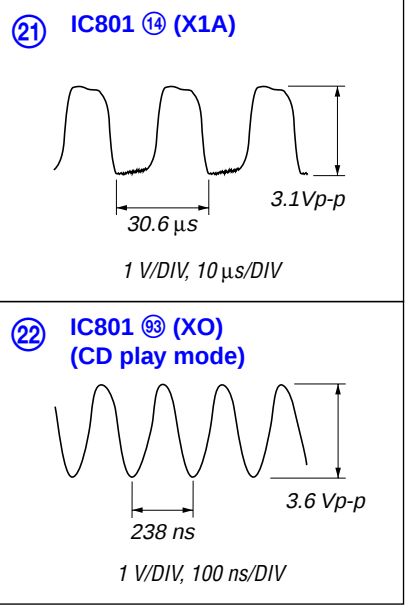

• IC Block Diagrams


– CD Board –

IC402 BA5947FM-E2

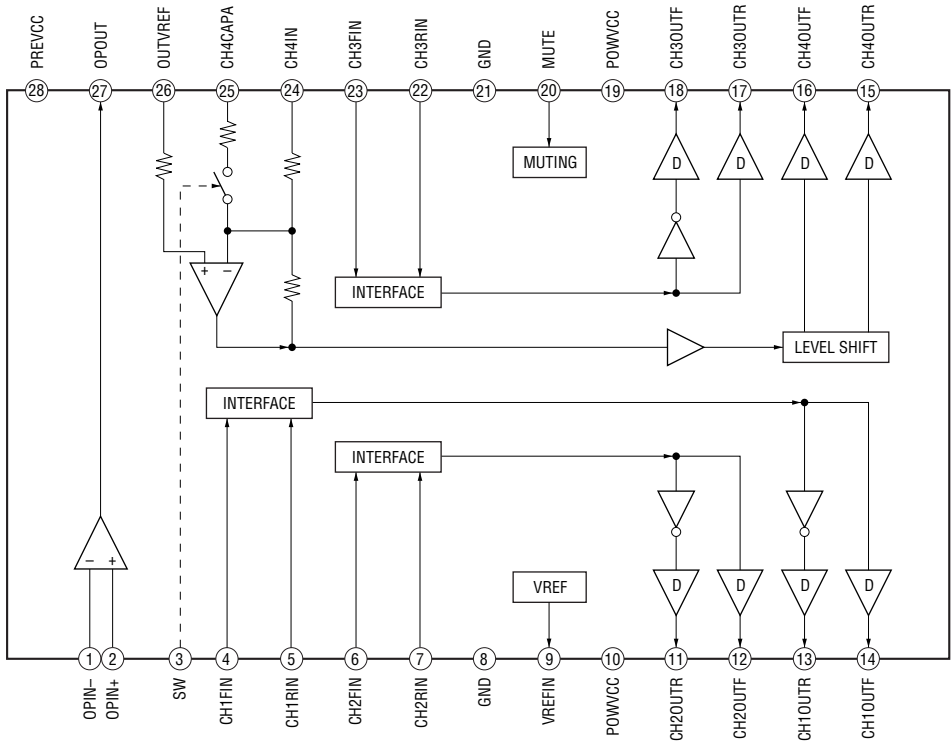

– MAIN Board –


IC302 BD3881FV

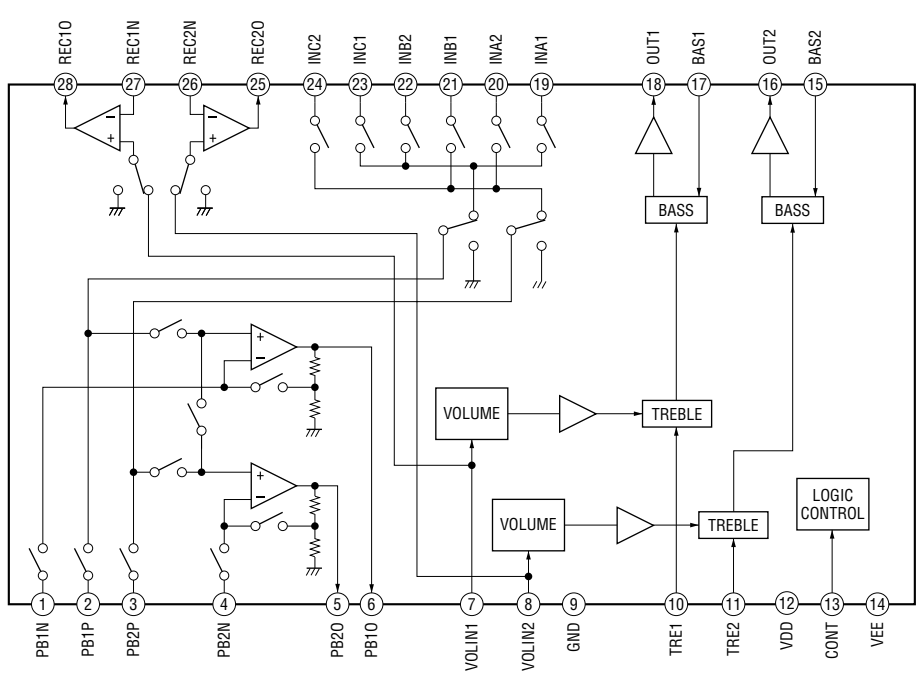


**7-8. PRINTED WIRING BOARD – PANEL Board – • See page 17 for Circuit Boards Location.**

**4** : Uses unleaded solder.

| Ref. No. | Location |
|----------|----------|
| D801     | G-7      |
| D804     | C-4      |
| D805     | C-4      |
| D806     | F-8      |
| D807     | C-9      |
| D809     | D-9      |
| IC801    | D-7      |
| IC802    | E-9      |
| IC803    | D-9      |
| Q801     | C-8      |
| Q802     | G-5      |
| Q803     | H-5      |
| Q804     | G-5      |
| Q805     | G-5      |
| Q807     | B-8      |
| Q808     | C-4      |

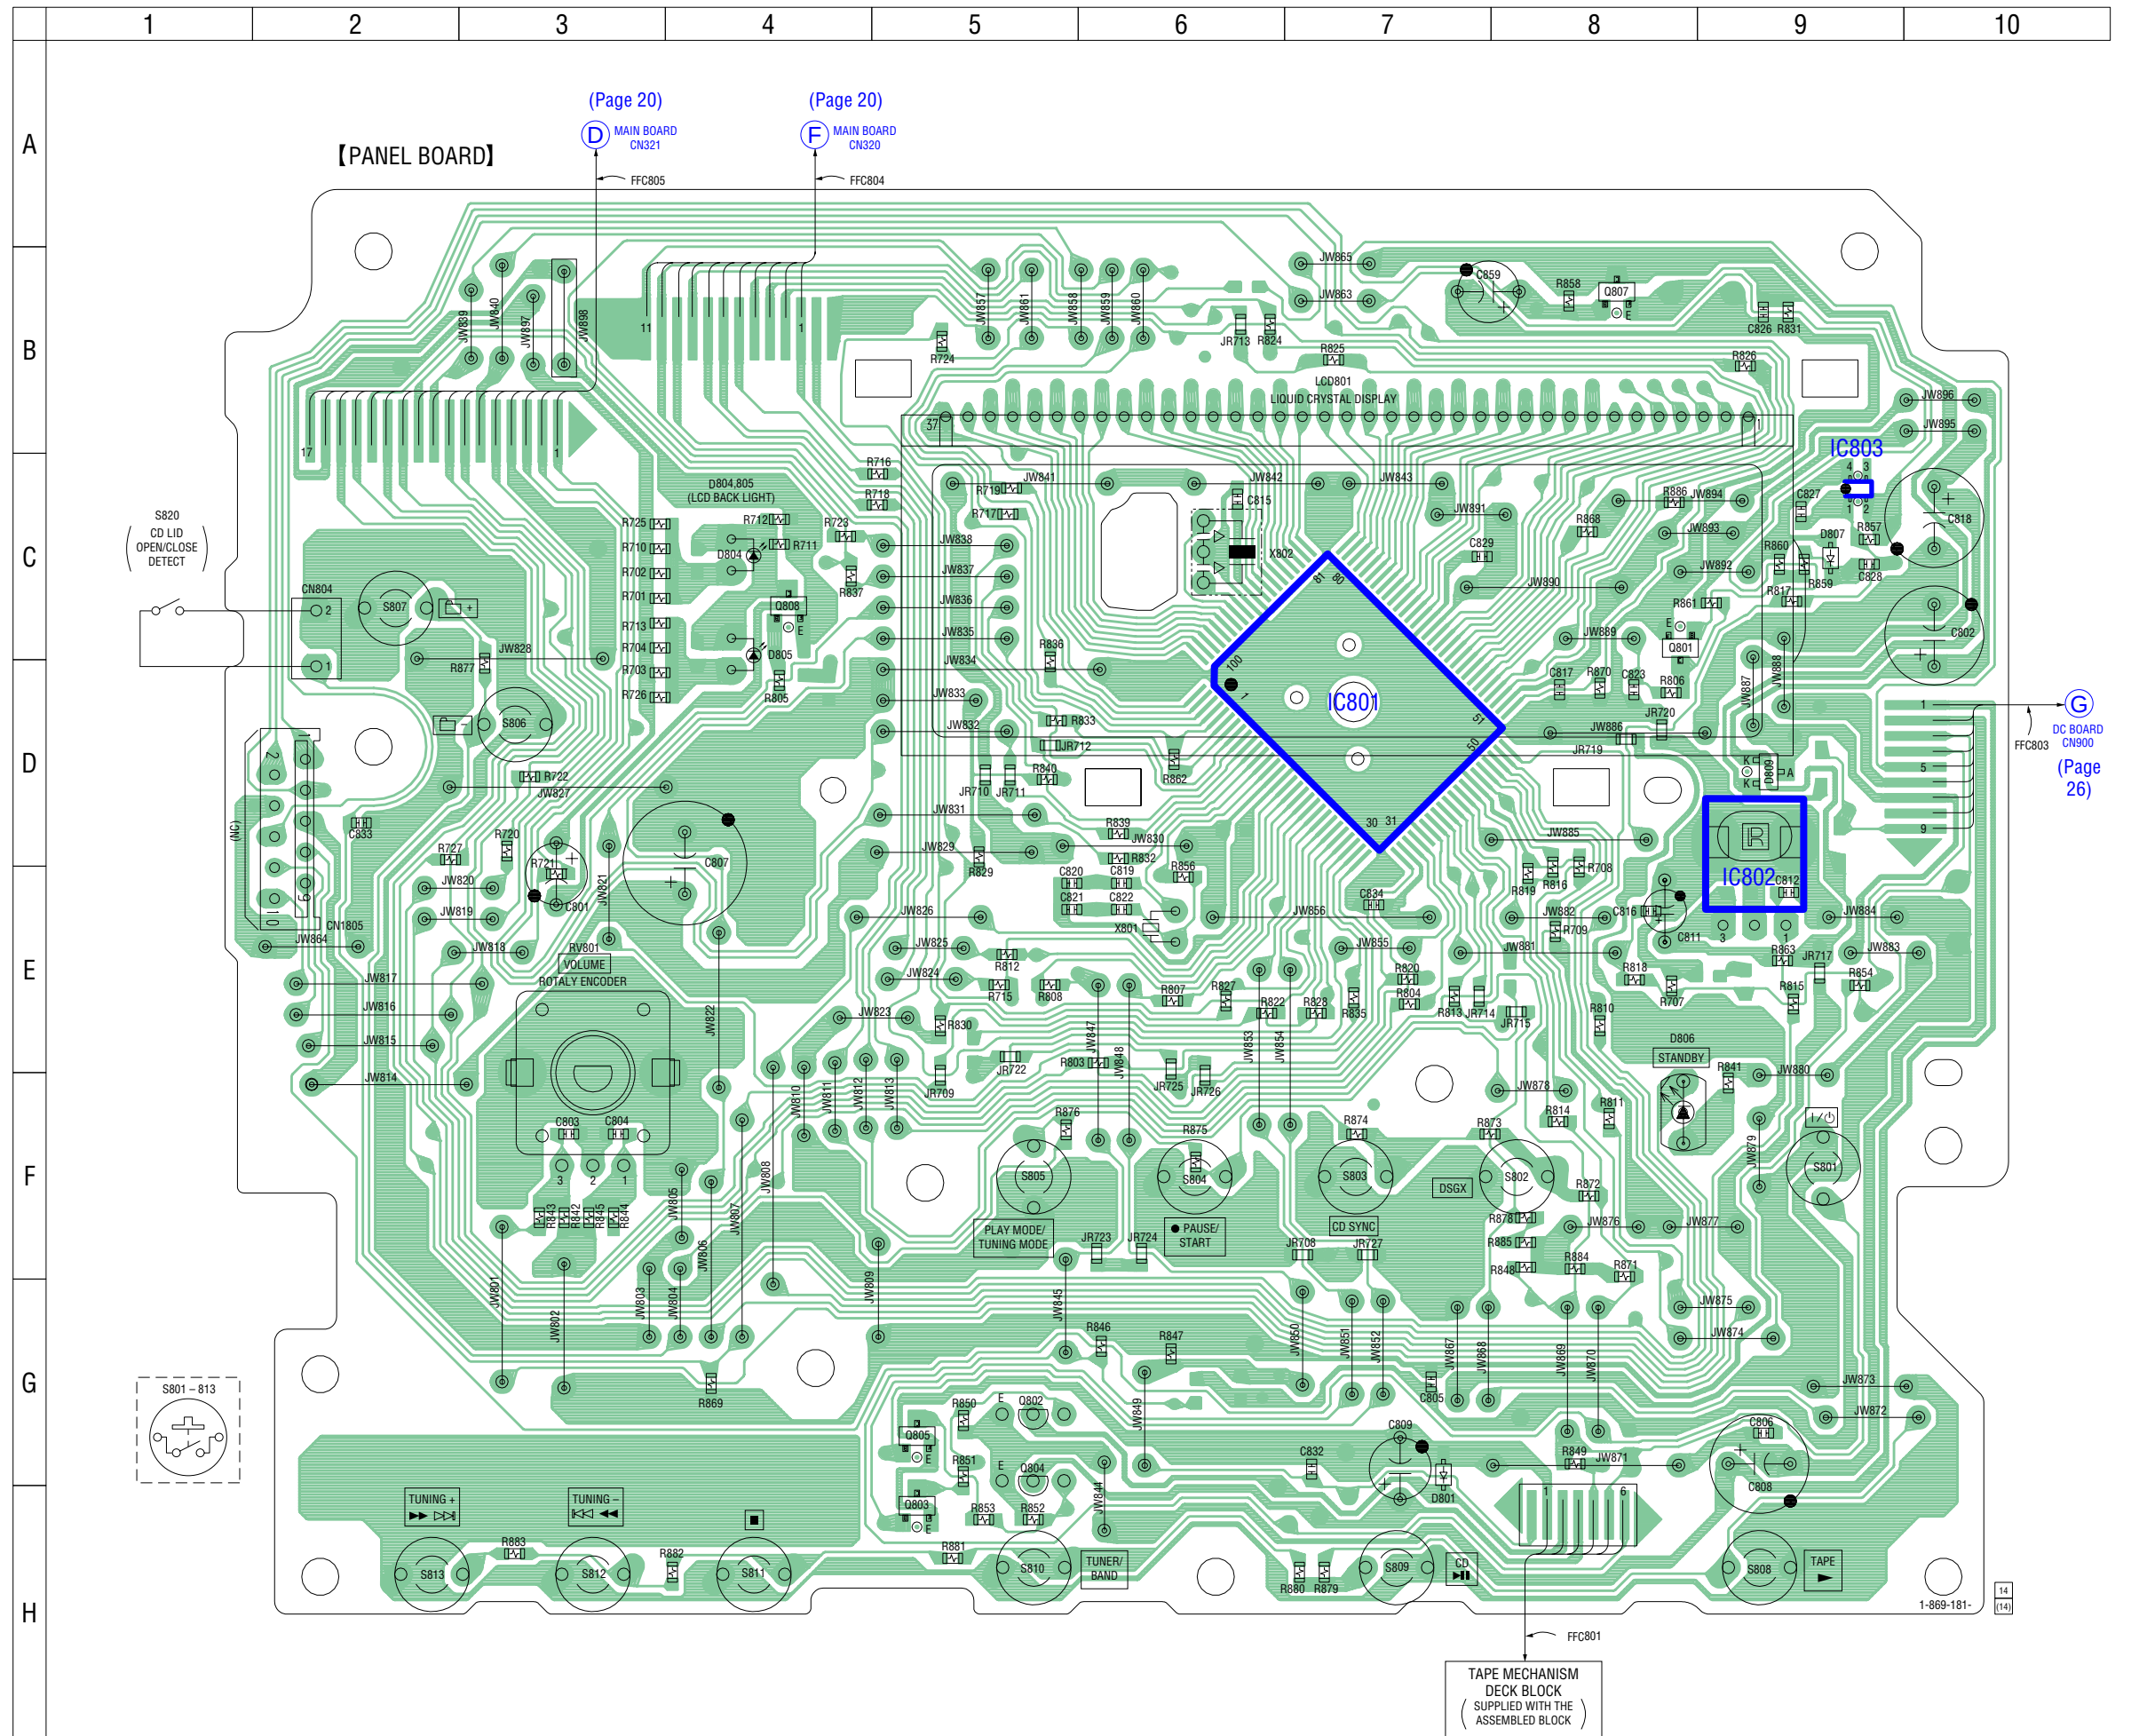


7-9. SCHEMATIC DIAGRAM – PANEL Board – • See page 23 for Waveforms. • See page 29 for IC Pin Function Description.

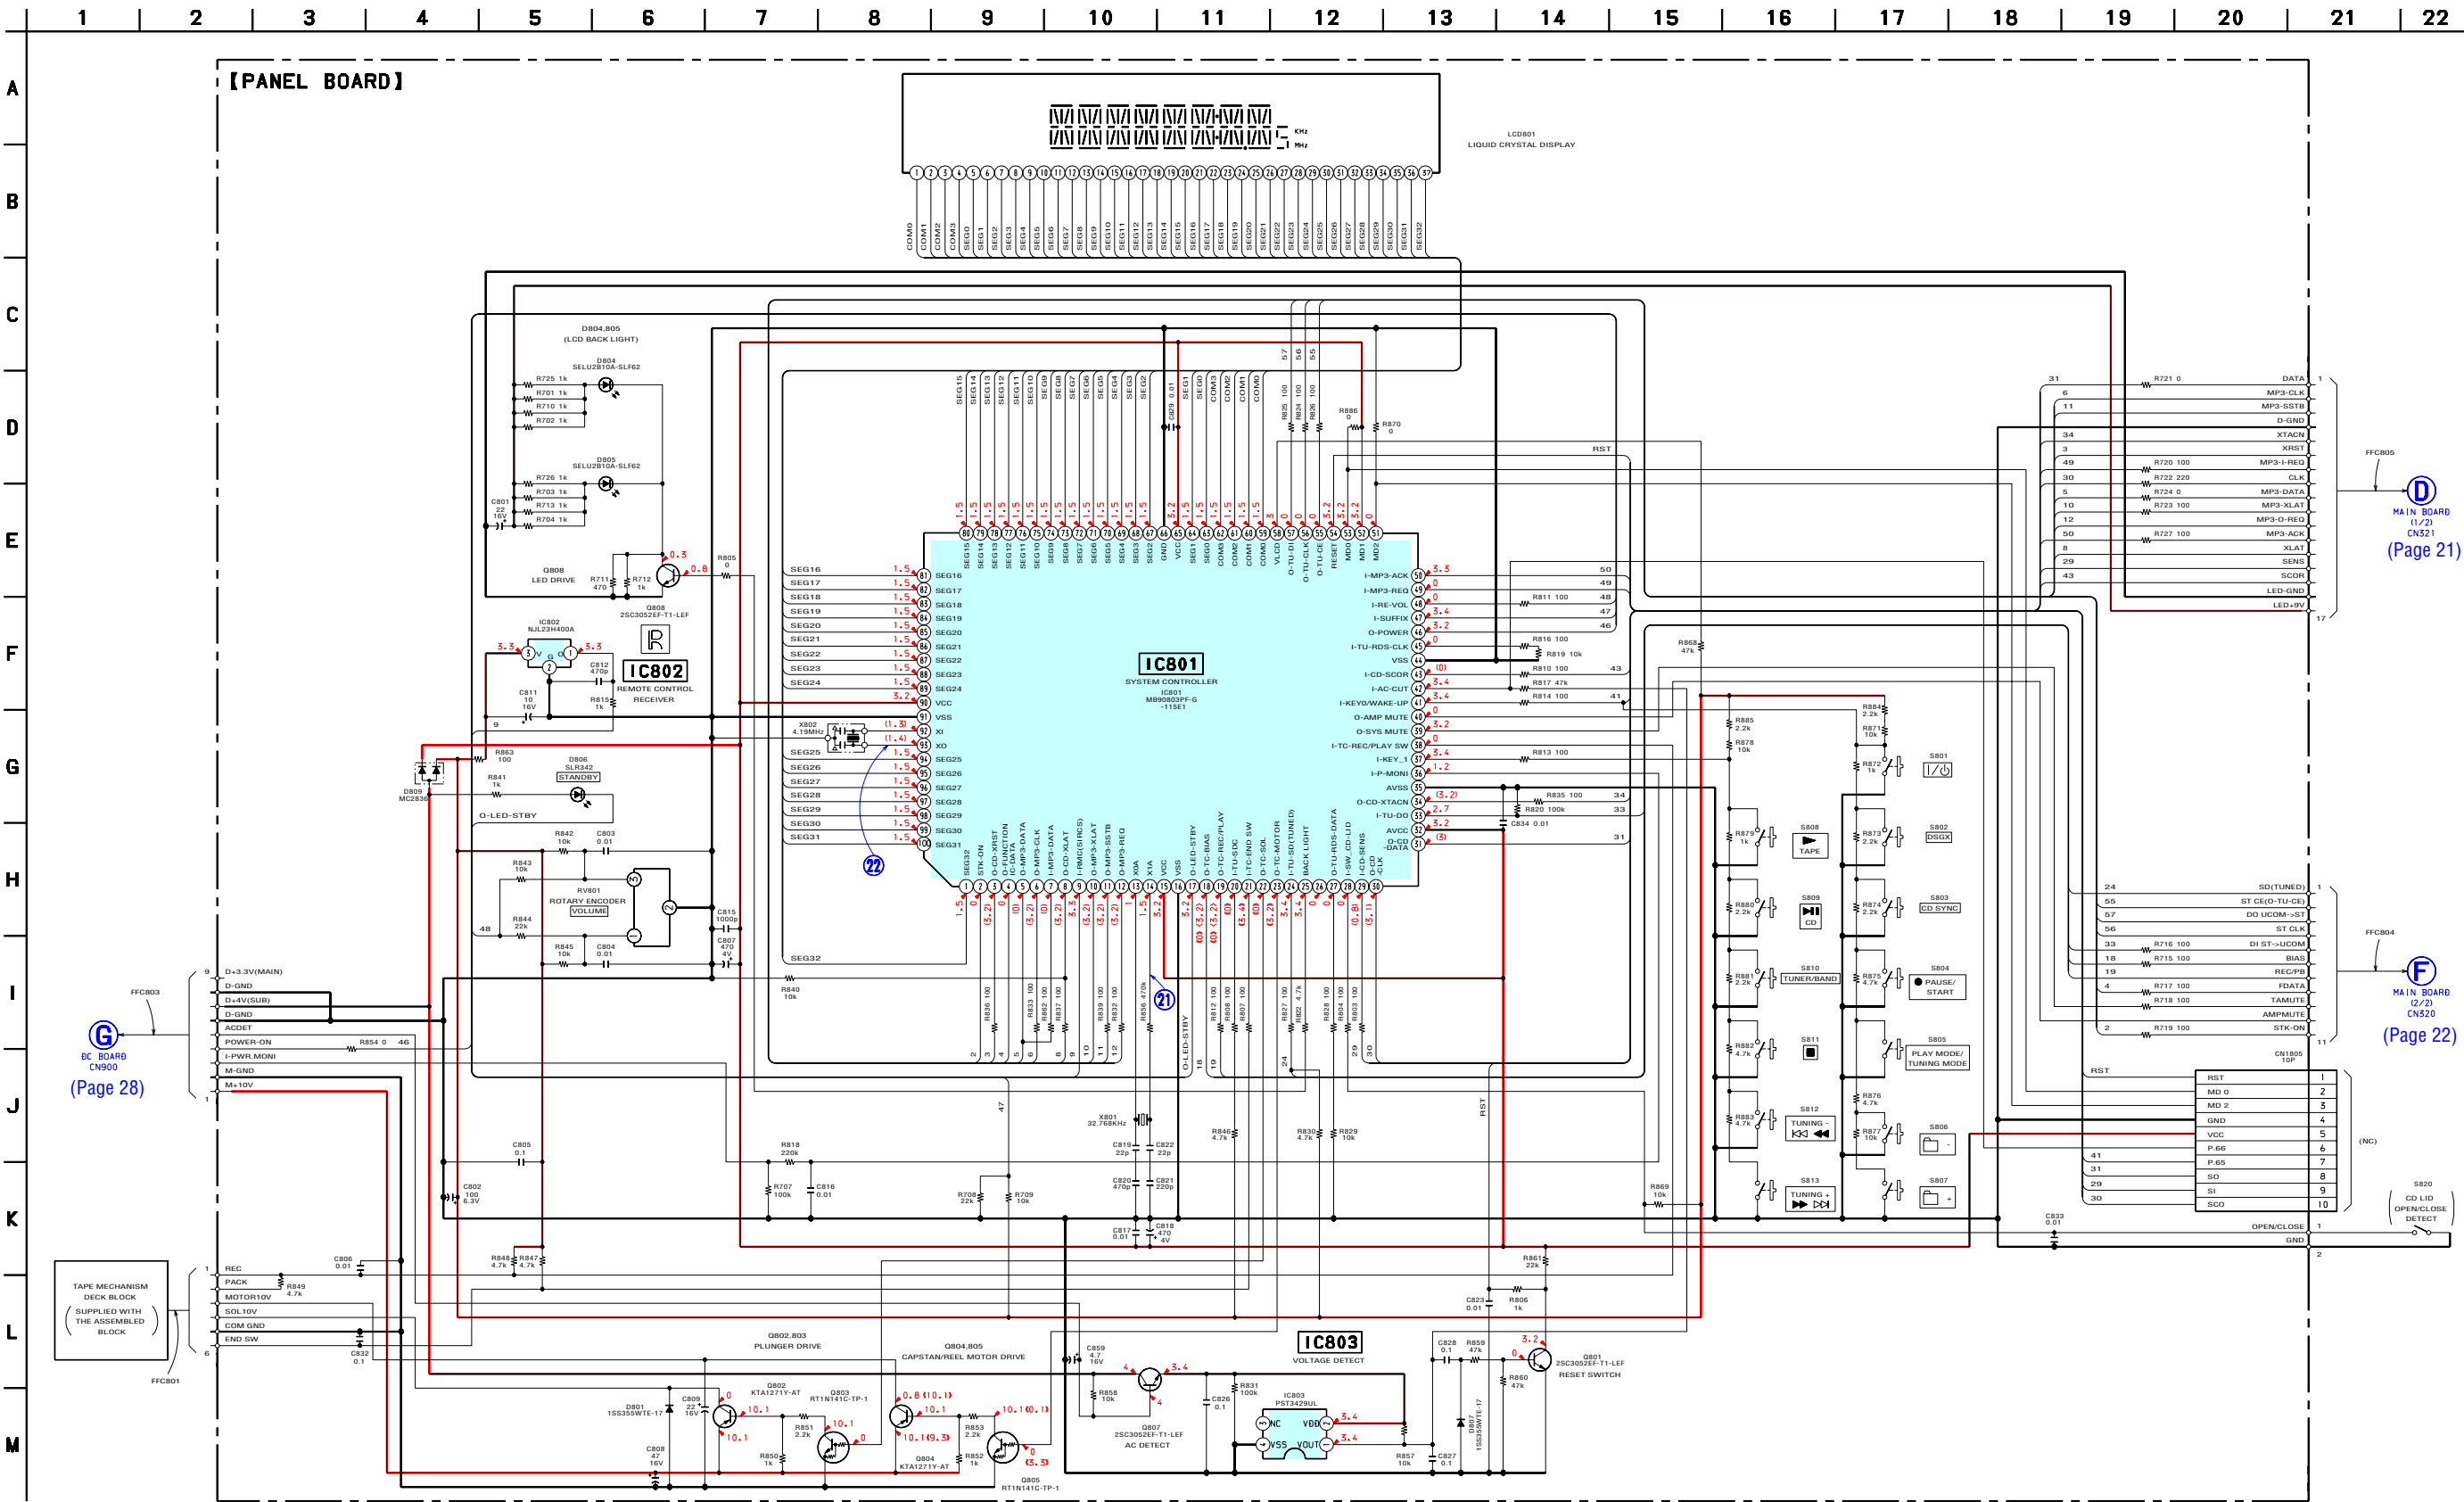


**7-10. PRINTED WIRING BOARDS – DC Section – • See page 17 for Circuit Boards Location.**

**4** : Uses unleaded solder.

| Ref. No. | Location |
|----------|----------|
| D322     | G-4      |
| D911     | E-4      |
| D912     | E-4      |
| D913     | E-5      |
| D914     | E-5      |
| D916     | D-8      |
| D917     | D-8      |
| D918     | E-8      |
| D919     | E-8      |
| D920     | E-6      |
| D926     | E-7      |
| D927     | E-6      |
| D928     | E-5      |
| D929     | F-8      |
| D930     | F-7      |
| IC900    | F-1      |
| IC901    | G-7      |
| IC903    | H-9      |
| Q315     | H-8      |
| Q333     | G-4      |
| Q338     | G-5      |

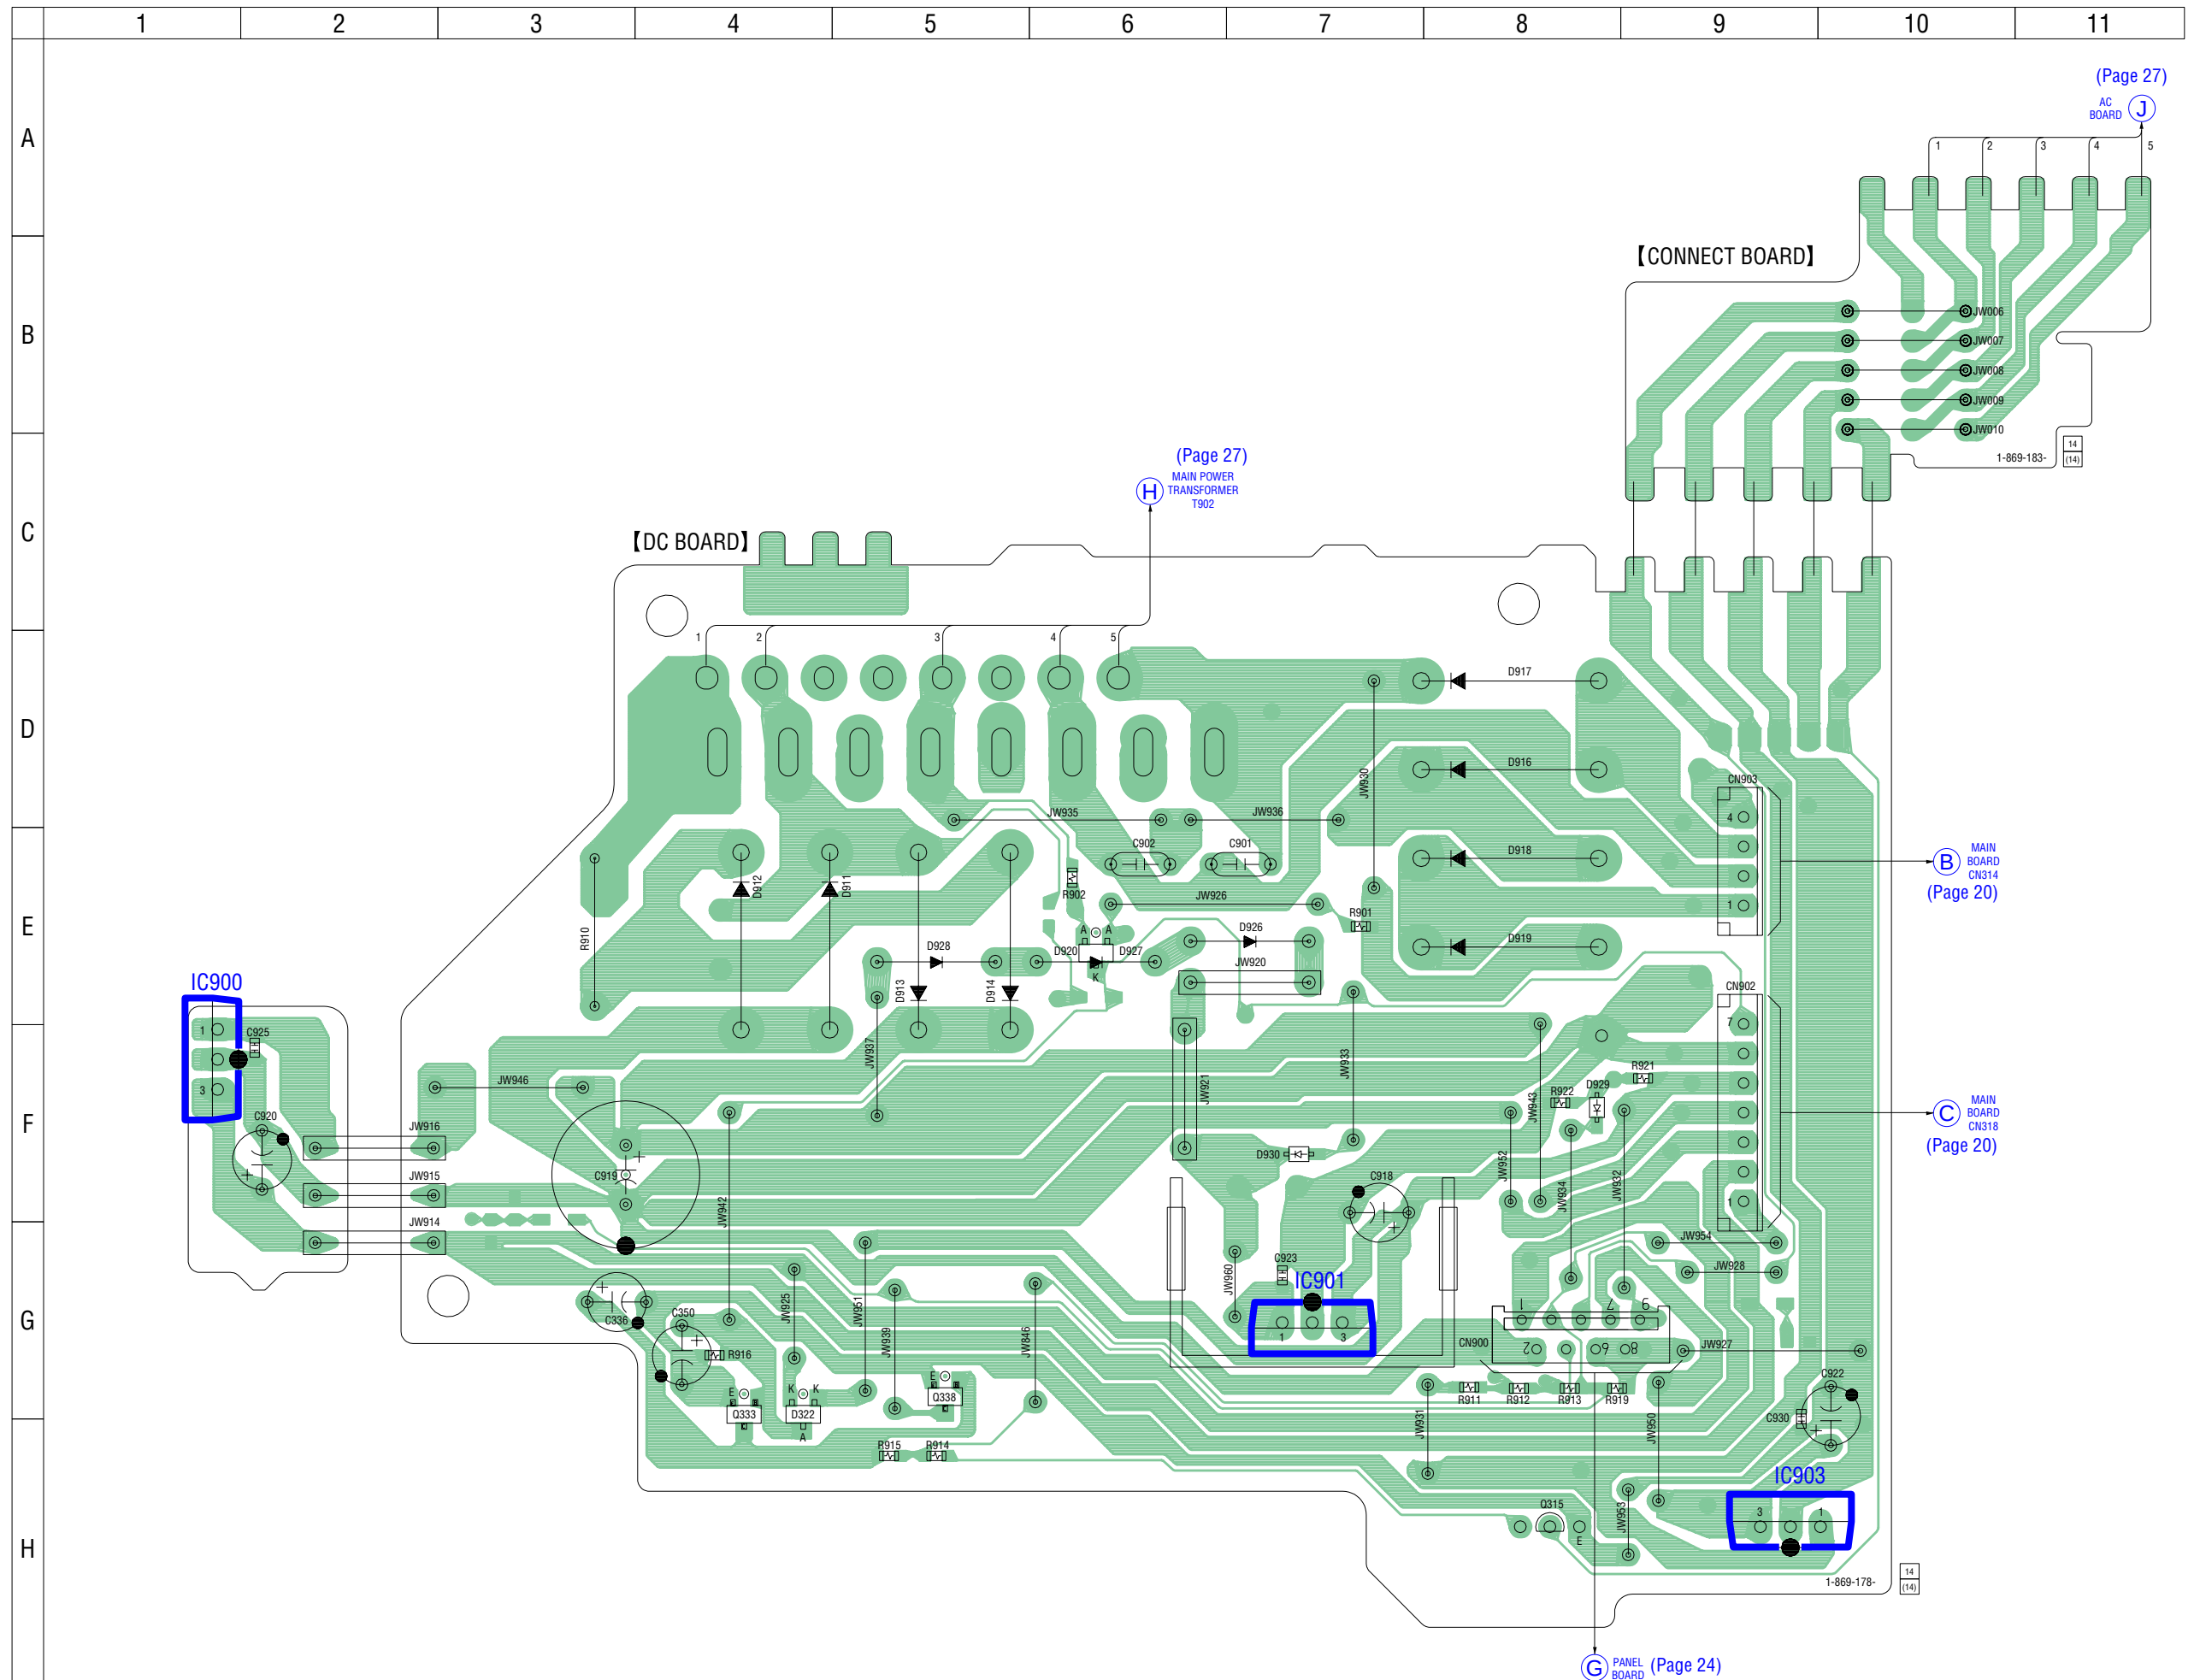


7-11. PRINTED WIRING BOARD – AC Board – • See page 17 for Circuit Boards Location.  : Uses unleaded solder.

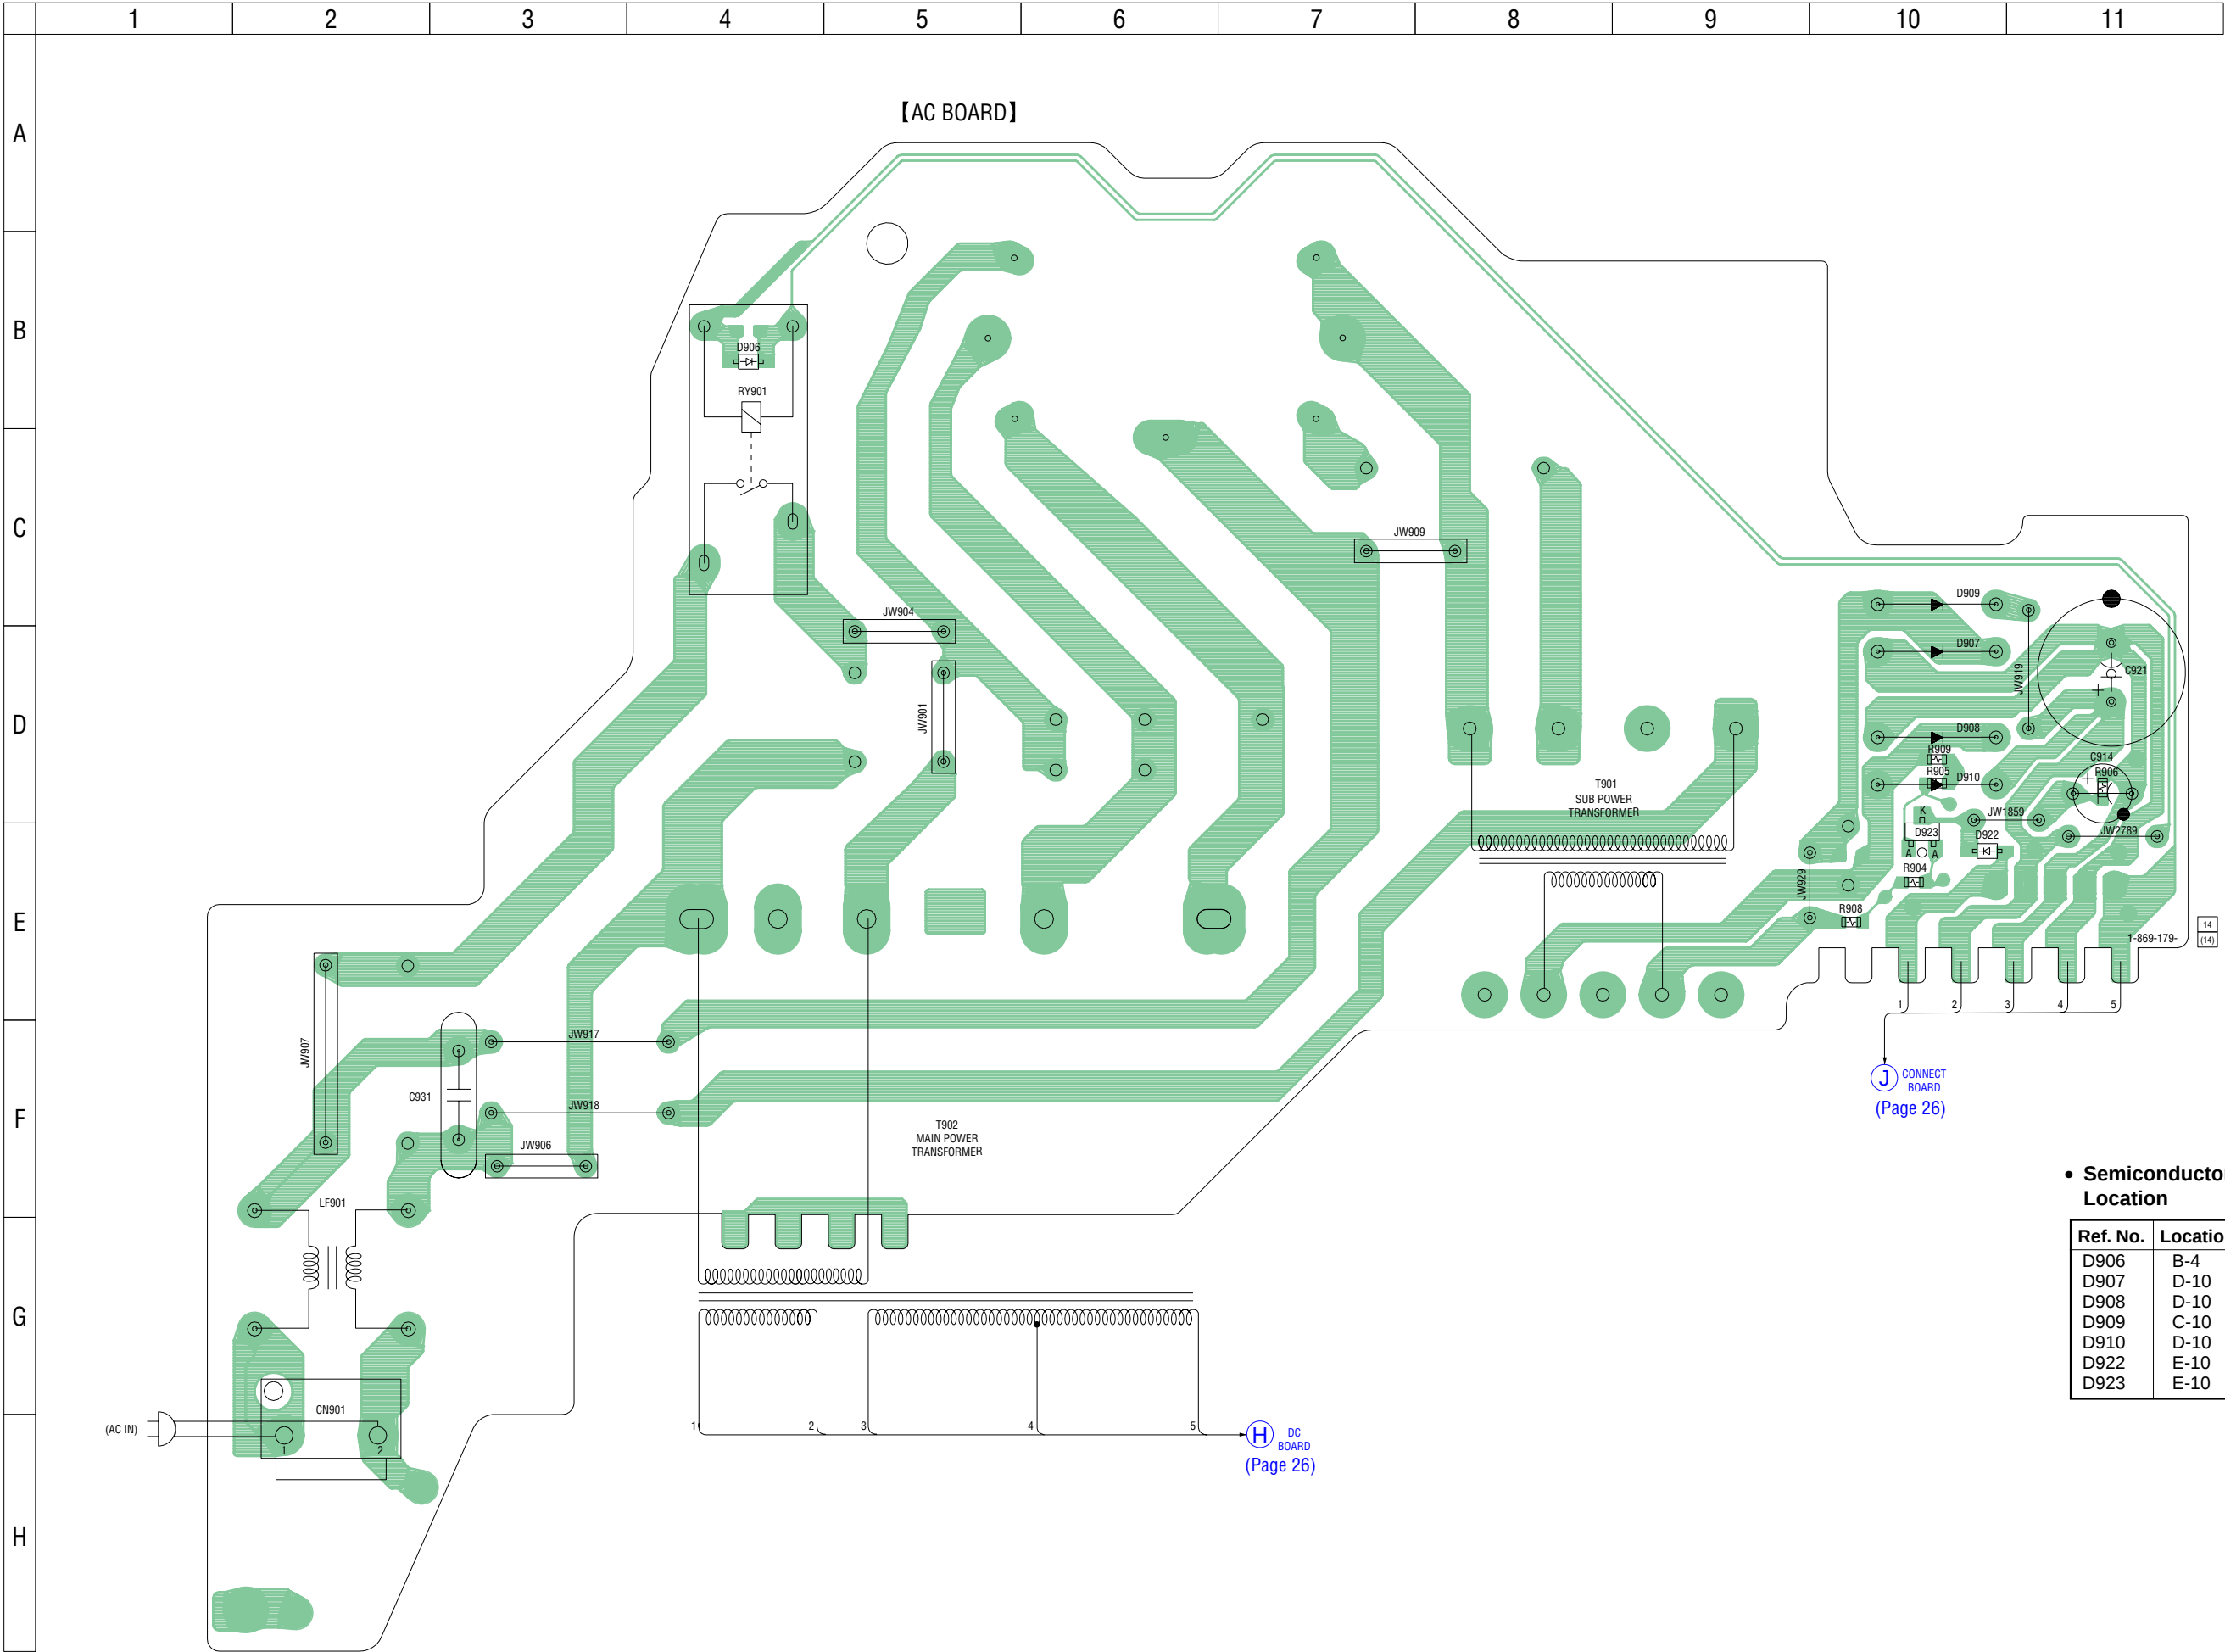

• Semiconductor Location

| Ref. No. | Location |
|----------|----------|
| D906     | B-4      |
| D907     | D-10     |
| D908     | D-10     |
| D909     | C-10     |
| D910     | D-10     |
| D922     | E-10     |
| D923     | E-10     |

7-12. SCHEMATIC DIAGRAM – POWER SUPPLY Section –

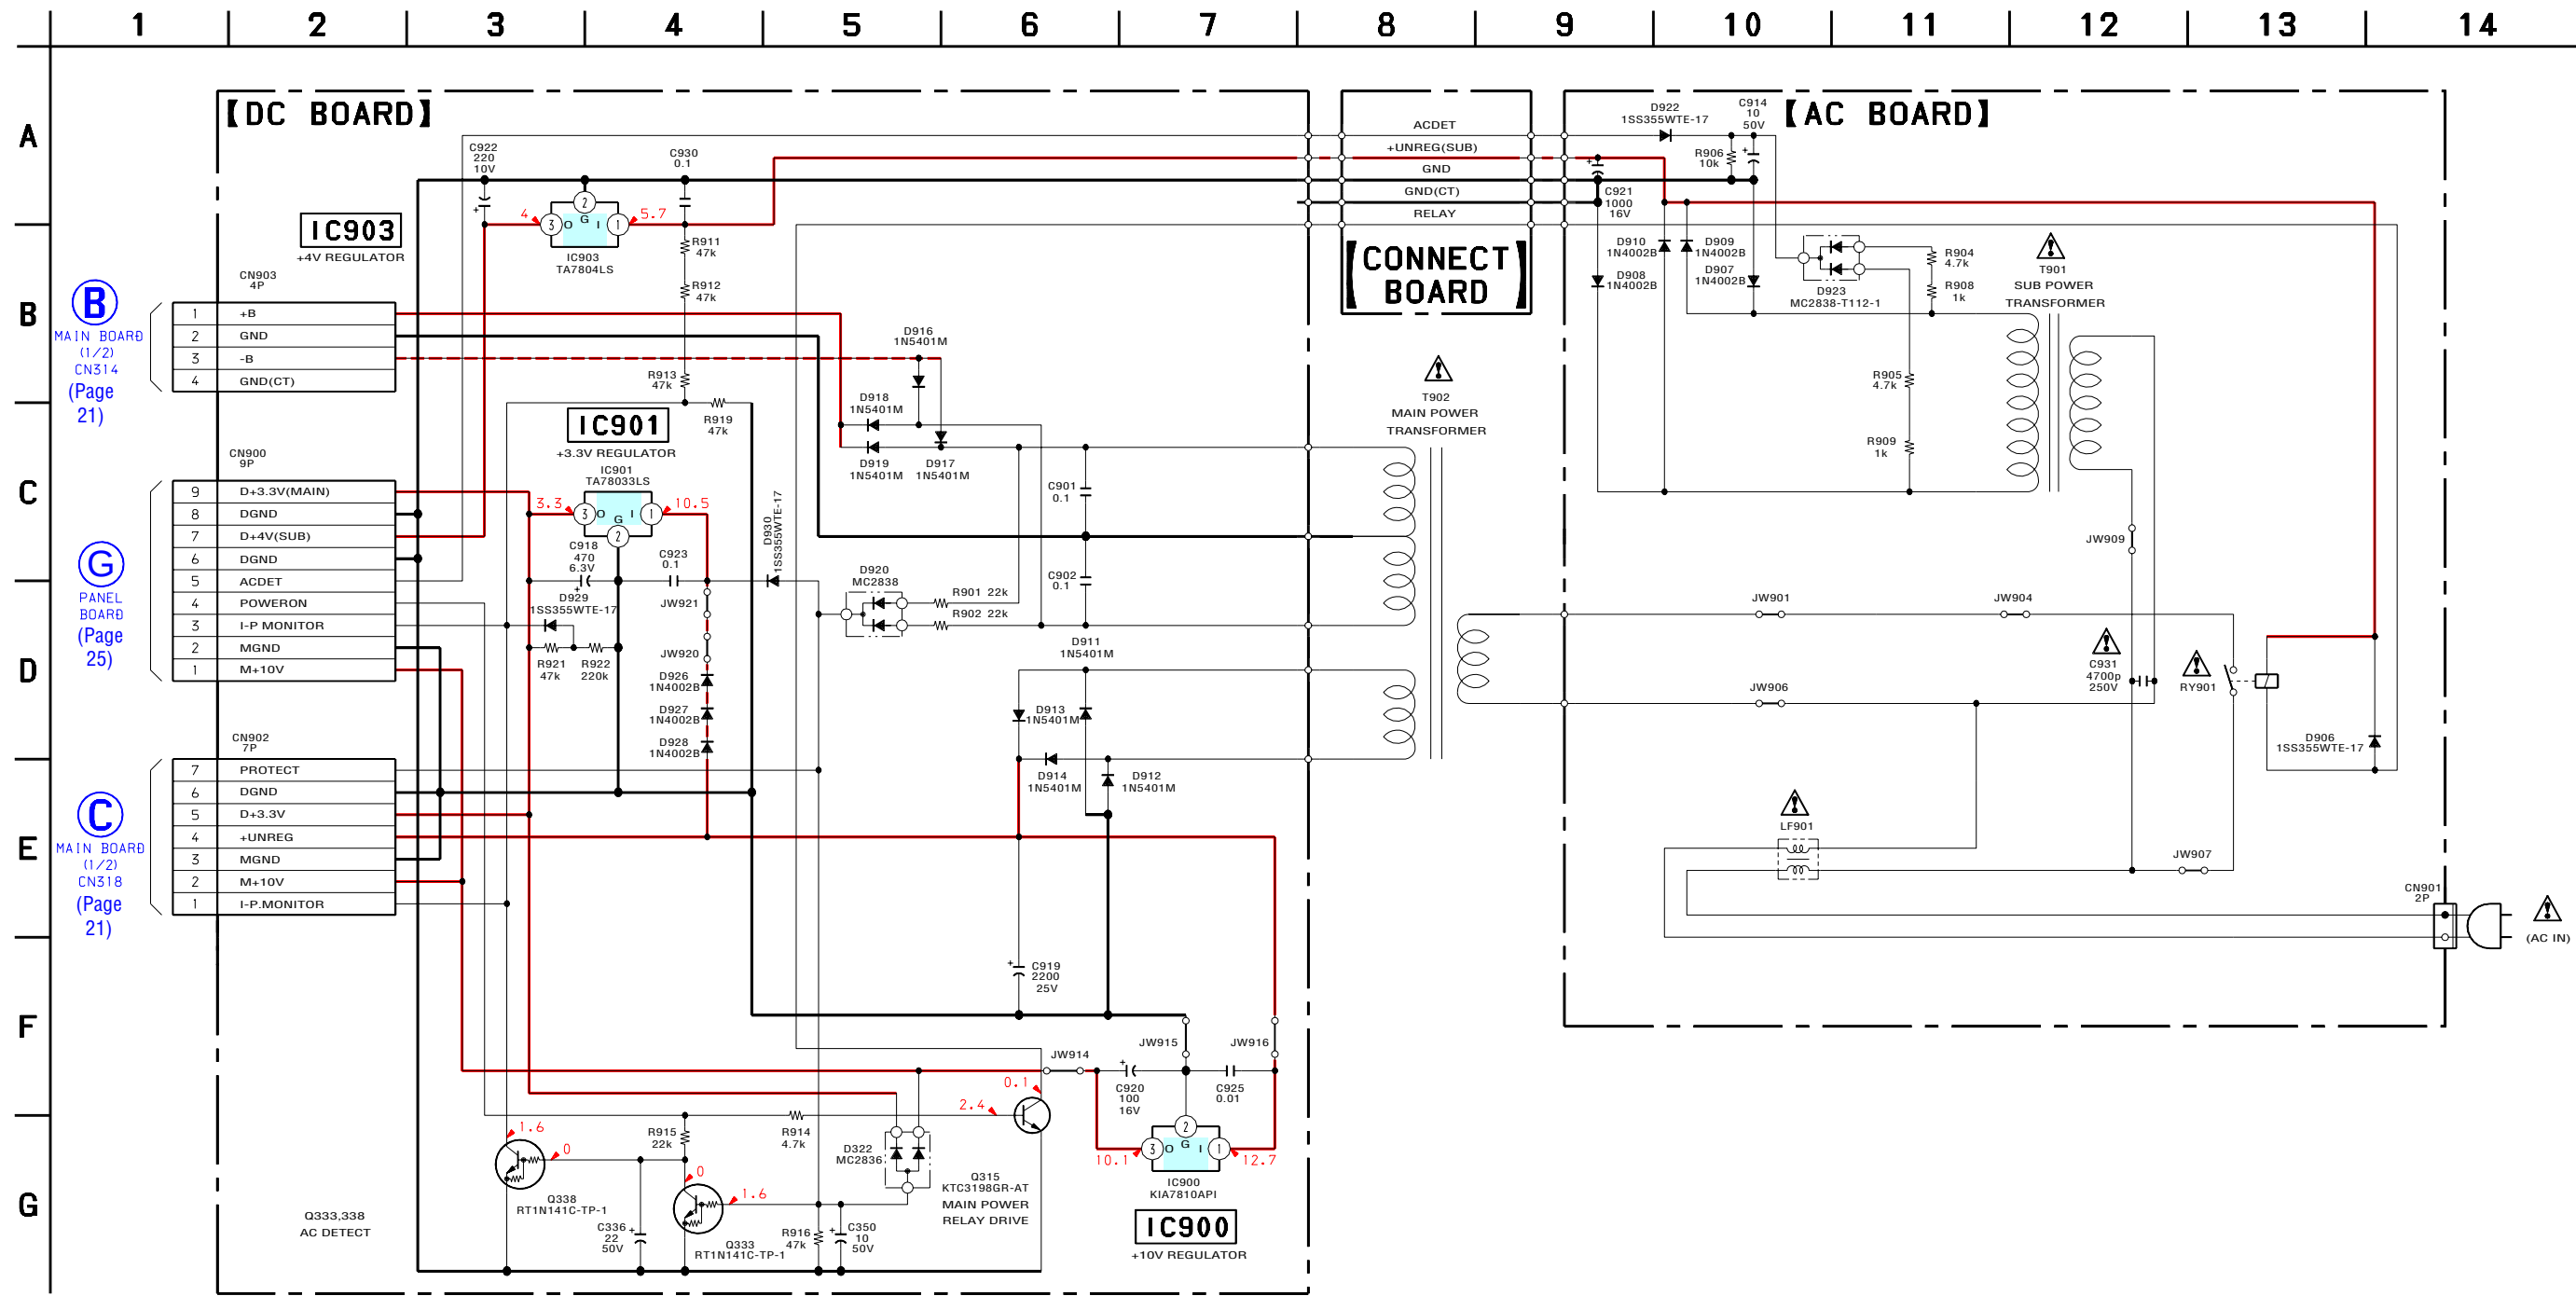

• IC Pin Function Description

CD BOARD IC201 CXD3014A-201R (CD DSP)

| Pin No. | Pin Name | I/O | Description                                                                                                                       |
|---------|----------|-----|-----------------------------------------------------------------------------------------------------------------------------------|
| 1       | LRCK     | O   | L/R sampling clock signal output terminal                                                                                         |
| 2       | LRCKI    | I   | L/R sampling clock signal input terminal                                                                                          |
| 3       | PCMD     | O   | Serial data output terminal                                                                                                       |
| 4       | PCMDI    | I   | Serial data input terminal                                                                                                        |
| 5       | BCK      | O   | Bit clock signal output terminal                                                                                                  |
| 6       | BCKI     | I   | Bit clock signal input terminal                                                                                                   |
| 7       | XTACN    | I   | Oscillation circuit on/off switch control signal input from the system controller<br>"L": oscillation stop, "H": self-oscillation |
| 8       | XRST     | I   | System reset signal input from the system controller "L": reset                                                                   |
| 9       | VSS      | -   | Ground terminal                                                                                                                   |
| 10      | IREQ-MP3 | O   | MP3 data request signal output to the system controller                                                                           |
| 11      | CLOCK    | I   | CD serial data transfer clock signal input from the system controller                                                             |
| 12      | DATA2    | I   | MP3 serial data input from the system controller                                                                                  |
| 13      | XLAT-MP3 | I   | MP3 serial data latch pulse signal input from the system controller                                                               |
| 14      | REQ-MP3  | I   | MP3 data request signal input from the system controller                                                                          |
| 15      | ACK-MP3  | O   | MP3 acknowledge signal output to the system controller                                                                            |
| 16      | XLAT     | I   | CD serial data latch pulse signal input from the system controller                                                                |
| 17      | VDD      | -   | Power supply terminal (+1.8V)                                                                                                     |
| 18      | SVSS     | -   | Ground terminal                                                                                                                   |
| 19      | SVDD     | -   | Power supply terminal (+1.8V)                                                                                                     |
| 20      | SENS     | O   | Internal status (SENSE) signal output to the system controller                                                                    |
| 21      | WFCCK    | -   | Not used                                                                                                                          |
| 22      | XUGF     | -   | Not used                                                                                                                          |
| 23      | XPCK     | -   | Not used                                                                                                                          |
| 24      | GFS      | -   | Not used                                                                                                                          |
| 25      | C2PO     | -   | Not used                                                                                                                          |
| 26      | SCOR     | O   | Subcode sync (S0+S1) detection signal output to the system controller                                                             |
| 27      | VDD      | -   | Power supply terminal (+1.8V)                                                                                                     |
| 28      | COUT     | -   | Not used                                                                                                                          |
| 29      | SVSS     | -   | Ground terminal                                                                                                                   |
| 30      | SVDD     | -   | Power supply terminal (+1.8V)                                                                                                     |
| 31      | MIRR     | -   | Not used                                                                                                                          |
| 32      | DFCT     | -   | Not used                                                                                                                          |
| 33      | FOK      | -   | Not used                                                                                                                          |
| 34      | VSS      | -   | Ground terminal                                                                                                                   |
| 35      | VDD      | -   | Power supply terminal (+1.8V)                                                                                                     |
| 36      | VSS      | -   | Ground terminal                                                                                                                   |
| 37      | MIRR     | -   | Not used                                                                                                                          |
| 38      | MDP      | O   | Spindle motor servo control signal output terminal                                                                                |
| 39      | SSTP     | I   | Disc inner position detection signal input terminal                                                                               |
| 40      | IOVSS1   | -   | Ground terminal                                                                                                                   |
| 41      | SFDR     | O   | Sled servo drive signal (+) output to the coil/motor driver                                                                       |
| 42      | SRDR     | O   | Sled servo drive signal (-) output to the coil/motor driver                                                                       |
| 43      | TFDR     | O   | Tracking servo drive signal (+) output to the coil/motor driver                                                                   |
| 44      | TRDR     | O   | Tracking servo drive signal (-) output to the coil/motor driver                                                                   |
| 45      | FFDR     | O   | Focus servo drive signal (+) output to the coil/motor driver                                                                      |
| 46      | FRDR     | O   | Focus servo drive signal (-) output to the coil/motor driver                                                                      |
| 47      | IOVDD1   | -   | Power supply terminal (+3.3V)                                                                                                     |

| Pin No. | Pin Name | I/O | Description                                                                                                      |
|---------|----------|-----|------------------------------------------------------------------------------------------------------------------|
| 48      | AVDD0    | -   | Power supply terminal (+3.3V)                                                                                    |
| 49      | AVSS0    | -   | Ground terminal                                                                                                  |
| 50      | E        | I   | E signal input from the optical pick-up block                                                                    |
| 51      | F        | I   | F signal input from the optical pick-up block                                                                    |
| 52      | TEI      | I   | Tracking error signal input terminal                                                                             |
| 53      | TEO      | O   | Tracking error signal output terminal                                                                            |
| 54      | FEI      | I   | Focus error signal input terminal                                                                                |
| 55      | FEO      | O   | Focus error signal output terminal                                                                               |
| 56      | VC       | O   | Middle point voltage output terminal                                                                             |
| 57      | A        | I   | A signal input from the optical pick-up block                                                                    |
| 58      | B        | I   | B signal input from the optical pick-up block                                                                    |
| 59      | C        | I   | C signal input from the optical pick-up block                                                                    |
| 60      | D        | I   | D signal input from the optical pick-up block                                                                    |
| 61      | AVDD4    | -   | Power supply terminal (+3.3V)                                                                                    |
| 62      | RFDCO    | O   | Not used                                                                                                         |
| 63      | PDSSENS  | I   | Not used                                                                                                         |
| 64      | AC_SUM   | O   | RFAC summing amplifier signal output terminal                                                                    |
| 65      | EQ_IN    | I   | RF equalizer circuit input terminal                                                                              |
| 66      | LD       | O   | Laser diode on/off control signal output to the automatic power control circuit<br>"L": laser off, "H": laser on |
| 67      | PD       | I   | Light amount monitor input from the optical pick-up block laser diode                                            |
| 68      | RFC      | I   | Equalizer cut off frequency adjustment terminal                                                                  |
| 69      | AVSS4    | -   | Ground terminal                                                                                                  |
| 70      | RFACO    | O   | EFM signal output terminal                                                                                       |
| 71      | RFACI    | I   | EFM signal input terminal                                                                                        |
| 72      | AVDD3    | -   | Power supply terminal (+3.3V)                                                                                    |
| 73      | BIAS     | I   | Asymmetry circuit constant current input terminal                                                                |
| 74      | ASYI     | I   | Playback EFM asymmetry comparator voltage input terminal                                                         |
| 75      | ASYO     | O   | Playback EFM full-swing output terminal                                                                          |
| 76      | VPCO     | O   | Charge pump output terminal for broad-band EFM PLL                                                               |
| 77      | VCTL     | I   | VCO2 control voltage input terminal for broad-band EFM PLL                                                       |
| 78      | AVSS3    | -   | Ground terminal                                                                                                  |
| 79      | CLTV     | I   | VCO1 control voltage input terminal for multiplier                                                               |
| 80      | FILO     | O   | Filter output terminal for master PLL                                                                            |
| 81      | FILI     | I   | Filter input terminal for master PLL                                                                             |
| 82      | PCO      | O   | Charge pump output terminal for master PLL                                                                       |
| 83      | SVSS     | -   | Ground terminal                                                                                                  |
| 84      | SVDD     | -   | Power supply terminal (+1.8V)                                                                                    |
| 85      | SSTB-MP3 | I   | MP3 standby on/off control signal input terminal "L": standby Not used                                           |
| 86      | VDD      | -   | Power supply terminal (+1.8V)                                                                                    |
| 87      | VSS      | -   | Ground terminal                                                                                                  |
| 88      | TEST1    | I   | Test terminal Normally: fixed at "L"                                                                             |
| 89      | DATA     | I   | CD serial data input from the system controller                                                                  |
| 90      | CLK2     | I   | MP3 serial data transfer clock signal input from the system controller                                           |
| 91      | SVSS     | -   | Ground terminal                                                                                                  |
| 92      | SVDD     | -   | Power supply terminal (+2.5V)                                                                                    |
| 93      | JTAGTCK  | -   | Not used                                                                                                         |
| 94      | JTAGTDI  | -   | Not used                                                                                                         |
| 95      | JTAGTDO  | -   | Not used                                                                                                         |
| 96      | JTAGTMS  | -   | Not used                                                                                                         |

| Pin No. | Pin Name | I/O | Description                                   |
|---------|----------|-----|-----------------------------------------------|
| 97      | TRST     | -   | Not used                                      |
| 98      | VSS      | -   | Ground terminal                               |
| 99      | VDD      | -   | Power supply terminal (+1.8V)                 |
| 100     | IOVDD2   | -   | Power supply terminal (+3.3V)                 |
| 101     | DOUT     | O   | Digital audio signal output terminal Not used |
| 102     | TEST     | I   | Test terminal Normally: fixed at "L"          |
| 103     | TES1     | I   | Test terminal Normally: fixed at "L"          |
| 104     | IOVSS2   | -   | Ground terminal                               |
| 105     | PLLVD    | -   | Power supply terminal (+1.8V)                 |
| 106     | PLLVSS   | -   | Ground terminal                               |
| 107     | XVSS     | -   | Ground terminal                               |
| 108     | XTAO     | O   | System clock output terminal (16.9344 MHz)    |
| 109     | XTAI     | I   | System clock input terminal (16.9344 MHz)     |
| 110     | XVDD     | -   | Power supply terminal (+1.8V)                 |
| 111     | AVDD1    | -   | Power supply terminal (+3.3V)                 |
| 112     | AOUT1    | O   | L-ch analog audio signal output terminal      |
| 113     | VREFL    | O   | L-ch reference voltage output terminal        |
| 114     | AVSS1    | -   | Ground terminal                               |
| 115     | AVSS2    | -   | Ground terminal                               |
| 116     | VREFR    | O   | R-ch reference voltage output terminal        |
| 117     | AOUT2    | O   | R-ch analog audio signal output terminal      |
| 118     | AVDD1    | -   | Power supply terminal (+3.3V)                 |
| 119     | IOVDD0   | -   | Power supply terminal (+3.3V)                 |
| 120     | IOVSS0   | -   | Ground terminal                               |

## PANEL BOARD IC801 MB90803PF-G-115E1 (SYSTEM CONTROLLER)

| Pin No. | Pin Name              | I/O | Description                                                                                       |
|---------|-----------------------|-----|---------------------------------------------------------------------------------------------------|
| 1       | SEG32                 | O   | Segment drive signal output to the liquid crystal display                                         |
| 2       | STK-ON                | O   | Standby control signal output to the power amplifier                                              |
| 3       | O-CD-XRST             | O   | System reset signal output to the CD DSP                                                          |
| 4       | O-FUNCTION<br>IC-DATA | O   | Serial data output to the electrical volume                                                       |
| 5       | O-MP3-DATA            | O   | MP3 serial data output to the CD DSP                                                              |
| 6       | O-MP3-CLK             | O   | MP3 serial data transfer clock signal output to the CD DSP                                        |
| 7       | I-MP3-DATA            | I   | MP3 serial data input terminal                                                                    |
| 8       | O-CD-XLAT             | O   | CD serial data latch pulse output to the CD DSP                                                   |
| 9       | I-RMC (SIRCS)         | I   | Remote control signal input from the remote control receiver                                      |
| 10      | O-XLAT-MP3            | O   | MP3 serial data latch pulse signal output to the CD DSP                                           |
| 11      | O-MP3-SSTB            | O   | System reset signal output to the motor/coil driver                                               |
| 12      | O-REQ-MP3             | O   | MP3 data request signal output to the CD DSP                                                      |
| 13      | X0A                   | I   | Sub system clock input terminal (32.768 kHz)                                                      |
| 14      | X1A                   | O   | Sub system clock output terminal (32.768 kHz)                                                     |
| 15      | VCC                   | -   | Power supply terminal (+3.2V)                                                                     |
| 16      | VSS                   | -   | Ground terminal                                                                                   |
| 17      | O-LED-STBY            | O   | LED drive signal output terminal for STANDBY indicator                                            |
| 18      | O-TC-BIAS             | O   | Recording bias on/off selection signal output terminal "H": bias on, "L": bias off                |
| 19      | O-TC-REC/PB           | O   | Recording/playback selection signal output terminal "H": playback mode, "L": recording mode       |
| 20      | I-TU-SDC              | I   | Not used                                                                                          |
| 21      | I-TC-END SW           | I   | END switch signal input from the tape mechanism deck                                              |
| 22      | O-TC-SOL              | O   | Trigger plunger on/off control signal output terminal "H": plunger on                             |
| 23      | O-TC-MOTOR            | O   | Capstan/reel motor on/off control signal output terminal "H": motor on                            |
| 24      | I-TU-SD (TUNED)       | I   | Tuning detection signal input from the tuner (FM/AM)                                              |
| 25      | BACK LIGHT            | O   | LED drive signal output terminal for liquid crystal display back light                            |
| 26      | -                     | -   | Not used                                                                                          |
| 27      | I-TU-RDS-DATA         | I   | RDS serial data input terminal Not used                                                           |
| 28      | I-SW_CD-LID           | I   | CD lid open/close detection switch input terminal "L": CD lid close                               |
| 29      | I-CD-SENS             | I   | Internal status (SENSE) signal input from the CD DSP                                              |
| 30      | O-CD-CLK              | O   | CD serial data transfer clock signal output to the CD DSP                                         |
| 31      | O-CD-DATA             | O   | CD serial data output to the CD DSP                                                               |
| 32      | AVCC                  | -   | Power supply terminal (+3.2V)                                                                     |
| 33      | I-TU-DO               | I   | Serial data input from the tuner (FM/AM)                                                          |
| 34      | O-CD-XTACN            | O   | Oscillator control signal output to the CD DSP                                                    |
| 35      | AVSS                  | -   | Ground terminal                                                                                   |
| 36      | I-P-MONI              | I   | Power monitor input terminal                                                                      |
| 37      | I-KEY_1               | I   | Front panel key input terminal (A/D input)                                                        |
| 38      | I-TC-REC/PLAY         | I   | Recording-proof claw (forward/reverse) detect switch and cassette in detect switch input terminal |
| 39      | O-SYS MUTE            | O   | Line muting on/off control signal output terminal Not used                                        |
| 40      | O-AMP MUTE            | O   | Muting on/off control signal output terminal Not used                                             |
| 41      | I-KEY0/WAKE-UP        | I   | Key interruption processing start signal and front panel key input terminal (A/D input)           |
| 42      | ACCUT                 | I   | Power down detection signal input terminal "L": power down, normally : "H"                        |
| 43      | I-CD-SCOR             | I   | Subcode sync (S0+S1) detection signal input from the CD DSP                                       |
| 44      | VSS                   | -   | Ground terminal                                                                                   |
| 45      | I-TU-RDS-CLK          | I   | RDS serial data transfer clock signal input terminal Not used                                     |

| Pin No.   | Pin Name       | I/O | Description                                                                                                                                          |
|-----------|----------------|-----|------------------------------------------------------------------------------------------------------------------------------------------------------|
| 46        | O-POWER        | O   | Power relay drive signal output terminal "H": on                                                                                                     |
| 47        | I-SUFFIX       | I   | Model destination setting terminal                                                                                                                   |
| 48        | I-RE-VOL       | I   | Dial pulse input of the rotary encoder (for VOLUME control)                                                                                          |
| 49        | I-MP3-REQ      | I   | MP3 data request signal input from the CD DSP                                                                                                        |
| 50        | I-MP3-ACK      | I   | MP3 acknowledge signal input from the CD DSP                                                                                                         |
| 51 to 53  | MD2 to MD0     | -   | Not used                                                                                                                                             |
| 54        | RESET          | I   | Reset signal input from the reset switch "L": reset<br>For several hundreds msec. after the power supply rises, "L" is input, then it changes to "H" |
| 55        | O-TU-CE        | O   | Chip enable signal output to the tuner (FM/AM)                                                                                                       |
| 56        | O-TU-CLK       | O   | serial data transfer clock signal output to the tuner (FM/AM)                                                                                        |
| 57        | O-TU-DI        | O   | Serial data output to the tuner (FM/AM)                                                                                                              |
| 58        | VLCD           | -   | Terminal for doubler circuit capacitor connection to develop liquid crystal display drive voltage                                                    |
| 59 to 62  | COM0 to COM3   | O   | Common drive signal output to the liquid crystal display                                                                                             |
| 63, 64    | SEG0, SEG1     | O   | Segment drive signal output to the liquid crystal display                                                                                            |
| 65        | VCC            | -   | Power supply terminal (+3.2V)                                                                                                                        |
| 66        | GND            | -   | Ground terminal                                                                                                                                      |
| 67 to 89  | SEG2 to SEG24  | O   | Segment drive signal output to the liquid crystal display                                                                                            |
| 90        | VCC            | -   | Power supply terminal (+3.2V)                                                                                                                        |
| 91        | VSS            | -   | Ground terminal                                                                                                                                      |
| 92        | XI             | I   | Main system clock input terminal (4.19 MHz)                                                                                                          |
| 93        | XO             | O   | Main system clock output terminal (4.19 MHz)                                                                                                         |
| 94 to 100 | SEG25 to SEG31 | O   | Segment drive signal output to the liquid crystal display                                                                                            |

## SECTION 8

### EXPLODED VIEWS

**NOTE:**

- XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts  
Example:  
KNOB, BALANCE (WHITE) . . . (RED)  

↑

↑


Parts Color

Cabinet's Color

- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.


The components identified by mark  or dotted line with mark  are critical for safety.  
Replace only with part number specified.

## 8-1. CABINET SECTION

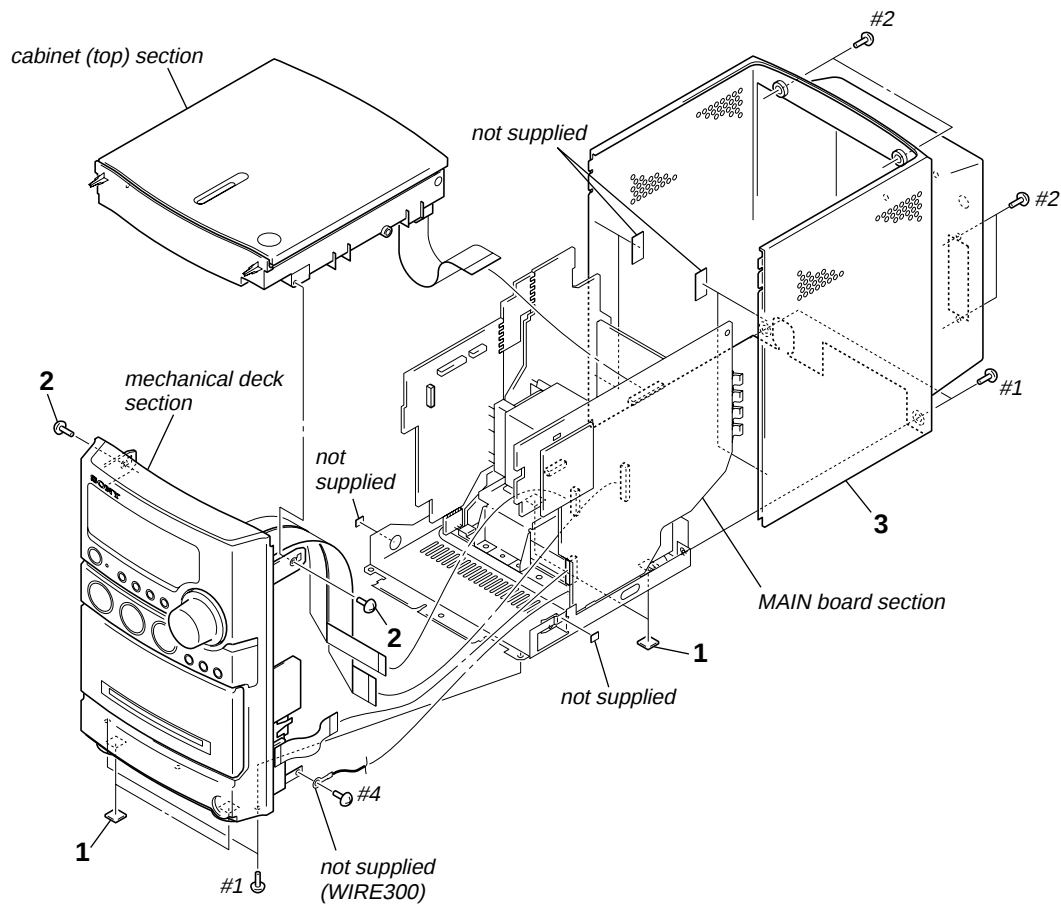


| Ref. No. | Part No.     | Description               | Remark | Ref. No. | Part No.     | Description                | Remark |
|----------|--------------|---------------------------|--------|----------|--------------|----------------------------|--------|
| 1        | 4-247-752-01 | FOOT, RUBBER              |        | #2       | 7-685-647-79 | SCREW +BVTP 3X10 TYPE2 N-S |        |
| 2        | 3-087-053-01 | +BVTP2.6 (3CR)            |        |          |              |                            |        |
| 3        | 2-581-399-51 | CABINET                   |        | #4       | 7-685-871-01 | SCREW +BVTT 3X6 (S)        |        |
| #1       | 7-685-646-79 | SCREW +BVTP 3X8 TYPE2 N-S |        |          |              |                            |        |

## 8-2. MECHANICAL DECK SECTION

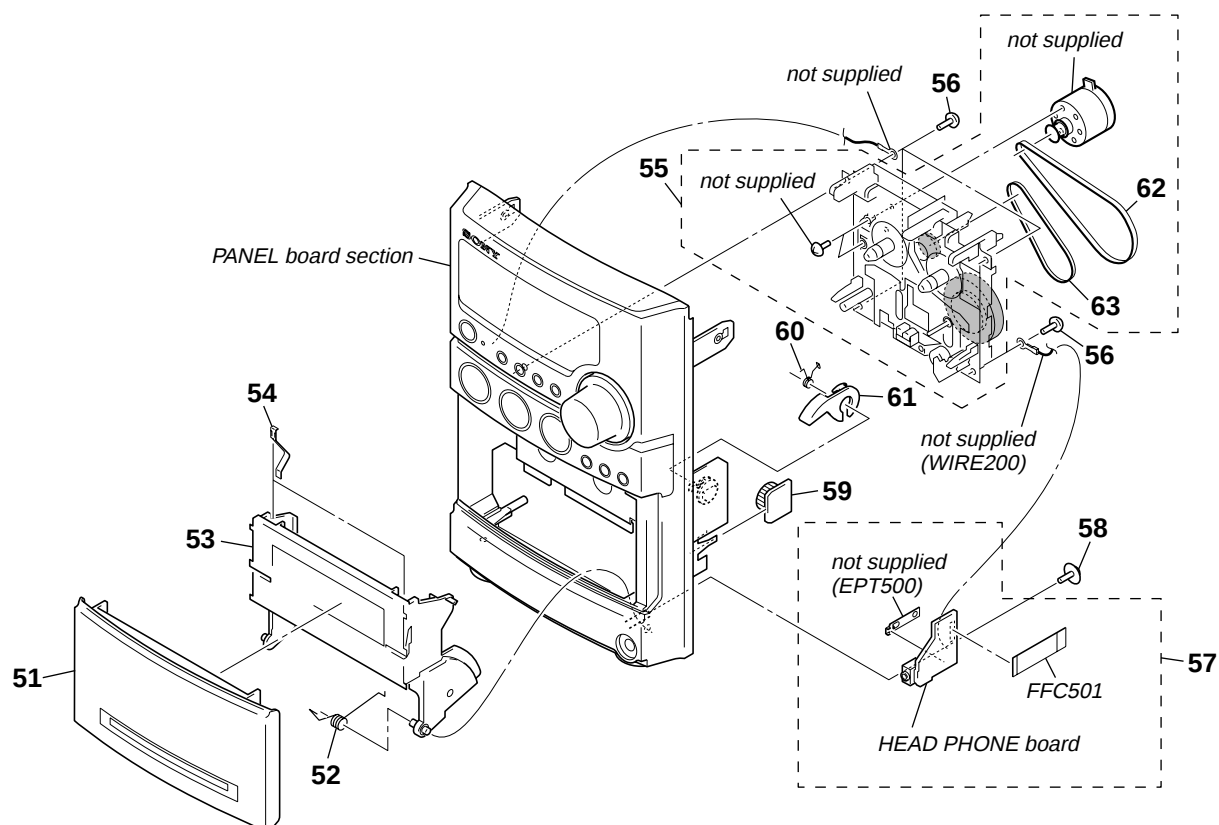


| Ref. No. | Part No.     | Description                   | Remark | Ref. No. | Part No.     | Description                    | Remark |
|----------|--------------|-------------------------------|--------|----------|--------------|--------------------------------|--------|
| 51       | X-2103-436-1 | LID ASSY, CASSETTE            |        | 58       | 4-933-134-11 | SCREW (+PTPWH M2.6X8)          |        |
| 52       | 4-245-034-01 | SPRING (CASSETTE)             |        | 59       | 4-224-104-41 | DAMPER                         |        |
| 53       | 2-581-395-01 | HOLDER (CASSETTE)             |        | 60       | 4-231-841-01 | SPRING (HEART CAM-B)           |        |
| 54       | 4-238-631-01 | TAPE SPRING                   |        | 61       | 4-231-825-01 | CAM (B), HEART                 |        |
| 55       | 1-797-510-11 | DECK, MECHANICAL (CMAL5Z235A) |        | 62       | 2-655-725-01 | BELT (MAIN)                    |        |
| 56       | 3-087-053-01 | +BVTP2.6 (3CR)                |        | 63       | 2-655-726-01 | BELT (MO), F/R                 |        |
| 57       | A-1158-127-A | HEAD PHONE BOARD, COMPLETE    |        | FFC501   | 1-831-785-21 | CABLE, FLEXIBLE FLAT (13 CORE) |        |

8-3. PANEL BOARD SECTION

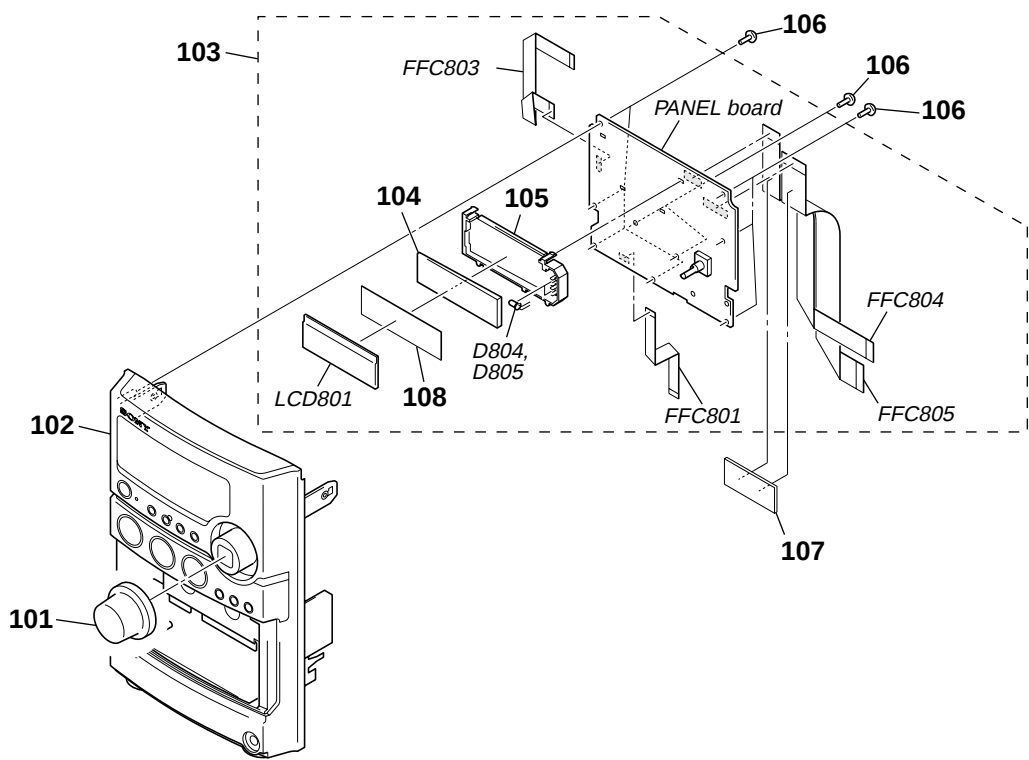


| Ref. No. | Part No.     | Description                   | Remark | Ref. No. | Part No.     | Description                          | Remark |
|----------|--------------|-------------------------------|--------|----------|--------------|--------------------------------------|--------|
| 101      | 2-581-385-21 | KNOB (VOL)                    |        | D804     | 6-501-139-01 | LED SELU2B10A-SLF62 (LCD BACK LIGHT) |        |
| 102      | X-2149-351-1 | PANEL ASSY, FRONT             |        | D805     | 6-501-139-01 | LED SELU2B10A-SLF62 (LCD BACK LIGHT) |        |
| 103      | A-1158-554-A | PANEL BOARD, COMPLETE         |        | FFC801   | 1-832-196-21 | CABLE, FLEXIBLE FLAT (6 CORE)        |        |
| 104      | 2-581-391-01 | PLATE, LIGHT GUIDE            |        | FFC803   | 1-831-770-21 | CABLE, FLEXIBLE FLAT (9 CORE)        |        |
| 105      | 2-581-390-01 | HOLDER (LCD)                  |        | FFC804   | 1-831-781-21 | CABLE, FLEXIBLE FLAT (11 CORE)       |        |
| 106      | 3-087-053-01 | +BVTP2.6 (3CR)                |        | FFC805   | 1-831-797-21 | CABLE, FLEXIBLE FLAT (17 CORE)       |        |
| 107      | 2-591-582-02 | PLATE (FRONT FFC), PROTECTION |        | LCD801   | 1-805-783-21 | DISPLAY PANEL, LIQUID CRYSTAL        |        |
| 108      | 2-586-988-12 | SHEET (LCD), DIFFUSION        |        |          |              |                                      |        |

## 8-4. CABINET (TOP) SECTION

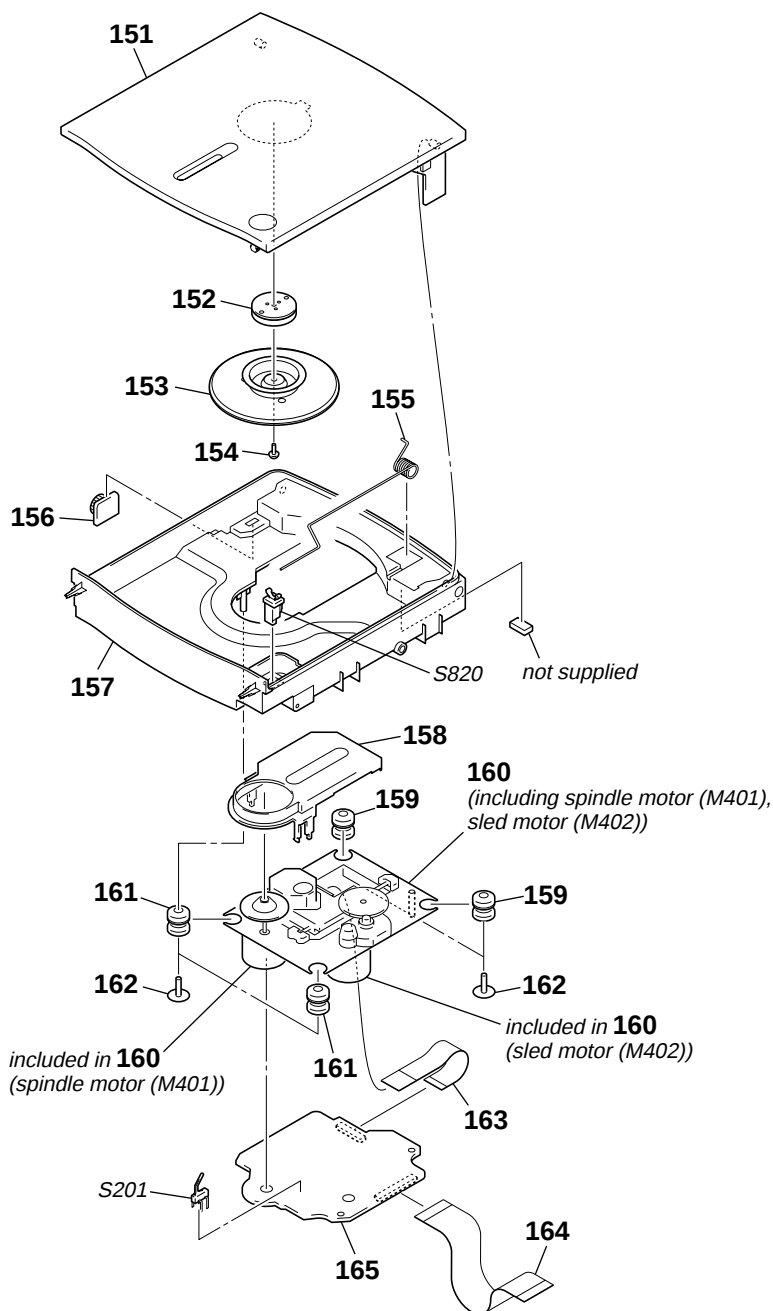


| Ref. No. | Part No.     | Description                                         | Remark | Ref. No. | Part No.     | Description                     | Remark |
|----------|--------------|-----------------------------------------------------|--------|----------|--------------|---------------------------------|--------|
| 151      | X-2103-437-1 | LID ASSY, CD                                        |        | 161      | 3-931-379-31 | RUBBER, VIBRATION PROOF (GREEN) |        |
| 152      | 1-452-899-11 | MAGNET                                              |        | 162      | 3-921-725-01 | SCREW (2.6X10), +PWH            |        |
| 153      | 3-019-395-01 | PLATE, CHUCKING                                     |        | 163      | 1-832-404-21 | WIRE (FLAT TYPE) (16 CORE)      |        |
| 154      | 3-253-143-01 | SCREW (B2.6), (+) P TAPPING                         |        | 164      | 1-832-624-21 | WIRE (FLAT TYPE) (23 CORE)      |        |
| 155      | 2-581-393-02 | SPRING (CD)                                         |        | 165      | A-1134-279-A | CD BOARD, COMPLETE              |        |
| 156      | 4-242-171-01 | DAMPER 150 N                                        |        | S201     | 1-771-853-11 | SWITCH, DETECTION (LIMIT)       |        |
| 157      | 2-581-388-11 | CABINET (TOP)                                       |        | S820     | 1-692-960-11 | SWITCH, PUSH (1 KEY)            |        |
| 158      | 4-247-493-01 | COVER, CD                                           |        |          |              | (CD LID OPEN/CLOSE DETECT)      |        |
| 159      | 3-931-379-21 | RUBBER, VIBRATION PROOF (RED)                       |        |          |              |                                 |        |
| △ 160    | 8-820-126-02 | OPTICAL PICK-UP BLOCK                               |        |          |              |                                 |        |
|          |              | (KSM-213CDP/C2NP)                                   |        |          |              |                                 |        |
|          |              | (Including spindle motor (M401), sled motor (M402)) |        |          |              |                                 |        |

8-5. MAIN BOARD SECTION

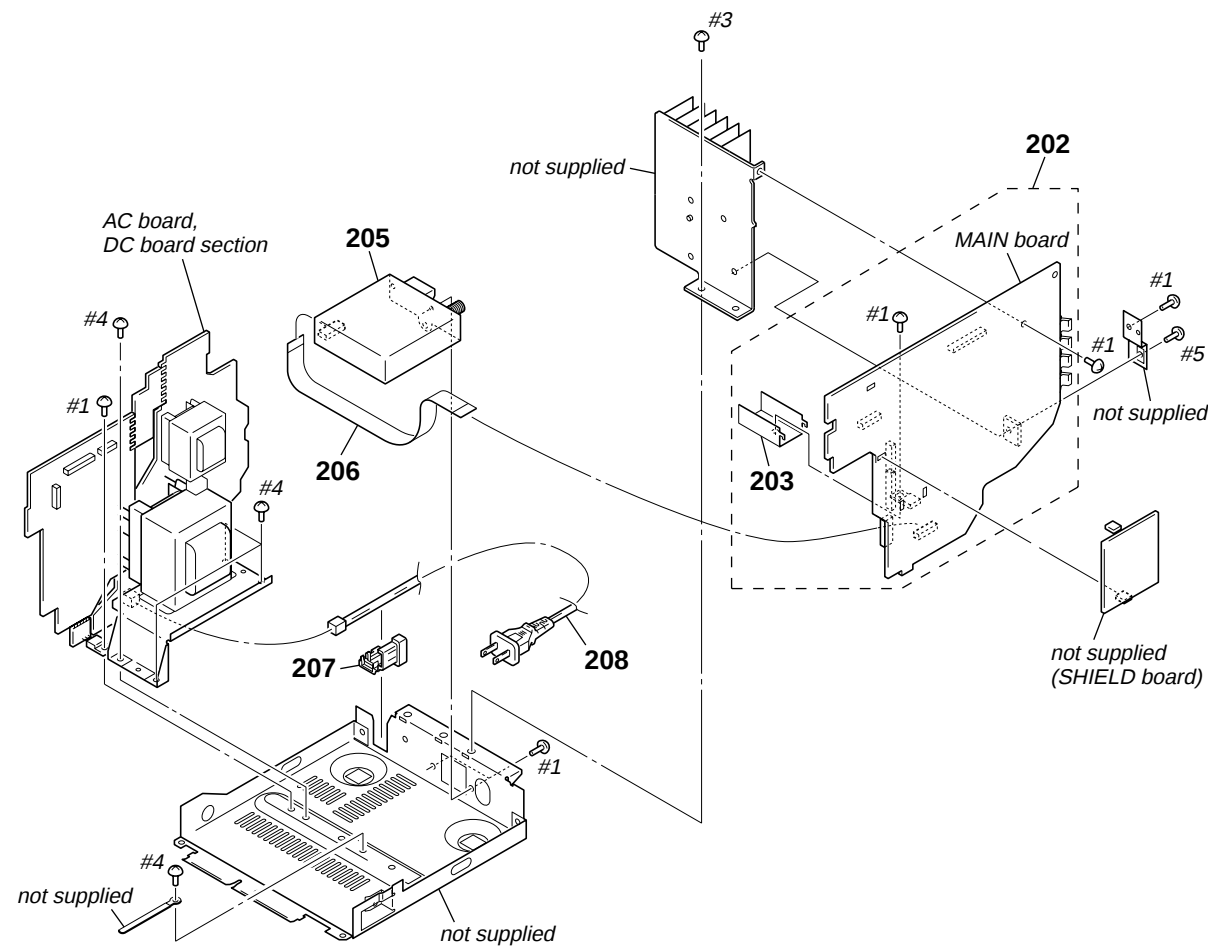

| Ref. No. | Part No.     | Description               | Remark | Ref. No. | Part No.     | Description                | Remark |
|----------|--------------|---------------------------|--------|----------|--------------|----------------------------|--------|
| 202      | A-1158-557-A | MAIN BOARD, COMPLETE      |        | △ 208    | 1-827-226-31 | CORD, POWER                |        |
| 203      | 2-586-961-01 | HEAT SINK                 |        | #1       | 7-685-646-79 | SCREW +BVTP 3X8 TYPE2 N-S  |        |
| 205      | 1-693-705-11 | TUNER (FM/AM)             |        | #3       | 7-685-872-01 | SCREW +BVTT 3X8 (S)        |        |
| 206      | 1-832-816-21 | WIRE (FLAT TYPE) (9 CORE) |        | #4       | 7-685-871-01 | SCREW +BVTT 3X6 (S)        |        |
| * 207    | 3-703-571-12 | BUSHING (S) (4516), CORD  |        | #5       | 7-685-648-79 | SCREW +BVTP 3X12 TYPE2 N-S |        |

## 8-6. AC BOARD, DC BOARD SECTION

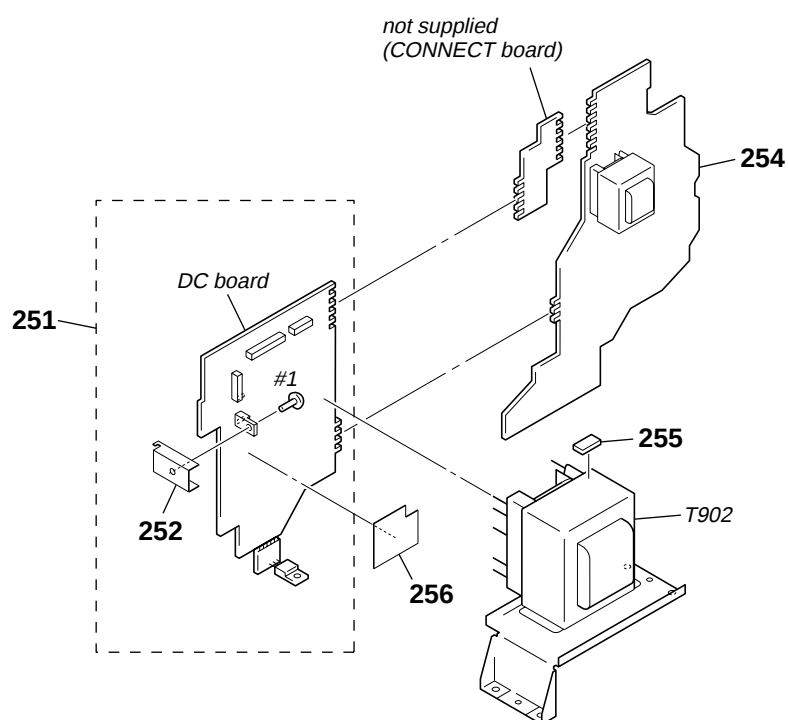

| Ref. No. | Part No.     | Description          | Remark | Ref. No. | Part No.     | Description               | Remark |
|----------|--------------|----------------------|--------|----------|--------------|---------------------------|--------|
| 251      | A-1158-136-A | DC BOARD, COMPLETE   |        | 256      | 2-633-205-01 | INSULATED PLATE           |        |
| 252      | 2-586-961-21 | HEAT SINK            |        | △ T902   | 1-443-574-11 | TRANSFORMER, POWER        |        |
| 254      | A-1158-562-A | AC BOARD, COMPLETE   |        | #1       | 7-685-646-79 | SCREW +BVTP 3X8 TYPE2 N-S |        |
| 255      | 2-594-960-12 | SPACER (TRANSFORMER) |        |          |              |                           |        |

SECTION 9  
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms.  
METAL: Metal-film resistor.  
METAL OXIDE: Metal oxide-film resistor.  
F: nonflammable
- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS  
In each case, u:  $\mu$ , for example:  
uA... :  $\mu$ A...      uPA... :  $\mu$ PA...  
uPB... :  $\mu$ PB...    uPC... :  $\mu$ PC...  
uPD... :  $\mu$ PD...
- CAPACITORS  
uF:  $\mu$ F
- COILS  
uH:  $\mu$ H

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
Replace only with part number specified.

When indicating parts by reference number, please include the board.

| Ref. No.       | Part No.     | Description                    | Remark |       |  |  | Ref. No. | Part No.     | Description           | Remark |      |  |  |
|----------------|--------------|--------------------------------|--------|-------|--|--|----------|--------------|-----------------------|--------|------|--|--|
|                | A-1158-562-A | AC BOARD, COMPLETE<br>*****    |        |       |  |  | C103     | 1-162-919-11 | CERAMIC CHIP 22PF     | 5%     | 50V  |  |  |
|                |              | < CAPACITOR >                  |        |       |  |  | C104     | 1-164-230-11 | CERAMIC CHIP 220PF    | 5%     | 50V  |  |  |
| C914           | 1-126-964-11 | ELECT 10uF                     | 20%    | 50V   |  |  | C105     | 1-162-919-11 | CERAMIC CHIP 22PF     | 5%     | 50V  |  |  |
| C921           | 1-126-767-11 | ELECT 1000uF                   | 20%    | 16V   |  |  | C107     | 1-164-230-11 | CERAMIC CHIP 220PF    | 5%     | 50V  |  |  |
| $\Delta$ C931  | 1-113-924-11 | CERAMIC 0.0047uF               | 20%    | 250V  |  |  | C108     | 1-164-230-11 | CERAMIC CHIP 220PF    | 5%     | 50V  |  |  |
|                |              | < CONNECTOR >                  |        |       |  |  | C109     | 1-164-230-11 | CERAMIC CHIP 220PF    | 5%     | 50V  |  |  |
| * CN901        | 1-793-660-11 | PIN, CONNECTOR (PC BOARD) 3P   |        |       |  |  | C110     | 1-164-230-11 | CERAMIC CHIP 220PF    | 5%     | 50V  |  |  |
|                |              | < DIODE >                      |        |       |  |  | C111     | 1-164-230-11 | CERAMIC CHIP 220PF    | 5%     | 50V  |  |  |
| D906           | 6-501-193-01 | DIODE 1SS355WTE-17             |        |       |  |  | C112     | 1-162-919-11 | CERAMIC CHIP 22PF     | 5%     | 50V  |  |  |
| D907           | 8-719-063-79 | DIODE 1N4002B                  |        |       |  |  | C113     | 1-162-919-11 | CERAMIC CHIP 22PF     | 5%     | 50V  |  |  |
| D908           | 8-719-063-79 | DIODE 1N4002B                  |        |       |  |  | C201     | 1-128-995-21 | ELECT CHIP 100uF      | 20%    | 10V  |  |  |
| D909           | 8-719-063-79 | DIODE 1N4002B                  |        |       |  |  | C202     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
| D910           | 8-719-063-79 | DIODE 1N4002B                  |        |       |  |  | C203     | 1-128-995-21 | ELECT CHIP 100uF      | 20%    | 10V  |  |  |
| D922           | 6-501-193-01 | DIODE 1SS355WTE-17             |        |       |  |  | C204     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
| D923           | 6-500-335-01 | DIODE MC2838-T112-1            |        |       |  |  | C205     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
|                |              | < LINE FILTER >                |        |       |  |  | C206     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
| $\Delta$ LF901 | 1-402-663-11 | TRANSFORMER, LINE FILTER (LFT) |        |       |  |  | C207     | 1-128-995-21 | ELECT CHIP 100uF      | 20%    | 10V  |  |  |
|                |              | < RESISTOR >                   |        |       |  |  | C208     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
| R904           | 1-216-829-11 | METAL CHIP 4.7K                | 5%     | 1/10W |  |  | C210     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
| R905           | 1-216-829-11 | METAL CHIP 4.7K                | 5%     | 1/10W |  |  | C213     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
| R906           | 1-216-833-11 | METAL CHIP 10K                 | 5%     | 1/10W |  |  | C214     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
| R908           | 1-216-821-11 | METAL CHIP 1K                  | 5%     | 1/10W |  |  | C215     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
| R909           | 1-216-821-11 | METAL CHIP 1K                  | 5%     | 1/10W |  |  | C217     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
|                |              | < RELAY >                      |        |       |  |  | C218     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
| $\Delta$ RY901 | 1-755-334-11 | RELAY, AC POWER                |        |       |  |  | C219     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
|                |              | < TRANSFORMER >                |        |       |  |  | C220     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
| $\Delta$ T901  | 1-443-833-11 | TRANSFORMER, POWER<br>*****    |        |       |  |  | C221     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
|                | A-1134-279-A | CD BOARD, COMPLETE<br>*****    |        |       |  |  | C222     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
|                |              | < CAPACITOR >                  |        |       |  |  | C223     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
| C101           | 1-162-919-11 | CERAMIC CHIP 22PF              | 5%     | 50V   |  |  | C224     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
| C102           | 1-162-919-11 | CERAMIC CHIP 22PF              | 5%     | 50V   |  |  | C226     | 1-165-908-11 | CERAMIC CHIP 1uF      | 10%    | 10V  |  |  |
|                |              |                                |        |       |  |  | C227     | 1-165-908-11 | CERAMIC CHIP 1uF      | 10%    | 10V  |  |  |
|                |              |                                |        |       |  |  | C230     | 1-162-927-11 | CERAMIC CHIP 100PF    | 5%     | 50V  |  |  |
|                |              |                                |        |       |  |  | C232     | 1-164-360-11 | CERAMIC CHIP 0.1uF    |        | 16V  |  |  |
|                |              |                                |        |       |  |  | C251     | 1-164-315-11 | CERAMIC CHIP 470PF    | 5%     | 50V  |  |  |
|                |              |                                |        |       |  |  | C252     | 1-162-968-11 | CERAMIC CHIP 0.0047uF | 10%    | 50V  |  |  |
|                |              |                                |        |       |  |  | C253     | 1-164-315-11 | CERAMIC CHIP 470PF    | 5%     | 50V  |  |  |
|                |              |                                |        |       |  |  | C254     | 1-162-968-11 | CERAMIC CHIP 0.0047uF | 10%    | 50V  |  |  |
|                |              |                                |        |       |  |  | C256     | 1-107-826-11 | CERAMIC CHIP 0.1uF    | 10%    | 16V  |  |  |
|                |              |                                |        |       |  |  | C257     | 1-107-826-11 | CERAMIC CHIP 0.1uF    | 10%    | 16V  |  |  |
|                |              |                                |        |       |  |  | C258     | 1-164-230-11 | CERAMIC CHIP 220PF    | 5%     | 50V  |  |  |
|                |              |                                |        |       |  |  | C260     | 1-117-863-11 | CERAMIC CHIP 0.47uF   | 10%    | 6.3V |  |  |
|                |              |                                |        |       |  |  | C261     | 1-162-970-11 | CERAMIC CHIP 0.01uF   | 10%    | 25V  |  |  |

41

HCD-NEZ31

DC

HEAD PHONE

MAIN

| Ref. No.                | Part No.                   | Description                    | Remark |
|-------------------------|----------------------------|--------------------------------|--------|
| < CONNECTOR >           |                            |                                |        |
| CN900                   | 1-568-828-11               | CONNECTOR, FFC 9P              |        |
| CN902                   | 1-819-135-11               | PIN, CONNECTOR 7P              |        |
| CN903                   | 1-819-132-11               | PIN, CONNECTOR 4P              |        |
| < DIODE >               |                            |                                |        |
| D322                    | 8-719-000-07               | DIODE MC2836                   |        |
| D911                    | 8-719-046-47               | DIODE 1N5401TM                 |        |
| D912                    | 8-719-046-47               | DIODE 1N5401TM                 |        |
| D913                    | 8-719-046-47               | DIODE 1N5401TM                 |        |
| D914                    | 8-719-046-47               | DIODE 1N5401TM                 |        |
| D916                    | 8-719-046-47               | DIODE 1N5401TM                 |        |
| D917                    | 8-719-046-47               | DIODE 1N5401TM                 |        |
| D918                    | 8-719-046-47               | DIODE 1N5401TM                 |        |
| D919                    | 8-719-046-47               | DIODE 1N5401TM                 |        |
| D920                    | 8-719-000-08               | DIODE MC2838                   |        |
| D926                    | 8-719-063-79               | DIODE 1N4002B                  |        |
| D927                    | 8-719-063-79               | DIODE 1N4002B                  |        |
| D928                    | 8-719-063-79               | DIODE 1N4002B                  |        |
| D929                    | 6-501-193-01               | DIODE 1SS355WTE-17             |        |
| D930                    | 6-501-193-01               | DIODE 1SS355WTE-17             |        |
| < IC >                  |                            |                                |        |
| IC900                   | 6-709-433-01               | IC KIA7810API                  |        |
| IC901                   | 6-702-771-01               | IC TA78033LS                   |        |
| IC903                   | 6-703-546-01               | IC TA7804LS                    |        |
| < TRANSISTOR >          |                            |                                |        |
| Q315                    | 8-729-036-89               | TRANSISTOR KTC3198GR-AT        |        |
| Q333                    | 8-729-027-43               | TRANSISTOR DTC114EKA-T146      |        |
| Q338                    | 8-729-027-43               | TRANSISTOR DTC114EKA-T146      |        |
| < RESISTOR >            |                            |                                |        |
| R901                    | 1-216-837-11               | METAL CHIP 22K 5% 1/10W        |        |
| R902                    | 1-216-837-11               | METAL CHIP 22K 5% 1/10W        |        |
| R911                    | 1-216-841-11               | METAL CHIP 47K 5% 1/10W        |        |
| R912                    | 1-216-841-11               | METAL CHIP 47K 5% 1/10W        |        |
| R913                    | 1-216-841-11               | METAL CHIP 47K 5% 1/10W        |        |
| R914                    | 1-216-829-11               | METAL CHIP 4.7K 5% 1/10W       |        |
| R915                    | 1-216-837-11               | METAL CHIP 22K 5% 1/10W        |        |
| R916                    | 1-216-841-11               | METAL CHIP 47K 5% 1/10W        |        |
| R919                    | 1-216-841-11               | METAL CHIP 47K 5% 1/10W        |        |
| R921                    | 1-216-841-11               | METAL CHIP 47K 5% 1/10W        |        |
| R922                    | 1-216-849-11               | METAL CHIP 220K 5% 1/10W       |        |
| *****                   |                            |                                |        |
| A-1158-127-A            | HEAD PHONE BOARD, COMPLETE |                                |        |
| *****                   |                            |                                |        |
| < CAPACITOR >           |                            |                                |        |
| C520                    | 1-162-974-11               | CERAMIC CHIP 0.01uF 50V        |        |
| C521                    | 1-162-974-11               | CERAMIC CHIP 0.01uF 50V        |        |
| < FLEXIBLE FLAT CABLE > |                            |                                |        |
| FFC501                  | 1-831-785-21               | CABLE, FLEXIBLE FLAT (13 CORE) |        |

| Ref. No.      | Part No.     | Description               | Remark   |     |       |
|---------------|--------------|---------------------------|----------|-----|-------|
| < JACK >      |              |                           |          |     |       |
| J500          | 1-785-448-21 | JACK (PHONES)             |          |     |       |
| < RESISTOR >  |              |                           |          |     |       |
| R519          | 1-216-817-11 | METAL CHIP                | 470      | 5%  | 1/10W |
| R520          | 1-216-817-11 | METAL CHIP                | 470      | 5%  | 1/10W |
| R525          | 1-216-817-11 | METAL CHIP                | 470      | 5%  | 1/10W |
| R526          | 1-216-817-11 | METAL CHIP                | 470      | 5%  | 1/10W |
| R527          | 1-216-817-11 | METAL CHIP                | 470      | 5%  | 1/10W |
|               |              |                           |          |     |       |
| R528          | 1-216-817-11 | METAL CHIP                | 470      | 5%  | 1/10W |
| R529          | 1-216-813-11 | METAL CHIP                | 220      | 5%  | 1/10W |
| R530          | 1-216-813-11 | METAL CHIP                | 220      | 5%  | 1/10W |
| R531          | 1-216-813-11 | METAL CHIP                | 220      | 5%  | 1/10W |
| R532          | 1-216-813-11 | METAL CHIP                | 220      | 5%  | 1/10W |
|               |              |                           |          |     |       |
| R533          | 1-216-813-11 | METAL CHIP                | 220      | 5%  | 1/10W |
| R534          | 1-216-813-11 | METAL CHIP                | 220      | 5%  | 1/10W |
| R541          | 1-216-833-11 | METAL CHIP                | 10K      | 5%  | 1/10W |
| R542          | 1-216-833-11 | METAL CHIP                | 10K      | 5%  | 1/10W |
| R543          | 1-216-833-11 | METAL CHIP                | 10K      | 5%  | 1/10W |
|               |              |                           |          |     |       |
| R544          | 1-216-833-11 | METAL CHIP                | 10K      | 5%  | 1/10W |
| R545          | 1-216-833-11 | METAL CHIP                | 10K      | 5%  | 1/10W |
| R546          | 1-216-833-11 | METAL CHIP                | 10K      | 5%  | 1/10W |
| R547          | 1-216-833-11 | METAL CHIP                | 10K      | 5%  | 1/10W |
| R548          | 1-216-833-11 | METAL CHIP                | 10K      | 5%  | 1/10W |
| *****         |              |                           |          |     |       |
| A-1158-557-A  |              | MAIN BOARD, COMPLETE      |          |     |       |
|               |              | *****                     |          |     |       |
| 2-586-961-01  |              | HEAT SINK                 |          |     |       |
| 7-685-646-79  |              | SCREW +BVTP 3X8 TYPE2 N-S |          |     |       |
| < CAPACITOR > |              |                           |          |     |       |
| C101          | 1-162-964-11 | CERAMIC CHIP              | 0.001uF  | 10% | 50V   |
| C102          | 1-162-966-11 | CERAMIC CHIP              | 0.0022uF | 10% | 50V   |
| C103          | 1-162-927-11 | CERAMIC CHIP              | 100PF    | 5%  | 50V   |
| C104          | 1-104-665-11 | ELECT                     | 100uF    | 20% | 25V   |
| C106          | 1-164-227-11 | CERAMIC CHIP              | 0.022uF  | 10% | 25V   |
|               |              |                           |          |     |       |
| C107          | 1-126-961-11 | ELECT                     | 2.2uF    | 20% | 50V   |
| C108          | 1-162-968-11 | CERAMIC CHIP              | 0.0047uF | 10% | 50V   |
| C111          | 1-162-964-11 | CERAMIC CHIP              | 0.001uF  | 10% | 50V   |
| C113          | 1-126-957-11 | ELECT                     | 0.22uF   | 20% | 50V   |
| C114          | 1-126-959-11 | ELECT                     | 0.47uF   | 20% | 50V   |
|               |              |                           |          |     |       |
| C116          | 1-162-962-11 | CERAMIC CHIP              | 470PF    | 10% | 50V   |
| C117          | 1-162-964-11 | CERAMIC CHIP              | 0.001uF  | 10% | 50V   |
| C118          | 1-165-176-11 | CERAMIC CHIP              | 0.047uF  | 10% | 16V   |
| C119          | 1-100-597-91 | CERAMIC CHIP              | 0.1uF    | 10% | 25V   |
| C120          | 1-162-960-11 | CERAMIC CHIP              | 220PF    | 10% | 50V   |
|               |              |                           |          |     |       |
| C121          | 1-165-908-11 | CERAMIC CHIP              | 1uF      | 10% | 10V   |
| C122          | 1-100-597-91 | CERAMIC CHIP              | 0.1uF    | 10% | 25V   |
| C126          | 1-162-960-11 | CERAMIC CHIP              | 220PF    | 10% | 50V   |
| C127          | 1-162-962-11 | CERAMIC CHIP              | 470PF    | 10% | 50V   |
| C133          | 1-130-491-00 | MYLAR                     | 0.047uF  | 5%  | 50V   |
|               |              |                           |          |     |       |
| C135          | 1-126-964-11 | ELECT                     | 10uF     | 20% | 50V   |
| C138          | 1-126-965-11 | ELECT                     | 22uF     | 20% | 50V   |
| C139          | 1-162-962-11 | CERAMIC CHIP              | 470PF    | 10% | 50V   |
| C140          | 1-162-960-11 | CERAMIC CHIP              | 220PF    | 10% | 50V   |
| C201          | 1-162-964-11 | CERAMIC CHIP              | 0.001uF  | 10% | 50V   |

43

# HCD-NEZ31

## MAIN

| Ref. No.            | Part No.     | Description                         | Remark         |    |       |  | Ref. No. | Part No.     | Description | Remark |    |       |  |
|---------------------|--------------|-------------------------------------|----------------|----|-------|--|----------|--------------|-------------|--------|----|-------|--|
| FB306               | 1-216-864-11 | SHORT CHIP                          | 0              |    |       |  | R114     | 1-216-829-11 | METAL CHIP  | 4.7K   | 5% | 1/10W |  |
| FB317               | 1-216-864-11 | SHORT CHIP                          | 0              |    |       |  | R116     | 1-216-841-11 | METAL CHIP  | 47K    | 5% | 1/10W |  |
| FB318               | 1-216-864-11 | SHORT CHIP                          | 0              |    |       |  |          |              |             |        |    |       |  |
| < IC >              |              |                                     |                |    |       |  |          |              |             |        |    |       |  |
| IC302               | 6-702-895-01 | IC BD3881FV                         |                |    |       |  | R117     | 1-216-825-11 | METAL CHIP  | 2.2K   | 5% | 1/10W |  |
| IC303               | 8-759-394-36 | IC BA09T                            |                |    |       |  | R118     | 1-216-833-11 | METAL CHIP  | 10K    | 5% | 1/10W |  |
| IC501               | 6-707-994-01 | IC STK453-030A                      |                |    |       |  | R119     | 1-216-833-11 | METAL CHIP  | 10K    | 5% | 1/10W |  |
| < JACK >            |              |                                     |                |    |       |  |          |              |             |        |    |       |  |
| J302                | 1-780-275-11 | TERMINAL BOARD, PUSH (4P) (SPEAKER) |                |    |       |  | R120     | 1-216-833-11 | METAL CHIP  | 10K    | 5% | 1/10W |  |
| J321                | 1-815-629-21 | JACK (AUDIO IN)                     |                |    |       |  | R121     | 1-216-825-11 | METAL CHIP  | 2.2K   | 5% | 1/10W |  |
| < JUMPER RESISTOR > |              |                                     |                |    |       |  |          |              |             |        |    |       |  |
| JR100               | 1-216-864-11 | SHORT CHIP                          | 0              |    |       |  | R122     | 1-216-853-11 | METAL CHIP  | 470K   | 5% | 1/10W |  |
| JR103               | 1-216-864-11 | SHORT CHIP                          | 0              |    |       |  | R123     | 1-216-825-11 | METAL CHIP  | 2.2K   | 5% | 1/10W |  |
| JR115               | 1-216-864-11 | SHORT CHIP                          | 0              |    |       |  | R124     | 1-216-837-11 | METAL CHIP  | 22K    | 5% | 1/10W |  |
| JR136               | 1-216-864-11 | SHORT CHIP                          | 0              |    |       |  | R125     | 1-216-837-11 | METAL CHIP  | 22K    | 5% | 1/10W |  |
| JR152               | 1-216-864-11 | SHORT CHIP                          | 0              |    |       |  | R126     | 1-216-837-11 | METAL CHIP  | 22K    | 5% | 1/10W |  |
| JR215               | 1-216-864-11 | SHORT CHIP                          | 0              |    |       |  |          |              |             |        |    |       |  |
| JR236               | 1-216-864-11 | SHORT CHIP                          | 0              |    |       |  | R128     | 1-216-821-11 | METAL CHIP  | 1K     | 5% | 1/10W |  |
| JR500               | 1-216-864-11 | SHORT CHIP                          | 0              |    |       |  | R129     | 1-216-793-11 | METAL CHIP  | 4.7    | 5% | 1/10W |  |
| < COIL >            |              |                                     |                |    |       |  |          |              |             |        |    |       |  |
| L101                | 1-422-009-13 | COIL, AIR-CORE                      |                |    |       |  | R130     | 1-216-793-11 | METAL CHIP  | 4.7    | 5% | 1/10W |  |
| L201                | 1-422-009-13 | COIL, AIR-CORE                      |                |    |       |  | R131     | 1-216-821-11 | METAL CHIP  | 1K     | 5% | 1/10W |  |
| < TRANSISTOR >      |              |                                     |                |    |       |  |          |              |             |        |    |       |  |
| Q318                | 8-729-120-28 | TRANSISTOR                          | 2SC1623-L5L6   |    |       |  | R132     | 1-216-821-11 | METAL CHIP  | 1K     | 5% | 1/10W |  |
| Q319                | 8-729-120-28 | TRANSISTOR                          | 2SC1623-L5L6   |    |       |  |          |              |             |        |    |       |  |
| Q320                | 8-729-045-62 | FET                                 | 2SK2158-T2B    |    |       |  | R133     | 1-216-864-11 | SHORT CHIP  | 0      |    |       |  |
| Q326                | 8-729-120-28 | TRANSISTOR                          | 2SC1623-L5L6   |    |       |  | R134     | 1-216-864-11 | SHORT CHIP  | 0      |    |       |  |
| Q327                | 8-729-120-28 | TRANSISTOR                          | 2SC1623-L5L6   |    |       |  | R135     | 1-216-845-11 | METAL CHIP  | 100K   | 5% | 1/10W |  |
| Q328                | 8-729-120-28 | TRANSISTOR                          | 2SC1623-L5L6   |    |       |  | R136     | 1-216-833-11 | METAL CHIP  | 10K    | 5% | 1/10W |  |
| Q329                | 8-729-120-28 | TRANSISTOR                          | 2SC1623-L5L6   |    |       |  | R137     | 1-216-829-11 | METAL CHIP  | 4.7K   | 5% | 1/10W |  |
| Q332                | 8-729-600-22 | TRANSISTOR                          | 2SA1235-F      |    |       |  |          |              |             |        |    |       |  |
| Q334                | 8-729-120-28 | TRANSISTOR                          | 2SC1623-L5L6   |    |       |  | R138     | 1-216-825-11 | METAL CHIP  | 2.2K   | 5% | 1/10W |  |
| Q335                | 8-729-120-28 | TRANSISTOR                          | 2SC1623-L5L6   |    |       |  | R139     | 1-216-837-11 | METAL CHIP  | 22K    | 5% | 1/10W |  |
| Q342                | 8-729-600-22 | TRANSISTOR                          | 2SA1235-F      |    |       |  | R143     | 1-216-833-11 | METAL CHIP  | 10K    | 5% | 1/10W |  |
| Q343                | 8-729-120-28 | TRANSISTOR                          | 2SC1623-L5L6   |    |       |  | R145     | 1-216-864-11 | SHORT CHIP  | 0      |    |       |  |
| Q344                | 8-729-142-46 | TRANSISTOR                          | 2SC2001-LK     |    |       |  | R147     | 1-216-837-11 | METAL CHIP  | 22K    | 5% | 1/10W |  |
| Q347                | 8-729-037-03 | TRANSISTOR                          | KTA1266GR-AT   |    |       |  |          |              |             |        |    |       |  |
| Q348                | 8-729-027-43 | TRANSISTOR                          | DTC114EKA-T146 |    |       |  | R148     | 1-216-825-11 | METAL CHIP  | 2.2K   | 5% | 1/10W |  |
| < RESISTOR >        |              |                                     |                |    |       |  |          |              |             |        |    |       |  |
| R100                | 1-216-833-11 | METAL CHIP                          | 10K            | 5% | 1/10W |  | R149     | 1-216-833-11 | METAL CHIP  | 10K    | 5% | 1/10W |  |
| R101                | 1-216-841-11 | METAL CHIP                          | 47K            | 5% | 1/10W |  | R153     | 1-260-304-51 | CARBON      | 10     | 5% | 1/2W  |  |
| R102                | 1-216-841-11 | METAL CHIP                          | 47K            | 5% | 1/10W |  | R200     | 1-216-833-11 | METAL CHIP  | 10K    | 5% | 1/10W |  |
| R103                | 1-216-817-11 | METAL CHIP                          | 470            | 5% | 1/10W |  | R201     | 1-216-841-11 | METAL CHIP  | 47K    | 5% | 1/10W |  |
| R104                | 1-216-805-11 | METAL CHIP                          | 47             | 5% | 1/10W |  |          |              |             |        |    |       |  |
| R105                | 1-216-849-11 | METAL CHIP                          | 220K           | 5% | 1/10W |  | R202     | 1-216-841-11 | METAL CHIP  | 47K    | 5% | 1/10W |  |
| R106                | 1-216-829-11 | METAL CHIP                          | 4.7K           | 5% | 1/10W |  | R203     | 1-216-817-11 | METAL CHIP  | 470    | 5% | 1/10W |  |
| R107                | 1-216-845-11 | METAL CHIP                          | 100K           | 5% | 1/10W |  | R204     | 1-216-805-11 | METAL CHIP  | 47     | 5% | 1/10W |  |
| R108                | 1-216-833-11 | METAL CHIP                          | 10K            | 5% | 1/10W |  | R205     | 1-216-849-11 | METAL CHIP  | 220K   | 5% | 1/10W |  |
| R109                | 1-216-829-11 | METAL CHIP                          | 4.7K           | 5% | 1/10W |  | R206     | 1-216-829-11 | METAL CHIP  | 4.7K   | 5% | 1/10W |  |
| R110                | 1-216-821-11 | METAL CHIP                          | 1K             | 5% | 1/10W |  |          |              |             |        |    |       |  |
| R111                | 1-216-837-11 | METAL CHIP                          | 22K            | 5% | 1/10W |  | R207     | 1-216-845-11 | METAL CHIP  | 100K   | 5% | 1/10W |  |
| R112                | 1-216-837-11 | METAL CHIP                          | 22K            | 5% | 1/10W |  | R208     | 1-216-833-11 | METAL CHIP  | 10K    | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R209     | 1-216-829-11 | METAL CHIP  | 4.7K   | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R210     | 1-216-821-11 | METAL CHIP  | 1K     | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R211     | 1-216-837-11 | METAL CHIP  | 22K    | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  |          |              |             |        |    |       |  |
|                     |              |                                     |                |    |       |  | R212     | 1-216-837-11 | METAL CHIP  | 22K    | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R214     | 1-216-829-11 | METAL CHIP  | 4.7K   | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R216     | 1-216-841-11 | METAL CHIP  | 47K    | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R217     | 1-216-825-11 | METAL CHIP  | 2.2K   | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R218     | 1-216-833-11 | METAL CHIP  | 10K    | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  |          |              |             |        |    |       |  |
|                     |              |                                     |                |    |       |  | R219     | 1-216-833-11 | METAL CHIP  | 10K    | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R220     | 1-216-833-11 | METAL CHIP  | 10K    | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R221     | 1-216-825-11 | METAL CHIP  | 2.2K   | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R222     | 1-216-853-11 | METAL CHIP  | 470K   | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R223     | 1-216-825-11 | METAL CHIP  | 2.2K   | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  |          |              |             |        |    |       |  |
|                     |              |                                     |                |    |       |  | R224     | 1-216-837-11 | METAL CHIP  | 22K    | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R225     | 1-216-837-11 | METAL CHIP  | 22K    | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R226     | 1-216-837-11 | METAL CHIP  | 22K    | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R228     | 1-216-821-11 | METAL CHIP  | 1K     | 5% | 1/10W |  |
|                     |              |                                     |                |    |       |  | R229     | 1-216-793-11 | METAL CHIP  | 4.7    | 5% | 1/10W |  |

| Ref. No. | Part No.     | Description |      |    | Remark | Ref. No.        | Part No.               | Description                   |         |     | Remark |
|----------|--------------|-------------|------|----|--------|-----------------|------------------------|-------------------------------|---------|-----|--------|
| R230     | 1-216-793-11 | METAL CHIP  | 4.7  | 5% | 1/10W  | R383            | 1-216-813-11           | METAL CHIP                    | 220     | 5%  | 1/10W  |
| R231     | 1-216-821-11 | METAL CHIP  | 1K   | 5% | 1/10W  | R384            | 1-216-813-11           | METAL CHIP                    | 220     | 5%  | 1/10W  |
| R232     | 1-216-821-11 | METAL CHIP  | 1K   | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R233     | 1-216-864-11 | SHORT CHIP  | 0    |    |        | R385            | 1-260-328-11           | CARBON                        | 1K      | 5%  | 1/2W   |
| R234     | 1-216-864-11 | SHORT CHIP  | 0    |    |        | R386            | 1-260-087-11           | CARBON                        | 100     | 5%  | 1/2W   |
|          |              |             |      |    |        | R387            | 1-216-833-11           | METAL CHIP                    | 10K     | 5%  | 1/10W  |
| R235     | 1-216-845-11 | METAL CHIP  | 100K | 5% | 1/10W  | R388            | 1-216-833-11           | METAL CHIP                    | 10K     | 5%  | 1/10W  |
| R236     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  | R389            | 1-216-833-11           | METAL CHIP                    | 10K     | 5%  | 1/10W  |
| R237     | 1-216-829-11 | METAL CHIP  | 4.7K | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R238     | 1-216-825-11 | METAL CHIP  | 2.2K | 5% | 1/10W  | R390            | 1-216-845-11           | METAL CHIP                    | 100K    | 5%  | 1/10W  |
| R239     | 1-216-837-11 | METAL CHIP  | 22K  | 5% | 1/10W  | R501            | 1-216-821-11           | METAL CHIP                    | 1K      | 5%  | 1/10W  |
|          |              |             |      |    |        | R502            | 1-216-841-11           | METAL CHIP                    | 47K     | 5%  | 1/10W  |
| R243     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  | R503            | 1-216-817-11           | METAL CHIP                    | 470     | 5%  | 1/10W  |
| R245     | 1-216-864-11 | SHORT CHIP  | 0    |    |        | R504            | 1-216-841-11           | METAL CHIP                    | 47K     | 5%  | 1/10W  |
| R247     | 1-216-837-11 | METAL CHIP  | 22K  | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R248     | 1-216-825-11 | METAL CHIP  | 2.2K | 5% | 1/10W  | R505            | 1-216-841-11           | METAL CHIP                    | 47K     | 5%  | 1/10W  |
| R249     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  | R506            | 1-216-821-11           | METAL CHIP                    | 1K      | 5%  | 1/10W  |
|          |              |             |      |    |        | R508            | 1-216-817-11           | METAL CHIP                    | 470     | 5%  | 1/10W  |
| R253     | 1-260-304-51 | CARBON      | 10   | 5% | 1/2W   | R509            | 1-216-841-11           | METAL CHIP                    | 47K     | 5%  | 1/10W  |
| R301     | 1-216-837-11 | METAL CHIP  | 22K  | 5% | 1/10W  | R512            | 1-216-825-11           | METAL CHIP                    | 2.2K    | 5%  | 1/10W  |
| R302     | 1-216-845-11 | METAL CHIP  | 100K | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R303     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  | R513            | 1-216-825-11           | METAL CHIP                    | 2.2K    | 5%  | 1/10W  |
| R304     | 1-216-829-11 | METAL CHIP  | 4.7K | 5% | 1/10W  | R514            | 1-216-829-11           | METAL CHIP                    | 4.7K    | 5%  | 1/10W  |
|          |              |             |      |    |        | △ R515          | 1-216-373-11           | METAL OXIDE                   | 2.2     | 5%  | 2W F   |
| R305     | 1-216-825-11 | METAL CHIP  | 2.2K | 5% | 1/10W  | △ R516          | 1-216-373-11           | METAL OXIDE                   | 2.2     | 5%  | 2W F   |
| R306     | 1-216-825-11 | METAL CHIP  | 2.2K | 5% | 1/10W  | R517            | 1-216-841-11           | METAL CHIP                    | 47K     | 5%  | 1/10W  |
| R307     | 1-216-821-11 | METAL CHIP  | 1K   | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R308     | 1-216-821-11 | METAL CHIP  | 1K   | 5% | 1/10W  | R518            | 1-216-841-11           | METAL CHIP                    | 47K     | 5%  | 1/10W  |
| R309     | 1-216-821-11 | METAL CHIP  | 1K   | 5% | 1/10W  | R521            | 1-216-833-11           | METAL CHIP                    | 10K     | 5%  | 1/10W  |
|          |              |             |      |    |        | R523            | 1-216-809-11           | METAL CHIP                    | 100     | 5%  | 1/10W  |
| R310     | 1-216-829-11 | METAL CHIP  | 4.7K | 5% | 1/10W  | R524            | 1-216-809-11           | METAL CHIP                    | 100     | 5%  | 1/10W  |
| R311     | 1-216-793-11 | METAL CHIP  | 4.7  | 5% | 1/10W  | R535            | 1-260-087-11           | CARBON                        | 100     | 5%  | 1/2W   |
| R312     | 1-216-793-11 | METAL CHIP  | 4.7  | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R313     | 1-216-825-11 | METAL CHIP  | 2.2K | 5% | 1/10W  | R536            | 1-260-087-11           | CARBON                        | 100     | 5%  | 1/2W   |
| R314     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  | R537            | 1-216-821-11           | METAL CHIP                    | 1K      | 5%  | 1/10W  |
|          |              |             |      |    |        | R538            | 1-216-833-11           | METAL CHIP                    | 10K     | 5%  | 1/10W  |
| R315     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  | R539            | 1-216-833-11           | METAL CHIP                    | 10K     | 5%  | 1/10W  |
| R316     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  | R540            | 1-216-833-11           | METAL CHIP                    | 10K     | 5%  | 1/10W  |
| R317     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R319     | 1-216-837-11 | METAL CHIP  | 22K  | 5% | 1/10W  | < TRANSFORMER > |                        |                               |         |     |        |
| R332     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  | T301            | 1-443-760-11           | TRANSFORMER, BIAS OSCILLATION |         |     |        |
|          |              |             |      |    |        | *****           |                        |                               |         |     |        |
| R333     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R334     | 1-216-849-11 | METAL CHIP  | 220K | 5% | 1/10W  | A-1158-554-A    | PANEL BOARD, COMPLETE  |                               |         |     |        |
| R335     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  | *****           |                        |                               |         |     |        |
| R336     | 1-216-841-11 | METAL CHIP  | 47K  | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R337     | 1-216-841-11 | METAL CHIP  | 47K  | 5% | 1/10W  | 2-581-390-01    | HOLDER (LCD)           |                               |         |     |        |
|          |              |             |      |    |        | 2-581-391-01    | PLATE, LIGHT GUIDE     |                               |         |     |        |
| R338     | 1-216-853-11 | METAL CHIP  | 470K | 5% | 1/10W  | 2-586-988-12    | SHEET (LCD), DIFFUSION |                               |         |     |        |
| R339     | 1-216-853-11 | METAL CHIP  | 470K | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R340     | 1-216-853-11 | METAL CHIP  | 470K | 5% | 1/10W  | < CAPACITOR >   |                        |                               |         |     |        |
| R358     | 1-216-841-11 | METAL CHIP  | 47K  | 5% | 1/10W  | C801            | 1-124-234-00           | ELECT                         | 22uF    | 20% | 16V    |
| R362     | 1-216-837-11 | METAL CHIP  | 22K  | 5% | 1/10W  | C802            | 1-124-584-00           | ELECT                         | 100uF   | 20% | 6.3V   |
|          |              |             |      |    |        | C803            | 1-107-726-91           | CERAMIC CHIP                  | 0.01uF  | 10% | 16V    |
| R366     | 1-216-837-11 | METAL CHIP  | 22K  | 5% | 1/10W  | C804            | 1-107-726-91           | CERAMIC CHIP                  | 0.01uF  | 10% | 16V    |
| R367     | 1-216-825-11 | METAL CHIP  | 2.2K | 5% | 1/10W  | C805            | 1-164-360-11           | CERAMIC CHIP                  | 0.1uF   |     | 16V    |
| R368     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R369     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  | C806            | 1-107-726-91           | CERAMIC CHIP                  | 0.01uF  | 10% | 16V    |
| R370     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  | C807            | 1-126-518-11           | ELECT                         | 470uF   | 20% | 4V     |
|          |              |             |      |    |        | C808            | 1-124-589-11           | ELECT                         | 47uF    | 20% | 16V    |
| R371     | 1-216-833-11 | METAL CHIP  | 10K  | 5% | 1/10W  | C809            | 1-124-234-00           | ELECT                         | 22uF    | 20% | 16V    |
| R376     | 1-216-845-11 | METAL CHIP  | 100K | 5% | 1/10W  | C811            | 1-126-157-11           | ELECT                         | 10uF    | 20% | 16V    |
| R377     | 1-216-817-11 | METAL CHIP  | 470  | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R378     | 1-216-817-11 | METAL CHIP  | 470  | 5% | 1/10W  | C812            | 1-162-962-11           | CERAMIC CHIP                  | 470PF   | 10% | 50V    |
| R379     | 1-216-817-11 | METAL CHIP  | 470  | 5% | 1/10W  | C815            | 1-162-964-11           | CERAMIC CHIP                  | 0.001uF | 10% | 50V    |
|          |              |             |      |    |        | C816            | 1-107-726-91           | CERAMIC CHIP                  | 0.01uF  | 10% | 16V    |
| R380     | 1-216-817-11 | METAL CHIP  | 470  | 5% | 1/10W  | C817            | 1-107-726-91           | CERAMIC CHIP                  | 0.01uF  | 10% | 16V    |
| R381     | 1-216-817-11 | METAL CHIP  | 470  | 5% | 1/10W  |                 |                        |                               |         |     |        |
| R382     | 1-216-817-11 | METAL CHIP  | 470  | 5% | 1/10W  |                 |                        |                               |         |     |        |

# HCD-NEZ31

## PANEL

| Ref. No. | Part No.     | Description                          |        |     |     | Remark | Ref. No.     | Part No.       | Description    |    |       |  | Remark |
|----------|--------------|--------------------------------------|--------|-----|-----|--------|--------------|----------------|----------------|----|-------|--|--------|
| C818     | 1-126-518-11 | ELECT                                | 470uF  | 20% | 4V  |        |              | < TRANSISTOR > |                |    |       |  |        |
| C819     | 1-162-919-11 | CERAMIC CHIP                         | 22PF   | 5%  | 50V | Q801   | 8-729-120-28 | TRANSISTOR     | 2SC1623-L5L6   |    |       |  |        |
| C820     | 1-164-315-11 | CERAMIC CHIP                         | 470PF  | 5%  | 50V | Q802   | 8-729-037-13 | TRANSISTOR     | KTA1271Y       |    |       |  |        |
| C821     | 1-164-816-11 | CERAMIC CHIP                         | 220PF  | 2%  | 50V | Q803   | 8-729-027-43 | TRANSISTOR     | DTC114EKA-T146 |    |       |  |        |
| C822     | 1-162-919-11 | CERAMIC CHIP                         | 22PF   | 5%  | 50V | Q804   | 8-729-037-13 | TRANSISTOR     | KTA1271Y       |    |       |  |        |
| C823     | 1-107-726-91 | CERAMIC CHIP                         | 0.01uF | 10% | 16V | Q805   | 8-729-027-43 | TRANSISTOR     | DTC114EKA-T146 |    |       |  |        |
| C826     | 1-164-360-11 | CERAMIC CHIP                         | 0.1uF  |     | 16V | Q807   | 8-729-120-28 | TRANSISTOR     | 2SC1623-L5L6   |    |       |  |        |
| C827     | 1-164-360-11 | CERAMIC CHIP                         | 0.1uF  |     | 16V | Q808   | 8-729-120-28 | TRANSISTOR     | 2SC1623-L5L6   |    |       |  |        |
| C828     | 1-164-360-11 | CERAMIC CHIP                         | 0.1uF  |     | 16V |        |              | < RESISTOR >   |                |    |       |  |        |
| C829     | 1-107-726-91 | CERAMIC CHIP                         | 0.01uF | 10% | 16V |        |              |                |                |    |       |  |        |
| C832     | 1-164-360-11 | CERAMIC CHIP                         | 0.1uF  |     | 16V |        |              |                |                |    |       |  |        |
| C833     | 1-107-726-91 | CERAMIC CHIP                         | 0.01uF | 10% | 16V | R701   | 1-216-821-11 | METAL CHIP     | 1K             | 5% | 1/10W |  |        |
| C834     | 1-107-726-91 | CERAMIC CHIP                         | 0.01uF | 10% | 16V | R702   | 1-216-821-11 | METAL CHIP     | 1K             | 5% | 1/10W |  |        |
| C859     | 1-124-259-11 | ELECT                                | 4.7uF  | 20% | 50V | R703   | 1-216-821-11 | METAL CHIP     | 1K             | 5% | 1/10W |  |        |
|          |              | < DIODE >                            |        |     |     | R704   | 1-216-821-11 | METAL CHIP     | 1K             | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     | R707   | 1-216-845-11 | METAL CHIP     | 100K           | 5% | 1/10W |  |        |
| D801     | 6-501-193-01 | DIODE 1SS355WTE-17                   |        |     |     | R708   | 1-216-837-11 | METAL CHIP     | 22K            | 5% | 1/10W |  |        |
| D804     | 6-501-139-01 | LED SELU2B10A-SLF62 (LCD BACK LIGHT) |        |     |     | R709   | 1-216-833-11 | METAL CHIP     | 10K            | 5% | 1/10W |  |        |
| D805     | 6-501-139-01 | LED SELU2B10A-SLF62 (LCD BACK LIGHT) |        |     |     | R710   | 1-216-821-11 | METAL CHIP     | 1K             | 5% | 1/10W |  |        |
| D806     | 8-719-063-93 | LED SLR325VC-N-T32 (STANDBY)         |        |     |     | R711   | 1-216-817-11 | METAL CHIP     | 470            | 5% | 1/10W |  |        |
| D807     | 6-501-193-01 | DIODE 1SS355WTE-17                   |        |     |     | R712   | 1-216-821-11 | METAL CHIP     | 1K             | 5% | 1/10W |  |        |
| D809     | 8-719-000-07 | DIODE MC2836                         |        |     |     | R713   | 1-216-821-11 | METAL CHIP     | 1K             | 5% | 1/10W |  |        |
|          |              | < FLEXIBLE FLAT CABLE >              |        |     |     | R715   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     | R716   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| FFC801   | 1-832-196-21 | CABLE, FLEXIBLE FLAT (6 CORE)        |        |     |     | R717   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| FFC803   | 1-831-770-21 | CABLE, FLEXIBLE FLAT (9 CORE)        |        |     |     | R718   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| FFC804   | 1-831-781-21 | CABLE, FLEXIBLE FLAT (11 CORE)       |        |     |     |        |              |                |                |    |       |  |        |
| FFC805   | 1-831-797-21 | CABLE, FLEXIBLE FLAT (17 CORE)       |        |     |     | R719   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
|          |              | < IC >                               |        |     |     | R720   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     | R721   | 1-216-864-11 | SHORT CHIP     | 0              |    |       |  |        |
| IC801    | 6-806-626-01 | IC MB90803PF-G-115E1                 |        |     |     | R722   | 1-216-813-11 | METAL CHIP     | 220            | 5% | 1/10W |  |        |
| IC802    | 6-600-349-21 | IC NJL23H400A                        |        |     |     | R723   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| IC803    | 8-759-713-61 | IC PST3429UL                         |        |     |     |        |              |                |                |    |       |  |        |
|          |              | < JUMPER RESISTOR >                  |        |     |     | R724   | 1-216-864-11 | SHORT CHIP     | 0              |    |       |  |        |
| JR708    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R725   | 1-216-821-11 | METAL CHIP     | 1K             | 5% | 1/10W |  |        |
| JR709    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R726   | 1-216-821-11 | METAL CHIP     | 1K             | 5% | 1/10W |  |        |
| JR710    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R727   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| JR711    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R803   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| JR712    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     |        |              |                |                |    |       |  |        |
| JR713    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R804   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| JR714    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R805   | 1-216-864-11 | SHORT CHIP     | 0              |    |       |  |        |
| JR715    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R806   | 1-216-821-11 | METAL CHIP     | 1K             | 5% | 1/10W |  |        |
| JR717    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R807   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| JR719    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R808   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| JR720    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     |        |              |                |                |    |       |  |        |
| JR722    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R810   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| JR723    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R811   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| JR724    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R812   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| JR725    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R813   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| JR726    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     | R814   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
| JR727    | 1-216-864-11 | SHORT CHIP                           | 0      |     |     |        |              |                |                |    |       |  |        |
|          |              | < LIQUID CRYSTAL DISPLAY >           |        |     |     | R815   | 1-216-821-11 | METAL CHIP     | 1K             | 5% | 1/10W |  |        |
| LCD801   | 1-805-783-21 | DISPLAY PANEL, LIQUID CRYSTAL        |        |     |     | R816   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     | R817   | 1-216-841-11 | METAL CHIP     | 47K            | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     | R818   | 1-216-849-11 | METAL CHIP     | 220K           | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     | R819   | 1-216-833-11 | METAL CHIP     | 10K            | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     |        |              |                |                |    |       |  |        |
|          |              |                                      |        |     |     | R820   | 1-216-845-11 | METAL CHIP     | 100K           | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     | R822   | 1-216-829-11 | METAL CHIP     | 4.7K           | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     | R824   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     | R825   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     | R826   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     |        |              |                |                |    |       |  |        |
|          |              |                                      |        |     |     | R827   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |
|          |              |                                      |        |     |     | R828   | 1-216-809-11 | METAL CHIP     | 100            | 5% | 1/10W |  |        |

| Ref. No. | Part No.     | Description             | Remark        | Ref. No. | Part No.     | Description                                                                                      | Remark |
|----------|--------------|-------------------------|---------------|----------|--------------|--------------------------------------------------------------------------------------------------|--------|
| R829     | 1-216-833-11 | METAL CHIP              | 10K 5% 1/10W  | S802     | 1-786-050-21 | SWITCH, KEY BOARD (DSGX)                                                                         |        |
| R830     | 1-216-829-11 | METAL CHIP              | 4.7K 5% 1/10W | S803     | 1-786-050-21 | SWITCH, KEY BOARD (CD SYNC)                                                                      |        |
| R831     | 1-216-845-11 | METAL CHIP              | 100K 5% 1/10W | S804     | 1-786-050-21 | SWITCH, KEY BOARD (● PAUSE/START)                                                                |        |
|          |              |                         |               | S805     | 1-786-050-21 | SWITCH, KEY BOARD<br>(PLAY MODE/TUNING MODE)                                                     |        |
| R832     | 1-216-809-11 | METAL CHIP              | 100 5% 1/10W  | S806     | 1-786-050-21 | SWITCH, KEY BOARD (FOLDER -)                                                                     |        |
| R833     | 1-216-809-11 | METAL CHIP              | 100 5% 1/10W  | S807     | 1-786-050-21 | SWITCH, KEY BOARD (FOLDER +)                                                                     |        |
| R835     | 1-216-809-11 | METAL CHIP              | 100 5% 1/10W  | S808     | 1-786-050-21 | SWITCH, KEY BOARD (TAPE ►)                                                                       |        |
| R836     | 1-216-809-11 | METAL CHIP              | 100 5% 1/10W  | S809     | 1-786-050-21 | SWITCH, KEY BOARD (CD ►II)                                                                       |        |
| R837     | 1-216-809-11 | METAL CHIP              | 100 5% 1/10W  | S810     | 1-786-050-21 | SWITCH, KEY BOARD (TUNER/BAND)                                                                   |        |
| R839     | 1-216-809-11 | METAL CHIP              | 100 5% 1/10W  | S811     | 1-786-050-21 | SWITCH, KEY BOARD (■)                                                                            |        |
| R840     | 1-216-833-11 | METAL CHIP              | 10K 5% 1/10W  | S812     | 1-786-050-21 | SWITCH, KEY BOARD (TUNING -, ◀◀◀ ◀◀)                                                             |        |
| R841     | 1-216-821-11 | METAL CHIP              | 1K 5% 1/10W   | S813     | 1-786-050-21 | SWITCH, KEY BOARD (TUNING +, ►►► ►►)                                                             |        |
| R842     | 1-216-833-11 | METAL CHIP              | 10K 5% 1/10W  |          |              | < VIBRATOR >                                                                                     |        |
| R843     | 1-216-833-11 | METAL CHIP              | 10K 5% 1/10W  | X801     | 1-579-463-11 | VIBRATOR, CRYSTAL (32.768kHz)                                                                    |        |
| R844     | 1-216-837-11 | METAL CHIP              | 22K 5% 1/10W  | X802     | 1-795-054-61 | VIBRATOR, CERAMIC (10MHz)                                                                        |        |
| R845     | 1-216-833-11 | METAL CHIP              | 10K 5% 1/10W  |          |              | *****                                                                                            |        |
| R846     | 1-216-829-11 | METAL CHIP              | 4.7K 5% 1/10W |          |              | SHIELD BOARD                                                                                     |        |
| R847     | 1-216-829-11 | METAL CHIP              | 4.7K 5% 1/10W |          |              | *****                                                                                            |        |
| R848     | 1-216-829-11 | METAL CHIP              | 4.7K 5% 1/10W |          |              | *****                                                                                            |        |
| R849     | 1-216-829-11 | METAL CHIP              | 4.7K 5% 1/10W |          |              | MISCELLANEOUS                                                                                    |        |
| R850     | 1-216-821-11 | METAL CHIP              | 1K 5% 1/10W   |          |              | *****                                                                                            |        |
| R851     | 1-216-825-11 | METAL CHIP              | 2.2K 5% 1/10W |          |              |                                                                                                  |        |
| R852     | 1-216-821-11 | METAL CHIP              | 1K 5% 1/10W   |          |              |                                                                                                  |        |
| R853     | 1-216-825-11 | METAL CHIP              | 2.2K 5% 1/10W |          |              |                                                                                                  |        |
| R854     | 1-216-864-11 | SHORT CHIP              | 0             |          |              |                                                                                                  |        |
| R856     | 1-216-853-11 | METAL CHIP              | 470K 5% 1/10W | 55       | 1-797-510-11 | DECK, MECHANICAL (CMAL5Z235A)                                                                    |        |
| R857     | 1-216-833-11 | METAL CHIP              | 10K 5% 1/10W  | 152      | 1-452-899-11 | MAGNET                                                                                           |        |
| R858     | 1-216-833-11 | METAL CHIP              | 10K 5% 1/10W  | △ 160    | 8-820-126-02 | OPTICAL PICK-UP BLOCK(KSM-213CDP/C2NP)<br>(Including spindle motor (M401),<br>sled motor (M402)) |        |
| R859     | 1-216-841-11 | METAL CHIP              | 47K 5% 1/10W  | 163      | 1-832-404-21 | WIRE (FLAT TYPE) (16 CORE)                                                                       |        |
| R860     | 1-216-841-11 | METAL CHIP              | 47K 5% 1/10W  | 164      | 1-832-624-21 | WIRE (FLAT TYPE) (23 CORE)                                                                       |        |
| R861     | 1-216-837-11 | METAL CHIP              | 22K 5% 1/10W  | 205      | 1-693-705-11 | TUNER (FM/AM)                                                                                    |        |
| R862     | 1-216-809-11 | METAL CHIP              | 100 5% 1/10W  | 206      | 1-832-816-21 | WIRE (FLAT TYPE) (9 CORE)                                                                        |        |
| R863     | 1-216-809-11 | METAL CHIP              | 100 5% 1/10W  | △ 208    | 1-827-226-31 | CORD, POWER                                                                                      |        |
| R868     | 1-216-841-11 | METAL CHIP              | 47K 5% 1/10W  | S201     | 1-771-853-11 | SWITCH, DETECTION (LIMIT)                                                                        |        |
| R869     | 1-216-833-11 | METAL CHIP              | 10K 5% 1/10W  | S820     | 1-692-960-11 | SWITCH, PUSH (1 KEY)<br>(CD LID OPEN/CLOSE DETECT)                                               |        |
| R870     | 1-216-864-11 | SHORT CHIP              | 0             |          |              |                                                                                                  |        |
| R871     | 1-216-833-11 | METAL CHIP              | 10K 5% 1/10W  | △ T902   | 1-443-574-11 | TRANSFORMER, POWER                                                                               |        |
| R872     | 1-216-821-11 | METAL CHIP              | 1K 5% 1/10W   |          |              |                                                                                                  |        |
| R873     | 1-216-825-11 | METAL CHIP              | 2.2K 5% 1/10W |          |              |                                                                                                  |        |
| R874     | 1-216-825-11 | METAL CHIP              | 2.2K 5% 1/10W |          |              |                                                                                                  |        |
| R875     | 1-216-829-11 | METAL CHIP              | 4.7K 5% 1/10W |          |              |                                                                                                  |        |
| R876     | 1-216-829-11 | METAL CHIP              | 4.7K 5% 1/10W |          |              |                                                                                                  |        |
| R877     | 1-216-833-11 | METAL CHIP              | 10K 5% 1/10W  |          |              |                                                                                                  |        |
| R878     | 1-216-833-11 | METAL CHIP              | 10K 5% 1/10W  |          |              |                                                                                                  |        |
| R879     | 1-216-821-11 | METAL CHIP              | 1K 5% 1/10W   |          |              |                                                                                                  |        |
| R880     | 1-216-825-11 | METAL CHIP              | 2.2K 5% 1/10W |          |              |                                                                                                  |        |
| R881     | 1-216-825-11 | METAL CHIP              | 2.2K 5% 1/10W |          |              |                                                                                                  |        |
| R882     | 1-216-829-11 | METAL CHIP              | 4.7K 5% 1/10W |          |              |                                                                                                  |        |
| R883     | 1-216-829-11 | METAL CHIP              | 4.7K 5% 1/10W |          |              |                                                                                                  |        |
| R884     | 1-216-825-11 | METAL CHIP              | 2.2K 5% 1/10W |          |              |                                                                                                  |        |
| R885     | 1-216-825-11 | METAL CHIP              | 2.2K 5% 1/10W |          |              |                                                                                                  |        |
| R886     | 1-216-864-11 | SHORT CHIP              | 0             |          |              |                                                                                                  |        |
|          |              | < VARIABLE RESISTOR >   |               |          |              |                                                                                                  |        |
| RV801    | 1-479-195-11 | ENCODER (VOLUME)        |               |          |              |                                                                                                  |        |
|          |              | < SWITCH >              |               |          |              |                                                                                                  |        |
| S801     | 1-786-050-21 | SWITCH, KEY BOARD (I/⏻) |               |          |              |                                                                                                  |        |

## REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]