

EC Models

Technician's Handbook

This manual is updated as new information and models are released. Visit our website for the latest manual.
www.manitowocice.com

America's #1 Selling Ice Machine

Manitowoc Ice P/N 80-1520-3 9/10

Safety Notices

When using or servicing these Ice Machines, be sure to pay close attention to the safety notices in this handbook. Disregarding the notices may lead to serious injury and/or damage to the ice machine.

Throughout this handbook, you will see the following types of safety notices:



Warning

Text in a Warning box alerts you to a potential personal injury situation. Be sure to read the Warning statement before proceeding, and work carefully.



Caution

Text in a Caution box alerts you to a situation in which you could damage the ice machine. Be sure to read the Caution statement before proceeding, and work carefully.

Procedural Notices

When using or servicing these Ice Machines, be sure to read the procedural notices in this handbook. These notices supply helpful information that may assist you as you work.

Throughout this handbook, you will see the following types of procedural notices:

Important

Text in an Important box provides you with information that may help you perform a procedure more efficiently. Disregarding this information will not cause damage or injury, but may slow you down as you work.

NOTE: Text set off as a Note provides you with simple, but useful extra information about the procedure you are performing.

Read These Before Proceeding:

Caution

Proper installation, care and maintenance are essential for maximum ice production and trouble free operation of your Manitowoc Ice Machine. If you encounter problems not covered by this manual, do not **proceed**, contact Manitowoc Ice, Inc. We will be happy to provide assistance.

Important

Routine adjustments and maintenance procedures outlined in this manual are not covered by the warranty.

We reserve the right to make product improvements at any time. Specifications and design are subject to change without notice.

Warning

PERSONAL INJURY POTENTIAL

Do not operate equipment that has been misused, abused, neglected, damaged, or altered/modified from that of original manufactured specifications.

Warning

POTENTIAL PERSONAL INJURY SITUATION

This ice machine contains refrigerant charge. Installation and Servicing must be performed by a properly trained refrigeration technician aware of the **Dangers of dealing with refrigerant** charged equipment.

This Page Intentionally Left Blank

Table of Contents

General Information

Model Numbers	1
---------------------	---

Installation

Location of Ice Machine	3
Water Service/Drains	4
Electrical Requirements	5
Electrical Specifications	6
Power Consumption - kwh per 24 hours	8
Power Consumption - kwh per 24 hours	9
Ice Machine Heat of Rejection	10

Component Identification

Component Removal	13
Spray Bar	17

Maintenance

Cleaning & Sanitizing Procedure	20
---------------------------------------	----

Operation

Sequence Of Operation	25
Ice Cube Thickness Check.	28
Cube Shape	29

Troubleshooting

All Models	31
Ice Machine Will Not Run	31
Compressor Won't Run	32
Compressor Electrical Diagnostics	33
Diagnosing Start Components	35
No Timer Models	36
Water Pump Won't Run	36
Hot Gas Valve Won't Energize	37
Water Inlet Valve Won't Energize	38
Ice Machine Prematurely Harvests	39
Ice Machine Will Not Harvest	40
Mechanical Timer Models	41
Hot Gas Valve Won't Energize	42
Water Inlet Valve Won't Energize	43
Ice Machine Prematurely Harvests	44
Ice Machine Will Not Harvest	45
SCR Timer Models	46
Water Pump Won't Run	46
Hot Gas Valve Won't Energize	47
Water Inlet Valve Won't Energize	48
Ice Machine Prematurely Harvests	49
Ice Machine Will Not Harvest	50
Water System Checklist	51
Ice Production Check	52
Analyzing Discharge Pressure	53
Discharge Pressure High Checklist	54
Freeze Cycle Discharge Pressure Low Checklist	55
Analyzing Suction Pressure	56
Suction Pressure High Checklist	58
Suction Pressure Low Checklist	59
Discharge Line Temperature Analysis	60

Component Check Procedures

On/Off/Wash-Fill Toggle Switch	63
Bin Thermostat	64
Evaporator Thermostat	65
Mechanical Timer	67
Low Ambient Adjustment For Mechanical Timer	69
S.C.R. Timer	70
Low Ambient Adjustment For SCR Timer	71
High Pressure Cutout (HPCO) Control	72
Hot Gas Valve	73
Refrigerant	77
Recover/Evacuation/Charging	77
System Contamination Cleanup	80
Mild System Contamination Cleanup	82
Severe System Contamination Cleanup Procedure	83
Filter-Driers	85
Total System Refrigeration Charge	86

Cycle Times/24 Hour Ice Production and Refrigerant Pressure Charts

EC18 Self-Contained Air-Cooled — Standard Cube 90

EC20 (With Timer) Self-Contained Air-Cooled — Standard Cube 93

EC20 (With Timer) Self-Contained Air-Cooled — Large Cube 96

EC20 (Without Timer) Self-Contained Air-Cooled — Standard Cube 99

EC30 Self-Contained Air-Cooled — Standard Cube 102

EC30 Self-Contained Air-Cooled — Large Cube 105

EC30 (Serial Break not available) Self-Contained Air-Cooled — Standard Cube 108

EC30 (Serial Break not available) Self-Contained Air-Cooled — Large Cube 111

EC40 Self-Contained Air-Cooled — Standard Cube 114

EC40 Self-Contained Air-Cooled — Large Cube 117

EC40 Self-Contained Water-Cooled — Standard Cube 120

EC40 Self-Contained Water-Cooled — Large Cube 123

EC50 Self-Contained Air-Cooled — Standard Cube 126

EC50 Self-Contained Air-Cooled — Large Cube 129

EC50 Self-Contained Water-Cooled — Standard Cube 132

EC50 Self-Contained Water-Cooled — Large Cube 135

EC65 Self-Contained Air-Cooled — Standard Cube	138
EC65 Self-Contained Air-Cooled — Large Cube	141
EC65 Self-Contained Water-Cooled — Standard Cube	144
EC65 Self-Contained Water-Cooled — Large Cube	147
EC80 Self-Contained Air-Cooled — Standard Cube	150
EC80 Self-Contained Air-Cooled — Large Cube	153
EC80 Self-Contained Water-Cooled — Standard Cube	156
EC80 Self-Contained Water-Cooled — Large Cube	159

Diagrams

Wiring Diagram	163
Mechanical Timer Models	163
SCR Models	164
No Timer Models	165
Tubing Schematics	166
EC18/EC20/EC30/EC40 Tubing Schematic	166
EC50/EC65/EC80 Tubing Schematic	167

This Page Intentionally Left Blank

General Information

Model Numbers

This manual covers the following models:

Self-Contained Air-Cooled	Water-Cooled
ECS018A	---
ECS020A	ECS020W
ECG020A	ECG020W
ECS030A	ECS030W
ECG030A	ECG030W
ECS040A	ECS040W
ECG040A	ECG040W
ECS050A	ECS050W
ECG050A	ECG050W
ECS065A	ECS065W
ECG065A	ECG065W
ECS080A	ECS080W
ECG080A	ECG080W

This Page Intentionally Left Blank

Installation

Location of Ice Machine

The location selected for the ice machine must meet the following criteria. If any of these criteria are not met, select another location.

- The location must be indoors.
- The location must be free of airborne and other contaminants.
- The air temperature must be at least 10°C but must not exceed 43.4°C.
- The location must not be near heat-generating equipment or in direct sunlight.
- The location must be capable of supporting the weight of the ice machine and a full bin of ice.
- The location must allow enough clearance for water, drain, and electrical connections in the **rear of the ice machine**.
- The location must not obstruct airflow through or around the ice machine (condenser airflow is in and out the front). Refer to the chart below for clearance requirements.

	Self-Contained Air-Cooled	Self-Contained Water-Cooled
Top/Sides	203 mm (8")*	127 mm (5")*
Back	127 mm (5")*	127 mm (5")*

***NOTE:** The ice machine may be built into a cabinet.

There is no minimum clearance requirement for the top or left and right sides of the ice machine. The listed values are recommended for efficient operation and servicing only.

WATER SERVICE/DRAINS

Water Supply

Local water conditions may require treatment of the water to inhibit scale formation, filter sediment, and remove chlorine odor and taste.

Water Inlet Lines

- Do not connect the ice machine to a hot water supply. Be sure all hot water restrictors installed for other equipment are working. (Check valves on sink faucets, dishwashers, etc.)
- If water pressure exceeds the maximum recommended pressure, 5 bar (500 kPA), install a water pressure regulator.
- Install a water shut-off valve.

Drain Connections

- Drain lines must have a 2.5 cm per meter drop, and must not create traps.
- The floor drain must be large enough to accommodate drainage from all drains.

Caution

The ice machine must be protected if it will be subjected to temperatures below 0°C. Failure caused by exposure to freezing temperatures is not covered by the warranty.

ELECTRICAL REQUIREMENTS

Voltage

The maximum allowable voltage variation is $\pm 6\%$ of the rated voltage on the ice machine model/serial number plate at start-up (when the electrical load is highest).

All ice machines are factory pre-wired with a power cord only, no plug is supplied.

Fuse/Circuit Breaker

A separate fuse/circuit breaker must be provided for each ice machine. An electrical disconnect switch must be provided if the ice machine is hard wired (wired without a plug).

Total Circuit Ampacity

The total circuit ampacity is used to help select the wire size of the electrical supply.

The wire size (or gauge) is also dependent upon location, materials used, length of run, etc., so a qualified electrician must make the determination.

6 ELECTRICAL SPECIFICATIONS

Part Number 80-1479-3 10/10

Ice Machine	Air			Water		
	Voltage Phase Cycle	Max. Fuse/ Circuit Breaker	Total Amps	Voltage Phase Cycle	Max. Fuse/ Circuit Breaker	Total Amps
EC18	115/60/1			NA	NA	
	230/50/1	10 amp	2.2	NA	NA	
	230/60/1	10 amp	2.2	NA	NA	
EC20	115/60/1			115/60/1	NA	
	230/50/1	10 amp	2.5	230/50/1	10 amp	2.3
	230/60/1	10 amp	2.5	230/60/1	10 amp	2.3
EC30	115/60/1			115/60/1		
	230/50/1	10 amp	3.4	230/50/1	10 amp	3.2
	230/60/1	10 amp	3.4	230/60/1	10 amp	3.2
EC40	230/50/1	10 amp	3.4	230/50/1	10 amp	3.1
	230/60/1	10 amp	3.4	230/60/1	10 amp	3.1

EC50	115/60/1			115/60/1		
	230/50/1	10 amp	4.0	230/50/1	10 amp	3.7
	230/60/1	10 amp	4.0	230/60/1	10 amp	3.7
EC65	115/60/1			115/60/1		
	230/50/1	10 amp	4.2	230/50/1	10 amp	3.8
	230/60/1	10 amp	4.2	230/60/1	10 amp	3.8
EC80	115/60/1			115/60/1		
	230/50/1	10 amp	4.4	230/50/1	10 amp	4.0
	230/60/1	10 amp	4.4	230/60/1	10 amp	4.0

POWER CONSUMPTION - KWH PER 24 HOURS

Model	Air Temp/Water Temp		
	25/15	32/21	43/32
ECS18A	6.4	6.5	6.8
ECS20A	7.1	7.4	7.8
ECG20A	9.2	9.8	10.5
ECS20W	6.2	6.3	6.4
ECG20W	6.0	6.0	6.2
ECS30A	10.0	10.4	11.1
ECG30A	7.1	7.4	7.8
ECS30W	8.9	8.9	9.2
ECG30W	8.9	8.9	8.9
ECS40A	11.1	11.6	12.3
ECG40A	11.0	11.5	12.2
ECS40W	9.5	9.4	9.2
ECG40W	9.2	9.4	9.2

POWER CONSUMPTION - KWH PER 24 HOURS

Model	Air Temp/Water Temp		
	25/15	32/21	43/32
ECS50A	12.9	13.3	14.4
ECG50A	12.6	13.0	14.0
ECS50W	11.1	11.2	11.5
ECG50W	11.0	10.9	11.4
ECS65A	12.6	13.1	14.1
ECG65A	12.9	13.2	14.1
ECS65W	11.2	11.3	11.7
ECG65W	11.0	10.9	11.4
ECS80A	15.4	16.3	17.4
ECG80A	15.1	15.8	16.9
ECS80W	13.6	13.8	13.9
ECG80W	13.2	13.4	13.7


ICE MACHINE HEAT OF REJECTION


Series Ice Machine	Heat of Rejection	
	Air Conditioning	Peak
EC18	1,150	2,300
EC20	1,400	2,600
EC30	1,900	3,300
EC40	2,100	4,100
EC50	2,600	5,000
EC65	2,900	5,000
EC80	4,300	7,400

BTU/Hour

Because the heat of rejection varies during the ice making cycle, the figure shown is an average.

Component Identification

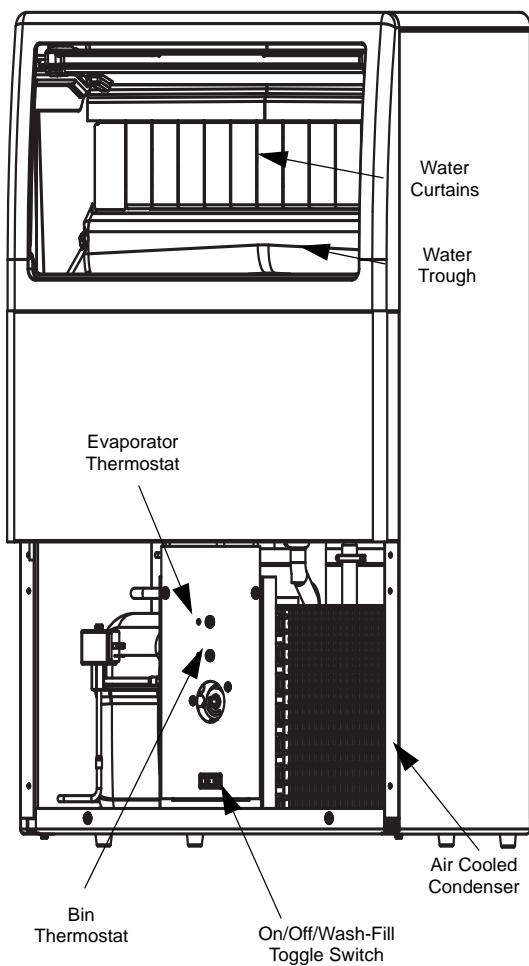

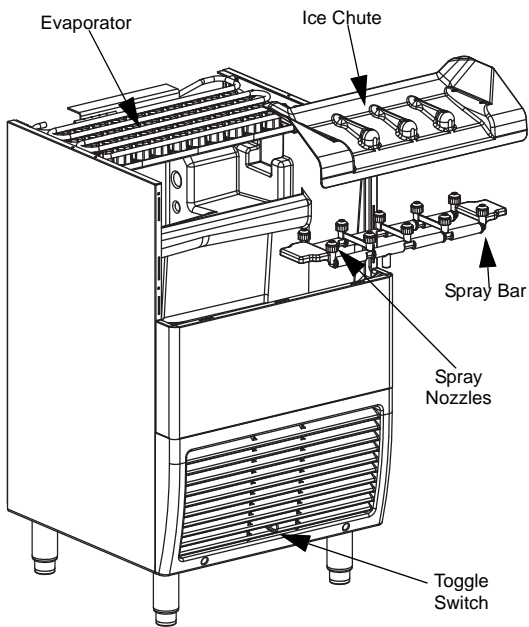


COMPONENT REMOVAL

Top Cover

For easiest access to the evaporator compartment, the top cover can be removed.


1. Remove two screws on the rear of the ice machine.
2. Slide top cover back to disengage the three pins from the front panel

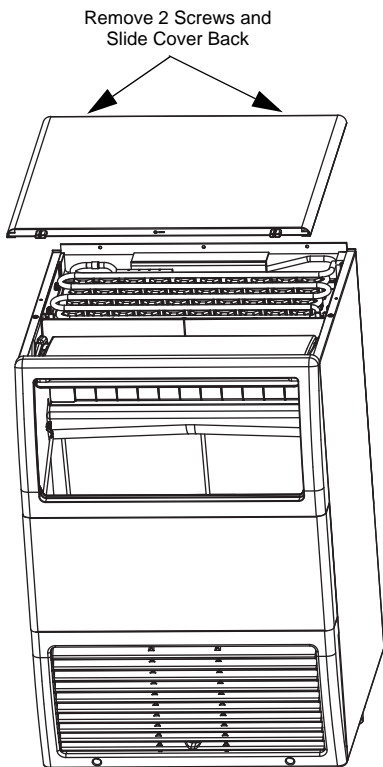

Bin Door

Allows access to the storage bin.


1. Remove top cover.
2. Slide door up until rear pins align with slot in door tracks.
3. Lift rear door pins out and slide door up until front door pins align with slot.
4. Lift door out of door track

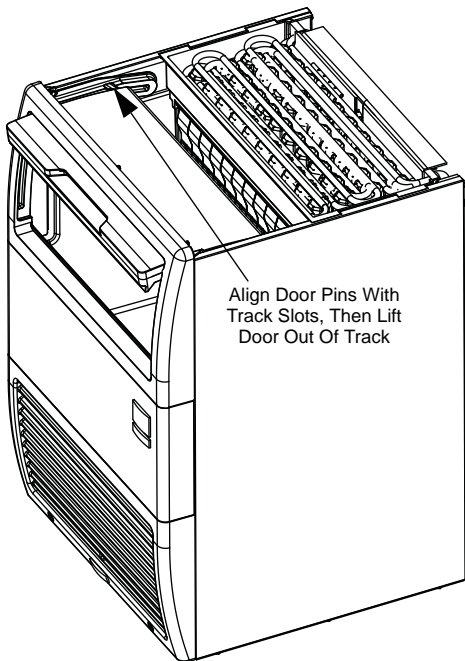

Water Curtain

The water curtain is designed to keep the spraying water from escaping the evaporator compartment. Removal of the bin door is not required, but enhances access.


1. Grasp one end of the ice curtain and lift up.
2. Pivot water curtain and disengage remaining end.
3. To re-install into ice machine, grasp one end of the water curtain, install one end, pivot the opposite end and pull down into position. Make sure tabs are secure in grooves.

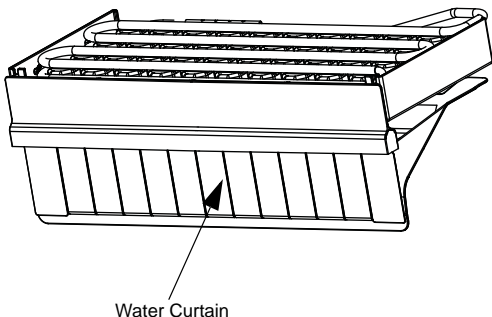

Ice Chute

The ice chute is positioned over the spray nozzles and allows the ice to easily fall into the bin. It must be firmly positioned over the Spray Bar Assembly, with the front edge inside the water trough or the spray nozzles will not be aligned with the spray holes, and spray water will fall into bin.

1. Grab protruding spray holes on one end and lift up.
2. Pivot ice chute and remove.
3. To re-install ice chute, grasp protruding spray holes and position over Spray Bar Assembly. Make sure rear supports are over Spray Bar Assembly, and front edge is inside of water trough

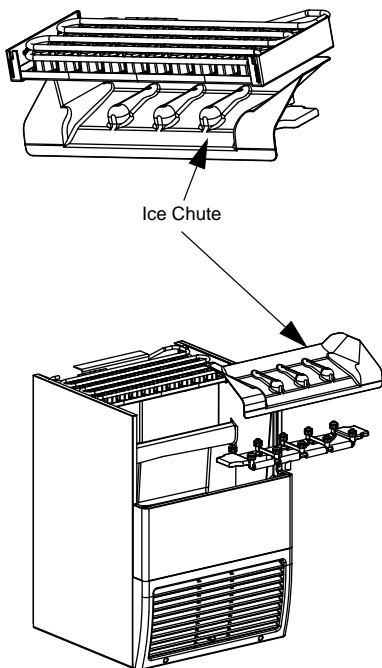


SPRAY BAR

The spray bar supplies water to the individual ice-making cups. Water from the Water Pump sprays through the nozzles, located on the upper portion of the tubes.

1. Grasp one end of the spray bar, lift up and remove from seat formed in water trough.
2. Remove both plastic clips on water inlet tubing by grasping both ears on clip and separating.
3. Apply food grade lubricate to ease re-assembly of spray bar components when necessary.
4. To re-install spray bar, position water inlet tubing on inlet ports, and squeeze clips until tight.
5. Reposition assembly on water trough seat.

NOTE: Nozzles and inserts can be removed for cleaning by unscrewing nozzles. Inserts are located inside the spray bar ports. The spray bar also disassembles for easy cleaning




Sump Drain Overflow Tube

The sump drain overflow tube is located in the evaporator water sump.

1. Remove shutters and ice chute.
2. Lift spray bar or disconnect and remove for easiest access.
3. Pull up on over flow tube to remove.

To replace plug, insert in hole, and push with force to make a tight seal

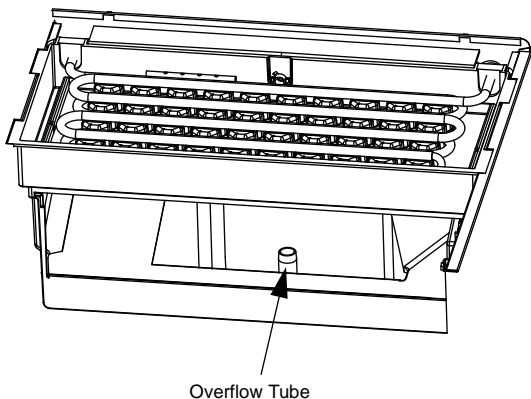

Maintenance

INTERIOR CLEANING AND SANITIZING GENERAL

Clean and sanitize the ice machine every six months for efficient operation. If the ice machine requires more frequent cleaning and sanitizing, consult a qualified service company to test the water quality and recommend appropriate water treatment.

An extremely dirty ice machine must be taken apart for cleaning and sanitizing.



Caution

Use only approved Ice Machine Cleaner and Sanitizer. Read and understand all labels printed on bottles before use. Do not mix Ice Machine Cleaner and Sanitizer solutions together



Warning

Wear rubber gloves and safety goggles (and/or face shield) when handling Ice Machine Cleaner or Sanitizer.

CLEANING & SANITIZING PROCEDURE

Ice machine cleaner is used to remove lime scale or other mineral deposits. Sanitizer is used to remove algae or slime.

Step 1 Mix 4 liters of water with 500 ml of cleaner in a plastic or stainless container.

Cleaner	Water
500 ml (16 oz)	4 l (1 gal)

Step 2 Set the toggle switch to the OFF position at the end of a Harvest Cycle, after ice releases from the evaporator. Or, set the switch to the OFF position and allow the ice to melt off the evaporator.

Step 3 Remove all ice from the bin.

Caution

Never use anything to force ice from the evaporator. Damage may result.

Step 4 Remove all parts as described in the Component Identification & Removal section.

Step 5 Take all components to sink and with 2 liters Cleaner/Water mixture clean all components with a soft nylon brush. Disassemble spray bar, remove nozzles and inserts and soak for 5 minutes. For heavily scaled parts, soak in solution for 15 – 20 minutes. Rinse all components with clean water.

Step 6 While components are soaking; use nylon brush to scrub inside of ice bin. Scrub inside of door, door track, bin, sump trough, and evaporator moldings. With clean water, rinse all of these areas thoroughly.

Step 7 Replace sump overflow tube and pour remaining 2 liters of mixture into the water sump. Replace all parts.

Step 8 Disconnect the incoming ice-making water line.

Step 9 To start a cleaning cycle, set the toggle switch to the WASH/FILL position.

Step 10 After 10 minutes, set the toggle switch to the OFF position. Remove water curtain, ice chute and over flow tube from the water sump. Allow all water to drain from the sump. Replace drain plug and fill sump with 2 liters of water. Set toggle switch to WASH/FILL and circulate for 10 minutes.

Step 11 After 10 minutes, set toggle switch to off position. Remove water curtain, ice chute, water sump over flow tube. Drain water from sump and replace tube.

Step 12 Mix 60 ml of sanitizer with 12 l of water in a plastic or stainless steel container.

Sanitizer	Water
60 ml (2 oz)	12 l (3 gal)

Step 13 Remove Water Curtain and Ice Chute.

Step 14 Take all components to sink and with 10 liters Sanitizer/Water mixture sanitize all components with a soft nylon brush or cloth. Do not rinse components.

Step 15 Use brush or cloth to sanitize the inside of ice bin. Scrub inside of door, door track, bin, water sump, water distribution assembly and evaporator moldings. Do not rinse.

Step 16 Replace sump drain over flow tube, and transfer remaining 2 liters of solution to the sump trough. Replace all components.

Step 17 To start a sanitizing cycle, set the toggle switch to the WASH/FILL position.

Step 18 After 10 minutes, set the toggle switch to the OFF position. Remove water curtain and ice chute. Remove over flow tube from water sump and allow all water to drain from sump. Replace drain plug and fill sump with 2 liters of water. Set toggle switch to WASH/FILL and circulate for 10 minutes.

Step 19 After 10 minutes, set toggle switch to off position. Remove water curtain, ice chute, water sump over flow tube. Drain water from sump and replace tube.

Step 20 Replace all parts. Connect the incoming ice-making water line.

Step 21 Place toggle switch to the WASH/FILL for 90 seconds and then to ice position, ice machine will go into ice making cycle.

EXTERIOR CLEANING

Clean the area around the ice machine as often as necessary to maintain cleanliness and efficient operation.

Sponge any dust and dirt off the outside of the ice machine with mild soap and water. Wipe dry with a clean, soft cloth.

A commercial grade stainless steel cleaner and polish may be used.

REMOVAL FROM SERVICE/WINTERIZATION GENERAL

Special precautions must be taken if the ice machine is to be removed from service for an extended period of time or exposed to ambient temperatures of 0°C (32°F) or below.



Caution

If water is allowed to remain in the ice machine in freezing temperatures, severe damage to some components could result. Damage of this nature is not covered by the warranty.

Follow the applicable procedure below.

AIR-COOLED ICE MACHINES

1. Disconnect the electric power at the circuit breaker or the electric service switch.
2. Turn off the water supply.
3. Drain the water from the water sump and water pump by disconnecting the water pump tubing.
4. Disconnect and drain the incoming ice-making water line and disconnect the tubing from the water inlet valve outlet and allow water to drain.
5. Blow compressed air in the drain opening and water valve outlet hose, then reattach.
6. Make sure water is not trapped in any of the water or drain lines.

WATER-COOLED ICE MACHINES

1. Perform steps 1-6 under “Air-Cooled Ice Machines.”
2. Disconnect the incoming water and drain lines from the water-cooled condenser.
3. Insert a large screwdriver between the bottom spring coils of the water regulating valve. Pry upward to open the valve.
4. Hold the valve open and blow compressed air through the condenser until water no longer exits.

Operation

Sequence Of Operation

Initial Start-Up

PRIMING WATER SYSTEM

Models built July 2010 or later:

Place the toggle switch in the wash/fill position, the water fill valve and water pump energize. Wait 90 seconds for the water system to fill, then place the toggle switch in the ice position.

Models built before July 2010:

The water inlet valve energizes in the harvest sequence, therefore priming the system with water will allow the system to start up with a full reservoir of water. To prime system, remove water curtain, and add 2 liters of water into the water trough.

Continued Next Page

1. Freeze Cycle

Turn the toggle switch to ON. The compressor, and water pump will energize, starting the freeze cycle. The pump sprays water into the inverted cups. The water freezes layer by layer, until an ice cube forms in each cup.

At the same time the compressor starts, the condenser fan motor (air-cooled models) is supplied with power throughout the freeze and harvest cycles. The freeze cycle continues and the evaporator thermostat reaches the adjusted set point.

- No Timer

A harvest cycle starts

- Mechanical Timer

The thermostat energizes the timer motor and the cam starts to turn. When the cam cycles through the preset freeze time the relays change position and the harvest cycle is initiated.

- SCR Timer

The thermostat energizes the time delay relay. When the timer reaches setpoint (11.5 minute factory setting) the harvest cycle is initiated.

2. Harvest Cycle

The compressor continues to operate and the water pump is de-energized. The hot gas valve energizes, allowing hot gas to enter and warm the evaporator. The water valve is also energized, aiding with harvest, as well as filling up the sump with fresh water for a new freeze cycle.

The ice falls from the cups and is directed into the bin by the ice chute. The harvest cycle continues until:

- No Timers

The evaporator thermostat changes position.

- Mechanical Timer

The preset harvest time expires.

The hot gas valve and water valve de-energize. If ice cubes are not contacting the bin thermostat, a new freeze cycle is initiated as the water pump energizes and sprays water into the cups.

- SCR Timer

The timer reaches the factory setting of 3 minutes.

3. Automatic Shut-Off

When the storage bin is full, the ice will come in contact with the bin thermostat which is located inside the bin. The machine will stop after approximately one minute of continuous ice contact with the bin thermostat probe.

The ice machine remains off until enough ice has been removed from the storage bin to allow the ice to fall clear of the bin thermostat probe. As the ice clears the probe, the bin thermostat warms up and the machine starts another freeze cycle.

ICE CUBE THICKNESS CHECK

The ice cube thickness is factory-set to maintain the ice cube thickness at the proper size and weight.

Allow the ice machine to operate for three complete cycles. The cubes should have a small dimple in the center.

Cycle times vary, according to surrounding air and water inlet temperatures.

If cubes are not full (large dimple), turn evaporator thermostat one increment towards the right to increase cube size. Allow ice machine to complete three cycles, then check cubes.

If cubes are too full, (no dimple), turn evaporator thermostat one increment towards the left to decrease cube size. Allow ice machine to operate three complete cycles, then check cubes.



CONTROLLO GHIACCIO
ICE CONTROL
EIS KONTROLLE
GLACE CONTROLE
CONTROL DE HIELO




Ice Cube Adjustment

CUBE SHAPE

The standard cube has an average weight of 19 grams, and the large cube has an average weight of 32 grams.

Notice the normal dimple in the center of the cube.

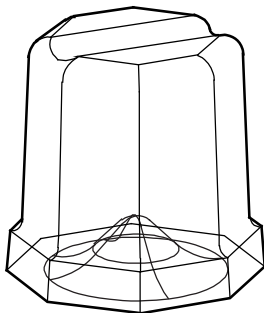

This Page Intentionally Left Blank


Troubleshooting

All Models

ICE MACHINE WILL NOT RUN

Nothing on the ice machine will operate (compressor, water pump, condenser fan motor). If any component runs this procedure can be skipped, move on to the next diagnostics (water pump won't run, compressor won't run, etc).


1. Place the toggle switch in the clean position. If the water pump runs begin with toggle switch diagnostics. If water pump does not run place toggle switch in ice position.
2. Verify correct voltage is present and matches nameplate voltage.
3. High pressure switch must be closed on water cooled ice machines — move on to #4 if air cooled ice machine (If you have voltage at L1 and no voltage at #15 on the Bin Thermostat, which is easy to access, the HPCO is open).
4. Bin thermostat must be closed before any components can be energized. Check for voltage at wires #15 and #64.

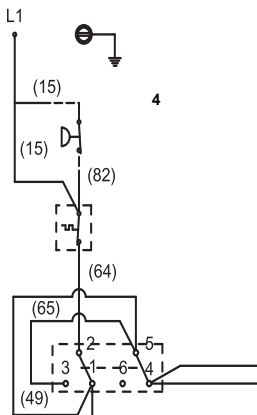

COMPRESSOR WON'T RUN

If the water pump is running and the compressor is not, it may be tripping on overload or tripping the breaker/fuse. Check for grounded winding if breaker keeps tripping.

- 1. Toggle switch terminals 5 & 4 closed?
(wires #49 & #13)
- 2. Start capacitor and relay function?
- 3. Compressor windings closed?
- 4. Refer to compressor diagnostics.

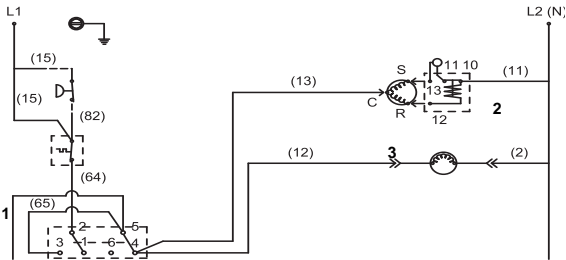

COMPRESSOR ELECTRICAL DIAGNOSTICS

The compressor does not start or will trip repeatedly on overload.

Check Resistance (OHM) Values

NOTE: Compressor windings can have very low ohm values. Use a properly calibrated meter.

Perform the resistance test after the compressor cools. The compressor dome should be cool enough to touch (below 49°C) to assure that the overload is closed and the resistance readings will be accurate.

Single Phase Compressors

1. Disconnect power from the condensing unit and remove the wires from the compressor terminals.
2. The resistance values between C and S and between C and R, when added together should equal the resistance value between S and R.
3. If the overload is open, there will be a resistance reading between S and R, and open readings between C and S and between C and R. Allow the compressor to cool, then check the readings again.

Check Motor Windings to Ground

Check continuity between all three terminals and the compressor shell or copper refrigeration line. Scrape metal surface to get good contact. If continuity is present, the compressor windings are grounded and the compressor should be replaced.

To determine if the Compressor is seized check the amp draw while the compressor is trying to start.

Compressor Drawing High Amps

The continuous amperage draw on start-up should not be near the maximum fuse size indicated on the serial tag.

The wiring must be correctly sized to minimize voltage drop at compressor start-up. The voltage when the compressor is trying to start must be within (6% of the nameplate voltage).

Compressor Drawing Locked Rotor

The three likely causes of this are:

- Low voltage supply (check voltage while compressor is trying to start)
- Defective starting component
- Mechanically seized compressor

To determine which you have:

- Install high and low side gauges.
- Try to start the compressor.
- Watch the pressures closely.

If the pressures do not move, the compressor is seized. Replace the compressor.

If the pressures move, the compressor is turning slowly and is not seized. Check the capacitors and relay.

DIAGNOSING START COMPONENTS

If the compressor attempts to start, or hums and trips the overload protector, check the start components before replacing the compressor.

Capacitor

Visual evidence of capacitor failure can include a bulged terminal end or a ruptured membrane. Do not assume a capacitor is good if no visual evidence is present. A good test is to install a known good substitute capacitor. Use a capacitor tester when checking a suspect capacitor. Clip the bleed resistor off the capacitor terminals before testing.

Current Relay


The relay has a set of contacts that energize and de-energize the compressor start winding. The contacts on the relay are normally open (start winding de-energized). When power is applied the run winding will be at LRA. The relay coil will become an electromagnet and close the contacts (start winding energized). As the compressor motor RPM increases, the run winding current draw and relay coil magnetism decrease allowing the contacts to open. Replace a suspect relay with a known good relay, or use a momentary switch and start capacitor to mimic relay operation.

No Timer Models

WATER PUMP WON'T RUN

No Timer Models


- 1. Toggle switch terminals 2 & 1 closed?
(wires #64 & #3)
- 2. Evaporator thermostat C & L contacts closed?
(wires #3 & #5)
- 3. Water pump winding closed?

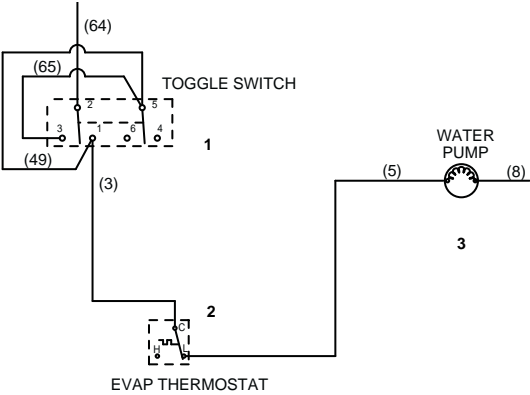

HOT GAS VALVE WON'T ENERGIZE

No Timer Models


1. Verify the evaporator temperature is below setpoint, then refer to evaporator thermostat check procedure to verify the evaporator thermostat is operating correctly.
2. Line voltage at hot gas valve? (Wires 6& 7)
 - Yes - Replace hot gas valve coil.
 - No - Refer to evaporator thermostat diagnostics.

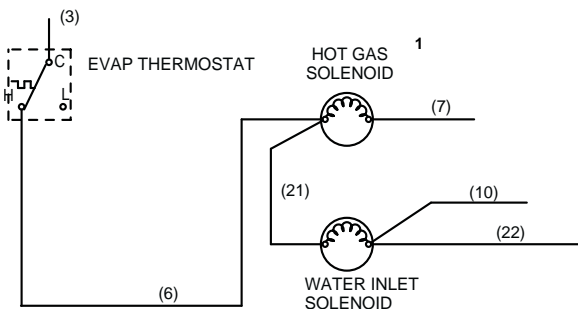

WATER INLET VALVE WON'T ENERGIZE

No Timer

1. Line voltage at water inlet valve? (Wires 21 & 22)
 - Yes - Replace water inlet valve coil.
 - No - Refer to evaporator thermostat diagnostics.

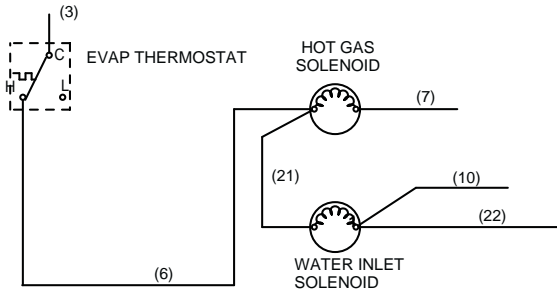


ICE MACHINE PREMATURELY HARVESTS

No Timer

1. Line voltage at hot gas valve?

Yes - Replace hot gas valve.


No - Refer to evaporator thermostat diagnostics.

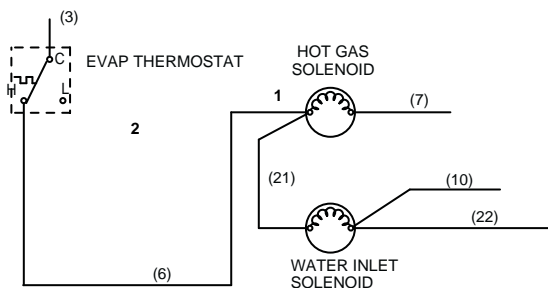

ICE MACHINE WILL NOT HARVEST

No Timer

1. Evaporator temperature below setpoint?
2. Evaporator thermostat cap tube inserted correctly?
(Flush with end of bulb well)
3. Evaporator thermostat closed?
(wires #4 & timer motor)
4. Line voltage at hot gas valve and water inlet Solenoid?

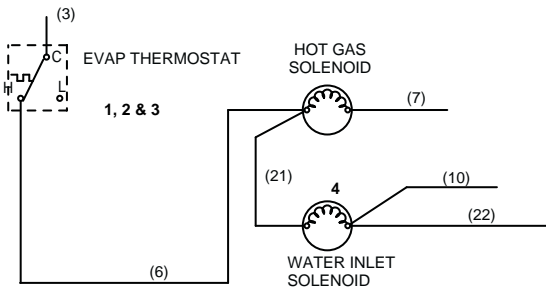


Mechanical Timer Models

WATER PUMP WON'T RUN

Mechanical Timer


1. Toggle switch terminals 2 & 1 closed?
(wires #64 & #3)
2. Timer micro switch closed (relay 2)?
(wires #33 & #5)
3. Water pump winding closed?

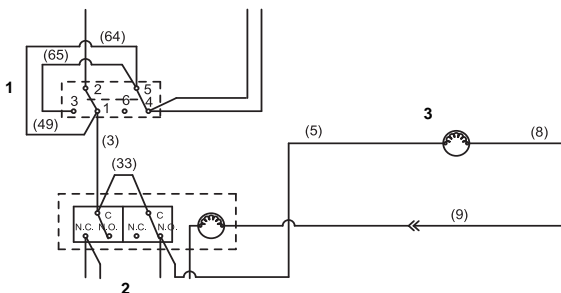

HOT GAS VALVE WON'T ENERGIZE

Mechanical Timer

- 1. Toggle switch terminals 2 & 1 closed?
(wires #64 & #3)
- 2. Timer micro switch closed (relay 1)?
(wires #3 & #6)
- 3. Hot gas valve coil winding closed?

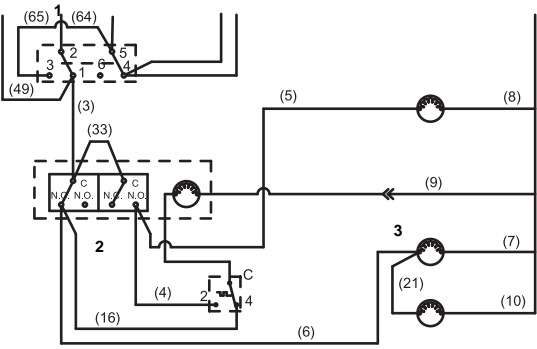


WATER INLET VALVE WON'T ENERGIZE

Mechanical Timer

The hot gas valve and water inlet valve energize together in the harvest cycle. If the hot gas valve energizes verify #1 and then go right to #4.


1. Water supplied to the ice machine?
2. Toggle switch terminals 2 & 1 closed?
(wires #64 & #3)
3. Timer micro switch closed (relay 1)?
(wires #3 & #6)?
4. Water inlet valve coil winding closed?

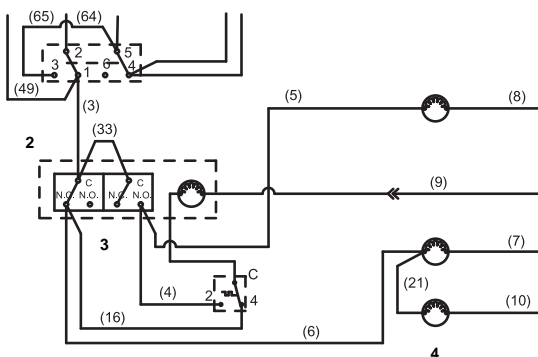

ICE MACHINE PREMATURELY HARVESTS

Mechanical Timer


- 1. Evaporator thermostat correctly set?
- 2. Timer micro switch relays in N.O. position?
(wires #3 & #6-16 open - wires #33 & #4-5 closed)
- 3. Evaporator thermostat terminals #2 & #3
(Common) open?
- 4. Timer motor winding closed?
- 5. Timer functions mechanically?
- 6. Timer cam changes relay micro switch position?
(relay 1 - wires #3 & #6-16 must close.

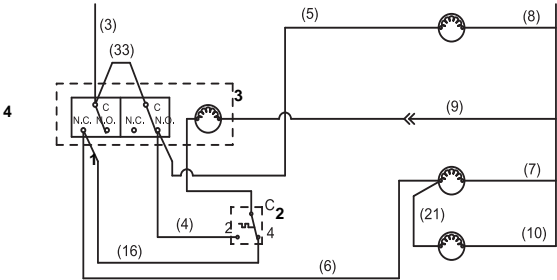

ICE MACHINE WILL NOT HARVEST

Mechanical Timer

1. Evaporator temperature below setpoint?
2. Evaporator thermostat cap tube inserted correctly?
(Flush with end of bulb well)
3. Evaporator thermostat closed?
(wires #4 & timer motor)
4. Timer motor winding closed?
5. Timer functions mechanically?
6. Timer cam changes micro switch position?
(relay 1 - wires #3 & #6 must close)
7. Micro switch functions?
8. Line voltage at hot gas valve and water inlet
Solenoid? (wires #6 & #7 - wires #21 & #10).

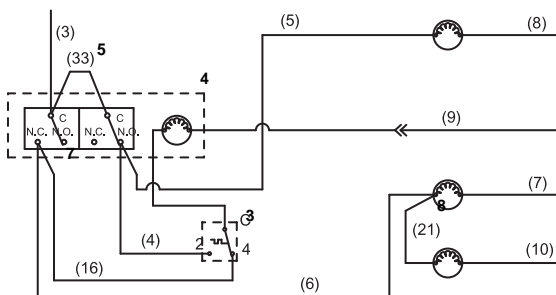


SCR Timer Models

WATER PUMP WON'T RUN

SCR Timer

1. Toggle switch terminals 2 & 1 closed?
(wires #64 & #3)
2. Timer relay closed?
(wires #3 & #5 - contacts C & NC on timer)
3. Water pump winding closed?

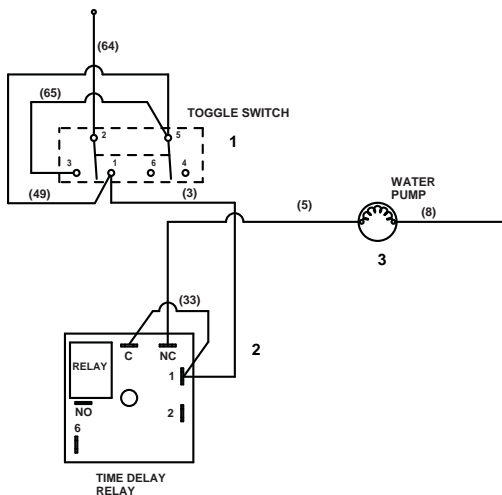


HOT GAS VALVE WON'T ENERGIZE

SCR Timer

1. Line voltage at hot gas valve? (Wires 6 & 7)

- Yes - Replace hot gas valve coil.
- No - Refer to SCR timer diagnostics.

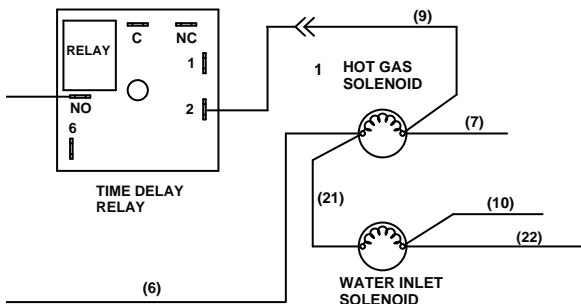


WATER INLET VALVE WON'T ENERGIZE

SCR Timer

1. Line voltage at water inlet valve? (Wires 21& 22)


- Yes - Replace water inlet valve.
- No - Refer to SCR timer diagnostics.

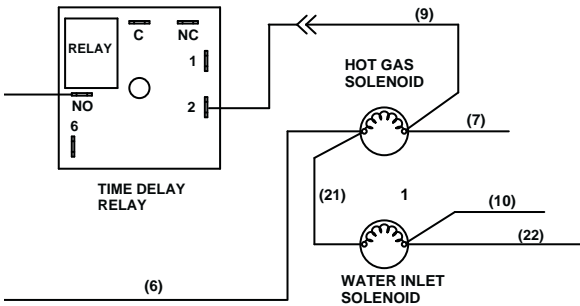

ICE MACHINE PREMATURELY HARVESTS

SCR Timer

1. Line voltage at hot gas valve?
 - No - Replace hot gas valve
2. Line voltage at NO and 2 terminals on SCR timer?
3. Line voltage at 6 & 2 on SCR timer?
 - No - Replace SCR timer.

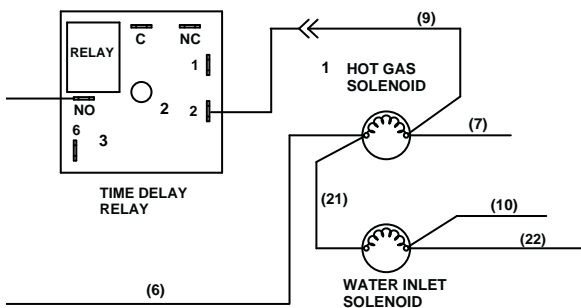

ICE MACHINE WILL NOT HARVEST

SCR Timer

1. Check for line voltage at terminals 1 & 2 and C & 2.
If line voltage is not present refer to toggle switch diagnostics.

2. Check for line voltage at 2 & 6.

- No line voltage

Refer to evaporator thermostat diagnostics.


Evaporator temperature must be below setpoint.

- Line Voltage

Momentarily disconnect then reconnect power to #6.

3. Wait 11 minutes.

- Ice machine cycles into harvest - Refer to evaporator thermostat diagnostics. The evaporator thermostat must open the trigger contact (#6) to reset the freeze cycle time. If power is not broken at # 6 the ice machine will remain in the freeze cycle and never initiate a harvest cycle.
- Ice machine remains in freeze - Replace timer.

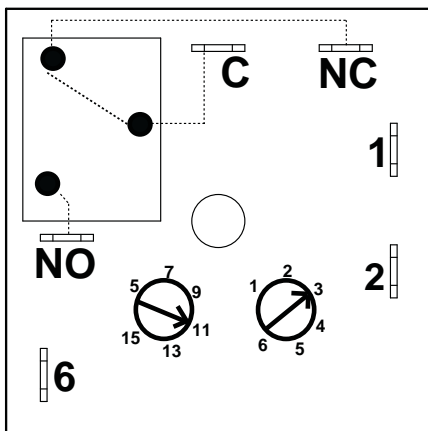

Water System Checklist

A water-related problem often causes the same symptoms as a refrigeration system component malfunction.

Water system problems must be identified and eliminated prior to replacing refrigeration components.

Water area (evaporator) is dirty

- Clean as needed

Water inlet pressure not between 1.4 and 5.5 bar

- Install a water regulator valve or increase the water pressure

Incoming water temperature is not between 1.7°C and 32.2°C

- If too hot, check the hot water line check valves in other store equipment

Water filtration is plugged (if used)

- Install a new water filter

Hoses, fittings, etc., are leaking water

- Repair/replace as needed

Water inlet valve is stuck open or closed

- Clean/replace as needed

Water is spraying out of the sump trough area

- Stop the water spray

Uneven water flow across the evaporator

- Clean the ice machine

Ice Production Check

The amount of ice a machine produces directly relates to the operating water and air temperatures. This means an ice machine with a 20°C outdoor ambient temperature and 10.0°C water produces more ice than the same model ice machine with a 32°C outdoor ambient and 21°C water.

- Determine the ice machine operating conditions:
 Air temp entering condenser: ____°
 Air temp around ice machine: ____°
 Water temp entering sump trough: ____°
- Refer to the appropriate 24-Hour Ice Production Chart.
- Use the operating conditions determined in Step 1 to find published 24 hr. ice production: ____
 - Times are in minutes.
 Example: 1 min., 15 sec. converts to 1.25 min.
 (15 seconds ÷ 60 seconds = .25 minutes)
 - Weights are in grams.
- Perform an ice production check using the formula below.

1.	<u> </u> Freeze Time	+	<u> </u> Harvest Time	=	<u> </u> Total Cycle Time
2.	<u> 1440 </u> Minutes in 24 Hrs.		<u> </u> Total Cycle Time		<u> </u> Cycles per Day
3.	<u> </u> Weight of One Harvest	×	<u> </u> Cycles per Day	=	<u> </u> Actual 24-Hour Production

Weighing the ice is the only 100% accurate check.

Compare the results of Step 3 with Step 2. Ice production is normal when these numbers match closely. If they match closely, determine if:

- Another ice machine is required.

Relocating the existing equipment to lower the load conditions is required.

Analyzing Discharge Pressure

1. Determine the ice machine operating conditions:

Air temp. entering condenser _____

Air temp. around ice machine _____

Water temp. entering sump trough _____

2. Refer to Cycle Times/24 Hour Ice Production/
Refrigeration Pressure Chart for ice machine being
checked.

3. Use the operating conditions determined in Step 1
to find the published normal discharge pressures.

Freeze Cycle _____

Harvest Cycle _____

Perform an actual discharge pressure check.

	Freeze Cycle PSIG	Harvest Cycle PSIG
Beginning of Cycle	_____	_____
Middle of Cycle	_____	_____
End of Cycle	_____	_____

Compare the actual discharge pressure (Step 3) with
the published discharge pressure (Step 2).

The discharge pressure is normal when the actual
pressure falls within the published pressure range for
the ice machine's operating conditions. It is normal for
the discharge pressure to be higher at the beginning of
the freeze cycle (when load is greatest), then drop
throughout the freeze cycle.

DISCHARGE PRESSURE HIGH CHECKLIST

Improper Installation

- Refer to “Installation/Visual Inspection Checklist”

Restricted Condenser Air Flow

- High inlet air temperature
- Condenser discharge air re-circulation
- Dirty condenser fins
- Defective fan motor

Improper Refrigerant Charge

- Overcharged
- Non-condensable in system
- Wrong type of refrigerant

Other

- High side refrigerant lines/component restricted (before mid-condenser)

FREEZE CYCLE DISCHARGE PRESSURE LOW CHECKLIST

Improper Installation

- Refer to “Installation/Visual Inspection Checklist”

Improper Refrigerant Charge

- Undercharged
- Wrong type of refrigerant

Other

- High side refrigerant lines/component restricted (before mid-condenser)

NOTE: Do not limit your diagnosis to only the items listed in the checklists.

Analyzing Suction Pressure

The suction pressure gradually drops throughout the freeze cycle. The actual suction pressure (and drop rate) changes as the air and water temperature entering the ice machine changes. These variables also determine the freeze cycle times.

To analyze and identify the proper suction pressure drop throughout the freeze cycle, compare the published suction pressure to the published freeze cycle time.

NOTE: Analyze discharge pressure before analyzing suction pressure. High or low discharge pressure may be causing high or low suction pressure.

Procedure

Step	Example Using ECS040A Model Ice Machine
1. Determine the ice machine operating conditions.	Air temp. entering condenser: 32°C Water temp. entering water fill valve: 21°C
2A. Refer to "Cycle Time" and "Operating Pressure" charts for ice machine model being checked. Using operating conditions from Step 1, determine published freeze cycle time and published freeze cycle suction pressure.	<u>40 minutes</u> Published Freeze cycle time: <u>1.94 to .41 bar</u> Published Freeze cycle suction pressure:
2B. Compare the published freeze cycle time and published freeze cycle suction pressure. Develop a chart.	<div><div>Published Freeze Cycle Time (minutes)</div><div><div>12040</div><div>1.941.17.41</div></div></div> <div><div>Published Freeze Cycle Suction Pressure (bar)</div><div>In the example, the proper suction pressure should be approximately 1.94 bar at 1 minute; 1.17 bar at 20 minutes; etc.</div></div>
3. Perform an actual suction pressure check at the beginning, middle and end of the freeze cycle. Note the times at which the readings are taken.	Manifold gauges were connected to the example ice machine and suction pressure readings taken as follows: Beginning of Freeze cycle: <u>3 bar (at 1 min.)</u> Middle of Freeze cycle: <u>2 bar (at 20 min.)</u> End of Freeze cycle: <u>1 bar (at 40 min.)</u>
4. Compare the actual freeze cycle suction pressure (Step 3) to the published freeze cycle time and pressure comparison (Step 2B). Determine if the suction pressure is high, low or acceptable.	In this example, the suction pressure is considered high throughout the freeze cycle. It should have been: Approximately 1.94 bar (at 1 minute) – not 3 bar Approximately 1.17 bar (at 20 minutes) – not 2 bar Approximately .41 bar (at 40 minutes) – not 1 bar

SUCTION PRESSURE HIGH CHECKLIST

Improper Installation

- Refer to “Installation/Visual Inspection Checklist”

Discharge Pressure

- Discharge pressure is too high, and is affecting suction pressure, refer to “Freeze Cycle Discharge Pressure High Checklist”

Improper Refrigerant Charge

- Overcharged
- Wrong type of refrigerant
- Non Condensable in system

Other

- Hot gas valve leaking
- TXV flooding (check bulb mounting)

Defective compressor

SUCTION PRESSURE LOW CHECKLIST

Improper Installation

- Refer to "Installation/Visual Inspection Checklist"

Discharge Pressure

- Discharge pressure is too low, and is affecting suction pressure, refer to "Freeze Cycle Discharge Pressure Low Checklist"

Improper Refrigerant Charge

- Undercharged
- Wrong type of refrigerant

Other

- Improper water supply over evaporator, refer to "Water System Checklist"
- Loss of heat transfer from tubing on back side of evaporator
- Restricted/plugged liquid line drier
- Restricted/plugged tubing or capillary tube in suction side of refrigeration system
- TXV starving
- Moisture in refrigeration system

NOTE: Do not limit your diagnosis to only the items listed in the checklists.

Discharge Line Temperature Analysis

General

Compressor discharge line temperature on a normally operating ice machine steadily increases throughout the freeze cycle. Comparing the temperatures over several cycles will result in a consistent maximum discharge line temperature.

Ambient air temperatures affect the maximum discharge line temperature.

Higher ambient air temperatures at the condenser = higher discharge line temperatures at the compressor.

Lower ambient air temperatures at the condenser = lower discharge line temperatures at the compressor.

Regardless of ambient temperature, the freeze cycle discharge line temperature will be higher than 71°C on a normally operating ice machine.

Procedure

Connect a temperature probe on the compressor discharge line within 6" of the compressor.

Observe the discharge line temperature for the last ten minutes of the freeze cycle and record the maximum discharge line temperature.

DISCHARGE LINE TEMPERATURE ABOVE 71°C AT END OF FREEZE CYCLE:

Ice machines that are operating normally will have consistent maximum discharge line temperatures above 71°C.

DISCHARGE LINE TEMPERATURE BELOW 71°C AT END OF FREEZE CYCLE:

Ice machines that have a flooding expansion valve will have a maximum discharge line temperature that decreases each cycle.

Verify the expansion valve sensing bulb is 100% insulated and sealed airtight. Condenser air contacting an incorrectly insulated sensing bulb will cause overfeeding of the expansion valve.

Verify the expansion valve sensing bulb is positioned and secured correctly.

This Page Intentionally Left Blank

Component Check Procedures

ON/OFF/WASH-FILL TOGGLE SWITCH

Function

The switch is used to place the ice machine in ON, OFF or WASH mode of operation.

Specifications

Double-pole, Double-throw switch.

Check Procedure

1. Inspect the toggle switch for correct wiring.
2. Isolate the toggle switch by disconnecting all wires from the switch.
3. Check across the toggle switch terminals using a calibrated ohmmeter. Note where the wire numbers are connected to the switch terminals, or refer to the wiring diagram to take proper readings.

Switch Setting	Terminals	Ohm Reading
ON	5-6	Open
	5-4	Closed
	2-1	Closed
	2-3	Open
WASH	5-4	Open
	5-6	Closed
	2-3	Closed
	2-1	Open
OFF	2-3	Open
	2-1	Open
	5-6	Open
	5-4	Open

Replace the toggle switch if ohm readings do not match all three-switch settings.

BIN THERMOSTAT

Function

The bin thermostat stops the ice machine when the bin is full. When ice cubes contact the bin thermostat bulb holder, the bin thermostat opens and stops the ice machine. When ice cubes no longer contact the bin thermostat bulb holder, the bin thermostat closes and the ice machine starts.

Specifications

Control	Setting
Bin Thermostat	Cut in: 4.5°C Cut out: 1.0°C

Check Procedure



Warning

Disconnect electrical power to the entire ice machine before proceeding.

Make sure bulb is inserted correctly 35.5 cm in the bulb well. Disconnect the wires from the bin thermostat and check the resistance across the terminals.

No Ice on Bulb	Ice on Bulb	Result
Closed (O)	Open (OL)	Thermostat good
Open (OL)	Closed (O)	Replace thermostat

NOTE: After covering/uncovering the bulb holder with ice, wait at least three minutes to allow the thermostat to react. (Open/Close)

EVAPORATOR THERMOSTAT

Function

Mechanical Timer - Energizes the timer motor when the evaporator temperature drops below the control set point.

SCR Timer - Supplies and removes power to SCR trigger.

No Timer - Initiates and terminates freeze and harvest cycles.

Operation

Thermostat contacts C & L are closed at temperatures above cut in and contacts C & H are closed at temperatures below cut in.

Setting Control For Proper Operation

Correct setting will vary with operating ambient. To obtain correct setpoint, capture and weigh the ice from 1 freeze cycle (refer to ice production check for complete details).

Refer to Cycle Time/24 hour Ice Production charts for correct cube weight and quantity. White or misshapen cubes indicate cleaning is required.

Check Procedure

1. Make sure bulb is inserted correctly (flush with end of bulb well).
2. Check evaporator temperature — is evaporator frosted?
3. Move the thermostat adjustment to the coldest and warmest setting, did the contacts change position?
4. Attach a thermocouple and measure the temperature at the bulb. At 0°C the thermostat can be adjusted warmer or colder to change contact positions. If readings do not match chart, replace the thermostat.

Temperature	Contacts C & L	Contacts C & H
Above Setpoint @ Bulb	Closed	Open
Below Setpoint @ Bulb	Open	Closed

MECHANICAL TIMER

Function

Extends the length of the freeze cycle (after the evaporator thermostat closes), initiates and terminates the harvest cycle.

Operation

- Factory Setting is 11.5 minute freeze cycle, 3.5 minutes harvest.
- Total freeze cycle time = the time it takes to close the evaporator thermostat plus 11.5 minutes.
- Changing the length of the freeze cycle changes the length of the harvest cycle and vice versa. Example 12 minute freeze = 3 minute harvest

DURING THE FREEZE CYCLE

After the evaporator thermostat closes, the timer is supplied with power. The cam turns and the ice machine remains in freeze until the arm for the micro switch changes position at the cam lobe.

DURING THE HARVEST CYCLE

The ice machine remains in harvest until the arm for the micro switch changes position at the cam lobe again.


Mechanical Timer Diagnostics

1. Check for line voltage at the timer motor.
(Evaporator thermostat completes timer Motor Circuit. If no voltage is present refer to evaporator thermostat diagnostics.)
2. If timer has voltage and does not move:
 - Check motor windings.
 - If windings are open or have resistance and timer does not move, replace timer.
3. If timer cam moves:
 - Check micro switch for voltage.
 - Check micro switch for continuity.

LOW AMBIENT ADJUSTMENT FOR MECHANICAL TIMER

Timer adjustment for operation in temperatures below 10°C.

1. Disconnect power to the ice machine.
2. Remove timer adjustment tool from the inside of the control box cover.
3. Adjust harvest time to 5 minutes (easier access can be obtained by removing the timer mounting screws).
4. One time adjustment, the timer does not need to be readjusted for summer/winter operation.

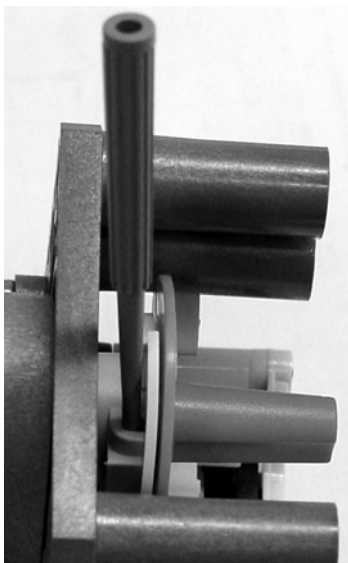

S.C.R. TIMER

Silicon Rectifier (S.C.R.) Switch

Function

Extends the length of the freeze cycle (after the evaporator thermostat closes), initiates and terminates the harvest cycle.

Settings

Dom (delay on make) dial indicates minutes and determines the additional length of freeze time after the evaporator thermostat closes. Factory setting is 11 minutes

SS (single shot time) dial indicates minutes and determines the length of the harvest cycle. Factory setting is 3 minutes.

NOTE: The evaporator thermostat must open the trigger contact (#6) to reset the freeze cycle time. If power is not broken at terminal #6 the ice machine will remain in the freeze cycle and never initiate a harvest cycle

Operation

- Total freeze cycle time = the time it takes to close the evaporator thermostat plus 10 minutes.
- Total harvest time = the setting on the timer SS dial.

DURING THE FREEZE CYCLE


After the evaporator thermostat closes, the timer is supplied with power. The ice machine remains in freeze until the timer reaches the setpoint time. Contacts 6 & NO (normally open) on the timer close to supply power to the hot gas and water inlet valves.

DURING THE HARVEST CYCLE

The ice machine remains in harvest until the timer reaches the setpoint time.

LOW AMBIENT ADJUSTMENT FOR SCR TIMER

Adjust SS (single shot time) dial to 5 minutes.

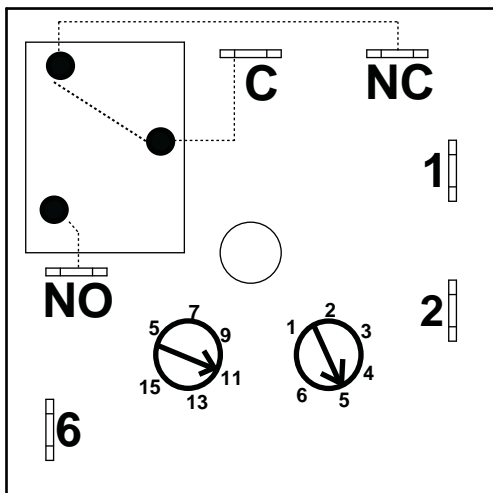

HIGH PRESSURE CUTOUT (HPCO) CONTROL

Water Cooled Only

FUNCTION

Stops the ice machine if subjected to excessive high-side pressure.

The HPCO control is normally closed, and opens on a rise in discharge pressure.

SPECIFICATIONS

Cut-out: 20.7 Bar (300 psig)

Cut-in: 10.3 Bar (150 psig)

(Must be below $\pm .7$ Bar, ± 10 psig to reset).

CHECK PROCEDURE

1. Set ON/OFF/WASH switch to OFF.
2. Connect manifold gauges.
3. Hook voltmeter in parallel across the HPCO, leaving wires attached.
4. Close the valve to the water condenser inlet.
5. Set ON/OFF/WASH switch to ON.
6. No water flowing through the condenser will cause the HPCO control to open because of excessive pressure. Watch the pressure gauge and record the cut-out pressure.



Warning

If discharge pressure exceeds 21.4 Bar (310 psig) and the HPCO control does not cut out, set ON/OFF/WASH switch to OFF to stop ice machine operation.

Replace the HPCO control if it:

- Will not reset (below 10.3 Bar [150 psig])
- Does not open at the specified cut-out point

HOT GAS VALVE

General

The hot gas valve is an electrically operated valve that opens when energized, and closes when de-energized.

Normal Operation

The valve is de-energized (closed) during the freeze cycle and energized (open) during the harvest cycle. The valve is positioned between the compressor and the evaporator and performs two functions:

7. Prevents refrigerant from entering the evaporator during the freeze cycle.

The hot gas valve is de-energized (closed) preventing refrigerant flow from the receiver into the evaporator.

8. Allows refrigerant vapor to enter the evaporator in the harvest cycle.

During the harvest cycle, the hot gas valve is energized (open) allowing refrigerant gas from the discharge line of the compressor to flow into the evaporator. The heat is absorbed by the evaporator and allows release of the ice slab.

Exact pressures vary according to ambient temperature and ice machine model. Harvest pressures can be found in the "Cycle Time/24 Hour Ice Production/Refrigerant Pressure Charts in this book.

Hot Gas Valve Analysis

The valve can fail in two positions:

- Valve will not open in the harvest cycle.
- Valve remains open during the freeze cycle.

VALVE WILL NOT OPEN IN THE HARVEST CYCLE:

Although the coil is energized in the harvest cycle, the evaporator temperature/pressure remains unchanged from the freeze cycle.

VALVE REMAINS OPEN IN THE FREEZE CYCLE:

Symptoms of a hot gas valve remaining partially open during the freeze cycle can be similar to symptoms of an expansion valve, Capillary tube or compressor problem. Symptoms are dependent on the amount of leakage in the freeze cycle.

A small amount of leakage will cause increased freeze times. As the amount of leakage increases, the length of the freeze cycle increases.

Refer to the Parts Manual for proper valve application. If replacement is necessary, use only "original" Manitowoc replacement parts.

Use the following procedure and table to help determine if a hot gas valve is remaining partially open during the freeze cycle.

1. Wait five minutes into the freeze cycle.
2. Feel the inlet of the hot gas valve.

Important

Feeling the hot gas valve outlet or across the hot gas valve itself will not work for this comparison. The hot gas valve outlet is on the suction side (cool refrigerant). It may be cool enough to touch even if the valve is leaking.

3. Feel the compressor discharge line.



Warning

The inlet of the hot gas valve and the compressor discharge line could be hot enough to burn your hand. Just touch them momentarily.

4. Compare the temperature of the inlet of the hot gas valves to the temperature of the compressor discharge line.

Examples of hot gas valve inlet/compressor discharge line temperature comparison

Findings	Comments
The inlet of the hot gas valve is cool enough to touch and the compressor discharge line is hot.	This is normal as the discharge line should always be too hot to touch and the hot gas valve inlet, although too hot to touch during harvest, should be cool enough to touch after 5 minutes into the freeze cycle.
The inlet of the hot gas valve is hot and approaches the temperature of a hot compressor discharge line.	This is an indication something is wrong, as the hot gas valve inlet did not cool down during the freeze cycle. If the compressor dome is also entirely hot, the problem is not a hot gas valve leaking, but rather something causing the compressor (and the entire ice machine) to get hot.
Both the inlet of the hot gas valve and the compressor discharge line are cool enough to touch.	This is an indication something is wrong, causing the compressor discharge line to be cool to the touch. This is not caused by a hot gas valve leaking.

Refrigerant

RECOVER/EVACUATION/CHARGING

Normal Procedures

Do not purge refrigerant to the atmosphere. Capture refrigerant using recovery equipment. Follow the manufacturer's recommendations.

Important

Manitowoc Ice, Inc. assumes no responsibility for the use of contaminated refrigerant. Damage resulting from the use of contaminated refrigerant is the sole responsibility of the servicing company.

Important

Replace the liquid line drier before evacuating and recharging. Use only a Manitowoc (O.E.M.) liquid line filter drier to prevent voiding the warranty.

Connections

1. Suction side of the compressor through the suction service valve.
2. Discharge side of the compressor through the discharge service valve.

Self-Contained Recovery/Evacuation

Place the toggle switch in the OFF position.

Install manifold gauges (with low loss fittings), scale, and recovery unit or two-stage vacuum pump.

Open (backseat) the high and low side on manifold gauges.

Perform recovery or evacuation:

- A. Recovery: Operate the recovery unit as directed by the manufacturer's instructions.
- B. Evacuation prior to recharging: Pull the system down to 500 microns. Then, allow the pump to run for an additional half hour. Turn off the pump and perform a standing vacuum leak check.

NOTE: Check for leaks using a halide or electronic leak detector after charging the ice machine.

Follow the Charging Procedures on the next page.

Charging Procedures

Important

The charge is critical on all Manitowoc ice machines. Use a scale to ensure the proper charge is installed.

1. Be sure the toggle switch is in the OFF position.
2. Close the vacuum pump valve and the low side manifold gauge valve.
3. Open the high side manifold gauge valve.
4. Open the refrigerant cylinder and add the proper refrigerant charge (shown on nameplate) through the discharge service valve.
5. Let the system “settle” for 2 to 3 minutes.
6. Place the toggle switch in the ICE position.
7. Close the high side on the manifold gauge set. Add any remaining vapor charge through the suction service valve (if necessary).

NOTE: Manifold gauges must be removed properly to ensure that no refrigerant contamination or loss occurs.

8. Make sure all vapor in the charging hoses is drawn into the ice machine before disconnecting.
 - a. Run the ice machine in freeze cycle.
 - b. Disconnect the high side service valve at the ice machine.
 - c. Open the high and low side valves on the manifold gauge set. Any refrigerant in the lines will be pulled into the low side of the system.
 - d. Allow the pressures to equalize while the ice machine is in the freeze cycle.
 - e. Disconnect the low side service valve at the ice machine.
9. Install the caps on the refrigeration access valves.

SYSTEM CONTAMINATION CLEANUP

General

This section describes the basic requirements for restoring contaminated systems to reliable service.

Important

Manitowoc Ice, Inc. assumes no responsibility for the use of contaminated refrigerant. Damage resulting from the use of contaminated refrigerant is the sole responsibility of the servicing company.

DETERMINING SEVERITY OF CONTAMINATION

System contamination is generally caused by either moisture or residue from compressor burnout entering the refrigeration system.

Inspection of the refrigerant usually provides the first indication of system contamination. Obvious moisture or an acrid odor in the refrigerant indicates contamination.

If either condition is found, or if contamination is suspected, use a Total Test Kit from Totaline or a similar diagnostic tool. These devices sample refrigerant, eliminating the need to take an oil sample. Follow the manufacturer's directions.

If a refrigerant test kit indicates harmful levels of contamination, or if a test kit is not available, inspect the compressor oil.

1. Remove the refrigerant charge from the ice machine.
2. Remove the compressor from the system.
3. Check the odor and appearance of the oil.
4. Inspect open suction and discharge lines at the compressor for burnout deposits.
5. If no signs of contamination are present, perform an acid oil test to determine the type of cleanup required.

Contamination/Cleanup Chart

Symptoms/Findings	Required Cleanup Procedure
No symptoms or suspicion of contamination.	Normal evacuation/recharging procedure
Moisture/Air Contamination symptoms. Refrigeration system open to atmosphere for longer than 15 minutes. Refrigeration test kit and/or acid oil test shows contamination. No burnout deposits in open compressor lines.	Mild contamination cleanup procedure
Mild Compressor Burnout symptoms. Oil appears clean but smells acrid. Refrigeration test kit or acid oil test shows harmful acid content. No burnout deposits in open compressor lines.	Mild contamination cleanup procedure
Severe Compressor Burnout symptoms. Oil is discolored, acidic, and smells acrid. Burnout deposits found in the compressor, lines, and other components.	Severe contamination cleanup procedure

MILD SYSTEM CONTAMINATION CLEANUP

Procedure

1. Replace any failed components.
2. If the compressor is good, change the oil.
3. Replace the liquid line drier.

NOTE: If the contamination is from moisture, use heat lamps during evacuation. Position them at the compressor, condenser and evaporator prior to evacuation. Do not position heat lamps too close to plastic components, or they may melt or warp.

Important

Dry nitrogen is recommended for this procedure. This will prevent CFC release.

Follow the normal evacuation procedure, except replace the evacuation step with the following:

- A. Pull vacuum to 1000 microns. Break the vacuum with dry nitrogen and sweep the system. Pressurize to a minimum of .35 bar.
- B. Pull vacuum to 500 microns. Break the vacuum with dry nitrogen and sweep the system. Pressurize to a minimum of .35 bar.
- C. Change the vacuum pump oil.
- D. Pull vacuum to 500 microns. Run the vacuum pump for 1/2 hour on self-contained models, 1 hour on remotes.

NOTE: Perform a pressure test to be sure there are no leaks.

Charge the system with the proper refrigerant to the nameplate charge.

Operate the ice machine.

SEVERE SYSTEM CONTAMINATION CLEANUP PROCEDURE

1. Remove the refrigerant charge.
2. Remove the compressor.
3. Wipe away any burnout deposits from suction and discharge lines at compressor.
4. Sweep through the open system with dry nitrogen.

Important

Refrigerant sweeps are not recommended, as they release CFC's into the atmosphere.

5. Install a new compressor and new start components.
6. Install suction line filter-drier in front of compressor.
7. Install a new liquid line drier.

Important

Dry nitrogen is recommended for this procedure. This will prevent CFC release.

- A. Pull vacuum to 1000 microns. Break the vacuum with dry nitrogen and sweep the system. Pressurize to a minimum of .35 bar.
- B. Change the vacuum pump oil.
- C. Pull vacuum to 500 microns. Break the vacuum with dry nitrogen and sweep the system. Pressurize to a minimum of .35 bar.
- D. Change the vacuum pump oil.
- E. Pull vacuum to 500 microns. Run the vacuum pump for 1 hour additional hour.

Charge the system with the proper refrigerant to the nameplate charge.

Operate the ice machine for one hour. Then, check the pressure drop across the suction line filter-drier.

- F. If the pressure drop is less than .14 bar, the filter-drier should be adequate for complete cleanup.
- G. If the pressure drop exceeds .14 bar, change the suction line filter-drier and the liquid line drier. Repeat until the pressure drop is acceptable.

Operate the ice machine for 48-72 hours. Replace the suction line and liquid line drier if necessary.

FILTER-DRIERS

Liquid Line Filter Drier

The filter-drier used on Manitowoc ice machines are manufactured to Manitowoc specifications.

The difference between a Manitowoc drier and an off-the-shelf drier is in filtration. A Manitowoc drier has dirt-retaining filtration, with fiberglass filters on both the inlet and outlet ends. This is very important because ice machines have a back-flushing action that takes place during every harvest cycle.

A Manitowoc filter-drier has a very high moisture removal capability and a good acid removal capacity.

Important

The liquid line drier is covered as a warranty part. The liquid line drier must be replaced any time the system is opened for repair.

TOTAL SYSTEM REFRIGERATION CHARGE

Important

This information is for reference only. Refer to the ice machine serial number tag to verify the system charge. Serial plate information overrides information listed on this page.

Model	Refrigerant Charge (grams)	Refrigerant Type
EC018 Air-Cooled	160 or 180	R134A
EC020 Air-Cooled	160 or 180	R134A
EC020 Water-Cooled	130 or 160	R134A
EC030 Air-Cooled	170 or 180	R134A
EC030 Water-Cooled	170	R134A
EC040 Air-Cooled	230	R134A
EC040 Water-Cooled	200	R134A
EC050 Air-Cooled	250	R134A
EC050 Water-Cooled	210	R134A
EC065 Air-Cooled	230	R404A
EC065 Water-Cooled	200	R404A
EC080 Air-Cooled	250	R404A
EC080 Water-Cooled	200	R404A

This Page Intentionally Left Blank

This Page Intentionally Left Blank

Cycle Times/24 Hour Ice Production and Refrigerant Pressure Charts

These charts are used as guidelines to verify correct ice machine operation.

Accurate collection of data is essential to obtain the correct diagnosis.

- Refer to “OPERATIONAL ANALYSIS CHART” for the list of data that must be collected for refrigeration diagnostics. This list includes: before beginning service, ice production check, installation/visual inspection, water system checklist, ice formation pattern, safety limits, comparing evaporator inlet/outlet temperatures, hot gas valve analysis, discharge and suction pressure analysis.
- Ice production checks that are within 10% of the chart are considered normal. This is due to variances in water and air temperature. Actual temperatures will seldom match the chart exactly.
- Zero out manifold gauge set before obtaining pressure readings to avoid misdiagnosis.
- Discharge and suction pressure are highest at the beginning of the cycle. Suction pressure will drop throughout the cycle. Verify the pressures are within the range indicated.

EC18 SELF-CONTAINED AIR-COOLED — STANDARD CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	19.1-21.4							3.5 min.
15	19.7-22.1	19.8-22.2						
20	21.2-23.8	21.4-23.9	21.5-24.1	21.7-24.3	21.4-23.9			
25	22.8-25.5	24.0-26.8	23.3-26.0	23.4-26.2	23.6-26.4			
30	24.7-27.6	24.9-27.8	25.1-28.1	25.3-28.3	25.7-28.7	25.9-29.0	26.1-29.2	
35			27.7-30.9	27.7-30.9	27.9-31.1	28.1-31.4	28.6-31.9	
40					30.7-34.3	31.0-34.6	31.3-34.9	
45					34.1-38.0	34.6-38.4	34.8-38.8	

Times in minutes.

EC18 SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	18.5						
15	18.0	17.9					
20	16.9	16.8	16.7	16.6	16.8		
25	15.9	15.2	15.6	15.5	15.4		
30	14.8	14.7	14.6	14.5	14.3	14.2	14.1
35			13.4	13.4	13.3	13.2	13.0
40					12.2	12.1	12.0
45					11.1	11.0	10.9

Based on average ice weight of 0.29 - 0.32 kg per cycle. Individual cube weight 19 grams \pm 1.

Number of individual cubes per cycle: 16

Continued on next page ...

EC18 SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	6.55-4.48	1.10-0.14	3.10-4.14	2.07-3.10
20	9.31-6.89	1.24-0.28	4.48-5.52	3.10-4.14
25	10.69-7.24	1.38-0.34	4.83-6.55	3.79-4.48
32	13.10-9.31	1.72-0.55	6.20-8.27	5.17-5.86
43	17.24-12.07	1.72-0.69	7.58-10.69	6.21-7.58

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC20 (WITH TIMER) SELF-CONTAINED AIR-COOLED — STANDARD CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	18.6-21.2							3.5 min.
15	20.3-23.1	21.3-24.1						
20	22.3-25.3	24.6-27.9	26.0-29.4	27.5-31.1	30.9-34.9			
25	26.0-29.4	27.5-31.1	29.1-32.9	32.9-37.2	35.2-39.7			
30	29.1-32.9	30.9-34.9	35.2-39.7	37.8-42.6	40.7-45.9	48.1-54.1	52.8-59.3	
35			40.7-45.9	44.1-49.7	52.8-59.3	58.4-65.6	65.3-75.3	
40					65.3-73.3	73.9-82.9	99.7-111.7	
45					85.0-95.2	120.3-134.7	151.3-169.3	

Times in minutes.

Continued on next page ...

EC20 (WITH TIMER) SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	28						
15	26	25					
20	24	22	21	20	18		
25	21	20	19	17	16		
30	19	18	16	15	14	12	11
35			14	13	11	10	9
40					9	8	6
45					7	5	4

Based on average ice weight of 0.43 - 0.48 kg per cycle. Individual cube weight 19 grams \pm 1.

Number of individual cubes per cycle: 24

EC20 (WITH TIMER) SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	7.24-4.83	1.38-0	2.76-3.45	1.72-2.76
20	11.38-6.89	1.72-0.34	3.45-5.51	2.76-4.14
43	20.68-13.79	2.76-0.69	4.14-9.30	4.14-6.89

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC20 (WITH TIMER) SELF-CONTAINED AIR-COOLED — LARGE CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	24.5-26.4							3.5 min.
15	28.8-31.0	29.8-32.1						
20	32.0-34.4	33.2-35.7	34.6-37.1	36.0-38.6	37.5-40.3			
25	37.5-40.3	44.9-48.2	39.1-42.0	40.9-43.9	42.8-46.0			
30	42.8-46.0	44.9-48.2	47.2-50.7	47.2-50.7	49.8-53.4	52.6-56.4	55.7-59.7	
35			55.7-59.7	59.2-63.4	63.1-67.6	63.1-67.6	67.5-72.3	
40					78.5-84.0	85.3-91.3	93.4-99.9	
45					103.1-110.3	114.9-122.9	129.7-138.0	

Times in minutes.

EC20 (WITH TIMER) SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	38						
15	33	32					
20	30	29	28	27	26		
25	26	22	25	24	23		
30	23	22	21	21	20	19	18
35			18	17	16	16	15
40					13	12	11
45					10	9	8

Based on average ice weight of 0.74 - 0.79 kg per cycle. Individual cube weight 32 grams \pm 1.

Number of individual cubes per cycle: 24

Continued on next page ...

EC20 (WITH TIMER) SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	8.96-6.89	1.72-0	2.76-5.51	1.72-4.14
20	11.03-7.93	2.07-0	2.76-6.89	2.76-5.51
43	8.27-12.41	2.07-0.69	3.10-7.58	3.10-7.58

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC20 (WITHOUT TIMER) SELF-CONTAINED AIR-COOLED — STANDARD CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	19.1-21.4							3.5 min.
15	19.7-22.1	19.8-22.2						
20	21.2-23.8	21.4-23.9	21.5-24.1	21.7-24.3	21.4-23.9			
25	22.8-25.5	24.0-26.8	23.3-26.0	23.4-26.2	23.6-26.4			
30	24.7-27.6	24.9-27.8	25.1-28.1	25.3-28.3	25.7-28.7	25.9-29.0	26.1-29.2	
35			27.7-30.9	27.7-30.9	27.9-31.1	28.1-31.4	28.6-31.9	
40					30.7-34.3	31.0-34.6	31.3-34.9	
45					34.1-38.0	34.6-38.4	34.8-38.8	

Times in minutes.

Continued on next page ...

EC20 (WITHOUT TIMER) SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	18.5						
15	18.0	17.9					
20	16.9	16.8	16.7	16.6	16.8		
25	15.9	15.2	15.6	15.5	15.4		
30	14.8	14.7	14.6	14.5	14.3	14.2	14.1
35			13.4	13.4	13.3	13.2	13.0
40					12.2	12.1	12.0
45					11.1	11.0	10.9

Based on average ice weight of 0.29 - 0.32 kg per cycle. Individual cube weight 19 grams \pm 1.

Number of individual cubes per cycle: 16

EC20 (WITHOUT TIMER) SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	6.55-4.48	1.10-0.14	3.10-4.14	2.07-3.10
20	9.31-6.89	1.24-0.28	4.48-5.52	3.10-4.14
25	10.69-7.24	1.38-0.34	4.83-6.55	3.79-4.48
32	13.10-9.31	1.72-0.55	6.20-8.27	5.17-5.86
43	17.24-12.07	1.72-0.69	7.58-10.69	6.21-7.58

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC30 SELF-CONTAINED AIR-COOLED — STANDARD CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	16.5-18.8							3.5 min.
15	18.6-21.2	19.4-22.1						
20	20.3-23.1	21.3-24.1	23.4-26.6	24.6-27.9	26.0-29.4			
25	23.4-26.6	24.6-27.9	26.0-26.9	27.5-31.1	30.9-34.9			
30	26.0-29.4	27.5-31.1	30.9-34.9	32.9-37.2	35.2-39.7	37.8-42.6	44.1-49.7	
35			35.2-39.7	37.8-42.6	44.1-49.7	48.1-54.1	52.8-59.3	
40					52.8-59.3	58.4-65.6	65.3-73.3	
45					65.3-73.3	85.0-95.2	99.7-111.7	

Times in minutes.

EC30 SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	31						
15	28	27					
20	26	25	23	22	21		
25	23	22	21	20	18		
30	21	20	18	17	16	15	13
35			16	15	13	12	11
40					11	10	9
45					9	7	6

Based on average ice weight of 0.43 - 0.48 kg per cycle. Individual cube weight 19 grams \pm 1.

Number of individual cubes per cycle: 24

Continued on next page ...

EC30 SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	9.65-5.17	1.38-0	2.16-4.48	1.72-3.10
20	15.86-7.58	2.07-0	4.14-6.55	2.76-4.83
43	25.51-14.48	2.76-0.69	4.14-10.0	4.83-8.27

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC30 SELF-CONTAINED AIR-COOLED — LARGE CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	26.1-28.1							3.5 min.
15	28.8-31.0	29.8-32.1						
20	33.2-35.7	34.6-37.1	36.0-38.6	36.0-38.6	37.5-40.3			
25	39.1-42.0	40.9-43.9	40.9-43.9	42.8-46.0	44.9-48.2			
30	47.2-50.7	47.2-50.7	49.8-53.4	52.6-56.4	55.7-59.7	55.7-59.7	59.2-63.4	
35			63.1-67.6	67.5-72.3	67.5-72.3	72.6-77.8	78.5-84.0	
40					93-4-99.9	103.1-110.3	114.9-122.9	
45					148.7-159.0	174.1-186.1	174.1-186.1	

Times in minutes.

Continued on next page ...

EC30 SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	36						
15	33	32					
20	29	28	27	27	26		
25	25	24	24	23	22		
30	21	21	20	19	18	18	17
35			16	15	15	14	13
40					11	10	9
45					7	6	6

Based on average ice weight of 0.74 - 0.79 kg per cycle. Individual cube weight 32 grams \pm 1.

Number of individual cubes per cycle: 24

EC30 SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	9.65-5.17	1.38-0	2.16-4.48	1.72-3.10
20	15.86-7.58	2.07-0	4.14-6.55	2.76-4.83
43	25.51-14.48	2.76-0.69	4.14-10.0	4.83-8.27

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC30 (SERIAL BREAK NOT AVAILABLE) SELF-CONTAINED AIR-COOLED — STANDARD CUBE**NOTE:** These characteristics may vary depending on operating conditions.**Cycle Times**

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	18.6-21.2							3.5 min.
15	20.3-23.1	21.3-24.1						
20	22.3-25.3	24.6-27.9	26.0-29.4	27.5-31.1	30.9-34.9			
25	26.0-29.4	27.5-31.1	29.1-32.9	32.9-37.2	35.2-39.7			
30	29.1-32.9	30.9-34.9	35.2-39.7	37.8-42.6	40.7-45.9	48.1-54.1	52.8-59.3	
35			40.7-45.9	44.1-49.7	52.8-59.3	58-.4-65.6	65.3-75.3	
40					65.3-73.3	73.9-82.9	99.7-111.7	
45					85.0-95.2	120.3-134.7	151.3-169.3	

Times in minutes.

EC30 (SERIAL BREAK NOT AVAILABLE) SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Cont.)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	28						
15	26	25					
20	24	22	21	20	18		
25	21	20	19	17	16		
30	19	18	16	15	14	12	11
35			14	13	11	10	9
40					9	8	6
45					7	5	4

Based on average ice weight of 0.43 - 0.48 kg per cycle. Individual cube weight 19 grams \pm 1.

Number of individual cubes per cycle: 24

Continued on next page ...

EC30 (SERIAL BREAK NOT AVAILABLE) SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Cont.)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	7.24-4.83	1.38-0	2.76-3.45	1.72-2.76
20	11.38-6.89	1.72-0.34	3.45-5.51	2.76-4.14
43	20.68-13.79	2.76-0.69	4.14-9.30	4.14-6.89

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC30 (SERIAL BREAK NOT AVAILABLE) SELF-CONTAINED AIR-COOLED — LARGE CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	24.5-26.4							3.5 min.
15	28.8-31.0	29.8-32.1						
20	32.0-34.4	33.2-35.7	34.6-37.1	36.0-38.6	37.5-40.3			
25	37.5-40.3	44.9-48.2	39.1-42.0	40.9-43.9	42.8-46.0			
30	42.8-46.0	44.9-48.2	47.2-50.7	47.2-50.7	49.8-53.4	52.6-56.4	55.7-59.7	
35			55.7-59.7	59.2-63.4	63.1-67.6	63.1-67.6	67.5-72.3	
40					78.5-84.0	85.3-91.3	93.4-99.9	
45					103.1-110.3	114.9-122.9	129.7-138.0	

Times in minutes.

Continued on next page ...

EC30 (SERIAL BREAK NOT AVAILABLE) SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	38						
15	33	32					
20	30	29	28	27	26		
25	26	22	25	24	23		
30	23	22	21	21	20	19	18
35			18	17	16	16	15
40					13	12	11
45					10	9	8

Based on average ice weight of 0.74 - 0.79 kg per cycle. Individual cube weight 32 grams \pm 1.

Number of individual cubes per cycle: 24

EC30 (SERIAL BREAK NOT AVAILABLE) SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	8.96-6.89	1.72-0	2.76-5.51	1.72-4.14
20	11.03-7.93	2.07-0	2.76-6.89	2.76-5.51
43	8.27-12.41	2.07-0.69	3.10-7.58	3.10-7.58

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC40 SELF-CONTAINED AIR-COOLED — STANDARD CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	21.8-24.6							3.5 min.
15	23.1-26.0	24.5-27.6						
20	25.3-28.5	27.0-30.4	27.9-31.4	29.9-33.7	34.9-39.2			
25	27.9-31.4	29.9-33.7	31.1-34.9	33.5-37.6	36.4-40.8			
30	31.1-34.9	33.5-37.6	36.4-40.8	38.0-42.6	41.6-46.6	43.6-48.9	48.3-54.1	
35			41.6-46.6	43.6-48.9	48.3-54.1	54.1-60.5	57.5-64.3	
40					57.5-64.3	65.6-73.3	70.6-78.8	
45					70.6-78.8	82.9-92.5	90.8-101.2	

Times in minutes.

EC40 SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	41						
15	39	37					
20	36	34	33	31	27		
25	33	31	30	28	26		
30	30	28	26	25	23	22	20
35			23	22	20	18	17
40					17	15	14
45					14	12	11

Based on average ice weight of 0.72 - 0.80 kg per cycle. Individual cube weight 19 grams ± 1 .

Number of individual cubes per cycle: 40

Continued on next page ...

EC40 SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	7.58-4.48	1.72-.14	2.41-4.14	1.38-2.07
20	11.03-5.86	1.94-.28	3.45-5.87	1.72-3.45
25	13.10-7.24	1.94-.34	3.79-6.55	2.07-4.14
32	15.86-9.31	1.94-.41	4.82-8.27	2.76-4.82
43	21.37-11.72	2.34-.48	5.17-11.72	3.45-7.93

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC40 SELF-CONTAINED AIR-COOLED — LARGE CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	28.4-30.4							3.5 min.
15	30.2-32.4	32.2-34.5						
20	32.9-35.3	34.5-36.9	37.1-39.7	39.0-41.8	41.1-44.0			
25	35.3-37.8	37.1-39.7	40.1-42.9	43.5-46.5	46.1-49.3			
30	39.0-41.8	41.1-44.0	44.8-47.9	49.0-52.4	52.3-55.9	58.1-62.0	62.6-66.9	
35			50.6-54.1	54.1-57.8	60.3-64.4	65.2-69.6	74.1-79.1	
40					67.9-72.5	77.7-82.9	85.8-91.5	
45					81.5-87.0	90.5-96.5	108.1-115.3	

Times in minutes.

Continued on next page ...

EC40 SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	56						
15	53	50					
20	49	47	44	42	40		
25	46	44	41	38	36		
30	42	40	37	34	32	29	27
35			33	31	28	26	23
40					25	22	20
45					21	19	16

Based on average ice weight of 1.24 - 1.32 kg per cycle. Individual cube weight 32 grams ± 1 .

Number of individual cubes per cycle: 40

EC40 SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	7.58-4.48	1.72-.14	2.41-4.14	1.38-2.07
20	11.03-5.86	1.94-.28	3.45-5.87	1.72-3.45
25	13.10-7.24	1.94-.34	3.79-6.55	2.07-4.14
32	15.86-9.31	1.94-.41	4.82-8.27	2.76-4.82
43	21.37-11.72	2.34-.48	5.17-11.72	3.45-7.93

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC40 SELF-CONTAINED WATER-COOLED — STANDARD CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Around Ice Machine °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	21.8-24.6							3.5 min.
15	23.1-26.0	24.5-27.6						
20	24.5-27.6	26.1-29.4	27.9-31.4	29.9-33.7	33.5-37.6			
25	25.3-28.5	27.9-31.4	29.9-33.7	32.3-36.2	34.9-39.2			
30	27.0-30.4	28.9-32.5	31.1-34.9	33.5-37.6	36.4-40.8	41.6-46.6	45.9-51.4	
35			33.5-37.6	36.4-40.8	39.7-44.5	43.6-48.9	48.3-54.1	
40					41.6-46.6	48.3-54.1	54.1-60.5	
45					45.9-51.4	51.1-57.1	57.5-64.3	

Times in minutes.

EC40 SELF-CONTAINED WATER-COOLED — STANDARD CUBE (Continued)

24 Hour Ice Production

Air Temp. Around Ice Machine °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	41						
15	39	37					
20	37	35	33	31	28		
25	36	33	31	29	27		
30	34	32	30	28	26	23	21
35			28	26	24	22	20
40					23	20	18
45					21	19	17

Based on average ice weight of 0.72 - 0.80 kg per cycle. Individual cube weight 19 grams \pm 1.

Number of individual cubes per cycle: 40

Continued on next page ...

EC40 SELF-CONTAINED WATER-COOLED — STANDARD CUBE (Continued)

Condenser Water Consumption	32 Air Temperature Around Ice Machine		
	Water Temperature °C		
	15	21	32
Gal/24 Hours	478	744	2283

Water regulating valve set to maintain 9 bar discharge pressure.

Operating Pressures

Water Temperature Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	10.34-8.62	1.79-.28	3.10-5.87	2.07-3.45
20	11.03-8.62	1.79-.34	3.10-7.24	2.07-4.82
25	11.03-8.62	1.79-.41	3.10-7.24	2.07-4.82
32	11.03-8.62	2.00-.41	3.10-7.24	2.07-4.82
43	11.72-8.62	2.00-.48	3.45-8.62	2.07-5.87

Set water regulating valve to 9 bar 5 minutes into freeze cycle.

All pressures are in bar.

Suction pressure drops gradually throughout the freeze cycle.

EC40 SELF-CONTAINED WATER-COOLED — LARGE CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Around Ice Machine °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	30.8-33.1							3.5 min.
15	32.2-34.5	34.5-36.9						
20	33.7-36.1	35.3-37.8	38.0-40.7	41.1-44.0	44.8-47.9			
25	34.5-36.9	39.0-41.8	40.1-42.9	43.5-46.5	47.5-50.8			
30	36.2-38.7	39.0-41.8	42.3-45.2	46.1-49.3	50.6-54.1	56.0-59.9	62.6-66.9	
35			44.8-47.9	49.0-52.4	52.3-55.9	58.1-62.0	65.2-69.6	
40					56.0-59.9	62.6-66.9	70.9-75.7	
45					60.3-64.4	67.9-72.5	77.7-82.9	

Times in minutes.

Continued on next page ...

EC40 SELF-CONTAINED WATER-COOLED — LARGE CUBE (Continued)

24 Hour Ice Production

Air Temp. Around Ice Machine °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	52						
15	50	47					
20	48	46	43	40	37		
25	47	42	41	38	35		
30	45	42	39	36	33	30	27
35			37	34	32	29	26
40					30	27	24
45					28	25	22

Based on average ice weight of 1.24 - 1.32 kg per cycle. Individual cube weight 32 grams ± 1 .

Number of individual cubes per cycle: 40

EC40 SELF-CONTAINED WATER-COOLED — LARGE CUBE (Continued)

Condenser Water Consumption	32 Air Temperature Around Ice Machine		
	Water Temperature °C		
	15	21	32
Gal/24 Hours	563	739	2474

Water regulating valve set to maintain 9 bar discharge pressure.

Operating Pressures

Water Temperature Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	10.34-8.62	1.79-.28	3.10-5.87	2.07-3.45
20	11.03-8.62	1.79-.34	3.10-7.24	2.07-4.82
25	11.03-8.62	1.79-.41	3.10-7.24	2.07-4.82
32	11.03-8.62	2.00-.41	3.10-7.24	2.07-4.82
43	11.72-8.62	2.00-.48	3.45-8.62	2.07-5.87

Set water regulating valve to 9 bar 5 minutes into freeze cycle. All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC50 SELF-CONTAINED AIR-COOLED — STANDARD CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	18.1-20.5							3.5 min.
15	19.5-22.1	20.1-22.7						
20	20.6-23.3	21.8-24.6	23.1-26.0	23.8-26.8	25.3-28.5			
25	22.4-25.3	23.8-26.8	24.5-27.6	26.1-29.4	27.0-30.4			
30	24.5-27.6	25.3-28.5	27.0-30.4	27.9-31.4	29.9-33.7	32.3-36.2	33.5-37.6	
35			28.9-32.5	31.1-34.9	33.5-37.6	34.9-39.2	38.0-42.6	
40					36.4-40.8	39.7-44.5	41.6-46.6	
45					41.6-46.6	43.6-48.9	48.3-54.1	

Times in minutes.

EC50 SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	48						
15	45	44					
20	43	41	39	38	36		
25	40	38	37	35	34		
30	37	36	34	33	31	29	28
35			32	30	28	27	25
40					26	24	23
45					23	22	20

Based on average ice weight of 0.72 - 0.80 kg per cycle. Individual cube weight 19 grams ± 1 .

Number of individual cubes per cycle: 40

Continued on next page

EC50 SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	9.31-4.48	2.76-.14	2.76-4.83	1.38-2.76
20	14.48-6.21	3.31-.14	4.14-7.58	1.72-4.48
25	14.48-7.58	3.45-.14	4.82-8.27	2.07-4.82
32	17.23-8.96	3.79-.14	6.21-9.65	2.76-5.87
43	24.13-12.07	4.27-.21	7.93-12.76	3.45-7.93

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC50 SELF-CONTAINED AIR-COOLED — LARGE CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	24.8-26.7							3.5 min.
15	26.8-28.7	27.8-29.8						
20	29.0-31.1	30.2-32.4	31.5-33.8	32.2-34.5	33.7-36.1			
25	31.5-33.8	32.9-35.3	33.7-36.1	35.3-37.8	37.1-39.7			
30	34.5-36.9	36.2-38.7	37.1-39.7	39.0-41.8	41.1-44.0	43.5-46.5	46.1-49.3	
35			41.1-44.0	43.5-46.5	46.1-49.3	49.0-52.4	52.3-55.9	
40					52.3-55.9	56.0-59.9	60.3-64.4	
45					60.3-64.4	65.2-69.6	70.9-75.7	

Times in minutes.

Continued on next page ...

EC50 SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	63						
15	59	57					
20	55	53	51	50	48		
25	51	49	48	46	44		
30	47	45	44	42	40	38	36
35			40	38	36	34	32
40					32	30	28
45					28	26	24

Based on average ice weight of 1.24 - 1.32 kg per cycle. Individual cube weight 32 grams \pm 1.

Number of individual cubes per cycle: 40

EC50 SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	9.31-4.48	2.76-.14	2.76-4.83	1.38-2.76
20	14.48-6.21	3.31-.14	4.14-7.58	1.72-4.48
25	14.48-7.58	3.45-.14	4.82-8.27	2.07-4.82
32	17.23-8.96	3.79-.14	6.21-9.65	2.76-5.87
43	24.13-12.07	4.27-.21	7.93-12.76	3.45-7.93

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC50 SELF-CONTAINED WATER-COOLED — STANDARD CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Around Ice Machine °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	19.5-22.1							3.5 min.
15	20.1-22.7	20.6-23.3						
20	20.6-23.3	21.2-23.9	21.8-24.6	22.4-25.3	23.8-26.8			
25	21.2-23.9	22.4-25.3	22.4-25.3	23.1-26.0	23.8-26.8			
30	21.8-24.6	22.4-25.3	23.1-26.0	23.8-26.8	24.5-27.6	25.3-28.5	26.1-29.4	
35			23.8-26.8	24.5-27.6	25.3-28.5	26.1-29.4	27.0-30.4	
40					26.1-29.4	27.0-30.4	27.9-31.4	
45					27.9-31.4	28.9-32.5	29.9-33.7	

Times in minutes.

EC50 SELF-CONTAINED WATER-COOLED — STANDARD CUBE (Continued)

24 Hour Ice Production

Air Temp. Around Ice Machine °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	45						
15	44	43					
20	43	42	41	40	38		
25	42	40	40	39	38		
30	41	40	39	38	37	36	35
35			38	37	36	35	34
40					35	34	33
45					33	32	31

Based on average ice weight of 0.72 - 0.80 kg per cycle. Individual cube weight 19 grams \pm 1.

Number of individual cubes per cycle: 40

Continued on next page ...

EC50 SELF-CONTAINED WATER-COOLED — STANDARD CUBE (Continued)

Condenser Water Consumption	32 Air Temperature Around Ice Machine		
	Water Temperature °C		
	15	21	32
Gal/24 Hours	690	1194	4752

Water regulating valve set to maintain 9 bar discharge pressure.

Operating Pressures

Water Temperature Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	9.65-7.93	2.34-.07	4.83-7.58	2.41-3.79
20	11.38-7.93	2.48-.07	5.17-9.65	2.41-5.86
25	11.38-7.93	2.62-.07	5.17-9.65	2.41-5.86
32	12.07-8.27	2.90-.07	5.17-9.65	2.41-5.86
43	13.10-8.62	3.59-.07	5.17-9.65	2.41-6.55

Set water regulating valve to 9 bar 5 minutes into freeze cycle. All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC50 SELF-CONTAINED WATER-COOLED — LARGE CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Around Ice Machine °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	26.8-28.7							3.5 min.
15	27.3-29.3	28.4-30.4						
20	27.8-29.8	29.0-31.1	30.2-32.4	31.5-33.8	32.2-34.5			
25	29.0-31.1	30.2-32.4	30.8-33.1	32.2-34.5	32.9-35.3			
30	29.6-31.7	30.8-33.1	31.5-33.8	32.9-35.3	34.5-36.9	35.3-37.8	37.1-39.7	
35			32.9-35.3	33.7-36.1	35.3-37.8	37.1-39.7	38.0-40.7	
40					36.2-38.7	38.0-40.7	39.0-41.8	
45					37.1-39.7	39.0-41.8	41.1-44.0	

Times in minutes.

Continued on next page ...

EC50 SELF-CONTAINED WATER-COOLED — LARGE CUBE (Continued)

24 Hour Ice Production

Air Temp. Around Ice Machine °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	59						
15	58	56					
20	57	55	53	51	50		
25	55	53	52	50	49		
30	54	52	51	49	47	46	44
35			49	48	46	44	43
40					45	43	42
45					44	42	40

Based on average ice weight of 1.24 - 1.32 kg per cycle. Individual cube weight 32 grams \pm 1.

Number of individual cubes per cycle: 40

EC50 SELF-CONTAINED WATER-COOLED — LARGE CUBE (Continued)

Condenser Water Consumption	32 Air Temperature Around Ice Machine		
	Water Temperature °C		
	15	21	32
Gal/24 Hours	836	1171	3896

Water regulating valve set to maintain 9 bar discharge pressure.

Operating Pressures

Water Temperature Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	9.65-7.93	2.34-.07	4.83-7.58	2.41-3.79
20	11.38-7.93	2.48-.07	5.17-9.65	2.41-5.86
25	11.38-7.93	2.62-.07	5.17-9.65	2.41-5.86
32	12.07-8.27	2.90-.07	5.17-9.65	2.41-5.86
43	13.10-8.62	3.59-.07	5.17-9.65	2.41-6.55

Set water regulating valve to 9 bar 5 minutes into freeze cycle. All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC65 SELF-CONTAINED AIR-COOLED — STANDARD CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	21.2-23.8							3.0 min.
15	23.4-26.4	25.0-28.1						
20	25.6-28.8	27.4-30.8	29.6-33.2	32.0-35.8	34.8-38.9			
25	27.4-30.8	32.0-35.8	32.0-35.8	34.8-38.9	38.1-42.6			
30	30.3-34.0	32.9-36.8	35.8-40.1	39.3-43.9	43.4-48.5	48.4-54.1	54.7-61.0	
35			39.3-43.9	43.4-48.5	48.4-54.1	54.7-61.0	65.8-73.3	
40					57.1-63.7	65.8-73.3	77.3-86.1	
45					69.2-77.1	82.1-91.4	100.4-111.7	

Times in minutes.

EC65 SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	59						
15	54	51					
20	50	47	44	41	38		
25	47	41	41	38	35		
30	43	40	37	34	31	28	25
35			34	31	28	25	21
40					24	21	18
45					20	17	14

Based on average ice weight of 1.01 - 1.12 kg per cycle. Individual cube weight 19 grams ± 1 .

Number of individual cubes per cycle: 56

Continued on next page ...

EC65 SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	12.06-9.65	4.13-1.80	6.21-8.27	4.83-5.87
20	16.20-12.41	4.83-1.93	7.58-10.69	5.52-8.62
25	17.58-14.48	4.83-2.07	7.92-11.72	6.89-9.31
32	20.68-17.24	5.17-2.21	8.27-13.79	7.93-10.34
43	26.20-22.06	5.52-2.48	8.96-14.82	8.96-12.07

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC65 SELF-CONTAINED AIR-COOLED — LARGE CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	28.1-30.0							3.0 min.
15	32.3-34.4	34.1-36.4						
20	35.5-37.9	37.0-39.4	39.4-42.0	41.2-43.9	45.3-48.2			
25	39.4-42.0	46.4-49.4	43.1-46.0	46.4-49.4	48.8-52.0			
30	43.1-46.0	46.4-49.4	48.8-52.0	51.5-54.8	54.5-58.0	59.6-63.4	63.6-67.6	
35			54.5-58.0	59.6-63.4	63.6-67.6	68.0-72.3	76.0-80.8	
40					76.0-80.8	82.3-87.5	89.8-95.4	
45					89.8-95.4	103.8-110.3	115.7-122.9	

Times in minutes.

Continued on next page ...

EC65 SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	68						
15	60	57					
20	55	53	50	48	44		
25	50	43	46	43	41		
30	46	43	41	39	37	34	32
35			37	34	32	30	27
40					27	25	23
45					23	20	18

Based on average ice weight of 1.49 - 1.58 kg per cycle. Individual cube weight 32 grams ± 1 .

Number of individual cubes per cycle: 48

EC65 SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	12.07-9.65	4.14-1.72	6.21-7.58	4.83-6.21
20	15.86-12.41	4.14-1.93	8.27-11.03	5.52-7.93
25	17.58-15.17	4.48-2.07	8.27-11.72	7.58-9.31
32	20.68-17.24	4.83-2.21	8.27-13.79	8.62-10.69
43	25.51-22.06	5.52-2.41	9.31-14.82	9.65-12.07

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC65 SELF-CONTAINED WATER-COOLED — STANDARD CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time.

Air Temp. Around Ice Machine °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	23.9-26.9							3.0 min.
15	23.9-26.9	26.8-30.1						
20	24.5-27.5	26.8-30.1	30.3-34.0	24.8-38.9	39.3-43.9			
25	25.0-28.1	27.4-30.8	31.1-34.9	35.8-40.1	40.6-45.4			
30	25.6-28.8	28.1-31.6	32.0-35.8	36.9-41.3	42.0-46.9	50.4-56.2	62.6-69.8	
35			32.9-42.6	38.1-42.6	43.4-48.5	52.4-58.5	65.8-73.3	
40					45.0-50.3	54.7-61.0	69.2-77.1	
45					46.7-52.1	57.1-63.7	73.0-81.4	

Times in minutes.

EC65 SELF-CONTAINED WATER-COOLED — STANDARD CUBE (Continued)

24 Hour Ice Production

Air Temp. Around Ice Machine °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	53						
15	53	48					
20	52	48	43	38	34		
25	51	47	42	37	33		
30	50	46	41	36	32	27	22
35			40	35	31	26	21
40					30	25	20
45					29	24	19

Based on average ice weight of 1.01 - 1.12 kg per cycle. Individual cube weight 19 grams ± 1 .

Number of individual cubes per cycle: 56

Continued on next page ...

EC65 SELF-CONTAINED WATER-COOLED — STANDARD CUBE (Continued)

Condenser Water Consumption	32 Air Temperature Around Ice Machine		
	Water Temperature °C		
	15	21	32
Gal/24 Hours	689	1057	9488

Operating Pressures

Water Temperature Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	15.86-15.51	4.55-1.93	6.89-10.00	5.52-6.89
20	15.86-15.51	4.83-1.93	7.58-10.68	6.21-7.93
25	15.86-15.51	4.83-1.93	7.58-10.68	6.21-7.93
32	16.20-15.86	4.83-2.00	7.93-11.03	6.89-8.27
43	17.24-16.20	5.17-2.14	8.27-12.41	7.58-8.96

Set water regulating valve to 15.9 bar 5 minutes into freeze cycle. All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC65 SELF-CONTAINED WATER-COOLED — LARGE CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Around Ice Machine °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	32.9-35.1							3.0 min.
15	33.5-35.7	34.8-37.1						
20	34.1-36.4	35.5-37.9	37.0-39.4	38.6-41.1	39.4-42.0			
25	35.5-37.9	37.0-39.4	37.8-40.3	39.4-42.0	40.3-42.9			
30	36.2-38.6	37.8-40.3	38.6-41.1	40.3-42.9	42.2-44.9	43.1-46.0	45.3-48.2	
35			40.3-42.9	41.2-43.9	43.1-46.0	45.3-48.2	46.4-49.4	
40					44.2-47.1	46.4-49.4	47.6-50.7	
45					45.3-48.2	47.6-50.7	50.1-53.4	

Times in minutes.

Continued on next page

EC65 SELF-CONTAINED WATER-COOLED — LARGE CUBE (Continued)

24 Hour Ice Production

Air Temp. Around Ice Machine °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	59						
15	58	56					
20	57	55	53	51	50		
25	55	53	52	50	49		
30	54	52	51	49	47	46	44
35			49	48	46	44	43
40					45	43	42
45					44	42	40

Based on average ice weight of 1.49 - 1.58 kg per cycle. Individual cube weight 32 grams ± 1 .

Number of individual cubes per cycle: 48

EC65 SELF-CONTAINED WATER-COOLED — LARGE CUBE (Continued)

Condenser Water Consumption	32 Air Temperature Around Ice Machine		
	Water Temperature °C		
	15	21	32
Gal/24 Hours	836	1171	3896

Water regulating valve set to maintain 15.9 bar discharge pressure.

Operating Pressures

Water Temperature Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	15.86-15.51	4.14-1.52	6.89-10.00	5.52-6.89
20	15.86-15.51	4.83-1.52	7.58-10.68	6.21-7.93
25	16.20-15.51	4.83-1.52	7.58-10.68	6.21-7.93
32	16.89-15.51	4.83-1.65	7.93-11.03	6.89-8.27
43	17.93-16.20	5.52-1.93	8.27-12.41	7.58-8.96

Set water regulating valve to 15.9 bar 5 minutes into freeze cycle. All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC80 SELF-CONTAINED AIR-COOLED — STANDARD CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	15.1-17.2							3.0 min.
15	16.7-18.9	18.0-20.3						
20	18.1-20.5	19.5-22.0	21.1-23.8	22.9-25.8	25.5-28.6			
25	19.7-22.2	22.4-25.2	23.1-26.0	25.3-28.4	27.8-31.3			
30	21.5-24.2	23.4-26.3	25.6-28.8	28.2-31.6	31.2-35.0	35.0-39.2	39.7-44.4	
35			28.5-31.9	31.6-35.5	35.5-39.7	40.3-45.1	46.3-51.7	
40					41.0-45.8	47.2-52.7	55.6-62.1	
45					48.1-53.7	56.8-63.4	69.2-77.1	

Times in minutes.

EC80 SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

24 Hour Ice Production

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	78.1						
15	71.9	67.8					
20	67.3	63.2	59.1	55.1	50.2		
25	62.7	56.2	54.6	50.5	46.4		
30	58.2	54.1	50.0	45.9	41.9	37.8	33.7
35			45.5	41.4	37.3	33.2	29.2
40					32.7	28.7	24.6
45					28.2	24.1	20.0

Based on average ice weight of 1.01 - 1.12 kg per cycle. Individual cube weight 19 grams \pm 1.

Number of individual cubes per cycle: 56

Continued on next page ...

EC80 SELF-CONTAINED AIR-COOLED — STANDARD CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	13.79-9.65	3.45-1.52	6.89-8.27	4.48-5.17
20	17.24-12.41	4.14-1.93	9.31-11.03	6.21-7.24
25	17.24-13.79	4.48-2.07	10.68-12.41	6.89-7.93
32	21.37-17.24	4.69-2.27	12.07-15.17	8.27-10.00
43	26.20-21.37	5.17-2.48	16.55-17.24	9.65-11.72

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC80 SELF-CONTAINED AIR-COOLED — LARGE CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	19.5-20.9							3.0 min.
15	21.7-23.2	22.5-24.1						
20	23.9-25.5	24.8-26.6	25.9-27.7	27.0-28.9	28.6-30.5			
25	26.4-28.2	28.7-30.6	28.9-30.8	30.2-32.3	31.7-33.9			
30	29.5-31.4	30.9-33.0	32.5-34.7	34.2-36.5	36.1-38.5	38.2-40.7	40.5-43.1	
35			37.0-39.4	39.2-41.8	41.7-44.4	44.4-47.3	47.5-50.5	
40					49.1-52.3	52.8-56.2	57.1-60.8	
45					59.2-63.0	64.8-69.0	71.3-75.8	

Times in minutes.

Continued on next page

EC80 SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

24 Hour Ice Production.

Air Temp. Entering Condenser °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	93.3						
15	85.1	82.4					
20	78.4	75.7	73.0	70.3	66.9		
25	71.8	66.7	66.3	63.6	60.9		
30	65.1	62.4	59.6	56.9	54.2	51.5	48.8
35			53.0	50.2	47.5	44.8	42.1
40					40.8	38.1	35.4
45					34.2	31.4	28.7

Based on average ice weight of 1.49 - 1.58 kg per cycle. Individual cube weight 32 grams \pm 1.

Number of individual cubes per cycle: 48

EC80 SELF-CONTAINED AIR-COOLED — LARGE CUBE (Continued)

Operating Pressures

Air Temp. Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	13.79-9.65	3.45-1.59	6.89-8.27	4.48-5.17
20	13.79-17.24	4.48-1.72	9.65-11.38	5.86-6.89
25	18.62-14.48	4.48-1.79	11.03-12.41	6.89-8.27
32	21.37-17.24	4.69-2.07	12.41-15.17	7.58-10.00
43	26.20-22.75	5.17-2.48	13.79-17.24	9.30-12.07

All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC80 SELF-CONTAINED WATER-COOLED — STANDARD CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Around Ice Machine °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	16.2-18.3							3.0 min.
15	16.4-18.6	18.2-20.6						
20	16.7-18.9	18.2-20.6	20.0-22.5	22.0-24.8	25.0-28.1			
25	17.0-19.2	18.9-21.3	20.3-22.9	22.5-25.3	25.0-28.1			
30	17.0-19.2	18.5-20.9	20.3-22.9	22.5-25.3	25.0-28.1	28.1-31.6	32.0-35.8	
35			20.7-23.4	22.9-25.8	25.6-28.8	28.8-32.3	32.9-36.8	
40					25.6-28.8	29.6-33.2	33.8-37.9	
45					26.2-29.4	29.6-33.2	33.8-37.9	

Times in minutes.

EC80 SELF-CONTAINED WATER-COOLED — STANDARD CUBE (Continued)

24 Hour Ice Production

Air Temp. Around Ice Machine °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	74						
15	73	67					
20	72	67	62	57	51		
25	71	65	61	56	51		
30	71	66	61	56	51	46	41
35			60	55	50	45	40
40					50	44	39
45					49	44	39

Based on average ice weight of 1.01 - 1.12 kg per cycle. Individual cube weight 19 grams ± 1 .

Number of individual cubes per cycle: 56

Continued on next page ...

EC80 SELF-CONTAINED WATER-COOLED — STANDARD CUBE (Continued)

Condenser Water Consumption	32 Air Temperature Around Ice Machine		
	Water Temperature °C		
	15	21	32
Gal/24 Hours	781	1480	8893

Water regulating valve set to maintain 15.9 bar discharge pressure.

Operating Pressures

Water Temperature Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	15.86-15.51	4.14-2.00	8.27-10.68	5.52-6.89
20	15.86-15.51	4.14-2.00	8.96-12.41	6.21-8.27
25	15.86-15.51	4.14-2.00	8.96-12.41	6.21-8.27
32	15.86-15.51	4.48-2.07	8.96-12.41	6.55-8.27
43	17.24-16.20	4.48-2.07	8.96-12.41	6.89-8.96

Set water regulating valve to 9 bar 5 minutes into freeze cycle. All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

EC80 SELF-CONTAINED WATER-COOLED — LARGE CUBE

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Around Ice Machine °C	Freeze Time							Harvest Time
	Water Temperature °C							
	10	15	20	25	30	35	40	
10	14.5-16.4							3.0 min.
15	15.1-17.2	15.9-18.0						
20	15.4-17.4	16.4-18.6	17.3-19.5	18.5-20.9	20.3-22.9			
25	15.6-17.7	17.6-19.9	17.9-20.2	18.9-21.3	20.3-22.9			
30	15.9-18.0	17.0-19.2	18.2-20.6	19.6-22.1	20.7-23.4	22.5-25.3	24.5-27.5	
35			18.5-20.9	20.0-22.5	21.6-24.3	22.9-25.8	25.0-28.1	
40					22.0-24.8	23.9-26.9	25.6-28.8	
45					24.5-27.5	24.5-27.5	26.8-30.1	

Times in minutes.

Continued on next page ...

EC80 SELF-CONTAINED WATER-COOLED — LARGE CUBE (Continued)

24 Hour Ice Production.

Air Temp. Around Ice Machine °C	Water Temperature °C						
	10	15	20	25	30	35	40
10	81						
15	78	75					
20	77	73	70	66	61		
25	76	69	68	65	61		
30	75	71	67	63	60	56	52
35			66	62	58	55	51
40					57	53	50
45					56	52	48

Based on average ice weight of 1.49 - 1.58 kg per cycle. Individual cube weight 32 grams ± 1 .

Number of individual cubes per cycle: 48

EC80 SELF-CONTAINED WATER-COOLED — LARGE CUBE (Continued)

Condenser Water Consumption	32 Air Temperature Around Ice Machine		
	Water Temperature °C		
	15	21	32
Gal/24 Hours	826	1316	9060

Water regulating valve set to maintain 15.9 bar discharge pressure.

Operating Pressures

Water Temperature Entering Condenser °C	Freeze Cycle		Harvest Cycle	
	Discharge Pressure	Suction Pressure	Discharge Pressure	Suction Pressure
10	15.86-15.51	3.79-1.79	8.27-9.65	5.52-6.21
20	15.86-15.51	4.48-1.79	8.96-11.38	6.21-8.27
25	15.86-15.51	4.48-1.79	8.96-11.38	6.21-8.27
32	15.86-15.51	4.48-1.79	8.96-11.38	6.55-8.62
43	17.24-16.20	4.83-1.93	9.65-12.07	7.24-9.65


Set water regulating valve to 15.9 bar 5 minutes into freeze cycle. All pressures are in bar. Suction pressure drops gradually throughout the freeze cycle.

This Page Intentionally Left Blank


Diagrams

Wiring Diagram

MECHANICAL TIMER MODELS

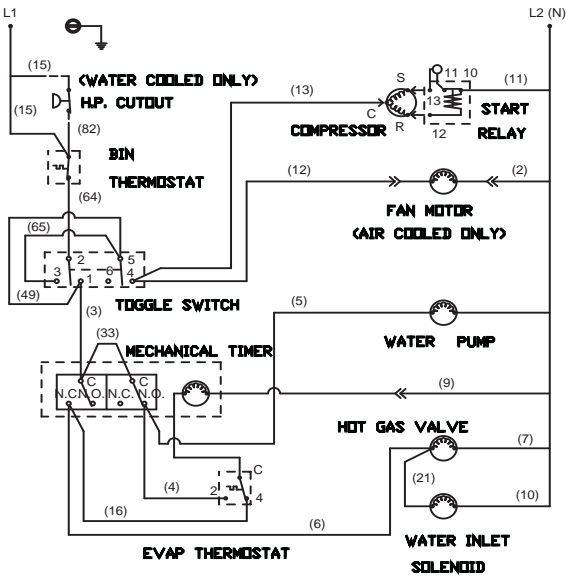


SCR MODELS

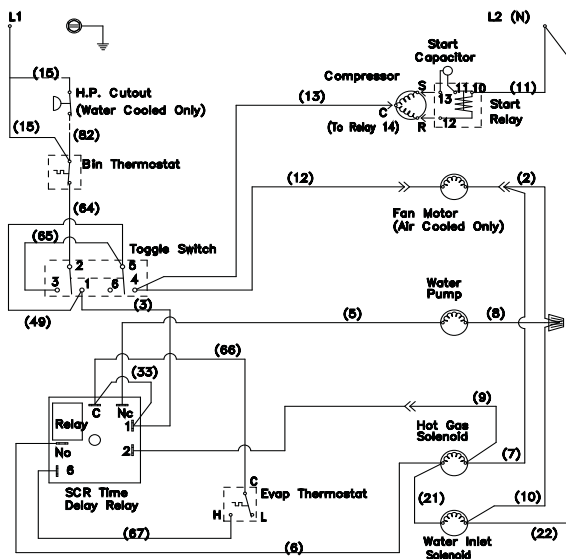


() - Wire Number Designation
(Number is Marked At Each End Of Wire)
—<— Female/Male Connector

NO TIMER MODELS

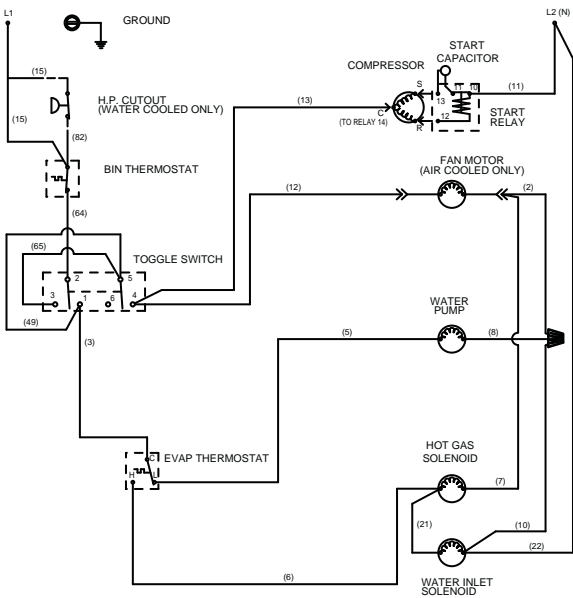


Tubing Schematics

EC18/EC20/EC30/EC40 TUBING SCHEMATIC

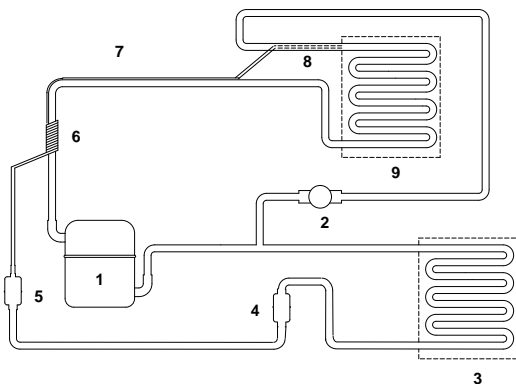

1. Compressor
2. Hot Gas Valve
3. Condenser (Air or Water Cooled)
4. Receiver (Water Cooled Only)
5. Liquid Line Drier
6. Suction Accumulator with Heat Exchanger
7. Heat Exchanger
8. Capillary Tube
9. Evaporator

EC50/EC65/EC80 TUBING SCHEMATIC

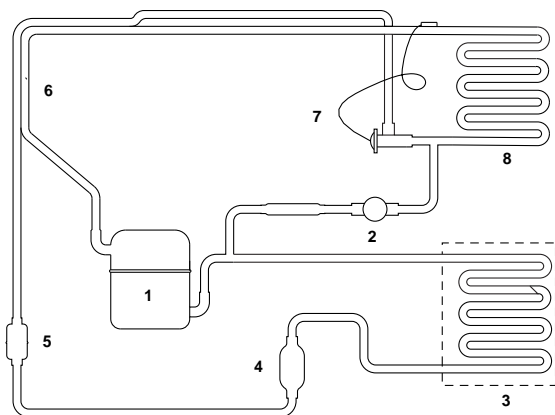

1. Compressor
2. Hot Gas Valve
3. Condenser (Air or Water Cooled)
4. Receiver (Water Cooled Only)
5. Liquid Line Drier
6. Heat Exchanger
7. Thermostatic Expansion Valve
8. Evaporator

MANITOWOC ICE
2110 South 26th Street P.O. Box 1720
Manitowoc, WI 54221-1720 USA
Phone: 920-682-0161 Fax: 920-683-7585
Website – www.manitowocice.com

©2010 Manitowoc Ice