




SHARK X 2.0

Model FS81241
Model FS81242
Model FS81243
Model FS81244
Model FS81245

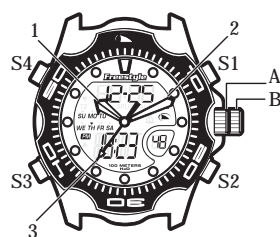

1. Hour Hand
2. Minute Hand
3. Second Hand

S1 - Start/stop button
S2 - Lap/reset button
S3 - Mode button
S4 - Light button

TO SET THE ANALOG TIME
1. Pull crown out to first click position B.
2. Turn crown to set time.
3. Push crown back to position A.

DISPLAY MODES

The watch has four display modes: HOME TIME (TIME), HOME TIME ALARM (ALM1), STOPWATCH (STW) and COUNTDOWN TIMER (TMR).

To change from one display mode to another, press S3 button once. The mode description will appear for 2 seconds before the selected mode is activated.

HOME AND FOREIGN DISPLAY

To display FOREIGN TIME, press S2 button when HOME TIME is displayed. The mode description (TM-2) will appear shortly before FOREIGN TIME is displayed. To change back to HOME TIME, press S2 button.

To display the daily FOREIGN TIME ALARM, press S2 button when HOME TIME ALARM is displayed. The mode description (ALM2) will appear shortly before FOREIGN TIME ALARM is displayed. To change back to HOME TIME ALARM, press S2 button.

TO SET THE DIGITAL TIME AND CALENDAR

1. Press S3 button to select time mode.
2. Press S2 button to toggle between HOME TIME and FOREIGN TIME mode to set.
3. Press and hold S2 button for two seconds until the "SET" message appears and the second digits blink.
4. Press S1 button to reset the second digits to 00.
5. Press S3 button, the minute digits will blink.
6. Press S1 button to set the minute digits. Holding down the button will speed up the process.
7. Press S3 button, the hour digits will blink.
8. Press S1 button to set the hour digits.
9. Follow the same pattern to set date, month, day (of the week), hour format and calendar format.
10. To set the hour format, press S1 button to toggle between 12-hour and 24-hour format. The P.M. indicator may be displayed to indicate the time period 12:00A.M. - 11:59 P.M. in 12-hour format.
11. To set the calendar format, press S1 button to toggle between M-D (month-date) and D-M (date-month) format.
12. After finish making all the settings, press S2 button to confirm.

NOTE: The chosen hour and calendar formats will apply to both HOME TIME mode and FOREIGN TIME mode.

NOTE: In FOREIGN TIME settings, only minutes, hours, date, month and day are open to setting.

TO SET THE ALARM TIME

1. Press S3 button to select alarm mode.
2. Press S2 button to toggle between HOME TIME ALARM and FOREIGN TIME ALARM mode to set.
3. Press and hold S2 button for two seconds until the "SET" message appears and the minute digits blink.
4. Press S1 button to set the minute digits. Holding down the button will speed up the process.
5. Press S3 button, the hour digits will blink.
6. Press S1 button to set the hour digits.
7. After finish making all the settings, press S2 button to confirm.

TO TURN ON/OFF THE ALARM AND HOURLY CHIME

- In alarm mode,
1. Press S2 button to toggle between HOME TIME ALARM and FOREIGN TIME ALARM mode to set.

2. Press S1 button once to activate the alarm. Alarm indicator **AL1 / AL2** will appear.
3. Press again to activate the hourly chime. Chime indicator will appear.
4. Press the third time to activate both functions. Both of the indicators will appear.
5. Press the fourth time to deactivate both functions. Both of the indicators will disappear.

WHEN AN ALARM OR HOURLY CHIME GOES OFF

A tune will go off by the hour if the hourly chime function is activated.

An alarm tune will be emitted for around 20 seconds at the designated time when the alarm is activated. To stop the tune, press any button.

TO USE THE STOPWATCH

1. Press S3 button to select STOPWATCH mode.
2. The stopwatch will then be displayed in its current state - reset, running, or stopped.
3. To resume a counting, press S1 button to resume from where it left off.
4. To start a new counting, reset the stopwatch to zero first. Press S1 button to stop counting, then press S2 button to reset counter to zero.

For the measurement of elapsed time: In STOPWATCH mode,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
3. To reset to zero, press S1 button to stop counting, then press S2 button to reset the counter to zero.

For the measurement of split time: In STOPWATCH mode,

1. Press S1 button to start counting.
2. While the stopwatch is running, press S2 button once to register a lap. The stopwatch is still running in the background. To display the currently accumulated time, press S2 button again.
3. Repeat the last step until all the laps have been registered.
4. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
5. To reset to zero, press S1 button to stop counting, then press S2 button to reset the counter to zero.

NOTE: You can leave the stopwatch running while switching over to other

operating modes.

TO SET THE TIMER

1. Press S3 button to select TIMER mode.
2. Press S2 button to alter the timer setting among 1, 3, 5, 10, 15, 20, 25, 30, 45 and 60 minutes.

TO USE THE TIMER

In TIMER mode,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
3. To reload the TIMER, press S1 button to stop counting and then press S2 button.
4. After reaching zero in a countdown, a tune will be emitted. To stop the tune, press any button, the TIMER will reload automatically.

NOTE: You can leave the timer running while switching over to other operating modes.

TO USE THE BACKLIGHT

Press S4 button to turn on the backlight

NOTE WHEN REPLACING BATTERIES

When changing the battery please note that there is an INSULATOR PAD between the small and large batteries. Please make sure that you keep this pad and reuse it in the same manner after inserting the new batteries. The INSULATOR PAD needs to be placed on top of the small battery before inserting the large battery. This pad secures the small battery and ensures the best contact for both batteries.



To reduce carbon foot print, these Freestyle instructions are printed with soy inks on recycled paper.

FS1059-01