

XANTREX
Smart Choice For Power

XANTREX
Smart Choice For Power

Web: www.xantrex.com
Email: CustomerService@xantrex.com
Phone: 1-604-422-8595
Phone: 1-800-670-0707 (toll free in North America)
Fax: 1-604-420-1591
Fax: 1-800-994-7828 (toll free in North America)

Xantrex Inverter 150 Owner's Guide

445-0138-01-01 Printed in China



020791

About Xantrex

Xantrex Technology Inc. is a world-leading supplier of advanced power electronics and controls with products from 50 watt mobile units to 1 MW utility-scale systems for wind, solar, batteries, fuel cells, microturbines, and backup power applications in both grid-connected and stand-alone systems. Xantrex products include inverters, battery chargers, programmable power supplies, and variable speed drives that convert, supply, control, clean, and distribute electrical power.

Trademarks

Xantrex is a registered trademark of Xantrex Technology Inc.
© 2001 Xantrex International. All rights reserved.

Notice of Copyright

Xantrex Inverter 150 Owner's Guide © September 2001 Xantrex International.

Disclaimer

Unless specifically agreed to in writing, Xantrex Technology Inc. ("Xantrex"):

- (a) Makes no warranty as to the accuracy, sufficiency or suitability of any technical or other information provided in its manuals or other documentation.
- (b) Assumes no responsibility or liability for loss or damage, whether direct, indirect, consequential, or incidental, which might arise out of the use of such information. The use of any such information will be entirely at the user's risk.

Date and Revision

October 2001, Revision 3

Part Number

445-0138-01-01

Contact Information

Web: www.xantrex.com
Email: CustomerService@xantrex.com
Phone: 1-604-422-8595
Phone: 1-800-670-0707 (toll free in North America)
Fax: 1-604-420-1591
Fax: 1-800-994-7828 (toll free in North America)

Contents

1. Introduction	1
2. Important Safety Information	2
Warnings and Cautions	2
3. Xantrex 150 Inverter Features	5
AC Outlets	6
4. Connecting the 150 Inverter	7
Choosing a Location	7
Connecting	7
5. Operating the 150 Inverter	8
Operating Statuses	8
Interference With Electronic Equipment	10
6. Battery Operating Time	11
7. Troubleshooting	12
8. Warranty Information	15
Returning a Product	17
To Place of Purchase	17
To Xantrex	17
Out-of-Warranty Service	18
9. Specifications	19
Electrical	19
Physical	20
Regulatory	20

1 Introduction

Thank you for purchasing the Xantrex 150 Inverter. The 150 Inverter is part of a family of advanced high-performance power inverters from Xantrex, the leader in high frequency inverter design.

Connected to the 12 volt outlet in your vehicle or boat, the 150 Inverter efficiently and reliably powers a wide variety of AC loads, such as compact TVs and VCRs, laptops, camcorder and cell phone chargers, compact fluorescent lights, and soldering irons.

The 150 Inverter uses reliable solid state power electronics for years of safe, trouble-free operation and includes automatic safety monitoring circuitry to protect it, and your battery, from inadvertent overload conditions.

Read this guide before connecting or using the 150 Inverter, and save it for future reference. The main topics in the guide are:

- Safety information ([page 2](#))
- 150 Inverter features ([page 5](#))
- Instructions for connecting the inverter ([page 7](#))
- Operating guidelines ([page 8](#))
- Troubleshooting information ([page 12](#))
- Warranty and service information ([page 15](#))
- Specifications ([page 19](#))

2 Important Safety Information

If the 150 Inverter is connected or used incorrectly, hazardous conditions may be created. Read and save this safety information, and pay special attention to all Warning and Caution statements in the guide and on the inverter itself. Warnings and Cautions are indicated by this symbol:



- **Warning** statements identify conditions that could result in personal injury or loss of life.
- **Caution** statements identify conditions or practices that could result in damage to the 150 Inverter or other equipment.

Warnings and Cautions



Warning! Shock hazard.

The 150 Inverter generates the same potentially lethal AC power as a household wall outlet. Do not insert foreign objects in the inverter's AC outlet or any other openings in the inverter. Do not open the inverter. Have a qualified individual complete any service work.



Warning! Shock hazard.

Do not expose the 150 Inverter to water, rain, snow, or spray.



Caution! Risk of damage to equipment.

The 150 Inverter is designed to be directly connected to standard electrical and electronic equipment in the manner described in this guide. Do not connect it to household or RV AC distribution wiring. Do not connect it to any AC load circuit in which the neutral conductor is connected to ground (earth) or to the negative of the DC (battery) source.



Caution! Risk of damage to the 150 Inverter.

Reverse battery polarity (negative connected to positive; positive connected to negative) will damage the 150 Inverter, and it will require servicing. Damage caused by reverse polarity is not covered by your warranty.



Caution! Risk of damage to rechargeable appliances.

The output of the 150 Inverter is non-sinusoidal. Certain battery chargers can be damaged if they are connected to the 150 Inverter. Two particular types of equipment are prone to this problem:

- Small battery-operated appliances such as flashlights, shavers, and night lights that can be plugged directly into an AC receptacle to recharge.
- Certain battery chargers for battery packs used in hand power tools. These chargers will have a warning label stating that dangerous voltages are present at the battery terminals.

Do not use the 150 Inverter with the types of appliances just described.



Caution! Risk of damage due to high temperatures.

Do not use the 150 Inverter in temperatures over 40° C (100° F). Overheating may result.

3 Xantrex 150 Inverter Features

This section describes the main features of the 150 Inverter.

[Figure 1](#) shows the inverter's AC panel.

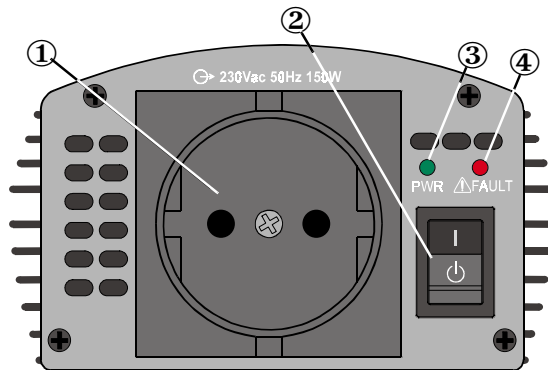


Figure 1 AC Panel on the 150 Inverter (European Outlet)

① AC Outlet An AC outlet is located on one end of the 150 Inverter. It allows you to plug in a 230 volt AC load with a power consumption of 150 watts or less.

The AC outlet on your inverter may be different from the one shown here. For all available outlets, see [Figure 2](#), [Figure 3](#), and [Figure 4](#) on [page 6](#).

② On/Standby Switch The two positions on the On/Standby switch are indicated as follows: **O** = Standby and **I** = On.

When the inverter is connected to a DC power source and the switch is on, AC power is available at the AC outlet.

③ **Power Light** The green PWR light is on all the time when the On/Standby switch is on.

④ **Fault Light** The red Δ FAULT light indicates that the inverter has shut down because of low or high battery voltage, AC overload, or excessively high temperatures.

Audible Alarm An audible alarm warns you of a high-temperature shutdown or of an impending low battery voltage shutdown.

AC Outlets

Depending on your geographic location, your 150 Inverter will have one of the following AC outlets.

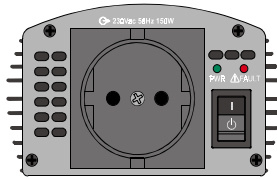


Figure 2 European AC Outlet

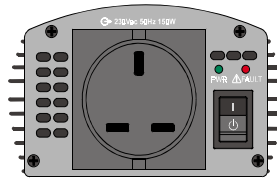


Figure 3 British AC Outlet

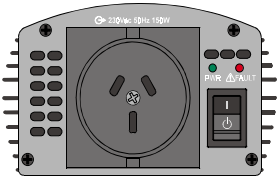


Figure 4 Australian and New Zealand AC Outlet

4 Connecting the 150 Inverter

Choosing a Location

For best performance, choose a location that is:

- **Dry** Do not expose the inverter to water drip or spray.
- **Cool** Operate the inverter in ambient temperatures between 0° C and 40° C (32° F and 100° F). Keep it away from heating vents and direct sunlight.
- **Well ventilated** For proper cooling, allow at least 5 cm (2 in.) of clearance around the inverter.
- **Clean and free of dust and dirt** Choose a location that is free of any debris that could get into the inverter.

Connecting

To connect the inverter:

1. Place the inverter on a flat surface like the vehicle's dashboard. Use the floor only if it is dry and free of debris that could get into the inverter.
2. Plug the inverter's DC lighter plug into the vehicle's cigarette lighter socket or a 12 volt outlet.
3. Turn on the inverter's On/Standby switch. The green PWR light comes on, and AC power is available at the outlet.

Note: You may need to turn the vehicle's ignition key to the accessory position.

4. Plug in the AC load you want to operate.


5 Operating the 150 Inverter


Operating Statuses



This section describes normal operation as well as problems that could occur when you use the inverter. If you have a problem, see [“Troubleshooting” on page 12](#).

- **Normal Operation** When you connect the inverter to your vehicle’s 12 volt outlet and turn on the On/Standby switch, the green PWR light comes on and AC power is available at the outlet.

The inverter shuts down automatically in response to low battery voltage, high battery voltage, AC overload, overheating, or a short in the AC output.

- **Low Battery Voltage Alarm and Shutdown** As the battery discharges, its voltage decreases.
When the inverter senses that the voltage at its DC input has dropped to 10.7 volts, it sounds an alarm. This gives you time to shut down computers or other sensitive devices. If you ignore the alarm and the DC input drops to 10.0 volts, the inverter shuts down the AC load being operated. The PWR light stays on, the alarm stays on, and the FAULT light comes on. The low battery voltage shutdown feature saves the battery from excessive discharge, which can prevent you from starting your vehicle, or more seriously, damage the battery.
- **Possible shutdown when the vehicle’s engine is started** The 150 Inverter will operate while your vehicle’s engine is running, but the normal voltage drop that occurs when the engine starts may trigger a low voltage shutdown.

- AC Overload Shutdown** If you connect an AC load that is rated higher than 150 watts or 0.65 amps or that draws excessive surge power, the 150 Inverter shuts down. The PWR light stays on, and the FAULT light comes on to indicate that the inverter is overloaded.

Note: High startup surge requirements The power, or “wattage” rating of an AC load is the average amount of power it uses. When they are first turned on, many AC loads consume more power than their continuous power rating. TVs, monitors, and electric motors are examples of loads that have high surge requirements at start up. Although the 150 Inverter can supply momentary surge power to 300 watts, some loads rated less than 150 watts can exceed its surge capabilities and trigger the AC overload shutdown feature. (See [page 12](#) for troubleshooting procedures.)
- High Battery Voltage Shutdown** If a defective battery charging system causes the battery voltage to rise to dangerously high levels, the inverter shuts down automatically. The PWR light stays on, and the FAULT light comes on.
- High Temperature Shutdown** If the inverter exceeds its safe operating temperature because of insufficient ventilation or a high-temperature environment, it sounds an alarm and shuts down automatically. The PWR light stays on, and the FAULT light comes on. When the inverter has cooled sufficiently, it restarts automatically.

Interference With Electronic Equipment

Most AC loads operate with the 150 Inverter as they would with household AC power with the following exceptions.

Buzzing Sound Some inexpensive stereo systems and “boom boxes” have inadequate internal power supply filtering and buzz slightly when powered by the 150 Inverter. The best solution is to have an audio system with a good quality filter.

Television Interference The 150 Inverter is shielded to minimize its interference with TV signals. If TV signals are weak, you may see the interference in the form of lines scrolling across the screen. Try one of these suggestions to minimize or eliminate the problem:

- Use an extension cord to increase the distance between the inverter and the TV, antenna, and cables.
- Adjust the orientation of the inverter, TV, antenna, and cables.
- Maximize TV signal strength by using a better antenna, and use shielded antenna cable where possible.
- Try a different TV. Different models vary considerably in their susceptibility to interference.

6 Battery Operating Time

The operating time of the 150 Inverter depends on the charge level of the battery, the battery capacity, and the amount of power drawn by the particular AC load being used. With a typical vehicle battery and a 150 watt AC load (like a small TV), you can expect two to three hours of operating time.

To preserve the battery:

- Do not allow your vehicle battery to become deeply discharged. A vehicle battery (starting battery) is not designed to be deeply discharged, and repeated deep discharge/charge cycles will shorten its life.

When you use a vehicle battery as a power source, start the vehicle every hour or two and run it until you have partially recharged the battery.

- Do not leave the 150 Inverter on for extended periods if an AC load is not connected.

The inverter draws less than 0.18 amps with the On/Standby switch on and no AC load connected, but that will eventually discharge the battery.

7 Troubleshooting



Warning! Shock Hazard.


Do not open the inverter or attempt to service it yourself. Refer all service to qualified personnel.

This section describes problems you could encounter as well as possible causes and various remedies.


The AC load will not operate; the FAULT light is on.

Symptom An AC load is plugged in or turned on, operates for one to ten seconds, and then shuts down.

Possible cause	Suggested remedy
The AC load is rated at more than 150 watts; an overload shutdown has occurred.	Use a load with a power rating less than 150 watts (0.65 amps).
The AC load is rated at less than 150 watts, but a high starting surge has caused an overload shutdown.	The AC load exceeds the inverter's surge capability. Use a load with a starting surge power within its capability.

Symptom The AC load will not operate. The FAULT light comes on when the inverter is turned on or when the AC load is turned on or plugged in. The alarm may sound.

Possible cause	Suggested remedy
The battery is discharged.	Recharge the battery.
The battery voltage is excessive.	Check the charging system.

Symptom The AC load runs for more than one minute, the alarm sounds, and the FAULT light comes on. The inverter is warm or hot to touch.

Possible cause	Suggested remedy
Poor ventilation or a high-temperature environment has caused the inverter to overheat.	Ensure that ventilation is not restricted around the inverter.

The AC load will not operate; no inverter lights are on.

Symptom The cigarette lighter works in the lighter socket, but the inverter does not.

Possible cause	Suggested remedy
The contact between the plug and the lighter socket or the 12 volt outlet is poor.	Press the plug firmly into the socket. Clean the plug or the socket if necessary.
The inverter has been connected with reverse DC input polarity.	The inverter has probably been damaged. Have it repaired. Instructions for returning the inverter are on page 18 . Damage caused by reverse polarity is not covered by the warranty.

Symptom The cigarette lighter does not work in the lighter socket.


Possible cause	Suggested remedy
The lighter socket or the 12 volt outlet may require that the ignition be switched on.	Turn the key to the accessory position.
The cigarette lighter fuse or the 12 volt outlet fuse is blown.	Check the vehicle fuses, and replace the blown fuse with the correct type and size.

Measured inverter output voltage is too low.

Symptom The AC voltmeter reading is 5 to 15 volts too low.

Possible cause	Suggested remedy
A standard “average reading” AC voltmeter has been used to measure the output voltage.	For accuracy, the 150 Inverter modified sine wave output needs to be measured with a “true RMS” voltmeter, like a Fluke 87 series multimeter.
The battery voltage is too low.	Recharge the battery.

Battery operating time is less than expected.

Symptom The inverter runs for a while, and then the  FAULT light comes on. The inverter is cool or warm to touch.

Possible cause	Suggested remedy
The battery is old or defective.	Replace the battery.
The battery is not being charged properly.	Have a qualified technician check the vehicle’s electrical system.

8 Warranty Information

What Does This Warranty Cover? Xantrex manufactures its products from parts and components that are new or equivalent to new, in accordance with industry standard practices. This warranty covers any defects in workmanship or materials.

How Long Does The Coverage Last? This warranty lasts for two (2) years from the date of purchase. Implied warranties of merchantability and fitness for a particular purpose are limited to two (2) years from date of purchase. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What Does This Warranty Not Cover? This warranty will not apply where the product has been misused, neglected, improperly installed, physically damaged or altered, either internally or externally, or damaged from improper use or use in an unsuitable environment. Xantrex does not warrant uninterrupted operations of its products. Xantrex shall not be liable for damages, whether direct, incidental, special, or consequential, or economic loss even though caused by the negligence or fault of Xantrex. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

What Will Xantrex Do? At its option, Xantrex will repair or replace the defective product free of charge. Xantrex will, also at its option, use new and/or reconditioned parts made by various manufacturers in performing warranty repair and

building replacement products. If Xantrex repairs or replaces a product, its warranty term is not extended. Xantrex owns all parts removed from repaired products.

Service During Warranty In order to qualify for the warranty, dated proof of purchase must be provided, and the product must not be disassembled or modified without prior authorization by Xantrex. If your product requires warranty service, please return it to the place of purchase along with a copy of your dated proof of purchase. If you are unable to contact your merchant, or the merchant is unable to provide service, contact Xantrex directly:

Phone: 1-604-422-8595

Phone: 1-800-670-0707 (toll free in North America)

Fax: 1-604-420-1591

Fax: 1-800-994-7828 (toll free in North America)

Email: CustomerService@xantrex.com

Returning a Product

You can return a product to the place of purchase or to Xantrex.

To Place of Purchase

If your product requires service, return it to the place of purchase along with a copy of your dated proof of purchase.

To Xantrex

If you are unable to contact your merchant, or the merchant is unable to provide service, contact Xantrex directly.

You must obtain a Return Material Authorization (RMA) number from Xantrex before returning a product directly to Xantrex. Do not return a product to Xantrex without first obtaining an RMA number. When you contact Xantrex to obtain service, be prepared to supply the serial number of your product and its date of purchase as well as information about the installation or use of the inverter.

If you are returning an inverter directly to Xantrex:

1. Obtain an RMA number and a shipping address from Xantrex. Product(s) returned without an RMA number or shipped collect will be refused.
2. Package the inverter safely, preferably using the original packing materials. Include the RMA number, a copy of your dated proof of purchase, a return address where the repaired inverter can be shipped, a contact telephone number, and a brief description of the problem.

3. Ship the inverter to the address provided in Step 1, freight prepaid. Obtaining proof of delivery is recommended.

How Other Laws Apply: This warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

Out-of-Warranty Service

If the warranty period for your 150 Inverter has expired, if the inverter was damaged due to misuse or incorrect installation, if other conditions of the warranty have not been met, or if no dated proof of purchase is available, your inverter may be serviced or replaced for a flat fee.

To return your 150 Inverter for out-of-warranty service, contact Xantrex customer service for a Return Material Authorization (RMA) number, and follow the other steps outlined in [“To Xantrex” on page 17](#). Options for payment, such as credit card or money order, will be explained by the customer service representative. In cases where the minimum flat fee does not apply, as with incomplete inverters or inverters with excessive damage, an additional fee will be charged. If applicable, you will be contacted by customer service once your inverter has been received.

9 Specifications

Specifications may change without notice.

Electrical

AC receptacles	1
AC output voltage	230 volts AC \pm 5%
AC output frequency	50 Hz \pm 3 Hz
AC output waveform	Modified Sine Wave
Maximum continuous AC output power	150 watts
Maximum AC output surge power	300 watts
DC input voltage range	10–15 volts DC
Battery drain with no AC load (at 12V input) and inverter switch on	0.18 amps
Efficiency (optimal)	90%
Ambient operating temperature range	0° C–40° C (32° F–100° F)
Low battery alarm trigger point	10.7 volts DC
Low battery voltage shutdown	10.0 volts DC
High battery voltage shutdown	15 volts DC
Over-temperature shutdown	Automatic shutdown and automatic restart
Overload shutdown	Automatic shutdown and automatic restart
Internal Fuse	25 amps

Physical

Dimensions (L x W x H)	156mm x 103mm x 62mm (6.2 in. x 4.1 in. x 2.5 in.)
Weight	0.65 Kg (1.5 lb.)

Regulatory

CE Mark	Low Voltage Directive EMC Directive
e Mark	Automotive EMC Directive
TUV/GS	Certified to EN60950