



**NOKIA
3650**

**NOKIA
3600**



User Guide

Nokia 3600 series

User Guide

The wireless phone described in this guide is approved for use in GSM 900, GSM 1800, and GSM 1900 networks.

LEGAL INFORMATION

Part No. 9355946, Issue No. 1

Copyright ©2002 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nokia 3650, Nokia 3600, and the Nokia Original Accessories logos are trademarks or registered trademarks of Nokia Corporation. All other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Printed in Canada 03/2003

US Patent No 5818437 and other pending patents.

T9 text input software Copyright ©1999-2002. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

The information in this user guide was written for Nokia 3600 series phones. Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

EXPORT CONTROLS

This product contains commodities, technology or software exported from the United States in accordance with the Export Administration regulations. Diversion contrary to U.S. or Canadian law is prohibited.

FCC/INDUSTRY CANADA NOTICE

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. This device contains a radio transceiver and digital circuitry that supports its features. Operation of the digital device circuitry is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications to this device not authorized by Nokia may void the authority granted for operation of this device and should not be made.

Contents

| | |
|---|-----------|
| 1. For your safety | 1 |
| Network Services | 3 |
| 2. General information | 5 |
| Understand your phone | 5 |
| Menu | 13 |
| Options lists | 14 |
| Move the Navigation bar horizontally | 15 |
| Actions common to all applications | 15 |
| Volume control | 17 |
| Shared memory | 18 |
| 3. Your phone | 19 |
| Make a call | 19 |
| Answer a call | 21 |
| Log - Call log and general log | 24 |
| SIM folder | 28 |
| 4. Settings | 29 |
| Change general settings | 29 |
| Phone settings | 29 |
| Call settings | 31 |
| Connection settings | 33 |
| Date and time | 40 |
| Security | 40 |
| Call restriction (System service) | 45 |
| System | 45 |
| Accessory settings | 46 |
| 5. Contacts | 47 |
| Create contact cards | 47 |
| Copy contacts between the SIM card and phone memory | 47 |
| Edit contact cards | 48 |

| | |
|---|------------|
| Options when viewing a contact card | 49 |
| Manage contact groups. | 53 |
| 6. Camera and Images | 55 |
| Take pictures. | 55 |
| Store pictures in Images | 59 |
| 7. Video recorder | 63 |
| Record a video clip. | 63 |
| Watch a video clip. | 64 |
| 8. RealOne Player™ | 65 |
| Play media files | 65 |
| Send media files. | 66 |
| Change the settings. | 67 |
| 9. Messaging | 69 |
| Messaging – General information. | 70 |
| Write text | 72 |
| Create and send new messages | 76 |
| Inbox – receive messages | 83 |
| My folders. | 87 |
| Remote mailbox | 88 |
| Outbox | 92 |
| View messages on a SIM card. | 93 |
| Cell broadcast (system service). | 93 |
| Service command editor | 94 |
| Messaging settings | 94 |
| Wireless village | 100 |
| 10. Profiles | 101 |
| Change the profile | 101 |
| Customize profiles | 101 |

| | |
|-----------------------------------|------------|
| 11. Favorites | 103 |
| Add shortcuts | 103 |
| Shortcut options | 104 |
| 12. Calendar and To-do | 105 |
| Create calendar entries | 105 |
| Set calendar alarms | 108 |
| Send calendar entries | 109 |
| To-do | 109 |
| 13. Extras | 111 |
| Calculator | 111 |
| Composer | 112 |
| Converter | 113 |
| Notes | 115 |
| Clock | 115 |
| Recorder | 116 |
| Memory card | 116 |
| 14. Services (XHTML) | 119 |
| Basic steps for accessing the web | 119 |
| Phone browser service settings | 120 |
| Browsing | 122 |
| Viewing saved pages | 123 |
| Download through the browser | 124 |
| End a connection | 125 |
| Browser settings | 126 |
| 15. Applications (Java™) | 127 |
| Install a Java application | 128 |
| Java application settings | 129 |
| 16. Manager | 130 |
| Install applications and software | 130 |
| Install software | 131 |

| | |
|--|------------|
| Remove software | 132 |
| View memory consumption. | 132 |
| 17. Connectivity. | 134 |
| Bluetooth connection | 134 |
| Infrared connection | 139 |
| Connect your phone to a computer | 141 |
| Use your phone as a modem to connect to the Internet or to send or receive faxes. | 141 |
| 18. PC Suite for Nokia 3600 series | 142 |
| Software and hardware requirements | 142 |
| Install PC Suite. | 143 |
| Connect your phone to the PC | 144 |
| Start to use PC Suite | 147 |
| Online and offline modes | 148 |
| Connection status | 148 |
| Main window information. | 149 |
| PC Suite applications. | 150 |
| Remove PC Suite from your PC. | 152 |
| 19. Reference information | 154 |
| Battery statements | 154 |
| Use proper care and maintenance | 155 |
| Understand Important safety information. | 156 |
| Certification Information (SAR) | 160 |
| Use Accessories safely | 162 |
| Accessories | 162 |
| Glossary. | 166 |
| Technical information | 168 |
| Troubleshooting | 169 |
| Frequently Asked questions (FAQ) | 170 |
| 20. Nokia One-Year Limited Warranty. | 174 |
| Index | 177 |

1 For your safety

The use of mobile phones and their accessories may be prohibited or restricted in certain areas. Obey applicable law regarding mobile phone usage.

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this User Guide.



Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Don't use a hand-held phone while driving.



INTERFERENCE

All wireless phones may get interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELING

Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Don't use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



USE SENSIBLY

Use only in the normal position. Don't touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.



ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



BACKUP COPIES

Remember to make backup copies of all important data.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.



CALLING

Ensure the phone is switched on and in service. Enter the phone number, including the area code, then press . To end a call, press . To answer a call, press .



EMERGENCY CALLS

Ensure the phone is switched on and in service. Press as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display. Enter the emergency number, then press . Give your location. Do not end the call until told to do so.

Network Services

The wireless phone described in this guide is approved for use on the GSM 900, GSM 1800, and GSM 1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Note: Some networks may not support all language-dependent characters and/or services.

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from ACP-12U, ACP-8U, LCH-9 and LCH-12.

Warning: Use only batteries, chargers, and accessories approved by the phone manufacturer for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

For availability of approved accessories, please check with your dealer. When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

Contacting Nokia

To help Nokia promptly answer your questions, please have your phone's model number, IMEI number, and your postal code ready when you call Customer Care. The IMEI and model number are on the back of your phone under the battery. If you are calling about an accessory, please have it available for reference.

Nokia Customer Care

Nokia Products Ltd.

601 Westney Rd. South

Ajax, Ontario L1S 4N7

Tel: 1-905-427-1373
1-888-22-NOKIA
(1-888-226-6542)

Fax: 1-905-427-1070

Web site: [**www.nokia.ca**](http://www.nokia.ca)

2 General information

Congratulations on purchasing your Nokia 3600 series mobile phone. Your phone provides many functions which are practical for daily use, such as a digital camera, a video recorder, messaging, e-mail, a clock, an alarm clock, a calculator, and a calendar. A variety of Xpress on™ colour covers are also available. Your phone can connect to a PC, laptop, or other device using a data cable, bluetooth, or the built-in IR port. For more information on connectivity, refer to the PC Connectivity Guide. The PC Connectivity guide, Nokia PC Suite, and all related software can be downloaded from the Download Software section of www.nokia.ca.


• UNDERSTAND YOUR PHONE

Insert the SIM card and load the battery



Important: Keep all miniature SIM cards out of the reach of small children.

Note: Before removing the covers, always switch off the power and disconnect the phone from the charger or any other device. Always store and use the phone with the covers attached.

- 1 Open the cover with the back of the phone facing you. Press the locking catch (1) in the direction of the arrow and slide the cover (2).

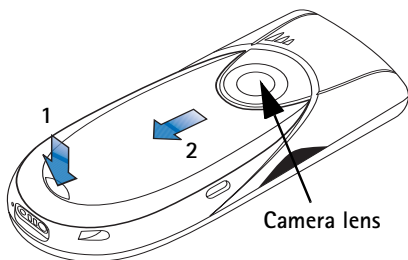


- 2 Find the SIM card slot (3). Place the SIM card carefully into the slot. Make sure that the beveled corner on the SIM card faces the bottom of the phone and that the golden contact area on the card faces downward.

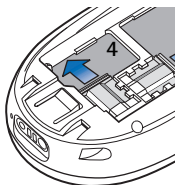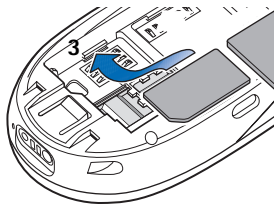


- 3 Slide the silver catch over the SIM card to secure it. (4).

- 4 Load the battery (5): Align the golden contacts of the battery with the corresponding connectors on the phone, and push the opposite end of the battery until it snaps into place. Replace the cover.

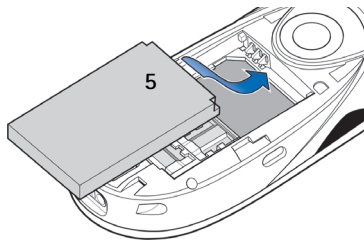

Charge the battery


- 1 Connect the lead to the charger. You will hear it click into place.
- 2 Connect the lead from the charger to the base of the phone (6).
- 3 Connect the charger to an AC wall outlet. The battery indicator bar starts scrolling. Note that you can use the phone while charging.

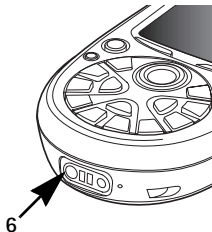


- 4 When the battery is fully charged, the bar stops scrolling. Disconnect the charger from the AC outlet and then from the phone. See also "Battery statements" on page 154 in the User Guide.

Note: Remove the battery only when the phone is switched off.

Switch the phone on or off

Press and hold the power key .


WARNING! Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

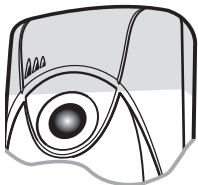


TIPS ON EFFICIENT OPERATION: Your phone has a built-in antenna (gray area in picture). As with any other radio transmitting device, do not touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Not touching the antenna area during a phone call optimizes the antenna performance and the talktime of your phone.

If the phone requests a PIN code:

The PIN code is usually supplied with the SIM card.




Key in the code (displayed as ****) and press  **OK**.

If the phone requests a security code:






Key in the security code (displayed as *****) and press  **OK**.


The factory setting for the security code is **12345**. For more information on the access codes, see "Security" on page 40.






FIRST SETTINGS

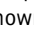Use the number keys  -  to key in first the current time and then the date. Press  **OK** to accept the settings.

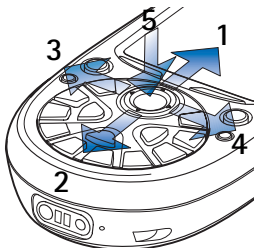Use the Scroll key




Press the scroll key on the top , bottom , left  and right  (shown with arrows 1 to 4) to move in the Menu. Scroll to an application or a folder and press the scroll key in the middle  (shown with arrow 5) to open it. For example:



- 1 To open an Options list, press . Options. The small arrow at the bottom of the display (1) indicates if the list contains more items. The lighter the arrow, the fewer the items left in the list.
- 2 To scroll down the Options list, press . A small arrow to the right (2) indicates a sublist. To open a sublist, press . To start an action, scroll to a command and press .
- 3 Press  to go to a tab (3), a new page, or view in an application.






Make a call

- 1 In standby mode, key in the phone number, including the area code. If you make a mistake, press  to clear numbers.
- 2 Press  and wait for the answer.
- 3 Press  to finish the call (or to cancel the call attempt).

Copy names and numbers from a SIM card to the phone memory




If you have stored names and phone numbers on a SIM card, you can copy them to the phone memory.

- 1 Press  to open the main Menu.
- 2 Use the scroll key to move to **Contacts**.
- 3 Press  to open **Contacts**.
- 4 When you open **Contacts** for the first time, the phone asks you if you want to copy all your contact data from the SIM card to the phone memory. Press  **OK**.

See also "Copy contacts between the SIM card and phone memory" on page 47.


Keyguard

Use the keyguard (keypad lock) to prevent the keys from being accidentally pressed.





To lock: Press  and . When the keys are locked,  appears on the display.




To unlock: Press  and .

When the keyguard is on, press  to answer a call. During a call, the phone can be operated normally.








Note: When Keyguard is on, calls may be possible to the emergency number programed into your phone (911 or other official emergency number). Just key in the emergency number and press . The number is displayed only after you have keyed in its last digit.

Shortcuts in standby mode

- Press  to open the main Menu.
- Press  to open a list of the last dialed numbers. Press  to view received and missed calls lists.
- Press  to open **Contacts**.

- To change the profile, press  briefly and select the profile.
- Press  and  to call your voice mailbox. See "Call your voice mailbox" on page 20.

Shortcuts in editors


- Press  to open a list of commands related to writing and editing text. Press  to switch between predictive, traditional text input and number mode (*Predictive text* → *Predictive text on, Alpha mode, Number mode*).
- When you are writing, press  repeatedly to access different kinds of special characters, or press  to open a list of special characters.
- Press  to enter a space.
- You can also use  to mark items. Press and hold  and at the same time, move the scroll key to mark text to be copied or erased.


Other shortcuts



In the main Menu, press and hold  to open a view where you can see all the applications that are open and switch between them.

Standby mode

The indicators described are shown when the phone is ready for use, with no characters keyed in. In this state, the phone is in 'standby mode'.

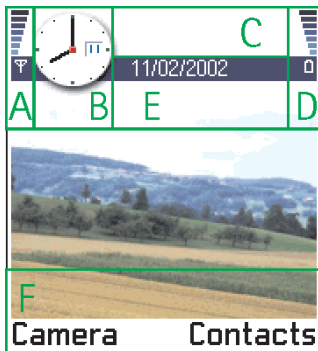- A Shows the signal strength of the cellular system at your current location. The higher the bar, the stronger the signal. The symbol is replaced with the GPRS symbol  when the *GPRS connection* has been set to *When available* and a connection is available in the system or in the current cell. See "Packet data (General Packet Radio Service, GPRS)" on page 34 and "GPRS" on page 39.







- B Shows an analog or a digital clock. Also see settings for "Date and time" on page 40 and settings for Standby mode→ Background image, on page 30.
- C Indicates which cellular system the phone is currently using.
- D Shows the battery charge level. The higher the bar, the more power left in the battery.
- E Navigation bar: shows the currently active profile. If the selected profile is *Normal*, the current date is displayed instead of the profile name. For further information, see "Move the Navigation bar horizontally" on page 15 and "Profiles" on page 101.
- F Shows the current shortcuts assigned for the selection keys  and .









Note: Your phone has a screen saver. If there are no actions for five minutes, the display is cleared and a screen saver becomes visible. See "Screen saver timeout" on page 31. To deactivate the screen saver, press any key.

Tip: You can change the selection key shortcuts and the background image. See the settings for "Standby mode" on page 30.

INDICATORS RELATED TO ACTIONS

One or more of the following icons may be shown when the phone is in standby mode:



-  - Indicates that you have received new messages in the Inbox in Messaging. If the indicator is blinking, the phone memory is low and you must delete some data. For further information, see "Memory low" on page 169.
-  - Indicates that you have received new e-mail.
-  - Indicates that you have received one or several voice messages. See "Call your voice mailbox" on page 20.
-  - Indicates that there are messages waiting to be sent in Outbox. See "Outbox" on page 92.

-  - Indicates when *Ring*ing options has been set to *Silent* and *Message alert tone* to *Off* in the currently active profile. See "Profiles" on page 101.
-  - Indicates that the phone's keypad is locked.
-  - Indicates that you have an active alarm. See "Clock" on page 115.
-  - Indicates that Bluetooth is active. Note that, when data is transmitted via Bluetooth,  is shown.
-  - Indicates that all calls to the phone are forwarded to a voice mailbox or another number. See "Settings for call forwarding" on page 23. If you have two phone lines, the forward indicator for the first line is 1  and for the second line 2 . See "Line in use (system service)" on page 32.
- 2** - Indicates that you can make calls using phone line 2 only (system service). See "Line in use (system service)" on page 32.





DATA CONNECTION INDICATORS


- When an application is establishing a data connection, one of the indicators below blinks in standby mode.
- When an indicator is shown continuously, the connection is active.

 for a data call,  for a high speed data call,

Note: Check with your service provider for availability of high speed data calls.

 is shown instead of the signal strength indicator when there is an active GPRS connection.  for when the GPRS connection is put on hold during voice calls.


F for a fax call,

 for a Bluetooth connection, and


 for an infrared connection.

• MENU









Press  (Menu key) to open the main Menu. In the Menu, you can access all the applications in your phone.

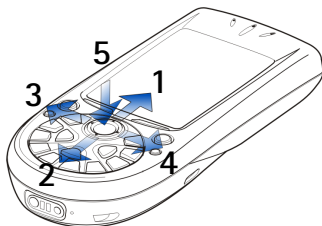
Options in the Menu are:
*Open, List view / Grid view,
 Move, Move to folder, New
 folder, Help, and Exit.*



Using the scroll key to move

| | |
|---------------------------------|---|
| Moving in the Menu | Press the scroll key on the top  , bottom  , left  and right  (shown with arrows 1 to 4) to move in the Menu. |
| Opening applications or folders | Scroll to an application or a folder and press the scroll key in the middle  (shown with arrow 5) to open it. |
| Closing applications | Backstep by pressing Back or Exit as many times as is needed to return to standby mode or select Options→ <i>Exit</i> . |

If you press and hold , the phone returns to standby mode and the application is left open in the background.

Pressing  will always end a call, even if another application is active and displayed.


When you switch the phone off, applications are closed and any unsaved data is saved automatically.

Tip: Select Options→ *List view* if you want to view the applications in a list.



Rearrange the Menu

You can rearrange the Menu in any order you like. You can move applications that you use more often from a folder to the Menu, and place applications you use less often in folders. You can also create new folders.

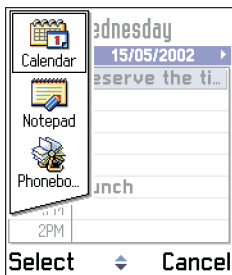- 1 Scroll to the item you want to move and select Options→ *Move*. A check mark is placed beside the application.
- 2 Move the selection where you want the application to be and press OK.



Switch between applications


If you have several applications open and want to switch from one application to another: Press and hold  (Menu key). The application switching window opens showing a list of applications that are currently open. Scroll to an application and press .

Note: If memory is getting low, the phone may close some applications. The phone saves any unsaved data before an application is closed.

• OPTIONS LISTS


In this user guide, you can see the Options list commands which tell you what commands are available in different views and situations. The available commands change depending on the view you are in. In some situations, when you press the scroll key, a shorter options list appears showing only the main commands available in the view.

Online help

Your Nokia 3600 series phone also has a help function which you can access from any application or view showing the Options selection corresponding to the  key.



• MOVE THE NAVIGATION BAR HORIZONTALLY

In the navigation bar, you can see:



- small arrows or tabs which tell you if there are more views, folders, or files you can move to.
- editing indicators, see "Write text" on page 72.
- other information, for example, 2/14 in the figure below means that the current picture is the second of 14 pictures in the folder. Press  to see the next picture.




• ACTIONS COMMON TO ALL APPLICATIONS

- **Open items for viewing** - When you are viewing a list of files or folders, to open an item, scroll to an item and press the scroll key or select *Options*→ *Open*.
- **Edit items** - To open an item for editing, you sometimes need to first open it for viewing and then select *Options*→ *Edit*, if you want to change its contents.
- **Rename items** - To give a new name to a file or folder, scroll to it and select *Options*→ *Rename*.
- **Remove, delete items** - Scroll to the item and select *Options*→ *Delete* or press . To delete many items at a time, you first need to mark them.
- **Mark an item** - There are several ways to select items when you are in a list.
 - To select one item at a time, scroll to it and select *Options*→ *Mark/Unmark*→ *Mark* or press  and the scroll key at the same time. A check mark is placed next to the item.
 - To select all items in the list, select *Options*→ *Mark/Unmark*→ *Mark all*.

Tip: For information on how to insert text and numbers, see "Write text" on page 72.

- **Mark multiple items** - Press and hold  and at the same time move the scroll key down or up. As the selection moves, a check mark is placed next to the items. To end the selection, stop the scrolling with the scroll key and then release .

After you have selected all the items you want, you can move or delete them by selecting Options→ *Move to folder* or *Delete*.

- To unmark an item, scroll to it and select Options→ *Mark/Unmark*→ *Unmark* or press  and the scroll key at the same time.
- **Create folders** - To create a new folder, select Options→ *New folder*. You are asked to give a name to the folder (max. 35 letters).
- **Move items to a folder** - To move items to a folder or between folders, select Options→ *Move to folder* (not shown if there are no folders available). When you select *Move to folder*, a list of available folders opens and you can also see the root level of the application (for moving an item out of a folder). Select the location you want the item to be moved to and press OK.


Search for items

You can search for a name, file, folder, or shortcut by using the search field. In some situations the search field is not visible automatically, and you can activate it by selecting Options→ *Find* or just by starting to key in letters.





- 1 To search for an item, start to key in text in the search field. The phone immediately starts to search for matches and moves the selection on the best match.

To make the search more accurate, key in more letters and the selection moves to the item that best matches the letters.

- 2 When the correct item is found, press  to open it.



• VOLUME CONTROL

When you have an active call or are listening to a sound, press  or  to increase or decrease the volume level, respectively.

Loudspeaker

Your phone has a loudspeaker for handsfree use. The loudspeaker allows you to speak and listen to the phone from a short distance without having to hold the phone to your ear. The loudspeaker can be used during a call, with sound applications, and when viewing multimedia messages. RealOne Player™ uses the loudspeaker by default when you watch a video. Using the loudspeaker makes it easier to use other applications during a call.

Voice volume icons:




- for earpiece mode,




- for loudspeaker mode.

ACTIVATE THE LOUDSPEAKER

To use the loudspeaker during an already active call, select Options→ *Activate handsfree*. A tone is played,  is shown in the navigation bar, and the volume indicator changes.

Volume indicators for earpiece and loudspeaker modes are shown in the navigation bar.





The loudspeaker needs to be activated separately each time for phone calls, but the sound applications such as Composer and Recorder use the loudspeaker by default.

The loudspeaker cannot be activated when you have a headset connected to the phone.

TURN OFF THE LOUDSPEAKER

When you have an active call or a sound is playing, select Options→ *Deactiv.handsfree*.

Headset mode

To adjust the volume level when a headset is connected to your phone, press  or  or use the headset's keys.

- **SHARED MEMORY**

The following features in your phone use shared memory: contacts, text, text messages, multimedia messages, images and ringing tones, video recorder and player, calendar and to-do notes, and downloaded applications. Using any of these features leaves less memory for other features. This is especially true with heavy use of any of the features. For example, saving many images may take all of the shared memory and your phone may display that the memory is full. In this case, delete some of the information or entries reserving the shared memory.

3 Your phone



• MAKE A CALL

- 1 Key in the phone number, including the area code. Press or to move the cursor. Press to remove a number.

For international calls, press twice for the international prefix (the + character replaces the international access code) and then key in the country code, the area code without 0, and the phone number.

Tip: To adjust the volume during a call, press to increase and to decrease the volume level.

Note: Calls described here as international may, in some cases, be made between regions of the same nation.

- 2 Press to call the number.
- 3 Press to end the call (or to cancel the call attempt).


Normal position: Hold the phone as you would hold any other telephone.

Note: Pressing will always end a call, even if another application is active and displayed on the display.

Make a call using the Contacts directory



- 1 To open the Contacts directory, go to **Menu** → **Contacts**.
- 2 To find a contact, scroll to the desired name, or key in the first letters of the name. The Search field opens automatically and matching contacts are listed.
- 3 Press to start the call.

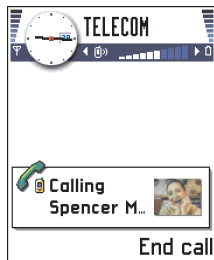If the contact has more than one phone number, scroll to the number and press to start the call.



Call your voice mailbox

The voice mailbox (system service) is an answering machine where callers who are unable to reach you can leave you voice messages.

- To call your voice mailbox, press  and  in standby mode.
- If the phone asks for the voice mailbox number, key it in and press **OK**. You can obtain this number from your service provider.

See also "Settings for call forwarding" on page 23.

Each phone line may have its own voice mailbox number, see "Line in use (system service)" on page 32.




Tip: If your voice mail requires you to enter a password every time you call to listen to your voice messages, you may want to add a touch tone number after the voice mailbox number. This way the password is given automatically every time you call your voice mail. For example, 1234567p1234# where 1234 is the password and 'p' inserts a pause. See "Send touch tones" under the section "Options during a call" on page 22.

CHANGE THE VOICE MAILBOX NUMBER

To change the phone number of your voice mailbox, go to **Menu**→**Tools**→**Voice mailbox** and select **Options**→*Change number*. Key in the number (obtained from your service provider) and press **OK**.


1-touch dialing

To view the 1-touch dialing grid, go to **Menu**→**Tools**→**1-touch dial**.


- 1 Assign a phone number to one of the 1-touch dialing keys ( - ) , see "Assign 1-touch dialing keys" on page 52.
- 2 To call the number: In standby mode, press the corresponding 1-touch dialing key and . If the *1-touch dialing* function is set to *On*: Press and hold the corresponding 1-touch dialing key until the call is started.

Make a conference call

Conference calling is a system service that allows you to make a conference call with a maximum of six participants, including yourself.



- 1 Make a call to the first participant.
- 2 To make a call to a new participant, select **Options**→ *New call*. Key in or search the memory for the phone number of the participant and press **OK**. The first call is automatically put on hold.
- 3 When the new call has been answered, join the first participant in the conference call. Select **Options**→ *Conference*.
- 4 To add a new person to the call, repeat step 2 and then select **Options**→ *Conference*→ *Add to conference*.
 - To have a private conversation with one of the participants: Select **Options**→ *Conference*→ *Private*. Scroll to the desired participant and press **Private**. The conference call is put on hold in your phone, and the other participants can still continue talking with each other while you have a private discussion with one participant only. Once you have finished the private conversation, select **Options**→ *Add to conference* to return to the conference call.
 - To drop one participant from the conference call, select **Options**→ *Conference*→ *Drop participant*, then scroll to the participant and press **Drop**.
- 5 To end the active conference call, press .


A conference call with two participants is shown.

Tip: The quickest way to make a new call is to dial the number and press  to start the call. The existing call is automatically put on hold.



• ANSWER A CALL

- To answer an incoming call, press .
- To end the call, press .

If you do not want to answer a call, press . The caller will hear a "line busy" tone or your voicemail message.

Tip: If you have activated the *Call forward*→ *If busy* function to forward calls, for example, to your voice mailbox, rejecting an incoming call will also forward the call. See "Settings for call forwarding" on page 23.

When a call comes in, press **Mute** to quickly mute the ringing tone.

Tip: To adjust the phone tones for different environments and events, for example, when you want your phone to be silent, see "Profiles" on page 101.


Note: It is possible that the phone assigns a wrong name for the phone number. This happens if the phone number of the caller is not stored in Contacts but the seven last digits of the number match another number that is stored in Contacts. In this case, call identification is not correct.

Call waiting (system service)


If you have activated the Call waiting service, the system will notify you of a new incoming call while you have a call in progress. See "Call waiting: (system service)" on page 32.

- 1 During a call, press  to answer the waiting call. The first call is put on hold.

To switch between the two calls, press **Swap**.

- 2 To end the active call, press .

Tip: To end both calls at the same time, select **Options**→ *End all calls* and press **OK**.

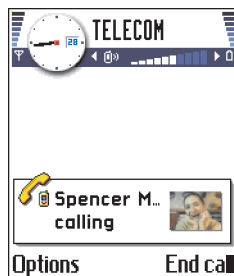

Options during a call





Many options that you can use during a call are system services. Press **Options** during a call for some of the following options:

Mute or Unmute, End active call, End all calls, Hold or Unhold, Handset, BT handsfree, New call, Conference, Private, Drop participant, Answer, and Decline.

Swap is used to switch between the active call and the call on hold.

Transfer is used to connect an incoming call or a call on hold with an active call and to disconnect yourself from both calls.

Send touch tones is used to send touch tone strings, for example, passwords or bank account numbers.

- 1 Key in the digits with  - . Each keystroke generates a touch tone, which is transmitted while the call is active. Press  repeatedly to produce: *, **p** (inserts a pause of about two seconds before, or between touch tone characters.), and **w** (if you use this character, the remaining sequence is not sent until you press **Send** again during the call). Press  to produce #.
- 2 To send the tone, press **OK**.

Tip: You can also store a sequence of touch tones for a contact card. When you make a call to the contact, you can retrieve the sequence. Add touch tones to the phone number or *Touch tone* fields in a contact card.



Glossary: Touch tones are the tones you hear when you press the number keys on the phone keypad. Touch tones allow you to communicate with voice mailboxes and computerized telephony systems.

Settings for call forwarding

When this system service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your service provider.

Go to **Menu**→ **Tools**→ **Call forwarding**

Select one of the forward options, for example, select *If busy* to forward voice calls when your number is busy or when you decline incoming calls.

- Select **Options**→ *Activate* to turn the forward setting on, *Cancel* to turn the forward setting off, or *Check status* to check whether the forward is activated or not.
- To cancel all active forwards, select **Options**→ *Cancel all forwards*.

For information about the forward indicators, see "Indicators related to actions" on page 11.

Note: You cannot have rejection of incoming calls and call forwarding active at the same time. See "Call restriction (System service)" on page 45.

• LOG – CALL LOG AND GENERAL LOG



Go to **Menu**→ **Log**.

In the log you can monitor phone calls, text messages, packet data connections, and fax and data calls registered by the phone. You can filter the log to view just one type of event and create new contact cards based on the log information.

To view a list of sent messages, go to **Messaging**→ **Sent**.




Note: Connections to your remote mailbox, multimedia messaging center, or browser pages are shown as data calls or packet data connections in the general communications log.

Recent calls log

Go to **Menu**→ **Log**→ *Recent calls*


The phone registers the phone numbers of missed, received, and dialed calls, and the approximate duration and cost of your calls. The phone registers missed and received calls only if the system supports these functions, and the phone is switched on and within the system's service area.

Options in the Missed, Received, Dialed views are: *Call*, *Use number*, *Delete*, *Clear list*, *Add to Contacts*, *Help*, and *Exit*.

| Icons | |
|---|--------------------|
|  | for missed calls |
|  | for received calls |
|  | for dialed numbers |


Missed calls and received calls

To view a list of the last 20 phone numbers from which somebody has tried to call you without success (system service), go to **Log**→ *Recent calls*→ *Missed calls*.

When you see a note in standby mode about missed calls, press **Show** to access the list of missed calls. To call back, scroll to the number or name you want and press .


To view a list of the 20 numbers or names from which you have most recently accepted calls (system service), go to **Log**→ *Recent calls*→ *Received calls*.

Dialed numbers

Press  in standby mode to open the Dialed numbers view.

To view the 20 phone numbers that you have most recently called or attempted to call, go to *Log*→ *Recent calls*→ *Dialed nos.*


Erasing recent call lists

- To clear all recent call lists, select **Options**→ *Clear recent calls* in the Recent calls main view.
- To clear one of the call registers, open the log you want to erase and select **Options**→ *Clear list*.
- To clear an individual entry, open a log, scroll to the entry, and press .

Call duration

Go to **Menu**→ **Log**.

Allows you to view the duration of your incoming and outgoing calls. To see the call duration timer while you have an active call, select **Options**→ *Settings*→ *Show call duration*→ *Yes*.


Erasing call duration timers - Select **Options**→ *Clear timers*. For this you need the lock code. See "Security" on page 40. To clear an individual entry, scroll to it and press .

Call costs (system service)

Go to **Log**→ *Call costs*.

Call costs allows you to check the cost of the last call or all calls. The call costs are displayed separately for each SIM card.

The actual invoice for calls and services from your service provider may vary, depending upon system features, rounding-off for billing, taxes and so forth.

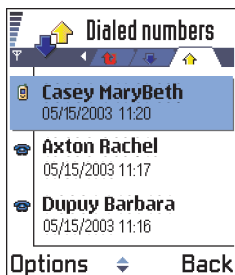

CALL COSTS LIMIT SET BY A SERVICE PROVIDER

Your service provider can limit the cost of your calls to a certain amount of charging units or units of currency. When the limited charging mode is active, calls can be made only as long as the preset credit limit (call cost limit) is not exceeded and you are in a system that supports call cost limit. The number of remaining units is shown during a call and in standby mode. When the charging units have expired, the note *Call cost limit reached* is displayed. Contact your service provider for information on the limited charging mode and charging unit prices.

Cost shown as charging units or currency

You can set the phone to show the remaining talk-time in charging units or units of currency. For this, you may need the PIN2 code. See "Security" on page 40.


- 1 Select **Options**→ *Settings*→ *Show costs in*. The options are *Currency* and *Units*.
- 2 If you choose *Currency*, a note requesting you to write the unit price is shown. Key in the cost of your home system charging or credit unit and press **OK**.
- 3 Write a name for the currency. Use a three-letter abbreviation, for example, CAD.

Note: When no more charging units or currency units are left, calls may only be possible to the emergency number programed into your phone (such as 911 or other official emergency numbers).

SET A CALL COST LIMIT FOR YOURSELF

- 1 Select **Options**→ *Settings*→ *Call cost limit*→ *On*.
- 2 The phone requests you to enter the limit in units. For this you may need the PIN2 code. Depending on the *Show costs in* setting, enter either the amount of charging units or currency.

When the charging limit you have set yourself is reached, the counter stops at its maximum value and the note *Reset all calls' cost counter* is displayed. To be able to make calls, go to **Options**→ *Settings*→ *Call cost limit*→ *Off*. For this you need the PIN2 code. See "Security" on page 40.



Erase call cost counters - Select **Options**→ *Clear counters*. For this you need the PIN2 code. To clear an individual entry, scroll to it and press .

GPRS data counter

Go to **Log**→ *GPRS counter*.

Allows you to check the amount of data sent and received during packet data (GPRS) connections. For example, you may be charged for your GPRS connections by the amount of data sent and received.

View the general log

Go to **Menu**→ **Log** and press  then .

In the general log, for each communication event, you can see the sender or recipient name, phone number, name of the service provider, or access point.


Note: Sub-events, such as a text message sent in more than one part and packet data connections, are logged as one communication event.

Filter the log


- 1 Select **Options**→ *Filter*. A list of filters opens.
- 2 Scroll to a filter and press **Select**.




Erase the contents of the log

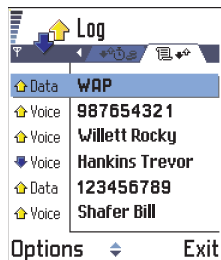To erase all the log contents, Recent calls log, and Messaging delivery reports permanently, select **Options**→ *Clear log*. Confirm by pressing **OK**.



Packet data counter and connection timer

To view how much data, measured in kilobytes, has been transferred and how long a certain GPRS connection has lasted, scroll to an Incoming or Outgoing event with the access point icon  and select **Options**→ *View details*.

| Icons | |
|---|---------------------------------|
|  | for incoming |
|  | for outgoing |
|  | for missed communication events |

Log settings

Select **Options**→ *Settings*. The list of settings opens.

- *Log duration* - The log events remain in the phone memory for a set number of days after which they are automatically erased to free memory.
If you select *No log*, all the log contents, Recent calls log, and Messaging delivery reports are permanently deleted.
- For *Show call duration*, *Show costs in*, *Call cost limit*, see the sections 'Call duration' and 'Call costs (system service)' earlier in this chapter.

• SIM FOLDER

Go to **Menu**→ **SIM**



Your SIM card may provide additional services that you can access in this folder. See also "Copy contacts between the SIM card and phone memory" on page 47, "Confirm SIM services" on page 43, "Fixed dialing" on page 42, and "View messages on a SIM card" on page 93.

Options in the SIM directory are: *Open, Call, New SIM contact, Edit, Delete, Mark/UnMark, Copy to Contacts, Own numbers, SIM details, Help, and Exit.*

Note: For availability, rates and information on using SIM services, contact your SIM card vendor, e.g. system operator, service provider or other vendor.





In the SIM directory, you can see the names and numbers stored on the SIM card, you can add or edit them, and you can make calls.


4 Settings



• CHANGE GENERAL SETTINGS

Go to **Menu**→ **Tools**→ **Settings**.

- 1 Scroll to a setting group and press  to open it.
- 2 Scroll to a setting you want to change and press  to
 - switch between options if there are only two (**On/Off**).
 - open a list of options or an editor.
 - open a settings slider such as the Contrast setting. Press  or  to increase or decrease the value.

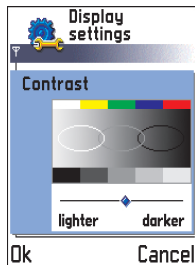





Note: You may be able to receive some settings from your service provider in a text message.


• PHONE SETTINGS

General



- *Phone language* - You can change the language for the display texts in your phone. This change will also affect the format used for date and time and the separators used, for example, in calculations. There are three languages installed in your phone. If you select *Automatic*, the phone selects the language according to the information on your SIM card. After you have changed the display text language, you must restart the phone.


Note: Changing the settings for *Phone language* or *Writing language* affects every application in your phone and the change remains effective until you change these settings again.

- *Writing language* - You can change the writing language of your phone permanently. Changing the language affects
 - the characters available when you press any key ( - ),
 - the predictive text dictionary used, and
 - the special characters that are available when you press the  and  keys.


Tip: You can also make this change in some of the editors. Press  and select *Writing language*:



Example: You are using a phone where the display texts are in English but you want to write all your messages in French. After you change the language, the predictive text dictionary searches for words in French and the most common special characters or punctuation marks used in the French language are available when you press the  and  keys.

- *Predictive text* - Sets the predictive text input *On* or *Off* for all editors in the phone. You can also change this setting when you are in an editor. Press  and select *Predictive text* → *Predictive text on* or *Off*.



Note: The predictive text dictionary is not available for all languages.

- *Welcome note or logo* - Press  to open the setting. The welcome note or logo is displayed briefly each time you switch on the phone. Select *Default* if you want to use the default image or animation. Select *Text* to write a welcome note (max. 50 letters). Select *Image* to select a photo or picture from **Images**.
- *Orig. phone settings* - You can reset some of the settings to their original values. To do this, you need the lock code. After resetting the settings, the phone may take a longer time to power on.

Note: All documents and files that you have created are left as they are.

Standby mode

- *Background image* - You can select any image to be used as a background image in standby mode. Select *Yes* to select an image from **Images**.

- *Left selection key* and *Right selection key* - You can change the shortcuts that appear over the left  and right  selection keys in standby mode. In addition to the applications, you can have the shortcut point to a function, for example, *New message*.

Note: You cannot have a shortcut to an application that you have installed.

Display

- *Contrast* - To change the contrast of the display to lighter or darker.
- *Color palette* - To change the color palette used on the display.
- *Screen saver timeout* - The screen saver is activated when the screen saver time-out period is over. When the screen saver is active, the display is cleared and you can see the screen saver bar.

To deactivate the screen saver press any key.

- *Screen saver* - Select what is shown on the screen saver bar: time and date or a text you have written yourself. The location and background color of the screen saver bar changes in one minute intervals. Also, the screen saver changes to indicate the number of new messages or missed calls.



• CALL SETTINGS

Note: To change the settings for call forwarding, go to **Menu**→ **Tools**→ **Call forwarding**.


Send my caller ID

This system service allows you to set your phone number to be displayed (Yes) or hidden (No) from the person to whom you are calling. Or, the value may be set by your service provider when you make a subscription (Default).

Call waiting: (system service)

The system will notify you of a new incoming call while you have a call in progress. Select *Activate* to request the system to activate call waiting, *Cancel* to request the system to deactivate call waiting, or *Check status*, to check if the function is active or not.



Automatic redial

When this setting is activated, your phone will make a maximum of ten attempts to connect the call after an unsuccessful call attempt. Press  to stop automatic redialing.




Summary after call

Activate this setting if you want the phone to briefly display the duration and cost of the last call. To show costs, the *Call cost limit* needs to be activated for your SIM card.

1-touch dialing

Select *On* and the numbers assigned to the 1-touch dialing keys ( - ) can be dialed by pressing and holding the key.

Anykey answer

Select *On*, and you can answer an incoming call by briefly pressing any key, except , , and .

Line in use (system service)




This setting is shown only if the SIM card supports two subscriber numbers, that is, two phone lines. Select which phone line (*Line 1* or *Line 2*) you want to use for making calls and sending text messages. Calls on both lines can be answered irrespective of the selected line.

Note: You will not be able to make calls if you select *Line 2* and have not subscribed to this system service.

To prevent line selection, select *Line change* → *Disable* if supported by your SIM card. To change this setting, you need the PIN2 code supplied by your service provider.

Tip: To switch between the phone lines, press and hold  in standby mode.

Voice message indicators:




, , or  is shown if you have one or several voice messages.

• CONNECTION SETTINGS

General information about data connections and access points

To define settings for access points, go to **Settings**→ *Connection settings*→ *Access points*.

A data connection is required to connect to an access point. Your phone supports three kinds of data connections:

- a GSM data call () ,
- GSM high-speed data call () , or
- packet data (GPRS) connection () .

There are three different kinds of access points that you can define: MMS access point, browser access point, and Internet access point (IAP). Check with your service provider for the kind of access point needed for the service you wish to access. You need to set access point settings, if you want to, for example,

- send and receive multimedia messages,
- send and receive e-mail,
- browse pages,
- download Java™ applications,
- use Image upload, or
- use your phone as a modem.



Glossary: Access point – The point where your phone connects to the Internet by way of a data call or packet data connection. An access point can be provided, for example, by a commercial Internet service provider (ISP), or service provider.

GSM DATA CALLS

A GSM data call enables data transmission rates to a maximum of 14.4 kbps. For availability and subscription to data services, contact your service provider.

Minimum settings needed to make a data call

To insert a set of basic GSM data call settings, go to *Settings*→ *Connection settings*→ *Access points* and select **Options**→ *New access point*. Fill in the following: *Data bearer: GSM data, Dial-up number, Session mode: Permanent, Data call type: Analog, and Maximum data speed: Automatic.*

High speed data call (High Speed Circuit Switched Data, HSCSD)



Glossary: High-speed data enables data transmission rates to a maximum of 43.2 Kbps, which is three times faster than the standard data rates of the GSM system. HSCSD is comparable to the speed of many computer modems that communicate with today's fixed telephone systems.

For availability and subscription to high-speed data services, please contact your service provider.

Note: Sending data in HSCSD mode may drain the phone's battery faster than normal voice or data calls, as the phone may send data more frequently to the system.

Tip: The Settings wizard program included in the PC Suite for Nokia 3650 or PC Suite for Nokia 3600 can help you to configure access point and mailbox settings. You can also copy existing settings, for example, from your computer to your phone. See the CD-ROM supplied in the sales package.

PACKET DATA (GENERAL PACKET RADIO SERVICE, GPRS)



Glossary: Packet data, or General Packet Radio Service (GPRS), uses packet data technology where information is sent in short bursts of data over the mobile system. The benefit of sending data in packets is that the system is occupied only when sending or receiving data. Because GPRS uses the system efficiently, it allows for quick data connection set up and fast data transmission speeds.

Minimum settings needed to make a packet data connection

- You need to subscribe to the GPRS service. For availability and subscription to GPRS, contact your service provider.
- Go to Tools→ **Settings**→ *Connection*→ *Access points* and select **Options**→ *New access point*→ *Edit*. Fill in the following: *Data bearer: GPRS* and *Access point name*: enter the name given to you by your service provider.

Pricing for packet data and applications

Both the active GPRS connection and the applications used over GPRS require a fee (for example, using services, sending and receiving data, and text messages). For more detailed information on fees, contact your service provider.

Create an access point


Options in the Access points list are: *Edit*, *New access point*, *Delete*, *Help*, and *Exit*.

You may have preset access point settings in your Nokia 3600 series mobile phone. Or, you may receive access point settings in a smart message from a service provider.


If no access points are defined when you open *Access points*, you will be asked if you want to create one.

If access points are defined, to create a new access point, select **Options**→ *New access point* and select:

- *Use default settings* to use the default settings. Make the needed changes and press **Back** to save the settings.
- *Use existing settings* to use existing setting information as the basis for the new access point settings. A list of existing access points is opened. Select one and press **OK**. Access point settings are opened with some fields already filled.

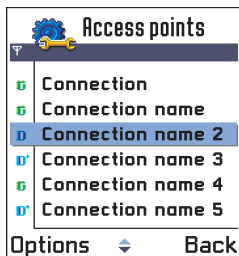

Edit an access point

When you open Access points, the list of already available access points opens. Scroll to the access point you want to edit, and press .

Delete an access point

In the list of access points, scroll to the access point you want to remove and select **Options**→ *Delete*.

Access points

Options when editing access point settings are: *Change*, *Advanced settings*, *Help*, and *Exit*.

Here you can see a short explanation for every setting that may be needed for different data connections and access points.

Note: Enter the settings from the top because depending on what data connection you select (*Data bearer*) or whether you need to insert a *Gateway IP address*, only certain setting fields are available.

Note: Follow the instructions given to you by your service provider very carefully.



- *Connection name* - Give a descriptive name for the connection.
- *Data bearer* - The options are *GSM data*, *High speed GSM*, and *GPRS*. Depending on what data connection you select, only certain setting fields are available. Fill in all fields marked with **Must be defined**, or marked with a red asterisk. Other fields can be left empty, unless you have been instructed otherwise by your service provider.


Tip: See also "Settings needed for multimedia messaging" on page 78, "Settings needed for e-mail" on page 81, and "Phone browser service settings" on page 120.

Note: To use a data connection, the system service provider must support this feature, and if necessary, activate it for your SIM card.

- *Access point name* (for packet data only) - The access point name is needed to establish a connection to the GPRS system. You obtain the access point name from your service provider.

- *Dial-up number* (for GSM data and high speed data only) – The modem telephone number of the access point.
- *User name* – Write a user name if required by the service provider. The user name may be needed to make a data connection, and is usually provided by the service provider. The user name is often case-sensitive.

Tip: When you are writing, press  to open the special characters table. Press  to enter a space.

- *Prompt password* – If you must key in a new password every time you log on to a server, or if you do not want to save your password to the phone, choose *Yes*.
- *Password* – A password may be needed to make a data connection, and is usually provided by the service provider. The password is often case-sensitive. When you are writing the password, the characters you enter are shown briefly and then changed to asterisks (*). The easiest way to enter numbers is to press  and select *Insert number* and then continue entering letters.
- *Authentication* – *Normal* / *Secure*.
- *Gateway IP address* – The IP address used by required browser gateway.
- *Homepage* – Depending on what you are setting up, write either:
 - the service address, or
 - the address of the multimedia messaging center.



Glossary: ISDN connections are a way to establish a data call between your phone and your access point. ISDN connections are digital from end to end and as such offer quicker set-up times and faster data rates than analog connections. In order to use an ISDN connection, both your service provider and your Internet service provider must support it.

- *Connection security* – Choose whether Transport Layer Security (TLS) is used for the connection. Follow the instructions from your service provider.
- *Session mode* – *Permanent* / *Temporary*.

- *Data call type* (for GSM data and high speed data only) – *Analog*, *ISDN v.110*, or *ISDN v.120* defines whether the phone uses an analog or digital connection. This setting depends on both your GSM service provider and Internet Service Provider (ISP), because some GSM systems do not support certain types of ISDN connections. For details, contact your ISP. If ISDN connections are available, they establish connections more quickly than analog methods.
- *Maximum data speed* (for GSM data and high speed data only) – The options are *Automatic* | *9600* | *14400* | *19200* | *28800* | *38400* | *43200*, depending on what you have chosen in *Session mode* and *Data call type*. This option allows you to limit the maximum connection speed when high speed data is used. Higher data rates may cost more, depending on the system service provider.

Note: The speeds above represent the maximum speed at which your connection will operate. During the connection, the operating speed may be less, depending on system conditions.



Glossary: DNS – Domain Name Service. An Internet service that translates domain names such as **www.nokia.com** into IP addresses like **192.100.124.195**.

Options→ Advanced settings

- *Phone IP address* – The IP address of your phone.
- *Primary name server:* – The IP address of the primary DNS server.
- *Second name server:* – The IP address of the secondary DNS server.

Note: If you need to enter the *Phone IP address*, *Primary name server*, or *Second name server* contact your Internet service provider to obtain these addresses.

The following settings are shown if you have selected data call and high speed data as the connection type:

- *Use callback* – This option allows a server to call you back once you have made the initial call, so you have a connection without paying for the call. Contact your service provider to subscribe to this service.

Note: Charges may apply for certain types of received calls, such as roaming and high speed data calls. Contact your GSM service provider for more information.

Note: The phone expects the callback call to use the same data call settings that were used in the callback-requesting call. The system must support this type of call in both directions, to and from the phone.

- *Callback type* - The options are *Use server no.* / *Use other no.* Ask your service provider for the correct setting; it will depend on the service provider's configuration.
- *Callback number* - Key in your phone's data phone number which the dial back server uses. Usually, this number is the data call phone number of your phone.
- *Use PPP compression* - When set to *Yes*, this option speeds up the data transfer, if supported by the remote PPP server. If you have problems with establishing a connection, try setting this to *No*. Contact your service provider for guidance.



Glossary: PPP (Point-to-Point Protocol) - a common networking software protocol that enables any computer with a modem and a phone line to connect directly to the Internet.

- *Use login script* - The options are *Yes* / *No*.
- *Login script* - Insert the login script.
- *Modem initialization* (Modem initialization string)- Controls your phone using modem AT commands. If required, enter characters specified by your GSM system service provider or Internet service provider.

GPRS

Go to **Menu**→ **Tools**→ **Settings**→ *Connection*→ *GPRS*.

The GPRS settings affect all access points using a packet data connection.

GPRS connection - If you select *When available* and you are in a system that supports packet data, the phone registers to the GPRS system and sending text messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker. If you select *When needed*, the phone will use a packet data connection only if you start an application or action that needs it. The GPRS connection is closed after it is not used by any application.

Note: If there is no GPRS coverage and you have chosen *When available*, the phone will periodically try to establish a packet data connection.

Access point - The access point name is needed when you want to use your phone as a packet data modem to your computer.

Data call

Go to **Menu**→**Tools**→**Settings**→ *Connection settings*→ *Data call*.

The Data call settings affect all access points using a data call and high speed data call.

Online time - If there are no actions the data call is dropped automatically after a time-out period. The options are *User defined*, in which case you enter a time, or *Unlimited*.

• DATE AND TIME

Menu→**Tools**→**Settings**→ *Date and time*.

The date and time settings allow you to define the date and time used in your phone, as well as change the date and time format and separators. Choose *Clock type*→*Analog* or *Digital* to change the clock shown in standby mode. Choose *Auto time update* if you want the mobile phone system to update time, date, and time zone information to your phone (system service).

Tip: For the *Auto time update* setting to take effect, the phone needs to be restarted.

• SECURITY

Menu→**Tools**→**Settings**→ *Security*→ *Phone and Sim*

Phone and SIM

Explanations for the different security codes that may be needed:

- **PIN code (4 to 8 digits)** – The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. After three consecutive incorrect PIN code entries, the PIN code is blocked. If the PIN code is blocked, you need to unblock the PIN code before you can use the SIM card again. See the information about the PUK code below.
- **PIN2 code (4 to 8 digits)** – The PIN2 code, supplied with some SIM cards, is required to access some functions, such as call cost counters.
- **Lock code (5 digits)** – The lock code can be used to lock the phone and keypad to avoid unauthorized use.

Note: The factory setting for the lock code is **12345**. To avoid unauthorized use of your phone, change the lock code. Keep the new code secret and in a safe place separate from your phone.

- **PUK and PUK2 codes (8 digits)** – The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK2 code is required to change a blocked PIN2 code. If the codes are not supplied with the SIM card, contact the operator whose SIM card is in your phone for the codes.

You can change the following codes: lock code, PIN code, and PIN2 code. These codes can only include the numbers from **0** to **9**.

Note: Avoid using access codes similar to the emergency numbers, such as 911, to prevent accidental dialing of the emergency number.

PIN code request – When the PIN code request is active, the code is requested each time the phone is switched on. Note that deactivating the PIN code request may not be allowed by some SIM cards.

PIN code / PIN2 code / Lock code – Open this setting if you want to change the code.

Tip: To lock the phone manually, press **(*)**. A list of commands opens. Select *Lock phone*.

Autolock period - You can set an autolock period, a time-out after which the phone is automatically locked and can be used only if the correct lock code is entered. Key in a number for the time-out in minutes or select *None* to turn off the autolock period.

Lock Code - To unlock the phone, key in the lock code.

Note: When the phone is locked, calls may be possible to the emergency number programed into your phone (e.g. 911 or other official emergency number).

Lock if SIM changed - Select *Yes* if you want the phone to ask for the lock code when an unknown, new SIM card is inserted into your phone. The phone maintains a list of SIM cards that are recognized as the owner's cards.

Fixed dialing - You can restrict your outgoing calls to selected phone numbers, if supported by your SIM card. You need the PIN2 code for this function. When this function is active, you can only call those phone numbers that are included in the fixed dialing list or which begin with the same digit(s) as a phone number on the list.

To view the list of Fixed dialing numbers, go to *Menu*→*SIM*→*Fixed dialing*.

Options in the Fixed dialing view are:

Open, Call, New contact, Edit, Delete, Add to Contacts, Add from Contacts, Help and Exit.

Note: When Fixed Dialing is turned on, calls may be possible to certain emergency numbers in some systems (911 or other official emergency numbers).

To add new numbers to the Fixed dialing list, select **Options**→*New contact* or *Add from Contacts*.


Closed user group (system service) - You can specify a group of people to whom you can call and who can call you. For more information, contact your service provider. Select: *Default* to activate the default group agreed on with the service provider, *On* if you want to use another group (you need to know the group index number), or *Off*.

Note: When calls are limited to Closed User Groups, calls may be possible to certain emergency numbers in some systems (911 or other official emergency numbers).

Confirm SIM services – To set the phone to display confirmation messages when you are using a SIM card service.

Certif. management

Menu→Tools→Settings→Security→Cert. management

In the Certificate management main view, you can see a list of authority certificates that have been stored in your phone. Press  to see a list of user certificates, if available.

Options in the certificate management main view are:

Certificate details, Delete, Trust settings, Mark/Unmark, Help, and Exit.



Glossary: Digital certificates are used to verify the origin of browser pages and installed software. However, they can only be trusted if the origin of the certificate is known to be authentic.

Digital certificates are needed if you:

- want to connect to an online bank, another site, or remote server for actions that involve transferring confidential information, or
- want to minimize the risk of viruses or other malicious software and be sure of the authenticity of software when downloading and installing software.



Glossary: Authority certificates are used by some services, such as banking services, for checking signatures or server certificates or other authority certificates.

Important: Although the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available.



Glossary: User certificates are issued to users by a Certifying Authority.

Viewing certificate details – checking authenticity

You can only be sure of the correct identity of a browser gateway or a server when the signature and the period of validity of a browser gateway or server certificate have been checked.

You will be notified on the phone's display

- if the identity of the browser server or gateway is not authentic or
- if you do not have the correct security certificate in your phone.

To check certificate details, scroll to a certificate and select **Options**→ *Certificate details*. When you open certificate details, Certificate management checks the validity of the certificate and one of the following notes may appear:

- *Certificate not trusted* - You have not set any application to use the certificate. For more information, see the next section 'Changing the trust settings of an authority certificate'.
- *Expired certificate* - The period of validity has ended for the selected certificate.
- *Certificate not valid yet* - The period of validity has not yet begun for the selected certificate.
- *Certificate corrupted* - The certificate cannot be used. Contact the certificate issuer.

Important: Certificates have a restricted lifetime. If *Expired certificate* or *Certificate not valid yet* is shown even if the certificate should be valid, check that the current date and time in your phone are correct.

Change the trust settings of an authority certificate

Scroll to an authority certificate and select **Options**→ *Trust settings*.

Depending on the certificate, a list of the applications that can use the selected certificate is shown. For example:

Services / Yes - the certificate is able to certify sites.

Application manager / Yes - the certificate is able to certify the origin of new software.

Internet / Yes - the certificate is able to certify e-mail and imaging servers.

Important: Before changing these settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

• CALL RESTRICTION (SYSTEM SERVICE)

Call restriction allows you to restrict the making and receiving of calls with your phone. For this function, get the restriction password from your service provider.

- 1 Scroll to one of the restriction options.
- 2 Select **Options**→ *Activate* to request the system to set call restriction on, *Cancel* to set the selected call restriction off, or *Check status* to check if the calls are restricted or not.
 - Select **Options**→ *Edit restriction passw.* to change the restriction password.
 - Select **Options**→ *Cancel all restrictions* to cancel all active call restrictions.

Note: When calls are restricted, calls may be possible to certain emergency numbers in some systems (911 or other official emergency numbers). Call restricting affects all calls, including data calls. You cannot have restriction of incoming calls and call forwarding or fixed dialing active at the same time.

• SYSTEM

Menu→ Tools→ Settings→ *System*

System selection

Choose *Automatic* to set the phone to automatically search for and select one of the cellular systems available in your area, or

Choose *Manual*, if you want to select the desired system manually from a list of systems. If the connection to the manually selected system is lost, the phone will sound an error tone and ask you to select a system again. The selected system must have a roaming agreement with your home system, that is, the operator whose SIM card is in your phone.



Glossary: Roaming agreement - An agreement between two or more system service providers to enable the users of one service provider to use the services of other service providers.

Cell info display

Select *On* to set the phone to indicate when it is used in a cellular system based on Micro Cellular Network (MCN) technology and to activate cell info reception.

• ACCESSORY SETTINGS

Menu→Tools→Settings→Accessory

Scroll to an accessory folder and open the settings:

- Select *Default profile* to select the profile you want to be activated each time when you connect a certain accessory to your phone.
- Select *Automatic answer* to set the phone to answer an incoming call automatically after five seconds time. If the Ringing option is set to *Beep once* or *Silent*, automatic answer cannot be in use.

Note: If you are using a loopset, you need to activate it separately. Open the Loopset folder and select *Use loopset*→*Yes*. If you have activated a loopset, the headset will use the same settings as the loopset.

Indicators shown in standby mode:



- a headset is connected.



- a loopset is connected.

5 Contacts




To open Contacts, press  in standby mode or go to **Menu**→**Contacts**.

In Contacts, you can store and manage contact information, such as names, phone numbers, and addresses.

Contacts use shared memory. See “Shared memory” on page 18.

You can also add a personal ringing tone, voice tag, or a thumbnail image to a contact card. You can create contact groups, which allow you to send text messages or e-mail to many recipients at the same time.

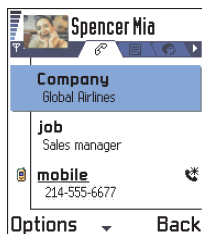

• CREATE CONTACT CARDS

- 1 Open Contacts and select **Options**→*New contact*. An empty contact card opens.
- 2 Fill in the fields you want and press **Done**. The contact card is saved and closed, and appears in the Contacts directory.

• COPY CONTACTS BETWEEN THE SIM CARD AND PHONE MEMORY


- To copy names and numbers from a SIM card to your phone, go to **Menu**→**SIM**→**SIM directory**. Select the name(s) you want to copy and select **Options**→*Copy to Contacts*.
- If you want to copy a phone, fax, or pager number from Contacts to your SIM card, go to Contacts, open a contact card, scroll to the number, and select **Options**→*Copy to SIM direct*.

• EDIT CONTACT CARDS

Options in the Contacts directory are: *Open, Call, Create message, New contact, Edit, Delete, Duplicate, Add to group, Belongs to groups, Mark/Unmark, Send, Contacts info, Help, and Exit.*

Options when editing a contact card are:

Add thumbnail | Remove thumbnail, Add detail, Delete detail, Edit label, Help, and Exit.



- 1 In the Contacts directory, scroll to the contact card you want to edit and press  to open it.
- 2 To change the information on the card, select **Options**→ *Edit*.
- 3 To save your changes and to return to the contact card view, press **Done**.

Delete contact cards

In the Contacts directory, scroll to the contact card you want to delete and select **Options**→ *Delete*.

To delete many contact cards

- 1 Mark the cards to be deleted. Scroll to a contact you want to delete and select **Options**→ *Mark*. A check mark is placed beside the contact card.
- 2 When you have marked all the contacts you want to delete, select **Options**→ *Delete*.



Tip: You can also mark many items if you press and hold  and simultaneously press . See also "Actions common to all applications" on page 15.

Add and remove contact card fields




- 1 Open a contact card and select **Options**→ *Edit*.
- 2 To add an extra field, select **Options**→ *Add detail*.
To delete a field you do not need, select **Options**→ *Delete detail*.
To rename a contact card field label, select **Options**→ *Edit label*.

Insert a picture in a contact card


There are two different types of pictures you can add to a contact card. See “Camera and Images” on page 55 for more information on how to take and store pictures.

- To attach a small thumbnail image to a contact card, open a contact card, select **Options**→ *Edit* and then select **Options**→ *Add thumbnail*. The thumbnail image is also shown when the contact is calling you.
- To add an image to a contact card, open a contact card, and press  to open the image view (). To attach an image, select **Options**→ *Add image*.

• OPTIONS WHEN VIEWING A CONTACT CARD

Contact information view () shows all information inserted in the contact card. Press  to open the Image view ().

Note: Only fields that have information are displayed in the contact information view. Select **Options**→ *Edit* if you want to see all fields and add more data to the contact.

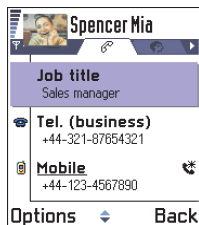


Options when viewing a contact card (some are shown only when the selection is on a phone number) are: *Call, Create message, Edit, Delete, Defaults, Add voice tag / Voice tags, Assign 1-touch dial / Remove 1-touch dial, Ringing tone, Copy to SIM direct., Send, Help, and Exit*.

Assign default numbers and addresses

If a contact has several phone numbers or e-mail addresses, to speed up calling and sending messages, you can define certain numbers and addresses to be used as the default.

Open a contact card and select **Options**→ *Defaults*. A pop-up window opens, listing the different options.



Example: Scroll to *Phone number* and press **Assign**. A list of phone numbers in the selected contact card is shown. Scroll to the one you want to have as the default and press . When you return to the contact card view, you can see the default number underlined.

Voice dialing

You can make a phone call by saying a voice tag that has been added to a contact card. Any spoken word(s) can be a voice tag. Before using voice dialing, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.




Example: You can use a person's name for a voice tag, for example, "John's cell".

Note: You must say the name exactly as you said it when you recorded it. This may be difficult in, for example, a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

ADD A VOICE TAG TO A PHONE NUMBER




Glossary: Voice tags can be any spoken words, for example, a person's first name. Voice tags allow you to make phone calls by simply saying the word aloud.

- 1 In the Contacts directory, scroll to the contact to which you want to add a voice tag and press  to open the contact card.
- 2 Scroll to the number to which you want to add the voice tag and select **Options**→ *Add voice tag*.

Note: You can have only one voice tag per contact card. Voice tags can only be added to phone numbers stored in the phone's memory. See "Copy contacts between the SIM card and phone memory" on page 47.

- 3 The text *Press Start, then speak after tone* is displayed.

When recording, hold the phone at a short distance away from your mouth. After the starting tone, say clearly the word(s) you want to record as a voice tag.


- Press **Start** to record a voice tag. The phone sounds a starting tone and the note *Speak now* is displayed.
 - Press **Quit** to return to the contact card. After the starting tone, say clearly the word(s) you want to record as a voice tag.
- 4 After recording, the phone plays the recorded tag and the note *Playing voice tag* is displayed. If you do not want to save the recording, press **Quit**.
 - 5 When the voice tag has been successfully saved, the note *Voice tag saved* is displayed and a beep sounds. A symbol  can be seen next to the number in the contact card.

Note: Your phone may have 30 phone numbers to which voice tags are attached. If the memory becomes full, delete some of the voice tags.

Tip: To view a list of voice tags you have defined, select **Options**→*Contacts info*→*Voice tags* in the Contacts directory.

MAKE A CALL BY SAYING A VOICE TAG

Note: You must say the voice tag exactly as you said it when you recorded it.

- 1 In standby mode, press and hold . A short tone is played and the note *Speak now* is displayed.
- 2 When you are making a call by saying a voice tag, the loudspeaker is in use. Hold the phone a short distance away from your mouth and face and say the voice tag clearly.
- 3 The phone plays the original voice tag, displays the name and number, and after 1.5 seconds dials the number of the recognized voice tag.

If the phone plays the wrong voice tag or to retry voice dialing, press **Retry**.

Note: When an application using a data call or GPRS connection is sending or receiving data, you cannot make a call by using voice dialing. To make a call by using a voice tag, end all active data connections.

REPLAY, ERASE, OR CHANGE A VOICE TAG

To replay, erase, or change a voice tag, open a contact card and scroll to the number that has a voice tag (indicated by 📞) and select **Options**→*Voice tag*→ then either

- *Playback* - to listen to the voice tag again, or
 - *Delete* - to erase the voice tag, or
 - *Change* - to record a new voice tag instead of the old one.
- Press **Start** to record.

Assign 1-touch dialing keys


1-touch dialing is a quick way to call frequently used numbers. You can assign 1-touch dialing keys to eight phone numbers. Number 1 is reserved for the voice mailbox.


- 1 Open the contact card for which you want a 1-touch dialing key and select **Options**→*Assign 1-touch no.* The 1-touch dialing grid opens, showing you the numbers from 1-9.
- 2 Scroll to a number and press **Assign**. When you return to the contact information view, you can see the 1-touch dial icon (📞*) next to the number.

To call the contact by 1-touch dialing, go to standby mode and press the 1-touch dialing key and 📞. If the *1-touch dialing* function is set to *On*: Press and hold the corresponding 1-touch dialing key until the call is started.

Add a ringing tone for a contact card or group

You can set a ringing tone for each contact card and group. When that contact or group member calls you, the phone plays the chosen ringing tone (if the caller's telephone number is sent with the call and your phone recognizes it).

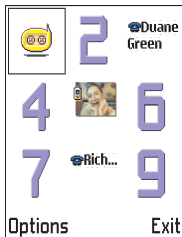

- 1 Press  to open a contact card or go to the Groups list and select a contact group.
- 2 Select **Options**→ *Ring*ing tone. A list of ringing tones opens.
- 3 Use the scroll key to select the ringing tone you wish to use for the contact or group and press **Select**.

To remove the ringing tone, select *Default tone* from the list of ringing tones.

Note: For an individual contact, the phone will always use the ringing tone that was assigned last. So, if you first change a group ringing tone and then the ringing tone of a single contact that belongs to that group, the ringing tone of the single contact will be used when the contact calls you the next time.

Tip: To listen to a ringing tone, go to Recorder.

Send contact information

- 1 In the Contacts directory, scroll to the card you want to send.
- 2 Select **Options**→ *Send* then select the method, the choices are: *Via text message*, *Via e-mail* (available only if the correct e-mail settings are in place), *via Infrared*, or *via Bluetooth*. The contact card you want to send has now become a "business card". For further information, see "Messaging" chapter 9, on page 69, "Send and receive data via infrared" on page 140, and "Send data via Bluetooth" on page 136.

You can add received business cards to your Contacts directory. See "Receive smart messages" on page 85 for further information.



Glossary: When you send or receive contact information, the term 'business card' is used. A business card is a contact card in a format suitable to be sent in a text message, usually in 'vCard' format.


• MANAGE CONTACT GROUPS

Options in the Groups list view are:


Open, *New group*, *Delete*, *Rename*, *Ring*ing tone, *Contacts info*, *Help*, and *Exit*.


You can create contact groups, which can, for example, be used as distribution lists for sending text messages and e-mail. See also "Add a ringing tone for a contact card or group" on page 52.

Create contact groups


- 1 In the Contacts directory, press  to open the Groups list.
- 2 Select **Options**→ *New group*.
- 3 Write a name for the group or use the default name *Group* and press **OK**.

Add members to a group


- 1 In the Contacts directory, scroll to the contact you want to add to a group and select **Options**→ *Add to group*: A list of available groups opens.
- 2 Scroll to the group to which you want to add the contact and press .

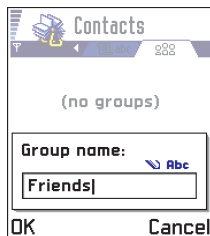

ADD MULTIPLE MEMBERS AT A TIME

- 1 In the Groups list, open a group and select **Options**→ *Add members*.
- 2 Scroll to a contact and press  to mark it. Repeat this action on all the contacts you want to add and press **OK** to add them to the selected group.

Remove members from a group

- 1 Go to the Groups list, scroll to the group you want to modify, and press .
- 2 Scroll to the contact you want to remove and select **Options**→ *Remove from group*.
- 3 Press **Yes** to remove the contact from the group.

6 Camera and Images



With the camera you can take pictures of people or events while on the move. The pictures are automatically saved in the Images application, where you can rename them and organize them in folders. You can also send photos to your friends in a multimedia message, as an e-mail attachment, or via a Bluetooth or infrared connection. The camera produces JPEG pictures.

Press **Camera** in standby mode or go to **Menu**→**Camera**.



Options before taking a picture are: *Capture, Go to Images, Settings, Help, and Exit.*




Glossary: JPEG is a standardized image compression format. JPEG files can be viewed with the most common image viewers, image editors, and Internet browsers. You can recognize these files by their *.jpeg extension.


• TAKE PICTURES

Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.


- 1 Press **Camera** in standby mode. The Camera application opens and you can see the view to be captured.

You can see the viewfinder and the cropping lines, which show you the image area to be captured. You can also see the image counter, which shows you how many images, depending on the selected image quality, fit in the memory of your phone.

- 2 To take a picture, press .

Note: Do not move the phone before the Camera application starts to save the photo. The photos are saved automatically in the Images application. The Camera goes into battery saving mode within a minute if there have been no key presses. To continue taking pictures, press .

After the image has been saved:

- If you do not want to save the photo in the Images application select **Options**→ *Delete*.
- To return to the viewfinder to take a new picture, press .

Options after a picture has been taken are: *New image, Delete, Send, Rename image, Go to Images, Settings, Help, and Exit.*

Important: Obey all local laws governing the taking of pictures. Do not use this feature illegally.

Settings

In the Camera application settings, you can adjust the image quality setting and change the default image name.



- 1 Select **Menu**→ **Camera**→ **Options**→ *Settings*.
- 2 Scroll to the setting you want to change:
 - *Image quality - High, Normal, and Basic.* The better the image quality, the more memory the image consumes. See also "Images and memory consumption" on page 58.
 - *Default image name -* By default, Camera names photos in the format '*Image.jpg*'. *Default image name* allows you to set a name for the pictures taken.



Example: If you set 'Beach' as the default image name, Camera will name all the pictures you take 'Beach', 'Beach(01)', 'Beach(02)', and so on, until you change the setting.


- *Memory in use -* Select whether you want to store your images in the phone memory or the memory card, if you use one.

CAMERA MODE AFFECTS IMAGE SIZE AND ORIENTATION

With the different Camera modes, you can affect the size and orientation of the picture to be taken. When you are taking a picture, press  or  to change between the different modes. Choose:

- *Standard* when you want to take normal landscape pictures,
- *Portrait* when you want to take a smaller icon-sized, vertical picture, which can be added to a contact card, or
- *Night* when the lighting is dim and the Camera needs a longer exposure time for the picture to be of good quality. Note that, in dim conditions, any movement while taking a picture may cause it to get blurred. The image size and orientation is the same for *Standard* and *Night*.

Tip: Try out the different Camera modes to see how they affect the picture taken.

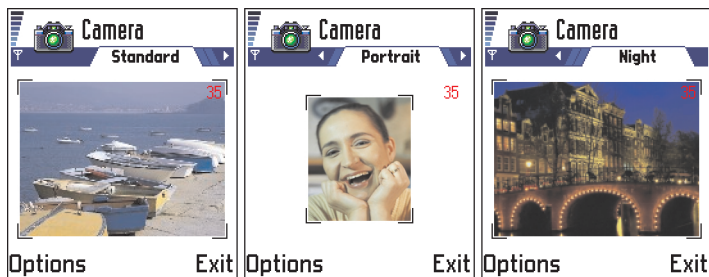

Standard, Portrait, and Night modes

- When you are taking a picture in Standard or Night mode, the viewfinder resolution is 160x120 pixels and 80x96 for Portrait mode.
- The images taken in Standard or Night mode are saved in 640x480 pixel (VGA) format and those taken in Portrait mode are saved in 80x96 pixel format.

- When you are viewing images, they are scaled to fit the display, which has 176x208 pixels. This means that Standard and Night mode pictures will appear more detailed when viewed on a higher resolution screen, for example, a computer or when zoomed in Images.



Glossary: Resolution - A measure for the sharpness and clarity of an image. Resolution refers to the number of dots (pixels) in an image or a display. The more pixels there are, the more detailed the picture is. Resolution is usually measured in pixels, for example, 640x480=300 kilopixels (kpix)=0.3 megapixels (Mpix).

IMAGES AND MEMORY CONSUMPTION

Your phone has 3.4 MB (megabytes) of free memory for images, contact information, calendar, messages, and so on. See "Shared memory" on page 18. Portrait images (always taken in High quality) are so small that they take up very little memory. Images taken using the High quality setting and those taken in Night mode take up the most memory.

If 1 MB of memory is used for images only, it would fit approximately 22 Normal quality images taken in Standard mode. In the table below, you can see approximately how many images would fit in 1 Mb of memory.

| Image quality Image type | Basic | Normal | High |
|-----------------------------|-------|--------|------|
| Standard | 55 | 22 | 15 |
| Night | 50 | 25 | 18 |
| Portrait | - | - | >300 |

Tip: By using a memory card with your phone you can increase the number of images you can store.

• STORE PICTURES IN IMAGES



Go to **Menu**→ **Images**.

Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Images allows you to view, organize, delete, and send photos and pictures stored in your phone. In Images you can organize images:


- taken with the camera,
- sent to your Inbox in a multimedia or a picture message, as an e-mail attachment, via an infrared or Bluetooth connection. After receiving the image in Inbox, you need to save it in Images.

In the Images main view, you can see a list of photos and folders.

The list shows:



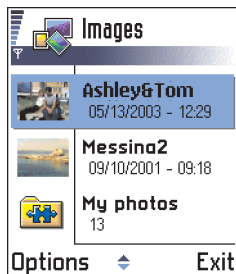


- the date and time a photo or an image was taken or saved,
- a small thumbnail picture, a preview of the image, and
- the number of images inside a folder, and
- a tab showing whether the photos or folders are located in the phone's memory or the memory card, if you use one.



Options in Images are: *Open, Send, Image uploader, Delete, Move to folder, New folder, Mark/Unmark, Rename, Receive via infrared* (only from a digital camera that supports the IrTran-P protocol, otherwise use the Infrared application, See page 140), *View details, Add to Favorites, Update thumbnails, Help, and Exit.*



View images

Note: When you open **Images** and you use a memory card, the starting tab is determined by which memory is selected as the *Memory in use*.

- 1 Press  or  to move from one memory tab to another.
- 2 To browse the images, press  and .
- 3 Press , to open an image. When the image is open, you can see the name of the image and the number of images in the folder on the top of the display.

When you are viewing an image, pressing  or  takes you to the next or previous picture in the current folder.


You can view animated GIF files in the same way as other images. Animations are played only once. When an animation stops, you will see a fixed image. To view the animation again, you must close it and then reopen it.

Options when viewing an image are: *Send, Rotate, Zoom in, Zoom out, Full screen, Delete, Rename, View details, Add to Favorites, Help, and Exit.*


ZOOM IN OR ZOOM OUT

- 1 Select **Options**→ *Zoom in* or *Zoom out*. You can see the zooming ratio at the top of the display. See also the section "Keyboard shortcuts" later in this chapter.
- 2 Press **Back** to return to the initial view.

Note: The zoom ratio is not stored permanently. You cannot zoom in on GIF animations while they are playing.

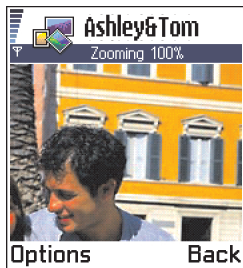

Full screen

When you select **Options**→ *Full screen*, the panes around the picture are removed so that you can see more of the image. Press  to go back to the initial view.

Move the focal point

When you are zooming or viewing an image in full screen mode, use the scroll key to move the focal point to the left, right, up, or down, so that you can take a closer look at one part of the picture, for example, its upper right corner.

Rotate

Select **Options**→ *Rotate*→ *Left* or to rotate an image 90 degrees counterclockwise or *Right* to rotate the image clockwise. The rotation status is not stored permanently.

KEYBOARD SHORTCUTS






- Rotate:  - counterclockwise,  - clockwise.
-  - zoom in,  - zoom out, press and hold to return to the normal view.
-  - change between full screen and normal view.

IMAGE DETAILS VIEW

To view the detailed information about an image, scroll to the image and select **Options**→ *View details*. A list of image information appears:

Format - JPEG, GIF, PNG, TIFF, MBM, BMP, WBMP, OTA, WMF, Unsupported, or Unknown.

Date and Time - when the image was created or saved, **n x n** - the size of the image in pixels, see the glossary explanation, on page 58.


Resolutn. - the size of the image in pixels. See the glossary explanation, on page 58.

Size - in bytes or kilobytes (kB),

Color - True color, 65536 colors, 4096 colors, 256 colors, 16 colors, Grayscale, or Black/white.

Arrange images and folders


- To remove an image or folder, scroll to it and select **Options**→ *Delete*.

- To rename an image or a folder, scroll to the image or folder you want to rename and select **Options**→ *Rename*. Write the new name and press .

See "Actions common to all applications" on page 15 for further information on how to create folders and mark and move items to folders.

Send images

You can send photos or images via different messaging services.

- 1 Scroll to the image you want to send and select **Options**→ *Send*.
- 2 Then select the method, the choices are *Via multimedia*, *Via e-mail*, *Via infrared*, and *Via Bluetooth*.
 - If you select to send the image in an e-mail or a multimedia message, an editor opens. Press  to select the recipient(s) from the Contacts directory or write the phone number or e-mail address of the recipient in the *To:* field. Add text or sound and select **Options**→ *Send*. For more information, see "Create and send new messages" on page 76.
 - If you want to send the image via infrared or Bluetooth, see "Send data via Bluetooth" on page 136, and "Send and receive data via infrared" on page 140 for more information.



Picture messages folder

Options in the Picture messages folder are: *Open*, *Send*, *Delete*, *Mark/Unmark*, *Rename*, *View details*, *Help*, and *Exit*.

In the Picture messages folder, you can find graphics sent to you in picture messages.

If you want to save a graphic you have received in a picture message, go to **Messaging**→ *Inbox*, open the message, and select **Options**→ *Save picture*.

VIEW PICTURES

- 1 Scroll to the picture you want to view and press . The picture opens. Press  to view the next picture in the folder.
- 2 Press Back to return to the Pictures main view.

7 Video recorder



Go to **Menu**→ **Video recorder**.

Note: Obey all local laws governing the taking of videos. Do not use this feature illegally. Your phone must be switched on to use the Video recorder. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

With the Video recorder you can record video clips, and play video clips stored on your phone or on a memory card. Also, the Video recorder is integrated with the messaging features allowing you to easily send created clips.



Video recorder uses shared memory. See "Shared memory" on page 18.


• RECORD A VIDEO CLIP




Glossary: 3GPP file format (.3gp) is the standard video file format for Multimedia Messaging.

You can record video clips up to 95 kB in size, or approximately 15 seconds in duration. Recorded video clips are in the .3gp format.

- 1 To begin recording open the Video recorder and select **Options**→ **Record** and you can see the view to record.
- 2 To start recording press . The progress bar on the bottom of the screen shows you how much recording time remains. To pause recording at any time press .

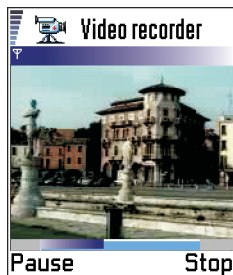

To immediately play the video clip you just recorded, press .

The video clip is saved to either the phone's memory or the memory card, depending on the setting of your *Memory in use*. See "Set up your Video recorder" on page 64.

Options in video clip view of Video recorder are: *Play, Record, Send, Delete, Rename, Settings, About product, Help, and Exit.*

● WATCH A VIDEO CLIP

To watch a video clip from the Video recorder video clip list:


- 1 Open the Video recorder.
- 2 Scroll to a video clip and select **Options**→ *Play*.

Once a video clip is playing, you have similar options available to you as when playing a video clip in 'RealOne Player™'. The exception is volume control, as Video recorder does not record sound. See "Video recorder" on page 63.

Send video clips

You can send video clips by using the *Send* option from your video clip list.

- 1 Scroll to the video clip you want to send and select **Options**→ *Send*.
- 2 Select one of the four ways you have of sending your video clip, *Via multimedia*, *Via e-mail*, *Via Bluetooth*, or *Via infrared*.

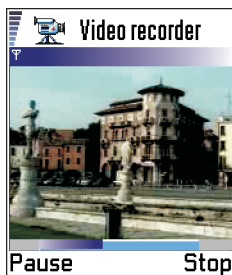

Set up your Video recorder

You can define whether you store your video clips in the phone's memory or on the memory card, if you have one, and how to name your video clips. Select **Options**→ *Settings*.

- *Memory in use* - Choose between *Phone memory* and *Memory card*.
- *Default video name* - Define the default name of your video clips.

Example: If you set 'Holiday' as the default video clip name, Video recorder will name all the video clips you take 'Holiday', 'Holiday(01)', 'Holiday(02)', and so on, until you change the setting again.


8 RealOne Player™



Go to **Menu**→ **RealOne Player**.

With the RealOne Player you can play media files stored in the phone's memory or on a memory card, or play music and video files and stream live content from the internet.

Options in list view are: *Play, Open, Rename, Delete, New folder, Move to folder, Mark/Unmark, Send, Add to Favorites, Settings, About product Help, and Exit.*

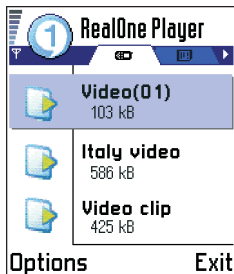

Glossary: Media files are video, music or audio clips which you can play on a media player like the RealOne Player. Files with extensions .3gp, .mp4, .amr, .rm, .ram, .ra and .rv. are supported by the RealOne Player.

RealOne Player uses shared memory. See "Shared memory" on page 18.

• PLAY MEDIA FILES

You can play any music or video file from the list shown when you start the RealOne Player, or directly from the internet.

To play a media file stored in your phone's memory or memory card, open RealOne Player, scroll to the file and select **Options**→ **Play**.



Glossary: Streaming is playing sound or video in real time as it is downloaded from the internet, as opposed to storing it in a local file first.



To play a media file directly, or stream live content from the internet:

- 1 Select **Options**→ *Open*→ *URL address*.
- 2 Enter the URL of the site you want to play or stream content from.

Before your media file or stream begins playing, your phone will connect to the site and load the file.

Note: You cannot connect to a site unless you have configured an Access Point, see *Default Access Point* setting on page 67.









Glossary: Buffering is the temporary storage of a part of your streaming content into the phone's memory before it is played.

Media guide

From your RealOne Player you can open a browser page containing a media guide with links to streaming media sites and files.

To view the media guide, open RealOne Player and select **Options**→ *Open*→ *Guide*.

Volume control

- To increase the volume press , or to decrease the volume press .
- To mute the sound press  and hold until the  indicator is displayed.
- To turn on the sound press  and hold until you see the  indicator.

• SEND MEDIA FILES

You can send media files by using the *Send* option from your video clip options list.

- 1 Scroll to the file you want to send and select **Options**→ *Send*.
- 2 Select one of the three ways you have of sending your file, *Via infrared*, *Via Bluetooth* or *Via multimedia*.

• CHANGE THE SETTINGS

Menu→ RealOne Player→ Options→ Settings

To change the *Video* settings, select *Video* to open the following list of settings:

- *Video quality* – Choose *Sharp images* to have better picture quality, but slower framerate, or *High framerate* for faster framerate, but lower picture quality.
- *Automatic scaling* – Choose *On* to have automatic resizing of the video image.

To change the *Playback* settings, select *Playback* to open the following setting:



- *Repeat* – Choose *On* to have the playing video or audio file restart automatically once it has finished.

To change the *Network* settings, select *Network* to open the following list of settings:

- *Default Access Point* – As defined in *Connection settings*, see "Access points" on page 36.
- *Bandwidth* – Choose *Automatic* to have the best delivery rate available.
- *Maximum bandwidth* – Choose the maximum bandwidth for streaming content.
- *Connection time-out* – Open the slider view to change the waiting time for the initial server connection on a streaming session.
- *Server time-out* – Open the slider view to change the time allowed for no response from the server.
- *Lowest Port or Highest Port* – Choose the port which is available for streaming. If not sure of the number, ask your service provider.

To change the *Proxy* settings, select *Proxy* to open the following list of settings:

- *Use Proxy / Host address / Port* – Choose whether a proxy is used.

Tip: When you select one of the settings a tab view is opened. Press  or  to move between the different setting tabs. The following icons indicate which setting you are in:



for *Video*



for *Playback*



for *Network*, and



for *Proxy*.

9 Messaging



Note: Your phone must be switched on to use the functions in the **Messaging** folder. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Go to **Menu**→ **Messaging**

Options in the Messaging main view: *Create message*, *Connect* (shown if you have defined settings for the mailbox), or *Disconnect* (shown if there is an active connection to mailbox), *SIM messages*, *Cell broadcast*, *Service commands*, *Settings*, *Help*, and *Exit*.

In Messaging you can create, send, receive, view, edit, and organize:

- text messages,
- multimedia messages,
- e-mail messages, and
- smart messages, special text messages containing data.

In addition to these, you can receive messages and data via an infrared or Bluetooth connection, receive service messages, cell broadcast messages as well as send service commands.

Text and multimedia messages use shared memory. See "Shared memory" on page 18.

When you open Messaging, you can see the *New message* function and a list of default folders:






Inbox – contains received messages except e-mail and cell broadcast messages. E-mail messages are stored in the *Mailbox*. You can read cell broadcast messages by selecting **Options**→ *Cell broadcast*.





My folders – for organizing your messages into folders.


Tip: Organize your messages by adding new folders under My folders.


Tip: When you have opened one of the default folders, for example, **Sent**, you can easily move between the folders: by pressing  to open the next folder (**Outbox**), or by pressing  to open the previous folder (**Drafts**).

 **Mailbox** – When you open this folder, you can either connect to your remote mailbox to retrieve your new e-mail messages or view your previously retrieved e-mail messages offline. See page 88 for further information on online and offline modes. After you have defined settings for a new mailbox, the name given to that mailbox will replace *Mailbox* in the main view. See "Settings for e-mail" on page 97

 **Drafts** – stores draft messages that have not been sent.

 **Outbox** – is a temporary storage place for messages waiting to be sent.

 **Sent** – stores the last 15 messages that have been sent. To change the number of messages to be saved, see "Settings for the Sent folder" on page 100.

 **Reports**– you can request the system to send you a delivery report of the text messages, smart messages, and multimedia messages you have sent. To turn on delivery report reception, select **Options**→ *Settings*→ *text message* or *Multimedia message*, scroll to *Receive report*, and select **Yes**.

Note: Receiving a delivery report of a multimedia message that has been sent to an e-mail address might not be possible.


Note: Before you can create a multimedia message, write an e-mail, or connect to your remote mailbox, you must have the correct connection settings in place. See "Settings needed for e-mail" on page 81 and "Settings needed for multimedia messaging" on page 78.


● **MESSAGING – GENERAL INFORMATION**

The message status is always either draft, sent, or received. Messages can be saved to the Drafts folder before they are sent. Messages are temporarily placed in Outbox to wait for sending. After a message has been sent, you can find a copy of the message in the Sent folder. Received and sent messages are in read-only state until you select *Reply* or *Forward*, which copies the message to an editor. Note that you cannot forward e-mail messages sent by you.

Note: Messages or data that have been sent via an infrared or Bluetooth connection are not saved in the Draft or Sent folders.




Open a received message


When you receive a message,  and the note *1 new message* is shown in standby mode. Press **Show** to open the message.

If you have more than one new message, press **Show** to open the Inbox to see the message headings. To open a message in Inbox, scroll to it and press .

Add a recipient to a message

When you create a message, there are several ways to add a recipient:

- 1 Add recipients from the Contacts directory. To open the Contacts directory, press  or  in the *To:* or *Cc:* fields, or select **Options**→ *Add recipient*. Scroll to a contact and press  to mark it. You can mark several recipients at a time. Press **OK** to return to the message. The recipients are listed in the *To:* field and automatically separated with a semicolon (;).
- 2 Write the phone number or e-mail address of the recipient in the *To:* field, or
- 3 Copy the recipient information from another application and then paste it in the *To:* field. See "Copy text" on page 75.

Press  to the left of the cursor if you want to delete a recipient.

Note: If you write many phone numbers or e-mail addresses in the *To:* field, you must remember to add a semicolon (;) between each item to separate them from each other. When you retrieve recipients from the Contacts directory, the semicolon is added automatically.







Example: 214 123 456; 972 456 876

Sending options


To change how a message is sent, select **Options**→ *Sending options* when you are editing a message. When you save the message, its sending settings are also saved.



• WRITE TEXT


You can key in text in two different ways, using the method traditionally used in mobile phones or another method called predictive text input.






Icons:  and  indicate the selected case.  means that the first letter in the message, or the first letter of the next word, is written in upper case, and all other letters are written in lower case.  indicates number mode.


Use traditional text input




The indicator  is shown on the top right of the display when you are writing text using traditional text input.


- Press a number key ( - ), repeatedly until the desired character appears. Note that there are more characters available for a number key than are printed on the key.
- To insert a number, press and hold the number key.

To switch between letter and number mode, press and hold .



- If the next letter is located on the same key as the present one, wait until the cursor appears (or press  to end the time-out period), and then key in the letter.
- If you make a mistake, press  to remove a character. Press and hold  to clear more than one character.
- The most common punctuation marks are available under . Press  repeatedly to reach the desired punctuation mark.



Press  to open a list of special characters. Use the scroll key to move through the list and press **OK** to select a character.

- To insert a space, press . To move the cursor to the next line, press  three times.
- To switch between upper and lower case, press .

Tip: To turn predictive text input on or off, press  twice quickly when writing text.

Use predictive text input






To activate predictive text input, press  and select *Predictive text on*. This will activate predictive text input for all editors in the phone. The  indicator is shown at the top of the display.

- 1 Write the desired word by pressing the keys  - . Press each key only once for one letter. The word changes after every key press.









Note: Do not pay attention to what appears on the display. The word match is evolving. Wait until you have keyed in the whole word before you check the result.

For example, to write 'Nokia' when English dictionary is selected, press






 for N,  for o,  for k,  for i, and  for a.


As you can see, the word suggestion changes after each key press.






- 2 When you have finished the word, check that it is correct.
 - If the word is correct, you can confirm it by pressing  or by pressing  to insert a space. The underlining disappears and you can begin to write a new word.
 - If the word is not correct, you have the following options:
 - Press  repeatedly to view the matching words the dictionary has found one by one.
 - Press  and select *Predictive text* → *Matches* to view a list of matching words. Scroll to the word you want to use and press  to select it.
 - If the ? character is shown after the word, the word you intended to write is not in the dictionary. To add a word to the dictionary, press **Spell**, key in the word (max. 32 letters) using traditional text input, and press **Save**. The word is added to the dictionary. When the dictionary becomes full, a new word replaces the oldest added word.

- To remove the ? and clear characters one by one from the word, press .


TIPS ON USING PREDICTIVE TEXT INPUT

- To erase a character, press . Press and hold  to clear more than one character.
- To change between the different character cases **Abc**, **abc**, and **ABC**, press . Note that if you press  quickly twice the predictive text input is turned off.
- To insert a number in letter mode, press and hold the desired number key. Or press  and select Insert number, key in the numbers you want, and press **OK**.


To switch between letter and number mode, press and hold .

- The most common punctuation marks are available under . Press  and then  repeatedly to reach the desired punctuation mark. Press and hold  to open a list of special characters. Use the scroll key to scroll through the list and press **OK** to select a character. Or press  and select Insert symbol.



Tip: The predictive text input will try to guess which commonly used punctuation mark (.,?!') is needed. The order and availability of the punctuation marks depend on the language of the dictionary.

- Press  repeatedly to view the matching words the dictionary has found one by one.


You can also press , select Predictive text and select:

- **Matches** - to view a list of words that correspond to your key presses. Scroll to the desired word and press the .
- **Insert word** - to add a word (max. 32 letters) to the dictionary by using traditional text input. When the dictionary becomes full, a new word replaces the oldest added word.
- **Edit word** - to open a view where you can edit the word, available only if the word is active (underlined).


Write compound words

Write the first half of a compound word and confirm it by pressing . Write the last part of the compound word and complete the compound word by pressing  to add a space.

Turn off predictive text

Press  and select *Predictive text* → *Off* to turn predictive text input off for all editors in the phone.









Editing options


When you press , the following options appear (depending on the editing mode and situation you are in):



- *Predictive text* (predictive text input), *Alpha mode* (traditional text input), *Number mode*.
- *Cut*, *Copy* - available only if text has been selected first.
- *Paste* - available only when text has been either cut or copied to the clipboard.
- *Insert number*, *Insert symbol*, and
- *Writing language* - changes the input language for all editors in the phone. See "Phone settings" on page 29.

COPY TEXT

If you want to copy text to the clipboard, the following are the easiest methods:

- 1 To select letters and words, press and hold . At the same time, press  or . As the selection moves, text is highlighted.
To select lines of text, press and hold . At the same time press  or .
- 2 To end the selection, stop pressing the scroll key.
- 3 To copy the text to clipboard, while still holding , press **Copy**.
Or, release  and then press it once to open a list of editing commands, for example, *Copy* or *Cut*.

If you want to remove the selected text from the document, press .

- 4 To insert the text into a document, press and hold  and press **Paste**.
Or, press  once and select *Paste*.

• CREATE AND SEND NEW MESSAGES

Note: When sending messages, your phone may display the words **Message Sent**. This is an indication that the message has been sent by your phone to the message center programmed into your phone. This is not an indication that the message has been received at the intended destination. For more details about the messaging service, check with your service provider.




You can start to create a message in two ways:

- By selecting *New message*→ *Create*→ *text message*, *Multimedia message*, or *E-mail* in the Messaging main view, or
- Start to create a message from an application that has the option *Send*. In this case the file that was selected (such as an image or text) is added to the message.




Write and send text messages

Options in the picture message editor are: *Send*, *Remove picture*, *Add recipient*, *Delete*, *Insert*, *Message details*, *Help*, and *Exit*.

- 1 Select *New message*. A list of message options opens.
- 2 Select *Create*→ *text message*. The editor opens with the cursor in the *To:* field. Press  to select recipient(s) from the Contacts directory or write the phone number of the recipient. Press  to add a semicolon (;) to separate each recipient. Press  to move to the message field.
- 3 Write the message.

Note: Your phone supports sending of multiple text messages at the same time, therefore, the normal 160 characters limit for one text message can be exceeded. If your text exceeds 160 characters, it will be sent in two or more messages and message sending may cost you more.

In the navigation bar, you can see the message length indicator counting backwards from 160. For example, 10 (2) means that you can still add 10 characters for the text to be sent as two messages.

- 4 To send the message, select **Options**→ *Send* or press .

SEND SMART MESSAGES

Options in the text message editor are: *Send, Add recipient, Insert, Delete, Message details, Sending options, Help, and Exit.*

Smart messages are special text messages that can contain data. You can send smart messages such as:

- picture messages,
- business cards containing contact information in generic (vCard) format,
- Calendar notes (vCalendar format).

For more information, see "Send contact information" on page 53, "Send calendar entries" on page 109, and "Send bookmarks" on page 122.

Tip: You can also receive ringing tones, operator logos, or settings from service providers.

CREATE AND SEND PICTURE MESSAGES

Options in the picture message editor are: *Send, Add recipient, Insert, Remove picture, Delete, Message details, Help, and Exit.*

Your phone allows you to send and receive picture messages. Picture messages are text messages that contain small black-and-white graphics. There are several default pictures available in the *Picture msgs.* folder in **Images**.


Note: This function can be used only if it is supported by your service provider. Only phones that offer picture message features can receive and display picture messages.

To send a picture message:

- 1 There are two possibilities, either:
 - Go to *Images*→ *Picture msgs.* and select a picture to be sent. Select **Options**→ *Send*, or
 - Select **Messaging**→ *New message*→ *Create*→ *Text message* and select *Insert*→ *Picture*.



- 2 Enter recipient information and add text.

- 3 Select **Options**→ *Send* or press .

Note: Each picture message is made up of several text messages. Therefore, sending one picture message may cost more than sending one text message.

Multimedia messages

A multimedia message can contain text, images and either video or sound clips.

Note: This function can be used only if it is supported by your service provider. Only devices that offer multimedia message or e-mail features can receive and display multimedia messages. Devices that do not have these features may receive details of a link to a web page.

SETTINGS NEEDED FOR MULTIMEDIA MESSAGING

Options in the multimedia message editor are: *Send*, *Add recipient*, *Insert*, *Preview message*, *Objects*, *Remove*, *Delete*, *Message details*, *Sending options*, *Help*, and *Exit*.

You may receive the settings as a smart message from your service provider. See "Receive smart messages" on page 85.

For availability of and subscription to data services, please contact your service provider.

- 1 Go to **Settings**→ **Connection settings**→ **Access points** and define the settings for a multimedia messaging access point:

Connection name - Give a descriptive name for the connection.

Session mode - Select a data connection type: *GSM data*, *High speed GSM*, or *GPRS*.

Gateway IP address - enter the address.



Example: Domain names such as **www.nokia.ca** can be translated into IP addresses like **192.100.124.195**.

Homepage - enter the address of the multimedia messaging center.

- If you selected *GSM data* or *High speed GSM*, fill in: **Dial-up number** - a phone number for the data call.
- If you selected *GPRS*, fill in: **Access point name** - the name given to you by your service provider.

For further information on different data connections, see also "Connection settings" on page 33.

- 2 Go to **Messaging**→ **Options**→ **Settings**→ **Multimedia message**. Open **Preferred connection** and select the access point you created to be used as the preferred connection. See also "Settings for multimedia messages" on page 96.

SET UP THE MESSAGING STORE






The messaging store defines whether the phone's memory or the memory card are used as the default. To define the messaging store:

Messaging→ **Options**→ **Settings**→ **Messaging store** and select either the phone's memory or the memory card, if one is used.

CREATE MULTIMEDIA MESSAGES

Note: When you are sending a multimedia message to any phone other than the Nokia 3650, Nokia 3600 or Nokia 7650, it is recommended to use a smaller image size and a sound clip that is no longer than 15 seconds.


The default setting is *Image size: Small*. If you want to check the image size setting, go to **Messaging**→**Options**→**Settings**→**Multimedia message** or select **Options**→**Sending options** when you are creating a multimedia message. When you are sending a multimedia message to an e-mail address or another Nokia 3650, Nokia 3600 or Nokia 7650, select **Options**→**Sending Options**→**Image size**→**Large** when you are creating a multimedia message.

- 1 In Messaging, select **New message**→**Create**:→**Multimedia message** and press .
- 2 Press  to select the recipient(s) from the Contacts directory or write the phone number or e-mail address of the recipient in the **To:** field. Add a semicolon (;) to separate each recipient. Press  to move to the next field.
- 3 You can add the different objects of the multimedia message in any order you want.
 - To add an image, select **Options**→**Insert**→**Image** or **New image**.
 - To add a sound, select **Options**→**Insert**→**Sound clip** or **New sound clip**. When sound has been added, the  icon is shown in the navigation bar.
 - To add video, select **Options**→**Insert**→**Video clip**.
 - To write text, press .
 - If you select **Insert**→**Image**, **Sound clip**, **Video clip**, or **Template**, a list of items opens. Scroll to the item you wish to add and press **Select**.

Note: If you chose *Image*, first you need to select whether the image is stored in the phone's memory or the memory card, if one is used.

- If you select **Insert**→**New image**, Camera opens and you can take a new picture. Press **Remove** to remove the picture and take another instead.
- If you select **Insert**→**New sound clip**, Recorder opens and you can record a new sound. The new photo or sound is automatically saved and a copy is inserted in the message.


Note: A multimedia message can contain only one photo and one sound or video clip.


- 4 To send the message, select **Options**→ *Send* or press .

PREVIEW A MULTIMEDIA MESSAGE

To see what the multimedia message will look like, select **Options**→ *Preview message*.

REMOVE AN OBJECT FROM A MULTIMEDIA MESSAGE

To remove a multimedia object, select **Options**→ *Remove*→ *Image Video clip* or *Sound clip*. Press  to remove text.

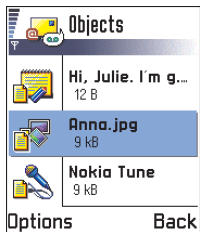

WORK WITH DIFFERENT MEDIA OBJECTS

To see all the different media objects included in a multimedia message, open a multimedia message and select **Options**→ *Objects* to open the Objects view.

In the Objects view, you can change the order of the different objects, delete objects, or open an object in a corresponding application.

Options in the Objects view are: *Open, Insert, Place image first | Place text first, Remove, Help, and Exit*.

E-mail

SETTINGS NEEDED FOR E-MAIL

Before you can send, receive, retrieve, reply to, and forward e-mail, you must:



- Configure an Internet Access Point (IAP) correctly. See "Connection settings" on page 33.
- Define your e-mail settings correctly. See "Settings for e-mail" on page 97.


Note: Follow the instructions given by your remote mailbox and Internet Service Provider.

WRITE AND SEND E-MAIL MESSAGES

Options in the e-mail editor are: *Send, Add recipient, Insert, Attachments, Delete, Message details, Sending options, Help, and Exit*.

- 1 Select *New message*→ *Create*:→ *E-mail*. The editor opens.


- 2 Press  to select the recipient(s) from the Contacts directory or write the e-mail address of the recipient in the *To:* field. Add a semicolon (;) to separate each recipient. If you want to send a copy of your e-mail to someone, write the address in the *Cc:* field. Press  to move to the next field.
- 3 Write the message. If you want to add an attachment to the e-mail, select **Options**→ *Insert*→ *Image*, *Sound clip*, *Video clip*, or *Note*.

 will appear in the navigation bar to indicate that the e-mail has an attachment. *Template* adds pre-written text to the e-mail.

You can also add an attachment to an e-mail by selecting **Options**→ *Attachments* in an open e-mail. The Attachments view opens where you can add, view, and remove attachments.

Note: If you choose *Image*, first you need to select whether the image is stored in the phone's memory or the memory card, if one is used.

- 4 To remove an attachment, scroll to the attachment and select **Options**→ *Remove*.


- 5 To send the e-mail, select **Options**→ *Send* or press .

Note: E-mail messages are automatically placed in Outbox before sending. In case something goes wrong while the phone is sending the e-mail, the e-mail is left to Outbox with the status *Failed*.

Tip: If you want to send other files than photos, sounds, and notes as attachments, open the appropriate application and select the option *Send*→ *Via e-mail*, if available.

ATTACHMENT VIEW – ADD AND REMOVE ATTACHMENTS

To add an attachment to an e-mail, select **Options**→ *Attachments* in an open e-mail. The Attachments view opens where you can add, view, and remove attachments.

- To add an attachment, select **Options**→ *Insert*→ *Image*, *Sound clip*, *Video clip*, or *Note*. A list of items opens. Scroll to the one you want to add and press **OK**.  will appear in the navigation bar to indicate that the e-mail has an attachment.


Note: If you chose *Image*, first you need to select whether the image is stored in the phone's memory or the memory card, if one is used.

- To remove an attachment, scroll to the attachment and select **Options**→ *Remove*.

• INBOX - RECEIVE MESSAGES



Options in Inbox are: *Open*, *Create message*, *Delete*, *Message details*, *Move to folder*, *Move to phone memory* (shown if you have defined the memory card as the messaging store), *Move to memory card* (shown if you have defined the phone's memory as the messaging store), *Mark/Unmark*, *Help*, and *Exit*.

Messages and data can be received via text message or multimedia service, via an infrared, or Bluetooth connection. When there are unread messages in Inbox, the icon changes to .

In Inbox, unread messages appear in bold. The message icons tell you what kind of a message it is. Here are some of the icons that you may see:



for an unread text message,



for an unread smart message,



for an unread multimedia message,



for an unread service message,



for data received via infrared,






for data received via Bluetooth, and



for an unknown message type.


View messages in Inbox

To open a message, scroll to the message and press .

Use the scroll key to move up and down in the message. Press  or  to move to the previous or next message in the folder.


Options in different message viewers

The available options depend on the type of message you have opened for viewing:

- *Save picture* - saves the picture to **Images**→ *Picture msgs.*
- *Reply* - copies the address of the sender to the *To:* field. Select *Reply*→ *To all* - to copy the address of the sender and Cc. field recipients to the new message.
- *Forward* - copies the message contents to an editor.
- *Call* - call by pressing .
- *View image* - allows you to view and save the image.
- *Play sound clip* - allows you to listen to the sound in the message.
- *Objects* - shows you a list of all the different multimedia objects in a multimedia message.
- *Attachments* - shows you a list of files sent as e-mail attachments.
- *Message details* - shows detailed information about a message.
- *Move to folder / Copy to folder* - allows you to move or copy message(s) to My folders, Inbox, or other folders you have created. See "Moving items to a folder" on page 16.
- *Add to Contacts* - allows you to copy the phone number or e-mail address of the message sender to the Contacts directory. Choose whether you want to create a new contact card or add the information to an existing contact card.
- *Find* - Searches the message for phone numbers, e-mail addresses, and Internet addresses. After the search, you can make a call or send a message to the found number or e-mail address, or save the data to Contacts or as a bookmark.

View multimedia messages in Inbox

You can recognize multimedia messages by their icon .


To open a multimedia message, scroll to it and press . You can see an image, read a message and hear a sound, simultaneously.

If sound is playing, press  or  to increase or decrease the sound volume. If you want to mute the sound, press **Stop**.

MULTIMEDIA MESSAGE OBJECTS

Options in the Objects view are: *Open, Save, Send, Call, and Exit.*

To see what kinds of media objects have been included in the multimedia message, open the message and select **Options**→ *Objects*. In the Objects view you can view files that have been included in the multimedia message. You can choose to save the file in your phone or to send it, for example, via infrared to another device.




To open a file, scroll to it and press the .

Important: Multimedia message objects may contain viruses or otherwise be harmful to your phone or PC. Do not open any attachment if you are not sure of the trustworthiness of the sender. For more information, see "Certif. management" on page 43.



Example: You can open a vCard file and save the contact information in the file to Contacts.



SOUNDS IN A MULTIMEDIA MESSAGE

Sound objects in a multimedia message are indicated by  indicator in the navigation bar. Sounds are by default played through the loudspeaker. To stop the sound, press **Stop** while sound is playing. You can change the volume level by pressing  or .

If you want to listen to a sound again after all the objects have been shown and the playing of the sound has stopped, select **Options**→ *Play sound clip*.

Receive smart messages

Tip: If you receive a vCard file that has a picture attached, the picture will be saved to Contacts as well.

Your phone can receive many kinds of smart messages, text messages that contain data (also called Over-The-Air (OTA) messages). To open a received smart message, open Inbox, scroll to the smart message () and press .

- *Picture message* - to save the picture in the *Picture msgs.* folder in **Images** for later use, select **Options**→ *Save picture*.
- *Business card* - to save the contact information, select **Options**→ *Save business card*.

Note: If certificates or sound files are attached to business cards, they will not be saved.

- *Ringing tone* - to save the ringing tone to Composer, select **Options**→ *Save*.
- *Operator logo* - to save the logo, select **Options**→ *Save*. The operator logo can now be seen in standby mode instead of the service provider's own identification.
- *Calendar entry* - to save the invitation to Calendar, select **Options**→ *Save to Calendar*.
- *WAP message* - to save the bookmark, select **Options**→ *Save to bookmarks*. The bookmark is added to the Bookmarks list in browser service.

If the message contains both browser access point settings and bookmarks, to save the data select **Options**→ *Save all*. Or, select **Options**→ *View details* to view the bookmark and access point information separately. If you do not want to save all data, select a setting or bookmark, open the details and select **Options**→ *Save to Settings* or *Save to bookmarks* depending on what you are viewing.

Tip: To later change the default access point settings for browser service or multimedia messaging, go to **Services**→ **Options**→ *Settings*→ *Default access point* or **Messaging**→ **Options**→ *Settings*→ *Multimedia message*→ *Preferred connection*.

- *E-mail notification* - Tells you how many new e-mails you have in your remote mailbox. An extended notification may list more detailed information such as subject, sender, attachments, and so on.
- In addition, you can receive a text message service number, voice mailbox number, profile settings for remote synchronization, access point settings for the browser, multimedia messaging or e-mail, access point login script settings, or e-mail settings.

To save the settings, select **Options**→ *Save to SMS sett.*, *Save to Voice mail*, *Save to settings* or *Save to e-mail sett.*

Service messages

Options when viewing service message are: *Download message*, *Move to folder*, *Message details*, *Help*, and *Exit*.

You can order service messages (pushed messages) from service providers. Service messages are notifications of, for example, news headlines and they may contain a text message or address of a browser service. For availability and subscription, contact your service provider.

Service providers can update an existing service message every time a new service message is received. Messages can be updated even if you have moved them to another folder than Inbox. When service messages expire, they are deleted automatically.

VIEWING SERVICE MESSAGES IN INBOX

- 1 In Inbox, scroll to a service message (🌐) and press 📄.
- 2 To download or view the service, press **Download message**. The note *Downloading message* is displayed. The phone starts to make a data connection, if needed.
- 3 Press **Back** to return to Inbox.

VIEWING SERVICE MESSAGES IN THE BROWSER

When you are browsing, select **Options**→ *Read service msgs.* to download and view new service messages.

• MY FOLDERS

Options in My folders are: *Open*, *New message*, *Delete*, *Message details*, *Move to folder*, *New folder*, *Rename*, *Help*, and *Exit*.



In My folders you can organize your messages into folders, create new folders, and rename and delete folders. Select **Options**→ *Move to folder*, *New folder*, or *Rename folder*. For more information, see "Move items to a folder" on page 16.

Templates folder

You can use text templates to avoid rewriting messages that you send often. To create a new template, select **Options**→ *New template*.

● REMOTE MAILBOX



When you open this folder, you can connect to your remote mailbox:

- to retrieve new e-mail headings or messages, or
- view your previously retrieved e-mail headings or messages offline.


Tip: The Settings wizard program included in the PC Suite for Nokia 3650 or PC Suite for Nokia 3600 can help you configure access point and mailbox settings. You can also copy existing settings, for example, from your computer to your phone. See the CD-ROM supplied in the sales package.

If you select *New message* → *Create* → *E-mail* or *Mailbox* in the Messaging main view and you have not set up your e-mail account, you will be prompted to do so. See "Settings needed for e-mail" on page 81.

When you create a new mailbox, the name you give to the mailbox automatically replaces *Mailbox* in the Messaging main view. You can have several mailboxes (max. six).

Open the mailbox

When you open the mailbox, you can choose whether you want to view the previously retrieved e-mail messages and e-mail headings offline or connect to the e-mail server.

When you scroll to your mailbox and press , the phone asks you if you want to *Connect to mailbox*? Select *Yes* to connect to your mailbox or *No* to view previously retrieved e-mail messages offline.

Another way to start a connection is to select **Options** → *Connect*.

VIEW E-MAIL MESSAGES WHEN ONLINE

When you are online, you are continuously connected to a remote mailbox via a data call or a packet data connection. See "Data connection indicators" on page 12, "GSM data calls" on page 34, and "Packet data (General Packet Radio Service, GPRS)" on page 34.

Note: If you are using the POP3 protocol, e-mail messages are not updated automatically in online mode. To see the newest e-mail messages, you need to disconnect and then make a new connection to your mailbox.

Options when viewing e-mail headings are: *Open, New message, Connect / Disconnect, Retrieve, Delete, Message details, Copy, Mark/Unmark, Help, and Exit.*

VIEW E-MAIL MESSAGES WHEN OFFLINE



When you view e-mail messages offline, your phone is not connected to the remote mailbox. This mode may help you to save on connection costs. See "Call costs (system service)" on page 26 for further information.





To view e-mail messages offline, you must first retrieve e-mail messages from your mailbox, see the next section. After you have retrieved the e-mail messages to your phone, to end the data connection, select **Options**→ *Disconnect*.

Now you can continue reading the retrieved e-mail headings and/or the retrieved e-mail messages offline. You can write new e-mail messages, reply to the retrieved e-mail messages, and forward e-mail messages. You can order the e-mail messages to be sent the next time you connect to the mailbox. When you open *Mailbox* the next time and you want to view and read the e-mail messages offline, answer **No** to the *Connect to mailbox?* query.

Retrieve e-mail messages from the mailbox

If you are offline, select **Options**→ *Connect* to start a connection to a remote mailbox.

The remote mailbox view is similar to the Inbox folder in Messaging. You can move up and down in the list by pressing  or . The following icons are used to show the status of the e-mail:

-  - new e-mail (offline or online mode). The content has not been retrieved from the mailbox to your phone (the arrow in the icon is pointing outwards).
-  - new e-mail, the content has been retrieved from the mailbox (arrow pointing inwards).
-  - for e-mail messages that have been read.
-  - for e-mail headings that have been read and the message content has been deleted from the phone.


- 1 When you have an open connection to a remote mailbox, select **Options**→ *Retrieve*→

- *New* - to retrieve all new e-mail messages to your phone.
- *Selected* - to retrieve only the e-mail messages that have been selected. Use the *Mark/Unmark*→ *Mark/Unmark* commands to select messages one by one.

- *All* - to retrieve all messages from the mailbox.

To cancel retrieving, press **Cancel**.


- 2 After you have retrieved the e-mail messages, you can continue viewing them online. Select **Options**→ *Disconnect* to close the connection and to view the e-mail messages offline.

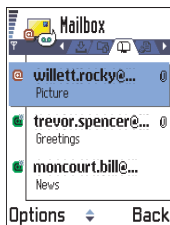

COPY E-MAIL MESSAGES TO ANOTHER FOLDER

If you want to copy an e-mail from the remote mailbox to a folder under My folders, select **Options**→ *Copy*. Select a folder from the list and press **OK**.

Open e-mail messages

When you are viewing e-mail messages either in online or offline mode, scroll to the e-mail you want to view and press  to open it. If the e-mail message has not been retrieved (arrow in the icon is pointing outwards) and you are offline and select *Open*, you will be asked if you want to retrieve this message from the mailbox. Note that the data connection is left open after the e-mail has been retrieved. Select **Options**→ *Disconnect* to end the data connection.


Options when viewing an e-mail message are: *Reply, Forward, Delete, Attachments, Message details, Move to folder, Add to Contacts, Find, Help, and Exit*.

Disconnect from mailbox

When you are online, select **Options**→ *Disconnect* to end the data call or GPRS connection to the remote mailbox. See also "Data connection indicators" on page 12.

View e-mail attachments

Options in the Attachments view are: *Open, Retrieve, Save, Send, Delete, Help, and Exit.*

Open a message that has the attachment indicator  and select **Options**→*Attachments* to open the Attachments view. In the Attachments view, you can retrieve, open, or save attachments. You can also send attachments via infrared or Bluetooth.

Important: E-mail attachments may contain viruses or otherwise be harmful to your phone or PC. Do not open any attachment if you are not sure of the trustworthiness of the sender. For more information, see "Certif. management" on page 43.


Retrieve attachments to the phone

If the attachment has a dimmed indicator, it has not been retrieved to the phone. To retrieve the attachment, scroll to it and select **Options**→*Retrieve*.

Note: If your mailbox uses the IMAP 4 protocol, you can decide whether to retrieve e-mail headings only, messages only, or messages and attachments. With the POP3 protocol, the options are e-mail headings only or messages and attachments.

Tip: To save memory, you can remove attachments from an e-mail while retaining them on the e-mail server. Select **Options**→*Delete* in the Attachments view.

Open an attachment

- 1 In the Attachments view, scroll to an attachment and press  to open it.
 - If you are online, the attachment is retrieved directly from the server and opened in the corresponding application.
 - If you are offline, the phone asks if you want to retrieve the attachment to the phone. If you answer Yes, a connection to the remote mailbox is started.
- 2 Press **Back** to return to the e-mail viewer.

Tip: Supported image formats are listed on page 55. To see a list of other file formats supported by the Nokia 3600 series, see the product information at www.nokia.ca.

SAVE ATTACHMENTS SEPARATELY

To save an attachment, select **Options**→ *Save* in the Attachments view. The attachment is saved in the corresponding application. For example, sounds can be saved in Recorder and text files (.TXT) in Notes.

Attachments such as images can be saved on a memory card, if one is used.

Delete e-mail messages


To delete an e-mail from the phone while still retaining it in the remote mailbox, select **Options**→ *Delete*→ *Phone only*.

Note: The phone mirrors the e-mail headings in the remote mailbox. So, although you delete the message content, the e-mail heading stays in your phone. If you want to remove the heading as well, you have to first delete the e-mail message from your remote mailbox and then make a connection from your phone to the remote mailbox again to update the status.

To delete an e-mail from both the phone as well as from the remote mailbox, select **Options**→ *Delete*→ *Phone and server*.

Note: If you are offline, the e-mail will be deleted first from your phone. During the next connection to the remote mailbox, it will be automatically deleted from the remote mailbox. If you are using the POP3 protocol, messages marked to be deleted are removed only after you have closed the connection to the remote mailbox.

UNDELETE E-MAIL MESSAGES WHEN OFFLINE

To cancel deleting an e-mail from both the phone and server, scroll to an e-mail that has been marked to be deleted during the next connection () and select **Options**→ *Undelete*.

• OUTBOX

The Outbox is a temporary storage place for messages waiting to be sent.



Status of the messages in Outbox

- *Sending* - A connection is being made and the message is being sent.

- *Waiting/Queued* - For example, if there are two similar types of messages in Outbox, one of them is waiting until the first one is sent.
- *Resend at (time)* - Sending has failed. The phone will try to send the message again after a time-out period. Press *Send* if you want to restart the sending immediately.
- *Deferred* - You can set documents to be 'on hold' while they are in Outbox. Scroll to a message that is being sent and select **Options**→ *Defer sending*.
- *Failed* - The maximum number of sending attempts has been reached. Sending has failed. If you were trying to send a text message, open the message and check that the Sending settings are correct.



Example: Messages are placed in the Outbox, for example, when your phone is outside the system coverage area. You can also schedule e-mail messages to be sent the next time you connect to your remote mailbox.

• VIEW MESSAGES ON A SIM CARD

Before you can view SIM messages, you need to copy them to a folder in your phone.

- 1 In the Messaging main view, select **Options**→ *SIM messages*.
- 2 Select **Options**→ *Mark/Unmark*→ *Mark* or *Mark all* to mark messages.
- 3 Select **Options**→ *Copy*. A list of folders opens.
- 4 Select a folder and press **OK**. Go to the folder to view the messages.




• CELL BROADCAST (SYSTEM SERVICE)



Options in Cell broadcast are: *Open, Subscribe / Unsubscribe, Hotmark / Unhotmark, Topic, Settings, Help, and Exit*.

In the Messaging main view, select **Options**→ *Cell broadcast*.

You can receive messages on various topics, such as weather or traffic conditions from your service provider. For available topics and relevant topic numbers, contact your service provider. In the main view you can see:

- the status of the topic:  - for new, subscribed messages and  - for new, unsubscribed messages.
- the topic number, topic name, and whether it has been flagged () for follow-up. You will be notified when messages belonging to a flagged topic have arrived.

Note: A packet data (GPRS) connection may prevent cell broadcast reception. Contact your service provider for the correct GPRS settings. For further information on the GPRS settings, see "Packet data (General Packet Radio Service, GPRS)" on page 34.

• SERVICE COMMAND EDITOR




In the Messaging main view, select **Options**→ *Service command*.

You can send service requests, such as activation commands for system services (also known as USSD commands), to your service provider. For more information, contact your service provider. To send a request:

- in standby mode or when you have an active call, key in the command number(s) and press **Send**, or
- if you need to enter letters as well as numbers, select **Messaging**→ **Options**→ *Service command*.

• MESSAGING SETTINGS

The Messaging settings are divided into groups according to the different message types. Scroll to the settings you want to edit and press .

Settings for text messages

Options when editing text message center settings are: *New msg. center, Edit, Delete, Help, and Exit.*

Go to **Messaging** and select **Options**→ *Settings*→ *Text message* to open the following list of settings:




- *Message centers* - Lists all the text message service centers that have been defined. See "Add a new text message center" on page 95.


- *Msg. center in use* (Message center in use)– Defines which message center is used for delivering text messages and smart messages such as picture messages.
- *Receive report* (delivery report)– When this system service is set to *Yes*, the status of the sent message (*Pending, Failed, Delivered*) is shown in the Log.
- *Message validity*– If the recipient of a message cannot be reached within the validity period, the message is removed from the text message service center. Note that the system must support this feature. *Maximum time* is the maximum amount of time allowed by the system.
- *Message sent as* – The options are *Text, Fax, Paging, and E-mail*. For further information, contact your service provider.

Note: Change this option only if you are sure that your service center is able to convert text messages into these other formats.

- *Preferred connection* – You can send text messages via the normal GSM system or via GPRS, if supported by the system. See "Packet data (General Packet Radio Service, GPRS)" on page 34.
- *Reply via same ctr.* (system service) – By setting this option to *Yes*, if the recipient replies to your message, the return message is sent using the same text message service center number. Note that this may not work between all operators.

ADD A NEW TEXT MESSAGE CENTER

- 1 Open *Message centers* and select **Options**→ *New msg. center*.
- 2 Press , write a name for the service center and press **OK**.
- 3 Press , press  and write the number of the text message service center (**Must be defined**). Press **OK**. You need the message center number to send text and picture messages. You can get the number from your service provider.

To use the new settings, go back to the settings view and scroll to *Msg. center in use*. Press  and select the new service center.

Settings for multimedia messages

Go to **Messaging** and select **Options**→ *Settings*→ *Multimedia message* to open the following list of settings:

- **Preferred connection (Must be defined)** – Select which access point is used as the preferred connection for the multimedia message center. See “Settings for multimedia messages” on page 96.

Note: If you receive multimedia message settings in a smart message and save them, the received settings are automatically used for the Preferred connection. See “Receive smart messages” on page 85.

- **Secondary conn.** – Select which access point is used as the secondary connection for the multimedia message center.

Note: Both *Preferred connection* and *Secondary conn.* must have the same *Homepage* setting pointing to the same multimedia service center. Only the data connection is different.



Example: If your preferred connection uses a packet data connection, you may want to use high speed data or data call for the secondary connection. This way you are able to send and receive multimedia messages even when you are not in a system that supports packet data. For availability of and subscription to data services, please contact your service provider. See “General information about data connections and access points” on page 33.

- **Multimedia reception** – Select:
Only in home net. – if you want to receive multimedia messages only when you are in your home system. When you are outside your home system, multimedia message reception is turned off.
Always on – if you want to receive multimedia messages always.
Off – if you do not want to receive multimedia messages or advertisements at all.

Important: When you are outside your home system, sending and receiving multimedia messages may cost more. If the settings *Only in home net.* or *Always on* have been selected, your phone can make an active data call or GPRS connection without your knowledge.

- *On receiving msg.* - Select:

Retr. immediately - if you want the phone to retrieve multimedia messages instantly. If there are messages with Deferred status, they will be retrieved as well.

Defer retrieval - if you want the multimedia messaging center to save the message to be retrieved later. To retrieve the message later, set *On receiving msg.* to *Retr. immediately*.

Reject message - if you want to reject multimedia messages. The multimedia messaging center will delete the messages.

- *Allow anon. messages* - Select *No*, if you want to reject messages coming from an anonymous sender.
- *Receive adverts* - Define whether you want to receive multimedia message advertisements or not.
- *Reports* - Set to *Yes*, if you want the status of the sent message (*Pending*, *Failed*, *Delivered*) to be shown in the Log. When set to *No*, only the status *Delivered* is shown in the Log.
- *Deny report sending* - Choose *Yes*, if you do not want your phone to send delivery reports of received multimedia messages.
- *Message validity* - If the recipient of a message cannot be reached within the validity period, the message is removed from the multimedia messaging center. Note that the system must support this feature. *Maximum time* is the maximum amount of time allowed by the system.
- *Image size* - Define the size of the image in a multimedia message. The options are: *Small* (max. of 160 x 120 pixels) and *Large* (max. 640 x 480 pixels).
- *Speaker* - Choose *Loudspeaker* or *Normal*, if you want the sounds in a multimedia message to be played through the loudspeaker or the earpiece. For more information, see "Loudspeaker" on page 17.

Settings for e-mail

Go to **Messaging** and select **Options**→ *Settings*→ *E-mail*.

Options when editing e-mail settings are: *Editing options*, *New mailbox*, *Delete*, *Call*, and *Exit*.

Open *Mailbox in use* to select which mailbox you want to use.

SETTINGS FOR MAILBOXES

Select *Mailboxes* to open a list of mailboxes that have been defined. If no mailboxes have been defined, you will be prompted to do so. The following list of settings is shown:

- *Mailbox name* - Write a descriptive name for the mailbox.
- *Access point in use* (**Must be defined**) - The Internet Access Point (IAP) used for the mailbox. Choose an IAP from the list. For more information on how to create an IAP, see "Connection settings" on page 33.
- *Mymail address* (**Must be defined**) - Write the e-mail address given to you by your service provider. The address must contain the @ character. Replies to your messages are sent to this address.
- *Outgoing mail server*: (**Must be defined**) - Write the IP address or host name of the computer that sends your e-mail.
- *Send message* - Define how e-mail is sent from your phone.
Immediately - A connection to the mailbox is started immediately after you have selected *Send*. *During next conn.* - e-mail is sent when you connect to your remote mailbox the next time.
- *Send copy to self* - Select Yes to save a copy of the e-mail to your remote mailbox and to the address defined in *Mymail address*.
- *Include signature* - Select Yes if you want to attach a signature to your e-mail messages and to start to write or edit a signature text.
- *User name*: - Write your user name, given to you by your service provider.
- *Password*: - Write your password. If you leave this field blank, you will be prompted for the password when you try to connect to your remote mailbox.
- *Incoming mail server*: (**Must be defined**) - The IP address or host name of the computer that receives your e-mail.
- *Mailbox type*: - Defines the e-mail protocol your remote mailbox service provider recommends. The options are *POP3* and *IMAP4*.

Note: This setting can be selected only once and cannot be changed if you have saved or exited from the mailbox settings.

- *Security* - Used with the POP3, IMAP4, and SMTP protocols to secure the connection to the remote mailbox.
- *APOPsecure login* - Used with the POP3 protocol to encrypt the sending of passwords to the remote e-mail server. Not shown if IMAP4 is selected for *Mailbox type*.
- *Retrieve attachment* (not shown if the e-mail protocol is set to POP3) - To retrieve e-mail with or without attachments.
- *Retrieve headers* - To limit the number of e-mail headers you want to retrieve to your phone. The options are *All* and *User defined*. Used with IMAP4 protocol only.

Settings for service messages

When you go to **Messaging** and select **Options**→ *Settings*→ *Service message*, the following list of settings opens:

- *Service messages* - Choose whether or not you want to receive service messages.
- *Authentic. needed* - Choose if you want to receive service messages only from authorized sources.

Settings for Cell broadcast

Check with your service provider to see if Cell broadcast is available and what topics and numbers are available. Go to **Messaging**→ **Options**→ *Settings*→ *Cell broadcast* to change the settings: *Reception* - *On* or *Off*.

- *Language* - *All* allows you to receive cell broadcast messages in every possible language. *Selected* allows you to choose in which languages you wish to receive cell broadcast messages. If the language you want could not be found in the list, select *Other*.
- *Topic detection* - If you receive a message that does not belong to any of the existing topics, *Topic detection*→ *On* allows you to save the topic number automatically. The topic number is saved to the topic list and shown without a name. Choose *Off* if you do not want to save new topic numbers automatically.

Settings for the Sent folder

Go to **Messaging** and select **Options**→ *Settings*→ *Sent folder* to open the following list of settings:

- *Save sent messages* - Choose if you want to save a copy of every text message, multimedia message, or e-mail that you have sent to the Sent items folder.
- *No. of saved msgs.* - Define how many sent messages will be saved to the Sent items folder at a time. The default limit is 20 messages. When the limit is reached, the oldest message is deleted.
- *Memory in use* - Define memory store. Choices are: phone's memory or memory card, if one is used.

• WIRELESS VILLAGE

You can send and receive messages with Wireless Village. Check with your service provider for availability. Wireless Village is different from SMS or e-mail because you can have a true, two-way conversation with other users. For more information on Wireless Village, see www.nokia.ca.


10 Profiles



Go to **Menu**→ **Profiles**.

In Profiles, you can adjust and customize the phone tones for different events, environments, or caller groups. There are five preset profiles: *Normal*, *Silent*, *Meeting*, *Outdoor*, and *Pager*, which you can customize to meet your needs.

You can see the currently selected profile at the top of the display in standby mode. If the Normal profile is in use, only the current date is shown.

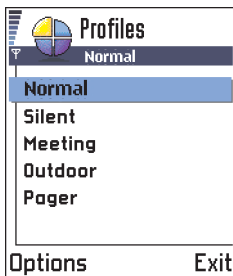

The tones can be default ringing tones, tones created in Composer, tones received in a message, or transferred to your phone via infrared, Bluetooth, or a PC connection and then saved to your phone.


• CHANGE THE PROFILE


- 1 Go to **Menu**→ **Profiles**. A list of profiles opens.
- 2 In the Profiles list, scroll to a profile and select **Options**→ *Activate*.

Shortcut: To change the profile, press **(i)** in standby mode. Scroll to the profile you want to activate and press **OK**.

• CUSTOMIZE PROFILES

- 1 To modify a profile, scroll to the profile in the Profiles list and select **Options**→ *Customize*. A list of profile settings opens.
- 2 Scroll to the setting you want to change and press **ⓘ** to open the choices:

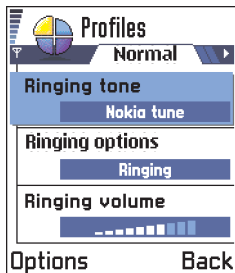

- *Ringtone* - To set the ringing tone for voice calls, choose a ringing tone from the list. When you scroll through the list, you can stop on a tone to listen to it before you make your selection. Press any key to stop the sound. If a memory card is used, tones stored on it have the  icon next to the tone name.

Ringtone tones use shared memory. See "Shared memory" on page 18.

Note: You can change ringing tones in two places: Profiles or Contacts.

See "Add a ringing tone for a contact card or group" on page 52.

- *Ringtone options* - When *Ascending* is selected, the ringing volume starts from level one and increases level by level to the set volume level.
- *Ringtone volume* - To set the volume level for the ringing and message alert tones.
- *Message alert tone* - To set the tone for messages.
- *Vibrating alert* - To set the phone to vibrate at incoming voice calls and messages.
- *Keypad tones* - To set the volume level for keypad tones.
- *Warning tones* - The phone sounds a warning tone, for example, when the battery is running out of power.
- *Alert for* - To set the phone to ring only upon calls from phone numbers that belong to a selected contact group. Phone calls coming from people outside the selected group will have a silent alert. The choices are *All calls* / (list of contact groups, if you have created them). See "Create contact groups" on page 54.
- *Profile name* - You can rename a profile with any name you want. The Normal profile cannot be renamed.


11 Favorites



Go to **Menu**→ **Favorites**.

Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

You can use Favorites to store shortcuts, links to your favorite photos, video clips, notes, Recorder sound files, browser bookmarks, and saved browser pages.

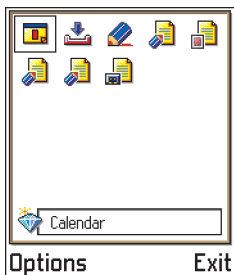

The default shortcuts are:



- opens the Notes editor



- opens the Calendar with the current date selected



- opens the Messaging Inbox

Options in the Favorites main view are: *Open, Edit shortcut name, Delete shortcut, Move, List view / Grid view, Help, and Exit.*


• ADD SHORTCUTS

Shortcuts can be added only from the individual applications. Not all applications have this functionality.

- 1 Open the application and scroll to the item that you want to add as a shortcut to Favorites.
- 2 Select **Options**→ *Add to Favorites* and press **OK**.

Note: A shortcut in Favorites is automatically updated if you move the item it is pointing to, for example, from one folder to another.

• SHORTCUT OPTIONS

- **To open a shortcut**, scroll to the icon and press . The file is opened in the corresponding application.
- **To delete a shortcut**, scroll to the shortcut you want to remove and select **Options**→ *Delete shortcut*. Removing a shortcut does not affect the file it is referring to.
- **To change the shortcut heading**, select **Options**→ *Edit shortcut name*. Write the new name. This change affects only the shortcut, not the file or item the shortcut refers to.

12 Calendar and To-do



Go to **Menu**→ **Calendar**

Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Options in the different calendar views are: *Open, New entry, Week view/Month view, Delete, Go to date, Send, Settings, Help, and Exit.*

In Calendar, you can keep track of your appointments, meetings, birthdays, anniversaries, and other events. You can also set a calendar alarm to remind you of upcoming events.

Calendar uses shared memory. See "Shared memory" on page 18.

• CREATE CALENDAR ENTRIES

1 Select **Options**→ *New entry* and select:

- *Meeting* to remind you of an appointment that has a specific date and time.
- *Memo* to write a general entry for a day.
- *Anniversary* to remind you of birthdays or special dates. Anniversary entries are repeated every year.

| Meeting | |
|------------|---------|
| Subject | Dentist |
| location | |
| Start time | 12:30 |
| Options | Done |

2 Fill in the fields, see the "Calendar entry fields" on page 106. Use the scroll key to move between fields. Press to change between upper and lower case.

3 To save the entry, press **Done**.


Edit calendar entries

Options when editing a calendar entry are: *Delete, Send, Help, and Exit.*

- 1 In the Day view, scroll to the entry and press to open it.
- 2 Edit the entry fields and press **Done**.

- If you are editing a repeated entry, choose how you want the changes to take effect: *All occurrences* - all repeated entries are changed / *This entry only* - only the current entry will be changed.




Delete calendar entries

- In the Day view, scroll to the entry you want to delete and select **Options**→ *Delete* or press . Press **OK** to confirm.
- If you are deleting a repeated entry, choose how you want the change to take effect: *All occurrences* - all repeated entries are deleted / *This entry only* - only the current entry will be deleted.



Example: Your weekly class has been cancelled. You have set the calendar to remind you every week. Choose *This entry only* and the calendar will remind you again next week.

Calendar entry fields

- *Subject / Occasion* - Write a description of the event.
- *Location* - the place of a meeting, optional.
- *Start time, End time, Start date, and End date.*
- *Alarm* - Press  to activate the fields for *Alarm time* and *Alarm date*.
- *Repeat* - Press  to change the entry to be repeating. Shown with  in the Day view.




Example: The repeat function is handy if you have a recurring event, a weekly class, a biweekly meeting, or a daily routine you need to remember.


- *Repeat until* - You can set an ending date for the repeated entry, for example, the ending date of a weekly course you are taking. This option is shown only if you have selected to repeat the event.
- *Synchronization* - If you select *Private*, after synchronization the calendar entry can be seen only by you and it will not be shown to others with online access to view the calendar. This is useful when, for example, you synchronize your calendar on a compatible computer at work. If you select *Public*, the calendar entry is shown to others who have access to view your calendar online. If you select *None*, the calendar entry will not be copied to your PC when you synchronize your calendar.


Calendar views

MONTH VIEW

In the Month view, one row equals one week. The current date is underlined. Dates that have calendar entries are marked with a small triangle at the right bottom corner. There is a frame around the currently selected date.

- To open the Day view, scroll to the date you want to open and press 
- To go to a certain date, select **Options** → *Go to date*. Write the date and press **OK**.

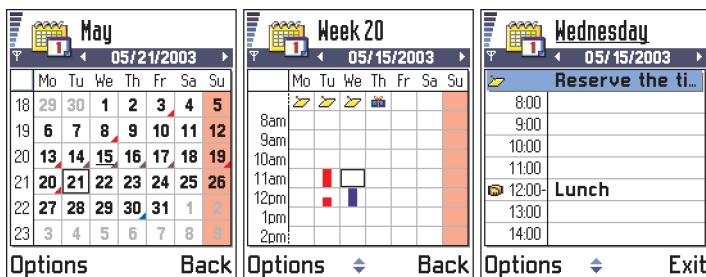

Tip: If you press  in Month, Week, or Day views, the current date is automatically highlighted.

Calendar entry icons
in Day and Week views





Synchronization icons
in Month view



WEEK VIEW




In the Week view, the calendar entries for the selected week are shown in seven day boxes. The current day of the week is underlined. Memos and Anniversaries are placed before 8 o'clock. Meeting entries are marked with colored bars according to starting and ending times.

To view or edit an entry, scroll to the cell that has an entry and press  to open the Day view, then scroll to the entry and press  to open it.

Options in the different calendar views are: *Open, New entry, Week view/Month view, Delete, Go to date, Send, Settings, Help, and Exit.*

DAY VIEW



In the Day view, you can see the calendar entries for the selected day. The entries are grouped according to their starting time. Memos and Anniversaries are placed before 8 o'clock.

- To open an entry for editing, scroll to it and press .
- Press  to go to the next day or press  to go to the previous day.

SETTINGS FOR CALENDAR VIEWS




Select **Options**→ *Settings* and select:

- *Default view* - To select the view that is shown first when you open Calendar.
- *Week starts on* - To change the starting day of the week.
- *Week view title* - To change the title of the Week view to be the week number or the week dates.

Shortcut: To write a calendar entry, press any key ( - ) in any calendar view. A Meeting entry is opened and the characters you keyed in are added to the *Subject* field.

• SET CALENDAR ALARMS

- 1 Create a new Meeting or Anniversary entry, or open a previously created entry.

- 2 Scroll to *Alarm* and press  to open, Select On, press  to open the *Alarm time* and *Alarm date* fields.
- 3 Set the alarm time and date.
- 4 Press **Done**. An alarm indicator  is shown next to the entry in the Day view.

Stop a calendar alarm

The alarm duration is one minute. When the alarm time expires, press **Stop** to end the calendar alarm. If you press any other key, the alarm is set to snooze.

• SEND CALENDAR ENTRIES

In the Day view, scroll to the entry you want to send and select **Options**→**Send**. Then select the method, the choices are: *Via text message*, *Via e-mail* (available only if the correct e-mail settings are in place), *Via Bluetooth*, or *Via infrared*. For further information, see "Messaging" on page 69, "Send and receive data via infrared" on page 140, and "Send data via Bluetooth" on page 136.





• TO-DO

Go to **Menu**→**To-do**.





In To-do you can keep a list of tasks that you need to do.





The To-do list uses shared memory. See "Shared memory" on page 18.

- 1 To start to write a to-do note, press any key ( - ). The editor opens and the cursor blinks after the letters you have keyed in.
- 2 Write the task in the *Subject* field. Press  to add special characters.
 - To set the due date for the task, scroll to the *Due date* field and key in a date.
 - To set a priority for the to-do note, scroll to the *Priority* field and press .
- 3 To save the to-do note, press **Done**.



Note: If you remove all characters and press **Done**, the previously saved note will be deleted.

- To open a to-do note, scroll to it and press .
- To delete a to-do note, scroll to it and select **Options**→ *Delete* or press .
- To mark a to-do note as completed, scroll to it and select **Options**→ *Mark as done*.
- To restore a to-do note, select **Options**→ *Mark as not done*.

| Priority icons | |
|---|----------------|
|  | <i>High</i> |
|  | <i>Low</i> |
| no icon | <i>Normal</i> |
| Status icons | |
|  | task completed |
|  | not completed |

13 Extras



• CALCULATOR

Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Go to **Menu**→ **Extras**→ **Calculator**

Options in Calculator are: *Last result, Memory, Clearscreen, Help, and Exit.*

- 1 Enter the first number of your calculation. Press to erase any mistakes.
- 2 Scroll to a function and press to select it.
Use to add, to subtract, to multiply, or to divide.
- 3 Enter the second number.
- 4 To execute the calculation, scroll to and press .

Note: The Calculator has limited accuracy and rounding errors may occur, especially in long divisions.

- To add a decimal, press .
- Press and hold to clear the result of the previous calculation.
- Use and to view previous calculations and move in the sheet.
- Select to save a number to the memory, indicated by **M**. To retrieve the number from the memory, select .
- To retrieve the result of the last calculation, select **Options**→ *Last result*.

Tip: Press repeatedly to scroll the functions. You can see the selection change between the functions.













• COMPOSER


















Go to **Menu**→ **Extras**→ **Composer**.

Options in the Composer main view are: *Open, New tone, Delete, Mark/Unmark, Rename, Duplicate, Help, and Exit.*

Composer allows you to create your own, customized ringing tones. Note that it is not possible to edit a default ringing tone.

- 1 Select **Options**→ *New tone* to open the editor and to start composing.
 - Use the keys to add notes and rests. See the table on page 113. Or, select **Options**→ *Insert symbol* to open a list of notes and rests. The default duration for a note is 1/4.
 - To listen to the tone, press  or select **Options**→ *Play*. The playback is always started from the beginning of the tone. To stop playing, press **Stop**.
 - To adjust the volume while a tone is playing, press  to increase or press  to decrease it. Or, select **Options**→ *Volume* before you start to play the tone.
 - To adjust the tempo, select **Options**→ *Tempo*. To increase or decrease the tempo gradually, press and hold  or , respectively. Tempo is measured in beats per minute. The maximum is 250 beats, the default tempo for a new tone is 160 beats, and the minimum is 50 beats.
 - To apply different playing styles, select **Options**→ *Style*→ *Legato* - played in a smooth and even manner or *Staccato* - notes are played separately to produce short sharp sounds.
 - To select many notes or rests at the same time, press and hold  and press and hold  or  at the same time.
 - To move note(s) up or down on the staff by a half step, scroll to the note and press  or .
 - For example, press and hold  together with  to produce C#.
- 2 Select **Back** to save.

Options when composing are: *Play, Insert symbol, Style, Tempo, Volume, Help and Exit.*

| Key | Note | Key and function |
|---|------|---|
|  | c |  Shortens the duration of the selected note(s)/rest(s) in steps. |
|  | d |  Lengthens the duration of the selected note(s)/rest(s) in steps. |
|  | e |  Inserts a rest. |
|  | f | Press  to open a list of notes and rests. |
|  | g |  Switches octaves, all selected note(s) or rest(s) is/are moved to the next octave. |
|  | a |  Deletes selected note(s). |
|  | b | A long press of keys  -  produces a lengthened (dotted) note or rest or shortens a lengthened note. |

• CONVERTER



In Converter, you can convert measures such as *Length* from one unit (*Yards*) to another (*Meters*).

Go to **Menu**→ *Extras*→ **Converter**.




Options in Converter are: *Select unit / Change currency, Conversion type, Currency rates, Help, and Exit.*

Note: The Converter has limited accuracy and rounding errors may occur.

Note: Before you can make currency conversions, you need to choose a base currency (usually your domestic currency) and add exchange rates. See "Set a base currency and exchange rates" on page 114.

Convert units

- 1 Scroll to the *Type* field and press  to open a list of measures. Scroll to the measure you want to use and press **OK**.

- 2 Scroll to the first *Unit* field and press  to open a list of available units. Select the unit **from** which you want to convert and press **OK**. Scroll to the next *Unit* field and select the unit **to** which you want to convert.
- 3 Scroll to the first *Amount* field and key in the value you want to convert. The other *Amount* field changes automatically to show the converted value.
Press  to add a decimal and press  for the +, - (for temperature), and E (exponent) symbols.

Note: The conversion order changes if you write a value in the second *Amount* field. The result is shown in the first *Amount* field.

Tip: To rename a currency, go to the Currency rates view, scroll to the currency, and select **Options**→ *Rename currency*.

Set a base currency and exchange rates

Before you can make currency conversions, you need to choose a base currency (usually your domestic currency) and add exchange rates.

Note: The rate of the base currency is always 1. The base currency determines the conversion rates of the other currencies.



Example: If you set the Canadian Dollar (CAD) as the base currency, a US Dollar is .65. Thus, you would write .65 as the exchange rate for the US Dollar (USD).

- 1 Select *Currency* as the measure type and select **Options**→ *Currency rates*. A list of currencies opens and you can see the current base currency at the top.
- 2 To change the base currency, scroll to the currency (usually your domestic currency), and select **Options**→ *Set as base curr.*

Important: When you change the base currency, all previously set exchange rates are set to 0 and you need to key in new rates.

- 3 Add exchange rates (see example), scroll to the currency, and key in a new rate, that is, how many units of the currency equal one unit of the base currency you have selected.
- 4 After you have inserted all the needed exchange rates, you can make currency conversions, see "Convert units" on page 113.

• NOTES

Go to **Menu**→ **Extras**→ **Notes**.



You can link notes to Favorites and send them to other devices.

Plain text files (TXT format) you receive can be saved to Notes.

Press any key press (-) to start to write. Press to clear letters.

Press **Done** to save.

• CLOCK

Go to **Menu**→ **Extras**→ **Clock**.



Options in Clock are: *Set alarm, Reset alarm, Remove alarm, Settings, Help, and Exit.*

Change clock settings

To change the time or date, select **Options**→ *Settings* in Clock. To change the clock shown in standby mode, scroll down in the *Date and time* settings and select *Clock type*→ *Analog* or *Digital*.

Set an alarm

- 1 To set a new alarm, select **Options**→ *Set alarm*.
- 2 Enter the alarm time and press **OK**. When the alarm is active, the indicator is shown.

The alarm clock works even if the phone is switched off.

To cancel an alarm, go to clock and select **Options**→ *Remove alarm*.

TURN OFF THE ALARM

- Press **Stop** to turn off the alarm.
- When the alarm tone sounds, press any key or **Snooze** to stop the alarm for five minutes, after which it will resume. You can do this a maximum of five times.

If the alarm time is reached while the phone is switched off, the phone switches itself on and starts sounding the alarm tone. If you press **Stop**, the phone asks whether you want to activate the phone for calls. Press **No** to switch off the phone or **Yes** to make and receive calls.

Note: Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.

• RECORDER










Go to **Menu**→**Extras**→**Recorder**.

Options in Recorder are: *Open, Record sound clip, Delete, Move to phone mem, Move to mem. card, Mark/Unmark, Rename sound clip, Send, Settings, Add to Favorites, Help, and Exit.*

The voice recorder allows you to record telephone conversations and voice memos. If you are recording a telephone conversation, both parties will hear a tone every five seconds during recording.

Note: Obey all local laws governing recording of calls. Do not use this feature illegally.

Select **Options**→*Record sound clip* and scroll to a function and press  to select it. Use:  - to record,  - to pause,  - to stop,  - to fast forward,  - to fast rewind, or  - to play an opened sound file.

Note: Recorder cannot be used when a data call or a GPRS connection is active.

• MEMORY CARD

Go to **Menu**→**Extras**→**Memory card**.

Options in the memory card are: *Backup phone mem., Restore from card, Format mem. card, Memory card name, Set password, Change password, Remove password, Unlock memory card, Mem. in use, Help and Exit.*




If you have a memory card you can use it to store your multimedia files like video clips and sound files, photos, messaging information, and to backup information from your phone's memory.

Important: Keep all memory cards out of the reach of small children.


Note: Details of how you can use the memory card with other features and applications of your Nokia 3600 series phone are given in the sections describing these features and applications.

Insert the memory card

A

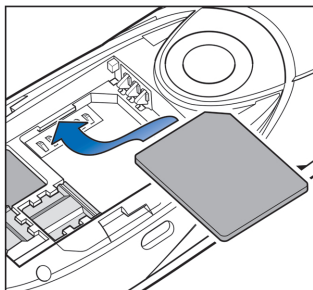


B

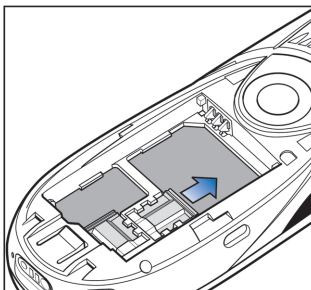

- 1 Make sure the phone is switched off.
- 2 With the back of the phone facing you, slide open the cover and remove the battery, see Quick start 'Insert the SIM card' for instructions on removing the cover.
- 3 Position the memory card in its slot.
Make sure that the gold contacts of the card are facing down.
- 4 Slide the silver catch over the memory card to secure it.
- 5 When you have secured the card in place, replace the battery, then replace the cover by sliding it back into place.

Important: Do not remove the memory card in the middle of an operation. Be sure to close all memory card applications before removing the card.

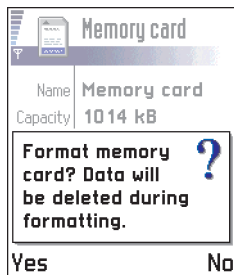

Important: If you are installing an application to the memory card and need to reboot the phone, do not remove the card until the reboot is complete. Otherwise the application files may be lost.

Format the memory card

You must format the memory card before you can use it for the first time.

Select Options→ *Format mem. card*.

You will be asked to confirm your request and once you confirm, formatting starts.

Back up and restore information

You can backup information from your phone's memory to the memory card.

Select Options→ *Backup phone mem.*

You can restore information from the memory card to the phone's memory.

Select Options→ *Restore from card*.

Memory card password

You can set a password to protect your memory card against unauthorized use.

Note: The password is stored in your phone and you do not have to enter it again while you are using the memory card on the same phone. If you want to use the memory card on another phone, you will be asked for the password.

SET UP, CHANGE, OR REMOVE YOUR PASSWORD

Select Options→ *Set password*, *Change password*, or *Remove password*.

The password can be up to eight characters long.

Important: Once the password is removed, the memory card can be used on any phone without a password.


Check memory consumption

Using the *Mem. in use* option, you can check the memory consumption of different data groups and the available memory for installing new applications or software on your memory card.

Select Options→ *Memory details*.

14 Services (XHTML)



Go to **Menu**→ **Services** or press and hold  in standby mode.


Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



Glossary: XHTML browser supports pages written in the Hypertext Markup Language (XHTML) and the Wireless Markup Language (WML).

Various service providers on the Internet maintain pages specifically designed for mobile phones, offering services such as news, weather reports, banking, travel information, entertainment, and games. With the XHTML browser you can view these services as WAP pages written in WML, XHTML pages written in XHTML, or a mixture of both.

Note: Check the availability of services, pricing, and tariffs with your network operator and/or service provider. Service providers will also give you instructions on how to use their services.

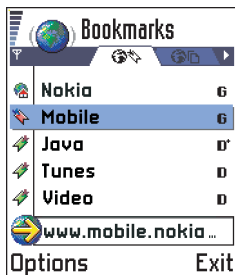

• BASIC STEPS FOR ACCESSING THE WEB

- Save the settings that are needed to access the web service that you want to use. See "Phone browser service settings" on page 120.
- Make a connection to the service. See "Make a connection" on page 120.
- Start browsing the web pages.
- End the connection to the service.

• PHONE BROWSER SERVICE SETTINGS

Receiving settings in a smart message

Tip: Settings may be available, for example, on the site of a network operator or service provider.


You may receive service settings in a special text message, a so-called smart message, from the network operator or service provider that offers the service. See "Receive smart messages" on page 85. For more information, contact your network operator or service provider.

Key in the settings manually

Follow the instructions given to you by your service provider.




- 1 Go to **Menu**→ **Tools**→ **Settings**→ *Connection*→ *Access points* and define the settings for an access point. See "Connection settings" on page 33.
- 2 Go to **Services**→ **Options**→ *Add bookmark*. Write a name for the bookmark and the address of the browser page defined for the current access point.


Make a connection

Tip: To access the Bookmarks view while browsing, press and hold down . To return to the browser view again, select **Options**→ *Back to page*.


Once you have stored all the required connection settings, you can access browser pages.

There are three different ways to access browser pages:

- Select the homepage () of your service provider,
- Select a bookmark from the Bookmarks view, or
- Press the keys  -  to start to write the address of a browser service. The Go to field at the bottom of the display is immediately activated and you can continue writing the address there.

After you have selected a page or written the address, press  to start to download the page. See also "Data connection indicators" on page 12.

Connection security

If the security indicator  is displayed during a connection, the data transmission between the phone and the browser gateway or server is encrypted and secure.

Note: The security icon does not indicate that data transmission between the gateway and the content server (place where the requested resource is stored) is secure. It is up to the service provider to secure data transmission between the gateway and the content server.

View bookmarks

Options in the Bookmarks view (selection on a bookmark or folder) are: *Open, Download, Back to page, Send, Go to URL address / Find bookmark, Add bookmark, Edit, Delete, Read service msgs., Disconnect, Move to folder, New folder, Mark/Unmark, Rename, Clear cache, Details, Add to Favorites, Settings, Help, and Exit.*



Glossary: A bookmark consists of an Internet address (mandatory), bookmark title, WAP access point, and if the service requires, a user name and password.

Note: Your phone may have some pre-installed bookmarks for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any site.

In the Bookmarks view, you can see bookmarks pointing to different kinds of web pages. Bookmarks are indicated by the following icons:



- The starting page defined for the browser access point. If you use another web access point for browsing, the starting page is changed accordingly.



- The last visited page. When the phone is disconnected from the service, the address of the last visited page is kept in memory until a new page is visited during the next connection.





- A bookmark showing the title.

When you scroll through bookmarks, you can see the address of the highlighted bookmark in the Go to field at the bottom of the display.

Options when browsing are: *Open, Service options, Bookmarks, History, Go to URL address, View images, Read service msgs., Save as bookmark, Send bookmark, Reload, Disconnect, Show images, Clear cache, Save page, Find, Details, Session, Security, Settings, Help, and Exit.*

Add bookmarks manually

- 1 In the Bookmarks view, select **Options**→ *Add bookmark*.
- 2 Start to fill in the fields. Only the address must be defined. The default access point is assigned to the bookmark if no other one is selected. Press  to enter special characters such as /, ., :, and @. Press  to clear characters.
- 3 Select **Options**→ *Save* to save the bookmark.






Send bookmarks


To send a bookmark, scroll to it and select **Options**→ *Send*→ *Via text message*.



• BROWSING

On a browser page, new links appear underlined in blue and previously visited links in purple. Images that act as links have a blue border around them.

Keys and commands used in browsing

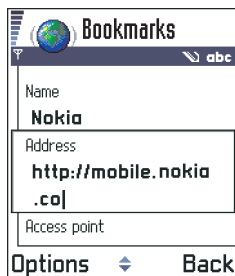
- To open a link, press .
- To scroll the view, use the scroll key.
- To enter letters and numbers in a field, press the keys  - . Press  to enter special characters such as /, ., :, and @. Press  to clear characters.
- To go to the previous page while browsing, press **Back**. If **Back** is not available, select **Options**→ *History* to view a chronological list of the pages you have visited during a browsing session. The history list is cleared each time a session is closed.



- To check boxes and make selections, press .
- To retrieve the latest content from the server, select **Options**→ *Reload*.
- To open a sublist of commands or actions for the currently open web page, select **Options**→ *Service options*.
- Press  to disconnect from a web service and to quit browsing.

VIEWING NEW SERVICE MESSAGES WHILE BROWSING

To download and view new service messages while browsing:

- 1 Select **Options**→ *Read service msgs.* (shown only if there are new messages).
- 2 Scroll to the message and press  to download and open it.

For more information about service messages, see "Service messages" on page 87.



SAVING BOOKMARKS

- To save a bookmark while browsing, select **Options**→ *Save as bookmark*.
- To save a bookmark received in a smart message, open the message in the Inbox in Messaging and select **Options**→ *Save to bookmarks*. See also "Receive smart messages" on page 85.

VIEWING SAVED PAGES

Options in the Saved pages view are: *Open, Back to page, Reload, Remove, Read service msgs., Disconnect, Move to folder, New folder, Mark/Unmark, Rename, Clear cache, Details, Add to Favourites, Settings, Help, and Exit.*

If you regularly browse pages containing information which does not change very often, for example a train timetable, you can save and then browse them when offline. If you have a memory card, you can save web pages on it instead of the phone's memory.

- To save a page, while browsing select **Options**→ *Save page*.

Saved pages are indicated by the following icon:





- The saved web page.

In the saved pages view you can also create folders to store your saved web pages.

Folders are indicated by the following icon:



- Folder containing saved web pages.

- To open the Saved pages view, press  in the Bookmarks view. In the Saved pages view, press  to open a saved page.

If you want to start a connection to the web service and to retrieve the page again, select **Options**→ *Reload*. You can also arrange the pages into folders.

Note: The phone stays online after you reload the page.

• DOWNLOAD THROUGH THE BROWSER

You can download items such as ringing tones, images, operator logos and video clips through the mobile browser. These items can be provided free or for a price.

Once downloaded, items are handled by the respective applications on your phone, for example a downloaded photo will be saved in the **Images**.

Download directly from the web page

To download the item directly from a web page:

- Scroll to the link and select **Options**→ *Open*.



Purchase an item



Glossary: Digital Rights Management (DRM) is a system for protecting the copyright of digital content that is distributed online.

Note: Copyright protections may prevent some images, ringtones and other content from being copied, modified, transferred or forwarded.

To download the item:

- Scroll to the link and select **Options**→ *Open*.
- Select **Buy** if you want to buy the item.

Check an item before downloading

You can see details about an item before you download it. Details about an item may include the price, brief description and size.

Note: Check with your service provide to see if they offer this service.

- Scroll to the link and select **Options**→ *Open*.
Details about the item are displayed on your phone.
- If you want to continue with the downloading, press *Accept* or if you want to cancel the download, press *Cancel*.



• END A CONNECTION

- Select **Options**→ *Disconnect*, or
- Press and hold to quit browsing and to return to standby mode.

Empty the cache


The information or services you have accessed are stored in the cache memory of the phone.

If you have tried to access or have accessed confidential information requiring passwords (for example, your bank account), empty the cache of your phone after each use. To empty the cache, select **Options**→ *Clear cache*.



Glossary: A cache is a buffer memory that is used to store data temporarily.

• BROWSER SETTINGS

- *Default access point* - If you want to change the default access point, press  to open a list of available access points. The current default access point is highlighted. For more information, see "Connection settings" on page 33.
- *Show images* - Choose if you want to view pictures when you are browsing. If you choose *No*, you can later load images during browsing by selecting **Options**→ *Show images*.
- *Text wrapping* - Choose *Off* if you do not want the text in a paragraph to automatically wrap, or *On* if you do.
- *Font size* - You can choose five text sizes in the browser: Smallest, Small, Normal, Large and Largest.
- *Cookies* - *Allow / Reject*. You can enable or disable the receiving and sending of cookies.
- *Confirm touch tones* - *Always / First sending only*. The browser supports functions you can access while browsing. You can: make a voice call while you are on a browser page, send touch tones while a voice call is in progress, save in Contacts a name and phone number from a browser page. Choose whether you want to confirm before the phone sends touch tones during a voice call.

15 Applications (Java™)



Note: Your phone must be switched on to use this function.
Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Go to **Menu**→ **Applications**


Options in the Applications main view are: *Open, View details, Settings, Remove, Go to URL address, Update, Help, and Exit.*

In the Applications main view you can open installed Java applications or remove them. In the Install view you can install new Java applications (file extensions .JAD or .JAR).

Note: Your phone supports J2ME™ Java applications. Do not download PersonalJava™ applications to your phone as they cannot be installed.

When you open Applications, you can see a list of Java applications that have been installed to your phone.

- Scroll to an application and select **Options**→ *View details* to view:
- *Status* - *Installed, Running, or Downloaded* (shown only in Install view)
- *Version* - the application version number
- *Supplier* - the supplier or manufacturer of the application
- *Size* - the size of the application file in kilobytes
- *Type* - a brief description of the application
- *URL* - an address of an information page on the Internet
- *Data* - the size of application data such as high scores, in kilobytes

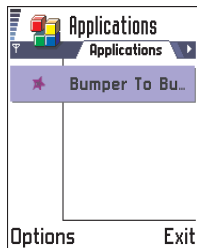

To start a data connection and to view extra information about the application, scroll to it and select **Options**→ *Go to URL address.*

- To start a data connection and to check if there is an update available for the application, scroll to it and select **Options**→ *Update*.


Applications uses shared memory. See "Shared memory" on page 18.

• INSTALL A JAVA APPLICATION

Options in the Install view are: *Install*, *View details*, *Delete*, *Help*, and *Exit*.


Installation files may be transferred to your phone from a computer, downloaded during browsing, or sent to you in a multimedia message, as an e-mail attachment, via Bluetooth, or via infrared. If you are using PC Suite for Nokia 3650 or PC Suite for Nokia 3600 to transfer the file, place it in the **c:\nokia\installs** folder in your phone.

Important: Only install software from sources that offer adequate protection against viruses and other harmful software.


- 1 In the Applications main view, to view the installation packages, press  to open the *Downloaded* view.

Note: In the Install view, you can only install Java software installation files with the extension .JAD or .JAR.

- 2 To install an application, scroll to an installation file and select **Options**→ *Install*.

Alternatively, search the phone memory for the installation file, select the file, and press  to start the installation.



Example: If you have received the installation file as an e-mail attachment, go to your mailbox, open the e-mail, open the Attachments view, scroll to the installation file, and press  to start the installation.

- 1 Press **Yes** to confirm the installation.

The .JAR file is required for installation. If it is missing, the phone may ask you to download it. If there is no access point defined for Applications, you will be asked to select one. When you are downloading the JAR file, you may need to enter a user name and password to access the server. You obtain these from the supplier or manufacturer of the application.

During installation, the phone checks the integrity of the package to be installed. The phone shows information about the checks being carried out, and you are given options whether to continue with or cancel the installation. Once the phone has checked the integrity of the software package, the application is installed on your phone.

- 2 The phone informs you when installation is complete.

To open the Java application after installation, you must go to the Applications main view.

Tip: When you are browsing WAP or browser pages, you can download an installation file and install it immediately. Note, however, that the connection is left running in the background during installation.

Opening a Java application

- Scroll to an application in the Applications main view and press  to open it.

Uninstalling a Java application

- Select the application in the Applications main view and select **Options**→ *Remove*.

• JAVA APPLICATION SETTINGS

To define a default access point for downloading missing application components, select *Settings*→ *Default access point*. For more information on creating access points, see the "Access points" on page 36.

Select an application and select *Settings*, and then select one of:

- *Access point* - Select an access point to be used by the application for downloading extra data.
- *Network connection* - Some Java applications may require a data connection to be made to a defined access point. If no access point has been selected, you will be asked to select one. The options are:
 - Allowed* - The connection is created immediately without a notification.
 - Ask first* - You will be asked before the application makes the connection.
 - Not allowed* - Connections are not allowed.

16 Manager

• INSTALL APPLICATIONS AND SOFTWARE



Note: Your phone must be switched on to use the functions in the **Tools** folder. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Go to **Menu**→**Tools**→**Manager**

In Manager you can install new applications and software packages, and remove applications from your phone. You can also check the memory consumption.

Options in the Manager main view are: *View details, View certificate, Install, Remove, View log, Send log, Memory details, Help, and Exit.*

When you open Manager, you can see a list of:

- installation packages that have been saved to Manager
- partially installed applications (indicated by ) , and
- fully installed applications that you can remove (indicated by )

Note: In Manager, you can only use device software installation files with an extension .SIS.

Tip: To install Java™ applications (file extension .JAD or .JAR), go to Applications. For further information, see "Applications (Java™)" on page 127.

- Scroll to an installation file and select **Options**→*View details* to view the *Name, Version, Type, Size, Supplier, and Status* of the software package.
- Scroll to a software package and select **Options**→*View certificate* to display the security certificate details of a software package. See "Certif. management" on page 43.

Important: Only install software from sources that offer adequate protection against viruses and other harmful software.

To help you, the software installation system uses digital signatures and certificates on software packages. Do not install the application if Manager gives a security warning during installation.

Tip: Select **Options**→ *View log* to see what software packages have been installed or removed and when.

• INSTALL SOFTWARE


You can install applications that are specifically intended for Nokia 3600 series phones or suitable for the Symbian operating system. A software package is usually one large compressed file containing many component files.

Note: If you install a program that is not intended specifically for Nokia 3600 series phones, it may function and look very different from the usual Nokia 3600 series phone applications.


Important: If you install a file that contains an update or repair to an existing application, you can only restore the original application if you have the original installation file or a full back-up copy of the removed software package. To restore the original application, first remove the application and then install the application again from the original installation file or the back-up copy.

- 1 Installation packages may be transferred to your phone from a computer, downloaded during browsing, or sent to you in a multimedia message, as an e-mail attachment, via Bluetooth, or via infrared. If you are using PC Suite for Nokia 3650 or PC Suite for 3600 to transfer the file, place it in the **c:\nokia\installs** folder on your phone.



Example: If you have received the installation file as an e-mail attachment, go to your mailbox, open the e-mail, open the Attachments view, scroll to the installation file, and press  to start the installation.

- 2 Open Manager, scroll to the installation package, and select **Options**→ *Install* to start the installation.

Alternatively, search the phone memory or the memory card for the installation file, select the file, and press  to start the installation.

If you are installing software without a digital signature or a certificate, the phone warns you of the risks of installing software. Continue installation only if you are absolutely sure of the origin and contents of the software package.

During installation, the phone checks the integrity of the package to be installed. The phone shows information about the checks being carried out and you are given options whether to continue or cancel the installation. Once the phone has checked the integrity of the software package, the application is installed on your phone.

Tip: To send your installation log to a help desk so that they can see what has been installed or removed, select **Options**→ *Send log*→ *Via text message* or *Via e-mail* (available only if the correct e-mail settings are in place).

• REMOVE SOFTWARE

- 1 To remove a software package, scroll to it and select **Options**→ *Remove*.
- 2 Press **Yes** to confirm the removal.

Important: If you remove software, you can only re-install it if you have the original software package or a full back-up of the removed software package. If you remove a software package, you may no longer be able to open documents created with that software. If another software package depends on the software package that you removed, the other software package may stop working. Refer to the documentation of the installed software package for details.

• VIEW MEMORY CONSUMPTION

- To open the memory view select **Options**→ *Memory details*.

Note: If you have a memory card installed on your phone, you will have a choice of two memory views, one for the phone or *Phone memory* and one for the *Memory card*. If not, you will only have the *Phone memory* view.

When you open either of the memory views, the phone calculates the amount of free memory for storing data and installing new software. In the memory views, you can view the memory consumption of the different data groups: *Calendar, Contacts, Documents, Messages, Images, Sound files, Video clips, Applications, Mem. in use, and Free memory.*

Tip: If the phone memory is getting low, remove some documents, or move them to the memory card. See also the "Technical information" on page 168.

17 Connectivity

Note: Your phone must be switched on to use the functions in the **Connectivity** folder. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

You can transfer data from your phone to another compatible device, for example, a phone or a computer, via Bluetooth or infrared.

• BLUETOOTH CONNECTION

Go to **Menu** → **Connectivity** → **Bluetooth**


Bluetooth enables cost-free wireless connections between electronic devices within a maximum range of 30 feet. A Bluetooth connection can be used to send images, texts, business cards, calendar notes, or to connect wirelessly to Bluetooth enabled devices such as computers.

Since Bluetooth devices communicate using radio waves, your phone and the other Bluetooth device do not need to be in direct line-of-sight.

The two devices only need to be within a maximum of 10 meters of each other, although the connection can be subject to interference from obstructions such as walls or from other electronic devices.

Using Bluetooth consumes the battery and the phone's operating time will be reduced. Take this into account when performing other operations with your phone.

There may be restrictions on using Bluetooth devices. Check with your local authorities.

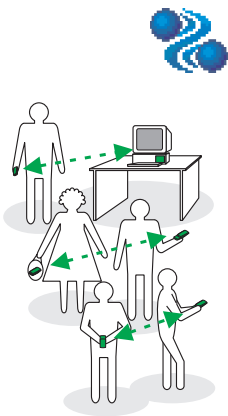


Activate the Bluetooth application for the first time

When you activate the Bluetooth application for the first time, you are asked to give a Bluetooth name to your phone.


Note: After you have set Bluetooth to be active and changed *Myphone's visibility* to *All*, your phone and this name can be seen by other Bluetooth device users.

Write a name (max. 30 letters) or use the default name 'Nokia 3650' or 'Nokia 3600'. If you send data via Bluetooth before you have given an individual Bluetooth name to your phone, the default name will be used.

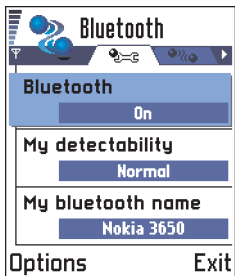

Tip: To send text via Bluetooth (instead of text messages), go to Notes, write the text, and select **Options**→ *Send*→ *via Bluetooth*.

Bluetooth settings


To modify Bluetooth settings, scroll to the setting you want to change and press .


- *Bluetooth* - Select *On* if you want to use Bluetooth. If you set Bluetooth *Off* all active Bluetooth connections are ended and Bluetooth cannot be used for sending or receiving data.
- *My phone's visibility* - If you select *Shown to all*, your phone can be found by other Bluetooth devices during device search. If you select *Hidden*, your phone cannot be found by other devices during device search.
- *My Bluetooth name* - Define a Bluetooth name for your phone. After you have set Bluetooth to be active and changed *My phone's visibility* to *All*, this name can be seen by other Bluetooth device users.

Tip: When searching for devices, some Bluetooth devices may show only the unique Bluetooth addresses (device addresses). To find out what the unique Bluetooth address of your phone is, enter the code ***#2820#** in standby mode.

Send data via Bluetooth

Note: There can be only one active Bluetooth connection at a time.

- 1 Open an application where the item you wish to send is stored. For example, to send a photo to another device, open the Images application.
- 2 Scroll to the item you want to send, for example, a photo and select **Options**→*Send*→ *Via Bluetooth*.
- 3 The phone starts to search for devices within range. Bluetooth enabled devices that are within range start to appear on the display one by one. You can see a device icon, the device's Bluetooth name, the device type, or a short name. Paired devices are shown with .

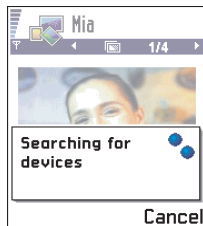

Note: If you have searched for Bluetooth devices earlier, a list of the devices that were found previously is shown first. To start a new search, select **More devices**. If you switch off the phone, the list of devices is cleared and the device search needs to be started again before sending data.

- To interrupt the search, press **Stop**. The device list freezes and you can start to form a connection to one of the devices already found.
- 4 Scroll to the device you want to connect with and press **Select**. The item you are sending is copied to Outbox and the note *Connecting* is shown.
 - 5 Pairing (if not required by the other device, see step 6).







Glossary: Pairing means authentication. The users of the Bluetooth enabled devices should agree on the passcode and use the same passcode for both devices in order to pair them. Devices that do not have a user interface have a factory set passcode.

- If the other device requires pairing before data can be transmitted, a tone sounds and you are asked to enter a passcode.




- Create your own passcode (1-16 characters long, numeric) and agree with the owner of the other Bluetooth device to use the same code. This passcode is used only once and you do not have to memorize it.
 - After pairing, the device is saved to the Paired devices view.
- 6 When the connection has been successfully established, the note *Sending data* is shown.

Note: Data received via Bluetooth can be found in the Inbox folder in Messaging. See page 83 for further information.

Note: If sending fails, the message or data will be deleted. The Drafts folder in Messaging does not store messages sent via Bluetooth.




| Icons for different Bluetooth devices | |
|---|----------|
|  | Computer |
|  | Phone |
|  | Other |
|  | Unknown |

Check the status of the Bluetooth connection

- When  is shown in standby mode, Bluetooth is active.
- When  is blinking, your phone is trying to connect to the other device.
- When  is shown continuously, the Bluetooth connection is active.

Paired devices view

Options in the paired devices view are: *New paired device, Connect / Disconnect, Assign short name, Delete, Delete all, Set as authorized / Set as unauthorized, Help, and Exit.*


Pairing with a device makes device searches easier and quicker. Paired devices are easier to recognize, they are indicated by  in the search result list. In the Bluetooth main view, press  to open a list of paired devices (.

PAIR WITH A DEVICE

- 1 Select **Options**→ *New paired device* in the Paired devices view. The phone starts to search for devices within range. Or, if you have searched for Bluetooth devices earlier, a list of the devices that were found previously is shown first. To start a new search, select **More devices**.
- 2 Scroll to the device you want to pair with and press **Select**.
- 3 Exchange passcodes, see step 5 (Pairing) in the previous section. The device is added to the Paired devices list.

Tip: You can also play phone-to-phone games via Bluetooth.

CANCEL PAIRING

- In the Paired devices view, scroll to the device whose pairing you want to cancel and press  or select **Options**→ *Delete*. The device is removed from the Paired devices list and the pairing is cancelled.
- If you want to cancel all pairings, select **Options**→ *Delete all*.

Note: If you are currently connected to a device and delete the pairing with that device, pairing is removed immediately but the connection will remain active.

ASSIGN SHORT NAMES FOR PAIRED DEVICES

You can define a short name (nickname, alias), to help you recognize a certain device. This name is stored in the phone memory and cannot be seen by other Bluetooth device users.



Example: Give a short name to your friend's Bluetooth enabled device or to your own computer to be able to recognize it more easily.


To assign a short name, scroll to the device and select **Options**→ *Assign short name*. Write the short name and press **OK**.


Note: Choose a name which is easy to remember and recognize. Later when you are searching for devices or a device is requesting a connection, the name you have chosen will be used to identify the device.

SET A DEVICE TO BE AUTHORIZED OR UNAUTHORIZED

After you have paired with a device, you can set it to be authorized or unauthorized:



Unauthorized (default) – Connection requests from this device need to be accepted separately every time.

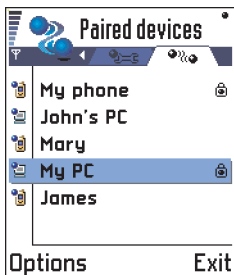Authorized – Connections between your phone and this device can be made without your knowledge. No separate acceptance or authorization is needed. Use this status for your own devices, for example, your PC, or devices that belong to someone you trust. The icon  is added next to authorized devices in the Paired devices view.



In the Paired devices view, scroll to the device and select **Options**→ *Set as authorized* / *Set as unauthorized*.

Receive data via Bluetooth

When you receive data via Bluetooth, a tone sounds and you are asked if you want to accept the Bluetooth message. If you accept,  is shown and the item is placed in the Inbox folder in Messaging. Bluetooth messages are indicated by . See page 83 for further information.

Disconnect Bluetooth

A Bluetooth connection is disconnected automatically after sending or receiving data.

• INFRARED CONNECTION





To start infrared, go to **Menu**→ **Connectivity**→ **Infrared**.

Via infrared, you can send or receive data such as business cards and calendar notes to and from a compatible phone or data device.

Do not point the IR (infrared) beam at anyone's eye or allow it to interfere with other IR devices. This device is a Class 1 Laser product.

Send and receive data via infrared

Note: All items which are received via infrared are placed in the Inbox folder in Messaging. New infrared messages are indicated by . See page 83 for further information.

- 1 Make sure that the infrared ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices. The preferable distance between the two devices is one meter at most. To find the infrared port, see the picture of the different keys in the General information section of this guide.
- 2 The user of the receiving device activates the infrared port.
To activate the infrared port of your phone to receive data via infrared, go to **Menu**→ **Connectivity**→ **Infrared** and press .
- 3 The user of the sending device selects the desired infrared function to start data transfer.
To send data via infrared, select **Options**→ *Send*→ *via infrared* in an application.

If data transfer is not started within two minutes after the activation of the infrared port, the connection is cancelled and must be started again.



Tip: You can also play phone-to-phone games via infrared.



Example: To send a contact card via infrared: (1) Ask the receiver to activate the infrared port in his/her device. (2) Go to Contacts, scroll to a card and select **Options**→ *Send*→ *via infrared*.

Note: Windows 2000: To be able to use infrared to transfer files between your Nokia 3600 series phone and a compatible computer, go to "Control Panel" and select "Wireless Link". In the "Wireless Link" "File Transfer" tab check the "Allow others" to send files to your computer using infrared.

Check the status of the infrared connection

- When  blinks, your phone is trying to connect to the other device or a connection has been lost.
- When  is shown continuously, the infrared connection is active and your phone is ready to send and receive data via its infrared port.

• CONNECT YOUR PHONE TO A COMPUTER

For further information on how to make a connection to a compatible computer via infrared or Bluetooth and how to install the PC Suite for Nokia 3650 or PC Suite for 3600, see the **Installation Guide for PC Suite** on the CD-ROM in the 'Software for PC' section. For further information on how to use the PC Suite for Nokia 3650 or PC Suite for 3600, see the PC suite **online help**.

Use the CD-ROM

The CD-ROM should launch itself after you have inserted it into the CD-ROM drive of your compatible PC. If not, proceed as follows:

- 1 Click the Window **Start** button and select **Programs**→ *Windows Explorer*.
- 2 On the CD-ROM drive, locate a file called **Nokia3650.exe** or **Nokia3600.exe** and double-click it. The CD-ROM interface opens.
- 3 You can find PC Suite for Nokia 3650 or PC Suite for 3600 in the 'Software for PC' section. Double-click 'PC Suite for Nokia 3650' or 'PC Suite for 3600'. The installation wizard will guide you through the installation process.

• USE YOUR PHONE AS A MODEM TO CONNECT TO THE INTERNET OR TO SEND OR RECEIVE FAXES



Detailed installation instructions can be found in **Quick guide for Modem Options for Nokia 3650** or **Quick Guide for Modem Options for Nokia 3600** on the CD-ROM supplied with the phone.

18 PC Suite for Nokia 3600 series

Please refer to other sections of this user guide for instructions on operation, care, and maintenance, including important safety information.

This section explains how to install PC Suite for Nokia 3600 series phones on a compatible PC, how to connect your phone to the PC, and how to start using PC Suite. For more detailed information on the use of PC Suite, please refer to the online help of the PC Suite applications.

With PC Suite for Nokia 3650 or PC Suite for Nokia 3600 you can:

- Share information between your PC and phone.
- Make back-up copies of the phone files to protect data in case of loss or damage.
- Synchronize your calendar, contacts, and tasks with Microsoft and Lotus applications.
- Copy and move files between your PC and phone.
- Copy contacts and calendar information from another Nokia mobile phone, Nokia communicator, or Palm device to your Nokia 3600 series phone.
- Configure phone settings.
- Install software on your phone.

• SOFTWARE AND HARDWARE REQUIREMENTS

To install and run PC Suite, you need:

- a compatible PC running Windows 98, Windows ME, Windows 2000 with Service Pack 2, or Windows XP.
- at least 110 MB of free disk space.

To connect your Nokia 3600 series phone to the PC, you need to have:

- an infrared connection: an infrared port on the computer, or
- a Bluetooth connection: a Bluetooth card and the required software, or built-in support for Bluetooth on the PC. To be able to connect your Nokia 3600 series phone to your PC, the Bluetooth software needs to support the Serial Port Profile (SPP).

• INSTALL PC SUITE

PC Suite for Nokia 3600 series is in the "Install" section of the CD-ROM included in the PC Suite for Nokia 3600 series package. The CD-ROM should launch automatically after you have inserted it into the CD-ROM drive of your PC. If not, proceed as follows:

- 1 Click the Windows **Start** button, point to *Programs*, and select *Windows Explorer*.
- 2 Go to the CD-ROM root directory and double-click the Nokia3650.exe or Nokia3600.exe file. The CD-ROM user interface opens.

When the CD-ROM interface is open, proceed as follows:

- 1 Click *Install*.
- 2 Select *Install now* and click **PC Suite for Nokia 3650** or **PC Suite for Nokia 3600**.
- 3 Select the language for the installation and click **Next** to start the installation wizard. This wizard will guide you through the installation process. Generally, it is recommended that you accept the suggested destination folder and program folder.

Note: In the *Data Import* dialog box, make sure that the *Install the Nokia Connectivity SDK* check box is selected if you want to transfer calendar and contacts data from another Nokia mobile phone to your Nokia 3600 series phone. If you do not install the Nokia Connectivity SDK component, you can transfer data only from the Nokia 9110 Communicator, a Palm device, a Nokia 7650 or another Nokia 3600 series phone to your Nokia 3600 series phone.

Note: In the *File Transfer Video and Audio Converters* dialog box it is recommended that you leave the *Install Video and Audio Converters* check box selected. When the converters are installed, video and audio format files that you copy from the PC to your Nokia 3600 series phone are automatically converted to the video and audio format used by the phone.

If you do not have the CD-ROM:

- 1 Download the installation file (setup.exe).

- 2 Go to the directory where you downloaded the file and double-click it.
- 3 Follow the instructions on the screen.



• CONNECT YOUR PHONE TO THE PC

When you use PC Suite for the first time, you must connect your Nokia 3600 series phone to the PC. Thereafter, you can use PC Suite whether or not your phone is connected to your PC.

You can connect your phone to the PC via an infrared or Bluetooth connection.

See the *Connecting your Nokia 3650 to a PC* and *Disconnecting and reconnecting your Nokia 3650* or *Connecting your Nokia 3600 to a PC* and *Disconnecting and reconnecting your Nokia 3600* online help topics for details.

Note: When you connect your Nokia 3600 series phone to your PC, PC Suite automatically synchronizes the clock on the Nokia 3600 series phone with the PC. Therefore, you need to make sure that the clock on your PC is correct.

Tip: Check the icons on the taskbar to see the connection status. The connection icon  changes to  when your phone is connected to the PC.

Use an infrared connection

- 1 Check that an infrared driver is already installed on the PC. Go to the Windows **Control Panel**. If the **Infrared** icon is visible, the driver has been installed. Also check that infrared is enabled on the PC. Note that in Windows 2000 the infrared connection is called *Wireless Link*.

Note: To be able to use an infrared connection with Windows 2000, you must first disable the Image Transfer application in the *Wireless Link* software.

- 2 Double-click the PC Suite **Connection** icon on the taskbar to open the **Connection Properties** dialog box. Make sure that the correct COM port is selected for the infrared connection. If no port is selected, select the COM port with infrared as the connection type. Note that you can select more than one COM port.

- Note:** If you cannot select the port you want to use, another PC application is using that port. To use PC Suite with that port, you must either close the other application or disable it temporarily.
- 3 Make sure that the infrared port of the phone faces the infrared port of the PC and that they are within range of each other.
 - 4 Activate the infrared connection of your phone. Go to Menu, open the Connectivity folder, and select Infrared.

Use a Bluetooth connection

Note: Before you can connect your Nokia 3600 series phone to the PC via Bluetooth for the first time, you must have provided a name for your phone to be used in a Bluetooth connection. For instructions on giving a name to your phone, see "Activate the Bluetooth application for the first time" on page 135. Make sure that Bluetooth is activated on the phone to make your Nokia 3600 series phone discoverable and connectable. Go to **Connectivity** and select **Bluetooth**. Then select Bluetooth **On**. To make your phone discoverable, change **My phone's visibility** to **Shown to all** in the **Bluetooth** menu.

To establish a Bluetooth connection:

- 1 Make sure that a Bluetooth card is inserted in the PC card or CompactFlash (CF+) slot and that the software provided with the Bluetooth card is installed on the PC, or check that your PC includes built-in support for Bluetooth. A serial port profile must exist for the Bluetooth card on the PC. For further information, see the user documentation provided with the Bluetooth card or PC.
- 2 Establish a serial port connection between your Nokia 3600 series phone and your PC. For information on how to do this, refer to the user documentation of the Bluetooth software.
- 3 Double-click the PC Suite **Connection** icon on the taskbar to open the **Connection Properties** dialog box. Make sure that the correct port is selected for the Bluetooth connection. If no port is selected, select the COM port with Bluetooth as the connection type. Note that you can select more than one COM port.

Note: If you cannot select the port you want to use, another PC application is using that port. To use PC Suite with that port, you must either close the other application or disable it temporarily.

- 4 If you are connecting your Nokia 3600 series phone to your PC using a Bluetooth connection for the first time, you need to pair the devices. To pair the devices, you need to enter a passcode in both devices. Create your own passcode (1–16 characters long, numeric) and enter the same passcode in both the phone and the PC when requested. This passcode is used only once and you do not need to memorize it. For further information, refer to "Connectivity" on page 134.
- 5 Authorize the connection between your Nokia 3600 series phone and your PC. Select **Yes** when a connection request appears on the phone's display. You can set your PC as authorized, which means that the connection between your phone and your PC is made without separate authorization. To do this, go to the **Paired devices** view on your phone, scroll to the device, and select **Options**. Select **Set as authorized**.

Since Bluetooth devices communicate using radio waves, your phone and the other Bluetooth device do not need to be in line of sight. The two devices only need to be within a maximum of about 30 feet (10 meters) of each other, although the connection can be subject to interference from obstructions such as walls or from other electronic devices.

There may be restrictions on using Bluetooth devices. Check with your local authorities.

The Bluetooth connection does not close automatically. You must close it from the Bluetooth software on your PC. Close the Bluetooth connection when you stop using PC Suite for Nokia 3650 or PC Suite for Nokia 3600 in online mode.

Tip: You can find the online help from the Windows **Start** button. Point to Programs and select *PC Suite for Nokia 3650* or *PC Suite for 3600* and *PC Suite for 3650 Help* or *PC Suite for 3600 Help*.

Note: If you have problems connecting your phone to the PC, check to see if both your Nokia 3600 series phone and your PC are switched on and that you have selected the correct communications port. See the *Connecting your Nokia 3650 to a PC* and *Disconnecting and reconnecting your Nokia 3650* or *Connecting your Nokia 3600 to a PC* and *Disconnecting and reconnecting your Nokia 3600* online help topics for details.

• START TO USE PC SUITE

You can start PC Suite from the **Start** menu: click the **Start** button, select *Programs* and point to *PC Suite for Nokia 3650* or *PC Suite for Nokia 3600*, and then click *PC Suite for Nokia 3650* or *PC Suite for Nokia 3600*.

If you are connecting your phone to the PC for the first time, after starting PC Suite you are asked to do two things:

- Name your phone.

You can use more than one Nokia 3600 series phone with PC Suite. To be able to identify individual phones, you must give a name to your phone.

- Select tasks to be created.

To be able to back up and synchronize information between your Nokia 3600 series phone and PC, you must have the appropriate tasks created. During the first connection, PC Suite lists tasks that can be created automatically. You do not have to create these tasks at this point, if you do not want to. However, if you create the tasks, you can edit them later.

To create these tasks, proceed as follows:

- 1 When the first connection is established, the *Welcome to PC Suite for Nokia 3650* or *Welcome to PC Suite for Nokia 3600* dialog box appears. Type a name for your phone in the box and click **OK**.
- 2 Next, you will be asked for tasks that you want to perform with PC Suite. In the *Create Tasks* dialog box, select the tasks that you want PC Suite to create and click **OK**. You can edit these tasks later, if you want.

Note: Making or answering phone calls during a PC connection is not recommended. It might disrupt operation.

Tip: The folders on your PC that contain information about your phone will also be named according to the name you give your phone at this point.

• ONLINE AND OFFLINE MODES




You can use PC Suite either in online mode or in offline mode. You have the following options:

- Work online – Connect your phone to the PC and let PC Suite identify it. In online mode your phone is connected to your compatible PC, and you can work with the information stored on the phone.
- Work offline – Leave your phone disconnected and choose the name of your phone from a list of named devices.

The menus and other available options in offline mode differ from those of online mode.


• CONNECTION STATUS

The icon on the right-hand side of the status bar and on the Windows taskbar displays the connection status as follows:

-  Disconnected
-  Connected
-  Transferring data (animated icon)

• MAIN WINDOW INFORMATION

The main window of PC Suite displays the following information and controls:

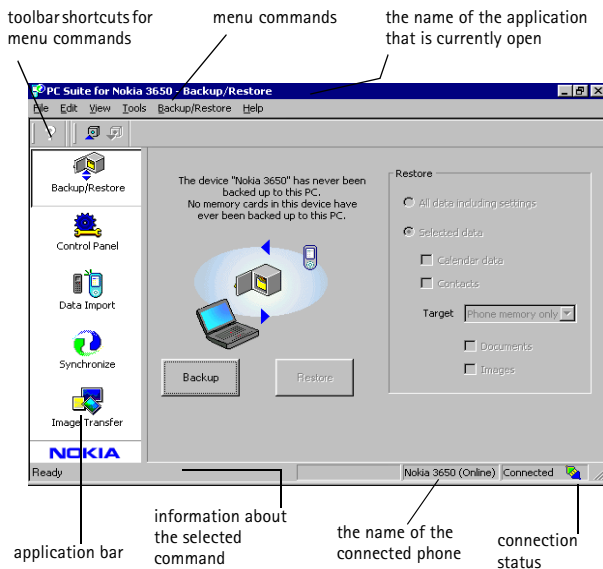

• PC SUITE APPLICATIONS

A number of icons are displayed on the left-hand side of the PC Suite window – this area is known as the application bar. To use an application, click its icon. For information on using an application, see the online help.

Backup/Restore

With Backup/Restore, you can back up information on your phone. If you ever lose information from your Nokia 3600 series phone (for example, through accidental deletion), or need to refer to an earlier, backed up version, you can restore it to your phone. Backup/Restore supports Memory cards.

Note: Operator logos, ringing tones (polyphonic ringing tones (MIDI) and single tones) and Java-applications that you have installed on your Nokia 3600 series phone after you first started using it are not saved during backup. Therefore these items cannot be restored. Only the original Nokia 3600 series ringing tones are saved.

Control Panel

You can use Control Panel to change some of the general settings of PC Suite. The following features are included in Control Panel:

- **Connection** enables you to specify the port that PC Suite uses when attempting to connect to a phone.
- **Data Location** enables you to specify where you want to store backups and synchronization files.
- **Device Manager** enables you to see which phones have been connected to your PC, and to remove details of phones that you no longer want to connect.

Important: You cannot restore information that you have removed using Device Manager.

- **File Transfer Converters** enables you to select which, if any, video and audio converters are used when files are copied to the phone using File Transfer.

Data Import


With Data Import, you can transfer contacts and calendar data to your Nokia 3600 series phone from the Nokia 3320, Nokia 3360, Nokia 3600, Nokia 3650, Nokia 6210, Nokia 6250, Nokia 6310, Nokia 6310i, Nokia 6320, Nokia 6340, Nokia 6340i, Nokia 6360, Nokia 6370, Nokia 6385, Nokia 6510, Nokia 6590, Nokia 6610, Nokia 6650, Nokia 7110, Nokia 7160, Nokia 7190, Nokia 7210, Nokia 7650, Nokia 8210, Nokia 8290, Nokia 8310, Nokia 8390, Nokia 8810, Nokia 8850, Nokia 8890, Nokia 8910, Nokia 9110 Communicator, or Palm device.

Synchronize

With Synchronize, you can synchronize your phone contacts and calendar data with Microsoft and Lotus applications.

To be able to synchronize, you must have tasks created for synchronization. When you connect your Nokia 3600 series phone to your PC for the first time, PC Suite identifies your phone and creates a number of tasks. You can modify these tasks and create other tasks if you want. You can also schedule tasks to be run at regular intervals, every time you connect your phone to your PC, or on command only.

An animated icon appears on the Windows taskbar when synchronization is in progress:

 Synchronizing your phone with the PC (animated icon).

File Transfer

With File Transfer, you can copy files between your phone and your PC, as well as delete and rename selected files. With the Multimedia converters, video and audio format files that you copy from the PC to your Nokia 3600 series phone are automatically converted to the video and audio format used by the phone.

Image Transfer

With Image Transfer, you can copy, move, rename, and delete image files on your phone and your PC. You can also view image files if there is an associated viewer application.

Settings wizard

With the Settings wizard, you can configure the e-mail account, remote connection, message center, and multimedia message center settings of your phone. For example, you can manage settings manually or copy a working configuration from the PC to the phone. You can also back up your phone settings to a file.

Install software on your phone

With PC Suite, you can install Java™ and device software on your phone. These applications do not have an icon on the application bar. Instead, you can start these applications from the **Tools** menu. See the *Installing device software* online help topic for details.

Note: Installation packages can be received in a multimedia message, as an e-mail attachment, via Bluetooth, or via infrared and downloaded to your phone. If you are using PC Suite to transfer the file, save it to the `c:\nokia\installs` folder.

Note: You can only use Java installation files with the extension .JAD or .JAR, and device software installation files with the extension .SIS.

Important: Only install software from sources that offer adequate protection against viruses and other harmful software.

• REMOVE PC SUITE FROM YOUR PC

Uninstalling PC Suite removes all files and folders that were added by the PC Suite installation program, but does not remove backed-up and archived files or synchronization information. Therefore, if you reinstall PC Suite you can back up, restore, and synchronize using the same settings as before.

Note: If you want to remove backed-up files, synchronizations, and other information relating to the phones you have connected, you must do this before removing PC Suite. For further information, see the *Viewing and removing details of a Nokia 3650* or *Viewing and removing details of a Nokia 3600* online help topics.

To remove PC Suite, proceed as follows:

- 1 Click the Windows **Start** button, point to *Settings*, and click *Control Panel*.
- 2 Double-click **Add/Remove Programs**.
- 3 Select **PC Suite for Nokia 3650** or **PC Suite for 3600** from the list of installed programs. Click **Add/Remove**. A confirmation dialog box opens.
- 4 After confirming that you want to remove PC Suite from your PC, the uninstall program removes the program files and informs you that you need to restart your PC to complete the uninstall process. When your PC restarts, the uninstall program completes the removal of PC Suite from your PC.

Note: Uninstalling PC Suite does not remove the Nokia Connectivity SDK. You can remove the Nokia Connectivity SDK from your PC using the Add/Remove Programs application of the Windows Control Panel.

The uninstall program leaves some files on your PC that contain information about the Nokia devices you have connected to your PC. If you decide to reinstall PC Suite, you will be able to continue using PC Suite as before.

Important safety notes

All the safety instructions in the user guides of your phone and computer also apply when this product is used with the phone.

Remember to make back-up copies of all important data to protect against possible loss or alteration.

19 Reference information

• BATTERY STATEMENTS



Charging and Discharging

Your phone is powered by a rechargeable battery.

Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

Use the battery only for its intended purpose.

Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire!

Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.

Remove the battery only when the phone is switched off.

● **USE PROPER CARE AND MAINTENANCE**

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not attempt to open the phone. Non-expert handling may damage it.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them is not working properly, take it to your nearest qualified service facility. The personnel there will assist you and, if necessary, arrange for service.

• **UNDERSTAND IMPORTANT SAFETY INFORMATION**

Traffic Safety

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Parts of the phone are magnetic. Metallic materials may be attracted to the phone, and persons with a hearing aid should not hold the phone to the ear with the hearing aid. Always secure the phone in its holder, because metallic materials may be attracted by the earpiece. Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

PACEMAKERS

Pacemaker manufacturers recommend that a minimum separation of 20 cm (8 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should always keep the phone more than 20 cm (8 inches) from their pacemaker when the phone is switched on;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if it is adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch your phone off in any facility where posted notices so require.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquified petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Vehicles

Only qualified personnel should service the phone, or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Aircraft

Using your phone while in the air is prohibited. Switch your phone off before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal.



Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, or legal action or both.

Emergency calls

Important: This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore you should never rely solely upon any wireless phone for essential communications (for example, medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

- 1 If the phone is not on, switch it on. Check for adequate signal strength. Some networks may require that a valid SIM card is properly inserted in the phone.
- 2 Press  as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display and ready the phone for calls.
- 3 Key in the emergency number for your present location (e.g. 911 or other official emergency number). Emergency numbers vary by location.
- 4 Press the  key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident - do not cut off the call until given permission to do so.

• CERTIFICATION INFORMATION (SAR)

THIS MODEL PHONE MEETS GOVERNMENT REQUIREMENTS FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy set by Industry Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the Industry Canada is 1.6 W/kg* Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, compliance with the Canadian Standard must be shown. The following values are the highest SAR values for these phone models when tested for use at the ear and worn on the body, as described in this user guide:

| Phone model | FCC ID# | Ear SAR value | Body worn SAR value |
|-------------|-----------|---------------|---------------------|
| Nokia 3600 | QFXNHM-10 | 0.70 W/kg | 1.27 W/kg |
| Nokia 3650 | QFXNHL-8 | 0.55 W/kg | 0.83 W/kg |

(Body-worn measurements differ among phone models, depending upon available accessories and Industry Canada requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for RF exposure.

* The SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of body tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at **www.nokia.com**.

• **USE ACCESSORIES SAFELY**

A few practical rules for accessory operation:

- Keep all accessories out of the reach of small children.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that any vehicle-installed accessories are mounted and are operating properly.
- Installation of any complex car accessories must be made by qualified personnel only.
- Use only batteries, chargers, and accessories that have been approved by the phone manufacturer. The use of any other types could invalidate any approval or warranty applying to the phone and could be dangerous.

• **ACCESSORIES**

Original Nokia accessories ensure the best possible operation of your Nokia mobile phone in various conditions.

Specifications are subject to change without notice. The availability of particular products and services may vary by region. Please check with the Nokia dealer nearest you. Operations and some features are network dependent. Nokia enhancements enable the best possible operation of your Nokia 3600 series mobile phone in various conditions. Variation in operation times will occur depending on SIM card, network and usage settings, usage style and environments. Please check the availability of WAP services with your network operator and/or WAP service provider. The availability of Bluetooth wireless technology may vary by country and Bluetooth products are not approved for use everywhere. Please check with the local authorities.

Audio accessories

WIRELESS HEADSET HDW-2

The Nokia Wireless Headset HDW-2 is designed with Bluetooth technology and is compatible with Nokia 3600 series phones and phones supporting the Bluetooth 1.1 specification and Headset or Handsfree profiles.



The compact headset gives hands-free control of your phone without cables or wires. The earpiece fits in either ear allowing for convenient and discreet access to all basic call controls. Then Answer/End button lets you answer and make calls, redial, and switch the audio back and forth between the handset and headset. A separate volume control lets you change the call volume as necessary while moving from place to place.

To maximize call security, the headset also supports encryption of the wireless connection for compatible phone models.

HEADSET HDE-2

The HDE-2 headset is a small and lightweight portable headset for easy handsfree operation. It has a clip to hold the headset firmly in place.



HEADSET HDC-5

The HDC-5 headset, with a remote button, connects directly to the phone. No extra adaptor is required, and the remote control is provided.

DUAL HEADSET HDD-1

The HDD-1 Dual Headset provides comfortable handsfree operation with a remote control button for answering and ending calls.

RETRACTABLE HEADSET HDC-10

The HDC-10 Retractable Headset is a compact headset with a retractable mechanism and remote control.



BOOM HEADSET HDB-5

HDB-5 Headset provides handsfree functionality and a new "over the ear" concept providing excellent audio quality.



Battery

The 850 mAh, Li-Ion based BL-5C battery provides power in a thin and light package. It provides a talk time of up to 2-4 hours and up to 150-200 hours standby time. Charging time is one hour and 35 minutes.



Variation in operation times will occur depending on SIM card, network and usage settings, usage style and environments. Talk time is reduced by 5 percent if Enhanced Full Rate is active, and increased by up to 30% if Half Rate is active.

Chargers

Your Nokia 3600 series phone uses the ACP-12U standard charger and mobile chargers LCH-9 and LCH-12. The LCH-12 Cigarette Lighter charger can be used with 12 Vdc or 24 Vdc. The 3600 series phone is also compatible with the ACP-8U travel charger.



ACP-12U

Car accessories

WIRELESS CAR KIT CARK-112

The wireless car kit supports Bluetooth 1.1 specification and offers a convenient handsfree option in a car, with a remote control button. The kit includes the Remote Control Button CUW-2, Handsfree Unit HFW-1, Microphone HFM-8, HF Speaker HFS-12, and power cable PCU-4.

MOBILE HOLDER MBC-16

The MBC-16 Mobile Holder has ergonomic release buttons and a swivel mount. It supports use with the mobile charger and Plug-in HF Car Kit.

PLUG-IN HF CAR KIT PPH-1

This handsfree car kit includes a built-in speaker. It uses the phone microphone, but also has a connector for an external microphone, HFM-8.

HEADREST HANDSFREE BHF-2

This headrest installs on a car headrest for handsfree audio. The terminal charges with the LCH-9 or LCH-12 Cigarette Lighter charger.

MICROPHONE HFM-8

This HFM-8 is a small, directional microphone.

Memory card

The 64 MB memory card provides removable storage for your phone. The memory card increases available memory and storage for your multimedia files like video clips, and sound files, photos, messaging information, or to backup information from your phone's memory.



• GLOSSARY

| | |
|---------------------------------------|--|
| Business card | A business card is the same as an entry in the phone book. It may contain a name, phone number, and text entry. It can also be sent to other devices. |
| Call forwarding | A network services feature you use to forward incoming calls to another number. |
| Call lists | A list used to track numbers for incoming, outgoing, or missed calls. |
| Call log | A log that registers information about calls you make and receive. |
| Call timers | Timers used to track the amount of time you spend on calls. |
| Call waiting | A network services feature that enables your phone to beep while you are in the middle of a call. The beep lets you know that someone else is calling you. |
| Electronic serial number (ESN) | The identification number that is assigned to the phone. This number is located under the battery. |
| In-call options | Features available for use while you are in a call. |
| Keypad | Locks the keypad to prevent accidental key presses. |
| Keypad tones | The tone you hear when you press a key. |
| Menu | A list of choices you can make to change settings on your phone or use various phone features. |
| Predictive text | A method of entering information in your phone that uses a dictionary to predict, or guess, what you are writing. |

| | |
|----------------------|--|
| Profile | A group of settings you can use to customize the way your phone works. |
| Quick save | A fast method for saving a number. |
| Ringing tone | The sound your phone makes when you receive a call. Ringing tones can be ringing sounds or short tunes. |
| Scroll bar | A bar that appears on the right side of the screen when you scroll through the main menus. |
| SMS | The quick way to say short message service. |
| Start screen | Your phone's idle screen. |
| Voice mail | A network services feature that enables people who call and miss you to leave a voice message on your phone. |
| Warning tones | Sounds your phone makes during error conditions, during confirmations, when the battery is low, and when you need to recharge the battery. |

• TECHNICAL INFORMATION

| Feature | Specification |
|-------------------------------------|--|
| Weight | 4.5 oz. (130 g) with 850 mAh Li-Ion battery |
| Size | 139 cc |
| Frequency Range 3650 | Lowband 900 880 - 915 MHz (TX) 925 - 960 MHz (RX) Highband 1900 1850 - 1910 MHz (TX) 1930 - 1990 MHz (RX) |
| Frequency Range 3600 | Lowband 850 824 - 849 MHz (TX) 869 - 894 MHz (RX) Highband 1900 1850 - 1910 MHz (TX) 1930 - 1990 MHz (RX) |
| Transmitter Output Power | Lowband up to 2W Highband up to 1W |
| Battery Voltage | 3.7 V nominal |
| Operating Temperature | -10°C to + 55°C (14°F to + 131°F) |
| Number of Channels 3650 | 194 lowband 299 highband |
| Number of Channels 3600 | 124 lowband 299 highband |

• TROUBLESHOOTING

Memory low

When following notes are shown, the phone memory is low and you must start to delete some data: *Not enough memory to perform operation. Delete some data first.* or *Memory low. Delete some data.*

In the event follow the instructions below:

- To view what kind of data you have and how much memory the different data groups consume, go to **Menu**→**Tools**→**App. Manager** and select **Options**→*Memory details*.
- To avoid memory getting low, you should regularly delete, or transfer to your memory card:
 - messages from the Inbox, Drafts, and Sent folders in Messaging
 - retrieved e-mail messages from the phone memory
 - saved browser pages and
 - images and photos in Images
- If you want to delete contact information, calendar notes, call timers, call cost timers, game scores, or any other data, go to the respective application to remove the data.

Clearing calendar memory - To remove more than one event at a time, go to the Month view and select **Options**→*Delete entry*→ and delete either

- *Before date* - to delete all calendar notes which take place before a certain date. Enter the date before which all calendar notes will be deleted, or
- *All entries* - to delete all calendar notes.

Erasing log information - To erase all the log contents, Recent calls log, and Messaging delivery reports permanently, go to **Menu**→*Log* and select **Options**→*Clear log* or go to *Settings*→*Log duration*→*No log*.

Different ways to store data:

- use PC Suite for Nokia 3650 or PC Suite for Nokia 3600 to take a backup copy of all data to your computer
- send images to your e-mail address and then save the images to your computer, or
- send data via infrared or Bluetooth to another device

• FREQUENTLY ASKED QUESTIONS (FAQ)

Phone display

Q. Why do missing, discolored, or bright dots appear on the screen every time I turn on my phone?

- A. This is an intrinsic characteristic of the active matrix display. Your phone's display contains multiple switching elements to control the pixels. A small number of missing, discolored, or bright dots on the screen might exist.

Camera

Q. Why does the image appear dark when I am taking a picture with the Camera or viewing images?

- A. The display contrast setting affects the appearance of images. Check the display contrast setting and adjust it to lighter. Go to **Settings**→ *Phone settings*→ *Display*→ *Contrast*.

Q. Why do images look smudgy?

- A. Check that the camera lens protection window is clean. To clean the window follow the instructions in "Use proper care and maintenance" on page 155.

Bluetooth

Q. Why can't I end a Bluetooth connection?

- A. If another device is pairing with your phone but not sending data, and leaves the connection open, then the only way to disconnect is to deactivate the Bluetooth link altogether. Go to Bluetooth and select the setting Bluetooth→ Off.

Q. Why can't I find my friend's Bluetooth enabled device.

- A. Check that both have activated Bluetooth.

Check that the distance between the two devices is not over 10 meters or that there are no walls or other obstructions between the devices.

Check that the other device is not in 'Hidden' mode.

Multimedia messaging**Q. What should I do when the phone tells that it cannot receive a multimedia message because memory is full?**

- A. The amount of memory needed is indicated in the error message: *Not enough memory to retrieve message. Delete some data first.* To view what kind of data you have and how much memory the different data groups consume, go to **Menu**→**Tools**→**App. Manager** and select **Options**→**Memory details**. After you have freed up memory, the multimedia message center tries to send the multimedia messages again automatically.

Q. What should I do when the phone gives the message: *Unable to retrieve multimedia message. Network connection already in use.* ?

- A. End all active data connections. Multimedia messages cannot be received if another data connection using a different gateway address is active for WAP or e-mail.

Q. How can I end the data connection when the phone starts a data connection again and again? The notes: *Retrieving message or Trying to retrieve message again* are shown briefly. What is happening?

- A. The phone is trying to retrieve a multimedia message from the multimedia messaging center.

Check that the settings for multimedia messaging have been defined correctly and that there are no mistakes in phone numbers or addresses. Go to **Messaging** and select **Options**→**Settings**→**Multimedia message**.

To stop the phone from making a data connection, you have the following options. Go to **Messaging** and select **Options**→**Settings**→**Multimedia message**.

- Select *On receiving msg.*→ *Defer retrieval* if you want the multimedia messaging center to save the message to be retrieved later, for example, after you have checked the settings. After this change, the phone still needs to send information notes to the network. To retrieve the message later, select *Defer retrieval*.
- Select *On receiving msg.*→ *decline message* - if you want to decline all incoming multimedia messages. After this change, the phone needs to send information notes to the network and the multimedia messaging center will delete all multimedia messages that are waiting to be sent to you.
- Select *Multimedia reception*→ *Off* - if you want to ignore all incoming multimedia messages. After this change the phone will not make any network connections related to multimedia messaging.

Images

Q. Is the format of the image I am trying to open supported?

- A. See page 55 for further information on the supported image formats.

Messaging

Q. Why can't I select a contact?

- A. If you cannot select a contact in the Contacts directory, the contact card does not have a phone number or an e-mail address. Add the missing information to the contact card in the Contacts application.

Calendar

Q. Why are the week numbers are missing?

- A. If you have changed the Calendar settings so that the week will start on some other day than Monday then the week numbers will not be shown.

Browser services

Q. *No valid access point defined. Define one in WAP settings.*

- A. Insert proper browser settings. Contact your service provider for instructions.

Log

Q. Why does the log appear empty?

- A. You may have activated a filter and no communication events fitting that filter have been logged. To see all events, select **Options**→ *Filter*→ *All communication*.

PC connectivity

Q. Why do I have problems in connecting the phone to my PC?

- A. Make sure that PC Suite for Nokia 3650 or PC Suite for Nokia 3600 is installed and running on your PC. See the **Installation guide for PC Suite** on the CD-ROM in the 'Install' section. For further information on how to use the PC Suite for Nokia 3600 series phones, see the PC suite online help.

Access codes

Q. What is my password for the lock, PIN, or PUK codes?



- A. The default lock code is **12345**. If you forget or lose the lock code contact your phone dealer.

If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.

For information about passwords, contact your access point provider, for example, a commercial Internet service provider (ISP), WAP service provider, or network operator.

Application not responding

Q. How do I close an application that is not responding?

- A. Open the application switching window by pressing and holding . Then scroll to the application, and press  to close the application.

Nokia One-Year Limited Warranty

Nokia warrants that the Nokia wireless phone and accessories are free from defects in material and workmanship. The warranty period for the Phone (Radio) units and all accessories (excluding carry cases) is twelve (12) months from the date of purchase OR fourteen (14) months from date of wholesale shipment from Nokia, OR fifteen (15) months from the date of manufacture by Nokia. The warranty period for the Carry cases is three (3) months from the date of purchase or five (5) months from the date of wholesale shipment from Nokia.

During the warranty period, Nokia will, at its option, repair or replace the defective product free of charge. Replacement Product may be either new or remanufactured or refurbished.

However, if Nokia determines that the warranty conditions cannot be applied, the purchaser will be billed for the repair and shipping.

EXCEPTIONS

This warranty is subject to the following exceptions:

1 Mobile or fixed installation, which is not in accordance with the installation instructions, published by Nokia, will void the warranty.

Damage caused by a repair or an attempt to repair by other than a service centre authorized by Nokia will void the warranty;

2 This warranty covers normal consumer use and does not cover defects or damage to any product which, in the sole opinion of Nokia, has been subject to: improper storage, exposure to moisture or dampness, exposure to fire, sand, dirt, windstorm, lightning, or earthquake; to theft, battery leakage, unauthorized modification, misuse, neglect, abuse, misapplication, accident, alteration, improper installation, maladjustment of consumer controls, or abnormal operating conditions, or which has been attributable to acts of God;

- 3** Fuses are not covered by the warranty;
- 4** This warranty does not cover defects or damages caused by a product which is not approved by Nokia to be connected to its wireless phone;
- 5** This warranty does not cover defects or damages caused by improper or defective function of the carrier system or by inadequate signal reception by the antenna;
- 6** Removal and reinstallation costs are not covered by this warranty;
- 7** This warranty is applicable only to products bought through Nokia Products Ltd. in Ajax, Ontario, Canada, and sold either in Canada or Bermuda.
- 8** Removal, alteration, or defacing of the Serial Number Plate, or the accessory Date Code Labels will void the warranty.

In no event shall Nokia be liable for incidental, special, or consequential damages, direct or indirect, loss of unanticipated benefits or profits, loss of use of its wireless telephone, resulting from the use of its wireless phone, or its accessories, or arising from any breach of this warranty.

CLAIM PROCEDURE

In order to obtain warranty performance, return the defective unit to the Nokia Service Centre with transportation charges prepaid (Shipping of the repaired unit may be paid by Nokia, in which case Nokia shall have risk of loss or damage during this shipment).

The proof of date of purchase will be required before in-warranty service is rendered.

Maintenance and service may be obtained in any authorized service centre in Canada.

EXTENSION OF WARRANTY PERIOD

When a repair is made, an extra 90-day service warranty is given to the labour and parts of the repair concerned. If replacement of a faulty unit is applied, instead of repairing, this 90-day service warranty is applied to the replaced unit.

Besides this 90-day service warranty, the warranty repairs or replacements do not affect the original warranty conditions, which are determined by the date of purchase.

THE FOREGOING WARRANTY IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE.

Some provinces do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

FOR WARRANTY SERVICE LOCATIONS, CONTACT YOUR SERVICE PROVIDER/RETAILER/DEALER OR DIRECTLY TO:

NOKIA PRODUCTS LIMITED

601 Westney Road South

Ajax, Ontario L1S 4N7

Tel: 905-427-1373

1-888-226-6542

Website: **www.nokia.ca**

For products being returned to Nokia or its authorized service centres, the service provider/retailer/dealer shall prepay shipping charges, taxes, duties, insurance. Nokia shall have no risk for loss or damage during this shipment.

NOTE: As warranty is automatically registered, no further action is required by the consumer.

Index

Numerics

- 1-touch dialing 52
- Making calls 20

A

- Access codes 40
- Access points 33
 - Settings 36
 - Settings, Advanced 38
- Access points, glossary explanation 33
 - Service provider, glossary explanation 33
- Accessories
 - Settings 46
- Activating loudspeaker
- Alarm clock 115
 - Snooze 115
- Animations 60
- Answering a call 21
 - Automatic 46
- Applications 127
 - Installing a Java application 128
 - Java application settings 129
 - Opening a Java application 129
 - Uninstalling a Java application 129
- Attachments
 - Retrieving 91
 - Viewing 91
- Audio files
 - See *Media files*
- Automatic answer 46

B

- Battery information 154

Bluetooth 134

- Cancelling pairing 138
- Connection requests 136
- Connection status indicators 137
- Device icons 137
- Disconnecting 139
- Factory set passcode 136
- Pairing 136
- Pairing requests 136
- Passcode, glossary explanation 136
- Receiving data 139
- Sending data 136
- Settings 135
- Short names for paired devices 138

Bookmark, glossary explanation 121

Browser

- browser access points,
see *Access points*
- Connecting 120
- Emptying memory 125
- Ending connections 125
- Icons 121
- WAP pages 119
- XHTML pages 119

Browsing 122

Buffering

- Glossary explanation 66
- Business card, glossary explanation 53
- Sending 53

C

- Cache, glossary explanation 126
 - Emptying 125
- Calculator 111
- Calendar 105
 - Alarm 108

- Calendar entry fields 106
- Deleting many entries
 - simultaneously 169
- Sending entries 109
- Settings 108
- Stopping alarms 109
- Symbols 107
- Views 107
- Call cost limit
 - Resetting the counter 27
 - Set by a service provider 26
- Call register
 - See *Log*
- Call restrictions 45
- Calling 19
- Calls
 - 1-touch dialing 20
 - Answering 21
 - Charging units 26
 - Conference calls 20
 - Cost limit 26
 - Declining 21
 - Dialed 25
 - Duration 25
 - Forwarding 21
 - International 19
 - Missed 24
 - Options during a call 22
 - Received 24
 - Settings 31
 - Settings for forwarding 23
 - Transferring 23
 - Using the Contacts directory 19
- Camera 55
 - Image types 57
 - Memory card 58
 - Memory consumption 58
- CD-ROM 141
- Cell broadcast messages 93
- Cell info display 46
- Certificates 43
 - Trust settings 44
- Charges
 - Packet data 35
- Clearing memory
 - Calendar entries 169
 - Log information 169
- Clip
 - See *Video recorder*
- Clock 115
 - Alarm 115
 - Settings 115
- Composer 112
 - Adjusting sound volume 112
 - Adjusting tempo 112
 - Changing tone style 112
 - Listening to tones 112
- Computer connections 141
- Conference calls 20
- Connection indicators
 - Bluetooth 137
 - Data connections 12
 - Infrared 140
- Connection settings 33
- Contact cards
 - Adding voice tags 50
 - Assigning 1-touch dialing numbers 52
 - Assigning default numbers and addresses 49
 - Attaching ringing tones 52
 - Changing voice tags 52
 - Deleting voice tags 52
 - Inserting pictures 49
 - Listening to voice tags 52
 - Removing ringing tones 53
 - Voice tags 50

- Contact groups 53
 - Adding many members at the same time 54
 - Adding ringing tones 52
 - Removing members 54
- Converter 113
 - Adding exchange rates 114
 - Converting currencies 114
 - Converting units 113
- Copying
 - Contacts between the SIM card and phone memory 47
 - Text 75
- Creating
 - Contact cards 47
- Cutting
 - Text 75

D

- Data connections
 - Indicators 12
 - Settings
- Date, settings 40
- Declining calls 21
- Definition of terms 168
- Deleting
 - Calendar entries 106
 - Contact cards 48
- Delivery reports 70
- Dialed numbers 25
- Digital rights management 125
- Disconnecting
 - Bluetooth 139
- Display settings 31
- DNS, Domain Name Service,
glossary explanation 38
- DRM 125
- DTMF tones, glossary explanation 23

E

- Editing
 - Calendar entries 105
 - Contact cards 48
 - Text 72
- E-mail 81
 - Attachments 91
 - Deleting 92
 - Offline 89
 - Online 88
 - Opening 90
 - Remote mailbox 88
 - Retrieving from mailbox 89
 - Saving attachments 92
 - Settings 97
- Emergency calls 159
- Erasing
 - Call cost counters 27
 - Log 27
 - Recent calls log 25

F

- Favorites 103
 - Adding a shortcut 103
- File formats
 - JAD and JAR 130
 - RealOne Player 65
 - SIS file 130
 - Supported 91
- Fixed dialing 42
- Folders, creating, organizing items
to folders 16
- Forwarding calls 21

G

- General settings 29
- GIF animations 60
- glossary 168
- GPRS
 - See *Packet data*

H

Handsfree

See *Loudspeaker*

Headset 17

High speed data, glossary
explanation 34

HSCSD

See *High speed data*

I

Idle state

See *Standby mode*

Image modes 57

Images 59

Formats 61

Full screen 60

Keyboard shortcuts when
viewing images 61

Memory consumption 58

Moving the focal point 61

Organizing 61

Picture messages folder 62

Receiving from a digital camera 59

Rotating 61

Viewing image details 61

Zooming 60

Indicators 11

Data connections 12

Voice message 33

Info service 93

Infrared 139

Installing software 131

Internet access points (IAP)

See *Access points*

Internet service provider, glossary
explanation

IP address, glossary explanation 38

ISDN, glossary explanation 37

ISP

See *Internet service provider*

J

JAD and JAR files 130

Java

See *Applications*.

JPEG, glossary explanation 55

L

Language

for writing 30

Limit for call costs 26

Lock code 41

Log

Erasing contents 27

Filtering 27

Recent calls 24

Settings 28

Loopset

Activating 46

Loudspeaker

Activating 17

Turning off 17

M

Mailbox 88

Disconnecting 90

Making calls 19

Media files

File formats 65

Glossary explanation 65

Playing 65

Sending 67

Memory card 116

Camera 58

Consumption 118

Format 118

Password 118

Restore 118

Video clips 116

- Memory low
 - Troubleshooting 169
 - Viewing memory consumption 118, 132
- Menu 13
 - Menu key 13
 - Rearranging the main Menu 14
- Messaging
 - Delivery reports 70
 - General settings 100
 - Inbox 83
 - Main view 69
 - Messages on the SIM card 93
 - Multimedia messages 78
 - My folders 87
 - Picture messages 77
 - Saving picture message graphics 62
 - Settings 94
 - Text messages
 - Writing e-mail 81
 - Writing text 72
- Missed calls 24
- Modem
 - Using your phone as a modem 141
- Multimedia messages 78
 - Playing sounds 85
 - Re-playing sounds 85
 - Viewing 84
- Music files
 - See *Media files*
- My folders 87

N

- Notes 115

O

- Offline 89

- Online 88
- Organizing
 - Menu 14

P

- Packet data 34
 - Connection timer 28
 - Data counter 28
 - Glossary explanation 34
 - Pricing 35
 - Settings 39
- Pairing, glossary explanation 136
- Password
 - Memory card 118
- Pasting
 - Text 75
- PC
 - Connecting 141
- Phonebook
 - See *Contacts*
- Pictures
 - Taking 55
 - Viewing 60
- PIN code 41
 - Unblocking 41
- Playing video 64, 65
- Predictive text input 73
 - Tips 74
 - Turning off 75
- Prepaid SIM cards 26
- Prices for packet data 35
- Profiles 101
 - Renaming 102
 - Settings 101

R

- RealOne Player™ 65
 - File formats 65
 - Media guide 66

- Streaming 66
- Volume control 66
- Received calls 24
- Receiving
 - Data via Bluetooth 139
 - Data via infrared 140
 - Ringling tones, Operator logos, and settings, see Smart messages*
- Recent calls log 24
 - Call charging units 26
 - Call cost limit 26
 - Call costs 26
 - Call duration 25
 - Dialed numbers 25
 - Erasing call lists 25
 - Missed calls 24
 - Received calls 24
- Recorder, recording sounds 116
- Recording video 63
- Remote mailbox 88
 - Disconnecting 90
- Removing software 132
- Reports 70
- Resolution, glossary explanation 58
- Retricting calls 45
- Ringling tones 101
 - Adding a personal ringling tone 52
 - Muting 22
 - Receiving in a smart message 86
 - Settings 101

S

- Safety information
 - Care and maintenance 155
 - Electronic devices 156
 - Emergency calls 159
 - Operating environment 156
 - Potentially explosive atmospheres 158

- Traffic safety 156
- Vehicles 158
- Screen saver
 - Settings 31
- Search field 16
- Security
 - Access codes 40
 - Security certificates 43
 - Settings 40
- Sending
 - Calendar entries 109
 - Contact cards, Business cards 53
 - Data via Bluetooth 136
 - Data via infrared 140
 - Media files 66
 - Video clips 64, 66
- Service command editor 94
- Service messages
 - Service message settings 99
 - Service messages 87
- Service provider for data connections, glossary explanation
- Settings 29
 - Access codes 40
 - Accessories 46
 - Applications (Java™) 129
 - Bluetooth 135
 - Calendar 108
 - Call Forwarding 23
 - Call restrictions 45
 - Certificates 43
 - Clock 115
 - Connection 33
 - Date and time 40
 - Device settings 29
 - Display 31
 - E-mail 97
 - Fixed dialing 42

- General settings for
 - Messaging 100
- Info service 99
- Lock code 41
- Log 28
- Messaging 94
- PIN code 41
- RealOne Player 67
- Security 40
- Service messages 99
- Sounds 101
- Text messages 94
- Video recorder 64
- Shortcuts
 - in Favorites 103
 - in Images 61
- SIM card
 - Copying names and numbers 47
 - Messages 93
 - Names and numbers 28
 - Viewing messages on SIM 28
- SIS file 130
- Smart messages
 - Receiving 85
 - Sending 77
- Snooze 115
- Software
 - Installing 131
 - Removing 132
 - Transferring a .SIS file to your phone 131
- Sound files
 - See *Media files*
- Sounds 101
 - Removing a personal ringing tone 53
- Standby mode 10
 - Indicators 11
 - Settings 30
- Stopping
 - Alarm clock 115
 - Calendar alarm 109
- Streaming
 - Glossary explanation 65
- Switching between applications 14
- Symbols for
 - Calendar entries 107
- T**
 - Taking pictures 55
 - Text input 72
 - Text message service center
 - Adding new 95
 - Text messages 76
 - See *Text messages*
 - Writing and sending
 - Text templates 87
 - Thumbnails
 - In a contact card 49
 - Time, settings 40
 - To-do 109
 - Tones 101
 - Ringing tone 102
 - Touch tones 23
 - Traditional text input 72
 - Transferring calls 23
 - Troubleshooting 169
- U**
 - Unit converter 113
 - USSD commands 94
- V**
 - vCard format 53
 - Video clips
 - See *Media files*
 - Video player
 - See *RealOne Player™*

- Video recorder 63
 - Memory card 64
 - Saving video clips 63
 - Sending video clips 64
 - Settings 64
 - Video clips 64

- Viewing
 - GIF animations 60
 - Images 60

- Voice dialing 50

- Voice mailbox
 - Changing the number 20
 - Forwarding calls to voice mailbox 23

- Voice recorder 116

- Voice tags 50
 - Adding 50
 - Changing 52
 - Deleting 52
 - Listening 52
 - Making calls 51

- Volume control 17
 - During a call 19

W

- WAP pages
 - Browser 119

- Writing 72
 - Predictive text input 73
 - Predictive text input, turning off 75
 - Traditional text input 72

X

- XHTML browser 119
- XHTML glossary explanation 119
- XHTML pages
 - Browser 119

Z

- Zooming 60

NOTES

NOTES