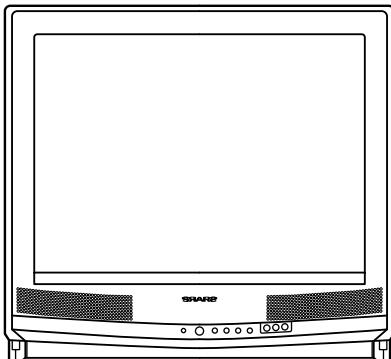


**SHARP****SERVICE MANUAL**

S59G320L-S100

**MODELS****COLOR TELEVISION****Chassis No. SN-80****20L-S100S  
CL20S10, 21ML50**

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

**CONTENTS**

	Page
• ELECTRICAL SPECIFICATIONS .....	1
• IMPORTANT SERVICE SAFETY PRECAUTION .....	2
• LOCATION OF USER'S CONTROL .....	6
• INSTALLATION AND SERVICE INSTRUCTIONS .....	7
• CHASSIS LAYOUT .....	13
• BLOCK DIAGRAM .....	14
• SCHEMATIC DIAGRAMS .....	15
• PRINTED WIRING BOARD ASSEMBLIES .....	19
• REPLACEMENT PARTS LIST .....	22
• PACKING OF THE SET .....	29

**ELECTRICAL SPECIFICATIONS**

POWER INPUT .....	120 V AC 60 Hz
POWER RATING .....	88 W
PICTURE SIZE .....	1,240cm <sup>2</sup> (192sq inch)
CONVERGENCE .....	Magnetic
SWEEP DEFLECTION .....	Magnetic
FOCUS .....	Hi-Bi-Potential Electrostatic
INTERMEDIATE FREQUENCIES	
Picture IF Carrier Frequency .....	45.75 MHz
Sound IF Carrier Frequency .....	41.25 MHz
Color Sub-Carrier Frequency .....	42.17 MHz (Nominal)
AUDIO POWER	
OUTPUT RATING .....	1.3W + 1.3W (at 10% distortion)

SPEAKER	
SIZE .....	8 cm (Round)
VOICE COIL IMPEDANCE .....	8 ohm at 400 Hz
ANTENNA INPUT IMPEDANCE	
VHF/UHF .....	75 ohm Unbalanced
TUNING RANGES	
VHF-Channels .....	2 thru 13
UHF-Channels .....	14 thru 69
CATV Channels .....	1 thru 125
	(EIA, Channel Plan U.S.A.)

**Specifications are subject to change without prior notice.**

**SHARP CORPORATION**

This document has been published to be used for after sales service only.

The contents are subject to change without notice.

## IMPORTANT SERVICE SAFETY PRECAUTION

- Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and the servicing guidelines which follow:

### WARNING

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.
3. Semiconductor heat sinks are potential shock hazards when the chassis is operating.
4. The chassis in this receiver has two ground systems which are separated by insulating material. The non-isolated (hot) ground system is for the B+ voltage regulator circuit and the horizontal output circuit. The isolated ground system is for the low B+ DC voltages and the secondary circuit of the high voltage transformer.

To prevent electrical shock use an isolation transformer between the line cord and power receptacle, when servicing this chassis.



### SERVICING OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

**When servicing the high voltage system, remove the static charge by connecting a 10k ohm resistor in series with an insulated wire (such as a test probe) between the picture tube ground and the anode lead. (AC line cord should be disconnected from AC outlet.)**

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage anode completely.

### X-RADIATION AND HIGH VOLTAGE LIMITS

1. Be sure all service personnel are aware of the procedures and instructions covering X-radiation. The only potential source of X-ray in current solid state TV receivers is the picture tube. However, the picture tube does not emit measurable X-Ray radiation, if the high voltage is as specified in the "High Voltage Check" instructions.  
It is only when high voltage is excessive that X-radiation is capable of penetrating the shell of the picture tube including the lead in the glass material. The important precaution is to keep the high voltage below the maximum level specified.
2. It is essential that servicemen have available at all times an accurate high voltage meter.  
The calibration of this meter should be checked periodically.
3. High voltage should always be kept at the rated value –no higher. Operation at higher voltages may cause a failure of the picture tube or high voltage circuitry and;also, under certain conditions, may produce radiation in exceeding of desirable levels.
4. When the high voltage regulator is operating properly there is no possibility of an X-radiation problem. Every time a color chassis is serviced, the brightness should be tested while monitoring the high voltage with a meter to be certain that the high voltage does not exceed the specified value and that it is regulating correctly.
5. Do not use a picture tube other than that specified or make unrecommended circuit modifications to the high voltage circuitry.
6. When trouble shooting and taking test measurements on a receiver with excessive high voltage, avoid being unnecessarily close to the receiver.  
Do not operate the receiver longer than is necessary to locate the cause of excessive voltage.

# IMPORTANT SERVICE SAFETY PRECAUTION

## (Continued)

### **BEFORE RETURNING THE RECEIVER**

#### **(Fire & Shock Hazard)**


**Before returning the receiver to the user, perform the following safety checks.**

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
  2. Inspect all protective devices such as non-metallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators, etc.
  3. To be sure that no shock hazard exists, check for leakage current in the following manner.
- Plug the AC cord directly into a 120 volt AC outlet, (Do not use an isolation transformer for this test).
  - Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a  $0.15\mu\text{F}$  capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to earth ground.
  - Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor.

- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor.

All checks must be repeated with the AC line cord plug connection reversed. (If necessary, a non-polarized adapter plug must be used only for the purpose of completing these check.)

Any current measured must not exceed 0.5 milliamp. Any measurements not within the limits outlined above indicate of a potential shock hazard and corrective action must be taken before returning the instrument to the customer.

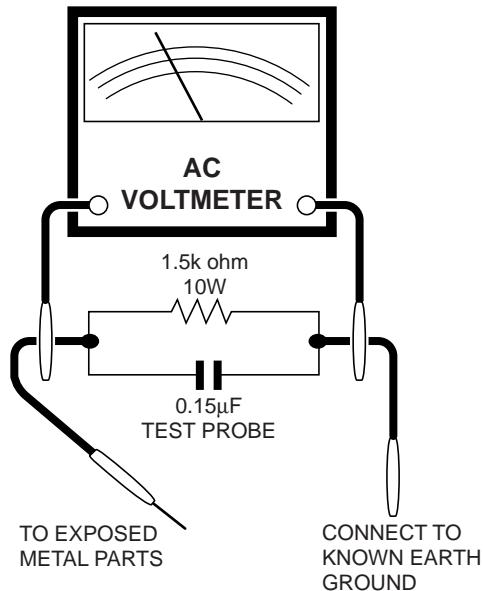

### **SAFETY NOTICE**

Many electrical and mechanical parts in television receivers have special safety-related characteristics. These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.

Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "" and shaded areas in the Replacement Parts Lists and Schematic Diagrams.


For continued protection, replacement parts must be identical to those used in the original circuit. The use of substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire, X-radiation or other hazards.

## PRECAUTIONS A PRENDRE LORS DE LA REPARATION

- Ne peut effectuer la réparation qu' un technicien spécialisé qui s'est parfaitement accoutumé à toute vérification de sécurité et aux conseils suivants.

### AVERTISSEMENT

1. N'entreprendre aucune modification de tout circuit. C'est dangereux.
2. Débrancher le récepteur avant toute réparation.
3. Les déversoirs thermiques à semi-conducteurs peuvent présenter un danger de choc électrique lorsque le récepteur est en marche.
4. Le châssis de ce récepteur possède deux systèmes de masse qui sont séparées par du matériel d'isolation. Le système de masse non-isolée (sous tension) est pour le circuit du régulateur de tension B+ et le circuit de sortie horizontale. Le système de masse isolée est pour les tensions DC B+ basses et le circuit secondaire du transformateur haute tension. Pour éviter tout risque d'électrocution lors de l'entretien de ce châssis, utiliser un transformateur d'isolation entre le cordon de ligne et la prise de courant.

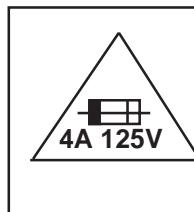

**PRECAUTION: POUR LA PROTECTION CONTINUE CONTRE LES RISQUES D'INCENDIE, REMPLACER LE FUSIBLE PAR UN FUSIBLE DE MEME TYPE 4A-125V.**

### REPARATION DU SYSTEME A HAUTE TENSION ET DU TUBE-IMAGE

**Lors de la réparation de ce système, supprimer la charge statique en branchant une résistance de 10 kΩ en série avec un fil isolé (comme une sonde d'essai) entre la mise à la terre du tube-image et le fil d'anodel. (Le cordon d'alimentation doit être retiré de la prise murale.)**

1. Le tube image dans ce récepteur emploie une protection intégrée contre l'implosion.
2. Par mesure de sécurité, changer le tube-image pour un tube du même numéro de type.
3. Ne pas lever le tube-image par son col.
4. Ne manipuler le tube-image qu'en portant des lunettes incassables et qu'après avoir déchargé totalement la haute tension.

### LIMITES DES RADIATIONS X ET DE LA HAUTE TENSION

1. Tout le personnel réparateur doit être instruit des instructions et procédés relatifs aux radiations X. Le tube-image, seule source de rayons X dans les téléviseurs transistorisés, n'émet pourtant pas de rayons mesurables si la haute tension est maintenue à un niveau préconisé dans la section "Vérification de la haute tension". C'est seulement quand la haute tension est excessive que les rayons X peuvent entrer dans l'enveloppe du tube-image y compris le conducteur de verre. Il est important de maintenir la haute tension en-dessous du niveau spécifié.
2. Il est essentiel que le réparateur ait sous la main un voltmètre à haute tension qui doit être périodiquement étalonné.
3. La haute tension doit toujours être maintenue à la valeur de régime -et pas plus haute. L'opération à des tensions plus élevées peut entraîner une panne du tube-image ou du circuit à haute tension et, dans certaines conditions, peut entraîner une radiation dépassant les niveaux prescrits.
4. Quand le régulateur à haute tension fonctionne correctement, il n'y a aucun problème de radiation X. Chaque fois qu'un châssis couleurs est réparé, la luminosité doit être examinée bout en contrôlant la haute tension à l'aide d'un voltmètre pour s'assurer que la haute tension ne dépasse pas la valeur spécifiée et qu'elle soit correctement réglée.
5. Ne pas utiliser un tube-image autre que celui spécifié et ne pas effectuer de modifications déconseillées du circuit à haute tension.
6. Lors de la recherche des pannes et des mesures d'essai sur un récepteur qui présente une haute tension excessive, éviter de s'approcher inutilement du récepteur.  
Ne pas faire fonctionner le récepteur plus longtemps que nécessaire pour localiser la cause de la tension excessive.

# PRECAUTIONS A PRENDRE LORS DE LA REPARATION

## (Suite)

### VERIFICATIONS CONTRE L'INCENDIE ET LE CHOC ELECTRIQUE


**Avant de rendre le récepteur à l'utilisateur, effectuer les vérifications suivantes.**

1. Inspecter tous les faisceaux de câbles pour s'assurer que les fils ne soient pas pincés ou qu'un outil ne soit pas placé entre le châssis et les autres pièces métalliques du récepteur.
2. Inspecter tous les dispositifs de protection comme les boutons de commande non-métalliques, les isolants, le dos du coffret, les couvercles ou blindages de réglage et de compartiment, les réseaux de résistance-capacité, les isolateurs mécaniques, etc.
3. S'assurer qu'il n'y ait pas de danger d'électrocution en vérifiant la fuite de courant, de la façon suivante:
  - Brancher le cordon d'alimentation directement à une prise de courant de 120V. (Ne pas utiliser de transformateur d'isolation pour cet essai).
  - A l'aide de deux fils à pinces, brancher une résistance de  $1,5 \text{ k}\Omega$  10 watts en parallèle avec un condensateur de  $0,15\mu\text{F}$  en série avec toutes les pièces métalliques exposées du coffret et une terre connue comme une conduite électrique ou une prise de terre branchée à la terre.
  - Utiliser un voltmètre CA d'une sensibilité d'au moins  $5000\Omega/\text{V}$  pour mesurer la chute de tension en travers de la résistance.

- Toucher avec la sonde d'essai les pièces métalliques exposées qui présentent une voie de retour au châssis (antenne, coffret métallique, tête des vis, arbres de commande et des boutons, écusson, etc.) et mesurer la chute de tension CA en-travers de la résistance. Toutes les vérifications doivent être refaites après avoir inversé la fiche du cordon d'alimentation. (Si nécessaire, une prise d'adaptation non polarisée peut être utilisée dans le but de terminer ces vérifications.)

Tous les courants mesurés ne doivent pas dépasser 0,5 mA.

Dans le cas contraire, il y a une possibilité de choc électrique qui doit être supprimée avant de rendre le récepteur au client.

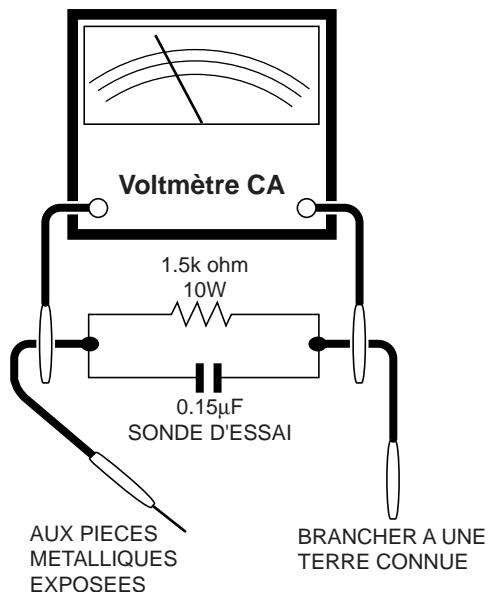

### AVIS POUR LA SECURITE

De nombreuses pièces, électriques et mécaniques, dans les téléviseurs présentent des caractéristiques spéciales relatives à la sécurité, qui ne sont souvent pas évidentes à vue. Le degré de protection ne peut pas être nécessairement augmenté en utilisant des pièces de remplacement étalonnées pour haute tension, puissance, etc.


Les pièces de remplacement qui présentent ces caractéristiques sont identifiées dans ce manuel; les pièces électriques qui présentent ces particularités sont

identifiées par la marque "⚠" et hachurées dans la liste des pièces de remplacement et les diagrammes schématiques.


Pour assurer la protection, ces pièces doivent être identiques à celles utilisées dans le circuit d'origine. L'utilisation de pièces qui n'ont pas les mêmes caractéristiques que les pièces recommandées par l'usine, indiquées dans ce manuel, peut provoquer des électrocutions, incendies, radiations X ou autres accidents.

# LOCATION OF USER'S CONTROL

## Front Panel

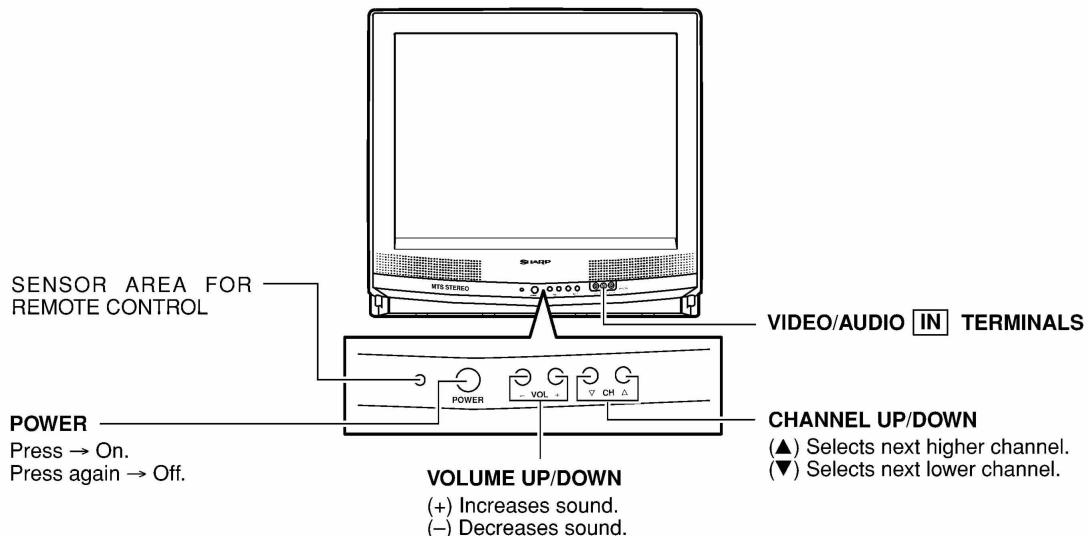

## Basic Remote Control Functions

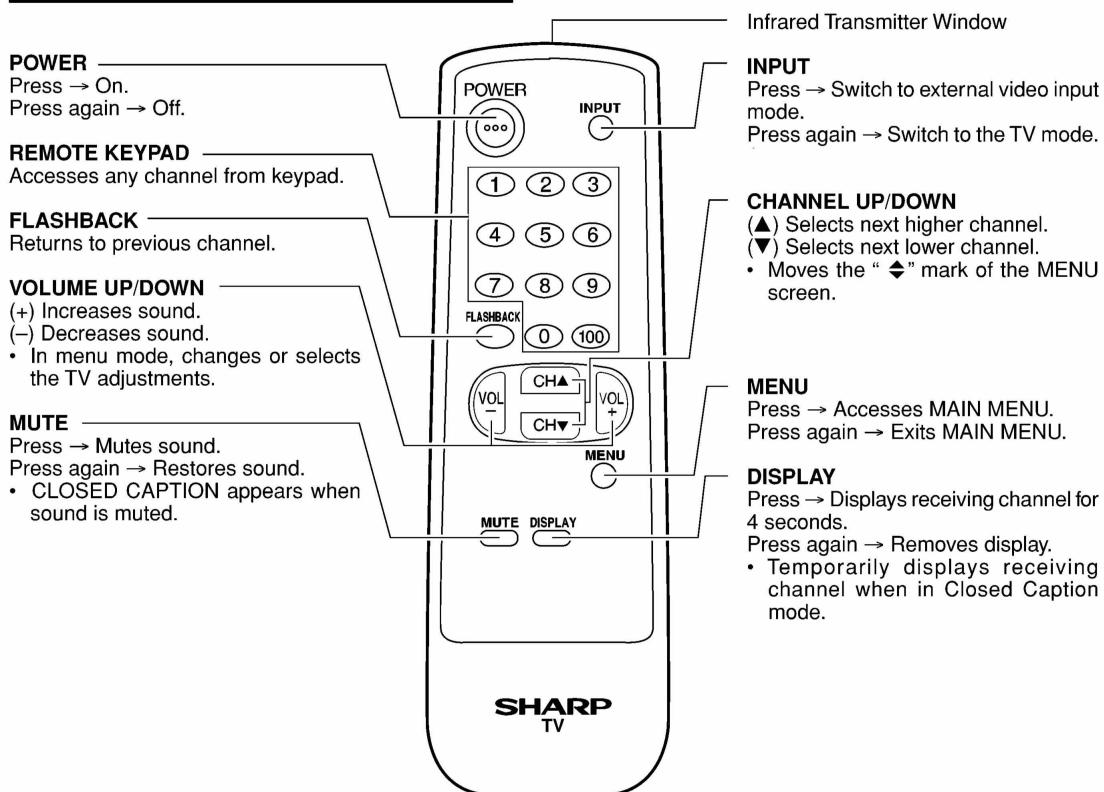

# INSTALLATION AND SERVICE INSTRUCTIONS

- Note:**
- (1) When performing any adjustments to resistor controls and transformers use non-metallic screwdrivers or TV alignment tools.
  - (2) Before performing adjustments, the TV set must be on at least 15 minutes.

## CIRCUIT PROTECTION

The receiver is protected by a 4.0A fuse (F701), mounted on PWB-A, wired into one side of the AC line input.

## X-RADIATION PROTECTOR CIRCUIT TEST

After service has been performed on the horizontal deflection system, high voltage system, B+ system, test the X-Radiation protection circuit to ascertain proper operation as follows:

1. Apply 120V AC using a variac transformer for accurate input voltage.
2. Allow for warm up and adjust all customer controls for normal picture and sound.
3. Receive a good local channel.
4. Connect a digital voltmeter to TP653 and make sure that the voltmeter reads  $22.2 \pm 1.5V$ .
5. Apply external 28.9V DC at TP653 by using an external DC supply, TV must be shut off.
6. To reset the protector, unplug the AC cord and make a short circuit between TP651 and TP652. Now make sure that normal picture appears on the screen.
7. If the operation of the horizontal oscillator does not stop in step 5, the circuit must be repaired before the set is returned to the customer.

## HIGH VOLTAGE CHECK

High voltage is not adjustable but must be checked to verify that the receiver is operating within safe and efficient design limitations as specified checks should be as follows:

1. Connect an accurate high voltage meter between ground and anode of picture tube.
2. Operate receiver for at least 15 minutes at 120V AC line voltage, with a strong air signal or a properly tuned in test signal.
3. Enter the service mode and select the service adjustment "S19" and Bus data "01" (Y-mute on).
4. The voltage should be approximately, 27.0kV (at zero beam).

If a correct reading cannot be obtained, check circuitry for malfunctioning components. After the voltage test, make Y-mute off to the normal mode.

For adjustments of this model, the bus data is converted to various analog signals by the D/A converter circuit.

**Note:** There are still a few analog adjustments in this series such as focus and master screen voltage.  
Follow the steps below whenever the service adjustment is required. See "Table-B" to determine, if service adjustments are required.

## 1. Service mode

Before putting unit into the service mode, check that customer adjustments are in the normal mode. Use the reset function in the video adjustment menu to ensure customer controls are in their proper (reset) position.

## 2. Service number selection

Once in the service mode, press the Ch-up or Ch-down button on the remote controller or at the set. The service adjustment number will vary in increments of one, from "S01" to "M05". Select the item you wish to adjust.

## 3. Data number selection

Press the Vol-up or down button to adjust the data number.

## To enter the service mode and exit service mode.

While pressing the Vol-up and Ch-up buttons at the sametime, plug the AC cord into a wall socket.

Now the TV set is switched on and enters the service mode.

To exit the service mode, turn the television off by pressing the power button.

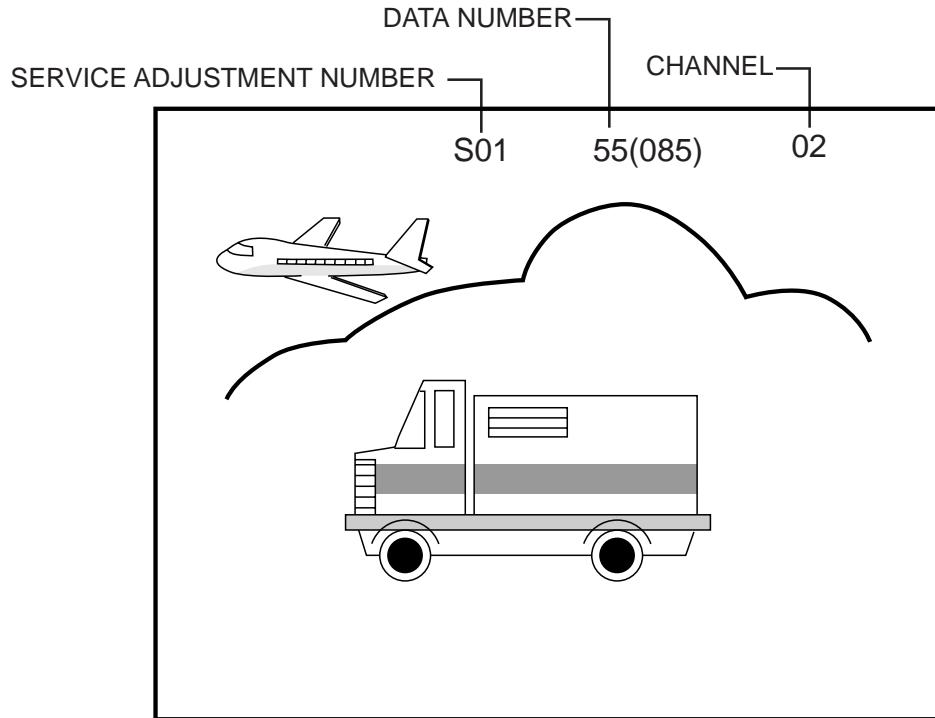


Figure A.

SERVICE NUMBER	ADJUSTMENT ITEM	DATA		ADJUSTMENT CONTENTS
		INITIAL VALUE	RANGE	
S01	PICTURE	55	00-7F	
S02	TINT	46	00-7F	
S03	COLOR	32	00-7F	
S04	BRIGHTNESS	40	00-7F	
S05	SHARPNESS	28	00-3F	
S06	VERTICAL PHASE	00	00-07	
S07	HORIZONTAL PHASE	12	00-1F	
S08	RF-AGC	23	00-3F	
S09	VERTICAL AMP	20	00-3F	
S10	VCO	2C	00-7F	
S11	R CUT-OFF	00	00-FF	
S12	G CUT -OFF	00	00-FF	
S13	B CUT-OFF	00	00-FF	
S14	G GAIN	7F	00-FF	
S15	B GAIN	7F	00-FF	
S16	TRAP(3.58MHz)	00	00 or 01	Must be set to "00"
S17	BALANCE	20	00-3F	Must be set to "20"
S18	C.C.POSITION	17	00-7F	
S19	Y-MUTE	00	00,01,03	"00" = Normal, "01" = No-Y, "03" = No Vertical
S20	ENERGY SAVE OFFSET	20	00-3F	Must be set to "23"
S21	D.D.E. OFFSET	03	00-1F	Must be set to "03"
S22	OSD SETUP	00	00-03	Must be set to "00"
S23	TUNER SETUP	00	00-01	Must be set to "00"
OP	OPTION	30	00-FF	Must be set to "06"
M01	MTS LEVEL	0A	00-F	
M02	STERO-VCO	20	00-3F	
M03	FILTER	1C	00-3F	
M04	LOW SEPARATION	20	00-3F	
M05	HIGH SEPARATION	1B	00-3F	

Table - A

Holding down both the CH-up/down buttons on the TV set at service mode for more than 2 seconds will automatically write the above initial values into IC2101.

PART REPLACED	ADJUSTMENT		NOTES
	NECESSARY	UNNECESSARY	
IC2001		X	Data is stored in IC2101.
IC201	X		The adjustment is needed to compensate for characteristics of parts including IC201.
IC2101	X		Holding down both the CH-up/down buttons on the TV set in the service mode for more than 2 seconds will automatically write the above initial values into IC2101.
CRT	X		Adjust items related to picture tube only.

Table - B

## ■ SERVICE ADJUSTMENT

### VCO Adjustment

1. Connect a digital voltmeter between pin (44) of IC201 and ground.
2. Receive a good local channel.
3. Enter the service mode and select the service adjustment "S10".
4. Adjust the data so that digital voltmeter reads 2.2V.
5. Adjustment is completed, remove the voltmeter, return to "normal" mode.

### RF AGC Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S08".
3. Set the data value to point where no noise or beat appears.
4. Select another channel to confirm that no noise or beat appears.

**Note 1 :** You will have to come out of the service mode to select another channel.

**Note 2 :** Setting the data to "00" will produce a black raster.

### Screen Adjustment

1. Connect a digital voltmeter between TP852 and TP853 on the CRT Unit.  
**Note:** These test points may not be provided.  
Then connect the voltmeter to both ends of R852 located near Q852 on the foil side.
2. Receive a good local channel.
3. Enter the service mode and select the service adjustment "S03" and set the data value to "00" to set the color level to minimum. (Record original data code under adjustment "S03" before changing) You may skip this step, if you selected a B/W picture or monoscope pattern.
4. Select the service adjustment "S19" and adjust the data value to "01", this turn off the luminance signal (Y-mute).
5. Select the service adjustment "S04" and adjust data value to obtain 0.17 volts on the digital voltmeter.
6. Adjust the master screen control until the raster darkens to the point where raster is barely seen.
7. Adjust the service adjustments "S11" red, "S12" green and "S13" blue to obtain a good grey scale with normal whites at low brightness level.
8. Select the service adjustment "S19" and reset data to "00". Select the service adjustment "S03" and reset data to obtain normal color level.
9. Remove digital voltmeter, and reset the master screen control to obtain normal brightness range.

### White Balance Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S03" and set to "00" (minimum color)(Record original data code under adjustment "S03" before changing). "S03" does not have to be adjusted, if you selected a B/W picture or monoscope pattern.
3. Alternately adjust the service adjustment data of "S14" and "S15" until a good grey scale with normal whites is obtained.
4. Select the service adjustment "S03" and adjust data to obtain normal color level.

### Sub-Picture Adjustment

1. Receive a good local channel.
2. Make sure the customer picture control is set to maximum.
3. Enter the service mode and select the service adjustment "S01".
4. Adjust the data value to achieve normal contrast range.

### Sub-Tint Adjustment

1. Receive a good local channel.
2. Set customer tint control to center of it's range.
3. Enter the service mode and select the service adjustment "S02".
4. Adjust "S02" data value to obtain normal flesh tones.

### Sub-Color Adjustment

1. Receive a good local channel.
2. Make sure the customer color control is set to center position .
3. Enter the service mode and select the service adjustment "S03".
4. Adjust "S03" data value to obtain normal color level.

## Sub-Brightness Adjustment

1. Receive a good local channel.
2. Make sure the customer brightness control is set to center position.
3. Enter the service mode and select the service adjustment "S04".
4. Adjust "S04" data value to obtain normal brightness level.

## Vertical-Size Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S09".
3. While observing the top and bottom of the screen, adjust "S09" data value to proper vertical size.

## Vertical Phase Adjustment


1. Enter the service mode and select the service adjustment "S06".
  2. Adjust data value to "00" ~ "03".
- Note:** This must be set "00" ~ "03" when changed data retrace line will appear.

## Horizontal Position Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S07".
3. Adjust "S07" data value so that picture is centered.

## Caption Position Adjustment (Horizontal)

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S18".
3. A black text box appears on the screen. (see **Figure B** below)
4. Adjust "S18" data value so that text box is positioned in the center of the screen.

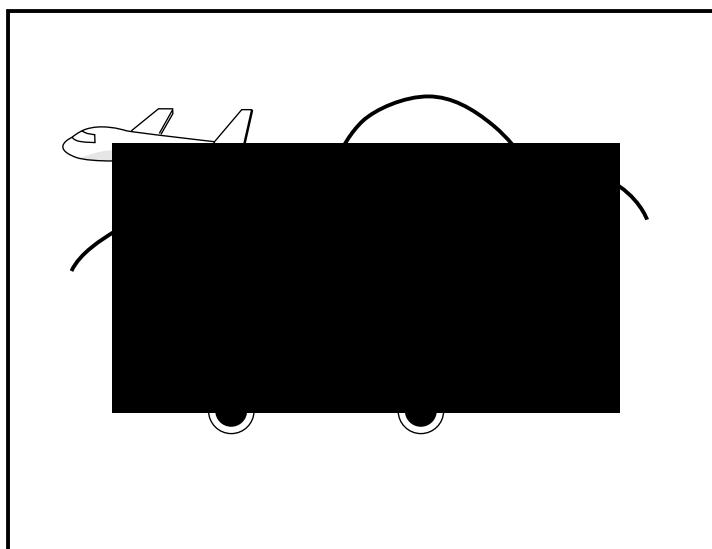

## 3.58MHz Trap Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S16".
3. This is a two position adjustment, "00" is ON, "01" is OFF.
4. Adjust data value to "00" for normal viewing.

## Sharpness, Audio Balance, Energy Save Offset, DDE Offset, OSD Setup, Tuner Setup and Option Adjustments

1. Receive a good local channel.
2. Enter the service mode and select the service adjustments "S05" for sharpness, "S17" for balance, "S20" for energy save offset, "S21" for DDE offset, "S22" for OSD setup, "S23" for tuner and "OP" for option.

### • Sharpness Adjustment

3. Adjust data value to "24" (center of data range) for sharpness adjustment.

### • Audio Balance Adjustment

4. Adjust data value to "20" (center of data range) for Audio balance adjustment.

### • Energy Save Offset Adjustment

5. Adjust data value to "23".

### • DDE Offset Adjustment

6. Adjust data value to "03".

### • OSD Setup Adjustment

7. Adjust data value to "00".

### • Tuner Setup Adjustment

8. Adjust data value to "00".

### • Option Adjustment

9. Adjust data value to "06".

Figure B.

## ■ MTS ADJUSTMENT

### MTS Level Adjustment

1. Feed the following monaural signal to pin (14) of IC3001.  
Monaural signal : 300Hz, 245mVrms
2. Connect the rms voltmeter to pin (39) of IC3001.
3. Enter the service mode and select the service adjustment "M01".
4. Adjust the data so that the rms voltmeter reads.  
 $490 \pm 10\text{mVrms}$ .

### MTS VCO Adjustment

1. Keep the unit in no-signal state.
2. Connect the frequency counter to pin (39) of IC3001.
3. Connect a capacitor ( $100\mu\text{F}$ , 50V) in between positive(+) side of C3005 and ground.
4. Enter the service mode and select the service adjustment "M02"
5. Adjust the data so that the frequency counter reads.  
 $62.94 \pm 0.75\text{kHz}$ .


### Filter Adjustment

1. Feed the following stereo pilot signal to pin (14) of IC3001 .  
Stereo pilot signal: 9.4kHz, 600mVrms.
2. Enter the service mode and select the service adjustment "M03".
3. Adjust the data at the point where "OK" appears on the screen. The "OK" represents the approximate center of the adjustable range of the data.


### Separation Adjustment

1. Connect the rms voltmeter to pin (39) of IC3001.
2. Receive the following composite stereo signal 1.  
Composite stereo signal: 30% modulation, left channel only, noise reduction on, 300Hz
3. Enter the service mode and select the service adjustment "M04".
4. Adjust the data until the AC voltage reading of the rms voltmeter is minimum.
5. Receive the following composite stereo signal 2.  
Stereo signal: 30% modulation, left channel only, noise reduction on, 3kHz
6. Enter the service mode and select the service adjustment "M05".
7. Adjust the data until the AC voltage reading of the rms voltmeter is minimum.
8. Take the above steps 1 thru 7 again for fine adjustment.

# CHASSIS LAYOUT

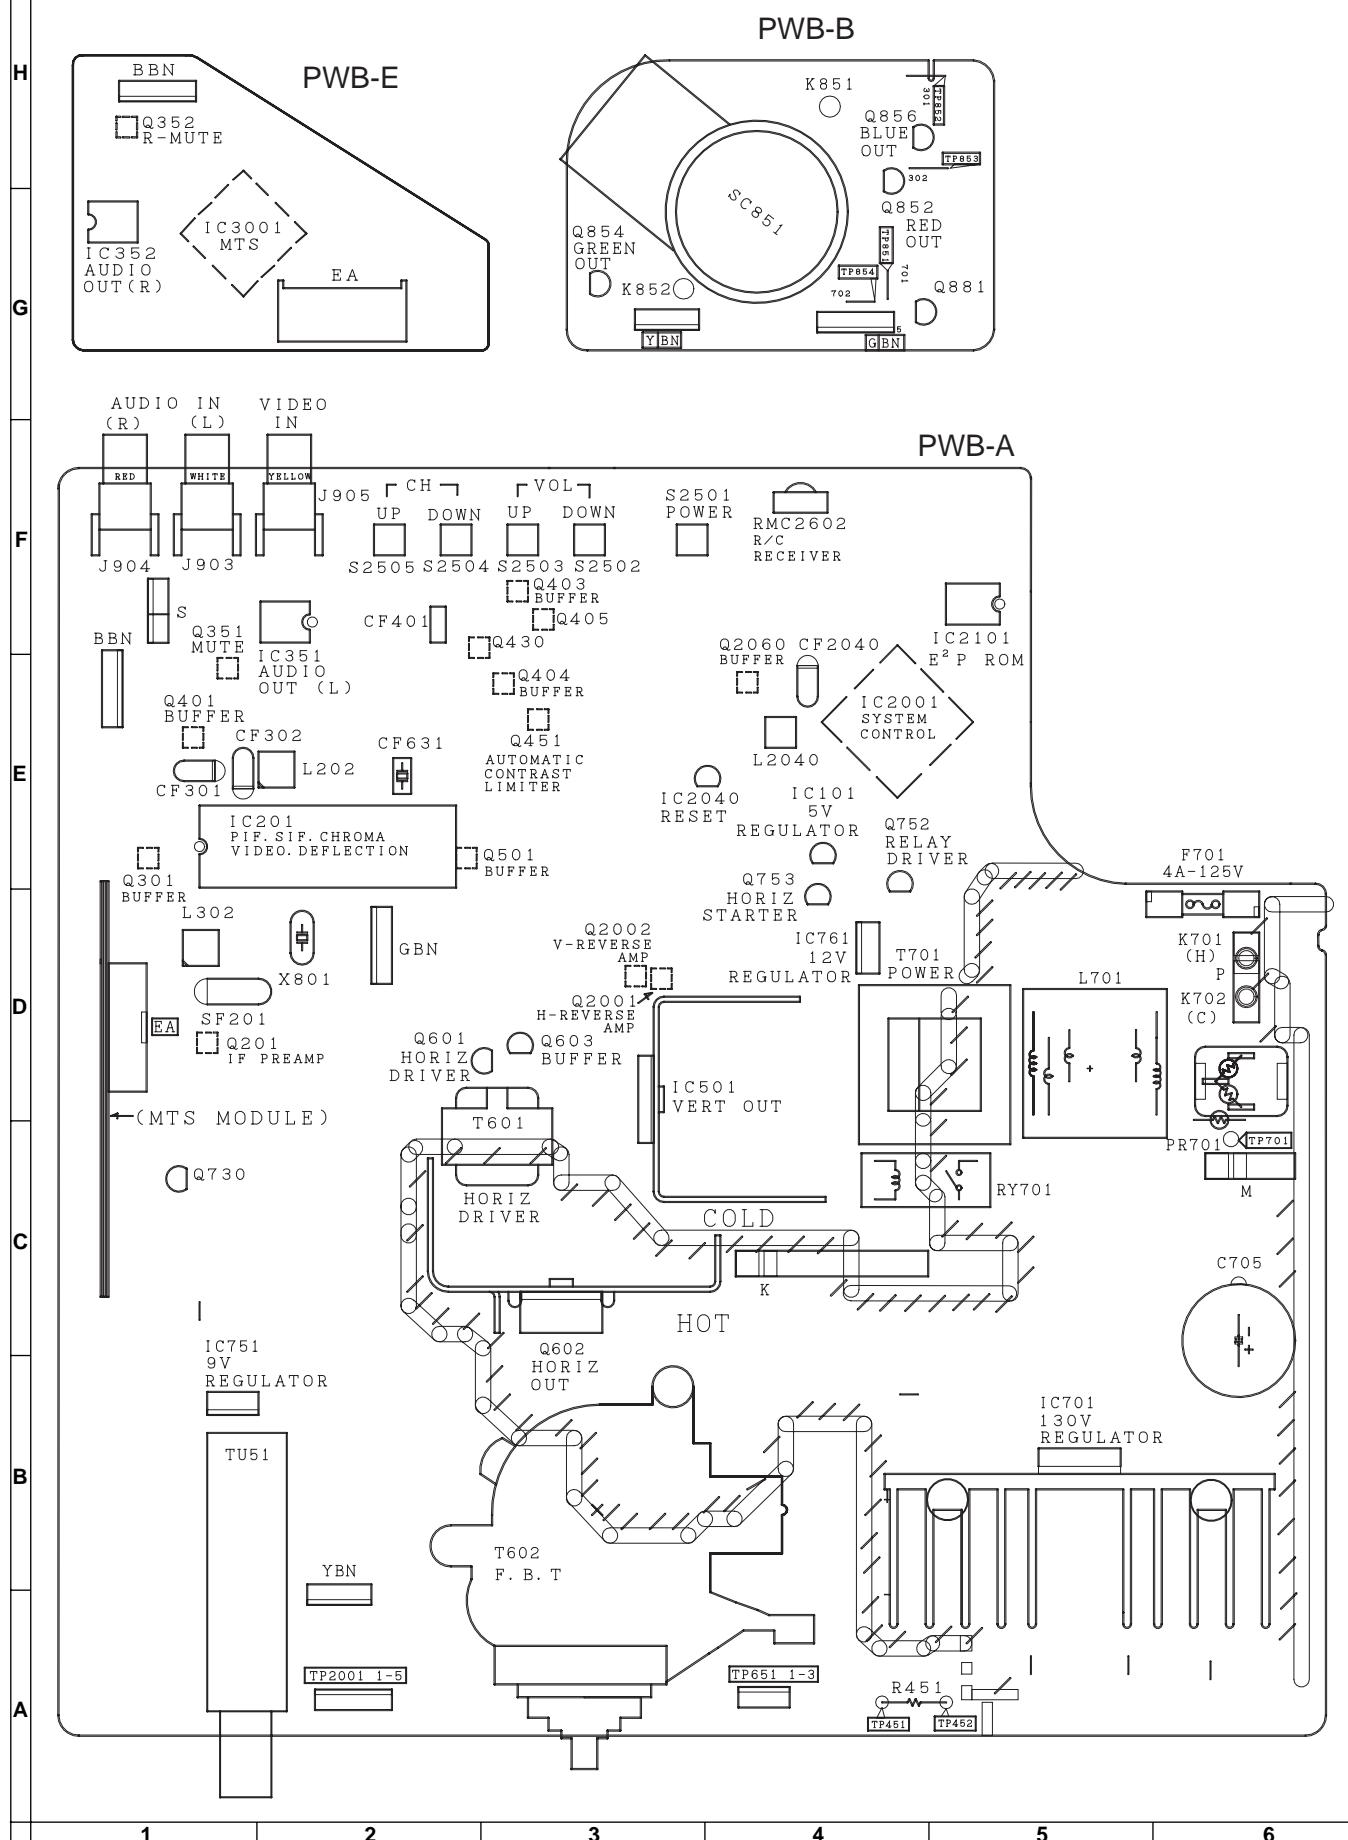

# BLOCK DIAGRAM

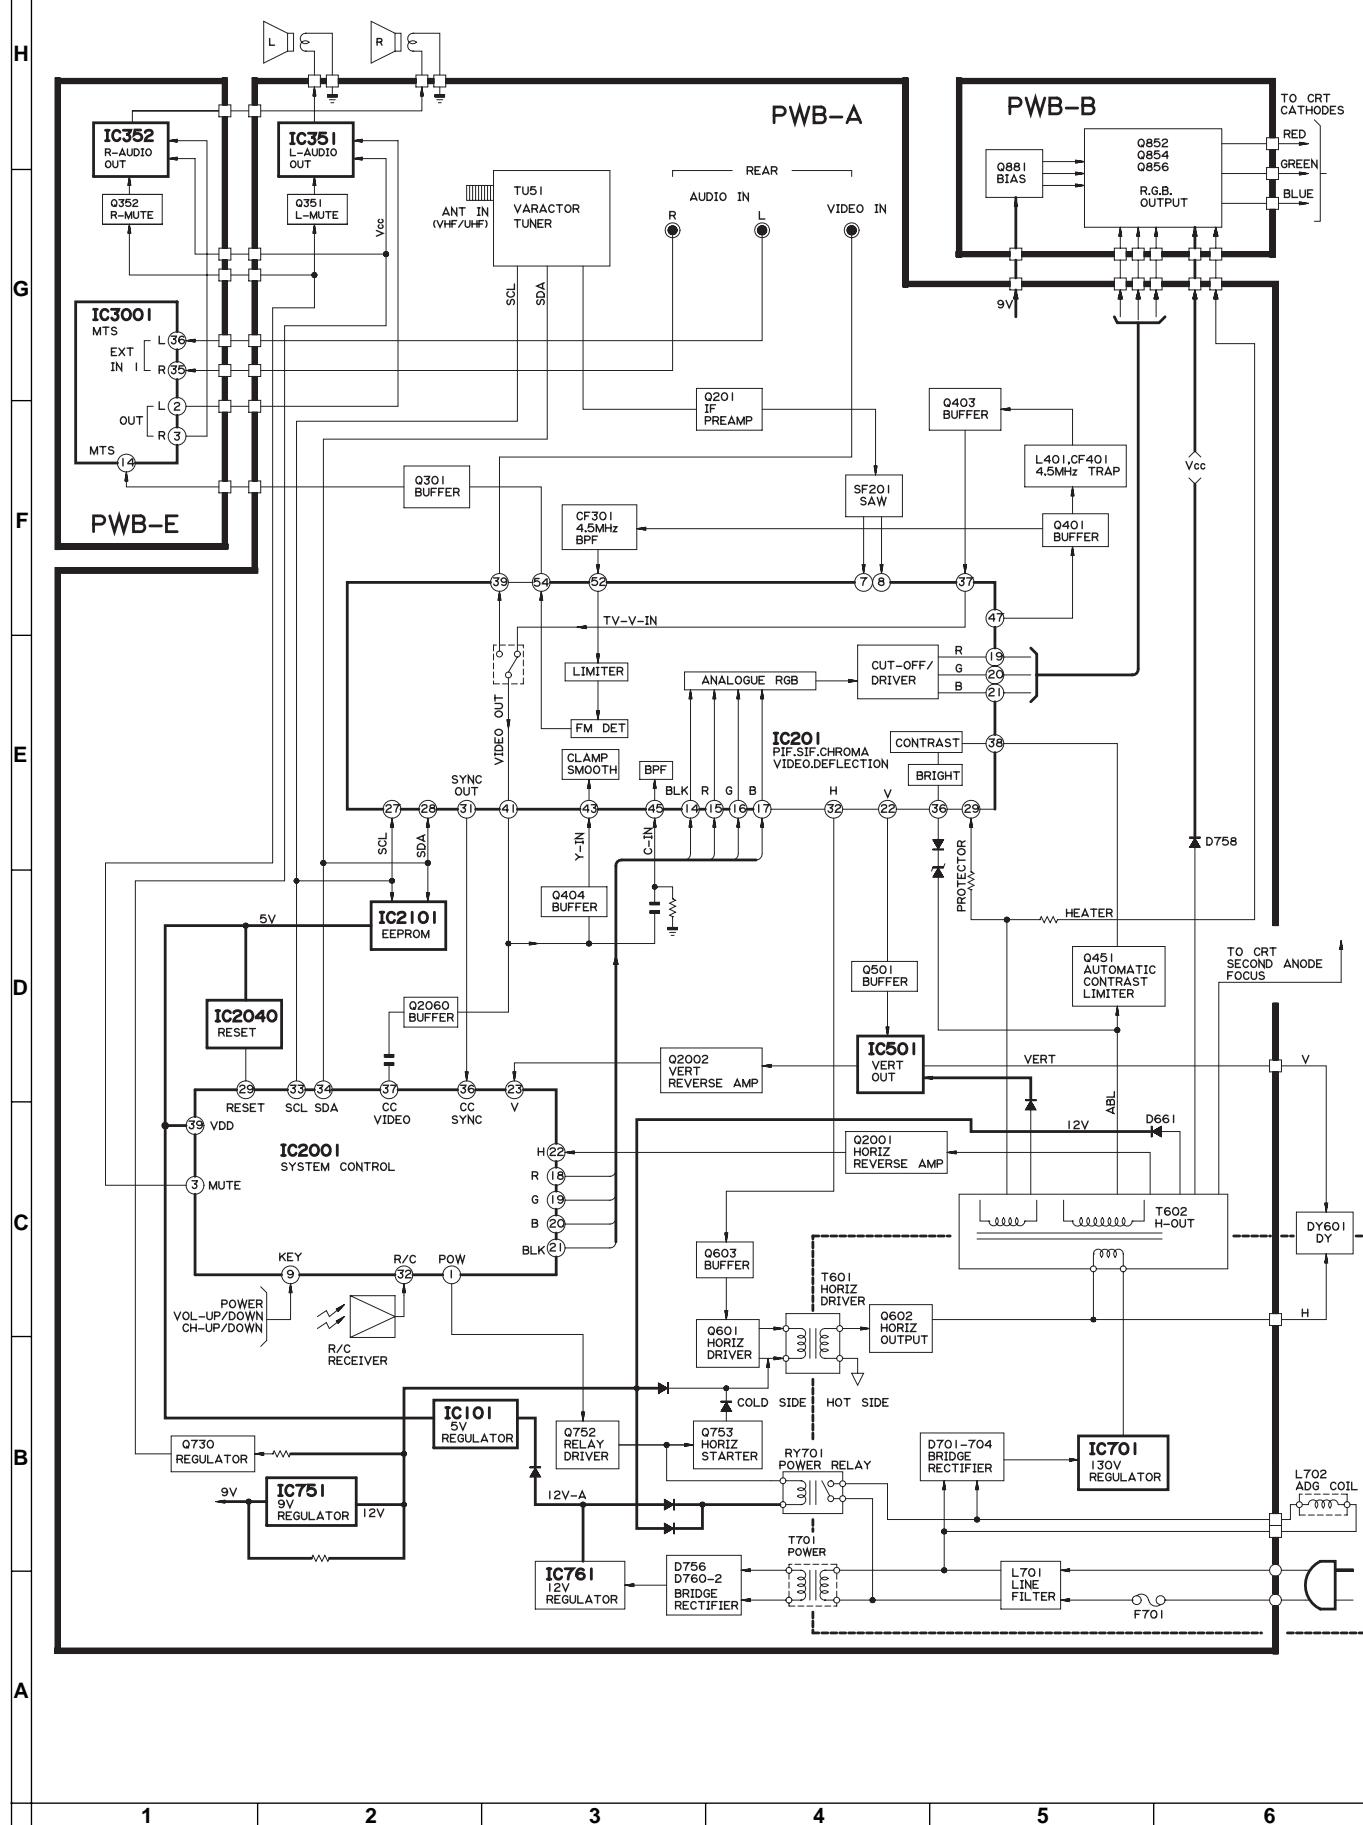

# DESCRIPTION OF SCHEMATIC DIAGRAM

## NOTES:

1. The unit of resistance "ohm" is omitted.  
( $K=k\Omega=1000\Omega$ ,  $M=M\Omega$ )
2. All resistors are 1/16 watt, unless otherwise noted.
3. All capacitors are  $\mu F$ , unless otherwise noted.  
( $P=pF=\mu\mu F$ )
4. (G) indicates  $\pm 2\%$  tolerance may be used.
5.  $\perp$  indicates line isolated ground.
6.  $\downarrow$  indicates hot ground.

## VOLTAGE MEASUREMENT CONDITIONS:

1. All DC voltages are measured with DVM connected between points indicated and chassis ground, line voltage set at 120VAC and all controls set for normal picture unless otherwise indicated.
2. All voltages measured with  $1000\mu V$  B & W or Color signal.

## WAVEFORM MEASUREMENT CONDITIONS:

1. Photographs taken on a standard gated color bar signal, the tint setting adjusted for proper color. The wave shapes at the red, green and blue cathodes of the picture tube depend on the tint, color level and picture control.
2.  indicates waveform check points (See chart, waveforms are measured from point indicated to chassis ground.)


 AND SHADED (  ) COMPONENTS = SAFETY RELATED PARTS.

 MARK= X-RAY RELATED PARTS.


DRGANNES MARQUES  ET HACHRES ( ):  
PIECES RELATIVES A LA SECURITE.  
MARQUE  : PIECS RELATIVE AUX RAYONS X.


This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.

## WAVEFORMS

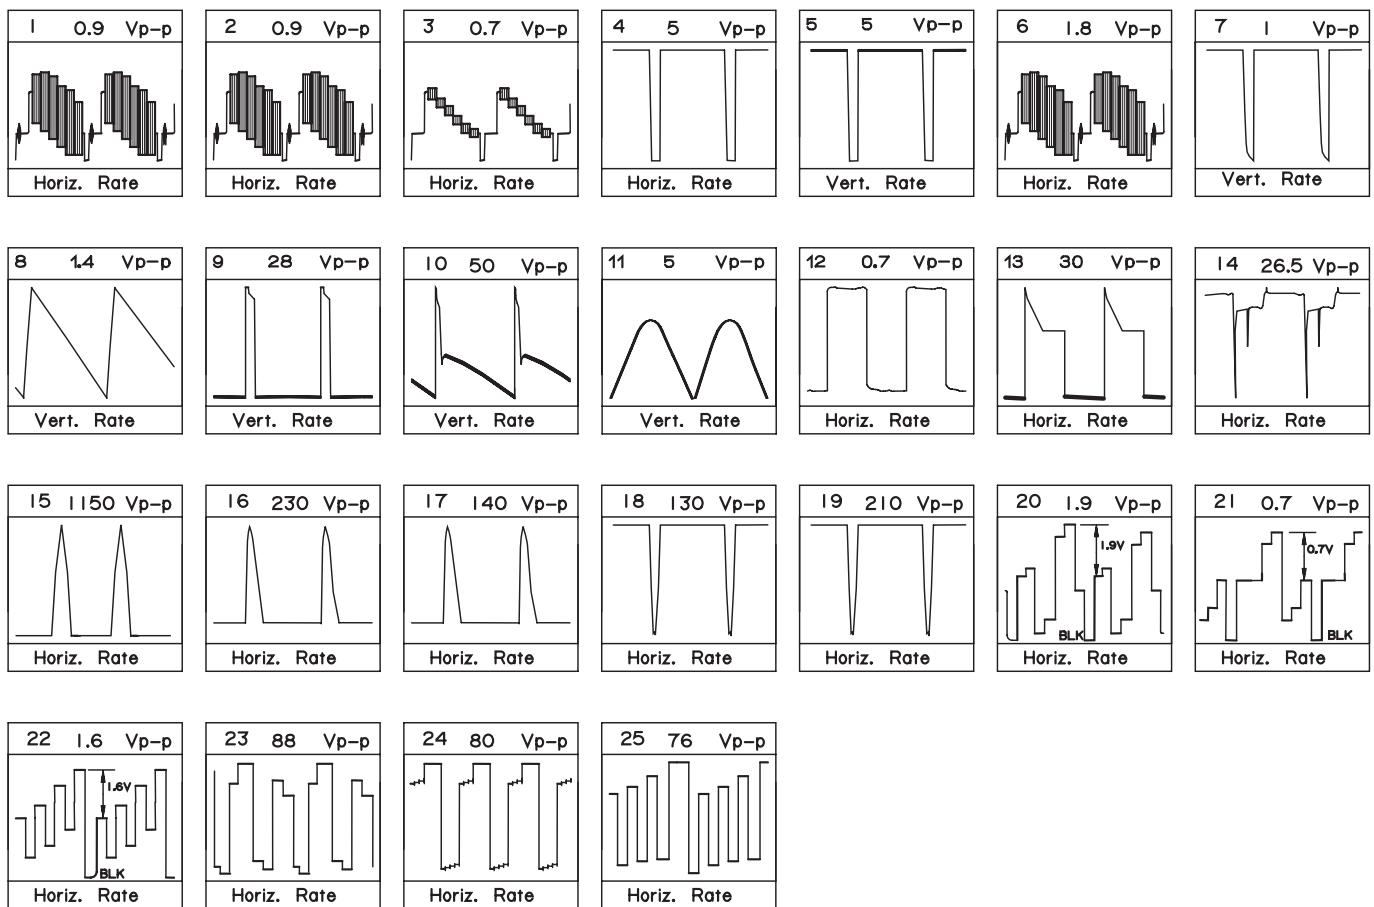


# SCHEMATIC DIAGRAM: MAIN Unit

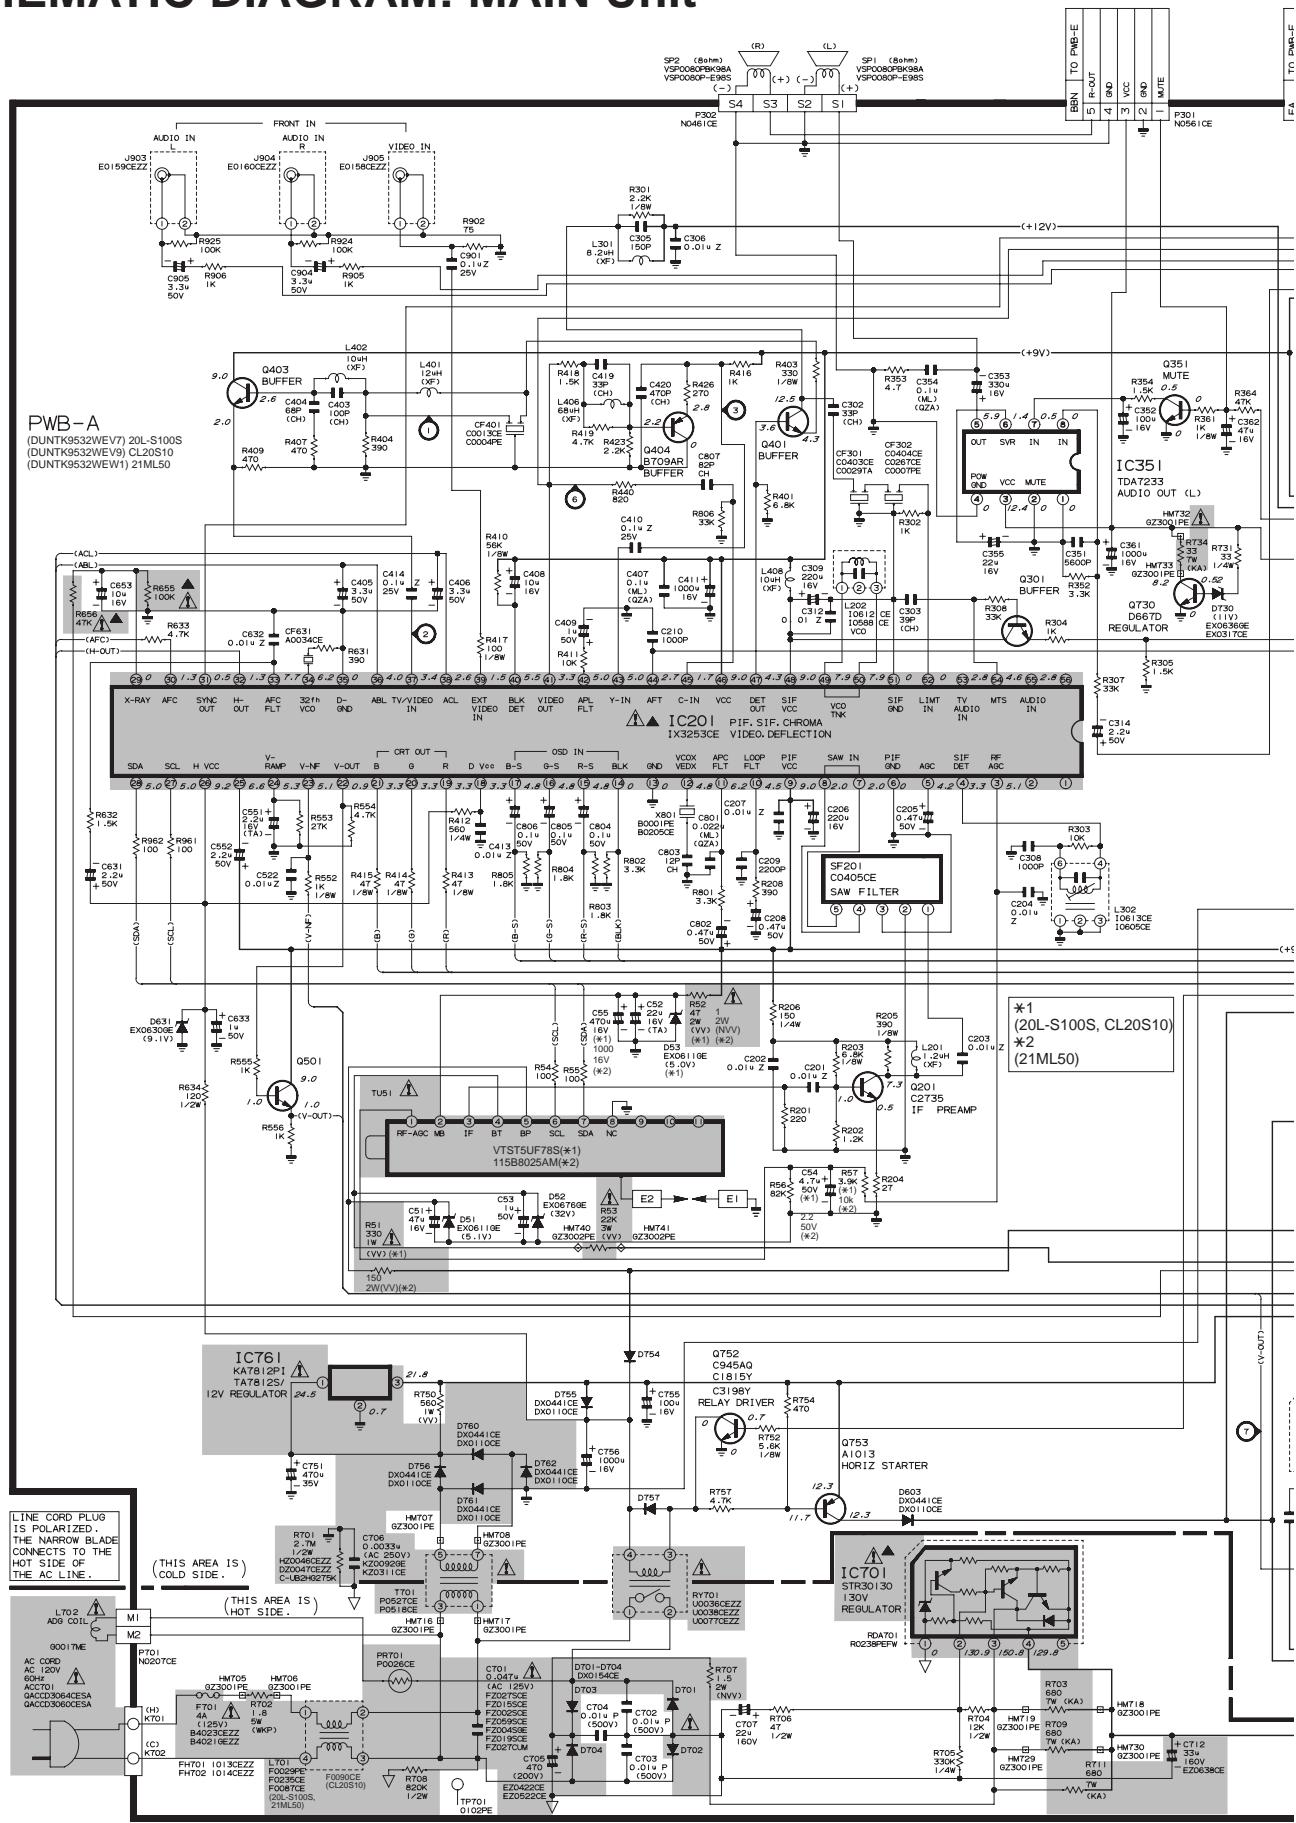

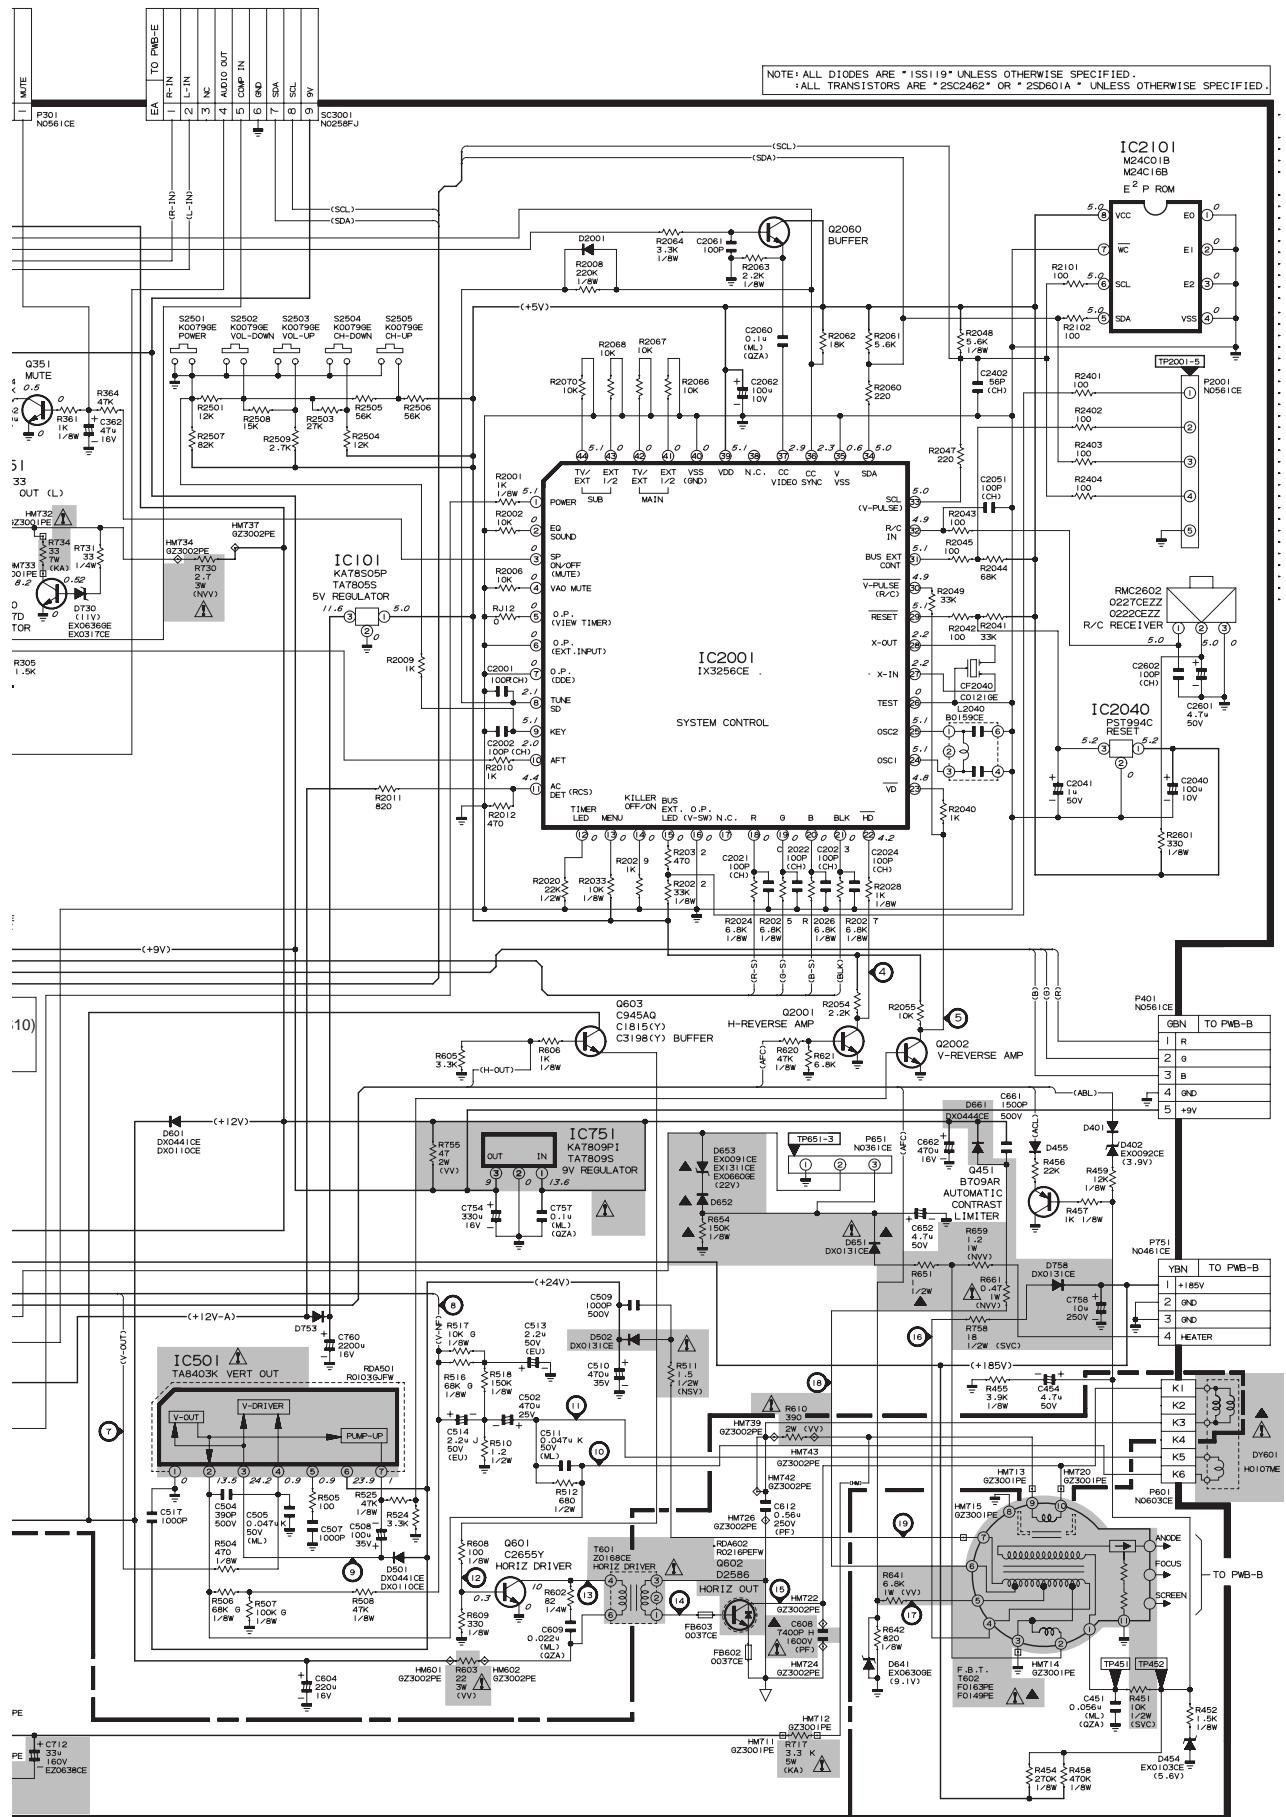


## **SCHEMATIC DIAGRAM: CRT and MTS MODULE Unit**


CRT

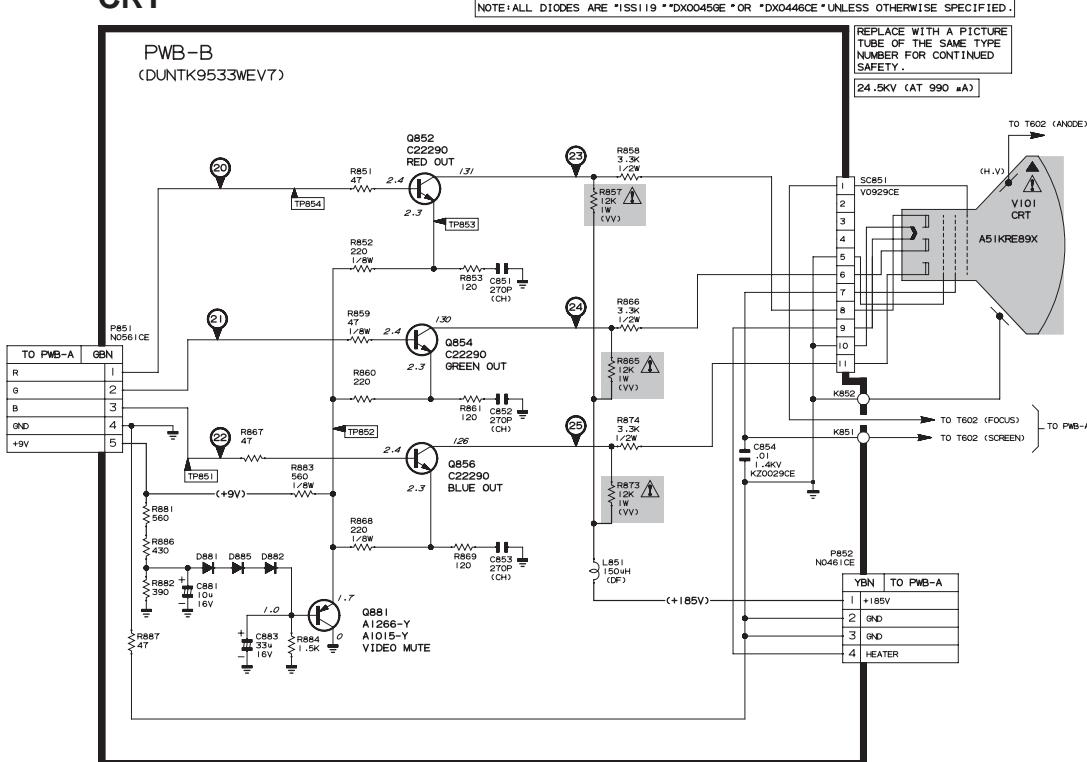


## **MTS MODULE**

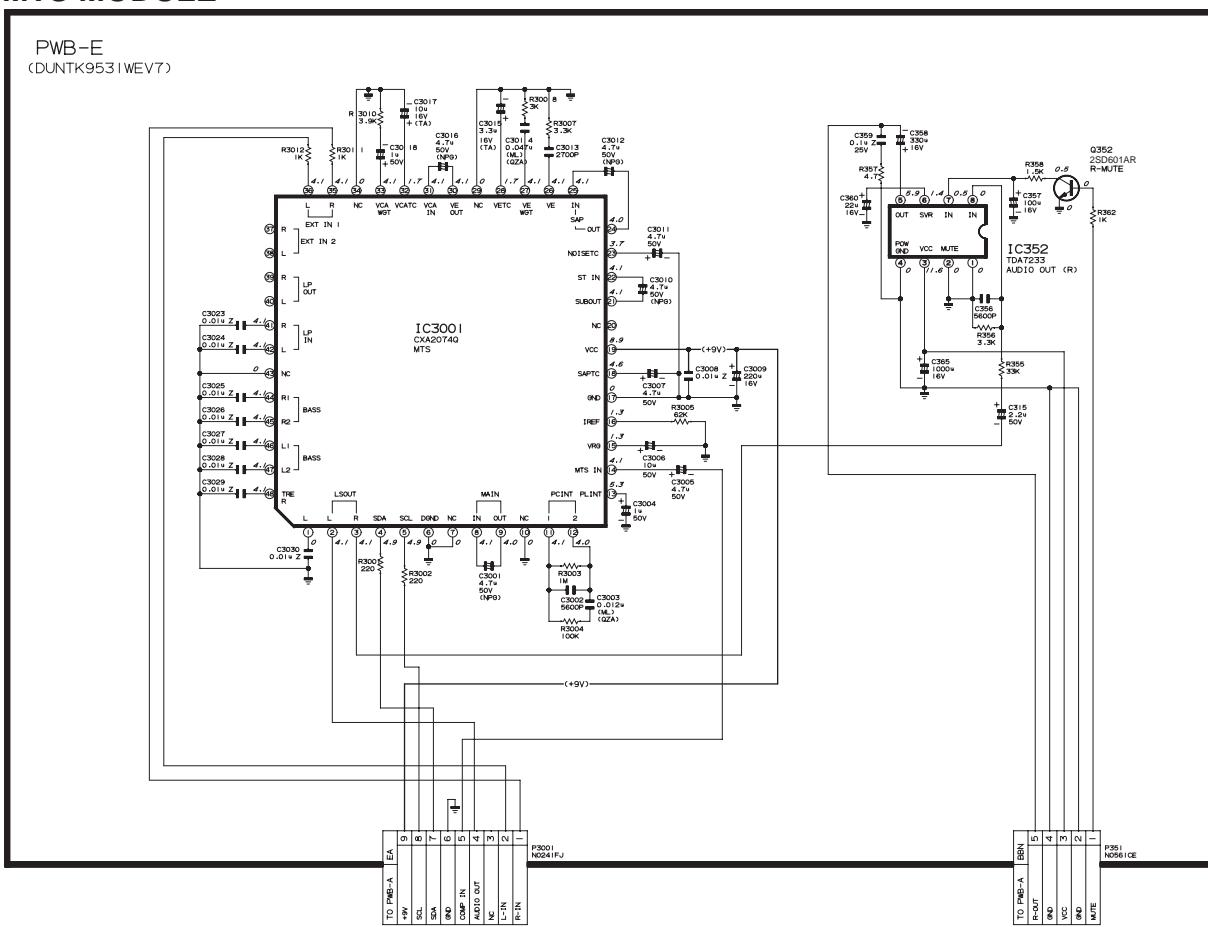


# PRINTED WIRING BOARD ASSEMBLIES

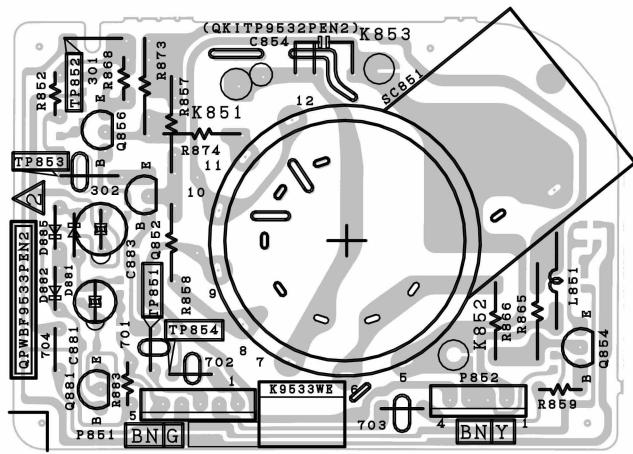


## PWB-B: CRT Unit (Wiring Side)

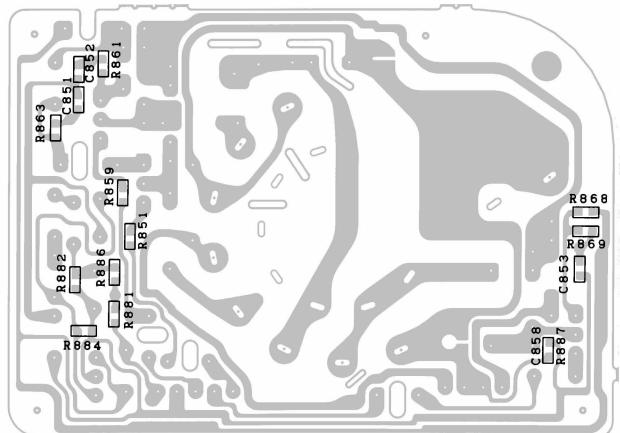

## PWB-B: CRT Unit (Chip Parts Side)

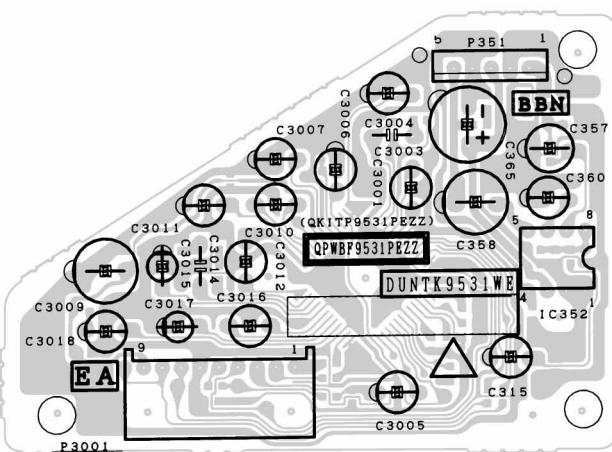

## PWB-E: MTS MODULE Unit (Wiring Side)

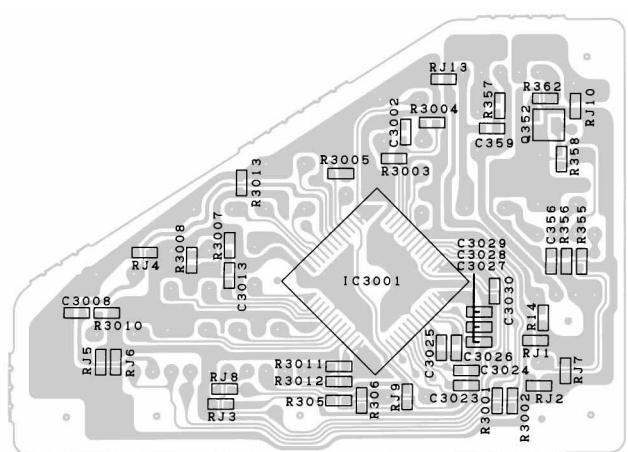

## PWB-E: MTS MODULE Unit (Chip Parts Side)

H

G

F


E

D


C

B

A

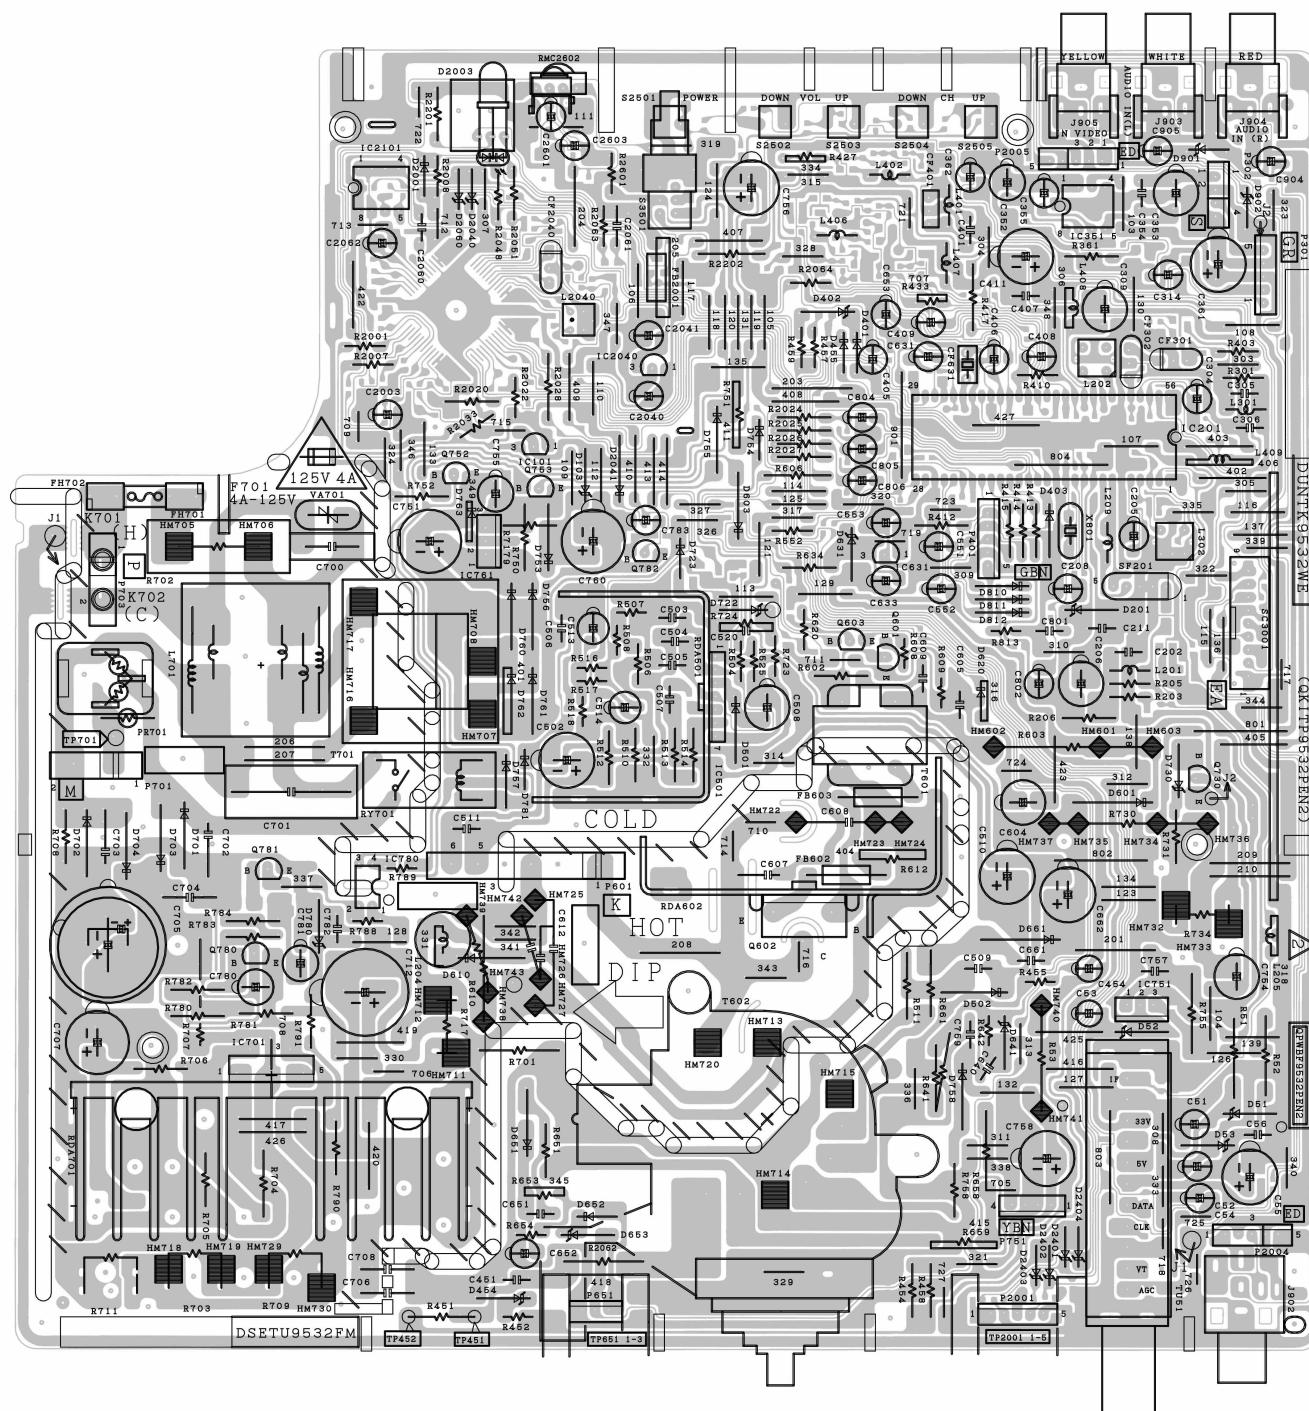

PWB-A: MAIN Unit (Wiring Side)

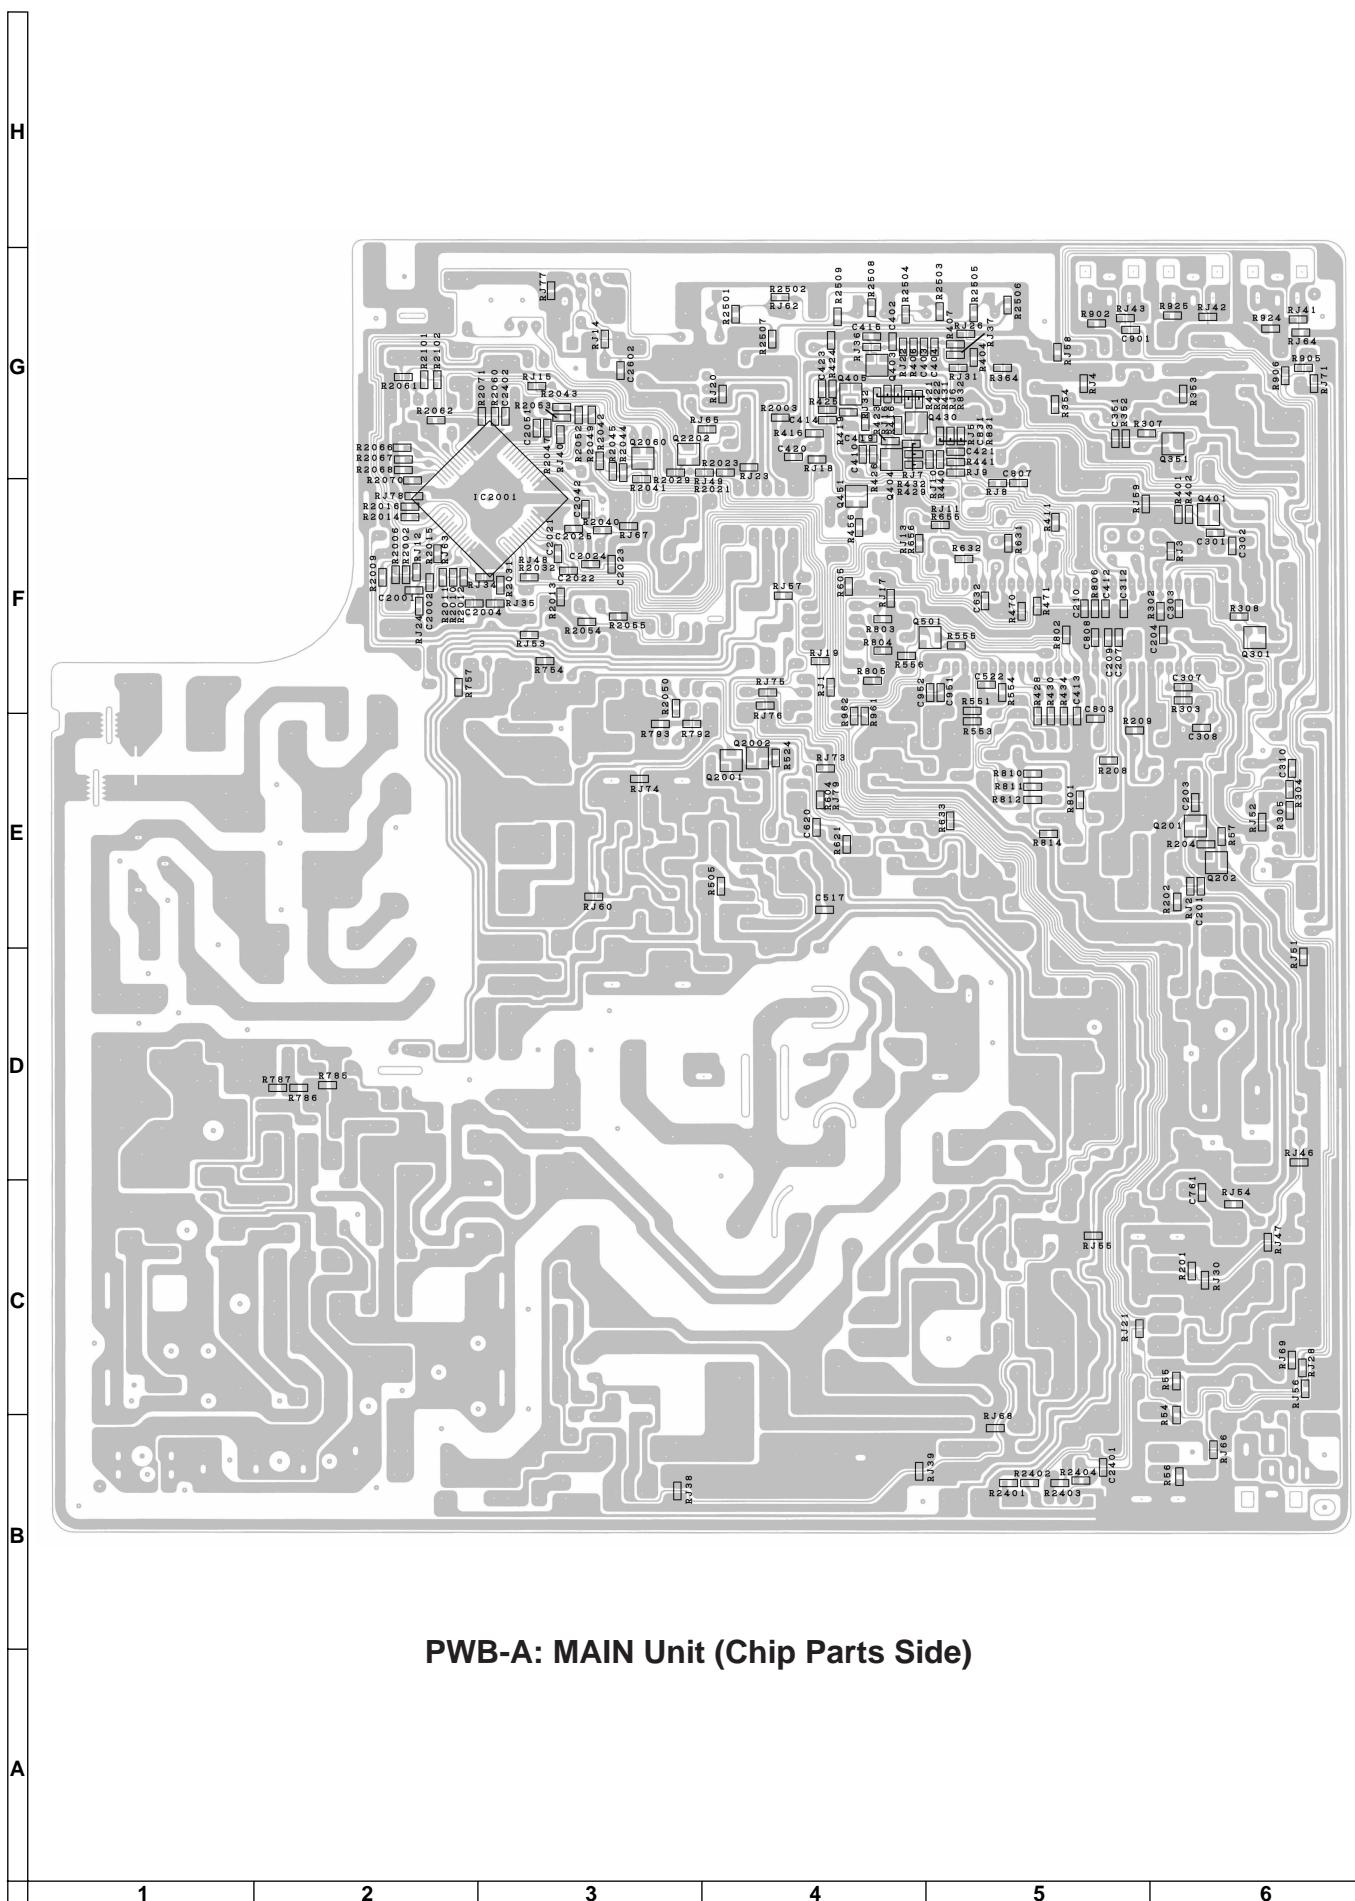

PWB-A: MAIN Unit (Chip Parts Side)

# PARTS LIST

## PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual; electrical components having such features are identified by and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which does not have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

### "HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

- |                 |                |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. NO.    |
| 3. PART NO.     | 4. DESCRIPTION |

**in USA:** Contact your nearest SHARP Parts Distributor to order.  
For location of SHARP Parts Distributor, Please call Toll-Free: 1-800-BE-SHARP

★ MARK: SPARE PARTS-DELIVERY SECTION

▲ MARK: X- RAY RELATED PARTS

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

## PICTURE TUBE

V101	VB51KRE89X/1E	M	Picture Tube	CC
DY601	RCILH0107MEZZ	M	Deflection Yoke	AE
L702	RCILG0017MEZZ	M	Degaussing Coil	AM
	MSPRT0002MEZZ	M	Spring for CRT (20L-S100S)	AA
	PMAGF3003CEZZ	J	Magnet Ass'y	AK
	QEARC2002MEZZ	M	Ground Part (20L-S100S)	AF
	QEARC2119PEZZ	R	Ground Part (CL20S10, 21ML50)	

## PRINTED WIRING BOARD ASSEMBLIES (NOT REPLACEMENT ITEM)

PWB-A DUNTK9532WEV7	- Main Unit (20L-S100S)	—
PWB-A DUNTK9532WEV9	- Main Unit (CL20S10)	—
PWB-A DUNTK9532WEW1	- Main Unit (21ML50)	—
PWB-B DUNTK9533WEV7	- CRT Unit	—
PWB-E DUNTK9531WEV7	- MTS Module Unit	—

# LISTE DES PIECES

## CHANGE DES PIECES

Les pièces de rechange qui présentent ces caractéristiques spéciales de sécurité identifiées dans ce manuel : les pièces électriques qui présentent ces particularités, sont repérées par la marque et sont hachurées dans les listes de pièces et dans les schémas électroniques.

La substitution d'une pièce de rechange par une autre qui ne présente pas les mêmes caractéristiques de sécurité que la pièce recommandée par l'usine et dans ce manuel de service, peut provoquer une électrocution, un incendie ou tout autre sinistre.

### "COMMENT COMMANDER LES PIÈCES DE RECHANGE"

Pour que votre commande soit rapidement et correctement remplie, veuillez fournir les renseignements suivants.

- |                     |                |
|---------------------|----------------|
| 1. NUMERO DU MODELE | 2. NO. DE REF  |
| 3. NO. DE PIECE     | 4. DESCRIPTION |

in **CANADA:** Contact SHARP Electronics of Canada Limited  
Phone (416) 890-2100

★MARQUE: SECTION LIVRAISON DES PIÈCES DE RECHANGE

▲ MARQUE: PIÈCES RELATIVE AUX RAYONS X

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

**PWB-A:DUNTK9532WEV7 (20L-S100S)**

**PWB-A:DUNTK9532WEV9 (CL20S10)**

**PWB-A:DUNTK9532WEW1(21ML50)**

## MAIN UNIT

### TUNER

**NOTE : THE PARTS HERE SHOWN ARE SUPPLIED AS AN ASSEMBLY BUT NOT INDEPENDENTLY.**

TU51 VTUVTST5UF78S M Tuner (20L-S100S, CL20S10) AX

TU51 VTU115B8025AM M Tuner (21ML50) BA

## INTEGRATED CIRCUITS

IC101 VHKA78S05P-1 J KIA78S05P AD  
or  
VHITA7805S/-1

IC201 RH-iX3253CEZZ J TA1268AN AV

IC351 VHITDA7233/-1 J TDA7233 AF

IC501 VHITA8403K/-1 J TA8403K AL

IC701 VHISTR301301E J STR30130 AP

IC751 VHKA7809Pi-1 R KIA7809PI AE

or  
VHITA7809S/-1

IC761 VHKA7812Pi-1 R KIA7812PI AE

or  
VHITA7812S/-1

IC2001 RH-iX3256CEZZ J TMPA8701CMF142 AX

IC2040 VHIpST994C/-1 J PST994C AD

IC2101 VHIM24C01B/-1 J M24C01-BN6 AF

or  
VHIM24C16B/-1

## TRANSISTORS

You can substitute "VS2SC2462-C-1" for "VS2SD601AR/-1".

Q201 VS2SC2735/1E J 2SC2735 AC

Q301 VS2SD601AR/-1 J 2SD601AR AC

Q351 VS2SD601AR/-1 J 2SD601AR AC

Q401 VS2SD601AR/-1 J 2SD601AR AC

Q403 VS2SD601AR/-1 J 2SD601AR AC

Q404 VS2SB709AR/-1 J 2SB709AR AC

Q451 VS2SB709AR/-1 J 2SB709AR AC

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code					
<b>PWB-A:DUNTK9532WEV7 (20L-S100S)</b>														
<b>PWB-A:DUNTK9532WEV9 (CL20S10)</b>														
<b>PWB-A:DUNTK9532WEW1(21ML50)</b>														
<b>MAIN UNIT (Continued)</b>														
Q501	VS2SD601AR/-1	J	2SD601AR	AC	△ D762	RH-DX0441CEZZ	J	Diode	AC					
Q601	VS2SC2655Y/-1	J	2SC2655(Y)	AE	D2001	RH-DX0110CEZZ VHD1SS119//1	J	Diode	AB					
△ Q602	VS2SD2586//1E	J	2SD2586	AM	<b>PACKGED CIRCUITS</b>									
Q603	VS2SC945AQ/-1 or VS2SC1815YW-1 or VS2SC3198-Y-1	J	2SC945	AB	△ PR701	RMPTP0026CEZZ	J	Packaged Circuit	AF					
Q730	VS2SD667D//1	J	2SD667	AE	X801	RCRSB0205CEZZ or RCRSB0001PEZZ	J	Crystal	AF					
Q752	VS2SC945AQ/-1 or VS2SC1815YW-1 or VS2SC3198-Y-1	J	2SC945	AB	<b>FILTERS</b>									
Q753	VS2SA1013/1E	J	2SA1013	AD	CF301	RFILC0403CEZZ or RFILC0029TAZZ	J	Filter	AE					
Q2001	VS2SD601AR/-1	J	2SD601AR	AC	CF302	RFILC0404CEZZ or RFILC0267CEZZ or RFILC0007PEZZ	J	Filter	AF					
Q2002	VS2SD601AR/-1	J	2SD601AR	AC	CF401	RFILC0013CEZZ or RFILC0004PEZZ	J	Filter	AE					
Q2060	VS2SD601AR/-1	J	2SD601AR	AC	CF631	RFILA0034CEZZ	J	Filter	AD					
<b>DIODES</b>														
D51	RH-EX0611GEZZ	J	Zener Diode, 5.0V	AA	CF2040	RFILC0121GEZZ	J	Filter	AD					
D52	RH-EX0676GEZZ	J	Zener Diode, 32V	AA	SF201	RFILC0405CEZZ	J	SAW Filter	AH					
D53	RH-EX0611GEZZ	J	Zener Diode, 5.0V (20L-S100S, CL20S10)	AA	<b>COILS</b>									
D401	VHD1SS119//1	J	Diode	AB	L201	VP-XF1R2K0000	J	Peaking 1.2μH	AB					
D402	RH-EX0092CEZZ	J	Zener Diode, 3.9V	AB	L202	RCiLi0612CEZZ or RCiLi0588CEZZ	J	IF Coil	AE					
D454	RH-EX0103CEZZ	J	Zener Diode, 5.6V	AB	L301	VP-XF8R2K0000	J	Peaking 8.2μH	AB					
D455	VHD1SS119//1	J	Diode	AB	L302	RCiLi0613CEZZ or RCiLi0605CEZZ	J	IF Coil	AE					
D501	RH-DX0441CEZZ	J	Diode	AC	L401	VP-XF120K0000	J	Peaking 12μH	AB					
△ D502	RH-DX0131CEZZ	J	Diode	AC	L402	VP-XF100K0000	J	Peaking 10μH	AB					
D601	RH-DX0441CEZZ	J	Diode	AC	L406	VP-XF680K0000	J	Peaking 68μH	AB					
D603	RH-DX0441CEZZ or RH-DX0110CEZZ	J	Diode	AC	L408	VP-XF100K0000	J	Peaking 10μH	AB					
D631	RH-EX0630GEZZ	J	Zener Diode, 9.1V	AA	△ L701	RCiLF0029PEZZ or RCiLF0235CEZZ	R	Coil (20L-S100S, 21ML50)	AH					
D641	RH-EX0630GEZZ	J	Zener Diode, 9.1V	AA	<b>TRANSFORMERS</b>									
▲△ D651	RH-DX0131CEZZ	J	Diode	AC	▲ T601	RTRNZ0168CEZZ	J	H-Driver	AH					
▲△ D652	VHD1SS119//1	J	Diode	AB	▲△ T602	RTRNF0163PEZZ or RTRNF0149PEZZ	R	F.B.T	BE					
▲△ D653	RH-EX0091CEZZ or RH-EX0660GEZZ	J	Zener Diode, 22V	AB	▲ T701	RTRNP0527CEZZ or RTRNP0518CEZZ	J	Power	AM					
D661	RH-DX0444CEZZ	J	Diode	AH	<b>CAPACITORS</b>									
△ D701	RH-DX0154CEZZ	J	Diode	AC	[EL... Electrolytic, M-Poly... Metallized Polypro Film]									
△ D702	RH-DX0154CEZZ	J	Diode	AC	C51	VCEA0A1CW476M	J	47 16V	EL.	AB				
△ D703	RH-DX0154CEZZ	J	Diode	AC	C52	VCSATA1CE226K	J	22 16V	Tantalum	AD				
△ D704	RH-DX0154CEZZ	J	Diode	AC	C53	VCEA0A1HW105M	J	1.0 50V	EL.	AB				
D730	RH-EX0636GEZZ or RH-EX0317CEZZ	J	Zener Diode, 11V	AC	C54	VCEA0A1HW475M	J	4.7 50V (20L-S100S, CL20S10)	EL.	AB				
D753	VHD1SS119//1	J	Diode	AB	C54	VCEA0A1HW225M	J	2.2 50V (21ML50)	EL.	AB				
D754	VHD1SS119//1	J	Diode	AB	C55	VCEA0A1CW477M	J	470 16V (20L-S100S, CL20S10)	EL.	AC				
D755	RH-DX0441CEZZ or RH-DX0110CEZZ	J	Diode	AC	C55	VCEAGA1CW108M	J	1000 16V (21ML50)	EL.	AD				
△ D756	RH-DX0441CEZZ or RH-DX0110CEZZ	J	Diode	AC	C201	VCKYCY1HF103Z	J	0.01 50V	Ceramic	AA				
D757	VHD1SS119//1	J	Diode	AB	C202	VCKYPB1HF103Z	J	0.01 50V	Ceramic	AA				
△ D758	RH-DX0131CEZZ	J	Diode	AC	C203	VCKYCY1HF103Z	J	0.01 50V	Ceramic	AA				
△ D760	RH-DX0441CEZZ or RH-DX0110CEZZ	J	Diode	AC	C204	VCKYCY1HF103Z	J	0.01 50V	Ceramic	AA				
△ D761	RH-DX0441CEZZ or RH-DX0110CEZZ	J	Diode	AC										

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
<b>PWB-A:DUNTK9532WEV7 (20L-S100S)</b>									
<b>PWB-A:DUNTK9532WEV9 (CL20S10)</b>									
<b>PWB-A:DUNTK9532WEW1(21ML50)</b>									
<b>MAIN UNIT (Continued)</b>									
C205	VCEA0A1HW474M	J	0.47	50V	EL.	AB			
C206	VCEA0A1CW227M	J	220	16V	EL.	AC			
C207	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA			
C208	VCEA0A1HW474M	J	0.47	50V	EL.	AB			
C209	VCKYCY1HB222K	J	2200p	50V	Ceramic	AA			
C210	VCKYCY1HB102K	J	1000p	50V	Ceramic	AA			
C302	VCCCCY1HH330J	J	33p	50V	Ceramic	AA			
C303	VCCCCY1HH390J	J	39p	50V	Ceramic	AA			
C305	VCKYPA1HB151K	J	150p	50V	Ceramic	AA			
C306	VCKYPA1HF103Z	J	0.01	50V	Ceramic	AA			
C308	VCKYCY1HB102K	J	1000p	50V	Ceramic	AA			
C309	VCEA0A1CW227M	J	220	16V	EL.	AC			
C312	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA			
C314	VCEA0A1HW225M	J	2.2	50V	EL.	AB			
C351	VCKYCY1HB562K	J	5600p	50V	Ceramic	AA			
C352	VCEA0A1CW107M	J	100	16V	EL.	AC			
C353	VCEA0A1CW337M	J	330	16V	EL.	AC			
C354	RC-QZA104TAYK	J	0.1	50V	Mylar	AB			
C355	VCEA0A1CW226M	J	22	16V	EL.	AB			
C361	VCEAGA1CW108M	J	1000	16V	EL.	AD			
C362	VCEA0A1CW476M	J	47	16V	EL.	AB			
C403	VCCCCY1HH101J	J	100p	50V	Ceramic	AA			
C404	VCCCCY1HH680J	J	68p	50V	Ceramic	AA			
C405	VCEA0A1HW335M	J	3.3	50V	EL.	AB			
C406	VCEA0A1HW335M	J	3.3	50V	EL.	AB			
C407	RC-QZA104TAYK	J	0.1	50V	Mylar	AB			
C408	VCEA0A1CW106M	J	10	16V	EL.	AB			
C409	VCEA0A1HW105M	J	1.0	50V	EL.	AB			
C410	VCKYCY1EF104Z	J	0.1	25V	Ceramic	AA			
C411	VCEAGA1CW108M	J	1000	16V	EL.	AD			
C413	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA			
C414	VCKYCY1EF104Z	J	0.1	25V	Ceramic	AA			
C419	VCCCCY1HH330J	J	33p	50V	Ceramic	AA			
C420	VCCCCY1HH471J	J	470p	50V	Ceramic	AA			
C451	RC-QZA563TAYK	J	0.056	50V	Mylar	AB			
C454	VCEA0A1HW475M	J	4.7	50V	EL.	AB			
C502	VCEA0A1EW477M	J	470	25V	EL.	AD			
C504	VCKYPA2HB391K	J	390p	500V	Ceramic	AA			
C505	VCKYTA1HM473K	J	0.047	50V	Mylar	AB			
C507	VCKYPA1HB102K	J	1000p	50V	Ceramic	AA			
C508	VCEAGA1VW107M	J	100	35V	EL.	AC			
C509	VCKYPA2HB102K	J	1000p	500V	Ceramic	AA			
C510	VCEAGA1VW477M	J	470	35V	EL.	AD			
C511	VCKYTA1HM473K	J	0.047	50V	Mylar	AB			
C513	VCEACA1HC225M	J	2.2	50V	EL.	AC			
C514	VCEACA1HC225J	J	2.2	50V	EL.	AC			
C517	VCKYCY1HB102K	J	1000p	50V	Ceramic	AA			
C522	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA			
C551	VCSATA1CE225K	J	2.2	16V	Tantalum	AB			
C552	VCEA0A1HW225M	J	2.2	50V	EL.	AB			
C604	VCEA0A1CW227M	J	220	16V	EL.	AC			
▲ C608	VCFPPD3CA742H	J	7400p	1600V	M-Poly.	AF			
C609	RC-QZA223TAYK	J	0.022	50V	Mylar	AB			
C612	VCFPPJ2EB564J	J	0.56	250V	M-Poly.	AF			
C631	VCEA0A1HW225M	J	2.2	50V	EL.	AB			
C632	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA			
C633	VCEA0A1HW105M	J	1.0	50V	EL.	AB			
C652	VCEA0A1HW475M	J	4.7	50V	EL.	AB			
C653	VCEA0A1CW106M	J	10	16V	EL.	AB			
C661	VCKYPA2HB152K	J	1500p	500V	Ceramic	AA			
C662	VCEA0A1CW477M	J	470	16V	EL.	AC			
▲ C701	RC-FZ027SCEZZ	J	0.047	AC125V Plastic					
	or								
	RC-FZ015SCEZZ								
	or								
	RC-FZ002SCEZZ								
	or								
	RC-FZ059SCEZZ								
	or								
	RC-FZ004SGEZZ								
<b>RESISTORS</b>									
[M-Ox.... Metal Oxide, M-Film ... Metal Film]									
RJ1	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ5	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ6	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ7	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ9	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ10	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ12	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ15	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ17	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ18	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ19	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ20	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ21	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ23	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ24	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ26	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ28	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ31	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ32	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ35	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ39	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ40	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ46	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ49	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA
RJ52	VRS-CY1JF000J	J	0	1/16W	M-Ox.				AA

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code					
<b>PWB-A:DUNTK9532WEV7 (20L-S100S)</b>														
<b>PWB-A:DUNTK9532WEV9 (CL20S10)</b>														
<b>PWB-A:DUNTK9532WEW1(21ML50)</b>														
<b>MAIN UNIT (Continued)</b>														
RJ54	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R452	VRD-RA2BE152J	J 1.5k	1/8W Carbon	AA					
RJ55	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R454	VRD-RA2BE274J	J 270k	1/8W Carbon	AA					
RJ56	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R455	VRD-RA2BE392J	J 3.9k	1/8W Carbon	AA					
RJ57	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R456	VRS-CY1JF223J	J 22k	1/16W M-Ox.	AA					
RJ59	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R457	VRD-RA2BE102J	J 1.0k	1/8W Carbon	AA					
RJ60	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R458	VRD-RA2BE474J	J 470k	1/8W Carbon	AA					
RJ62	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R459	VRD-RA2BE123J	J 12k	1/8W Carbon	AA					
RJ63	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R504	VRD-RA2BE471J	J 470	1/8W Carbon	AA					
RJ66	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R505	VRS-CY1JF101J	J 100	1/16W M-Ox.	AA					
RJ67	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R506	VRD-RA2BE683G	J 68k	1/8W Carbon	AA					
RJ68	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R507	VRD-RA2BE104G	J 100k	1/8W Carbon	AA					
RJ69	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R508	VRD-RA2BE473J	J 47k	1/8W Carbon	AA					
RJ71	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R510	VRD-RM2HD1R2J	J 1.2	1/2W Carbon	AA					
RJ75	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	▲ R511	VRN-SV2HB1R5J	J 1.5	1/2W M-Film	AB					
RJ77	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R512	VRD-RM2HD681J	J 680	1/2W Carbon	AA					
RJ78	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R516	VRD-RA2BE683G	J 68k	1/8W Carbon	AA					
RJ79	VRS-CY1JF000J	J 0	1/16W M-Ox.	AA	R517	VRD-RA2BE103G	J 10k	1/8W Carbon	AA					
▲ R51	VRS-VV3AB331J	J 330	1W M-Ox. (20L-S100S, CL20S10)	AA	R518	VRD-RA2BE154J	J 150k	1/8W Carbon	AA					
▲ R51	VRS-VV3DB151J	J 150	2W M-Ox. (21ML50)	AA	R524	VRS-CY1JF332J	J 3.3k	1/16W M-Ox.	AA					
▲ R52	VRS-VV3DB470J	J 47	2W M-Ox. (20L-S100S, CL20S10)	AA	R525	VRD-RA2BE473J	J 47k	1/8W Carbon	AA					
▲ R52	VRN-VV3DB1R0J	J 1.0	2W M-Film (21ML50)	AB	R552	VRD-RA2BE102J	J 1.0k	1/8W Carbon	AA					
▲ R53	VRS-VV3LB223J	J 22k	3.0W M-Ox.	AB	R553	VRS-CY1JF273J	J 27k	1/16W M-Ox.	AA					
R54	VRS-CY1JF101J	J 100	1/16W M-Ox.	AA	R554	VRS-CY1JF472J	J 4.7k	1/16W M-Ox.	AA					
R55	VRS-CY1JF101J	J 100	1/16W M-Ox.	AA	R555	VRS-CY1JF102J	J 1.0k	1/16W M-Ox.	AA					
R56	VRS-CY1JF823J	J 82k	1/16W M-Ox.	AA	R556	VRS-CY1JF102J	J 1.0k	1/16W M-Ox.	AA					
R57	VRS-CY1JF392J	J 3.9k	1/16W M-Ox. (20L-S100S, CL20S10)	AA	R602	VRD-RA2EE820J	J 82	1/4W Carbon	AA					
R57	VRS-CY1JF103J	J 10k	1/16W M-Ox. (21ML50)	AA	▲ R603	VRS-VV3LB220J	J 22	3.0W M-Ox.	AB					
R201	VRS-CY1JF221J	J 220	1/16W M-Ox.	AA	R605	VRS-CY1JF332J	J 3.3k	1/16W M-Ox.	AA					
R202	VRS-CY1JF122J	J 1.2k	1/16W M-Ox.	AA	R606	VRD-RA2BE102J	J 1.0k	1/8W Carbon	AA					
R203	VRD-RA2BE682J	J 6.8k	1/8W Carbon	AA	R608	VRD-RA2BE101J	J 100	1/8W Carbon	AB					
R204	VRS-CY1JF270J	J 27	1/16W M-Ox.	AA	R609	VRD-RA2BE331J	J 330	1/8W Carbon	AA					
R205	VRD-RA2BE391J	J 390	1/8W Carbon	AA	▲ R610	VRS-VV3DB391J	J 390	2W M-Ox.	AA					
R206	VRD-RA2EE151J	J 150	1/4W Carbon	AA	R620	VRD-RA2BE473J	J 47k	1/8W Carbon	AA					
R208	VRS-CY1JF391J	J 390	1/16W M-Ox.	AA	R621	VRS-CY1JF682J	J 6.8k	1/16W M-Ox.	AA					
R301	VRD-RA2BE222J	J 2.2k	1/8W Carbon	AA	R631	VRS-CY1JF391J	J 390	1/16W M-Ox.	AA					
R302	VRS-CY1JF102J	J 1.0k	1/16W M-Ox.	AA	R632	VRS-CY1JF152J	J 1.5k	1/16W M-Ox.	AA					
R303	VRS-CY1JF103J	J 10k	1/16W M-Ox.	AA	R633	VRS-CY1JF472J	J 4.7k	1/16W M-Ox.	AA					
R304	VRS-CY1JF102J	J 1.0k	1/16W M-Ox.	AA	R634	VRD-RM2HD121J	J 120	1/2W Carbon	AA					
R305	VRS-CY1JF152J	J 1.5k	1/16W M-Ox.	AA	▲ R641	VRS-VV3AB682J	J 6.8k	1W M-Ox.	AA					
R307	VRS-CY1JF333J	J 33k	1/16W M-Ox.	AA	R642	VRD-RA2BE821J	J 820	1/8W Carbon	AA					
R308	VRS-CY1JF333J	J 33k	1/16W M-Ox.	AA	▲▲ R651	VRD-RM2HD1R0J	J 1.0	1/2W Carbon	AA					
R352	VRS-CY1JF332J	J 3.3k	1/16W M-Ox.	AA	▲▲ R654	VRD-RA2BE154J	J 150k	1/8W Carbon	AA					
R353	VRS-CY1JF4R7J	J 4.7	1/16W M-Ox.	AA	▲▲ R655	VRS-CY1JF104J	J 100k	1/16W M-Ox.	AA					
R354	VRS-CY1JF152J	J 1.5k	1/16W M-Ox.	AA	▲▲ R656	VRS-CY1JF473J	J 47k	1/16W M-Ox.	AA					
R361	VRD-RA2BE102J	J 1.0k	1/8W Carbon	AA	▲ R659	VRN-VV3AB1R2J	J 1.2	1W M-Film	AA					
R364	VRS-CY1JF473J	J 47k	1/16W M-Ox.	AA	▲ R661	VRN-VV3ABR47J	J 0.47	1W M-Film	AA					
R401	VRS-CY1JF682J	J 6.8k	1/16W M-Ox.	AA	▲ R701	RR-HZ0046CEZZ	J 2.7M	1/2W Solid	AD					
R403	VRD-RA2BE331J	J 330	1/8W Carbon	AA	or RR-DZ0047CEZZ									
R404	VRS-CY1JF391J	J 390	1/16W M-Ox.	AA	or VRC-UB2HG275K									
R407	VRS-CY1JF471J	J 470	1/16W M-Ox.	AA	▲ R702	VRW-KP3HC1R8K	J 1.8	5W Cement	AC					
R409	VRS-CY1JF471J	J 470	1/16W M-Ox.	AA	▲ R703	VRS-KA3NG681J	J 680	7.0W M-Ox.	AF					
R410	VRD-RA2BE563J	J 56k	1/8W Carbon	AA	R704	VRD-RM2HD123J	J 12k	1/2W Carbon	AA					
R411	VRS-CY1JF103J	J 10k	1/16W M-Ox.	AA	R705	VRD-RA2EE34J	J 330k	1/4W Carbon	AA					
R412	VRD-RA2EE561J	J 560	1/4W Carbon	AA	R706	VRD-RM2HD470J	J 47	1/2W Carbon	AA					
R413	VRD-RA2BE470J	J 47	1/8W Carbon	AA	▲ R707	VRN-VV3DB1R5J	J 1.5	2W M-Film	AB					
R414	VRD-RA2BE470J	J 47	1/8W Carbon	AA	▲ R708	VRD-RM2HD824J	J 820k	1/2W Carbon	AA					
R415	VRD-RA2BE470J	J 47	1/8W Carbon	AA	▲ R709	VRS-KA3NG681J	J 680	7.0W M-Ox.	AF					
R416	VRS-CY1JF102J	J 1.0k	1/16W M-Ox.	AA	▲ R711	VRS-KA3NG681J	J 680	7.0W M-Ox.	AF					
R417	VRD-RA2BE101J	J 100	1/8W Carbon	AB	▲ R717	VRS-KA3HG3R3K	J 3.3	5W M-Ox.	AD					
R418	VRS-CY1JF152J	J 1.5k	1/16W M-Ox.	AA	▲ R730	VRN-VV3LB2R7J	J 2.7	3.0W M-Film	AB					
R419	VRS-CY1JF472J	J 4.7k	1/16W M-Ox.	AA	R731	VRD-RA2EE330J	J 33	1/4W Carbon	AA					
R423	VRS-CY1JF222J	J 2.2k	1/16W M-Ox.	AA	▲ R734	VRS-KA3NG330J	J 33	7.0W M-Ox.	AE					
R426	VRS-CY1JF271J	J 270	1/16W M-Ox.	AA	R750	VRS-VV3AB561J	J 560	1W M-Ox.	AA					
R440	VRS-CY1JF821J	J 820	1/16W M-Ox.	AA	R752	VRD-RA2BE562J	J 5.6k	1/8W Carbon	AA					
▲ R451	VRS-SV2HC103J	J 10k	1/2W M-Ox.	AA	R754	VRS-CY1JF471J	J 470	1/16W M-Ox.	AA					
					▲ R755	VRS-VV3DB470J	J 47	2W M-Ox.	AA					
					R757	VRS-CY1JF472J	J 4.7k	1/16W M-Ox.	AA					
					▲ R758	VRS-SV2HC180J	J 18	1/2W M-Ox.	AA					
					R801	VRS-CY1JF332J	J 3.3k	1/16W M-Ox.	AA					
					R802	VRS-CY1JF332J	J 3.3k	1/16W M-Ox.	AA					
					R803	VRS-CY1JF182J	J 1.8k	1/16W M-Ox.	AA					
					R804	VRS-CY1JF182J	J 1.8k	1/16W M-Ox.	AA					
					R805	VRS-CY1JF182J	J 1.8k	1/16W M-Ox.	AA					
					R806	VRS-CY1JF333J	J 33k	1/16W M-Ox.	AA					

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
<b>PWB-A:DUNTK9532WEV7 (20L-S100S)</b>									
<b>PWB-A:DUNTK9532WEV9 (CL20S10)</b>									
<b>PWB-A:DUNTK9532WEW1(21ML50)</b>									
<b>MAIN UNIT (Continued)</b>									
R902	VRS-CY1JF750J	J	75	1/16W	M-Ox.	AA	<b>MISCELLANEOUS PARTS</b>		
R905	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA	△ RY701	RRLYU0036CEZZ	J Relay
R906	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA		or	AM
R924	VRS-CY1JF104J	J	100k	1/16W	M-Ox.	AA		RRLYU0038CEZZ	or
R925	VRS-CY1JF104J	J	100k	1/16W	M-Ox.	AA	△ F701	QFS-B4023CEZZ	J Fuse, 4A(125V)
R961	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA		QFS-B4021GEZZ	AC
R962	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA	FB602	RBLN-0037CEZZ	J Ferrite Bead
R2001	VRD-RA2BE102J	J	1.0k	1/8W	Carbon	AA	FB603	RBLN-0037CEZZ	J Ferrite Bead
R2002	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA	FH701	QFSHD1013CEZZ	J Fuse Holder
R2006	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA	FH702	QFSHD1014CEZZ	J Fuse Holder
R2008	VRD-RA2BE224J	J	220k	1/8W	Carbon	AA	J903	QJAKE0159CEZZ	J Jack, Audio IN (L)
R2009	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA	J904	QJAKE0160CEZZ	J Jack, Audio IN (R)
R2010	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA	J905	QJAKE0158CEZZ	J Jack, Video IN
R2011	VRS-CY1JF821J	J	820	1/16W	M-Ox.	AA	P301	QPLGN0561CEZZ	J Plug, 5-pin (BBN)
R2012	VRS-CY1JF471J	J	470	1/16W	M-Ox.	AA	P302	QPLGN0461CEZZ	J Plug, 4-pin (S)
R2020	VRD-RM2HD223J	J	22k	1/2W	Carbon	AA	P401	QPLGN0561CEZZ	J Plug, 5-pin (GBN)
R2022	VRD-RA2BE333J	J	33k	1/8W	Carbon	AA	P601	QPLGN0603CEZZ	J Plug, 6-pin (K)
R2024	VRD-RA2BE682J	J	6.8k	1/8W	Carbon	AA	P651	QPLGN0361CEZZ	J Plug, 3-pin
R2025	VRD-RA2BE682J	J	6.8k	1/8W	Carbon	AA	P701	QPLGN0207CEZZ	J Plug, 2-pin (M)
R2026	VRD-RA2BE682J	J	6.8k	1/8W	Carbon	AA	P751	QPLGN0461CEZZ	J Plug, 4-pin (YBN)
R2027	VRD-RA2BE682J	J	6.8k	1/8W	Carbon	AA	P2001	QPLGN0561CEZZ	J Plug, 5-pin
R2028	VRD-RA2BE102J	J	1.0k	1/8W	Carbon	AA	SC3001	QSOCN0258FJ00	J Socket, 9-pin (EA)
R2029	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA	RMC2602	RRMUCU0227CEZZ	J R/C Receiver
R2032	VRS-CY1JF471J	J	470	1/16W	M-Ox.	AA		or	AK
R2033	VRD-RA2BE103J	J	10k	1/8W	Carbon	AA	RRMUCU0222CEZZ		
R2040	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA	HM601	LX-GZ3002PEZZ	R Screw
R2041	VRS-CY1JF333J	J	33k	1/16W	M-Ox.	AA	HM602	LX-GZ3002PEZZ	R Screw
R2042	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA	HM705	LX-GZ3001PEZZ	R Screw
R2043	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA	HM706	LX-GZ3001PEZZ	R Screw
R2044	VRS-CY1JF683J	J	68k	1/16W	M-Ox.	AA	HM707	LX-GZ3001PEZZ	R Screw
R2045	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA	HM708	LX-GZ3001PEZZ	R Screw
R2047	VRS-CY1JF221J	J	220	1/16W	M-Ox.	AA	HM711	LX-GZ3001PEZZ	R Screw
R2048	VRD-RA2BE562J	J	5.6k	1/8W	Carbon	AA	HM712	LX-GZ3001PEZZ	R Screw
R2049	VRS-CY1JF333J	J	33k	1/16W	M-Ox.	AA	HM713	LX-GZ3001PEZZ	R Screw
R2054	VRS-CY1JF222J	J	2.2k	1/16W	M-Ox.	AA	HM714	LX-GZ3001PEZZ	R Screw
R2055	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA	HM715	LX-GZ3001PEZZ	R Screw
R2060	VRS-CY1JF221J	J	220	1/16W	M-Ox.	AA	HM716	LX-GZ3001PEZZ	R Screw
R2061	VRS-CY1JF562J	J	5.6k	1/16W	M-Ox.	AA	HM717	LX-GZ3001PEZZ	R Screw
R2062	VRS-CY1JF183J	J	18k	1/16W	M-Ox.	AA	HM718	LX-GZ3001PEZZ	R Screw
R2063	VRD-RA2BE222J	J	2.2k	1/8W	Carbon	AA	HM719	LX-GZ3001PEZZ	R Screw
R2064	VRD-RA2BE332J	J	3.3k	1/8W	Carbon	AA	HM720	LX-GZ3001PEZZ	R Screw
R2066	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA	HM722	LX-GZ3002PEZZ	R Screw
R2067	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA	HM724	LX-GZ3002PEZZ	R Screw
R2068	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA	HM726	LX-GZ3002PEZZ	R Screw
R2070	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA	HM729	LX-GZ3001PEZZ	R Screw
R2101	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA	HM730	LX-GZ3001PEZZ	R Screw
R2102	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA	HM732	LX-GZ3001PEZZ	R Screw
R2401	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA	HM733	LX-GZ3001PEZZ	R Screw
R2402	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA	HM734	LX-GZ3002PEZZ	R Screw
R2403	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA	HM737	LX-GZ3002PEZZ	R Screw
R2404	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA	HM739	LX-GZ3002PEZZ	R Screw
R2501	VRS-CY1JF123J	J	12k	1/16W	M-Ox.	AA	HM740	LX-GZ3002PEZZ	R Screw
R2503	VRS-CY1JF273J	J	27k	1/16W	M-Ox.	AA	HM741	LX-GZ3002PEZZ	R Screw
R2504	VRS-CY1JF123J	J	12k	1/16W	M-Ox.	AA	HM742	LX-GZ3002PEZZ	R Screw
R2505	VRS-CY1JF563J	J	56k	1/16W	M-Ox.	AA	HM743	LX-GZ3002PEZZ	R Screw
R2506	VRS-CY1JF563J	J	56k	1/16W	M-Ox.	AA	RDA602	PRDAR0216PEFW	R Heat Sink, for Q602
R2507	VRS-CY1JF823J	J	82k	1/16W	M-Ox.	AA	RDA701	PRDAR0238PEFW	R Heat Sink, for IC701
R2508	VRS-CY1JF153J	J	15k	1/16W	M-Ox.	AA	TP701	QLUGP0102PEZZ	R Lug
R2509	VRS-CY1JF272J	J	2.7k	1/16W	M-Ox.	AA	RDA501	PRDAR0103GJFW	X Heat Sink
R2601	VRD-RA2BE331J	J	330	1/8W	Carbon	AA	PZETM0016CEZZ	J Insulator	
<b>SWITCHES</b>									
S2501	QSW-K0079GEZZ	J	Power			AB	LX-BZ3049GEFD	J Screw	AB
S2502	QSW-K0079GEZZ	J	Vol-Down			AB	LX-BZ3100CEFD	J Screw	AA
S2503	QSW-K0079GEZZ	J	Vol-Up			AB	LX-BZ3100CEFD	J Screw	AA
S2504	QSW-K0079GEZZ	J	Ch-Down			AB	LX-TZ3004CEFD	J Screw	AA
S2505	QSW-K0079GEZZ	J	Ch-Up			AB			

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

## PWB-B : DUNTK9533WEV7 CRT UNIT

### TRANSISTORS

Q852	VS2SC2229O/1E	J	2SC2229	AD
Q854	VS2SC2229O/1E	J	2SC2229	AD
Q856	VS2SC2229O/1E	J	2SC2229	AD
Q881	VS2SA1266-Y-1	J	2SA1266	AA
	or			
	VS2SA1015-Y-1			

### DIODES

You can substitute "RH-DX0045GEZZ" and "VHD-DX0446CEZZ" for "VHD1SS119//1".

D881	VHD1SS119//1	J	Diode	AB
D882	VHD1SS119//1	J	Diode	AB
D885	VHD1SS119//1	J	Diode	AB

### COIL

L851	VP-DF151K0000	J	Peaking 150µH	AB
------	---------------	---	---------------	----

### CAPACITORS

[EL... Electrolytic]

C851	VCCCCY1HH271J	J	270p 50V	Ceramic	AA
C852	VCCCCY1HH271J	J	270p 50V	Ceramic	AA
C853	VCCCCY1HH271J	J	270p 50V	Ceramic	AA
C854	RC-KZ0029CEZZ	J	0.01 1.4kV	Ceramic	AC
C881	VCEA0A1CW106M	J	10 16V	EL.	AB
C883	VCEA0A1CW336M	J	33 16V	EL.	AB

### RESISTORS

[M-Ox... Metal Oxide]

R851	VRS-CY1JF470J	J	47 1/16W	M-Ox.	AA
R852	VRD-RA2BE221J	J	220 1/8W	Carbon	AA
R853	VRS-CY1JF121J	J	120 1/16W	M-Ox.	AA
▲ R857	VRS-VV3AB123J	J	12k 1W	M-Ox.	AA
R858	VRD-RM2HD332J	J	3.3k 1/2W	Carbon	AA
R859	VRD-RA2BE470J	J	47 1/8W	Carbon	AA
R860	VRS-CY1JF221J	J	220 1/16W	M-Ox.	AA
R861	VRS-CY1JF121J	J	120 1/16W	M-Ox.	AA
▲ R865	VRS-VV3AB123J	J	12k 1W	M-Ox.	AA
R866	VRD-RM2HD332J	J	3.3k 1/2W	Carbon	AA
R867	VRS-CY1JF470J	J	47 1/16W	M-Ox.	AA
R868	VRD-RA2BE221J	J	220 1/8W	Carbon	AA
R869	VRS-CY1JF121J	J	120 1/16W	M-Ox.	AA
▲ R873	VRS-VV3AB123J	J	12k 1W	M-Ox.	AA
R874	VRD-RM2HD332J	J	3.3k 1/2W	Carbon	AA
R881	VRS-CY1JF561J	J	560 1/16W	M-Ox.	AA
R882	VRS-CY1JF391J	J	390 1/16W	M-Ox.	AA
R883	VRD-RA2BE561J	J	560 1/8W	Carbon	AA
R884	VRS-CY1JF152J	J	1.5k 1/16W	M-Ox.	AA
R886	VRS-CY1JF431J	J	430 1/16W	M-Ox.	AA
R887	VRS-CY1JF470J	J	47 1/16W	M-Ox.	AA

### MISCELLANEOUS PARTS

P851	QPLGN0561CEZZ	J	Plug, 5-pin (GBN)	AB
P852	QPLGN0461CEZZ	J	Plug, 4-pin (YBN)	AB
SC851	QSOCV0929CEZZ	J	CRT Socket	AM

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

## PWB-E : DUNTK9531WEV7 MTS MODULE UNIT

### INTEGRATED CIRCUITS

IC352	VHiTDA7233/-1	J	TDA7233	AF
IC3001	VHiCXA2074Q-1	J	CXA2074Q	AY

### TRANSISTOR

Q352	VS2SD601AR/-1	J	2SD601AR	AC
------	---------------	---	----------	----

### CAPACITORS

[EL... Electrolytic]

C315	VCEA0A1HW225M	J	2.2 50V	EL.	AB
C356	VCKYCY1HB562K	J	5600p 50V	Ceramic	AA
C357	VCEA0A1CW107M	J	100 16V	EL.	AC
C358	VCEA0A1CW337M	J	330 16V	EL.	AC
C359	VCKYCY1EF104Z	J	0.1 25V	Ceramic	AA
C360	VCEA0A1CW226M	J	22 16V	EL.	AB
C365	VCEAGA1CW108M	J	1000 16V	EL.	AD
C3001	VCE9GA1HW475M	J	4.7 50V	EL.(N.P)	AB
C3002	VCKYCY1HB562K	J	5600p 50V	Ceramic	AA
C3003	RC-QZA123TAYK	J	0.012 50V	Mylar	AB
C3004	VCEA0A1HW105M	J	1.0 50V	EL.	AB
C3005	VCEA0A1HW475M	J	4.7 50V	EL.	AB
C3006	VCEA0A1HW106M	J	10 50V	EL.	AB
C3007	VCEA0A1HW475M	J	4.7 50V	EL.	AB
C3008	VCKYCY1HF103Z	J	0.01 50V	Ceramic	AA
C3009	VCEA0A1CW227M	J	220 16V	EL.	AC
C3010	VCE9GA1HW475M	J	4.7 50V	EL.(N.P)	AB
C3011	VCEA0A1HW475M	J	4.7 50V	EL.	AB
C3012	VCE9GA1HW475M	J	4.7 50V	EL.(N.P)	AB
C3013	VCKYCY1HB272K	J	2700p 50V	Ceramic	AA
C3014	RC-QZA473TAYK	J	0.047 50V	Mylar	AB
C3015	VCSATA1CE335K	J	3.3 16V	Tantalum	AC
C3016	VCE9GA1HW475M	J	4.7 50V	EL.(N.P)	AB
C3017	VCSATA1CE106K	J	10 16V	Tantalum	AD
C3018	VCEA0A1HW105M	J	1.0 50V	EL.	AB
C3023	VCKYCY1HF103Z	J	0.01 50V	Ceramic	AA
C3024	VCKYCY1HF103Z	J	0.01 50V	Ceramic	AA
C3025	VCKYCY1HF103Z	J	0.01 50V	Ceramic	AA
C3026	VCKYCY1HF103Z	J	0.01 50V	Ceramic	AA
C3027	VCKYCY1HF103Z	J	0.01 50V	Ceramic	AA
C3028	VCKYCY1HF103Z	J	0.01 50V	Ceramic	AA
C3029	VCKYCY1HF103Z	J	0.01 50V	Ceramic	AA
C3030	VCKYCY1HF103Z	J	0.01 50V	Ceramic	AA

### RESISTORS

[M-Ox... Metal Oxide]

RJ2	VRS-CY1JF000J	J	0 1/16W	M-Ox.	AA
RJ3	VRS-CY1JF000J	J	0 1/16W	M-Ox.	AA
RJ4	VRS-CY1JF000J	J	0 1/16W	M-Ox.	AA
RJ6	VRS-CY1JF000J	J	0 1/16W	M-Ox.	AA
RJ7	VRS-CY1JF000J	J	0 1/16W	M-Ox.	AA
RJ8	VRS-CY1JF000J	J	0 1/16W	M-Ox.	AA
RJ9	VRS-CY1JF000J	J	0 1/16W	M-Ox.	AA
R305	VRS-CY1JF000J	J	0 1/16W	M-Ox.	AA
R355	VRS-CY1JF333J	J	33k 1/16W	M-Ox.	AA
R356	VRS-CY1JF332J	J	3.3k 1/16W	M-Ox.	AA
R357	VRS-CY1JF4R7J	J	4.7 1/16W	M-Ox.	AA
R358	VRS-CY1JF152J	J	1.5k 1/16W	M-Ox.	AA
R362	VRS-CY1JF102J	J	1.0k 1/16W	M-Ox.	AA
R3001	VRS-CY1JF221J	J	220 1/16W	M-Ox.	AA
R3002	VRS-CY1JF221J	J	220 1/16W	M-Ox.	AA
R3003	VRS-CY1JF105J	J	1.0M 1/16W	M-Ox.	AA
R3004	VRS-CY1JF104J	J	100k 1/16W	M-Ox.	AA
R3005	VRS-CY1JF623J	J	62k 1/16W	M-Ox.	AA
R3007	VRS-CY1JF332J	J	3.3k 1/16W	M-Ox.	AA
R3008	VRS-CY1JF302J	J	3.0k 1/16W	M-Ox.	AA
R3010	VRS-CY1JF392J	J	3.9k 1/16W	M-Ox.	AA
R3011	VRS-CY1JF102J	J	1.0k 1/16W	M-Ox.	AA
R3012	VRS-CY1JF102J	J	1.0k 1/16W	M-Ox.	AA

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
<b>PWB-E : DUNTK9531WEV7 MTS MODULE UNIT (Continued)</b>									

#### MISCELLANEOUS PARTS

P351	QPLGN0561CEZZ	J	Plug, 5-pin (BBN)	AB
P3001	QPLGN0241FJ00	J	Plug, 9-pin (EA)	AG

#### PACKING PARTS (NOT REPLACEMENT ITEM)

SPAKC0005GJZZ	—	Packing Case (20L-S100S)	—
SPAKC0106GJZZ	—	Packing Case (CL20S10)	—
SPAKC0105GJZZ	—	Packing Case (21ML50)	—
SPAKP0102GJZZ	—	Wrapping Paper	—
SPAKX0004GJZZ	—	Buffer Material	—
SSAKA0101GJZZ	—	Polyethylene Bag	—

#### MISCELLANEOUS PARTS

△ ACC701	QACCD3064CESA	M	AC Cord	AM
or				
SP1	QACCD3060CESA	X	Connecting Cord	
	QCNW-0114GJZZ	R	Connecting Cord	AF
	QCNW-2111PEZZ	R	Connecting Cord	AG
	QCNW-2160PEZZ	R	Connecting Cord	AF
	QCNW-2208PEZZ	R	Connecting Cord	AG
	VSP0080PBK98A	M	Speaker (L)	AG
or				
SP2	VSP0080P-E98S	M	Speaker (R)	AG
or				
	VSP0080P-E98S			


#### CABINET PARTS

1	CCABA0005WEH0	X	Front Cabinet Ass'y (20L-S100S, CL20S10)	
1	CCABA0105WEH0	X	Front Cabinet Ass'y (21ML50)	
1-1	<i>Not Available</i>	—	Front Cabinet	—
1-2	GCOVA0004GJSA	X	Cover for R/C	
1-3	HBDGB1001GJSA	X	Badge, "SHARP"	
1-4	JBTN-0004GJSA	X	Button	
2	GCABB0004GJKA	X	Rear Cabinet	


#### SUPPLIED ACCESORIES

TGAN-0001GJZZ	X	Guarantee Card (20L-S100S, CL20S10)	
TINS-6566GJZZ	X	Operation Manual (20L-S100S)	
TINS-6568GJZZ	X	Operation Manual (CL20S10)	
TINS-6570GJZZ	X	Operation Manual (21ML50)	
RRMCG1324CESA	M	Infrared R/C Unit (20L-S100S, CL20S10)	AT
RRMCG1339CESA	M	Infrared R/C Unit (21ML50)	AT
QANTR0018PEZZ	M	Rod Antenna (21ML50)	AQ
RUNTK0165CEZZ	M	Antenna Adaptor (21ML50)	AG

#### CABINET PARTS LOCATION

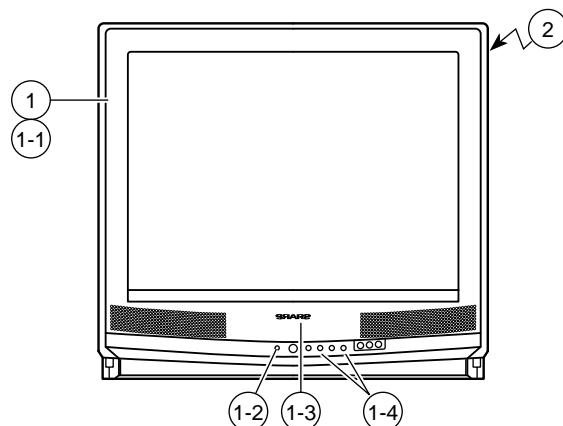

## PACKING OF THE SET

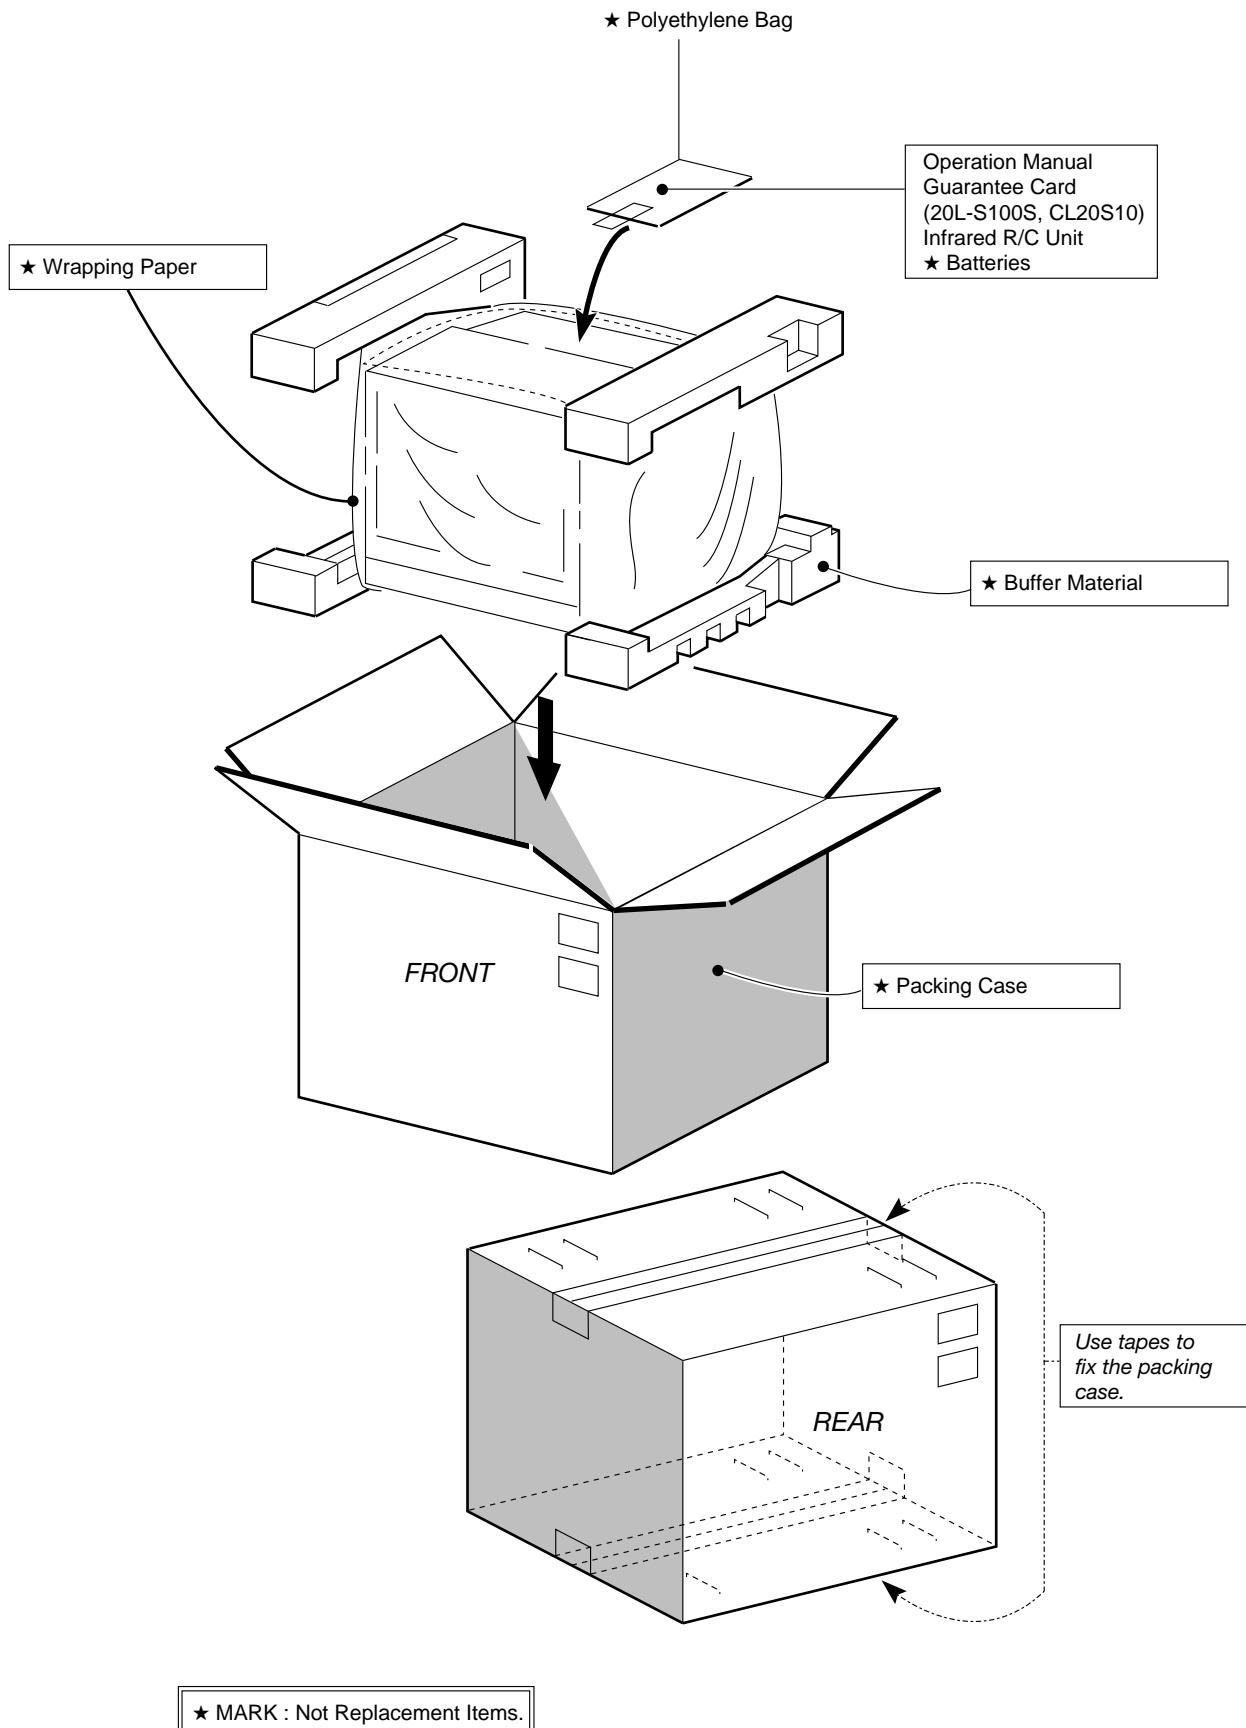

# SHARP

**COPYRIGHT © 1999 BY SHARP CORPORATION**

**ALL RIGHTS RESERVED.**

No part of this publication may be reproduced,  
stored in a retrieval system, or transmitted in  
any form or by any means, electronic, mechanical,  
photocopying, recording, or otherwise, without  
prior written permission of the publisher.