


ROBERTS

Sound for Generations


CR9910

3 Band Radio Controlled
Dual Alarm Clock Radio

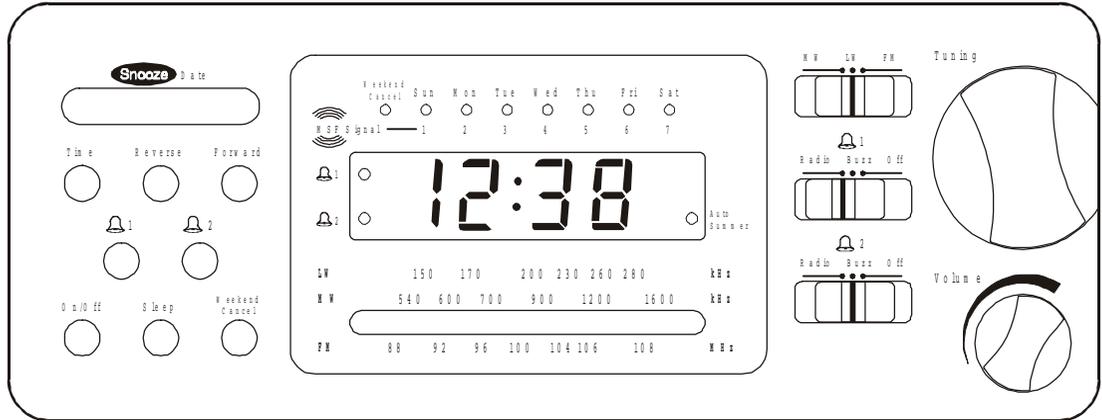

Please read this manual before use

Controls (front)

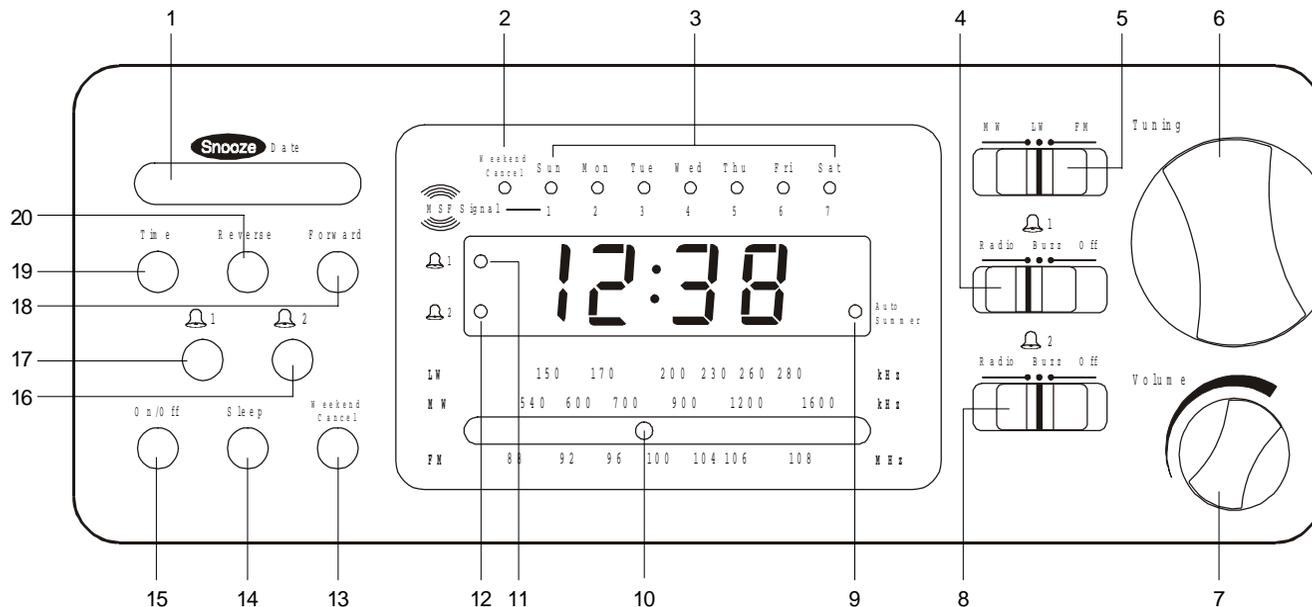

1. Snooze/Date button

2. Week end cancel indicator

3. MSF signal/Day of week indicators

4. Alarm 1 function switch

5. Waveband selector

6. Tuning control

7. Volume control

8. Alarm 2 function switch

9. Auto summer indicator

10. LED dial pointer

11. Alarm 1 indicator

12. Alarm 2 indicator

13. Week end cancel button

14. Sleep button

15. On/Off button

16. Alarm 2 button


17. Alarm 1 button

18. Forward button

19. Time button

20. Reverse button

Controls (underside)

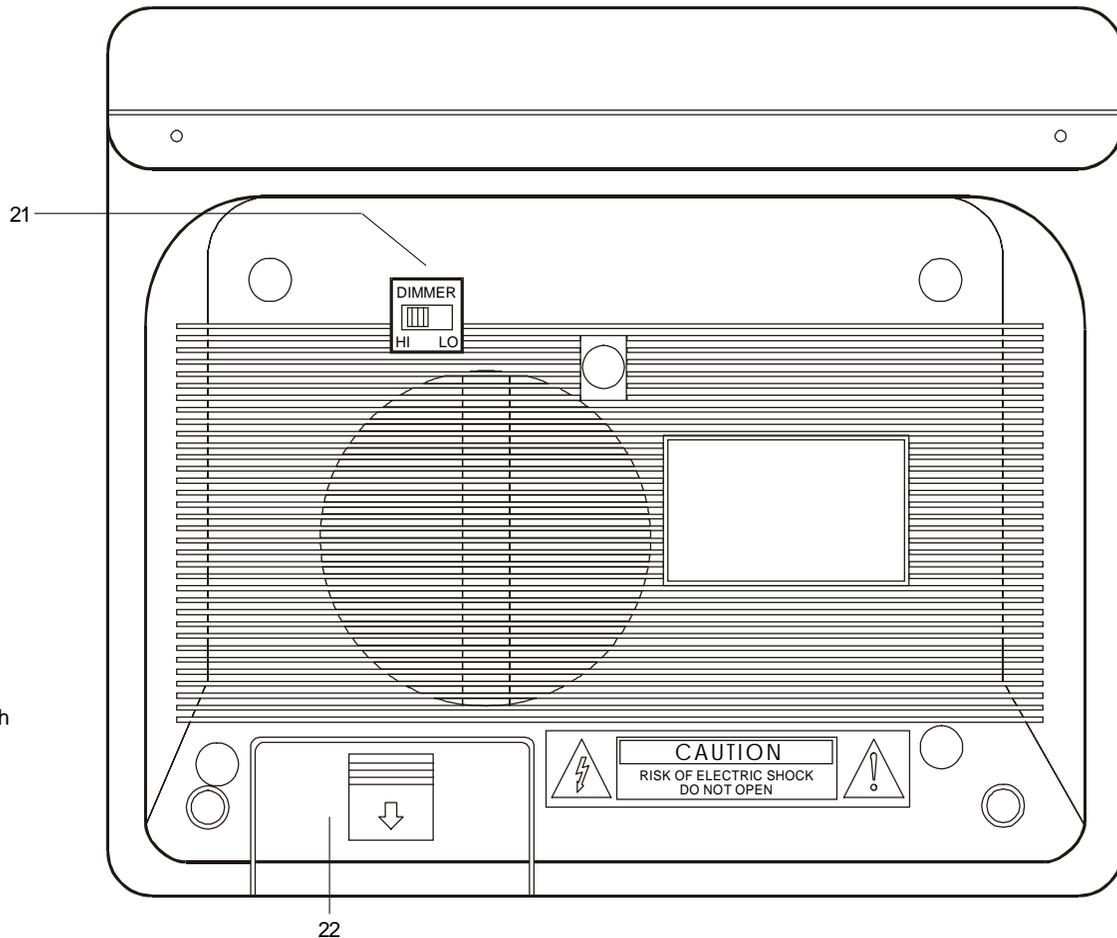

21. Display dimmer switch

22. Battery compartment

If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)

Automatic clock setting

When switched on your clock radio will receive and synchronise to one of the most accurate clocks in the world. The signal is received from the official UK standard frequency and time signal transmitter (MSF) located at Rugby in the U.K.


At certain times of the year the MSF transmitter closes down for maintenance during this time it will be necessary to set the clock manually (see the sections headed Setting the Time and Date Manually). Recorded information on transmitter status can be obtained on 020 8943 6493.

Your clock radio will automatically synchronise with the MSF time signal when the transmitter is switched back on. The time setting or synchronisation takes 2 to 3 minutes to complete if the reception of the radio time signal is undisturbed. This process will take longer if the time signal level is very weak (e.g. in locations that are a long distance from the MSF transmitter) or if it is subject to interference from thunderstorms, nearby TV sets, computers or household appliances that are not suppressed, etc. In general your clock radio will receive the time signal at any place where a radio is able to receive Long Wave broadcast programmes well.

Switching on

1. Place the unit on a flat surface. Plug the mains lead into a wall socket and switch on.
2. The built in microprocessor will automatically activate the Radio Controlled clock and initiate a search for the time signal. When first connected to the mains supply the **MSF signal indicator** shows the MSF signal level.
3. Rotate your clock radio or change its position until the highest signal level is obtained.
4. It is recommended that your clock radio is placed as far away as possible from any sources of interference such as computers or televisions, etc.
5. When your clock radio is receiving the radio time signal, the seconds digits will appear in the display and the colon will flash once every second in time with the radio time signal. When the time setting process has been completed, the exact time and day of the week will appear in the display. The **MSF signal indicator** becomes the **Day of week** indicator after initial time setting has taken place.

Your clock radio will automatically switch from summer to winter time and vice versa by following the radio time signal. The **Automatic summer time indicator** will light up during summer time.

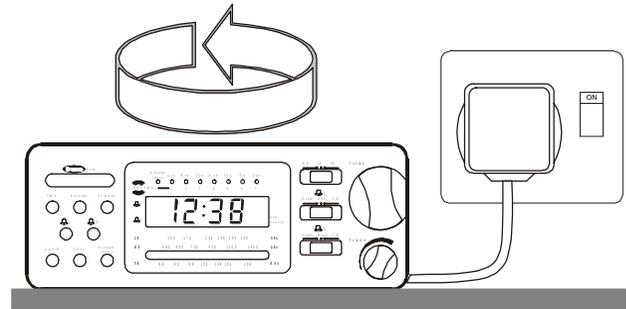


Setting the time manually

(only necessary if the MSF signal is not available)

1. To set the time, press and hold down the **Time button** and adjust using the **Forward button** or **Reverse button** until the correct time appears. The clock uses a 24 hour display.
2. After setting the time, the CR9910 will continue to run on its own internal quartz time base and will automatically synchronise itself with the radio time signal commencing on the 54th minute of every hour. Once synchronisation is achieved the time and date of the radio time signal will be restored and displayed.


Note: Pressing the forward or reverse buttons once will cause the display to move by one. Press and hold down the forward or reverse buttons to rapidly move the display.

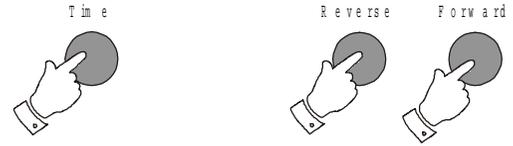

Setting the date manually

(only necessary if the MSF signal is not available)


1. To set the date, press and hold down the **Date button** and adjust using the **Forward button** or **Reverse button** until the correct date appears.

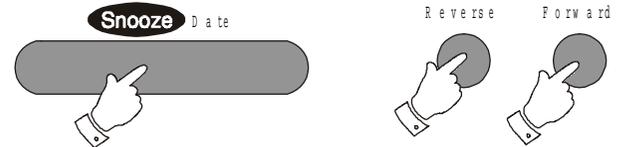

Setting the year manually


(only necessary if the MSF signal is not available)

1. To set the year, press the **Date button** once to display the date, within 3 seconds press and hold down the **Date button** and adjust using the **Forward button** or **Reverse button** until the correct year appears.

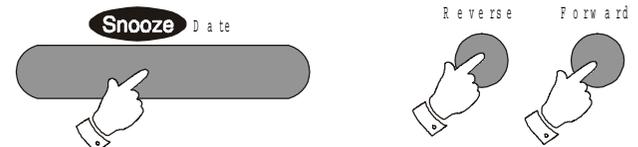


Listening to the Radio

1. Turn on the radio by pressing the **On/Off button**. The **LED dial pointer** will light up indicating that the radio is switched on.

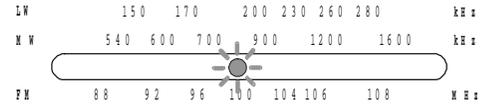



2. Select the required waveband using the **Waveband selector switch**.

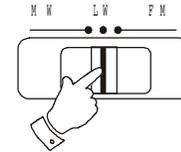

3. Tune in to the desired station by rotating the **Tuning control**. The station frequency is indicated by the **LED dial pointer**.

The **Wire aerial** located on the rear of your clock radio is for FM reception. The wire should be fully extended and positioned for optimum reception.

For MW and LW reception there is a built in ferrite aerial. Rotate your clock radio to the position giving best reception.

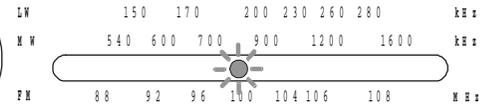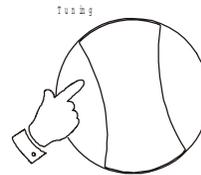

4. Adjust the volume by rotating the **Volume control**.



5. The radio can be switched off by pressing the **On/Off button**.




Setting alarm times

Your alarm clock radio has two separate alarms which can be set to activate at different times. The alarms can be set to wake you by either the buzzer or the radio.

Note: In the event of a power failure the backup battery will ensure that the alarm sounds at the preset time.


Setting alarm 1

1. Press and hold down the **Alarm 1 button** (🔔 1).
2. Whilst holding down the **Alarm 1 button** (🔔 1) press the **Forward button** or **Reverse button** to set the required alarm time. Release the buttons when the correct alarm time is reached. The clock uses a 24 hour display.

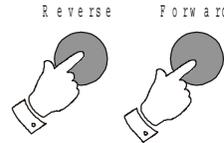

Setting alarm 2

1. Press and hold down the **Alarm 2 button** (🔔 2).
2. Whilst holding down the **Alarm 2 button** (🔔 2) press the **Forward button** or **Reverse button** to set the required alarm time. Release the buttons when the correct alarm time is reached. The clock uses a 24 hour display.

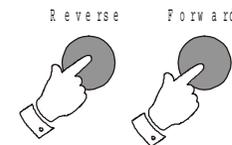

If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)

Checking the Alarm Times

1. To check alarm 1 time, press the **Alarm 1 button** (🔔 1) the display will show alarm 1 time whilst the button is held down.



2. To check alarm 2 time, press the **Alarm 2 button** (🔔 2) the display will show alarm 2 time whilst the button is held down.






Setting the alarms to wake to buzzer

1. Set the alarm time as previously described.
2. Set the **Alarm 1 function switch** or **Alarm 2 function switch** to the 'Buzz' position. The corresponding **Alarm indicators** will light.
3. The buzzer alarm will sound every day at the preset time for 59 minutes.
4. To turn off the alarm until the next day press the **On/Off button**.
5. To turn off the alarms permanently set the **Alarm 1 function switch** or **Alarm 2 function switch** to the 'Off' position.


To make a distinction between alarm 1 and alarm 2 the alarm signals have a different sound pitch:

- Alarm 1 = lower pitch alarm signal
- Alarm 2 = higher pitch alarm signal

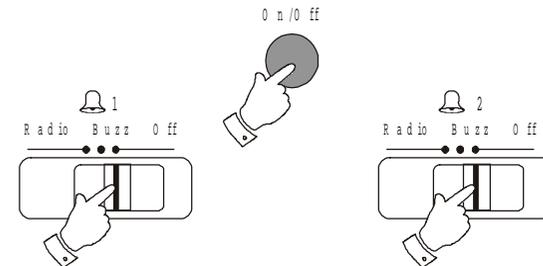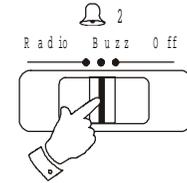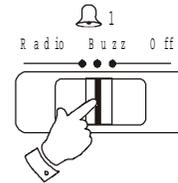

Setting the alarms to wake to radio

1. Set the alarm time as previously described.
2. Set the **Alarm 1 function switch** or **Alarm 2 function switch** to the 'Radio' position. The corresponding **Alarm indicators** will light.
3. Ensure that a station is tuned in and the **Volume control** is set to the required level.
4. The radio alarm will sound every day at the preset time for 59 minutes.
5. To turn off the alarm until the next day press the **On/Off button**.
6. To turn off the alarms permanently set the **Alarm 1 function switch** or **Alarm 2 function switch** to the 'Off' position.

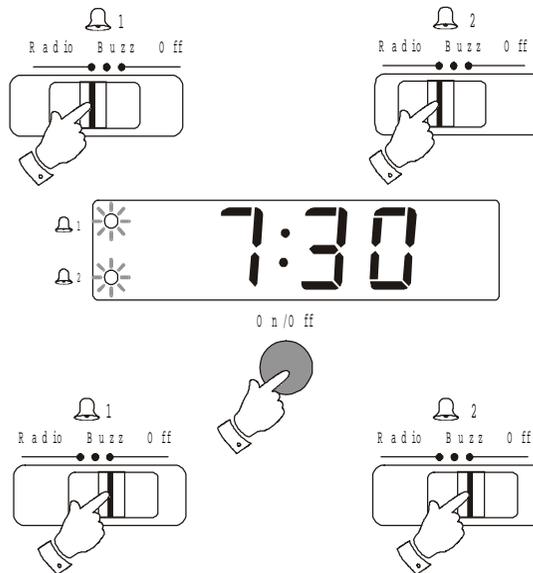

Snooze control

The radio or buzzer alarms can be silenced for 5 minutes by pressing the **Snooze** button. This sequence can be repeated whilst the alarm is sounding.



Sleep timer

The radio can be set to turn off after a preset time has elapsed.

Press and hold down the **Sleep** button until the desired time is reached (maximum 90 minutes in 10 minute steps). The radio will switch off after the sleep time has elapsed. To cancel the sleep function before the preset time has expired, press the **On/Off button**.




If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)

Alarm weekend cancel


The alarms can be automatically cancelled at weekends.

1. To enable the weekend cancel function, press the **Weekend cancel button**. The **Weekend cancel indicator** will light up in the display.
2. Press the **Weekend cancel button** again to turn off the indicator and disable this function.

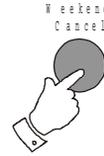

Dimmer Switch

The **Dimmer switch** located on the underside of your clock radio will allow you to adjust the intensity of the clock display to suit room brightness.

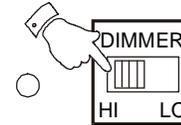

Specifications

Power Requirements

Mains	AC 230 volts, 50Hz \sim only
Back-up Battery	IEC size 6LR61 (6F22, PP3)

Frequency Coverage

FM	87.5 - 108MHz
MW	525 - 1610kHz
LW	147 - 284kHz

Circuit Features

Loudspeaker 75mm diameter 8 ohms

Output power 400mW

Aerial System FM Wire Aerial

MW Built-in Ferrite aerial

LW Built-in Ferrite aerial

ROBERTS RADIO LIMITED

PO BOX 130
MEXBOROUGH
SOUTH YORKSHIRE
S64 8YT

The company reserves the right to amend the specification without notice.

General

Do not allow this unit to be exposed to water or steam. It is recommended that the FM band be used wherever possible as better results in terms of quality and freedom from interference will usually be obtained than on the MW or LW bands.

Mains supply

The CR9910 will operate from a supply of AC 230volts, 50Hz \sim only.

For your convenience this product is supplied with a plug which is fitted with a fuse of the appropriate rating. If the plug supplied is not suitable for your socket outlet, it should be removed by unscrewing the plug top, the terminal screws, and removing the cable.

The correct style of plug to suit your household together with a correctly rated fuse should be fitted.

IF IN DOUBT - CONSULT A QUALIFIED ELECTRICIAN


IMPORTANT. DO NOT make any connection to the larger terminal which is marked with the letter E or by the safety earth symbol \perp or coloured Green or Green-and-yellow.

The wires in the mains lead are coloured in accordance with the following codes :-

BLUE - NEUTRAL

BROWN - LIVE

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

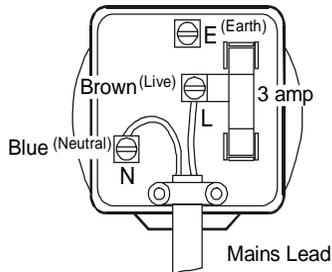

The wire coloured BLUE must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN must be connected to the terminal marked L or coloured RED.

Fuse

This apparatus must be protected by a 3A fuse (BS1362) in a 13A plug (BS1363). If another type of plug is used a 5A fuse should be fitted in the plug, adaptor or distribution board.

IF IN DOUBT - CONSULT A QUALIFIED ELECTRICIAN.


Back-up Battery (not necessary for the unit to function)

Slide the battery cover catch in the direction of the arrow. Remove the battery cover. Fit a 9 volt IEC size 6LR61 (6F22, PP3) or equivalent battery into the compartment. Replace the battery cover.

The time and alarm settings will be retained during a temporary failure of the AC mains supply. The LED display will not be operational but the Radio and buzzer alarms will continue to operate at their preset times.

If your clock radio is not to be used for a prolonged period of time, remove the battery to avoid damage by battery leakage.

(Underside)

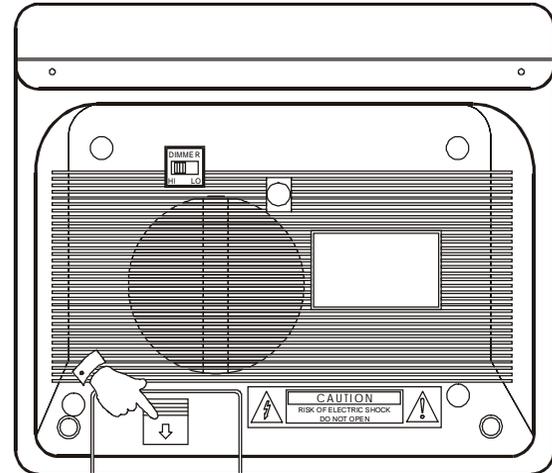

Guarantee

This instrument is guaranteed for twelve months from the date of delivery to the original owner against failure due to faulty workmanship or component breakdown, subject to the procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced free of charge.

The guarantee does not cover:

1. Damage resulting from incorrect use.
2. Consequential damage.
3. Receivers with removed or defaced serial numbers.

Procedure:

Any claim under this guarantee should be made through the dealer from whom the instrument was purchased. It is likely that your Roberts' dealer will be able to attend to any defect quickly and efficiently, but should it be necessary the dealer will return the instrument to the company's service department for attention. In the event that it is not possible to return the instrument to the Roberts' dealer from whom it was purchased, please contact Roberts Radio Technical Services department at the address shown below before taking further action.

These statements do not affect the statutory rights of a consumer.

ROBERTS RADIO TECHNICAL SERVICES DEPARTMENT

97-99 Worton Road
Isleworth Middlesex
TW7 6EG

Technical Helpline:- 020 8758 0338 (Mon-Fri)

Issue 1

