

Installation Manual


Prestige External TD

INS352-2




Texecom
Designed to Perform


1. Accessing the Unit

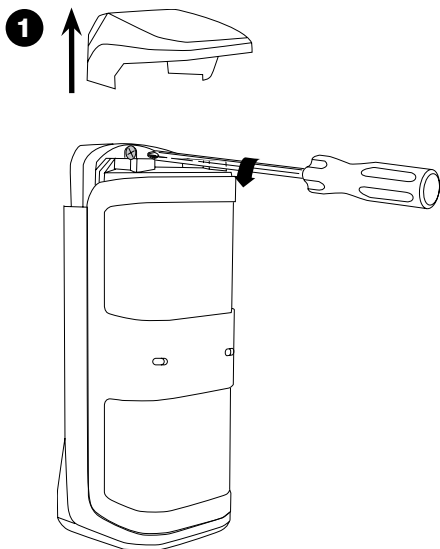

Remove the top cap and loosen screw (screw retained in wall plate).

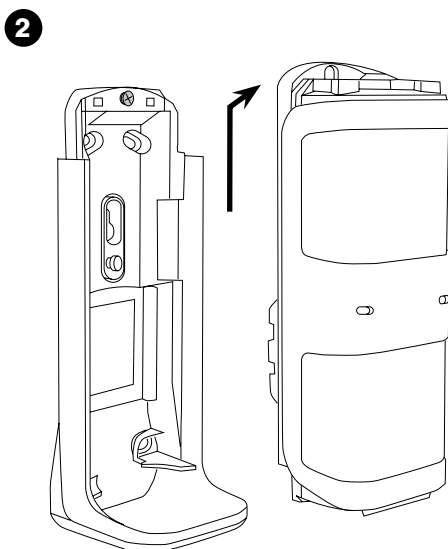


Push up head unit and remove.

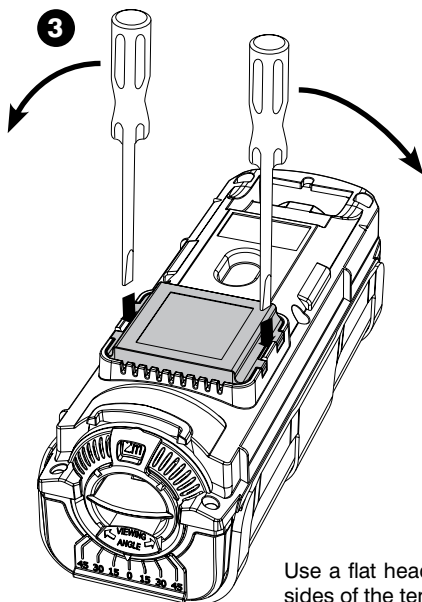


Use a flat head screwdriver to lever out both sides of the terminal cover as shown.

2. Choosing a Location

- Mounting height 1.0 - 1.4m (nominal 1.2m), measured to middle of unit.
- Mount perpendicular to ground.

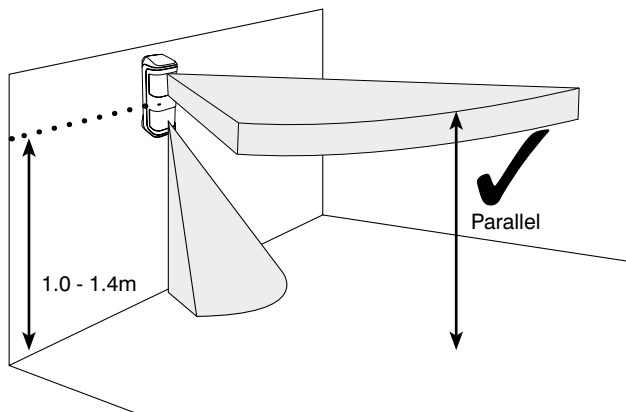


- Try to avoid direct sunlight.
- Avoid pointing at swaying bushes/trees and swaying clothes on a clothes line.

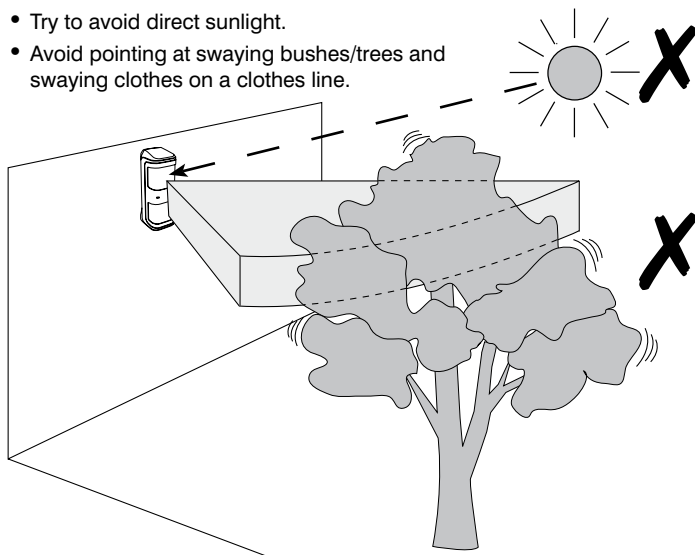


- Try to install the detector so its detection area is terminated by building/fences etc. This will reduce the effect of range variation caused by environmental changes.

- In the detection area try to avoid reflective surfaces such as standing water, swimming pools or polished floors as this can cause the detectors range or coverage to vary as reflected signals may be seen.

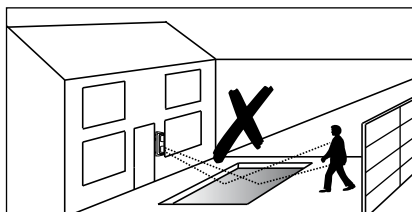


3. Mounting the Unit

Front View

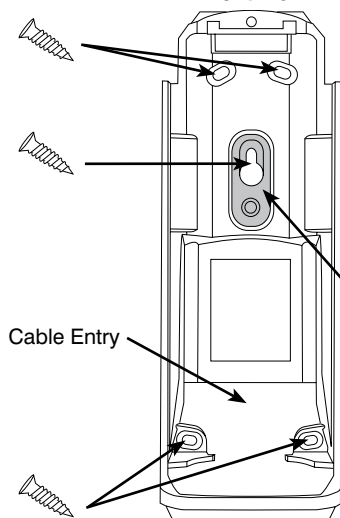

WALL MOUNTING


For wall mounting, the cable should be brought through the wall into the cable entry hole.

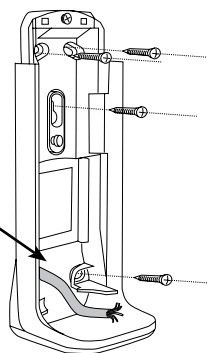

REAR TAMPER

To enable the rear tamper, the breakaway keyhole section must be securely fixed to the mounting surface.


Rear View

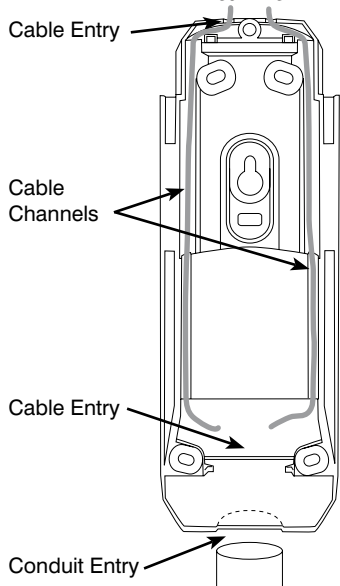

SURFACE WIRING

For surface wiring, use the appropriate knockout in the top or bottom of the unit. If wiring from the top, use the knockouts in the top cap and run the cable down the cable channels and into the unit as shown.


Knockout in Top Cap




Pole Mount Bracket Mounting

POLE MOUNTING

Using the pole mount kit (available separately) the unit can be mounted on poles with an outside diameter of 20 - 57mm. Assemble the kit around the pole as shown and tighten the 4 bolts. Hook the detector wall plate onto the kit and secure the remaining 2 bolts through the lower mounting holes.

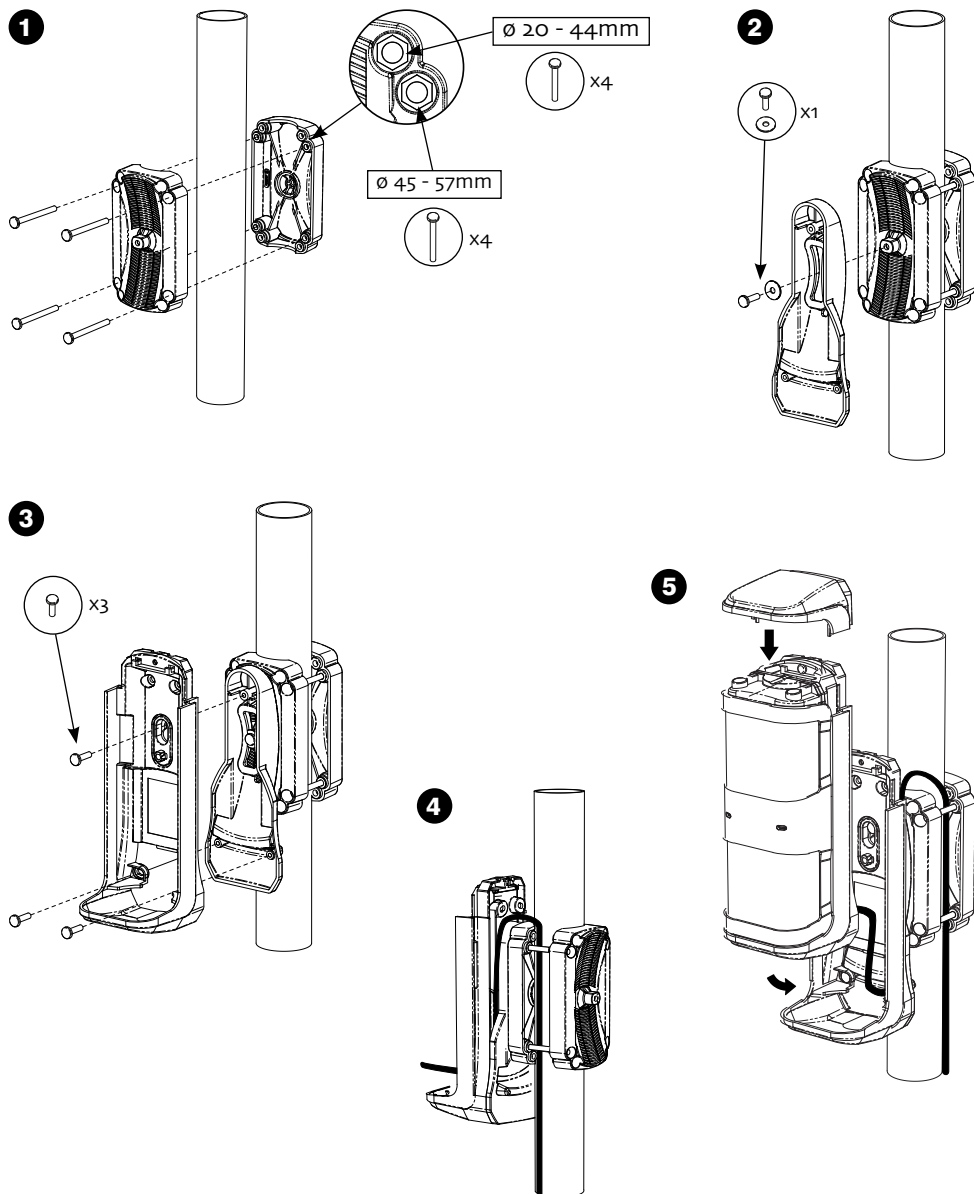


4. Wiring the Unit

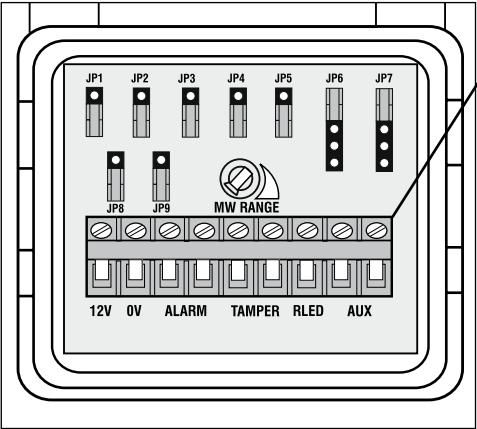


TERMINAL BLOCK	
12V & 0V:	9-16 V _{DC} .
ALARM:	NO/NC (selectable) relay output. 18 Ω, 50V _{DC} , 100mA Max.
TAMPER:	NC Relay output. 18 Ω, 50V _{DC} , 100mA Max.
RLED:	0V: LED off. 12V or No Connection: LED on.
AUX:	NC relay input.

NC = Normally Closed, NO = Normally Open


JP1: Pulse Count

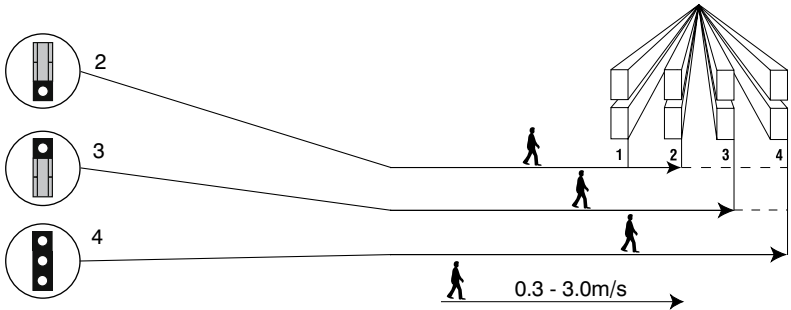

JP2: Sensitivity

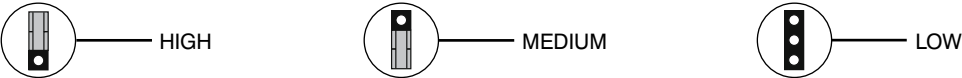


JP3: Alarm

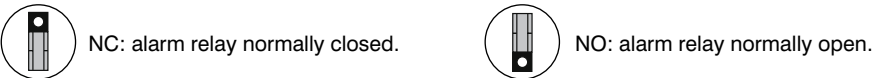




JP4: LED



JP5: MODE

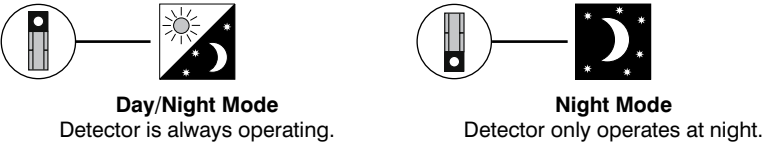


JP6 & JP7: END OF LINE JUMPERS

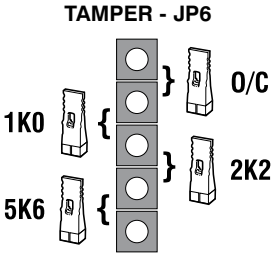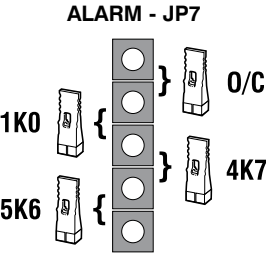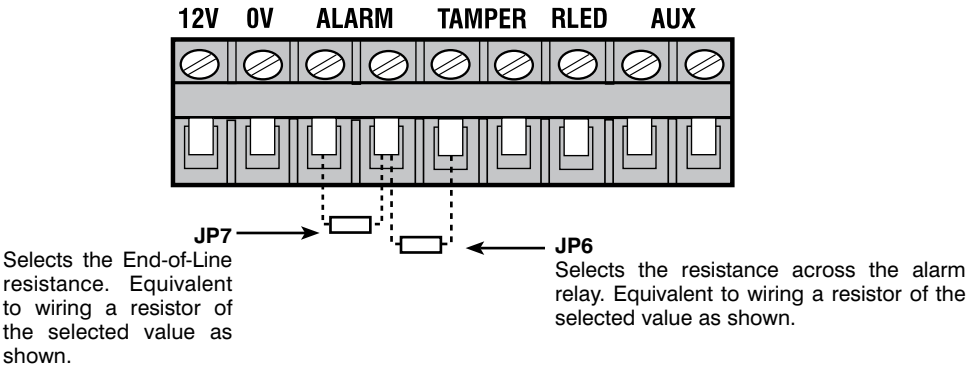





JP8 & JP9: see Auxiliary section (page 9)

5. Range Adjustment - PIR

Bottom of head unit

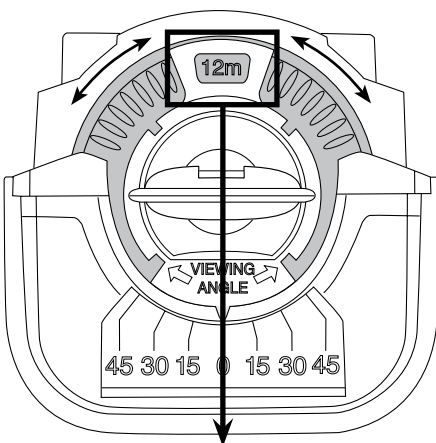

Selected Range

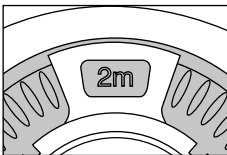
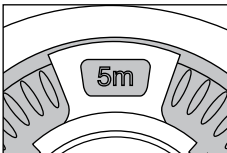
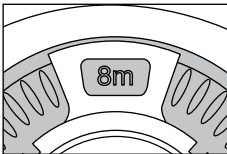
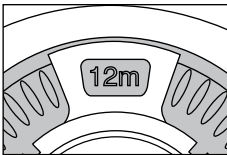


To adjust the range of the detector, rotate the circular section shown until the desired range is shown in the window.

Note: Range can vary due to environmental conditions. To reduce the risk of false alarms always select the lowest range possible for the installation.


Specified ranges are valid for nominal 1.2m mounting height.

Side View

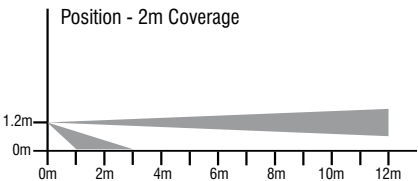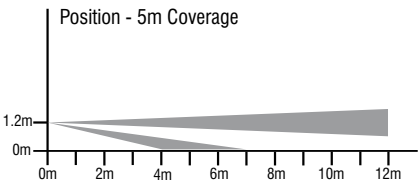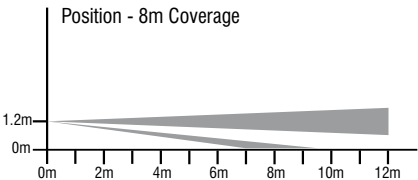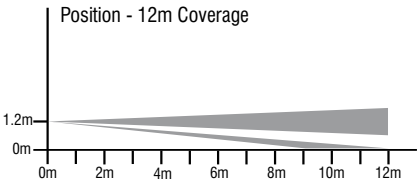


6. Coverage Area


Bottom of head unit

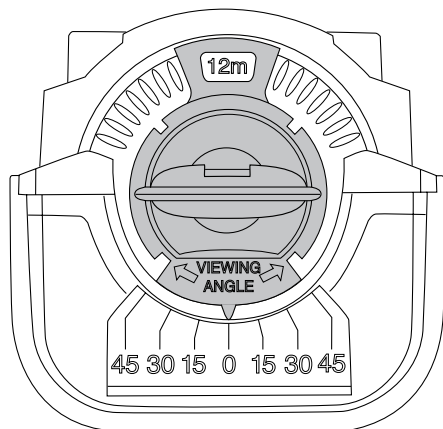




Bottom of head unit

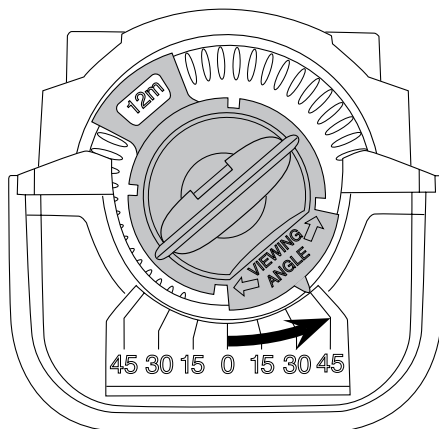

Top View

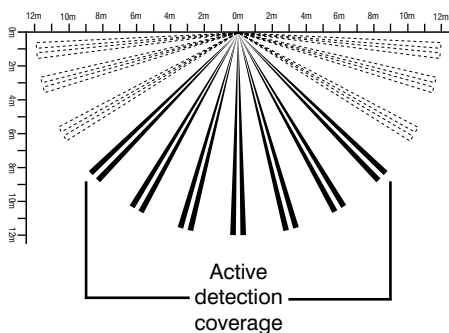

Top View

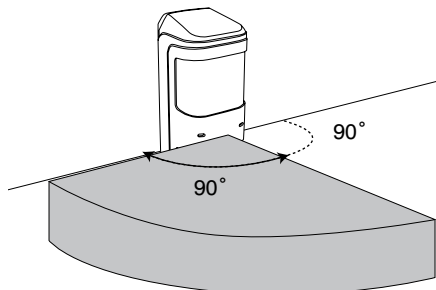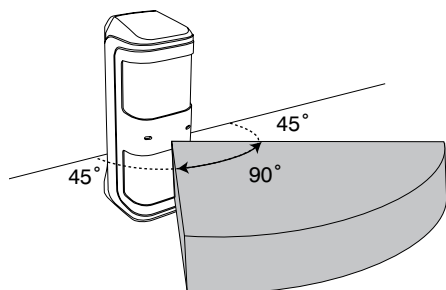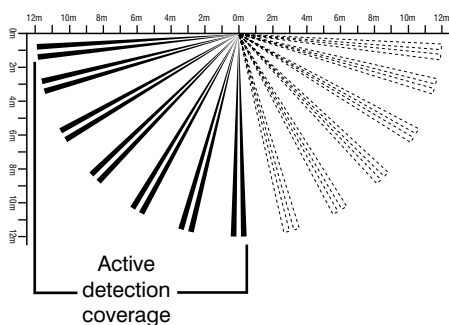

Walk-testing

With the range, sensitivity, coverage and pulse count set as desired, enable the LEDs and walk-through the area of protection. Confirm the LEDs light and alarm relay activates.




7. Auxiliary Input

With the Auxiliary input enabled (JP8), a second detector with a normally closed relay output can be connected to the Prestige External detector to give directional detection. The order of activation required to give an alarm signal is set by the direction jumper (JP9).

When this is set to '1st' the auxiliary detector must be activated first followed by the Prestige External detector within 1 minute to give a valid alarm signal.

With the jumper set to 2nd, the Prestige External detector must be activated followed by the auxiliary detector within 1 minute.

If directional detection is not required, disable the auxiliary input using JP8.

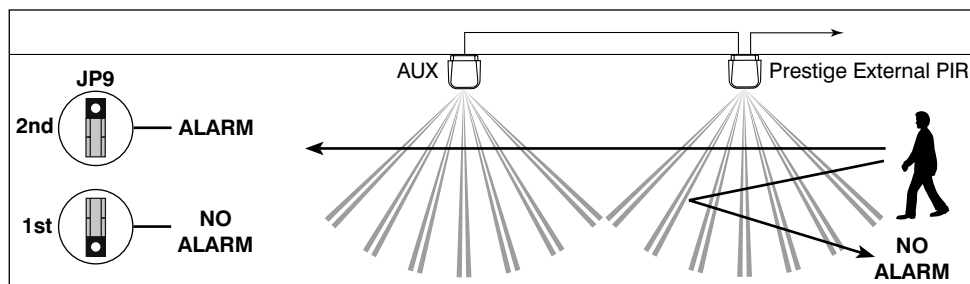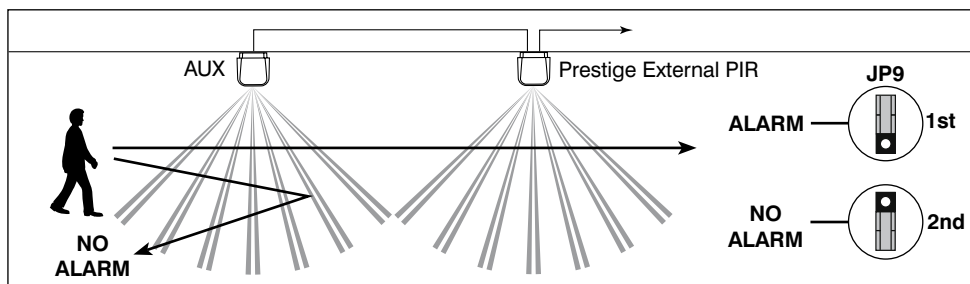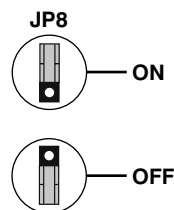

Quality Assurance

Warranty - 2 year replacement warranty.

The Prestige External unit is designed to detect the movement of an intruder and activate an alarm control panel. As the Prestige External unit is not a complete alarm system, but only a part thereof, Texecom cannot accept responsibility or liability for any damages whatsoever based on a claim that the Prestige External unit failed to function correctly.

Due to our policy of continuous improvement Texecom reserves the right to change specification without prior notice. All specifications are measured at 20°C (68°F).



Certificate Number: FM 35285




MADE IN ENGLAND

The Prestige External detector is protected
by UK & International Designs.
Prestige is a Trademark of Texecom Ltd.

8. Specifications

Mounting Height:	1.0 - 1.4m, 1.2m nominal
Supply Voltage:	9-16 Vdc
Current Drain (typical):	28mA
Detection Method:	Dual, non-overlapping, digital PIR
Range:	12m max. Adjustable to 8m, 5m and 2m
Alarm Output:	NC/NO selectable relay. Rated 50Vdc, 100mA, 18Ω
Tamper Detection:	Wall and case. Sealed non-mechanical switch.
Tamper Output:	NC relay. Rated 50Vdc, 100mA, 18Ω
LED Indication:	Red alarm indication
Environmental Protection:	IP65
Waterproof Coating:	Conformal
EMC:	EN 50130-4: 1996, A1 1998, A2 2002. EN 55022: Class B

9. Physical Specifications

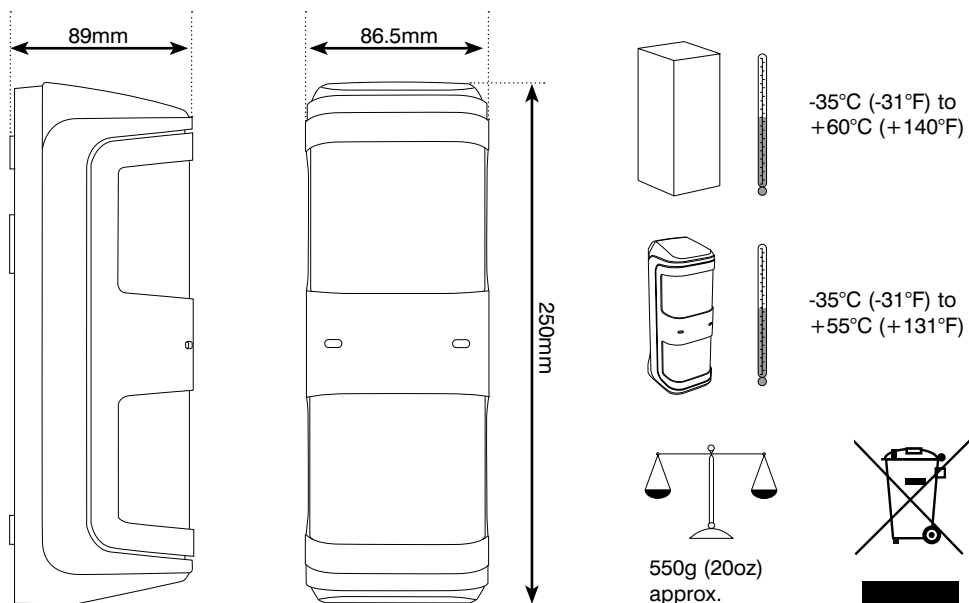

Texecom

www.texe.com

Texecom Limited, Bradwood Court, St. Crispin Way, Haslingden, Lancashire BB4 4PW, England.

Technical Support:

UK Customers Tel: 08456 300 600

(Calls charged at 3.36 pence per minute from a BT landline. Calls from other networks may vary.)

International Customers Tel: +44 1278 686197

Email: techsupport@texe.com

© Texecom Limited 2009.

INS352-2

B20090720