

These Operating Instructions must be handed to the final user on start-up**General information**

The UH50 heat meter combines modern microcomputer technology with innovative ultrasonic measuring technology in which no moving parts are necessary.

This technology is therefore non-wearing, robust, and largely maintenance-free. Great accuracy and stability over a long time ensure true and fair billing of heating costs.

The quantity of thermal energy given off from the heating water is proportional to the temperature difference between the flow and return temperature and the volume of heating water that flowed through.

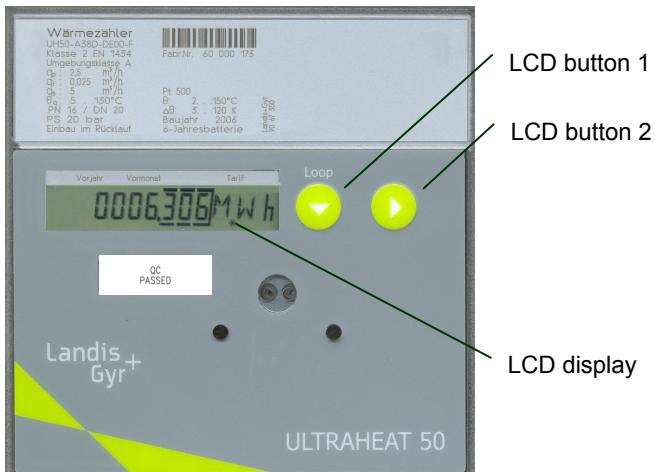
The volume of heating water is measured by an ultrasonic pulse that is first emitted in the direction of flow and then against the direction of flow.

Downstream the time the pulse travels between the transmitter and the receiver becomes shorter; upstream it becomes correspondingly longer.

The volume of heating water is then calculated from the values measured for the pulse travel times. The flow and return temperatures are sensed using platinum resistors.

The volume of heating water and the temperature difference between the flow and return are then multiplied and the product is summated.

The result is that the quantity of thermal energy consumed is recorded and displayed in the units kWh or MWh or MJ or GJ.

Operating elements**Displays**

The places after the decimal point of displayed values are indicated by a surrounding border.

Calibrated values can be recognized by the star symbol shown in addition to the value.

The displays of the heat meter are arranged on several levels (LOOPs). LCD button 2 advances the display of the user loop (LOOP 0) cyclically.

Note: Depending on how the unit is parameterized, the number of items displayed and the data shown may differ from this description. Certain button functions may also be disabled.

User loop ("LOOP 0")

LOOP 0
- 1234567 kWh
T 1234567 kWh
1234567 m³
8888888 kWh
F -----

- Head of loop
- Accumulated quantity of heat with tariff status
- Tariff register 1 (optional)
- Accumulated volume
- Segment test
- Error message with error code number

LCD button 1 is used to switch the display from the user loop to the selection of service loops (LOOP 1..n).

Service loops (selection)

LOOP 1
LOOP 2
...
LOOP n

- Service loop 1
- Service loop 2
- ...
- Service loop n

LCD button 1 advances the display to the next loop. After the last loop, the user loop (LOOP 0) appears again.

LCD button 2 displays the content of the selected service loop.

Within a loop, the LCD button 2 is used to advance to the next line of the display. After the last line of the display, the first display line appears again.

Service loop 1 ("LOOP 1")

LOOP 1
1234 m³/h
904 kW
91 56 °C
hd 1234 h
pd 1234 h
fd 123 h
K 12345678
J 100506
S J 3105--
T 1234567 kWh
T 1234567 m³
FWI 5-00

- Head of the loop
- Current flowrate
- Current heat power
- Current flow/return temperature
- Operating time
- Operating time with flowrate
- Missing time
- Property number, 8-digit
- Date
- Yearly set day (DD.MM)
- Quantity of heat previous year on set day
- Volume for previous year on set day
- Firmware version

Service loop 2 (“LOOP 2”)

In service loop 2, the **maxima** are displayed. LCD button 2 calls the displays one after the other.

LOOP 2	Head of the loop
M_a 3899 m/h	Max. flowrate, at 2s intervals with date stamp
S_t 13,12,05	
M_a 2889 kW	Max. power, at 2s intervals with date stamp
S_t 11,12,05	
M_a 98 87 °C	Max. temperatures, at 2s intervals with date stamp for flow and return maximum
S_t 08,12,05	
S_t 04,12,05	
MP 60 min	Measuring period for maximum calculation

Service loop 3 (“LOOP 3”)

Service loop 3 shows the **monthly values**. LCD button 1 is used to select a month out of the 18 previous months. The data for that month are then opened with LCD button 2. Each further press of LCD button 2 shows the next value for the selected month.

LOOP 3	Head of the loop
0 10 106 M	Set day for December 2005
0 112,05 M	Set day for November 2005
...	...
0 108,04 M	Set day for July 2004

using LCD button 2: 

123456,7 kWh	Quantity of heat on the set day
T' 1234567 kWh	Tariff register 1 on the set day
123456,7 m³	Volume on the set day
M_a 3899 m/h	Max. flowrate on the set day, at 2s intervals with date stamp
S_t 13,12,05	
M_a 2889 kW	Max. heat power on the set day, at 2s intervals with date stamp
S_t 11,12,05	
M_a 98 87 °C	Max. temperatures on the set day, at 2s intervals with date stamp for flow and return maximum
S_t 08,12,05	
S_t 04,12,05	
Fd 123 h	Missing time count on the set day

After the last display, the previously selected set day is displayed again. Pressing LCD button 1 selects the next set day.

Note: If you want to drop out and go directly to the next loop, choose a monthly value by pressing LCD button 2 and then press LCD button 1.

Service loop 4 (“LOOP 4”)

Service loop 4 shows the **unit parameters**. LCD button 2 calls the displays one after the other.

LOOP 4	Head of the loop
T₂ 0,000 m/h	Current tariff, at 2s intervals with threshold value 1
' 0,000 m/h	
FP 200 SEC	Measuring interval for flowrate
TP 30 SEC	Measuring interval for temperature
Modul 1 M 3	Module 1: M-bus module
RP 1 127	M-bus primary address 1
R 12345678	M-bus secondary address 8-digit
Modul 2-1 CE	Module 2: pulse module; chan. 1 = heat quantity
Modul 2-2 CV	Channel 2 = volume, at 2s intervals
P01 125,000W h/l	Significance for heat quantity pulses *)
P02 0,0250 L/l	Significance for volume pulses *)
P03 2ms	Pulse duration in ms *)

*) for “fast pulses”

Previous year's values

The electronic unit stores the meter readings for quantity of heat, volume, the tariff register, missing time, and flowrate measuring time as well as the current maxima for flowrate, power, temperature difference, flow temperature, and return temperature with their date stamps on a yearly set day.

Monthly values

The electronic unit stores the meter readings for quantity of heat, volume, the tariff register, missing time, and flowrate measuring time as well as the monthly maxima for flowrate, power, temperature difference, flow temperature and return temperature with their date stamp for 18 months on the set day of each month.

Note: The standard time used is Central European Time (CET). If daylight-saving time is activated, storage will be performed accordingly.

The monthly values can also be read out via the optical and the 20 mA interface.

Error messages

The heat meter constantly performs self-diagnostics and can display various error messages.

Error message **F0** means flowrate measurement is not possible, e.g. due to air in the volume measuring unit; the heating system must be carefully vented.

Error message **F4** means the battery must be replaced.

Error message **F1, F2** or **F5, F6, F8** means that the temperature sensor is defective. Messages **F3, F7, F9** indicate a fault in the electronics. In all these cases, please call service.

Functional details

If the response thresholds are exceeded and the flowrate and temperature difference are positive, the **quantity of thermal energy** and the **volume** are summated. In the **segment test**, all segments of the display are switched on for test purposes.

On the **yearly set day**, the meter readings for quantity of heat and volume, the values for the maxima and the flowrate and missing times are placed in the **previous year memory**.

The **flowrate**, **heat power**, and **temperature difference** are acquired with the correct sign. If the response threshold is not reached, the value is preceded by a **u**. The current **temperatures** are shown together on one line of the display as integers in **°C**.

To calculate the maximum, the heat power and flowrate are averaged over a **measuring period** of, for example, 60 min. The **maximum values** from the average calculation are preceded by **Ma**.

The 8-digit **property number** (also the secondary address in M-bus operation), can be set in parameter setting mode. The **unit number** is assigned by the manufacturer.

The **operating time** is counted from the first time the power supply is connected. **Missing times** are summated, if an error is pending that prevents the heat meter from measuring. The **date** is incremented daily.

The type of installed **modules** is displayed. If an M-bit module is installed, the primary and secondary address will be displayed on the following lines.

The number for the **firmware version** is assigned by the manufacturer.

EC Declaration of conformity

Landis+Gyr herewith declares that this product complies with the relevant requirements of the following directives:

- 2004/22/EC measuring instruments directive
- 89/336/EEC electromagnetic compatibility
- 73/23/EEC low-voltage directive

EC type-examination certificate

DE-06-MI004-PTB018

EC design-examination certificate

DE-07-MI004-PTB010

Further information

- The electronic unit must only be cleaned on the outside. Please use a soft, damp cloth to do this, which can be dipped in a non-corrosive cleaning agent.
- User seals must only be removed by authorized persons for service purposes and must then be replaced.

You will find more up-to-date information in the Internet at www.landisgyr.com.

Landis+Gyr GmbH
Humboldtstr. 64
D-90459 Nuremberg
Germany