



Z-PC Line

EN

ZC-24DI

CANopen I/O Module: 24 Digital Inputs

Installation Manual

Contents:

- General Specifications
- Technical Specifications
- Installation Rules
- Electrical connections
- DIP-switches settings
- Programming
- Significant Components Position
- Leds Signallings
- Accessories



SENECA s.r.l.

Via Germania, 34 - 35127 - Z.I. CAMIN - PADOVA - ITALY

Tel. +39.049.8705355 - 8705359 - Fax +39.049.8706287

For manuals, EDS files and configuration software, see



This document is property of SENECA srl. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. All technical data contained in the document may be modified without prior notice Content of this documentation is subject to periodical revision.

General Specifications

- Twenty-four 16 VDC self-powered digital inputs with shared negative pole.
- Eight digital inputs settable as 32-bit counters with 10 kHz maximum frequency.
- Can Interface with CANopen protocol: up to 1 Mbps speed.
- CANopen Baud rate and Node ID configurability by DIP-switches or software.
- RS232 Serial Communication with MODBUS-RTU protocol.
- Facilitated power supply and CANopen bus wiring by means of the bus housed in the DIN rail.
- 1500 V_{AC} Isolation among input, power supply and CAN interface circuits.
- Counters increment individually configurable on the rising or falling edges of the corresponding digital input.
- Overflow indication available for each counter.
- Preset value configurable for each counter.
- Reset and preset commands individually executable on each counter.
- Leds Signallings: Power Supply, Digital Inputs State, CAN Communication, MODBUS-RTU Communication.

Technical Specifications

INPUTS	
Polarity (EN 61131-2 type 2)	Sink (pnp)
Number of channels	24
Number of Counters (if enabled)	8 (32 bit)
U_L (state OFF)	0 - 7 V _{DC}
U_H (state ON)	11 - 30 V _{DC}
Absorbed Current	3 mA (for each input)
V_{MAX}	30 V
Minimum pulse width	250 μ s
ON/OFF Delay	Typical: 1.2 ms Maximum: 3 ms
Maximum Counters Frequency	10 kHz

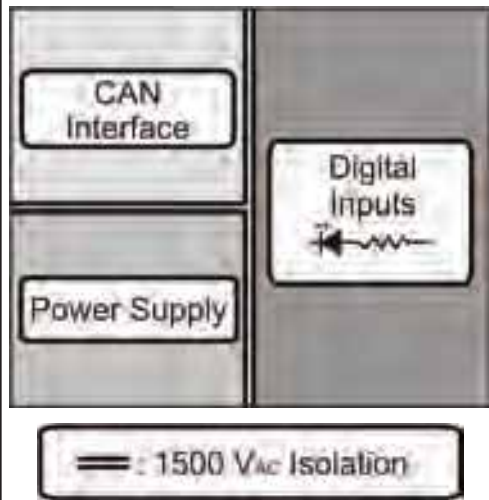POWER SUPPLY	
Voltage	10 - 40 V _{DC}
	19 - 28 V _{AC}
Consumption	Typical: 1.5 W, Max: 2.5 W
ENVIRONMENTAL CONDITIONS	
Temperature	-10 - +65°C
Humidity	30 - 90% at 40°C non condensing
Altitude	up to 2000 m a.s.l
Storage temperature	-20 - +85°C
Protection	IP20
CONNECTIONS	
Connections	Removable 4-way screw terminals, 3.5 mm pitch.
	Rear IDC10 connector for DIN rail.
	3.5 mm stereophonic frontal jack for RS232 (COM) connection.
DIMENSIONS / BOX	
Dimensions	L: 100 mm; H: 112 mm; W: 35 mm
Box	PBT, black
ISOLATIONS / STANDARDS	
<div><div><div>Isolations Diagram</div><div>3-Point 1500 V_{AC} Isolation :</div><div></div></div><div><div>Standards</div><div> The module complies with the following standards:</div><div>EN61000-6-4/2002-10 (electromagnetic emission, industrial environment).</div><div>EN61000-6-2/2006-10 (electromagnetic immunity, industrial environment).</div><div>EN61010-1/2001 (safety).</div><div>All circuits must be isolated from the other circuits under dangerous voltage with double isolation. The power supply transformer must comply with EN60742: "Isolated transformers and safety transformers".</div></div></div>	


Installation Rules

The module is designed to be installed in vertical position on a DIN 46277 rail. In order to ensure optimum performance and the longest working life, the module(s) must be supplied adequate ventilation and no raceways or other objects that obstruct the ventilation slots. Never install modules above sources of heat; we recommend installation in the lower part of the control panel.

Inserting on the DIN rail

As it is illustrated in the next figure:

- 1) Insert the rear IDC10 connector on a DIN rail free slot (the inserting is univocal since the connectors are polarized).
- 2) Tighten the two locks placed at the sides of the rear IDC10 connector to fix the module.

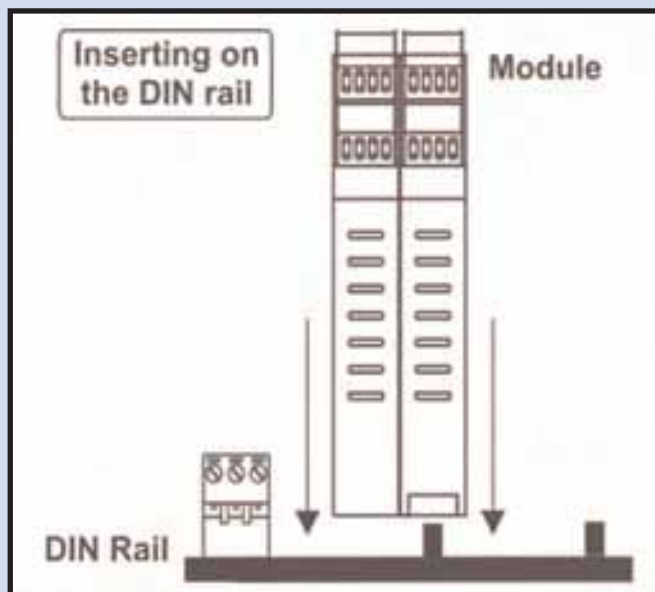


Electrical Connections

POWER SUPPLY AND CAN INTERFACE


Power Supply and CAN interface are available by using the bus for the Seneca DIN rail, by the rear IDC10 connector or by Z-PC-DINAL-B accessory (see *Accessories*).

Rear Connector (IDC10)

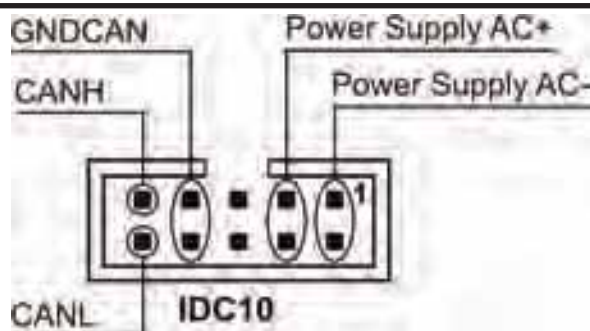

In the figure the meaning of the IDC10 connector pins is showed, in the case the user decides to provide the signals directly through it.

Z-PC-DINAL-B Accessory Use

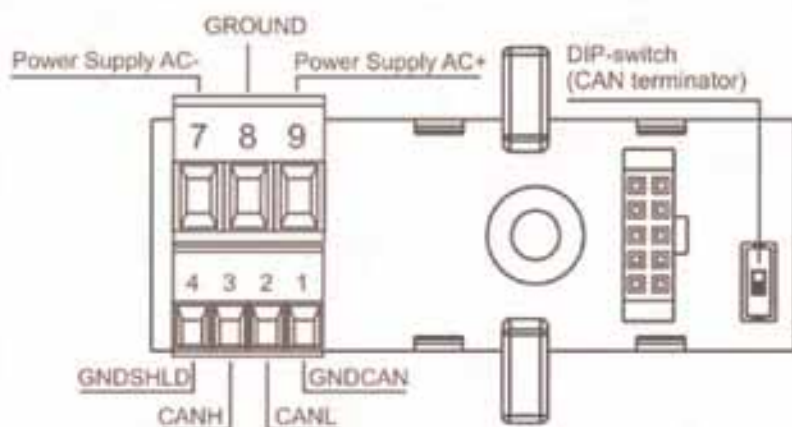

In case of Z-PC-DINAL-B accessory use, the signals may be provided by terminal blocks. The figure shows the meaning of the terminals and the position of the DIP-switch (present on each DIN rail supports listed on *Accessories*) for CAN network termination.


GNDSHLD: Shield to protect the connection cables (it is always recommended).

CAN bus Connection Rules

- 1) Install the modules on the DIN rail (max 120).
- 2) Connect the remote modules using cables of proper length. On the table the following data about the cables length are provided:
 - Bus Length*: CAN network maximum length as a function of the Baud rate. It is the length of the cables which connect the two bus terminators modules (see *Scheme 1*).
 - Drop Length*: maximum length of a drop line (see *Scheme 1*) as a function of the Baud Rate.

Baud rate	Bus Length	Drop Length
20 kbps	2500 m	150 m
50 kbps	1000 m	60 m
125 kbps	500 m	5 m
250 kbps	250 m	5 m
500 kbps	100 m	5 m
800 kbps	50 m	3 m
1000 kbps	25 m	0.3 m

Scheme 1

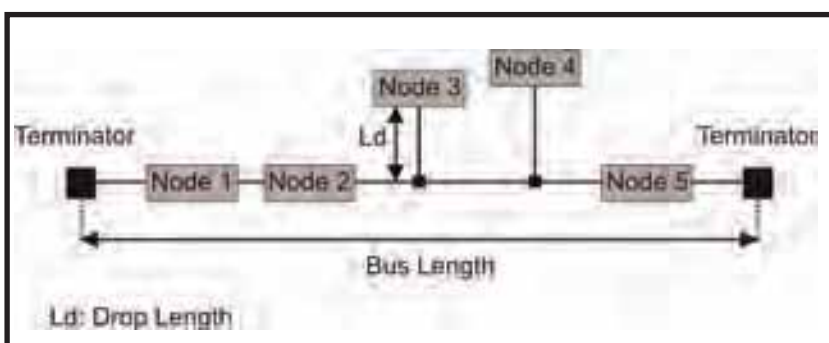


For the best performances, the use of special shielded cables is recommended (BELDEN 9841 cable for example).


- 3) Terminate the two ends of the CANbus network by setting to ON the DIP-switch present on the DIN rail connection supports (see *Accessories*) where the two ends are inserted.

DIGITAL INPUTS


Digital Inputs settable as High Speed Counters (Max. Frequency: 10 kHz)

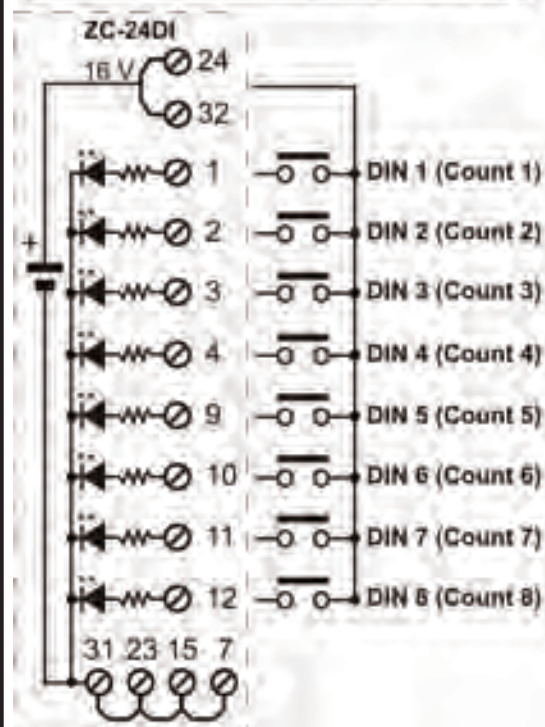

Generic Digital Inputs

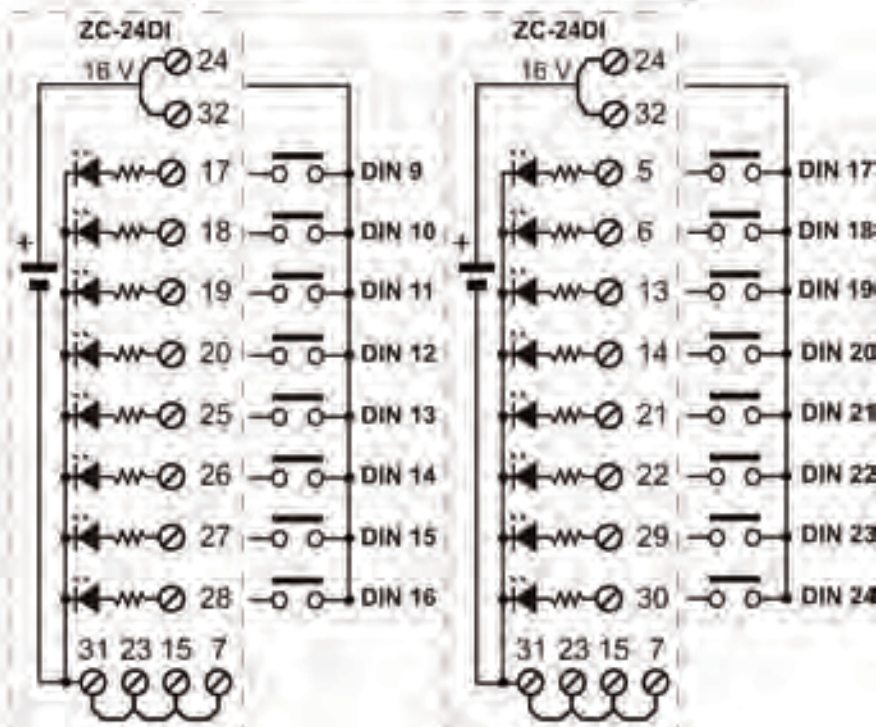

RS232 SERIAL PORT

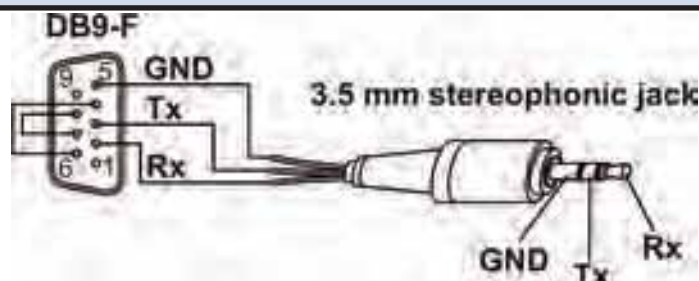


The connection cable DB9 with a 3.5 mm stereophonic jack, can be assembled as indicated in the following figure, or can be bought as an accessory (see *Accessories*).

DIP-switches Settings

The DIP-switches position defines the module CAN communication parameters: Address and Baud Rate. In the following figure the Baud Rate and Address values are listed as a function of the DIP-switches position:

BAUD RATE			ADDRESS									
1	2	3	Baud rate from memory	4	5	6	7	8	9	10	Address from memory	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	20 kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0000001	Address: 001
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	50 kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0000010	Address: 002
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	125 kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0000011	Address: 003
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	250 kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0000100	Address: 004
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500 kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0000101	Address: 005
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	800 kbps	Address as from binary representation
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	1 Mbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	1111111	Address: 127



We underline that on all the DIN rail supports listed on *Accessories* a DIP-switch is present and if it is set to ON position the CAN network termination is inserted.

Programming

PROGRAMMING THROUGH CAN INTERFACE

The module may be programmed/configured through the CAN interface; refer to the *User Manual* for details about the communication.

Factory CAN Parameters

With all the DIP-switches in OFF position (values from memory), the module is originally programmed as follows:

Baud Rate: 20 kbps, Address: 1

PROGRAMMING THROUGH RS232


The module may be programmed/configured through the RS232 interface by using MODBUS-RTU protocol; refer to the *User Manual* for details about the communication. The connection parameters are the following:

Address: 1, Baud Rate: 2400 Baud, Parity: none, Stop bit: 1.

Significant Components Position

Terminals/Leds/IDC10 Connector/ DIP-switch

The terminals numbering, the leds position on the frontal panel, the rear IDC10 connector (fixing on the DIN rail) and the DIP-switch on the rear side are illustrated below.

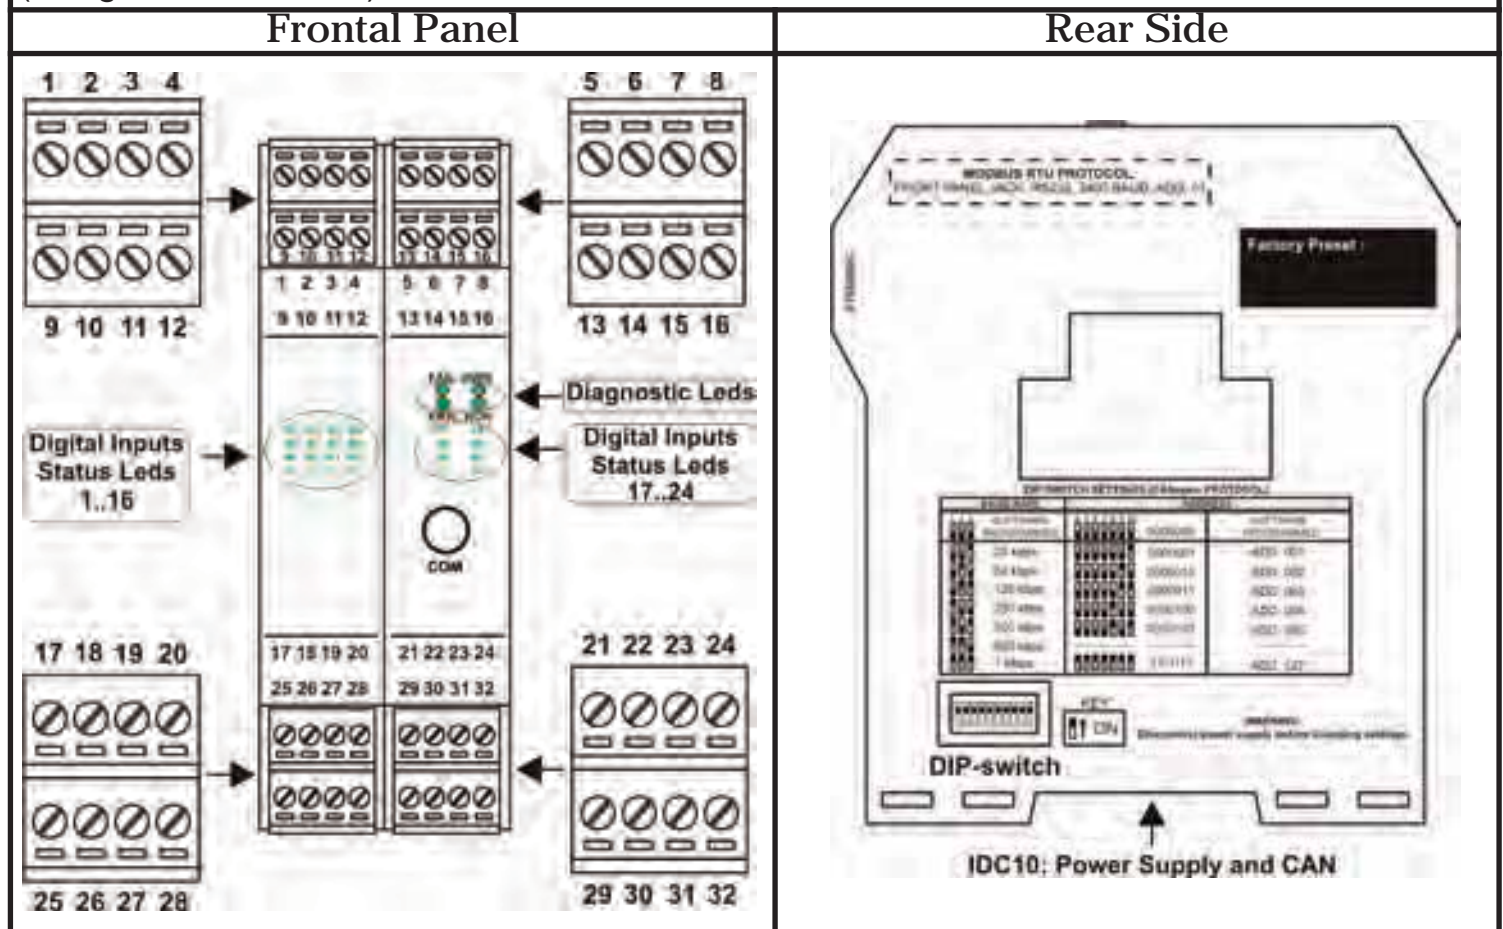

Leds Signallings

LEDS ERR AND RUN: CANOPEN COMMUNICATION STATE

The meaning of leds ERR and RUN is described below; refer to the *User Manual* for details about the possible state and the flashing modes of the two leds.

Led ERR (Red) Meaning

N°	LED ERR (Red)	STATE	DESCRIPTION
1	Off	No error	The Device is in working condition.
2	Single flash	Warning limit reached	At least one of the error counters of the CAN controller has reached or exceeded the warning level (too many error frames).
3	Double flash	Error Control Event	A guard event (NMT-Slave or NMT-master).
4	Triple flash	Sync Error	The SYNC message has not been received within the configured communication cycle period time out.
5	On	Bus off	The CAN controller is bus off.

Led RUN (Green) Meaning

N°	LED RUN (Green)	STATE	DESCRIPTION
1	Single flash	Stopped	The Device is in STOPPED state.
2	Blinking	Pre-Operational	The Device is in the PRE-OPERATIONAL state.
3	On	Operational	The Device is in the OPERATIONAL state.

LEDS FAIL AND PWR: GENERAL SYSTEM DIAGNOSTICS

LED PWR (Green)	Meaning	LED FAIL (Yellow)	Meaning
On	Power Supply presence.	On	It indicates data reception on the RS232 port (COM).

LEDS 01..24: DIGITAL INPUTS STATE

LED 01..24 (Green)	Meaning
On	-01..08: If counters are enabled: the correspondent counter is ON. Otherwise it signals the state of the correspondent generic digital input. -09..24: The correspondent generic digital input is ON.

Accessories

SUPPORTS FOR MOUNTING ON DIN RAIL GUIDE/ SERIAL CABLE

Code	Description
Z-PC-DINAL-A	Bus Support: Terminal blocks + 2 slots to connect Z-PC line modules.
Z-PC-DINAL-B	Bus Support: Terminal blocks + 1 slot to connect Z-PC line modules.
Z-PC-DIN2-A	Bus Support: 2 slots to connect Z-PC line modules.
Z-PC-DIN2-B	Bus Support: 1 slot to connect Z-PC line modules.
Z-PC-DIN8-A	Bus Support: 8 slots to connect Z-PC line modules.
Z-PC-DIN8-B	Bus Support: 4 slots to connect Z-PC line modules.
PM001600	Serial Cable: from 3,5 mm stereo Jack to DB9F.



Disposal of Electrical & Electronic Equipment (Applicable throughout the European Union and other European countries with separate collection programs). This symbol, found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of this product, please contact your local city office, waste disposal service or the retail store where you purchased this product.