



Network Video Recorder

User Manual

**exacq**<sup>®</sup>  
Technologies



# exacqVision®










## TABLE OF CONTENTS








<b>1 System Installation Checklist.....</b>	<b>5</b>
<b>2 Installing exacqVision Software on Third-Party Clients and Servers.....</b>	<b>8</b>
Server Requirements.....	8
Networking.....	8
Web Server.....	9
Server Software Installation.....	9
Client Software Installation.....	9
<b>3 exacqVision Software Overview.....</b>	<b>10</b>
Client/Server Architecture.....	10
Logging In.....	11
Updating exacqVision Client Software.....	12
Operating Modes.....	13
exacqVision Help.....	13
<b>4 Setup Mode Overview.....</b>	<b>14</b>
Add System.....	15
System Setup.....	17
Add IP Cameras.....	20
IP Camera Recording Setup.....	21
Analog Camera Recording Setup.....	22
Camera Setup.....	23
Motion Masks, Video Masks, and Motion Windows.....	25
Serial Profile Setup.....	27
Serial Port Setup.....	28
PTZ Configuration.....	30
Audio Input Setup.....	32
Trigger Input Setup.....	33
Alarm Output Setup.....	34
Video Output Setup.....	35
Storage Setup.....	36
Event Linking.....	37
Event Monitoring.....	38
Schedule.....	39
Users Setup.....	41
My Systems.....	42
eDVR 4000 Device.....	43
Client Setup.....	44
System Information.....	45






<b>5 Live Mode Overview.....</b>	<b>46</b>
Layout Panel .....	47
PTZ Control .....	49
exacqReplay.....	51
Camera Views .....	52
Camera View Tours.....	54
<b>6 Search Mode Overview .....</b>	<b>55</b>
Searching for Video and Other Data.....	56
Video Playback .....	57
Searching Views .....	59
Searching Events.....	60
Exporting Files.....	61
<b>A Technical Support .....</b>	<b>64</b>
<b>B Regulatory Notice.....</b>	<b>65</b>
<b>C Warranty.....</b>	<b>66</b>
<b>D Manual Updates .....</b>	<b>67</b>
Release 4.6 .....	67
Release 4.7 .....	67

# 1

## System Installation Checklist

	Quick Start
	<b>Installation</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> See the server's Quick Start Guide for information on installing the hardware.</li> </ul>
	<b>Establishing Initial Communications</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> See the server's Quick Start Guide for information on establishing initial communications from the client software to an exacqVision Server.</li> </ul>
	<b>Configure IP Cameras</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> See the IP Camera Quick Start Guide for information on configuring the camera IP addresses, usernames, and passwords. This document can be found at <a href="http://www.exacq.com/support/specsheets.html">http://www.exacq.com/support/specsheets.html</a>.</li> </ul>
	<b>Setup Mode (see Chapter 4)</b>
	<b>System Setup*</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Set exacqVision server for static IP address.</li> <li><input type="checkbox"/> Configure the system name, time, and time zone.</li> </ul>
	<b>Storage Setup</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Ensure all disks are selected for recording except the system drive ("C:\" in Windows or "/mnt/edvr/0" in Linux)</li> <li><input type="checkbox"/> Ensure total disk space matches the expected value.</li> </ul>
	<b>Add IP Cameras</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Add IP cameras to the exacqVision servers.</li> </ul>
	<b>Camera Recording Setup (IP cameras)</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Set resolutions<sup>1</sup>.</li> <li><input type="checkbox"/> Set frame rate<sup>1</sup>.</li> </ul>
	<b>Camera Recording Setup (analog cameras)</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Set resolutions<sup>1</sup>.</li> <li><input type="checkbox"/> Set frame rates<sup>1</sup>.</li> <li><input type="checkbox"/> Disable cameras that are not connected.</li> </ul>
	<b>Serial Port Setup</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Set up serial port for RS-485 mechanical PTZ control.</li> <li><input type="checkbox"/> Set up serial port for input from serial devices.</li> </ul>

	<b>Camera Setup</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Name camera.</li> <li><input type="checkbox"/> Enable onscreen display.</li> <li><input type="checkbox"/> Set motion mask on IP cameras (there are generally no motion windows set on a new camera). The default motion recording schedule won't trigger recording.</li> <li><input type="checkbox"/> Mask motion from irrelevant objects such as moving trees.</li> <li><input type="checkbox"/> Create windows in relevant locations, such as doors and hallways.</li> <li><input type="checkbox"/> Configure quality just high enough to see relevant details<sup>1</sup>.</li> <li><input type="checkbox"/> If supported by the cameras, set recording format to MPEG4 or H.264 instead of JPEG for better storage.</li> <li><input type="checkbox"/> Watch for blue border around live video window on setup page when motion is occurring to ensure that motion sensitivity and masking are appropriately configured.</li> <li><input type="checkbox"/> Configure mechanical PTZ presets.</li> </ul>
	<b>Schedule</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Motion is recorded by default. Change any cameras to continuously record or stop recording as needed.</li> <li><input type="checkbox"/> Audio is not recorded by default. Schedule audio recording if necessary.</li> </ul>
	<b>Users</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Add user accounts for the people who will use the system.</li> </ul>
	<b>Trigger Input Setup</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Name input triggers to be used.</li> <li><input type="checkbox"/> Set radio button to normally open or closed to match physical switch.</li> </ul>
	<b>Alarm Output Setup</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Name any alarm outputs to be used.</li> </ul>
	<b>Event Linking</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Create events to alert administrator via email of system health issues.</li> <li><input type="checkbox"/> Create events to record video on input triggers.</li> <li><input type="checkbox"/> Create events to email security administrator upon unexpected triggers or motion.</li> <li><input type="checkbox"/> Create event to email installer when license subscription is near expiration.</li> </ul>
	<b>Export Settings</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Save settings and license to a USB flash drive to aid the recovery process, if necessary.</li> </ul>

	<b>Live Mode (see Chapter 5)</b>
	<b>Live</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Create views as required by users for live viewing or multi-camera search and playback.</li> </ul>
	<b>Install Client</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Install the exacqVision Client on another computer and ensure that it can connect to the exacqVision Server using the static IP address and one of the configured user accounts.</li> </ul>
	<b>Search Mode (see Chapter 6)</b>
	<b>Search*</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Connect after 24 hours.</li> <li><input type="checkbox"/> Connect after 7 days.</li> </ul> <p>*Search to ensure cameras are not recording excessive amounts of motion; if they are, adjust motion sensitivity or windows/masks, or possibly adjust camera for low-light noise. Look at Storage setup page and extrapolate the storage duration to ensure that it meets requirements; if it does not, decrease frame rate, quality, or resolution.</p>

# 2

## Installing exacqVision Software on Third-Party Clients and Servers

### Server Requirements

#### Hardware Requirements

See the Exacq website at [https://www.exacq.com/products/vms\\_requirements.html](https://www.exacq.com/products/vms_requirements.html) for current minimum hardware requirements. Actual hardware requirements vary considerably based on each user's application:

- CPU requirements increase greatly when hosting multiple concurrent web clients.
- The exacqVision server application requires a maximum of 4GB, although additional memory is required for the operating system, web hosting, or any other server applications.
- The storage system is often the performance limitation because of the large amount of read and write processes. Your storage system should be capable of sustained reads/writes at least twice the maximum data rate from all cameras. Exacq highly recommends using RAID 5 or RAID 6 for all video storage to reduce the likelihood of catastrophic failure.
- Enterprise-grade hard drives are highly recommended to handle constant video recording.
- The server operating system and exacqVision software should be installed on a dedicated, mirrored operating system drive.
- Servers should always be UPS-powered to avoid data corruption during power failure.

#### Operating System Requirements

See the Exacq website for minimum operating system requirements. In addition:

- If automatic updating is enabled, your server might stop recording video when the operating-system restarts.
- Anti-virus programs should scan *only the operating system and exacqVision software drives*. Virus scanning should be disabled on all video storage drives to avoid large decreases in drive performance.
- Port blocking is not recommended because many edge devices use multiple or dynamic port assignment.

#### MAC addressing requirements

exacqVision software is licensed based on MAC addressing. Servers with teamed NICs or other arrangements that obscure the MAC require an additional USB-based NIC to provide a licensing MAC.

### Networking

For the greatest system reliability and performance, the network administrator should observe the following best practices:

- A dedicated VLAN and NIC port for all cameras.
- A dedicated VLAN and NIC port for storage networks (if used).
- A separate VLAN and NIC for all client connections.
- Cameras and servers should use fixed IP addresses. Clients can use DHCP.
- Camera-to-server network capacity should be twice to maximum video data rate.
- Server-to-thick-client network capacity should be 1.5 times the maximum total data rate of all simultaneously viewed cameras.



## Web Server

The exacqVision Web Services installer provides lighttpd as the default web service. For systems where more than five to ten concurrent client connections are expected, you should upgrade to Apache web services. For more information, see <https://www.exacq.com/kb/?kbid=34927>.

As noted previously, web services increase server hardware requirements and can require installation on a dedicated web server. For additional information on configuring web services, see the Exacq knowledge base at <https://www.exacq.com/kb/>.

## Server Software Installation

1. For Windows servers, download the latest server and web services software installation from <http://downloads.exacq.com/reseller/exacqVision.exe>
2. For Linux servers, download the latest server and web services software installation from <http://downloads.exacq.com/reseller/Ubuntu/Dapper/exacqVisionServer.deb>.
3. Using an administrator account, run the executable to start the installation wizard.
4. Configure the IP address, username, and password on all cameras by following the manufacturer's instructions or the *exacqVision IP Camera Quickstart Guide* found at <https://www.exacq.com/downloads/ev-ip-quickstart-0311.pdf>.
5. Test connectivity to each camera with the ping command.

## Client Software Installation

1. Download the latest client software from <https://downloads.exacq.com/downloads/exacqVisionClient.exe>.
2. Using an administrator account, run the executable to start the installation wizard.
3. Confirm connectivity with the server using the ping command and server IP address. If the client PC cannot communicate with the server, contact the network administrator.
4. Start the exacqVision Client software and enter the configuration page.
5. In the site tree, select Add System.
6. Click New and enter the username admin, password admin256, and IP address (static) or hostname (fixed) that was configured in previous steps. Click Apply. If the new server appears in the system list table with a status of Connected, the initial server configuration is complete. If the server does NOT connect, but server connectivity was confirmed in previous steps, ensure that the PC anti-virus software is not blocking communications with the server IP addresses and ports.
7. Proceed to Chapter 4 to start exacqVision server configuration.

# 3

## exacqVision Software Overview

### Client/Server Architecture

exacqVision software is based on a client/server architecture in which every computer is a client, server, or client/server combination. These configurations are defined as follows:

- A client computer provides access to a remote service on another computer over a TCP/IP network. The exacqVision Client software is a thick client, and the web browser is a thin client.
- A server computer provides services to client computers over the TCP/IP network. An exacqVision server receives and stores video from cameras; provides audio, video, and data as requested by thick clients; and hosts a web server (if enabled) for thin clients. The exacqVision Server software does not have a graphical user interface; only the client software allows interaction. A server can serve multiple simultaneous client connections, within hardware limitations.
- A client/server combination simultaneously operates client and server software. A loopback TCP/IP address of 127.0.0.1 allows the client software to communicate with the server software on the same computer. exacqVision servers are configured at the factory as a client/server combination to provide a convenient initial configuration experience.

## Logging In

All exacqVision servers are shipped with two operating system accounts:

- 1) Username: **admin**  
Password: admin256  
Privileges: computer administrator

**NOTE:** Exacq recommends that the default passwords be changed by the operator and written and secured to prevent unauthorized access or modifications to the system. As part of the initial exacqVision System configuration, Exacq recommends that the operator configure a new user on the exacqVision Server with restricted privileges and change the exacqVision Client settings in the user operating system account to connect to the local exacqVision Server via this user. See the Users Setup section of this manual or the context-sensitive online help file for instructions on creating a new exacqVision user.

When exacqVision servers start, they immediately start the exacqVision service, boot into the user account, and start the exacqVision Client software. Server log-in is not required to start video recording or communication with client PCs. All third-party servers start the exacqVision service on startup, but user accounts and automatic login must be manually configured.

The user account functionality is limited to using the exacqVision client software for maximum reliability. All server maintenance tasks (such as shutting down the exacqVision service) that are not performed within the exacqVision Client require logging into the operating system's administrator account.

Each operating system user account maintains separate settings for its exacqVision Client. These settings include usernames, passwords, and network addresses required for exacqVision Clients to access exacqVision Servers. By default, both the **user** and **admin** operating system accounts have settings that provide administrator access to the instance of exacqVision Server running on the local computer, which is always via the 127.0.0.1 IP address.

Exacq recommends that all servers be configured with one system administrator account with Remote Desktop (Windows) or SSH (Linux) remote access for system support.


The exacqVision Server can be accessed from multiple exacqVision Clients, which can be running from the same computer as exacqVision Server or from remotely networked computers. The exacqVision Server has been preconfigured with one user.

## Updating exacqVision Client Software

Click the exacqVision logo in the upper-right corner of the page to open the About exacqVision Client window.

1. The window lists the current version and built date.
2. To check for software updates, click Connect to the Internet and Check for Updates. If you have already installed the most recent version of the software, a message is displayed; click OK to return to the About exacqVision Client window. If a more recent version of the exacqVision Client is available, the download process starts.

After the download is complete, close all instances of the exacqVision Client to complete the update. Click Yes to accept the download, and then follow the instructions in the Setup Wizard onscreen.

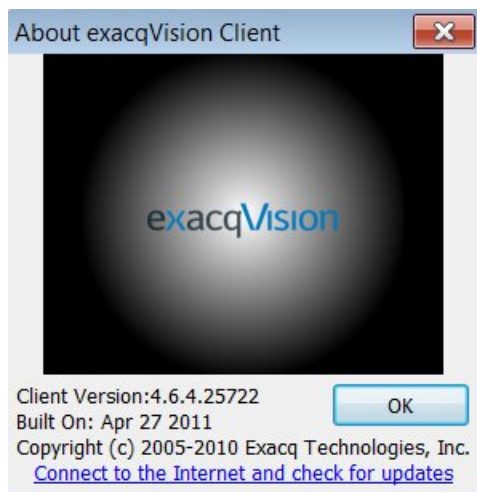

## Operating Modes



exacqVision systems have three main modes of operation, as represented by the following three icons:



**Live Mode** allows users the ability to view live video.



**Search Mode** allows users the ability to search for recorded video.



**Setup Mode** allows Administrators and Power Users the ability to configure systems.

Clicking on any of these icons changes the mode of operation. Each mode is explained in the following chapters.

## exacqVision Help

You can access online help for your exacqVision System by clicking the Help button or the F1 key. On some platforms, online help is context-sensitive. To view online help, click the question mark button:



# 4

## Setup Mode Overview

The screenshot shows the exacqVision Setup Mode interface. It features a left-hand 'Configuration' tree, a top 'My Systems' table, and a main area for configuration pages. Numbered callouts identify key components:

- 1**: Points to the 'Config Mode Icon' (a wrench and screwdriver) in the top-left toolbar.
- 2**: Points to the 'Configuration Tree' on the left, which lists various setup categories like 'My Systems', 'Client Setup', 'Event Monitoring', 'Map Setup', 'System Setup', 'IP Cameras', 'Camera Recording Setup', 'Audio Input Setup', 'Storage Setup', 'Serial Profile Setup', 'Serial Port Setup', 'Notifications', 'exacqRecall Setup', 'Event Linking', 'Schedule', and 'Users'.
- 3**: Points to the 'My Systems' table at the top, which lists installed systems with columns for System Name, Serial Number, IP Address, Connection Status, License, MAC Address, Subscription, Version, Status, and Days Rec Video.
- 4**: Points to the main configuration area, which currently displays the 'My Systems' table.

System Name	Serial Number	IP Address	Connection Status	License	MAC Address	Subscription	Version	Status	Days Rec Video
exacqVision A/VIS Server 2003	00-16-76-A8-E1-66	192.168.100.30 (axis-2003.demo.test.exacq.com)	Connected	Enterprise		Updates through 2016-02-22	4.5.16.25630	ALARM	20
exacqVision Hybrid Server	00-1C-C0-66-42-48	192.168.100.1 (er0936001231)	Connected	Enterprise	00-1C-C0-66-42-48	Updates through 2011-12-27	4.5.16.25630	ALARM	1
exacqVision Hybrid Server	00-0B-D8-B6-AC-A2	127.0.0.1	Connected	Evaluation	00-0B-D8-B6-AC-A2	None	3.7.7.19858	NOT ENTERPRISE	0

Setup Mode allows you to configure systems, cameras, and other devices.

1. **Config Mode Icon.** This button runs the Config (Setup) mode.
2. **Configuration Tree.** This tree allows you to open the various configuration pages.
3. **My Systems.** This default Setup mode page displays systems that have been added.
4. **Setup Page.** This area displays the configuration pages selected from the configuration tree.

## Add System

**Configuration**

- My Systems
  - Add System
  - Client Setup
  - Event Monitoring
  - Group Setup
  - Map Setup
  - My Enterprise
  - exacqVision AXIS Server 2003
    - System Setup
    - Storage Setup
    - Serial Profile Setup
    - Serial Port Setup
    - Notifications
    - exacqRecall Setup
    - Event Linking
    - Schedule
    - Users
  - exacqVision Hybrid Server
  - exacqVision Start Server
  - Professional (Internal)

**Add System**

**System Information**

Hostname/IP Address:

Port:

☐ Use Single Sign-On  
☐ Always prompt for credentials  
☒ Use credentials entered below:

Username:

Password:

Password Confirm:

Connection Speed

☐ Dialup ☒ DSL ☐ LAN ☐ Local

**System List**

Enabled	Address	System Name	Username	Status
<input type="checkbox"/>	192.168.100.71	ER1106006284	admin	Not connected.
<input checked="" type="checkbox"/>	192.168.100.30	exacqVision AXIS Server 2003	drittman	Connected.
<input checked="" type="checkbox"/>	192.168.100.1	exacqVision Hybrid Server	ExacqEngineering	Connected.
<input type="checkbox"/>	127.0.0.1	exacqVision Server	admin	Not connected.
<input type="checkbox"/>	stardot.exacq.com	exacqVision Stardot Server	admin	Not connected.
<input checked="" type="checkbox"/>	192.168.100.17	exacqVision Start 2 Server	gpearson	Not connected.
<input checked="" type="checkbox"/>	192.168.100.14	exacqVision Start Server	gpearson	Connected.
<input checked="" type="checkbox"/>	192.168.100.77	Professional (Internal)	admin	Connected.
<input type="checkbox"/>		New System		Not connected.

**Find Systems**

IP address range:  .  .  .  -to-  .  .  .

Syst... Address Model Serial

The Add System page allows you to add systems so that you can connect to them with exacqVision Client.

- To add system, click New. (Alternatively, you can “find” a system, as discussed below.)
- The new system is added to the System List. The System Information fields are enabled.
- Enter the system’s hostname or IP address. Contact the system administrator if you do not know this information.
- By default, the port number is 22609; change this only if necessary for your network configuration.
- Select one of the following login methods:
  - Use Single Sign-On is available only on systems with an Enterprise license. See the “Enterprise User Setup” section of this manual for more information.
  - To require a username and password entry every time exacqVision Client is started, select Always Prompt for Credentials.
  - To automatically log in to the system every time exacqVision Client is started, select Use Credentials Entered Below. Then enter a valid Username, Password, and Password Confirm.
- Select the radio button that matches your Connection Speed. This tells the system how much audio to buffer in order to help maintain a smooth audio stream.
- When finished, click Apply. If the entered information is valid, the system is automatically connected.
- To disconnect or reconnect a system, select its box in the System List.
- To find a system and its address on your network, enter the IP address range in the Find Systems area. The first three boxes must be the first three elements of the IP address; the fourth and fifth boxes are used to create a range of numbers for the final element of the IP address. Click Find to list all systems whose IP addresses are in the IP address range. When the search is complete (or when you click Stop, which replaces the Find button), you can select any of the systems to add the system to the System List and populate the Hostname/IP Address field. You must still enter a valid username or password to be able to connect to the system. Click Apply when finished.

Connected systems in the System List also appear in the Configuration, Live, and Search trees. Disconnected systems do not appear in the trees.

**NOTE:** You cannot connect to more than one system that is licensed as an exacqVision Start server at a time. If you attempt to connect to a second Start server simultaneously, the first connection to a Start server is terminated.



## System Setup

The **System Setup** page allows you to set basic system parameters for the client application. The page is separated into the following four tabs:

- The **System** tab allows you to create a name for the system, export and import settings from other systems, import and export graphics, and manage the licensing of your system.

The screenshot shows the 'System Setup' window with four tabs: 'System', 'Date/Time', 'Network', and 'ActiveDirectory/LDAP'. The 'System' tab is selected. It contains two main sections: 'System Identification' and 'License'. The 'System Identification' section has a 'System Name' field with the text 'exacqVision Hybrid Server', an 'Apply' button, and a 'Cancel' button. Below this is the 'Export and Import Settings' section, which includes 'Import Settings' and 'Export Settings' buttons, a large empty text box, and a 'Cancel' button. The 'License' section has a license key field with the value '429E8D-DBD3FC-0AE68D-03D840-FF10CB-38', a 'MAC Address' field with the value '00-1C-C0-66-42-48', and a 'Copy' button. Below these are fields for 'Status' (Enterprise), 'Subscription Expires' (Updates through 12/27/2011), 'Licensed IP Cameras' (32 IP Cameras (14 used)), and 'Licensed Boards' (1 eDVR Board). At the bottom of the 'License' section are 'Import', 'Export', 'Apply', and 'Cancel' buttons. Numbered callouts are present: '1' points to the MAC Address field, '2' points to the license key field, '3' points to the 'Export Settings' button, and '4' points to the 'Import Settings' button.

1. The MAC Address of the system's primary network adaptor is used to generate a license key. To obtain a license key online, provide the system MAC address to your dealer. Unlicensed exacqVision servers can connect to only one IP device at a time.
2. After the dealer obtains a license key from Exacq, enter the key in this box.
3. After configuring your system, it is recommended that you click Export Settings to export system settings to a USB or network drive and store it off-site for recovery from a disaster or malfunction.
4. If you ever need to restore the settings or simply import them from another system, click Import Settings and apply the saved settings.

- The **Date/Time** tab displays the exacqVision server's time information.

**System Setup**

System | **Date/Time** | Network | ActiveDirectory/LDAP

Time and Date Settings

May 2011

Sun	Mon	Tue	Wed	Thu	Fri	Sat
1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31				

System Time: 04:11:35 PM

Time Zone: (GMT-05:00) Eastern Time (US & Canada) **1**

☒ DST ☐ Standard

Time Server: time-a.nist.gov **2**

☒ Enable Time Server

IP Camera Time Server: **3**

☐ Enable Override

Apply Cancel

1. Select the time zone and daylight saving time (DST) information for the server's location.
2. On systems with Internet access, select Enable Time Server and enter a valid Internet time server. On systems without Internet access, select Enable Time Server and enter an internal time server (see your network administrator for more information).
3. If the IP cameras on the network need to synchronize with a time server other than the exacqVision server, select Enable Override and enter the server address.

- The **Network** tab displays your system's IP Address, Netmask, Gateway, and Primary DNS server.

The screenshot shows the 'System Setup' window with the 'Network' tab selected. The window has four tabs: 'System', 'Date/Time', 'Network', and 'ActiveDirectory/LDAP'. The 'Network' tab contains three sections: 'Network Interface Settings', 'Bandwidth Settings', and 'IP Reconnection Settings'. Callout 1 points to the 'Local Area Connection 2' dropdown in the 'Network Interface Settings' section. Callout 2 points to the 'Static' radio button under 'IP Configuration'. Callout 3 points to the 'OFF' dropdown in the 'Bandwidth Settings' section. Callout 4 points to the '300' value in the 'IP Reconnection Settings' section.

**System Setup**

System | Date/Time | **Network** | ActiveDirectory/LDAP

Network Interface Settings

Local Area Connection 2

Status: Connected

Description: Intel(R) 82566DM-2 Gigabit Network

MAC Address: 00-1C-C0-66-42-48 Copy

IP Configuration: ☐ Dynamic ☒ Static

IP Address: 192 . 168 . 100 . 1

Netmask: 255 . 255 . 255 . 0

Gateway: 192 . 168 . 100 . 254

Primary DNS: 8 . 8 . 8 . 8

Apply Cancel

Bandwidth Settings

OFF Apply Cancel


IP Reconnection Settings

300 Seconds Apply Cancel

**NOTE:** On a Linux-based system with multiple network interface cards (NICs), the DNS server is the same for all the NICs in the system. Therefore, changing the DNS on a single NIC changes the DNS for all the NICs in the system.

1. Select a network connection from the Network Interface Settings drop-down list to display its information. Systems with multiple NICs have more than one entry in the list.
2. Enter the IP Configuration information for the network connection. Gateway and Primary DNS information is required to connect with a network time server. Click Apply.
3. Select the correct bandwidth setting to limit network traffic from the server to client computers and iSCSI drives, and then click Apply. **NOTE:** This setting applies to outbound traffic from all NICs in the system.
4. Select the IP Reconnection Settings value in seconds. Click Apply.

## Add IP Cameras

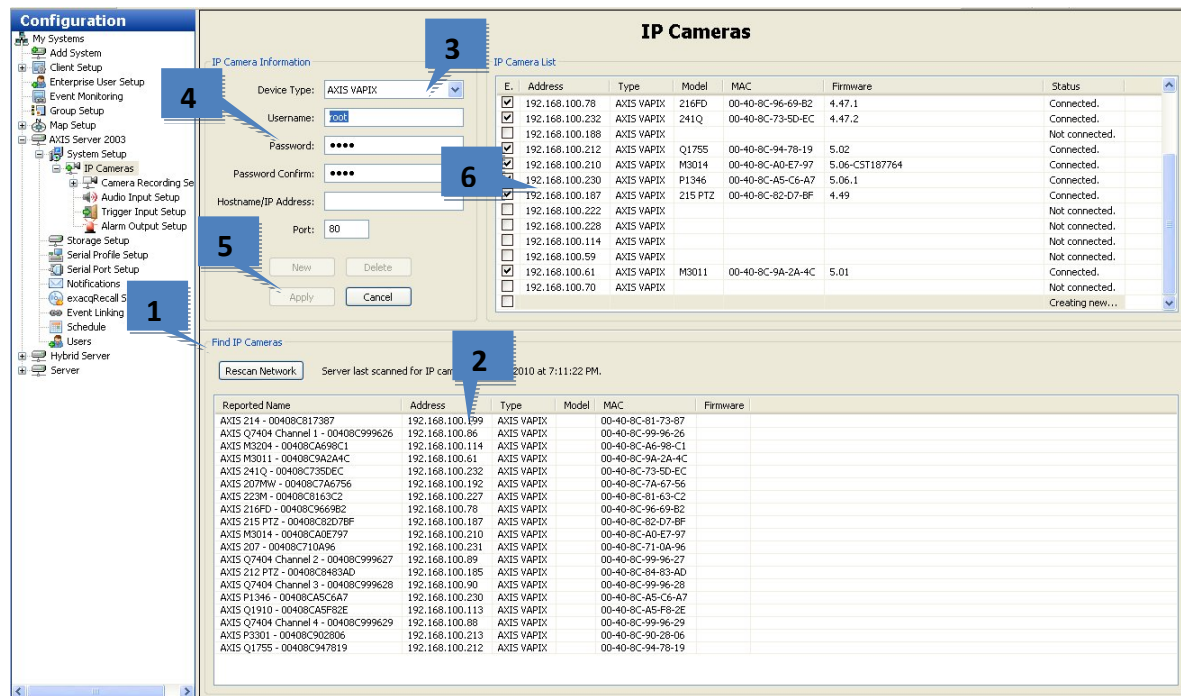


The **IP Cameras** page allows you to add IP cameras and devices to the system and configure their settings. The following features are available on the IP Cameras page:

1. The Find IP Cameras section scans for supported IP cameras available on the same network that the system is connected to. If you don't see an IP camera that you expect to see on the network, verify that the camera has been configured as instructed in the *exacqVision IP Camera Quickstart Guide* and that the camera can be pinged from a command prompt. If you make any changes to an IP camera, click Rescan Network and check whether it is listed.
- NOTE:** If you need to confirm which camera you are installing, right-click the camera in the IP Camera List or Find IP Cameras list to access the camera's website and view a video image.
2. Select a camera in the Find IP Cameras list to add it to the IP Camera List.
  3. Alternatively, you can manually add a camera by clicking New and selecting the device type as follows:
    - If the appropriate manufacturer-specific driver is shown in the list, select it.
    - If that is not available and the device is ONVIF-compliant, select the ONVIF driver. (The level of integration can vary by manufacturer or model.)
    - RTSP-compliant cameras can stream video but not motion detection or camera configuration data.
  4. Enter a username, password, and IP address as configured on the camera.
  5. Click Apply to save the camera configuration.
  6. To enable a camera, select its checkbox in the IP Camera List. The number of cameras you can enable is subject to licensing limits.

The camera should now also be listed in the Configuration, Live, and Search trees.


## IP Camera Recording Setup

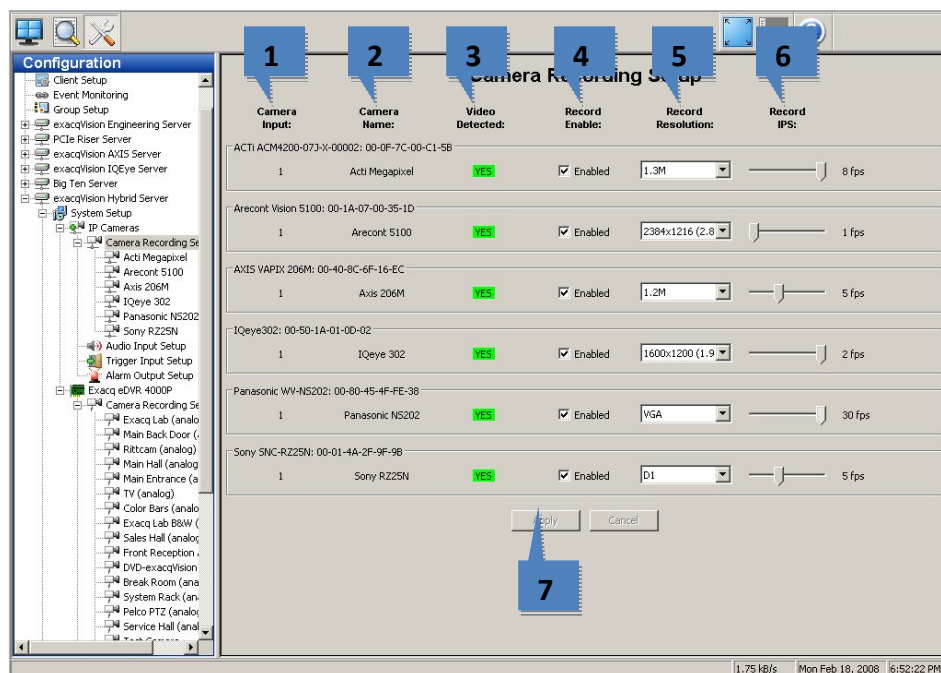

The IP **Camera Recording Setup** page allows you to enable IP cameras to record video, configure the recording resolution, and configure the images per second (IPS) recording rate. The following features are available on the IP Cameras page:

1. The Camera Input column is always 1 for single-channel devices, or incremented for multi-channel devices.
2. The Camera Name column shows the assigned name of the camera.
3. The Video Detected column indicates whether the camera is connected and sending a video signal to the system. If so, a green "YES" is shown.
4. The Record Enabled column contains check boxes that allow you to enable or disable recording from that camera. By default, the check box is selected if a signal is detected; however, you can manually disable recording on a camera that is connected and sending a signal to the system.
5. The Record Resolution column contains drop-down lists with resolutions supported on each camera.
6. The Record IPS column contains sliders allow you to change the number of images recorded from each camera every second. The available IPS settings can vary between cameras.
7. Click Apply to activate any changes.


## Analog Camera Recording Setup

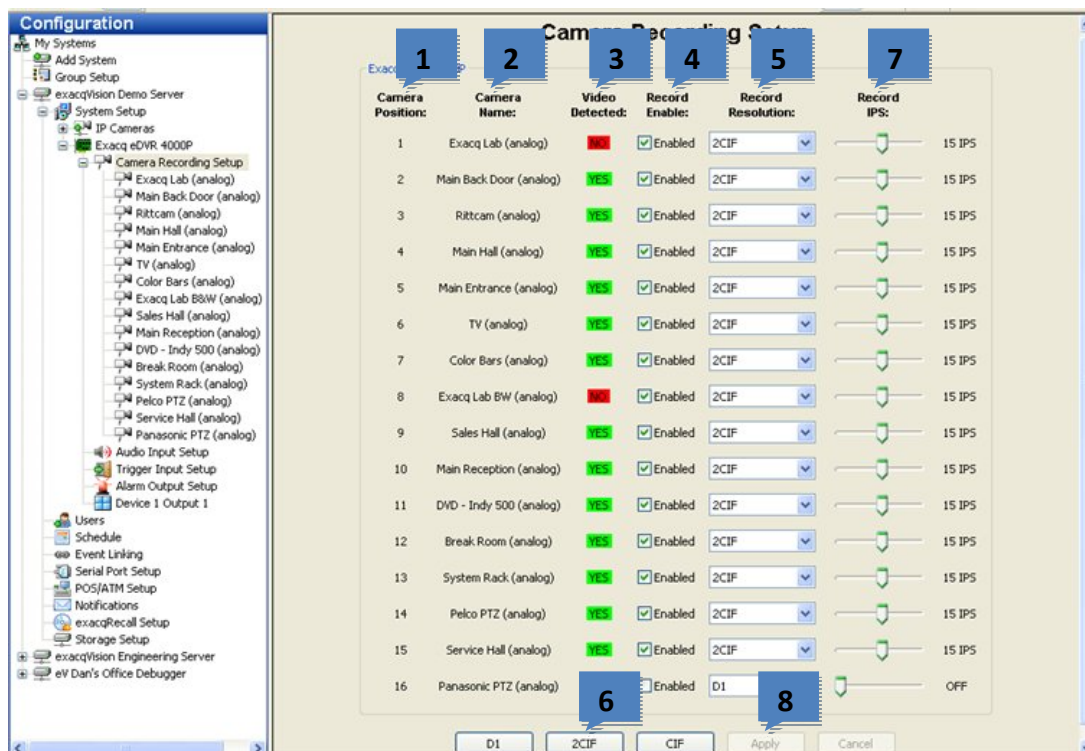

The analog **Camera Recording Setup** page allows you to enable cameras to record video, and configure the cameras' recording resolution and recording rate. This page is similar to the IP Camera Recording Setup page, with a few minor differences. The following features are available on the analog Camera Recording Setup page:

1. The Camera Position column is the physical input connect that the camera is connected to on the back of the exacqVision system.
2. The Camera Name column shows the assigned name of the camera.
3. The Video Detected column indicates whether the camera is connected and sending a video signal to the system. If so, a green "YES" is shown.
4. The Record Enabled column contains check boxes that allow you to enable or disable recording from that camera. By default, the check box is selected if a signal is detected.
5. The Record Resolution column contains drop-down lists with resolutions supported on each camera.
6. To change the resolution for all detected cameras on the system, click on the D1, 2CIF or CIF button.
7. The Record IPS column contains sliders allow you to change the number of images recorded from each camera every second. The available IPS settings can vary between cameras.
8. Click Apply to activate any changes.

## Camera Setup

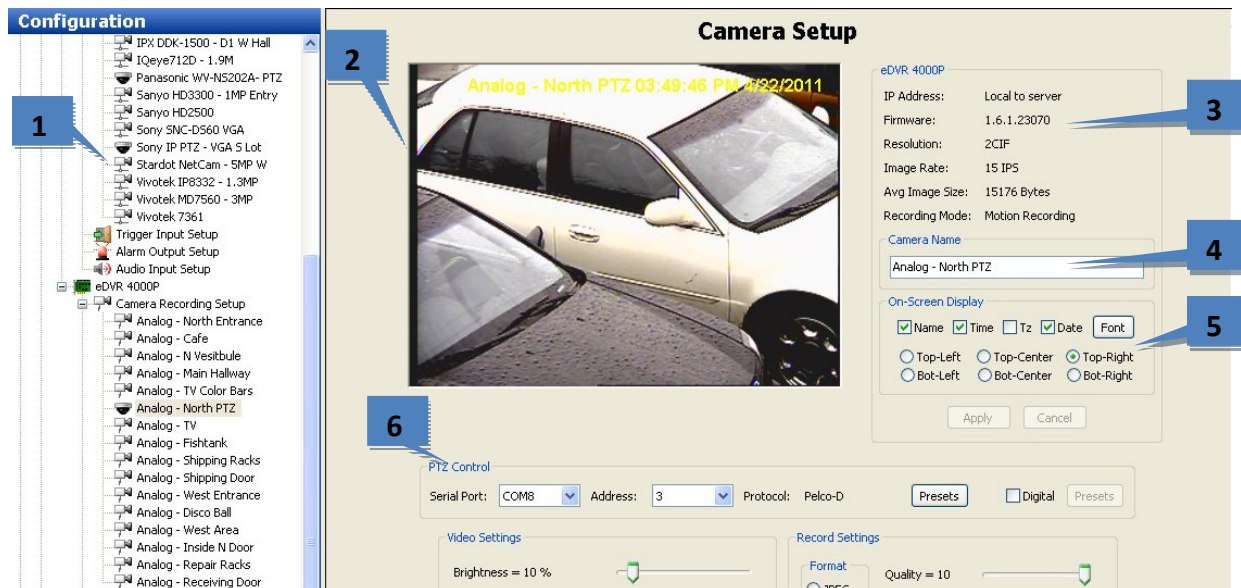

The **Camera Setup** page is where you configure the individual IP and analog camera settings such as camera name, onscreen display, PTZ settings, video settings, recording quality and motion and video masks. This page is identical whether you are configuring an IP or an analog camera, but certain features might be unavailable depending on the type of camera you are configuring. The following features are available on the Camera Setup page:

1. Use the Configuration tree to select the camera that you want to configure.
2. A live view of the selected camera is displayed.
3. Basic information about the camera is listed.
4. The Camera Name field allows you to change the name of the camera.
5. The On-Screen Display section allows you to select the information displayed in the camera's window on the live page, the location in the window where it is displayed, and the font of the displayed text.
6. See the "PTZ Configuration" section of this manual for information about the PTZ Control section of the Camera Setup page.

The rest of the Camera Setup page is discussed on the following page.

---

### IMPORTANT NOTE

Many IP camera settings that are not available in the exacqVision software can be accessed through the camera's web page. To view an IP camera's web page, click the hyperlink in the IP Address field. If you don't see a hyperlink beside the IP Address field, it could be for one of two reasons:

- A. You are not logged in to the operating system with administrative privileges. You must log in to operating system account with administrative privileges to access the hyperlink.
  - B. Your client computer is not located on the same IP subnet as the IP camera. This could occur if you are using the client from a home computer to access a server at your office, for example. This restriction should cause few issues because camera website settings are typically changed only during initial configuration.
-





**NOTE:** The following settings on the Camera Setup page are not available on RTSP interfaces, and they vary on ONVIF and certain proprietary interfaces.

7. The Video Settings slider allows you to adjust the image as it is displayed on your screen.
8. The Format section allows you to select the compression format.
9. The Quality slider allows you to modify the image quality by increasing or decreasing its size. Decreasing image quality saves disk space by reducing the size of the video that's being recorded.
10. The Pre Motion slider adjusts the number of seconds worth of video that are saved before the motion event occurs. For example, suppose Pre Motion is set to 5; when you play back motion video from that camera, you will see five seconds of video that was recorded before the motion event occurred, followed by the motion event itself.
11. The Sensitivity slider allows you to configure how much motion must occur in the camera's view to trigger motion recording (if enabled on the Schedule page). A low sensitivity setting can reduce false motion created by video noise or shadows. If the page includes a Motion Window section (available with certain IP cameras), you can also change a percentage slider, which determines how much of the camera view must change to trigger motion recording.

**NOTE:** See the following section, "Motion Masks, Video Masks, and Motion Windows," for more details.

12. Smooth Begin and Smooth End prevent the undesired recording of certain motion events. Smooth Begin requires a minimum amount of time for motion to occur before motion recording begins; this prevents things such as a blinking light of a laser bar code scanner in a dark room, or cars passing on a road in the distance, from triggering motion recording. Smooth End determines how much video the system continues recording after the motion is no longer detected; this prevents the recording of choppy segments of frequent motion video.

**NOTE:** Smooth Begin and Smooth End are available only on analog cameras.

13. Crop Window, available on certain IP cameras, allows you to crop unimportant portions of a camera image in order to save disk space. Click Edit and then use the mouse cursor to draw a box on the video window. This box will be the portion of the camera's view that will be recorded and displayed (the rest of the view will be ignored). Click Apply to activate the crop; click Edit, Clear, and Apply to deactivate the crop.
14. The Defaults buttons restore factory settings to their respective sections. One Defaults button restores the Video Settings, and the other Defaults button restores the Record Settings.
15. See the following section, "Motion Masks, Video Masks, and Motion Windows" for more information about those portions of the Camera Setup page.



## Motion Masks, Video Masks, and Motion Windows

The following types of masks can be created on cameras connected to an exacqVision system:

- A Motion Mask is an area of a video window where motion is ignored
- A Motion Window is an area of a video window where motion is monitored (and the remainder of the screen is essentially masked).
- A Video Mask is used to block an area of a camera's view so that it cannot be seen onscreen in live or recorded video.

**NOTE:** The type of mask available varies by camera.

A motion mask reduces unwanted recording by ignoring motion events that occur in certain areas of an image. For example, if a camera is pointed at a room that has a moving ceiling fan in the field of view, you can avoid continuous motion recording by masking out the fan while still recording motion that occurs in the rest of the camera's field of view. Motion masks save storage space, extend recording time, and make it easier to visually see motion events on the video timeline on the Search page. A motion window is simply the opposite of a motion mask.

To create a motion mask or motion window, complete the following steps:

1. On the Camera Setup page, click Edit in the Motion Mask or Motion Window section. This displays a blue motion grid over live video from the camera.
2. Draw the mask directly in the grid. You can either individually click each rectangle to create the mask or window, or you can left-click while dragging the cursor across multiple rectangles.




3. Click Apply to enable the motion mask or motion window.

To delete a motion mask or window, click Edit, click Clear, and click Apply.

A Video Mask is used to block an area of a camera's view so that it cannot be seen onscreen in live or recorded video. This can be useful if you don't want system users to see a combination safe or keypad that is in the camera's field of view, for example.

To create a video mask, complete the following steps:

1. On the Camera Setup page, click Edit in the Video Mask section. This displays a yellow grid over the live video from the camera.
2. Draw the mask directly in the grid by left-clicking while dragging the cursor over the area of the grid you want to mask. A green rectangle indicates the masked area.

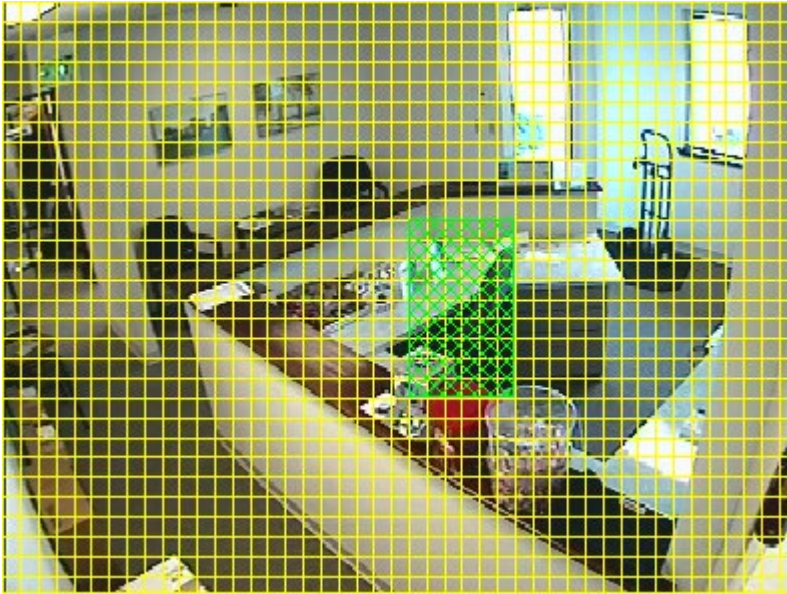

3. Click Apply. The yellow grid disappears and green rectangle is replaced by a solid gray rectangle. This area is now masked from both live and recorded video. To clear the mask, click the Clear button.

## Serial Profile Setup

The Serial Profile Setup page enables the exacqVision server to integrate with serial data devices such as point-of-sale (POS) and bank machine systems.

The screenshot shows the 'Serial Profile Setup' window. On the left is a 'Configuration' tree with options like 'My Systems', 'Add System', 'Client Setup', 'exacqVision Start 2 Server', 'System Setup', 'Storage Setup', 'Serial Profile Setup' (highlighted), 'Serial Port Setup', 'Event Linking', 'Schedule', and 'Users'. The main area is titled 'Serial Profile Setup' and contains several sections:

- Current Profile Properties:** Includes fields for 'Profile Name' (callout 3), 'SOT marker' (callout 4), and 'EOT marker' (callout 5). There is a checked 'Case Sensitive' checkbox and a 'Select Display Font' button (callout 6) with a 'Font Sample' label below it.
- Existing Profiles:** A list box for existing profiles (callout 1) with 'New' (callout 2) and 'Delete' buttons below it.
- Live Display and Record Masks:** A table with columns 'String', 'Mask Display', and 'Mask Record' (callout 7). The table has 8 rows. A 'Case Sensitive' checkbox is at the bottom of the table.
- Days for Data Retention:** A field showing '60' (callout 8) with up/down arrows.
- Buttons:** 'Apply' and 'Cancel' buttons (callout 9).

1. To view an existing profile, click on it in the Existing Profiles field.
2. To add a new profile, click the New in the Existing Profiles box.
3. Enter a unique name in the Profile Name field in the Current Profile Properties box.
4. The SOT, or Start of Transaction, marker tells the exacqVision System when the transaction has started. For example, you could enter the first line shown on a receipt. **This entry is case-sensitive.**
5. The EOT, or End of Transaction, marker tells the exacqVision System when the transaction has ended. For example, you could enter the last line shown on a receipt. **This entry is case-sensitive.**
6. The Select Display Font button allows you to select the font you want to be displayed on the Live view.
7. Live Display and Record Masks allows you to black out lines so they are not visible on the live camera or through recorded data. (This can be used to hide credit card information.) Enter one or more signal words in the String field, and the system will black out the entire line on either the live display screen or recorded transaction or both. To mask the live video feed, select the Mask Display box; to mask the recorded transaction data, select the Mask Record box.
8. The Days For Data Retention field defaults to 60. To change this, use the arrows or type a new number.
9. When finished, click Apply.

**NOTE:** You can require case sensitivity for all strings or all key words by selecting the appropriate Case Sensitive option under each list.

You have now created the new serial profile. If you entered any data in the Event Key Words box, you must link the profile to the appropriate Action through the Event Linking page, selecting Serial Profile as the Event Type.

## Serial Port Setup

The Serial Port Setup page allows you to configure serial ports on your exacqVision system so that they can be used to communicate with serial devices such as POS terminals or pan-tilt-zoom (PTZ) cameras. There are two Serial Port Setup sections — one for standard UART (Universal Asynchronous Receiver/Transmitter) and one for serial ports over IP.

The screenshot shows the 'Serial Port Setup' window. It has two main sections: 'Uart' and 'IP'. The 'Uart' section contains a table with columns: Use, Name, Port, Profile / Protocol, Baud Rate, Data Bits, Stop Bits, Parity, Flow Control, and Max Line Length. There are three rows: POS (MarshPort, COM1, Marsh, 4800, 8, 1, None, None, 80), Unused (Test, COM3, None, 9600, 8, 1, None, None, 80), and PTZ (Pelco, COM6, Pelco-D, 4800, 8, 1, None, None, 80). The 'IP' section contains a table with columns: Select, Use, Name, Status, Profile, Type, Address, Port, and Max Line Length. There is one row: ATM (MarshIpPort, Connected, Marsh, TCP, 192.168.100.20, 12345, 80). At the bottom, there are buttons for New, Delete, Apply, and Cancel. Numbered callouts point to various elements: 1 points to the 'Use' column header in the Uart table; 2 points to the 'Name' column header in the Uart table; 3 points to the 'Port' column header in the Uart table; 4 points to the 'Profile / Protocol' column header in the Uart table; 5 points to the 'Stop Bits' column header in the Uart table; 6 points to the 'Max Line Length' column header in the Uart table; and 7 points to the 'Apply' button.

Use	Name	Port	Profile / Protocol	Baud Rate	Data Bits	Stop Bits	Parity	Flow Control	Max Line Length
POS	MarshPort	COM1	Marsh	4800	8	1	None	None	80
Unused	Test	COM3	None	9600	8	1	None	None	80
PTZ	Pelco	COM6	Pelco-D	4800	8	1	None	None	80

Select	Use	Name	Status	Profile	Type	Address	Port	Max Line Length
<input type="checkbox"/>	ATM	MarshIpPort	Connected	Marsh	TCP	192.168.100.20	12345	80

New Delete

Apply Cancel

For a UART serial port, connect the wires to the serial port and then configure the port. The system automatically detects and displays the serial ports. You can configure the following settings on each port:

1. Select the intended use of the serial port from the drop-down list in the Use column. The choices are unused, PTZ (pan/tilt/zoom), POS (point of sale), ATM (automatic teller machine), or Access Ctrl. Generally, the POS mode is used to record transactions at a cash register. By default, the last serial port listed is the built-in RS-485 port.
2. Enter a unique name in the Name field.
3. The Port is automatically selected by the Operating System.
4. The Profile/Protocol column allows you to select one of the profiles configured on the Serial Profile page.
5. The Baud Rate, Data Bits, Stop Bits, Parity, and Flow Control must match the device you are connecting to. See the device's documentation for more information.
6. The Max Line Length is 80 by default. Generally, you should not change this.
7. When you are finished, save the settings by clicking the Apply button at the bottom of the page.


Select	Use	Name	Status	Profile	Type	Address	Port	Max Line Length
<input type="checkbox"/>	ATM	MarshIpPort	Connected	Marsh	TCP	192.168.100.20	12345	80

For serial over IP, you must add the port by clicking New; the system does not automatically detect and list IP serial ports. You can configure the following settings on each port:

1. Select the intended use of the port (unused, POS, ATM, or Access Control).
2. Enter a unique and descriptive name for the port that will appear to client and Live view users.
3. The Status column displays whether the port is currently connected.
4. Select a profile from the drop-down list. Profiles, which are created on the Serial Profile Setup page, are used to filter an incoming serial string to isolate useful information.
5. Select the transport type as defined by the source device manufacturer's documentation.
6. Enter the IP address of the source device.
7. Enter the TCP port of the source device as defined by the device manufacturer's documentation.
8. Enter the maximum number of characters per line sent by the source device. If you are unsure of the correct value, use the default setting of 80. Setting this number too low could result in missing characters at the end of certain lines.
9. To delete an IP port, choose its Select checkbox (9a) and click Delete (9b).
10. When you are finished, save the settings by clicking the Apply button at the bottom of the page.


## PTZ Configuration

This section discusses the PTZ Control section of the Camera Setup page, which allows you to identify a camera as a PTZ device and configure PTZ presets.

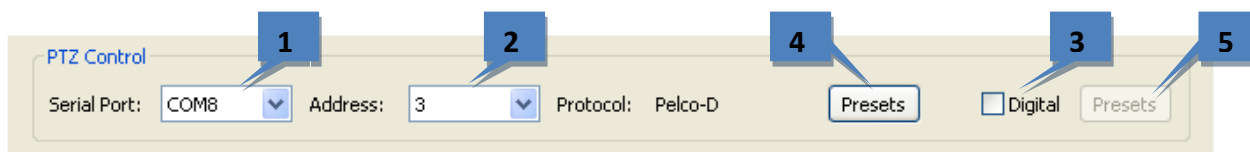

1. Select the camera's COM port from the Serial Port drop-down list. This port is configured on the Serial Port Setup page.
2. Select the camera's Address as configured on the camera hardware. (The protocol is automatically displayed based on the Serial Port selected.)
3. To enable digital PTZ functions on the Live and Search pages, select the Digital checkbox. This is available even if the camera is not mechanically capable of PTZ functions.
4. The first Presets button opens the Analog PTZControl window, which is described below.
5. The second Presets button opens the Digital PTZControl window, which is described on the following page.


Analog PTZ presets can be configured by clicking the left Presets button on the Camera Setup page.

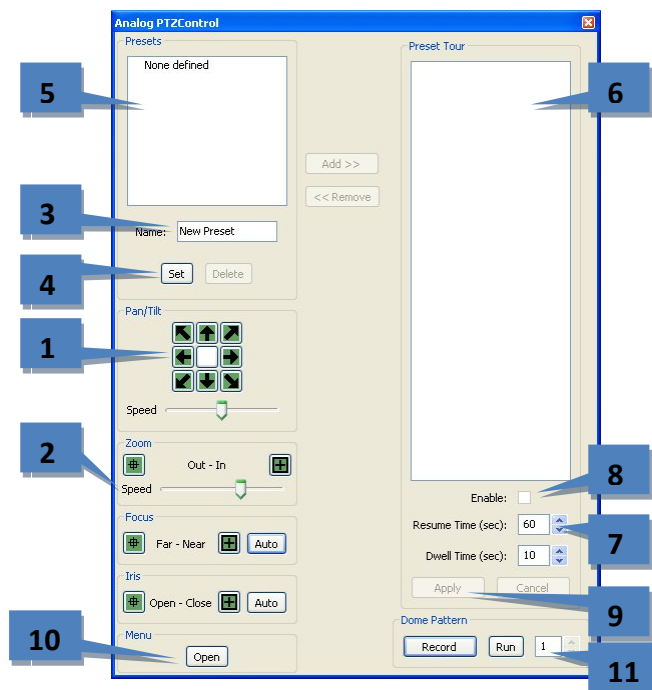

1. Use the Pan/Tilt buttons to point the camera at the desired preset location. If the camera moves too quickly or too slowly, move the Speed slider left (slower) or right (faster).
2. Adjust the Zoom, Focus, and Iris settings as desired (Focus and Iris are not available when configuring IP cameras).
3. Enter a name or number for the preset in the Name field.
4. Click Set to enable the preset.
5. After you click Set, the preset is listed under Presets.

6. To create a Preset tour, select a preset from the Presets list and click Add>> to show it in the Preset Tour list. Repeat for each remaining preset that you want to include in the tour. You can re-order the presets in the Preset Tour list by clicking and dragging them to the desired place in the tour. To delete a preset from the tour, select it in the Preset Tour list and click <<Remove. A preset can be included multiple times in the tour.
7. Resume time is the number of seconds that a tour starts after a user manually controls PTZ functions while a tour is active. Dwell time is the amount of time that the camera stays on each preset.
8. Select Enable to activate the tour.
9. Select Apply to complete the process.
10. The Open button displays the camera manufacturer's onscreen menu. Actions required to accept onscreen information varies by manufacturer; clicking Iris Open and Focus Far are the most common.
11. To create a dome pattern (available only on certain analog cameras), click Record, move the camera in the pattern desired, and click Stop. Click Run to review the pattern.

Digital PTZ presets can be configured by clicking the Presets button next to the Digital checkbox on the Camera Setup page.

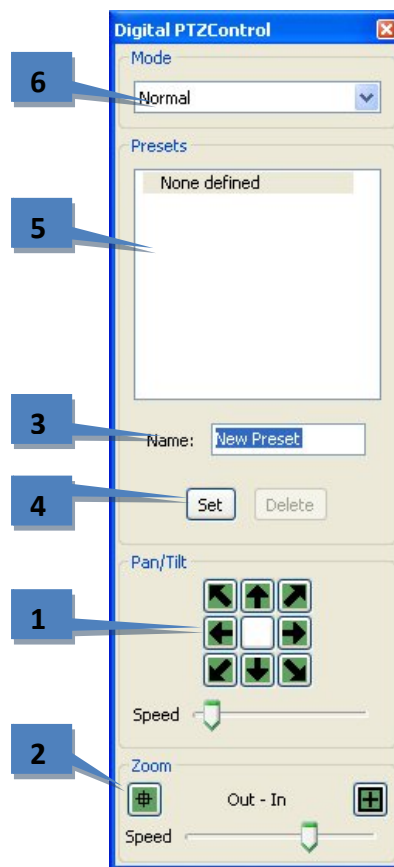

1. Use the Pan/Tilt buttons to point the camera at the desired preset location. If the camera moves too quickly or too slowly, move the Speed slider left (slower) or right (faster).
2. Adjust the Zoom, setting as desired.
3. Enter a name or number for the preset in the Name field.
4. Click Set to enable the preset.
5. After you click Set, the preset is listed under Presets.
6. Select a Mode for cameras with exacqVision-supported fisheye lenses. If you select Immervision, additional drop-down lists appear that allow you to select a model and mounting options. If you select Sentry360, enter values for X, Y, and R as provided by the manufacturer. If you are not using a fisheye lens, select Normal.

## Audio Input Setup

The screenshot shows the 'Audio Input Setup' interface. It features a table with four columns: 'Audio Input', 'Audio Input Channel Name', 'Record Enable', 'Listen', and 'Recording Mode'. There are four rows of audio inputs. Callout 1 points to the 'Audio Input Channel Name' column header. Callout 2 points to the 'Record Enable' column header. Callout 3 points to the 'Apply' button. Callout 4 points to a 'Listen' button. Callout 5 points to the 'Recording Mode' column header.

Audio Input:	Audio Input Channel Name:	Record Enable:	Listen:	Recording Mode:
1	TV	<input checked="" type="checkbox"/> Enabled	<a href="#">Listen</a>	Continuous Recording
2	DVD	<input checked="" type="checkbox"/> Enabled	<a href="#">Listen</a>	Continuous Recording
3	Audio Input 3	<input type="checkbox"/> Enabled	<a href="#">Listen</a>	Recording Disabled
4	1K Test Tone	<input checked="" type="checkbox"/> Enabled	<a href="#">Listen</a>	Continuous Recording

Apply

The Audio Input Setup page allows you to name and enable the audio inputs you want to record. The exacqVision System ships with the audio input positions disabled due to legal restraints on audio recording in some jurisdictions. You may want to seek legal guidance prior to recording any audio inputs.

1. Enter a name for the audio input channel.
2. Select Enabled to enable audio recording on the input.
3. Repeat this process until all audio inputs have been named, and then click the Apply button.
4. Click Listen to verify the audio input connected to a channel. This is sometimes helpful when assigning names to multiple audio inputs.
5. The Recording Mode column shows the recording mode selected for the audio input on the Schedule page.



## Trigger Input Setup

**Configuration**

- My Systems
  - Add System
  - Client Setup
  - Event Monitoring
  - Group Setup
  - Map Setup
  - My Enterprise
    - exacqVision AXIS Server 2003
    - exacqVision Hybrid Server
      - System Setup
        - IP Cameras
          - Camera Recording Setup
          - Trigger Input Setup**
          - Alarm Output Setup
          - Audio Input Setup
        - eDVR 4000P
          - Camera Recording Setup
          - Audio Input Setup
          - Trigger Input Setup
          - Alarm Output Setup
          - Video Output 1
          - Video Output 2
        - Storage Setup
        - Serial Profile Setup
        - Serial Port Setup
        - Notifications
        - exacqRecall Setup
        - Event Linking
        - Schedule
        - Users
      - exacqVision Server
      - VMTEST46

**Trigger Input Setup**

Trigger Input:	Trigger Name:	Normal State:	Status:
AXIS VAPIX 215 PTZ: 00-40-8C-9F-DD-03			
1	Input 1	<input checked="" type="radio"/> NO <input type="radio"/> NC	NORMAL
IQeye IQ732N: 00-50-1A-06-00-6D			
1	Trigger Input 1	<input checked="" type="radio"/> NO <input type="radio"/> NC	NORMAL
Pelco TXB-N: 00-04-7D-04-EA-FD			
1	Trigger Input 1	<input checked="" type="radio"/> NO <input type="radio"/> NC	NORMAL
2	Trigger Input 2	<input checked="" type="radio"/> NO <input type="radio"/> NC	NORMAL
3	Trigger Input 3	<input checked="" type="radio"/> NO <input type="radio"/> NC	NORMAL
4	Trigger Input 4	<input checked="" type="radio"/> NO <input type="radio"/> NC	NORMAL
5	Trigger Input 5	<input checked="" type="radio"/> NO <input type="radio"/> NC	NORMAL
6	Trigger Input 6	<input checked="" type="radio"/> NO <input type="radio"/> NC	NORMAL
7	Trigger Input 7	<input checked="" type="radio"/> NO <input type="radio"/> NC	NORMAL

Apply Cancel

The Trigger Input Setup page allows you to assign a name and configuration to the discrete inputs on hybrid systems and certain IP cameras with alarm inputs. These triggers can be configured to trigger video recording or a relay using the Event Linking page.

1. Enter a name for each trigger input in the Trigger Name column.
2. Configure the trigger input's Normal State as Normally Open (NO) or Normally Closed (NC).
3. The Status column indicates whether the trigger input is in its normal (green) state or in its alarm (red) state.
4. When you are finished configuring trigger inputs, click Apply.

## Alarm Output Setup


Alarm Output	Alarm Name	Normal State	Status
<b>ACTI 5220</b>			
1	Output 11	<input checked="" type="radio"/> Hi <input type="radio"/> Lo	NORMAL
2	Output 22	<input checked="" type="radio"/> Hi <input type="radio"/> Lo	NORMAL
<b>WV-NS202</b>			
1	Alarm Output 1	<input type="radio"/> Hi <input checked="" type="radio"/> Lo	NORMAL
<b>WV-NW484</b>			
1	Alarm Output 1	<input type="radio"/> Hi <input checked="" type="radio"/> Lo	NORMAL
<b>RZ25N</b>			
1	Alarm Output 1	<input checked="" type="radio"/> Hi <input type="radio"/> Lo	NORMAL
2	Alarm Output 2	<input checked="" type="radio"/> Hi <input type="radio"/> Lo	NORMAL
<b>7139</b>			
1	Alarm Output 1	<input type="radio"/> Hi <input checked="" type="radio"/> Lo	NORMAL

Apply Cancel

The Alarm Output Setup page allows you to assign a name and configuration to the alarm outputs on hybrid systems and certain IP cameras.

1. Enter a name for each alarm output in the Alarm Name column.
2. Configure the alarm output's Normal State as Hi (5VDC) or Lo (0VDC).
3. The Status column indicates whether the alarm output is in its normal (green) state or in its alarm (red) state. The output can be triggered to alarm state by an event configured on the Event Linking page.
4. When you are finished configuring alarm outputs, click Apply.


## Video Output Setup

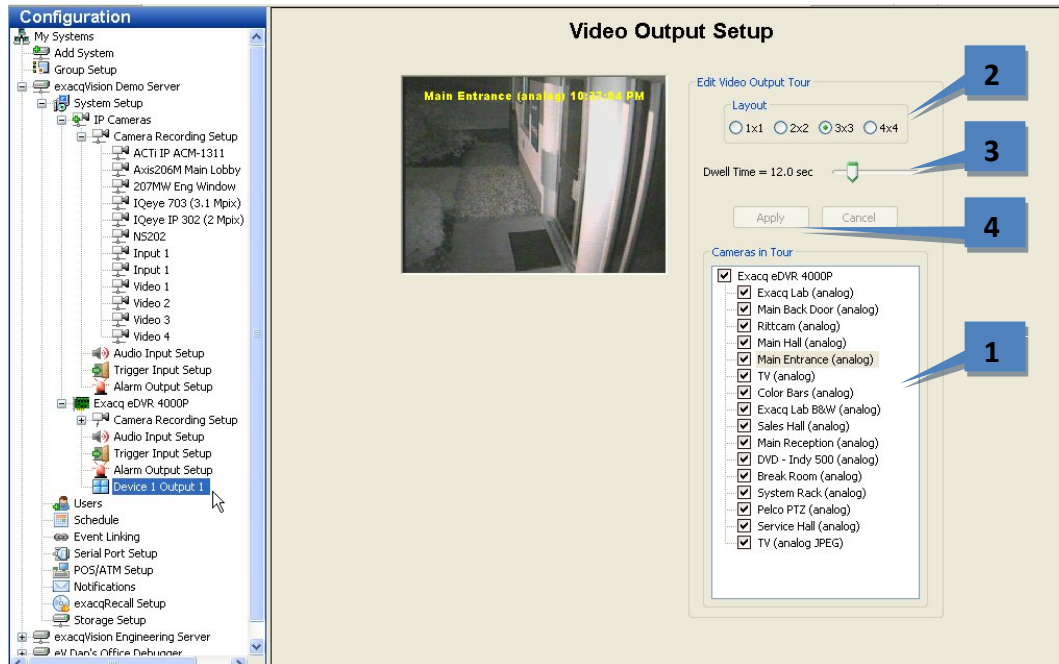

On hybrid systems, the Video Output Setup page allows you to configure your security spot monitor for touring (switching) between analog video cameras in various display modes.

1. Select the cameras that you want to include in the tour from the Camera in Tour check box. This displays video from the camera in the video window.
2. Select a Layout mode.
3. Move the Dwell Time slider to configure the length of time before the monitor switches to the next camera. The Dwell Time range is from 1 to 60 seconds.
4. When you are finished configuring the video output, click Apply to start the tour.


## Storage Setup

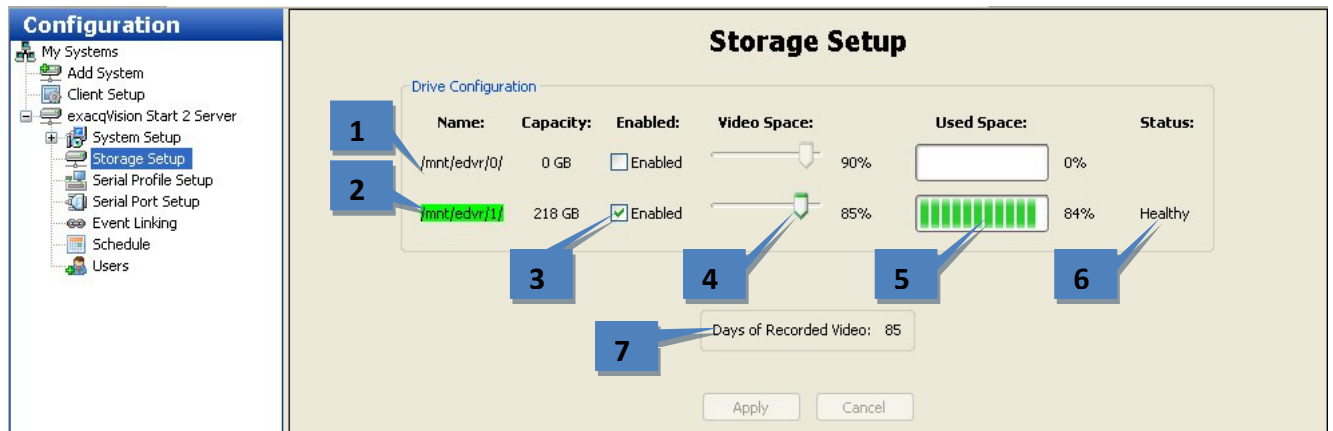

The **Storage Setup** page allows you to configure the system's hard drives for video storage.

1. The system drive ("C:\\" in Windows, or "/mnt/edvr/0" in Linux) is reserved for the exacqVision software and operating system and is not enabled for video storage. Do not record video to this drive.
2. The storage drives are listed below the system drive.
3. To enable a drive for video storage, select its Enabled: box.
4. To adjust the maximum amount of drive space that can be used for data storage, adjust the Video Space slider for each storage drive. **NOTE:** Performance can decrease if you set the Video Space slider greater than 85%.
5. Used Space displays how much of the hard drive capacity is currently full.
6. Status displays the current state of the hard drive.
7. Days of Recorded Video indicates the age of the oldest video recorded on this system.

## Event Linking

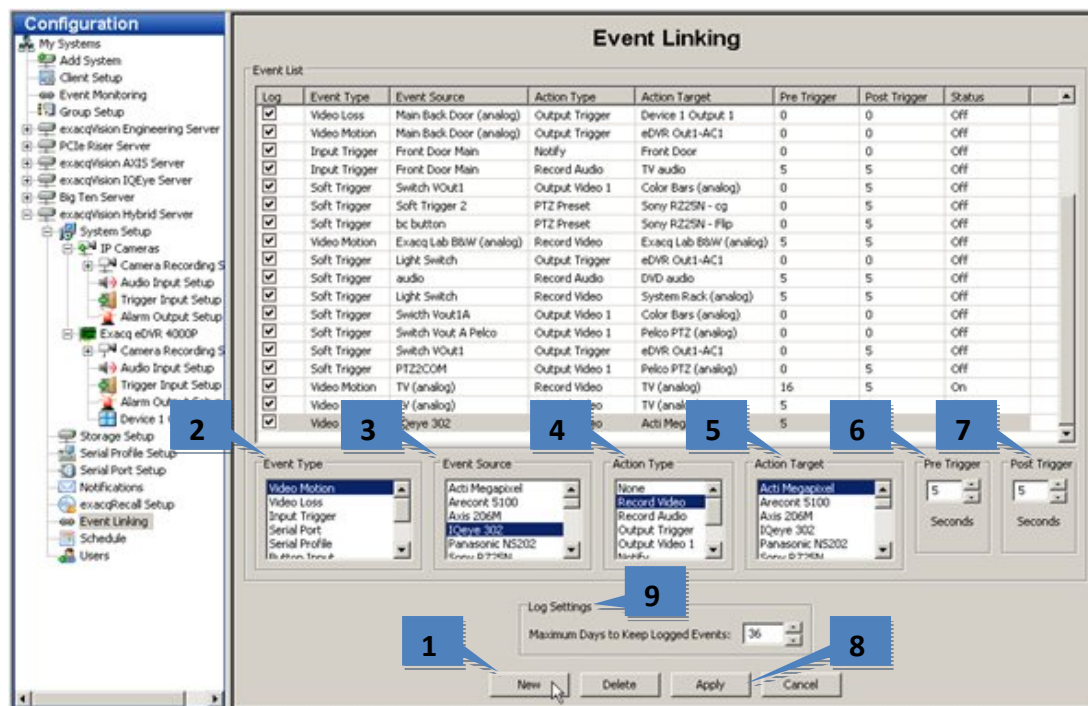

The Event Linking Setup page allows you to connect different types of events, such as the activation of an input trigger, to an action, such as recording video or triggering an alarm. Event linking provides quicker searches for specific event types. For example, you might normally search for motion video captured on a camera pointed toward a door; however, if the door has a sensor, you could improve your search by looking for video recorded whenever the door opened by linking that event with video recording.


You can see how it works by looking at the lists from left to right below the main Event List, as shown in the figure above. When the specified Event Type (2) occurs on an associated Event Source (3), Action Type (4) is triggered on an Action Target (5). These events are then stored in a database (if Log is selected in the Event List) to provide easy search capabilities. To create a new event, complete the following steps:

1. Click the New button to add the event to the Event List.
2. Select the Event Type. In exacqVision Start, only Input Trigger is available.
3. Select the Event Source.
4. Select the Action Type.
5. Select the Action Target.
6. Pre Trigger allows you to store buffered data that was captured up to 100 seconds before the event occurred. This feature can be used only with certain Event Types. Very large Pre Trigger can negative impact system performance.
7. Post Trigger continues the Action Type for up to 100 seconds of video after the event concludes.
8. Click Apply to save all changes to the selected event.
9. The Log Settings field determines how long the event will be stored in the Event database, from zero to 365 days.

## Event Monitoring

**NOTE:** The Event Monitoring page is not available in exacqVision Start.

The Event Monitoring page allows you to configure your exacqVision Client to react to events that take place on connected servers. First, you must create and define Event Monitoring Profiles, which are a set of actions (such as displaying live video or triggering a sound) that are triggered by events (such as motion or triggered inputs). Each profile can be activated and assigned to a specific video window on the Live page.

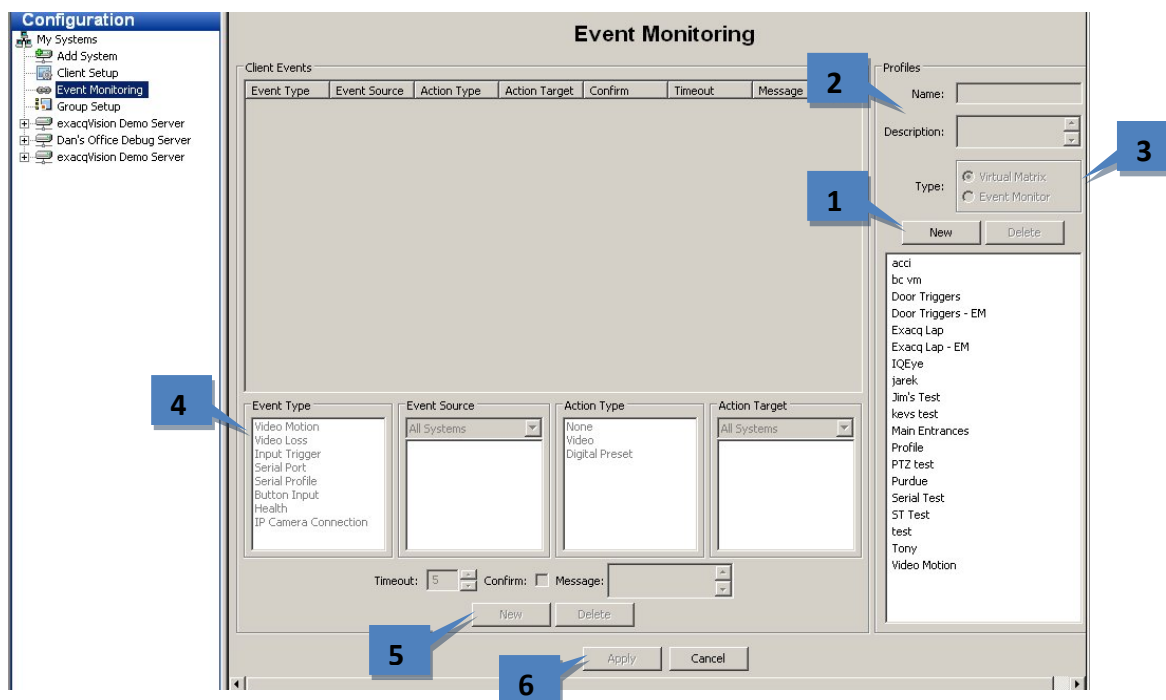

1. To create a new profile, click the New button in the Profiles section.
2. Enter a name and description for the profile.
3. Select the type of profile you would like to create.
  - A Virtual Matrix profile automatically displays video as it is triggered. For example, if you have a series of entrances in one profile, each time any of the entrances is triggered, the video panel will switch to the camera displaying the most recent door motion.
  - An Event Monitor profile displays an interactive list of events. Using the same example, the entrance event would be added to a list that you could click on to display the video. This can be useful if events are occurring on two cameras at the same time; instead of seeing each event for a split second, you can view each event for as long as necessary.
4. Add an event to monitor. This works in a similar way as the Event Linking discussed in the “Event Linking” section of this manual. Select an Event Type, and Event Source, an Action Type, and an Action Target. The options listed in Event Source vary depending on which Event Type (such as triggers, serial ports, and serial profiles) is selected and how it is configured. For more information, see the sections of Setup Mode Overview chapter that are related to the desired Event Type.
5. To add another event to this profile, click on the New button at the bottom of the page.
6. Click the “Apply” button when you have finished your profile.

You can now view your event profile in Live mode.


## Schedule

The Schedule page allows you to configure your camera and event recording schedule. By default, an exacqVision system is scheduled to record motion and events. There are four modes of video recording, which are color-coded on the Schedule page: motion (blue), free run (green), alarm (red), and off (white).

**NOTE:** Free run is continual recording. This type of recording uses a large amount of disk space.


There are four scheduling tabs:

- The Days tab lists the cameras, audio inputs, and events on the left, and the hours of the day across the top. Select a day of the week from the Day drop-down list, select a recording mode, and then “draw” the schedule in the grid area. Click Apply to save the schedule, or click Apply to All Days to save the changes for every day of the week.

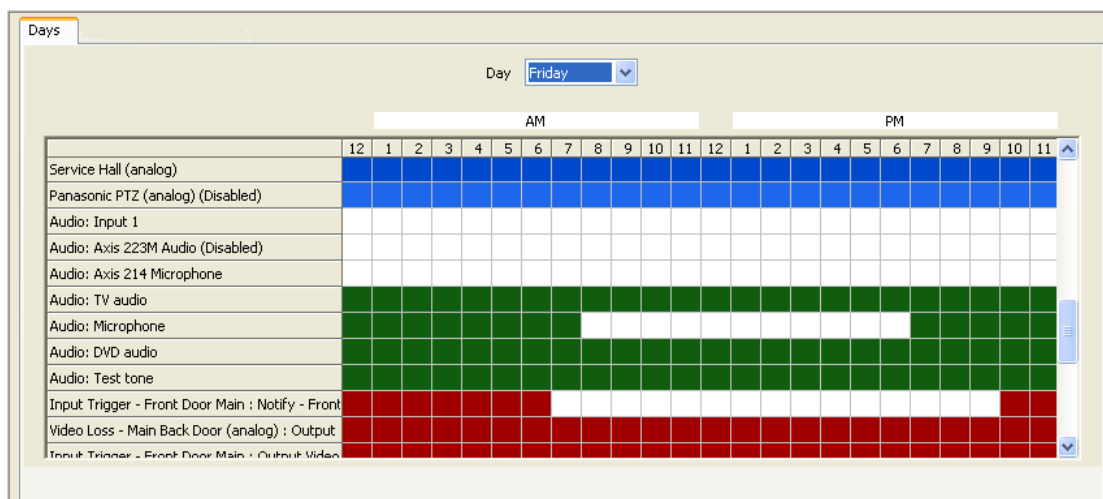

**NOTE:** Colors on the schedule for disabled camera and audio inputs are displayed in a lighter shade.

- The Cameras tab lists the days of the week in the left column and the hours of the day across the top. Select a camera from the Camera drop-down list, select a recording mode, and then “draw” the schedule in the grid area. Click Apply to save the schedule, or click Apply to All Cameras to save the changes for all cameras connected to the system.

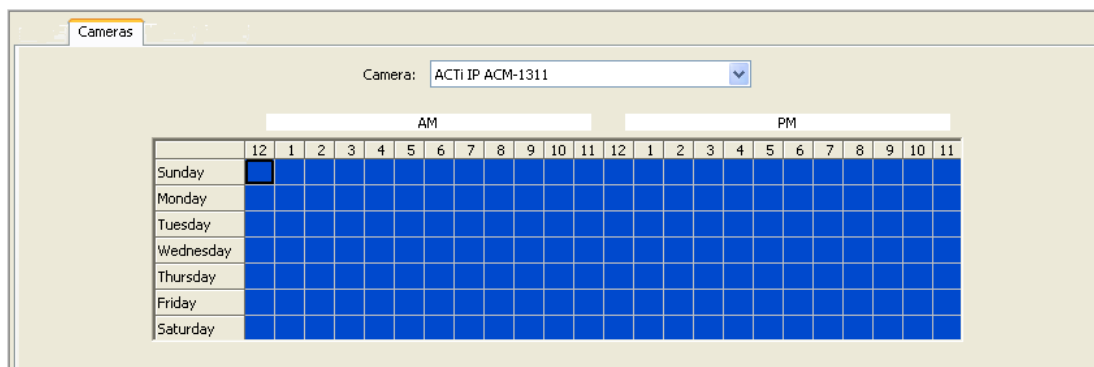

**NOTE:** You do not need to create a schedule in both views. Select the best tab for your situation.

- The Events tab enables the recording of events configured on the Event Linking page. It lists the days of the week in the left column and the hours of the day across the top. Select an event from the Event drop-down list, select Alarm (red) or Off (white), and then “draw” the schedule in the grid area. Click Apply to save the schedule, or click Apply to All Events to save the changes for all events configured on the system.

Events

Event:

	AM												PM											
	12	1	2	3	4	5	6	7	8	9	10	11	12	1	2	3	4	5	6	7	8	9	10	11
Sunday	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red
Monday	Red	Red	Red	Red	Red	Red	Red	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White
Tuesday	Red	Red	Red	Red	Red	Red	Red	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White
Wednesday	Red	Red	Red	Red	Red	Red	Red	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White
Thursday	Red	Red	Red	Red	Red	Red	Red	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White
Friday	Red	Red	Red	Red	Red	Red	Red	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White
Saturday	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red	Red

- The Audio tab lists the days of the week in the left column and the hours of the day across the top. Select an enabled audio input from the Audio Inputs drop-down list, select Free Run (green) or Off (white), and then “draw” the schedule in the grid area. Click Apply to save the schedule, or click Apply to All Audio In to save the changes for all audio inputs on the system.

Days Cameras Events Audio

Audio Input:

	AM												PM											
	12	1	2	3	4	5	6	7	8	9	10	11	12	1	2	3	4	5	6	7	8	9	10	11
Sunday	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green
Monday	Green	Green	Green	Green	Green	Green	Green	Green	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White
Tuesday	Green	Green	Green	Green	Green	Green	Green	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White
Wednesday	Green	Green	Green	Green	Green	Green	Green	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White
Thursday	Green	Green	Green	Green	Green	Green	Green	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White
Friday	Green	Green	Green	Green	Green	Green	Green	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White	White
Saturday	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green



[illegible]

1. To add a new user, click New.
2. Enter the name of the user in the Username field, and a login password Password and Confirm fields.
3. Select a permission level from the User Group drop-down list:
  - Full Admin has access all features of the system.
  - Power User has access all features except for adding or deleting users.
  - User Admin can manage user accounts.
  - Restricted can view only those devices selected in the Custom User Permissions section.
4. The Custom User Permissions section allows you to select which devices the user or group can see and operate in the exacqVision Client. You might have to deselect View Admin and User Admin under Custom User Privileges to allow the Custom User Permissions data to be edited.
5. When finished, click Apply.

## My Systems

My Systems						
System Name	IP Address	Connection Status	License	Subscription	Version	Status
AXIS Server 2003	192.168.100.30 (exacq-axis-2003.demo.test.exacq.com)	Connected.	Enterprise	Updates through 2012-03-01	4.2.3.22224	ALARM
Hybrid Server	192.168.100.1 (er0936001231)	Connected.	Enterprise	Updates through 2014-07-10	4.2.3.22224	ALARM
Vision Server	127.0.0.1	Connected.	Evaluation	None	3.7.7.19858	NOT ENTERPRISE

The My Systems page lists all added systems, along with their serial number, IP address/hostname, connection status, license type, MAC address, subscription information, version information, status (such as, Normal, Alarm, or Motion), and days of recorded video.

**NOTE:** To display or remove a column on the My Systems page, right-click any column header and select the column from the pop-up menu.

The following actions can be performed on the My Systems page:


- To connect to or disconnect a system, right-click its connection status and select a Connect option or Disconnect from the pop-up menu. To connect to or disconnect multiple consecutive systems simultaneously, click on the connection status for the first system, and then press Shift while you drag the cursor up or down (and then right-click).
- To view the System Information page for a system, double-click the information listed in any column for that system.
- To view model number and serial number information for a system, right-click the system name.
- To view a MAC address and license key for a system and copy it to the clipboard, right-click its information in the License, MAC Address, or Subscription column for that system and select Copy to Clipboard (select the right arrow if necessary to see that option). You can then paste the information into an email or other applications.
- To update a license key for a system, right-click its information in the License column, select Update, and select one of the options. If you select Update the License from File, you can browse to a .KEY file that contains license information and click Open. If you select Update the License from Text, you can type the license key manually and click OK.

**NOTE:** Alternatively, you can click Import Licenses at the bottom of the page to enter multiple licenses from a .CSV file, or click Export Licenses to compile all listed licenses into a .CSV file to import into another client.

- To view additional version information for a system, right-click the information in the Version column for that system.
- To view additional information about Alarm or Motion status, hover the mouse pointer over the word while it appears in the Status column.

**NOTE:** If the physical connection between the client computer and server is interrupted while you are connected to the server in exacqVision Client, the Connection Status will be displayed as Network Activity Timeout. The status will then be displayed as Disconnected after a specific amount of time that varies among operating systems.


## eDVR 4000 Device

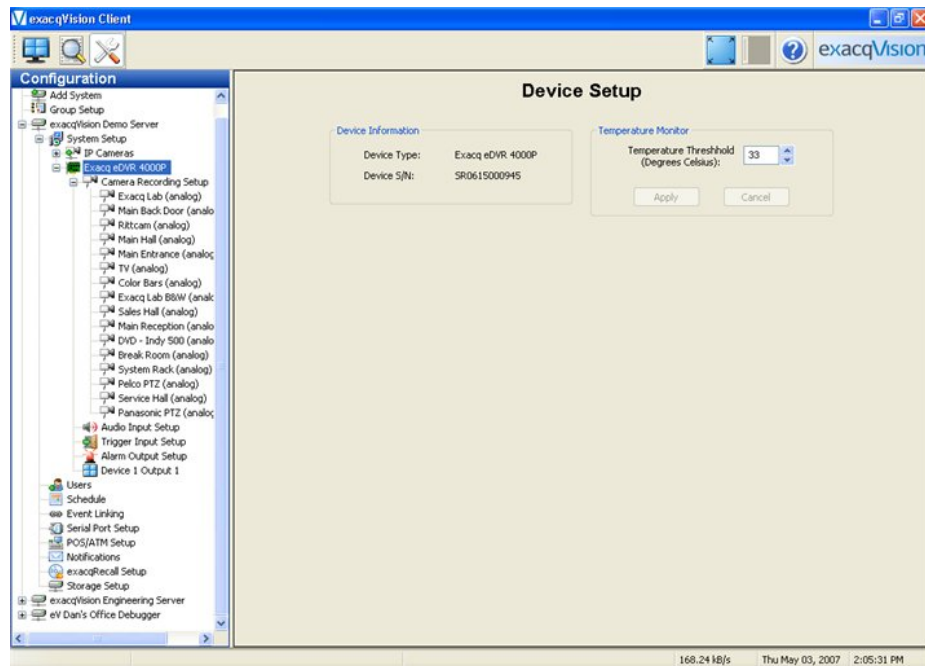

The eDVR 4000 Device is the compression board installed in exacqVision hybrid video servers that manages the analog video cameras connected to the systems. If an eDVR 4000 board is installed in the system, the Device Information field displays the eDVR Device Type and Serial Number.

You can also set a temperature threshold that can be linked to an event action using the Event Linking page.

## Client Setup

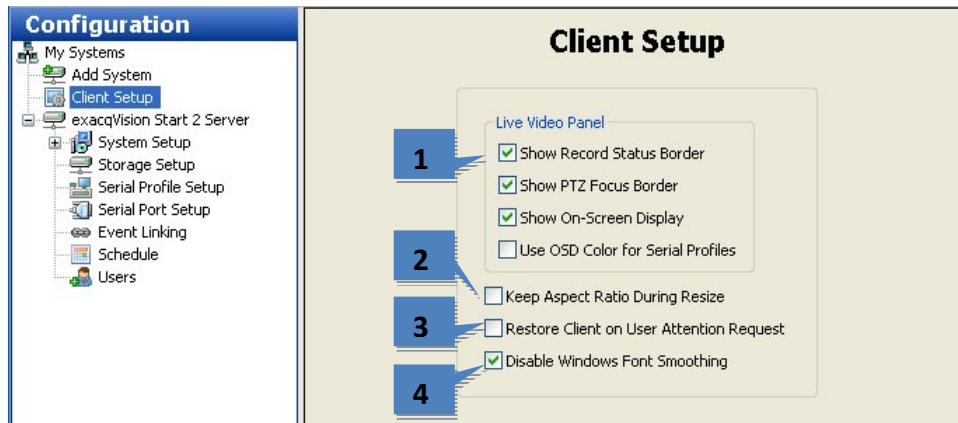

The Client Setup page allows you to customize your client based on your personal preferences.

1. The Live Video Panel section controls the colored borders that are displayed in Live mode to indicate motion or alarm recording or PTZ focus.
2. Keep Aspect Ratio During Resize maintains video aspect ratios when exacqVision Client is made larger or smaller.
3. Restore Client on User Attention Request displays a minimized client if an event occurs requiring user attention.
4. Select Disable Windows Font Smoothing (not available in exacqVision Start) if fonts are not appearing as desired.

## System Information

**Configuration**

- My Systems
- Add System
- Client Setup
- Event Monitoring
- Group Setup
- Map Setup
- My Enterprise
- Enterprise Cameras
- Enterprise User Setup
- exacqVision AXIS Server 2003
- exacqVision Hybrid Server

**System Information**

**System Usage**

Use...	Level	Address	Streams	Audit
webs...	Power User	192.168.100.26	0	NO
drit...	Full Admin	192.168.100.20	0	NO
guest	Live + Search + exacqReplay	210.227.113.117	0	NO
cvl	Power User	173.160.139.50	0	NO
Admin	Full Admin	192.168.3.37	0	NO
tand...	Power User	77.40.152.42	0	NO
ewar...	Power User	213.136.58.194	0	NO
webs...	Power User	192.168.100.20	11	NO

**Version Information**

Name	Filename	Version	Status
Core	core.exe	4.5.16.25630	OK
XDPPI	xdppi.dll	4.5.16.25630	OK
PSPPI	psppi.dll	4.5.16.25630	OK
StreamPI	StreamPI.dll	4.5.16.25630	OK
AxisPI	axispi.dll	4.5.16.25630	OK
LogPI	logpi.dll	4.5.16.25630	OK
EventPI	EventPI.dll	4.5.16.25630	OK
GroupsPI	groupsPI.dll	4.5.16.25630	OK

**System Log**

Search

Start: 4/29/2011 10:08 AM

End: 4/29/2011 11:08 AM

System Log Level: Warning

Search

Export

Maximum Days Storage: 90

Apply

Cancel

Displaying 277 records.

Time	Plugin	Severity	Message
4/29/2011 10:08:25	StreamPI	Warning	Client 76.108.154.104 disconnected due to key exchange timeout.
4/29/2011 10:08:25	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:09:03	StreamPI	Warning	Client 192.168.100.82 disconnected due to read failure - WSAECONNRESET.
4/29/2011 10:09:25	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:10:14	StreamPI	Warning	Client 192.168.100.82 disconnected due to read failure - WSAECONNRESET.
4/29/2011 10:10:14	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:11:03	StreamPI	Warning	Client 76.108.154.104 disconnected due to key exchange timeout.
4/29/2011 10:11:24	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:12:23	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:13:23	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:14:22	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:14:33	NotifyPI	Warning	Apr 29 10:14:33 er0936001231 sendEmail.exe[1736]: ERROR => Received: 550 5.4.5 Daily sending quota exceeded. 19sm1154
4/29/2011 10:15:17	StreamPI	Warning	Client 192.168.100.82 disconnected due to read failure - WSAECONNRESET.
4/29/2011 10:15:22	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:16:21	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:17:20	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:17:29	NotifyPI	Warning	Apr 29 10:17:29 er0936001231 sendEmail.exe[3640]: ERROR => Received: 550 5.4.5 Daily sending quota exceeded. hc41sm11
4/29/2011 10:18:20	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:18:40	StreamPI	Warning	Client 192.168.100.82 disconnected due to read failure - WSAECONNRESET.
4/29/2011 10:19:05	StreamPI	Warning	foopen("b80b78002762-e297-47ee-bd08-cd99e0f4f7ce", "r") Failed: No such file or directory
4/29/2011 10:19:19	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:20:03	NotifyPI	Warning	Apr 29 10:20:03 er0936001231 sendEmail.exe[2588]: ERROR => Received: 550 5.4.5 Daily sending quota exceeded. e12sm653
4/29/2011 10:20:19	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:21:18	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:22:17	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:23:16	StreamPI	Warning	Client 76.108.154.104 disconnected due to read failure - WSAECONNRESET.
4/29/2011 10:23:17	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:24:16	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:25:16	StreamPI	Error	Login failure - unknown username (admin) or password.
4/29/2011 10:26:15	StreamPI	Error	Login failure - unknown username (admin) or password.

The System Information page displays information about users that are currently logged into the system, plugin file version information number and status, and the system log. This page is displayed when you click on the system name in the Configuration tree.

1. System Usage displays the users that are currently logged in, the user's access level and IP address, and the number of streams being viewed.
2. Version Information displays the version numbers for each exacqVision system file. This information can be useful when contacting technical support.
3. To view the system log, select the start and end date and, select the type of messages you want to see from the Level drop-down list, and click Search. All messages that meet the search criteria are listed.
4. To sort the list, any of the column titles.
5. To view the system log with a text editor, click Export and save the file. Then you can open the file from the location where you saved it.
6. Maximum Days Storage determines the maximum number of days that information is maintained in the system log.

**NOTE:** If you cannot see all the fields and buttons on the System Log tab, drag the horizontal bar under the System Usage section up.

# 5

## Live Mode Overview



Live Mode is the primary page for viewing live video.

1. **Live Mode Icon.** This button runs the Live Mode.
2. **Layout Panel.** Select a video window layout.
3. **Site Tree.** Browse exacqVision systems, cameras, PTZ cameras, alarms, audio inputs, and more.
4. **Navigation Pane.** Select a button to display cameras, views, and more on compatible systems.
5. **Messages.** Read system messages and information about operating the system. (Click to cycle information.)
6. **Date and Time.** See the current date and time on the client computer.
7. **Video Windows.** View video in the selected layout.
8. **About exacqVision Client.** View information about the client software.
9. **Show Help.** Open the user manual.
10. **Hide/Show Navigation Panel.** Expand or hide the tree. (Or press the F4 key.)
11. **Fullscreen Mode.** Enlarge the display by hiding the title and task bars. (Or press the F11 key.)
12. **Launch PTZ Controls.** Open the PTZ Control window.
13. **Soft Triggers.** Display the status of any soft triggers on connected exacqVision Pro/Enterprise servers.
14. **Event Button.** View additional soft triggers on Pro/Enterprise servers, as added on the Client Setup page.



## Layout Panel



You change the layout of the video windows by clicking on one of the Layout buttons. When you select a layout, it becomes the new default. The system automatically fills the video windows with the cameras from your Live Site Tree in the order they are listed.


**NOTE:** The available Layout buttons vary based on the number of cameras connected and the width of the exacqVision Client window.

There are several methods for adding cameras to your Video View Panel.

- Select a Layout button on the Toolbar.
- Double-click a camera name listed in the site tree. The system displays that camera in the upper-left video and fills the rest of the windows in order below that camera in the list.
- Drag and drop a camera from the site tree into a video window. The window can be empty or full when you do this.
- Press F3 or the joystick button to display the Find Camera dialog, type the name of a connected camera, and then click Find. This method allows you to display a camera without using a mouse. When you type a sufficient number of characters to uniquely identify a camera name, the full name of the camera will automatically appear; for this reason, this feature works best when cameras are uniquely named. For example, if camera names start with numerical characters (such as 1-Front Entrance, 2-Back Entrance, and so on), you can quickly find a camera by simply entering one or two numbers in Find Camera.



You can delete a camera from the Video View Panel by right-clicking anywhere in the square and selecting Disconnect Streaming Video.

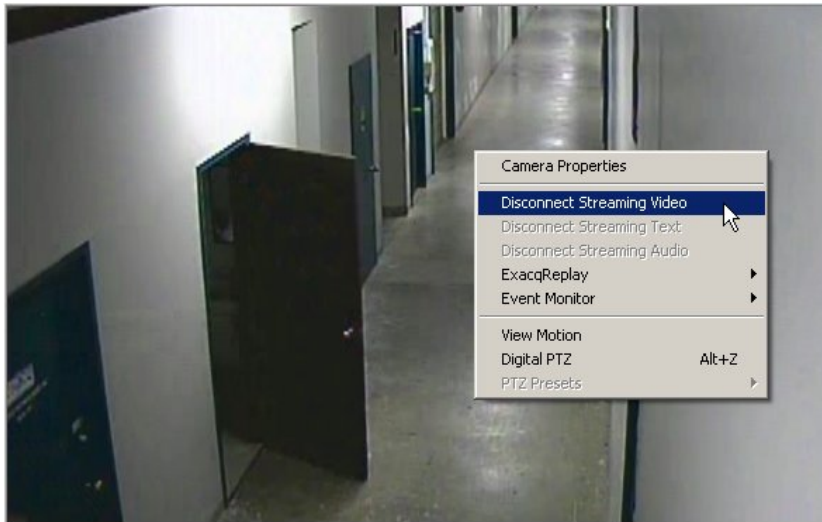

You can also access the Camera Setup page directly from Live Mode by selecting Camera Properties, and then clicking the OK button.



**NOTE:** To view the video window panel in the largest area possible, press Alt and Enter simultaneously on the keyboard. This combines the previously mentioned keyboard functions (F4 to hide the navigation tree and F11 to hide the title and task bars) with the F8 function, which hides the message bar, the date/time bar, and the toolbar. To reverse this mode and show all the hidden items, press Alt+Enter again.




## PTZ Control

To control the pan/tilt/zoom features of a PTZ camera without a joystick, move the mouse cursor over the camera's video window to display a green cross in the center of the window. When you move the cursor, arrows appear that show you which way you can pan and tilt. You can zoom in and out using your mouse wheel.



Alternatively, you can click the PTZ Control Button to display the PTZ Control panel: Click the button to access the PTZ control and preset windows. These controls are available only when a PTZ enabled camera is displayed in the Video View Panel.



The PTZ panel and preset panel contain the name of the camera being controlled in the title bar. You can click and drag on the title bar of the PTZ Controls to move them anywhere on your screen.

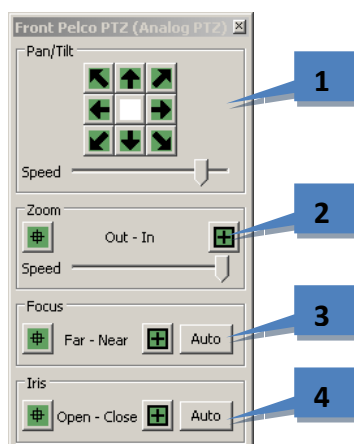


1. To control pan and tilt, click the green arrow buttons. Adjust the pan/tilt Speed slider if necessary.
2. To control zoom, click the Out or In button. Adjust the zoom Speed slider if necessary.
3. To control focus on a compatible camera, click the Far or Near button. Click Auto for auto-focus.
4. To control the iris on a compatible camera, click the Open or Close button. Click Auto for auto-iris.

**NOTE:** You can also control PTZ using the arrows, Page Up key, and Page Down key on your keyboard. The arrow keys move your camera to the left, right, up, and down. Page Up zooms in, and Page Down zooms out. Pressing Alt+Z enables the zoom box; you can zoom in on a particular location by holding down the control key and dragging the zoom box over the desired portion of the image. Press Alt+Z again to zoom out. You can adjust the speed the Zoom feature by using the Speed slider control on the PTZ Control.

Even without a PTZ camera, digital PTZ allows you to zoom in and pan around an image (if digital PTZ has not been disallowed during setup). To enable digital PTZ, right-click the video window and select Digital PTZ. This also can be used to de-warp video captured by cameras with exacqVision-supported fisheye lenses.

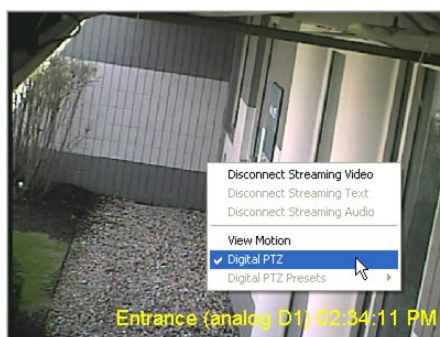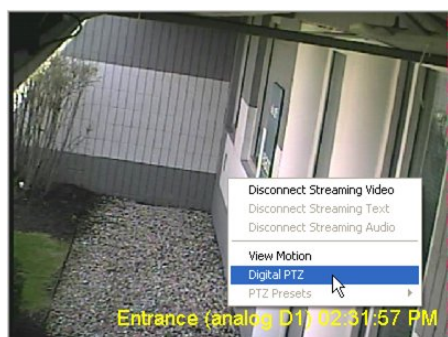

To view PTZ presets, select a green number buttons in the presets window. (For directions on how to setup a Preset button, the “Camera Setup” section of this manual.) Hover the cursor over the Preset buttons to view the preset name you entered when configuring the PTZ camera. You can also use your mouse to access the PTZ presets by right-clicking anywhere in the PTZ Video Panel, selecting PTZ Presets, and then selecting the name of the preset.

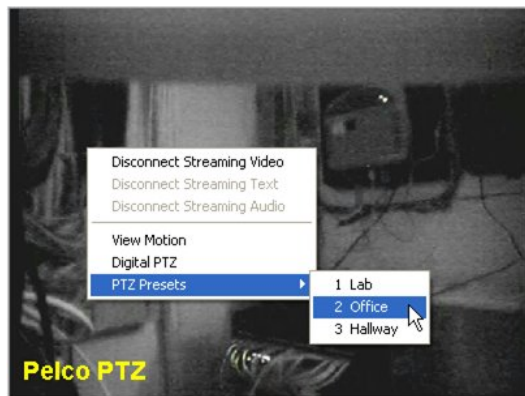

## exacqReplay

exacqReplay allows you to quickly replay a limited amount of recorded video. You can review the most recently recorded video in increments of 5 or 30 seconds or 1, 5, or 15 minutes. To do this, right-click the camera's video window, select exacqReplay from the pop-up menu, and select the desired time increment.



If video was recorded in the selected time period, the exacqReplay window opens and the video is downloaded.




1. The number of downloaded frames and total frames in the video segment are displayed in the status bar.
2. The green bar tracks the download progress. You can play and scrub through video that has been downloaded.
3. This button allows you to play video in reverse fast (double) speed.
4. This button allows you to play video in reverse in normal speed.
5. This button allows you to pause video play.
6. This button allows you to play video forward in normal speed.
7. This button allows you to play video forward in fast (double) speed.
8. This button allows you to stop the video download in progress.
9. This button allows you to play video backward one frame at a time.
10. This button allows you to play video forward one frame at a time.

## Camera Views

You can organize your cameras into preset views that you can save and display from the site tree. To do this, select a Layout button in the Live mode and drag the cameras, audio, and POS data into the video windows, then click the Save View button at the top of the site tree.




This opens the EDVR Views window.

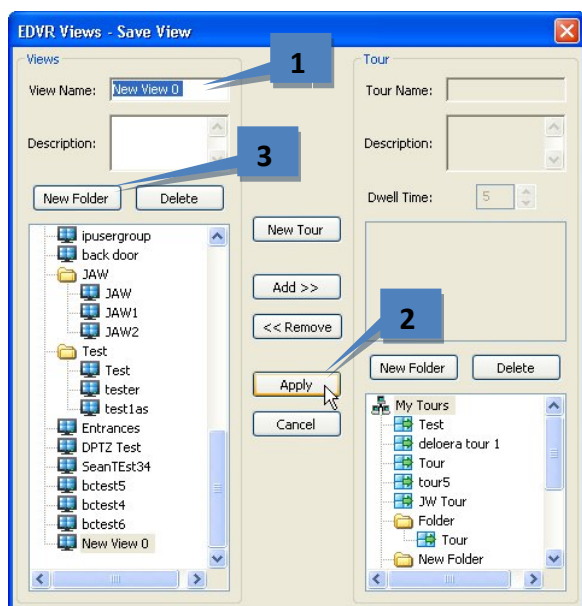


1. Enter a unique name and description for your view in the Views section. The system and camera names will be displayed when you hover over the view name in the site tree.
2. Click Apply to save the view to the list.
3. You can organize views into folders by clicking New Folder in the Views section. Enter a name and description for the folder. Drag and drop views into the folder as desired.

To display a view in the live video windows, click the View button in the Navigation Pane.

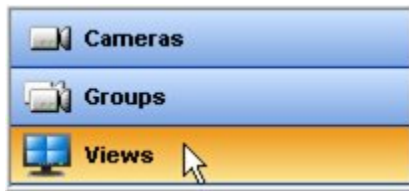


This displays all configured views in the site tree. Select the view to display video from the cameras saved in the view.

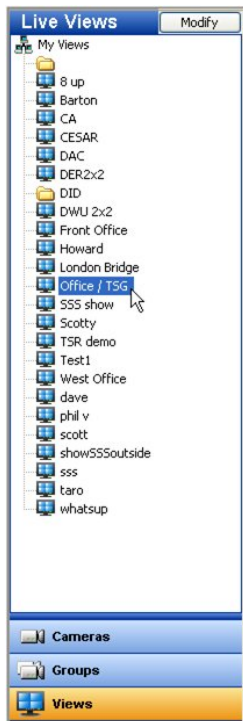


## Camera View Tours

To automatically cycle through two or more views, create a camera view Tour. Click Save View or Modify at the top of the site tree to open the EDVR Views window.

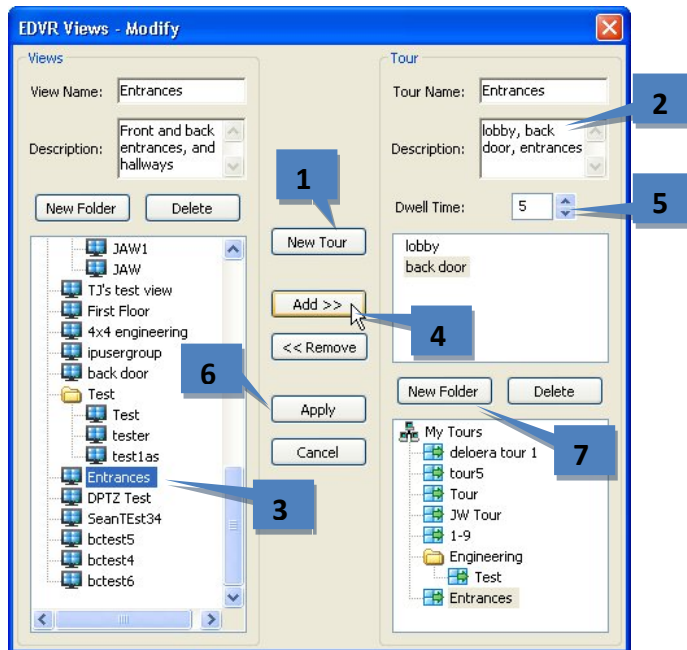

1. Click New Tour.
2. Enter a unique name and description for the tour in Tour section.
3. Select a view from the view list in the left side of the window.
4. Click Add>> to add the view to the tour list. Repeat for additional views.
5. Select a Dwell Time. This is the amount of time, in seconds, that each view will be displayed.
6. Click Apply to save the camera view tour.
7. You can also organize your tours in folders by clicking New Folder in the Tour section and then dragging and dropping the appropriate tours in the folder.

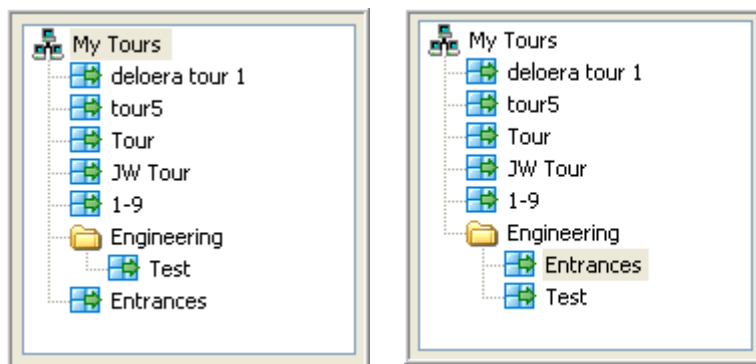


You can now activate the tour from the site tree.



# 6

## Search Mode Overview

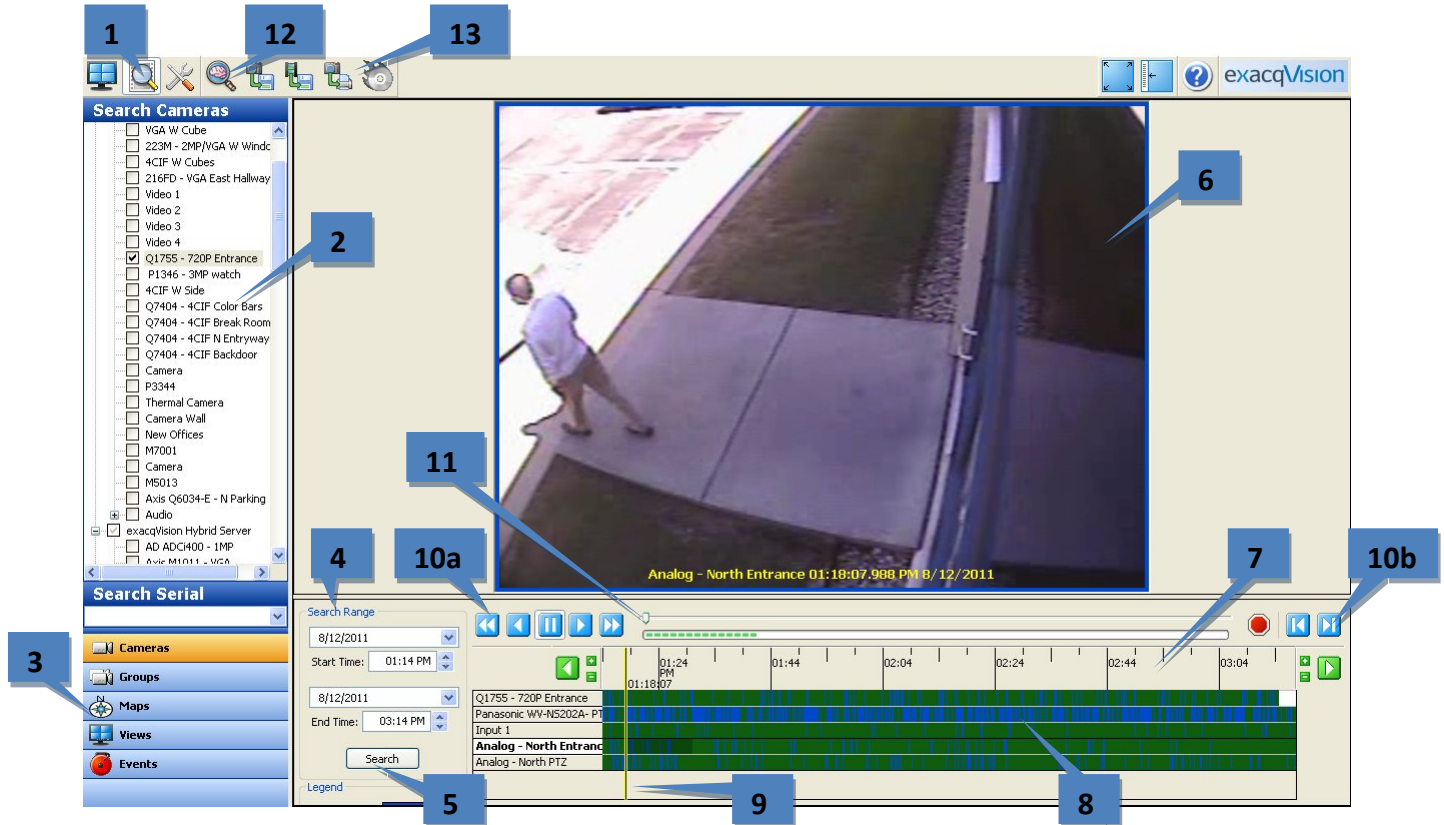

The Search page allows you to search for recorded video, events, and other data.

1. **Search Mode Icon.** This button runs the Search mode.
2. **Camera Selection Tree.** Select cameras, audio, or data sources to search.
3. **Navigation Pane.** Display individual cameras, camera groups, maps, views, or events.
4. **Search Range.** Select a date and time for the start and end of the search period.
5. **Search Button.** Click Search to find video based on the search settings.
6. **Video Playback Window.** Video is played back here.
7. **Video Timeline.** To expand or shrink the timeline, click the plus and minus buttons. To change the start or end time of the timeline, click the left or right arrow buttons.
8. **Recorded Video Bar.** These color-coded bars represent video that has been recorded.
9. **Video Cursor.** This shows where in the timeline the displayed video was captured.
10. **Video Playback Controls.** Standard playback controls (left from right): Reverse fast, reverse normal speed, stop, play normal, play fast, stop download, step forward, step backward.
11. **Scrub Bar.** Quickly scrub back and forth through video.
12. **Smart Search.** Search for video in specific portions of a video window. (Not available in exacqVision Start.)
13. **Export Buttons.** Save Picture, Save Video, Print Picture, and Burn Saved Files to CD or DVD.

## Searching for Video and Other Data

To search for video and other data, complete the following steps using the figure on the previous page as a guide:


1. In the camera or view tree, select one or more sources (cameras, audio inputs, POS, and so on). To search every source on an exacqVision server, check the box next to the server in the Camera Selection Tree (and then deselect any sources individually if desired). You can also select individual sources using the check boxes next to each camera.
2. Select the date and time you want to search. Click Search.

**NOTE:** If the client computer and the server are located in different time zones, you can select between Client Time or Server Time. Search result listings are applicable to the selected time zone, and the time offset between the time zones is shown in parentheses. The Client Time and Server Time options are visible if you are connected to a server in another time zone.

3. When your search is complete, the camera names selected appear under the timeline with color-coded recording bars representing recorded data. A color legend for the recorded video bars is located below the Search Range area; if you cannot see it, click the horizontal bar between the video window and the search results and drag it up.



## Video Playback

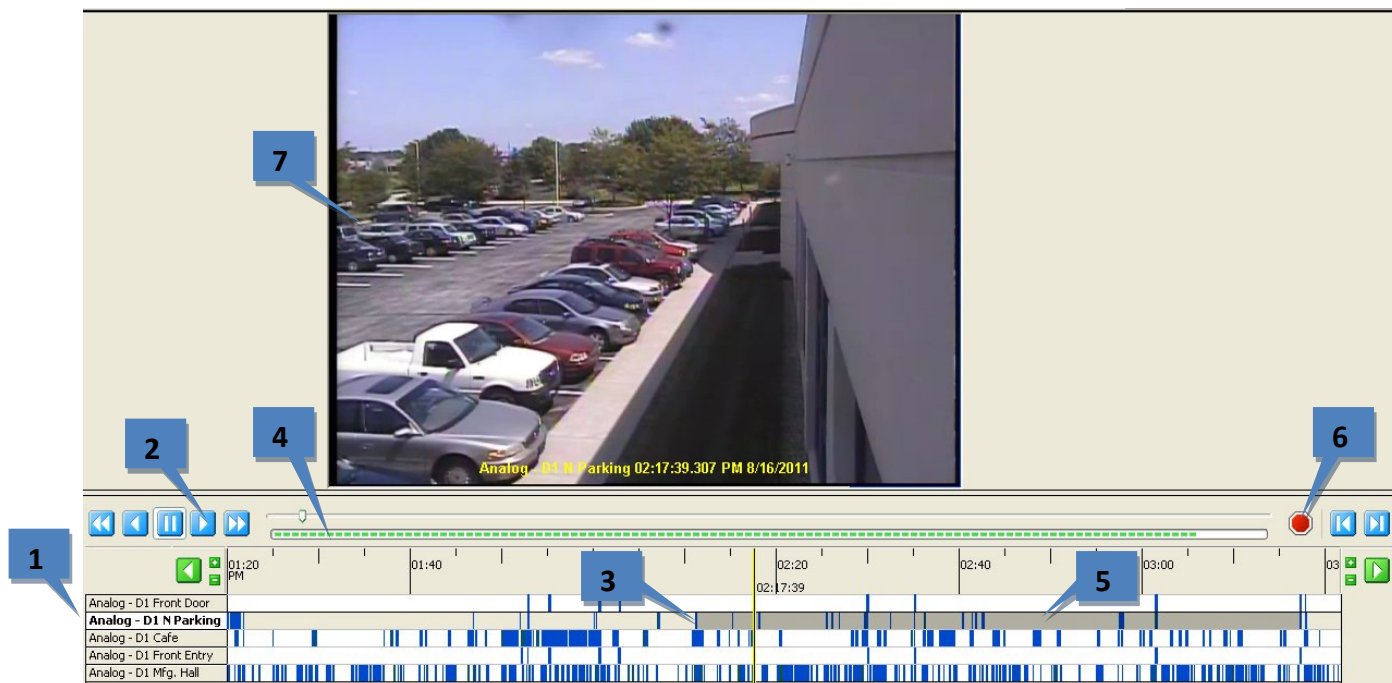


To play back video, complete a search as described in the previous section and complete the following steps:


1. Select a camera for video playback by clicking on a camera name in the search results area. To select multiple cameras for playback, press and hold the Control key and then click each of the camera names. To select a range of consecutive cameras, press and hold the Shift key, click the first camera name in the range, and then click the final camera name in the range.
2. Click the play button to start displaying video at the beginning of the timeline.
3. To play video starting at another point on the timeline, double-click a recorded video bar in the appropriate location under the timeline. Or, you can click once on the recorded video bar and then click the Play button.
4. The green progress bar shows how much of the total video has been downloaded. The number of frames downloaded and the total number of frames are also displayed in the status bar.
5. The background behind the recorded video bars turn gray to show how much of each camera's video has been downloaded.
6. To stop video download, click the Stop button. All video downloaded before you pressed the Stop button can still be viewed.
7. To digitally zoom in on a single camera, double-click its video playback window. To return to the multi-camera view, double-click the remaining video playback window.

After the download has started, you can scrub back and forth through the video using the scrub bar and video playback controls. You can view only the portion of the video that has downloaded. You can quickly scan the video by dragging the slider to the left or right or by pressing Enter or Backspace on the keyboard. (Enter and Backspace play every frame of video as quickly as the system hardware allows, unlike the normal Play and Reverse buttons, which play video at actual speed even if frames must be skipped to do so.)

When you play back video associated with POS data, any associated video is displayed in sync with the POS overlay data, as shown in the following figure. Notice the data displayed on the right for the transaction that was just completed in the video window.

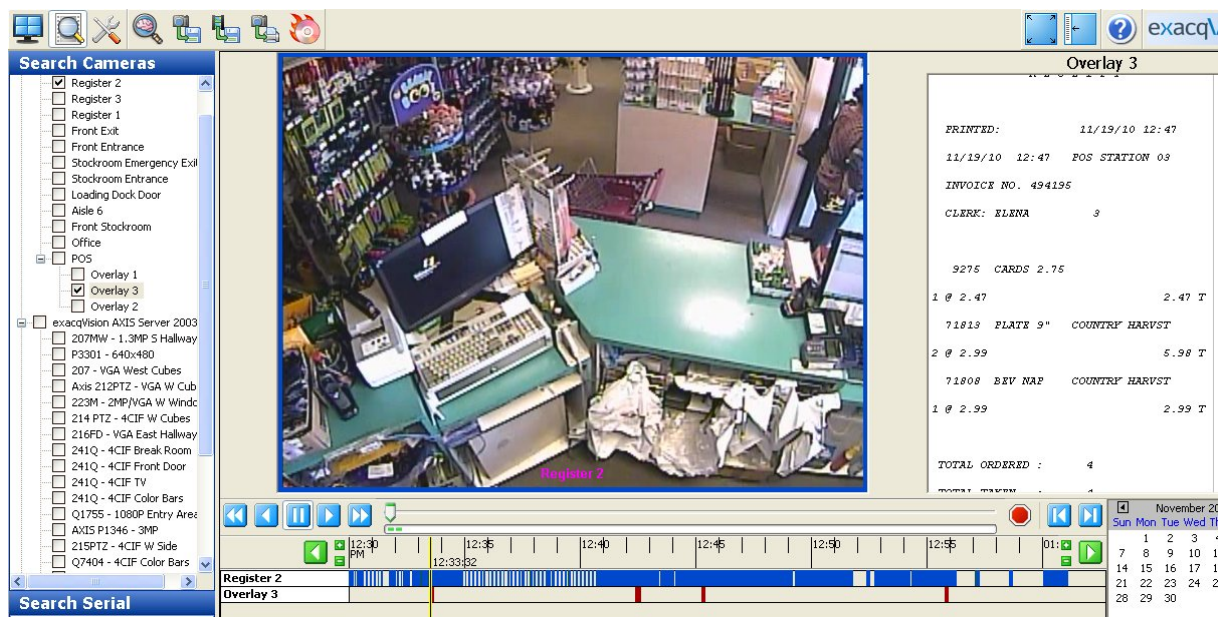


In some cases, wind or some other invisible motion sets off the camera. On an analog camera, you can highlight the motion that triggered the recording to identify the cause by right-clicking anywhere in the playback window and select View Motion. Blue motion boxes mark the area where the motion occurred. When you want to remove the motion boxes, right-click in the Video Playback window again and select View Motion to remove the checkmark. **NOTE:** This feature is not available on most IP cameras.

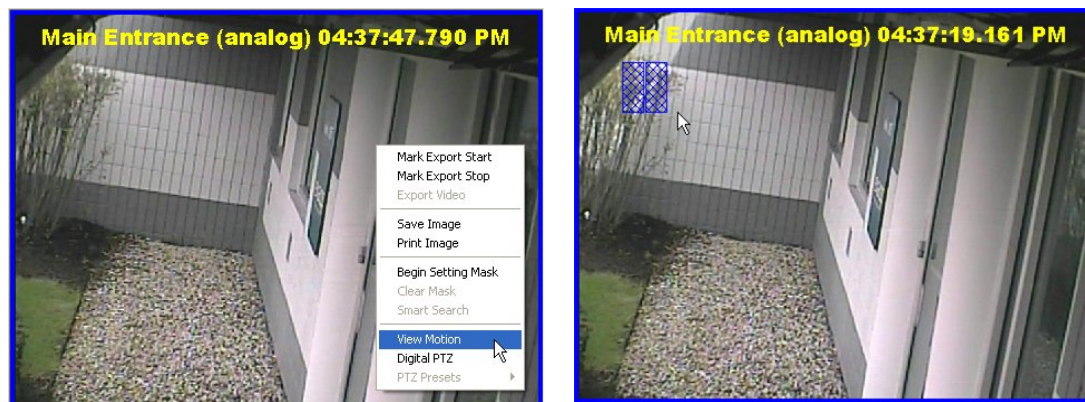

## Searching Views

**NOTE:** Search Views is not available in exacqVision Start.

You can also search for video recorded on all cameras in a specific view.

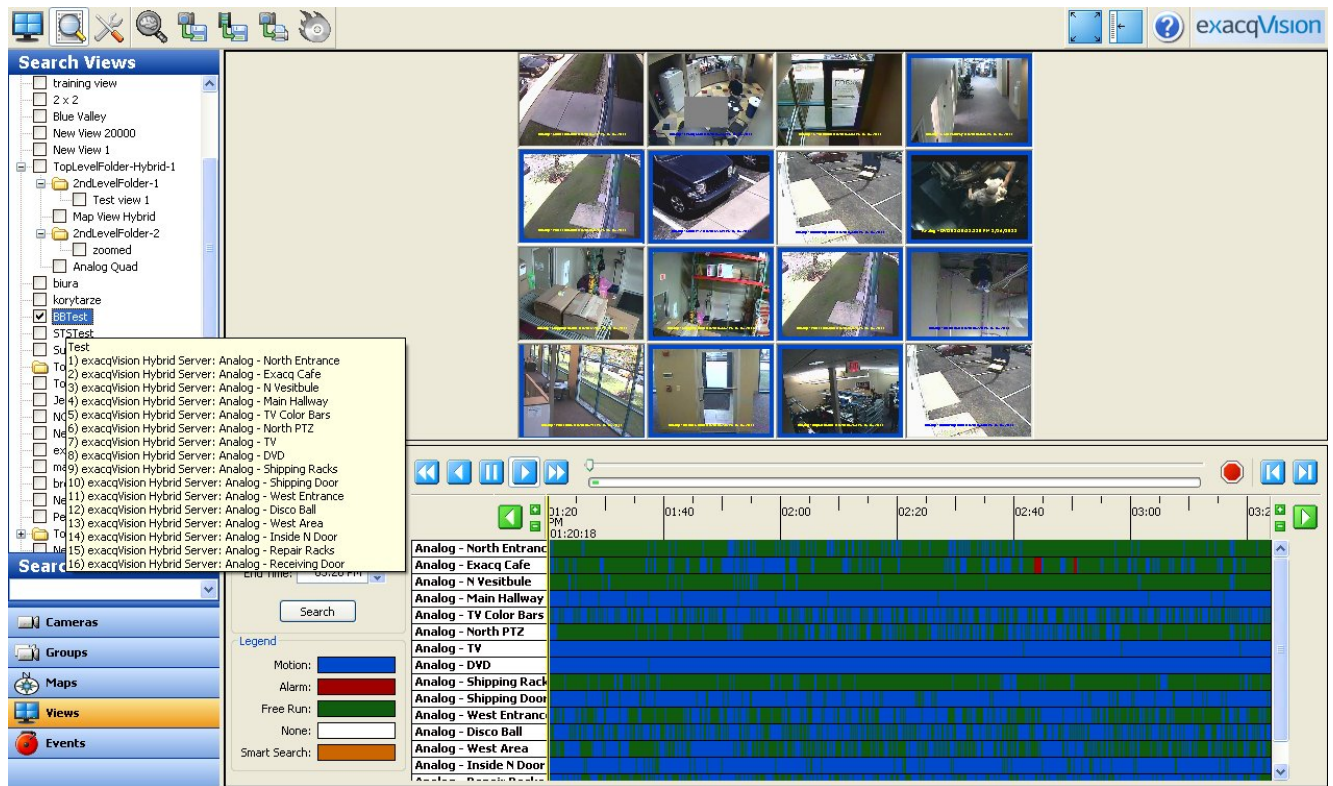


Select Views from the Navigation Pane, and then select the View you want to search by clicking the appropriate checkbox. Select the date and time you would like to search by using the calendar and Start Time field, and then click the Search button. All of the cameras in the View are then displayed in the Video Playback window.



## Searching Events

**NOTE:** Search Events is not available in exacqVision Start.

If you want to narrow your search to a specific event previously configured in Event Linking instead of all recorded video, select Events from the Navigation Pane. You can search for the event to locate associated video or audio. To do this, click the Events button on the Navigation pane and the Event you want to search. Then Select the desired date and time and click the Search button.

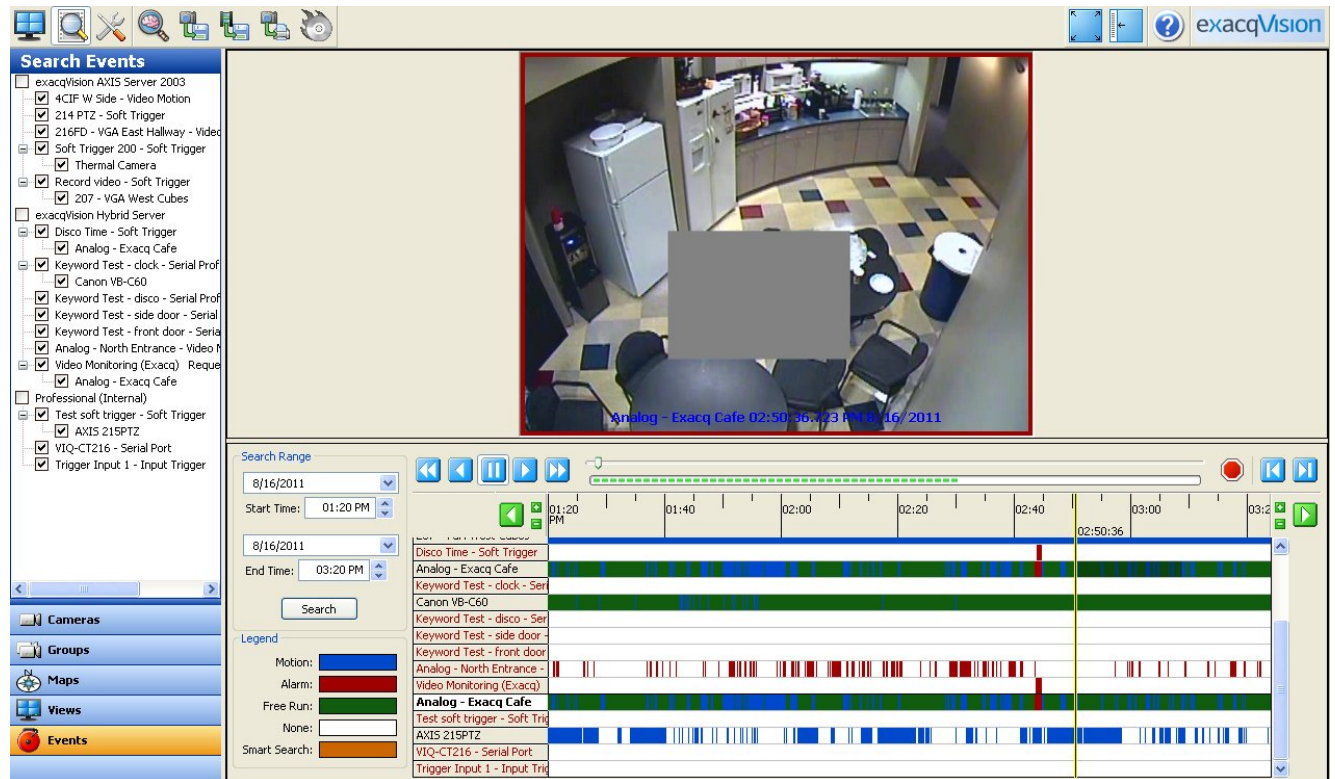

The red bars indicate instances when the event triggered video or audio recording. To search for the video associated with this particular event, click the Cameras button in the Navigation Pane, and then conduct a search on the camera associated with that event.

## Exporting Files

After you have downloaded a video segment, you can use the Export buttons to save a picture or video, print a picture, or burn saved files to a CD or DVD (including DVD+R and DVD+RW). Left to right, the icons are Save Picture, Save Video, Print Picture, and Burn Saved Files to CD or DVD:




**NOTE:** You can also copy a picture to a clip board and paste it into a document. When you find the image you need, right-click anywhere in the Video Playback window and select Copy Image to Clipboard. The image will be stored, and you can paste it into another document.

To export video from up to 16 cameras (or a single camera on exacqVision Start), complete the following steps:

1. Pause (or scrub to the location on the timeline) where you want your video to clip to begin.
2. Right-click and select Mark Export Start from the pop-up menu.
3. Click Play (or scrub) until you see the end point of the video clip and then pause the video again.
4. Right-click and select Mark Export Stop from the pop-up menu.
5. Right-click and select Export Video from the pop-up menu.
6. In the Export Video window, select a file name and location.
7. Select a file type (as described below).
8. Click Save.



The system defaults to a standalone \*.exe file, which plays on its own and can be run by a Windows user who does not have access to an exacqVision Client. Alternatively, you can save the clip as a \*.ps, \*.avi, or \*.mov file if you are emailing it to another exacqVision Client user; this will reduce the size of the clip. If you are running the client on a Linux or Mac operating system, you should save the clip as a \*.ps file unless you are emailing it to a Windows user.

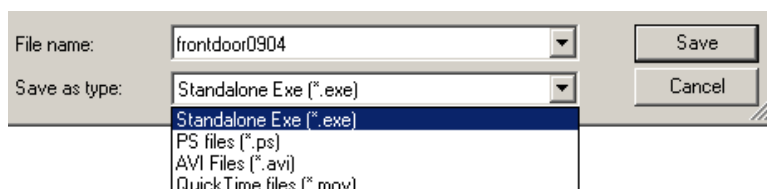

**NOTE:** See the chart on the following page for information about file compatibility on each operating system. Also, an \*.exe file can be created using any operating system even though it can be viewed using only Windows.

## Quicktime and AVI File Export Players

	Windows Players			Linux Players		Mac Players
Video format	WMP*	Quicktime Player	VLC	MPlayer	VLC	Quicktime Player
AVI MJPEG	?	with DivX decoder	?	?	?	with DivX decoder
AVI MPEG4	with DivX	with DivX decoder	?	?	?	with DivX decoder
AVI MPEG4 with ASP	with DivX	with DivX decoder	?	?	?	with DivX decoder
AVI H.264	with DivX	with DivX decoder	?	?	?	with DivX decoder
Quicktime MJPEG		?	?	?	?	?
Quicktime MPEG4		?	?	?	?	?
Quicktime MPEG4 with ASP		with 3ivx MPEG4 decoder	?	?	?	with 3ivx MPEG4 decoder
Quicktime H.264		?	?	?	?	?

\*WMP = Windows Media Player

Download players at the following URLs:

- **Windows Media Player**  
<http://www.microsoft.com/windows/windowsmedia/default.msp>
- **Quicktime Player**  
<http://www.apple.com/quicktime/download/>
- **VLC Player**  
<http://www.videolan.org/vlc>
- **MPlayer**  
<http://www.mplayerhq.hu/design7/dload.html>


Download codecs at the following URLs:

- **3ivx MPEG4 decoder**  
<http://store.3ivx.com/3ivxStore/?features=dec&platform=win&license=plus&Go=Go>
- **DivX decoder**  
<http://www.divx.com/en/downloads>
- **Quicktime codec resources**  
<http://www.apple.com/quicktime/resources/components.html?os=Windows&ctype=696d6463&csubtype=48323634>
- **Perian Codec for Quicktime**  
<http://www.perian.org>


To save data to a CD or DVD, insert a writable CD or DVD and click the “Save to a CD or DVD” button at the top of the toolbar to display the Burn Disc window.



**NOTE:** If you do not have a CD burner, the Save to a CD or DVD button will not be enabled. If you are running the client on a Mac, you can drag and drop the files into your Burn Folder to create links to these files and click Burn.

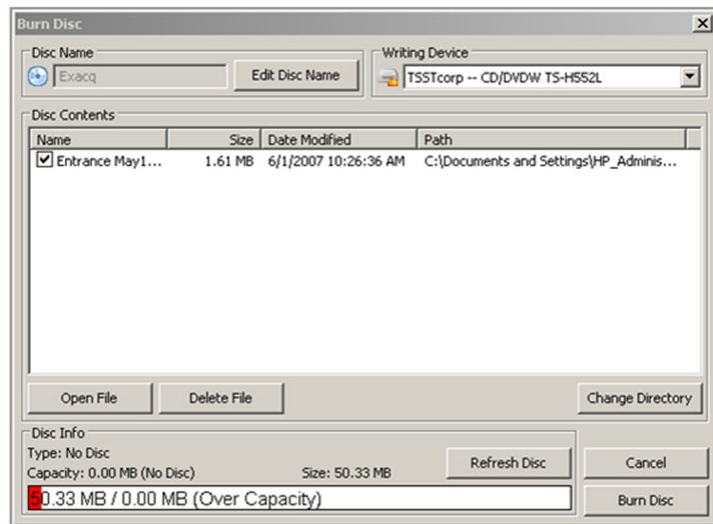

1. You can change the name of the disc by clicking the Edit Disc Name button.
2. The Disc Contents list displays all of the video clips in your directory. Select the clips you want to burn.
3. To review a video clip, select the file and click Open File.
4. The Disc Info box displays important information about your disc capacity. The first number listed (MB) is the amount of space required to burn all of the video clips you have selected. The next number represents the capacity of the disc you have inserted; if you forget to insert a disc, this number is zero. If you insert or replace a disc, click Refresh Disc to update the numbers.
5. Click Burn Disc to open the Disc Burning Progress window. Review the Burn Options before proceeding.
6. Click the Burn button to start the writing process.

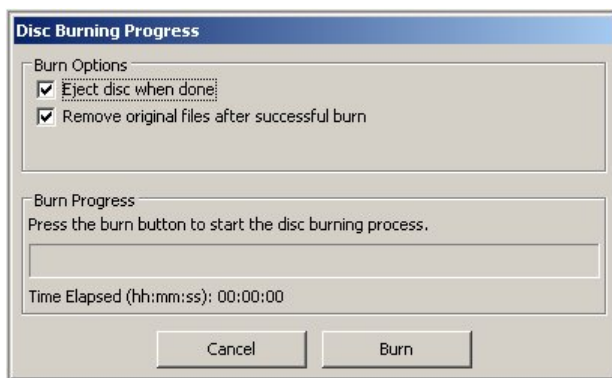



Exacq Technologies is committed to providing exceptional technical and engineering support. When you need help with your exacqVision product, please be ready with a complete description of the problem, including any error messages or instructions on re-creating the error.

Technical support can be contacted as follows:

**Rhino Technology**

9 Hannabus Place

McGraths Hill NSW 2756 Australia

Phone: +61 2 4577 4708

Fax: +61 2 4577 4885

e-mail: [support@rhinoco.com.au](mailto:support@rhinoco.com.au)

Web: <http://www.rhinoco.com.au>






## Regulatory Notice

### Federal Communications Commission (FCC) Radio Frequency Interference Statement


The Exacq Product contains incidental radio frequency-generating circuitry and, if not installed and used properly, may cause interference to radio and television reception. This equipment has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of the Federal Communications Commission (FCC) Rules. These limits are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area may cause interference to radio and television reception, in which case users will be required to correct the interference at their own expense. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, users are encouraged to try to correct the interference by one or more of the following measures: Reorient the television or radio receiving antenna, and/or relocate the Exacq product and the radio or TV with respect to each other. If necessary, users should consult the manufacturer or an experienced radio/television technician for additional suggestions. Users may find helpful the following booklet prepared by the Federal Communications Commission: "How to Identify and Resolve Radio-TV Interference Problems," which is available from the Government Printing Office, Washington DC, 20402 (stock #004-000-00345-4).

### CE Notice

Marking by the  symbol indicates compliance of this device to the EMC directive of the European Community. Such marking is indicative that this device meets or exceeds the following technical standards:

- EN55022: Conducted Emissions
- EN55022: Radiated Emissions
- 61000-4-2 Electrostatic Discharge
- 61000-4-3 Radiated Immunity
- 61000-4-4 Electrical Fast Transients
- 61000-4-5 Surge Immunity
- 61000-4-6 Conducted Immunity

Electromagnetic compatibility (EMC) requires the use of shielded cable and ferrite cores for all wiring added by the user. Good shielding techniques should be applied in the user's system.

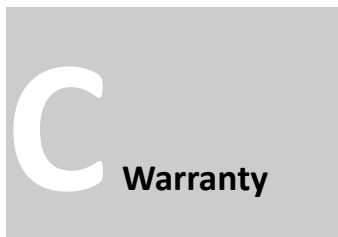

## LIMITED WARRANTY AND LIMITATION OF LIABILITY

**LIMITED WARRANTY.** Exacq hardware products are warranted against defects in materials and workmanship for three (3) years from the date Exacq ships the products to the Customer. All software products are licensed to the Customer under the terms of the appropriate Exacq Technologies license. For a period of ninety (90) days from the Delivery Date, Exacq software products (when properly installed on Exacq hardware products) (a) will perform substantially in accordance with the accompanying written materials, and (b) the medium on which the software product is recorded will be free from defects in materials and workmanship under normal use and service. Any replacement of a licensed software product will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer. Customer must obtain a Return Material Authorization number from Exacq before returning any products under warranty to Exacq. Customer shall pay expenses for shipment of repaired or replacement products to and from Exacq. After examining and testing a returned product, if Exacq concludes that a returned product is not defective, Customer will be notified, the product returned at Customer's expense, and a charge made for examination and testing. This Limited Warranty is void if products or parts are damaged by (a) improper handling, normal wear and tear, accidents, theft, vandalism, fire, water or other peril; (b) conditions outside the specifications for operation of the products, including but not limited to, electrical power, temperature humidity, dust or lightning; (c) Customer supplied third party software not intended for use with the applicable Exacq software; (d) utilization of an improper hardware or software key; (e) or improper use, negligence, repair, alteration or maintenance of the product not performed by Exacq Technologies, Inc. or its authorized service centers or authorized technicians.

**CUSTOMER REMEDIES.** Exacq's sole obligation (and Customer's sole remedy) with respect to the foregoing Limited Warranty shall be to, at its option, return the fees paid or repair/replace any defective products, provided that Exacq receives written notice of such defects during the applicable warranty period. Customer may not bring an action to enforce its remedies under the foregoing Limited Warranty more than one (1) year after the accrual of such cause of action.

**RETURN/CANCELLATION POLICY.** Customer may return unwanted products within thirty (30) days of the Delivery Date. Customer shall pay a twenty percent (20%) restocking charge on any unwanted products returned to Exacq. No returns will be accepted after the thirty (30) day period has expired. Where special equipment or services are involved, Customer shall be responsible for all related work in progress; however, Exacq shall take responsible steps to mitigate damages immediately upon receipt of a written cancellation notice from Customer. A Return Material Authorization number must be obtained from Exacq for return of any products. Exacq may terminate any order if any representations made by Customer to EXACQ are false or misleading.

**NO OTHER WARRANTIES.** EXCEPT AS EXPRESSLY SET FORTH ABOVE, THE PRODUCTS ARE PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, AND NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED ARE MADE WITH RESPECT TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE OR NON-INFRINGEMENT OR ANY OTHER WARRANTIES THAT MAY ARISE FROM USAGE OF TRADE OR COURSE OF DEALING. EXACQ DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OF OR THE RESULTS OF THE USE OF THE PRODUCTS IN TERMS OF CORRECTNESS ACCURACY RELIABILITY OR OTHERWISE AND DOES NOT WARRANT THAT THE OPERATION OF THE PRODUCTS WILL BE UNINTERRUPTED OR ERROR FREE. EXACQ EXPRESSLY DISCLAIMS ANY WARRANTIES NOT STATED HEREIN.

**NO LIABILITY FOR CONSEQUENTIAL DAMAGES.** The entire liability of Exacq and its licensors, distributors and suppliers (including its and their directors, officers, employees and agents) is set forth above. To the maximum extent permitted by applicable law, in no event shall Exacq and its licensors, distributors and suppliers (including its and their directors, officers, employees and agents) be liable for any damages including but not limited to any special, direct, indirect, incidental, exemplary, or consequential damages, expenses, lost profits, lost savings, business interruption, lost business information, or any other damages arising out of the use or inability to use the products, even if Exacq or its licensors, distributors, and suppliers has been advised of the possibility of such damages. Customer acknowledges that the applicable purchase price or license fee for the products reflects this allocation of risk. Because some states/jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitation may not apply. If the foregoing limitation of liability is not enforceable because an Exacq product sold or licensed to Customer is determined by a court of competent jurisdiction in a final non appeal able judgment to be defective and to have directly caused bodily injury death or property damage in no event shall Exacq's liability for property damage exceed the greater of \$50,000 or fees paid for the specific product that caused such damage

**WARNING:** IN ANY APPLICATION THE RELIABILITY OF OPERATION OF THE PRODUCTS CAN BE IMPAIRED BY ADVERSE FACTORS, INCLUDING BUT NOT LIMITED TO FLUCTUATIONS IN ELECTRICAL POWER SUPPLY, COMPUTER HARDWARE MALFUNCTIONS, COMPUTER OPERATING SYSTEM SOFTWARE FITNESS, FITNESS OF COMPILERS AND DEVELOPMENT SOFTWARE USED TO DEVELOP AN APPLICATION, INSTALLATION ERRORS, SOFTWARE AND HARDWARE COMPATIBILITY PROBLEMS, MALFUNCTIONS OR FAILURES OF ELECTRONIC MONITORING OR CONTROL DEVICES, TRANSIENT FAILURES OF ELECTRONIC SYSTEMS (HARDWARE AND/OR SOFTWARE), UNANTICIPATED USES OR MISUSES, OR ERRORS ON THE PART OF THE USER OR APPLICATIONS DESIGNER (ADVERSE FACTORS SUCH AS THESE ARE HEREAFTER COLLECTIVELY TERMED "SYSTEM FAILURES"). ANY APPLICATION WHERE A SYSTEM FAILURE WOULD CREATE A RISK OF HARM TO PROPERTY OR PERSONS (INCLUDING THE RISK OF BODILY INJURY AND DEATH) SHOULD NOT BE RELIANT SOLELY UPON ONE FORM OF ELECTRONIC SYSTEM DUE TO THE RISK OF SYSTEM FAILURE. TO AVOID DAMAGE, INJURY, OR DEATH, THE USER OR APPLICATION DESIGNER MUST TAKE REASONABLY PRUDENT STEPS TO PROTECT AGAINST SYSTEM FAILURES, INCLUDING BUT NOT LIMITED TO BACK-UP OR SHUT DOWN MECHANISMS. BECAUSE EACH END-USER SYSTEM IS CUSTOMIZED AND DIFFERS FROM EXACQ'S TESTING PLATFORMS AND BECAUSE A USER OR APPLICATION DESIGNER MAY USE EXACQ PRODUCTS IN COMBINATION WITH OTHER PRODUCTS IN A MANNER NOT EVALUATED OR CONTEMPLATED BY EXACQ THE USER OR APPLICATION DESIGNER IS ULTIMATELY RESPONSIBLE FOR VERIFYING AND VALIDATING THE SUITABILITY OF EXACQ PRODUCTS WHENEVER EXACQ PRODUCTS ARE INCORPORATED IN A SYSTEM OR APPLICATION, INCLUDING, WITHOUT LIMITATION, THE APPROPRIATE DESIGN, PROCESS AND SAFETY LEVEL OF SUCH SYSTEM OR APPLICATION.



## Manual Updates

Following are manual updates since the most recent major revision of the exacqVision Client software:

### Release 4.6

- Initial release.

### Release 4.7

- Updated Search Mode Overview chapter to reflect graphical and functional changes.
- Added the ability to connect to and disconnect from multiple systems simultaneously to My Systems section.
- Added support for fisheye lenses to PTZ Configuration and PTZ Control sections.
- Added Always Prompt for Credentials to Add System section.
- Added Restore Client on User Attention Request feature to Client Setup section.
- Clarified procedure for video clip export.
- Clarified that Audio Input Setup, Trigger Input Setup, Alarm Output Setup, and preset tours are also applicable to IP cameras.
- Clarified the difference between views and groups and revised Creating Views section accordingly.
- Clarified the procedures in the Camera Setup and Motion Masks, Video Masks, and Motion Windows sections.
- Clarified the procedures in the Users Setup section.
- Revised System Setup section for clarity and accuracy.
- Added information about keyboard shortcuts and auto-adjustment in Layout Panel section.
- Additional minor editing and clarification modifications.