

CEP7-DNCT DeviceNet™ Configuration Terminal



User Manual



Important User Information

Because of the variety of uses for the products described in this publication, those responsible for the application and use of this control equipment must satisfy themselves that all necessary steps have been taken to assure that each application and use meets all performance and safety requirements, including any applicable laws, regulations, codes and standards.

The illustrations, charts, sample programs and layout examples shown in this guide are intended solely for purposes of example. Since there are many variables and requirements associated with any particular installation, Rockwell Automation does not assume responsibility or liability (to include intellectual property liability) for actual use based upon the examples shown in this publication.

Rockwell Automation publication SGI-1.1, Safety Guidelines for the Application, Installation and Maintenance of Solid-State Control (available from your local Sprecher + Schuh distributor), describes some important differences between solid-state equipment and electromechanical devices that should be taken into consideration when applying products such as those described in this publication.

Reproduction of the contents of this copyrighted publication, in whole or part, without written permission of Rockwell Automation, is prohibited.

Throughout this manual we use notes to make you aware of safety considerations:

ATTENTION



Identifies information about practices or circumstances that can lead to personal injury or death, property damage or economic loss

Attention statements help you to:

- identify a hazard
- avoid a hazard
- recognize the consequences

IMPORTANT

Identifies information that is critical for successful application and understanding of the product.

European Communities (EC) Directive Compliance

If this product has the CE mark, it is approved for installation within the European Union and EEA regions. It has been designed and tested to meet the following directives.

- EMC Directive
- This product is tested per EN61000-6-4:2001 and EN61000-6-2:2005.

Sprecher + Schuh is a trademark of Rockwell Automation. DeviceNet™ is a trademark of the Open DeviceNet™ Vendors Association (ODVA). All other trademarks and/or registered trademarks are the

property of their respective owners.

Manual Objectives

The purpose of this manual is to provide you with the information necessary to apply the DeviceNet™ Configuration Terminal. Described in this manual are methods for installing, configuring, and troubleshooting the DeviceNet™ Configuration Terminal.

IMPORTANT

Read this manual in its entirety before installing, operating, servicing, or initializing the DeviceNet™ Configuration Terminal.

Who Should Use This Manual

This manual is intended for qualified personnel responsible for setting up and servicing DeviceNet™ devices. You must have previous experience with and a basic understanding of communications terminology, configuration procedures, required equipment, and safety precautions.

You should understand DeviceNet™ network operations, including how devices operate on the network.

Vocabulary

In this manual we refer to the:

- CEP7 DeviceNet™ Configuration Terminal as CEP7-DNCT, DNCT, terminal, Configuration Terminal, or HIM (Human Interface Module)
- Programmable Logic Controller as a Programmable Controller, PLC controller, SLC controller, ControlLogix Controller, or PLC
- DeviceNet™ as DNet or DNET

Reference Manuals

DeviceNet™ Media Design and Installation Guide

- Publication DNET-UM072_-EN-P

IMPORTANT

Read the DeviceNet™ Media Design and Installation Guide (Publication DNET-UM072_-EN-P) in its entirety before planning and installing a DeviceNet™ system. If the network is not installed according to this document, unexpected operation and intermittent failures may occur.

If this manual is not available, please contact either the local Rockwell Automation distributor or Sales Office and request a copy. Copies of this and all other reference publications may also be viewed electronically and downloaded from the Automation Bookstore at <http://www.theautomationbookstore.com>.

Notes:

Chapter 1 — Product Overview	Product Overview	1-1
	Bill of Material	1-1
	Accessories	1-1
Chapter 2 — Installation and Wiring	Installation and Wiring	2-1
	CEP7-CB1 Physical Connections	2-1
	CEP7-CM1 Physical Connections	2-1
	CEP7-DNCT-BZ1 Physical Connections	2-2
	Powering the CEP7-DNCT	2-2
Chapter 3 — Physical Features 3-1	Physical Features	3-1
	Communication Port	3-1
	Key Descriptions	3-2
	Shifted Key Descriptions	3-2
Chapter 4 — Quick Start	Powerup	4-1
	Terminal Setup	4-2
	Network Who Screen	4-2
	Device Choices Menu	4-2
	Parameter Monitoring and Editing	4-3
	DeviceNet™ Configuration Terminal Setup Menus	4-4
Chapter 5 — Device Choices Menu	Device Choices Menu	5-1
	Version Screen	5-1
Chapter 6 — Parameter Choices Menu	Parameter Choices Menu	6-1
	Groups Screen	6-1
	Num List Selection	6-2
	Parameter Edit Screens	6-2
	Numeric Parameters	6-2
	Accessing a Different Parameter	6-3
	Changing a Parameter Value	6-3
	Enumerated Parameters	6-4
	Floating Point Parameters	6-5
	Search for Changed Parameters	6-6
Chapter 7 — Copy Cat Menu	Copy Cat	7-1
	Copy Cat Uploading	7-2
	Copy Cat Downloading	7-3
	Copy Cat Downloading and Product Revisions	7-5
	Copy Cat Downloading and Product Current Ratings	7-6
	Deleting Copy Cat Files	7-7
	Copy Cat Memory	7-7

Chapter 8 — Tools Menu	Tools Menu	8-1
	Node Commissioning	8-1
	Class Instance Attribute Editor	8-1
	Graph Setup Screens	8-2
	Graph View Screen	8-3
Chapter 9 — Advanced Functions Menu	Advanced Functions Menu	9-1
Chapter 10 — I/O Message Monitoring	I/O Message Monitoring	10-1
Chapter 11 — DeviceLogix™ Functionality	DeviceLogix™ Functionality	11-1
	DeviceLogix™ Choices Menu	11-1
	DeviceLogix™ Monitor	11-1
	Boolean Gates: AND, OR, XOR, NAND, NOR, NXOR and NOT	11-2
	Bistable Latches: RS Latch and SR Latch	11-2
	Counters: Up Counter and Up/Down Counter	11-2
	Timers: On Delay, Off Delay and Pulse Timer	11-2
	Discrete Output Points (DOPs):	11-3
	Produced Network Bits (PNBs):	11-3
	DeviceLogix™ Editor	11-3
	Creating a New Function Block	11-4
	Assigning Source Bits to Function Block Inputs	11-5
	Assigning Source Bits for Discrete Outputs Points (DOPs)	11-6
	Assigning Source Bits for Produced Network Bits (PNBs)	11-8
	DeviceLogix™ Delete Function	11-9
	DeviceLogix™ Enable/Disable Function	11-9
	Forcing Inputs and Outputs	11-9
Chapter 12 — Discrete I/O Status	Discrete I/O Status	12-1
Chapter 13 — Zone Interlock Protocol (ZIP)	Zone Interlock Protocol (ZIP)	13-1
	ZIP Consumed	13-1
	Mapping Consumed ZIP Data	13-2
	ZIP Produced Data	13-5
	ZIP Data Table Monitor	13-5
Chapter 14 — DeviceNet™ Scanner Menu	DeviceNet™ Scanner Menu	14-1
	Scanner Setup	14-1
	AutoScan Function	14-2
	ScanList Screen	14-2
	Node Activation Screen	14-2

Chapter 15 — Terminal Choices Menu	Terminal Choices Menu.....	15-1
	Version Menu	15-1
	Offline Connection Set	15-1
	Offline Change Address Screen.....	15-2
	DeviceNet™ Error Log.....	15-2
	Network Statistics Screen	15-3
Chapter 16 — Terminal Setup Menu	Terminal Setup Menu	16-1
	Communication Setup Screen (HIM Comm)	16-1
	Password Menu.....	16-2
	Password Setup (Primary)	16-2
	Password Setup (Secondary)	16-3
	Entering a Password	16-3
	Resetting Forgotten Passwords.....	16-4
	Auto Display	16-4
	AutoDisplay Setup.....	16-4
	AutoDisplay Test	16-5
	Programmable User Function Key Setup	16-5
	Function Key Setup Screen.....	16-6
	LCD Contrast.....	16-6
Chapter 17 — Copy and Paste Feature	Copy and Paste Feature.....	17-1
Chapter 18 — Menu Help Feature	Menu Help Feature	18-1
Chapter 19 — Specifications	Specifications 19-1	
Appendix A — DeviceNet™ Objects	Identity Object	A-1
	CLASS CODE 0x0001	A-1
	Message Router.....	A-2
	CLASS CODE 0x0002	A-2
	DeviceNet™ Object.....	A-2
	CLASS CODE 0x0003	A-2
	Connection Object	A-3
CLASS CODE 0x0005	A-3	

Product Overview

Product Overview

The CEP7-DNCT product is a handheld device that can be used to commission, configure, program, and monitor other devices on a DeviceNet™ network. In addition, the CEP7-DNCT can be used to upload, store, and later download complete device configurations for DeviceNet™ devices via the network. The CEP7-DNCT also has the capability to present DeviceNet™ physical layer diagnostics and network bandwidth statistics to the user.

Bill of Material

The CEP7-DNCT product package includes the following items:

Item	Description	Quantity
CEP7-DNCT	DeviceNet™ Configuration Terminal	1
CEP7-CB1	1 m DNCT Cable with color-coded bare leads	1
CEP7-QR002_-EN-P	DeviceNet™ Configuration Terminal Quick Reference	1

Accessories

Description	Catalog No.
1 m DNCT Cable with color-coded bare lead	CEP7-CB1
1 m DNCT Cable with microconnector (male)	CEP7-CM1
Door mount bezel kit	CEP7-DNCT-BZ1

ATTENTION



The CEP7 DeviceNet™ Configuration Terminal should only be used on a DeviceNet™ network.

Notes:

Installation and Wiring

Installation and Wiring

The DNCT ships complete with a 1 m cable (CEP7-CB1) for connection to a DeviceNet™ network. This cable has a plug connection to the terminal on one end, and color coded bare leads on the other end. Alternately, a 1 m cable (CEP7-CM1) can be ordered that has a plug connection to the terminal on one end, and a DeviceNet™ male micro style connector on the other end. A bezel mounting kit (CEP7-DNCT-BZ1) is available for mounting the terminal to a panel door.

CEP7-CB1 Physical Connections


The CEP7-CB1 cable that ships with the Configuration Terminal has a plug connection to the terminal on one end, and color coded bare leads on the other end. The cable's bare leads are wired to a DeviceNet™ connector according to the following table:

Signal	Function	Color
V-	Common	Black
Can_L	Signal Low	Blue
Drain	Shield	Non-insulated
Can_H	Signal High	White
V+	Power Supply	Red

CEP7-CM1 Physical Connections

The optional Cat. No.CEP7-CM1 has a plug connection to the terminal on one end and a DeviceNet™ male micro-style connector on the other end. The cable's micro connector pin-out is shown in Figure 2.1

Figure 2.1 Cat. No. CEP7-CM1 Pinout

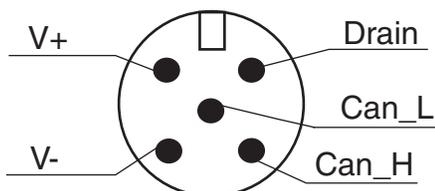

CEP7-DNCT-BZ1 Physical Connections

ATTENTION



When mounting in a door or panel-mounted bezel kit, only the Cat. No. CEP7-DNCT-BZ1 DeviceNet™ Bezel Kit should be used with the Bulletin CEP7-DNCT DeviceNet™ Configuration Terminal.

The optional Cat. No. CEP7-DNCT-BZ1 connects to the DeviceNet™ network via an attached cable that has color coded bare leads. The cable's bare leads are wired to a DeviceNet™ connector according to the following table:

Signal	Function	Color
V-	Common	Black
Can_L	Signal Low	Blue
Drain	Shield	Non-insulated
Can_H	Signal High	White
V+	Power Supply	Red

Powering the CEP7-DNCT

The DNCT must be powered from an external 24V DC source through the communication cable. The 24V DC connections should be made to the V+ and V- pins/wires in the above cable pinout/wire definitions.

ATTENTION




Before physically connecting the DNCT to a target device, verify that the external power supply has adequate capacity to power all devices on the network.

Physical Features

Physical Features

Figure 3.1 Cat. No. CEP7-DNCT Physical Features

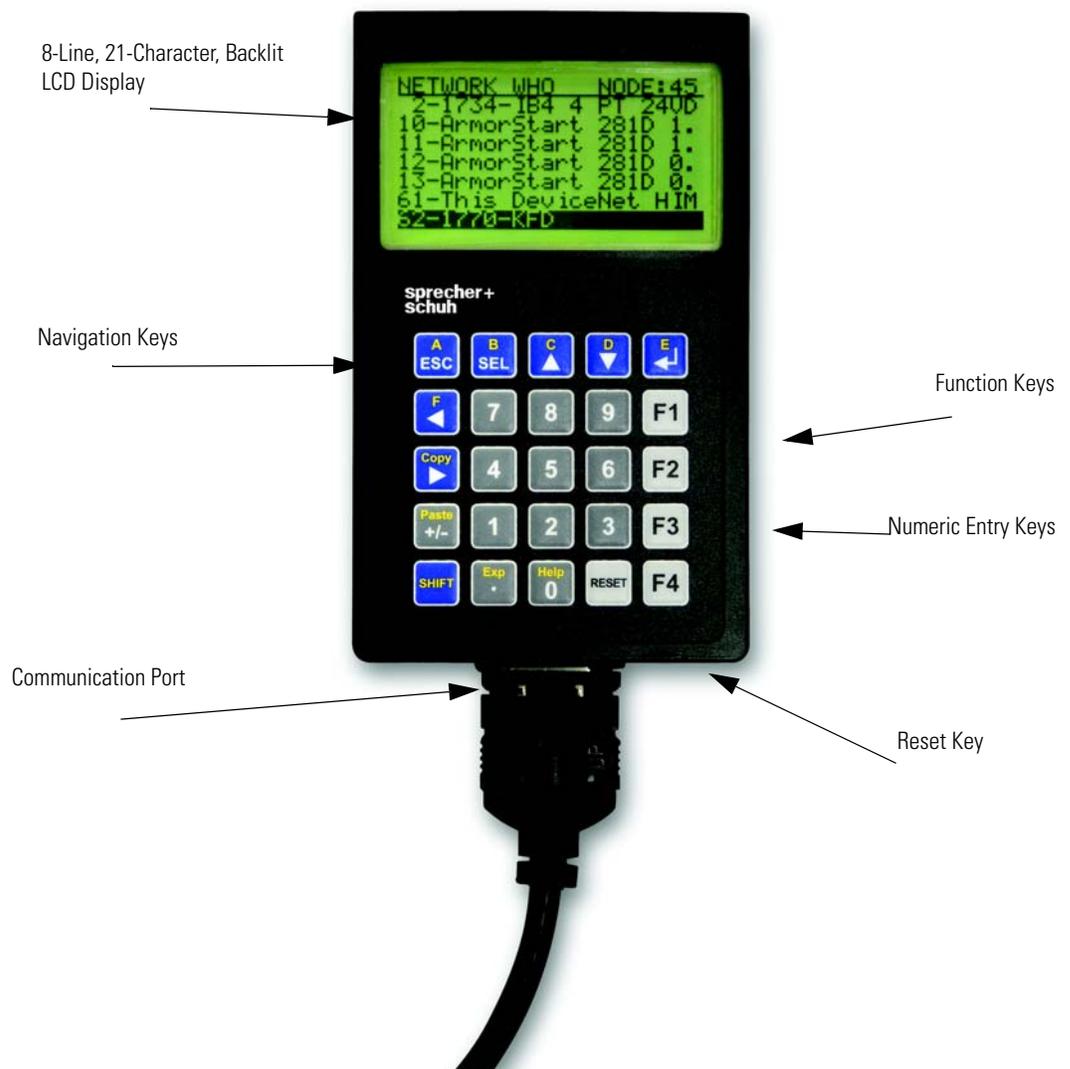

Communication Port

The communication port is used to connect the DNCT to a DeviceNet™ network through use of a communication cable or bezel mount kit (Cat. No. CEP7-DNCT-BZ1). Additionally, 24V DC power is provided to the DNCT at the communication port.

Key Descriptions

	Escape Key. Exit a menu or cancel a change.
	Select key. Select a value, digit, or screen choice.
	Increment key. Scroll through options, increase a value, or toggle a bit.
	Decrement key. Scroll through options, decrease a value, or toggle a bit.
	Enter key. Enter a menu, enter a mode, or enter a value.
 	Scroll left or right keys. Scroll left or right through a value.
	Shift key. Small values (yellow text) on top of keys are entered when pressed after the shift key.
 ... 	Used to enter numbers.
	Used to enter a decimal place for a number.
	Used to negate a numeric value. Used to add a sign character when editing a value.
   	Programmable function keys. See Chapter 16, Function Key Setup Screen.
	Programmable Reset key. See Chapter 16, Function Key Setup Screen.

Shifted Key Descriptions


The following table describes the alternate functionality of each key when it is pressed after the shift key.

Key Combination	
	The letter A. Used to enter values in hexadecimal.
	The letter B. Used to enter values in hexadecimal.
	The letter C. Used to enter values in hexadecimal.
	The letter D. Used to enter values in hexadecimal.
	The letter E. Used to enter values in hexadecimal.
	The letter F. Used to enter values in hexadecimal.
	Copy function. Used to copy Class, Instance, and/or Attribute data to the clipboard. Available on screens displaying a small "C" in the upper right corner.
	Exponential function. Used to enter values in exponential notation.
	Paste function. Used to paste Class, Instance, and/or Attribute data from the clipboard. Available on screens displaying a small "P" in the upper right corner.
	Help function. Invoke help information for the current screen.

Quick Start

Powerup

The DeviceNet™ Configuration Terminal is shipped so that when it is placed on the network for the first time, it will automatically set its baud rate to that of the traffic on the network, and then assign itself an unused network address. On power up, the following screen is displayed:

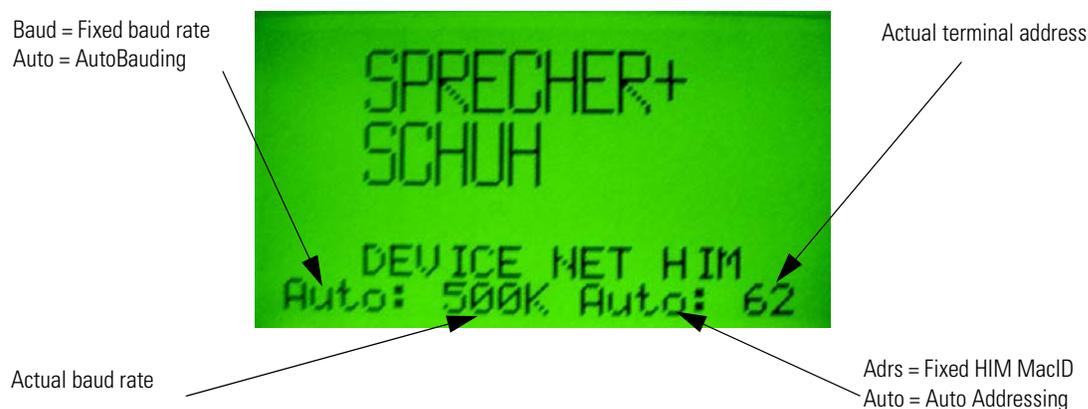

Note that there is a 10-second powerup delay programmed at the factory. The above screen will appear for at least 10 seconds on initial powerup. The powerup delay can be modified in the Terminal Setup screen described in the following section. Once the baud rate is determined and a network address has been set, the terminal will display the Network Who screen, which displays a list of all devices on the network.

IMPORTANT

If the terminal fails to enter the Network Who screen after approximately 20 seconds, it is because it could not determine the network baud rate due to lack of traffic on the network. Pressing the **ESC** key will allow the user to enter the Terminal Setup screen so that a fixed baud rate and network address can be set for the terminal.

Note: To go directly to the Terminal Setup screen, press and hold the **ESC** key during powerup.

Terminal Setup

Enable = AutoBaud enabled
Disable = Use fixed Baud Rate

Fixed Baud Rate setting

Powerup delay in seconds

Enable = Auto addressing on power up
Disable = Use fixed network address

Fixed Address setting OR the starting address for auto address determination

```

HIM Communication
-----
AutoBaud: enable
BaudRate: 500K
AutoAddress: Enable
Address: 62
PowerUP Delay: 10
    
```

To scroll through the items on the screen, press the **SEL** key. To change the value of a selected item, press the **Increment** or **Decrement** key. To commit the new value for use, press the **Enter** (return arrow) key. To exit this screen, press the **ESC** key.

Network Who Screen

The terminal searches for all devices on the network and reports the devices it has found on the Network Who screen. Use the **Increment** or **Decrement** key to scroll through devices. Press **Enter** (return arrow) to invoke the Device Choices menu.

Device address

Searching at this address

Currently selected device

"-" = Device is not faulted
"~" = Device is faulted

```

NETWORK WHO  NODE:63
0-1756-DNB/A DeviceN
1-ArmorStart 281D 0.
2-ES PLUS (9-5000H)
62-This DeviceNet HIM
    
```

Device Choices Menu

This menu allows the user to choose what operation is to be performed for the selected device. The terminal only displays choices that are appropriate for the selected device. The **Increment** and **Decrement** keys allow the operator to scroll through the selections. The **Enter** key will advance to the selected operation.

Currently selected operation

```

Version  Params
CopyCat  Tools
Advanced
    
```

```

Version  CopyCat
Tools    Scanner
    
```

Version: Displays Version information for the selected device.

Params: Provides access to configuration and status parameters for the selected device. Allows the operator to search for parameters that are not at factory defaults.

Copy Cat: Upload and store complete device configurations, including DeviceLogix™ programs to the programming terminal's memory. Download stored device configurations from the programming terminal memory to the selected device.


Tools: Provides access to Node Commissioning functions, the Class Instance Attribute editor, and the real time graphing function.

Advanced: Provides access to the DeviceLogix™ editor, DeviceNet™ IO message timing information, ZIP configuration, and local input and output status display.

Scanner: If the selected device is a DeviceNet™ scanner, provides access to simple scanner configuration values and access to the scan list.

Parameter Monitoring and Editing

Parameters can be accessed as either groups or as a numbered list of all parameters. The Parameter Screen displays all information for a single parameter. From the Parameter Screen, parameter values can be monitored or edited. Scrolling through a parameter list is accomplished by pressing the **Increment** or **Decrement** keys from the Parameter Screen. Parameters can also be accessed by entering a parameter number with the **numeric** keys while in the Parameter Screen. The parameter screen has the following format:

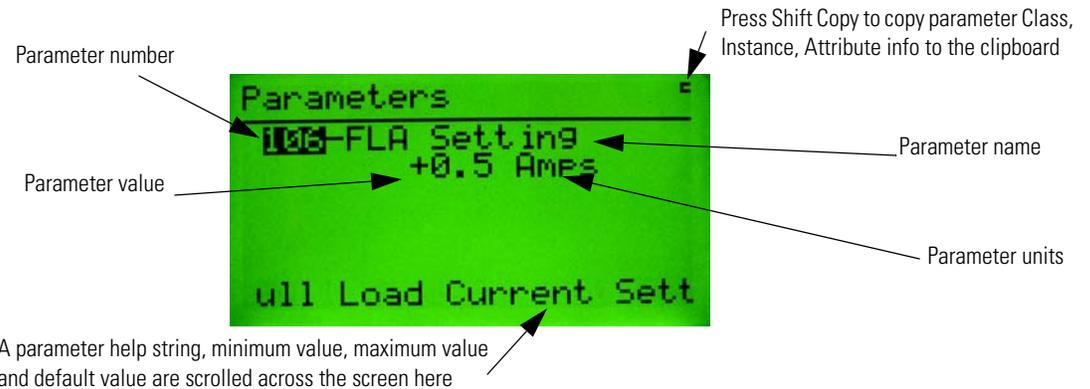

Parameter values are continuously updated.

Change a parameter value by first pressing the **SEL** key and then modifying the selected value.

1) Press the **SEL** key to select the value

2) The Increment and Decrement keys increment or decrement the value when it is selected. An edit box will appear when a key is pressed.

OR

Enter a number from the numeric keypad. An edit box will appear when a key is pressed.




Pressing the **Enter** key will write the new value to the selected device. When a parameter value is selected, pressing the **ESC** key will deselect the parameter value and allow movement within the parameter list or group.

Bit-enumerated parameters are displayed and modified as follows:

1) Press the **SEL** key to select a bit to change. The selected bit name is displayed here

Press < (scroll left) or > (scroll right) to select the next bit

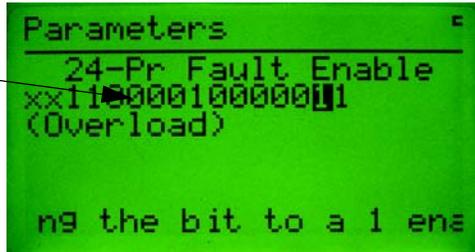

2) Press the **Increment** (or 0) or **Decrement** (or 1) key or to toggle the bit value

Pressing the **Enter** key will write the new value to the selected device. When a parameter value is selected, pressing the **ESC** key will deselect the parameter value and allow movement within the parameter list or group. Pressing the **ESC** key will delete changes and revert to the previous settings for that parameter.

DeviceNet™ Configuration Terminal Setup Menus

The CEP7 DeviceNet™ Configuration Terminal often refers to itself as a HIM (Human Interface Module). When "This DNet HIM" is chosen from the Network Who screen, the following HIM Choices Menu appears:

Displays version information

Displays the HIM Setup Menu (shown below)

Allows the user to perform Faulted Node Recovery for nodes that fail the Dup Mac ID test



Displays a DeviceNet™ communication error log

Displays and latches Network Diagnostic information such as Baud Rate, Bus Voltages, Bus Loading characteristics and CAN errors

The HIM Setup menu allows the user to configure many of the programming terminal features.

Invokes the Terminal Setup screen described above

Sets up the 5 security passwords: 1 primary and 4 secondary passwords. Primary passwords enable/disable all editing functions. Secondary passwords enable/disable editing of the features presented by the terminal

Auto Display setup enables the display of up to 4 parameter values from one or more devices at powerup




Configures the operation of the User Keys: F1, F2, F3, F4 and Reset

Adjust the screen contrast

Device Choices Menu

Device Choices Menu

The Device Choices menu is entered from the Network Who screen when a device is selected and the **Enter** key is pressed. This menu allows the operator to choose what operation is to be performed on the selected device. The choices on this menu are only displayed for features that the selected device supports. The **Inc** and **Dec** keys allow the operator to move up and down through the selections. The **Enter** key will advance to the selected menu.

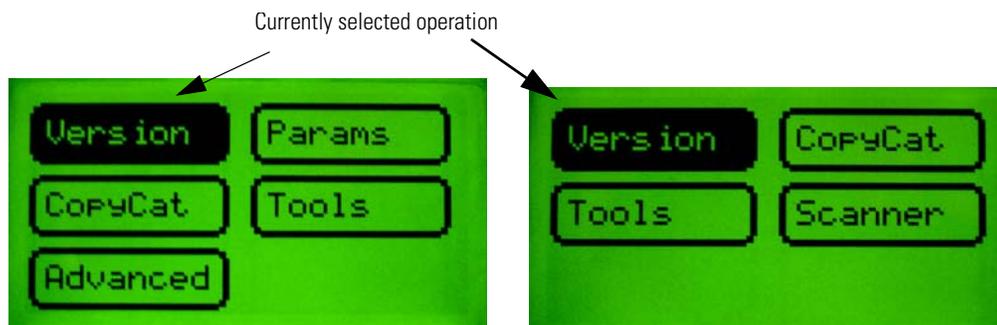

If the currently selected device is the DeviceNet™ HIM, this menu will be slightly different. See Chapter 15, DeviceNet™ Terminal Choices, for description. Not all choices will be available for all devices.

Version Screen

The Version Screen appears when “Version” is selected from the Device Choices Menu. It displays the major revision, minor revision, and if supported the build number of the selected device. If multiple instances of the Identity Object are supported in the selected device, the revision number for each instance is displayed. Use the **Inc/Dec** keys to select the different instances of the Identity Objects. The **Esc** key will return the user to the Device Choices menu.



Parameter Choices Menu

Parameter Choices Menu

The Parameter Choices Menu is only available if the selected device has built-in parameter support (DeviceNet™ Parameter Object). This menu allows the operator to go to screens that monitor and change parameters, view/select parameter groups, and search for parameters that are not at their default settings. The **Inc** and **Dec** keys allow the operator to move up and down through the selections. The **Enter** key advances the user to the selected item. The **Esc** key returns the user to the Device Choices Menu.


Currently selected function



Groups Screen

This screen allows the operator to select a group of parameters to be monitored/edited. The **Inc** and **Dec** keys allow the operator to move up and down through the selections. The **Enter** key advances the operator to a Parameter Edit Screen. The **Esc** key will return the user to the Parameter Choices Menu. The choices in this menu are only displayed for groups that the selected device supports.

Currently selected parameter group

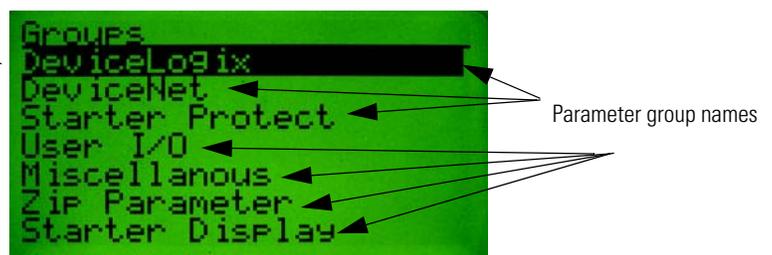

Num List Selection

A numerical list (Num List) of Parameter Edit Screens are presented when Num List is selected and the **Enter** key is pressed.

Parameter Edit Screens

The Parameter Edit Screens allow the device's parameters to be monitored and edited. The parameter screens have slightly different formats for each parameter data type (numeric, value enumerated, bit enumerated Boolean, etc.)

Numeric Parameters

Numeric parameter values are displayed as follows:

The image shows two examples of a parameter edit screen for 'Phase A Current' on a green background. The top screen shows the current value as '+0.2 AMPS' and is labeled 'Read Only'. The bottom screen shows the current value as '+0.2 AMPS' and the maximum value as 'Max: +3276.7 AMPS'. Both screens have a 'c' in the top right corner.

Parameter number

Parameter name

Parameter units

Parameter value

Indicates that this parameter is Read Only and its value cannot be edited.

If the Parameter has a Help string, the string will be scrolled across the bottom line. After the Help String is displayed, the Min value will be display for 3 seconds, followed by the Max value, and then the Default value. After the Default is displayed the string will repeat.

OR

This **c** indicates that the Class, Instance, and Attribute data for this parameter can be copied to the clipboard by pressing **Shift** key then the **Copy** Key.

Numeric Parameter values have this format

Note: If the parameter is a monitor parameter, the HIM stores the HI and LO values for the parameter during monitoring. The HI:/LO: values are displayed on the same line as the Min, Max, Def and Help string.


Accessing a Different Parameter

Accessing a different parameter from a Parameter Edit Screen is done by entering or changing a new parameter number. Changing the parameter number can be done using the **Inc** or **Dec** key to increment through the currently active group of parameters. Entering a new parameter number directly can be done by entering a number with the **numeric** keypad (only if accessed through the Num List).

Current parameter number



Pressing a numeric key will displayed an edit box to enter a new parameter number in.

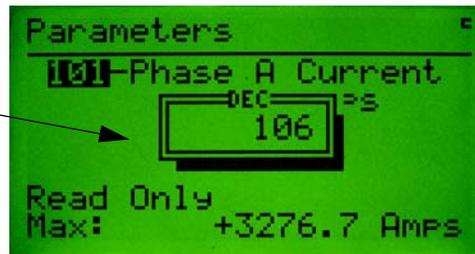

Changing a Parameter Value

Changing a parameter value is done by pressing the **Sel** key to highlight the parameter value then using the **Inc/Dec** keys or **numeric** keys to enter the value. Pressing the **Enter** key will write the new

value to the parameter. When the parameter value is selected, pressing the **Esc** key will deselect the parameter value and allow the parameter number to be changed.

Press **Sel** key to select the Parameter Value




Pressing a numeric key will display an edit box to enter a new parameter value




Enumerated Parameters

Parameters that display **Value Enumerated** data values appear as follows:

Enumerated Parameter value

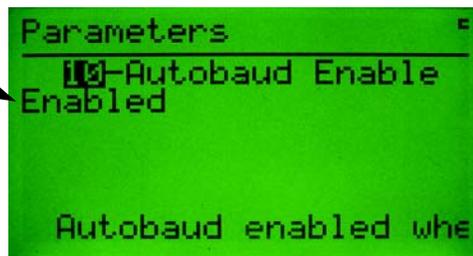

To change a value, press the **Sel** key to select the Enumerated Parameter value, then use the **Inc/Dec** key to change the value

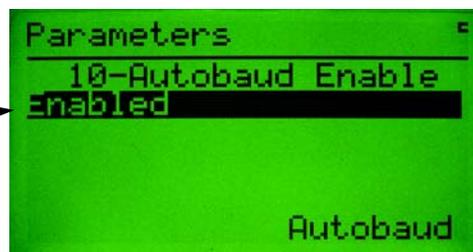

Parameters with **Bit Enumerated** data values are displayed as follows:

Bit enumerated
parameter value

```
Parameters
-----
24-Pr Fault Enable
xx11000010000011

Setting the bit to 0
```

Text string associated
with the selected bit

```
Parameters
-----
24-Pr Fault Enable
xx11000010000011
(Short Circuit)

Min: xx00000000000000
```

Bit selected

Press the **left/right** arrow
key to select the next bit

```
Parameters
-----
24-Pr Fault Enable
xx11000010000011
(Overload)

Max: xx11111111111111
```

Floating Point Parameters


Parameters with Floating Point values will be displayed as follows:

```
Parameters
-----
24-FLOAT-Scaled+Pre
-1.667E05

Def: -1.667E05
```


Entering floating point numbers is performed much the same as regular numeric parameters described earlier. The exponential (displayed as an “E”) is entered as follows:

Use the **Shift** key then the **Exp** key to add the **E** into the value when editing a floating point value

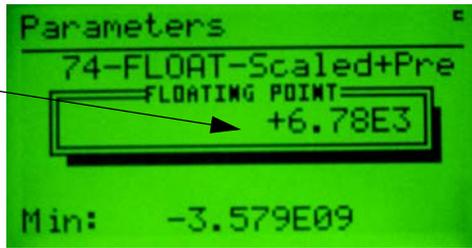

Search for Changed Parameters


This function is invoked by selecting the Search option from the Parameter Choices Menu. The function searches through the selected device’s parameters and finds the parameters that are not at their default setting. The following screen is displayed when searching the parameter list for the selected device:

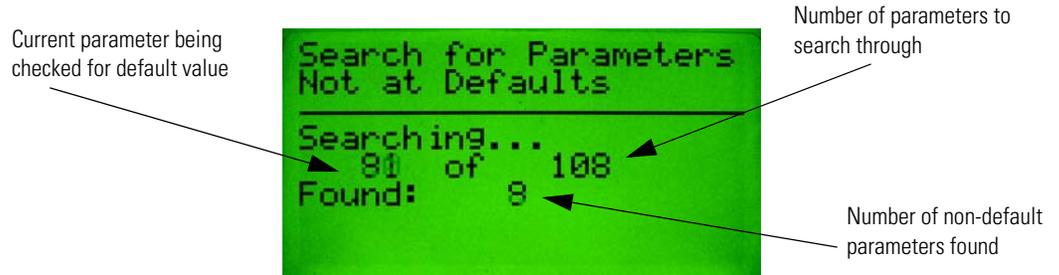

When all the parameters have been checked, a list of parameters that are not at their default value will be displayed. The **Inc** and **Dec** keys allow the operator to move up and down through the non-default parameters. Pressing the **Enter** key allows the parameter value to be viewed/edited.



When accessing parameters found by the Search function, the format of the parameter screen will be similar to a Parameter Edit Screen with a few changes. The title line will say "Non-Default Parameter", and when **Inc** or **Dec** is pressed, only the parameter found in the search will be displayed.

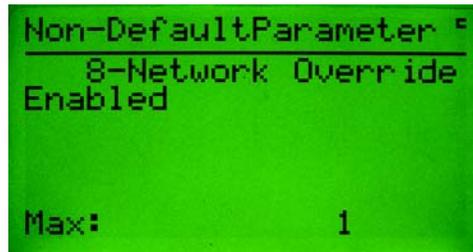


Copy Cat Menu

Copy Cat

The copy cat menu allows the operator to upload and download complete device configurations to and from the Configuration Terminal. For DeviceNet™ slave devices, these complete device configurations consist of all configuration parameter values and any DeviceLogix™ program that is programmed in the device. For DeviceNet™ Scanners, device configurations consist of the scan list. This feature is only available for devices that support the Parameter Object or devices that support the Scanner Object.

The Copy Cat menu uses the acronym HIM in many of its menu selections and screens. HIM stands for "Human Interface Module" and is used to refer to the Configuration Terminal itself. The HIM acronym is used in this product for historical reasons, as this acronym was used on older hand-held configuration tools and many users are familiar with its use with regard to the Copy Cat function.


The Copy Cat Menu is shown below:

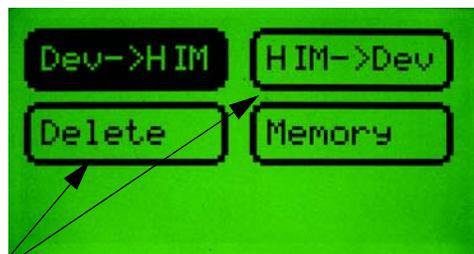

These choices will only be display if one or more Copy Cat files have been stored in the Configuration Terminal

Copy Cat Uploading

To upload the parameters and the DeviceLogix™ program (or scan list) from a device, select **Dev->HIM** at the Copy Cat Menu and press the **Enter** key. The first screen will allow the operator to select where the data will be stored, either to an existing file or a new file:

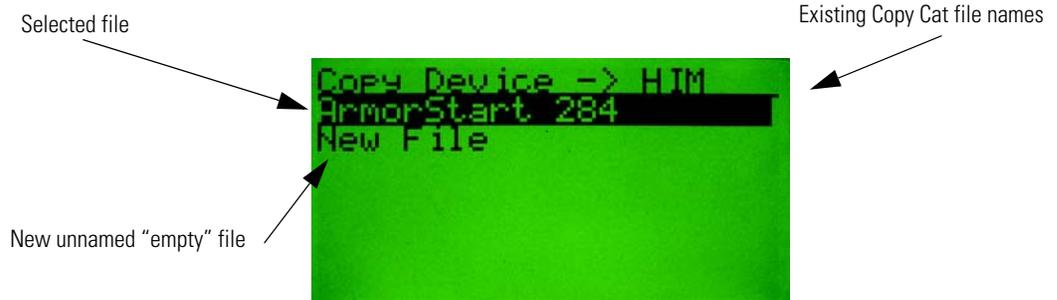


After selecting a file, you will be able to name/rename it:



Use the **Inc/Dec** key to move the cursor to change the character. The numeric keypad can be used to enter a number into the file name

When done editing the file name, press the **Enter** key to start uploading:

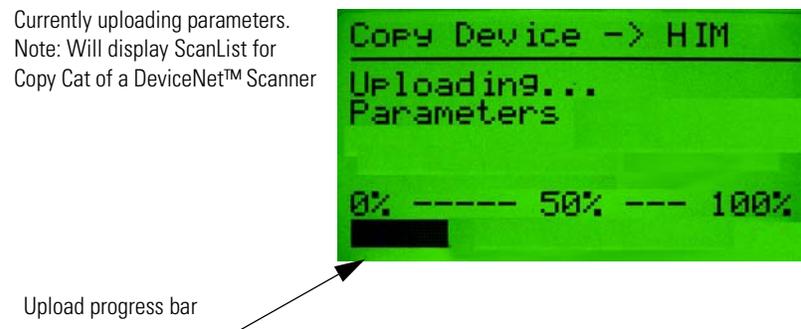

If there are errors during the download process, the screen will look like this:


Errors may occur in either or both parameters and/or the DeviceLogix™ program downloading



```

Copy HIM -> Device
-----
Downloading...
ParamComplete(errors)
LogixComplete(errors)
Download Complete
0% ----- 50% --- 100%
  
```


If parameter errors occur, pressing the **Enter** key will bring up the following screen, which will allow the operator to choose to view the parameters that had errors during the download. **Note:** Only the first 32 parameters with errors are stored.

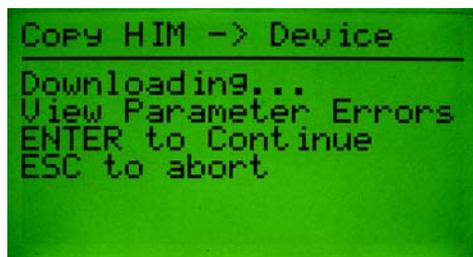

```

Copy HIM -> Device
-----
Downloading...
View Parameter Errors
ENTER to Continue
ESC to abort
  
```

If the operator chooses to view the parameters that had errors during the download, a Parameter Edit Screen will be displayed with minor changes. The title line will say "CopyCat Error Params," and when **Inc** or **Dec** is pressed, the user will only view the next parameter that had an error during the download.

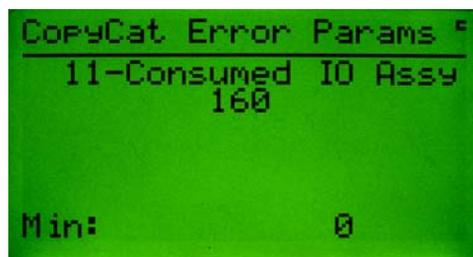

```

CopyCat Error Params
-----
11-Consumed IO Assy
      160


Min:           0
  
```

Copy Cat Downloading and Product Revisions

From time to time, new firmware revisions are released in the DeviceNet™ product portfolio. Great care is taken in these product upgrades to ensure backward compatibility with previous revisions when it comes to being able to accept Copy Cat data files. Great care is also taken to ensure that the new revision of the product will behave the same as the older revision after a Copy Cat data file has been downloaded.

When a Copy Cat data file is downloaded to a different firmware revision of the same product, the user is made aware of the revision difference as follows:

Pressing the **Enter** key will cause the Configuration Terminal to ignore the revision difference and continue the download

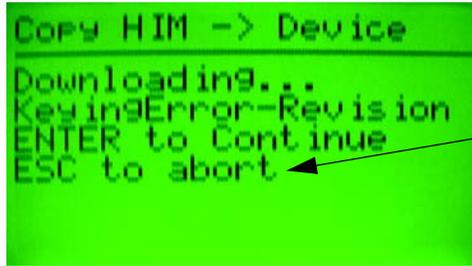

Pressing **ESC** will cause the download to be aborted

In some products, new firmware revisions were released in order to add DeviceLogix™ capability to the product. When downloading a Copy Cat data file that was uploaded from a revision of a product without DeviceLogix™ to a revision of the product that contains DeviceLogix™, the status bar on the Download Status screen will not reach 100%. The "Download Complete" line above the status bar will be the indication that the download was indeed completed.



Copy Cat Downloading and Product Current Ratings

Often times it is useful to download Copy Cat data files to devices within a product family that have different current ranges. This is particularly useful if the user wishes to download a DeviceLogix™ program to multiple members of a product family. When a Copy Cat data file is downloaded to a product whose current range is different from that of the product that the data file was uploaded from, the following screen appears:


Pressing the **Enter** key will cause the Configuration Terminal to ignore the product code (current range) difference and continue the download



Pressing **ESC** will cause the download to be aborted


When downloading to devices in the same product family with different current ranges, the download results will often include Parameter Errors. These errors are the result of downloading

parameters such as FLA current settings whose min/max range is outside the FLA current setting that was downloaded. When this occurs, the following screen appears:

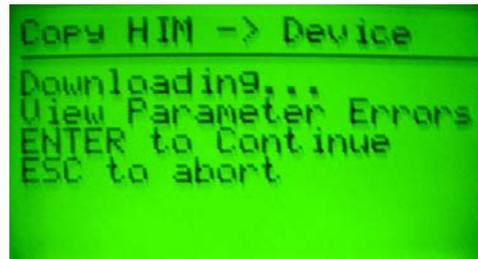

Pressing the **Enter** key will bring the operator to the Parameter Edit Screens for the out-of-range parameters. The title line will say "CopyCat Error Params".

When **Inc** or **Dec** are pressed from the Parameter Edit Screen, the next or previous parameter that had an error during the download will be displayed

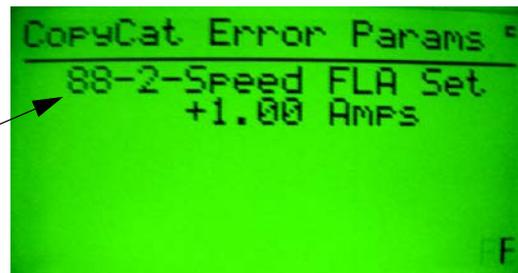

Deleting Copy Cat Files

Deleting a Copy Cat file from the memory of the Configuration Terminal is done by selecting the Delete option at the Copy Cat Choice menu. Select the file name to delete, and press the **Enter** key to delete the file. If all the files have been deleted, the screen will again display the Copy Cat Choice menu, but the Delete and HIM -> Dev options will not be displayed.

File to be deleted



Copy Cat Memory

The Copy Cat memory screen displays how many files are stored in the DeviceNet™ HIM and how many blocks of memory are left for copying. The maximum number of files that can be stored in the Configuration Terminal is 31. Depending on the number of parameters in each file, there may not be

enough memory to store all 31. **Note:** Each block of memory is equal to 128 bytes in the memory, and there are 128 blocks of memory reserved for file storage.



```
Copy Cat Memory
-----
Number Of Files:  2
Free Blocks:  111
```

A screenshot of a terminal window with a green background. The text is displayed in a monospaced font. The first line is "Copy Cat Memory", followed by a horizontal line. Below the line, there are two lines of text: "Number Of Files: 2" and "Free Blocks: 111".

Tools Menu

Tools Menu

The Tools Menu gives the user access to the Node Commissioning screen, a Class Instance Attribute editor, and a graphical parameter chart recorder screen. The Tools Menu is shown below:



Node Commissioning

Pressing **Enter** while the NodeComm item is selected in the Tools Menu invokes the Node Commissioning screen. Node commissioning allows the operator to change the Mac ID and/or the baud rate for the currently selected device.

Currently selected item



This only appears if one of the fields has been changed. Pressing **Enter** here will reset the DeviceNet™ HIM after writing any changes to the device


Class Instance Attribute Editor

The Class Instance Attribute (CIA) Editor allows the operator to perform DeviceNet™ explicit messaging. Get, Set, and Reset services can be sent to any Class, Instance, and Attribute.

The Get service is outlined in the following screen description:

Highlight and press the **Enter** key to perform the service

Data that is read when a message is requested

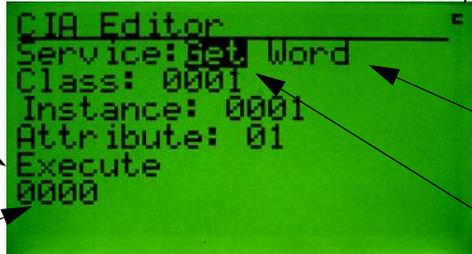

CIA Copy and Paste is available for this menu

Display size of read data. Choices: Byte, Word, Dword, or Multi byte

Selected service

The Set service is outlined in the following screen description:

Highlight and press the **Enter** key to perform the Set service



Display size of data to write. Choices: Byte, Word, Dword, or Multi byte

Data to write

The Reset service is outlined in the following screen description:

Highlight and press the **Enter** key to perform the Reset service



Graph Setup Screens

The Graph function allows the Configuration Terminal to become a simple graphing device. From the Graph Setup Screens, the user sets up to four Class, Instance, or Attributes to be monitored and

displayed as a scrolling graph (similar to an oscilloscope or chart recorder). The first screen allows the operator to configure the four Class, Instance, or Attributes to be monitored.

Class, Instance, Attribute to graph, Note: Traces with the class set to zero will not be graphed.

Offset is the number of pixels from the bottom of the screen the min value for this trace will be displayed at. The range for this field is 0...64, with 32 being the middle of the screen.

Trace number 1-4

CIA Copy and Paste is available for this menu

Max is the CIA's value that will be represented as the top of the screen. Min is the CIA's value that will be represented as the bottom of the screen. (In this example, a CIA value of 50 would be in the middle of the screen; any CIA value at or above 100 would be displayed on the top pixel of the screen). Note there are only 64 vertical pixels with this LCD.

Rate the CIA will be polled, in 10 mSec increments

```

GraphSetup Trace: 1
Class: 15
Instance: 1
Attribute: 1
Max: 100
Min: 0
Offset: 0
Rate(10mSec): 5
    
```

Press the **Enter** key after the CIA data is configured to display the Graph Trigger Screen. This screen allows the operator to program a trigger point to stop the graph display from updating. The operator can set which trace will be used as the trigger as well as the slope, value, and position of trigger. The trigger point can be disabled if the operator does not need this feature.

This could be trace 1...4

Positive Slope: the raw value (obtained by reading the CIA for the trace) moving from below the Programmed Value to equal or above the Programmed Value.

Negative Slope = Above value moving below.

The value is the trigger point; this is the raw value obtained by reading the CIA for the selected trace.

Position is the location on the screen at which the trigger point will be displayed when the trigger condition is found.

Position value is 0 ... 128 (128 pixels across the screen) 64 = 50%

```


Graph Trigger Setup
Trigger: enable
Trace Number: 1
Value: 0
Slope: Positive
Position: 64
    
```

Press the **Enter** key after the trigger data is configured to display the Graph View Screen.

Graph View Screen


This menu displays the CIA data in graphical form.

This screen show only one trace configured

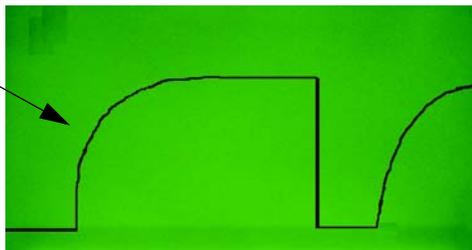

Pressing the **Enter** key while the Graph View Screen is displayed stops the trace and displays a cursor that can be used to view the raw value that was read for that point on the graph.

The Cursor; pressing the **Inc/Dec** key will move the cursor right or left

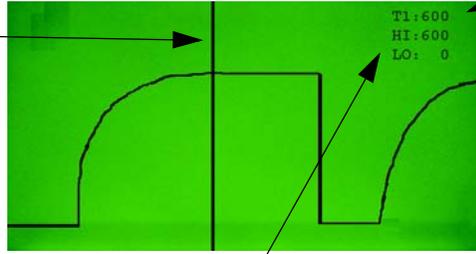

The raw data value corresponding to a point on the graph where the cursor intersects. Note: T1: reflexes the trace number that the value corresponds to. To change the trace number, use the **Sel** key.

HI:/LO: reflect the high and low data values contained in this trace

Advanced Functions Menu

Advanced Functions Menu

The Advanced Functions Menu provides access to a DeviceLogix™ editor, Zone Interlocking Protocol (ZIP) configuration and monitoring screens, an I/O message timing screen that monitors I/O messaging timing between the selected device and a DeviceNet™ scanner, and Discrete I/O statistics. The Advanced Functions Menu is shown below:

Only available if DeviceLogix™ is supported in the currently selected device



Only available if Zone Interlock Protocol Object is supported in the currently selected device

Only available if DIP, DOP or PNB Objects are supported in the currently selected device

I/O Message Monitoring

I/O Message Monitoring

This screen displays I/O message timing information and I/O message data for the currently selected device. It is accessed by selecting I/O Msg and pressing the **Enter** key at the Advanced Functions Menu.

Press the **INC/DEC** key to switch between consumed and produced data

Type of IO connection. Polled or COS

Most recent produced or consumed I/O data for the currently selected device



Size of the I/O data in bytes

I/O Message Count

Message reception rate Min, Max and Average

```
Consumed I/O Data( 4)
POLLED 16452
Rate: 12.0 mSec
Max: 84.0 mSec
Min: 2.6 mSec
03 01 02 58
```


DeviceLogix™ Functionality

DeviceLogix™ Functionality

The Configuration Terminal allows the operator to monitor, edit or delete DeviceLogix™ programs for devices that support DeviceLogix™. DeviceLogix™ can also be enabled or disabled for a device. The DeviceLogix™ functions can be accessed through the DeviceLogix™ Choices Menu, which is accessed by pressing **Enter** from the Advanced Functions Menu while the DevLogix menu item is selected.

DeviceLogix™ Choices Menu

The DeviceLogix™ Choices Menu is shown below:

Currently selected function

Only available if the DeviceLogix™
DataTable Object is supported in
the currently selected device




DeviceLogix™ Monitor

This function allows the operator to view a DeviceLogix™ program, including all programmed function blocks, Discrete Output Points (DOP) and Produced Network Bits (PNB). Text string for inputs, outputs, PNBs, and fault bits are displayed for devices that support the DeviceLogix™ Data Table Object. The counter and timer preset and accumulator value's can be modified when selected. To view each function block, use the **INC/DEC** keys to move to the next function block. When the last programmed function block is reached, pressing the **INC** key will advance the screen to the Programmed DOP screen. Pressing the **INC** key again will then display the Programmed PNB screen and if the **INC** key is pressed a third time, the first function block will be displayed again. When viewing Function Blocks, the screen will have the following formats:

Boolean Gates: AND, OR, XOR, NAND, NOR, NXOR and NOT

Function block number and type

Negated (Active Low) inputs

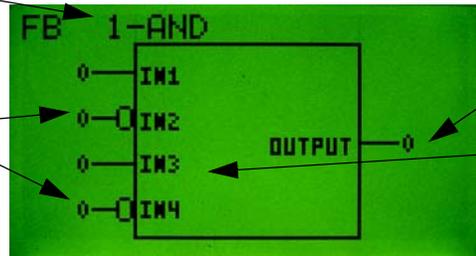


Value of input or output

IN3 and IN4 may or may not be present

Bistable Latches: RS Latch and SR Latch


Press the **SEL** key to highlight the function block's inputs and outputs text strings. (Only available if the device supports the DeviceLogix™ Data Table Object)

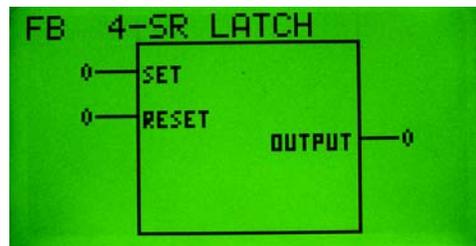

Counters: Up Counter and Up/Down Counter

Down input may or may not be present

Press the **SEL** key to highlight the preset or count value. To accept new value press the **Enter** key

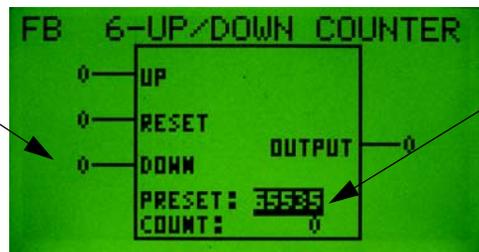

Timers: On Delay, Off Delay and Pulse Timer


Press the **SEL** key to highlight the preset or count value. To accept a new value press the **Enter** key

Time base: 1 mSec or 10 mSec



Discrete Output Points (DOPs):

The name of what is driving the Discrete Output Point in the Device Logix program

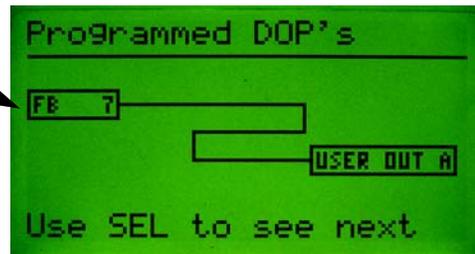


Discrete Output Point (DOP). The name text for this comes from the product, so names may vary product to product

Note: The Programmed DOP screen is only available for devices that support the DeviceLogix™ Data Table Object.

Produced Network Bits (PNBs):

The name of what is driving the Produced Network Bit in the DeviceLogix™ program

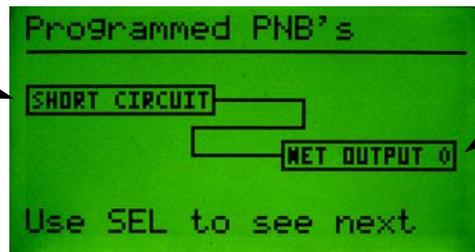

Produced Network Bit (PNB). The name text for this comes from the product, so names may vary product to product.

Note: The "Programmed PNB" screen is only available for devices that support the DeviceLogix™ Data Table Object.


DeviceLogix™ Editor

This DeviceLogix™ Editor allows the operator to create or edit a DeviceLogix™ program. Function blocks are displayed in the same format as in the DeviceLogix™ Monitor. To create, edit or delete a program element, use the **INC/DEC** keys to navigate to the item to create/edit and then press the **Enter** key. To edit one of the inputs of a function block, use the **SEL** key to highlight the input and then press the **Enter** key. To invoke the DeviceLogix™ Editor, select the Edit item in the DeviceLogix™ Choices Menu and press the **Enter** key.

Creating a New Function Block

Consider the following example of creating a new AND gate function block. First, invoke the Device Logix editor. One of two displays will appear, either a display of a function block or a screen displaying "No FB's programmed". At this point press the **Enter** key and the following screen appears:

The Edit and Delete choices are only present if there are function blocks already programmed

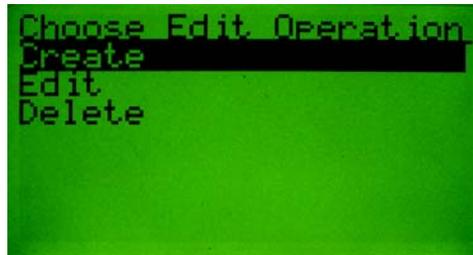


Press the **Enter** key to create a new function block. Now that a new function block has been created, the type of function block must be selected. The following screen will appear:



Use the **INC/DEC** keys to select the new function block type. Press the **Enter** key when the desired function block type is selected. The following screen will appear (the Boolean type screen is shown below. Other similar screens appear for other function block types.)



Use the **INC/DEC** keys to assign a type to the new function block. Press the **Enter** key when the desired type is selected. The screen should now display a new function block of the selected type:

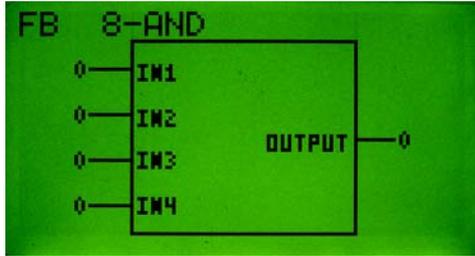


Note: At this time a new function block has been created and assigned a type, but the inputs and outputs are not assigned at this time.

Assigning Source Bits to Function Block Inputs


To assign or edit input source bits for a function block, first choose the function block input by pressing the **Sel** key to scroll through the function block inputs. With each successive **Sel** key press, a different input will be selected on the screen. Notice that the current source bit assignment for a selected input will be displayed on the screen for three seconds as shown below:

The Assignment text will disappear after three seconds

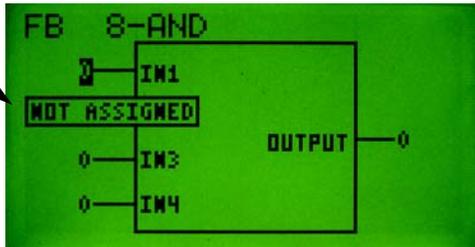

To edit an input source bit assignment, press the **Enter** key while the desired input is selected. The following screen appears:


Negating an input makes the input an active low instead of an active high input

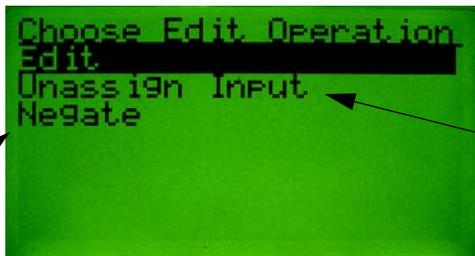

Not all inputs of all function block types can be left unassigned, so this option will not be available for all inputs of all function block types


Press the **Enter** key when Edit is selected and the following screen appears:

Not all inputs sources may be supported by all products

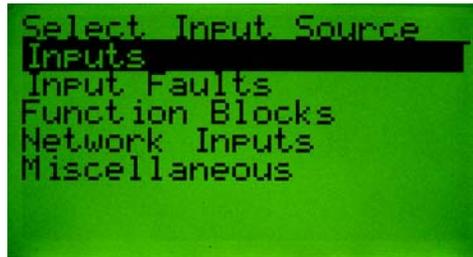

Use the **INC/DEC** keys to select the type of the source bit to assign the input. Press the **Enter** key when the desired type is selected. The following screen will appear (assume "Inputs" was selected above):


The text for this screen is read from the product. Different products will contain a varying number of choices with different text strings

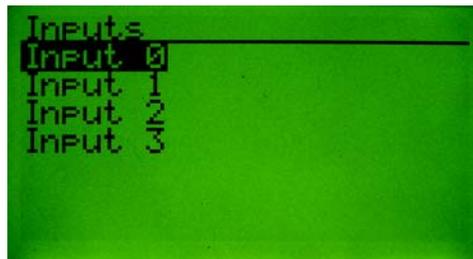


Use the **INC/DEC** keys to select the source bit to assign the input. Press the **Enter** key to assign that selection to the function block input.

Assigning Source Bits for Discrete Outputs Points (DOPs)

To assign or edit a source bit for a Discrete Output Point (DOP), first select a DOP. From the function block screens use the **INC/DEC** keys to get the Programmed DOP's screen displayed:

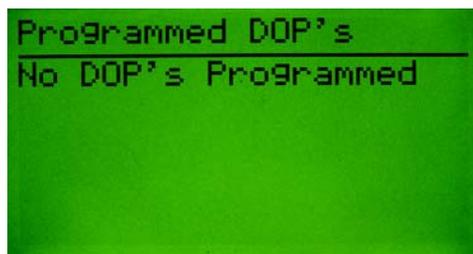


OR

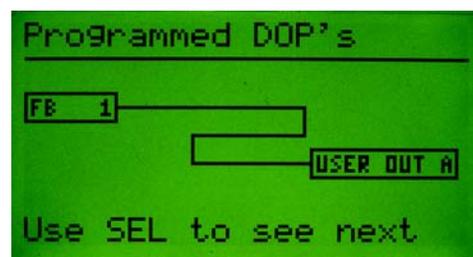

If the “No DOPs Programmed” message appears, press the **Enter** key to assign a source bit to an unassigned DOP.


To edit, delete, or negate a specific DOP source bit assignment that already exists, use the **Sel** key to select the DOP on the screen before pressing the **Enter** key. The following screen will appear:

Only Create will be displayed if no DOPs are currently programmed

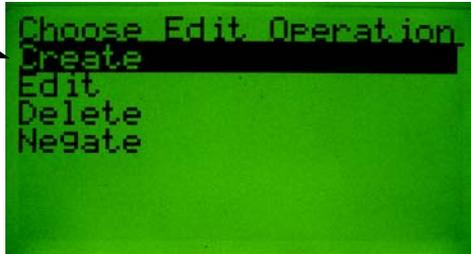

To assign a source bit to an unassigned DOP, select Create and press the **Enter** key. The following screen will appear:

The text for this screen is read from the product. Different products will contain different numbers of DOPs with varying text strings

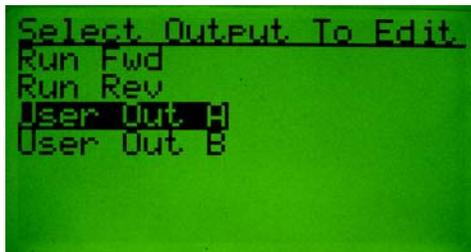


Use the **INC/DEC** keys to select which Output to assign a source bit to. Press the **Enter** key when the desired Output is selected. The following screen will appear:

Not all inputs sources may be supported by all products




Use the **INC/DEC** keys to select the type of the source to assign to the Output. Press the **Enter** key when the desired type is selected. The following screen will appear (assumed "Function Blocks" selected):

Only Function Blocks that have been created are listed here

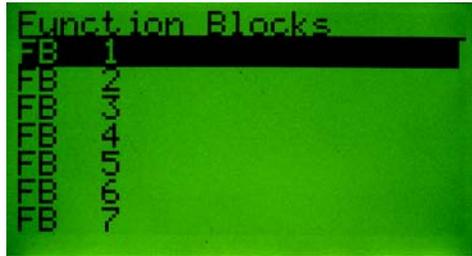

Use the **INC/DEC** keys to select the source bit to assign to the Output. Press the **Enter** key to actually assign the selected source bit. The following screen will appear:

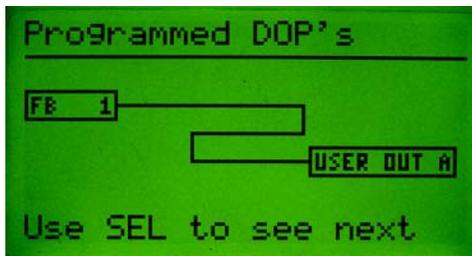


Assigning Source Bits for Produced Network Bits (PNBs)

To assign source bits for Produced Network Bits (PNBs), first select the PNB. From the Programmed DOPs screens use the **INC/DEC** keys to get the Programmed PNBs screen displayed:



OR

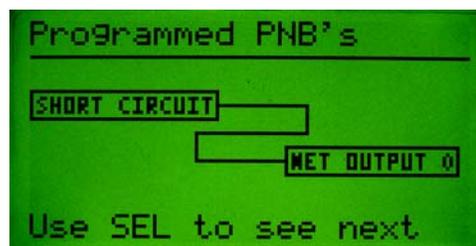


If the "No PNBs Programmed" message appears, press the **Enter** key to assign a source bit to an unassigned PNB.

To edit, delete, or negate a specific PNB source bit assignment that already exists, use the **Sel** key to select the PNB on the screen before pressing the **Enter** key. The remaining steps and screens to edit PNBs are very similar to those used to edit DOPs outlined in the preceding section

DeviceLogix™ Delete Function

This function allows the operator to delete a DeviceLogix™ Program for the currently selected device.

Press the **Enter** key to delete the current DeviceLogix™ program

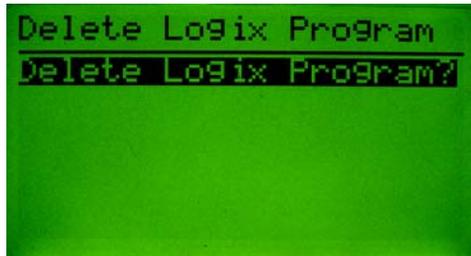

DeviceLogix™ Enable/Disable Function

This function allows the operator to enable or disable the DeviceLogic program in the currently selected device.

Press the **Enter** key to enable or disable the DeviceLogix™ program in the currently selected device



Forcing Inputs and Outputs


The Force function allows the user to force the value of a hardware input or output to a specified value to be used by the DeviceLogix™ program. To use the force function, choose "Forces" from the DeviceLogix™ Choices Menu and press **Enter**. The following screen will appear:

To force an Input or Output on or off, select Inputs or Outputs and then press the **Enter** key




The following screen appears for Inputs (a similar screen appears for Outputs):

Use the **Inc/Dec** keys to select the input to be forced. Press the **Sel** key

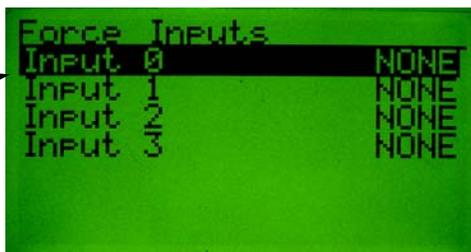

The force state will be highlighted as follows:

Use the **Inc/Dec** keys to choose ON, OFF, or NONE to force the value to the **ON** (1), **OFF** (0) or **no force** state, respectively. Press **Enter** to force the value, or **ESC** to cancel the selection.

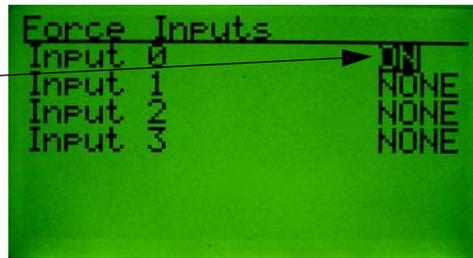


Note: Outputs may only be forced if they are bound to another element in a DeviceLogix™ program.

Note: DeviceLogix™ must be enabled for forces to take effect.

Discrete I/O Status

Discrete I/O Status

The Discrete I/O Status screen is displayed by selecting I/O Stat and pressing the **Enter** key at the Advanced Functions Menu. This screen displays the status of any Discrete Input Points (DIP's), Discrete Output Points (DOP's) and Produced Network Bits (PNB's) that are implemented in the currently selected device. This screen will be available if any one of the DIPs, DOPs or PNBs are supported in the currently selected device.

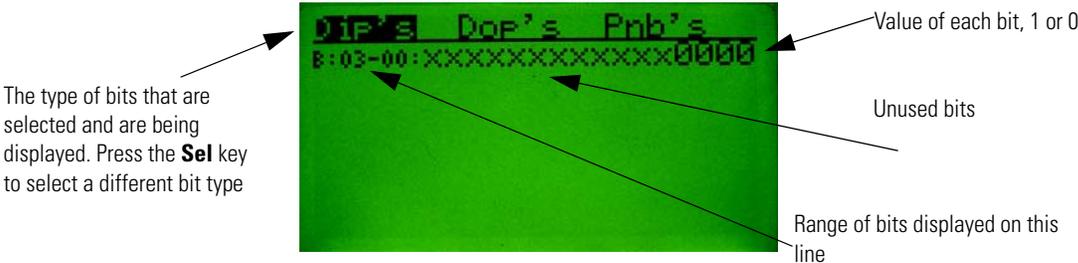

Note: In this example the device supports 4 instances of the Discrete Input Point Object.

Zone Interlock Protocol (ZIP)

Zone Interlock Protocol (ZIP)

The Zone Interlock Protocol (ZIP) menu is available for devices that support the DeviceNet™ Zone Interlock Protocol Object. The Zone Interlock Protocol provides a way for devices to share I/O message data directly, and the data that is consumed from other devices can then be used in a DeviceLogix™ program. The ZIP Choices Menu is displayed by selecting ZIP and pressing the **Enter** key at the Advanced Functions Menu. The following menu choices are available to edit and monitor the ZIP configuration:




ZIP Consumed

This screen allows the operator to configure the ZIP data that the device is going to consume. Configuring ZIP Consumed data consists of mapping I/O data from other nodes or zones on the network to the device's internal ZIP Data Table (the ZIP Data Table is where a DeviceLogix™ program accesses ZIP data). Devices that support ZIP can define the number of zones from which they can consume at one time. In this manual it is assumed that the device can consume data from up to four zones at one time. The size of the internal ZIP data table is device specific. In this manual it is also assumed that the internal ZIP data table is eight bytes long.

The following screen shows a device with no ZIP I/O data configured or mapped:

This is the internal zip data table. B:00-07 indicates that we are viewing data table bytes 0...7 (B:08-15 would be displayed on the next line if the data table was 16 bytes long). Each XX represents one byte in the data table. The XX will display the Devices Node Number whose I/O data is mapped to that byte in the ZIP data table.

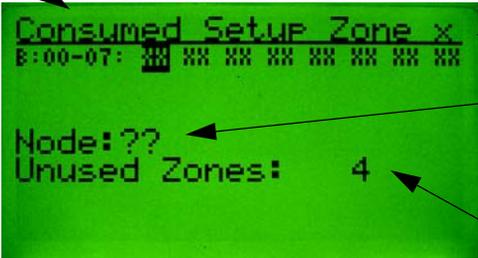

Zone number (1...4) that is associated with data currently highlighted. Note: x = no zone is associated at this time

The Node Number of the device whose I/O data is mapped in this zone

Number of Zones left in this device that are not mapped


Mapping Consumed ZIP Data

This section explains mapping I/O data for a Zone. Assume that the DeviceNet™ Configuration Terminal is currently configuring Node 11 on the Network. Also assume Node 5 is on the network, and is producing I/O data. Node 11 will be configured to consume the I/O data that Node 5 is producing, which will be done by mapping Node 5 I/O data to Zone 1 in the ZIP data table of Node 11.

First, use the **Left/Right** arrow keys to select the byte in the ZIP data table where Node 5 I/O data will be mapped to.

The selected byte in the ZIP data table is highlighted. In this case Byte 0 is selected. Use the **Right/Left** arrow keys to select the byte

This is Byte 7 of the ZIP internal data table

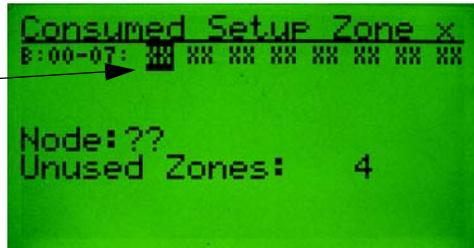

Once the desired byte in the internal ZIP data table is selected, enter a Node number using the **numeric** keys on the keypad of the node whose I/O is to be mapped (this example maps Node 5 data to byte 0 of the ZIP data table). Press the **Enter** key after the Node Number has been entered and the following display should appear:

Node 5 is mapped to byte 0 of the ZIP data table

Zone 1 is now configured to Node 5




These are the current ZIP configuration parameters for Zone 1

Use the **Sel** key to highlight the various ZIP configuration parameters for this zone. The following screen shows the Node field highlighted:

The node: Field allows the node number associated with this Zone to be changed



The following screen shows the EPR (Expected Packet Rate) field highlighted:

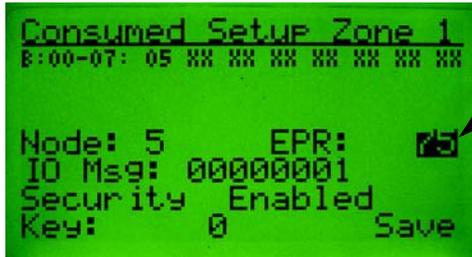

EPR (Expected Packet Rate) allows the expected packet rate of the I/O data from node (Node 5) to be changed. This value is in milliseconds.

The following screen shows the IO Msg field highlighted:


Note: The IO Msg field may also be referred to as the Zone Mask field.

The "IO Msg:" field allows the choice of which bytes of the I/O data from node 5 are going to be mapped to the ZIP data table. Each bit in the IO Msg field maps or un-maps a byte of the I/O data from node 5. The value 1 means map this byte of I/O data. In this example, only byte 0 of the I/O data from node 5 is being mapped.



The following screen shows that byte 0 and byte 2 of the I/O data from node 5 are mapped to the ZIP data table. To accomplish this the IO Msg field must be mapped to the value of "00000101". Press the **Enter** key to edit the IO Msg field value. After editing, the value the screen will appear as follows:

Two bytes of I/O data from node 5 are now mapped to the internal ZIP data table

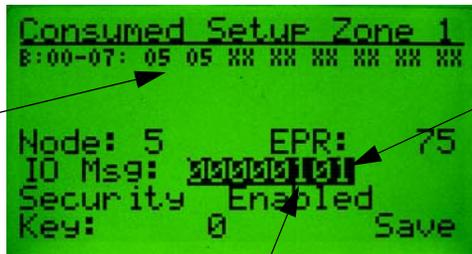

This 1 maps byte 0 of the IO data from node 5

This 1 maps byte 2 of the IO data from node 5

Use the **Sel** key to select the ZIP data table field. Then use the **Right/Left** arrows to select the second byte (the second "05") in the data table. The display appears as follows:

When each byte in the ZIP data table is highlighted, the bit of the IO Msg field that is Mapped to that byte is also highlighted.



As mentioned earlier, use the **Sel** key to highlight the various ZIP configuration parameters for this zone. The following screen shows the "Security" field highlighted.


This field allows the Security to be enabled or disabled

Note: If Security is disabled, the field for the Key will disappear



The following screen shows the Zone Security Key field highlighted.

If Security is Enabled, the last 2 bytes of the I/O data from the node (Node 5) must match the Key value. If not, all the consumed I/O data will be ignored.

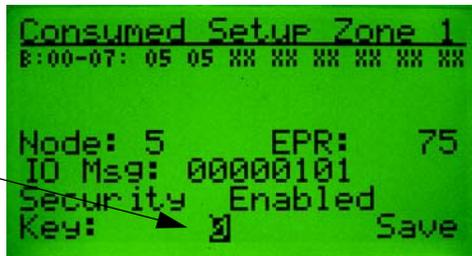

When all edits are complete, the ZIP configuration data must be saved to the device (Node 11 for this example). To save the changes, use the **Sel** key to highlight the Save field and press the **Enter** key.



When performing a Save, all the configuration data for all Zones is saved. The Save field will disappear after the save is completed

ZIP Produced Data

This screen allows the operator to configure the current device to auto-produce I/O data to share with other devices when ZIP is enabled.

Enables or Disables the Auto production of the I/O data for this device. This should be disabled if the device is connected to scanner.

Zip Disabled /Zip Enabled is the Global Enable for all ZIP functions in the device. This enables or disables ZIP consumption and ZIP production in this device.



Produce Rate is the cyclic rate at which this device will produce data. Inhibit Rate is the minimum time between Change of State I/O data productions. Both values are in milliseconds.


Security Key is the value of the last 2 bytes of the I/O data produced by this device if security is included in the I/O data.

ZIP Data Table Monitor

This function is invoked by selecting Monitor from the ZIP Choices Menu and pressing the **Enter** key. The screen allows the operator to monitor the ZIP data table in order to view the I/O data that the device is consuming. The ZIP Data Table Monitor screen functions as following:

Use the **Right/Left** arrow keys to select individual bytes in the ZIP data table

“Connection Healthy” is displayed if the I/O data is being consumed before the EPR times out. “Connection Unhealthy” will be displayed if the EPR timer for that zone times out or if security is enabled and the Security Key does not match.

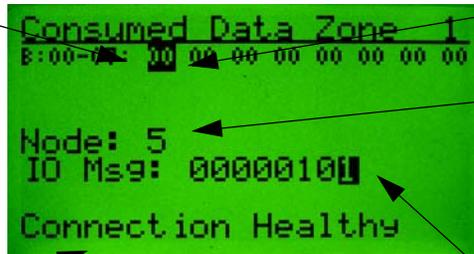


This is the actual data in the internal ZIP data table

Node Number the I/O data is being consumed from for the selected ZIP data table byte

The highlighted bit represents the byte number in the I/O data that is being consumed for the highlighted ZIP data table byte, in this case it is byte 0

Press the **Right/ Left** arrow keys to select the various bytes in the ZIP data table. If no Zone has been mapped to the selected byte in the ZIP data table, the display will appear as follows:

No I/O data being consumed is mapped to this byte (byte 7) in the ZIP data table

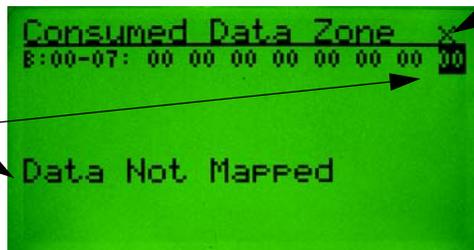


No Zone number is associated with this byte of the internal Zip data table

DeviceNet™ Scanner Menu

DeviceNet™ Scanner Menu

The DeviceNet™ Scanner Menu is available for DeviceNet™ scanners. The scanner menus give the operator some basic information about the scanner's configuration and the ability to adjust a few of the scanner attributes. The scanner menus do not allow the operator to perform complete configuration of a scanner. RSNetWorx for DeviceNet™ must be used for initial scanner configuration for a system. The DeviceNet™ Scanner Menu is invoked from the Device Choices Menu and is shown below:

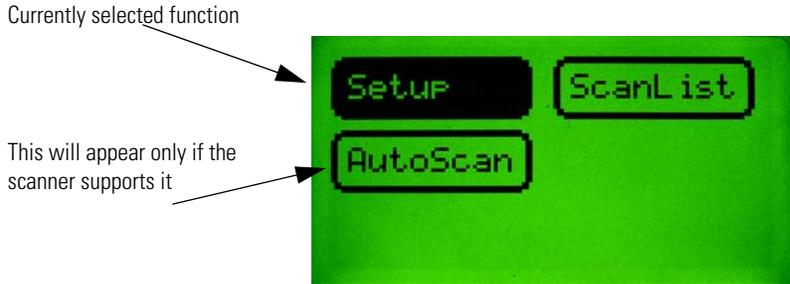

Scanner Setup


This function allows the operator to view and set some of the global settings of the scanner.



AutoScan Function

The Auto Scan screen allows the operator to enable and disable the Auto Scan feature of some scanners. This menu will only be available if the scanner supports the Auto Scan function.

This line reflects the status of the Processor, IDLE or RUN Mode.

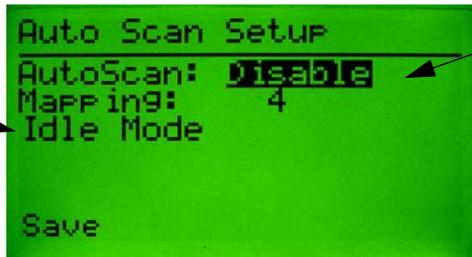

AutoScan must be Disabled to set the mapping size.

Select Save and press **Enter** to save the changes to the scanner

ScanList Screen

The ScanList Screen displays a list of the nodes in the scanner's ScanList. It displays the node name, and if it is in the active, faulted or idle state. Use the **INC/DEC** keys to select nodes in the ScanList.

The selected node

Nodes in ScanList with no errors. When these nodes are selected the product name and "Node Active" will be displayed every other second



A node with errors. The error name and error number will be displayed every other second when these nodes are selected

Node Activation Screen

This screen allows the operator to enable/disable a node from the scanner's scanlist without changing the scanner configuration data for that node (i.e.: I/O mapping, keying, and connection type). To enter this screen, select the correct node in the ScanList screen and press the **Enter** key.

Press **Enter** to perform this operation, if the node is currently enabled in the scanlist this will be displayed



If the Node is currently Disabled in the scanlist, "Enable in ScanList" will appear here

Terminal Choices Menu

Terminal Choices Menu

The Terminal Choices Menu is only displayed when the device selected in the Who Menu is This DeviceNet™ HIM. It is displayed instead of the Device Choices Menu.



Version Menu

This screen displays the revision of the DeviceNet™ Configuration Terminal firmware.



Offline Connection Set

This function allows the operator to perform Faulted Address Recovery (FAR) for nodes that fail the Duplicate MAC ID test. To get to this function select Offline from the Terminal Choices Menu. The first screen to appear will be the Offline Who Screen, which will request ownership of the Offline Connection Set. When ownership is obtained, it will search for faulted nodes. If any faulted nodes are found, they will be displayed.

Once ownership is obtained, this will change to "Checking for Devices"



Note: It may take up to 10 seconds for the Faulted Address Recovery process to complete.

If no faulted devices are found, the following screen will appear:

```
Offline Who Complete
-----
No Devices Found
```

When faulted devices are found, they are reported as follows:

Use the **Inc/Dec** key to select the next device in the list.

Note: The selected device's network LED will flash red/green.

Device's port number

Device's serial number

Device's vendor ID number

```
Offline Who Complete
00 - 0001 - 55667788
00 - 0001 - FFFFFFFF
```

Offline Change Address Screen

Use the **Inc/Dec** keys in the above screen to select a faulted device. Then pressing the **Enter** key invokes the Offline Change Address Screen. Simply change the device's address and press the **Enter** key while Apply Changes is selected to change the device's address and reset the device.

New node address number

```
Change Node Address
-----
Address: 0001
Apply Changes
```

DeviceNet™ Error Log

The DeviceNet™ Error Log stores the last five errors the Configuration Terminal received when requesting information from a device. If the terminal receives an error that is the same as the last error, only the first error will be stored. Errors received while in the Who Menu are not entered into the error log. Each error has a time stamp associated with it that indicates the number of days, hours,

minutes, and seconds since the error message was received. The Error Log screen has the following format:

The screenshot shows the ErrorLog screen with the following text:


```

  ErrorLog
  Address: 1
  Class: 783
  Instance: 26
  Attribute: 1
  Service: Get Single
  Obj Does Not Exist
  Time: 000:17:55:53
  
```

 Annotations include:

- Node Number, Class, Instance, and Attribute of request for which an error was returned (pointing to Address, Class, Instance, Attribute).
- Requested Service: (pointing to Service: Get Single), with a list of options: Get Single, Set Single, Get All, Set All, Reset, Create, Delete.
- Time Stamp: (pointing to Time: 000:17:55:53), with a legend: DDD:HH:MM:SS, D = Days, H = Hours, M = Minutes, S = Second.
- The Error code that was returned (pointing to Obj Does Not Exist).
- Error Buffer Number, use the Inc/Dec keys to scroll through each entry in the log. (pointing to the top right of the screen).
- This menu supports the CIA Copy function (pointing to the top right of the screen).

Network Statistics Screen

This screen displays some DeviceNet™ network statistics such as baud rate, actual bus voltage stats, percentage of bus loading stats, CAN errors per second, and total CAN errors. Latching of statistics for some readings begins when the screen is entered, and stops when exiting the screen. Statistics can be cleared by exiting and re-entering the menu. While displaying this screen, the CEP7-DNCT will not respond to any DeviceNet™ messages directed to it. There will be a short delay when exiting this screen before the Terminal starts producing DeviceNet™ messages, due to the CAN chip being reset and re-initialized. The Network Stats Menu has the following format:

```

  BaudRate:          500K
  Bus Voltage:      28.59
  Bus Voltage Hi:   28.71
  Bus Voltage Low:  28.50
  Bus % Load:       1.8
  Max Bus % Load:  1.8
  CAN Errors/Secs:  0
  CAN Errors:       0
  
```


Terminal Setup Menu

Terminal Setup Menu

This menu is used to configure features of the CEP7-DNCT (HIM). The following menu choices are presented:



Communication Setup Screen (HIM Comm)

This screen is invoked by pressing **Enter** while HIM Comm is selected in the Terminal Setup Menu. It configures how the CEP7-DNCT connects to the DeviceNet™ network. Three basic options are configured here: the baud rate, the node address, and the power up delay. When configuring the baud rate, auto baud can be enabled or disabled, and the baud rates 125K, 250K or 500K can be selected. When configuring the Node Address, Auto Addressing can be enabled or disabled, and the node address number can be set. When Auto Addressing is enabled the CEP7-DNCT will operate as follows: the first Dup MacID message will be sent out using the node address that has been configured in the Address Field. If a node is found at that address, the node address is decremented by 1, and the terminal will determine if there is a node at the new address. This will continue until the CEP7-DNCT finds a node address that is not being used.

The PowerUp Delay field specifies the time waited from initial power up until the first messages are produced by the CEP7-DNCT. This feature allows the operator to set the time before the CEP7-DNCT starts communicating with devices on the network, allowing scanners to connect to any group two devices and start proxying. It also allows all devices to come online before AutoAddressing.

This is the Baud Rate that is used if AutoBaud is disabled


Node Number of the CEP7-DNCT if AutoAddress is disabled. If AutoAddress is enabled, this is the starting Node Number




PowerUp Delay (in seconds)

Password Menu

The CEP7-DNCT has five passwords: one primary (master) password and four secondary passwords. When the primary password has been configured and correctly entered the operator will gain full access to all features in CEP7-DNCT. The secondary passwords can be configured to limit the features that are associated with that password, so when a secondary password is entered, the operator will only gain access to limited features in the CEP7-DNCT. The following choices may appear when the Password selection is chosen from the HIM Setup Menu:

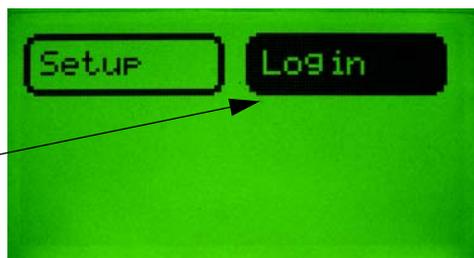

Must have the primary password set for this selection to appear

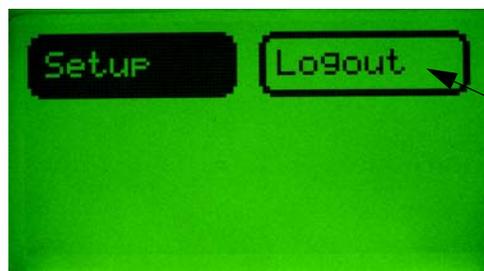

Must have at least one password logged in for this selection to appear

Password Setup (Primary)

To activate the primary password, simply set the password to a value other than zero. By logging in using that password value the operator will gain full control of the CEP7-DNCT. The Password Setup Screen, when set to the Primary Password, has the following format:

Primary Password selected. Press the **Inc/Dec** key to get to secondary passwords

This will appear when changes to the password have occurred. Press the **Enter** key to save changes to the password



Password value range is 0...999999

Password Setup (Secondary)

Secondary passwords limit access to certain device features, thus limiting some operator's ability to change the system configuration. The following menu is used to configure secondary passwords:

Secondary password 1 selected

This will appear when changes to the password have occurred. Press the **Enter** key to save changes to the password



Password value range is 0...999999

To associate privileges to a specific secondary password, press the **Sel** key until the cursor appears on the bit field. Setting a bit to a 1 enables edit privileges for that feature; setting the bit to zero disables editing for that feature. Each of the secondary passwords can be configured to have some or all privileges.

Note: Once the primary password is set, it must be logged in to edit secondary passwords.

- Bit Field privileges:
- Bit0 = Parameter Edit
- Bit1 = CopyCat
- Bit2 = Graph Setup
- Bit3 = Node Commissioning
- Bit4 = CIA Editor
- Bit5 = DeviceLogix™
- Bit6 = ZIP
- Bit7 = Scanner Setup
- Bit8 = UserKeys



Bit Field selected. Use the **Left/Right** arrow keys to move the cursor to the next bit. This screen shows bit 0 selected.

Entering a Password

When the operator attempts to access a menu that is password protected the following box will appear for password entry:

Password entry box



Password Value

Resetting Forgotten Passwords

Using RsNetworks for DeviceNet™, find the DNCT on the network, and set parameter 2 - Password Override to override. This will temporarily override the password in the DNCT. The old password can then be viewed and changed from the DNCT. The password is only overridden until the DNCT is powered down.


Auto Display

The auto display feature allows the CEP7-DNCT to be setup so that on power up, it will connect to one or more devices and display 1...4 values from 1...4 devices. This allows the unit to automatically monitor device values without any intervention at power-up. The following choices appear when AutoDspl is selected from the Terminal Setup Menu:



AutoDisplay Setup


This screen is used to set up to four Class, Instance Attributes to be auto displayed. This screen allows a different node address to be entered for each CIA value configured, thus up to four different nodes can be monitored at the same time. Setting the node address to 64 for a CIA disables Auto Display for that value. Use the **Sel** key to select different fields to edit.

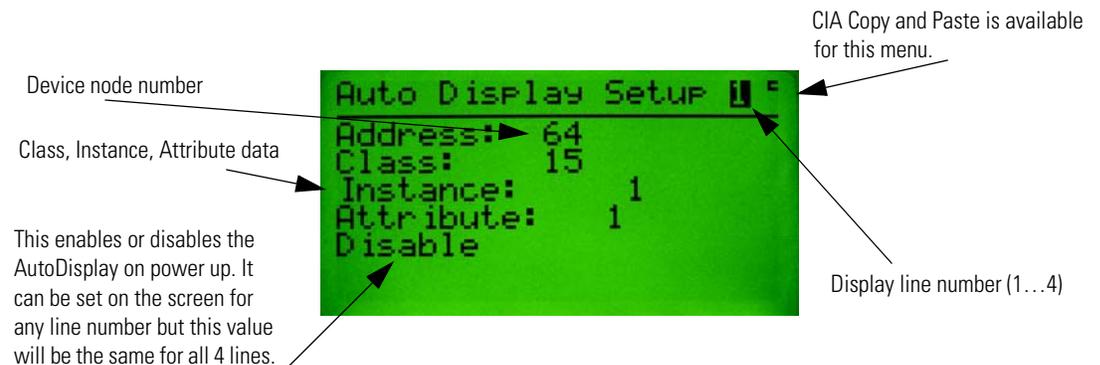

AutoDisplay Test

This function gives the operator an easy way to view and test the AutoDisplay setup data without powering down the CEP7-DNCT after setting up each line. If the CIA data for a line points to the parameter class, the CEP7-DNCT will display the scaled value and units (if any) for that line.

Note: AutoDisplay can be configured to show 4 lines as shown here or 1, 2, or 3 lines.

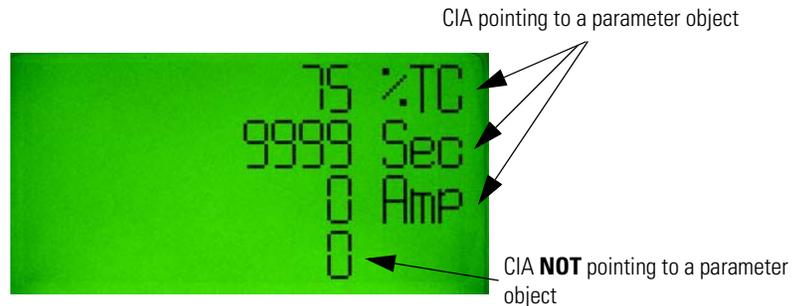

Programmable User Function Key Setup

The 5 user programmable function keys (**F1**, **F2**, **F3**, **F4** and **Reset**) can be configured to send DeviceNet™ explicit messages when they are pressed. The Function Key Setup screen is used to associate DeviceNet™ messages to the various function keys. This screen is accessed by selecting "UserKeys" in the "Terminal Setup Menu" and pressing the **Enter** key.

The default operation of these keys is identical to the OutA and OutB start keys, and the OutA and OutB stop keys on the old Bulletin CEP7-PCT hand-held terminal.

- **F1:** Default behavior is like that of the green OutA start key on the CEP7-PCT. It sets Discrete Output Point instance 1 to the ON state. (CIA: 0x09-0x01-0x03 = 1).
- **F2:** Default behavior is like that of the green OutB start key on the CEP7-PCT. It sets Discrete Output Point instance 2 to the ON state. (CIA: 0x09-0x02-0x03 = 1).
- **F3:** Default behavior is like that of the red OutA stop key on the CEP7-PCT. It sets Discrete Output Point instance 1 to the OFF state. (CIA: 0x09-0x01-0x03 = 0).
- **F4:** Default behavior is like that of the red OutB stop key on the CEP7-PCT. It sets Discrete Output Point instance 2 to the OFF state. (CIA: 0x09-0x02-0x03 = 0).
- **Reset:** Sets Fault Reset to the ON state. (CIA: 0x29-0x01-0x0C = 0).

Each key has the following configuration parameters that can be programmed: Class, Instance, Attribute, Pressed (Down) Value (ON or OFF) and Mode. The Mode can be programmed to either Momentary or Maintained operation. The Maintained Mode acts as follows: when key is pressed, the Press Down Value is sent; when the key is released there is no operation. The Momentary Mode acts as follows: when key is pressed, the Press Down Value is sent; when the key is released, the inverse of the Press Down Value is sent. Since not all screens have an active explicit message connection, the Function Keys will be active while viewing only some menu screens. The following is a list of screens on which the User Keys will be active:

1. Parameter Screen
2. CIA Editor Screen
3. I/O Message Monitoring Screen
4. Graph View Screen

5. Who Menu (Reset key only)

Table 16.1 Function Key Default Behavior for E3 and ArmorStart

Function Key	Default E3 Operation	Default ArmorStart Operation
F1	Turns on Output A	Turns on Run Forward
F2	Turns on Output B	Turns on Run Reverse
F3	Turns off Output A	Turns off Run Forward
F4	Turns off Output B	Turns off Run Reverse
Reset	Resets Protection Faults	Resets Protection Faults

Function Key Setup Screen

Class, Instance, Attribute Information. Values are entered in hexadecimal

Current key (**F1**) being configured. Press **Inc/Dec** to change keys

CIA Copy and Paste is available for this menu

Value sent when the key is pressed, ON (1) or OFF (0)

Mode of key, Momentary or Maintained

Save will appear after changing the settings for any key, Pressing **Enter** will save the information for all the keys

```

User Key: F1
-----
Class: 0009
Instance: 0001
Attribute: 03
Value: ON
Mode: Maintain
Save
    
```

Press **Inc/Dec** from the **F4** setup screen to get to the **Reset** key setup

CIA Copy and Paste is available for this menu

Class, Instance, Attribute Information. Values are entered in Hexadecimal.

The default for the Reset key is the Clear Fault attribute of the Control Supervisor Object

```

Reset Key
-----
Class: 0029
Instance: 0001
Attribute: 0C
Value: ON
Mode: Maintain
    
```

LCD Contrast

This screen is used to change the contrast of the CEP7-DNCT LCD. The **Inc/Dec** keys are used to increase or decrease the contrast of the LCD.

Sample text to view when adjusting the contrast

This bar graph indicates the LCD's contrast setting, 0...100%


```

LCD Contrast
-----
4X8 TEXT
6X8 TEXT
0% ----- 50% --- 100%
    
```

Copy and Paste Feature

Copy and Paste Feature

The CEP7-DNCT has a Copy and Paste feature that allows the operator to copy Class, Instance, Attribute, Node Number, Min, and Max values from one menu to another menu. Menus that support the Copy and Paste feature will display a small C (copy indication) and P (paste indication) in the upper right hand corner of the screen.

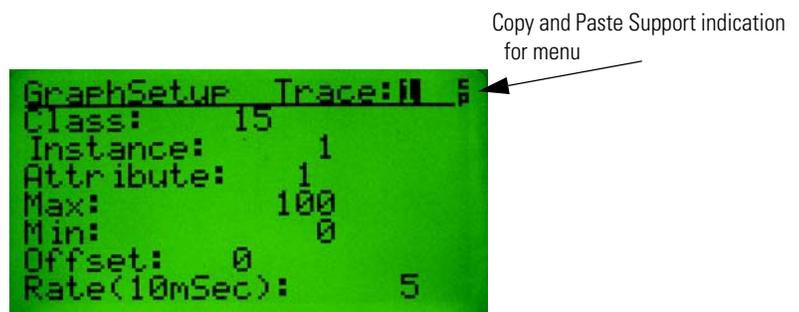

Some screens may only support the copy feature, so only the small "C" in the upper right hand corner will appear. The small "P" in the upper right hand corner will only appear after CIA data has been copied and will only appear on menus that support CIA data paste feature. When a copy or paste is actually performed, the text "Copy" or "Paste" will appear in the upper right hand corner for one second.

To perform a Copy or a Paste use the following key strokes:

To copy the CIA data on a screen:

- Press the **Shift** key, then
- Press the **Copy** key (Right Arrow key)

To paste the CIA data to a screen:

- Press the **Shift** key, then
- Press the **Paste** key (+/- sign key)


In the following example, we will copy the Class, Instance, and Attribute data from a parameter screen to the GraphSetup Screen. First go to the Parameter Screen and select the parameter to copy. Press the **Shift** key and then the **Copy** key to copy all the parameter data to the clip board.



Displayed for one second at the time of the copying. This indicates the copy is complete.

To paste the data to the Graph Setup Menu, invoke the Graph Setup Screen. Next, press the **Shift** key and then press the **Paste** key to paste all the parameter data to the GraphSetup Screen. The screen should appear something like this, depending on the parameter copied:

Class, Instance, Attribute, Min and Max value should change to the settings of the copied parameter.

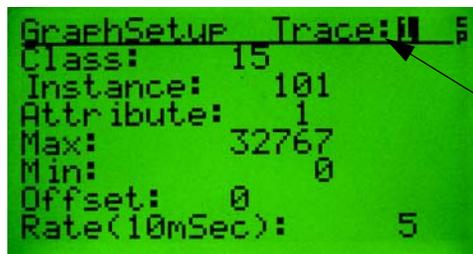

"Paste" is displayed here for 1 second at the time of the paste. The display disappears when the paste is complete.

The follow table documents which menus support the copy and/or paste feature:

SCREEN	COPY Support	PASTE Support
Parameter	YES	NO
CIA Editor	YES	YES
Graph Setup	YES	YES
Error Log	YES	NO
AutoDisplay Setup	YES	YES
Function Key Setup	YES	YES

Menu Help Feature

Menu Help Feature

All of the screens in the DeviceNet™ Configuration Terminal have help text associated with them. To view help text, press the **Shift** key followed by the **Help** key (Zero key). Press the **ESC** or **Enter** key to close the help screen. Some menus that are complicated, such as graph setup, have help available for each field on the screen. In those cases, select a field and press the **Shift** key followed by the **Help** (Zero) key. The following is an example of a help screen:



Specifications

Display

Display Type	128 x 64 LCD with yellow-green backlighting
Viewing Area	57 x 30 mm (2.24 x 1.18 in.)

Keypad

Keypad Type	Tactile embossed, domed keys, sealed membrane
Operation Force	453 g (16 oz)
Operational Life	1 million operations

Communications

Communication Protocol	DeviceNet™ (125, 250, 500 Kbaud selectable)
------------------------	---

Electrical

Input Voltage Range	11...25.0V DC
Input Power, typical	1.7 W
Input current	70 mA @ 24V DC

Environmental

Operating Temperature	0...50°C (32...122°F)
Storage Temperature	-40...85°C (-40...185°F)
Humidity	5...95% non condensing
Operating Shock	30 g
Non-Operating Shock	50 g
Operating Vibration	2.5 g @ 5Hz...2kHz
Non-Operating Vibration	5 g @ 5Hz...2kHz

Dimensions	
Height	116 mm (4.57 in)
Width	70 mm (2.76 in)
Depth	15.5 mm (.67 in)
Weight	85 g (3 oz)

Agency Approvals	
UL	508
cUL	
CSA	C22.2 No. 14
CE	EN61000-6-2:2005 EN61000-6-4:2001
RoHS	This product meets the material restrictions of the European Union RoHS Directive

DeviceNet™ Objects

The following object classes are supported:

Class	Object
0x0001	Identity
0x0002	Message Router
0x0003	DeviceNet™
0x0005	Connection

Identity Object

CLASS CODE 0x0001

The following class attributes are supported for the Identity Object:

Attribute ID	Access Rule	Name	Data Type	Value
1	Get	Revision	UINT	1

Each instance of the Identity Object contains the following attributes:

Attribute ID	Access Rule	Name	Data Type	Value
1	Get	Vendor	UINT	1 or 625
2	Get	Device Type	UINT	115 - Generic Type
3	Get	Product Code	UINT	208
4	Get	Revision Major Revision Minor Revision	Structure of: USINT USINT	
5	Get	Status	WORD	Bit 0 - 0=not owned; 1=owned by master Bit 2 - 0=Factory Defaulted; 1=Configured Bit 8 - Minor Recoverable fault Bit 9 - Minor Unrecoverable fault Bit 10 - Major Recoverable fault Bit 11 - Major Unrecoverable fault
6	Get	Serial Number	UDINT	unique number for each device
7	Get	Product Name String Length ASCII String	Structure of: USINT STRING	"DeviceNet™ HIM" or "Boot Code"

The following common services are implemented for the Identity Object:

Service Code	Implemented for:		Service Name
	Class	Instance	
0x0E	No	Yes	Get_Attribute_Single
0x05	No	Yes	Reset
0x10	No	No	Set_attribute_Single

Message Router

CLASS CODE 0x0002

No class or instance attributes are supported. The message router object exists only to rout explicit messages to other objects.

DeviceNet™ Object

CLASS CODE 0x0003

The following class attributes will be supported for the DeviceNet™ Object:

Attribute ID	Access Rule	Name	Data Type	Value
1	Get	Revision	UINT	2

A single instance (instance 1) of the DeviceNet™ Object will be supported. The following instance attributes will be supported.

Attribute ID	Access Rule	Name	Data Type	Value
1	Get	Node Address	USINT	0...63

The following services will be implemented for the DeviceNet™ Object.

Service Code	Implemented for:		Service Name
	Class	Instance	
0x0E	Yes	Yes	Get_Attribute_Single
0x10	No	No	Set_Attribute_Single

Connection Object

CLASS CODE 0x0005

No class attributes are supported for the Connection Object.

Multiple instances of the Connection Object are supported for explicit UCMM connections.

Attribute ID	Access Rule	Name	Data Type	Value
1	Get	State	USINT	0=nonexistant 1=configuring 3=established 4=timed out
2	Get	Instance Type	USINT	0=Explicit Message
3	Get	Transport Class Trigger	USINT	0x83 - Server, Transport Class 3
4	Get	Produced Connection ID	UINT	Depends on message group and Message ID
5	Get	Consumed Connection ID	UINT	Depends on message group and Message ID
6	Get	Initial Comm Characteristics	USINT	0x33 (Group 3)
7	Get	Produced Connection Size	UINT	0
8	Get	Consumed Connection Size	UINT	
9	Get/Set	Expected Packet Rate	UINT	in milliseconds
12	Get	Watchdog Action	USINT	01 = auto delete 03 = deferred delete
13	Get	Produced Connection Path Length	UINT	0
14	Get	Produced Connection Path		Empty
15	Get	Consumed Connection Path Length	UINT	0
16	Get	Consumed Connection Path		Empty

