

Model Code/s:  
**EVD7**

Product:  
**Vented Dryer**

Document:  
**User Manual**

# Esatto



---

Dear Customer,

Congratulations on purchasing your vented dryer. The *Esatto* brand is proudly distributed within Australia by Residentia Group Pty Ltd.

Please refer to the warranty card at the rear of this manual for information regarding your product's parts and labour warranty, or visit us online at [www.residentiagroup.com.au](http://www.residentiagroup.com.au).

At Residentia Group, we are customer obsessed and our Support Team are there to ensure you get the most out of your appliance. Should you want to learn more about your vented dryer such as the various drying modes or importantly taking care of the dryer, our Support Team are here to help.

You can use our online Support Centre at anytime by visiting <http://support.residentiagroup.com.au>, or you can contact us via phone by dialling: 1300 11 HELP (4357).

It is important that you read through the following use and care manual thoroughly to familiarise yourself with the installation and operation requirements of your appliance to ensure optimum performance.

Again, thank you for choosing an *Esatto* appliance and we look forward to being of service to you.

Kind Regards,  
*The Residentia Team*



User Manual:

# Esatto

Contents:

	Page:
Safety instructions	4
Your Esatto vented dryer	4
Installation instructions	5
Operating your vented dryer	8
Cleaning and maintenance	10
Troubleshooting	10
Warranty information	12
Notes	14



## Safety Instructions

- This appliance is only intended for use indoors only within a domestic environment.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The dryer is not to be used with any clothing articles which have had industrial chemicals used for cleaning.
- The lint trap must be cleaned frequently- we recommend after each use.
- Adequate ventilation must be provided.
- Never dry unwashed items with your clothes dryer.
- Items that have been soiled with substances including cooking oils, alcohol, petrol, waxes, etc, should be thoroughly washed in hot water with detergent before being dried within your clothes dryer.
- Never use your clothes dryer to dry items such as latex, foam rubber, waterproof textiles, rubber backed articles, or pillows fitted with foam.
- The final cycle of your clothes dryer programs is a cool down cycle to reduce the temperature of your clothes. This is incredibly important to ensure that your clothing items won't be damaged. NEVER stop your clothes dryer before the end of its drying program unless all items are quickly removed and spread out to ensure the heat is dissipated.
- Ensure all objects are removed from pockets.
- If the power cord is in any way damaged it must be replaced by the manufacturer, its service agent or a qualified and licensed electrician.

### UNPACKING

- During transportation, protective packaging was used to protect the appliance against any damage. After unpacking, please dispose of all elements of packaging in a way that will not cause damage to the environment. All materials used for packaging the appliance are environmentally friendly; they are 100% recyclable and are marked with the appropriate symbol.

**Caution!** During unpacking, the packaging materials (polythene bags, polystyrene pieces, etc.) should be kept out of reach of children.


### DISPOSAL OF THE APPLIANCE

- Old appliances should not simply be disposed of with normal household waste, but should be delivered to a collection and recycling centre for electric and electronic equipment. A symbol shown on the product, the instruction manual or the packaging shows that it is suitable for recycling.
- Materials used inside the appliance are recyclable and are labeled with information concerning this. By recycling materials or other parts from used devices you are making a significant contribution to the protection of our environment.
- Information on appropriate disposal centres for used devices can be provided by your local authority.

## Technical Specifications

Dimension	595x555x840 (mm)	Weight of product	33kg
Rated input power	2000W	Rated volume of dryer	7.0kg (Dry clothes)
Rated voltage	220-240V~	Rated frequency	50Hz

## Your Esatto Vented Dryer

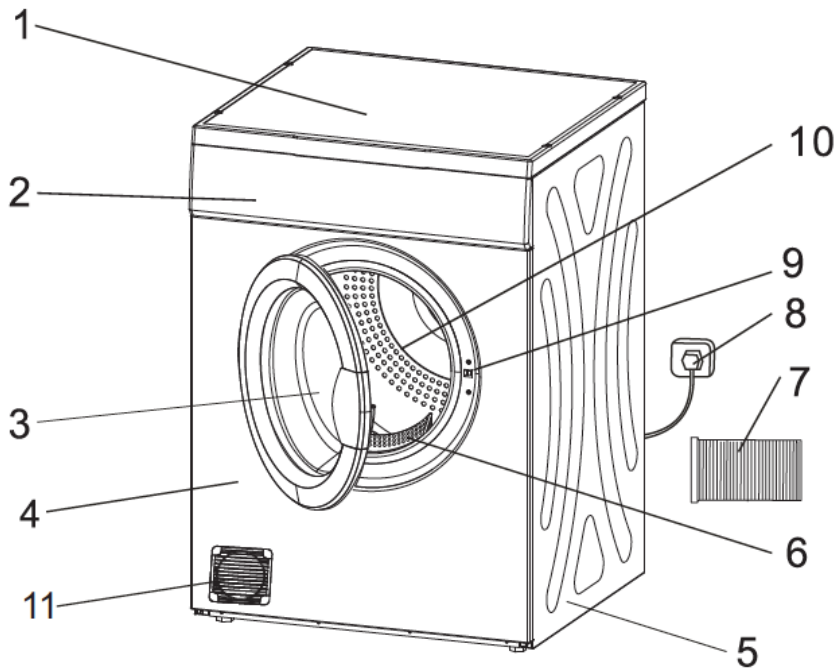













1. Top-board	2. Control Panel	3. Door	4. Front Panel
5. Side panel	6. Filter	7. Flex tube (only to rear vent)	8. Power plug
9. Door lock/switch	10. Tumbling Drum	11. Front vent	

## Before First Use

**Step 1. Power source and grounding**  
The dryer employs alternative current with the rated voltage and frequency. When the voltage fluctuates between 6% of rated voltage, the dryer can work normally. Your clothes dryer should be on a dedicated power socket for both convenience and safety.

**Step 2. Precautions**

- Ensure all packaging, user manuals, paper and plastic are removed from within the clothes dryer before operation.
- Ensure the vents aren't blocked and adequate air-flow exists.
- Always check your clothing articles care instructions to ensure they are suitable for use within a clothes dryer. Not all clothes are suitable for use within clothes dryers. The table below explains common symbols on care instructions for clothing:

 Dry	 Normal	 Not tumble dry normal	 Do not dry
 Line dry / hang to dry	 Drip dry	 Dry flat	 In the shade
 Dry clean	 Do not dry clean	 Dry clean normal cycle with any solvent	 Dry clean normal cycle petroleum solvent only

## Installation Instructions

### POWER SOURCE AND GROUNDING

It's recommended to use the dryer on it's own dedicated power outlet for both convenience and safety. The power outlet must be grounded.

**Important!** If the power cord is damaged, it must be replaced by Residentia Group or one of it's authorised service representatives. Please contact 1300 11 HELP (4357) and ensure the appliance is completely disconnected from the power supply.


### SIMPLE INSTALLATION:

- **Step 1:** Dryer should be placed in a ventilated area with no less than 10cm distance from the wall or cabinetry. It is also recommended that there are no obstacles within 1.5m of the dryers front, to ensure ease of operation and ventilation.
- **Step 2:** Use a spirit level to ensure that your dryer is horizontally level, whether it be on the ground or wall mounted. As with all appliances with moving internal parts, it's essential that the dryer is level as it will effect it's balance and operation.
- **Step 3:** Rear venting the dryer (optional)  
  
Rear venting: Connect one side of the flexible tube to the back vent and tighten in place. The other end of the flexible tube should be extended to the outdoors using a venting kit.

**Important!** Please ensure that the dryer is only ever installed in an internal environment only (and not outside), or an environment where the dryer could become wet. Never place the dryer near combustible surfaces (such as curtains) and ensure the dryer isn't operating near gas or other flammable materials.

### INSTALLATION UPSIDE DOWN (WALL MOUNTED):

- **Step 1:** Fix the two metal wall brackets onto the wall to align with the mounting slots on the dryer. Ensure that the wall is of sufficient strength to support the dryer weight.

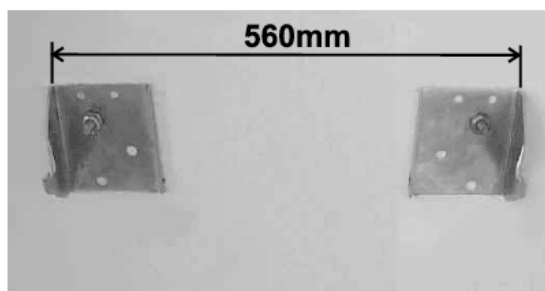


- **Step 2:** Turn the dryer upside down and insert the plastic supports into their slots, turning them 90 degrees to lock into position.



- **Step 3:** Carefully raise the dryer and hang it on to the wall brackets. This is a 2–3 person job due to the dryers weight.
- **Step 4:** Replace the panel sticker with the inverted option (supplied).

## Control Panel

Your Esatto clothes dryer's controls explained.

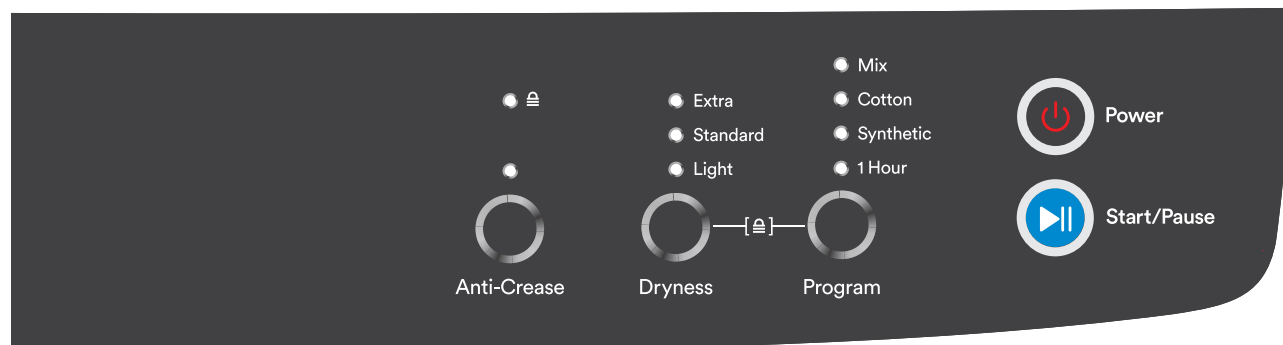

1. **Power button.**
2. **Start or Pause drying program.**
3. **Drying program selector (1 Hour, Synthetic, Cotton, Mixed Items)**
4. **Dryness level selector (Light, Standard, Extra Dry).**
5. **Anti-crease mode.**

## Operating Your Vented Dryer

### QUICK START:

1. **Ensure the dryer is switched on at the power outlet and add your wet clothes into the tumble drum.**
2. **Press the “Power” button to switch the dryer on.**
3. **Press the “Program” button to select your desired drying program. The LED light will indicate which program you select.**
4. **Press the “Dryness” button to select your desired level of dryness for your clothes.**
5. **Press the “Anti-crease” button to add the optional mode.**
6. **Press the “Start/Pause” button to begin your selected drying program.**
7. **If you would like to activate the Child Lock safety feature, simply press both the “Program” and “Dryness” button simultaneously for 3 seconds. The LED indicator next to the lock symbol will alight.**
8. **When your dryer completes its last heating cycle, a buzzer will sound for 1 second and then begin the cooling cycle. Once this cooling cycle is complete, the dryer’s buzzer will sound once more.**
9. **Remove your clothes from the dryer, Press the “Power” button to turn the dryer off and for safety reasons, remove the power cord from the power outlet.**
10. **Clean the filter and inner tumble drum.**

# Operating Your Vented Dryer

## DETAILED OPERATION:

### 1. PREPARATION BEFORE DRYER

- Clothes should be washed before use within the dryer.
- Always ensure the same types of clothes are dried together.
- Try to sort your clothes to be dried into load that take a similar time to dry (for example heavier items separate from light items).
- Make sure any decorations or buttons on your clothing items are safe for high temperatures and well protected.
- It is recommended to turn your clothes inside-out.
- Please ensure that the power cord is in perfect condition before use. Should there be any damage to the power cord or plug, please immediately isolate the dryer from power and contact Residentia Group on 1300 11 HELP (4357).












### 2. CHECK THE FILTER

- Make sure that the filter is always clean and in the correct position.
- The filter must be cleaned regularly.

### 3. LOAD THE DRYER

- For faster drying results, load the dryer to 1/2 -> 2/3 capacity of the drum. This will allow the clothes and air to circulate evenly.
- When drying a small load of clothes or even expensive clothes, it's best to add some towels that won't lose fibers, as this will help the wet clothes to dry more evenly.
- To avoid creases or static charges on your clothes, it's important to ensure you don't over-dry your items.

## REFERENCE WEIGHTS OF CLOTHING (WHEN DRY):

 Mixed-fabric clothes (about 800g)	 Jacket (about 800g cotton)	 Jeans (about 800g)	 Towel quilt (about 900g cotton)
 Single bedsheet (about 600g cotton)	 Work clothes (about 1120g)	 Sleepwear (about 200g)	 Long sleeve shirt (about 300g cotton)
 Short sleeve shirt (about 180g cotton)	 Short pants (about 70g cotton)	 Socks (about 50g mixed-weave)	

### 4. CLOSE THE DRYER DOOR

### 5. SET YOUR DESIRED DRYER PROGRAM



PROGRAM FUNCTIONS:

Clothing Type	Approximate amount of remaining humidity	Capacity (KG)	Programs	Dryness Level	Note
Cotton	80%~90%	7	Cotton	Extra	Please according to the Type and Capacity of the clothing to select the most suitable Program and Dryness Level.
	60%~70%	7 / 3.5	Cotton	Standard	
		7	Cotton	Less	
Mix	70%	7 / 3.5	Mix	Extra	
	60%	7 / 3.5	Mix	Standard	
Synthetic	50%	3.5	Synthetic	Extra	
	40%	3.5	Synthetic	Standard	
Cotton	—	1	1Hr	—	

**Note:** At the completion of a drying program, the clothes dryer will circulate cold air. This ensures that your clothing is left at a temperature and that your clothes aren't damaged. The Anti-Crease function adds a short amount of time at the end of your drying program to shake the clothes and reduce creasing.

Note: The energy rating was calculated using the Cotton program and Extra dryness level.

**Warning!** Always follow the care instructions on each of your garments.

6. END OF THE DRYING PROGRAM

→ At the completion of the program, an audible tone will sound to remind you to remove the clothes from the dryer.

7. TAKE OUT THE PLUG

→ Just to be safe, always unplug the dryer after each use.

8. CLEAN THE FILTER AND INNER DRUM

→ Accumulated dust and fibers will effect the air circulation inside the dryer and will cause longer drying times.

→ Always ensure the dryer is switched off and unplugged before cleaning.

## Cleaning and Maintenance

By ensuring proper cleaning and maintenance of your Esatto Vented Dryer, you can ensure that it will have a long and fault free operation.

**Warning!** To avoid an electric shock, always unplug your dryer before cleaning.

### CLEANING THE FILTER

- Remove the lint filter, located within the door opening.
- Clean the filter by wiping it with a damp cloth.
- Once dry, re-fit the lint filter into the door opening.

**Important!** Clean the filter after each use.



### CLEANING THE INNER DRUM

- Use a soft damp cloth to wipe the inner drum and cabinet.
- Ensure that the cloth is only slightly damp and never use excessive amounts of water.
- Do not use scouring pads or other abrasives as these will cause damage to your dryer.
- Do not use alcohol wipes or harsh cleaning chemicals.

## Troubleshooting

### OPERATION IN CASE OF EMERGENCY

In the event of an emergency you should:

- Switch off all oven controls (i.e. Cooking Function and Temperature)
- Switch the oven off at the isolation switch or at the fuse box.
- Call the Residentia Support Team on 1300 11 HELP (4357).

Some minor faults can be fixed by referring to the instructions given in the Troubleshooting section below. There is also a self-help section online at <http://www.residentiagroup.com.au>.

Error code	description	Criteria	Action after fault debounced	Failure indication
E1	Over-temperature	NTC or PCB fault	Stop the program and go to fault state	Led less flashing
E3	Temperature Sensor error	Temperature Sensor is open or PCB fault	Stop the program and go to fault state	Led less and standard flashing
E4	Temperature Sensor error	Temperature Sensor is short or PCB fault	Stop the program and go to fault state	Led extra flashing

# Troubleshooting

Further problem solving

Trouble	Cause	Solution
Will not start	<ul style="list-style-type: none"> <li>• Power cut.</li> <li>• The power plug is not plugged tight.</li> <li>• Dry clothes exceed.</li> <li>• The temperature fuse is cut.</li> </ul>	<ul style="list-style-type: none"> <li>• Wait for switching on electricity.</li> <li>• Check the power socket, make sure plug tight.</li> <li>• The clothes in drier must be after spinning.</li> <li>• Please career man restore the temperature fuse.</li> </ul>
External hot or can smell hot	<ul style="list-style-type: none"> <li>• The lint filter is dirty.</li> <li>• The uptake or exhaust duct is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure clean the lint filter in time.</li> <li>• Clean out the stem.</li> </ul>
Clothes too dry	<ul style="list-style-type: none"> <li>• The clothes in machine are too full.</li> <li>• Not to take out the clothes in time when finish.</li> <li>• The clothes don't assort properly.</li> <li>• The temperature is enacted too high.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure the clothes are not too full.</li> <li>• Take out the clothes immediately when finish.</li> <li>• See page 7.</li> <li>• Observe the maintenance label on clothes.</li> </ul>
Clothes shrink	<ul style="list-style-type: none"> <li>• Too dry</li> </ul>	<ul style="list-style-type: none"> <li>• Observe the maintenance label on clothes, if easy to shrink, should examine the clothes when dry. Take out the clothes when tiny damp for too dry. Then hang the clothes until full dry.</li> </ul>
Hairball on clothes	<ul style="list-style-type: none"> <li>• It is right for synthetic fibre and permanent press fibre causing hairballs. This is because the right rub causing.</li> </ul>	<ul style="list-style-type: none"> <li>• Use fabric softener lubricate fibre, please spray settled gule on cuff and neckline when iron clothes. Turn the sarcenet out for reducing rub.</li> </ul>

### Safety Reset

1. These dryers have a safety cut out switch which is activated by temperature.
2. The safety reset button is on the backboard. If your dryer not heating this button must be reset before the dryer will operate again. You may need to wait 10 minutes for cooling to occur.
3. The most common reason for the dryer to overheat is a blocked filter. Clean the lint filter after each load to prevent overheating of the dryer.


It will only be necessary to press the safety reset button if the dryer not heating. Allow the dryer at least 10 minutes to cool down before pressing the button .Press the white button in until you feel the reset click. Cleaning the filter after each load will avoid repetitive operation of the safety cut out switch.

The cut out switch may operate for the following reason:

1. Lint filter is blocked.
2. Exhaust outlets blocked at the back of the dryer.
3. Poor ventilation in the laundry or room-open a window or door
4. Lightweight garment eg. Handkerchief, sucked over the filter.

### Safety Reset Button:

Use your finger or a pencil to press the button in until you feel it click.

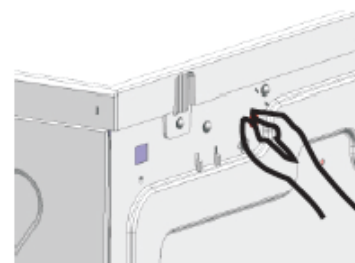

## Warranty

### WARRANTY TERMS AND CONDITIONS LAUNDRY APPLIANCES

→ This document sets out the terms and conditions of the product warranties for Residentia Group Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.

1. In this warranty
  - (a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL;
  - (b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010;
  - (c) 'Appliance' means any Residentia Group product purchased by you accompanied by this document;
  - (d) 'ASR' means Residentia Group authorised service representative;
  - (e) 'Residentia Group' means Residentia Group Pty Ltd of 20 Yaltara Avenue, Bundoora Victoria 3083, ACN 600 546 656 in respect of Appliances purchased in Australia;
  - (f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Residentia Group, at its discretion, to repair an Appliance during the Warranty Period;
  - (g) 'Warranty Period' means:
    - (i) where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects in Australia for 12 months following the date of original purchase of the Appliance;
  - (h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia.
3. During the Warranty Period Residentia Group or its ASR will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Residentia Group or its ASR may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Residentia Group. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
4. Parts and Appliances not supplied by Residentia Group are not covered by this warranty.
5. You will bear the cost of transportation, travel and delivery of the Appliance to and from Residentia Group or its ASR. If you reside outside of the service area, you will bear the cost of:
  - (a) travel of an authorised representative;
  - (b) transportation and delivery of the Appliance to and from Residentia Group or its ASR, in all instances, unless the Appliance is transported by Residentia Group or its ASR, the Appliance is transported at the owner's cost and risk while in transit to and from Residentia Group or its ASR.
6. Proof of purchase is required before you can make a claim under this warranty.

### Warranty continued

7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Residentia Group is not liable in the following situations (which are not exhaustive):
- (a) the Appliance is damaged by:
    - (i) accident
    - (ii) misuse or abuse, including failure to properly maintain or service
    - (iii) normal wear and tear
    - (iv) power surges, electrical storm damage or incorrect power supply
    - (v) incomplete or improper installation
    - (vi) incorrect, improper or inappropriate operation
    - (vii) insect or vermin infestation
    - (viii) failure to comply with any additional instructions supplied with the Appliance;
  - (b) the Appliance is modified without authority from Residentia Group in writing;
  - (c) the Appliance's serial number or warranty seal has been removed or defaced;
  - (d) the Appliance was serviced or repaired by anyone other than Residentia Group, an authorised repairer or ASR.
8. This warranty, the contract to which it relates and the relationship between you and Residentia Group are governed by the law applicable where the Appliance was purchased.
9. To the extent permitted by law, Residentia Group excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
10. For Appliances and services provided by Residentia Group in Australia, the Appliances come with a guarantee by Residentia Group that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.
11. At all times during the Warranty Period, Residentia Group shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
12. To enquire about claiming under this warranty, please follow these steps:
- (a) carefully check the operating instructions, user manual and the terms of this warranty;
  - (b) have the model and serial number of the Appliance available;
  - (c) have the proof of purchase (e.g. an invoice) available;
  - (d) telephone the numbers shown below.
13. You accept that if you make a warranty claim, Residentia Group and its ASR may exchange information in relation to you to enable Residentia Group to meet its obligations under this warranty.

**IMPORTANT** Before calling for service, please ensure that the steps in point 12 have been followed.

Service: Please call 1300 11 HELP (4357)

Spare Parts: Please call 1300 11 SPARE (7727)





Model Code/s:

**EVD7**



E2447

**Residentia**