



User Manual

ProfiHub A5/B5

5 Channel DP Spur and Repeater component

- 5 Isolated Channels.
- Transparent for all **PROFIBUS DP** protocols.
- RS 485 specifications** for each channel.
- Max. 12 Mbps.**
- Max. 31 devices** per channel.
- Max. 1200 m spur line length.**
- No limit in serial placement.
- No address** required.
- Integrated termination facilities.
- Configurable grounding system.

- IP 65** classification (ProfiHub A5).
- IP 20** classification (ProfiHub B5).

Safety Guidelines

This manual contains notices which you should observe to ensure your own personal safety, as well as to protect the product and connected equipment. These notices are highlighted in the manual by a warning sign and are marked as follows according to the level of danger:



Draws your attention to important information on handling the product, a particular part of the documentation or the correct functioning of the product.

Warning

This device and its components may only be used for the applications described in this manual and only in connection with devices or components that comply with PROFIBUS and an RS 485 interface. This product can only function correctly and safely if it is transported, stored, set up, installed, operated and maintained as recommended.

Qualified Technicians

Only qualified technicians should be allowed to install and work with this equipment. Qualified technicians are defined as persons who are authorized to commission, to ground, to tag circuits and systems in accordance with established safety practices and standards. It is recommended that the technicians carry a Certified PROFIBUS Installer or Certified PROFIBUS Engineer certificate.

Disclaimer of Liability

We have checked the contents of this manual as much as possible. Since deviations cannot be precluded entirely, we cannot guarantee full agreement. However, the content in this manual is reviewed regularly and any necessary corrections included in subsequent editions. Suggestions for improvement are welcomed.

Copyright © 2005-2014 PROCEN TEC

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of the publisher.

PROCEN TEC
Klopperman 16
2292 JD WATERINGEN
The Netherlands

Tel.: +31-(0)174-671800
Fax: +31-(0)174-671801
Email: info@procentec.com
Web: www.procentec.com

Important Information

Purpose of the Manual

This manual explains how to put the ProfiHub A5 and ProfiHub B5 into operation.

Recycling and Disposal

The parts of the ProfiHub can be recycled. For further information about environment-friendly recycling and the procedure for disposing your old equipment, please contact:

*PROCENTEC
Klopperman 16
2292 JD WATERINGEN
The Netherlands*

*Tel.: +31-(0)174-671800
Fax: +31-(0)174-671801
Email: info@procentec.com*

Document Updates

You can obtain constantly updated information on PROCENTEC products on the Internet at www.procentec.com

You can also contact PROCENTEC Customer Support:

- by phone at +31-(0)174-671800
- by fax at +31-(0)174-671801
- by email at support@procentec.com

Contents

1	Product Description.....	5
1.1	Product Features.....	6
1.2	Application areas.....	7
1.3	Additional Benefits.....	7
1.4	Channel Structure.....	8
1.5	Grounding System.....	8
1.6	Cable lengths for PROFIBUS DP.....	9
1.7	Cable types for PROFIBUS DP.....	10
1.8	Status Display.....	11
1.9	Comparison table.....	12
2	Installation Instructions ProfiHub A5.....	18
2.1	Location.....	18
2.2	Position.....	18
2.3	Mounting.....	18
2.4	Power Supply.....	19
2.5	Backbone.....	20
2.6	Spur Segments.....	21
2.7	Termination.....	22
2.8	Baudrate switch.....	23
3	Installation Instructions ProfiHub B5.....	24
3.1	Location.....	24
3.2	Position.....	24
3.3	Mounting.....	24
3.4	Power Supply.....	24
3.5	Backbone.....	25
3.6	Spur Segments.....	26
3.7	Termination.....	27
3.8	Baudrate switch.....	28
4	Technical Data ProfiHub A5.....	29
5	Technical Data ProfiHub B5.....	31
6	Sales offices and Distributors.....	33
7	Order codes.....	33
8	Glossary.....	37
9	Certificates.....	40
10	Revision History.....	43
11	Next version.....	44
12	Notes.....	45

1 Product Description

ProfiHub A5 and B5 are advanced, flexible and robust network components for PROFIBUS DP installations, to implement long multi-device spur lines and backbone structures with star/tree segments.

PROFIBUS DP is a high speed communication bus that has to comply with strict rules concerning spur lines, because of possible reflections that could lead to communication disturbances. If spur lines or star segments are required, costly investments in repeaters have to be done.

Innovative components for such applications are the ProfiHub A5 and B5. These are perfect economic solutions to implement reliable spur lines in high speed DP networks. They have the functionality of **5 galvanic isolated transparent repeaters**. This allows network structures with extended spur lines that individually can handle a maximum of 31 devices and a length equal to the main bus. **The ProfiHub A5 and B5 refresh a received message on one Channel and transfer it to all the other Channels (chicken foot topology).**

Because the ProfiHub A5 and B5 create isolated segments, the devices can now be removed and added during operation. Also electrical bus problems and EMC disturbances in a spur do not spread to the other segments. The intelligent logic and isolation circuits of the ProfiHubs do not change the bit width. This means the ProfiHubs do not have limitations in serial placement. The logic also detects the transmission speed automatically.

To assist the installation work, termination is integrated and can be switched on/off. The grounding concept is also selectable: direct or capacitive grounding. The ProfiHubs are powered by a 10 to 32 DC Voltage (110/230V AC versions are also available). For troubleshooting, maintenance and commissioning the ProfiHubs are equipped with a display on the outside, which indicate the status of each Channel (Data and Error).



Fig. 1 - ProfiHub A5 (IP65)



Fig. 2 - ProfiHub B5 (IP20)

1.1 Product Features

- 5 Galvanic isolated channels (repeater segments).
- Transparent for all **PROFIBUS DP protocols**.
- **DP - RS 485 specifications** for each channel.
- **9,6 Kbps to 12 Mbps**.
- **31 devices** per channel.
- **1200 m spur line length** (depends on transmission speed).
- No limit in serial placement or cascading of ProfiHubs.
- No address required.
- Integrated termination facilities (switches).
- Configurable grounding system (direct or capacitive).
- **IP 65** classification (ProfiHub A5).
- **IP 20** classification (ProfiHub B5).

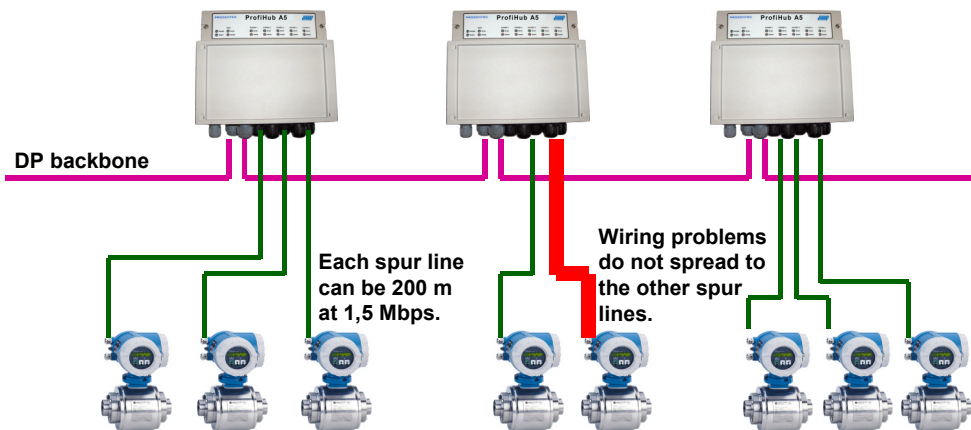
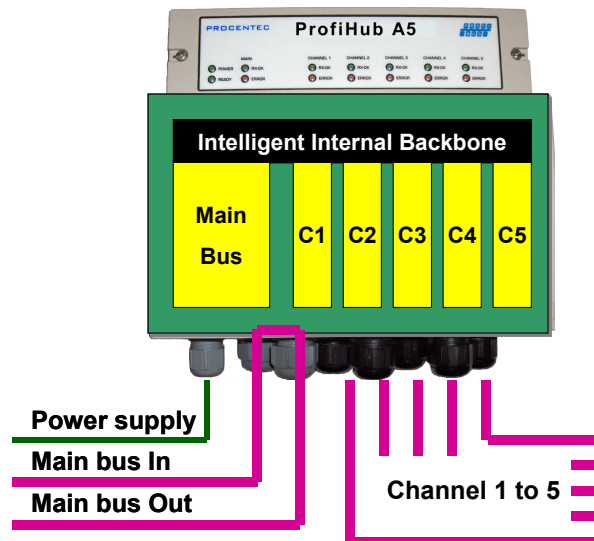


Fig. 3 - Long spur lines to instruments and the possibility to remove/insert them during operation. Short circuit protection on each spur line is automatically provided.

1.2 Application areas

- Dynamic spur lines to actuators, flow meters and pH analyzers.
- Removable drives and motors.
- Pull/Plug motor control centers (drawers).
- Roof mounted devices in tank farms.
- Dirty and humid environments.
- Barrier for non galvanic isolated equipment.
- Large star/tree structured networks.
- Outdoor applications with device and cable stress (ProfiHub A5).

1.3 Additional Benefits

- Hot slave **insertion and removal** during operation.
- **Short circuit protection** on each Channel.
- Compact and robust construction.
- Status and error display (per Channel).
- Suitable for all DP cables.
- Conveniently arranged networks.
- Easy extendable installations.
- Standard glands can be replaced with M12 (ProfiHub A5).
- On-board DB9 female connector for maintenance activities (ProfiHub A5).
- Cost Savings.

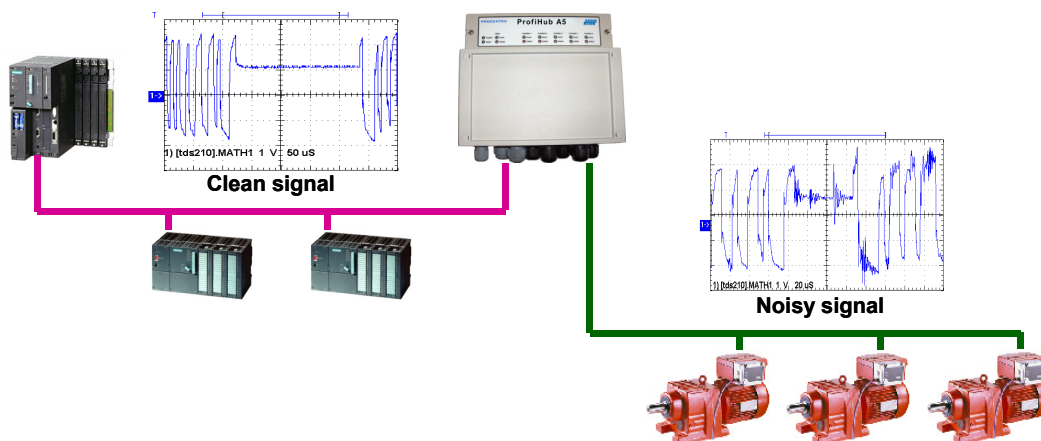


Fig. 4 - Because of the isolation and intelligence the ProfiHub provides, it can be used as a barrier for electrically sensitive segments. This keeps the backbone and other Channels clean.

1.6 Cable lengths for PROFIBUS DP

The cables on the Channels and the Main-Channel should comply with the PROFIBUS DP cable specifications for RS 485 (Fig. 6).

Baudrate (kbit/s)	9.6	19.2	45.45	93.75	187.5	500	1500	3000	6000	12000
Segment length (m)	1200	1200	1200	1200	1000	400	200	100	100	100
Segment length (feet)	3940	3940	3940	3940	3280	1310	656	328	328	328

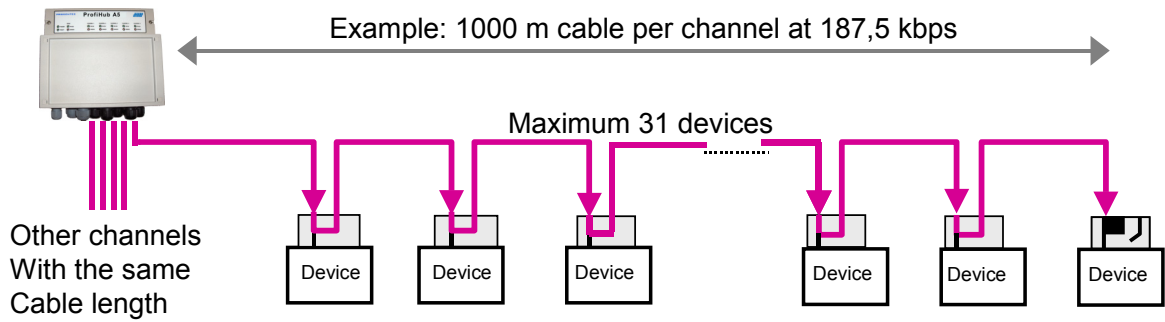


Fig. 6 - Cable lengths for PROFIBUS DP

1.7 Cable types for PROFIBUS DP

The cable type should comply with the PROFIBUS DP cable specifications for RS 485 (Fig. 7).

Parameter	Value
Wires	2 (twisted)
Impedance	135 .. 165 Ohm at 3 to 20 MHz
Capacity	< 30 pF/m
Loop resistance	< 110 Ohm/km
Wire diameter	> 0.64 mm
Wire area	> 0.32 mm ²

Fig. 7 - PROFIBUS DP cable specifications

The ProfiHub A5 can handle cables based on multiple protection sheaths with a diameter between 6 to 12 mm (Fig. 8).

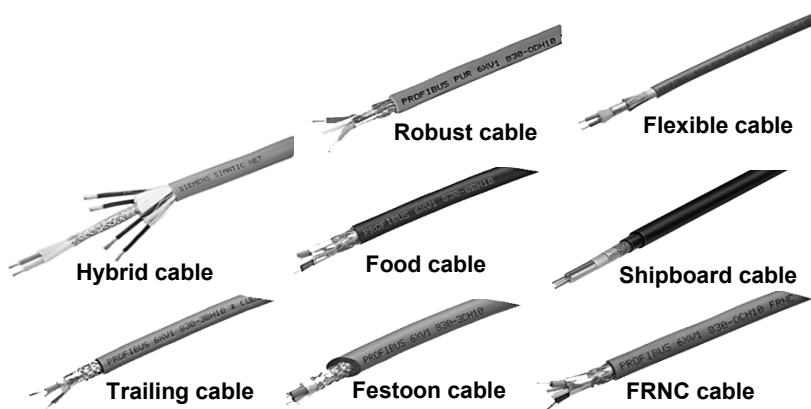




















Fig. 8 - Cables with different protection sheaths.

1.8 Status Display

The Status Display on the ProfiHubs is very useful for diagnostics.

	OFF	Blinking	ON
POWER	 Power is not switched on or an internal failure.	 Power supply not stable or an internal failure.	 Power supply OK.
Main READY	 Power is not switched on or an internal failure.	 Trying to detect the transmission speed, but has not locked it yet.	 The transmission speed has been detected.
Main RX-OK	 No communication detected on the Main-Channel.	 1 or more devices communicating on the Main-Channel.	 1 or more devices communicating on the Main-Channel.
Main ERROR	 No problem has been detected.	 Problem in the cabling has been detected (Main Channel).	 Problem in the cabling has been detected (Main Channel).
Channel RX-OK	 There is no communication detected (on this Channel).	 1 or more devices communicating (on this Channel).	 1 or more devices communicating (on this Channel).
Channel ERROR	 No problem has been detected.	 Problem in the cabling has been detected (on this Channel).	 Problem in the cabling has been detected (on this Channel).

1.9 Comparison table

	ProfiHub A5	ProfiHub B5												
Area	IP 65	IP 20												
Housing	Plastic	Metal												
Mounting	Corner screws	DIN-rail												
Weight	800 g	650 g												
Dimensions	213 x 210 x 95 mm	167 x 111 x 32 mm												
PROFIBUS connectors	Screw terminals (inside) Glands (outside)	Screw terminals and DB9 connectors												
Alternative connectors	Glands can be replaced with M12 connectors (see chapter 0)	No												
<h2>2 Sales offices and Distributors</h2>														
<table border="0"> <tr> <td style="vertical-align: top;"> <p>HEADQUARTERS</p> <p>PROCENTEC Klopperman 16 2292 JD WATERINGEN Netherlands Tel.: +31-(0)174-671800 Fax: +31-(0)174-671801 Email: info@procentec.com Internet: www.procentec.com</p> </td> <td style="vertical-align: top;"> <p>CHILE</p> <p>RP Ingenieria Limitada Tucapel 92 oficina 52 Concepción Chile Tel.: +56-(0)41-2469350 Fax: +56-(0)41-2522592 Email: rodrigopinto@rpingeneria.cl Internet: www.rpingeneria.cl</p> </td> <td style="vertical-align: top;"> <p>GERMANY</p> <p>PROCENTEC GmbH Benzstrasse 15 D-76185 Karlsruhe Germany Tel.: +49-(0)721 831 6630 Fax: +49-(0)721 831 66329 Email: info@procentec.de Internet: www.procentec.de</p> </td> </tr> <tr> <td style="vertical-align: top;"> <p>ARGENTINA</p> <p>eFALCOM Alcorta 2411 B1744- Moreno Buenos Aires ARGENTINA Tel.: +54 237 46 31 151 Fax: +54 237 46 31 150 Email: santiago.falcomer@efalcom.com Internet: www.efalcom.com.ar</p> </td> <td style="vertical-align: top;"> <p>CHINA</p> <p>PROCENTEC Beijing Room E-1115 WangJingYuan YouLeHui ChaoYang Beijing CHINA Tel.: +86(10)84766911 or 84787311 Fax: +86(10)84766722 Email: info@procentec.net Internet: www.procentec.net</p> </td> <td style="vertical-align: top;"> <p>INDIA</p> <p>U L ELECTRODEVICES P LTD NIRMAN CLASSIC , KATRAJ-KONDHWA ROAD, KATRAJ, PUNE-411046 India Tel.: +91-202 696 0050 Fax: +91-202 696 2079 Email: dileep.miskin@ulepl.com Internet: www.ulepl.com</p> </td> </tr> <tr> <td style="vertical-align: top;"> <p>AUSTRALIA</p> <p>IS Systems Pty Limited 14 Laverick Ave., Tomago, NSW, Australia, 2322 Tel.: +61 2 4964 8548 Fax: +61 2 4964 8877 Email: fritz.woller@issystems.com.au Internet: www.issystems.com.au</p> </td> <td style="vertical-align: top;"> <p>CZECH REPUBLIC</p> <p>FOXON e-shop Polní 367 460 01 Liberec 12 Czech Republic Tel.: +420 484 845 555 Fax: +420 484 845 556 Email: foxon@foxon.cz Internet: www.foxon.cz</p> </td> <td style="vertical-align: top;"> <p>IRELAND</p> <p>PROFIBUS Ireland Automation Research Centre University of Limerick National Technology Park, Plassey LIMERICK, Ireland Tel.: +353-61-202107 or +35361240240 Fax: +353-61-202582 Email: info@profibus.ie Internet: www.profibus.ie</p> </td> </tr> <tr> <td style="vertical-align: top;"> <p>Pentair Flow Control Pacific Unit 4, 57 Pine Road, Yennora NSW, Australia, 2161 Tel.: +61 2 9612 2323</p> </td> <td style="vertical-align: top;"> <p>DENMARK</p> <p>ProSaiCon Jernbanegade 23B</p> </td> <td style="vertical-align: top;"> <p>ISRAEL</p> <p>Instrumentics Industrial Control 8 Hamlacha St.</p> </td> </tr> </table>			<p>HEADQUARTERS</p> <p>PROCENTEC Klopperman 16 2292 JD WATERINGEN Netherlands Tel.: +31-(0)174-671800 Fax: +31-(0)174-671801 Email: info@procentec.com Internet: www.procentec.com</p>	<p>CHILE</p> <p>RP Ingenieria Limitada Tucapel 92 oficina 52 Concepción Chile Tel.: +56-(0)41-2469350 Fax: +56-(0)41-2522592 Email: rodrigopinto@rpingeneria.cl Internet: www.rpingeneria.cl</p>	<p>GERMANY</p> <p>PROCENTEC GmbH Benzstrasse 15 D-76185 Karlsruhe Germany Tel.: +49-(0)721 831 6630 Fax: +49-(0)721 831 66329 Email: info@procentec.de Internet: www.procentec.de</p>	<p>ARGENTINA</p> <p>eFALCOM Alcorta 2411 B1744- Moreno Buenos Aires ARGENTINA Tel.: +54 237 46 31 151 Fax: +54 237 46 31 150 Email: santiago.falcomer@efalcom.com Internet: www.efalcom.com.ar</p>	<p>CHINA</p> <p>PROCENTEC Beijing Room E-1115 WangJingYuan YouLeHui ChaoYang Beijing CHINA Tel.: +86(10)84766911 or 84787311 Fax: +86(10)84766722 Email: info@procentec.net Internet: www.procentec.net</p>	<p>INDIA</p> <p>U L ELECTRODEVICES P LTD NIRMAN CLASSIC , KATRAJ-KONDHWA ROAD, KATRAJ, PUNE-411046 India Tel.: +91-202 696 0050 Fax: +91-202 696 2079 Email: dileep.miskin@ulepl.com Internet: www.ulepl.com</p>	<p>AUSTRALIA</p> <p>IS Systems Pty Limited 14 Laverick Ave., Tomago, NSW, Australia, 2322 Tel.: +61 2 4964 8548 Fax: +61 2 4964 8877 Email: fritz.woller@issystems.com.au Internet: www.issystems.com.au</p>	<p>CZECH REPUBLIC</p> <p>FOXON e-shop Polní 367 460 01 Liberec 12 Czech Republic Tel.: +420 484 845 555 Fax: +420 484 845 556 Email: foxon@foxon.cz Internet: www.foxon.cz</p>	<p>IRELAND</p> <p>PROFIBUS Ireland Automation Research Centre University of Limerick National Technology Park, Plassey LIMERICK, Ireland Tel.: +353-61-202107 or +35361240240 Fax: +353-61-202582 Email: info@profibus.ie Internet: www.profibus.ie</p>	<p>Pentair Flow Control Pacific Unit 4, 57 Pine Road, Yennora NSW, Australia, 2161 Tel.: +61 2 9612 2323</p>	<p>DENMARK</p> <p>ProSaiCon Jernbanegade 23B</p>	<p>ISRAEL</p> <p>Instrumentics Industrial Control 8 Hamlacha St.</p>
<p>HEADQUARTERS</p> <p>PROCENTEC Klopperman 16 2292 JD WATERINGEN Netherlands Tel.: +31-(0)174-671800 Fax: +31-(0)174-671801 Email: info@procentec.com Internet: www.procentec.com</p>	<p>CHILE</p> <p>RP Ingenieria Limitada Tucapel 92 oficina 52 Concepción Chile Tel.: +56-(0)41-2469350 Fax: +56-(0)41-2522592 Email: rodrigopinto@rpingeneria.cl Internet: www.rpingeneria.cl</p>	<p>GERMANY</p> <p>PROCENTEC GmbH Benzstrasse 15 D-76185 Karlsruhe Germany Tel.: +49-(0)721 831 6630 Fax: +49-(0)721 831 66329 Email: info@procentec.de Internet: www.procentec.de</p>												
<p>ARGENTINA</p> <p>eFALCOM Alcorta 2411 B1744- Moreno Buenos Aires ARGENTINA Tel.: +54 237 46 31 151 Fax: +54 237 46 31 150 Email: santiago.falcomer@efalcom.com Internet: www.efalcom.com.ar</p>	<p>CHINA</p> <p>PROCENTEC Beijing Room E-1115 WangJingYuan YouLeHui ChaoYang Beijing CHINA Tel.: +86(10)84766911 or 84787311 Fax: +86(10)84766722 Email: info@procentec.net Internet: www.procentec.net</p>	<p>INDIA</p> <p>U L ELECTRODEVICES P LTD NIRMAN CLASSIC , KATRAJ-KONDHWA ROAD, KATRAJ, PUNE-411046 India Tel.: +91-202 696 0050 Fax: +91-202 696 2079 Email: dileep.miskin@ulepl.com Internet: www.ulepl.com</p>												
<p>AUSTRALIA</p> <p>IS Systems Pty Limited 14 Laverick Ave., Tomago, NSW, Australia, 2322 Tel.: +61 2 4964 8548 Fax: +61 2 4964 8877 Email: fritz.woller@issystems.com.au Internet: www.issystems.com.au</p>	<p>CZECH REPUBLIC</p> <p>FOXON e-shop Polní 367 460 01 Liberec 12 Czech Republic Tel.: +420 484 845 555 Fax: +420 484 845 556 Email: foxon@foxon.cz Internet: www.foxon.cz</p>	<p>IRELAND</p> <p>PROFIBUS Ireland Automation Research Centre University of Limerick National Technology Park, Plassey LIMERICK, Ireland Tel.: +353-61-202107 or +35361240240 Fax: +353-61-202582 Email: info@profibus.ie Internet: www.profibus.ie</p>												
<p>Pentair Flow Control Pacific Unit 4, 57 Pine Road, Yennora NSW, Australia, 2161 Tel.: +61 2 9612 2323</p>	<p>DENMARK</p> <p>ProSaiCon Jernbanegade 23B</p>	<p>ISRAEL</p> <p>Instrumentics Industrial Control 8 Hamlacha St.</p>												

	<p>Fax: +61 2 9612 2324 Email: rkoenig@typac.com.au Internet: www.profibuscetre.com.au</p> <p>BELGIUM and LUXEMBOURG</p> <p>Bintz Technics N.V. Brixtonlaan 25, 1930 ZAVENTEM Belgium Tel.: +32 2 720 49 16 Fax: +32 2 720 37 50 Email: bloemen@bintz.be Internet: www.bintz.be</p> <p>BRAZIL</p> <p>Westcon Instrument. Indl Ltda Rual Alvaro Rodrigues, 257 São Paulo – SP Brazil - CEP 04582-000 Tel.: +55 11 5561-7488 Fax: +55 11 5093-2592 Email: paolo@wii.com.br Internet: www.wii.com.br</p> <p>JAPAN</p> <p>TJ Group C/O Japanese PROFIBUS Organisation West World Building 4F 3-1-6 Higashi-Gotanda, Shinagawa-ku, TOKYO Japan Tel.: +81-3-6450-3739 Fax: +81-3-6450-3739 Email: info@profibus.jp</p> <p>KOREA</p> <p>Hi-PRO Tech. Co., Ltd. #2802, U-Tower, 1029 Youngduk-dong, Giheung-gu Yongin-Si, Kyunggi-do, 446-908 KOREA Tel.: +82 82-31-216-2640 Fax: +82 82-31-216-2644 Email: chays@hiprotech.co.kr Internet: www.profibus.co.kr</p> <p>LEBANON</p> <p>Industrial Technologies S.A.L (ITEC) Point Center, Boulevard Fouad Chehab, Sin El Fil BEIRUT Tel.: +961 1 491161 Fax: +961 1 491162 Email: sales@iteclb.com Internet: www.iteclb.com</p> <p>NETHERLANDS</p> <p>PROCENTEC B.V. Klopperman 16 2292 JD Wateringen</p>	<p>DK 4000 Roskilde Denmark Tel.: +45 70 20 52 01 Fax: +45 70 20 52 02 Email: hfj@prosaicon.dk Internet: www.prosaicon.dk</p> <p>FINLAND</p> <p>Hantekno Oy Kalliotie 2 FIN-04360 Tuusula Finland Tel.: +358 40 8222 014 Email: info@hantekno.com Internet: www.hantekno.fi</p> <p>FRANCE</p> <p>AGLiCOM Bâtiment B 1, rue de la Briaudière Z.A. La Châtaigneraie 37510 BALLAN-MIRE France Tel.: +33 247 76 10 20 Fax: +33 247 37 95 54 Email: jy.bois@agilicom.fr Internet: www.agilicom.fr</p> <p>SAUDI ARABIA</p> <p>ASM Process Automation Al-Zahra Dist. – Attas st. cross section with helmy Kutby St. Villa no.25 JEDDAH-21553 Tel.: +966 2 691 2741 Fax: +966 2 682 8943 Email: info@asmestablishment.com Internet: www.asmestablishment.com</p> <p>SINGAPORE</p> <p>Allegro Electronics 236 Serangoon Avenue 3 07-98 550236 Singapore Singapore</p> <p>ISEP (S) Pte Ltd Blk 3015A, #07-12, Ubi Road 1, Singapore 408705 Tel.: +65-6356 4237 Fax: +65-6844 4265 Email: stevenkee@ise-p.com Internet: www.ise-p.com</p> <p>SLOVAKIA</p> <p>ControlSystem s.r.o. Stúrova 4 977 01 BREZNO Tel.: +421 486115900 Fax: +421 486111891 Email: jan.snopko@controlsystem.sk Internet: www.controlsystem.sk</p> <p>SOUTH AFRICA</p> <p>IDX ONLINE CC 1 Weaver Street, Fourways JOHANNESBURG</p>	<p>New Industrial Zone Netanya, 42170 Israel Tel.: +972-9-8357090 Fax: +972-9-8350619 Email: info@instrumentics-ic.co.il Internet: www.inst-ic.co.il</p> <p>ITALY</p> <p>C.S.M.T Gestione S.C.A.R.L. via Branze n. 43/45 25123 BRESCIA Italy Tel.: +39 030 6595111 Fax: +39 030 6595000 Email: profibus@csmt.it Internet: profibus.csmt.it</p> <p>Genoa FIELDBUS Competence Centre Via Greto di Cornigliano, 6R/38 16152 GENOVA Italy Tel.: +39 010 86 02 580 Fax: +39 010 65 63 233 Email: procentec@gfcc.it Internet: www.gfcc.it</p> <p>TAIWAN</p> <p>Full Data Technology 6F., No.200, Gangqian Rd., Neihu District, Taipei City 114, Taiwan Tel.: +886-2-87519941/9097 Fax: +886-2-87519533 Email: sales@fulldata.com.tw Internet: www.fulldata.com.tw</p> <p>TURKEY</p> <p>Emikon Otomasyon DES Sanayi sitesi 103 sokak B-7 blok No:16 Yukari Dudullu / Umraniye Istanbul 34776 Turkey Tel.: +90 216 420 8347 Fax: +90 216 420 8348 Email: tolgaturunz@emikonotomasyon.com Internet: www.emikonotomasyon.com</p> <p>UNITED ARAB EMIRATES</p> <p>Synergy Controls 907, IT Plaza Silicon Oasis DUBAI UAE Tel.: +971 4 3262692 Fax: +971 4 3262693 Email: sales@synergycontrols.ae</p> <p>UNITED KINGDOM</p> <p>Verwer Training & Consultancy 5 Barclay Road Poynton, Stockport</p>
--	---	---	--

	<p>Tel.: +31-(0)174-671800 Fax: +31-(0)174-671 801 Email: info@procentec.com Internet: www.procentec.com</p> <p>NORWAY</p> <p>AD Elektronik AS Boks 641 N-1401 SKI Norway Tel.: +47 64 97 60 60 Fax: +47 64 97 60 70 Email: kai@ade.no Internet: www.ade.no</p> <p>POLAND</p> <p>INTEX Sp. z o.o. ul. Portowa 4 44-102 GLIWICE Poland Tel.: +48 32 230 75 16 Fax: +48 32 230 75 17 Email: intex@intex.com.pl Internet: www.intex.com.pl</p> <p>ROMANIA</p> <p>S.C. SVT Electronics S.R.L. Brăila 7 540331 Tg-Mure Romania Tel.: +40 365 809 305 Fax: +40 365 809 305 Email: sajgo.tibor@svt.ro Internet: www.svt.ro</p> <p>UNITED STATES and MEXICO</p> <p>Grid Connect Inc. 1630 W. Diehl Road Naperville, Illinois 60563 USA Tel.: +1 630 245-1445 Fax: +1 630 245-1717 Email: sales@gridconnect.com Internet: www.gridconnect.com/procentec.html</p> <p>VIETNAM</p> <p>Bavitech Corporation 42 Trung Son Street Ward 2, Tan Binh District Ho Chi Minh City Tel.: +84-8-3547 0976 Fax: +84-8-3547 0977 Email: hai.hoang@bavitech.com Internet: www.bavitech.com</p> <p>South Africa Tel.: +27(11) 548-9960 Fax: +27(11) 465-8890 Email: sales@idxonline.com Internet: www.idxonline.com</p> <p>SPAIN and PORTUGAL</p> <p>LOGITEK, S.A Ctra. de Sant Cugat, 63 Esc. B Planta 1ª Rubí (BARCELONA), 08191 Tel.: +34 93 588 67 67 Email: xavier.cardena@logitek.es Internet: www.logitek.es</p> <p>Cheshire SK12 1YY Tel.: +44 (0)1625 871199 Email: andy@verwertraining.com Internet: www.verwertraining.com</p> <p>Hi-Port Software Limited The Hub 2 Martin Close Lee-on-Solent, Hampshire PO13 8LG Tel.: +44 (0)8452 90 20 30 Fax: +44 (0)2392 552880 Email: sales@hiport.co.uk Internet: www.hiport.co.uk</p> <p>SWEDEN</p> <p>P&L Nordic AB Box 252, S-281 23 HÄSSLEHOLM Sweden Tel.: +46 451 74 44 00 Fax: +46 451 89 833 Email: hans.maunsbach@pol.se Internet: www.pol.se/profibus</p> <p>SWITZERLAND</p> <p>Berner Fachhochschule für Technik und Informatik PROFIBUS Kompetenzzentrum Jicoweg 1 CH-3400 BURGDORF Switzerland Tel.: +41 (0) 34 426 68 32 Fax: +41 (0) 34 426 68 13 Email: max.felser@bfh.ch Internet: www.profitrace.ch</p> <p>Parkelect Ltd. 84 Dargan Road Belfast BT3 9JU N. Ireland Tel.: +44 2890 777743 Fax: +44 2890 777794 Email:jgillan@parkelect.co.uk Internet: www.parkelect.co.uk</p> <p>Order codes)</p>	
Termination LEDs	No	Yes
Ground rail	Optional (see chapter 0	Yes
	3 Sales offices and Distributors	

	<p>HEADQUARTERS</p> <p>PROCENTEC Klopperman 16 2292 JD WATERINGEN Netherlands Tel.: +31-(0)174-671800 Fax: +31-(0)174-671801 Email: info@procentec.com Internet: www.procentec.com</p> <p>ARGENTINA</p> <p>eFALCOM Alcorta 2411 B1744- Moreno Buenos Aires ARGENTINA Tel.: +54 237 46 31 151 Fax: +54 237 46 31 150 Email: santiago.falcomer@efalcom.com Internet: www.efalcom.com.ar</p> <p>AUSTRALIA</p> <p>IS Systems Pty Limited 14 Laverick Ave., Tomago, NSW, Australia, 2322 Tel.: +61 2 4964 8548 Fax: +61 2 4964 8877 Email: fritz.woller@issystems.com.au Internet: www.issystems.com.au</p> <p>Pentair Flow Control Pacific Unit 4, 57 Pine Road, Yennora NSW, Australia, 2161 Tel.: +61 2 9612 2323 Fax: +61 2 9612 2324 Email: rkoenig@typac.com.au Internet: www.profibuscentre.com.au</p> <p>BELGIUM and LUXEMBOURG</p> <p>Bintz Technics N.V. Brixtonlaan 25, 1930 ZAVENTEM Belgium Tel.: +32 2 720 49 16 Fax: +32 2 720 37 50 Email: bloemen@bintz.be Internet: www.bintz.be</p> <p>BRAZIL</p> <p>Westcon Instrument. Indl Ltda Rual Alvaro Rodrigues, 257 São Paulo – SP Brazil - CEP 04582-000 Tel.: +55 11 5561-7488 Fax: +55 11 5093-2592 Email: paolo@wii.com.br Internet: www.wii.com.br</p>	<p>CHILE</p> <p>RP Ingeniería Limitada Tucapel 92 oficina 52 Concepción Chile Tel.: +56-(0)41-2469350 Fax: +56-(0)41-2522592 Email: rodrigopinto@rpingeneria.cl Internet: www.rpingeneria.cl</p> <p>CHINA</p> <p>PROCENTEC Beijing Room E-1115 WangJingYuan YouLeHui ChaoYang Beijing CHINA Tel.: +86(10)84766911 or 84787311 Fax: +86(10)84766722 Email: info@procentec.net Internet: www.procentec.net</p> <p>CZECH REPUBLIC</p> <p>FOXON e-shop Polní 367 460 01 Liberec 12 Czech Republic Tel.: +420 484 845 555 Fax: +420 484 845 556 Email: foxon@foxon.cz Internet: www.foxon.cz</p> <p>DENMARK</p> <p>ProSaiCon Jernbanegade 23B DK 4000 Roskilde Denmark Tel.: +45 70 20 52 01 Fax: +45 70 20 52 02 Email: hfj@prosaicon.dk Internet: www.prosaicon.dk</p> <p>FINLAND</p> <p>Hantekno Oy Kalliotie 2 FIN-04360 Tuusula Finland Tel.: +358 40 8222 014 Email: info@hantekno.com Internet: www.hantekno.fi</p> <p>FRANCE</p> <p>AGILICOM Bâtiment B 1, rue de la Briaudière Z.A. La Châtaigneraie 37510 BALLAN-MIRE France Tel.: +33 247 76 10 20 Fax: +33 247 37 95 54 Email: jy.bois@agilicom.fr Internet: www.agilicom.fr</p>	<p>GERMANY</p> <p>PROCENTEC GmbH Benzstrasse 15 D-76185 Karlsruhe Germany Tel.: +49-(0)721 831 6630 Fax: +49-(0)721 831 66329 Email: info@procentec.de Internet: www.procentec.de</p> <p>INDIA</p> <p>U L ELECTRODEVICES P LTD NIRMAN CLASSIC , KATRAJ-KONDHWA ROAD, KATRAJ, PUNE-411046 India Tel.: +91-202 696 0050 Fax: +91-202 696 2079 Email: dileep.miskin@ulepl.com Internet: www.ulepl.com</p> <p>IRELAND</p> <p>PROFIBUS Ireland Automation Research Centre University of Limerick National Technology Park, Plassey LIMERICK, Ireland Tel.: +353-61-202107 or +35361240240 Fax: +353-61-202582 Email: info@profibus.ie Internet: www.profibus.ie</p> <p>ISRAEL</p> <p>Instrumetrics Industrial Control 8 Hamlacha St. New Industrial Zone Netanya, 42170 Israel Tel.: +972-9-8357090 Fax: +972-9-8350619 Email: info@instrumetrics-ic.co.il Internet: www.inst-ic.co.il</p> <p>ITALY</p> <p>C.S.M.T Gestione S.C.A.R.L. via Branze n. 43/45 25123 BRESCIA Italy Tel.: +39 030 6595111 Fax: +39 030 6595000 Email: profibus@csmt.it Internet: profibus.csmt.it</p> <p>Genoa FIELDBUS Competence Centre Via Greto di Cornigliano, 6R/38 16152 GENOVA Italy Tel.: +39 010 86 02 580 Fax: +39 010 65 63 233 Email: procentec@gfcc.it Internet: www.gfcc.it</p>
--	--	---	---

	<p>JAPAN</p> <p>TJ Group C/O Japanese PROFIBUS Organisation West World Building 4F 3-1-6 Higashi-Gotanda, Shinagawa-ku, TOKYO Japan Tel.: +81-3-6450-3739 Fax: +81-3-6450-3739 Email: info@profibus.jp</p> <p>KOREA</p> <p>Hi-PRO Tech. Co., Ltd. #2802, U-Tower, 1029 Youngduk-dong, Giheung-gu Yongin-Si, Kyunggi-do, 446-908 KOREA Tel.: +82 82-31-216-2640 Fax: +82 82-31-216-2644 Email: chays@hiprotech.co.kr Internet: www.profibus.co.kr</p> <p>LEBANON</p> <p>Industrial Technologies S.A.L (ITEC) Point Center, Boulevard Fouad Chehab, Sin El Fil BEIRUT Tel.: +961 1 491161 Fax: +961 1 491162 Email: sales@iteclb.com Internet: www.iteclb.com</p> <p>NETHERLANDS</p> <p>PROCENTEC B.V. Klopperman 16 2292 JD Wateringen Tel.: +31-(0)174-671800 Fax: +31-(0)174-671 801 Email: info@procentec.com Internet: www.procentec.com</p> <p>NORWAY</p> <p>AD Elektronikk AS Boks 641 N-1401 SKI Norway Tel.: +47 64 97 60 60 Fax: +47 64 97 60 70 Email: kai@ade.no Internet: www.ade.no</p> <p>POLAND</p> <p>INTEX Sp. z o.o. ul. Portowa 4 44-102 GLIWICE Poland Tel.: +48 32 230 75 16 Fax: +48 32 230 75 17 Email: intex@intex.com.pl Internet: www.intex.com.pl</p>	<p>SAUDI ARABIA</p> <p>ASM Process Automation Al-Zahra Dist. – Atlas st. cross section with helmy Kutby St. Villa no.25 JEDDAH-21553 Tel.: +966 2 691 2741 Fax: +966 2 682 8943 Email: info@asmestablishment.com Internet: www.asmestablishment.com</p> <p>SINGAPORE</p> <p>Allegro Electronics 236 Serangoon Avenue 3 07-98 550236 Singapore Singapore</p> <p>ISEP (S) Pte Ltd Blk 3015A, #07-12, Ubi Road 1, Singapore 408705 Tel.: +65-6356 4237 Fax: +65-6844 4265 Email: stevenkee@ise-p.com Internet: www.ise-p.com</p> <p>SLOVAKIA</p> <p>ControlSystem s.r.o. Stúrova 4 977 01 BREZNO Tel.: +421 486115900 Fax: +421 486111891 Email: jan.snopko@controlsystem.sk Internet: www.controlsystem.sk</p> <p>SOUTH AFRICA</p> <p>IDX ONLINE CC 1 Weaver Street, Fourways JOHANNESBURG South Africa Tel.: +27(11) 548-9960 Fax: +27(11) 465-8890 Email: sales@idxonline.com Internet: www.idxonline.com</p> <p>SPAIN and PORTUGAL</p> <p>LOGITEK, S.A Ctra. de Sant Cugat, 63 Esc. B Planta 1ª Rubí (BARCELONA), 08191 Tel.: +34 93 588 67 67 Email: xavier.cardena@logitek.es Internet: www.logitek.es</p> <p>SWEDEN</p> <p>P&L Nordic AB Box 252, S-281 23 HÄSSLEHOLM Sweden Tel.: +46 451 74 44 00 Fax: +46 451 89 833 Email: hans.maunsbach@pol.se Internet: www.pol.se/profibus</p>	<p>TAIWAN</p> <p>Full Data Technology 6F., No.200, Gangqian Rd., Neihu District, Taipei City 114, Taiwan Tel.: +886-2-87519941/9097 Fax: +886-2-87519533 Email: sales@fulldata.com.tw Internet: www.fulldata.com.tw</p> <p>TURKEY</p> <p>Emikon Otomasyon DES Sanayi sitesi 103 sokak B-7 blok No:16 Yukari Dudullu / Umraniye Istanbul 34776 Turkey Tel.: +90 216 420 8347 Fax: +90 216 420 8348 Email: tolgaturunz@emikonotomasyon.com Internet: www.emikonotomasyon.com</p> <p>UNITED ARAB EMIRATES</p> <p>Synergy Controls 907, IT Plaza Silicon Oasis DUBAI UAE Tel.: +971 4 3262692 Fax: +971 4 3262693 Email: sales@synergycontrols.ae</p> <p>UNITED KINGDOM</p> <p>Verwer Training & Consultancy 5 Barclay Road Poynton, Stockport Cheshire SK12 1YY Tel.: +44 (0)1625 871199 Email: andy@verwertraining.com Internet: www.verwertraining.com</p> <p>Hi-Port Software Limited The Hub 2 Martin Close Lee-on-Solent, Hampshire PO13 8LG Tel.: +44 (0)8452 90 20 30 Fax: +44 (0)2392 552880 Email: sales@hiport.co.uk Internet: www.hiport.co.uk</p> <p>iTech Unit 1 Dukes Road Troon, Ayrshire KA10 6QR Tel.: +44 (0)1292 311 613 Fax: +44 (0)1292 311 578 Email: sales@itech-troon.co.uk Internet: www.itech-troon.co.uk</p>
--	---	--	---

	<p>ROMANIA</p> <p>S.C. SVT Electronics S.R.L. Brăila 7 540331 Tg-Mure Romania Tel.: +40 365 809 305 Fax: +40 365 809 305 Email: saigo.tibor@svt.ro Internet: www.svt.ro</p> <p>UNITED STATES and MEXICO</p> <p>Grid Connect Inc. 1630 W. Diehl Road Naperville, Illinois 60563 USA Tel.: +1 630 245-1445 Fax: +1 630 245-1717 Email: sales@gridconnect.com Internet: www.gridconnect.com/procentec.html</p> <p>VIETNAM</p> <p>Bavitech Corporation 42 Trung Son Street Ward 2, Tan Binh District Ho Chi Minh City Tel.: +84-8-3547 0976 Fax: +84-8-3547 0977 Email: hai.hoang@bavitech.com Internet: www.bavitech.com</p> <p>Order codes)</p>	<p>SWITZERLAND</p> <p>Berner Fachhochschule für Technik und Informatik PROFIBUS Kompetenzzentrum Jlcoweg 1 CH-3400 BURGDORF Switzerland Tel.: +41 (0) 34 426 68 32 Fax: +41 (0) 34 426 68 13 Email: max.felser@bfh.ch Internet: www.profitrace.ch</p>	<p>Parkelect Ltd. 84 Dargan Road Belfast BT3 9JU N. Ireland Tel.: +44 2890 777743 Fax: +44 2890 777794 Email: jgillan@parkelect.co.uk Internet: www.parkelect.co.uk</p>
--	--	--	---

4 Installation Instructions ProfiHub A5

4.1 Location

The ProfiHub A5 can be installed everywhere in a non-hazardous area that complies with IP 65 (DIN 40 050) and the specified temperature range of -40 to +75° Celsius.

4.2 Position

The ProfiHub A5 can be installed in every position, but it is recommended to install it with the cable glands pointing down to create a more reliable protection against moist and dust (water compartment and glands). In this position it is also easier to read the status display.

4.3 Mounting

The ProfiHub A5 has 4 mounting holes for 4..5 mm screws (Fig. 9). To reach the holes on position 1 and 2, the top lid has to be removed.

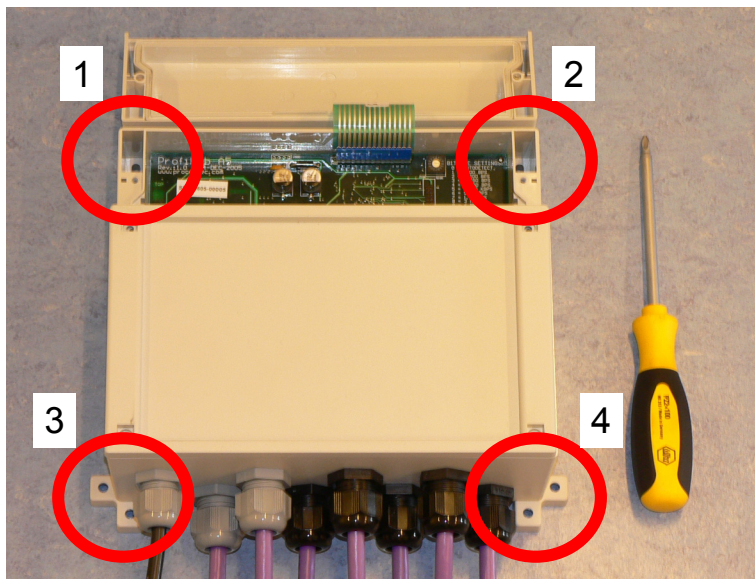


Fig. 9 - Positions of the mounting holes.



- 1) It is recommended to mount the ProfiHub A5 with at least 4 suitable screws/bolts in position 1, 2, 3 and 4.
- 2) Be careful with the flat cable that connects the lid with the PCB.

4.4 Power Supply

The 4-pin screw type power connector is located on the bottom left of the PCB (Fig. 10).

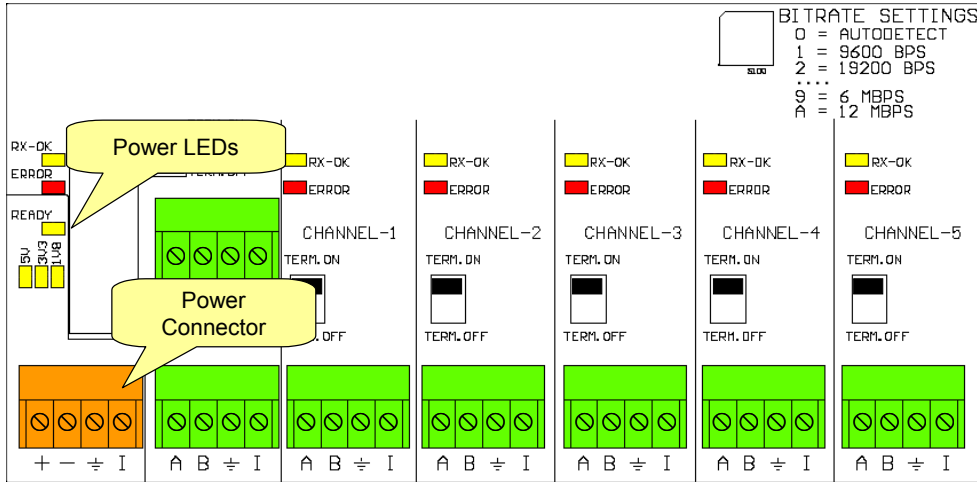


Fig. 10 - Power connector and LEDs

The power supply has to comply with the following specifications:

- Voltage: **10 to 32 Vdc**
- Current: **Min. 130 mA**
- Wire diameter: **< 2,5 mm²**
- Cable thickness: **5 to 10 mm**

Procedure

To connect the 24V supply to the 4-pin screw-type terminal, proceed as follows:

- Strip the insulation from the cable or the conductors for the 24V power supply.
- Secure the conductors in the screw-type terminal.

Note: There is a grounding point that can be used.

To connect the power supply, you need a 3 mm screwdriver.

Testing

If the power is switched on it can be diagnosed by the following indicators on the PCB:

- All the LEDs should be shortly blinking.
- The READY LED is ON or Blinking.
- The voltage LEDs are ON (5V, 3V3 and 1V8).



It is recommended to use a power supply with a ground lead (3-wire).

4.5 Backbone

Connect the DP backbone cable to the bottom connector of the Main-Channel (**Fig. 11**). If the ProfiHub is not the last device on the bus segment, connect the Bus-Out cable to the top connector of the Main-Channel (**Fig. 11**).

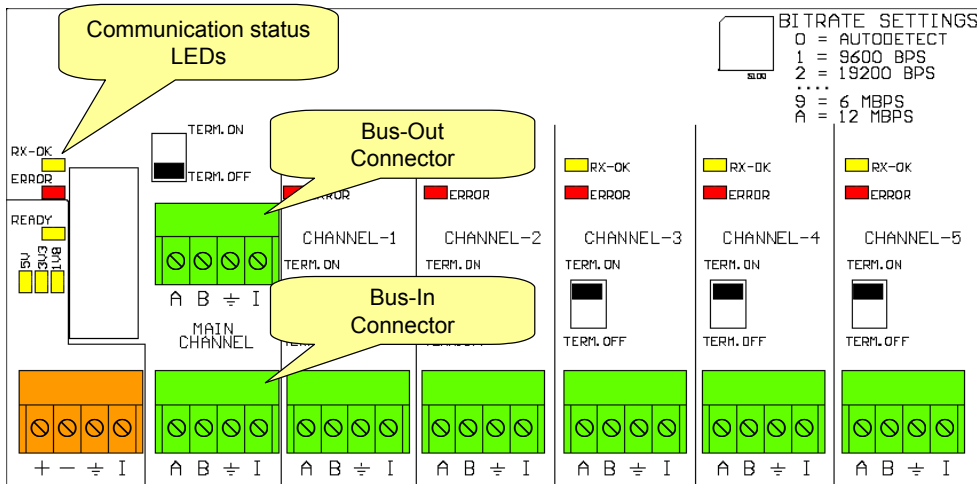


Fig. 11 - PROFIBUS DP backbone connection

Pin Layout of the screw terminals

- Pin "A": Green wire
- Pin "B": Red wire
- Pin "I": Cable shielding OR
- Pin "≡": Cable shielding

Testing

- If the Main-Channel recognizes valid PROFIBUS messages from 1 or more connected devices, the RX-OK LED of this Channel should be blinking.

4.6 Spur Segments

Connect the spur segments to the connectors of Channel 1 to 5 (Fig. 12).

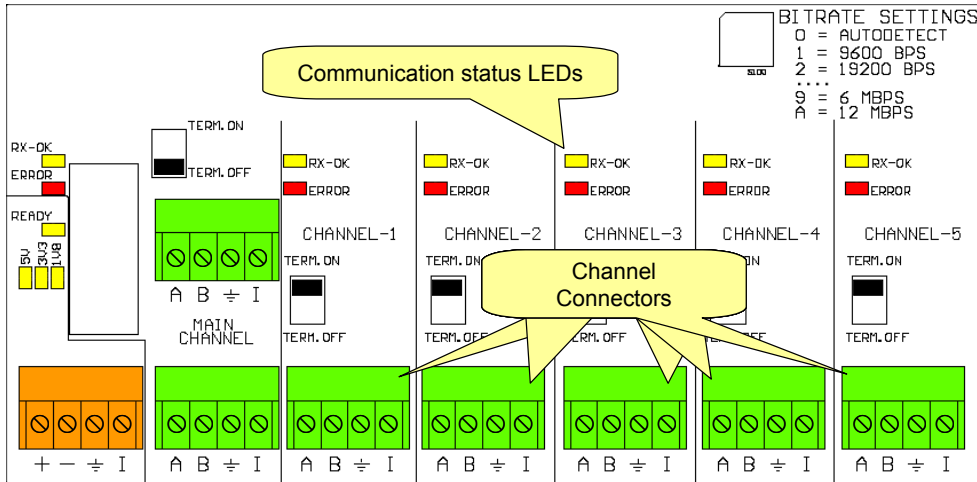


Fig. 12 - PROFIBUS DP spur connectors

Pin Layout of the screw terminals

- Pin "A": Green wire
- Pin "B": Red wire
- Pin "I": Cable shielding *OR*
- Pin \perp : Cable shielding

Testing

If a Channel recognizes valid PROFIBUS messages from 1 or more connected devices, the RX-OK LED of the specific Channel should be blinking.

4.7 Termination

The termination of the Main-Channel has been set to OFF by default. If the ProfiHub is the last/first device on the segment, the termination should be set to ON (Fig. 13).

The termination of the Channels have been set to ON by default. Because it is assumed that the new segment is started at the ProfiHub (Fig. 13).

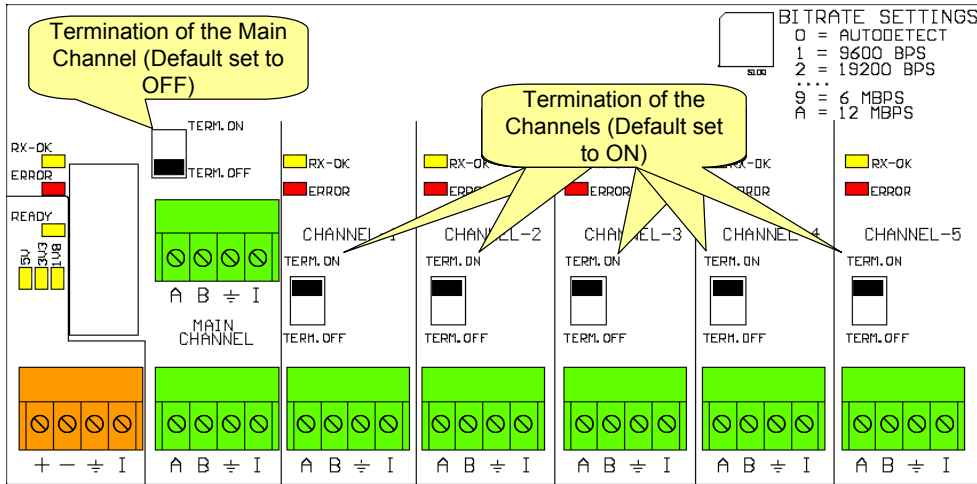


Fig. 13 - Termination Switches



Don't forget to switch the termination ON at the other end of the segment and make sure it is powered continuously.

4.8 Baudrate switch

The ProfiHub recognizes the transmission speed by default. If it is required that the ProfiHub is locked to a certain transmission speed, switch S100 should be set to the required value (Fig. 14). The switch can be reached by removing the top lid.

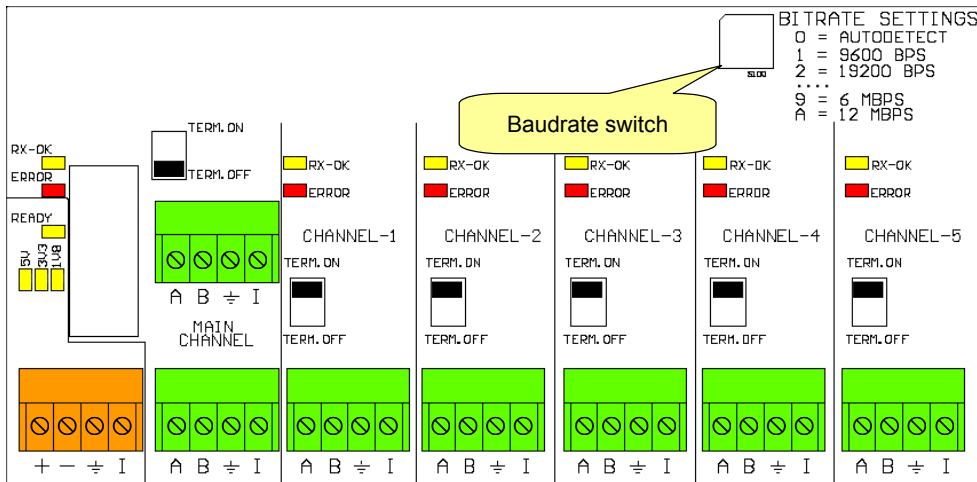


Fig. 14 – Baudrate speed switch

To set the transmission speed, you need a 3 mm screwdriver.

Switch values:

0 = Auto detect (**default**)

1 = 9,6 kbps

2 = 19,2 kbps

3 = 45,45 kbps

4 = 93,75 kbps

5 = 187,5 kbps

6 = 500 kbps

7 = 1500 kbps

8 = 3000 kbps

9 = 6000 kbps

A = 12000 kbps

B .. F = Auto detect

5 Installation Instructions ProfiHub B5

5.1 Location

The ProfiHub B5 can be installed everywhere in a non-hazardous area that complies with IP 20 (DIN 40 050) and the specified temperature range of -20 to +60° Celsius.

5.2 Position

The ProfiHub B5 can be installed in every position, but it is recommended to install it with the cables pointing down. In this position it is also easier to read the status display.

5.3 Mounting

The ProfiHub B5 has to be mounted on 35 mm DIN-rail with a minimum width of 167 mm.

5.4 Power Supply

The 3-pin screw type power connector is located on the bottom left of the ProfiHub B5 (Fig. 15).

- 1 = + (left)
- 2 = - (middle)
- 3 = Indirect grounding (right)

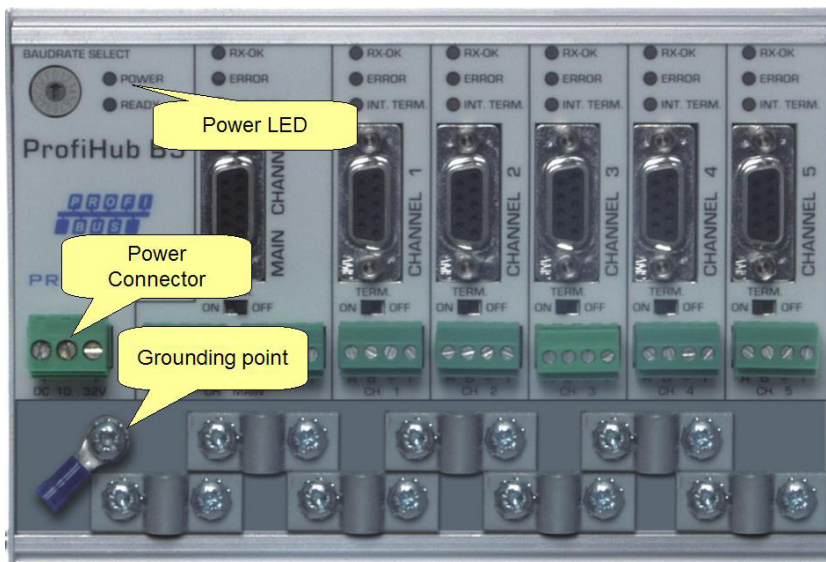


Fig. 15 - Power connector and LEDs

The power supply has to comply with the following specifications:

- Voltage: **10 to 32 Vdc**
- Current: **Min. 130 mA**
- Wire diameter: **< 2,5 mm²**

Procedure

To connect the 24V supply to the 3-pin screw-type terminal, proceed as follows:

- Strip the insulation from the cable or the conductors for the 24V power supply.
- Secure the conductors in the screw-type terminal.

Note: There is a grounding point that can be used.

To connect the power supply, you need a 3 mm screwdriver.

Testing

If the power is switched on it can be diagnosed by the following indicators:

- All the LEDs should be shortly blinking.
- The POWER LED is ON.
- The READY LED is ON or Blinking.



It is recommended to use a power supply with a ground lead (3-wire).

5.5 Backbone

Connect the DP backbone cable to the bottom-left connector of the Main-Channel (Fig. 16). If the ProfiHub is not the last device on the bus segment, connect the Bus-Out cable to the right connector of the Main-Channel (Fig. 16). The second method is to place a PROFIBUS standardized plug with an in/out cable on the DB9 connector.

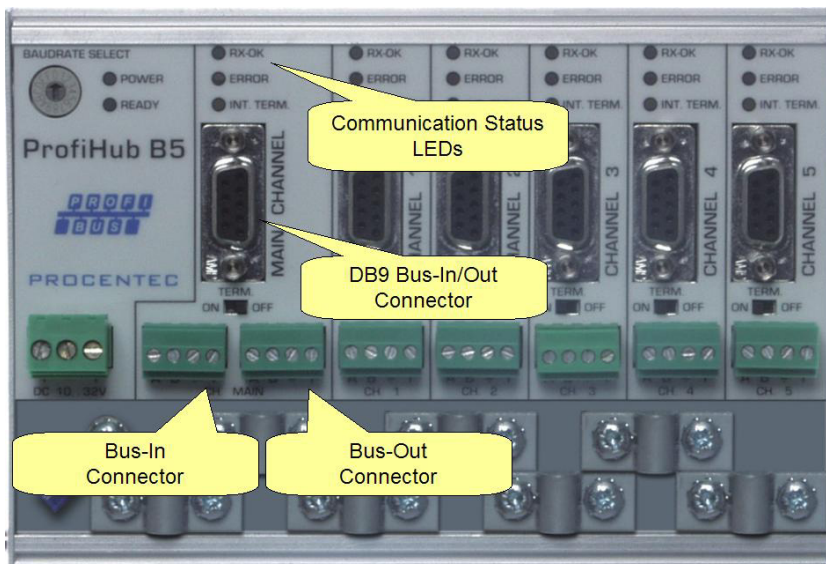


Fig. 16 - PROFIBUS DP backbone connection

Pin layout of the screw terminals:

- Pin "A": Green wire
- Pin "B": Red wire
- Pin "I": Cable shielding OR
- Pin "⏚": Cable shielding

Testing

- If the Main-Channel recognizes valid PROFIBUS messages from 1 or more connected devices, the RX-OK LED of this Channel should be blinking.

5.6 Spur Segments

Connect the spur segments to the connectors of Channel 1 to 5 (**Fig. 17**). The second method is to place a PROFIBUS standardized plug on the DB9 connector of the specific Channel.

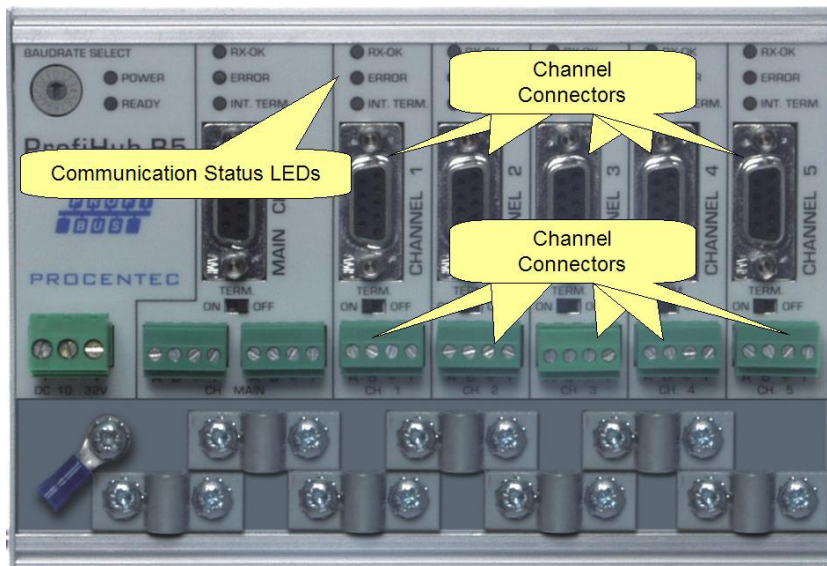


Fig. 17 - PROFIBUS DP spur connectors

Pin layout of the screw terminals:

Pin "A": Green wire

Pin "B": Red wire

Pin "I" or "Ground": Cable shielding

Note: Connecting the cable shielding is not required when the ground clips are used.

Testing

- If the Main-Channel recognizes valid PROFIBUS messages from 1 or more connected devices, the RX-OK LED should be blinking.

5.7 Termination

The termination of the Main-Channel has been set to OFF by default. If the ProfiHub is the last device on the bus, the termination should be set to ON (Fig. 18).

The termination of the Channels have been set to ON by default. Because it is assumed that the new segment is started at the ProfiHub (Fig. 18).

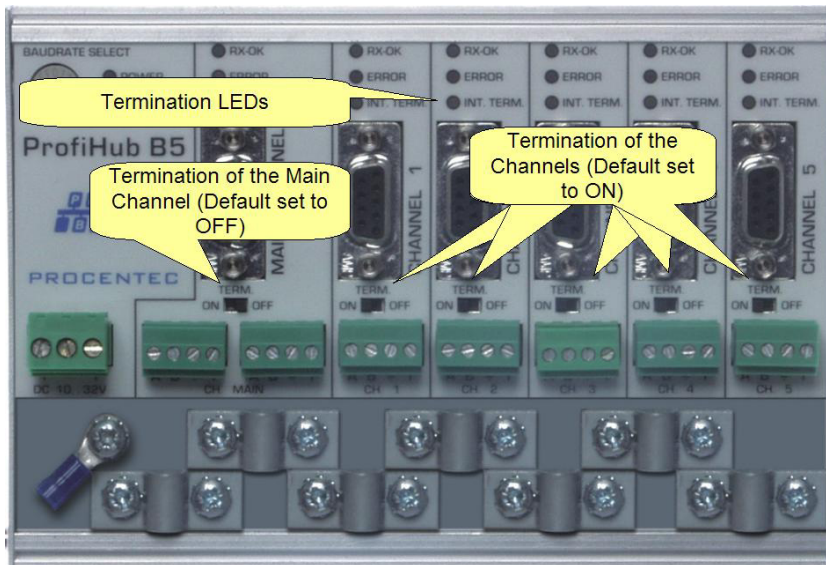


Fig. 18 - Termination Switches

The termination LED of the specific Channel is activated when the termination switch is set to ON.



When the DB9 connector is used and the cable starts at the ProfiHub, it is recommended to use the termination on the DB9 plug and NOT the ProfiHub.

5.8 Baudrate switch

The ProfiHub B5 recognizes the transmission speed by default. If it is required that the ProfiHub B5 is locked to a certain transmission speed, the baudrate switch should be set to the required value (**Fig. 19**).

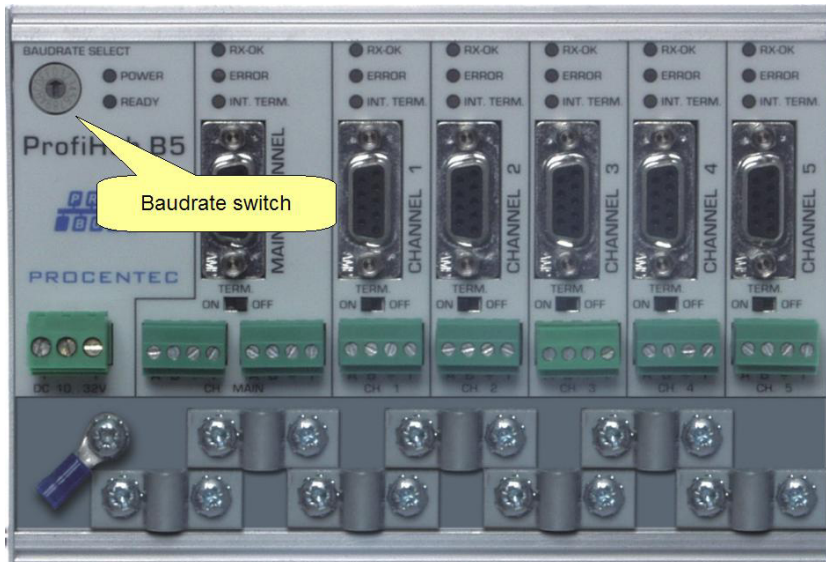


Fig. 19 - Baudrate speed switch

To set the transmission speed, you need a 3 mm screwdriver.

Switch values:

- 0 = Auto detect (**default**)
- 1 = 9,6 kbps
- 2 = 19,2 kbps
- 3 = 45,45 kbps
- 4 = 93,75 kbps
- 5 = 187,5 kbps
- 6 = 500 kbps
- 7 = 1500 kbps
- 8 = 3000 kbps
- 9 = 6000 kbps
- A = 12000 kbps
- B .. F = Auto detect

6 Technical Data ProfiHub A5

Technical Data ProfiHub A5	
Dimensions and weight	
Dimensions L x W x H (mm) with glands Weight Mounting screws	213 x 210 x 95 mm Approximately 800 g 4 to 5 mm
Ambient conditions	
Operating temperature Isolation class	-40 to +75° Celsius IP 65 (DIN 40 050)
Protocol specifications	
Supported Protocols	DP-V0, DP- V1, DP-V2, FDL, MPI, FMS, PROFIsafe, PROFIdrive and any other FDL based protocol.
Transmission speed Transmission speed detection Transmission speed switch	9,6 kbps to 12 Mbps (including 45,45 kbps) Auto detect (default) or settable with a rotary switch 0 = Auto detect (default) 1 = 9,6 kbps 2 = 19,2 kbps 3 = 45,45 kbps 4 = 93,75 kbps 5 = 187,5 kbps 6 = 500 kbps 7 = 1500 kbps 8 = 3000 kbps 9 = 6000 kbps A = 12000 kbps B .. F = Auto detect
Transmission speed detection time	< 10 s (if it is set to auto detect)
Data delay time	1,25 TBit at 9,6 kbps to 93,75 kbps 1,3 TBit at 187,5 kbps to 500 kbps 1,4 TBit at 1,5 Mbps 1,6 TBit at 3 Mbps 2,0 TBit at 6 Mbps 3,0 TBit at 12 Mbps
Delay time jitter	Max. ¼ bit time

Technical Data ProfiHub A5	
PROFIBUS cable specifications	
Cable lengths	1200 m at 9,6 kbps to 93,75 kbps 1000 m at 187,5 kbps 400 m at 500 kbps 200 m at 1,5 Mbps 100 m at 3 Mbps to 12 Mbps
Cable thickness Wire diameter Wire type	6 to 12 mm < 2,5 mm ² Stranded or Solid core
Number of devices	Maximum 31 per Channel (including ProfiHubs, OLMs, Laptops/PCs, etc)
Termination	Integrated and switchable. Powered according to IEC 61158 (390/220/390 Ohms) - All Channels (default on) - Main-Channel (default off)
Cascading depth Redundancy	No limits No
Power supply specifications	
Nominal supply voltage Current consumption Power dissipation	10 to 32 Vdc 130 mA at 24 V power supply (all Channels fully loaded) Max. 4,1 W
Reverse polarity protection Cable thickness Wire diameter	Yes 5 to 10 mm < 2,5 mm ²
Others	
MTBF	Not available

7 Technical Data ProfiHub B5

Technical Data ProfiHub B5	
Dimensions and weight	
Dimensions L x W x H (mm) with screws Weight	167 x 111 x 32 mm Approximately 650 g
Ambient conditions	
Operating temperature Isolation class	-20 to +60° Celsius IP 20 (DIN 40 050)
Protocol specifications	
Supported Protocols	DP-V0, DP- V1, DP-V2, FDL, MPI, FMS, PROFIsafe, PROFIdrive and any other FDL based protocol.
Transmission speed Transmission speed detection Transmission speed switch	9,6 kbps to 12 Mbps (including 45,45 kbps) Auto detect (default) or settable with a rotary switch 0 = Auto detect (default) 1 = 9,6 kbps 2 = 19,2 kbps 3 = 45,45 kbps 4 = 93,75 kbps 5 = 187,5 kbps 6 = 500 kbps 7 = 1500 kbps 8 = 3000 kbps 9 = 6000 kbps A = 12000 kbps B .. F = Auto detect
Transmission speed detection time	< 10 s (if it is set to auto detect)
Data delay time	1,25 TBit at 9,6 kbps to 93,75 kbps 1,3 TBit at 187,5 kbps to 500 kbps 1,4 TBit at 1,5 Mbps 1,6 TBit at 3 Mbps 2,0 TBit at 6 Mbps 3,0 TBit at 12 Mbps
Delay time jitter	Max. ¼ bit time

Technical Data ProfiHub B5	
PROFIBUS cable specifications	
Cable lengths	1200 m at 9,6 kbps to 93,75 kbps 1000 m at 187,5 kbps 400 m at 500 kbps 200 m at 1,5 Mbps 100 m at 3 Mbps to 12 Mbps
Cable thickness Wire diameter Wire type	10 mm (when the ground rail is used) < 2,5 mm ² Stranded or Solid core
Number of devices	Maximum 31 per Channel (including ProfiHubs, OLMs, Laptops/PCs, etc)
Termination	Integrated and switchable. Powered according to IEC 61158 (390/220/390 Ohms) - All Channels (default on) - Main-Channel (default off)
Cascading depth Redundancy	No limits No
Power supply specifications	
Nominal supply voltage Current consumption Power dissipation	10 to 32 Vdc 130 mA at 24 V power supply (all Channels fully loaded) Max. 4,1 W
Reverse polarity protection Cable thickness Wire diameter	Yes 10 mm (when the ground rail is used) < 2,5 mm ²
Others	
MTBF	398723 hours based on IEC62380 (RDF-2000 / UTE C 80-810, mathematical model for failure rates).

8 Sales offices and Distributors

HEADQUARTERS

PROCENTEC
Klopperman 16
2292 JD WATERINGEN
Netherlands
Tel.: +31-(0)174-671800
Fax: +31-(0)174-671801
Email: info@procentec.com
Internet: www.procentec.com

CHILE

RP Ingeniería Limitada
Tucapel 92 oficina 52
Concepción
Chile
Tel.: +56-(0)41-2469350
Fax: +56-(0)41-2522592
Email: rodrigopinto@rpingeneria.cl
Internet: www.rpingeneria.cl

GERMANY

PROCENTEC GmbH
Benzstrasse 15
D-76185 Karlsruhe
Germany
Tel.: +49-(0)721 831 6630
Fax: +49-(0)721 831 66329
Email: info@procentec.de
Internet: www.procentec.de

ARGENTINA

eFALCOM
Alcorta 2411
B1744- Moreno
Buenos Aires
ARGENTINA
Tel.: +54 237 46 31 151
Fax: +54 237 46 31 150
Email: santiago.falcomer@efalcom.com
Internet: www.efalcom.com.ar

CHINA

PROCENTEC Beijing
Room E-1115 WangJingYuan YouLeHui
ChaoYang
Beijing
CHINA
Tel.: +86(10)84766911 or 84787311
Fax: +86(10)84766722
Email: info@procentec.net
Internet: www.procentec.net

INDIA

U L ELECTRODEVICES P LTD
NIRMAN CLASSIC ,
KATRAJ-KONDHWA ROAD,
KATRAJ, PUNE-411046
India
Tel.: +91-202 696 0050
Fax: +91-202 696 2079
Email: dileep.miskin@ulepl.com
Internet: www.ulepl.com

AUSTRALIA

IS Systems Pty Limited
14 Laverick Ave., Tomago,
NSW, Australia, 2322
Tel.: +61 2 4964 8548
Fax: +61 2 4964 8877
Email: fritz.woller@issystems.com.au
Internet: www.issystems.com.au

CZECH REPUBLIC

FOXON e-shop
Polní 367
460 01 Liberec 12
Czech Republic
Tel.: +420 484 845 555
Fax: +420 484 845 556
Email: foxon@foxon.cz
Internet: www.foxon.cz

IRELAND

PROFIBUS Ireland
Automation Research Centre
University of Limerick
National Technology Park, Plassey
LIMERICK, Ireland
Tel.: +353-61-202107 or
+35361240240
Fax: +353-61-202582
Email: info@profibus.ie
Internet: www.profibus.ie

Pentair Flow Control Pacific
Unit 4, 57 Pine Road, Yennora
NSW, Australia, 2161
Tel.: +61 2 9612 2323
Fax: +61 2 9612 2324
Email: rkoenig@typac.com.au
Internet: www.profibuscentre.com.au

DENMARK

ProSaiCon
Jernbanegade 23B
DK 4000 Roskilde
Denmark
Tel.: +45 70 20 52 01
Fax: +45 70 20 52 02
Email: hj@prosaicon.dk
Internet: www.prosaicon.dk

ISRAEL

Instrumetrics Industrial Control
8 Hamlacha St.
New Industrial Zone
Netanya, 42170
Israel
Tel.: +972-9-8357090
Fax: +972-9-8350619
Email: info@instrumetrics-ic.co.il
Internet: www.inst-ic.co.il

BELGIUM and LUXEMBOURG

Bintz Technics N.V.
Brixtonlaan 25,
1930 ZAVENTEM
Belgium
Tel.: +32 2 720 49 16
Fax: +32 2 720 37 50
Email: bloemen@bintz.be
Internet: www.bintz.be

FINLAND

Hantekno Oy
Kalliotie 2
FIN-04360 Tuusula
Finland
Tel.: +358 40 8222 014
Email: info@hantekno.com
Internet: www.hantekno.fi

ITALY

C.S.M.T Gestione S.C.A.R.L.
via Branze n. 43/45
25123 BRESCIA
Italy
Tel.: +39 030 6595111
Fax: +39 030 6595000
Email: profibus@csmt.it
Internet: profibus.csmt.it

BRAZIL

Westcon Instrument. Indl Ltda
Rual Alvaro Rodrigues, 257
São Paulo – SP
Brazil - CEP 04582-000
Tel.: +55 11 5561-7488
Fax: +55 11 5093-2592
Email: paolo@wii.com.br
Internet: www.wii.com.br

FRANCE

AGILICOM
Bâtiment B
1, rue de la Briaudière
Z.A. La Châtaigneraie
37510 BALLAN-MIRE
France
Tel.: +33 247 76 10 20
Fax: +33 247 37 95 54
Email: jj.bois@agilicom.fr
Internet: www.agilicom.fr

Genoa FIELDBUS Competence Centre
Via Greto di Cornigliano, 6R/38
16152 GENOVA
Italy
Tel.: +39 010 86 02 580
Fax: +39 010 65 63 233
Email: procentec@gfcc.it
Internet: www.gfcc.it

<p>JAPAN</p> <p>TJ Group C/O Japanese PROFIBUS Organisation West World Building 4F 3-1-6 Higashi-Gotanda, Shinagawa-ku, TOKYO Japan Tel.: +81-3-6450-3739 Fax: +81-3-6450-3739 Email: info@profibus.jp</p>	<p>SAUDI ARABIA</p> <p>ASM Process Automation Al-Zahra Dist. – Atlas st. cross section with helmy Kutby St. Villa no.25 JEDDAH-21553 Tel.: +966 2 691 2741 Fax: +966 2 682 8943 Email: info@asmestablishment.com Internet: www.asmeestablishment.com</p>	<p>TAIWAN</p> <p>Full Data Technology 6F., No.200, Gangqian Rd., Neihu District, Taipei City 114, Taiwan Tel.: +886-2-87519941/9097 Fax: +886-2-87519533 Email: sales@fulldata.com.tw Internet: www.fulldata.com.tw</p>
<p>KOREA</p> <p>Hi-PRO Tech. Co., Ltd. #2802, U-Tower, 1029 Youngduk-dong, Giheung-gu Yongin-Si, Kyunggi-do, 446-908 KOREA Tel.: +82 82-31-216-2640 Fax: +82 82-31-216-2644 Email: chays@hiprotech.co.kr Internet: www.profibus.co.kr</p>	<p>SINGAPORE</p> <p>Allegro Electronics 236 Serangoon Avenue 3 07-98 550236 Singapore Singapore</p> <p>ISEP (S) Pte Ltd Blk 3015A, #07-12, Ubi Road 1, Singapore 408705 Tel.: +65-6356 4237 Fax: +65-6844 4265 Email: stevenkee@ise-p.com Internet: www.ise-p.com</p>	<p>TURKEY</p> <p>Emikon Otomasyon DES Sanayi sitesi 103 sokak B-7 blok No:16 Yukari Dudullu / Umraniye Istanbul 34776 Turkey Tel.: +90 216 420 8347 Fax: +90 216 420 8348 Email: tolgaturunz@emikonotomasyon.com Internet: www.emikonotomasyon.com</p>
<p>LEBANON</p> <p>Industrial Technologies S.A.L (ITEC) Point Center, Boulevard Fouad Chehab, Sin El Fil BEIRUT Tel.: +961 1 491161 Fax: +961 1 491162 Email: sales@iteclb.com Internet: www.iteclb.com</p>	<p>SLOVAKIA</p> <p>ControlSystem s.r.o. Stúrova 4 977 01 BREZNO Tel.: +421 486115900 Fax: +421 486111891 Email: jan.snopko@controlsystem.sk Internet: www.controlsystem.sk</p>	<p>UNITED ARAB EMIRATES</p> <p>Synergy Controls 907, IT Plaza Silicon Oasis DUBAI UAE Tel.: +971 4 3262692 Fax: +971 4 3262693 Email: sales@synergycontrols.ae</p>
<p>NETHERLANDS</p> <p>PROCENTEC B.V. Klopperman 16 2292 JD Wateringen Tel.: +31-(0)174-671800 Fax: +31-(0)174-671 801 Email: info@procentec.com Internet: www.procentec.com</p>	<p>SOUTH AFRICA</p> <p>IDX ONLINE CC 1 Weaver Street, Fourways JOHANNESBURG South Africa Tel.: +27(11) 548-9960 Fax: +27(11) 465-8890 Email: sales@idxonline.com Internet: www.idxonline.com</p>	<p>UNITED KINGDOM</p> <p>Verwer Training & Consultancy 5 Barclay Road Poynton, Stockport Cheshire SK12 1YY Tel.: +44 (0)1625 871199 Email: andy@verwertraining.com Internet: www.verwertraining.com</p>
<p>NORWAY</p> <p>AD Elektronikk AS Boks 641 N-1401 SKI Norway Tel.: +47 64 97 60 60 Fax: +47 64 97 60 70 Email: kai@ade.no Internet: www.ade.no</p>	<p>SPAIN and PORTUGAL</p> <p>LOGITEK, S.A Ctra. de Sant Cugat, 63 Esc. B Planta 1ª Rubí (BARCELONA), 08191 Tel.: +34 93 588 67 67 Email: xavier.cardena@logitek.es Internet: www.logitek.es</p>	<p>Hi-Port Software Limited The Hub 2 Martin Close Lee-on-Solent, Hampshire PO13 8LG</p> <p>Tel.: +44 (0)8452 90 20 30 Fax: +44 (0)2392 552880 Email: sales@hiport.co.uk Internet: www.hiport.co.uk</p>
<p>POLAND</p> <p>INTEX Sp. z o.o. ul. Portowa 4 44-102 GLIWICE Poland Tel.: +48 32 230 75 16 Fax: +48 32 230 75 17 Email: intex@intex.com.pl Internet: www.intex.com.pl</p>	<p>SWEDEN</p> <p>P&L Nordic AB Box 252, S-281 23 HÄSSLEHOLM Sweden Tel.: +46 451 74 44 00 Fax: +46 451 89 833 Email: hans.maunsbach@pol.se Internet: www.pol.se/profibus</p>	<p>iTech Unit 1 Dukes Road Troon, Ayrshire KA10 6QR Tel.: +44 (0)1292 311 613 Fax: +44 (0)1292 311 578 Email: sales@itech-troon.co.uk Internet: www.itech-troon.co.uk</p>
<p>ROMANIA</p> <p>S.C. SVT Electronics S.R.L. Brăila 7 540331 Tg-Mure Romania Tel.: +40 365 809 305 Fax: +40 365 809 305 Email: saigo.tibor@svt.ro Internet: www.svt.ro</p>	<p>SWITZERLAND</p> <p>Berner Fachhochschule für Technik und Informatik PROFIBUS Kompetenzzentrum Jlcoweg 1 CH-3400 BURGDORF Switzerland Tel.: +41 (0) 34 426 68 32 Fax: +41 (0) 34 426 68 13 Email: max.felser@bfh.ch Internet: www.profitrace.ch</p>	<p>Parkelect Ltd. 84 Dargan Road Belfast BT3 9JU N. Ireland Tel.: +44 2890 777743 Fax: +44 2890 777794 Email: gillan@parkelect.co.uk Internet: www.parkelect.co.uk</p>





UNITED STATES and MEXICO

Grid Connect Inc.
1630 W. Diehl Road
Naperville, Illinois 60563
USA
Tel.: +1 630 245-1445
Fax: +1 630 245-1717
Email: sales@gridconnect.com
Internet: www.gridconnect.com/procentec.html

VIETNAM

Bavitech Corporation
42 Truong Son Street
Ward 2, Tan Binh District
Ho Chi Minh City
Tel.: +84-8-3547 0976
Fax: +84-8-3547 0977
Email: hai.hoang@bavitech.com
Internet: www.bavitech.com

9 Order codes

Component	Order code	Remarks
 <p>ProfiHub A5</p>	16010	Includes mounting set.
 <p>Ground rail</p>	16011	The ground rail has to be mounted inside the casing to supply a common grounding area for all cable shielding. It improves the EMC behaviour and it supplies a good construction for vibrations. Not useable for capacitive grounding!
 <p>M12 female flange set</p>	16012	Set of 5 pieces (female).
 <p>ProfiHub B5</p>	17010	--

10 Glossary

Address	Unique number of a device connected to the network. With PROFIBUS this can be 0 to 126. 127 is a broadcast address.
Analyzer	Software tool to observe the protocol traffic. Combi-Analyzers can also inspect the signal quality. Other term: Bus Monitor. Example: ProfiTrace.
Backbone	The primary bus cable. Most of the time only the control systems, ProfiHubs and fiber optic couplers are connected to this cable. The field devices are connected behind the ProfiHubs and fiber optic couplers.
Bit Time (TBit)	The bit time TBit is the time, which elapses during the transmission of one bit. It depends on the baudrate and is calculated as follows $TBit = 1 \text{ (bit)} / \text{baudrate (bps)}$. Examples: 12 Mbps --> TBit = 83 ns 1,5 Mbps --> TBit = 667 ns
Busparameters	Settings that define the timing behaviour on the bus. They are defined in the master. Examples: Tslot, MaxTSDR.
C	Capacitance.
DGND	Digital Ground.
DIN	German Institute for Standardization (www.din.de).
DP-V0	DP-V0 is the basic stage of the PROFIBUS DP communication protocol. DP-V0 devices (master and slaves) perform the following basic functionalities: <ul style="list-style-type: none"> - Cyclic exchange of I/O data between controlling and slave devices - Device, Identifier (module) and Channel related Diagnosis - Parameterization of DP-slaves - Configuration of DP-slaves
DP-V1	DP-V1 is the first stage of extension of PROFIBUS DP after DP-V0. DP-V1 devices shall comply with the following features: <ul style="list-style-type: none"> - Device related diagnosis is replaced by status and alarms. - The first three octets of the user parameterization data are now standardized - Optionally these devices may support: <ul style="list-style-type: none"> - Acyclic communication (MS1, MS2) - If alarms are used, MS1 shall be supported

DP-V2	<p>DP-V2 is the second stage of extension of PROFIBUS DP after DP-V1. DP-V2 devices shall comply with the following features:</p> <ul style="list-style-type: none"> - Data Exchange Broadcast (DxB) for slave to slave communication (publisher/subscriber principle). - Isochronous Mode (time tick synchronized operating slaves, e.g. drives) - Up- and/or download of Load Region Data (domains) - Clock Control (synchronization within slaves) and Time Stamping - Redundancy.
Electromagnetic Compatibility	<p>See <i>EMC</i>.</p>
EMC	<p>The extent to which an electric or electronic device will tolerate electrical interference from other equipment (immunity), and will interfere with other equipment. Within the European Community as well as in other countries it is regulated by law that electric and electronic components and equipment comply with basic standards such as IEC 61000-6-2 or IEC 61326 or corresponding individual product standards.</p>
Hub	<p>A Hub refreshes a signal and passes the information on to all nodes which are connected to the Hub. Data frames which were received on one port are transferred to all the other ports (chicken foot topology).</p>
MPI	<p>Multiple Protocol Interface. Protocol defined by Siemens which uses the layer 1 and 2 of PROFIBUS (FDL).</p>
PCB	<p>Printed Circuit Board.</p>
PROFIBUS DP	<p>Acronym for "PROFIBUS for Decentralized Peripherals". Specification of an open fieldbus system with the following characteristics:</p> <ul style="list-style-type: none"> - Polling master-slave-system (cyclic communications, MS0) - Flying masters with robin round token passing coordination (MM) - Connection based (MS1) and connectionless (MS2, MS3) acyclic communication between masters and slaves <p>Options (e.g.):</p> <ul style="list-style-type: none"> - Data exchange broadcast (DXB), i.e. slave to slaves communication - Isochronous mode of slaves - Clock synchronization - Redundancy <p>PROFIBUS DP is standardized within IEC 61158 and IEC 61784, communication profile families 3/1 and 3/2</p> <p>The term "PROFIBUS DP" also is a synonym for the RS485 based deployments within factory automation.</p>
Repeater	<p>Active physical layer device that receives and retransmits all signals over a different port to increase the distance and number of devices for which signals can be correctly transferred for a given medium.</p>
Spur line	<p>A cable attached to a bus segment with a T-connection . Spurs are not recommended with PROFIBUS DP. They are prohibited with 12 Mbps and PROFIsafe operations. German term is "Stichleitung".</p>

Stub line	See <i>Spur line</i> .
TBit	See <i>Bit Time</i> .
Termination	A (powered) resistor network at both ends of a segment to prevent reflections (with PROFIBUS DP the termination has to be powered).
Topology	In a communications network, the pattern of interconnection between network nodes; e.g. bus, ring, star configuration.
PI	PROFIBUS International. The International PROFIBUS Organization based in Karlsruhe.
PNO	PROFIBUS Nutzer Organization. The German PROFIBUS Organization based in Karlsruhe.
Drop cable	See <i>Spur line</i> .
Reflection	Part of the original signal that is transmitted back along the cable. It corrupts the original signal.

11 Certificates





Certificate for a PI Competence Center

PI confirms that

PROCENTEC
Dennis van Booma
Turfschipper 41
2292 JC Wateringen
THE NETHERLANDS

is a fully accredited PI Competence Center for
PROFIBUS basic
PROFIBUS PA.

This certificate is granted according to the Quality of Services Agreement for
PI Competence Centers and is valid until December 31, 2013.

(Official in Charge)

Chairmen of PI

(Jörg Freitag, Chairman)

(Michael J. Bryant, Deputy Chairman)





Certificate

Authorization as PI Test Laboratory for PROFIBUS

PROFIBUS Nutzerorganisation e.V. accepts
PROCENTEC
Turfschipper 41
2292 JC Wateringen
The Netherlands


as authorized PI Test Laboratory for:

PROFIBUS Slave Devices PA Profile Devices

The authorization is based on the assessment dated March 4, 2011, and the related assessment report.

The execution of the tests aimed in the PROFIBUS certification shall be conform to the PROFIBUS Standard and the valid guidelines.

This authorization is valid until December 31, 2012.

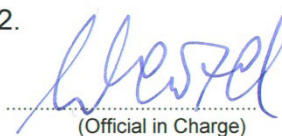


(Official in Charge)

Board of PROFIBUS Nutzerorganisation e. V.



(J. Freitag)



(K.-P. Lindner)



12 Revision History

Version 0.3

- First release.

Version 0.4

- Update of technical information.
- Addition of the ProfiHub B5 (first part).

Version 0.5

- Update of technical information.
- Paragraph with ProfiHub A5/B5 comparison.
- Chapter with order codes.

Version 1.1

- Final first release.

Version 2.0

- Updated the Technical Data.
- Updated the Distributors.
- Added Certificates.
- Added Notes.

Version 2.1

- Updated the Certificates.
- Updated the Distributors.

13 Next version

- Signal amplitudes.
- Capacity of a channel.
- Description of the ground rail.
- Adjustment of busparameters when cascading a large number of ProfiHubs.
- Use of the diagnostic connector.
- Comparison table also with C5.

Other PROCENTEC products

PROFINET Cable Tester

- ✓ Suitable for 4- and 8-wire PROFINET and regular Ethernet cables.
- ✓ Suitable for straight and 90°, metal or plastic PROFINET plugs.
- ✓ Tests cable shielding!
- ✓ Detects short circuits, wire breaks, swaps, miswiring and split pairs.
- ✓ Large LCD clearly indicates the test results.
- ✓ 150 hours on one 9 V battery.
- ✓ Operating temperature: 0 to 50 °C.
- ✓ Just 1-key-press to start continuous testing.
- ✓ It can also test telephone and coax cable.



www.profinetcabletester.com



Compact PROFIBUS Repeater

- ✓ Single channel PROFIBUS repeater.
- ✓ Transparent.
- ✓ Latest RS 485 technology.
- ✓ Max. 12 Mbps.
- ✓ Auto baudrate detection.
- ✓ Redundant power supply.
- ✓ Digital glitch filtering.
- ✓ No limit in cascading.
- ✓ Integrated switchable termination.
- ✓ Diagnostic LEDs.
- ✓ DB9 connector for measurements.
- ✓ IP 20 with DIN-rail mounting.

www.procentec.com/profihub/b1/en