







OPERATING INSTRUCTIONS

R-872
Audio/Video Receiver

CE

Introduction



READ THIS BEFORE OPERATING YOUR UNIT

 <div data-bbox="375 421 534 504"> CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN </div> 	 <p>This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 <p>This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>

WARNING : TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Caution regarding installation

Note : For heat dispersal, do not install this unit in a confined space such as a bookcase or similar enclosure.

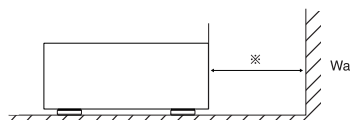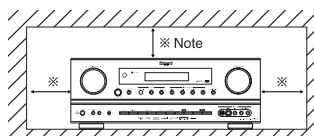

Do not block ventilation openings or stack other equipment on the top.

FOR YOUR SAFETY

EUROPE AUSTRALIA	220 V - 240 V	<p>Units shipped to Australia are designed for operation on 240 V AC only.</p> <p>To ensure safe operation, the three-pin plug supplied must be inserted only into a standard three-pin power point which is effectively earthed through the normal household wiring. Extension cords used with the equipment must be three-core and be correctly wired to provide connection to earth. Improper extension cords are a major cause of fatalities. The fact that the equipment operates satisfactorily does not imply that the power point is earthed and that the installation is completely safe. For your safety, if in any doubt about the effective earthing of the power point, consult a qualified electrician.</p> <p>PAN-EUROPEAN UNIFIED VOLTAGE</p> <p>All units are suitable for use on supplies 220-240 V AC.</p>
-----------------------------	------------------------------	---

CAUTION

- Leave a space around the unit for sufficient ventilation.
- Avoid installation in extremely hot or cold locations, or in an area that is exposed to direct sunlight or heating equipment.
- Keep the unit free from moisture, water, and dust.
- Do not let foreign objects in the unit.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the unit.
- Please be care the environmental aspects of battery disposal.
- The unit shall not be exposed to dripping or splashing for use.
- No objects filled with liquids, such as vases, shall be placed on the unit.
- Do not let insecticides, benzene, and thinner come in contact with the set.
- Never disassemble or modify the unit in any way.
- Notes on the AC power cord and the wall outlet.
- The unit is not disconnected from the AC power source(mains) as long as it is connected to the wall outlet, even if the unit has been turned off.
- To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.
- When setting up this product, make sure that the AC outlet you are using is easily acceptable.
- Disconnect the plug from the wall outlet when not using the unit for long periods of time.



Information for Users on Collection and Disposal of Old Equipment and used Batteries

These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation.



By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.



Pb

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

[Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol (bottom two symbol examples):


The sign Pb below the symbol for batteries indicates that this batteries contains lead.

CONTENTS

• Introduction	
READ THIS BEFORE OPERATING YOUR UNIT	2
• System Connections	4
• Front Panel Controls	15
• Universal Remote Controls	17
OPERATING COMPONENTS WITH REMOTE CONTROL	19
REMOTE CONTROL OPERATION RANGE	19
LOADING BATTERIES	19
USING FUNCTIONS OF REMOTE CONTROL	20
• ROOM 2 Remote Controls	
REMOTE CONTROL OPERATION RANGE	28
LOADING BATTERY	28
• Operations	
LISTENING TO A PROGRAM SOURCE	29
SURROUND SOUND	32
ENJOYING SURROUND SOUND	34
LISTENING TO RADIO BROADCASTS	38
LISTENING TO RDS BROADCASTS(FM ONLY)	40
(RDS Tuner(Regional Option for some countries in Europe, etc.))	
RECORDING	42
DIGITAL AUDIO RECORDING WITH MD RECORDER	43
OTHER FUNCTIONS	44
ROOM 2 SOURCE PLAYBACK	45
• OSD Menu Settings	47
SETTING THE SYSTEM SETUP	49
SETTING THE INPUT SETUP	53
SETTING THE SPEAKER / ROOM EQ SETUP	58
SETTING THE CH LEVEL SETUP	64
SETTING THE SOUND PARAMETER	66
SETTING THE MULTI ROOM SETUP	70
• Troubleshooting Guide	72
• Specifications	73
• Setup Code Table	74


System Connections

- Please be certain that this unit is unplugged from the AC outlet before making any connections.
- Since different components often have different terminal names, carefully read the operating instructions of the component connected.
- Be sure to observe the color coding when connecting audio, video and speaker cords.
- Make connections firmly and correctly. If not, it can cause loss of sound, noise or damage to the receiver.

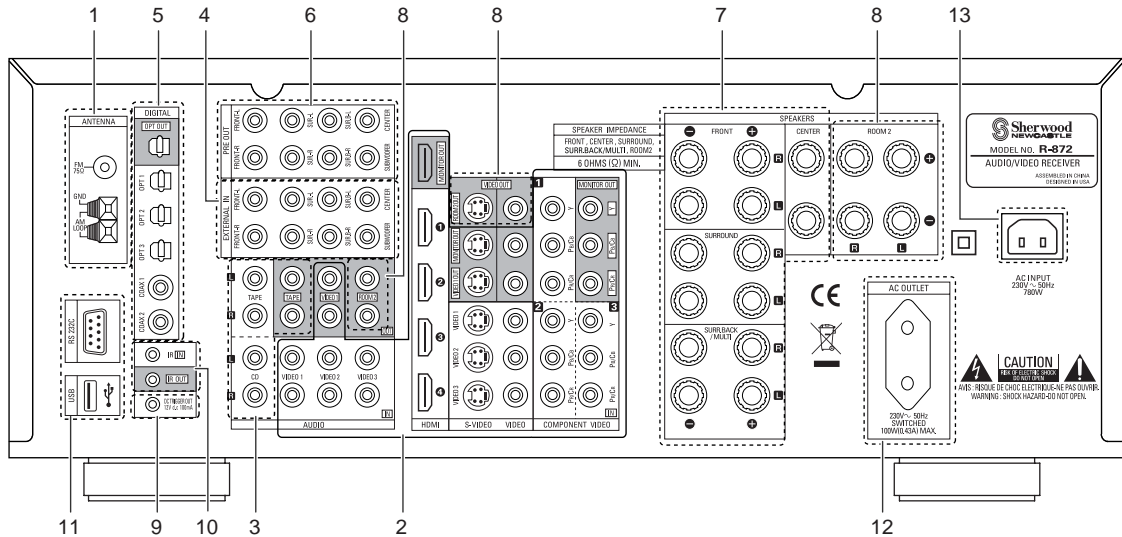


1. CONNECTING ANTENNAS

FM Indoor Antenna

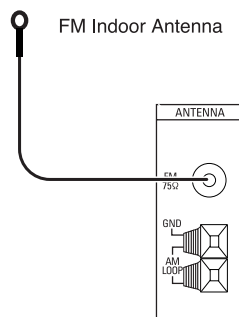


- Change the position of the FM indoor antenna until you get the best reception of your favorite FM stations.

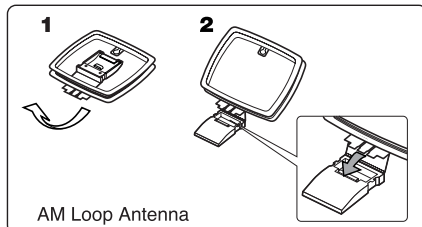


- Place the AM loop antenna as far as possible from the receiver, TV set, speaker cords and the AC input cord and set it to a direction for the best reception.
- If the reception is poor with the AM loop antenna, an AM outdoor antenna can be used in place of the AM loop antenna.

FM Outdoor Antenna

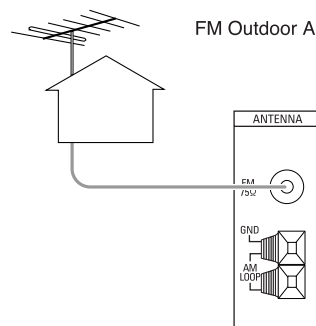


- A 75Ω outdoor FM antenna may be used to further improve the reception. Disconnect the indoor antenna before replacing it with the outdoor one.

AM Outdoor Antenna

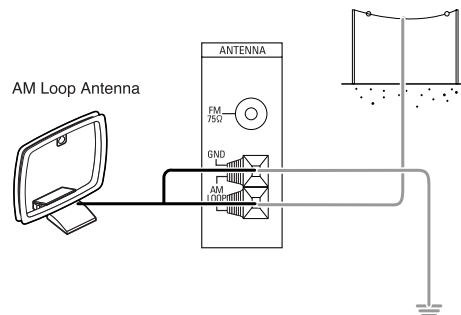

2. CONNECTING VIDEO COMPONENTS

- The jacks of VIDEO 1 may also be connected to a DVD recorder or other digital video recording component. For details, refer to the operating instructions of the component to be connected.
- The jacks of VIDEO 2/VIDEO 3 can also be connected to an additional video component such as a cable TV tuner or satellite system.
- Connect the jacks of VIDEO 3 to the video component in the same way.

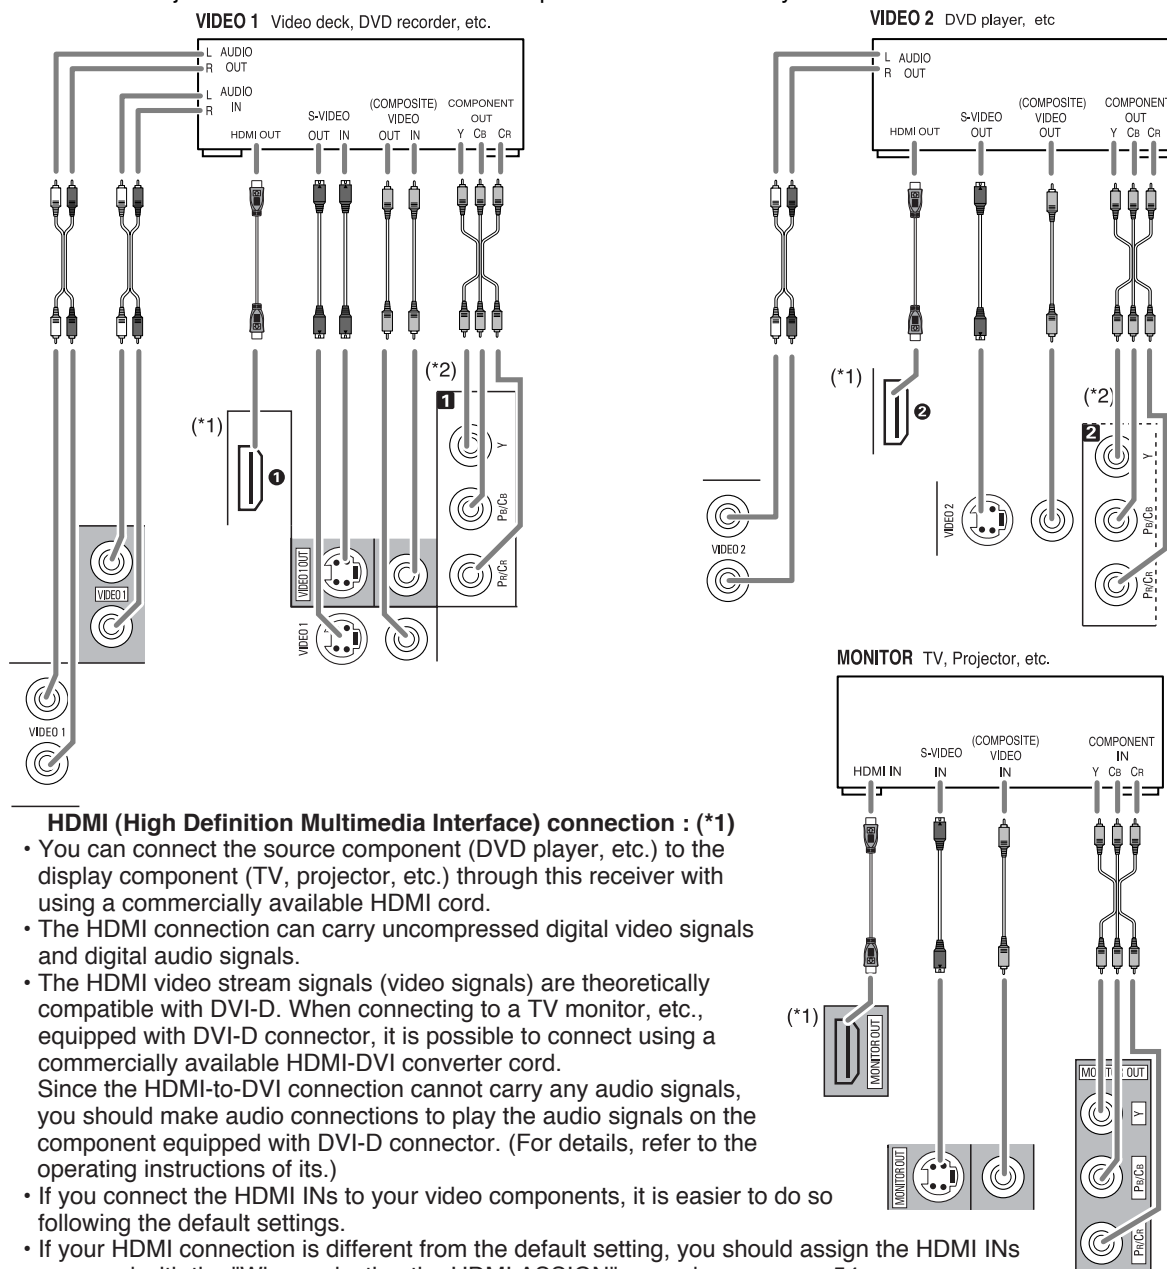

Copyright protection system

- This unit supports HDCP (High-bandwidth Digital Contents Protection), technology to protect copyright of digital video signals against illegal duplication. HDCP must also be supported on the components connected to this unit.
- This unit is HDMI Ver. 1.3 compatible.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.

Continued

Notes :

- For stable signal transfer, we recommend using HDMI cords that are a maximum of 5 meters in length.
- Among the components that support HDMI, some components can control other components via the HDMI connector. However, this unit cannot be controlled by another component via the HDMI connector.
- The audio signals from the HDMI connector (including the sampling frequency and bit length) may be limited by the component that is connected.
- The video signals will not be output properly if a component incompatible with HDCP is connected.
- If the resolutions of the video signals which are output from the MONITOR OUTs and your monitor TV are not matched, the picture is not clear, natural or displayed. In this case, change the setting of the resolution on either this unit or the source component (DVD player, etc.) to one which the monitor TV can handle. (For details, refer to "When selecting the VIDEO SCALING" on page 55 or the operating instructions of the source component.)
- When you want to enjoy only the picture on your TV, not the sound, you should set the HDMI AUDIO OUT to OFF not to output the digital audio signal from the HDMI MONITOR OUT of this receiver. (For details, refer to "When selecting the HDMI AUDIO OUT" on page 50.)


Component video input default settings: (*2)

- If you connect the COMPONENT VIDEO INs to your video components, it is easier to do so following the default settings.
- If your component video connections are different from the default setting, you should assign the COMPONENT VIDEO INs you used with the "When selecting the VIDEO ASSIGN" procedure on page 54.
- The default settings are as follows:
COMPONENT IN 1 : VIDEO 1, COMPONENT IN 2 : VIDEO 2, COMPONENT IN 3 : VIDEO 3
- There are three types of video jacks (COMPONENT, S-VIDEO, (composite) VIDEO) for analog video connections and the HDMI connectors for digital video and audio connections. Connect them to the corresponding video jacks according to their capability.
- For your reference, the excellence in picture quality is as follows : "HDMI" > "COMPONENT" > "S-VIDEO" > "(composite) VIDEO".
- When making COMPONENT VIDEO connections, connect "Y" to "Y", "PB/CB" to "Cb"(or "B-Y", "Pb") and "PR/CR" to "Cr"(or "R-Y", "Pr").
- When recording video program sources through VIDEO 1 OUT jacks or viewing ROOM 2 source through ROOM 2 OUT jacks, you must use the same type of video jacks that you did connect to video playback components such as DVD player, cable TV tuner, etc.

Video conversion

- This unit is equipped with a function that up-converts the video signals to the higher quality video signals and down-converts the video signals to the lower quality video signals and outputs them from the MONITOR OUTs.
- Because of this, the MONITOR OUT jack(s) can be connected to the monitor TV with a set of cord(s) offering a higher quality, regardless of how to make video connections between this unit and video playback components.
- After connecting the video components, you should set the VIDEO MODE correctly to output the video signals from the connected MONITOR OUT(s). (For details, refer to "When selecting the VIDEO MODE" on page 54.)

The flow of the video signals

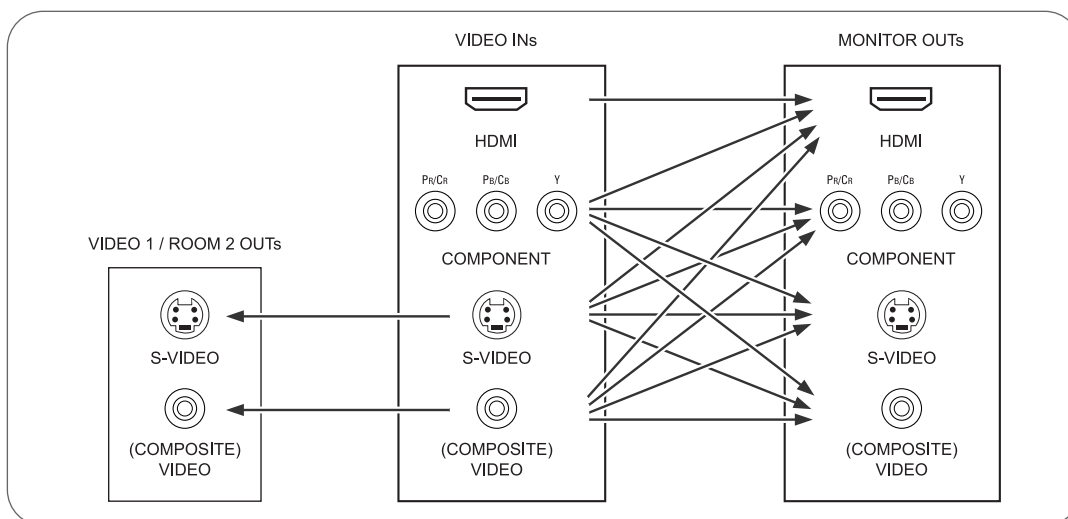


Continued**Notes :**

- When the VIDEO MODE is set to "AUTO" or "HDMI", if the 576i ~ 1080i video signals are input into the HDMI IN connector, the HDMI video signals are output from the HDMI MONITOR OUT only.
- When the VIDEO MODE is set to "AUTO" or "COMPONENT" and no video signals are input into the HDMI IN, if 576i video signals are input into the COMPONENT INs, the component video signals are output from the MONITOR OUTs.
However, if 576p ~ 1080i video signals are input, the component video signals are output from the COMPONENT and the HDMI MONITOR OUTs.
- When the VIDEO MODE is set to "AUTO", "HDMI" or "COMPONENT", if 1080p video signals are input into the HDMI IN or the COMPONENT INs, no video signals will be output from the HDMI or the COMPONENT MONITOR OUTs regardless of VIDEO SCALING setting.
- When the component video signals or the HDMI video signals are input and these signals are output from the MONITOR OUTs, the momentary OSD cannot be displayed.

Audio conversion


- Depending on the AUDIO MODE setting, this unit can convert the analog audio signals (which are input into the (analog) AUDIO INs) or the digital audio signals (which are input into the OPTICAL or the COAXIAL DIGITAL IN) to the PCM 2 channel signals and output them from the HDMI MONITOR OUT. (For details, refer to "When selecting the AUDIO MODE" on page 55.)
 - The digital audio signals (which are input into the HDMI IN, the OPTICAL or the COAXIAL DIGITAL IN) can be output from the OPTICAL DIGITAL OUT.
- However, depending on the digital audio signal format input into the HDMI IN, some digital signals cannot be output from the OPTICAL DIGITAL OUT.

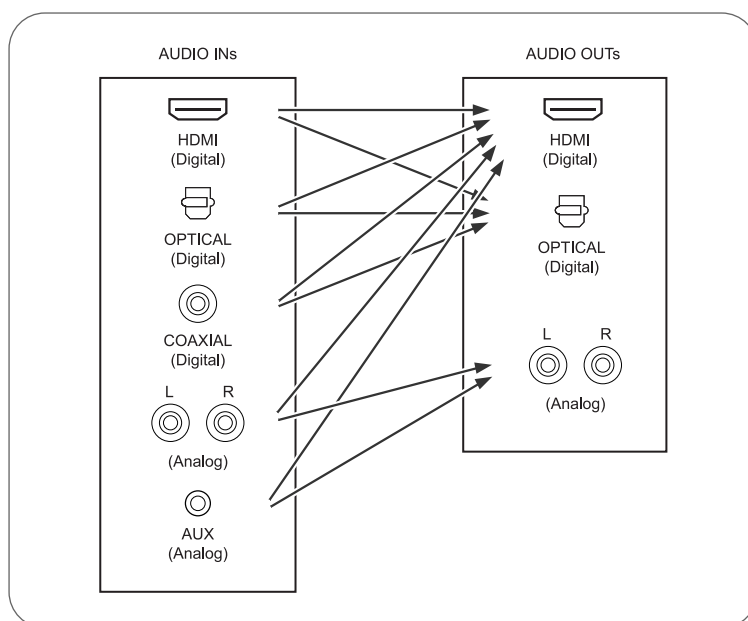The flow of the audio signals**Note :**

- The analog audio signals which are input from the EXTERNAL INs cannot be output from any AUDIO OUTs.


3. CONNECTING AUDIO COMPONENTS

- The TAPE IN/OUT jacks can be connected to audio recording equipment such as a tape deck, an MD recorder, etc.

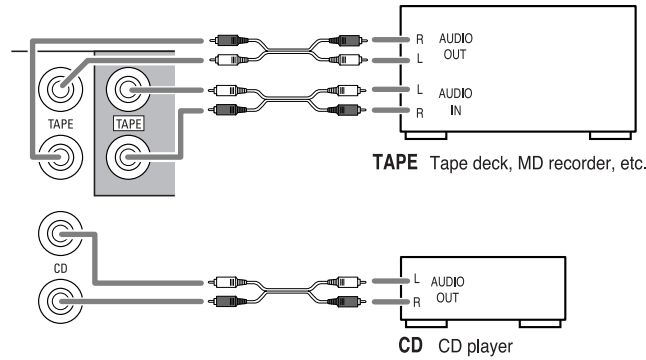


4. CONNECTING EXTERNAL INS

- Use these jacks to connect the corresponding outputs of a DVD player or external decoder, etc. that has 6, 7 or 8 channel analog audio outputs.
- In case of 6 or 7 channel outputs, do not connect both of the SURROUND BACK L and R inputs or the SURROUND BACK R input of this unit. (For details, refer to the operating instructions of the component to be connected.)

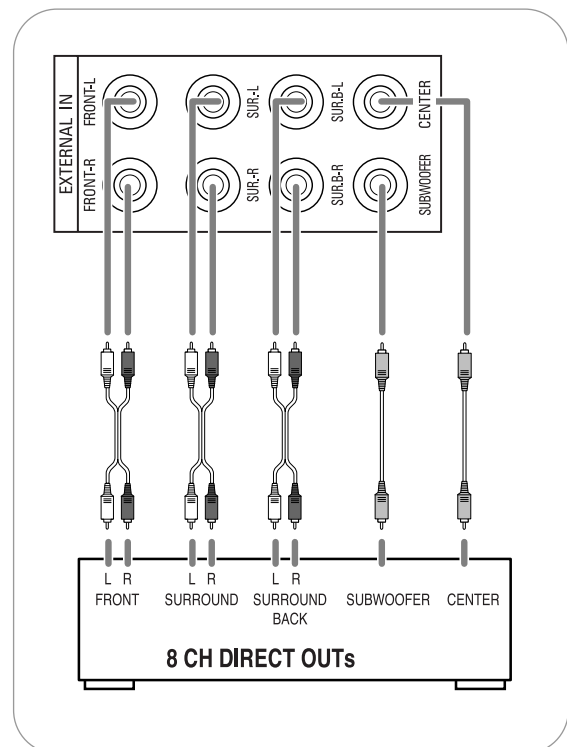

5. CONNECTING DIGITAL INS AND OUT

- The OPTICAL and the COAXIAL DIGITAL OUTs of the components that are connected to this unit can be connected to these DIGITAL INs.
- A digital input should be connected to the components such as a CD player, DVD player, etc. capable of outputting DTS Digital Surround, Dolby Digital or PCM format digital signals, etc.
- If the component with OPTICAL IN jack is connected to the OPTICAL OUT jack of this unit, you can record the high quality sound of CDs, etc. without degradation.
- For details, refer to the operating instructions of the component connected.
- When making the COAXIAL DIGITAL connection, be sure to use a 75 Ω COAXIAL cord, not a conventional AUDIO cord.
- All of the commercially available optical fiber cords cannot be used for the equipment. If there is an optical fiber cord which cannot be connected to your equipment, consult your dealer or nearest service organization.

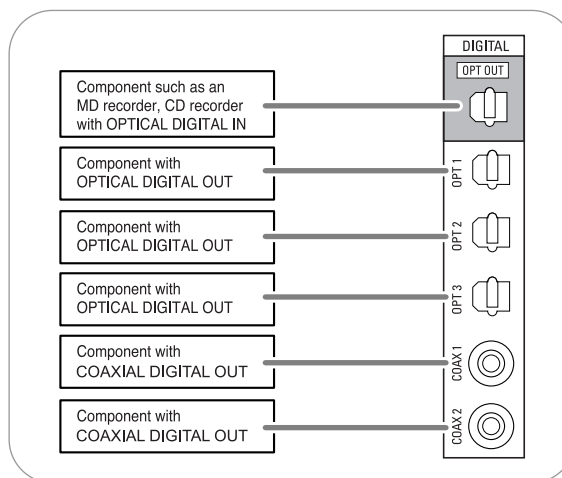

Notes :

- Be sure to make either a OPTICAL or a COAXIAL DIGITAL connection on each component. (You don't need to do both.)
- Depending on the digital audio signal format input into the HDMI IN connector, some digital signals cannot be output from the OPTICAL OUT jack.

Digital input default settings


- If you connect the DIGITAL INs to your components, it is easier to do so following the default settings.
- If your DIGITAL connections are different from default settings, you should assign the DIGITAL INs you used with the "When selecting the AUDIO ASSIGN" procedure on page 54.
- The default settings are as follows :
OPTICAL IN 1:VIDEO 1, OPTICAL IN 2:VIDEO 2, OPTICAL IN 3:VIDEO 3, (Front) OPTICAL IN 4: VIDEO 4,
COAXIAL IN 1 : CD, COAXIAL IN 2 : AUX.

6. CONNECTING PRE OUTS

- Use these jacks when adding additional power amplifiers.
- Connect the PRE OUT jacks to the powered speakers or the power amplifiers connected to speakers respectively.
- When using only one surround back speaker, connect the SURROUND BACK LEFT jack to the power amplifier.
- To emphasize the deep bass sounds, connect a powered subwoofer.

Notes :

- After installing the speakers, first adjust the speaker settings according to your environment and speaker layout (For details, "SETTING THE SPEAKER/ROOM EQ SETUP" on page 58.)
- According to speaker settings, some channels of PRE OUTs cannot output audio signals.

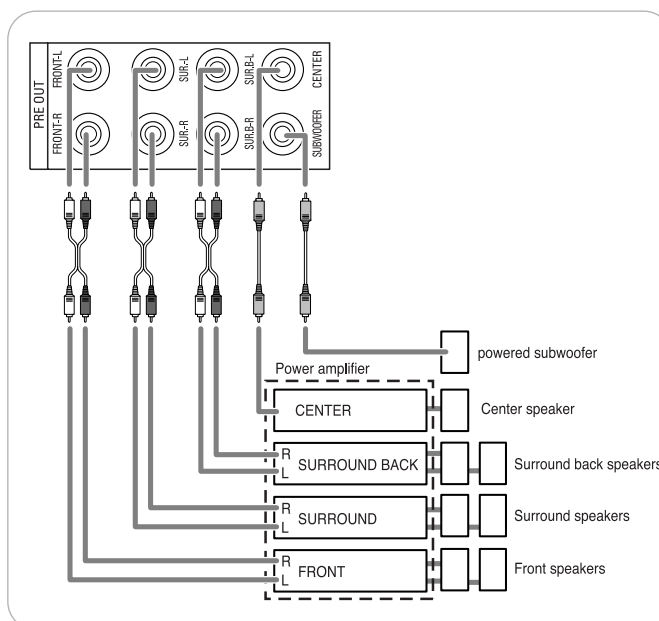

7. CONNECTING SPEAKERS

- Be sure to connect speakers firmly and correctly according to the channel(left and right) and the polarity (+ and -). If the connections are faulty, no sound will be heard from the speakers, and if the polarity of the speaker connection is incorrect, the sound will be unnatural and lack bass.
- For installing the speakers, refer to "Speaker placement" on page 11.
- After installing the speakers, first adjust the speaker settings according to your environment and speaker layout. (For details, refer to "SETTING THE SPEAKER /ROOM EQ SETUP" on page 58.)

Surround back speakers

- When using only one surround back speaker, you should connect it to SURROUND BACK/MULTI LEFT channel.
- Because this receiver cannot drive the surround back speakers and the ROOM 2 speakers simultaneously, you should assign their power amplifier correctly depending on how to use them. (For details, refer to "CONNECTING ROOM 2 OUTS" on page 12 and "When selecting the AMP ASSIGN" on page 49.)

Front Bi-Amp Connections.


- Some speakers are equipped with two sets of input terminals, for bi-amplification.
- If no other surround back speakers are used, you can connect the FRONT and the SURROUND BACK/MULTI channels to the bi-amp-capable speakers. (For details, refer to the operating instructions of your bi-amp-capable speakers.)
- To drive the bi-amp-capable speakers, you should assign the power amplifier to "BI-AMP".

Note :


- Before making bi-amp connections, remove the short-circuiting bars from the terminals of your speakers.

Caution :

- Be sure to use the speakers with the impedance of 6 ohms or above.
- Do not let the bare speaker wires touch each other or any metal part of this unit. This could damage this unit and/or the speakers.

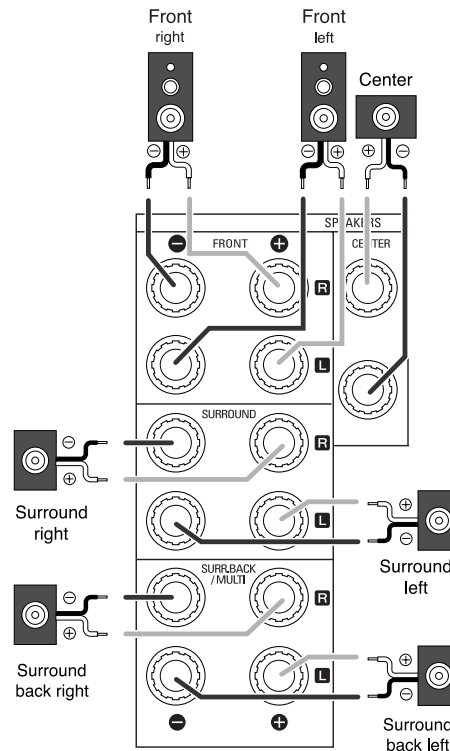

■ Front-Bi-Amp Connections

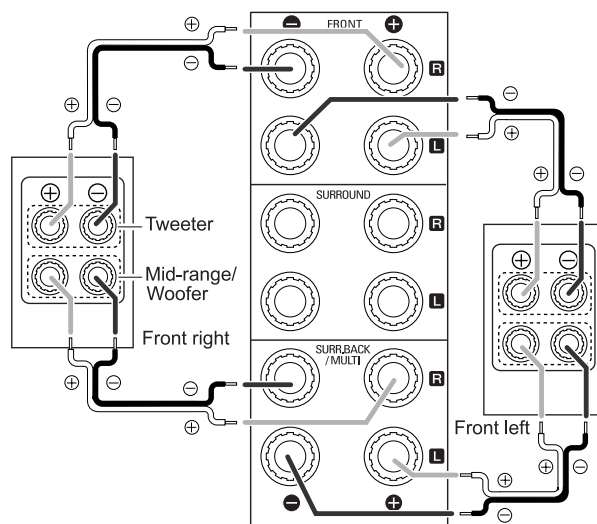

Speaker placement

Ideal speaker placement varies depending on the size of your room and the wall coverings, etc. The typical example of speaker placement and recommendations are as follows :

Front left and right speakers and center speaker

- Place the front speakers with their front surfaces as flush with TV or monitor screen as possible.
- Place the center speaker between the front left and right speakers and no further from the listening position than the front speakers.
- Place each speaker so that sound is aimed at the location of the listener's ears when at the main listening position.

Surround left and right speakers

- Place the surround speakers approximately 1 meter (40 inches) above the ear level of a seated listener on the direct left and right of them or slightly behind.

Surround back left and right speakers



- Place the surround back speakers at the back facing the front at a narrower distance than front speakers.
- When using a single surround back speaker, place it at the rear center facing the front at a slightly higher position (0 to 20 cm) than the surround speakers.
- We recommend installing the surround back speaker(s) at a slightly downward facing angle. This effectively prevents the surround back channel signals from reflecting off the TV or screen at the front center, resulting in interference and making the sense of movement from the front to the back less sharp.

Subwoofer

- The subwoofer reproduces powerful deep bass sounds.
Place a subwoofer anywhere in the front as desired.

Notes :

- When using a conventional TV, to avoid interference with the TV picture, use only magnetically shielded front left and right and center speakers.
- To obtain the best surround effects, the speakers except the subwoofer should be full range speakers.

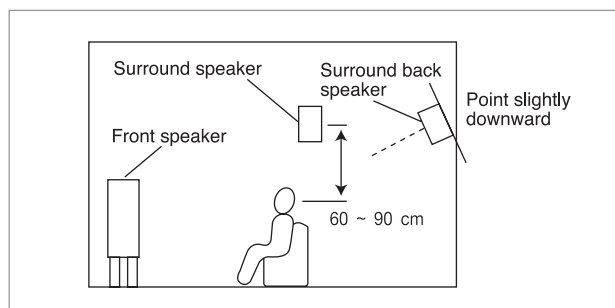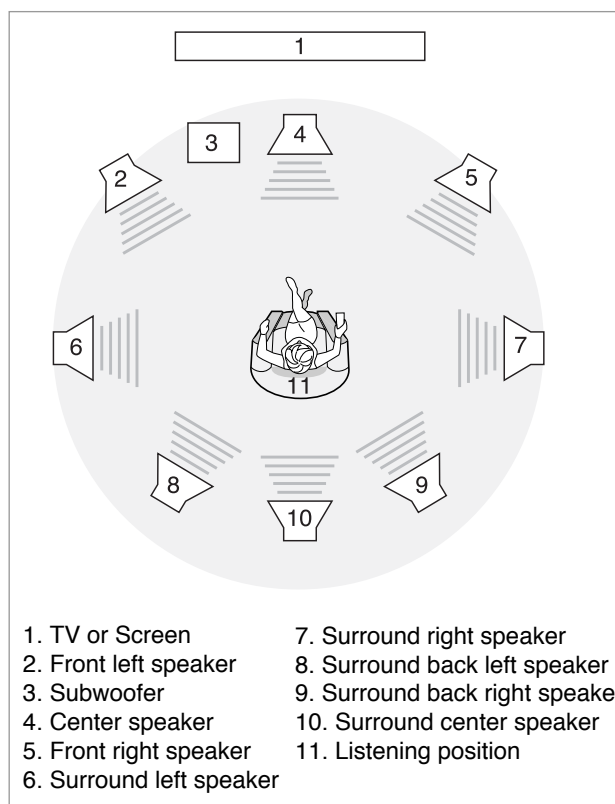


8. CONNECTING ROOM 2 OUTS

- ROOM 2 playback feature allows you to play a different program source in another room as well as one source in the main room at the same time.
- For ROOM 2 playback, connect the ROOM 2 OUT jacks to the amplifier, TV, etc. installed in another room, or connect the ROOM 2 speaker terminals to the speakers.
- Because this receiver cannot drive the surround back speakers and the ROOM 2 speakers simultaneously, you should assign their power amplifier correctly depending on how to use them. (For details, refer to "When selecting the AMP ASSIGN" on page 49.)


Notes :

- To minimize hum or noise, use high quality connection cords.
- You cannot use the digital audio signal for ROOM 2 playback.

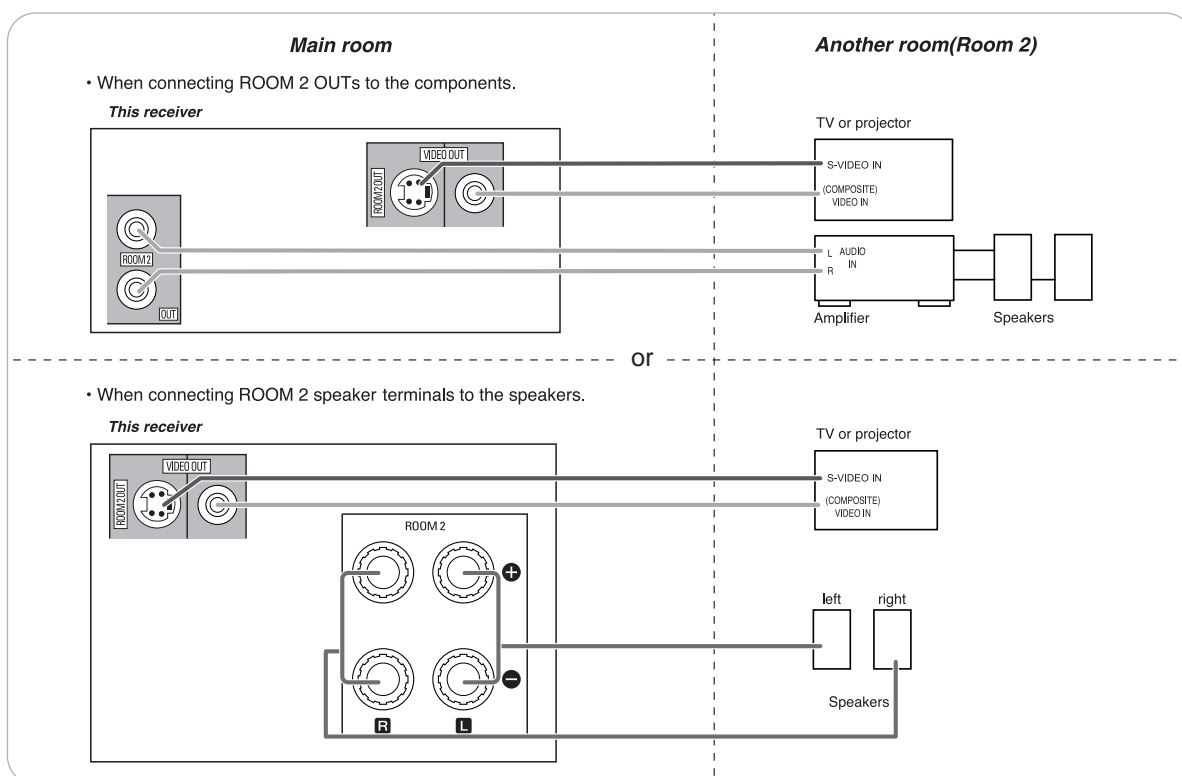

9. CONNECTING DC TRIGGER OUT

- Connect a component to DC TRIGGER OUT jack that allows DC 12V to turn on when a specific input source is selected.
- For details, refer to the operating instructions of the components to be connected.
- To link DC TRIGGER OUT with a specific input source, refer to "When selecting the DC TRIGGER" on page 56.

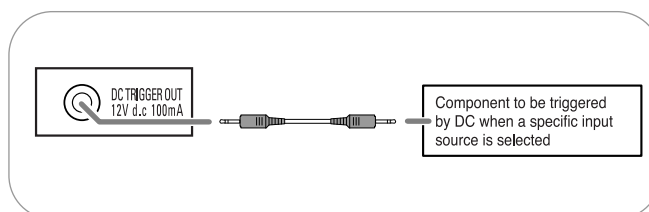

Notes :


- This output voltage (12V d.c., 100mA) is for (status) control only, it is not sufficient for drive capability.
- When making DC TRIGGER connection, you should use the stereo mini cord, not a mono mini cord.

10. CONNECTING MULTI-ROOM SYSTEM KIT

- The multi-room system kit(sold separately) is essential for operation from a remote location .
For information on the multi-room system kit, contact the Xantech corporation at 1-800-843-5465 or www.xantech.com.
- IR IN jack allows you to control this receiver from another room with the remote control unit.
- To control this receiver from another room with the remote control unit, connect the IR IN jack to the output of the connecting block.
- If this receiver is located inside a cabinet or other enclosure where the infrared beams from the remote control unit cannot enter, then operation with the remote control unit will not be possible. In such a case, connect the IR IN jack to the output of the connecting block.
- To control other compatible component from another room with the universal remote control unit, connect the IR OUT jack to the IR emitter.


Note:

- Remote operation may become unreliable if the IR receiver is exposed to strong light such as direct sunlight or inverted fluorescent.

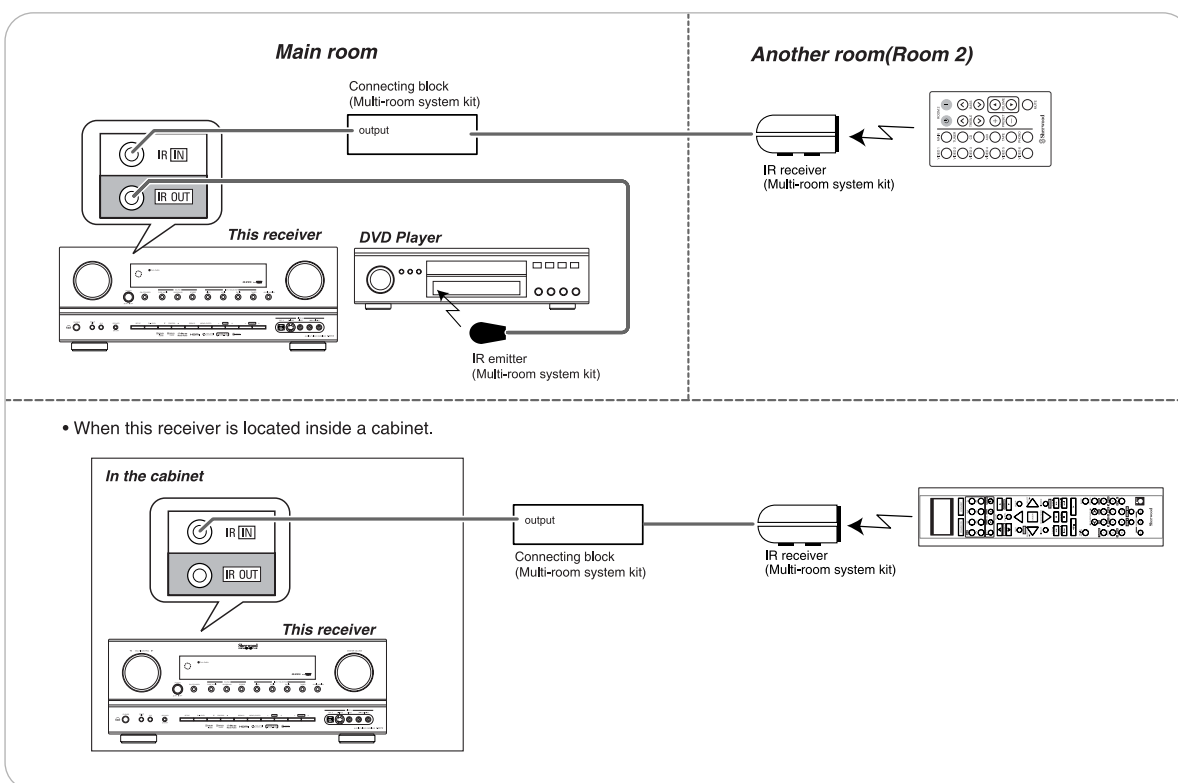

11. CONNECTING PC FOR UPGRADES

- This receiver incorporates USB as well as RS-232C terminal that may be used in the future to update the operating software so that it will be able to support new digital audio formats, external control by using an external device and the like.
- Connect either USB or RS-232C terminal to your PC (you don't need to do both).

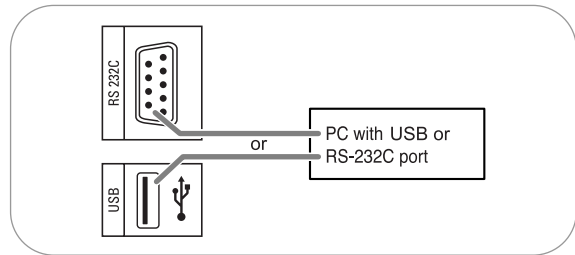


Notes:

- Programming for upgrades and external control requires specialized programming knowledge and for that reason we recommend that it only be done by qualified installers. For more information on future upgrades and external control, visit the Sherwood web site at www.sherwoodamerica.com or contact your dealer.
- Do not disconnect the connection cable while updating the operating software, etc. Should this happen, it may result in malfunction or cause damage to the unit.

12. SWITCHED AC OUTLET

- This outlet is switched on (power-on mode) and off (standby mode) according to power control as follows (Maximum total capacity is 100 W (0.43A)).

- ☐ Standby mode - Switched AC outlet off
☐ Power - on mode - Switched AC outlet on

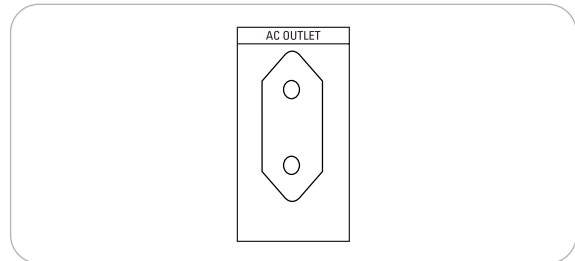


13. AC INPUT


- Plug the supplied AC input cord into this AC inlet and then into the wall AC outlet.

Note:


- Do not use an AC input cord other than the one supplied with this unit. The AC input cord supplied is designed for use with this unit and should not be used with any other device.

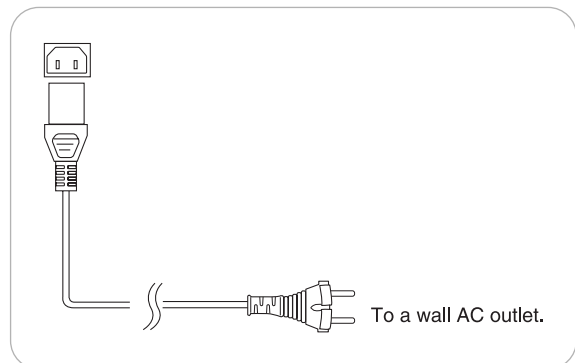

Front Panel Controls

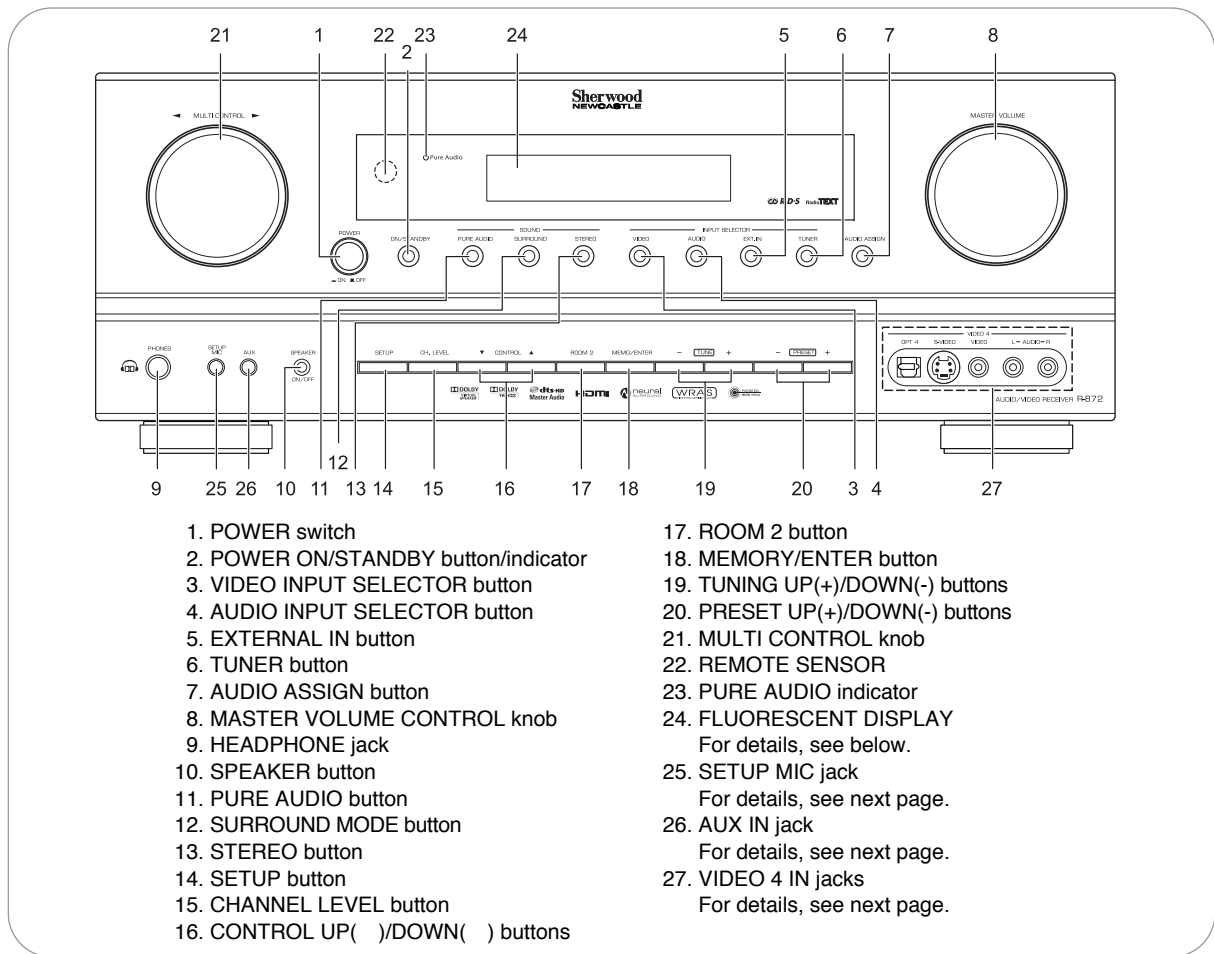

FLUORESCENT DISPLAY

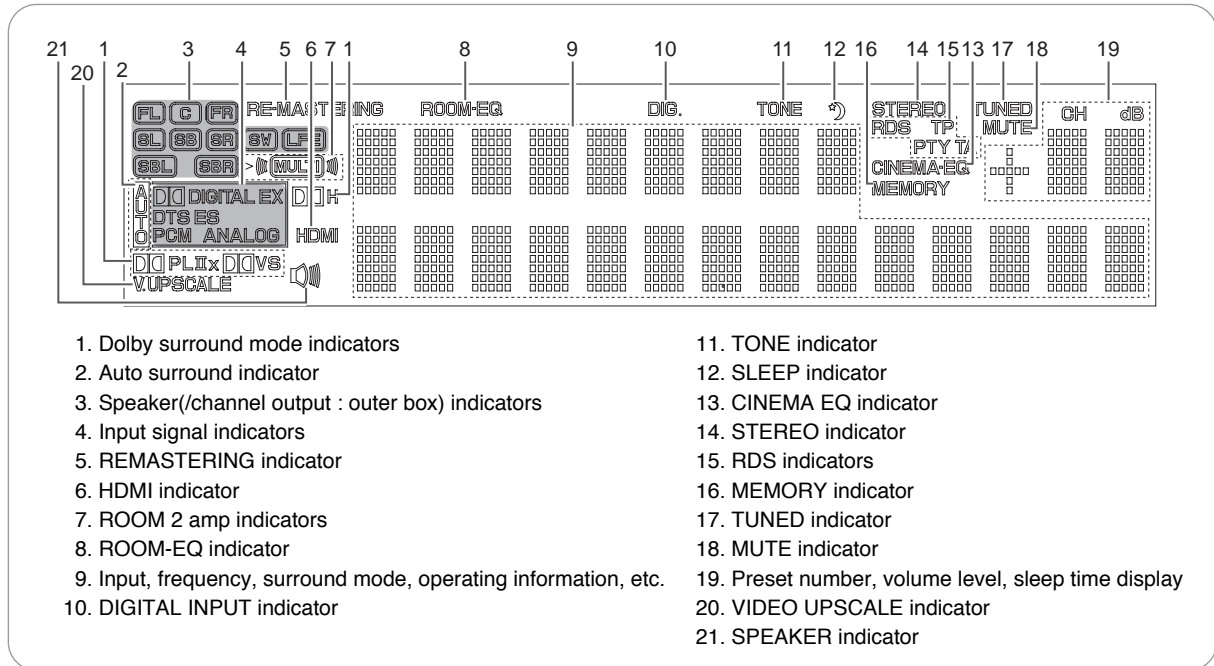

SETUP MIC JACK

- To use Auto Setup function, connect the supplied microphone to the SETUP MIC jack. (For details, refer to "When selecting the AUTO SETUP" on page 58.)

Notes:

- Because the microphone for Auto Setup is designed for use with this receiver, do not use a microphone other than the one supplied with this receiver.
- After you have completed the auto setup procedure, disconnect the microphone.




AUX IN JACK

- The AUX IN jack can be connected to an additional audio component such as an MP3 player, etc.


Note :

- When connecting this jack to an MP3 player, etc., you should use the stereo mini cord, not a mono mini cord.

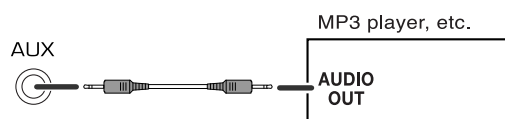

VIDEO 4 IN JACKS

- The VIDEO 4 input jacks may be also connected to an additional video component such as a camcorder, a video game player, etc.
- If the OPTICAL IN 4 is connected to the component connected to VIDEO 4, it is easier to do so following the default settings. (For details, refer to "Digital input default settings" on page 9.)
- If the OPTICAL IN 4 connection is different from the default settings, you should assign the DIGITAL INs you used with the "When selecting the AUDIO ASSIGN" procedure on page 54.
- If you connect the COMPONENT VIDEO INs on the rear panel to your video component, you should assign the COMPONENT VIDEO INs you used with the "When selecting the VIDEO ASSIGN" procedure on page 54.
- If you connect the HDMI INs on the rear panel to your video component, you should assign the HDMI INs you used with the "When selecting the HDMI ASSIGN" procedure on page 54.

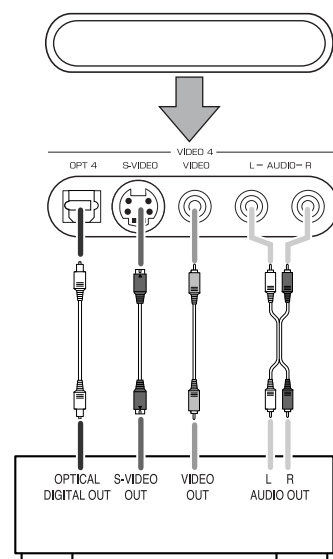

VIDEO 4 Camcorder, video game player, etc.

When not using the VIDEO 4 IN jacks, cover these jacks with the supplied cap.

Universal Remote Controls

This universal remote control can operate not only this receiver but also most popular brands of audio and video components such as CD players, tape decks, TVs, cable boxes, VCRs, satellite receivers, DVD players, etc.

- To operate 7 components other than this receiver, you should enter the setup code for each component.


(For details, refer to "USING FUNCTIONS OF REMOTE CONTROL" on page 20.)

- The numbered buttons on the remote control have different functions in different device modes. For details, refer to "FUNCTION TABLE of the NUMBERED BUTTONS" on the next page.









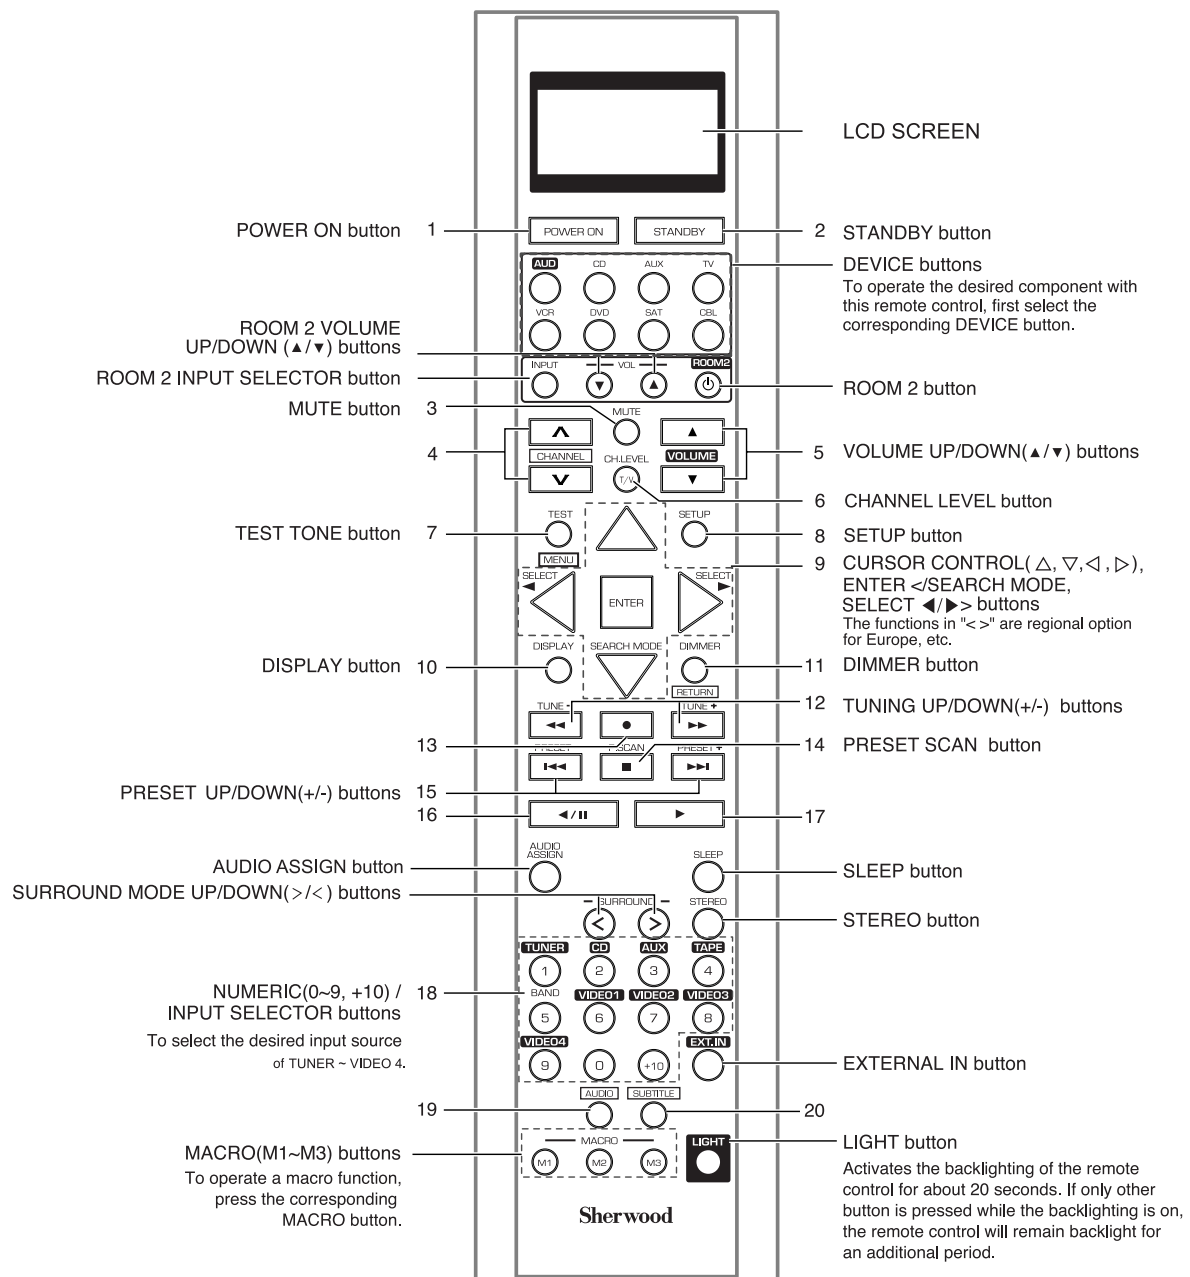


Note :

- In such a case that some components do not have the REMOTE SENSOR which receives the remote signals, this remote control cannot operate them.

ENGLISH



FUNCTION TABLE of the NUMBERED BUTTONS.

Device to be controlled	CD  (for CD player)	AUX  (for tape deck)	TV  (for TV)	VCR  (for VCR)	DVD  (for DVD player)	SAT  (for satellite receiver)	CBL  (for cable box)
Button symbol							
1 	POWER ON	POWER ON	POWER ON	POWER ON	POWER ON	POWER ON	POWER ON
2 	STANDBY (POWER OFF)	STANDBY (POWER OFF)	STANDBY (POWER OFF)	STANDBY (POWER OFF)	STANDBY (POWER OFF)	STANDBY (POWER OFF)	STANDBY (POWER OFF)
3 	—	—	MUTE	MUTE	—	MUTE	MUTE
4 	—	—	CHANNEL UP/DOWN(▲/▼)	CHANNEL UP/DOWN(▲/▼)	—	CHANNEL UP/DOWN(▲/▼)	CHANNEL UP/DOWN(▲/▼)
5 	—	—	VOLUME UP/DOWN(▲/▼)	VOLUME UP/DOWN(▲/▼)	—	VOLUME UP/DOWN(▲/▼)	VOLUME UP/DOWN(▲/▼)
6 	—	—	INPUT SELECTOR	INPUT SELECTOR	—	INPUT SELECTOR	INPUT SELECTOR
7  	—	—	—	—	MENU	—	—
8 	—	—	—	—	SETUP	—	—
9  	—	—	—	—	CURSOR CONTROL ENTER	—	—
10 	—	—	—	—	DISPLAY	—	—
11  	—	—	—	—	RETURN	—	—
12 	REVERSE SEARCH(◀◀) / FORWARD SEARCH(▶▶)	REWIND(◀◀) / FAST FORWARD(▶▶)	—	REWIND(◀◀) / FAST FORWARD(▶▶)	REVERSE SEARCH(◀◀) / FORWARD SEARCH(▶▶)	—	—
13 	—	RECORD	—	RECORD	—	—	—
14 	STOP	STOP	—	STOP	STOP	—	—
15 	REVERSE SKIP(◀◀) / FORWARD SKIP(▶▶)	—	—	—	REVERSE SKIP(◀◀) / FORWARD SKIP(▶▶)	—	—
16 	PAUSE	REVERSE PLAY	—	PAUSE	PAUSE	—	—
17 	PLAY	FORWARD PLAY	—	PLAY	PLAY	—	—
18 	NUMERIC	—	NUMERIC	NUMERIC	NUMERIC	NUMERIC	NUMERIC
19 	—	—	—	—	AUDIO	—	—
20 	—	—	—	—	SUBTITLE	—	—

Notes :


- Some functions for each component may not be available or may work differently.
- Depending on other kinds of components that are available for each DEVICE button, some functions may not be available or may work differently, too.
- For details about functions, refer to the operating instructions of each component.

OPERATING COMPONENTS WITH REMOTE CONTROL

- 1.** Enter the setup code for each component other than this receiver. For details, refer to "Entering a setup code" on page 20.
- 2.** Turn on the component you want to operate.
- 3.** Press the DEVICE button on the remote control corresponding to the component you wish to operate.
- 4.** Aim the remote control at the REMOTE SENSOR of the component you wish to control and press the button corresponding to the operation you want.

REMOTE CONTROL OPERATION RANGE


- Use the remote control within a range of about 7 meters (23 feet) and angles of up to 30 degrees aiming at the remote sensor.

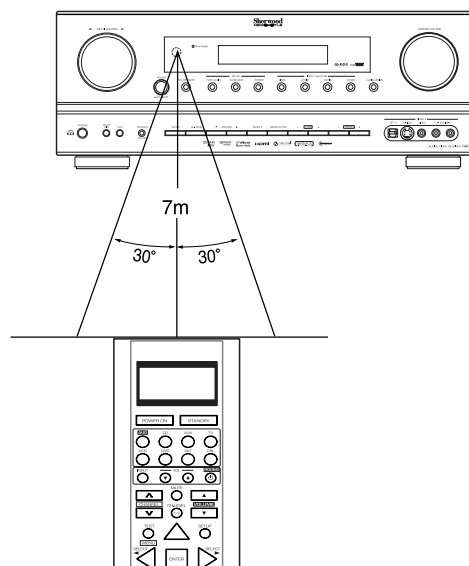


LOADING BATTERIES

- When the remote control does not operate, the old batteries should be replaced. In this case, load new batteries within several minutes after removing old batteries.
- If the batteries are removed or have been exhausted for a longer period of time, memorized contents will be cleared. Should this happen, you should memorize them again.

- 1.** Remove the cover.

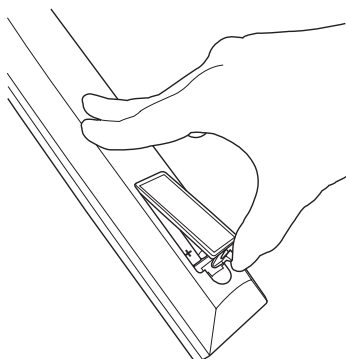

- 2.** Load four alkaline batteries ("AAA" size, 1.5V) matching the polarity.

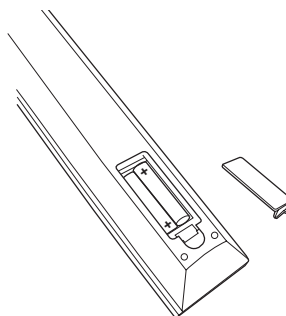

- Remove the batteries when they are not used for a long time.
- Do not use the rechargeable batteries (Ni-Cd type).
- Be sure to use alkaline batteries.

USING FUNCTIONS OF REMOTE CONTROL

- This remote control can control up to 8 different components.
- Before operating audio and video components other than this receiver with using this remote control, the setup code for each component should be entered.
- For system remote control operation, "000" was stored previously in the memory of the device button "CD" for Sherwood CD player, "DVD" for Sherwood DVD player, "AUX" for Sherwood tape deck and "TV" for Sherwood TV respectively as its factory setup code. So, you don't need to enter its code for each Sherwood component except in such a case that its code does not work.


Entering a setup code

- Setup code entry is the easiest way to program this remote control for operating audio and video components.

1. Turn on the component you want to operate.

2. Find the setup codes according to the type and the brand name of your component, referring to "Setup Code Table" on page 74.

3. Press and hold down both the ENTER button and the desired one of the DEVICE buttons for more than 2 seconds.

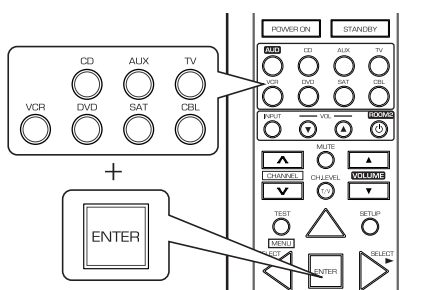


- Then "LEARN" is displayed on the LCD screen for several seconds.

Notes :

- The AUDIO button is unavailable for the audio components other than this receiver.
- During setting operation, to exit from the setting mode, press any of the DEVICE buttons.

4. While "LEARN" is displayed, press the CURSOR UP()/DOWN() buttons to select the setup code mode ("CODE"), then press the ENTER button.

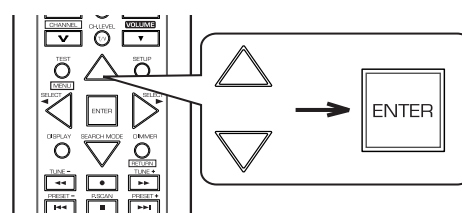


- Each time the CURSOR UP()/DOWN() buttons are pressed, the mode changes as follows :

LEARN ↔ DELETE ↔ MACRO
CODE ↔ PUNCH

- Then "PRESET" and 3 digit number are displayed.
- If "PRESET", etc. go off, start again from the above step 3.

5. While "PRESET", etc. are displayed, enter a 3 digit code and press the ENTER button.

Example: When entering "001".

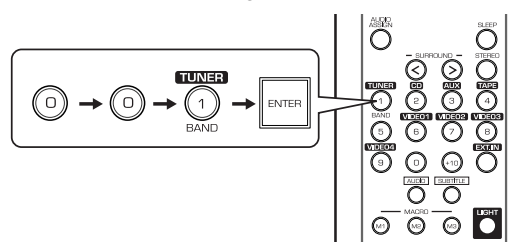

- Then "OK" is displayed on the LCD screen.
- To be sure that the setup code is correct, press the POWER ON (or STANDBY) button, aiming the remote sensor on the component.
- If the setup code is correct, your component will be turned off.
- When your component is not turned off, repeat the above steps 2 to 5, trying entering each code for your component until you find one that works.
- If "NG" is displayed, retry entering the correct setup code while "PRESET" and 3 digit number are displayed.

6. Operate the component using the corresponding function buttons.

- If any of buttons fails to operate as they should, start from the step 1 again to enter the correct setup code.

Note :

- Manufacturers may use different setup codes for the same product category. For that reason, it is important that you check to see if the code you have entered operates as many controls as possible. If only a few functions operate, check to see if another code will work with more buttons.

7. Repeat the above steps 1 to 6 for each of your other components.


Searching a setup code

- In addition to enter a setup code using "Setup Code Table" on page 74, it is also possible to search through all the codes that are stored in the library of this remote control.

1. Turn on the component you want to operate.


2. Perform the steps 3 and 4 in "Entering a setup code" procedure on page 20 to select the setup code mode ("CODE").

3. While "PRESET" is displayed, search a setup code, aiming the remote control at the remote sensor on the component.

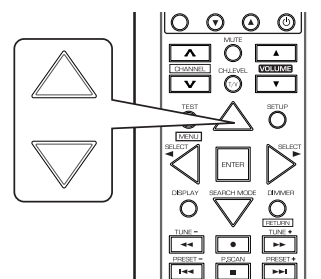

- Each time the CURSOR UP()/DOWN() buttons are pressed, the setup code is selected one by one.
- If the selected code is correct, your component will be turned off.
- When your component is not turned off, repeat this step until you find one that works.

4. While "PRESET" is displayed, press the ENTER button to store the setup code.

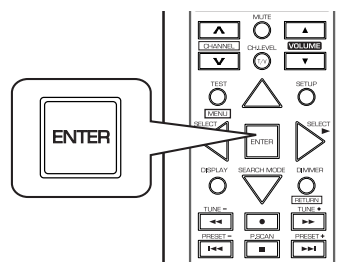

- Then "OK" is displayed on the LCD screen.

5. Operate the component using the corresponding function buttons.


- If any of buttons fails to operate as they should, start from the step 1 again to find the correct setup code.

6. Repeat the above steps 1 to 5 for each of your other components.


Programming the commands from other remote controls (LEARNING mode)

- If the setup codes are not available for your component or you want to program a missing or special function into one button of a device, the learning function enables this remote control to learn the commands from other remote controls.

1. Place this remote control and other remote control facing each other at a distance of 5 to 15 cm (2 to 6 inches) apart.

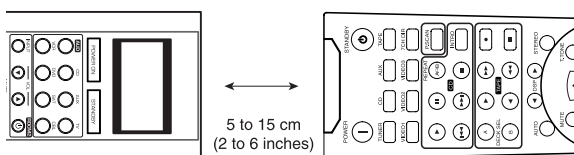

2. Press and hold down the ENTER button and the desired one of the DEVICE buttons for more than 2 seconds.

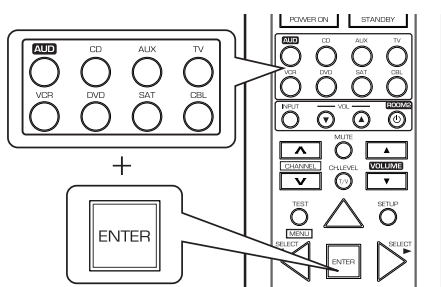


- Then "LEARN" is displayed on the LCD screen for several seconds

Note :

- During setting operation, to exit from the setting mode, press any of the DEVICE buttons.


3. While "LEARN" is displayed, press the ENTER button.

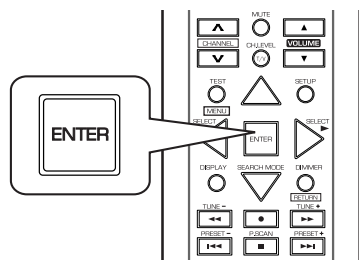

- Then "SEL" is flickering.
- If "SEL" goes off, start again from the above step 2.

4. While "SEL" is flickering, on this remote control, press the button corresponding to the function to be learned.

Example: If the function to be learned is playback, press the PLAY() button.

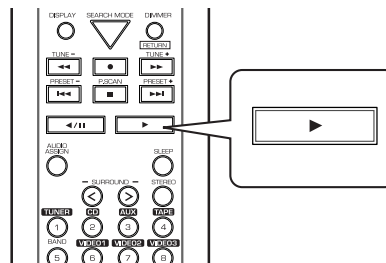

- Then "READY" is displayed.

Note:

- You cannot program a function into some buttons such as DEVICE, MACRO and LIGHT buttons.

5. While "READY" is displayed, on the other remote control, press the button of the function to be learned.

- If the command has been learned successfully, "OK" is displayed and then "SEL" is flickering.
- If "ERROR" is displayed and then "SEL" is flickering, it means that for some reason the command was not learned. In this case, repeat the above steps 4 and 5.

Notes :

- If an incorrect signal has been sent or, in some cases, the command from other remote control simply cannot be learned.
- In some "ERROR" cases, the remote controls just need to be moved closer together or farther apart.

6. While "SEL" is flickering, repeat the above steps 4 and 5 to program all the commands you want to the buttons on this remote control under the same device mode.


To exit from the setting mode, press any of the DEVICE buttons.

7. Repeat the above steps 1 to 6 to program the commands from a different remote control.

8. Operate the newly programmed buttons to make sure the learning function was performed properly.


Erasing the programmed command from one button

1. Perform the steps 3 and 4 in "Entering a setup code" procedure on page 20 to select the deleting mode ("DELETE").
 - Then "BTTN" is displayed on the LCD screen for several seconds.
2. While "BTTN" is displayed, press the CURSOR UP()/DOWN() buttons to select the one command deleting mode (BTTN), then press the ENTER button.

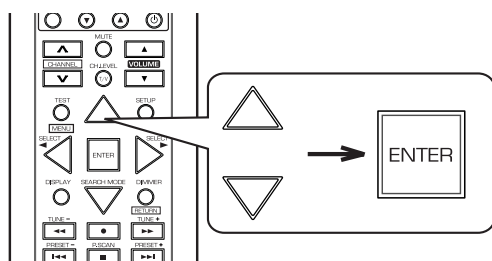

- Each time the CURSOR UP()/DOWN() buttons are pressed, "BTTN" or "LEARN"(all command deleting mode) is selected.
 - Then "SEL" is flickering.
 - If "SEL" goes off, start again from the above step 1.
3. While "SEL" is flickering, press the button for the command you want to erase.


Example: When the button for the command to be erased is PLAY button.

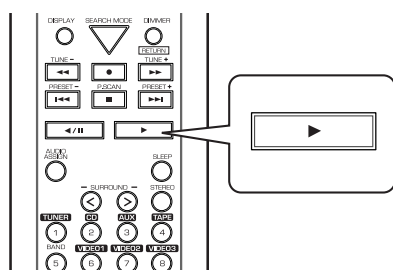


- "OK" is displayed and then "SEL" is flickering.
4. While "SEL" is flickering, repeat the above step 3 to erase other commands.

Erasing all the commands programmed under a device mode

1. Perform the steps 3 and 4 in "Entering a setup code" procedure on page 20 to select the deleting mode ("DELETE").
 - Then "BTTN" is displayed on the LCD screen for several seconds.
2. While "BTTN" is displayed, press the CURSOR UP()/DOWN() buttons to select the all command deleting mode ("LEARN"), then press the ENTER button.

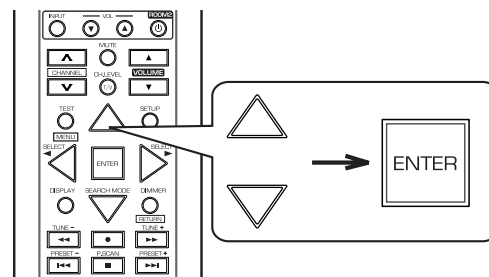

- Then "SURE?" is displayed .
 - If "SURE?" goes off, start again from the above step 1.
3. While "SURE?" is displayed, press the ENTER button.

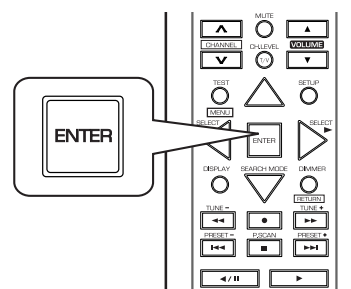

- Then all the commands programmed are erased.
4. To erase all the commands programmed under other device mode, repeat the above steps 1 to 3.


Programming a macro function

- The macro function enables you to program a series of button operations (up to 15) on this remote control into a single button.
- You can store up to three separate macro command sequences into "M1", "M2" and "M3" buttons.

1. Perform the steps 3 and 4 in "Entering a setup code" procedure on page 20 to select the macro mode ("MACRO").

- Then "M1" is displayed on the LCD screen for several seconds.
- During macro setting operation, pressing any of the DEVICE buttons cannot exit from the macro mode.

2. While "M1" is displayed, press the CURSOR UP()/DOWN() buttons to select the MACRO button to be programmed into, then press the ENTER button.

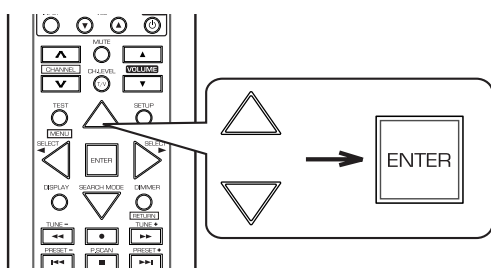

- Each time the CURSOR UP()/DOWN() buttons are pressed, "M1", "M2" or "M3" is selected.
- Then "SEL" is flickering.
- If "SEL" goes off, start again from the above step 1.

3. While "SEL" is flickering, press the operation buttons you want to program in order.


Example: When playing a DVD on the DVD player connected to VIDEO 2 jacks of this receiver.

- Press "AUDIO" button to control this receiver.
- Press "POWER ON" button to turn this receiver on.
- Press "VIDEO 2(7)" button to select the desired input source.
- Press "DVD" button to control the DVD player.
- Press "POWER ON" button to turn the DVD player on.
- Press "PLAY ()" button to start playback.



- Each time the operation buttons are pressed, the programmed order is displayed.

4. Press any of the MACRO buttons (M1~M3) to complete the programming.

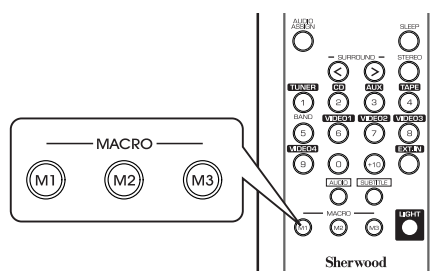

- Then "OK" is displayed.

To erase a macro program


- When erasing a macro program, perform the above steps 1, 2 and 4, but ignore the step 3.

To change a macro program

- When a new macro program is stored into a MACRO button with performing the above steps 1 to 4, the previous macro program is erased from the memory of the MACRO button.

Operating a macro function

- Example : When pressing "M1" button.

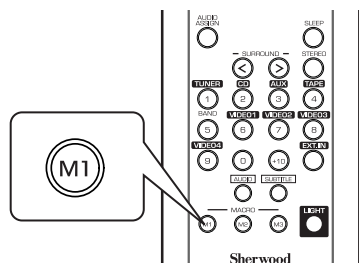

Notes:



- The codes programmed into a MACRO button will be transmitted at an interval of 0.5 seconds. However, some components may not be able to complete one operation in 0.5 seconds and may miss the next code.
In this case, the macro function cannot control the corresponding components correctly.
- Be sure to use the remote control within the remote control operation range of the components.
- Depending on the operation status of the components, etc., the macro function cannot control the corresponding components correctly.


Programming a punch-through function

- The punch-through function allows the volume controls, channel controls or transport controls to link to a different device while a device is controlled with this remote control as a master device.
- For example, since this receiver will likely be used as the sound system while watching TV, you may want to use volume controls to operate this receiver although this remote control is set to control the TV.

1. Perform the steps 3 and 4 in "Entering a setup code" procedure on page 20 to select a master device and the punch-through mode ("PUNCH").

- Then "VOL" is displayed on the LCD screen for several seconds.

2. While "VOL" is displayed, press the CURSOR UP()/DOWN() buttons to select the desired punch-through mode, then press the ENTER button.

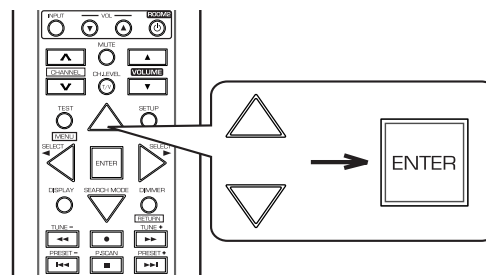

- Each time the CURSOR UP()/DOWN() buttons are pressed, the mode changes as follows:

VOL : The volume punch -through mode allows the "VOLUME / " and "MUTE" buttons to operate a different device.

DELETE : All punch-through deleting mode.


PLAY : The transport punch-through mode allows the " " " " " " " " " " " " " / " and " " buttons to operate a different device.

CH : The channel punch-through mode allows the "CHANNEL / " and "CH. LEVEL" buttons to operate a different device.

- Then the device to which you can link the selected punch-through mode is displayed.

Continued

3. While the device is displayed, press the CURSOR UP()/DOWN() buttons to select the desired punch-through device, then press the ENTER button.

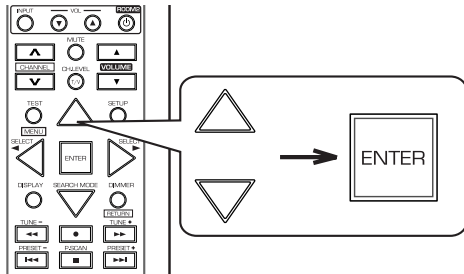

- Each time the CURSOR UP()/DOWN() buttons are pressed, depending on the selected punch-through mode, punch-through devices and the one punch-through deleting mode ("DELETE") are selected as follows :

- In case of the volume punch-through,
AUDIO ↯ DELETE ↯ TV
- In case of the transport punch-through,
CD ↯ DELETE ↯ DVD ↯ VCR ↯ AUX
- In case of the channel punch-through,
TV ↯ DELETE ↯ SAT ↯ CABLE ↯ VCR
- Then "OK" is displayed and the current punch-through mode is displayed.


4. While the punch-through mode is displayed, repeat the above steps 2 and 3 to program other punch-through function under the same master device mode.

5. To program punch-through functions under other master device mode, repeat the above steps 1 to 4.

Operating a punch-through function

- While this remote control is set to control a master device, aim the remote control at the REMOTE SENSOR of the punch-through device and press the desired button of the programmed punch-through controls.

Example: When pressing "PLAY ()" button.

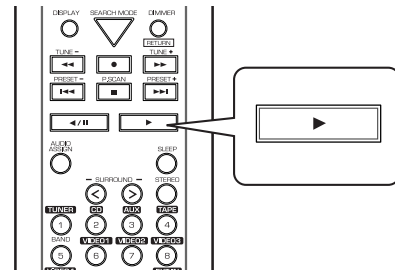


- Then the punch-through device is displayed on the LCD screen.

Erasing the programmed punch-through function

1. Perform the steps 3 and 4 in "Entering a setup code" procedure on page 20 to select a master device and the punch-through mode ("PUNCH").

- Then "VOL" is displayed on the LCD screen for several seconds.

2. While "VOL" is displayed, press the CURSOR UP()/DOWN() buttons to select the punch-through mode to be erased, then press the ENTER button.

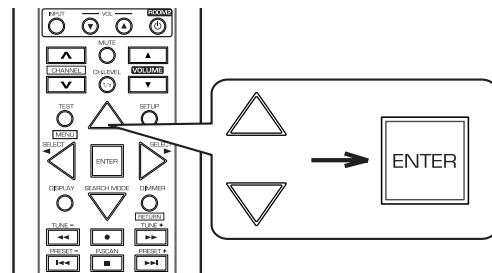


- Each time the CURSOR UP()/DOWN() buttons are pressed, the mode changes as follows:

VOL ↯ DELETE ↯ PLAY ↯ CH

- Then the device is displayed .

Continued

3. While the device is displayed, press the CURSOR UP()/DOWN() buttons to select the one punch-through deleting mode ("DELETE"), then press the ENTER button.

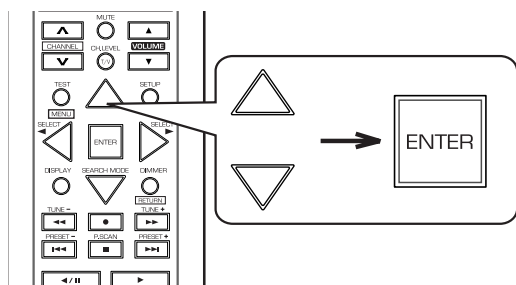

- Each time the CURSOR UP()/DOWN() buttons are pressed, depending on the selected punch-through mode, the punch-through devices and the deleting mode ("DELETE") are selected.
- Then "OK" is displayed and the current punch-through mode is displayed .

4. While the punch-through mode is displayed, repeat the above steps 2 and 3 to erase other punch-through function under the same master device mode.


5. To erase punch-through functions under other master device mode, repeat the above steps 1 to 4.

Erasing all the punch-through functions programmed under a master device mode

1. Perform the steps 3 and 4 in "Entering a setup code" procedure on page 20 to select a master device and the punch-through mode ("PUNCH").

- Then "VOL" is displayed on the LCD screen for several seconds.

2. While "VOL" is displayed, press the CURSOR UP()/DOWN() buttons to select the all punch-through deleting mode ("DELETE").

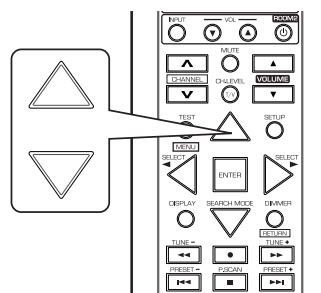


- Each time the CURSOR UP()/DOWN() buttons are pressed, the mode changes as follows:

VOL ↔ DELETE ↔ PLAY ↔ CH

- Then "DELETE" is displayed .

3. While "DELETE" is displayed, to erase all the punch-through functions programmed under the master device mode, press ENTER button.

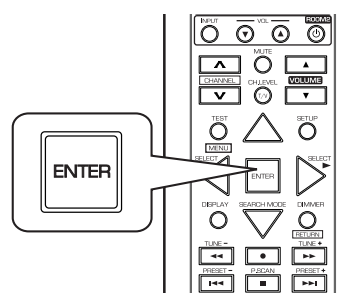


- Then "OK" is displayed and "DELETE" is displayed.
- To exit from the deleting mode, press any of the DEVICE buttons.

4. To erase all the punch-through functions programmed under other master device mode, repeat the above steps 1 to 3.

ROOM 2 Remote Controls


This remote control unit is an additional remote control unit for the ROOM 2 source playback only.

- You can use the ROOM 2 functions with this remote control unit more conveniently in another room than with the universal remote control unit.
- For details on ROOM 2 operation, refer to "ROOM 2 SOURCE PLAYBACK" on page 45.

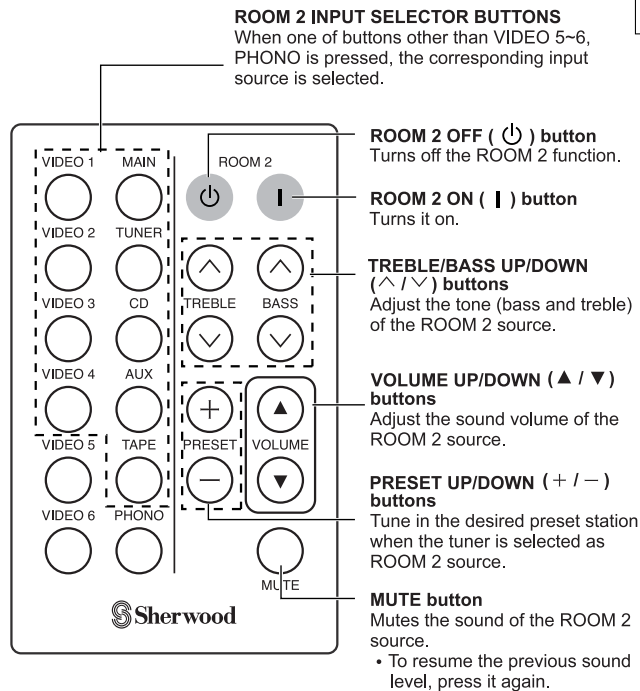

REMOTE CONTROL OPERATION RANGE

- Aim the ROOM 2 remote control(or the universal remote control) at the IR receiver installed in another room.(For details, refer to "CONNECTING MULTI-ROOM SYSTEM KIT" on page 13.)

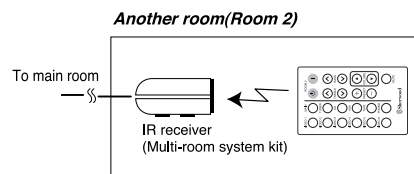


- When you operate the ROOM 2 function in the main room, aim the universal remote control (or the ROOM 2 remote control) at the remote sensor of this receiver.

LOADING BATTERY

1. Remove the cover.

2. Load the battery(CR2025) matching the polarity.

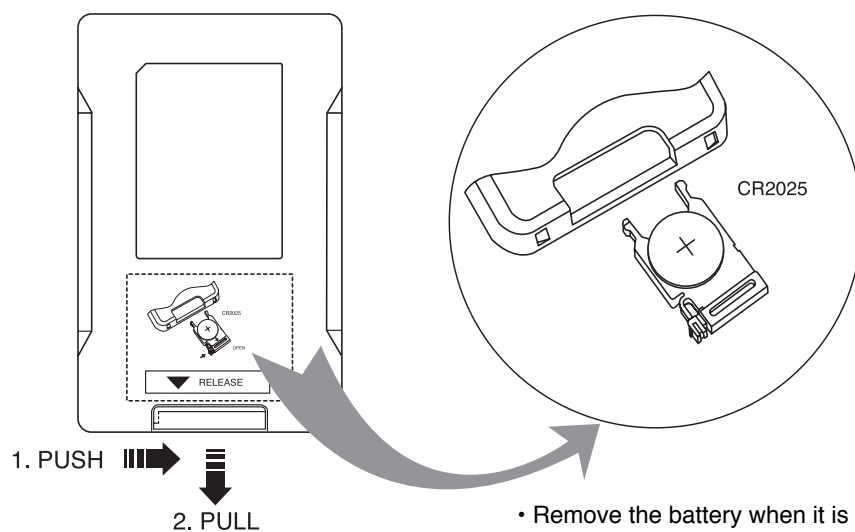

- Remove the battery when it is not used for a long time.

Operations

Notes:

- Before operating this receiver with the supplied remote control, refer to "Universal Remote Controls" on page 17 for details about operation.
- Before operating this receiver, first set this unit as desired for optimum performance, doing the OSD menu setting procedures. (For details, refer to "OSD Menu Settings" on page 47.)


LISTENING TO A PROGRAM SOURCE

Before operation

- Enter the standby mode.
- The POWER ON/STANDBY button lights up amber. This means that the receiver is not disconnected from the AC mains and a small amount of current is retained to support the operation readiness.
- To switch the power off, push the POWER switch again. Then the power is cut off and the POWER ON/STANDBY button goes off.




1. In the standby mode, turn the power on.

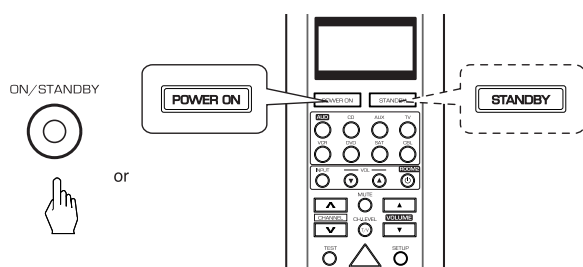


- Each time the POWER ON/STANDBY button on the front panel is pressed, the receiver is turned on to enter the operating mode (the POWER ON/STANDBY button lights up blue) or off to enter the standby mode (the POWER ON/STANDBY button lights up amber).
- On the remote control, press the POWER ON button to enter the operating mode or press the STANDBY button to enter the standby mode.

2. Switch the speakers on.

- Then the SPEAKER indicator () lights up and the sound can be heard from the speakers connected to the speaker terminals.
- When using the headphones for private listening, press the SPEAKER button again to switch the speakers off.




3. Select the desired input source.

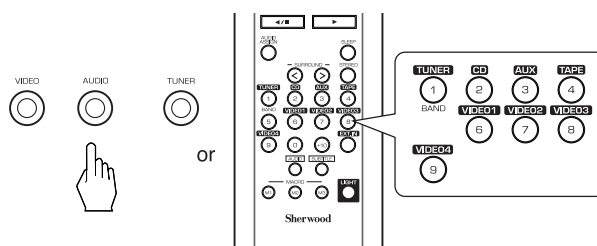

- Each time the "AUDIO" button on the front panel is pressed, the input source changes as follows:
CD AUX TAPE
- Each time the "VIDEO" button on the front panel is pressed, the input source changes as follows:
VIDEO 1 VIDEO 2 --- VIDEO 4
- Each time the "TUNER" button is pressed, the band changes as follows:
FM STEREO FM MONO AM

When selecting the EXTERNAL IN as desired,

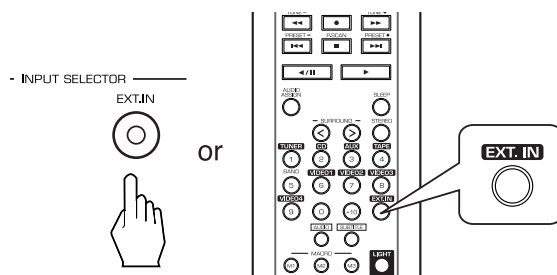


- Depending on the power amplifier setting for the surround back channels and the surround back speaker setting, "EXT. IN" is displayed and 8(7/6) separate analog signals from the component connected to this input pass through the volume circuits only and can be heard from your speakers.
- Select the desired input source to cancel the external in function.
- These analog signals can be heard only, not recorded.

When CD, AUX, VIDEO 1~ 4 is selected as an input source


- If the AUDIO MODE is set to the mode other than "DIGITAL" for the corresponding input source on the INPUT SETUP menu, you cannot hear the sound from the selected digital input. (For details, refer to "SETTING THE INPUT SETUP" on page 53.)

4. Press the AUDIO ASSIGN button.

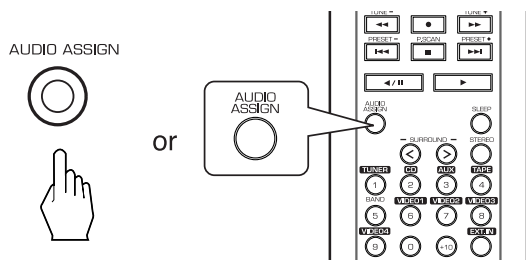


- "AUDIO ~" is displayed for several seconds.
- "AUDIO ~" disappears, press the AUDIO ASSIGN button again.

5. Select the desired of the digital inputs connected while displaying "AUDIO ~".

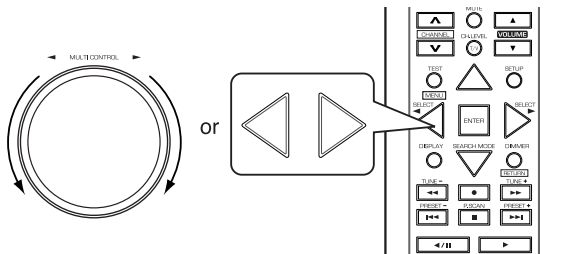

- Each time the MULTI CONTROL knob is rotated or the CURSOR LEFT()/RIGHT() buttons are pressed, the corresponding input is selected as follows :

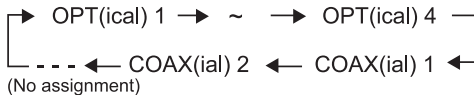


Notes:

- When the selected digital input is not connected, the "DIG." indicator flickers and no sound will be heard.
- The selected digital input is automatically assigned to the corresponding input source on the INPUT SETUP menu. (For details, refer to "SETTING THE INPUT SETUP" on page 53.)
- The sound from the component connected to the selected digital input can be heard regardless of the selected input source.


6. Operate the selected component for playback.

- When playing back the program sources with surround sound, refer to "ENJOYING SURROUND SOUND" on page 34.

7. Adjust the (overall) volume.

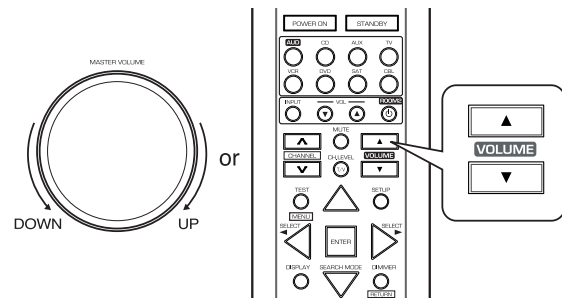


Muting the sound

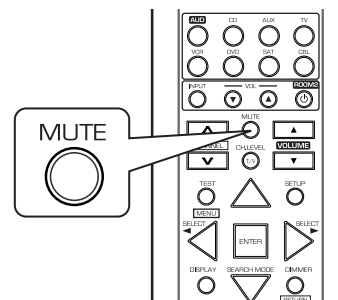

- "MUTE" flickers.
- To resume the previous sound level, press it again.

Listening with headphones

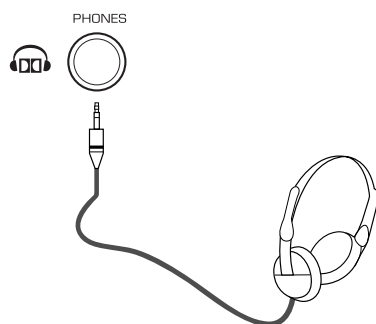


- Ensure that the SPEAKER button is set to off.
- Depending on the signal format which is being input, you can listen in Dolby Headphone mode, stereo mode, etc. (For details, refer to "Listening in Dolby Headphone mode" on page 35).
- When the EXTERNAL IN is selected as an input source, only front left and front right channel signals can be reproduced through the headphones.

Note:

- Be careful not to set the volume too high when using headphones.

Achieving higher purity of sound quality

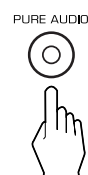

- The PURE AUDIO indicator lights up, the fluorescent display goes off and all the video-related circuits are turned off, meaning no video signal transfer.
- When the pure audio is activated, the optimum surround mode (or stereo mode, etc.) will be automatically selected depending on the signal format being input.
- Press this button again to cancel the pure audio function.

SURROUND SOUND

- This receiver incorporates a sophisticated Digital Signal Processor that allows you to create optimum sound quality and sound atmosphere in your personal Home Theater.

Surround modes

DTS Digital Surround

DTS Digital Surround(also called simply DTS) supports up to 5.1 discrete channels and uses less compression for high fidelity reproduction. Use it with DVDs and CDs bearing the DTS logo.

DTS-ES™ Discrete 6.1

This is a 6.1 channel discrete digital audio format adding a surround back channel to the DTS digital surround sound. The seven totally separate audio channels provide better spatial imaging and 360 degrees sound localization, perfect for sounds that pan across the surround channels. Use it with DVDs bearing the DTS-ES logo, especially those with a DTS-ES Discrete sound track.

DTS - ES™ Matrix 6.1

This is a 6.1 channel discrete digital audio format inserting a surround back channel to the DTS digital surround sound through matrix encoding. Use it with DVDs bearing the DTS-ES logo.

DTS Neo : 6™ surround

DTS Neo : 6 is a matrix decoding technology for achieving 7.1 channel surround playback with 2 channel sources. It includes "DTS Neo : 6 Cinema" suited for playing movies and "DTS Neo : 6 Music" suited for playing music.

DTS 96/24

This is high resolution DTS with a 96 kHz sampling rate and 24 bit resolution, providing superior fidelity. Use it with DVDs bearing the DTS 96/24 logo.

DTS-HD High Resolution Audio

Developed for use with HDTV, including the new video disc formats Blu-ray and HD DVD, this is the latest multi-channel audio format from DTS. It supports up to 7.1 channels with 96 kHz/24 bit sampling rate and signal resolution.

DTS-HD Master Audio

Designed to take full advantage of the additional storage space offered by the new Blu-ray and HD DVD disc formats, this new DTS format offers up to 7.1 discrete channels of uncompressed digital audio with 96 kHz/24 bit sampling rate and signal resolution.

This receiver supports 7.1 channel sources up to 96 kHz and 5.1 channel sources up to 192 kHz.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535 & other U.S. and worldwide patents issued & pending.

DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio are trademarks of DTS, Inc.

1996-2007 DTS, Inc. All Rights Reserved.

Dolby Digital

Dolby Digital is the multi-channel digital signal format developed by Dolby Laboratories. Discs bearing the Dolby Digital logo includes the recording of up to 5.1 channels of digital signals. This will put you right in the middle of the action, just like being in a movie theater or concert hall.

Dolby Digital EX

This mode expands 5.1-channel sources for 6.1/7.1 channel playback. It's especially suited to Dolby Digital EX soundtracks that include a matrix-encoded surround back channel. The additional channel adds an extra dimension and provides an enveloping surround sound experience, perfect for rotating and fly-by sound effects.

Dolby Digital Plus

Developed for use with HDTV, including the new video disc formats Blu-ray and HD DVD, this is the latest multichannel audio format from Dolby. It supports up to 7.1 channels with 48 kHz/24-bit sampling rate and signal resolution.

Dolby TrueHD

Designed to take full advantage of the additional storage space offered by the new Blu-ray and HD DVD disc formats, this new Dolby format offers up to 7.1 discrete channels of lossless audio performance with 96 kHz/24 bit sampling rate and signal resolution.

This receiver supports 7.1-channel sources up to 96 kHz and 5.1-channel sources up to 192 kHz.

Dolby Pro Logic IIx surround

This mode expands any 2-channel source for 7.1-channel playback. It provides a very natural and seamless surround sound experience that fully envelopes the listener. As well as music and movies, video games can also benefit from the dramatic spatial effects and vivid imaging. It includes "Dolby Pro Logic IIx Movie" suited for playing movies, "Dolby Pro Logic IIx Music" suited for playing music and "Dolby Pro Logic IIx Game" suited for playing games.

Dolby Pro Logic II surround

If you are not using any surround back speakers, Dolby Pro Logic II surround will be used instead of Dolby Pro Logic IIx surround. It includes Dolby Pro Logic II Movie, Dolby Pro Logic II Music and Dolby Pro Logic II Game like Dolby Pro Logic IIx surround.

Dolby Virtual Speaker

This mode creates a virtual surround sound field using as few as two front speakers, allowing you to experience listening from 5.1 channel speakers.

This mode is effective not only for 5.1 channel sources but also for 2 channel sources.

Dolby Virtual Speaker includes two listening mode as follows:

• **Dolby Virtual Speaker Reference**

The width of the front sound image is defined by the actual distance between front speakers.

• **Dolby Virtual Speaker Wide**

The width of the front sound image seems to extend beyond the front speakers.

Dolby Headphone

The Dolby Headphone function simulates 5.1 channel surround sound, which allows you to enjoy 5.1 channel surround sound through 2 channel headphones, just like listening from 5.1 channel speakers.

This mode is effective not only for 5.1 channel sources but also for 2 channel sources.

Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.

Neural Surround™

Neural Surround represents the latest advancement in surround technology developed for music and is adopted by XM Satellite Radio for digital radio broadcast of surround recordings and live events in surround sound.

Neural Surround employs psychoacoustic frequency-domain processing, which allows delivery of a more detailed sound stage, with superior channel separation and localization of audio elements. System playback is scalable from 5.1 to 7.1 multichannel surround playback.

This product contains technology manufactured under license from Neural Audio Corporation. Sherwood Corporation hereby grants the user a non-exclusive, nontransferable, limited license right to use this product

under the US and foreign patents pending and other related technology owned by Neural Audio Corporation.

Neural Surround is a trademark owned by Neural Audio Corporation, THX is a trademark of THX Ltd., which may be registered in some jurisdictions. All rights reserved.

- The following modes apply conventional 2-channel signals such as digital PCM or analog stereo signals to high performance Digital Signal Processor to recreate sound fields artificially. Select one of the 7 provided surround modes according to the program source you want to play.

Theater

This mode provides the effect of being in a movie theater when watching a play.

Hall

This mode provides the ambience of a concert hall for classical music sources such as orchestral, chamber music or an instrumental solo.

Stadium

This mode provides the expansive sound field to achieve the true stadium effect when watching baseball or soccer games.

Room

This mode provides the sound field of a house with a low ceiling and hard walls for jazz music.

Panorama

This mode provides a dynamic and broad sound space to heighten the overall impact of the sound track.

Classic

This mode provides the acoustic effects of a large concert hall for classical music.

Multi CH Stereo

This mode is designed for playing background music. The front, surround and surround back channels create a stereo image that encompasses the entire area.

- When using the EXTERNAL INs to play back the sound from the additional multi-channel decoder for surround sound, you can enjoy the corresponding surround sound, too. (For details, refer to the operating instructions of the component to be connected.)

For your reference, the sound from each channel can be reproduced according to the surround modes as follows:

Modes	Channels	FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	SUBWOOFER
DTS-HD HIGH RESOLUTION AUDIO/MASTER AUDIO					/—	
DTS, DTS 96/24					—	
DTS ES DISCRETE/MATRIX						
DTS NEO: 6 CINEMA/MUSIC						—(*)
DOLBY DIGITAL PLUS / DOLBY TRUEHD					/—	
DOLBY DIGITAL					—	
DOLBY DIGITAL EX						
DOLBY PRO LOGIC IIX MOVIE/MUSIC/GAME						
DOLBY PRO LOGIC II MOVIE/MUSIC/GAME					—	
DOLBY VIRTUAL SPEAKER					—	—(*)
MULTI PCM					/—	
Other Surrounds						—(*)
STEREO			—	—	—	—(*)
EXTERNAL IN						

(*): Depending on the subwoofer setting, the sound from the subwoofer channel may be reproduced.


- Depending on the speaker settings and the number of the encoded channels, etc., the sound from the corresponding channels cannot be reproduced. (For details, refer to "SETTING THE SPEAKER / ROOM EQ SETUP" on page 58.)

ENJOYING SURROUND SOUND

Notes:

- Before surround playback, first perform the speaker setup procedure, etc. on the OSD menu for optimum performance. (For details, refer to "SETTING THE SPEAKER/ROOM EQ SETUP" on page 58.)
- When playing digital signals from the Dolby Digital program source or selecting the surround mode such as Dolby Pro Logic II /Dolby Pro Logic IIx Music, Dolby Headphone, Dolby Virtual Speaker modes, you can adjust their parameters for optimum surround effect. (For details, refer to "SETTING THE SOUND PARAMETER" on page 66.)
- When the EXTERNAL IN is selected as an input source, the surround modes cannot be selected.

Depending on how to select a surround mode, select the auto surround mode or the manual surround mode.

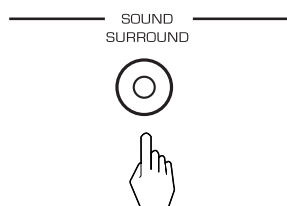

- Each time this button is pressed, the mode changes as follows :


Auto surround mode : The optimum surround mode will be ("AUTO" lights up.) automatically selected depending on the signal format being input.

Manual surround mode : You can select the desired of different surround modes selectable for the signal being input with using the MULTI CONTROL knob or the SURROUND MODE UP/DOWN (/) buttons.

Notes :

- Even when the auto surround mode is selected and the same type of digital signal format is being input, the optimum surround mode may vary depending on whether the speaker type is set to "NO" or not.
- When the auto surround mode is selected, the surround modes other than the optimum surround mode cannot be selected.

When selecting the manual surround mode with pressing the SURROUND MODE button on the front panel. Select the desired surround mode.

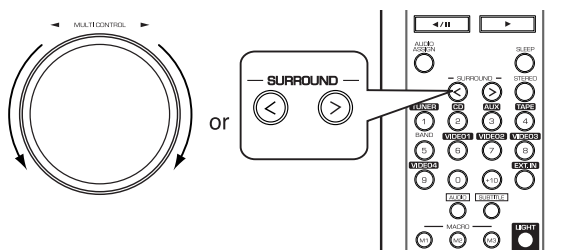

- Each time the MULTI CONTROL knob is rotated or the SURROUND MODE UP / DOWN (> / <) buttons are pressed, the surround mode changes depending on the input signal format as follows :

Signal format being input	Selectable surround mode
Dolby Digital Plus sources	DOLBY DIGITAL +
Dolby TrueHD sources	Dolby TrueHD
Dolby Digital EX 6.1 channel sources, Dolby Digital 5.1 channel sources	<DOLBY DIGITAL EX, DOLBY D + PLIIx MUSIC>, (DOLBY D + PLIIx MOVIE), DOLBY DIGITAL, DOLBY VS REF, DOLBY VS WIDE
Dolby Digital 2 channel sources	<DOLBY PLIIx MOVIE, DOLBY PLIIx MUSIC, DOLBY PLIIx GAME>, [DOLBY PLII MOVIE, DOLBY PLII MUSIC, DOLBY PLII GAME], DOLBY VS REF, DOLBY VS WIDE
DTS-HD High Resolution Audio sources	DTS-HD HI RES
DTS-HD Master Audio sources	DTS-HD MSTR
DTS ES Discrete/Matrix 6.1 channel sources	<corresponding DTS ES mode, DTS + PLIIx MUSIC>, (DTS + PLIIx MOVIE), DTS, DOLBY VS REF, DOLBY VS WIDE
DTS sources, DTS 96/24 sources	corresponding DTS mode, DOLBY VS REF, DOLBY VS WIDE, <DTS + NEO:6, DTS + PLIIx MUSIC>, (DTS + PLIIx MOVIE)
PCM (multi-channel) sources*	MULTI PCM, <DOLBY PLIIx MOVIE, DOLBY PLIIx MUSIC>, DOLBY VS REF, DOLBY VS WIDE
96 kHz PCM (2 channel) sources** PCM (2 channel) sources, Analog stereo sources	<DOLBY PLIIx MOVIE, DOLBY PLIIx MUSIC, DOLBY PLIIx GAME>, [DOLBY PLII MOVIE, DOLBY PLII MUSIC, DOLBY PLII GAME], DOLBY VS REF, DOLBY VS WIDE, NEO:6 CINEMA, NEO:6 MUSIC, NEURAL, THEATER, HALL, STADIUM, ROOM, PANORAMA, CLASSIC, MULTI-CH STEREO

- Depending on surround back speaker setting, some surround modes can be selected or not as follows:

<>: Possible only when surround back speaker is not set to "NO".

[] : Possible only when surround back speaker is set to "NO".


() : Possible only when surround back speaker is set to "2CH".

* : Depending on the signal format being input, the Dolby Pro Logic IIx modes and the Dolby Virtual Speaker modes may not be selected.

** : While playing 96kHz PCM(2channel) sources, the Neural Surround mode cannot be selected.

Continued

To cancel the surround mode for stereo operation

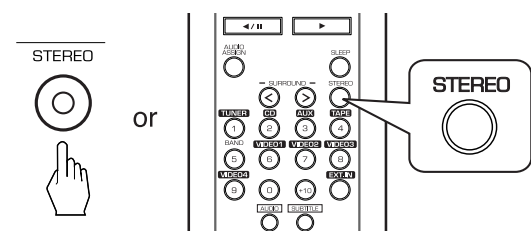

- Depending on the signal format which is being input, either the stereo mode or the 2CH downmix mode is selected.
- To cancel either the stereo mode or the 2CH downmix mode, select the surround mode with using the MULTI CONTROL knob on the front panel or the SURROUND MODE UP/DOWN (>/<) buttons on the remote control.

2CH downmix mode

- This mode allows the multi-channel signals encoded in DTS or Dolby Digital format, etc. to be mixed down into 2 front channels and to be reproduced through only two front speakers or through headphones.
- When the SPEAKER button is set to off to listen with headphones, if the STEREO button is pressed while playing the multi-channel digital signals from DTS or Dolby Digital sources, etc., it will enter the 2CH downmix mode automatically.
- To cancel the 2CH downmix mode, select the Dolby Headphone mode with using the MULTI CONTROL knob on the front panel or the SURROUND MODE UP/DOWN (>/<) buttons on the remote control.

Listening in Dolby Headphone mode

- The Dolby Headphone function simulates 5.1 channel surround sound, which allows you to enjoy 5.1 channel surround sound through 2 channel headphones, just like listening from 5.1 channel speakers.

Note :

- Only when the SPEAKER button is set to off, the Dolby Headphone mode can be selected.
- Switch the speakers off to listen with headphones.




- Then "Headphone" (or "H ~") is displayed and the Dolby Headphone mode is selected.
- To cancel the Dolby Headphone mode, press the SPEAKER button again.

Adjusting each channel level with test tone


- The volume level of each channel can be adjusted easily with the test tone function.

Note : When the SPEAKER button is set to off, the test tone function does not work.

1. Enter the test tone mode.

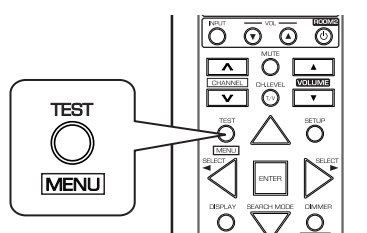


- The test tone will be heard from the speaker of each channel for 2 seconds as follows:

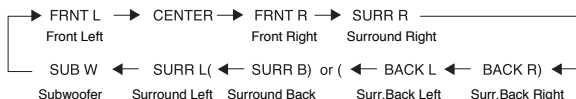


- When the speaker setting is "NO", the test tone of the corresponding channel is not available.
- () : Possible depending on whether the surround back channel is set to "2 CH" or "1 CH".

2. At each channel, adjust the level as desired until the sound level of each speaker is heard to be equally loud.

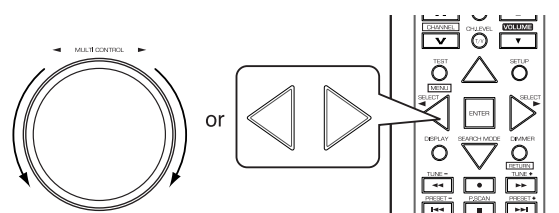

- You can select the desired channel with pressing the CONTROL UP/DOWN (/) buttons or the CURSOR UP/DOWN (/) buttons.


3. Cancel the test tone function.

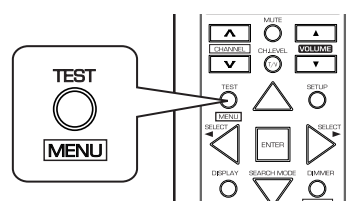

Adjusting the current channel level


- After adjusting each channel level with test tone, adjust the channel levels either according to the program sources or to suit your tastes.
- You can adjust the current channel levels as desired. These adjusted levels are just memorized into user's memory ("CALIBRATE"), not into preset memory("REFERENCE 1", "REFERENCE 2").

1. Press the CHANNEL LEVEL button.

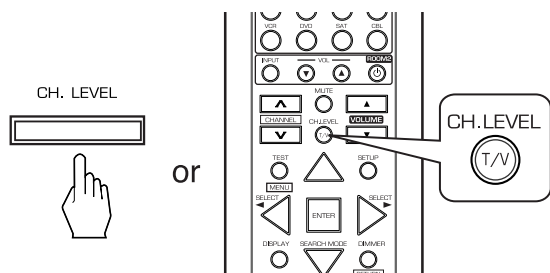

- Then the memory mode ("CALIBRATE" or "REFERENCE 1") is displayed for several seconds.
- When the memory mode or channel level disappears, press this button again.

2. Select the desired channel.

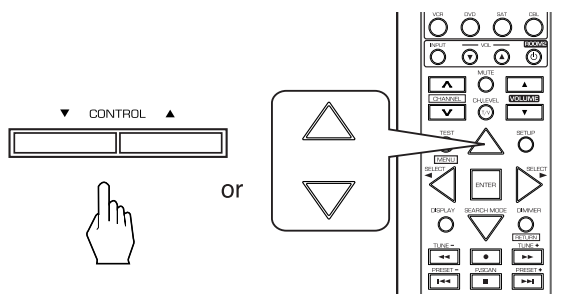


- Each time these buttons are pressed, the corresponding channel is selected as follows:

→ CALIBRATE (or REFERENCE 1) ↔ FRNT L ↔ CENTER ↔ FRNT R ↔ SURR R ↔
 → <LFE> ↔ SUB W ↔ SURR L(↔ SURR B) or (↔ BACK L↔ BACK R) ↔
 DTS LFE or Dolby Digital LFE

- (): Possible depending on whether the surround back channel is set to "2 CH" or "1 CH".
- <>: Possible only when the digital signals from Dolby Digital or DTS program sources that include LFE signal are input.

- Depending on the speaker settings("NO", etc.) and surround mode, etc., some channels cannot be selected.
- When the SPEAKER button is set to off, only the Front Left, Front Right (and LFE) channels can be selected.

3. Adjust the level of the selected channel as desired.

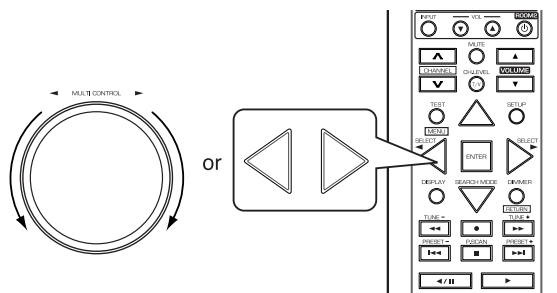


- The LFE level can be adjusted within the range of -10 ~ 0 dB and other channel levels within the range of -15 ~ +15 dB.
- In general, we recommend the LFE level to be adjusted to 0 dB.(However, the recommended LFE level for some early DTS software is -10 dB.) If the recommended levels seem too high, lower the setting as necessary.

4. Repeat the above steps 2 and 3 to adjust each channel level.

Memorizing the adjusted channel levels


- You can memorize the adjusted channel levels into preset memory("REFERENCE 1", "REFERENCE 2") and recall the memorized whenever you want.

- After performing the steps 1~4 in "Adjusting the current channel level" procedure on page 36, press the (MEMORY)/ENTER button.

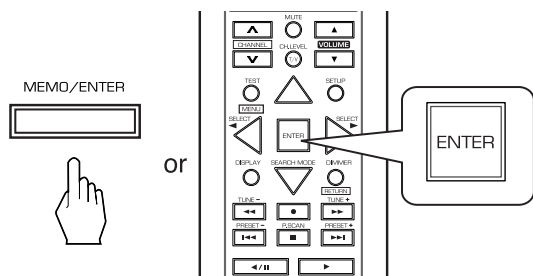


- The "1" of "REFERENCE 1" indication flickers for several seconds.

- Select the desired one of REFERENCE 1 and REFERENCE 2.

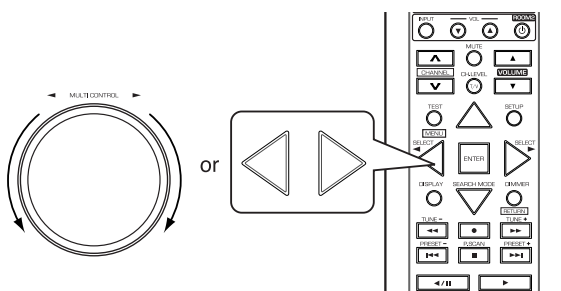

- If the preset memory disappears, perform the above step 1 again.


- Confirm your selection.

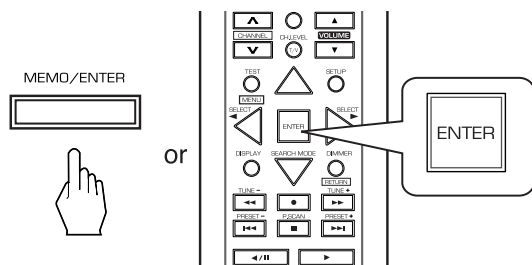

- The adjusted channel levels have now been memorized into the selected memory.


Recalling the memorized channel levels

- Press the CHANNEL LEVEL button.

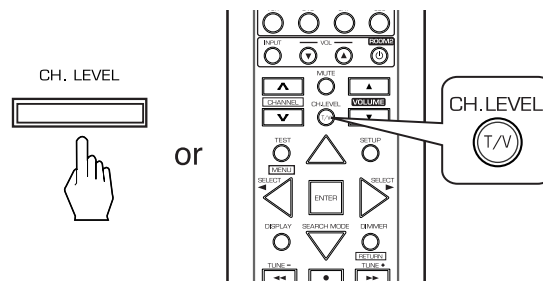

- "REFERENCE 1" (or "CALIBRATE") is displayed for several seconds.
- If the channel level mode display disappears, press this button again.

- Select the desired one of REFERENCE 1 and REFERENCE 2.

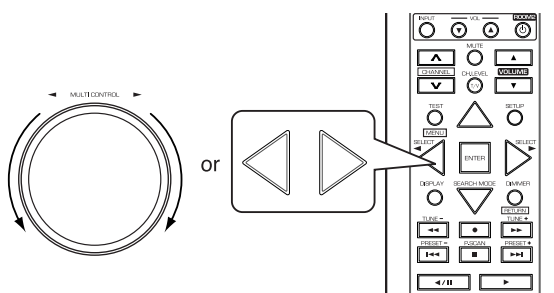


- Then the channel levels memorized into the selected preset memory are recalled.

LISTENING TO RADIO BROADCASTS

Auto tuning


1. Select the desired band.

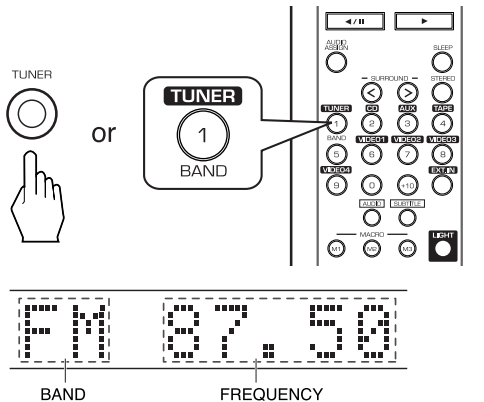

- Each time this button is pressed, the band changes as follows :

FM STEREO	FM MONO	AM
-----------	---------	----
- When FM stereo broadcasts are poor because of weak broadcast signals, select the FM mono mode ("STEREO" goes off) to reduce the noise, then FM broadcasts are reproduced in monaural sound.


2. Press the TUNING UP(+)/DOWN(-) buttons for more than 0.5 second.

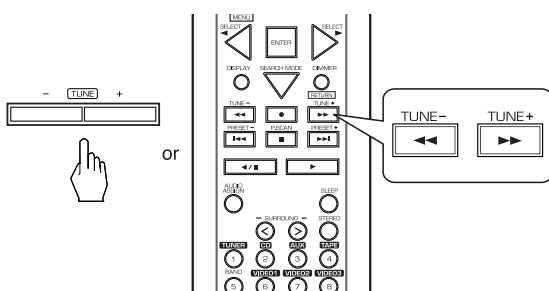

- The tuner will now search until a station of sufficient strength has been found. The display shows the tuned frequency and "TUNED".
- If the station found is not the desired one, simply repeat this operation.
- Weak stations are skipped during auto tuning.


Manual tuning

- Manual tuning is useful when you already know the frequency of the desired station.
- After selecting the desired band, press the TUNING UP(+)/DOWN(-) buttons repeatedly until the right frequency has been reached.

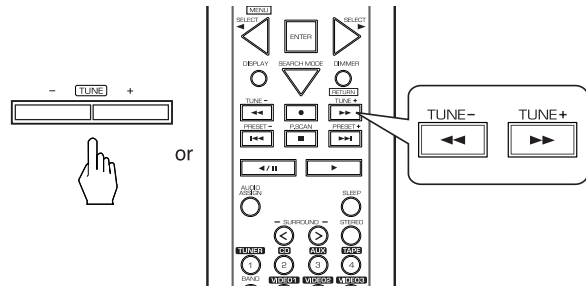

Auto presetting

- Auto presetting function automatically searches for FM stations only and store them in the memory.
- While listening to radio broadcasts, press and hold down the MEMORY/ENTER button for more than 2 seconds.
- Then "AUTO MEMORY" flickers and this receiver starts auto presetting.
- Up to 30 FM stations can be stored.

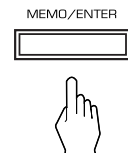

Notes:


- FM stations of weak strength cannot be memorized.
- To memorize AM stations or weak stations, preform "Manual presetting" procedure with using "Manual tuning" operation.

Manual presetting

- You can store up to 30 preferred stations in the memory.


1. Tune in the desired station with auto or manual tuning.

2. Press the MEMORY/ENTER button.

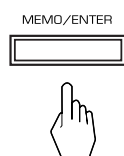

- "MEMORY" is flickering for several seconds.

3. Select the desired preset number (1~30) and press the MEMORY/ENTER button.

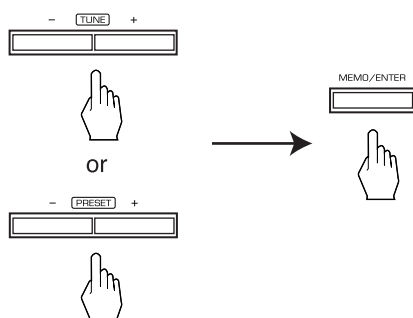

- The station has now been stored in the memory.
- A stored frequency is erased from the memory by storing another frequency in its place.
- If "MEMORY" goes off, start again from the above step 2.

4. Repeat the above steps 1 to 3 to memorize other stations.


MEMORY BACKUP FUNCTION

The following items, set before the receiver is turned off, are memorized.


- INPUT SELECTOR settings
- Surround mode settings
- Preset stations, etc.

Tuning to preset stations

- After selecting the tuner as an input source, select the desired preset number.

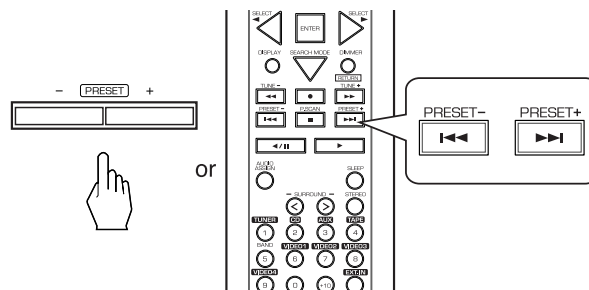

Scanning preset stations in sequence

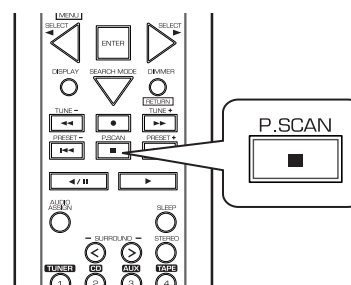

- The receiver will start scanning the stations in the preset sequence and each station is received for 5 seconds.
- At the desired station, press this button again to stop scanning.

RDS Tuner(Regional Option for some countries in Europe, etc.) _____

LISTENING TO RDS BROADCASTS(FM ONLY)

RDS(Radio Data System) is a method for sending information signals together with the transmitter signals. Your tuner is capable of translating these signals and putting the information on the display. These codes contain the following information. Program Service name(PS), A list of Program Types(PHY), Traffic Announcement(TA), Clock Time(CT), Radio Text(RT).


Note :

- In the other countries, RDS tuner function cannot be available.

RDS search

- Use this function to automatically search and receive the stations offering RDS services.


1. In the FM mode, select the RDS search mode.

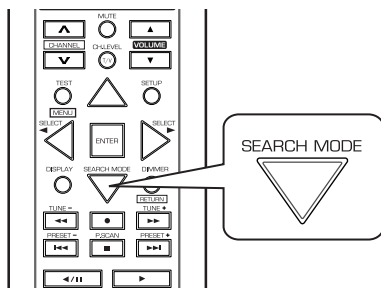

- Each time this button is pressed, the search mode changes as follows;

RDS SEARCH TP SEARCH PHY SEARCH OFF

2. While displaying "RDS SEARCH".

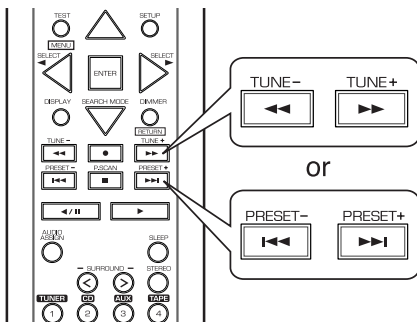


- The tuner automatically searches stations offering RDS services and the station name is displayed.
- If no other RDS station is found, "NO RDS" is displayed.
- When "RDS SEARCH" is not displayed, repeat again from the above step 1.

TP search


- Use this function to automatically search and receive the stations broadcasting the traffic program.

1. In the FM mode, select the TP search mode.

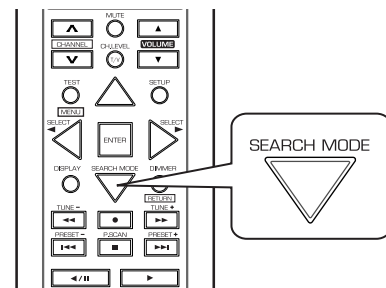

- "TP SEARCH" is displayed.

2. While displaying "TP SEARCH".

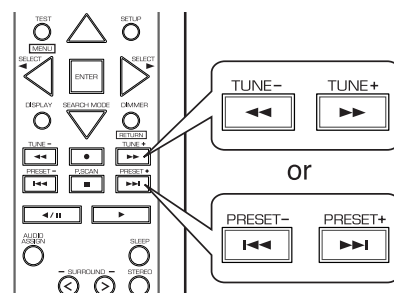


- The tuner automatically searches stations broadcasting the traffic program.
- "NO TRAFFIC" is displayed if the signal is too weak or there are no stations broadcasting the traffic program.
- When "TP SEARCH" is not displayed, repeat again from the above step 1.

PTY search


- Use this function to automatically search and receive the stations broadcasting the desired program type.

1. In the FM mode, select the PTY search mode.

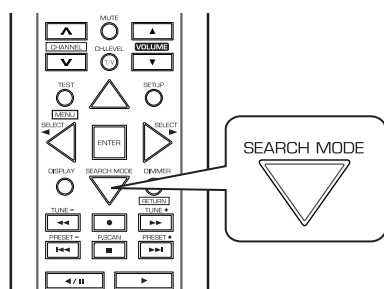


- "PTY SEARCH" is displayed.

2. While displaying "PTY SEARCH", select the desired program type.

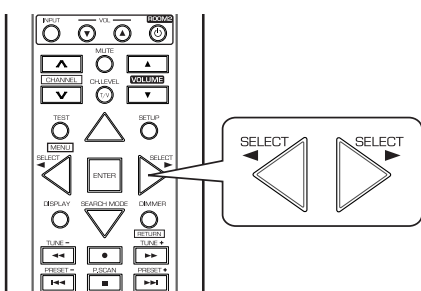

- Each time these buttons are pressed, one of 32 different types of programs is selected. (NEWS, AFFAIRS, INFO, SPORT, EDUCATE, DRAMA, CULTURE, SCIENCE, VARIED, POP M, ROCK M, EASY M, LIGHT M, CLASSICS, OTHER M, WEATHER, FINANCE, CHILDREN, SOCIAL, RELIGION, PHONE IN, TRAVEL, LEISURE, JAZZ, COUNTRY, NATION M, OLDIES, FOLK M, DOCUMENT, TEST, ALARM, NONE)
- When "PTY SEARCH" is not displayed, repeat again from the above step 1.


3. While displaying the desired program type.

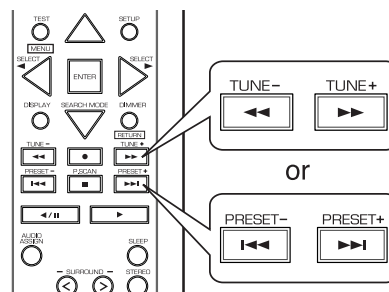


- The tuner automatically searches a station offering PTY services.
- If no station is found, "NO PROGRAM" is displayed.

DISPLAY

- In the FM mode,

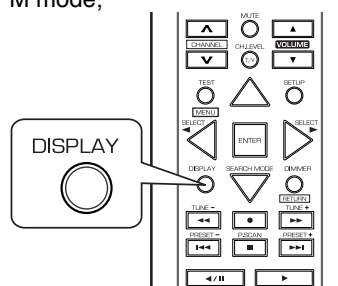

- Each time the DISPLAY button is pressed, the display mode changes as follows:

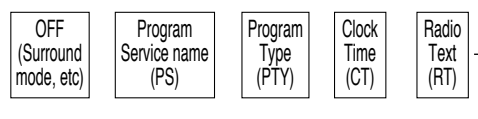


- If the signals are too weak or no RDS service is available, "NO NAME", "NO PTY", "NO TIME" or "NO TEXT" will be displayed.

RECORDING

- The analog signals from the EXTERNAL INs as well as the digital signals from the HDMI IN, the OPTICAL or the COAXIAL DIGITAL IN can be heard but cannot be recorded.
- When recording the analog signals from CD, AUX, VIDEO 1~4, be sure to select "ANALOG" for the AUDIO MODE. (For details, refer to "When selecting the AUDIO MODE" on page 55.)
- When recording the video signals from VIDEO 2~4, be sure to select "COMPOSITE" or "S-VIDEO" for the VIDEO MODE. (For details, refer to "When selecting the VIDEO MODE" on page 54.)
- The volume and tone (bass, treble) settings have no effect on the recording signals.

Recording with TAPE

1. Select the desired input as a recording source except for TAPE.

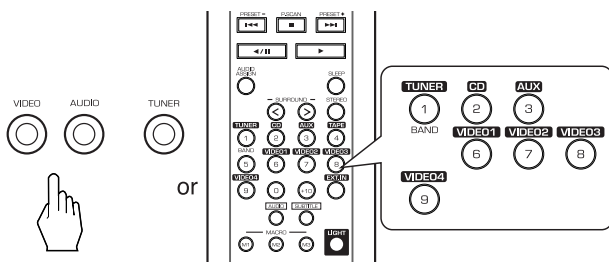


2. Start recording on the TAPE.

3. Start play on the desired input.

Dubbing from video components onto VIDEO 1

1. Select the desired of VIDEO 2 ~ 4 as a recording source except VIDEO 1.

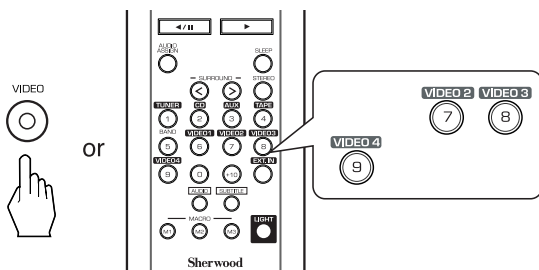

2. Start recording on the VIDEO 1.


3. Start play on the desired input.

- The audio and video signals from the desired input will be dubbed onto the VIDEO 1 and you can enjoy them on the TV set and from the speakers.


Dubbing the audio and video signals separately onto VIDEO 1

Example: When dubbing the VIDEO 2 video signal and the CD audio signal separately onto VIDEO 1.

1. Select VIDEO 2 as a video recording source.

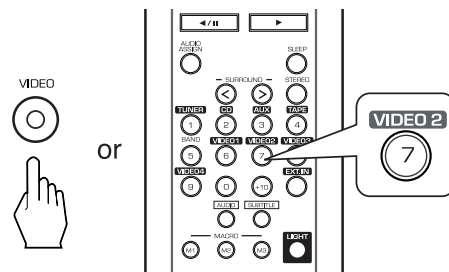

2. Select CD as an audio recording source.

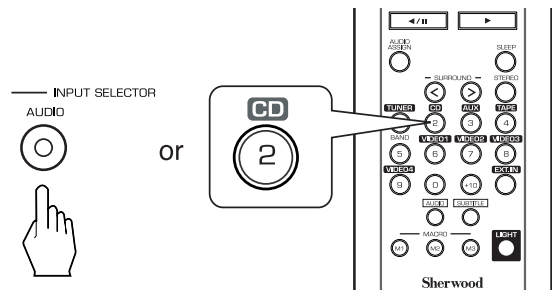

3. Start recording on the VIDEO 1.

4. Start play on the VIDEO 2 and the CD respectively.

- The audio signal from the CD and the video signal from the VIDEO 2 will be dubbed and you can enjoy them on the TV set and from the speakers.

Note :

- Be sure to observe the order of the above steps 1 and 2.


DIGITAL AUDIO RECORDING WITH MD RECORDER

- Only when the OPTICAL DIGITAL OUT of this receiver is connected to the OPTICAL DIGITAL IN of the MD recorder or CD recorder, you can enjoy high-quality sound of digital recording without converting the original signals. Refer to "CONNECTING VIDEO COMPONENTS", "CONNECTING AUDIO COMPONENTS" and "CONNECTING DIGITAL INS AND OUT" on pages 5 ~9 and the operating instructions of the MD recorder or CD recorder.

Notes:

- Depending on the digital audio signal format input into the HDMI IN connector, some digital signals cannot be output from the OPTICAL DIGITAL OUT jack.
- Digital recording is available for the digital audio program sources such as CDs, MDs, some DVDs, etc.
- There are some restrictions on recording digital signals. When making digital recordings, refer to the operating instructions of your digital recording equipment to know what restrictions are imposed.

1. Select the desired of CD, AUX, VIDEO 1~4 as a recording source.

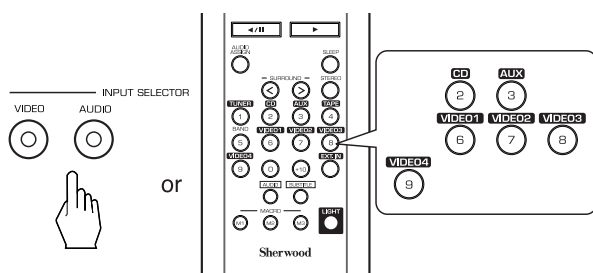


In case of recording the digital audio signal input into a HDMI IN connector

- Select the desired recording source to which the HDMI IN is connected and assigned and then perform the steps 3 and 4 (, but ignore the step 2).

Note :

- If the AUDIO MODE is set to the mode other than "HDMI" for the corresponding recording source on the INPUT SETUP menu, the digital audio signals will not be output and there will be no recording. (For details, refer to "When selecting the AUDIO MODE" on page 55.)

2. For digital recording, select the digital input as recording signal input.

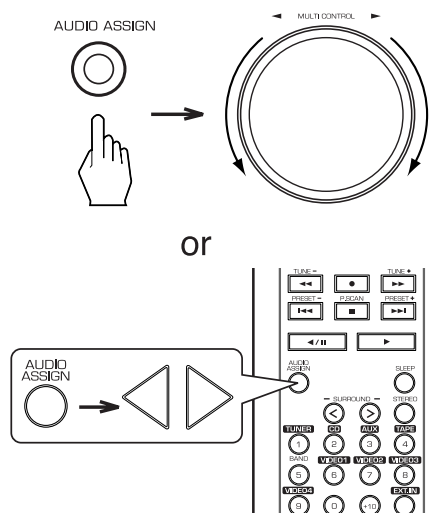

Note :

- If the AUDIO MODE is set to the mode other than "DIGITAL" for the corresponding recording source on the INPUT SETUP menu, the digital audio signals from the selected digital input will not be output and there will be no recording. (For details, refer to "When CD, AUX, VIDEO 1~ 4 is selected as an input source" on page 30 and "When selecting the AUDIO MODE" on page 55.)


3. Start recording on the component connected to the OPTICAL DIGITAL OUT.

4. Start play on the desired input.

OTHER FUNCTIONS

Operating the sleep timer

- The sleep timer allows the system to continue to operate for a specified period of time before automatically shutting off.
- To set the receiver to automatically turn off after the specified period of time.

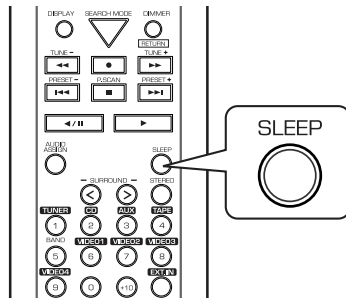


- Each time this button is pressed, the sleep time changes as follows:

10 20 30 --- 90 OFF
Unit : minutes

- While operating the sleep timer, " ★ " lights up.
- When the sleep time is selected, the fluorescent display is dimly lit.

Adjusting the brightness of the fluorescent display

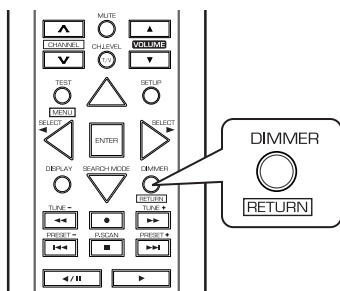

- Each time this button is pressed, the brightness of the fluorescent display changes as follows:

ON dimmer OFF

- In the display OFF mode, pressing any button will cancel the display OFF mode for several seconds to display the operation status.


Displaying the audio information

- You can check the audio information on the input source on your monitor TV.

Note :


- When the component video signals or the HDMI video signals are input and these signals are output from the MONITOR OUTs, the audio information cannot be displayed.

- During playback,

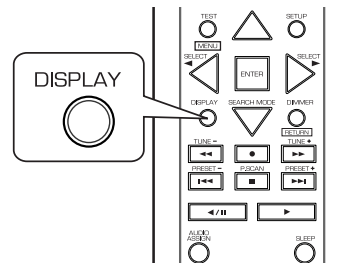

- Depending on whether the input signal is digital or analog signal, the corresponding information is displayed for several seconds.

Example : When playing the digital signals from the Dolby Digital source.

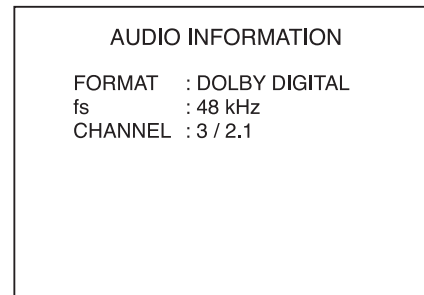

- When RDS tuner function is available in your country, for details on the FM mode information, see "DISPLAY" on page 41.

ROOM 2 SOURCE PLAYBACK


- This function allows enjoying one source in the main room and playing another in a different room at the same time.
- When you connect the multi-room system kit to the IR IN jack of this receiver, you can control this receiver with not only the universal remote control unit but also the ROOM 2 remote control unit in a different room, too. (For details, refer to "CONNECTING MULTI-ROOM SYSTEM KIT" on page 13 and "ROOM 2 Remote Controls" on page 28.)

Notes:

- The analog signals from the EXTERNAL INs and the digital signals cannot be output to the different room, meaning no playback in a different room.
- The HDMI video signals and the component video signals cannot be output to the different room, too.
- You cannot play the ROOM 2 source in any surround mode.

When using the buttons on the remote control unit

1. Turn on the ROOM 2 function.

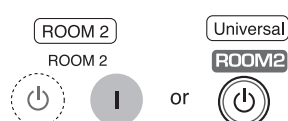


- ROOM 2 ~ is displayed for several seconds.
- On the ROOM 2 remote control, press the ROOM 2 ON (I) button to enter the ROOM 2 ON mode or press the ROOM 2 OFF (⏻) button to enter the ROOM 2 OFF mode.
- Each time the ROOM 2 button on the universal remote control is pressed, the ROOM 2 mode changes as follows :
ON : To turn on the ROOM 2 function.
⏻ ("MULTI") lights up.)
OFF : To turn it off. ("MULTI") or " " goes off depending on the AMP ASSIGN setting.)

Note :

- When the ROOM 2 mode is set to OFF, you cannot adjust the ROOM 2 volume and tone (bass and treble).

2. Select the desired input as a ROOM 2 source.

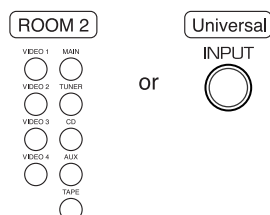


- Each time the INPUT button on the universal remote control is pressed, the ROOM 2 input can be selected among MAIN source, TUNER, CD, AUX, TAPE, VIDEO 1 ~ VIDEO 4.

When selecting the tuner as a ROOM 2 source

- Tune in the desired preset station using the ROOM 2 remote control.



3. Adjust the ROOM 2 volume.

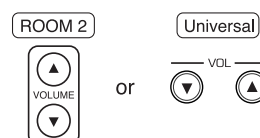

- You can adjust the volume on the power amplifier assigned to "BACK ROOM 2" or "ROOM 2" when the ROOM 2 speaker terminals are connected to the speakers in a different room. (For details, refer to "When selecting the AMP ASSIGN" on page 49.)
- The MUTE button on the ROOM 2 remote control can be available only when the ROOM 2 function is operating.

4. Adjust the tone (bass and treble) for ROOM 2 source.




- The tone level can be adjusted within the range of -10 ~ +10 dB.
- In general, we recommend the bass and treble to be adjusted to 0 dB (flat level).
- Extreme settings at high volume may damage your speakers.

5. Start play on the component related to the ROOM 2 source.

Continued


When using the buttons on the front panel

1. Press the ROOM 2 button to enter the ROOM 2 mode.

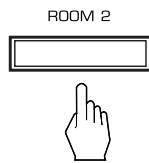

- ROOM 2 ~ is displayed for several seconds.
- When the ROOM 2 setting mode disappears, press the ROOM 2 button again.

2. Select the desired mode while displaying the ROOM 2 setting mode.

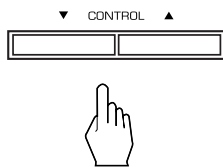


- Each time these buttons are pressed, the mode changes as follows :

- ROOM 2 ~ : To turn on or off the ROOM 2 (ROOM 2 mode) function.
- INPUT ~ : To select the desired ROOM 2 source. (ROOM 2 input)
- VOLUME ~ : To adjust the volume on the power (ROOM 2 volume) amplifier assigned to ROOM 2.

Note :

- When the ROOM 2 mode is set to OFF, the ROOM 2 input and the ROOM 2 volume cannot be selected.

3. Set the selected mode as desired.

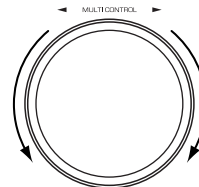

When selecting the ROOM 2 mode.

ON : To turn on the ROOM 2 function.

⏻ ("MULTI") lights up.)

OFF : To turn it off. ("MULTI") or " " goes off depending on the AMP ASSIGN setting.)

When selecting the ROOM 2 input.

- You can select the desired among MAIN source, TUNER, CD, AUX, TAPE, VIDEO 1 ~ VIDEO 4 as a ROOM 2 source.

When selecting the ROOM 2 volume.

- You can adjust the volume on the power amplifier assigned to "BACK ROOM 2" or "ROOM 2" when the ROOM 2 speaker terminals are connected to the speakers in a different room. (For details, refer to "When selecting the AMP ASSIGN" on page 49.)

4. Start play on the component related to the ROOM 2 source.

Notes:

- When the EXTERNAL IN is selected as a main input, if the MAIN source is selected as a ROOM 2 input, no audio signal can be heard in the different room (ROOM 2).
- Even when this receiver enters the standby mode, in such a case that "MULTI" lights up still and the POWER ON/STANDBY button lights up blue as it does in the operating mode, meaning only the ROOM 2 circuitry operates, the ROOM 2 source can be played independently.
- When you do not use the ROOM 2 function, turn off the ROOM 2 function to save electricity.

OSD Menu Settings

- The OSD (On-Screen Display) menu is a setting menu that is displayed on the monitor TV and allows you to perform the setup procedures easily. In most situations, you will only need to set this once during the installation and layout of your home theater, and it rarely needs to be changed later.

The OSD menu consists of 6 main menus ; system setup, input setup, speaker / room EQ setup, CH level setup, sound parameter and multi room setup. These menus are then divided up into various sub-menus.

Note:

- When the component video signals or the HDMI video signals are input and these signals are output from the MONITOR OUTs, the momentary OSD cannot be displayed.


Navigating through the OSD menu

- The explanations here assume you are using the buttons on the remote control when performing the OSD menu operation. However, you can use the buttons on the front panel as well.

The buttons on the front panel correspond to those on the remote control as shown below.

Button on the remote control				
Button on the front panel				


1. Turn the menu screen on.

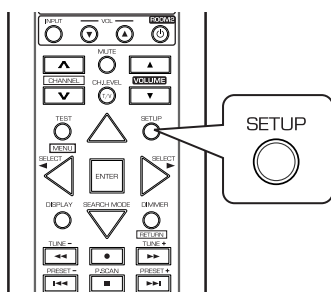


MAIN MENU	
> SYSTEM	SETUP
INPUT	SETUP
SPEAKER	
/ROOM EQ	SETUP
CH LEVEL	SETUP
SOUND	PARAMETER
MULTI ROOM	SETUP
EXIT	

- The main menu will be shown.
- To turn the menu screen off, press this button again.

2. Select the desired menu using the CURSOR UP()/DOWN() buttons.

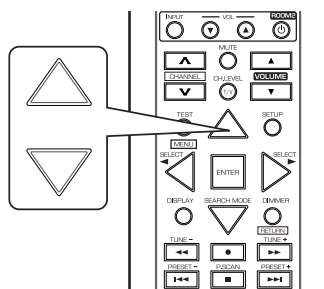

3. Confirm your selection.

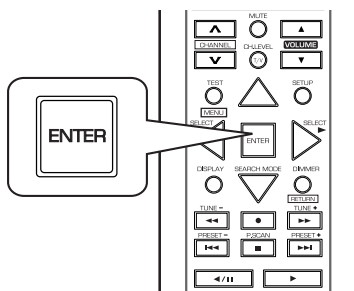

When selecting the **SYSTEM SETUP**

SYSTEM SETUP

>AMP ASSIGN : BACK←→ROOM2
 SUB W MODE : NORMAL
 HDMI AUDIO OUT : OFF
 TONE CONTROL : OFF
 CINEMA EQ : OFF
 MOMENTARY OSD : ON
 OSD POSITION ADJUST

RETURN TO MAIN MENU

49

When selecting the **INPUT SETUP**

INPUT SETUP

>VIDEO 1 CONFIG
 VIDEO 2 CONFIG
 VIDEO 3 CONFIG
 VIDEO 4 CONFIG
 CD CONFIG
 TAPE CONFIG
 AUX CONFIG
 TUNER CONFIG
 EXT. IN CONFIG

RETURN TO MAIN MENU

53

When selecting the **SPEAKER/ROOM EQ SETUP**

SPEAKER/R. EQ SETUP

>AUTO SETUP

SPEAKER CONFIG
 SPEAKER DISTANCE
 SPEAKER CROSSOVER
 ROOM EQ SETUP

RETURN TO MAIN MENU

58

When selecting the **CH LEVEL SETUP**

CH LEVEL SETUP

>MODE : CALIBRATE
 FRONT LEFT : 0dB
 CENTER : 0dB
 FRONT RIGHT : 0dB
 SURR RIGHT : 0dB
 BACK/MULTI R : 0dB
 BACK/MULTI L : 0dB
 SURR LEFT : 0dB
 SUBWOOFER : 0dB
 LFE LEVEL SETUP
 RETURN TO MAIN MENU

64

When selecting the **SOUND PARAMETER**

SOUND PARAMETER

>NIGHT MODE
 DOLBY PLII MUSIC
 DOLBY HEADPHONE
 DOLBY VIRTUAL SPEAKER

RETURN TO MAIN MENU

66

When selecting the **MULTI ROOM SETUP**

MULTI ROOM SETUP

>ROOM 2 : OFF
 INPUT : MAIN
 VOLUME : -30 dB
 BASS : 0 dB
 TREBLE : 0 dB

RETURN TO MAIN MENU

70

- For the setting details, see page in .
- Adjust the setting(s) in each setting category to your preference.
- When the SETUP button is pressed on a sub-menu, the menu screen will be turned off.

SETTING THE SYSTEM SETUP


SYSTEM SETUP

>AMP ASSIGN : BACK←→ROOM2
 SUB W MODE : NORMAL
 HDMI AUDIO OUT : OFF
 TONE CONTROL : OFF
 CINEMA EQ : OFF
 MOMENTARY OSD : ON
 OSD POSITION ADJUST
 RETURN TO MAIN MENU


- AMP ASSIGN : To assign the surround back channels' power amplifier correctly depending on how to use the speakers.
- SUBWOOFER MODE : To select the desired subwoofer mode.
- HDMI AUDIO OUT : To output the digital audio signals from the HDMI MONITOR OUT connector.
- TONE CONTROL : To adjust the tone (bass and treble) as desired.
- CINEMA EQ : To select the desired cinema EQ mode.
- MOMENTARY OSD : To turn on or off the OSD that shows the status corresponding to each operation momentarily.
- OSD POSITION ADJUST : To adjust the position of the momentary OSD and the OSD menu.

When selecting the items other than OSD POSITION ADJUST

1. Press the CURSOR UP()/DOWN() buttons to select the desired item.

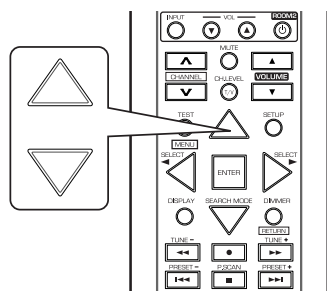


2. Press the CURSOR LEFT()/RIGHT() buttons to set the selected item as desired.

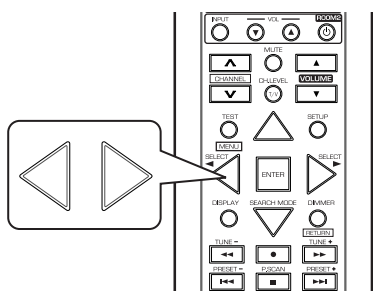

When selecting the AMP ASSIGN

- The surround back channels' power amplifier can drive the surround back speakers, the ROOM 2 speakers or the front bi-amp capable speakers. Depending on how to use the speakers, you should assign the power amplifier correctly. (For details, refer to "CONNECTING SPEAKERS" on page 10 and "CONNECTING ROOM 2 OUTS" on page 12.)

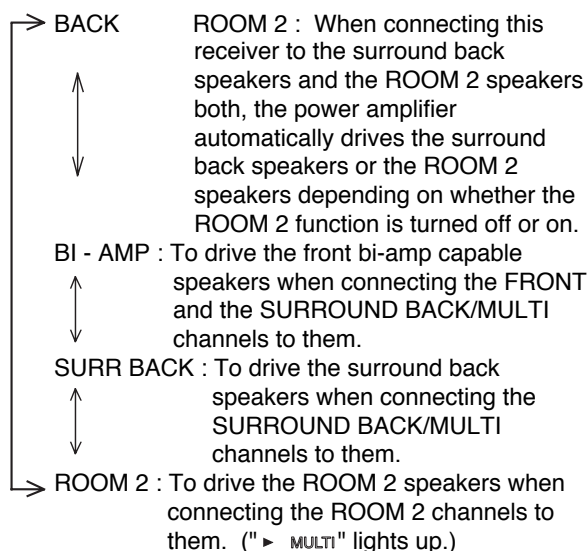

Continued

When selecting the SUBWOOFER MODE

- "SW PLUS + " mode is valid only when "FRONT" and "CENTER" are set to "FULL RANGE" and "SUBWOOFER" is set to "YES" on the SPEAKER/ROOM EQ SETUP menu. (For details, refer to "SETTING THE SPEAKER/ ROOM EQ SETUP" on page 58.)

NORMAL : When the low frequency signals of channels set to "FULL RANGE " are reproduced from those channels only. In this mode, the low frequency signals that are reproduced from the subwoofer channel is only the low frequency signals of LFE (from the multi-channel sources that contains LFE (Low Frequency Effects) channel, also called the ".1" channel) and the channels set to the setting value other than "FULL RANGE".

SW PLUS + : When the low frequency signals of channels set to "FULL RANGE" are reproduced simultaneously from those channels and the subwoofer channel.
In this mode, the low frequency range expands more uniformly through the room, but depending on the size and shape of the room, interference may result in a decrease of the actual volume of the low frequency range.

When selecting the HDMI AUDIO OUT

- The HDMI connection can carry uncompressed digital video signals and digital audio signals. Depending on whether the digital audio signals are output from the HDMI MONITOR OUT of this receiver or not, you should set the HDMI AUDIO OUT correctly.
- Depending on the AUDIO MODE setting, when outputting the HDMI digital audio signals, the PCM 2 channel digital audio signals are output from the HDMI MONITOR OUT regardless of the signal format of digital audio signals input into the HDMI IN.
- This unit can convert the analog audio signals (which are input into the (analog) AUDIO INs) or the digital audio signals (which are input into the OPTICAL or the COAXIAL DIGITAL IN) to the PCM 2 channel signals and output them from the HDMI MONITOR OUT, too. (For details, refer to "When selecting the AUDIO MODE" on page 55.)

OFF : Not to output the digital audio signals from the HDMI MONITOR OUT of this receiver, meaning these signals are heard from the speakers connected to this receiver.

ON : To output PCM 2 channel digital audio signals depending on the AUDIO MODE setting, meaning these signals are heard from the speakers of your TV.

Note:

- When the HDMI AUDIO OUT is set to ON, no sound will be heard from the speakers connected to this receiver (except ROOM 2 speakers) even though any input source is selected.

When selecting the TONE CONTROL


OFF : To listen to a program source without the tone effect. ("TONE" goes off.)



ON : To adjust the tone for your taste. ("TONE" lights up.)


When the TONE CONTROL is set to ON to adjust the tone (bass and treble)

. Press the ENTER button to enter the tone adjustment mode.

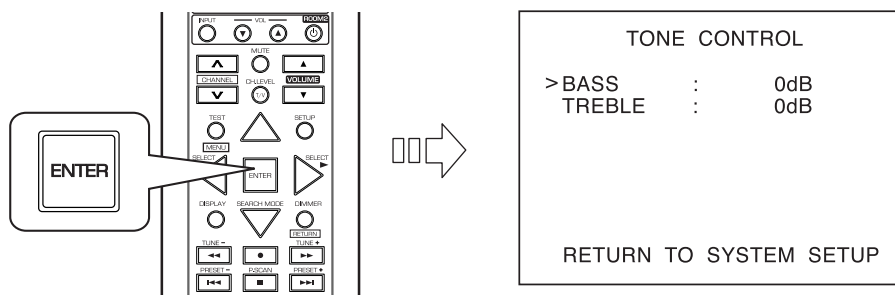


Continued

. Press the CURSOR UP()/DOWN() buttons to select the desired tone mode.

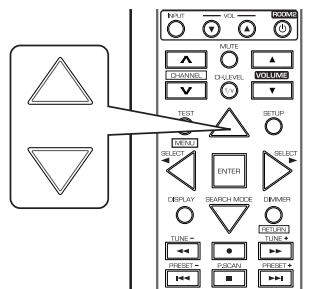

. Press the CURSOR LEFT()/RIGHT() buttons to adjust the selected tone as desired.

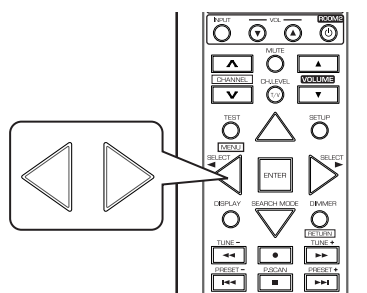

- The tone level can be adjusted within the range of -10 ~ +10 dB.
- In general, we recommend the bass and treble to be adjusted to 0 dB (flat level).
- Extreme settings at high volume may damage your speakers.
- To complete tone adjustment, repeat the above steps and .

When selecting the CINEMA EQ

OFF : To turn off the cinema EQ function. ("CINEMA-EQ" goes off.)



ON : To compensate for edgy or shrill movie sound tracks. ("CINEMA-EQ" lights up.)

When selecting the MOMENTARY OSD

ON : To turn on the OSD function that shows the status corresponding to each operation on this unit

momentarily.

OFF : To turn it off.


Note :

- When the component video signals or the HDMI video signals are input and these signals are output from the MONITOR OUTs, the momentary OSD cannot be displayed.


When selecting the OSD POSITION ADJUST

- You can adjust the position of the momentary OSD and the OSD menu that are displayed on the monitor TV.

- Press the CURSOR UP()/DOWN() buttons to select the OSD POSITION ADJUST, then press the ENTER button.

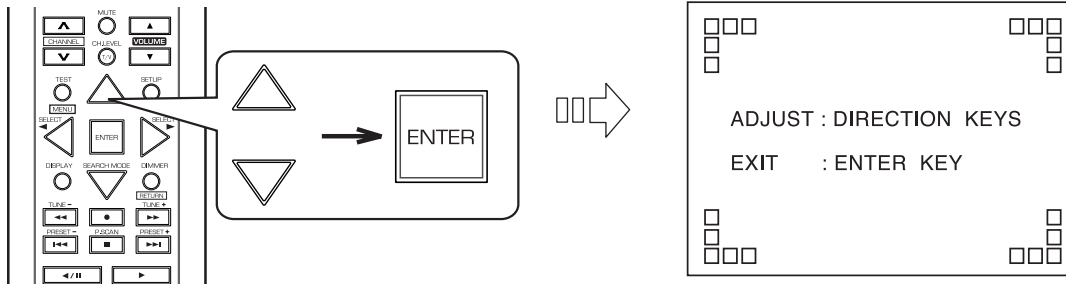

- Press the CURSOR UP()/DOWN()/LEFT()/RIGHT() buttons to adjust the position of the momentary OSD and the OSD menu as desired.

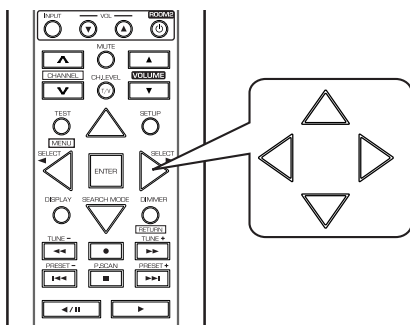


SETTING THE INPUT SETUP

INPUT SETUP	
>VIDEO 1	CONFIG
VIDEO 2	CONFIG
VIDEO 3	CONFIG
VIDEO 4	CONFIG
CD	CONFIG
TAPE	CONFIG
AUX	CONFIG
TUNER	CONFIG
EXT . IN	CONFIG
RETURN TO MAIN MENU	

- This menu allows you to make the various settings depending on how to use the input sources connected to this receiver.

When selecting the items other than NAME

1. Press the CURSOR UP()/DOWN() buttons to select the desired input source, then press the ENTER button.

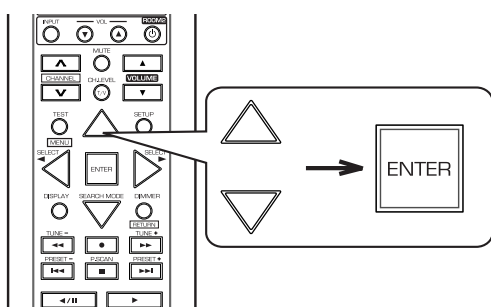

Example: When selecting the VIDEO 1

VIDEO 1 CONFIG	
>NAME	: VIDEO 1
HDMI ASSIGN	: HDMI 1
VIDEO ASSIGN	: COMP 1
VIDEO MODE	: AUTO
AUDIO ASSIGN	: OPT 1
AUDIO MODE	: AUTO

Page 1




When selecting the menu of page 2 or page 1.

- Press the CURSOR UP()/DOWN() buttons to select "GO TO NEXT ~", then press the ENTER button.

VID SCALING	: AUTO
AUTO SURROUND	: OFF
AV SYNC.	: 0 ms
DC TRIGGER	: OFF
HD AUDIO	: ON

Page 2


2. Press the CURSOR UP()/DOWN() buttons to select the desired item.

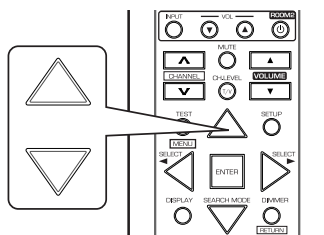

Note :

- Depending on the input source, some items other than DC TRIGGER cannot be selected.

3. Press the CURSOR LEFT()/RIGHT() buttons to set the selected item as desired.

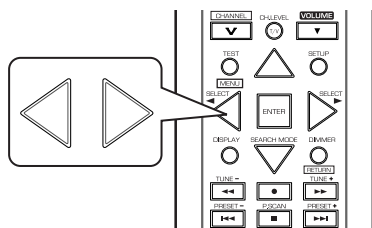

Continued

When selecting the HDMI ASSIGN

- You should assign the connected HDMI INs to the desired of VIDEO 1 ~ VIDEO 4.
(For details, refer to "CONNECTING VIDEO COMPONENTS" on pages 5 ~ 7.)
- You can select the desired of HDMI 1 ~ HDMI 4.

Note :

- In such a case that a HDMI IN is assigned to two input sources or more, when these input sources are selected, the uncompressed digital video signals (and digital audio signals when the HDMI AUDIO OUT is set to ON) input into the same HDMI IN can be output from the HDMI MONITOR OUT of this receiver.

When selecting the VIDEO ASSIGN

- You should assign the connected COMPONENT VIDEO INs to the desired of VIDEO 1 ~ 4.
(For details, refer to "CONNECTING VIDEO COMPONENTS" on pages 5 ~ 7.)
- You can select the desired of COMP 1 ~ 3.

Note :

- In such a case that a COMPONENT VIDEO IN is assigned to two input sources or more, when these input sources are selected, the component video signals can be viewed from the same COMPONENT VIDEO IN.

When selecting the VIDEO MODE

- You can select the video input signal to be output from the MONITOR OUTs.

- AUTO : When there are multiple video input signals, the video input signals are detected and the video input signal to be output from the MONITOR OUTs is selected automatically in the priority order of them :
"HDMI" > "COMPONENT" > "S-VIDEO" > "(composite) VIDEO"
- ↕
- HDMI : The signal that is input into the HDMI IN connector is always played. The HDMI video input signal is output from the HDMI MONITOR OUT only with no video conversion.
- ↕
- COMPOSITE : The signal that is input into the (composite) VIDEO IN jack is always played.
The composite video signal is converted and output from the MONITOR OUTs.
- ↕
- S-VIDEO : The signal that is input into the S-VIDEO IN jack is always played.
The S-Video signal is converted and output from the MONITOR OUTs.
- ↕
- COMPONENT : The signals that are input into the COMPONENT IN jacks are always played.
The component video signals are converted and output from the MONITOR OUTs.

- For details on the video input signal to be output, refer to "Video conversion" on page 6.

Note :

- When the VIDEO MODE is set to "AUTO" and the HDMI video signals are input into the HDMI IN connector, the video signals are output from the HDMI MONITOR OUT only.

When selecting the AUDIO ASSIGN

- You should assign the connected DIGITAL INs to the desired of CD, AUX and VIDEO 1 ~ VIDEO 4.
(For details, refer to "CONNECTING DIGITAL INS AND OUT" on page 9.)
- You can select the desired of OPT 1 ~ 4 and COAX 1 ~ 2.

Note :

- In such a case that a DIGITAL IN is assigned to two input sources or more, when these input sources are selected, the digital audio signals can be heard from the same DIGITAL IN.

Continued

When selecting the AUDIO MODE

- You can select the desired audio input signal to be played.

Notes :

- Be sure to set the AUDIO MODE to the audio input which is connected and assigned to the selected input source.
- When the HDMI AUDIO OUT is set to ON, no sound will be heard from the speakers connected to this receiver (except ROOM 2 speakers).
- When the HDMI AUDIO OUT is set to ON to play the audio signal on your TV, depending on the AUDIO MODE setting, this unit can convert the corresponding audio signal to the PCM 2 channel signals and output them from the HDMI MONITOR OUT. (For details, refer to "Audio conversion" on page 7.)
- When the AUDIO MODE is set to HDMI, you should connect the HDMI INs and set the HDMI ASSIGN correctly. If not, the "HDMI" indicator flickers on the unit's display and no sound will be heard.
- When the AUDIO MODE is set to DIGITAL, you should connect the DIGITAL INs and set the AUDIO ASSIGN correctly. If not, the "DIG." indicator flickers on the unit's display and no sound will be heard.

- AUTO : When there are multiple audio input signals, the audio input signals are detected and the audio input signal to be played is selected automatically in the priority order of them :
 HDMI audio > DIGITAL audio > ANALOG audio
 ↑
 HDMI : The signal that is input into the HDMI IN is always played.
 ↑
 DIGITAL : The signal that is input into the OPTICAL or the COAXIAL DIGITAL IN is always played.
 ↑
 → ANALOG : The signal that is input into the analog AUDIO INs is always played.

When selecting the VIDEO SCALING

- Depending on the resolution compatible with your TV, you can set the resolution of video signals to be output from the HDMI MONITOR OUT connector or the COMPONENT MONITOR OUT jacks. (For details on the resolution compatible with your TV, refer to the operating instructions of your TV.)
- When the HDMI MONITOR OUT connector is connected to an HDMI-compatible TV, the TV reports to this unit what resolutions it supports. Therefore, if you set the VIDEO SCALING to "AUTO", this unit outputs the video signals of the highest resolution acceptable for your TV.


Notes :

- If the resolutions of the video signals which are output from the HDMI MONITOR OUT connector or the COMPONENT MONITOR OUT jacks and your TV are not matched, the picture is not clear, natural or displayed.
- Some of HDMI-compatible TVs may not report their resolution information. In this case, if you set the VIDEO SCALING to "AUTO", the 576p video signals will be output from the HDMI MONITOR OUT connector.
- When the VIDEO MODE is set to "AUTO", "HDMI" or "COMPONENT", if 1080p video signals are input into the HDMI IN or the COMPONENT INs, no video signals will be output from the HDMI or the COMPONENT MONITOR OUTs regardless of VIDEO SCALING setting.

- AUTO : To convert the video signals being input to the video signals of the highest resolution acceptable for TV and to output them from the HDMI MONITOR OUT connector, and to output the video signals from the COMPONENT MONITOR OUT jacks as they were input.
 ↑
 576P : To convert the video signals to 576p video signals and to output them from the HDMI MONITOR OUT connector or the COMPONENT MONITOR OUT jacks.
 ↑
 720P : To convert the video signals to 720p video signals and to output them.
 ↑
 1080i : To convert the video signals to 1080i video signals and to output them.
 ↑
 → 1080P : To convert the video signals to 1080p video signals and to output them.

Continued

When selecting the AUTO SURROUND

- Depending on how to select a surround mode, you can select the auto surround mode or the manual surround mode.
 ON : The optimum surround mode will be automatically selected depending on the signal format being input.
 (Auto surround mode) 
- OFF : You can select the desired of different surround modes selectable for the signal being input with using the MULTI CONTROL knob or the SURROUND MODE UP/DOWN (>/<) buttons. (For details, refer to "When selecting the manual surround mode with pressing the SURROUND MODE button on the front panel" on page 34.)
 (Manual surround mode)


Notes :

- Even when the auto surround mode is selected and the same type of digital signal format is being input, the optimum surround mode may vary depending on whether the speaker type is set to "NO" or not.
- When the auto surround mode is selected, the surround modes other than the optimum surround mode cannot be selected.


When selecting the AV SYNC

- There may be a slight time delay between the video and audio signals in case that some video playback equipments may process the video signals later than the audio signals due to signal processing procedure, etc.. Should this happen, you can adjust the time delay of audio signals to synchronize the sound with the picture.
- The time delay can be adjusted within the range of 0 ~ 200 msec.

When selecting the DC TRIGGER

- To turn on the component connected to the DC TRIGGER OUT jack when this input source is selected, you should set the DC TRIGGER to ON for this input source.
 OFF : To turn off the DC trigger function.

 ON: To turn it on.
- For details, refer to "CONNECTING DC TRIGGER OUT" on page 12.


When selecting the HD AUDIO

- When the source components that cannot support the HD audio signal format (such as Dolby Digital Plus, Dolby TrueHD, DTS-HD High Resolution Audio, DTS-HD Master Audio, etc.) are connected to the HDMI IN of this receiver, some components may not output any audio signals from its HDMI OUT. In this case, you should set the HD AUDIO to OFF to play the audio signals other than the HD audio signals. (For details on the audio signal format, refer to the operating instructions of the source component.)
 ON : To play the audio signals (including the HD audio signals).

 OFF : To play the audio signals other than the HD audio signals.


When selecting the NAME

- You can give names to the input sources other than tuner.
- Up to 7 characters can be entered for each name.


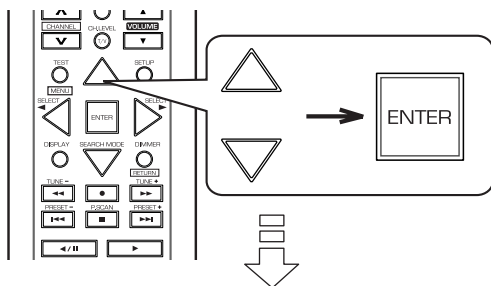
1. Press the CURSOR UP()/DOWN() buttons to select the desired input source, then press the ENTER button.



Example: When selecting the VIDEO 1

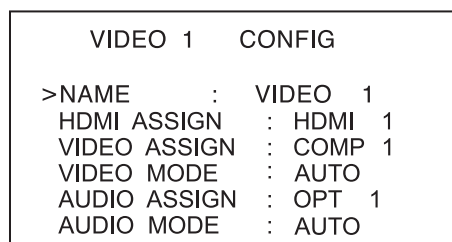


2. Press the CURSOR UP()/DOWN() buttons to select the NAME, then press the ENTER button.

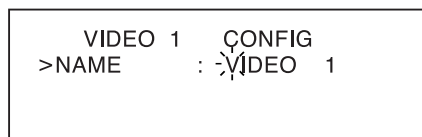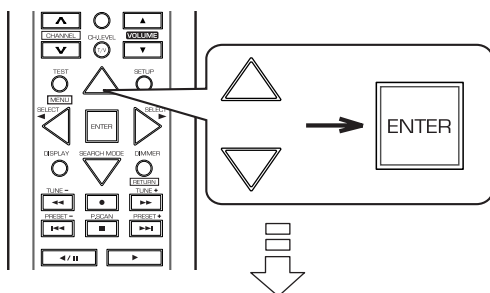


- The first digit flickers.

3. Press the CURSOR LEFT()/RIGHT() buttons to select the desired digit.

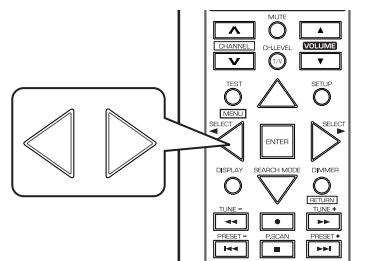

- Then the selected digit will flicker.


4. Press the CURSOR UP()/DOWN() buttons to enter the desired character on the flickering digit.

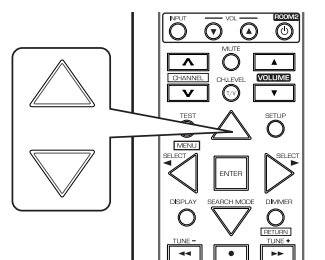

- You can enter the desired among blank, A ~ Z, a ~ z, 0 ~ 9, (,), 雫, +, , , -, ., /.

5. Repeat the above steps 3 and 4 to enter the desired characters on the rest of the digits.

6. Confirm your entry.

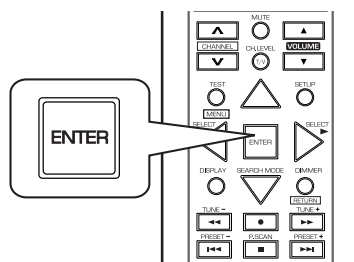

- The name is stored in the memory.

To resume its factory input source name.

- Make a blank on each digit and press the ENTER button.

SETTING THE SPEAKER / ROOM EQ SETUP

- After you have installed this receiver and connected all the components, you should adjust the speaker settings for the optimum sound acoustics according to your environment and speaker layout.
- Even when you change speakers, speaker positions, or the layout of your listening environment, you should adjust the speaker settings, too.
- When performing the AUTO SETUP procedure, you need not perform the SPEAKER CONFIGURATION, SPEAKER DISTANCE, SPEAKER Crossover and CH LEVEL SETUP procedures.

SPEAKER/R . EQ SETUP

> AUTO SETUP

SPEAKER CONFIG
SPEAKER DISTANCE
SPEAKER Crossover
ROOM EQ SETUP

RETURN TO MAIN MENU

- AUTO SETUP : To set the speaker setup and channel level setup automatically.
- SPEAKER CONFIGURATION : To adjust the speakers depending on whether they are connected or not.
- SPEAKER DISTANCE: To select the distance between the listening position and each speaker to set the delay time automatically for optimum surround playback.
- SPEAKER Crossover : To select the desired crossover frequency.
- ROOM EQ SETUP : To select the desired room EQ mode.

When selecting the AUTO SETUP

- Auto Setup lets you avoid troublesome listening-based speaker setup and achieve good surround sound. Auto Setup has the feature that provides the optimum listening environment at the listening position in your room, where there are often multiple listeners viewing programs together.
You should connect the supplied microphone to the SETUP MIC jack so that this receiver can analyze the information from a series of test tones emitted from speakers at main listening position and can adjust the configuration, distance, sound level, crossover frequency and frequency response of each speaker automatically.
- If you want to personalize your speaker setup and channel level setup by making the settings manually, perform the "When selecting the SPEAKER CONFIGURATION" on page 60, "When selecting the SPEAKER DISTANCE" on page 61, "When selecting the SPEAKER Crossover" on page 62, "Adjusting each channel level with test tone" on page 35 and "Adjusting the current channel level" on page 36.
- After the auto setup has been completed, set the room EQ as desired. (For details, refer to "When selecting the ROOM EQ SETUP" on page 63.)

Preparations

- Check that the speakers are securely connected to this receiver.
- If your subwoofer has adjustable volume and crossover frequency, set the volume halfway and set the crossover frequency to the maximum or the low pass filter off.
- Connect the supplied microphone to the SETUP MIC jack on the front panel. (For details, refer to "SETUP MIC JACK" on page 16.)

Notes :


- Because the microphone for Auto Setup is designed for use with this receiver, to use the auto setup function, do not use a microphone other than the one supplied with this receiver.
- After you have completed the auto setup procedure, disconnect the microphone.

1. Place the microphone on a flat level surface at the listening position.


- If possible, use a tripod, etc. to attach the microphone at the same height as your ears would be when you are seated in your listening position.
- Ensure there are no obstacles between the speakers and the microphone.

Continued

2. Press the CURSOR UP()/DOWN() buttons to select the AUTO SETUP, then press the ENTER button.

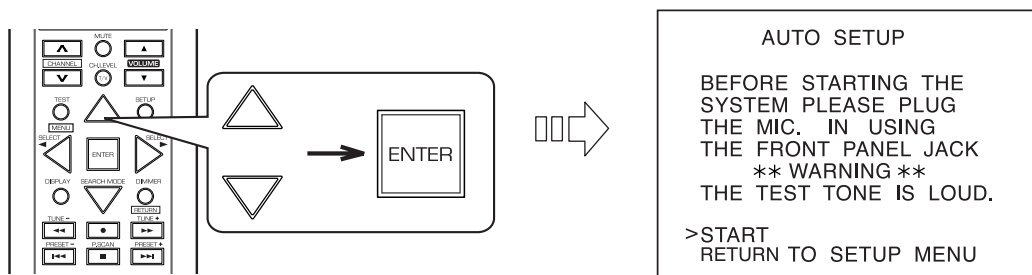

3. Press the CURSOR UP()/DOWN() buttons to select the START, then press the ENTER button.

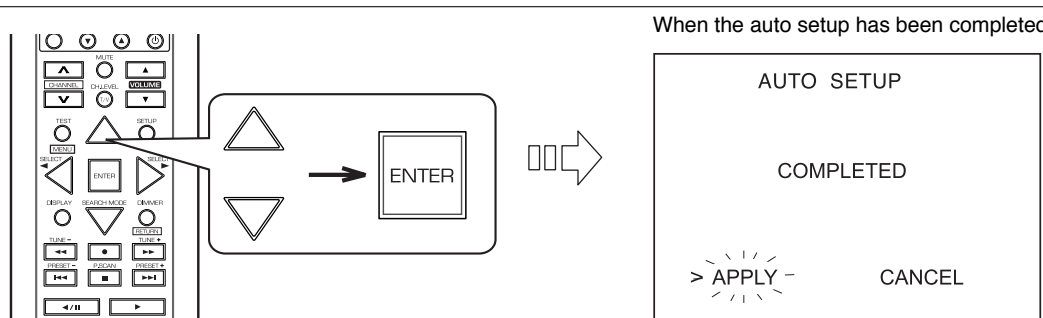


- Loud test tones are output successively and then if a series of auto setup procedure has been completed, "COMPLETED" will be displayed.
- To stop the auto setup procedure while performing it, press the ENTER button.
In such a case that the auto setup procedure is stopped before "COMPLETED" is displayed, the results of each adjustment can not be memorized.
- If there may be a problem with speaker or microphone connection, error message will be displayed. In this case, turn off the power, check the connection and then retry the auto setup procedure.

Notes :

- Because the test tones are loud, ensure there no infants or small children in the room.
- For best results, ensure the room is as quiet as possible during the auto setup procedure.
If there is too much ambient noise, the results may not be satisfactory.

4. To memorize the results, press the CURSOR LEFT()/ RIGHT() buttons to select the APPLY, then press the ENTER button.

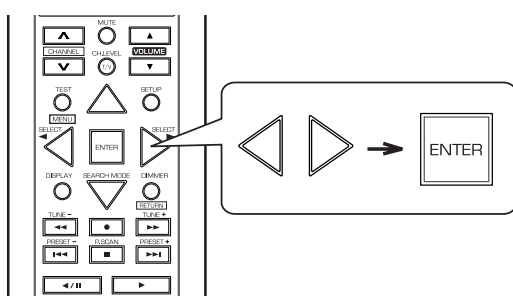


- Then the results are memorized and the SPEAKER/ ROOM EQ SETUP menu is displayed.
- Each time the CURSOR LEFT()/ RIGHT() buttons are pressed, the APPLY or the CANCEL is selected.
- When the CANCEL is selected, the results are not memorized.
- Check the results on each setup menu(SPEAKER CONFIGURATION menu on page 60, SPEAKER DISTANCE menu on page 61, SPEAKER CROSSOVER menu on page 62 and CH LEVEL SETUP menu for "CALIBRATE" mode on page 64).
- If the results are not satisfactory, you can retry the auto setup procedure or personalize your speaker setup and channel level setup by making the settings manually. (For details, refer to "When selecting the SPEAKER CONFIGURATION" on page 60, "When selecting the SPEAKER DISTANCE" on page 61, "When selecting the SPEAKER CROSSOVER" on page 62, "Adjusting each channel level with test tone" on page 35 and "Adjusting the current channel level" on page 36.)


Continued

When selecting the **SPEAKER CONFIGURATION**


1. Press the CURSOR UP()/DOWN() buttons to select the **SPEAKER CONFIGURATION**, then press the **ENTER** button.

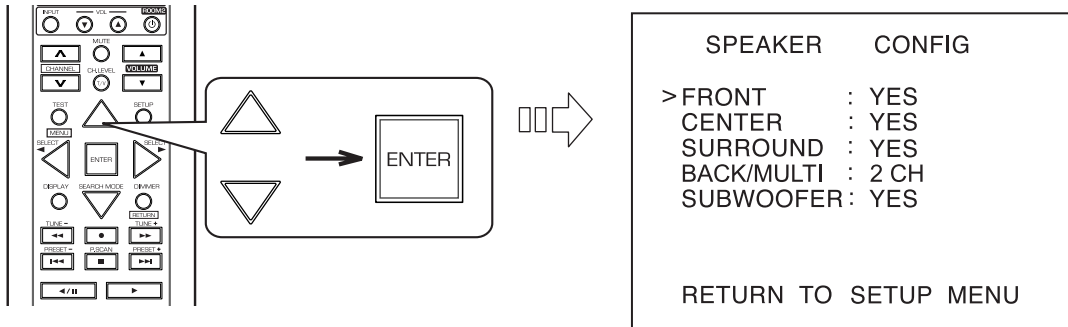

2. Press the CURSOR UP()/DOWN() buttons to select the desired speaker.

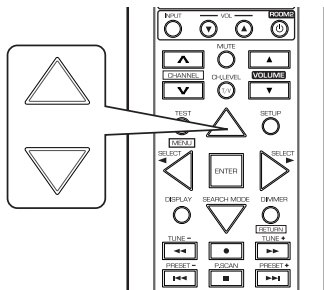

3. Press the CURSOR LEFT()/ RIGHT() buttons to set the selected speaker as desired.

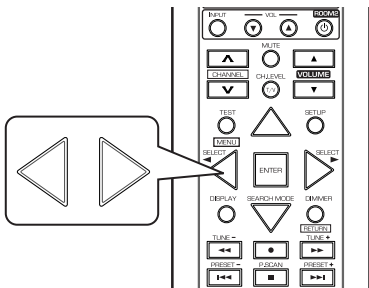

YES/NO: Select the desired depending on whether the speakers are connected or not.
2CH/1CH: Select the desired depending on the number of speakers connected to **SURROUND BACK/MULTI** channels.


Notes :

- When speakers are not set to "NO", you should set their distances from listening position and crossover frequencies according to their frequency characteristics. (For details, refer to "When selecting the **SPEAKER DISTANCE**" on page 61 and "When selecting the **SPEAKER CROSSOVER**" on page 62.)
- When the "SURROUND" is set to "NO", "BACK/MULTI" cannot be set to "2CH" or "1CH".
- When the surround back channels' power amplifier is assigned to "BI-AMP" or "ROOM 2", the "BACK/MULTI" cannot be selected. (For details, refer to "When selecting the **AMP ASSIGN**" on page 49.)


4. Repeat the above steps 2 and 3 until the speakers are all set as desired.

When selecting the SPEAKER DISTANCE

1. Press the CURSOR UP()/DOWN() buttons to select the SPEAKER DISTANCE, then press the ENTER button.

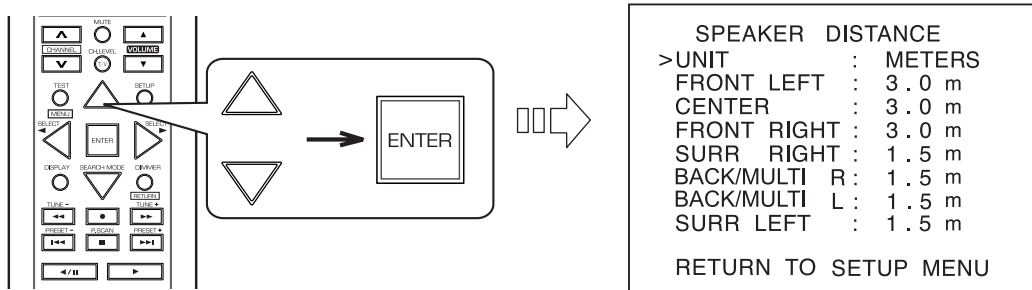


2. Press the CURSOR UP()/DOWN() buttons to select the desired item.

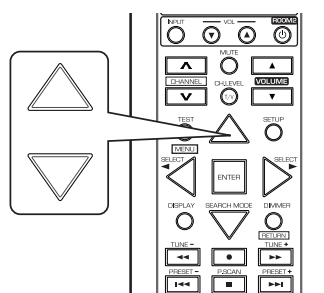

Note :

- You cannot select the subwoofer and the speakers set to "NO".

3. Press the CURSOR LEFT()/RIGHT() buttons to set the selected item as desired.

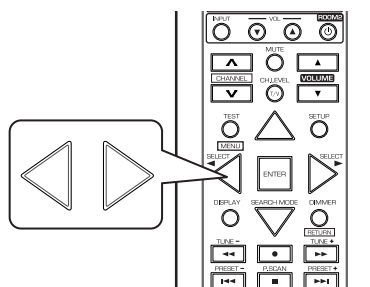

- When selecting the desired unit
- You can select either METERS or FEET.
 - Once a unit is selected, the distances are automatically changed in the selected unit.
- When setting the distance
- You can set the distance within the range of 0.1 ~ 9.0 meters in 0.1 meter intervals (or 0.5 ~ 30 feet in 0.5 feet intervals).

4. Repeat the above steps 2 and 3 until the distances are all set as desired.


About the speaker distance

When enjoying multi-channel surround playback with Dolby Digital and DTS sources, etc., it is ideal that the center, surround and surround back speakers should be the same distance from the main listening position as the front speakers. By entering the distance between the listening position and each speaker, the delay times of center, surround and surround back speakers are automatically adjusted to create an ideal listening environment virtually as if the center, surround and surround back speakers were at their ideal locations respectively.


When selecting the SPEAKER CROSSOVER

- Set the crossover frequency according to the frequency characteristics of the speakers connected.
(For details on the frequency characteristics, refer to the operating instructions of the speakers.)
- If the frequency range of your speaker is 100 Hz ~ 20 kHz, the crossover frequency should be set to 100 Hz (or slightly higher).
- The low frequencies below the crossover frequency are to output from subwoofer or the speakers which are set to "FULL RANGE" (when not using a subwoofer).

1. Press the CURSOR UP()/DOWN() buttons to select the SPEAKER CROSSOVER, then press the ENTER button.

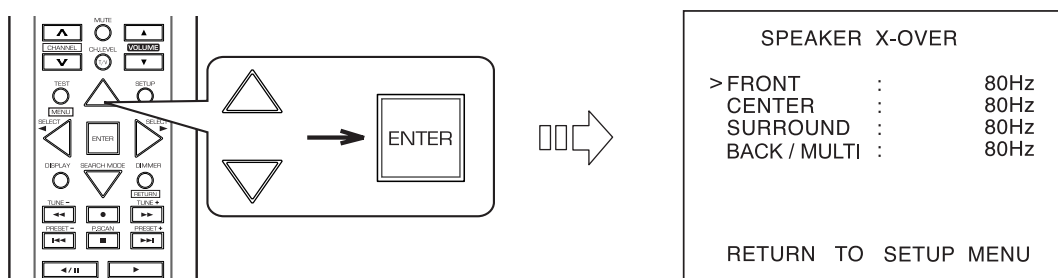


2. Press the CURSOR UP()/DOWN() buttons to select the desired speaker.

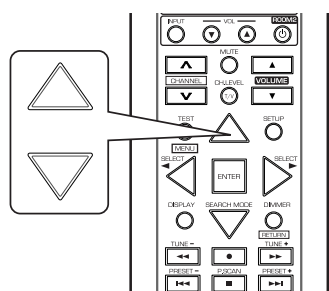

Note :

- You cannot select the subwoofer and the speakers set to "NO".

3. Press the CURSOR LEFT()/RIGHT() buttons to set the crossover frequency as desired.

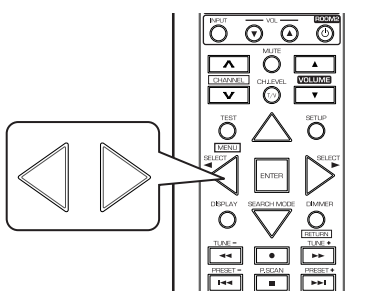

- You can adjust the crossover frequency within the range of 40 ~ 250 Hz.
- Select "FULL RANGE" when the selected speaker can fully reproduce the low frequencies below 40 Hz.

4. Repeat the above steps 2 and 3 until the crossover frequencies are all set as desired.

When selecting the ROOM EQ SETUP


- The room EQ is a kind of room equalizer for your speakers. According to the acoustic characteristics of your room measured by the auto setup, the room EQ automatically adjusts the frequency response of your speakers.
- If you use different brands or sizes of speakers for some channels or have a room with unique acoustic characteristics, such as walls, furniture, and the dimensions or the shape of the room, we recommend using the room EQ.

Note :


- To use the room EQ, first you should finish measuring the acoustic characteristics of your room performing the auto setup.

(For details, refer to "When selecting the AUTO SETUP" on page 58.)

1. Press the CURSOR UP()/DOWN() buttons to select the ROOM EQ SETUP, then press the ENTER button.

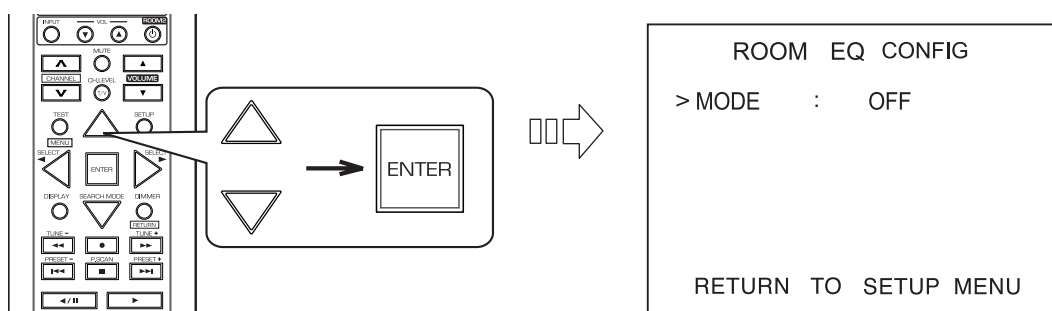

2. Press the CURSOR LEFT()/RIGHT() buttons to select the desired room EQ mode.

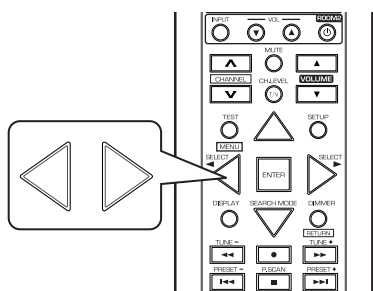

OFF : When turning off the room EQ.

ON : To adjust the frequency response of all speakers to the flattest response.

SETTING THE CH LEVEL SETUP

```

CH LEVEL SETUP
>MODE : CALIBRATE
FRONT LEFT : 0dB
CENTER : 0dB
FRONT RIGHT : 0dB
SURR RIGHT : 0dB
BACK/MULTI R : 0dB
BACK/MULTI L : 0dB
SURR LEFT : 0dB
SUBWOOFER : 0dB
LFE LEVEL SETUP
RETURN TO MAIN MENU
  
```

Memory mode


Note :

- Depending on the speaker settings("NO", etc.), some channels cannot be selected.

Adjusting the current channel level


- You can adjust the current channel levels as desired. These adjusted levels are just memorized into user's memory("CALIBRATE"), not into preset memory("REFERENCE 1", "REFERENCE 2").
- After adjusting each channel level with test tone, adjust the channel levels either according to the program sources or to suit your tastes.(For details, refer to "Adjusting each channel level with test tone" on page 35.)

1. Press the CURSOR UP()/DOWN() buttons to select the desired channel.

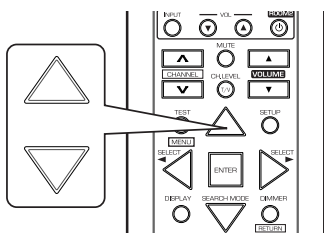


When adjusting the LFE LEVEL

- Press the CURSOR UP()/DOWN() buttons to select the LFE LEVEL SETUP, then press the ENTER button.

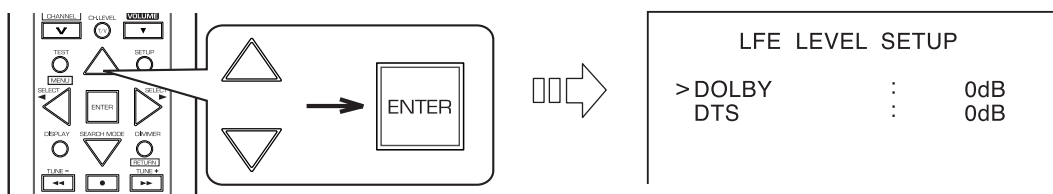

- Press the CURSOR UP()/DOWN() buttons to select the desired program source.

2. Press the CURSOR LEFT()/RIGHT() buttons to adjust the level of the selected channel or program source's LFE as desired.

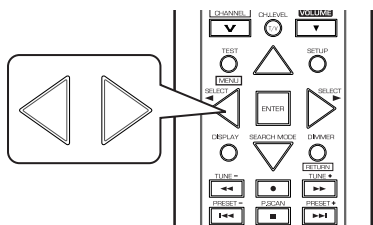


- The LFE level can be adjusted within the range of -10 ~ 0 dB and other channel levels within the range of -15 ~ +15 dB
- In general, we recommend the LFE level to be adjusted to 0 dB.(However, the recommended LFE level for some early DTS software is -10 dB.) If the recommended levels seem too high, lower setting as necessary.

3. Repeat the above steps 1 and 2 to adjust each channel level.

Memorizing the adjusted channel levels


- You can memorize the adjusted channel levels into preset memory("REFERENCE 1", "REFERENCE 2") and recall the memorized whenever you want.

- After performing the steps 1~3 in "Adjusting the current channel level" procedure on page 64, press the CURSOR UP()/DOWN() buttons to select a channel (, not the MODE (memory mode) and the LFE LEVEL SETUP), then press the ENTER button.

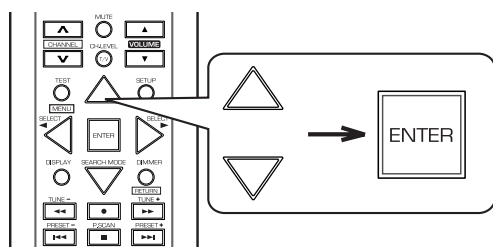

- The "REFERENCE 1" indication flickers.


- Press the CURSOR LEFT()/RIGHT() buttons to select the desired preset memory, then press the ENTER button.

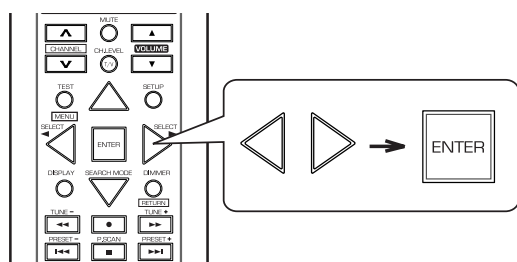

- Each time the CURSOR LEFT() or RIGHT() button is pressed, "REFERENCE 1" or "REFERENCE 2" is selected.
- The adjusted channel levels have now been memorized into the selected memory.


Recalling the memorized channel levels

- Press the CURSOR UP()/DOWN() buttons to select the MODE(memory mode).

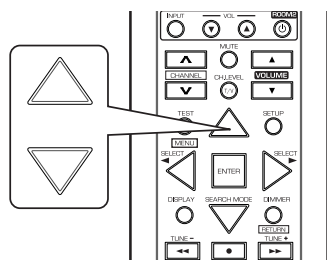


- "CALIBRATE" may be displayed instead of "REFERENCE 1" or "REFERENCE 2".

- Press the CURSOR LEFT()/RIGHT() buttons to select the desired one of REFERENCE 1 and REFERENCE 2.

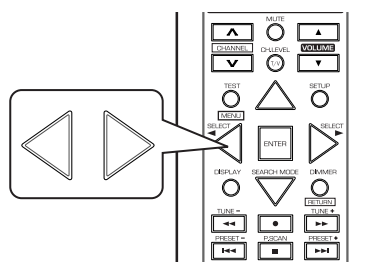

- Then the channel levels memorized into the selected preset memory are recalled.

SETTING THE SOUND PARAMETER

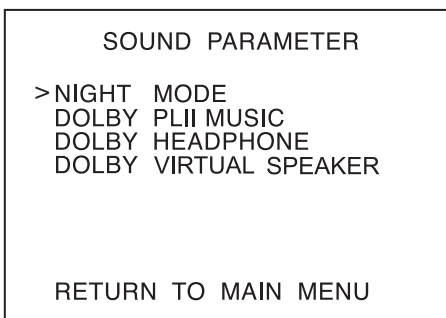

- **NIGHT MODE** : To adjust the dynamic range compression that makes faint sound easier to hear at low volume levels.
- **DOLBY PLII MUSIC** : To adjust the various surround parameters for optimum surround effect.
- **DOLBY HEADPHONE** : To select the desired listening mode for Dolby Headphone mode.
- **DOLBY VIRTUAL SPEAKER** : To select the speaker layout to be used actually for each Dolby Virtual Speaker mode.

When selecting the NIGHT MODE


- This function compresses the dynamic range of previously specified parts of the Dolby Digital sound track (with extremely high volume) to minimize the difference in volume between the specified and non-specified parts.

This makes it easy to hear all of the sound track when watching movies at night at low levels.


Notes:

- The night mode setting is valid only when the digital signals from the Dolby Digital program source are being input.
- In some Dolby Digital softwares, the night mode setting may not be valid.

1. Press the CURSOR UP()/DOWN() buttons to select the NIGHT MODE, then press the ENTER button.

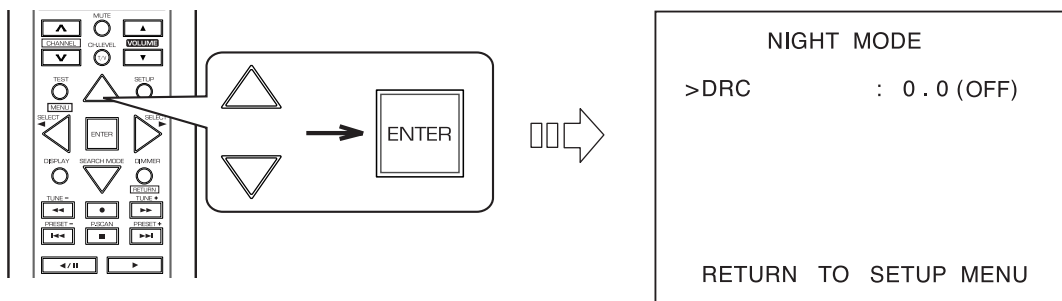

2. Press the CURSOR LEFT()/RIGHT() buttons to adjust the dynamic range compression as desired.

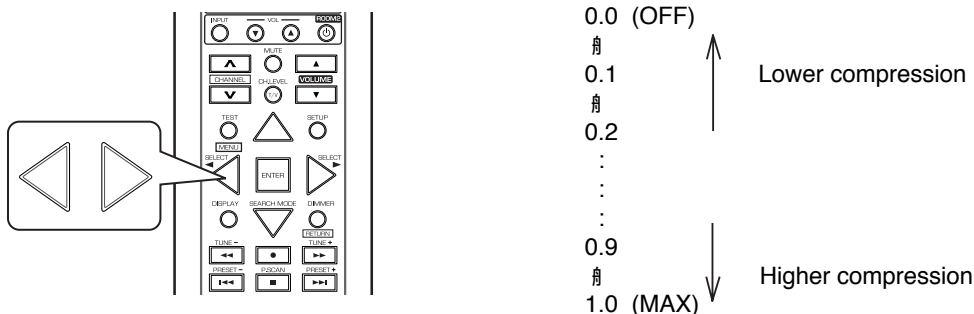


When selecting the DOLBY PLII MUSIC

- You can adjust the various surround parameters for optimum surround effect.


Note:

- The parameter settings are valid only when listening in either Dolby Pro Logic II Music mode or the Dolby Pro Logic IIx Music mode.


- Press the CURSOR UP()/DOWN() buttons to select the DOLBY PLII MUSIC, then press the ENTER button.

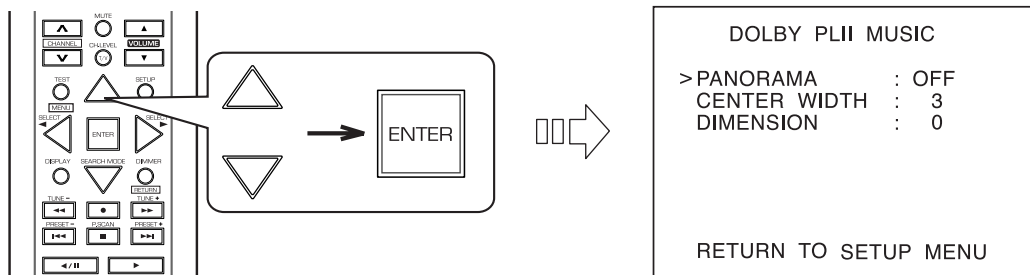

- Press the CURSOR UP()/DOWN() buttons to select the desired parameter.

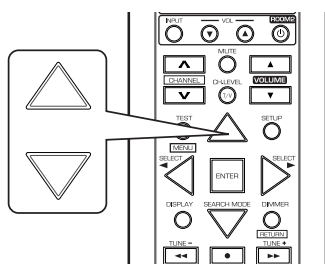

- Press the CURSOR LEFT()/RIGHT() buttons to adjust the selected parameter as desired.

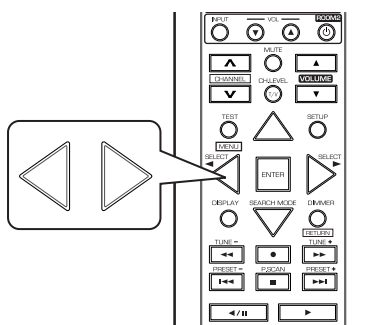

When selecting the PANORAMA mode

This mode extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side wall imaging. Select "OFF" or "ON"(default value:OFF).

When selecting the CENTER WIDTH control

This adjusts the center image so it may be heard only from the center speaker, only from the left/right speakers as a phantom image, or from all three front speakers to varying degrees. The control can be set in 8 steps from 0 to 7 (default value : 3).

When selecting the DIMENSION control

This gradually adjusts the soundfield either towards the front or towards the rear. The control can be set in 7 steps from -3 to +3(default value : 0).

- Repeat the above steps 2 and 3 to adjust other parameters.


When selecting the DOLBY HEADPHONE

- You can select the desired listening mode for Dolby Headphone mode.


Note:

- The listening mode setting is valid only when playing analog stereo, PCM 2 channel or Dolby Digital 2 channel source.

- Press the CURSOR UP()/DOWN() buttons to select the DOLBY HEADPHONE, then press the ENTER button.

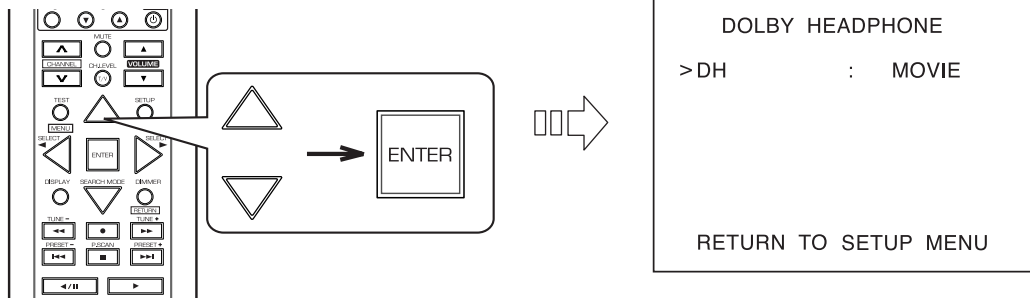

- Press the CURSOR LEFT()/RIGHT() buttons to select the desired listening mode.

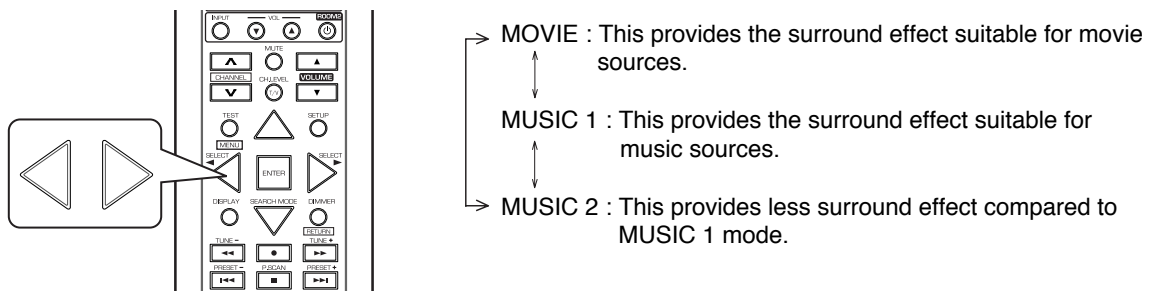


When selecting the DOLBY VIRTUAL SPEAKER

- You can select the speaker layout to be used actually for each Dolby Virtual Speaker mode.


Note:

- The speaker layout settings are valid only when listening in a Dolby Virtual Speaker mode.


- Press the CURSOR UP()/DOWN() buttons to select the DOLBY VIRTUAL SPEAKER, then press the ENTER button.

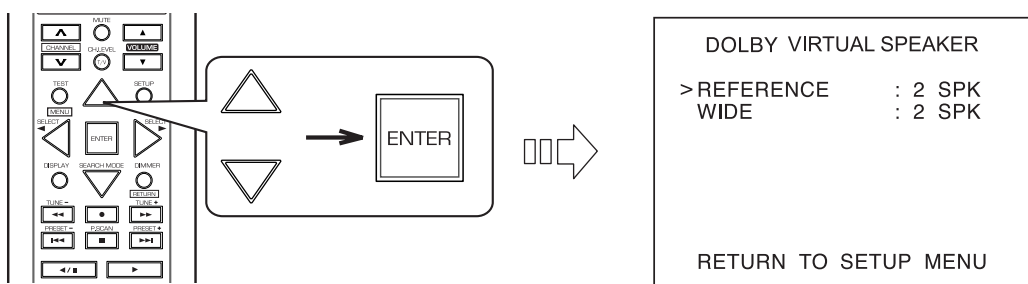

- Press the CURSOR UP()/DOWN() buttons to select the desired Dolby Virtual Speaker mode.

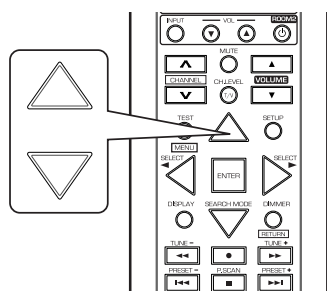

- Press the CURSOR LEFT()/RIGHT() buttons to select the desired speaker layout.

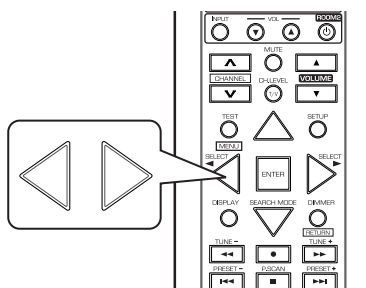

When selecting the Dolby Virtual Speaker Reference mode

2 SPK : When using 2 front speakers only.



3 SPK : When using 2 front and center speakers.

When selecting the Dolby Virtual Speaker Wide mode

2 SPK : When using 2 front speakers only.



3 SPK : When using 2 front and center speakers.



4 SPK : When using 2 front and 2 surround speakers.



5 SPK : When using 2 front, center and 2 surround speakers.

Note:

- When the speakers are set to "NO", the corresponding speaker layouts cannot be selected.

- Repeat the above steps 2 and 3 to select the desired speaker layout for another Dolby Virtual Speaker mode.

SETTING THE MULTI ROOM SETUP

- The ROOM 2 function allows enjoying one source in the main room while playing another in a different room at the same time.

MULTI ROOM SETUP

> ROOM 2 : OFF

INPUT : MAIN

VOLUME : -30 dB

BASS : 0 dB

TREBLE : 0 dB


RETURN TO MAIN MENU

- ROOM 2 : To turn on or off the ROOM 2 function.
- INPUT : To select the desired ROOM 2 source.
- VOLUME : To adjust the volume on the power amplifier assigned to "BACK ROOM 2" or "ROOM 2".
- BASS and TREBLE : To adjust the tone (bass and treble) of ROOM 2 source as desired.

Notes:

- The analog signals from the EXTERNAL INs and the digital signals cannot be output to the different room, meaning no playback in a different room.
- You cannot play the ROOM 2 source in any surround mode.


- Press the CURSOR UP()/DOWN() buttons to select the desired item.

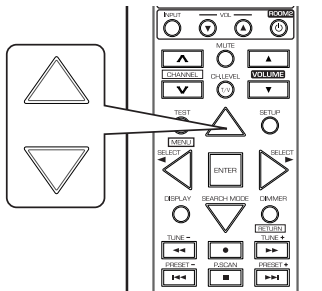

Note:

- The VOLUME setting is invalid when the AMP ASSIGN is assigned to "BI-AMP" or "SURR BACK". (For details, refer to "When selecting the AMP ASSIGN" on page 49.)

- Press the CURSOR LEFT()/RIGHT() buttons to set the selected item as desired.

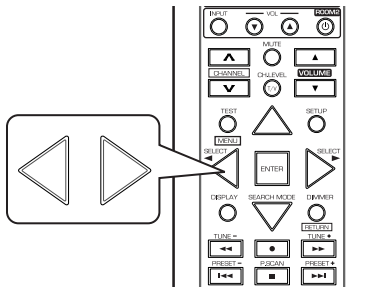

Continued

When selecting the ROOM 2

OFF : To turn off the ROOM 2 function.

ON : To turn it on.

Notes:

- When the ROOM 2 is set to OFF, the INPUT, the VOLUME, the BASS and the TREBLE cannot be selected.
- When you do not use the ROOM 2 function, set the ROOM 2 to OFF to save electricity.

When selecting the INPUT

- You can select the desired among MAIN source, TUNER, CD, AUX, TAPE, VIDEO 1 ~ VIDEO 4 as a ROOM 2 source.

Note:

- When the EXTERNAL IN is selected as a main input, if the MAIN source is selected as a ROOM 2 input, no audio signal can be heard in the different room (ROOM 2).

When selecting the VOLUME


- You can adjust the volume on the power amplifier assigned to "BACK ROOM 2" or "ROOM 2" when the ROOM 2 speaker terminals are connected to the speakers in a different room.

Note:


- You can adjust the VOLUME only when the surround back channels' power amplifier is assigned to "BACK ROOM 2" or "ROOM 2". (For details, refer to "When selecting the AMP ASSIGN" on page 49.)

When adjusting the tone (BASS and TREBLE)

1. Press the CURSOR UP()/DOWN() buttons to select the desired tone mode.

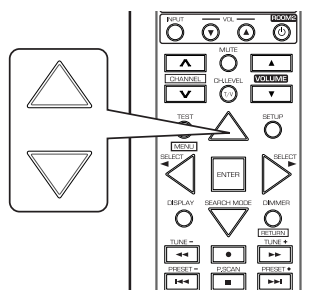

2. Press the CURSOR LEFT()/RIGHT() buttons to adjust the selected tone as desired.

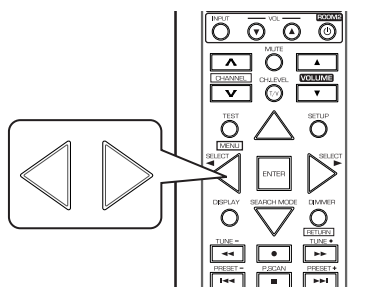

- The tone level can be adjusted within the range of -10 ~ +10 dB.
- In general, we recommend the bass and treble to be adjusted to 0 dB (flat level).
- Extreme settings at high volume may damage your speakers.
- To complete tone adjustment, repeat the above steps 1 and 2.

Troubleshooting Guide

If a fault occurs, run through the table below before taking your receiver for repair.

If the fault persists, attempt to solve it by switching the receiver off and on again. If this fails to resolve the situation, consult your dealer. Under no circumstances should you attempt to repair the receiver yourself. This could void the warranty.

PROBLEM	POSSIBLE CAUSE	REMEDY
No power	<ul style="list-style-type: none"> The AC input cord is disconnected. Poor connection at AC wall outlet or the outlet is dead or off. 	<ul style="list-style-type: none"> Connect cord securely. Check the outlet using a lamp or another appliance.
No sound	<ul style="list-style-type: none"> The speaker wires are disconnected. The master volume is adjusted too low. The MUTE button is pressed to ON. Incorrect selection of input source. Incorrect connections between the components. The HDMI AUDIO OUT is set to ON. The settings related to audio are set incorrectly. 	<ul style="list-style-type: none"> Check the speaker connections. Adjust the master volume. Press the MUTE button to cancel the muting effect. Select the desired input source correctly. Make connections correctly. Set it to OFF. (For details, refer to "When selecting the HDMI AUDIO OUT" on page 50.) Set the settings correctly. (For details, refer to "SETTING THE INPUT SETUP" on page 53.)
No sound from the surround speakers	<ul style="list-style-type: none"> Surround mode is switched off(stereo mode). Master volume and surround level are too low. Monaural source is used. Surround speaker setting is "NO". 	<ul style="list-style-type: none"> Select a surround mode. Adjust master volume and surround level. Select a stereo or surround source. Select the desired surround speaker setting.
No sound from the center speaker	<ul style="list-style-type: none"> Dolby Virtual Speaker, stereo mode, etc is selected. Center speaker setting is "NO". Master volume and center level are too low. 	<ul style="list-style-type: none"> Select the desired surround mode. Select the desired center speaker setting. Adjust master volume and center level.
No sound from the surround back speakers	<ul style="list-style-type: none"> The input signal format or the current surround mode cannot support the 7.1(or 6.1) surround. The surround back channels' power amplifier is assigned to "BI-AMP" or "ROOM 2". Master volume and surround back level are too low. Surround back speaker setting is "NO". 	<ul style="list-style-type: none"> Under the proper situations, perform the 7.1(or 6.1) surround playback.(For details, refer to "ENJOYING SURROUND SOUND" on page 34.) Assign the power amplifier to the surround back channels.(For details, refer to "When selecting the AMP ASSIGN"on page 49.) Adjust master volume and surround back level. Select the desired surround back speaker setting.
No picture	<ul style="list-style-type: none"> Video connections between this unit and the monitor TV are not made correctly. Incorrect selection of input source on the monitor TV. The settings related to video are set incorrectly. 	<ul style="list-style-type: none"> Make proper video connections. Select the input source correctly. Set the settings correctly. (For details, refer to "SETTING THE INPUT SETUP" on page 53.)
No picture with an HDMI connection	<ul style="list-style-type: none"> HDMI connection between this unit and the monitor TV are not made correctly. The monitor TV or other equipments do not support HDCP. 	<ul style="list-style-type: none"> Make proper HDMI connection. This unit will not output video signal unless the connected equipments supports HDCP.
Noise or distorted picture	<ul style="list-style-type: none"> Video format of your monitor TV, DVD player, etc. is different from PAL. 	<ul style="list-style-type: none"> Change the video format to PAL.
Stations cannot be received	<ul style="list-style-type: none"> No antenna is connected. The desired station frequency is not tuned in. Antenna is in wrong position. 	<ul style="list-style-type: none"> Connect an antenna. Tune in the desired station frequency. Move antenna and retry tuning.
Preset stations cannot be received	<ul style="list-style-type: none"> An incorrect station frequency has been memorized. The memorized stations are cleared. 	<ul style="list-style-type: none"> Memorize the correct station frequency. Memorize the stations again.
Poor FM reception	<ul style="list-style-type: none"> No antenna is connected. The antenna is not positioned for the best reception. Weak signals. 	<ul style="list-style-type: none"> Connect an antenna. Change the position of the antenna. Install an outdoor FM antenna.
Continuous or intermittent hissing noise during AM reception, especially at night.	<ul style="list-style-type: none"> Noise is caused by motors, fluorescent lamps or lightning, etc. 	<ul style="list-style-type: none"> Keep the receiver away from noise sources. Install an outdoor AM antenna.
Remote control unit does not operate.	<ul style="list-style-type: none"> Batteries are not loaded or exhausted. The remote sensor is obstructed. 	<ul style="list-style-type: none"> Replace the batteries. Remove the obstacle.
OSD function is not available.	<ul style="list-style-type: none"> Video connections between this unit and the monitor TV are not made correctly. 	<ul style="list-style-type: none"> Make proper video connections.

Specifications

AMPLIFIER SECTION

- Power output, stereo mode, 8 Ω , THD 1.0 %, 40 Hz~20 kHz | **2 x 100 W**
- Total harmonic distortion, 8 Ω , 95 W, 1 kHz | **0.05%**
- Intermodulation distortion
60 Hz : 7 kHz= 4 : 1 SMPTE, 8 Ω , 95 W | **0.1%**
- Input sensitivity/impedance
Line (CD, TAPE, VIDEO) | **230 mV/47k Ω**
- Signal to noise ratio, IHF "A" weighted
Line (CD, TAPE, VIDEO) | **95 dB**
- Frequency response
Line (CD, TAPE, VIDEO), 20 Hz ~ 55 kHz | **+0, -3 dB**
- Output level
TAPE, ROOM 2 OUT, 2.2 k Ω | **200 mV**
PREOUT (Front, Center, Surround, Surround back, Subwoofer), 1 k Ω | **1.0 V**
- Bass/Treble control, 100 Hz/10 kHz | **± 10 dB**
- Surround mode, only channel driven
Front power output, 8 Ω , 1 kHz, THD 1.0 % | **110 W / 110 W**
Center power output, 8 Ω , 1 kHz, THD 1.0 % | **110 W**
Surround power output, 8 Ω , 1 kHz, THD 1.0 % | **110 W / 110 W**
Surround back (MULTI) / ROOM 2 power output, 8 Ω , 1 kHz, THD 1.0 % | **110 W / 110 W**

DIGITAL AUDIO SECTION

- Sampling frequency | **32, 44.1, 48, 96, 192 kHz**
- Digital input level
Coaxial, 75 Ω | **0.5 Vp-p**
Optical, 660 nm | **-15 ~ -21 dBm**

VIDEO SECTION

- Video format | **PAL**
- Input sensitivity(=Output level), 75 Ω
Video (Composite(normal)) | **1 Vp-p**
S-Video (luminance signal) | **1 Vp-p**
(chrominance signal) | **0.286 Vp-p**
Component video (R-Y signal) | **0.53 Vp-p**
(B-Y signal) | **0.53 Vp-p**
(Y signal) | **1.0 Vp-p**
- HDMI connector | **19 pin**

FM TUNER SECTION

- Tuning frequency range | **87.5~108 MHz**
- Usable sensitivity, THD 3%, S/N 26 dB | **12.8 dBf**
- 46 dB quieting sensitivity, mono/stereo | **20.2 / 45.3 dBf**
- Signal to noise ratio, 65 dBf, mono/stereo | **70 / 65 dB**
- Total harmonic distortion, 65 dBf, 1 kHz, mono/stereo | **0.5 / 0.8 %**
- Frequency response, 30 Hz~15 kHz | **± 3 dB**
- Stereo separation, 1 kHz | **32 dB**
- Capture ratio | **4.0 dB**
- IF rejection ratio | **60 dB**

AM TUNER SECTION

- Tuning frequency range | **522~1611 kHz**
- Usable sensitivity | **500 μ V/m**
- Signal to noise ratio | **40 dB**
- Selectivity | **25 dB**

GENERAL

- Power supply | **230 V ~ 50 Hz**
- Power consumption | **780 W**
- Switched AC outlet | **TOTAL 100 W (0.43 A) max.**
- Dimensions (W x H x D, including protruding parts) | **440 x 171 x 421 mm (17-3/8 x 6-3/4 x 16-1/2 inches)**
- Weight (Net) | **15.1 kg (33.1 lbs)**

Note: Design and specifications are subject to change without notice for improvements.

Setup Code Table

TV

ENGLISH

ADMIRAL	050	134				
AKAI	093	049	123			
ALBA	068					
ALBIRAL	116					
ALCATEL	022					
AMSTRAD	000	021				
ANAM	155	156	157			
ARC EN CIEL	028	039	043	145	081	
ARISTONA	099	049	050	019	142	149
	078					
ARTHUR MARTIN	053	139	117	120	122	123
	125	128				
ASA	050	055	057	113	134	
ATLANTIC	099	111				
AUDIOSONIC	054					
AUSIND	053					
AUTOVOX	099	144	055	019	057	069
BAIRD	083					
BASICLINE	006					
BAUR	011					
BEKO	023	049				
BLAUPUNKT	094	100	102	111	114	
BRANDT	028	039	040	043	145	081
BRION VEGA	050					
BRUNS	048	050				
BSR	059	110	132			
BUSH	033	068	124	074		
CENTURY	098	101	050	079	136	
CGE	016	101	124	079	132	136
CIHAN	065					
CLARIVOX	048	116				
CONDOR	099	111				
CONTEC	087					
CONTINENTAL						
EDITION	028	039	040	043	145	081
CROSLEY	101	050	109			
CROWN	147					
CTC CLATRONIC	046					
DAEWOO	089					
DECCA	099	060	063	115	118	
DEGRAAF	036					
DIXI	049	090				
DRYNATRON	049					
DUAL	099	141				
DUAL-TEC	096	099	132			
DUMONT	046	050	057	073		
ELBE	016	116				
ELBIT	065					

ELCIT	046	097	103	050	109	127
	132					
ELMAN	046	132				
ELTA	090					
EMERSON	158	098	050			
ERRES	049	142				
EUROPHON	098	046	097	099	051	115
	132					
FERGUSON	146	040	041	150	057	061
	116	149				
FIDELITY	099	149				
FINLUX	034	046	053	055	057	109
	113	073	074	079		
FISHER	015	048	050	052	109	136
FORGESTONE	149					
FORMENTI	099	053	109	111	125	
FORTRESS	137					
FRABA	075					
FRONTECH	054					
FUJITSU	025					
FUNAI	054	059				
GBC	109	132				
GEC	099	060	109	115	134	088
GELOSO	103	109	132	134	090	
GOLDSTAR	092	003	017	099	049	075
	076	077	090	152		
GOODMANS	033	049	060	077		
GORENJE	066	136				
GREATZ	001	058	109	122	123	128
	129	130	134			
GRANADA	033	099	049	058	060	142
	115	125	134			
GRUNDIG	094	100	057	058	108	112
	114	082				
HANSEATIC	033	047	099	049	109	139
	111					
HANTAREX	097					
HEMMERMANN	127					
HIFIVOX	028	039	043	145	081	
HINARI	158	033	045	143	090	
HITACHI	014	033	034	036	099	145
	056	109	139	110	067	117
	132	134	084	091	081	088
HYPER	093	099				
IMPERIAL	016	101	124	079	132	133
INGELEN	001	058	109	122	128	129
	130	134				

INNO HIT	093	098	097	099	143	077	NORDMENDE	028	032	039	043	145	131
	090							091	081				
INTERFUNK	047	049	050	145	058	109	OCEANIC	109	064	123			
	142	123	128	129	091		ONCEAS	099					
IRRADIO	093	143	053	077	090		OPTONICA	137					
ITT	001	140	058	105	109	122	ORION	000	059	118	068	127	090
	123	128	148	129	130	134	OSAKI	060					
	135	083	089				OSIO	077					
JVC	033	154					OSUME	087					
KTV	099						OTTO VERSAND	033	047	049	109	139	
KAISUI	006						P.T ACTTRON	065					
KARCHER	006						PAEL	099	053				
KENDO	098						PANASONIC	030	042	095	104	107	109
KENNEDY	144	019	109					121	126				
KORTING	050	059	111				PATHE CINEMA	099	111	116	132		
KRIESLER	099	049	050	019	142	149	PERDIO	060					
	078						PHILCO	016	030	101	050	109	124
LENOIR	099							079	132	136			
LOEWE OPTA	008	097	047	049	050	115	PHILIPS	009	010	013	018	024	099
	072							049	050	019	142	148	149
LOGIK	118	149						078	088				
LUMA	049	120	134				PHOENIX	099	053	109	111	125	
LUXOR	058	139	117	120	123	129	PHONOLA	099	049	050	019	142	149
	135	083						078					
MAGNADYNE	046	097	103	050	109	115	PIONEER	020	049	145	091		
	127	132					PRANDONI-						
MAGNAFON	046	097	099	051	053	115	PRINCE	098	097	053	115	134	
MARANTZ	049						PREMIER	124					
MATSUI	158	099	106	060	118	068	PRINCE	098	097	053	134		
	134	090					PROTECH	049	054				
McMICHAEL	088						PYE	099	049	050	019	142	148
MEMOREX	090							149	078				
METZ	094	050	114	133			QUASAR	046	097	051	053	077	
MINERVA	094	100	057	058	114		QUELLE	047	099	100	049	053	055
MISTRAL	149							057	058	111	112	113	114
MITSUBISHI	033	035	047	049	050	062		118	123	073	074	128	
	118	119	148	080	138		RADIOLA	099	049	050	019	142	149
MIVAR	097	099	115	077				078					
MULTITECH	046	099	115	136			RADIOMARELLI	046	097	103	050	109	062
MURPHY	134							127	132				
MAONIS	096	144	019	110	134		RANK	074					
NATIONAL	042	104	109				RBM	074					
NEC	033	085					REDIFFUSION	062	123	134			
NECKERMANN	099	050	139	120	136		REX	096	144	019	141	110	069
NEI	049							134					
NIKKAI	060						ROBOTRON	048	050				
NOBLEX	015						RTF	048	050				
NOBLIKO	098	046	099	053	057		SABA	028	031	032	037	039	040
NOGAMATIC	028	039	043	145	081			043	097	050	145	115	120
NOKIA	001	140	058	105	109	122		086	091	081			
	123	128	148	129	130	134	SAISHO	158	099	118	119	068	090
	135	083	089				SALORA	053	139	117	120	122	123
								125	128	135	083		

SAMBERS	046	097	051	053	115	077
SAMPO	121					
SAMSUNG	015	026	099	054	077	136
	090	151	153			
SANYO	001	002	005	033	044	048
	060	113	118	071	054	136
SBR	049	142	148	149	088	
SCHAUB LORENZ	001	058	109	122	123	128
	129	130	134			
SCHNEIDER	096	099	049	050	052	019
	141	109	142	125	149	078
	132					
SEG	046					
SEI	158	059				
SELECO	016	096	144	019	141	110
	069	134				
SHARP	033	087	137			
Sherwood	000					
SIAREM	046	097	050	109	115	
SICATEL	116					
SIEMENS	005	094	036	100	111	114
	087					
SIERA	099	049	050	019	142	149
	078					
SILVER	054					
SINGER	016	046	050	109		
SINUDYNE	158	046	050	059	109	127
SONOKO	049	090				
SONY	146	007	027	033	038	118
STERN	096	144	019	110	069	134
TANDBERG	133					
TANDY	099	060	137			
TASHIKO	002	033				
TATUNG	099	060	063	065	115	118
TEC	096	099	132			
TELEAVIA	028	039	040	043	145	091
	081					
TELEFUNKEN	028	041	145	150	086	091
TELETECH	090					
TELEVIDEON	099	053	109	111	125	
TENSAI	049					
THOMSON	012	028	032	039	040	043
	145	091	081			
THORN- FERGUSON	014	040	041	054	150	057
	061	116	149	086		
TOCOM	029					
TOSHIBA	004	016	033	070	074	
TRANS						
CONTINENTS	098	097	053	134		
TRIUMPH	158					
UHER	052	111	125			
ULTRA VOX	098	046	099	050	109	120

UNIVERSUM	092	034	054	077		
UNIVOX	116					
VEGAVOX	079					
VOXSON	050	134				
WATSON	111					
WATT RADIO	046	099	051	109	116	127
WEGA	033					
WHITE						
WESTINGHOUSE	099	111				
YOKO	099					
ZANUSSI	096	144	019	110	069	134
ZOPPAS	096	144	019	110	134	

VCR

AKAI	042	022	052	032	033	
ALBA	008	020				
AMSTRAD	011					
ANITSCH	009					
ARC EN CIEL	042	056	052			
ARISTONA	045	031				
ASA	018					
AWIA	011	042				
BAIRD	042	033				
BAUER. BOSCH	014	043				
BLAUPUNKT	014	043	055	031	054	040
BRANDT						
ELECTRONIQUE	042	056	052			
BRIONVEGA	041					
BUSH	008	020				
C.EDISON	041					
CANON	014					
CAPEHART	020					
CGE	011	042	052			
CONTINENTAL						
EDISON	042	056	052			
CRAIG	000	013				
CURTIS MATHES	019					
DAEWOO	001	020	021			
DAYTRON	020					
DECCA	011	042				
DEGRAAF	003	006	011	045	018	
DUAL	042	052				
DUMONT	003	011	018			
DYNATECH	011					
EMERSON	002	010	011	019	025	
FERGUSON	042	059	030	052	034	036
FIDELITY	011					
FINLANDIA	003	018				
FINLUX	003	006	011	018		
FISHER	000	003	005			

THOMSON	042	056	052			
THORN- FERGUSON	039	042	059	030	052	034
	036					
TOSHIBA	001	042	056	017	058	052
TOTELEVISION	013					
UHER	042					
ULTRA VOX	041					
UNITECH	013					
UNIVERSUM	041	014	043			
URANYA	041					
VECTOR	004					
VICTOR	042	060				
VIDITAL	041					
WESTING HOUSE	041					
WARDS	019					
YAMAHA	004	042				
ZANUSSI	042	056	052			
ZENDER	052					
ZOPPAS	042	056				

DVD

DENON	017					
GE	003	004				
JVC	007					
LG	011	010				
MAGNAVOX	019					
MITSUBISHI	001					
ONKYO	009					
PANASONIC	015					
PHILIPS	019					
PIONEER	002	023				
PROSCAN	003	004				
RCA	003	004				
SAMSUNG	016	008				
SHERWOOD	000	010	011	012	013	014
	022	020	021			
SONY	005					
THOMSON	003	004				
TOSHIBA	006					
VIETA	014					
YAMAHA	019					
ZENITH	011	010				

CBL

ABC	002	003	009	030		
	007	006	008			
Allegro	018	021				
Archer	018	026				
Bell&Howell	009					
Century	018					
Citizen	018	021				
Comtronics	014					
Contec	011					
Easten	001					
Emerson	026					
Everquest	010	014				
Focus	022					
Garrard	018					
Gemini	010					
General Instrument	033	276	006	034		
GoldStar	017	040				
Goodmind	026					
Hamlin	012	020	004	013		
Hitachi	006					
Hytex	007					
Jasco	010	018	021			
Jerrold	002	007	033	032	009	010
	006	034				
Movie Time	015					
NSC	015					
Oak	011					
Optimus	031					
Panasonic	016	031				
Philips	018					
Pioneer	017	025				
Popular Mechanics	022					
RCA	031					
Radio Shack	010	021	026	028		
Recoton	022					
Regal	012	020				
Regency	001					
Rembrandt	006					
Sherwood	000					
SL Marx	014					
Smasung	017	014				
Scientific Atlanta	003	023	030	027		
Signal	010	014				
Signature	006					
Sprucer	031					
Starcom	002	010				

Stargate	010	014	026
Starquest	010		
TV86	015		
Teleview	014		
Tocom	007	008	
Tusa	010		
Unika	018		
United Artists	007		
Universal	153	019	
Viewstar	015		
Zenith	024		
Zentek	022		

SAT

ALBA	030			
AMSTRAD	008	019	027	
ARCON	021			
ARISTONA	016			
ASTRA	028			
BLAUPUNKT	033			
BUSH	016			
CH.MASTER	030			
CITY COM	005			
DDC	030			
DYNASAT	005			
ECHOSTAR	002	009	032	020
EMME ESSE	005			
FAIT	005			
FERGUSON	014	041	016	017 018
FINLUX	006	007	013	
FRACARRO	005			
FTE	022			
GOLDSTAR	004	021		
GRAETZ	026	037		
GROTHUSEN	004			
GRUNDIG	033	016	018	036
HINARI	030			
HIRSCHMANN	003	006		
HITACHI	013			
INGELEN	026	037		
ITT	034			
ITT-NOKIA	032	018	026	037
JERROLD	038	014		
KATHREIN	005	022	023	
KOSMOS	004			
KRIESLER	016			
LENCO	004	021		
LUXOR	026	037		

MAGAI	022				
MARANTZ	012				
MASPRO	016				
METZ	036				
MINERVA	036				
MULTISTAR	022				
MURATO	004				
NEC	040				
NEIRU	021				
NOKIA	026	037			
NORSAT	015				
PACE	001	042	016	017	018 044
PANASONIC	032				
PHILIPS	003	011	012	029	
PHONOLA	016				
PROSAT	030				
PYE	016				
QUADRAL	030				
QUELLE	036				
RADIOLA	016				
REDIFFUSION	015				
SABA	035				
SALORA	026				
SAMSUNG	003	022			
SAT PARTNER	004				
SATPORTNER	021				
SCHAUB LORENZ	026	037			
SCHNEIDER	005	016			
SHERWOOD	000				
SIEMENS	033	036			
SIERA	016				
SILVA	004	021			
SKY	039				
STARCOM	038				
STARSAT	022				
TECHNISAT	003				
TELEFUNKEN	025				
TELESYSTEM	005				
THORN- FERGUSON	010	014	041	016	017 018
	043				
TRIAD	004				
UNIDEN	022				
UNITED CABLE	038				
VTECHNOLOGY	004				
VORTEC	003	024	025		
ZENDER	022				

CD

ADCOM	021					
AIWA	045	039	022			
AKAI	046					
AUDIO	016					
ARC EN CIEL	036	014	027	030	031	018
	230					
DENON	054					
FISHER	006					
H/K	017	012	047	016		
JVC	028	034	001			
KENWOOD	003	020	010	029	006	
MARANTZ	015	014				
MONDIAL	033					
NAD	048	002	042			
NAKAMICHI	049					
NIKKO	016					
ONKYI	013	037	011	021	038	
PANASONIC	051	052				
PHILPS	014					
PIONEER	005	008	041			
RCA	007	009				
REALISTIC	045					
SANSUI	040					
SHARP	019	053				
SHERWOOD	000	035	023	019	056	057
	058					
SONY	050	024	025	026		
TEAC	055	032				
TECHNICS	051	004	052			
VICTOR	001					
YAMAHA	044	043	016			

AUX-TAPE/MD

SHERWOOD	000(for tape deck)
	015 016(for MD recorder)

AUX-LD

DAEWOO	002
DENON	012
GOLDSTAR	004
KENWOOD	003
MAGNAVOX	010
OPTIMUS	007
PANASONIC	013
PHILIPS	010
POINNEER	000 009
RCA	006
REALISTIC	007
SAMSUNG	001 005
SHARP	003 011
TECHNICS	013
TOSHIBA	003
YAMAHA	008

R-872

Audio/Video Receiver

