


Simplex

EP10

USER'S MANUAL

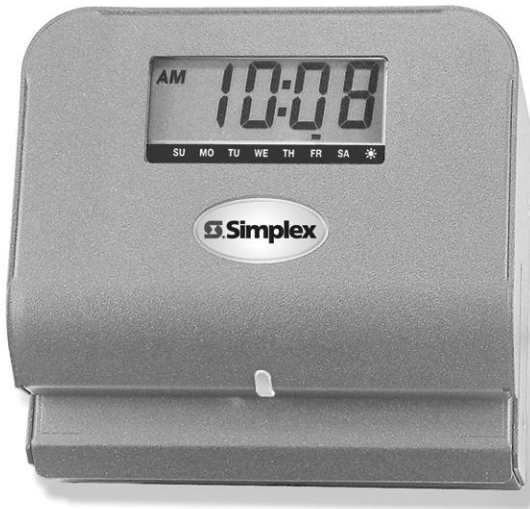

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

**For questions about the operation of this time recorder,
please contact our Time Recorder Support Hotline at
(800) 224-1881 or (404) 591-3199.**

Simplex EP10
User's Guide

© 2011 SimplexGrinnell LP. All rights reserved.
SimplexGrinnell is continually improving its products; specifications are subject to change without notice. SimplexGrinnell, Simplex and Be Safe are trademarks of Tyco International Services AG or its affiliates. License numbers available at www.simplexgrinnell.com or contact your local SimplexGrinnell office.

MC109-151-610
Rev 1/2011

Table of Contents

Introduction	5
Quick Easy Setup (Wall Mount).....	8
Quick Easy Setup (Table Top Mount).....	9
Setup	10
Using the Time Recorder	27
Appendix A - Changing the Print Intensity	29
Appendix B - Calibrating the TruAlign Function.....	30
Appendix C - Testing the Print Head	33
Appendix D - Changing the dates for Daylight Savings.....	34
Appendix E - Disable Daylight Savings Correction	35
FREQUENTLY ASKED QUESTIONS	36
SPECIFICATIONS	37

Introduction

Thank you for purchasing our time recorder. For safe and proper operation, please carefully read this manual before using the time recorder and save it for reference.

Simplex's EP10 TruAlign Time Recorder is a maintenance-free employee time recorder that uses no ink, ribbon or toner and operates without any loud impact noise to disturb the working environment.

Simplex's EP10 TruAlign Time Recorder features the patented "TruAlign" feature, which helps employees align their timecards to ensure a clear registration at the correct position on the timecard.

The employee places the long edge of the timecard on the timecard shelf of the EP10 and aligns the timecard to the cell to be printed. When the timecard is aligned correctly an automatic imprint with the day and time will be recorded on the timecard. The indicator turns green when the printing is complete and the timecard can be removed.

The EP10 TruAlign Time Recorder uses the Simplex thermal time card. The time and date programming is protected by an internal lithium battery

Features

Typical applications: Payroll or job cost recorder.

- Quartz time clock
- Automatic daylight savings time
- 12 or 24 hour format
- Thermal printer
- Digital LCD display (AM/PM, Hour, Minute, Day of week and Daylight Savings indication)
- Perpetual calendar
- Prints in 3 languages
- Regular minute or 1/100 of hour
- Print intensity adjustment
- Automatic imprint on timecard
- Internal lithium battery backup

Caution

Avoid placing the time recorder in environments that are:

- humid
- dusty
- exposed to direct sunlight
- subject to frequent or continuous vibrations
- affected by chemicals or ozone
- outside the temperature range between +25°F and 113°F

Place the time recorder close to a wall outlet so that it is easy to disconnect.

Do not put a heavy object on the time recorder, or forcefully press the time recorder onto the back-plate. This may cause trouble with the punching mechanism.

Lithium battery contains perchlorate material - special handling may apply. Please go to the web site <http://www.dtsc.ca.gov/hazardouswaste/perchlorate> for information about proper methods of disposal.

About this Manual


This manual will guide you through the installation, set up and use of your EP10 TruAlign Time Recorder.

Accessories


- Thermal Time Cards
- Time Card Rack

Note: The thermal timecards are sensitive to temperature and should always be stored in a cool dry location preferably out of exposure to direct sun light. Storage temperature should **not** exceed 150°F (65°C).

Packing Contents

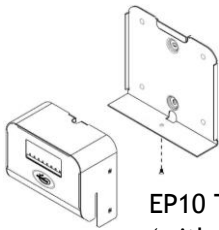

EP10 Time Recorder
(with back-plate)

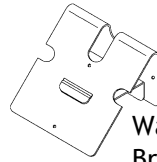


Wall-Mount
Bracket



Installation & User's
Guide



AC Wall
Adapter



Sample pack of
timecards



(2) #8 Philips Head screws for Wall-Mount Bracket



(2) #8 Anchors (use for masonry wall installation only)



(2) 8-32 x 1/4 Philips Head screws to install Back-Plate to Wall-Mount Bracket

Recommended Installation Tools



Tape Measure



Pencil



Philips Head
Screw Driver




Optional-
Power Drill &
Drill Bits

Quick Easy Setup (Wall Mount)

To setup your EP10, follow these next steps:


Step 1

Separate the back-plate from the EP10 by removing the Philips head screw. Retain the screw for later.

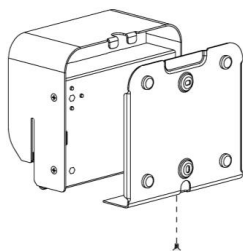


Step 2

Install the wall-mount bracket to the wall using the supplied wall-mount screws. Note: For best visibility mount the EP10 about 48 inches from the floor.

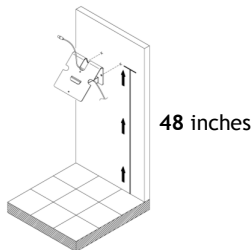

Step 3

Using the supplied 8-32 x 1/4 Philips head screws install the back-plate to the wall-mount bracket.

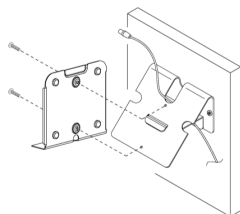


Step 4

With the back-plate secured to the wall-mount bracket, plug the AC wall adapter into the EP10.

Note: The time, date and other settings are factory set. See “Factory Settings” below. If these settings are acceptable you are ready to begin, otherwise see Page 11 “Programming the EP10”.

Step 5

Align and place the EP10 on the back-plate and secure the two together with the 8-32 x 1/4 Philip head screw. Be careful not to pinch the AC cord.

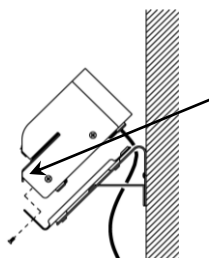

Note: Make sure the bottom of the timecard shelf is over the edge of the back-plate before securing the screw.

Factory Settings


- Time=U.S. Eastern Time
- Daylight Savings=On
- Spring Daylight Savings=Second Sunday in March
- Fall Daylight Savings=First Sunday in November
- Displayed Time Format=AM/PM hours & Minutes
- Printed Time Format=AM/PM hours & Minutes
- Day of Week Language=English
- Confirmation Beep=Disabled

Quick Easy Setup (Table Top Mount)

To setup your EP10, follow these next steps:


Step 1

Separate the back-plate from the EP10 by removing the Philips head screw. Retain the Philips head screw for later.

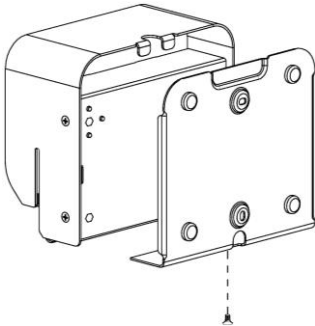

Step 2

Plug the AC adapter into the EP10 and then plug the wall adapter into the AC outlet.

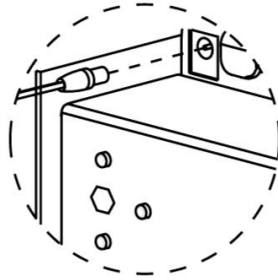

Step 3

Secure the back-plate to the EP10 with the Philips head screw being careful not to pinch the AC cord. Make sure the bottom of the timecard shelf is over the edge of the back-plate before securing the screw. Place the EP10 on a solid flat surface. You are ready to begin using the EP10.



Note: The time, date and other settings are factory-set. See “Factory Settings” to the right. If these settings are acceptable you are ready to begin, otherwise see Page 11 “Programming the EP10”.

Factory Settings


- Time=U.S. Eastern Time
- Daylight Savings=On
- Spring Daylight Savings=Second Sunday in March
- Fall Daylight Savings=First Sunday in November
- Displayed Time Format=**AM/PM hours & Minutes**
- Printed Time Format=**AM/PM hours & Minutes**
- Day of Week Language=**English**
- Confirmation Beep=**Disabled**

Setup

To set up your EP10time recorder, follow these next steps:


Remove the Back-Plate

Separate the back-plate from the time recorder by removing the Philips head screw. Retain the Philips head screw for later.

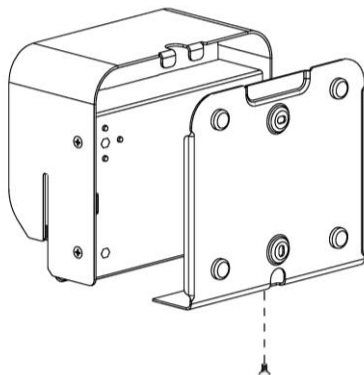

Connect the AC Power


Plug the AC adapter into the time recorder and then plug the wall adapter into the AC outlet.

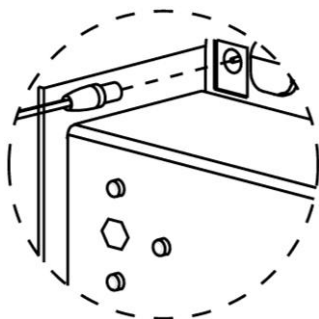

NOTE: The time recorder has an internal battery that will retain the programming if the time recorder is unplugged from AC power.

Programming the EP10

After removing the back-plate and connecting the AC power you will be ready to begin programming the EP10 time recorder. Use the three buttons on the back to program the time recorder. Hold the time recorder with both hands with the display facing you. Use your index and middle fingers to press the programming buttons on the back of the time recorder while watching the settings on the display. Note: An undisturbed environment is recommended when programming the timeclock.

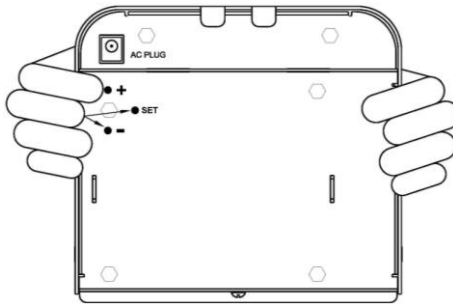

Using the 3 programming buttons

+ (Plus)

When you press the **+** button, you increment or change the selected setting.

SET

You can set the value of the selected setting on the display by pressing the **SET** button which also moves you to the next available setting.

- (Minus)


When you use the **-** button, you decrement or change the selected setting.

What if I press the SET button by mistake?

If you make a programming mistake by pressing the **SET** button too soon, simply unplug the AC power or continue pressing the **SET** button until you have the normal time and date on the display. Then go back into the Set Up Mode and continue your programming.

Setting the Time

To enter the 'Time Set Up Mode', press the **+** and **SET** buttons at the same time.

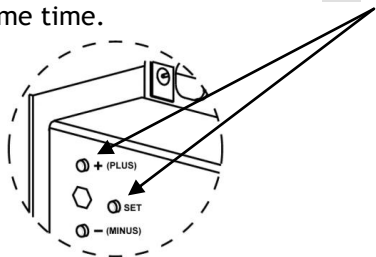

The blue light will turn off and the display will show the hours and minutes, release the **+** and **SET** buttons.

Press the **+** button to move the time forward or press the **-** button to move the time backwards. To move quickly through the time, press and hold down the **+** or **-** button. Holding down either button will increase how quickly you scroll through the time. When you have the desired hours and minutes on the display, press the **SET** button.

Note: The seconds will be zeroed when you press the **SET** button, so it's recommended to set the time 1 or 2 minutes ahead of the actual time. Wait until the actual time matches the time recorder, and then press the **SET** button which will synchronize the time recorder time with the actual time.

Example: Set the time from 11:00am to 1:00pm

Hours and Minutes

AM 1 1 0 0

PM 0 1 0 0

Step 1


Press the **+** button to scroll forward until the display shows 'PM 0 1 0 0'. Notice while you are scrolling through the hours the AM will change to PM.

Step 2

Press the **SET** button when the AM/PM indicator, hour and minutes are correct. The time will be accepted and the time recorder will return to a normal display.

Setting the Date and Other Functions

To enter the 'Setup Mode', press the **-** and **SET** buttons at the same time.

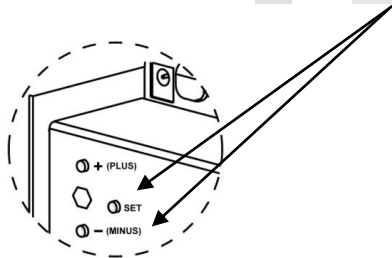

Release the buttons, the blue light will turn off, the 'Set Month' function (1) will display.

Press the **+** or **-** buttons to change the value of the settings. The **+** button moves you forward and the **-** button moves you backwards through the available selections. When you have the desired setting on the display, press the **SET** button.

Factory Settings

The time recorder has several settings that are pre-set at the factory. The factory default settings include:

- Daylight Savings=**On**
- Spring Daylight Savings=**Second Sunday in March**
- Fall Daylight Savings=**First Sunday in November**
- Displayed Time Format=**AM/PM hours & Minutes**
- Printed Time Format=**AM/PM hours & Minutes**
- Day of Week Language=**English**
- Confirmation Beep=**Disabled**

Simply press the **SET** button to accept these factory settings when you are programming the time recorder.

Set up Functions

The set up functions of the time recorder are in sequential order from 1 through 15. When in the ‘Setup Mode’ you **must** pass through each function even if you only need to change a single setting. Simply press the **SET** button to accept the settings that you do not wish to change. **Note:** If you do not pass through each setting your time recorder may not be configured as you desired.


To enter the ‘Setup Mode’ for date and other functions, press the **-** and **SET** buttons at the same time.

Function	Settings	Selections	Factory Settings
1	Set Month	01 - 12	-
2	Set Date	01 - 31	-
3	Set Year	00 - 99	-
4	Change Factory Default Daylight Savings	y - n	n
5	Set Spring DST Month	00 - 12	03
6	Set Spring DST Sunday	1,2,3,4,Last	02
7	Set Fall DST Month	00 - 12	11
8	Set Fall DST Sunday	1,2,3,4,Last	01
9	Set 12/24 Hr Display	12 / 24	12
10	Set 12/24 Hr Print	12 / 24	12
11	Set Print Minute Format	1-Mins/ 2- 1/100s of Hour	1
12	Set Day of Week Print Language	English, French, Spanish	E
13	Set Print Intensity	1 - 9	5
14	Confirmation Beep	n-Disabled, y-Enabled	n
15	TruAlign Calibration/ Print Head Test	0-No, 1-Yes, 2 - 9 Print Head Test	0

Function 1 - Set Month

When prompted to set the month, use the **+** button to scroll forward or the **-** button to scroll backwards. With the desired month showing on the display, press the **SET** button. The 'Set Date' function (2) will display next.

Example: Set the month from 01 to 10

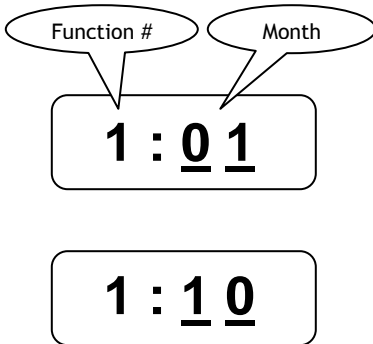

Step 1

Press the **+** or **-** button until the display shows '10'.

Step 2

Press the **SET** button when the month is correct. The month will be accepted, go to the 'Set Date' function.

Note: If you scroll past the month you wish, continue pressing the **+** or **-** button until the desired month displays, then press the **SET** button.

Important Note: The set up functions of the time recorder are in sequential order and you must pass through each setting to complete the programming. Simply press the **SET** button to accept the settings that you do not wish to change.


Your time recorder may not be programmed as you desired if you do not pass through each setting.

Function 2 - Set Date

When prompted to set the date, use the **+** button to scroll forward or the **-** button to scroll backwards. With the desired date showing on the display, press the **SET** button. The 'Set Year' function (3) will display next.

Note: If setting the date in February make sure you set the date correctly, for example leap year has 29 days, otherwise the daylight savings may not activate correctly.

Example: Set the date from 21 to 05

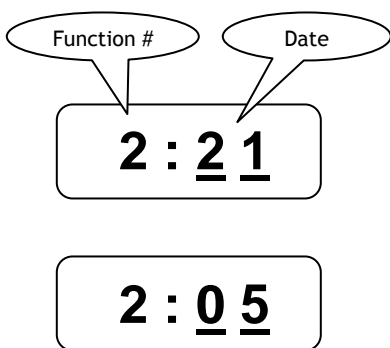

Step 1

Press the **+** or **-** button until the display shows '05'.

Step 2



Press the **SET** button when the date is correct. The date will be accepted, go to the 'Set Year' function.

Note: If you scroll past the date you wish, continue pressing the **+** or **-** button until the desired date displays, then press the **SET** button.

Function 3 - Set Year

When prompted to set the year, use the **+** button to scroll forward or the **-** button to scroll backwards. With the desired year showing on the display, press the **SET** button. The 'Set DST' function (4) will display next.

Example: Set the year from 01 to 09

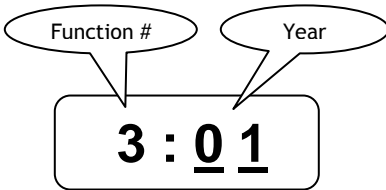

Step 1

Press the **+** or **-** button until the display shows '09'.

Step 2

Press the **SET** button when the year is correct. The year will be accepted, go to the 'Change Factory Default Daylight Savings' function.


Note: If you scroll past the year you wish, continue pressing the **+** or **-** button until the desired date displays, then press the **SET** button.

Function 4 - Change Factory Default Daylight Savings

This function allows you to change or modify the factory default daylight savings settings. The daylight savings setting are set at the factory for the **Second Sunday in March** and the **First Sunday in November**.

Most customers should use the factory settings for daylight savings. The daylight savings setting are set at the factory for the **Second Sunday in March** and the **First Sunday in November**.

To use the factory settings for daylight savings, press the **SET** button at Function 4.

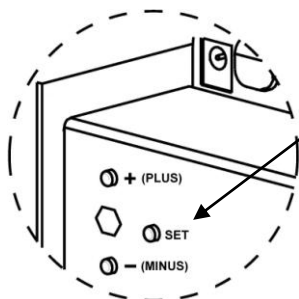

Note: Normally you would use the default settings and by pass the Daylight Savings settings by pressing the **SET** button.

For more information see:

Appendix D - Changing the dates for Daylight Savings

Appendix E - Disable Daylight Savings Correction


Function 9 - Set 12/24 Hr Display

When prompted to select the format for how hours show on the display, use the **+** button to scroll forward or the **-** button to scroll backwards. With the desired format showing on the display, press the **SET** button. The 'Set 12/24 Hr Print' function (10) will display next.

Setting Values

- 12 = Show hours on display as AM / PM (1:00 in the afternoon will show as **PM 1:00**)
- 24 = Show hours on display as 0 - 23 (1:00 in the afternoon will show as **13:00**)

Example: Set the format from 12 to 24

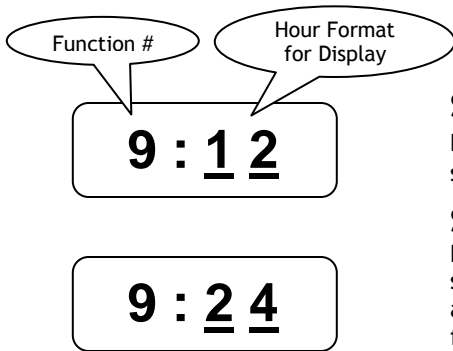

Step 1

Press the **+** or **-** button until the display shows '24'.

Step 2

Press the **SET** button when the format selection is correct. The format will be accepted, go to the 'Set 12/24 Hr Print' function.

Note: If you scroll past the format you wish, continue pressing the **+** or **-** button until the desired format displays, then press the **SET** button.

Function 10 - Set 12/24 Hr Print



When prompted to select the format for how hours will print on the timecard, use the **+** button to scroll forward or the **-** button to scroll backwards. With the desired format showing on the display, press the **SET** button. The 'Set Print Minute Format' function (11) will display next.

Setting Values

12 = Print hours on the timecard as AM / PM (1:00 in the afternoon will print as 1:00 P)

24 = Print hours on the timecard as 0 - 23 (1:00 in the afternoon will print as 13:00)

Example: Set the format from 12 to 24

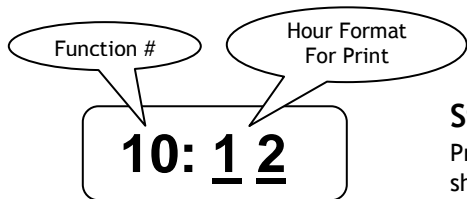

Step 1

Press the **+** or **-** button until the display shows '24'.

Step 2

Press the **SET** button when the format selection is correct. The format will be accepted, go to the 'Set Print Minute Format' function.

Note: If you scroll past the format you wish, continue pressing the **+** or **-** button until the desired format displays, then press the **SET** button.

Function 11 - Set Print Minute Format

When prompted to select the format for how minutes will print on the timecard, use the **+** button to scroll forward or the **-** button to scroll backwards. With the desired format showing on the display, press the **SET** button. The 'Set Day Print Language' function (12) will display next.



Setting Values

1 = Print minutes on the timecard as 00 - 59 (30 minutes will print as :30)

2 = Print minutes on the timecard as hundredths of hour 0 - 99 (30 minutes will print as .50)

Note: See page 38 for a "minutes to 1/100s of hour conversion chart".

Example: Set the format from minutes to hundredths of an hour

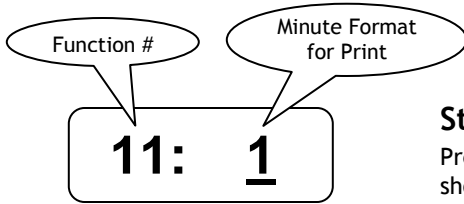

Step 1

Press the **+** or **-** button until the display shows '2'.

Step 2

Press the **SET** button when the format selection is correct. The format will be accepted, go to the 'Set Day Print Language' function.

Note: If you scroll past the format you wish, continue pressing the **+** or **-** button until the desired format displays, then press the **SET** button.



Function 12 - Set Day Print Language

When prompted to select the language the day of the week will print on the timecard, use the **+** button to scroll forward or the **-** button to scroll backwards. With the desired language showing on the display, press the **SET** button. The 'Set Print Intensity' function (13) will display next.

Setting Values

- E** = Print the day of the week abbreviation in English on the timecard
- S** = Print the day of the week abbreviation in Spanish on the timecard
- F** = Print the day of the week abbreviation in French on the timecard

Example: Set the day of week language from English to French

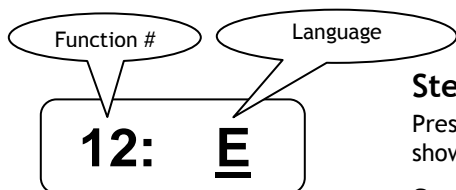

Step 1

Press the **+** or **-** button until the display shows 'F'.

Step 2


Press the **SET** button when the language selection is correct. The language will be accepted, go to the 'Set Print Intensity' function.

Note: If you scroll past the language you wish, continue pressing the **+** or **-** button until the desired language displays, then press the **SET** button.

Function 13 - Set Print Intensity

When prompted to select the intensity of the imprint on the timecard, press the **SET** button to accept the factory setting. The 'Confirmation Beep Disable/Enable' function (14) will display next.

Note: Normally you would press the **SET** button to by pass the Set Print Intensity function.

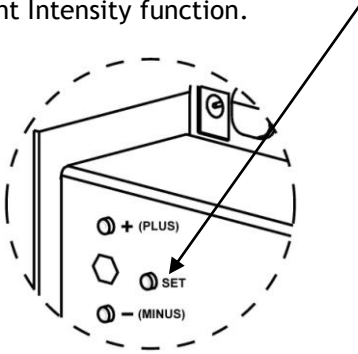

For more information see:

Appendix A - Changing the Print Intensity

Function 14 - Confirmation Beep Disable/Enable

When prompted to select whether the confirmation beep will sound or will be disabled, use the **+** button to scroll forward or the **-** button to scroll backwards. With the desired setting showing on the display, press the **SET** button. The 'TruAlign Calibration' function (15) will display next.


If enabled, a confirmation beep will sound after each imprint on a timecard.

Setting Values

n = Confirmation beep disabled, this is the factory setting

y = Confirmation beep is enabled

Example: Set the confirmation beep to enabled (**y**)

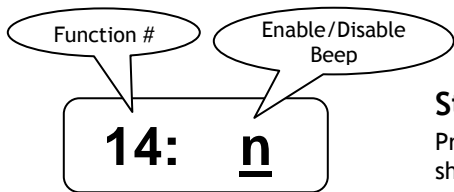


Step 1

Press the **+** or **-** button until the display shows 'y'.

Step 2

Press the **SET** button when the setting is correct. The setting will be accepted, go to the 'TruAlign Calibration' function.




Note: If you scroll past the setting you wish, continue pressing the **+** or **-** button until the desired setting displays, then press the **SET** button.

Function 15 - TruAlign Calibration / Print Head Test

When prompted to activate the TruAlign Calibration / Print Head Test, press the **SET** button to accept the factory setting.

After pressing the **SET** button the time recorder will go to the normal time/date display and will be operational.

Note: Normally you would press the **SET** button to by pass the TruAlign calibration function.

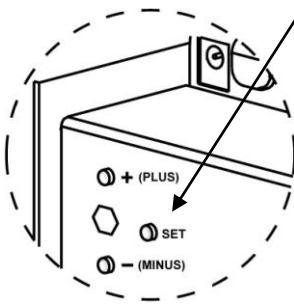

For more information see:

Appendix B - Calibrating the TruAlign Function


Appendix C - Testing the Print Head

Wall Mount

Select a site to install the EP10 time recorder that will be convenient to employees clocking In and Out. The EP10 time recorder can be mounted directly to a wall. When deciding where the time recorder will be installed, keep in mind that 115VAC power outlet should be within 6 feet of the mounting location.


Mounting to a Wall

Note: If you are installing the time recorder on a wall with drywall, it is recommended to use a “Molly Bolt” or Toggle Bolt” type of wall anchor.

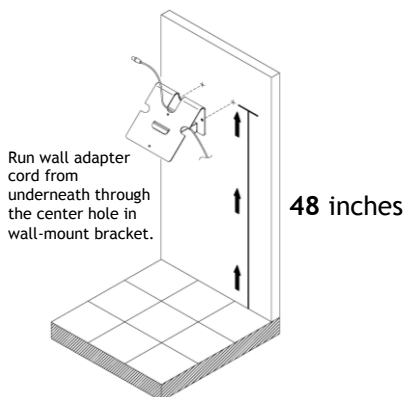


Step 1

Using the wall-mount bracket as a guide, mark the location on the wall of where the screws will be installed. Run the AC wall adapter cord through hole in the wall-mount bracket and then install the wall-mount bracket to the wall using the supplied wall-mount screws. **Note:** The time recorder should be mounted for best visibility, about 48 inches from the floor.

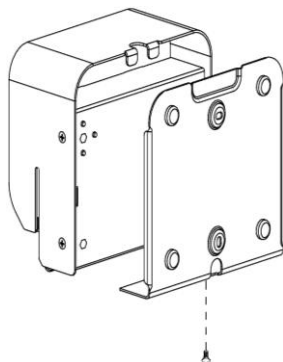

Step 2

Remove the Philips head screw holding the back-plate on the time recorder. Be sure to retain the Philips head screw for later.

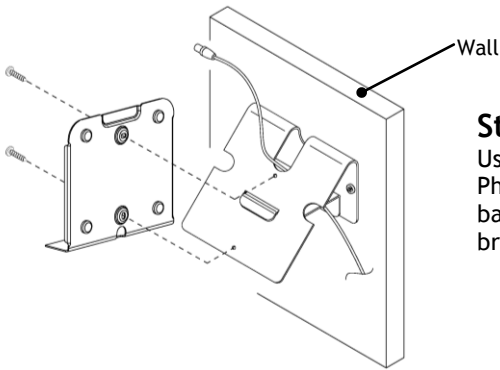


Step 3

Using the supplied 6/32 x 3/8 Philips head screws install the back-plate to the wall-mount bracket.


Step 4

With the back-plate secured to the wall-mount bracket, plug the AC wall adapter into the time recorder. Align and place the time recorder on the back-plate and secure the two together with the 8-32 x 1/4 Philips head screw, being careful not to pinch the AC cord. Plug the wall adapter into the AC outlet.

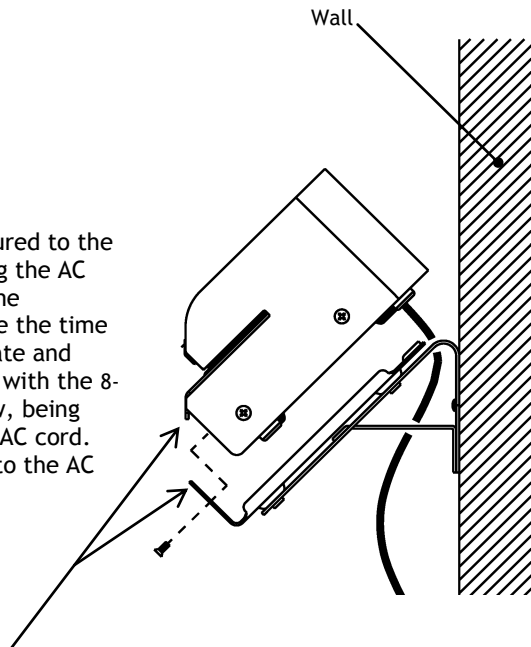


Note: Make sure the bottom of the timecard shelf is over the edge of the back-plate before securing the screw.

Using the Time Recorder

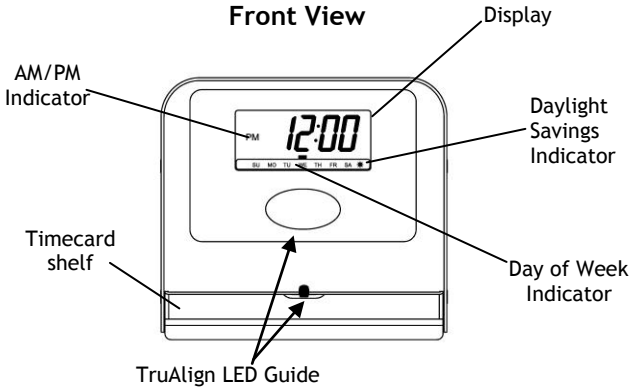

The employee places the long edge of the timecard on the timecard shelf of the EP10 and aligns the timecard to the cell to be printed. When the timecard is aligned correctly an automatic imprint with the day and time will be recorded on the timecard.

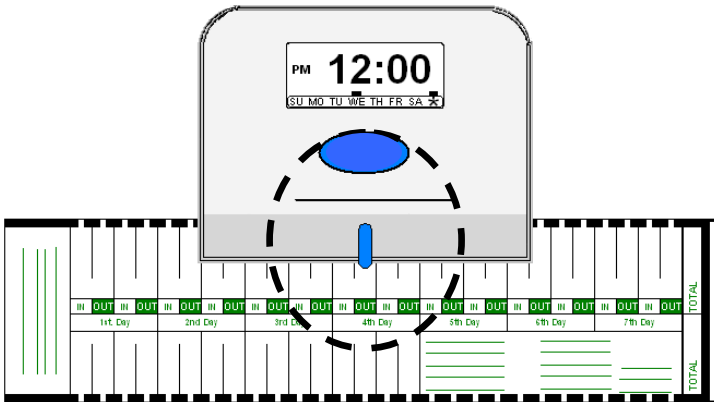

Next, four dashes (- - - -) show on the display and the indicator turns green indicating the printing is complete and the timecard can be removed.


Appendix A - Changing the Print Intensity

How to change the print intensity on the timecard

If the imprint on the timecard is getting faint you may wish to increase the print intensity setting from the factory setting of 5. See the instructions below.


- Enter the 'Setup Mode'. See Page 13.
- Press the **SET** button until you get to Function 13
- Use the **+** button to scroll through and set the desired print intensity level.
- Press the **SET** button through Function 14 and 15.
- The time recorder will go to the normal time/date display with the changes to the print intensity applied.

Example: Set the print intensity from 5 to 7

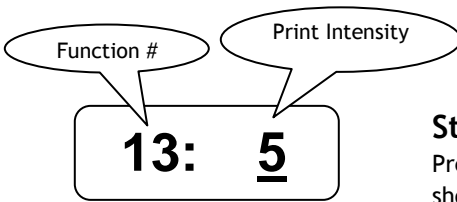

Step 1

Press the **+** or **-** button until the display shows '7'.



Step 2

Press the **SET** button when the setting is correct. The setting will be accepted, continue pressing the **SET** button through Function 14 and 15.

The time recorder will go to the normal time/date display with the changes to the print intensity applied.

Note: If you scroll past the setting you wish, continue pressing the **+** or **-** button until the desired setting displays, then press the **SET** button.


Appendix B - Calibrating the TruAlign Function

The time recorder was calibrated at the factory but with the passage of time or shifts in temperature you may find it necessary to recalibrate the time recorder.


When should I calibrate the TruAlign function for the timecard?

Recalibration may be needed if you insert a timecard in the time recorder and the blue LED changes to green when the timecard is not aligned correctly. See below for an example of a timecard when the TruAlign function needs to be recalibrated.

TruAlign function needs to be recalibrated. Imprint is not lined up correctly in timecards print area when the green LED displays.




TruAlign function is calibrated correctly. Imprint is lined up correctly in timecards print area when the green LED displays.



How to calibrate the TruAlign function

To recalibrate the TruAlign function, see the instructions below. Note: It is recommended when performing the calibration function to be in a sitting position with the timeclock on a stable flat surface in an undisturbed environment.

- Enter the 'Setup Mode'. See Page 13.
- Press the **SET** button until you get to Function 15

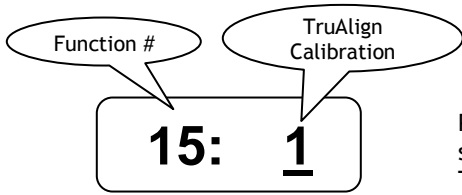

Press the **+** or **-** button until the display shows '1'. Selecting '1' activates the TruAlign calibration mode. Press the **SET** button.



The display will show 'CAL 1', insert and visually align a timecard, see Figure 1.

With the timecard fully inserted and properly aligned, press and hold the **+** button to register the alignment.

Note the value showing on the display. Shift the card slightly left and right, the value will increase or decrease.

When the display is at the smallest value, release the **+** button, the display will show 'CAL2'.

Remove the timecard.

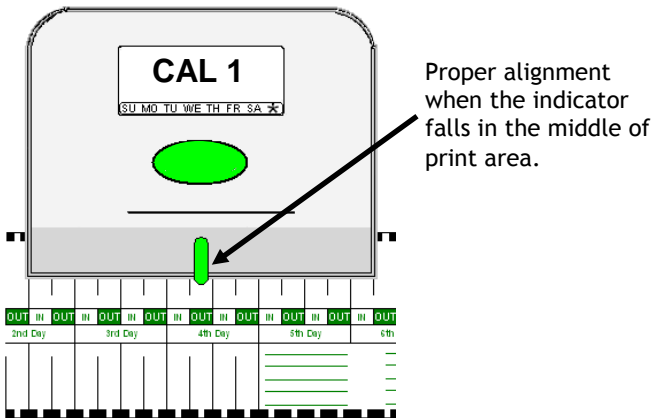


Figure 1

CAL 2

With the display showing 'CAL 2', insert and intentionally misalign the timecard, see Figure 2.

With the timecard fully inserted and misaligned, press and hold the **-** button to register the alignment.

Note the value showing on the display. Shift the card slightly left and right, the value will increase or decrease.

End

When the display is at the highest value, release the **-** button, the display will show 'END'.

Remove the timecard. Subtract the smaller registration value from the larger; the difference should be greater than 50. If the value is less than 50 you should repeat the TruAlign calibration.

Press the **SET** button to complete the calibration. The time recorder will go to the normal time/date display with the changes to the TruAlign calibration.

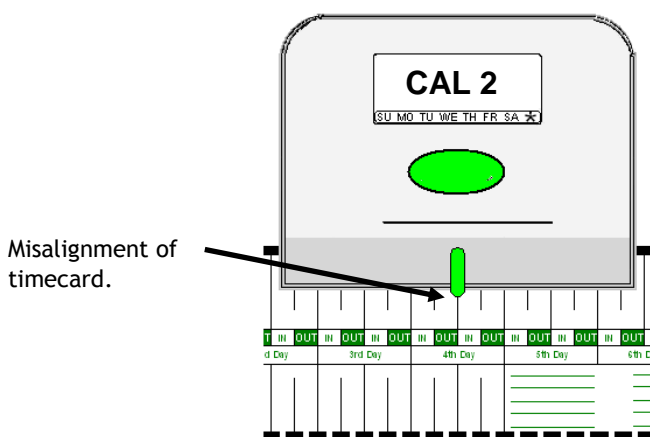


Figure 2

Appendix C - Testing the Print Head



When should I run the test on the print head?

If you notice that the imprint on the timecard appears to be missing segments, you can test the print head to make sure it is working correctly.

To test the print head, see the instructions below.

- Enter the 'Setup Mode'. See Page 13.
- Press the **SET** button until you get to Function 15

Example: Set the print test to 4 imprints

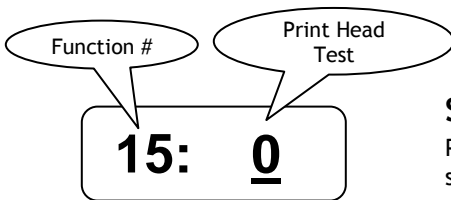

Step 1

Press the **+** or **-** button until the display shows '4'. Note: Any value between 2 and 9 puts the time recorder into print head test mode.

Step 2

Press the **SET** button when the setting is correct. The time recorder will be in the print head test mode.

Note: If you scroll past the setting you wish, continue pressing the **+** or **-** button until the desired setting displays, then press the **SET** button.

Step 3

With the time recorder in a normal time/date display. Insert a timecard and make an imprint. The imprint should look similar to the example.



Make 3 additional imprints, after the 4th imprint the time recorder will have completed the 'print head test mode' and be ready to imprint on the timecards normally.

Appendix D - Changing the dates for Daylight Savings

By default, daylight saving time is factory set for the **second** Sunday in **March** and the **first** Sunday in **November**.

To change the factory set daylight savings dates, see the instructions below.

- Enter the 'Setup Mode'. See Page 13.
- Press the **SET** button until you get to Function 4.
- Press the **+** or **-** button until the display shows 'Y'. Then press the **SET** button to go to Function 5.
- Use the **+** or **-** button to scroll through and set the desired month for the spring daylight savings. Then press the **SET** button to go to Function 6.
- Press the **+** or **-** button to scroll through and set the desired Sunday for the spring daylight savings. Then press the **SET** button to go to Function 7.

Setting Values

1 = First Sunday	4 = Fourth Sunday
2 = Second Sunday	L = Last Sunday
3 = Third Sunday	

- Use the **+** or **-** button to scroll through and set the desired month for the fall daylight savings. Then press the **SET** button to go to Function 8.
- Press the **+** or **-** button to scroll through and set the desired Sunday for the fall daylight savings, and then press the **SET** button.

Setting Values

1 = First Sunday	4 = Fourth Sunday
2 = Second Sunday	L = Last Sunday
3 = Third Sunday	

- Press the **SET** button through Function. 9, 10, 11, 12, 13, 14 and 15.
- The time recorder will go to the normal time/date display with the changes for daylight savings applied.

Appendix E - Disable Daylight Savings Correction

By default, daylight saving time is factory set for the **second** Sunday in **March** and the **first** Sunday in **November**.

If you are located in an area that does not recognize daylight saving time, you can disable the automatic correction. To disable the daylight savings correction, see the instructions below.

- Enter the 'Setup Mode'. See Page 13.
- Press the **SET** button until you get to Function 4.
- Press the **+** or **-** button until the display shows 'Y'. Then press the **SET** button to go to Function 5.
- Press the **+** or **-** button until the display shows '00'. Then press the **SET** button to go to Function 9.
- Press the **SET** button through Function 9, 10, 11, 12, 13, 14 and 15.
- The time recorder will go to the normal time/date display with the daylight savings correction disabled.

FREQUENTLY ASKED QUESTIONS

<p>Why will the EP10 not power up?</p>	<ul style="list-style-type: none"> • Check to make sure the AC power connector is plugged in securely on the back of the time recorder. • Make sure the AC wall outlet is supplying power. To check this you could plug in a lamp or radio. • Make sure the wall adapter is securely plugged into the AC wall outlet.
<p>Why will nothing print on the timecard when it is inserted in the EP10?</p>	<ul style="list-style-type: none"> • Make sure the timecards being used are designed for the EP10 time recorder. Not all cards will work with the EP10 time recorder. Use timecard # THERMAL.
<p>Why is the EP10 printing on the timecard when it is not aligned in the timecard cell?</p>	<ul style="list-style-type: none"> • You may need to recalibrate the TruAlign function. See page 30 for details.
<p>When I press the SET button to accept a setting the display shows “Err #”. (# = the function number you are currently configuring.) What does this error mean?</p>	<ul style="list-style-type: none"> • Typically if you see “Err #”, it means you have selected an invalid entry. For example if you see ‘Err 4’, this means you have entered an invalid setting for Function 4.
<p>Why is it when there is a power failure I have to reset the time and date on the EP10?</p>	<ul style="list-style-type: none"> • You may need to change the internal BR2325 coin-cell lithium battery. Contact Simplex’s technical support at 1-800-224-1881.
<p>Is there a way to reset all of the settings except the time and date to the factory default settings?</p>	<ul style="list-style-type: none"> • Yes, to reset the EP10 to the factory settings, press the + and - and SET buttons at the same time. The display will show rESt for 2 seconds and then the normal time / date will show.
<p>Why does the display show 4 dashes (- - - -) after an employee punches the timecard?</p>	<ul style="list-style-type: none"> • This is normal operation; the print head is readying itself for the next imprint.

SPECIFICATIONS

Dimensions	5 1/3 " H x 6" W x 3" D 13.5cm H x 15.2cm W x 7.6cm D
Weight	5.0 lbs (2.3 kg)
Display	LCD
Housing	Electro-Galvanized Steel with Powder-Paint Coating
Line Power	120vAC, 80mA typical 220vAC, 80mA typical 50 / 60 Hz
Memory	BR2325 Coin-Cell Lithium Battery <i>(change the battery every 7 years-recommendation)</i>
Environment	32° to 140° F (0° to 60° C) 95% Relative Humidity (non-condensing)
Timecard Storage	150° F (65° C) maximum temperature Note: The THERMAL timecards are sensitive to temperature and should always be stored in a cool dry location preferably out of exposure to direct sun light. Storage temperature should not exceed 150°F (65°C).

MINUTE CONVERSION CHART

Minutes to 1/100s of Hour

Minutes	Decimal Hrs	Minutes	Decimal Hrs	Minutes	Decimal Hrs
1	.01	21	.35	41	.68
2	.03	22	.36	42	.70
3	.05	23	.38	43	.71
4	.06	24	.40	44	.73
5	.08	25	.41	45	.75
6	.10	26	.43	46	.76
7	.11	27	.45	47	.78
8	.13	28	.46	48	.80
9	.15	29	.48	49	.81
10	.16	30	.50	50	.83
11	.18	31	.51	51	.85
12	.20	32	.53	52	.86
13	.21	33	.55	53	.88
14	.23	34	.56	54	.90
15	.25	35	.58	55	.91
16	.26	36	.60	56	.93
17	.28	37	.61	57	.95
18	.30	38	.63	58	.96
19	.31	39	.65	59	.98
20	.33	40	.66	60	1.00

Limited Warranty

Subject to the limitations set forth below, SimplexGrinnell warrants that the Products shall be free from defects in material and workmanship under normal use for the period of 90 days commencing on the date of 1) first beneficial use of all or any part of Product if installed by SimplexGrinnell or 2) Product shipment, whichever is earlier.

SimplexGrinnell's sole liability, and purchaser's sole remedy, under this Warranty, shall be limited to the repair or replacement of any Product, or part thereof, which SimplexGrinnell determines to be defective, at SimplexGrinnell's sole option and subject to the availability of service personnel and parts, as determined by SimplexGrinnell. Warranty service will be performed between the hours of 8:00 a.m. to 5:00 p.m. local time, Monday through Friday exclusive of SimplexGrinnell's holidays. Warranty service requested to be performed at other than during SimplexGrinnell's normal work hours shall be chargeable to SimplexGrinnell's standard overtime and travel rates. All repairs that are or may become necessary under the warranty provisions of this Agreement shall be performed only by an authorized SimplexGrinnell representative. Purchaser agrees to provide full and free access to such authorized SimplexGrinnell representative to make such repairs. Any repairs, adjustments, or interconnections performed by the purchaser or anyone other than an authorized SimplexGrinnell representative shall void all warranties. This warranty extends to the original purchase only and is non-transferrable.

THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT THAT HAS BEEN SUBJECTED TO ABUSE, MISHANDLING, OR IMPROPER USE AS DETERMINED BY SIMPLEXGRINNELL AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

This Warranty expressly excludes program and schedule changes, failures due to external causes, including but not limited to electrical surges, lightening, failure of electrical power, air conditioning or humidity control, damaging foreign substances, transportation, construction dust or debris, user programming errors, electrical work external to the equipment supplied by SimplexGrinnell, maintenance of accessories, alterations, attachments or other devices not furnished by SimplexGrinnell, ribbon replacement (other than defects), batteries, devices designed to fail in protecting a system such as, but not limited to, fuses and circuit breakers or any other causes other than manufacturing defect. SimplexGrinnell makes no warranty relating to or arising out of a claim or assertion that any Product infringes or violates any patent, copyright, or other proprietary right of any third party.

LIMITATION OF LIABILITY: SIMPLEXGRINNELL SHALL NOT BE LIABLE FOR ANY INDIRECT, INCIDENTAL, ECONOMIC, OR CONSEQUENTIAL LOSS OR DAMAGE TO THE PURCHASER OR USER OF THIS PRODUCT ARISING OUT OF, AMONG OTHER THINGS, THE OPERATION OR FAILURE OF THE PRODUCT TO OPERATE, THIS AGREEMENT, THE INSTALLATION, USE, DESIGN OR FUNCTION OF ANY SIMPLEXGRINNELL PRODUCT.



Corporate Sales and Marketing:

50 Technology Drive, Westminster, MA 01441-0001, Toll Free: 1-888-7777-9237

Canada:

2400 Skymark Avenue, Mississauga, Ontario L4W 5K5 Telephone 1-800-565-5400

© 2011 SimplexGrinnell LP. All rights reserved. Printed in the U.S.A.

MC109-151-610
Rev 1/2011