

Notice for Users in the USA

FCC Statement

WARNING - FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the distance between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

A shielded I/F cable and included ferrite core for LAN cable is required to insure compliance with FCC regulation for Class B computing equipment.

* As an ENERGY STAR® Partner, SHARP has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Declaration of Conformity

SHARP PERSONAL COMPUTER, PC-AR Series

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party: SHARP ELECTRONICS CORPORATION
Sharp Plaza, Mahwah, New Jersey 07430-2135
TEL: 1-800-BE-SHARP





About the Modem

This equipment complies with Part 68 of FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

The modem jack of this equipment complies with Sub-part F of Part 68 of FCC rules.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs contact the telephone company to determine the maximum REN for the calling areas.



If the terminal equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, please contact Sharp Electronics Corp. for repair and (or) warranty information (Refer to the end of this section). If the trouble is causing harm to the telephone network, the telephone company may request you remove the equipment from the network until the problem is resolved.

The equipment cannot be used on public coin service provided by the telephone company. Connection to Party Line Service is subject to state tariffs. (Contact the state public utility commission, public service commission or corporation commission for information.)

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including fax machines, to send any message unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual. (The telephone number provided may not be a 900 number or any other number for which charges exceed local or long-distance transmission charges.) To program this information, refer to the manual of the communication software.

CAUTION: DISCONNECT TELEPHONE LINES BEFORE ACCESSING THE MODEM CARD.

Warning

This product utilizes tin-lead solder, and fluorescent lamp containing a small amount of mercury.

Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org

Copyright

It is the intent of Sharp that this product be used in full compliance with the copyright laws of the United States and that prior permission be obtained from copyright owners whenever necessary.

Product Information and Customer Assistance

For Product Information and Customer Assistance:

Call: 1-800-BE-SHARP (237-4277)

Sharp Systems of America

5901 Bolsa Avenue, Huntington Beach, CA 92647

Home Page: <http://www.sharp-business.com>

E-mail address: support@sharp-business.com



Notice for Users in Australia

Service Inquiries

Please contact your dealer for service if required or contact Sharp Corporation of Australia on 1300-135-022(toll free) for referral to your nearest Sharp authorised Service Centre. Details can be found on the warranty card inserted with the documentation.

For the latest up dates and software drivers, look on the web at www.sharp.net.au.

Copyright

Copyright may exist in material you wish to record. Copying or broadcasting such material without permission of the relevant licensees or owners of the copyright is prohibited by law.


SHARP is not in a position to authorise the copying or broadcasting of copyright materials and nothing in this OPERATION MANUAL should be implied as giving that authority.



Warning

For safety reasons, only connect equipment with a telecommunications compliance label.

This includes customer equipment previously labelled permitted or certified.



Notice for Users in the UK

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

BLUE: Neutral

BROWN: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured **BLUE** must be connected to the terminal which is marked with the letter **N** or coloured black.

The wire which is coloured **BROWN** must be connected to the terminal which is marked with the letter **L** or coloured red.

This apparatus must be protected by a 3A fuse in the mains plug or distribution board.

Copyright

Recording and playback of any material may require consent, which SHARP is unable to give. Please refer particularly to the provisions of the Copyright Act 1956, the Dramatic and Musical Performers Protection Act 1958, the Performers Protection Acts 1963 and 1972 and to any subsequent statutory enactments and orders.



Notice for Users in Europe

About the Modem

Your Sharp PC-AR series with integral modem has been designed to work with the analogue PSTN's in the following countries:

- United Kingdom
- Ireland
- Italy
- Germany
- Switzerland

If you wish to connect the equipment to the PSTN in a country not listed above, you should contact your equipment supplier for further details.

The modem is not designed for use on a shared service line or a line equipped with a call waiting facility. If you attempt to use the modem on a telephone line with call waiting, you may experience communication errors.

To maintain CTR21 network compatibility when used in the above listed countries the following setting should be observed:




Pulse dial may not be available in some countries.

Modem Name: T18N040.00

Intended Use

This is a Personal Computer with Modem for the analogue PSTN network which operates in all UK, Irish, Italian, German, Swiss networks which follow the CTR21 Standard.

If you are in doubt whether your network follows the CTR21, please contact your dealer or network operator.



This equipment complies with the requirements of the Directive 1999/5/EC.

Dieses Gerät entspricht den Anforderungen der EU-Richtlinie 1999/5/EG.

Cet appareil est conforme aux exigences de la directive 1999/5/CE.

Este aparato satisface las exigencias de las Directiva 1999/5/CE.

Quest'apparecchio è conforme ai requisiti delle direttiva 1999/5/CE.

Dit apparaat voldoet aan de eisen van de richtlijn 1999/5/EG.

Este equipamento obedece às exigências da directiva 1999/5/CE.

Η συσκευή αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών 1999/5/ΕΚ.


Denna utrustning uppfyller kraven enligt direktiv 1999/5/EC.



Dette udstyr overholder kravene i direktiv 1999/5/EF.

Dette produktet oppfyller kravene i direktiv 1999/5/EC.

Tämä laite täyttää direktiivi 1999/5/EY.





CAUTION:

TO PREVENT ELECTRICAL SHOCK, DISCONNECT THE AC CORD AND THE BATTERY BEFORE SERVICING.

CAUTION:

FOR A COMPLETE ELECTRICAL DISCONNECTION, PULL OUT THE MAIN PLUG AND THE BATTERY.

VORSICHT:

UM DIE STROMZUFUHR VOLLSTÄNDIG ZU UNTERBRECHEN, DEN NETZSTECKER HERAUSZIEHEN UND DIE BATTERIE ENTFERNEN.

ATTENTION:

POUR UN ARRET TOTAL DU SYSTEME, DECONNECTEZ LA PRISE DE COURANT SECTEUR ET LA BATTERIE.



WARNING:

FÖR TOTAL ELEKTRISK URKOPPLING, KOPPLA UR KONTAKTEN OCH TA UR BATTERIET.



PRECAUCION:

PARA UNA COMPLETA DESCONEXION ELECTRICA DESENCHUFE LA CLAVIJA DE LA RED Y LA BATERIA.

Safety Precautions

General

- Follow all cautions and instructions which may be marked on the computer.
- Except as described elsewhere in this manual, refer all servicing to qualified personnel. Immediately shut off the computer and seek servicing under the following conditions:
 - when the power cord or plug is damaged or frayed
 - if liquid has been spilled on the computer
 - if the computer has been dropped or the cabinet has been damaged


Location

- Do not expose the computer to direct sunlight.
- Try to avoid dusty environments.
- Keep the computer away from any magnetic devices and TVs.
- Keep the computer away from excessive humidity or fluids such as rain, snow, water spray, juice, coffee, steam, etc.
- Do not move the computer from an extremely cold place to an extremely warm place. A temperature difference of more than 10°C (18°F) will cause condensation inside the unit, which may cause damage.
- Do not block or cover slots or openings on the cabinet. These protect the computer from overheating.
- Care should be exercised when using on heat sensitive surfaces or your lap as the base of this computer will get hot.
- Do not smoke near your computer.

Usage

- Never push any objects of any kind into cabinet openings. They may touch dangerous voltage points or short parts that could result in fire or electrical shock.
- Turn off the computer before installing or removing a peripheral device (except when connecting USB devices, IEEE1394 devices and PC cards).
- Check the AC power cord and power connectors periodically for damage. Replace the power cord immediately if damage is found.
- Never subject your computer to sudden shocks or extreme vibration.

- Do not drop the computer nor hit it with other equipment.
- Do not scratch the surface of the LCD screen.
- Turn off the computer and disconnect the AC power cord before cleaning.

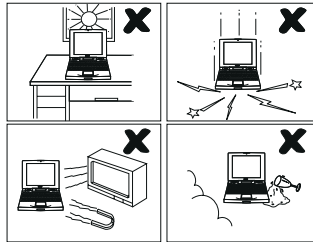

Battery Pack Precautions

CAUTION

DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.

Handling

- Never put the battery pack in a fire, as it could explode and cause injury.
- Do not attempt to open or alter the battery pack.
- Do not place the battery where it might get hotter than 60°C (140°F).
- Do not allow metal objects such as jewelry to short across the battery terminals, as it could heat up and explode.
- Do not allow liquids to come in contact with the battery pack.
- Avoid dropping the pack or other violent shock.
- Do not solder anything to the battery terminals.

Charging

- Charge the battery pack only with the AC adapter included with your computer.

Discharging




- Do not use the battery pack for any purpose other than powering the computer.



Storage

- Store the battery pack in a cool and dry place. Never allow the temperature to exceed 60°C (140°F) during storage.
- Recharge the battery pack after storage, before use.

Modem Precautions

- Never install telephone wiring during a lightning storm.
 - Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
 - Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
 - Use caution when installing or modifying telephone lines.
 - Avoid using the telephone during a lightning storm. There may be a remote risk of electric shock from lightning.
 - Do not use the telephone to report a gas leak while in the vicinity of the leak.
- 
- 
- 



About This Manual

Notice

Information in this manual is subject to change without notice and does not represent a commitment on the part of SHARP Corporation.

SHARP Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

SHARP strongly recommends that separate permanent written records be kept of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore, SHARP assumes no responsibility for data lost or otherwise rendered unusable whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired, or any other causes.

SHARP assumes no responsibility directly or indirectly, for financial losses or claims from third persons resulting from the use of this product and any of its functions, such as stolen credit card numbers, the loss of or alteration of stored data, etc.

Edition

1st Edition, May 2001.



Copyright



© 2001 SHARP Corporation

This document contains or refers to proprietary information which is protected by copyright. All rights are reserved. Copying or other reproduction of this document is prohibited without the prior written permission of SHARP Corporation.

Trademarks

Pentium is a registered trademark, and Celeron is a trademark, of Intel Corporation.

IBM and PS/2 are trademarks of International Business Machines Corporation.

Microsoft, MS-DOS, Windows, and the Windows Logo are registered trademarks of Microsoft Corporation.

All other brand and product names are trademarks or registered trademarks of their respective holders.

Recording Important Information

For future reference, please record the following information in the spaces provided below.

Model Number:

Serial Number:

Date of purchase:

Dealer's Name:

Place of purchase:

Password:

The serial number is printed on a sticker located on the bottom of the computer.

Manual Conventions

This manual uses a set of style conventions described below.

Notes and Cautions are italicized with icons:



A note icon informs you of a special technique or information that may help you perform a task or better understand a process.



A caution icon alerts you to something that may cause problems or damage to hardware, software or data.

Key Labels on the Keyboard, when referred to in the instructions, are shown in boldface:

Press **Enter** to continue.

When two or more keys are pressed simultaneously, the key labels are separated by a plus (+) sign:

Restart your computer by pressing **Ctrl+Alt+Delete**.

Sample Entries are shown in upper cases of different typeface. In the following case, press the Enter key after you type the command:

C:\>DIR A: **Enter**

Words/Texts on Screen, such as window titles or possible parameters, are italicized:

Double-click this icon to display the *Power Properties* window.

Set the item to *Enabled*.

Screens reproduced in this manual may differ slightly from the screens you see on your computer.

Section Titles in other parts of this manual are italicized:

Refer to *Adding a memory module* section in Chapter 6.

Table of Contents

Notice for Users in USA	i
Notice for Users in Australia	iv
Notice for Users in the UK	v
Notice for Users in Europe	vi
Safety Precautions.....	ix
About This Manual	xii
Recording Important Information	xiii
Manual Conventions	xiv
Table of Contents.....	xv
Overview of Computer.....	xviii

Fast Start

Installing Battery Pack	1-1
Connecting AC Power	1-2
Setting Up Windows Me.....	1-4
Turning Off Your Computer	1-5

Basic Operations

Powering the Computer	2-1
Resetting the System	2-3
Using the Keyboard	2-4
Using the Quick Start Buttons	2-7
Using the Glide Pad	2-8
Reading the Status Indicators.....	2-10
Adjusting the Display	2-11
Controlling Audio	2-13
Using the Drives	2-14
Changing a Unit in the Unit Bay.....	2-17
Using the CD-R/RW Drive	2-19
Using the Floppy Disk Drive Externally.....	2-21

Battery and Power Management

Battery Pack.....	3-1
Battery Charging.....	3-2
Battery Low Warnings.....	3-4
Battery Conditioning.....	3-6

Removing a Standard Battery Pack	3-7
Programmable Power Management.....	3-8
Power Management Hot-keys.....	3-12

Connecting Peripherals

Using Peripheral Devices	4-1
Connecting Peripherals Overview	4-2
Using PC Cards	4-3
Connecting an External Monitor	4-6
Connecting an Audio Equipment and a Microphone.....	4-8
Connecting USB Devices	4-9
Connecting a Printer.....	4-9
Connecting a Serial Device	4-10
Connecting a PS/2 Keyboard or Pointing Device.....	4-11
Connecting an IEEE 1394 Device	4-12

Communication Functions

Built-in Modem	5-1
LAN unit.....	5-4

Changing or Adding Options

Adding a Memory Module	6-1
Removing a Memory Module.....	6-2
Using the Optional Port Replicator (may not be available in some countries)	6-3

Security Features

Passwords.....	7-1
Using a Security Cable	7-4

Setup Utility

Running the Setup Utility	8-1
Main Page.....	8-3
Advanced Page	8-4
Security Page.....	8-5
Power Page.....	8-6
Boot Page	8-7
Exit Page	8-7

Appendices

Appendix 1: TroubleshootingA-1

Appendix 2: Care & MaintenanceA-8

Appendix 3: SpecificationsA-10


Index

IndexIndex-1





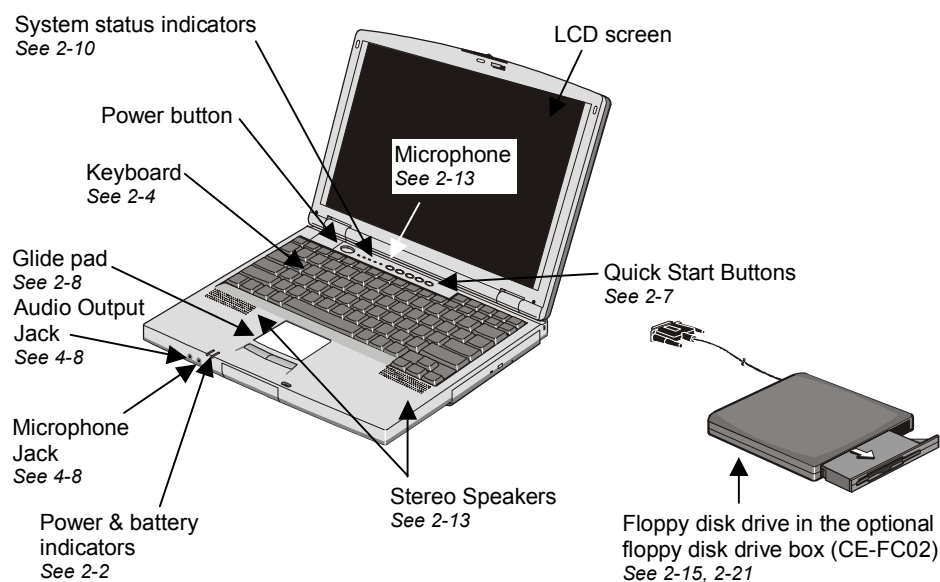


Overview of Computer

In the following diagram, the labels in *italics> refer to the chapter and page number in this manual where you can find more information. The actual appearance of your computer may be slightly different depending on the model.*


Front View




Front View Markings

System Status Indicators					Power and Battery indicators	
						
CD or Hard disk activity	Floppy disk activity	Num lock	Caps lock	Scroll lock	Power indicator	Battery indicator


Right Side View

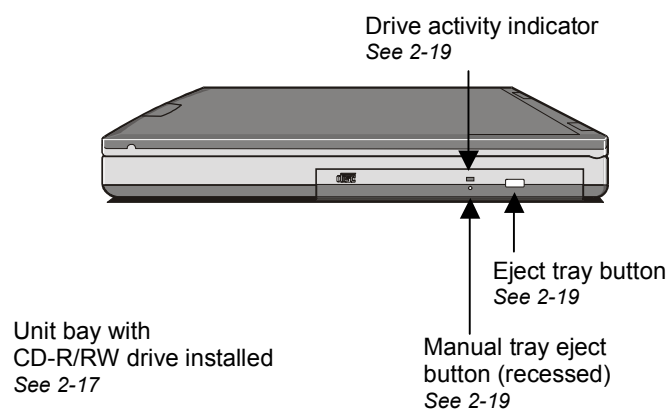


Left Side View

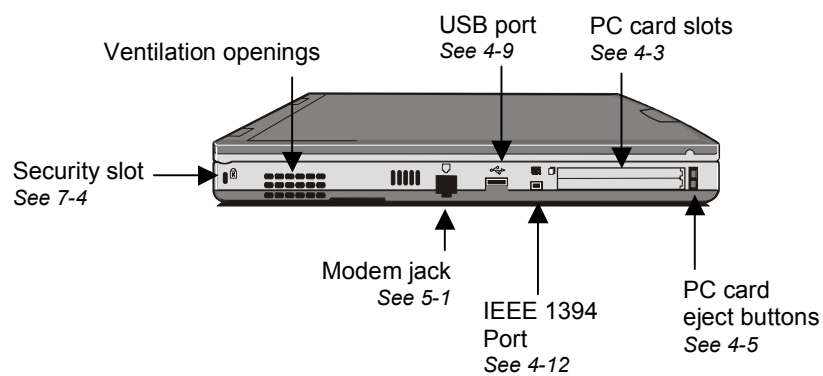

Rear View

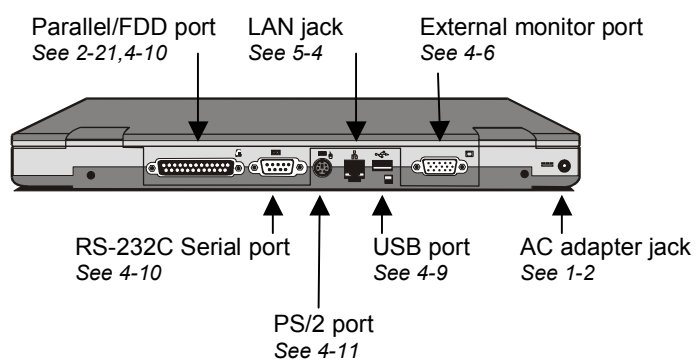

Bottom View

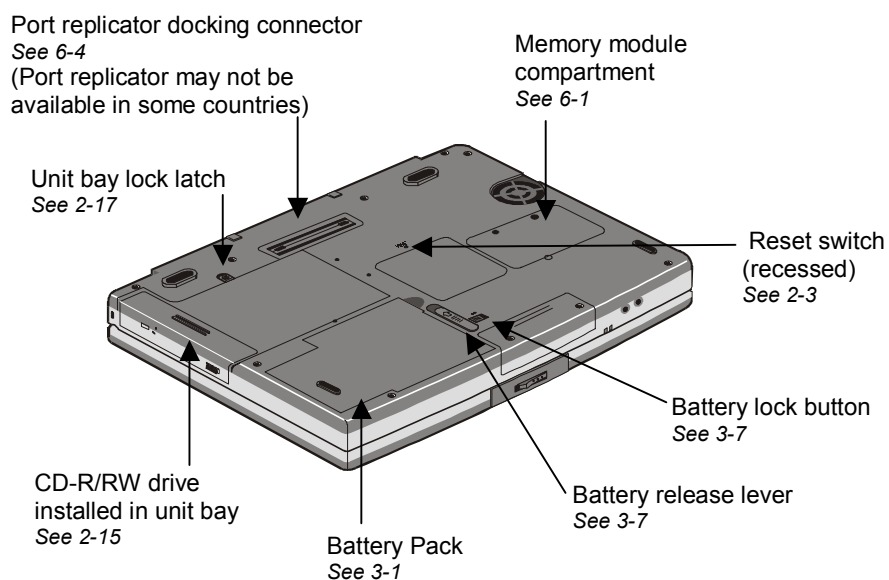

CHAPTER 1

Fast Start


1

Your new computer is ready to use as soon as you unpack it from the box. If you're familiar with computers, follow the instructions in this chapter to get your system up and running in just a few minutes. If this is your first computer, you should read through the entire Operation Manual before starting the system.

Installing Battery Pack

Before using your computer, you need to install a standard battery pack into your computer. Place your computer on a flat working surface and follow the steps below.

1. Turn over your computer on a soft flat surface.
2. Align the left side of the standard battery pack along the left side of the battery compartment and lower it into place.
3. Lower the right side of the battery all the way so that you feel the battery pack engages with the connector inside the compartment and the battery pack locks in place.
4. Slide the battery lock button to the locked position.

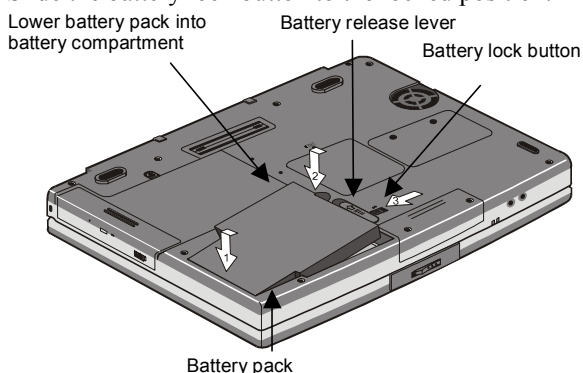

5. Turn over your computer and go to the next section.

Connecting AC Power




Run your computer using AC power, rather than battery power, for the first time. This ensures that you will not lose power while you complete the Windows setup operation.



- *Use only the AC adapter supplied with your computer, or supplied by your computer vendor. You can damage your computer if you try to use an AC adapter not approved for use with this system.*
- *When removing the AC power cord from a wall outlet, grip the plug and pull it from the socket. Never remove the power cord from the outlet by pulling on the cord. Always grip the plug.*


1

1. On the front edge of the computer, slide the display cover latch to the right and raise the cover.

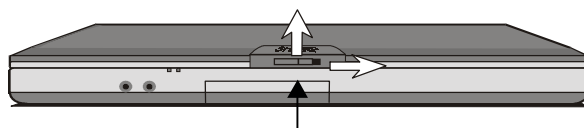


Display Cover Latch

2. Plug the cable from the AC adapter into the AC adapter jack on the rear side of the computer.

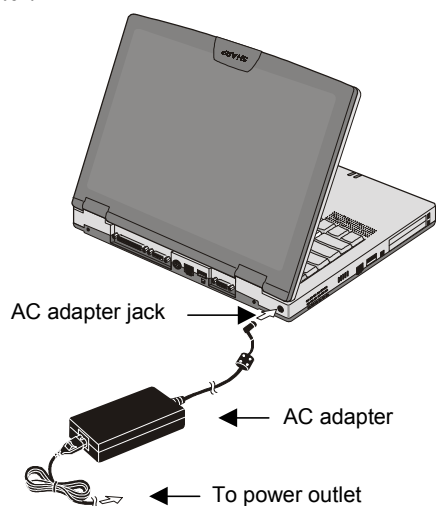

3. Connect the power cord to the AC adapter.

4. Plug the power cord into a suitable power outlet. The battery indicator turns on orange when you connect AC power.
5. Press the power button located just above the F3 button on the keyboard. The power indicator turns on green when the power is turned on.

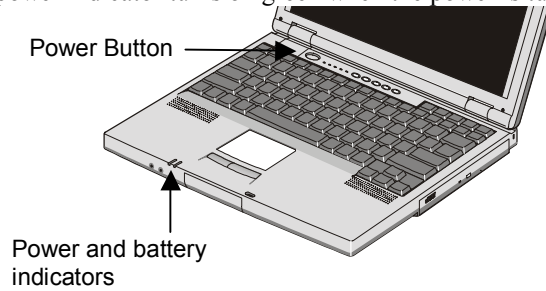

1

After a logo screen and several seconds of power-on testing, the computer loads the Windows Me operating system.

As this is the first time you have used your computer, Windows begins by running the *Windows Me Setup Wizard*.

Setting Up Windows Me

1

Windows Me is pre-installed on your computer, including the special drivers and software used by built-in components such as the audio and video system, the modem, and the PC card slot. The Windows Setup program lets you enter your personal data such as the date and time in your location, and so on. It takes just a few minutes to complete. The setup process has four steps:

- Getting started

This section configures your keyboard, language and location.

- Windows License

This section asks you to accept the Windows License Agreement.

- Registration

This section configures your modem and registers your computer.

- Final Settings

This section completes the configuration of your system



Once you start the system for the first time, be sure to complete the setup program. Windows may not display the Setup Wizard the next time you turn on the computer.

About Windows Properties Dialog Boxes

In this manual you are often asked to open a *XXX Properties* dialog box, such as the *Modems Properties* dialog box, or the *Display Properties* dialog box. These dialog boxes let you make changes to the configuration and operation of the component by clicking check boxes or selecting radio buttons. To open a property dialog box, from the *Start* menu in the taskbar at the foot of the Windows display, select *Settings - Control Panel*. When you open Control Panel for the first time, only commonly used items appear. You can open a property dialog box, or similar window, for the component or feature represented by that icon, by clicking the underlined name. If you want to show all items, click *view all Control Panel options*. You can open a property dialog box by double-clicking an icon. Some of the Properties dialog boxes that are used to configure components in your computer include:

- Display
- Modems

- Mouse
- PC Card
- Power Options
- System

Turning Off Your Computer

1

When you're finished using your computer, turn it off with the following steps:

- With a power button
Confirm that *Power Off* is selected in *When I press the power button on my computer* in *Advanced* tab of *Power Option Properties* dialog box.
- With Fn + F12 keys
To use these keys, follow the steps below:
 1. In the *Power Options Properties* dialog box, click *Advanced* tab.
 2. Select *Power Off* in the drop down menu for "*When I press the sleep button on my computer*"; then, click *Apply* and *OK*.
- From the Start menu
 1. From the *Start* menu, select *Shut Down*.
 2. In the *Shut Down Windows* dialog box, select *Shut down* from the pull-down menu, and click *OK*.




Close the cover to keep the screen and keyboard clean and protected.






If you have not saved a file, a dialog box appears prompting you to save the file.



- *Don't turn off your computer if status indicators show that the computer is still accessing data on the hard disk drive, the floppy disk drive or the CD-R/RW drive. Data may be lost or damaged.*
 - *After turning off the computer, wait at least five seconds before turning the computer back on. Turning the computer off and on without a pause can damage the system.*
-



Since this is your first session using the computer, it's a good idea to leave the AC adapter connected to the computer until the standard battery pack is fully charged. The orange battery indicator turns to green when the battery is fully charged.





CHAPTER 2


Basic Operations

This chapter describes some of the basic operations of your computer such as using the keyboard, adjusting the display, and so on.



2


Powering the Computer



You can operate your computer by using the AC adapter to connect to a suitable power outlet. You can also power the computer by the standard or an optional secondary Lithium-Ion battery pack.

Whenever you use the AC adapter to power the computer, the battery automatically begins recharging. Recharging continues whether the computer is turned on or off.


Refer to *Chapter 3 Battery and Power Management* for a full description of battery charging and related information.




Power and Battery Indicators

For proper operations, it is important to understand the operation of the power and battery indicators located on the left-side front corner.

Indicator Meanings

Green Power Indicator		
Icon	Lamp State	Status
	Turned on	Computer is turned on.
	Turned off	Computer is turned off or in System Hibernate.
	Slow blinking	Computer is in System Stand by.

Tri-color (green/red/orange) Battery Indicator			
Icon	Computer State	Lamp State	Status
	Connected to AC power	Turned on green	Battery is fully charged.
		Turned on orange	Battery is charging.
		Flashing orange	Abnormal condition – for example the battery may be installed incorrectly.
	Powered by battery	Turned on red	Battery low warning. The warning beep sounds.
		Flashing red	Critical battery warning. The warning beep sounds.
		Turned off	Battery has power.

Resetting the System

You may need to reset the system after adding hardware or software so that your computer recognizes newly installed devices or software. When the message appears after the installation, click *OK*, *Yes*, etc., to restart Windows Me. You can also restart Windows Me from the *Start* menu. Select *Shut Down*, then *Restart*.

Warm Boot (Software Reset)

If the system is locked up because of a software problem, you can reset or reboot the system by pressing the **Ctrl+Alt+Del** keys simultaneously. Press the **Ctrl+Alt+Del** keys again to restart the computer.




Resetting may cause data loss. Use the software reset only if the normal Windows Me Shut Down does not work because of software malfunction. Although resetting does not damage the system, you may lose the data you are processing.

Power Button

You can turn off the computer with the power button if the system has hardware or software problems so that you can't use the Windows *Shut Down* command or the software reset. In this case, you need to hold the power button down for more than four seconds.

Reset Switch

If all other methods fail, you can reset the computer by pressing the hardware reset switch. The hardware reset switch is in a recessed location on the base of the computer. Activate the switch with a straightened paper clip or similar implement.

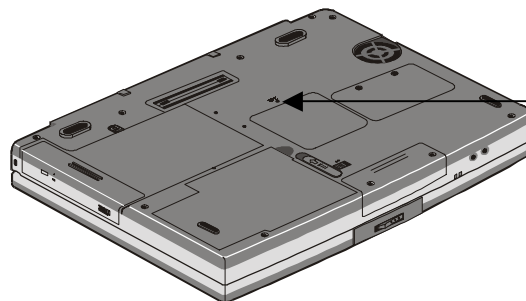

Reset switch
(recessed)




Using the Keyboard

The built-in keyboard includes all the functions that you find on a full-sized keyboard. In addition, the keyboard has built-in hot keys that you can use to control some of the functions of the computer.

The illustration below shows the location of some important keys on your keyboard.

2

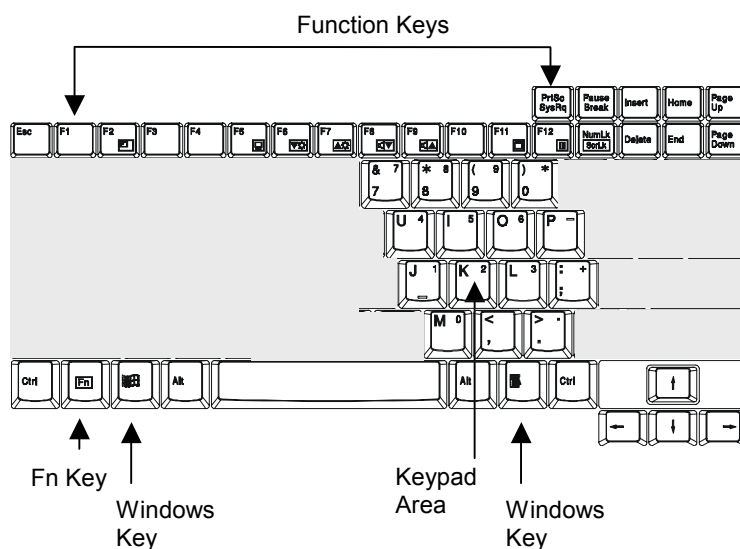

Function Keys

On their own, the operation of the function keys is usually determined by the software application that you are running. In combination with the **Fn** key they create hot-keys that you can use to control some of the computer functions. Icons embossed on the function key keycaps indicate the hot-key function.

Embedded Keypad

The numeric keypad is embedded in some of the right-side alphanumeric keys. The keypad functions are embossed in the upper right corner of the keypad keycaps. You activate the embedded numeric keypad by pressing the **Num Lk** key. Repeat the keystroke to turn off the embedded keypad.

The embedded numeric keypad will be disabled if an external PS/2 keyboard is

connected. If you want to enable it, set *NumLock* to *Enabled* in the *Main* menu of the Setup utility. See chapter 8 for more information.

Windows Keys

There are two different Windows keys as shown below.



Windows Start Key. This key opens the Windows Start menu on the taskbar. In combination with other keys it provides short cuts to some Windows functions. See Windows help for more information.




Windows Pull-down Menu key. When an item is selected and this key is pressed, it pulls down a menu if one is available. It is similar to the right click of a mouse or glide pad.


2

Fn (Function) Key Combinations

You can activate hot-key system controls and various embedded keystrokes by holding down **Fn** key and then pressing any of the keys embossed with an icon or boxed text on the lower half of the key.

Fn	+	F2	Pops up an information box in the upper left corner of the screen – see the section <i>Pop Up Information Box</i> on the next page
Fn	+	F5	Switch display between the built-in screen, an external monitor, and a simultaneous display – see <i>Chapter 4 Connecting Peripherals</i>
Fn	+	F6	Press keys to decrease screen brightness – see <i>Adjusting the Display</i> later in this chapter
Fn	+	F7	Press keys to increase screen brightness – see <i>Adjusting the Display</i> later in this chapter
Fn	+	F8	Press keys to decrease the audio volume – see <i>Controlling Audio</i> later in this chapter
Fn	+	F9	Press keys to increase the audio volume – see <i>Controlling Audio</i> later in this chapter
Fn	+	F11	Turns off the display– see <i>Adjusting the Display</i> later in this chapter
Fn	+	F12	Puts the system into System Stand by/Hibernate or power off– see <i>Programmable Power Management</i> in <i>Chapter 3</i>

Fn +  Returns the Sys Request keystroke

Fn +  Returns the Scroll Lock keystroke

Pop-Up Information Box

When you hold down the **Fn** key and press the **F2** function key, a pop-up information box appears for about five seconds in the top left corner of the display. The information box has the following information:



BAT1	NON	Standard battery pack is not installed.
	FUL	Standard battery pack is fully charged.
	XX %	Remaining capacity of standard battery pack as a percentage.
BAT2	NON	Optional battery pack is not installed.
	FUL	Optional battery pack is fully charged.
	XX %	Remaining capacity of optional battery pack as a percentage.
BIOS	Shows BIOS version number.	

Using the Quick Start Buttons

In addition to the function keys embedded on the keyboard as discussed before, your computer has five more quick start buttons located above the keyboard. The buttons are identified by icons printed above each button.


The use of each button can be user defined. From the *Start* menu, select *Programs – Quick Start Button – Configuration* to show the *Quick Start Button Utility* dialog box. You can drag-and-drop the application icons to the buttons in the dialog box or right-click the button to change the settings. See online help for more details.

Default assignments are:

Button	Button appearing in help	System Function
I 	S1	Opens Windows Internet Explorer browser.
II 	S2	Opens Microsoft Outlook Express.
III	S3	Opens Easy CD Creator.
IV	S4	Opens PhotoSuite III SE.
V	S5	Closes an activated application.

Using the Glide Pad

Your computer has a built-in pointing device called a glide pad. The glide pad consists of the glide pad surface, a left button and a right button.

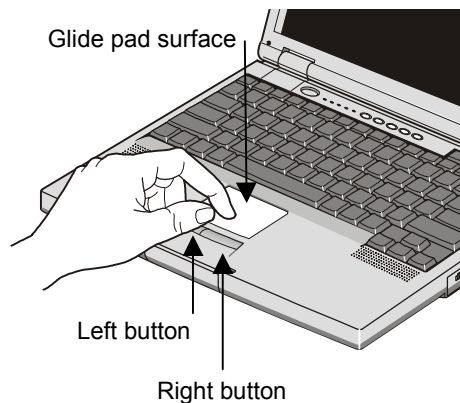

Using the Glide Pad

When you slide your finger across the glide pad surface, the pointer on the screen moves in the same direction as your fingertip.

Clicking and double-clicking

To click or double-click objects, you can use the left button, just as you do when using a mouse. You can also emulate a left button click or double-click by tapping once or twice with your fingertip on the glide pad surface. Clicking the right button pulls down a menu if one is available. This is the same function as the right click of a mouse.

Drag and Drop

You can drag and drop objects on the Windows desktop as follows:

1. Position the pointer over the object.
2. Press and hold down the left button.
3. Drag the object by moving your fingertip over the glide pad surface.
4. Drop the object into place by releasing the left button.



- Do not use a pointed object, such as a pen or pencil to operate the glide pad. You might scratch or damage the surface.
- Do not operate the glide pad with a moist finger. This may cause the glide pad to operate incorrectly.






Changing the Glide Pad Configuration

You can change the way the glide pad operates in the *Mouse Properties* dialog box. From Windows *Start* menu, select *Settings - Control Panel* and double-click *Mouse* to open up the *Mouse Properties* dialog box. Click on any of the tabs; Buttons, or Pointers, etc. Use the checkboxes, drop down menus, and so on, to configure the glide pad so that it operates to your satisfaction.

Reading the Status Indicators

As well as the power and battery indicators discussed before, your computer has five more status indicators located above the keyboard between the power button and the quick start buttons. The indicators are identified by icons printed above each lamp.

2

Indicator Icon	System Status
	This indicator turns on when your computer is reading or writing to the hard disk drive or a CD in the CD-R/RW drive.
	This indicator turns on when your computer is reading or writing to a disk in the floppy disk drive.
	This indicator turns on when the Num Lock key has been pressed and the embedded numeric keypad is activated.
	This indicator turns on when the Caps Lock key has been pressed and the keyboard is in Caps Lock mode.
	This indicator turns on when Fn and the Scroll Lock key have been pressed and the cursor arrow keys are in scroll lock mode.

Adjusting the Display

The most important adjustment you can make to the display is to set it to the best viewing angle. The display contrast decreases if you look at it from a wide angle above or below, or from side to side.

Changing the Brightness

Change the screen brightness by using the **Fn+F6** and **Fn+F7** hot keys.

Fn	+	F6	Press keys to decrease screen brightness
Fn	+	F7	Press keys to increase screen brightness

When you press the screen brightness hot keys to adjust the display, a pop-up screen brightness meter appears in the upper left corner of the display. You can use the pop-up meter as a visual guide to set the screen brightness.



Decreasing the screen brightness is an effective way of reducing the power consumption of your computer when you are operating the computer on battery power.

Turning off the Display

You might want to turn off the display when you are not using your computer for short periods. This can help reduce power consumption. Use the display power down hot keys **Fn+F11**.

Fn	+	F11	Turns off the display
-----------	----------	------------	-----------------------

You can turn the display back on by pressing any key on the keyboard or **Fn+F11** keys again.

Changing the Display Properties

The Windows *Display Properties* dialog box lets you make many different kinds of changes to the appearance of the screen under Windows.

Place the screen pointer on any empty area of the Windows desktop and click the right glide pad button to pull down a menu. Click on *Properties* to open the *Display Properties* dialog box. Use the tabs on the *Display Properties* dialog box to make adjustments to the following display properties: Background, Screen Saver, Appearance, Effects, Web, and Settings, etc.

2

Using the Settings Tab

The Settings tab lets you make changes to the resolution and color depth of the display.

The standard display setting for your computer is a resolution of 1400 x 1050 pixels. If you select a smaller resolution, the image on the built-in display will stretch to occupy the whole screen. This might cause the image to be somewhat deformed. If you select a larger resolution, the display will extend beyond the edges of the built-in screen. You can scroll the enlarged display by moving the screen pointer to the edges of the display.


The standard color depth for your computer is High Color (16bit). You might need to change down to a lower color depth in order to run some computer programs or games.

Advanced Settings and Switching the Display

Your computer has hot keys to switch the display when you are connected to an external monitor. In the *Display Properties* dialog box, the *Advanced* settings button in the *Settings* tab window has other options for switching the display. Turn to *Connecting an External Monitor* in *Chapter 4* for more information on this topic.

Controlling Audio

Your computer is installed with built-in stereo speakers and a built-in monaural microphone. You can use Windows entertainment accessories to play CDs, record messages and sound, play computer games with sound tracks, and so on.

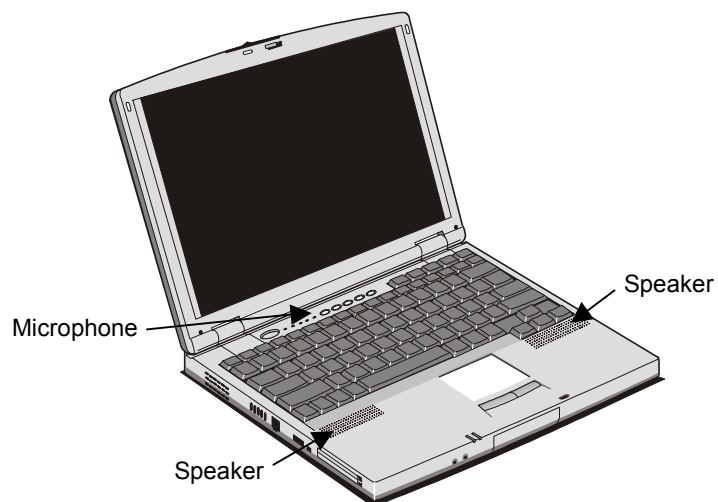

2

You can control the audio volume by using the audio hot keys **Fn+F8** and **Fn+F9**.

Fn	+	F8	Press keys to decrease the audio volume
Fn	+	F9	Press keys to increase the audio volume

You can use the Windows volume control meter to visually judge the audio level setting, too.

Using the Drives

2

Your computer has three different drives; the internal hard disk drive, the CD-R/RW drive unit, and the floppy disk drive unit. The CD-R/RW and floppy disk drive unit can be installed in the unit bay on the right side of the computer. If you want to use the CD-R/RW and the floppy disk drive at the same time, you can install the CD-R/RW drive in the unit bay, and use the floppy disk drive as an external component connected to your computer through the parallel/FDD port on the back of the computer. The floppy disk drive has an optional box (CE-FC02) to use the drive externally.

Drive Properties

You can learn about the properties of the drives by double-clicking the *My Computer* icon on the Windows desktop. In the *My Computer* window, right click on any of the drives and select *Properties* from the drop down menu to display the capacity of the drive, and other information.

Hard disk drive

Your computer has a high-capacity hard disk drive installed internally. Your computer identifies the hard disk drive as drive C: and D:. The hard disk is pre-installed with the Windows Me operating system and the software and drivers required to run all the components of your computer.

When you install software applications and use them to create files and documents, you store them in folders on the hard disk drive. You can use *Windows Explorer* to create new folders and sub-folders and navigate and maintain the folders and files that are stored on the hard disk.

If your hard disk drive ever gets corrupted, you can use the Recovery CD to recreate the state of the hard disk drive when it was first shipped. However, you will lose any files that you have subsequently created unless you have backed them up to another storage device.



For information on using the Recovery CD, see Re-installation Instructions.

CD-R/RW drive

The CD-R/RW drive lets you read information from CDs. You can also write information to CD-R/RW disks using the installed applications called *Easy CD Creator* or *Direct CD*. For more details, see online help of the applications. Your computer identifies the CD-R/RW drive as drive R:. Many software applications and reference works are shipped on CDs because they store over 600 MB of data.

Using Windows entertainment accessories, you can also use the CD-R/RW drive to play CD-Audio disks and Video CD disks.



While you write information to CD-R/RW:

- *Close any other applications except those necessary for writing information.*
- *Connect AC adapter to your computer.*
- *Do not enter System Standby/Hibernate.*
- *Disable the screen saver.*
- *Do not touch keyboard or buttons on the computer.*

2

Floppy Disk Drive

The floppy disk drive is a useful tool because practically all computers can read and write to 3.5-inch floppy disks with a storage capacity of 720K or 1.44 MB. Your computer identifies the floppy disk drive as drive A:.




When you need to store a file, or transfer a file to a friend or colleague's computer, it's very convenient to use a floppy disk.

Handling Floppy Disks

- Do not open the shutter and touch the disk inside; otherwise, you will not be able to read or write data to the disk.
- Do not place floppy disks near magnets or heat source, in direct sunlight or in a dusty place, etc.
- Never subject a disk to sudden shocks or extreme vibration. Do not drop, bend, or place heavy objects on a disk.
- Do not spill liquid onto a disk.



- *Always insert a floppy disk straight into the floppy disk drive.*
 - *When inserting the disk, make sure it is not upside down.*
 - *Do not use excessive force when inserting the floppy disk. If you have difficulty inserting or removing disks, seek the assistance of an authorized service technician.*
-

- 
- 
- 
-
- *Do not touch the disk while reading/writing data. It may cause malfunction of the computer and the drive.*
 - *Before removing the floppy disk, make sure the indicator of the floppy disk drive unit is not lit.*
-




2


Changing a Unit in the Unit Bay

The Unit bay on the right side of your computer can be installed with a CD-R/RW drive, a floppy disk drive or an optional DVD-ROM drive or an optional secondary battery pack. Your computer supports hot-swap, so you can change units without turning off your computer.

Change the units in the bay by following the steps below.

1. Remove any floppy disks or CDs from the drive if currently inserted.
2. Click  icon on the taskbar; then *Change device in Swappable Bay (xxxxx)*. Xxxx is the unit name currently installed in the unit bay.
3. Read the message in *BaySwap* window carefully (Do not click *OK*).
4. Close the upper cover of the computer; then turn it over and locate the unit bay lock latch.
5. Slide the latch towards the rear edge of the computer and hold.

2

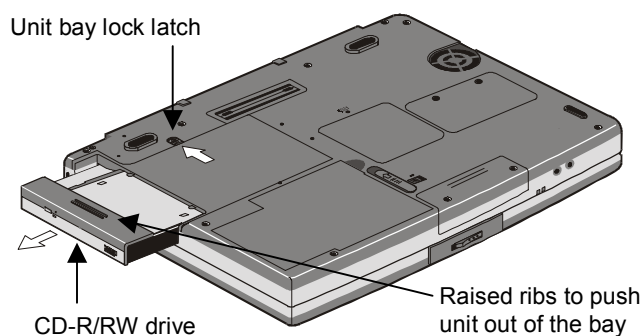

6. Slide the unit out by pushing on the raised ribs on the bottom of the unit. You can release the lock latch once the unit is partly removed from the unit bay. Pull the unit all the way out of the unit bay.



Do not set your computer to enter System Stand by/Hibernate when the display cover is closed. Removing the unit while the system is entering System Stand by/Hibernate may cause malfunction.

7. Position the replacement unit correctly and insert it into the unit bay. Push it all the way in so that you feel the connector on the rear edge of the unit engage

with the connector inside the bay. Verify that the unit bay lock latch is in the locked position.

8. Turn your computer over and open the upper cover.
9. Click *OK* in *BaySwap* window. Your computer automatically registers and configures the new unit.



For information on using an optional secondary battery pack, see Battery and Power Management of chapter 3.

2




When removing an optional secondary battery, make sure the internal standard battery has power remaining, or connect your computer to AC power; otherwise your computer will be shut down and data may be lost.

Using the CD-R/RW Drive

If the CD-R/RW drive is installed in the unit bay, use it as follows.

1. Locate and identify the three features on the front of the CD-R/RW drive; the eject tray button, the recessed manual tray eject button, and the drive activity indicator.

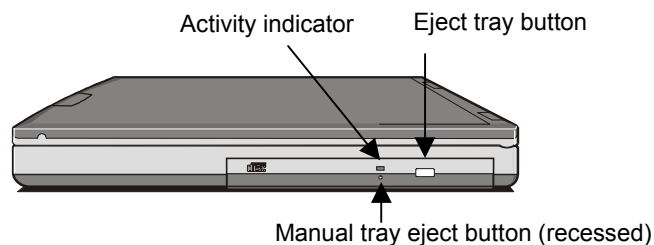

2

2. Press the eject tray button to eject the tray for the CDs.
3. Place the CD on the tray so that the central hole in the CD fits over the spindle in the disk tray. Don't apply excess downward force on the disk tray.
4. Press the tray back into the CD-R/RW drive until it clicks closed.
5. To remove a CD, wait until the activity indicator shows that the disk in the drive is not being read. Press the eject tray button and remove the disk from the tray.



If you need to remove a CD from the drive while the computer is turned off, or while the drive is removed from the computer, insert the end of a paper clip, or similar utensil, into the manual tray eject button. This unlocks the tray and lets you pull the tray all the way open to remove the CD.

Handling CDs

- Do not write on either side of the disc, particularly the non-label side. Data is read from the non-label side. Do not mark this surface.
- Keep your discs away from direct sunlight, heat and excessive moisture.
- Always hold the CDs by the edges. Fingerprints, dirt or water on the CDs can cause noise or mistracking. If a CD is dirty or does not play properly, clean it with a soft, dry cloth, wiping straight out from the center, along the radius.



- *When inserting a CD, do not use force.*
- *Make sure the CD is correctly inserted into the tray, then close the tray.*
- *Do not leave the tray open. Also, avoid touching the lens in the tray. If the lens becomes dirty, the CD-R/RW drive may malfunction.*
- *Do not wipe the lens with materials with rough surface (such as paper towels). Instead, use a cotton swab to gently wipe the lens.*
- *Maximum output and wavelength of the laser: 108mW, 785nm*

2

CLASS 1 LASER PRODUCT

LASER KLASSE 1

FDA regulations require the following statement for all laser-based devices:


“Caution, Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.”






Using the Floppy Disk Drive Externally

To use the floppy disk drive as an external drive, follow the steps below:

1. Install the floppy disk drive into the optional floppy disk drive box(CE-FC02).
Simply slide the drive in until it clicks into place.
2. Shut down your computer.
3. Plug the cable from the floppy disk drive box into the parallel/FDD port on the rear edge of the computer.
4. Restart your computer.

To remove the floppy disk drive from the floppy disk drive box, release the lock latch on the base of the cover and pull the floppy disk drive out of the box.

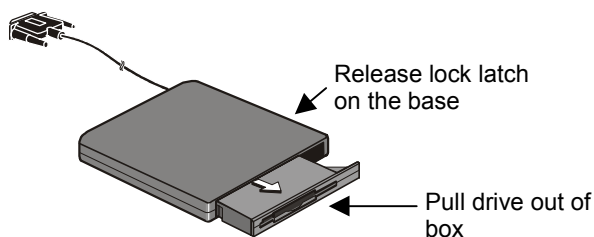



CHAPTER 3

Battery and Power Management

This chapter explains how to charge your computer's standard or an optional secondary battery and how to keep them in good condition. It also explains how you can use the power management features to maximize battery life while operating under battery power.

Battery Pack

3

The removable battery pack is installed in the base of the computer. If you have an optional secondary battery pack (Model CE-BL11), you can extend the operating time of your computer when there is no AC power available. See *Changing a Unit in the Unit Bay* of chapter 2 for installing an optional secondary battery pack.

The length of time you can run your computer using a fully-charged battery pack is variable. If you are using applications that make heavy use of peripheral items such as the hard disk drive or the CD-R/RW drive, the battery discharges in a shorter time. If your battery is older and has already been through many cycles of charging and discharging, it stores less charge. Finally, the temperature and environment can influence battery life.

After you have operated your computer using battery power only, you will have a good idea of how long it takes a fully-charged battery to discharge. Use this time as a standard. If the battery begins discharging in a significantly shorter time, and you are not using your computer in a different manner, or have not changed the power management settings, it may indicate a battery problem.



After repeated cycles of charging and discharging, all batteries store less charge. Expect a gradual decrease in battery life after a few hundred cycles of charging and discharging. When battery life becomes too short, ask your local dealer for replacement standard battery pack.

Battery Charging

The battery packs begin charging anytime your computer is connected to AC power using the AC adapter.

If the standard battery pack is fully discharged and your computer is turned off or in System hibernate, it fully recharges in about 2.5 hours.

If the standard battery pack is fully discharged and your computer is turned on, the charging time may vary depending on usage.

3

If an optional secondary battery pack is installed into the unit bay, it will be charged together with the standard battery pack. In this case, the standard battery pack is charged first; then, an optional secondary battery pack is charged.

If the standard and an optional secondary battery packs are fully discharged and your computer is turned off or in System hibernate, they fully recharge in about 5 hours.

If the standard and an optional secondary battery packs are fully discharged and your computer is turned on, the charging time may vary depending on usage.




Your computer monitors the internal temperature of the unit. If the unit gets critically hot, battery charging (which generates some heat) is interrupted until the temperature decreases. This can account for slightly longer battery charging times.

You can track the charging status of the battery pack using the battery indicator located next to the power indicator. When the battery indicator is turned on orange, the battery pack is being charged. When the battery indicator is turned on green, the battery pack is fully charged.

Or you can use the battery charge indicator located on the corner of the standard battery pack. There are 5 indicator lamps, and if you press the button under lamps, they will show you the charging status. If all 5 lamps are lit, the battery is fully charged. If only an orange lamp is lit, it will discharge soon.

An optional secondary battery pack also has the battery charge indicator. If you press a white circle, lamps will show you the charging status. The charging status is same as that of the standard battery.


Battery Indicator Status					Capacity Remaining
<div><div>Orange</div><div><div></div><div></div><div></div><div></div><div></div></div><div><div>Green</div><div></div><div></div><div></div><div></div></div></div> <div>All On</div>	80%~100%				
<div><div>Orange</div><div><div></div><div></div><div></div><div></div><div></div></div><div><div>Green</div><div></div><div></div><div></div><div></div></div></div> <div>Four On</div>	60%~79%				
<div><div>Orange</div><div><div></div><div></div><div></div><div></div><div></div></div><div><div>Green</div><div></div><div></div><div></div><div></div></div></div> <div>Three On</div>	40%~59%				
<div><div>Orange</div><div><div></div><div></div><div></div><div></div><div></div></div><div><div>Green</div><div></div><div></div><div></div><div></div></div></div> <div>Two On</div>	20%~39%				
<div><div>Orange</div><div><div></div><div></div><div></div><div></div><div></div></div><div><div>Green</div><div></div><div></div><div></div><div></div></div></div> <div>Only Orange On</div>	11%~19%				
<div><div>Orange</div><div><div></div><div></div><div></div><div></div><div></div></div><div><div>Green</div><div></div><div></div><div></div><div></div></div></div> <div>Orange Blinking</div>	Under 10%				
<div><div>Orange</div><div><div></div><div></div><div></div><div></div><div></div></div><div><div>Green</div><div></div><div></div><div></div><div></div></div></div> <div>All Off</div>	0%(Empty)				

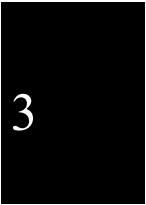

Battery Low Warnings

The battery low warnings are set in Windows *Power Options Properties* dialog box.

Click *Alarms* tab, and you can set a Low battery alarm and a Critical battery alarm. The alarms are triggered when battery charge decreases to a user-defined percentage set.

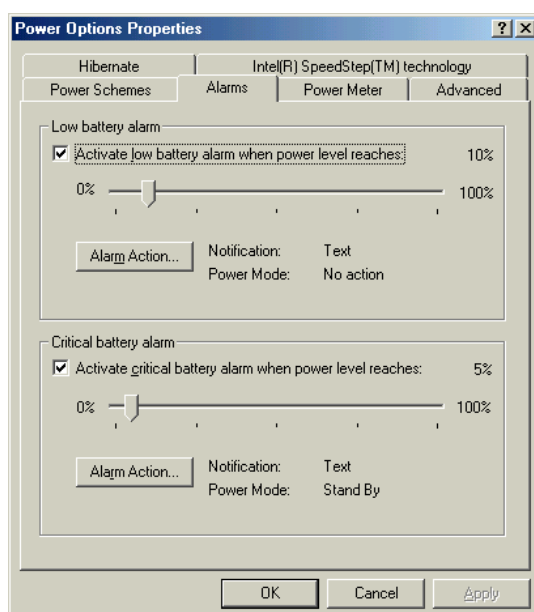

We recommend that you set the Low battery alarm to about 10% and the Critical battery alarm to about 3-5%. The battery charge percentages are not extremely accurate and the power consumption of different applications are not identical, so it's important to allow for a margin of error. The primary aim is to save your data before the system shuts down when the battery is fully discharged.

Following the battery low alarms that you have set, we recommend that you save your work and shut down your computer when there is about 5% of battery charge remaining. In this condition, you can be confident that you have enough power to power the hard disk drive, CD-R/RW drive or floppy disk drive and save even the longest of files.

After you have shut down your computer in a low battery condition, don't try to restart the computer until you have replaced the discharged battery with a charged battery pack, or connected the computer to a power outlet using the AC adapter.

Battery Conditioning

If you feel that the battery charge meter in Windows is becoming inaccurate, we recommend that you "condition" the battery using the following steps below.



The following procedure helps to keep your battery in good condition so we suggest that you carry out the procedure each time you complete about 30 cycles of charging and discharging the battery pack.

3


1. Connect your computer to a power outlet with the AC adapter. Leave the computer connected to the power outlet until the battery indicator turns green to indicate that the battery is fully charged.
2. Turn on the computer.
3. When the message `<ESC> for Diagnostic screen, <F2> for Setup` appears, press **F2** to enter the setup utility.
4. In the *Power* page of the setup utility, highlight the item *Power Management Control*. Press the **Space bar** to change the value of this item to *Disabled*.
5. Go to the *Exit* page of the setup utility, highlight *Exit Saving Changes* and press **Enter**. Press **Enter** again when the dialog asks for confirmation.
6. When the system restarts and the Sharp logo and prompt appear, press **F2** again to enter the setup utility.
7. Disconnect the AC adapter from the computer and leave the computer turned on and the setup utility open until the battery completely discharges and the computer shuts down automatically.
8. Connect the AC adapter to the computer and leave it connected until the battery is fully charged.
9. After you have completed the conditioning procedure, return the power management setting in the setup utility to the original state.

The whole conditioning process will take about 9 hours if only a standard battery pack is installed.

If an optional secondary battery pack is installed, it will be conditioned together with the standard battery pack. In this case, it will take about 16 hours to complete the process.

Removing a Standard Battery Pack

1. Turn off the computer and close the display cover.
2. Turn the computer over and lay on a soft surface.
3. On the base of the computer, locate the battery pack and the battery lock button.
4. Slide the battery lock button to the unlocked position.

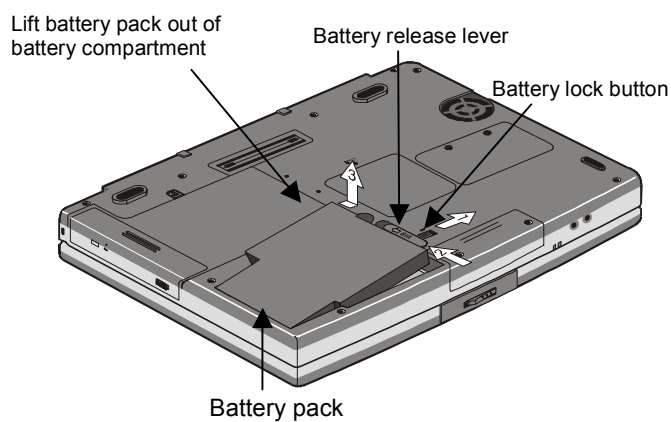

5. Slide the battery release lever towards the back and hold it, this will release and lift the right edge of the battery pack out of the compartment.
6. Grab the edge of the battery pack and lift it out of the battery compartment. You can release the battery release lever once the battery pack is partially removed.
7. Remove the battery completely.



For installing a standard battery pack, see Installing Battery pack of chapter 1.

Programmable Power Management

Your computer supports ACPI (Advanced Configuration and Power management Interface) which is a powerful feature of the Windows Me operating system. Therefore you can select and control all the power management of your computer through the Windows *Power Options Properties* application in Windows *Control Panel*.




If you ever run your computer using an operating system that does not have ACPI, you can use the power management features that are built into the system hardware. You can select and control these routines using the setup utility. See Power Page in Chapter 8 for more information.

3



Running the Power Options properties Application

To show the *Power Options Properties* dialog box:

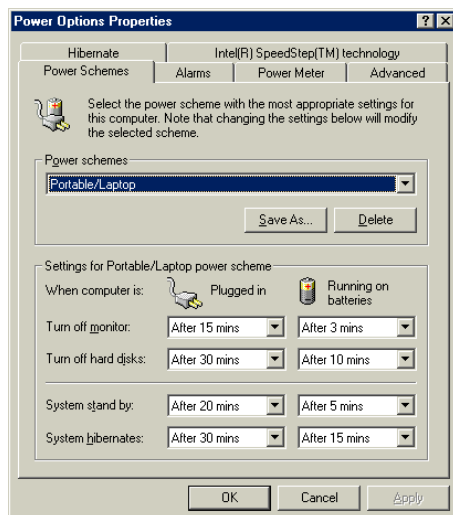1. From the *Start* menu, select *Settings - Control Panel*.
2. Double-click *Power Options* to display the *Power Options Properties* window.
If you cannot find *Power Options*, click *view all Control Panel options* to show the icon.



Intel® SpeedStep™ Technology

You can control processor core speed to reduce the power consumption with Intel® Speed Step™ technology. Right-click  or  icon and select *Adjust Properties* to change the performance.

Setting Power Schemes

The *Power Options Properties* dialog box opens on the *Power Schemes* tab. You can use this dialog box to create and name different Power Schemes. For each Power Scheme, you can use the drop down menus to set the timeouts for *Turn off monitor*, *Turn off hard disks*, *System stand by*, or *System Hibernate*.

A timeout defines the length of time a component remains inactive before it is automatically turned off. For example, if you set the *System stand by* to 10 minutes, your computer will automatically enter System standby mode if it is inactive for 10 minutes. If you set *Turn off monitor* to 5 minutes, the display will turn off automatically if there is no video activity for 5 minutes.

You can create one set of timeouts that function when the computer is connected to a power outlet with the AC adapter, and another set of timeouts that function when the computer is running on battery power.

About System Stand by Mode

In System Stand by mode, practically all devices are powered down with the exception of the system memory, the video memory, the PC Card controller and the system realtime clock, and the current condition of the computer is stored in RAM.

In this mode, the computer remains active but with the minimum possible power consumption. You can return to full power by operating the computer again.

About System Hibernate Mode

System Hibernate mode is really another way of turning off your computer. When your computer enters System Hibernate mode, the contents of your computer's memory are copied to your hard disk drive as a file. When the contents of the memory have been safely stored to disk, your computer turns off. The next time the computer resumes from System Hibernate, the file on the hard disk is quickly read into memory. In just a few moments your computer appears exactly as it was when your computer enters System Hibernate mode last time.

Supporting System Hibernate

To support System Hibernate mode, make sure *Enable hibernate support* is checked in *Hibernate* tab of *Power Options Properties* dialog box.

Entering System Stand by/Hibernate

Your computer will enter System Stand by/Hibernate under several sets of conditions as follows:

- The *System stand by/System hibernates* timeout in the *Power Options Properties* dialog box elapses.
- Hot keys **Fn+F12** are pressed.
This functions if you perform the following:
 1. In the *Power Options Properties* dialog box, select *Advanced* tab.
 2. Select *Hibernate* or *Stand By* in *When I press the sleep button on my computer*.
 3. Click *Apply* and *OK*.
- The display cover is closed when no external monitor is connected to the computer.
This functions if you perform the following:
 1. In the *Power Options Properties* dialog box, select *Advanced* tab.
 2. Select *Hibernate* or *Stand By* in *When I close the lid of my portable computer*.
 3. Click *Apply* and *OK*.
- The power button is pressed.
This functions if you perform the following:
 1. In the *Power Options properties* dialog box, select *Advanced* tab.
 2. Select *Hibernate* or *Stand By* in *When I press the power button on my computer*.
 3. Click *Apply* and *OK*.
- You select *Stand by* or *Hibernate* in *Shut Down Windows* dialog box.

Resuming from System Stand by/Hibernate

Resuming from System Stand by

Your computer will resume from System Stand by if you operate the computer again.

Resuming from System Hibernate

Your computer will resume from System Hibernate if the power button is pressed.

Power Meter

Click on the *Power Meter* tab of the *Power Options Properties* window to show the battery charge meter. You can also display this information by clicking on the battery meter icon displayed on the right side of the Windows taskbar.

Advanced Options

Click on the *Advanced* tab of the *Power Options Properties* window to display the advanced options.

Using the check boxes you can turn the battery icon on the taskbar on or off, and you can install password protection for resuming the system from System Standby/System hibernates.

3

Power Management Hot-keys

In addition to the programmable power management, you can use the power management hot-keys to directly control the power consumption of your computer with just a keystroke.

Fn	+	F11	Turns off the display
Fn	+	F12	Puts the system into System Stand by/Hibernate or powered off

3



Note that you can also reduce power consumption by decreasing the screen brightness and decreasing the audio volume using the brightness and volume hot-keys.

CHAPTER 4

Connecting Peripherals

This chapter describes how to connect your computer to peripheral devices using the input/output ports on the edges of your computer. To ensure correct operation, follow the instructions given in this chapter, and always read the instructions given with the peripheral device as well.

Using Peripheral Devices

You can connect and use the peripheral devices shown in the overview on the following page. As these devices are manufactured by a third-party, it is a good idea to verify that they operate correctly when connected to your computer before you purchase them. Your computer vendor can probably recommend reliable brands that are compatible with your system.




- *Be sure to turn off the computer and the peripheral device before connecting them (except when connecting USB devices, IEEE 1394 devices or inserting PC cards).*
- *Some devices have to be turned on after the computer is turned on.*
- *Some devices require special drivers or other software before they operate correctly.*

Connecting Peripheral Guidelines

1. Turn off the computer and the peripheral device (except when connecting a USB device, IEEE 1394 device, or inserting a PC card).
2. Connect the cable from the peripheral device into the appropriate I/O port of the computer. If the cable has locking screws, tighten them.
3. Turn on the peripheral device and then turn on the computer.

Connecting Peripherals Overview

The illustration below shows many of the peripheral devices that can be connected to your computer.

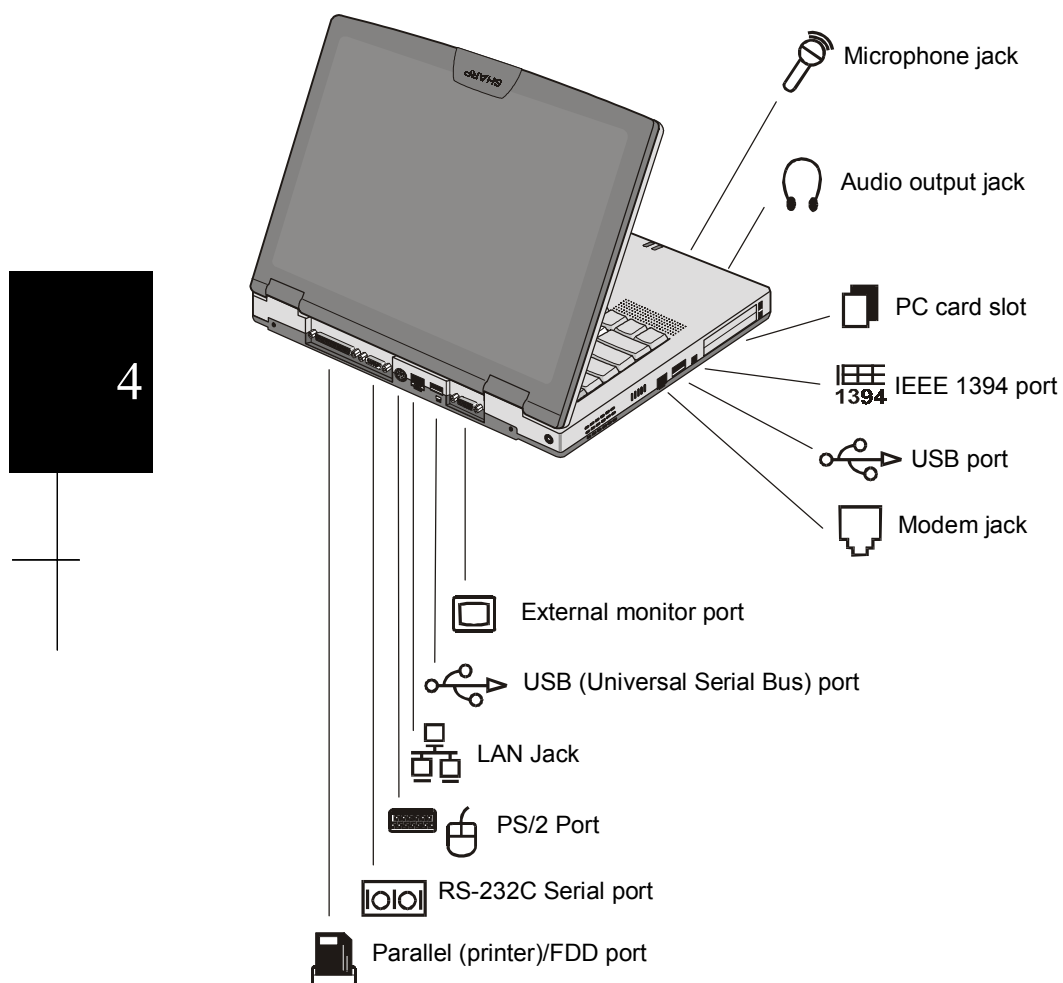

For information on using the modem or LAN jack, see the following chapter
Chapter 5 Communication Functions.

Using PC Cards

Your computer has PC card slots on the left side. The PC card slots accept type-I, type-II, and type-III PC cards. It also supports the 32-bit CardBus standard compliant PC card. You can insert a combination of two type-I or type-II cards simultaneously. Because of the thickness of a type-III card, you can only use a single type-III card at a time.

You can use PC cards to add many different features to your computer such as a SCSI host adapter, and so on.



If you use a PC card to add a feature that already exists on your computer, such as a fax/modem, this may cause problems as the devices compete for limited resources.




Some PC cards can draw power from the system even when they are not being used. If you are operating your computer on battery power, we recommend that you remove PC cards from the PC card slot when you are not using them.

4

Inserting a PC Card

1. Hold the card with the label side up. Most cards are marked with an arrow to show which of the narrow edges inserts into the slot.
2. Insert the card into an empty slot and press it firmly so that it engages with the connector inside the slot. The PC card edge should be flush with the side of the computer when it is fully inserted.

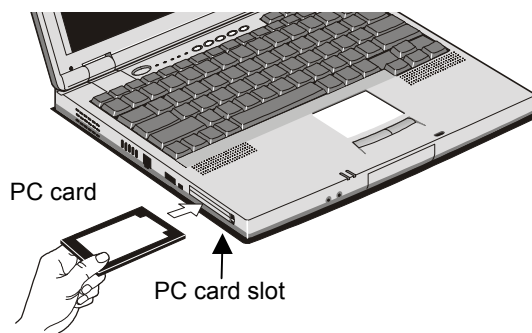



If you plan on using a type-III PC card, all other cards must be removed first. You can only use a single type-III card at a time.


Configuring a PC Card

The Windows operating system immediately detects the insertion of the card.

If Windows recognizes the card, it automatically loads any drivers required by the card, and allocates any resources that are required by the card. Windows usually displays a *New Hardware Found* dialog box that tells you that the card has been successfully configured. The next time you use the card, Windows configures it automatically without interruption.

4

If Windows cannot recognize the card, or lacks the drivers or software to run the card, an *Add New Hardware Wizard* appears. Follow the prompts of the series of dialog boxes generated by the *Add New Hardware Wizard*. If a dialog box asks for the location of drivers or software, you can click the *Have Disk* button and browse to the location of the software. The next time you use the card, Windows configures it automatically without interruption.


When a card is inserted, the *Unplug or Eject Hardware* icon () appears on the taskbar. You can double click the icon to open the *Unplug or Eject Hardware* dialog box and see the status of the PC card.



If you have installed a storage-type memory card, your computer allocates a drive name to the card. Check the My Computer window to identify the card's drive name.

Removing a PC Card

1. Click the *Unplug or Eject Hardware* icon in the taskbar.
2. Click *Stop xxxxx*. Xxxx is your card name.
3. Click *OK* in *Safe To Remove Hardware* dialog box.
4. Push the eject button so that it sticks out from the side of the computer.
5. Push the eject card button straight into the chassis to force the card from the slot.

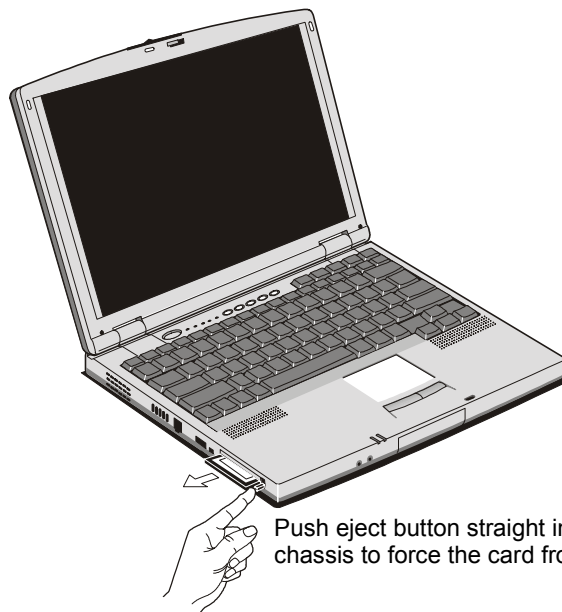

Push eject button straight into the chassis to force the card from the slot

6. Remove the card; then, push the eject card button all the way into the computer chassis for safekeeping.


Connecting an External Monitor

You can connect an external monitor to your computer and then display the video output to either the built-in screen, the external monitor, or a simultaneous display to both the monitor and the LCD screen. To display images on both displays simultaneously, use the 1280 x 1024 resolution.

Connecting the monitor

1. Place the monitor in a suitable location and plug it into a power outlet.
2. Connect the video cable from the monitor to the 15-pin external monitor port on the rear edge of your computer.

4



External monitor port


3. Turn on the monitor and turn on the computer.
4. The video output appears on both the built-in screen and the external monitor. See the following section for information on switching the display.

Switching the Display

You can switch the display using the *Display Properties* dialog box or the hot keys **Fn+F5**. We recommend that you use the *Display Properties* dialog box initially so that you can make adjustments to the monitor resolution and refresh rate if required.


Switching with Software

1. Right click on an empty part of the Windows desktop to pull down a menu and click on *Properties* to open the *Display Properties* dialog box.
2. Click on the *Settings* tab and then click on the *Advanced* button
3. Click on the *Displays* tab to display the Properties window illustrated next page.

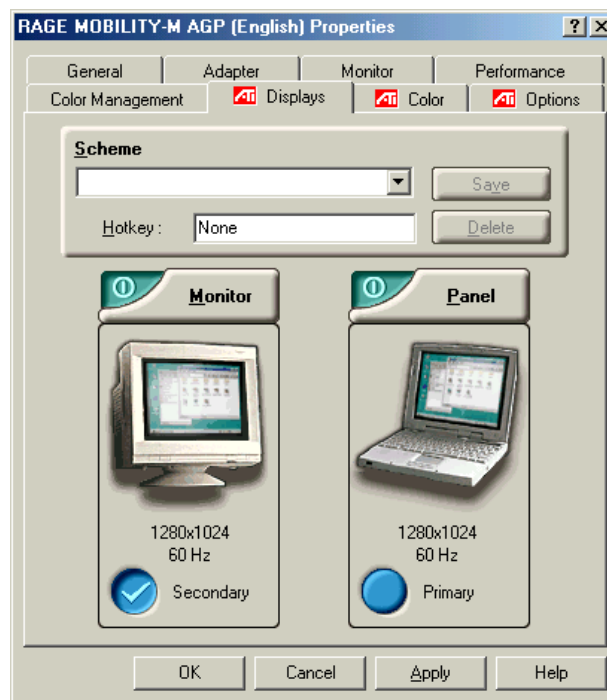

4

4. Use the green button to turn on or off the display to the built-in screen (called Panel in this window) and the external monitor (called Monitor in this window).
5. Click on *Apply* and verify that the display is the way you want it.
6. If you want to adjust the appearance of an external monitor, click on the *Monitor* button and make changes to the *Screen Position*, *Size*, and *Synchronization*.
7. Click on *Apply* and verify that the display is the way you want it, then click on *OK*. You can name the current scheme and assign a hotkey to later quickly change the display settings to this scheme.
8. Click on *OK* to exit the *Properties* dialog box.



Switching with Hot-keys

After switching the display with software in the first instance, you can then use the display switching hot-keys

Fn	+	F5	Switch display between the built-in screen, an external monitor, and a simultaneous display
-----------	----------	-----------	---

When you connect an external monitor and turn on the computer, the system defaults to a simultaneous display on the built-in screen.

Press Fn+F5 one time	Video display to built-in screen only
Press Fn+F5 two times	Video display to external monitor only
Press Fn+F5 three times	Video display to both built-in screen and external monitor




Don't try to use the display switching hot-keys while your computer is booting. It might cause the system to malfunction.

4

Connecting an Audio Equipment and a Microphone

You can connect audio equipment or headphones to your computer so that you can listen to audio. When you plug an audio equipment or headphones into the headphone jack, the built-in speaker in the computer cabinet is automatically turned off.

You can connect a microphone for better recording quality. When you connect an external microphone through the microphone jack, the built-in microphone is also automatically turned off.

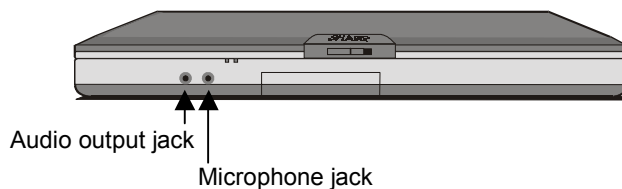

You can adjust the recording and playback volume by double-clicking on the loudspeaker icon on the right side of the taskbar.



Connecting USB Devices

USB (Universal Serial Bus) devices are increasing in availability, and include many different types of device such as keyboards, pointing devices, digital cameras, and so on. Your computer has two USB ports, one is located on the left side, another one located on the rear side of the unit.

Many different USB devices can be connected to your computer through every single USB port. All you need to do is connect a USB hub to one of the USB ports. A USB hub is a USB device that has a series of spare USB ports available for use by multiple devices.



Rear side USB port



Left side USB port

To remove USB devices, you may need to perform the following before you remove them:

1. Click the *Unplug or Eject Hardware* icon in the taskbar.
2. Click *Stop xxxxx*. Xxxx is your device name.
3. Click *OK* in *Safe To Remove Hardware* dialog box.



If you use the USB port to install a pointing device or a keyboard, the built-in glide pad and the built-in keyboard remain active.

Connecting a Printer

Most printers connect through the parallel/FDD port on the rear side of your computer.



Parallel/FDD port

Installing a Printer Driver

After you have connected the printer to your computer through the parallel/FDD port, install a printer driver following the steps below:

1. From the *Start* menu, select *Settings - Printers*.
2. Double-click the *Add Printer* icon. The *Add Printer Wizard* appears.
3. Click *Next*.
4. Confirm *Local printer* is selected and click *Next*.
5. Select the manufacturer and the printer and then click *Next*. If you cannot find the model name of your printer, you have to install the printer driver included with your printer. See your printer manual for more information.
6. Select *LPT1* and click *Next*.
7. Read the message and click *Next*.
8. Click the *Finish* button. If you have checked the *Print Test Page* box, make sure that the printer is ready before clicking the *Finish* button.

Parallel Port Settings

The parallel port on your computer can support different kinds of parallel communications, including bi-directional, EPP (Enhanced Parallel Port) and ECP (Extended Capabilities Port). If your printer supports the faster transmission of EPP or ECP, use the system setup utility to change the settings of the parallel port. See *Advanced Page* in *Chapter 8* for more information.

Connecting a Serial Device

The RS-232C 9-pin serial port on the rear side of the unit can be used to connect your computer to serial devices such as a pointing device or a fax/modem. This port is identified as COM1 and is 16550-compatible.

Connecting a Serial Device

Connect the cable from the serial device to the 9-pin serial port on the rear side of your computer.



RS-232C Serial port

External Pointing Device

If you are connecting a serial mouse which is Windows compliant, the computer should detect the new hardware and take you through the process of installing the hardware. If Windows does not recognize your serial mouse, you will need to *Add New Hardware*. You can have Windows search for the mouse or you can set up the mouse manually. If Windows does not have drivers for your mouse, you can use a standard driver, or use a disk provided by the mouse manufacturer.

Serial Devices

The serial port also allows you to connect external devices such as a modem or a scanner to your computer. Devices connected to the unit while the power is powered up, may not work reliably. Connect devices to the serial port while the computer is turned off. This allows the computer to prepare itself and to device to operate together.


Serial Port Settings

The settings of the serial port on your computer can be changed using the system setup utility. See *Advanced Page* in *Chapter 8* for more information.

Connecting a PS/2 Keyboard or Pointing Device

You can use the mini-DIN PS/2 port on the rear side of the computer to connect a PS/2 keyboard or pointing device. Built-in keyboard remains active while you connect an external PS/2 keyboard.

You can disable the built-in glide pad while you connect the external PS/2 mouse. Set *Pointing Device* to *Enabled* in the Main menu of the Setup utility if you want to enable both the built-in glide pad and the external pointing device. See chapter 8 for more information.




PS/2 port

Connecting an IEEE 1394 Device

You can use the IEEE 1394 port on the left side of the computer to connect a host of devices. The IEEE 1394 is a digital interface for handling digital video, digital audio and other data in two directions between devices, and for controlling other equipment.

4



IEEE 1394 port

When two or more IEEE 1394 compatible devices are connected to the computer in a daisy chain, operations and data transactions are possible with not only the equipment that is directly connected, but also with other devices via the directly connected device.

The baud rate for the IEEE 1394 port varies from 100Mbps to 400Mbps.

To remove IEEE 1394 devices, you may need to perform the following before you remove them:

1. Click the *Unplug or Eject Hardware* icon in the taskbar.
2. Click *Stop xxxxx*. Xxxx is your device name.
3. Click *OK* in *Safe To Remove Hardware* dialog box.

CHAPTER 5

Communication Functions

Your computer has two important features that let you establish communications with other computers and devices. The built-in modem lets you connect to the telephone system so that you can communicate with the whole world through the internet, e-mail, etc.,. The built-in LAN adapter lets you join your computer to a local are network for sharing data.

Built-in Modem

You can use the built-in modem for data transfer, or use it to establish a dial-up connection to the internet through an Internet Service Provider.



- *The built-in modem on your computer is designed for regular analog telephone lines. The modem may be damaged if it is connected to a digital ISDN terminal or a digital PBX.*
- *If an unusual device is attached to the line you are connecting to, the modem may not function properly. Remove the device or contact the dealer of the device.*
- *Before connecting to a PBX, consult the PBX maintenance staff or its service company. If the electric characteristics of your PBX are different from those of a regular analog line, the modem will not function properly. If you connect the modem to a digital PBX, both the modem and the PBX may be damaged.*

Connecting the Modem to a Telephone Line

Connect your modem to a telephone line as follows:

1. Turn off your computer.
2. Locate the modem jack on the left side of your computer.



Modem jack

3. Plug one end of the telephone cable supplied with your computer into the modem jack. (If the cable is fitted with a core, plug the end of the cable nearest the core into the computer.)
4. Plug the other end of the cable into a wall telephone socket.
5. Turn on your computer.



Connect to the telephone line directly. Do not use a distributor or allotter.

5

Configuring the Modem

You may have already configured your modem during Windows Me Personal Setup. Otherwise, make the necessary adjustments as shown below.

Telephony Configuration

1. From the *Start* menu, select *Settings - Control Panel*.
2. Double-click the *Telephony* icon. If you cannot find the icon, click *view all Control Panel options* to show the icon.
3. In the *Dialing Properties* dialog box, type in the details about your location and dialing properties.

The drivers under the *Telephony Drivers* tab are pre-installed.

Internet Connection

Windows Me has a special *Internet Connection Wizard* to help you get connected to the internet with ease. Simply double-click on the *Connect to the Internet* icon on the Windows desktop. If you plan on connecting to the internet by using the modem to dial an Internet Service Provider (ISP), have your account information and dial-up number ready before you begin the *Internet Connection Wizard*.



*In some locations, your Windows desktop may be installed with an icon named *Online Services*. This folder lets you access Online Service Providers who can provide internet connection and other services.*

Dial-Up Networking

To create other dial-up networking accounts:

1. On the Windows desktop, double-click *My Computer* icon.
2. Click *Dial-Up Networking*.
3. Click *Next*.
4. Follow the prompts of the *Make New Connection* dialog box to create a new account.

Hyper Terminal and Phone Dialer

You can find these applications by opening the *Start* menu and selecting *Programs- Accessories- Communications*. *HyperTerminal* lets you connect to other computer terminals, for example, Bulletin Boards. *Phone Dialer* lets you store and dial numbers for quick access.

Modem Settings

The settings for your modem are pre-installed in the Windows operating system installed on your computer. In normal circumstances you do not have to make changes to the modem settings. If you need to make changes follow this procedure:

1. From the *Start* menu, select *Settings - Control Panel*.
2. Double-click *Modems* icon. If you cannot find the icon, click *view all Control Panel options* to show the icon.
3. Use the *General* and *Diagnostics* tabs to display the settings of your modem and make changes if necessary.

Power Management

For modem communications it is a good idea to disable any power management that is running. Uploading or downloading large files can take quite some time and you might lose data if your computer enters System Stand by/Hibernate in the middle of a transmission.

LAN unit

You can use the LAN unit for data transfer and communications over a local area network.

Connecting the computer to a local area network


Connect your computer to a local area network as follows:

1. Turn off your computer.
2. Locate the LAN jack on the rear edge of your computer.



LAN jack

3. If your computer is provided with the LAN cable, go to the step 5. If with the core for a LAN cable, go to the next step.
4. Attach the provided core to one end of your LAN cable. Insert the cable into the core and put the cable around the core; then, close the core until it clicks.

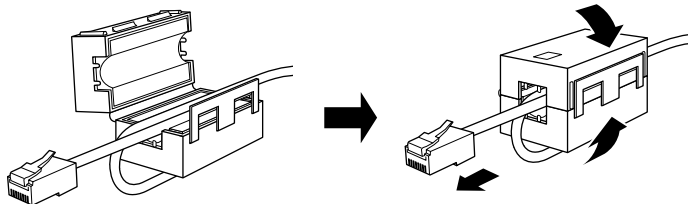

5. Plug the core end of the LAN cable into the LAN jack of your computer
6. Plug the other end of the cable into a network hub or another computer.
7. Turn on your computer.



- *If your computer is provided with the LAN cable, always use that cable. If with the core for a LAN cable, make sure to attach the provided core to your LAN cable before use.*

Configuring the Network Settings

You can click on the *Network* icon in the *Control Panel* to check the networking configurations that are currently in place on your system and to make modifications. You will see information specific to the network adapter built-in your computer.

In order to successfully join a network, after the computer has been physically connected, you need at least define a protocol, which controls how information is transferred between your computer and others on the network. Refer to your network administrator for network specifications.

You will also see a button that allows you to set up your computer for file and/or printer sharing. If you want to allow your files or printer to be shared on the network, you can set up the file and printer sharing as described in the section below.

Once you have successfully established the network settings for your system, you can click on the *My Network Places* icon on your desktop. You can use this folder just as you would *My Computer*. Resources on the network available to you can be accessed through this folder.



Sharing

If you want to make files on your computer available to another computer, or if you want to allow another system to print to a printer attached to your unit, you will need to set up your system for sharing.




1. Double-click on the *Network* icon in the *Control Panel* to show *Networking* dialog box.
2. Click on the *File and Print Sharing* button. You will be asked to decide if you want to allow file sharing, print sharing, or both, click on the appropriate checkboxes.
3. You have now established the file and print sharing for your computer. You can click *OK* to exit the Network utility, you might be asked to reboot.

If you want to allow access to certain files on your system, you will need to designate those files for sharing.

1. On the Windows desktop, double-click *My Computer* icon, and access the drive containing the folders that you want to share.
2. Identify the folders that you want to share.
3. Right click on the folder and click on the *Sharing* option of the pop-up menu.



4. You will now be asked to establish the kind of access you want to allow to this folder. You should consider who will be using the access and why, and establish the necessary password. Keep in mind that shared folders will be accessible to any machine that establishes a network connection with your computer.



CHAPTER 6

Changing or Adding Options


This chapter describes how you can change or add two important optional items to your computer; a memory card and a port replicator.

Adding a Memory Module


Your computer comes complete with 128 MB of main memory. This is plenty of memory for most applications. However, if you want to enjoy the increased performance that extra memory can bring, you can easily add a memory module to your system using the spare memory compartment in the base of your computer.

The memory compartment can be installed with an industry-standard SODIMM (Small Outline Dual In-line Memory Module). You can install a memory module with 16 MB, 32 MB, 64 MB or even 128 MB in the memory compartment. Follow the steps below.

1. Turn off your computer, disconnect the AC adapter, and close the display cover.
2. Turn your computer over and locate the memory module compartment cover and the screws that secures the cover in place.

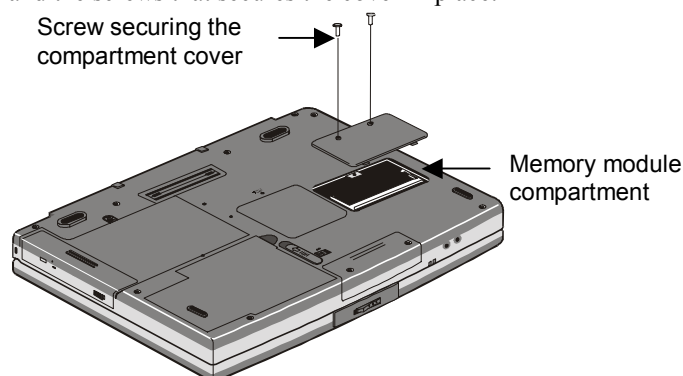

3. Use a small, Phillips-head screwdriver to remove the screws. Lift the cover from the memory module compartment using the indent on one side of the compartment cover.
4. Hold the memory module over the memory module compartment. The edge connector on the module is divided into two unequal parts and the edge connector slot inside the memory module compartment is also divided into two unequal parts. Position the module so that the edge connector on the module matches the edge connector slot in the compartment.
5. Hold the module at a slight angle to the base of the unit and insert the edge connector into the edge connector slot.

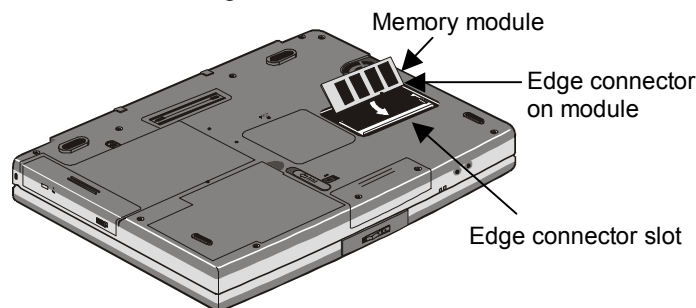

6

6. After the module is inserted into the slot, press it down flat into the compartment so that the spring latches inside the compartment grip the edges of the memory module and hold it in place.
7. Replace the compartment cover and secure it with the screws.
8. Restart your computer.
9. From the *Start* menu, select *Settings – Control Panel*.
10. Double-click *System* icon. If you cannot find the icon, click *view all Control Panel options*.
11. Click *General* tab. You can see new memory status.

Removing a Memory Module

1. Follow the steps from 1 to 3 of *Adding a Memory Module*.
2. Press the spring latches apart so that the memory module pops out of the compartment and then pull the edge connector of the module free from the edge connector slot.
3. Remove the memory module.
4. Go back to the step 7 of *Adding a Memory Module*.


Using the Optional Port Replicator

(may not be available in some countries)

The optional port replicator (model CE-DS03) provides a convenient “parking place” for your computer on your desktop or working area. It duplicates the ports on the rear side of your computer and adds extra ports as well. You can leave peripheral devices permanently connected to the port replicator. When you dock your computer to the replicator, all the devices are instantly available.


About the Port Replicator

The port replicator is a plug and play device. It supports cold and warm docking. Cold docking means that you must turn off your computer before docking it to the port replicator. Warm docking means that you must let your computer to System Standby/Hibernate before docking it to the port replicator. When you restart or resume your computer, Windows will automatically configure the devices that are connected to the replicator and automatically assign resources as they are required.

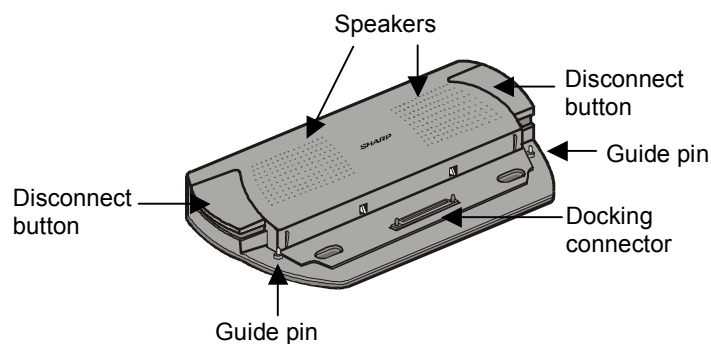

Port Replicator Ports


The port replicator ports are all located on the back side.

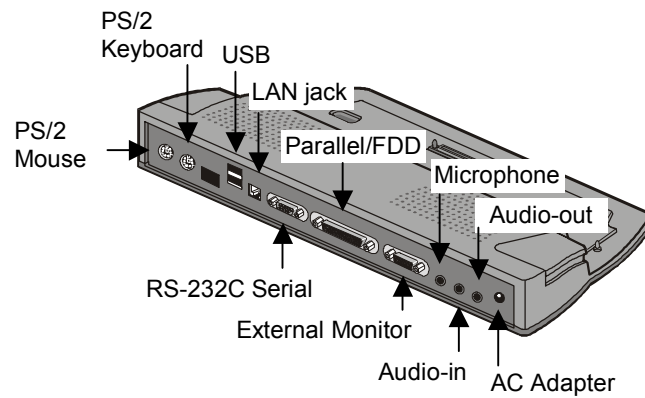


Docking and Undocking

6


Your computer has a connector in the base of the unit that automatically engages with the docking connector on the port replicator. The connector on the base of the computer is protected by a spring-loaded cover. The cover opens automatically when you dock the computer with the port replicator.






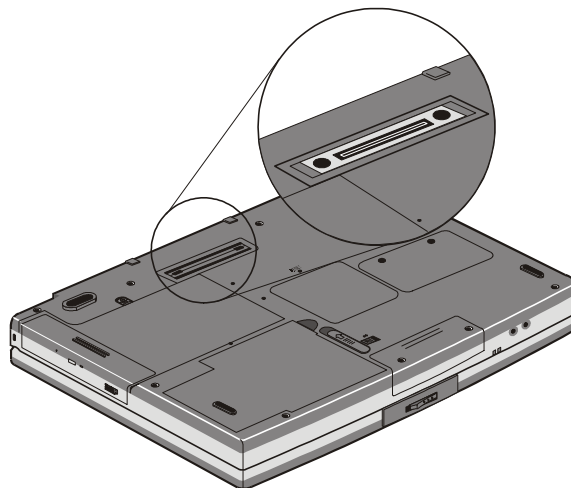


Before docking your computer to the port replicator, either turn off the computer or let the computer enter to System Stand by/Hibernate by pressing the hot keys **Fn+F12**. After the computer is shut down or in System Stand by/Hibernate, install the computer in the port replicator. The guide pins ensure that the computer is positioned correctly. Restart your computer or resume from System Hibernation by pressing the power button, or resume from System Standby by pressing any key.

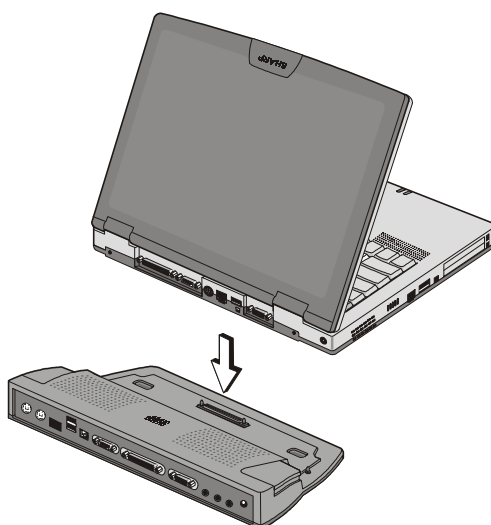

To undock the computer, turn off or let your computer enter System Stand by/Hibernate, press down on the two disconnect buttons to disconnect the computer, and then lift the computer from the port replicator.

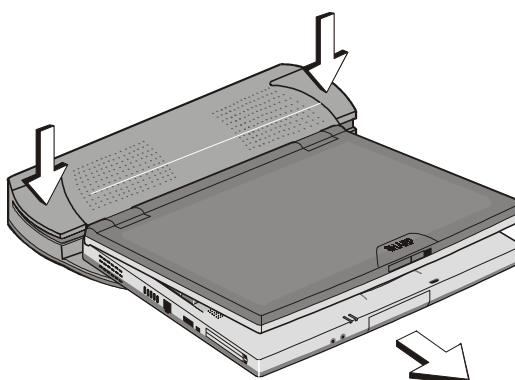



CHAPTER 7

Security Features

This chapter describes how to protect your computer against unauthorized use, and theft.

Passwords

Setting a password will help protect against unauthorized access to your computer. When password protection is correctly set, you can leave your computer turned off or in System Stand by/Hibernate. No unauthorized users can restart the system without typing in the correct password.



If you lose or forget your password while password protection is enabled, you lose access to your computer. Make sure you select a password that you will not forget, or keep a record of your password in a secure place. Otherwise, you must ask your dealer for assistance.



If you enter a wrong password three times, the message System Disabled appears. Press the power switch to turn off the computer, turn it on again, and enter the correct password.

7

Supervisor Password and User Password

Your computer supports two different levels of password security; Supervisor password and User password. A User password cannot be set unless a Supervisor password has already been activated. When a Supervisor and a User password are set, the holder of the User password has limitations on the use of the computer, that are controlled by the holder of the Supervisor password.

The following items can only be changed if you know the Supervisor password.

Advanced page	All items
Security page	Set Supervisor Password
	Password on Boot
	Floppy Disk Access
Power page	Resume on Modem Ring
	Resume on Time
Boot page	All items
Exit page	Load Setup Defaults

Setting the Password in the Setup Utility

1. In the *Security* menu of the setup utility, select *Set Supervisor Password* or *Set User Password* and press **Enter**.
2. Type your password (up to eight characters), and press **Enter**.
3. Type the same password again, and press **Enter**.
4. When the confirmation message appears, press **Enter**.
5. Press **Esc** and select *Exit Saving Changes*.
6. Press **Enter** twice. The system restarts and asks for the password you have set.

If you use the computer personally




We recommend that you set the supervisor password. You can prevent other people from using your computer by enabling *Password on boot* in the *Security* menu of the setup utility.

If you share the computer with others

We recommend that a person who administers the computer sets both supervisor and user passwords and lets the other people know only the user password.

Changing or Deleting the Password

1. In the *Security* menu of the setup utility, select the password item you want to delete and press **Enter**.
2. Type your current password, and press **Enter**.
3. To change the password, type in the new password and press **Enter**. To delete the password, just press **Enter**.


- 
- 
- 
4. To change the password, type the new password again and press **Enter**. To delete the password, just press **Enter** again.
 5. When the confirmation message appears, press **Enter**.
 6. Press **Esc** and select *Exit Saving Changes*.
 7. Press **Enter** twice. The system restarts.

Password Requirements



If you have enabled *Password on boot* in the *Security* page of the setup utility, the system will ask for a password when the system starts. If a user password is entered, then the user has limited access to the floppy disk drive as set by the holder of the supervisor password.

When the setup utility is opened, a password is required. If a user password is entered, the user does not get access to some items shown in *Supervisor Password* and *User Password* on the previous page.

Setting a Password for System Stand by/Hibernate Resume



Use the Windows *Power Options Properties* program to set a password that must be entered in order to resume the system from a system stand by/hibernate mode. If you have already installed a Windows password you can skip steps 1-4.


1. From the *Start* menu, select *Settings - Control Panel*.
 2. Double-click *Passwords* to open *Passwords Properties* dialog box. If you cannot find the icon, click *view all Control Panel options* to show the icon.
 3. Use the *Change Passwords* tab to install a password for windows.
 4. Restart your computer to complete the password installation.
 5. Return to the *Control Panel*. Double-click the *Power Options* to open the *Power Options Properties* dialog box.
 6. Click *Advanced* tab, and check *Prompt for password when computer goes off standby and hibernate*.
 7. Click *Apply* and *OK*.
- 
- 

Using a Security Cable

You can prevent theft by connecting a laptop security cable to a fixed object and locking the other end of the cable in the slot on the left side of the computer.



Slot for security cable

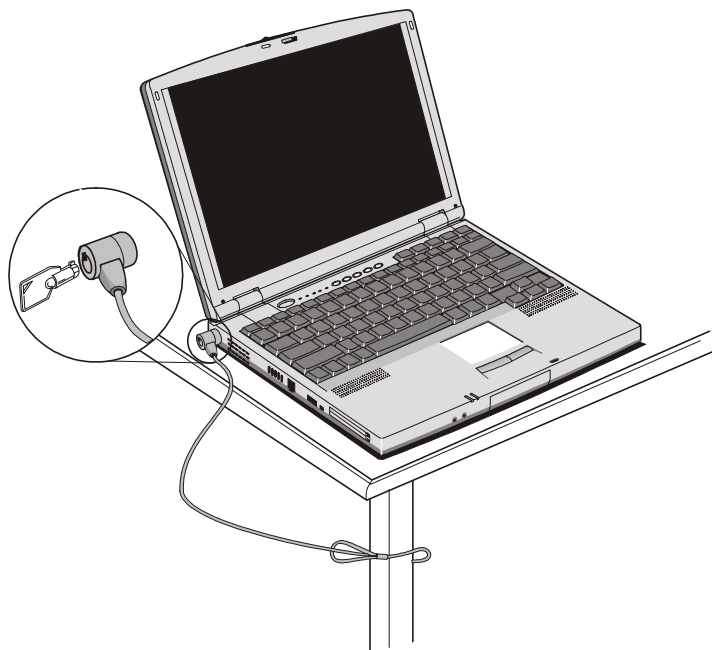

CHAPTER 8

Setup Utility

This chapter describes how to run the setup utility to change settings on your computer.

Running the Setup Utility

With the setup utility, you can customize the system configuration information, such as time and date, port assignments, passwords, or power management settings. The information you have specified is saved in a special area called CMOS RAM, which the system reads every time you turn on the computer.

Contents of the Setup Utility

The setup utility consists of six menu pages, as follows:

- **Main:** Configures basic system
- **Advanced:** Configures device interface (I/O ports, etc.)
- **Security:** Set password and security system
- **Power:** Configures power management (battery saving settings)
- **Boot:** Defines where the system boots from
- **Exit:** Exits the setup utility or returns to the default values

8

Entering and Exiting the Setup Utility

1. Turn on the computer.
2. When the message *<ESC> for Diagnostic screen, <F2> for Setup* appears, press **F2**.
3. Change the desired settings.
4. Press **Esc** to select the *Exit* Page.
5. Select one of the exit methods, and press **Enter**.

6. When the message *Setup Confirmation* appears, press **Enter** again. The system restarts.



To turn off the computer when the setup utility is open, press the power switch .

Using the Setup Utility

To navigate through the different menus, you can use the following keys:

Use the **Left** and **Right** cursor arrow keys to choose the pages from the Main menu bar to the Exit menu across the top of the screen.

Use the **Up** and **Down** cursor arrow keys to select the items on each page.

Use the **Space bar**, **F6** key or **Shift** plus **Plus** keys to cycle forwards through the values that can be installed for each item.

Use the **Minus** or **F5** key to cycle backwards through the values that can be installed for each item.

Use the **Esc** key to display the *Exit* page of the setup utility.

Use the **F9** key to install the items of the setup utility with default values.

Use the **F10** key to save the changes and exit the setup utility.

On items marked with a triangular pointer (▶), press **Enter** to display a sub-menu. Press **Esc** to close the sub-menu and return to the original page.

Main Page

System Date Defines the system date, using the format *month:day:year*. The **Tab** key moves the cursor, and the **Space bar**, **F6** key or **Shift** plus **Plus** keys and **F5** key or **Minus** keys change numbers.

System Time Defines the system time, using the format *hour:minute:second* (24-hour format). The **Tab** key moves the cursor, and the **Space bar**, **F6** key or **Shift** plus **Plus** keys and **F5** key or **Minus** keys change numbers.

Floppy Disk Drive Always sets to *1.44MB,3½*. You cannot change this item.

Primary Master Shows the hard disk drive status. Press **Enter** to display the primary master sub-menu. *Type* is set to *Auto* so that the system automatically detects the hard disk drive in your system. Press **Esc** to return to the *Main* page.

Secondary Master Shows the CD-R/RW drive status. Press **Enter** to display the secondary master sub-menu. *Type* is set to *Auto* so that the system automatically detects the CD-R/RW drive in your system. Press **Esc** to return to the *Main* page.

Display Device Selection Determines where the video is displayed when the system is first started. It is recommended to leave this at the default value *LCD&CRT*.

Resolution Expansion Enables the system to add extra pixels to screen resolutions that are less than 1400x1050 so that they occupy the whole area of the built-in display if set to *Enabled*. Note that resolution expansion causes some distortion of the image on the screen.

Pointing Device Enables or disables the glide pad built into your system. *Auto* means the built-in glide pad is disabled if an external PS/2 mouse is connected when the system starts.

Boot Options Configures the status of system when starting. Press **Enter** to display the Boot Options sub-menu. If *Quiet boot* is *Enabled*, the system displays the Sharp logo screen. If *Summary screen* is *Enabled*, the system shows a hardware summary at start-up time. If *NumLock* is *Disabled* and an external PS/2 keyboard is connected, keys with blue legends on the built-in keyboard are disabled. If set to *Enabled*, those of both an external PS/2 and built-in keyboard are enabled. Press **Esc** to return to the *Main* page.

System Memory Shows the size of conventional memory.

Extended Memory Shows the size of extended memory beyond 1 MB.

Advanced Page

Serial port A Sets the RS-232C serial port, selecting the base I/O address. *Enabled* means that you can set the item by yourself. *Auto* means that the item is automatically assigned. *Disabled* means that you cannot use the port.

Parallel port Sets the printer port, selecting the mode, the base I/O address and DMA channel. *Enabled* means that you can set the items by yourself. *Auto* means the items except the *Mode* are automatically assigned. *Disabled* means that you cannot use the port.

Mode Specifies the LPT port mode: *Bi-directional*, *ECP* (Extended Capabilities Port mode), *EPF* (Enhanced Parallel Port mode) or *Output only*.

Security Page



See Chapter 7 for detailed information on setting passwords in the Security page. Under some password settings, not all items are available to all users .

Supervisor Password Is Shows the current status of the supervisor password.

User Password Is Shows the current status of the user password You cannot set the user password unless you have set the supervisor password.

Set Supervisor Password Sets the supervisor password (up to eight characters).

Set User Password Sets the user password (up to eight characters). You cannot set the user password unless you have set the supervisor password.



If you lose or forget your password while password protection is enabled, you lose access to your computer. Make sure you select a password that you will not forget, or you keep a record of your password in a secure place. Otherwise, you must ask your dealer for assistance .

Password on Boot Defines whether the system requires passwords during the boot process. *Enabled* means that you need to input a password to continue.

Floppy Disk Access Defines who can access the floppy disk drive. *Supervisor* means that only the user who knows the supervisor password can access the floppy disk drive. *User* means everyone can access the floppy disk drive.



Power Page

Because your computer supports ACPI (Advanced Configuration and Power management Interface), a powerful feature of the Windows Me operating system, the power management for your system is controlled by the Windows OS and the items on this page have no function. See *Chapter 3* for information on using the Windows *Power Option Properties* program.

If you install your computer with an alternative operating system that does not have ACPI, you can use the items on this page to manage power on your system.

CPU Speed Mode Lets you adjust processor core speed. *Auto* means CPU speed is high when connected to AC power, and low when using the battery. *High* means CPU speed is always high, and *Low* means the speed is always low.

Power Management Control Lets you enable or disable all the power management, or have it operate only when you are using the battery.

Power Saving Mode Lets you set *Battery Life* (short timeouts for aggressive power management), *Performance* (long timeouts for relaxed power management), or *Customized* (lets you define your own timeout settings using the three items below).

Video power down after Sets the timeout for the built-in display to powerdown if you have chosen *Customized* in *Power Savings Mode*.

HD power down after Sets the timeout for a hard disk drive powerdown if you have chosen *Customized* in *Power Savings Mode*.

Auto Suspend Timeout Sets the timeout for suspend mode if you have chosen *Customized* in *Power Savings Mode*.

Suspend Mode Lets you set how your system will suspend when a suspend mode is initiated. Your computer can either suspend to RAM or suspend to disk.

Battery Low Suspend Enables the system to automatically enter suspend mode when battery charge is critically low if set to *Enabled*.

Resume on Modem Ring Enables the system to resume from suspend mode when an incoming call is received by the modem if set to *Enabled*.

Resume on Time Enables the system to resume from suspend mode by an alarm set on the computer's realtime clock if set to *Enabled*.

Resume Time Sets the alarm time if you have enabled the *Resume on Time*.

Cooling Control Determines how the system controls the thermal management of your system. If you select *Performance*, the system turns on the cooling fan first when cooling is required. It only throttles the processor if further cooling is required. If you select *Silence*, the system throttles the processor first when cooling is required. It only turns on the cooling fan if further cooling is required.

Boot Page

The *Boot* page shows the order of preference your system follows when it seeks an operating system at start-up time. To change the order, highlight an item and then use the **Shift** plus **Plus** keys to move it up, or **Minus** key to move it down the list.

Exit Page






Exit Saving Changes Saves the settings you have changed and exits the Setup Utility.

Exit without saving Exits the Setup Utility without saving the changes you made during the current session.

Load Setup Defaults Returns the values of all items to default. To exit, select one of the above items.

Load Previous Setting Returns the values of all items to the values you last saved.

Save Changes Saves the settings you have changed.



Appendix 1: Troubleshooting

This appendix describes how to troubleshoot problems with your computer.

Common Problems

Problems with your computer can be caused by something as minor as an unplugged power cord or as major as a damaged hard disk drive. The information in this troubleshooting section is designed to help you find and solve minor problems. If you still have a problem after trying all the suggested remedies in this chapter, contact your dealer.

The problems that you might encounter can be divided into two basic categories: hardware and software. Hardware problems can be further divided into being of an electrical or a mechanical nature. You will know you have a hardware problem if, for example, the screen is blank, or the computer cannot recognize the disk drives.

Software problems can occur at several levels. Both your operating system and your software application programs are capable of generating errors and error messages. If you encounter a software error, try to determine if the error message is from your operating system or from an application program, and refer to the appropriate manual for possible remedies.

You can also refer to the Windows Me manual or Windows Help program to solve the problem. To access the Help program, select *Help* from the *Start* menu. It also gives you an *Index*.

Successful troubleshooting is the result of careful observation, deductive reasoning, and an organized approach to solving the problem. If you encounter a problem, begin by performing a careful visual inspection. Check the exterior of the computer first. If no lights are displayed, check the battery charge or power outlet, the plug and power cord, and any power switches that may affect your computer. If the computer has been connected to any peripheral devices, look for loose or disconnected cables. You may also need to check the fuses and breakers in your electric box. A few common problems and suggested solutions are presented in the examples which follow.

Trouble when Starting

Question: Why doesn't the power button function?

- Make sure the AC power cable is correctly connected to a live power outlet.
- If the computer is operating with batteries, the batteries may be discharged. Connect the computer to a power outlet.

Question: Why doesn't Windows start?

- Check whether the floppy disk drive unit contains a non-system disk. Remove the floppy disk from the drive, and press any key.
- If you are attempting to boot from the floppy disk drive, check to make sure the disk is fully inserted and seated into the drive.
- If you attempt to boot from the floppy disk drive, check whether the *Floppy Disk* is set to the first in the *Boot* menu of the setup utility.
- Check whether the CD-R/RW drive unit contains a bootable CD-ROM. Remove the CD-ROM from the drive and press any key.

Question: Why do I get a non-system disk or disk error message?

- You may have inserted a non-bootable disk in the floppy disk drive (either a defective disk or one without an installed operating system). Remove the disk.
- If this message is issued when you attempt to boot from your hard disk drive, insert a bootable disk into the floppy disk drive unit and check the status of your hard disk drive.

Question: Why do I get the message *Operating system not found*?

- If you get this message when starting from the hard disk, insert the boot up disk into the floppy disk drive unit; then check the condition of the hard disk.

Trouble with the Display

Question: Why is the screen blank?

- Press any key to see if any power management feature has turned off the screen to save power.
- See the power indicator to check whether the computer is powered.
- If you are using a battery pack, make sure it has a charge remaining
- Make sure the LCD screen is selected as the display by pressing **Fn+F5**.
- Check the brightness controls for your display by pressing **Fn+F7**.
- Check whether the display is on by pressing **Fn+F11**.
- If you still have the problem after trying the above, press the power button for more than four seconds to turn off the system. Five seconds later, turn the computer on.
- If you cannot power off the system with the above procedure, use the reset switch on the bottom of your computer and turn off the system. Wait five seconds and turn the computer back on.

Question: Why does the external monitor display nothing?

- Confirm the monitor is turned on.
- Confirm the monitor is connected correctly.
- Make sure an external monitor is selected as the display by pressing **Fn+F5**.

Question: Why is the image on an external monitor display distorted?

- Confirm the monitor is connected correctly.
- Make sure the CRT is not near any electric devices having strong magnetic fields such as a TV set or radio.
- Do not share an outlet with a TV set or radio.
- Make sure the value of the *Screen area* in the *Display Properties* is lower than the resolution of the CRT monitor.

Trouble with the Hard Disk

Question: Why can't I read or write data to/from the hard disk?

- Confirm the drive and file names are correct.
- Confirm the hard disk has sufficient free space.
- The hard disk in your computer is formatted with FAT32. You cannot read or write data formatted in other operating systems, which are not FAT 32 compatible. Applications that are not compliant with FAT32 may not work properly.

Trouble with Floppy Disks

Question: Why can't I read/use a floppy disk?

- Confirm the floppy disk drive unit is correctly inserted into the optional floppy disk drive box or the unit bay.
- Confirm the floppy disk is inserted correctly.
- The floppy disk may not be formatted or could be corrupted.
- If you cannot write to a floppy disk, the disk may be write-protected. Eject the disk and ensure that the write-protect tab covers the detection hole.
- If you cannot write to a floppy disk, the disk may be full. Use another disk.
- Check whether the supervisor has set a password prohibiting access to the floppy disk drive in the *Security* menu of the setup utility.

Trouble with the Keyboard or Glide Pad

Question: Why doesn't the keyboard or the glide pad function?

- Perform a software reset by pressing **Ctrl+Alt+Delete**.
- If you cannot perform a software reset, press the power button for more than four seconds to turn off the system. Five seconds later, turn the computer on.
- If you still cannot turn off the system with the power button, use the reset switch on the bottom of your computer to turn off the system. Five seconds later, turn on the computer by pressing the power button.

Question: Why doesn't the glide pad function correctly?

- Confirm the surface of the glide pad is completely dry and free from dirt and grease.
- Confirm the item *Pointing Device* in the *Main* menu of the setup utility is set to *Enabled*.
- If the item *Pointing Device* in the *Main* menu of the setup utility is set to *Auto* and an external PS/2 mouse is connected, remove the mouse and restart your computer.

Trouble with Peripherals

Question: Why don't expansion or peripheral devices function?

- Confirm they are correctly connected to your computer.
- Confirm if drivers necessary for operating ports on the devices are installed.
- There may not be a free IRQ (Interrupt). Free up an IRQ from a built-in device.

Question: Why can't I print?

- Make sure the printer is turned on.
- Check whether the printer is connected correctly.
- Check whether the printer has enough paper.
- Check whether the printer driver is installed.
- Make sure *Parallel Port* in the *Advanced* menu of the setup utility is set correctly.
- From the *Start* menu, select *Settings - Printers* to confirm your printer is installed here. If not, click *Add Printer* to install your printer.
- See also the Windows Help.

Question: Why doesn't the device connected to the RS-232C serial port function?

- Confirm the device is correctly connected with an appropriate cable.
- If using the serial port on the port replicator, confirm the port replicator unit is connected correctly.
- Confirm the application program is compliant with the RS-232C standard interface.

- Confirm the COM1 port is not disabled using the following procedure.
 1. In the *System Properties* dialog box, select *Device Manager*.
 2. Double-click *Ports(COM&LPT)*; then, *Communications Port (COM1)*.
 3. Make sure the item *Disable in this hardware profile* is unchecked.
- Confirm the COM 1 port is not used by another applications.
- Confirm the item *Serial Port* is set appropriately in the *Advanced* menu of the setup utility.

Trouble with Communication

Question: Why can't I communicate through the built-in modem?

- Confirm the telephone line is properly connected to the modem telephone socket.
- Confirm the dial settings of Windows Me or communication software are matched with the telephone line (Example: To access an outside line, first dial "7" for local, "1" for long distance).
- Confirm the network configuration is appropriate.
- Confirm the user name or password is correct.
- Confirm the COM port in the communication software is set appropriately.
- Turn off the power management and screen savers.



Other Troubles




Question: Why is the date and/or time incorrect?

- Correct the date and time using the *Date/Time* icon in the Windows Control Panel or the *Main* menu of the setup utility.

Question: Why can't I produce sound?

- Check the volume control with the **Fn+F8** and **Fn+F9** hot keys.
- Double-click the speaker symbol on the taskbar and check the Windows volume control.

Question: Why can't I use a hardware device?

- Make sure the hardware device is not disabled using the following procedure.
 1. In the *System Properties* dialog box, select *Device Manager*.
 2. Select the device you cannot use.
 3. Click *Properties*, and uncheck *Disable in this hardware profile*.
- 
- 
- 

Appendix 2: Care & Maintenance

This appendix provides you with information on how to maintain your computer in excellent working condition.

Cleaning the Computer

Cabinet

Apply a small amount of mild cleaning solution to a dry, lint-free cloth and wipe the cabinet with the cloth.



- *Do not use alcohol, benzene, thinner or other strong chemical agents or solvents that may damage the cabinet.*
- *Never clean the computer while it is turned on.*

Screen

The surface of the screen may become smeared and accumulate dust during use. Avoid touching the screen with your fingers when using the system. Gently wipe the surface of the screen with a soft cloth that has been dipped in a mild detergent solution and squeezed dry.




Glide Pad

Wipe the glide pad with a soft, dry cloth.



Traveling with the Computer

This computer is designed for portability. For safety and convenience when traveling, please follow these guidelines.

- Before traveling, back up your data on floppy disks or other external media.
- Bring an extra copy of your backup data.
- Do not leave the floppy disk drive in the optional floppy disk drive box connected to the system when you are traveling.
- Do not travel with the computer powered on. This may result in loss of data and/or damage to the hard disk drive.
- Disconnect the AC adapter from the computer.



- Fully charge the battery pack and bring the AC adapter and the AC power cord.
- Avoid sudden shocks or extreme vibration.



Appendix 3: Specifications

Parts		Specifications	
CPU		Mobile Pentium® III 850MHz featuring Intel® SpeedStep™ Technology	
Secondary cache		256 KB (Integrated with CPU)	
ROM		Including system BIOS and VGA BIOS	
RAM	System	SDRAM 128MB (expandable to 256 MB)	
	Video	8 MB	
Display	Panel	Active Matrix (TFT) color LCD	
	Video controller	ATI Rage Mobility M1	
Keyboard		IBM compatible keyboard	
Pointing device		Glide pad (touch-sensitive control pad with 2 buttons)	
Drive	Hard disk	IDE interface	
	CD-RW	Reading:24x max. speed, Writing:8x speed, Re-writing 4x speed	
	Floppy disk	3.5", 1.44MB/720KB	
PC card slots		Type II × 2, or Type III x 1 (PCMCIA 2.1 compliant) CardBus compliant	
Audio system		Monaural microphone, stereo speakers, sound system compliant with AC97	
I/O ports	Audio	Audio output and Microphone jack	
	Video	External monitor port	
	Others	USB ports (x 2), modem jack, LAN jack, PS/2 port, parallel/FDD port, RS-232C serial port, IEEE 1394 port	
Modem		Data: 56Kbps(receive), 33.6Kbps(send), Fax: 14.4Kbps,	
Power	AC adapter	100-240V, 50-60 Hz	
	Battery	Rechargeable lithium ion battery	
	Battery life <i>*Battery life may vary depending on usage</i>	Standard Battery only	Approximately 2.8hours
		Standard and Optional battery (CE-BL11)	Approximately 4.8hours
	Battery charging time <i>*Charging time may vary depending on usage</i>	Standard Battery only	Turned off/System Hibernate: about 2.5 hours Turned on: charging time may vary depending on usage.
		Standard and Optional battery (CE-BL11)	Turned off/System Hibernate: about 5 hours Turned on: charging time may vary depending on usage.
Dimensions		12.2" wide x 9.9" deep x 1.3" high (309mm x 252mm x 33.3mm)	
Weight		5.7 lbs (2.6 Kg)	

Operating Environment	Temperature	50°F to 95°F (10°C to 35°C)
	Humidity	20% to 80% (non-condensation)

Options(May not be available in some countries)

- DVD-ROM Drive CE-DV04
- Battery Pack CE-BL11
- Floppy Disk Drive Box CE-FC02
- Port Replicator CE-DS03