

AXIS 5800+ Mobile Print Server

User's Manual

Notices

This manual contains some expressions that require special attention:

Caution! - must be observed to avoid loss of data or damage to your equipment.

Important - must be observed to avoid operational impairment. Do not proceed any of these notices until you have fully understood the implications.

Web Browser - For best performance, use a standard Web-browser with JavaScript support, such as Internet Explorer 3.0 or Netscape 3.0 and higher.

Axis' Trademarks - AXIS ThinWizard

Bluetooth Trademark - BLUETOOTH™ is a trademark owned by its proprietor and used by Axis Communications AB under license.

Other Trademark Acknowledgments - AIX, Apple, DEC, DOS, Ethernet, EtherTalk, HP, IBM, JetAdmin, Internet Explorer, LAN Manager, LAN Server, LANtastic, Macintosh, Microsoft, MVS, NDPS, Netscape, Novell NetWare, OS/2, OS/400, PostScript, SCO, UNIX, VM, VMS, VSE, Windows, are registered trademarks of the respective holders

Liability - Every care has been taken in the preparation of this manual; if you detect any inaccuracies or omissions, please inform your local Axis office, which can be found on www.axis.com. Axis Communications AB cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. Axis Communications AB makes no warranty of any kind with regard to the material contained within this document, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Axis Communications AB shall not be liable nor responsible for incidental or consequential damages in connection with the furnishing, performance or use of this material.

Radio Transmission Regulatory information - Tested to comply with FCC Standards FOR HOME OR OFFICE USE.

This product must be installed and used in strict accordance with the instructions given in the user documentation. The AXIS 5800+ Mobile complies with the following radio frequency and safety standards:

Europe - - EU Declaration of Conformity. This device complies with the requirements of the R&TTE Directive 1999/5/EC with essential test suites as per standards EN 60950 Safety of Information Technology equipment:



ETS 300 328 Technical requirements for radio equipment

ETS 300 826 General EMC requirements for radio equipment

USA - Federal Communications Commission FCC

This device complies with Part 15 of FCC Rules. Operation of the device is subject to the following two conditions:

(1) This device may not cause harmful interference

(2) This device must accept any interference that may cause undesired operation.

Approvals

The AXIS 5800+ Mobile is approved for use in the EU Member States, Norway and Switzerland

AXIS 5800+ Mobile User's Manual
Part No: 19191
Copyright © Axis Communications AB, 2002

Revision 1.0
Date: March 2002

	Preface	6
	About this manual	6
	About Axis	6
	Support Services	8
Section 1	Introduction	9
	Supported environments	9
Section 2	Product Overview	11
	Package Contents	11
	AXIS Network Product CD	11
	AXIS 5800+ Mobile Physical Description	13
	How to use the print server	15
	Features and Benefits	16
Section 3	Features in AXIS 5800+ Mobile	18
	Wireless Printing Support	18
	Auto-IP	18
	Auto-Detect Printer Type	18
	E-mail Notification	19
	IPP (Internet Printing Protocol)	19
	Multi-Language Support	19
	Network Speed	19
	NetWare Packet Signature Level 1,2,3	20
	Web Flash-Loading	20
Section 4	Basic Installation (Cable & Wireless)	21
	Installation Procedures	21
	Connect the Hardware	21
	Assign an IP address to the print server	23
	Configuring your print server - Installation Guide	36
Section 5	Setting Up - Windows	37
	TCP/IP printing in Windows 2000 and Windows XP	39
	TCP/IP Printing in Windows using AXIS Print System	40
	NetBIOS/NetBEUI Printing in Windows using AXIS Print System	43
	TCP/IP and NetBIOS/NetBEUI Printing from AXIS Print Monitor	46

	Using the Microsoft LPD monitor with Windows	55
Section 6	Setting Up - NetWare	61
	Setup using NDPS	62
	Installing the AXIS 5800+ Mobile in an NDPS environments	62
	Setup using Queue-based printing over IP/IPX in PSERVER Mode	64
	Setup for Queue-based printing over IPX/SPX (Remote Printer Mode) ...	66
	Queue-based Printing Methods	67
	NetWare Packet Signature	68
Section 7	Setting Up - Macintosh	69
	Installation in Mac OS X	69
	Installation Using the Chooser Window	70
	Choosing a Printer	70
Section 8	Setting Up - UNIX	76
	Installation in a UNIX Environment	76
	Print Methods on TCP/IP Networks	79
Section 9	IPP - Internet Printing Protocol	82
Section 10	Wireless Printing	95
	Bluetooth Printing from a Laptop	96
	Bluetooth Printing from a Mobile Phone	101
Section 11	Management and Configuration	102
	Using a Web browser for Print Server Management	103
	Bluetooth Settings in the Print Server's Internal Web Pages	109
	Bluetooth Trouble-shooting	110
	Print Server Settings	111
	Using Logical Printers to Customize your Printing	115
	Using AXIS ThinWizard for Print Server Management	125
	Using FTP for Print Server Management	128
	Using Telnet for Print Server Management	132
	Using SNMP for Print Server Management	135
	Using HP Administration Tools for Print Server Management	137
	Using Novell Utilities for Print Server Management	138
Section 12	Upgrades	140

	Upgrading the Firmware	140
	Obtaining the Software	143
Section 13	Test Button	144
Section 14	Technical Specifications	146
Section 15	Parameter List	151
Section 16	Glossary	160
	Index	165
	Wireless Printing from a Laptop	170
	Wireless Printing from a Mobile Phone	171

Preface

Thank you for purchasing the AXIS 5800+ Mobile Network Print Server. This product has been developed to connect your printers anywhere in your network, allowing all network users access to the shared printer resources.

About this manual

This manual is applicable for the AXIS 5800+ Mobile, with firmware release 6.30 or later.

The instructions in this manual are based on settings in a new and unconfigured AXIS 5800+ Mobile. To establish this status in an already configured AXIS 5800+ Mobile, you can perform a factory default. See *Factory Default Settings*, on page 145.

This manual provides introductory information as well as detailed instructions on how to set up and manage the AXIS 5800+ Mobile in various network environments. It is intended for everyone involved in installing and managing the AXIS 5800+ Mobile. To fully benefit from the manual, you should be familiar with basic networking principles.

About Axis

Axis Communications is dedicated to providing innovative solutions for network-connected computer peripherals. Since the start in 1984, it has been one of the fastest growing companies in the market and is now a leader in its field.

ThinServer™ Technology

enables Axis' products to act as intelligent file server independent ThinServer devices. A ThinServer device is a network server which includes "thin" embedded server software capable of simultaneous multiprotocol communication, scalable RISC hardware and a built-in Web server which allows easy access and management via any standard Web browser. The ThinServer technology makes it possible to connect any electronic device to the network, thus providing "Access to everything".

Mobile Access by Axis

The *Bluetooth* Access Point from Axis is part of a family of network access solutions that create local "hot spots" of high-speed wireless connectivity areas. These areas provide a wireless communications link to local networks and the Internet for mobile devices equipped with Bluetooth wireless technology, an industry supported technology that provides a low-cost means for supporting short-range wireless communications between portable devices. Axis provides solutions that scale from network access devices to larger, more advanced systems to meet the range of needs for creating new mobile networks and services.

Network Print Servers

offer a powerful and cost-efficient method for sharing printer resources in your network. They connect to any standard printer, featuring high performance, simple management and easy upgrading across the network. The print servers are available in Ethernet, Fast Ethernet and Token Ring versions.

IBM Mainframe and S/3x - AS/400 Print Servers and Protocol Converters

include a wide range of LAN, coax and twinax attached print servers for the IBM host environment. By emulating IBM devices, these servers provide conversion of the IPDS, SCS and 3270DS data streams to the major ASCII printer languages.

Network Attached CD/DVD Servers

provide a flexible and cost-efficient solution for sharing CD-ROMs, DVD-ROMs and other optical media across the network. They are available in Ethernet, Fast Ethernet and Token Ring versions.

Network Camera Servers

provide live images using standard Internet technology, thus enabling access to live cameras via any standard Web browser. They offer a perfect solution for remote surveillance over the Internet; their sharp images can bring life into any web site. These servers support Ethernet as well as PSTN and GSM phone lines.

Network Document Servers

enable easy distribution of paper-based information across workgroups and the enterprise. By sending scanned documents to your destination via the Internet/intranet, you will reduce your faxing/mailing costs, as well as save time, thus improving your organization's efficiency.

Support Services

Should you require any technical assistance, please contact your Axis dealer. If your questions cannot be answered immediately, your Axis dealer will forward your queries through the appropriate channels to ensure you a rapid response.

If you are connected to the Internet, you can find on-line manuals, technical support, firmware updates, application software, company information, on the addresses listed below.

<http://www.axis.com/techsup>

Section 1 Introduction

The AXIS 5800+ Mobile is a print server that can be used for both **cable network** and **wireless printing**.

The AXIS 5800+ Mobile print server uses BLUETOOTH™ Wireless Technology to enable printing from other Bluetooth devices, such as a laptop with Bluetooth printing functionality or a mobile phone equipped with Bluetooth™ wireless technology.


See *Wireless Printing*, on page 95 for detailed information.

Supported environments

Wireless printing

Bluetooth™ Wireless Technology. The AXIS 5800+ Mobile complies with *Bluetooth* version 1.1

See *Wireless Printing*, on page 95 for detailed information.

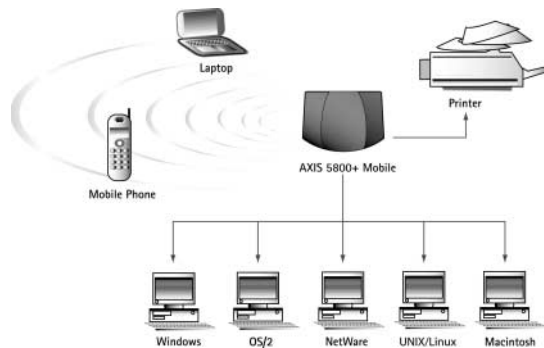

AXIS 5800+ Mobile in a combined wireless and cable network

Cable network
printing

- Windows
- NetWare
- UNIX/Linux
- Macintosh
- OS/2*
- Internet/intranet via any standard web browser with JavaScript support

*OS/2 is described in the **Installation Guide for OS/2, Windows 3.1 and WfW**, which is located on the Axis web site at www.axis.com and on the AXIS Network Product CD

Section 2 Product Overview

Package Contents

Verify that nothing is missing from the AXIS 5800+ Mobile print server package by using the check list below. Please contact your dealer if anything is missing or damaged. All packing materials are recyclable.


Hardware	Model	Part Numbers	
Print Server	AXIS 5800+ Mobile	0156-001-01	
Media	Title	Part Numbers	
CD	AXIS Network Product CD	rev 1.0 or higher	
Printed Material	AXIS 5800+ Mobile Quick Installation Guide	19072	
Power Supply		PS-F (SA10-0515x)	PS-H (SA120A-0530x)
Model	Australia	18428	19111
Part Numbers PS-F and PS-H are interchangeable	Europe	18424	19108
	UK	18425	19109
	USA / Japan	18480	19110
	Korea		19112
Optional Accessories		Part Numbers	
Parallel Printer Cable		13360	
Self-adhesive velcro ribbons		13282 & 13283	

AXIS Network Product CD

The AXIS Network Product CD provides an easy-to-use electronic catalog, that includes Axis software, firmware and user documentation. It also contains free Adobe Acrobat Reader software.

- Start-up procedures for Windows The AXIS Network Product CD starts automatically from a local CD drive on Windows 95/98, NT, Me, 2000 and XP platforms. You can also navigate to the CD root directory and click on the *index.htm* file from within the Windows file manager.
- Start-up procedures for UNIX, OS/2 and MacOS Using your preferred file manager application, navigate to the CD root directory and click *index.htm*

AXIS 5800+ Mobile Physical Description

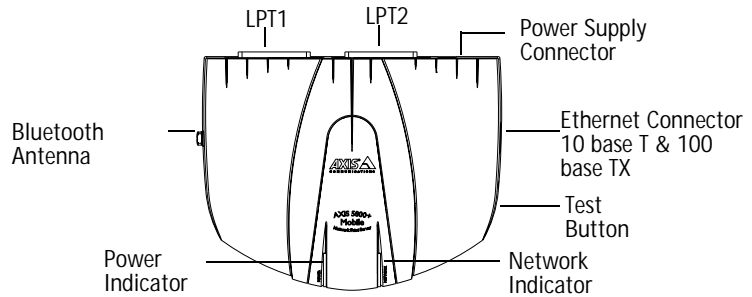

Plan view of the AXIS 5800+ Mobile print server

- Cable Network Connectors** The AXIS 5800+ Mobile is designed for 10 Mbps Ethernet and 100 Mbps Fast Ethernet networks and connects to the network via a twisted pair category 5 cable (10baseT and 100baseTX) or better. The AXIS 5800+ Mobile is equipped with an auto-sensing function that detects the speed of the local network segment and varies the speed of its data communication accordingly, between 10 Mbps and 100 Mbps.
- Printer Ports** The AXIS 5800+ Mobile print server is provided with two high-speed IEEE 1284 compatible parallel ports. Any standard printer can be connected to any of the ports for cable network printing. Print data can be directed to any of the two ports simultaneously, which means that two different printers can be used at the same time, regardless of protocol.

Test Button	<p>The test button is used for:</p> <ul style="list-style-type: none">• Printing a test page to check the connection to the printer.• Printing the parameter list showing all the AXIS 5800+ Mobile settings.• Resetting the AXIS 5800+ Mobile parameters to the factory default settings.
Network Indicator	<p>The network indicator flashes to indicate network activity.</p>
Power Indicator	<p>The power indicator is lit while power is applied. If it is not lit, or it flashes, there is a problem with the AXIS 5800+ Mobile or its power supply.</p>
Bluetooth Antenna	<p>The antenna is used for Bluetooth transmission, using the global Bluetooth 2.4 GHz radio frequency band. The antenna should point towards the ceiling to guarantee ultimate printing performance.</p>

How to use the print server

Installation and Integration

Use the appropriate Axis client software, provided on the AXIS Network Product CD:

Client Software	Environment	Description:
AXIS IP JumpStarter	Windows	Used for setting the IP address of the print server
AXIS Print System	Windows	Used for installing, configuring and monitoring network printers
AXIS Print Monitor	Windows	Used for installing network printers
AXIS ThinWizard	Windows, UNIX/Linux, Macintosh, NetWare, OS/2	Used for upgrading and managing multiple Axis products in TCP/IP networks)
axinstall	UNIX/Linux	Used for installing network printers
AXIS Gateway Configuration Utility	Netware	Used for installing and configuring NDPS printers in a Netware environment

- Notes:**
- The AXIS 5800+ Mobile can be installed in Windows 2000 and Windows XP using the standard 'Add printer Wizard' without any Axis client software. See *TCP/IP printing in Windows 2000 and Windows XP*, on page 39 for details.
 - The AXIS 5800+ Mobile can be installed in the Macintosh environment without any Axis client software.
 - The AXIS 5800+ Mobile can be installed in NetWare - Pure IP environments with NetWare Administrator.

Configuration and Management

The AXIS 5800+ Mobile can be configured and managed from its internal web pages, using HTTP over TCP/IP. Access to the AXIS 5800+ Mobile via a Web browser offers you a platform-independent management tool that is suitable for all supported network environments. See *Using a Web browser for Print Server Management*, on page 103 for details.

Features and Benefits

- Reliability** The AXIS 5800+ Mobile print server provides high performance and reliability combined with low power consumption. The electronic circuits are based on the AXIS ETRAX100 chip, which comprises an integrated 32 bit RISC processor and associated network controllers.
- Flexibility** Both wireless and cable network printing are supported by the AXIS 5800+ Mobile print server. The print server supports printing in all major computer systems and environments, including five different print methods in the TCP/IP environment. It also allows you to print on two printers simultaneously.
- The integrated IPP (Internet Printing Protocol) function allows for printing from LAN to LAN via a WAN, such as the Internet.
- Mobility** AXIS 5800+ Mobile is a network print server that works in both wireless and wired (LAN) networks. AXIS 5800+ Mobile offers mobile users the freedom to print last-minute information wherever they are. AXIS 5800+ Mobile installs, operates and is managed in the same reliable and easy way as other Axis network print servers.
- Speed** The AXIS ETRAX 100LX chip has been specifically designed for LAN products and benefits users with a faster throughput than a direct PC-to-printer connection.
- Easy to Install** You can install the AXIS 5800+ Mobile for wireless or cable network printing in just a few minutes.
- Security** You can assign passwords to restrict both login and printer access.

- Monitoring** The internal AXIS 5800+ Mobile web pages and the provided AXIS ThinWizard software allow you to continuously monitor printer status. The web pages are used to monitor single Axis units and AXIS ThinWizard can be used to monitor multiple Axis units.

The AXIS 5800+ Mobile additionally supports SNMP for remote monitoring.

Through E-mail notification, the printer administrator can be notified by e-mail whenever an event occurs in a printer that requires human intervention. The e-mail contains a short and concise description of the event.

- Future proof** You can upgrade the AXIS 5800+ Mobile Flash memory over the network. This allows you to quickly update and enhance the operational features of your AXIS 5800+ Mobile when new print server software becomes available.

- NetWare Packet Signature** AXIS 5800+ Mobile supports NetWare Packet Signature Level 1, 2, 3, which protects servers and clients using the NetWare Core Protocol™ services. NCP packet signature prevents packet forgery by requiring the server and the client to sign each NCP packet. See your Novell NetWare documentation for detailed information.

Section 3 Features in AXIS 5800+ Mobile

This section describes some special features offered by the AXIS 5800+ Mobile. These features are incorporated in the print server's firmware, which is an integrated part of the AXIS 5800+ Mobile.

Wireless Printing Support

Using Bluetooth Wireless Technology, AXIS 5800+ Mobile transforms standard printers into wireless printing stations with the ability to print from mobile devices such as laptops and mobile phones. See *Wireless Printing*, on page 95 for details.

Auto-IP

In the absence of a DHCP server, the print server will receive a temporary IP address automatically over Auto-IP. This method enables the host to automatically take a link-local IPv4 address in the absence of an IP address management mechanism such as DHCP. Auto-IP is supported by Windows 98, Me, 2000, XP and Mac OS version 8.5 or higher.

Auto-Detect Printer Type

In AppleTalk, the print server can automatically detect the type of printer you are using if you enable the 'Autodetect Printer Type'-function. See *Autodetect Printer Type*, on page 70.

E-mail Notification

Whenever an event that needs human intervention occurs in a network printer, the concerned person can be notified by e-mail. This 'trouble-report' contains a short and concise description of the event. Five events are covered: **Paper Jam, Out of Paper, Toner Low, No Toner, Printer Off-line**. In order to determine who the e-mail recipients will be of these different trouble-reports, follow the instructions in *Setting the e-mail Notification Parameters*, on page 113.

IPP (Internet Printing Protocol)

The AXIS 5800+ Mobile enables printing over the Internet with IPP (Internet Printing Protocol), a developing industry standard that allows users to print to remote printers across the Internet.

With IPP, a user can send a document to any Internet-connected printer. IPP is platform-independent and can be used to print over any LAN or WAN that supports TCP/IP. See *IPP - Internet Printing Protocol*, on page 82 for details.

Multi-Language Support

The print server's web interface and Help pages are now available in English, Spanish, French, German and Japanese. The default language is English. See *Language Settings*, on page 112.

Network Speed

With the Network Speed parameter you can manually specify the speed at which you will send and receive network packages. You can change the Network Speed setting to correspond to the type of network you are using (10 or 100 Mbit). See *Network Speed*, on page 114.

NetWare Packet Signature Level 1,2,3

Protects servers and clients using the NetWare Core Protocol™ services. NCP packet signature prevents packet forgery by requiring the server and the client to sign each NCP packet. See your Novell NetWare documentation for detailed information.

Web Flash-Loading

The firmware can now easily be upgraded, since flashloading over the web is possible from the print server's internal web pages. Client software is no longer needed to upgrade the firmware. See *Upgrading from the Print Server's Internal Web Pages*, on page 140.

The firmware can also be upgraded wirelessly over Bluetooth. See *Upgrading using AXIS Wireless Upgrade Utility* on page 142 for instructions.

Section 4 Basic Installation (Cable & Wireless)

Installation Procedures

After you have verified that no items presented in *Package Contents*, on page 11 are missing, you can proceed to install your AXIS 5800+ Mobile. Follow the instructions below to install the AXIS 5800+ Mobile print server in a cable network:

1. Connect the external components as described in *Connect the Hardware*, on page 21
2. Assign an IP-address to your AXIS 5800+ Mobile print server, described in *Assign an IP address to the print server*, on page 23.
3. Configure your AXIS 5800+ Mobile print server according to the *Configuring your print server - Installation Guide*, on page 36.

Connect the Hardware

Follow these instructions to connect your AXIS 5800+ Mobile print server to your printer(s) and your network.

Caution

- The AXIS 5800+ Mobile external power supply you are using must be marked with the correct voltage! Refer to *Package Contents*, on page 11.
1. Make sure that your printer is switched off and that the AXIS 5800+ Mobile external power supply is disconnected.
 2. Locate the serial number, found on the underside label of the AXIS 5800+ Mobile, and write it down. You will need this number to set the IP address of the print server.
 3. Connect the printer to the LPT1 or the LPT2 port on the AXIS 5800+ Mobile using an appropriate printer cable. Make sure the Bluetooth antenna is pointing upwards.

4. Connect your AXIS 5800+ Mobile to the network using a twisted pair category 5 cable (10baseT and 100baseTX).
5. Switch on the printer and connect the external power supply to the AXIS 5800+ Mobile. The power indicator will light up. When the network indicator starts to flash, the AXIS 5800+ Mobile is successfully connected to the network.
6. Wait 1 minute. Press and release the test button on the AXIS 5800+ Mobile to print a test page. The test page includes a list of the most important parameters, including the network speed, firmware version number and IP address of the print server.
7. To administrate the AXIS 5800+ Mobile, you can access it via a Web browser. For this to work, your print server needs an IP address. If you are working in a DHCP network, your print server will receive an IP address automatically when you connect it to the network. The IP address will then appear on the test page you printed earlier.
If you are not working in a DHCP network, you need to set the IP-address of the print server manually. Follow the instructions in *Assign an IP address to the print server*, on page 23.

- Notes:**
- A temporary IP address will be assigned to the print server if this cannot be accomplished using DHCP. This is done using Auto-IP, which uses a default IP address structure as follows: **169.254.xxx.xxx**. To change this temporary IP address to a static one, follow the instructions given in *Set the IP address using AXIS Print System*, on page 26.
 - The AXIS 5800+ Mobile uses high speed Centronics Communication. For use with older printers not supporting high speed, this function can be disabled by using any standard Web browser. Please refer to *Section 9 Management & Configuration*, on page 101, for more information.

Assign an IP address to the print server

In order to access your AXIS 5800+ Mobile print server it needs to have an IP-address assigned to it. Follow the instructions given here in order to assign an IP address to your AXIS 5800+ Mobile print server.

Before you start

- | | |
|-------------------|--|
| System privileges | <p>You need root privileges on your UNIX system, or administrator privileges on a Windows NT server to:</p> <ul style="list-style-type: none"> • set the IP address using RARP, BOOTP, DHCP • add an entry to the ARP table with the command 'arp -s' |
| Ethernet address | <p>You need to know the Ethernet address of your AXIS 5800+ Mobile in order to assign an IP address to it. The Ethernet address is based upon the serial number of your AXIS 5800+ Mobile. This means, for example, that an AXIS 5800+ Mobile with the serial number of 00408C100086, will have the corresponding Ethernet address of 00 40 8C 10 00 86. The serial number is located on the bottom label of the print server.</p> |
| IP address | <p>Unless you are downloading the IP address using DHCP or Auto-IP, you must obtain an unused IP address from your network administrator.</p> |
| Important: | <ul style="list-style-type: none"> • DO NOT use the IP addresses used in the following examples when installing your AXIS 5800+ Mobile. Consult your network administrator before assigning an IP address to your AXIS 5800+ Mobile. |

Methods for setting the IP Address

You can set the IP address of your AXIS 5800+ Mobile using one of the following methods, depending on your network operating environment:

Method	Network environments	See ...
AXIS IP JumpStarter	Windows 95/98/NT/Me/2000/XP	<i>Set the IP address using AXIS IP JumpStarter</i> , on page 28
DHCP*	Windows NT/Me 2000/XP, UNIX, NetWare	<i>Setting the IP address using DHCP</i> , on page 29
ARP	Windows 95/98/NT/Me/2000/XP	<i>Setting the IP address Using ARP in Windows</i> , on page 31
	UNIX/Mac OS X	<i>Using ARP in UNIX and Mac OS X</i> , on page 32
RARP*	UNIX	<i>Using RARP in UNIX</i> , on page 33
BOOTP*	UNIX, NetWare	<i>Using BOOTP in UNIX</i> , on page 34
Auto-IP*	Windows 98/ME/2000/XP	<i>Setting the IP address using Auto-IP</i> , on page 30

* The IP address of the print server will be set automatically using these methods.

- Notes:**
- The ARP and RARP methods operate on single network segments only, that is they cannot be used over routers.
 - The ability to set the IP address with ARP and PING will only be enabled the first 4 minutes after rebooting the print server
 - Refer to *Setting Parameters*, on page 74 for information about setting the IP address in the Macintosh environment.

Registering and Resolving Host Names

In order to register the host name of the AXIS 5800+ Mobile in networks with dynamic IP address settings, WINS (Windows Internet Name Service) and DDNS (Dynamic Domain Naming System) are supported. It is recommended that at least one of these methods should be used if you are setting the IP address of the AXIS 5800+ Mobile using DHCP.

The host name of the AXIS 5800+ Mobile is specified by the PS_NAME parameter. Refer to *"Parameter List"* on page 151.

WINS host name rules

WINS only supports 15 character long host names. If your host name is longer than 15 characters, the AXIS 5800+ Mobile truncates the host name to 15 characters when registering with a WINS server. You can view the AXIS 5800+ Mobile host name that is registered at a WINS server, in the print server's Web interface. Refer to *Section 11 Management and Configuration*, on page 102.

DDNS host name rules

DDNS supports 47 character long host names and can only consist of the characters 'A-Z', 'a-z', '0-9' and '-'. If your host name consists of any other characters, they are converted to '-', when registering with a DDNS server. You can view the AXIS 5800+ Mobile host name that is registered at a DDNS server, in the print server's Web interface. Refer to *Section 11 Management and Configuration*, on page 102.


If the host name matches another entry in the DDNS data base, the AXIS 5800+ Mobile deletes the entry before registering.

Notes:

- The host name limitations conclude that if you want to register the same host name at a WINS server and a DDNS server, the host name should be no longer than 15 characters and it should only contain the characters 'A - Z', 'a-z', '0-9' and '-'.
- Refer to your system manuals or to your network administrator for instructions on how host name resolutions are performed on your system.

Set the IP address
using
AXIS Print System

AXIS Print System is used to set the IP address of your Axis print server and to configure network printers.

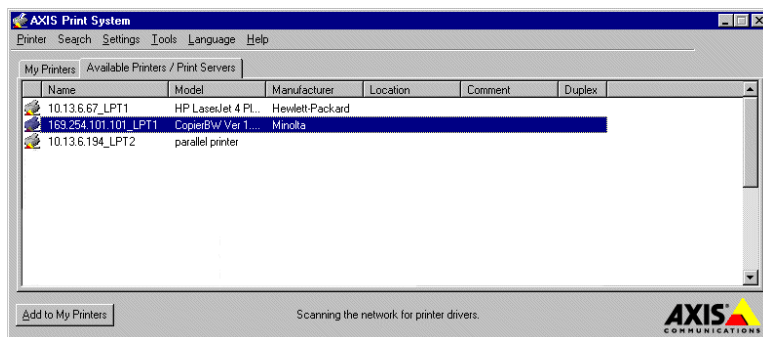

AXIS Print System 'Available Printers/Print Servers' view

Follow these instructions to set the IP address of your Axis print server and configure the printer to which it is attached:

1. Install AXIS Print System on your host.
2. From the AXIS Print System **Available Printers/Print Servers** view, select the unconfigured Axis print server icon:



3. Double-click the print server icon. The AXIS Print System **Add Printer Wizard** will appear. The print server will have a temporary IP address, which was assigned to it through Auto-IP*. The default Auto-IP address structure is: **169.254.xxx.xxx**. This temporary IP address needs to be changed to a new and unused one:
4. In the **IP Address** field, enter the new IP address of the print server.
5. Set the **Subnet Mask** and **Default Gateway** according to your network configuration. Click **Next>** to continue.
6. Next, you will be prompted to enter an Administrator password, the default password is **pass**. Click **OK**.


7. Next, AXIS Print System will start looking for printers attached to the print server. Click the radio-button next to the printer you want to add to **My Printers** and click **Next>**. Continue to *Configuring a network printer in AXIS Print System for Windows*, on page 41 to install an appropriate printer driver.

* Auto-IP will only work if there is no DHCP server on the network and the DHCP and Auto-IP parameters are enabled in the AXIS 5800+ Mobile (DHCP and Auto-IP are enabled by default).

Set the IP address
using AXIS IP
JumpStarter

AXIS IP JumpStarter is an application that allows you to assign IP addresses to your Axis servers and find IP addresses already assigned to Axis servers.

1. Download and install AXIS IP JumpStarter. AXIS IP JumpStarter is available on the AXIS Network Product CD and on www.axis.com.
2. Select a print server from the serial number list:

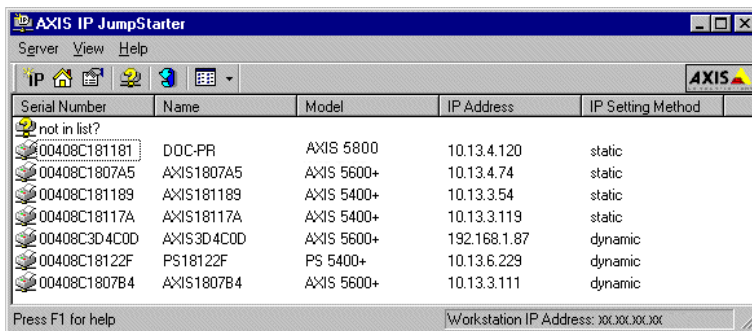

2. From the **Server** menu, select **Set IP Address**. The **Set IP Address** dialog appears.
3. Click the radio button that corresponds to your choice of IP setting method (static or dynamic using DHCP).
4. Click **OK** to save your settings.
5. Enter the server root password (default=**pass**), and click **OK**. You have now finished the procedure of setting the IP address of the print server. Continue to *Configuring your print server - Installation Guide*, on page 36.

Setting the IP address using DHCP

Follow the instructions below to download the IP address using DHCP:

1. Edit or create a scope in the DHCP manager of the DHCP daemon. The entries included in this scope should contain the following parameters:
 - range of IP addresses
 - subnet mask
 - default router IP address
 - WINS server IP address(es) or DDNS server IP address(es)
 - lease duration
2. Activate the scope. The AXIS 5800+ Mobile automatically downloads the DHCP parameters. If you are using WINS or DDNS, you should include at least one WINS or DDNS server IP address in the DHCP scope. Immediately after the IP address has been received, the AXIS 5800+ Mobile registers its host name and IP address on the WINS alternatively DDNS server. Refer to *Registering and Resolving Host Names*, on page 25 for more information. The AXIS 5800+ Mobile can automatically download a customized config file from a TFTP server. Just add the name of the config file and the TFTP server's IP address to your DHCP scope. The config file is downloaded immediately after the AXIS 5800+ Mobile receives its IP address.
3. You have now successfully set the IP address of your AXIS 5800+ Mobile. Continue to *Configuring your print server - Installation Guide*, on page 36.

- Note:**
- You have to restart the AXIS 5800+ Mobile to download the IP address.

Setting the IP address using Auto-IP

Auto-IP is another tool for setting the IP-address automatically in the absence of a DHCP server. If you have a DHCP server running on your network, the AXIS 5800+ Mobile will receive an IP address immediately after you have connected it to the network. In the absence of a DHCP server, your AXIS 5800+ Mobile print server will automatically be assigned an IP-address through integrated Auto-IP. The Auto-IP address structure is: **169.254.xxx.xxx**.

The Auto-IP function will only work when DHCP is enabled in your Axis print server. This function is enabled automatically upon installation of a brand new print server. The easiest way to make sure this function is enabled in your print server is to perform a factory default. See *Test Button*, on page 144 for instruction on how to do this. If you perform a factory default on the AXIS 5800+ Mobile and DHCP is not available, Auto-IP will automatically set the IP address of the print server.

IF YOU HAVE...	DHCP enabled in print server	DHCP disabled in print server
A DHCP Server in your network	YOU WILL GET...	YOU NEED TO...
	An IP address through DHCP	Set the IP address of the print server manually.
No DHCP Server in your network	YOU WILL GET...	YOU NEED TO...
	An IP address through Auto-IP.	Set the IP address of the print server manually.

Auto-IP/DHCP Overview

Setting the IP address
Using ARP in
Windows

Open a Command Prompt and enter the following syntax:

	Syntax	Example
1.	arp -s <Internet address> <Ethernet address>	arp -s 192.168.3.191 00-40-8c-10-00-86
2.	ping <Internet address>	ping 192.168.3.191
3.	arp -d <Internet address>	arp -d 192.168.3.191

The host will return **reply from 192.168.3.191**, or a similar message. This indicates that the address has been set and that communication is established. You are now ready to print using FTP or Reverse Telnet.

You have now set the IP address of the AXIS 5800+ Mobile. Continue to *Configuring your print server - Installation Guide*, on page 36.

- Notes:**
- When using the Windows 95 implementation of ARP, change the first line to:

```
arp -s <IP address> <Ethernet address> <w95host IP address>
```

 where <w95host IP address> is the IP address of your Windows 95 host.
 - When you execute the ping command for the first time, you will experience a significantly longer response time than is usual.
 - The ability to set the IP address with ARP and PING will only be enabled the first 4 minutes after rebooting the print server.
 - By using the `arp -d` command, the static entry in the arp table is removed from the host's cache memory.

Using ARP in UNIX and Mac OS X

Open a Terminal and enter the following syntax:

	Syntax	Example
1.	<code>arp -s <host name> <Ethernet address> temp</code>	<code>arp -s psname 00:40:8c:10:00:86 temp</code>
2.	<code>ping <host name></code>	<code>ping psname</code>
3.	<code>arp -d <host name></code>	<code>arp -d psname</code>

The host will return `psname is alive`, or a similar message. This indicates that the address has been set and that communication is established. You are now ready to print using FTP or Reverse Telnet.

You have now successfully set the IP address of the AXIS 5800+ Mobile. Continue to *Configuring your print server - Installation Guide*, on page 36.

- Notes:**
- If the host name has not been mapped to an IP address, simply replace the host name entry with the IP address.
 - The ARP command varies between different UNIX systems. Some BSD type systems expect the host name and node address in reverse order. Furthermore IBM AIX systems will require the additional argument `ether`. For example:

```
arp -s ether <host name> 00:40:8c:10:00:86 temp
```

- When you execute the `ping` command for the first time, you may experience a significantly longer response time than is usual.
- The ability to set the IP address with ARP and PING will only be enabled the first 4 minutes after rebooting the print server

Using RARP in UNIX

Follow the instructions below to set the IP address using RARP:

1. Append the following line to your Ethernet Address table. This is typically located in the `/etc/ethers` file:

```
<Ethernet address> <host name>
```

Example:

```
00:40:8c:10:00:86 npsname
```

2. Update, if necessary, your host table and alias name databases, as required by your system.
3. If it is not already running, start the RARP daemon. This is typically performed using the `rarpd -a` command.
4. Restart the AXIS 5800+ Mobile to download the IP address.
5. You have now set the IP address of the AXIS 5800+ Mobile. Continue to *Configuring your print server - Installation Guide*, on page 36.

Notes:

- If the host name has not been mapped to an IP address, simply replace the host name entry with the IP address in the example above.
- If you are using IBM AIX, you will probably not have access to a RARP daemon. If this is the case, you can use either ARP (see *Using ARP in UNIX and Mac OS X*, on page 32) or BOOTP (see *Using BOOTP in UNIX*, on page 34).
- You have to restart the AXIS 5800+ Mobile to download the IP address.

Using BOOTP in UNIX

Below is an example of how to set the IP address of the AXIS 5800+ Mobile using BOOTP:

1. Append the following entry to your boot table. This is typically performed by editing the file: `/etc/bootptab`

```
<host name>:ht=<hardware type>:vm=<vendor magic>:\
:ha=<hardware address>:ip=<IP address>:\
:sm=<subnet mask>:gw=<gateway field>
```

Example:

```
npsname:ht=ether:vm=rfc1048:\
:ha=00408c100086:ip=192.168.3.191:\
:sm=255.255.255.0:gw=192.168.1.1
```

2. If necessary, update your host table and alias name databases, as required by your system.
3. If it is not already running, start the BOOTP daemon. This is typically performed using the `bootpd` command.
4. Restart the AXIS 5800+ Mobile to download the IP address, default router address, and subnet mask. The AXIS 5800+ Mobile can automatically download a customized config file from a TFTP server. Just add the name of the config file and the TFTP server's IP address to your boot table. The config file is downloaded immediately after the AXIS 5800+ Mobile receives its IP address.
5. You have now successfully set the IP address of the AXIS 5800+ Mobile. Continue to *Configuring your print server - Installation Guide*, on page 36

- Notes:**
- Enter the `ht` and `vm` fields exactly as shown in the example.
 - The `ha` field is the Ethernet address/node address and the `ip` field is the IP address of your AXIS 5800+ Mobile.
 - The `gw` and `sm` fields correspond to the default router address and subnet mask.

- If the host name has not been mapped to an IP address, simply replace the host name entry with the IP address in the example above.
- You have to restart the AXIS 5800+ Mobile to download the IP address.

Configuring your print server - Installation Guide

Configuration Methods Once you have set the IP address of your AXIS 5800+ Mobile print server, it can be managed and configured using a number of different methods. The method that you choose should be dictated by your printing requirements and your supported network environments. Select the appropriate method from the table below:

Environment	Network Configuration	Action
Wireless printing		See <i>Wireless Printing</i> , on page 95
Windows	TCP/IP	See <i>Section 5 Setting Up - Windows</i> , on page 37
	NetBIOS/NetBEUI	See <i>Section 5 Setting Up - Windows</i> , on page 37
	IPP	Proceed with <i>IPP - Internet Printing Protocol</i> , on page 82
NetWare	IP/IPX in PSERVER mode	See <i>Installing the AXIS 5800+ Mobile in an NDPS environments</i> , on page 62 and then <i>Setup using Queue-based printing over IP/IPX in PSERVER Mode</i> , on page 64
	IP/IPX in Remote Printer mode	See <i>Installing the AXIS 5800+ Mobile in an NDPS environments</i> , on page 62 and then <i>Setup for Queue-based printing over IPX/SPX (Remote Printer Mode)</i> , on page 66
Macintosh	AppleTalk	See <i>Section 7 Setting Up - Macintosh</i> , on page 79
UNIX/Linux	TCP/IP	Proceed with <i>Section 8 Setting Up - UNIX</i> , on page 76
	IPP	Proceed with <i>IPP - Internet Printing Protocol</i> , on page 82

Note: • Installation instructions for Windows 3.1, WfW and OS/2 are found on www.axis.com and the AXIS Network Product CD.

Section 5 Setting Up - Windows

Having connected the AXIS 5800+ Mobile to your network, as described in *Connect the Hardware*, on page 21, this section describes how to install the AXIS 5800+ Mobile in the Windows environment. This is done in Windows 95, 98, NT 4 and 2000 using Axis client software and in Windows 2000 and XP using the Windows standard **Add Printer Wizard**.

Axis Client Software

AXIS Print System With AXIS Print System you can:

- Set the IP address of an Axis print server.
- Find newly added, unconfigured, Axis print servers and configure them.
- Install appropriate printer drivers for printing on Windows platforms.
- Search for new printers on the network and install them as local, shared printers.

AXIS Print Monitor With AXIS Print Monitor you can:

- Configure Axis print servers as local printer ports. Once installed, AXIS Print Monitor is automatically initialized upon system startup.

Overview of installation methods

Refer to the table below to determine the most appropriate installation method according to your computer environment:

Windows Platform	Printing Protocol	Method:	See ...
Windows 2000, XP	TCP/IP	Standard Windows 'Add Printer Wizard'	<i>TCP/IP printing in Windows 2000 and Windows XP, on page 39</i>
Windows 95,98, NT4 2000	TCP/IP	AXIS Print System	<i>Configuring a network printer in AXIS Print System for Windows, on page 41</i>
Windows 95/98	NetBIOS/NetBEUI	AXIS Print System	<i>Installing NetBIOS/NetBEUI printers in Windows 95/98 using AXIS Print System, on page 43</i>
Windows NT 4 2000		AXIS Print System	<i>Installing NetBIOS/NetBEUI printers in Windows NT 4.0/2000 using AXIS Print System, on page 44</i>
Windows 95/98/Me	TCP/IP	AXIS Print Monitor	<i>Installing TCP/IP printers in Windows 95/98/Me using AXIS Print Monitor, on page 47</i>
Windows NT 4 2000		AXIS Print Monitor	<i>Installing TCP/IP printers in Windows NT/2000 using AXIS Print Monitor, on page 48</i>
Windows 95/98/Me	NetBIOS/NetBEUI	AXIS Print Monitor	<i>Installing NetBIOS/NetBEUI printers in Windows 95/98/Me using AXIS Print Monitor, on page 52</i>
Windows NT 4 2000		AXIS Print Monitor	<i>Installing NetBIOS/NetBEUI printers in Windows NT 4.0/2000 using AXIS Print Monitor, on page 53</i>
Windows NT 3.5x	TCP/IP	AXIS Print Monitor	<i>Installing TCP/IP Printers in Windows NT 3.5x using AXIS Print Monitor, on page 50</i>
	NetBIOS/NetBEUI	AXIS Print Monitor	<i>Installing NetBIOS/NetBEUI Printers in Windows NT 3.5x using AXIS Print Monitor, on page 54</i>
Windows 2000/XP NT 4.0/3.5x	TCP/IP	Microsoft LPD Monitor	<i>Using the Microsoft LPD monitor with Windows, on page 55</i>

If you intend to use the AXIS 5800+ Mobile in a multi-protocol environment, you should also refer to the following sections:

Section 6 Setting Up - NetWare, on page 61

Section 7 Setting Up - Macintosh, on page 69

Section 8 Setting Up - UNIX, on page 76

- Note:**
- Installation instructions for Windows 3.1, WfW and OS/2 are found on www.axis.com and the AXIS Network Product CD.

TCP/IP printing in Windows 2000 and Windows XP

Follow the instructions below to use the standard Windows method for adding a printer in Windows 2000/XP:

Go to Start | Settings | Printers and click the **Add Printer** icon to start the **Add Printer Wizard**. Select the appropriate radio button:


- **Local printer** - If you are connecting directly to the print server (peer-to-peer printing), select **Local Printer** and click **Next**. Click the **Create a new port** radio button and select **Standard TCP/IP Port** from the list. Follow the **Add Standard TCP/IP Port Wizard** to complete the installation (You need to know the IP address of your print server and the model of the connected printer).
- **Network printer** - If your print server has already been installed by the administrator on another computer, select **Network printer** and click **Next**. Follow the instructions in the **Add Printer Wizard** to complete the installation.

- Notes:**
- Make sure that the **Automatically detect and install my Plug and Play printer** checkbox is not checked.
 - Press **F1** to access the Windows online help system if you need additional help when installing a printer/print server using this method.
 - If you wish to print over LPR, double-click the installed printer in **Start | Settings | Printers**. Select **Properties** from the Printer menu and click the **Configure Port** button. Click the **LPR** radio button and enter the queue name. Click **OK** to finish.

TCP/IP Printing in Windows using AXIS Print System

AXIS Print System is a tool for network printing over TCP/IP in Windows 95/98, Windows NT, Windows 2000. Printers that you install from AXIS Print System are automatically added to the **Printers** folder in Windows. AXIS Print System has been developed for peer-to-peer printing, allowing your print jobs to be sent directly to the AXIS 5800+ Mobile.

Install AXIS Print System on your Windows client. This software is available from the AXIS Network Product CD or from the Axis web site at www.axis.com. To enable printing in the TCP/IP environment, you must ensure that the TCP/IP protocol is enabled on your client.

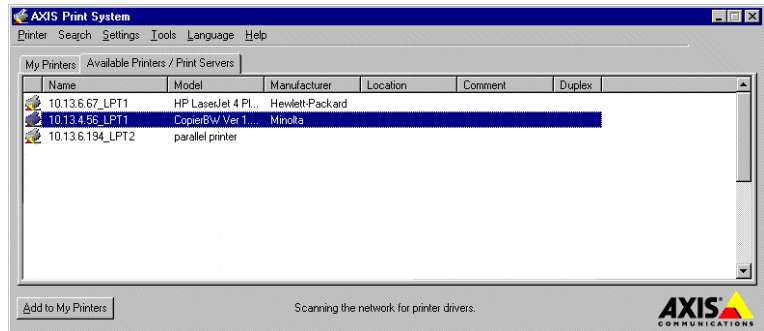

AXIS Print System's **Available Printers/Print Servers** view

Peer-to-Peer Printing

In a Peer-to-Peer network, AXIS Print System needs to be installed on each workstation. Once installed, AXIS Print System allows you to access all network printers, just as if they were connected directly to your workstation. Peer-to-peer printing offers the following benefits:

- You can easily monitor the status of your printers
- You do not have to rely on a server.

Client-Server Printing AXIS Print System needs only to be installed on one server to perform client-server printing. The installed printers must be configured to be shared to allow clients to use them. Pop-up messages should not be enabled on the server, as they will not be displayed on the client platforms.

Configuring a network printer in AXIS Print System for Windows In AXIS Print System, network printers and Axis print servers that are connected to your network are displayed in the **Available Printers/Print Servers** window. A Wizard will guide you through the printer driver installation process to add a print server/network printer to **My Printers**, thus making the network printer ready for use.

The network printers that have been added to **My Printers** in AXIS Print System will also automatically show up in the Windows **Printers** folder (**Start | Settings | Printers**).

Only printers connected to Axis print servers with firmware versions 6.00 or higher will appear in the **Available Printers/Print Servers** window.

To configure a printer with AXIS Print System:

1. Select a network printer from the **Available Printers/Print Servers** list and double-click*. AXIS Print System will suggest which driver to use for the printer you have chosen.
2. Highlight a driver in the list and click **Next>**. If you wish to choose a driver from the AXIS Print System driver list, click **More**. To locate alternative printer drivers, click **Browse to Driver Setup File** and install the driver.
3. Enter a name for the printer (if you wish), follow the instructions on the screen and click **Finish** to complete the printer driver installation.

*If you select **Add (Custom) to My Printers** from the **Printer** menu in Step 2 instead of double-clicking, you can share the printer with other users (only for Windows NT and Windows 2000) or change any of the pre-defined settings prior to installation.

- Note:**
- You can share the printer drivers you have installed with other AXIS Print System users on your network. In AXIS Print System, check the Enable Driver Sharing box in **My Printers | Settings | Program Options | General**.

Changing Print Server Settings

If you want to change the default name or the password of the AXIS 5800+ Mobile, click **Printer | Web Configuration** from the AXIS Print System interface. This will launch a web browser, displaying the internal web pages of your Axis print server. From the **user-mode**, click the **Configuration Wizard** for assistance. Refer to *Using a Web browser for Print Server Management*, on page 103 for detailed information.

NetBIOS/NetBEUI Printing in Windows using AXIS Print System

Installing NetBIOS/NetBEUI printers in Windows 95/98 using AXIS Print System

Follow the procedures below to install Axis NetBIOS/NetBEUI printer ports on a Windows 95/98 workstation, using AXIS Print System:

1. To start the Add Printer Wizard, select **Settings - Printers** from the **Start** menu and double-click the **Add Printer** icon.
2. After clicking **Next>** in the first dialog, the Wizard asks you to select **Local printer** or **Network printer**. Select **Local printer** as the AXIS 5800+ Mobile emulates a local printer port. Click **Next>**.
3. Choose the appropriate printer driver for your printer. If the desired printer driver appears in the displayed Manufacturers and Printer Models lists, highlight your selection, click **Next>** and proceed directly to step 6. It is only necessary to perform steps 4 - 5 if your printer does not appear in the model list.

- Note:**
- Even if the desired printer is available in the **Manufacturers and Printer Models** list, you are advised to use the printer driver provided with the printer. This assures you of the latest driver software.
4. Click the **Have Disk...** button. Insert the printer driver diskette/CD that was provided with your printer, select the appropriate diskette/CD drive and click **OK**.
 5. Select the printer driver you want to install and click **Next>**.
 6. Select the AXIS Printer Port from the Available Ports list. The port names appear as <name>.LP1 and <name>.LP2, where <name> is AX followed by the last six digits of the AXIS 5800+ Mobile serial number, e.g. AX100086 (default serial no.). Click the **Configure Port** button.
 7. Choose whether error condition pop-up messages are to be displayed by checking the box in the **Configure AXIS Ports** dialog. Define the frequency at which the error messages should be displayed after retry. Click **OK>**.

8. Enter an appropriate name for your printer and click **Next>**.
9. Choose whether you wish to produce a test page and click **Finish**.

Installing
NetBIOS/NetBEUI
printers in Windows
NT 4.0/2000 using
AXIS Print System

Follow the procedure below to install Axis Printer Ports from a Windows NT 4.0 or Windows 2000 workstation:

1. To start the Add Printer Wizard, select **Settings - Printers** from the **Start** menu and double-click the **Add Printer** icon.
2. *Windows 2000only:* Start the installation by clicking **Next>**.
3. The Wizard asks you to select **My Computer** or **Network printer server**. Select **My Computer**, as the AXIS 5800+ Mobile emulates a local printer port.
4. Click **Add Port...** in the Available ports dialog, select **AXIS Port** and click **New Port...**
5. Select **NetBIOS/NetBEUI** as your choice of network protocol and click **OK**.
6. Select the AXIS Port you want to add. The ports appear as <name>.LP1 and <name>.LP2, where <name> is AX followed by the last six digits of the AXIS 5800+ Mobile serial number, e.g. AX100086 (default serial no.). Click **OK**.
7. Close the Printer Ports window.
8. Click the **Configure Port...** button. Choose whether error condition pop-up messages are to be displayed by checking the box in the Configure Axis Ports dialog. Define the frequency at which the error messages should be displayed after retry. Click **OK**. Continue the installation by clicking **Next>**.
9. Choose the appropriate printer driver for your printer. Click **Next>** and proceed directly to step 11. It is only necessary to perform steps 9-10 if your printer does not appear in the list.

- Note:**
- Even if the desired printer is available in the **Manufacturers and Printer Models** list, you are advised to use the printer driver provided with your printer. This assures you of the latest driver software.
10. Click the **Have Disk...** button. Insert the printer driver diskette/CD that was provided with your printer, select the appropriate diskette/CD drive and click **OK**.
 11. Select the printer driver you want to install and click **Next>**.
 12. Enter an appropriate name for your printer and click **Next>**.
 13. Choose whether you want to share the printer with other network users and click **Next>**.
 14. Choose whether you want to produce a test page and then click **Finish**.
- Note:**
- You can share the printer drivers you have installed with other AXIS Print System users on your network. In AXIS Print System, check the **Enable Driver Sharing** box in **My Printers | Settings | Program Options | General**.

TCP/IP and NetBIOS/NetBEUI Printing from AXIS Print Monitor

<u>AXIS Print Monitor Overview</u>	<p>If you do not wish to install the extra functionality offered by AXIS Print System, you should install AXIS Print Monitor. AXIS Print Monitor is the recommended tool to use for network printing in Windows 95, 98, NT 3.5x, NT4.0, 2000 environments. It allows AXIS Network Print Servers to be connected in the same simple fashion as a local printer port and once installed, is automatically initialized upon system startup. AXIS Print Monitor has been developed for peer-to-peer printing, allowing your print jobs to be sent directly to the print server.</p>
Printing Environments	<p>AXIS Print Monitor supports printing over NetBIOS/NetBEUI and TCP/IP (LPR). To enable printing in these environments, please ensure that the desired printing protocols are running on your client.</p>
Peer-to-Peer Printing	<p>The AXIS Print Monitor needs to be installed on each workstation to perform peer-to-peer printing. Once installed, the AXIS Print Monitor allows you to access all network printers, just as if they were connected directly to your workstation. Peer-to-peer printing offers the following benefits:</p> <ul style="list-style-type: none">• You can easily monitor the status of your printers, by enabling error condition pop-up messages.• You do not have to rely on a server.
Client-Server Printing	<p>AXIS Print Monitor needs only to be installed on one server to perform client-server printing. The installed printers must be configured to be shared to allow clients to use them. Pop-up messages should not be enabled on the server as they will not be displayed on the client platforms.</p>

- Note:**
- AXIS Print Monitor can be used for DOS printing. Please refer to the AXIS Print Monitor's Readme file for instructions. The readme file is located in the same folder where AXIS Print Monitor is installed on your PC.

Installing TCP/IP
printers in Windows
95/98/Me using
AXIS Print Monitor

1. To start the Add Printer Wizard, select Settings - Printers from the Start Menu and double-click the Add Printer icon.
2. After clicking Next> in the first dialog, the Wizard asks you to select between Local Printer and Network Printer. You must select Local Printer as the AXIS 5800+ Mobile emulates a local printer port. Click Next>.
3. Choose the appropriate print driver for your printer. If the desired print driver already appears within the displayed manufacturer and model lists dialog, highlight your selection, click Next> and proceed directly to step 6. It is only necessary to perform steps 4 - 5 if your printer does not feature in the model list.
4. Click the Have Disk... button. Insert the printer driver diskette into the floppy disk drive of your computer. If the floppy disk drive is A:/ then click OK, otherwise type the letter of your disk drive and then click OK.
5. Select the desired printer you want to install from the diskette and click Next>.
6. Select an AXIS Port you wish to use and then click OK. Available AXIS ports appear as <internet address>_<port number> or <host name>_<port number>, e.g. 192.36.254.101_9900. Click the **Configure Port** button. If you wish to install a new TCP/IP port, select the Printers@TCP/IP Port and perform all procedures defined in steps 10-17.
7. Choose whether error condition pop-up messages are to be displayed by checking the box in the Configure AXIS Ports dialog. Define the frequency at which the error messages should be displayed after retry. Click OK. Click Next>.

Note: The dummy port cannot be used for printing and consequently cannot be configured.

8. Enter an appropriate name for your printer and click Next>.
9. Choose whether you wish to produce a Test Page and click Finish.

You should continue with the following steps **only** if you wish to install a printer to a new TCP/IP port and have chosen Printers@TCP/IP Port previously in step 6.

10. The printer you have defined will now be displayed in the Printers Folder. Right-click the printer object and select Properties from the Context menu.
11. Click the details tab within the Properties page and then click Add Port to display the available monitors.
12. Click the radio button "other". Select AXIS Port and then click OK.
13. Select RAW (TCP/IP) as your choice of network protocol and click OK.
14. Enter the IP address or the host name of your print server and assign an appropriate port number. Click OK.
15. The TCP/IP port will then be added automatically to the list of available ports. Click OK.
16. You may now configure the port, as described in step 7.
17. Click the Apply button.

The Axis Printer Port is now installed.

- Note:**
- Even if the desired printer is available from the manufacturer and model lists, you are advised to use the print driver provided with the printer. This assures you of the latest driver software.

Installing TCP/IP
printers in Windows
NT/2000 using
AXIS Print Monitor

1. To start the Add Printer Wizard, select **Settings - Printers** from the **Start** menu and double-click the **Add Printer** icon.
2. *Windows 2000 only:* Start the installation by clicking **Next>**.
3. The Wizard asks you to select **My Computer** or **Network printer server**. Select **My Computer**, as the AXIS 5800+ Mobile emulates a local printer port.

4. Click **Add Port...** in the Available ports dialog, select **AXIS Port** and click **New Port...**
5. Select **Raw (TCP/IP)** as your choice of network protocol and click **OK**.
6. Enter the **host name** or **IP address** of the print server and the **port number** (9900 for LPT1, 9902 for LPT2 and 9901 for COM1) Click **OK**.
7. Close the Printer Ports window.
8. Click the **Configure Port...** button. Choose whether error condition pop-up messages are to be displayed by checking the box in the Configure Axis Ports dialog. Define the frequency at which the error messages should be displayed after retry. Click **OK**. Continue the installation by clicking **Next>**.
9. Choose the appropriate printer driver for your printer. Click **Next>** and proceed directly to step 11. It is only necessary to perform steps 9-10 if your printer does not appear in the list.

- Note:**
- Even if the desired printer is available in the **Manufacturers and Printer Models** list, you are advised to use the printer driver provided with your printer. This assures you of the latest driver software.
10. Click the **Have Disk...** button. Insert the printer driver diskette/CD that was provided with your printer, select the appropriate diskette/CD drive and click **OK**.
 11. Select the printer driver you want to install and click **Next>**.
 12. Enter an appropriate name for your printer and click **Next>**.
 13. Choose whether you want to share the printer with other network users and click **Next>**.
 14. Choose whether you want to produce a test page and then click **Finish**.

- Note:**
- You can share the printer drivers you have installed with other AXIS Print System users on your network. In AXIS Print System, check the **Enable Driver Sharing** box in **My Printers | Settings | Program Options | General**.

Installing TCP/IP
Printers in
Windows NT 3.5x
using AXIS Print
Monitor

Install the AXIS Print Monitor software on your Windows NT3.5x client, if you have not already done so. AXIS Print Monitor can be downloaded from the AXIS Network Product CD or from www.axis.com

To be able to print using LPR, you must have installed the AXIS 5800+ Mobile in the TCP/IP environment as described in *Assign an IP address to the print server*, on page 23 and the TCP/IP protocol must be enabled on your client.

1. Open the Print Manager and select **Create Printer** from the **Printer** menu.
2. Enter an appropriate name in the **Printer Name** field.
3. Choose an appropriate printer driver for your printer from the drop-down Driver list. If the desired printer driver already appears in the displayed **Manufacturers and Printer Models** list dialog, proceed directly to step 6. It is only necessary to perform steps 4 - 5 if your printer does not appear in the model list.

- Note:**
- Even if the desired printer is available in the Manufacturers and Printer Models list, you are advised to use the printer driver provided with your printer. This assures you of the latest driver software.
4. Select **Other...** in the driver list. Insert the printer driver diskette/CD that was provided with your printer, select the diskette/CD drive and click **OK**.
 5. Select the printer driver you want to install.
 6. Select **Other...** from the "Print to" drop-down list.
 7. Select **AXIS Port** from the list of available Print Monitors in the Print Destination dialog. Click **OK**.

8. Select **LPR (TCP/IP)** as your choice of network protocol and click **OK**.
9. From the Add LPR port dialog, enter the IP address or host name of your print server and define a Logical printer name. Click **OK** to return to the Create Printer dialog.
10. Select the AXIS LPR port you wish to use from the "Print to" drop-down list. The ports appear as <port name>@<IP address> or <port name>@<host name>, e.g. PR1@192.36.254.101.
11. Click the **Settings** button. Choose whether error condition pop-up messages are to be displayed by checking the box in the Configure AXIS LPR Ports dialog. Define the frequency at which the error messages should be displayed after retry. Click **OK** to return to the Create Printer dialog.
12. Having selected and configured the chosen port, click **Next>**.
13. Select whether you want to share the printer with other network users. Click **OK**.

The printer properties are displayed in an appropriate dialog that allows you to refine your printer setup.

The Axis printer is now installed and will appear as an icon in the Print Manager.

- Note:**
- You can share the printer drivers you have installed with other AXIS Print System users on your network. In AXIS Print System, check the **Enable Driver Sharing** box in **My Printers | Settings | Program Options | General**.

Installing
NetBIOS/NetBEUI
printers in
Windows 95/98/Me
using AXIS Print
Monitor

Follow the procedures below to install Axis NetBIOS/NetBEUI printer ports on a Windows 95/98 workstation, using AXIS Print Monitor:

1. To start the Add Printer Wizard, select **Settings - Printers** from the **Start** menu and double-click the **Add Printer** icon.
2. After clicking **Next>** in the first dialog, the Wizard asks you to select Local printer or Network printer. Select **Local printer** as the AXIS 5800+ Mobile emulates a local printer port. Click **Next>**.
3. Choose the appropriate printer driver for your printer. If the desired printer driver appears in the displayed Manufacturers and Printer Models lists, highlight your selection, click **Next>** and proceed directly to step 6. It is only necessary to perform steps 4 - 5 if your printer does not appear in the model list.

- Note:**
- Even if the desired printer is available in the **Manufacturers and Printer Models** list, you are advised to use the printer driver provided with the printer. This assures you of the latest driver software.
4. Click the **Have Disk...** button. Insert the printer driver diskette/CD that was provided with your printer, select the appropriate diskette/CD drive and click **OK**.
 5. Select the printer driver you want to install and click **Next>**.
 6. Select the AXIS Printer Port from the Available Ports list. The port names appear as <name>.LP1 and <name>.LP2, where <name> is AX followed by the last six digits of the AXIS 5800+ Mobile serial number, e.g. AX100086 (default serial no.). Click the **Configure Port** button.
 7. Choose whether error condition pop-up messages are to be displayed by checking the box in the **Configure AXIS Ports** dialog. Define the frequency at which the error messages should be displayed after retry. Click **OK>**.
 8. Enter an appropriate name for your printer and click **Next>**.

Installing
NetBIOS/NetBEUI
printers in Windows
NT 4.0/2000 using
AXIS Print Monitor

9. Choose whether you wish to produce a test page and click **Finish**.

Follow the procedure below to install Axis Printer Ports from a Windows NT 4.0 or Windows 2000 workstation:

1. To start the Add Printer Wizard, select **Settings - Printers** from the **Start** menu and double-click the **Add Printer** icon.
2. *Windows 2000 only:* Start the installation by clicking **Next>**.
3. The Wizard asks you to select **My Computer** or **Network printer server**. Select **My Computer**, as the AXIS 5800+ Mobile emulates a local printer port.
4. Click **Add Port...** in the Available ports dialog, select **AXIS Port** and click **New Port...**
5. Select **NetBIOS/NetBEUI** as your choice of network protocol and click **OK**.
6. Select the AXIS Port you want to add. The ports appear as <name>.LP1 and <name>.LP2, where <name> is AX followed by the last six digits of the AXIS 5800+ Mobile serial number, e.g. AX100086 (default serial no.). Click **OK**.
7. Close the Printer Ports window.
8. Click the **Configure Port...** button. Choose whether error condition pop-up messages are to be displayed by checking the box in the Configure Axis Ports dialog. Define the frequency at which the error messages should be displayed after retry. Click **OK**. Continue the installation by clicking **Next>**.
9. Choose the appropriate printer driver for your printer. Click **Next>** and proceed directly to step 11. It is only necessary to perform steps 9-10 if your printer does not appear in the list.

Note: • Even if the desired printer is available in the **Manufacturers and Printer Models** list, you are advised to use the printer driver provided with your printer. This assures you of the latest driver software.

10. Click the **Have Disk...** button. Insert the printer driver diskette/CD that was provided with your printer, select the appropriate diskette/CD drive and click **OK**.
11. Select the printer driver you want to install and click **Next>**.
12. Enter an appropriate name for your printer and click **Next>**.
13. Choose whether you want to share the printer with other network users and click **Next>**.
14. Choose whether you want to produce a test page and then click **Finish**.

- Note:**
- You can share the printer drivers you have installed with other AXIS Print System users on your network. In AXIS Print System, check the **Enable Driver Sharing** box in **My Printers | Settings | Program Options | General**.

Installing
NetBIOS/NetBEUI
Printers in
Windows NT 3.5x
using AXIS Print
Monitor

Install the AXIS Print Monitor software on your Windows NT3.5x client, if you have not already done so. AXIS Print Monitor can be downloaded from the AXIS Network Product CD and Axis Communications web site <http://www.axis.com>

Follow the procedure below to install Axis printer ports from a Windows NT 3.5x workstation:

1. Open the Print Manager and select **Create Printer** from the **Printer** menu.
2. Enter an appropriate name in the Printer Name field.
3. Choose an appropriate printer driver for your printer from the Manufacturers and Printer Models list displayed and then proceed directly to step 6. Please note that it is only necessary to perform steps 4 - 5 if your printer does not appear in the model list.

- Note:**
- Even if the desired printer is available in the Manufacturer and Printer Models list, you are advised to use the printer driver provided with your printer. This assures you of the latest driver software.
4. Select **Other...** in the driver list. Insert the printer driver diskette/CD that was provided with your printer, select the appropriate diskette/CD drive and click **OK**.
 5. Select the printer driver you want to install.
 6. Select **Other...** in the "Print to" list box.
 7. Select **Axis Port** from the list of available Print Monitors and click **OK**.
 8. Select the AXIS Port you wish to add and then click **OK**. The ports appear as <name>.LP1 and <name>.LP2, where <name> is AX followed by the last six digits of the AXIS 5800+ Mobile serial number, e.g. AX100086 (default serial no.).
 9. Click on **Settings**. Choose whether error condition pop-up messages are to be displayed by checking the box in the Configure Axis Ports dialog. Click **OK**.

Using the Microsoft LPD monitor with Windows

Using the Microsoft LPD monitor with Windows 2000/XP

This section describes how to set up a Windows 2000/XP server for LPR printing over the TCP/IP protocol, using the built-in Microsoft LPD monitor i.e. **Print Services for Unix**.

- Note:**
- See *Alternative Method for LPR Printing*, on page 57 for instructions on how to set up printing over LPR without installing Print Services for Unix.

Basic Setup

If you have not already done so, you should perform the TCP/IP basic setup procedures prior to installing a printer for LPD printing.

Preparing for LPR/LPD printing

Follow the following steps to prepare for LPR/LPD printing:

1. Open the **Control Panel**.
2. Click **Add/Remove Programs**.
3. Click **Add/Remove Windows Components**.
4. Check **Other Network File and print Services** and click **Details**.
5. Check **Print Services for Unix** and click **OK**.
6. Click **Next** and **Finish**.
7. Close **Add/Remove Programs** and the **Control Panel**.

Installing an LPD printer

Follow the instructions below to use the standard Windows method for installing an LPD printer in Windows 2000/XP:

Go to Start | Settings | Printers and click the **Add Printer** icon to start the **Add Printer Wizard**. Select the appropriate radio button:

- **Local printer** - If you are connecting directly to the print server (peer-to-peer printing), select **Local Printer** and click **Next**. Click the **Create a new port** radio button and select **LPR Port** from the list. Follow the wizard to complete the installation (You need to know the IP address of your print server and the port you are printing to i.e. PR1 or PR2).
- **Network printer** - If your print server has already been installed by the administrator on another computer, select **Network printer** and click **Next**. Follow the instructions in the **Add Printer Wizard** to complete the installation.

- Notes:**
- Make sure that the **Automatically detect and install my Plug and Play printer** checkbox is not checked
 - Press **F1** to access the Windows online help system if you need additional help when installing a printer/print server using this method.

Alternative Method for LPR Printing

If you wish to print over LPR but do not wish to install **Print Services for Unix** you can do this by changing the printing protocol after having installed the printer using the Standard TCP/IP method, see *TCP/IP printing in Windows 2000 and Windows XP*, on page 39 for instructions.

Once the printer is installed follow these instructions to change the printing protocol:

1. Double-click the installed printer in **Start | Settings | Printers**.
2. Select **Properties** from the **Printer** menu.
3. Click the **Configure Port** button.
4. Click the **LPR** radio button and enter the queue name (pr1 or pr2).
5. Click **OK** to finish.

Using the Microsoft LPD monitor with Windows NT 4.0

This section describes how to set up a Windows NT Server v4.0 for LPR printing over the TCP/IP protocol, using the built-in Microsoft LPD monitor.

Basic Setup

If you have not already done so, you should perform the TCP/IP basic setup procedures prior to installing a printer for LPD printing.

Preparing for LPR/LPD printing

In the **Control Panel**, click the **Network** icon. If the TCP/IP Printing entry appears, then TCP/IP is already installed. Close the **Network** folder and skip to *Installing an LPD printer*, on page 56.

Follow the following steps to prepare for LPR/LPD printing:

1. Open the **Control Panel** and click the **Network** icon.
2. Select **Protocols**.
3. Add **TCP\IP Protocol**.

4. Select **Services**.
5. Add **Microsoft TCP/IP Printing**.

Installing a LPD printer

Follow the instructions below to install a printer for LPD printing:

1. Open the **Control Panel** and open the '**Printers**' folder.
2. Click **Add Printer**, select **My Computer** and then go to **Next**.
3. Select **Add Port**. In Printer Ports, choose **LPR Port** and then click **New Port**.
4. In Add LPR compatible printer, enter the host name or IP address of the AXIS 5800+ Mobile as the print server to provide LPD.
5. Enter 'pr1', 'pr2', ... 'pr8' as the name of printer or print queue on that server.
6. Choose a suitable printer driver for your printer and go to **Next**.
7. Enter a printer name and go to **Next**.
8. Enter a share name.
9. Click **Next** and then **Finish**.

Using the Microsoft LPD monitor with Window NT 3.5x

This section describes how to set up a Windows NT Server v3.5 and v3.51 for LPD printing over the TCP/IP protocol, using the built-in Microsoft LPD monitor.

Basic Setup

If you have not already done so, you should perform the TCP/IP basic setup procedures prior to installing a printer for LPD printing. These procedures are defined in *Assign an IP address to the print server*, on page 23 and onwards.

Install the TCP/IP Protocol Stack

In the **Control Panel**, click the **Network** icon. If the TCP/IP Printing entry appears, then TCP/IP is already installed. Close the **Network** folder and continue with *Installing a printer* on the next page.

Follow these steps to install the TCP/IP protocol stack:

1. In the **Control Panel**, select **Network**.
2. Click **Add Software...**
3. Select **"TCP/IP Protocol and related components"** and then click **Continue**.
4. Check **"TCP/IP Network Printing Support"** and then click **Continue**.
5. Select path and then click **Continue**.
6. Click **OK** in the Network Settings dialog box.

Installing a Printer

Follow the following step-by-step instructions to install a printer for LPD printing.

1. In the **Control Panel**, click the **Print Manager**.
2. In the **Printer** menu, select **Create Printer**.
3. In the **Printer Name** field, type a name for your printer.
4. Choose a suitable printer driver for your printer.
5. In the **Print to** field, select **Other...**
6. In the **Print Destinations** dialog, choose **LPR Port** and then click **OK**. The **Add LPR Compatible Printer** dialog will now appear.
7. In the **Name or Address** field, type the IP address or the host name of your AXIS 5800+ Mobile. If you use a host name, this must be defined in the *hosts* file on your server prior to the installation. This file is normally located in */winnt35/system32/drivers/etc/hosts*.

8. In the **Name of Printer on the Machine** field, type the logical printer number you want to use, e.g. pr1. Click **OK** and then **OK** to complete the installation.

Section 6 Setting Up - NetWare

This section describes how to continue the installation of the AXIS 5800+ Mobile in the NetWare environment. Identify which transport protocol you are running on your network and which installation method you should use. Continue the installation by selecting the appropriate installing instructions from the table below:

Installation method	Transport protocol	Action
NDPS	TCP/IP IPX/SPX	See <i>Setup using NDPS</i> , on page 62 Proceed with <i>Installing the AXIS 5800+ Mobile in an NDPS environments</i> , on page 62.

Printer Configuration method	Transport protocol	Action
PSERVER mode	IP/IPX	See <i>Setup using Queue-based printing over IP/IPX in PSERVER Mode</i> , on page 64 and then <i>Queue-based Printing Methods</i> , on page 67
Remote Printer mode	IPX/SPX	See <i>Setup for Queue-based printing over IPX/SPX (Remote Printer Mode)</i> , on page 66 and then <i>Queue-based Printing Methods</i> , on page 67

If you intend to operate your AXIS 5800+ Mobile in a multi-protocol, mixed environment, you should also proceed to the other relevant sections in this manual, namely:



- Section 5 Setting Up - Windows*, on page 37
- Section 7 Setting Up - Macintosh*, on page 69
- Section 8 Setting Up - UNIX*, on page 76

Note: • Installation instructions for Windows 3.1, WfW and OS/2 are found on www.axis.com and the AXIS Network Product CD.

Setup using NDPS

The AXIS 5800+ Mobile supports Novell Distributed Print Services (NDPS), which is Novell's new generation architecture for printing and printer administration. You can run NDPS over Pure IP (TCP/IP) or IPX/SPX.

Before the AXIS 5800+ Mobile can be installed, make sure that NDPS is installed and a Broker is loaded on your NetWare file server.

AXIS 5800+ Mobile uses the AXIS NDPS Gateway for printing in networks using either IP or IPX as transport protocols. The printer gateways are included with the NDPS software (from version 5.1 and up) and are automatically installed together with NDPS.

- Notes:**
- NDPS requires that you run NetWare 4.11 or higher.
 - Pure IP is only supported by NetWare 5 or higher.

Installing the AXIS 5800+ Mobile in an NDPS environments

Having assigned an IP address to the AXIS 5800+ Mobile as described in *Assign an IP address to the print server*, on page 23, you are now ready to install the AXIS 5800+ Mobile for NDPS printing. You can select to install the connected printers as public or controlled access printers. Follow the instructions below to install the AXIS 5800+ Mobile using NDPS:

- Notes:**
- The HP-JETADMIN parameter of the AXIS 5800+ Mobile must be set to **YES** in order for the communication between the AXIS 5800+ Mobile and the NDPS gateway to be enabled. Set this parameter in the print server's internal web pages: **admin | General Settings | HP JetAdmin Support** (default value=NO)
 - If you do not have an NDPS Manager object available, start out with creating one in the NetWare Administrator.

Public Access To create a public access printer using the NDPS Manager object in your NetWare administrator, do the following:

1. Double-click on the NDPS Manager object you will be using to control the Printer Agents.
2. At the Identification page for the NDPS Manager, click the printer **Agent List** button. The **Printer Agent List** dialog will appear.
3. Click **New**. The **Create Printer Agent** dialog will appear.
4. Type a name of your choice in the **NDPS Printer Agent** field.
5. Choose the Axis Gateway configuration in the **Gateway Type** window. Select TCP/IP or IPX as transport protocol. (See Note below).
6. Click **OK**.
7. Once you have completed the required tasks, you are ready to print in your NDPS environment. Use the Novell Print Manager to install the Public Access Printer on the client workstation.

- Notes:**
- The Public Access print servers are immediately available for everyone on the network.
 - The Axis Gateway Configuration Utility is an installation and configuration tool for NDPS printers in the NetWare environment. The Axis Gateway will appear in NetWare 5.1 and later releases. To use the Axis Gateway with earlier versions of NetWare, you can download the Axis Gateway Configuration Utility from www.axis.com.
 - To print using TCP/IP, Axis print server firmware 6.1 or later is required. In order to print using IPX/SPX, Axis print server firmware 5.51 or later is needed.

Controlled Access 1. Make sure that the HP NDPS Gateway is **not** configured to automatically create a public access printer, before you connect

the AXIS 5800+ Mobile to the network.

2. Connect the AXIS 5800+ Mobile to the NetWare network.
3. Use the NetWare Administrator to create an NDPS printer as an object in the NDS Tree.
4. Create a new Printer Agent (PA) or convert a Public Access Printer to a Controlled one.
5. Choose the Axis Gateway configuration. Select TCP/IP or IPX as transport protocol and complete required tasks.
6. You are now ready to print in your NDPS environment. Your printer will appear as an NDS object in the Directory Tree and will offer a full range of network security options.

Use the Novell Print Manager to install the controlled access printer on a client workstation.

Setup using Queue-based printing over IP/IPX in PSERVER Mode

All previous firmware versions of Axis print servers allow users to print in an IPX environment using traditional queue-based printing in PSERVER mode. This method is supported in both Bindery and NDS mode.

Axis Communications is one of the few companies in the world that offers the possibility of printing in a Pure IP environment, using queue-based printing in PSERVER mode. This method is only supported by Axis print servers with firmware version 6.0 and later and only in NDS environments. Pure IP is only supported by NetWare 5 or higher.

In a Pure IP NetWare environment, the NetWare Administrator should be used to create the printer, print server and queue objects.

Installing the
 AXIS 5800+ Mobile in
 IP/IPX

Follow the instructions below:

1. From the AXIS 5800+ Mobile internal web pages, go to **admin | Network Settings | NetWare**.
2. Set the **NDS mode** parameters on the NetWare page:
 - **PSERVER NDS Tree** (example: NW5TREE)
 or
PSERVER NDS File Server: (example: FILESERVERNAME)
 - **PSERVER NDS Distinguished Name:**
 (example: AXISXXXXXX.<context>, where <context> is the container where you want to create your print server)
3. Click **OK** when finished.
4. Use the NetWare Administrator to create the printer, print server and queue objects in the NDS tree and then link them together. The **Print Services Quick Setup** (Non-NDPS) utility can be used for this. Go to **Tools** in the **NetWare Administrator**.
5. Use the Add Printer Wizard on your work station to install the printer on your client.

Additional configuration and management can be performed from any standard Web browser. Please refer to *Using a Web browser for Print Server Management*, on page 103.

- Note:**
- If both the IPX and IP protocols are enabled in your network and the print server uses DUAL_STACK (enabled by default) as its network transport protocol, then IPX will be chosen. To force the print server to use the IP transport protocol, go to your print server's web interface and choose **Admin | Detailed View | NetWare** and change the NetWare Transport Protocol from DUAL_STACK to IP_ONLY. Save and exit when finished.

Important!

In order for the print server to log in using the IP protocol, RCONAG6.NLM has to be loaded to a specified tree. If you have multiple trees, make sure that one file server in the specified tree has RCONAG6.NLM loaded.

- Note:**
- Pure IP requires that you run NetWare 5 or higher.

Setup for Queue-based printing over IPX/SPX (Remote Printer Mode)

If you don't have a PSERVER created on the file server, start out with creating one in the NetWare Administrator, as described here:

1. Start the NetWare Administrator.
2. Choose **Tools | Print Services Quick Setup (Non-NDPS)**.
3. In the **Print Services Quick Setup (Non-NDPS)** dialogue, choose a name for the print server, printer and queue object. Choose **'parallel'** as the printer type and Postscript as the Banner type. Click **Create**.
4. Log into the AXIS 5800+ Mobile web interface and choose **admin | Network Settings | Detailed View | NetWare** and write the name of the print server you just created together with its slot number in the **NPRINTER/RPRINTER1**-field (the slot number is the number dedicated to the printer you have just created).
5. Click **OK** when done.
6. Use RCONSOLE or go to the file server console where you have created the object, load PSERVER.NLM and choose the print server you have just created.
7. From the available options, choose 'Printer Status', choose your newly created printer object and check that the status is "Waiting for job".

- Note:**
- If the status reads "Not Connected", log into the print servers web interface, choose **admin** and click the **Restart** button. The print server status in RCONSOLE will then change from "Not Connected" to "Waiting for job".
 - If you choose to install the AXIS 5800+ Mobile on an already existing PSERVER, make sure that you choose the next available printer number (slot number).

Queue-based Printing Methods

The following overview explains the advantages and limitations of the two supported queue-based printing methods.

Print Server Mode

The AXIS 5800+ Mobile logs in to a file server(s) and repeatedly polls the print queues for print jobs. In this fashion, the AXIS 5800+ Mobile emulates a NetWare print server, which is a workstation running PSERVER. It provides high printing speed with low network load and is the recommended mode for medium to large sized networks. Each print server in PSERVER mode takes one NetWare user license.

- | | |
|-------------|---|
| Advantages | <ul style="list-style-type: none"> • High performance: up to 1 Mbyte/s. |
| Limitations | <ul style="list-style-type: none"> • In bindery mode, this printing method requires a NetWare user licence for each AXIS 5800+ Mobile to file server link. |

Remote Printer Mode

The AXIS 5800+ Mobile acts as Remote Printer for PSERVER.NLM running on the NetWare file server, or to a dedicated workstation running PSERVER.EXE. In this fashion, the AXIS 5800+ Mobile emulates a workstation running the NetWare remote printer software RPRINTER, or NPRINTER. This mode is only recommended for small networks where the number of NetWare user licences is a major issue.

- | | |
|-------------|--|
| Advantages | <ul style="list-style-type: none"> • NetWare user licences are not required. |
| Limitations | <ul style="list-style-type: none"> • Lower performance, typically 20 - 70 kbytes/s for NLM. • Higher network load. |

NetWare Packet Signature

AXIS 5800+ Mobile supports NetWare Packet Signature Level 1, 2, 3, which protects servers and clients using the NetWare Core Protocol™ services. NCP packet signature prevents packet forgery by requiring the server and the client to sign each NCP packet. See your Novell NetWare documentation for detailed information.

Section 7 Setting Up - Macintosh

Having connected the AXIS 5800+ Mobile to your network, this section now describes how to set up your AXIS 5800+ Mobile for printing in Mac OS X and Macintosh environments using AppleTalk.

If you intend to operate your AXIS 5800+ Mobile in a multiprotocol environment, you should also proceed to the other relevant sections in this manual:

Section 6 Setting Up - NetWare, on page 61

Section 5 Setting Up - Windows, on page 37

Section 8 Setting Up - UNIX, on page 76

- Note:**
- Installation instructions for Windows 3.1, WfW and OS/2 are found on www.axis.com and on the AXIS Network Product CD.

Installation in Mac OS X

This section describes setting up your AXIS 5800+ Mobile for printing in the Mac OS X.

1. Select **Print Center** from the **Applications | Utilities** folder.
2. Click **Add Printer...**
3. From the Printer List dialog, select **LPR Printers using IP**.
4. Enter the IP address or Host name of your AXIS 5800+ Mobile.
5. Select **Use Default Queue on Server** or enter LPT1 or LPT2 in the **Queue Name** field.
6. Select an appropriate printer driver for your printer or, if is not available in the list, select **Generic**. You can also browse for a printer driver on your computer or network by selecting **Other...** from the list.
7. Click **Add** to complete the installation.

Installation Using the Chooser Window

Basic Configuration

Basic configuration in AppleTalk is performed simply by opening the Chooser window and selecting a printer.

You can change the default name of your AXIS 5800+ Mobile or any of default parameters by editing the *config* file. To access the *config* file from a Macintosh, you can use:

- any Java enabled Web browser
- FTP using MacTCP, Fetch or Anarchie

In order to use any of the methods, you must assign an IP address to the AXIS 5800+ Mobile as described in *Setting Parameters*, on page 74.

Choosing a Printer

Selecting a Printer

The method for choosing a printer varies depending on which version of LaserWriter printer driver you are using.

- The LaserWriter 7.0 driver assumes that you use a standard PostScript driver, and cannot take advantage of any printer specific features.
- The LaserWriter 8.0 driver uses PPD files that contain printer descriptions. This gives you full control over any features your printer might have.

Autodetect Printer Type

The print server can automatically detect the type of printer you are using if you enable the 'Autodetect Printer Type'-function. The print server can then recognize Epson and Hewlett Packard InkJet printers. Most Epson and Hewlett Packard InkJet printers that have MacOS printer drivers for network printing are supported. Without the Autodetect Printer Type function, the AppleTalk printer type has to be specified manually in the print

server. For Epson InkJets it would be "EPSONLQ2" and for HP InkJets it would be "DeskWriter". If the print server doesn't recognize the connected printer the default setting "LaserWriter" will be used as printer type. "LaserWriter" is the recommended setting to be used with all PostScript printers.

To enable the 'Autodetect Printer Type'-function:

1. Log in to your print server's web interface and choose: **Admin | Network Settings | Detailed View | Macintosh | AutoDetectPrinterType | YES.**

See the print server's web interface **Help** pages for details.

LaserWriter 7.0 Printer Driver

Follow the instructions below to choose a printer:

1. Select **Chooser** from the **Apple** menu.
2. Click the **LaserWriter** icon.
3. If your network has more than one zone, click on the zone you want. If your network has no zones, this box does not appear.
4. Click the name of the printer you want. The default AXIS 5800+ Mobile printer names are shown as: AXIS<nnnnnn>_<port>, where <nnnnnn> is the last six digits of the AXIS 5800+ Mobile serial number, and <port> is LPT1 and LPT2. For example: AXIS100086_LPT1.
5. Click the **Close** box. This completes the configuration and closes the Chooser.

Repeat this procedure for each Macintosh computer on the network using the AXIS 5800+ Mobile.

LaserWriter 8.0 Printer Driver

Follow the instructions below to choose a printer:

1. Select **Chooser** from the **Apple** menu.
2. Click the **LaserWriter 8.0** icon.
3. If your network has more than one zone click on the zone you want. If your network has no zones, this box does not appear.

4. Click the name of the printer you want. The default AXIS 5800+ Mobile printer names are shown as: AXIS<nnnnnn>_<port>, where <nnnnnn> is the last six digits of the AXIS 5800+ Mobile serial number, and <port> is LPT1 and LPT2 respectively. For example: AXIS100086_LPT1.
5. Click '**Setup...**' and then '**Auto Setup**'. If the selected printer supports bi-directional printing and the appropriate PPD file is available, the installation is performed automatically and you can therefore proceed directly to step 7. If this is not the case, the PPD file must be selected manually, as described in step 6.
6. Choose the PPD file matching your printer, and click '**OK**'. If your printer does not appear in the PPD file list, please contact your printer vendor. Use the Generic PPD if you do not need any printer specific features.
7. Click '**OK**', and then click the **Close** box. This completes the configuration and closes the Chooser.

Repeat this procedure for each Macintosh computer on the network using the AXIS 5800+ Mobile.

Bi-directional support

The AXIS 5800+ Mobile allows the printer driver to communicate directly with the printer and consequently facilitates complete functional control over print jobs, e.g. automatic downloading of fonts not resident in the printer.

This functionality has backward compatibility with older printers and Macintosh computers, which means that the AXIS 5800+ Mobile can generate appropriate responses to Macintosh printer queries, when the connected printer does not support bi-directional communication.

Verifying the Setup

You simply need to print a document from the Macintosh computer to verify communication to the chosen printer. The basic installation can be considered complete if the print test is satisfactory. The AXIS 5800+ Mobile is now ready to use as a print server.

- Note:**
- For information on advanced AppleTalk functions such as non-PostScript printer support, please refer to the Axis NPS Print Server Technical Reference on the Axis web site at www.axis.com

ASCII, TBCP and BCP

ASCII (American Standard Code for Information Interchange). ASCII is the most common format for text files in computers and on the Internet. In an ASCII file, each alphabetic, numeric, or special character is represented with a 7-binary digit binary number (a string of seven 0s or 1s). 128 possible characters are defined.

The Binary Communication Protocol (BCP) and the Tagged Binary Communication Protocol (TBCP) are communication protocols used by the serial and parallel ports of a printer. They allow 8-bit binary data in files concurrent with the use of some control characters, for communication and print job control. TBCP is required for printing with a binary data stream on some printers, e.g HP printers.

- Note:**
- Some printers, e.g. Epson InkJet printers, can not be used when TBCP is enabled.

Setting Parameters

In AppleTalk, you can change a limited number of the parameters of the AXIS 5800+ Mobile. You can:

- enable and disable binary data transfers for your printing
- select the type of binary transfer protocol to use
- specify the AppleTalk printer type
- set the IP address

However, by assigning an IP address to your AXIS 5800+ Mobile, you have access to all of print server's parameters via any standard Web browser or via FTP. Refer to *Section 11 Management and Configuration*, on page 102 for more information.

Example: The following example describes the how you set the AXIS 5800+ Mobile parameters in AppleTalk.

Important: DO NOT use the parameter values from this example when configuring your AXIS 5800+ Mobile. You should select values that are appropriate for your printers and network settings.

Follow the instructions below:

1. Open the Chooser.
2. Select a network printer driver, any LaserWriter will do.
3. Select the printer port which name ends with "_CFG".
4. Close the Chooser.
5. Open a text editor, e.g. SimpleText.

6. Write a text file containing the parameters you want to set:

BINARY_TYPE_1.	:BCP
INT_ADDR.	:192.168.3.191
ATYPE_1.	:EPSONLQ2

Parameters that you do not want to set should be excluded from the text file. Refer to *15 - Parameter List*, on page 151, for information about which values that are valid for each parameter.

7. Print the text file. The settings will be stored in the print server.
8. Open the Chooser and select the printer port you wish to use for printing documents.
9. Close the Chooser.

- Note:**
- The `_CFG` port disappears 60 minutes after the AXIS 5800+ Mobile has been powered on. If you want it to reappear, you must restart your AXIS 5800+ Mobile.

Section 8 Setting Up - UNIX

Installation in a UNIX Environment

Having performed the basic TCP/IP setup procedures as defined in *Assign an IP address to the print server*, on page 23 and onwards, you are now able to print in interactive mode using PROS, LPR, FTP or Reverse Telnet protocols.

However, if you want to integrate the AXIS 5800+ Mobile with your host spooler, you can use the Axis automatic installation script *axinstall*. This utility software is resident on the AXIS 5800+ Mobile and can be downloaded to your host using FTP, so no disks are required. The *axinstall* script is also available from the Axis web site at www.axis.com and the AXIS Network Product CD.

Having completed this operation, the printer connected to the AXIS 5800+ Mobile will appear as though it is directly connected to the host printer spooler.

If you intend to operate your AXIS 5800+ Mobile in a multiprotocol environment, you should also proceed according to one or more of the following sections, as appropriate to your network.

Section 6 Setting Up - NetWare, on page 61

Section 5 Setting Up - Windows, on page 37

Section 7 Setting Up - Macintosh, on page 69

Integration with the Host Printer Spooler

To integrate the AXIS 5800+ Mobile with the host printer spooler, you can use the auto installation script *axinstall*, resident in the AXIS 5800+ Mobile. Follow the instructions below to install *axinstall* onto your host using FTP:

1. Login to the AXIS 5800+ Mobile using the command:

```
ftp <host name>
```

-OR-

```
ftp <IP address>
```
2. Enter *root* as the user id and *pass* as the password.
3. Download the script using the command:

```
get axinstall
```

Log out using the command *quit*, *bye* or *exit* depending on your FTP version.

```
> ftp npserver
connected to npserver.
220 AXIS 5800+ Mobile FTP Print Server v6.30 March 23
2002 ready.
Name (npserver:thomas): root
331 User name ok, need password
Password: pass (not visible)
230 User logged in
ftp> get axinstall
200 PORT command successful.
150 Opening data connection for axinstall
(192,36,253,4,13,223), (mode ascii).
226 Transfer complete.
local: axinstall remote: axinstall
61187 bytes received in 14 seconds (4.2 kbytes/s)
ftp> bye
221 Goodbye.
>
```

Typical FTP session for collecting the axinstall script

The *axinstall* script has now been downloaded to your host. Execute the script with this command:

```
sh axinstall
```

You will be guided through the installation by a step-by-step procedure. During the installation you will be asked to select a print method; we suggest you choose LPD or, for more functionality, use the PROS filter or named pipe methods. Please refer to the following pages if you need guidance on the choice of print methods.

The *axinstall* script will suggest one of the systems listed below when started. If you do not find the suggestion appropriate, then manually select any of the systems listed.

```
1...SunOS 4 (SUN BSD, Solaris 1.x)
2...SunOS 5 (SUN SYS V, Solaris 2.x)
3...AIX (IBM RS/6000, BULL DPX 20)
4...HP-UX (HP 9000)
5...BOS (BULL DPX 2)
6...DEC OSF/1 (Digital Equipment, Alpha)
7...ULTRIX (Digital Equipment, DEC)
8...IRIX (Silicon Graphics, SGI)
9...SCO UNIX (Santa Cruz Operation)
10...SCO UnixWare 2.x
11...SCO UnixWare 7
12...SCO OpenServer
13...FreeBSD (Berkeley UNIX)
14...Linux

15...Generic BSD (Berkeley UNIX)
16...Generic SYS V R3 (UNIX System V Release 3)
17...Generic SYS V R4 (UNIX System V Release 4)
```

Systems supported by axinstall

Print Methods on TCP/IP Networks

The AXIS 5800+ Mobile supports several different print methods in the TCP/IP environment. *axinstall* will suggest a print method suitable for your particular UNIX system, but you might want to use another method depending on your printing requirements (banner pages, status logging, etc).

The diagram below shows the alternative data paths taken by some of the UNIX print methods. This illustrates some of the advantages and limitations of the different methods. Use the following information to determine which method to adopt.

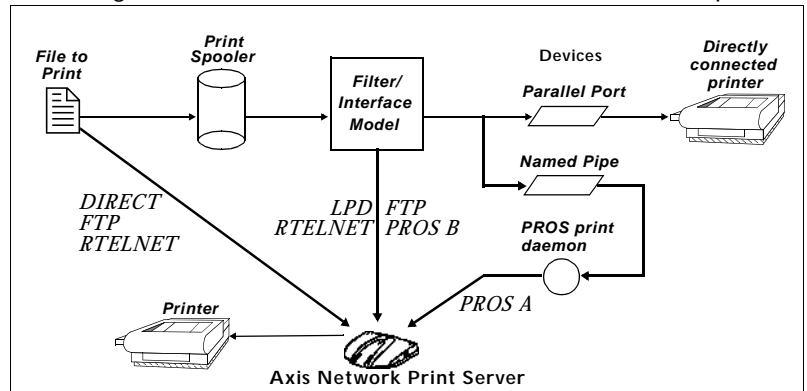


Illustration of different UNIX print methods

LPD

The Line Printer Daemon is a protocol for transferring print jobs between hosts. This is the recommended method for UNIX systems, but some System V versions do not support LPD.

Advantages:

Easy to set up – install the AXIS 5800+ Mobile as a remote queue in System V, or add a remote printer to `/etc/printcap` using the `rm` and `rp` fields (BSD).

Limitations:

Spooler features, and `printcap` or `lpr` options (BSD) such as multiple copies, are not available.

FTP

The File Transfer Protocol is used for transferring files between hosts.

Advantages:

Uses industry standard network software on the host.

Limitations:

No printer status logging. In the case of BSD it may conflict with other input or output filters and does not allow both input and output filters. In System V no filters or interface programs can be used.

PROS

A protocol developed at Axis. Comes in two versions; *named pipe* (PROS A) and *filter* (PROS B).

PROS A**PROS A - Advantages:**

The AXIS 5800+ Mobile appears as a device to the system. This makes all filter and model options available. It provides accounting and status logging. Supports bi-directional printing. The printer information read back can be viewed in a log file.

PROS A - Limitations:

A 'C' compiler is required to build the PROS A drivers.

Note: • You can download a 'C' compiler from <http://www.gnu.org/>.

PROS B PROS B - Advantages:

It provides accounting and status logging. Supports bi-directional printing. The printer information read back can be viewed in a log file.

PROS B - Limitations:

A 'C' compiler is required to build the PROS B drivers and in the case of BSD, it may conflict with other input or output filters. It does not allow both input and output filters. Interface programs can not be used in System V.

Reverse Telnet

Often used for printing via a terminal server printer port. Only recommended if you already have a Reverse Telnet driver installed.

Advantages:

Easy to set up with previously installed Reverse Telnet drivers.

Limitations:

No status logging. Drivers are not supplied with the AXIS 5800+ Mobile. Existing drivers may be slow.

Other UNIX Systems

Most UNIX systems resemble either BSD or System V and so with some ingenuity, a solution can also be devised for other variants.

If the system has BSD socket type networking support, then `prosbbsd` (in the `bsd` directory of the AXIS 5800+ Mobile) can be used as a starting point. It receives print data from `stdin`, and writes a log file to `stderr`. Nothing is written to `stdout`.

Alternatively, FTP may be used. It is a good idea to use `bsd/ftp_bsd` or `sysv/ftp_sysv` as a starting point.

IBM MVS Systems

A sample JCL script, `jcllex`, is available in the `mvs` directory of the AXIS 5800+ Mobile. It gives an example of how to print a file from an MVS mainframe to an AXIS 5800+ Mobile using FTP.

Section 9 IPP - Internet Printing Protocol

The AXIS 5800+ Mobile print server enables printing over the Internet with IPP (Internet Printing Protocol), a developing industry standard that allows users to print to remote printers across the Internet.

With IPP, a user with an Internet connection can send a document to any Internet-connected printer. IPP is platform-independent and can be used to print over any LAN or WAN that supports TCP/IP.

In practical terms this means that you can send documents to a remote printer as an addition to or replacement of fax and e-mail, with the same quality and color options of traditional network printing.

In order to print to a remote printer using IPP, you need the following:

- An *IPP client* installed on your computer together with appropriate printer drivers. The IPP client is a tool that adds destination printers to your printer list. A list of available IPP clients can be viewed in *IPP clients*, on page 85.
- The printer to which you want to send your print job needs to be connected to *a print server with IPP functionality*. AXIS 5800+ Mobile makes it possible for your printer to receive print jobs from an IPP client. The IPP-functionality of the AXIS 5800+ Mobile print server is automatically activated upon installation.

IPP Printing Requirements

Before you print to an IPP printer you need to know:

- **the http:// address of the print server.** (The http:// address contains the **IP address** or **host name** of the print server, the **port number (which is 631 and only used in the 1.0 standard)** and the **printer port name**).
- **the brand and model of the printer** in order to install the appropriate printer driver.
- **the printer port name** of the print server to which the printer is connected.

Address-schemes for IPP printers

When using IPP printing, you need to know the IP address or host name of your IPP-enabled Axis print server. IPP is a client-server type protocol which comprises two industry standards:

- **the 1.0 standard**, which uses a http: address scheme.
- **the 1.1 standard**, which uses an ipp: address scheme.

The URL syntax for the **destination printer** contains:

1. the **print server host name or IP-address**
2. the **port number 631 (only used in the 1.0 standard)**.
3. the **local printer port name**

Example using host name in the 1.0 standard:

If "axisps" is the host name of the AXIS 5800+ Mobile print server, "631" is the port number and "LPT1" is the local printer port name, then the syntax of the address scheme will be **http://axisps:631/LPT1** in the 1.0 standard.

IPP address using host name	Corresponding printer
http://axisps:631/LPT1	Printer attached to the LPT1 parallel port

Example using IP-address in the 1.1 standard:

If "171.16.5.218" is the IP-address of the AXIS 5800+ Mobile print server and "LPT1" is the local printer port name, then the syntax of the address scheme will be **ipp://171.16.5.218/LPT1** in the 1.1 standard.

IPP address using IP address	Corresponding printer
ipp://171.16.5.218/LPT1	Printer attached to the LPT1 parallel port

IPP clients

An *IPP client* needs to be installed on your computer together with an appropriate printer driver for proper IPP functionality. The IPP client is a tool that adds destination printers to your printer list.

The AXIS 5800+ Mobile print server with integrated IPP is compatible with any 1.0 and 1.1 - compliant IPP client.

The AXIS 5800+ Mobile print server presents IPP Printer objects to the client, one for each printer port. Some of the most common IPP client printing methods are described later on in this chapter. Please refer to your client documentation for more specific information.

Currently available IPP clients on the market:

- **For Windows NT/2000:** the Internet Printer Connection software from Hewlett Packard (can be downloaded from the Hewlett Packard web site).
- **For Windows 2000/XP:** the Microsoft IPP Client (automatically installed with OS).
- **For Windows 95/98, NT 4.0:** IPP clients can be downloaded from the Microsoft web site.
- **For Unix/Linux:** CUPS (can be down-loaded from the Common Unix Printing System web-site: <http://www.cups.org>).

User Requirements

The IPP protocol does not require any special configuration of the AXIS 5800+ Mobile print server, the IPP function is automatically activated when you install your AXIS 5800+ Mobile.

IPP is platform independent and functional in Windows (NT, 95, 98, Me and 2000/XP), Macintosh, OS/2, NetWare and UNIX.

Firewall Considerations

If there are one or more firewalls between the IPP Client and the server, you may have to make some changes to the firewall configuration. IPP uses TCP Port 631 for printing, so any firewalls between client and server must be configured to allow bi-directional traffic on that port. Please consult your network administrator if you think any configuration changes are necessary.

How to print

IPP printing in Windows 95/98:

In this example the printer's http: address is `http://171.16.5.218:631/LPT1`. Before you print to an IPP printer you will need to know:

- **the http:// address of the print server.** The http:// address contains the **IP address** or **host name** of the print server and the **printer port name**.
- **the brand of the printer** in order to install the appropriate printer driver.
- **the printer port** of the print server to which the printer is connected.

If your destination printer does not exist in your **Printer name** list, you need to add it. Adding an IPP-printer to your printer list is described in *Adding an IPP printer to your printer list in Windows '95/'98*, on page 87.

1. Select the IPP printer to which you want to send your document. Choose the destination printer from the **Printer name** field (In **File | Print**).
2. When you press **Print**, the print job is sent over the Internet to the AXIS 5800+ Mobile print server, which then forwards the print job to the destination printer.
3. The recipient of the print job can collect the printjob at the destination printer.

Adding an IPP printer to your printer list in Windows '95/'98

1. Install the IPP client for Windows 95/98 on your computer. This IPP client can be downloaded from the Microsoft web site.
2. Open **Start | Settings | Printers**.
3. Choose **Add Printer**, then **Network Printer**.
4. In the **Printer** field in the **Connect to Printers** window, write the http: address of the destination printer:
http://171.16.5.218:631/LPT1.
5. Select the appropriate printer driver corresponding to the destination printer.
6. Specify a name for the printer you wish to add to your printer list. Click **Finish**. The destination printer will be added to your printer list. You are now ready to print using IPP.

IPP printing in Windows NT:

Before you print to an IPP printer you will need to know:

- **the http:// address of the print server.** The http:// address contains the **IP address** or **host name** of the print server and the **printer port name**.
 - **the brand of the printer** in order to install the appropriate printer driver.
 - **the printer port** of the print server to which the printer is connected.
1. First you need to select the IPP printer to which you want to send your document. Select the destination printer from your **Printer**

Name list (In File | Print | Printer Setup).

The printer name will begin with a URL: **http://...**


If your destination printer does not exist in your **Printer Name** list, you need to add it. Adding an IPP-printer to your printer list is described in *Adding an IPP printer to your printer list in Windows NT*, on page 88.

2. When you press **Print**, the print job is sent over the Internet/WAN to the AXIS 5800+ Mobile print server, which then forwards the print job to the destination printer.
3. The recipient of the print job can collect the print job at the destination printer.


Adding an IPP printer
to your printer list in
Windows NT

In this example the print servers http: address is **http://171.16.5.218**, the printer is connected to the AXIS 5800+ Mobile print server port LPT1 and the printer is a HP LaserJet 5Si (and the port number is 631).


1. Install the Internet Printer Connection software from Hewlett Packard (can be down-loaded from the Hewlett Packard web site) on your computer.
2. Open **Start | Settings | Printers**.
3. Choose **Add Printer**. The Add Printer Wizard will start.
4. Next, the Wizard will ask you if you want to install on **My Computer** or on a **Network print server**. Choose **My Computer** and click **Next**:

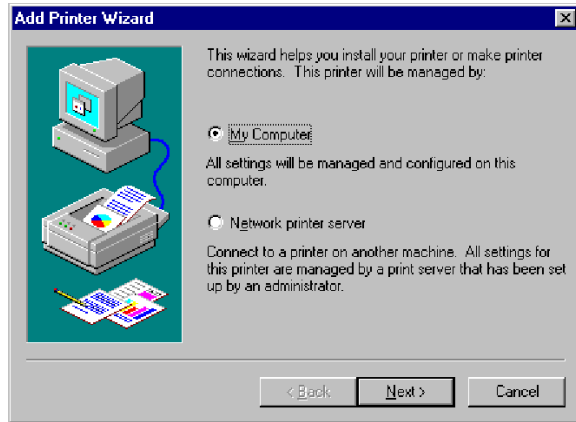

5. In the **Available Ports** window, click **Add Port**:

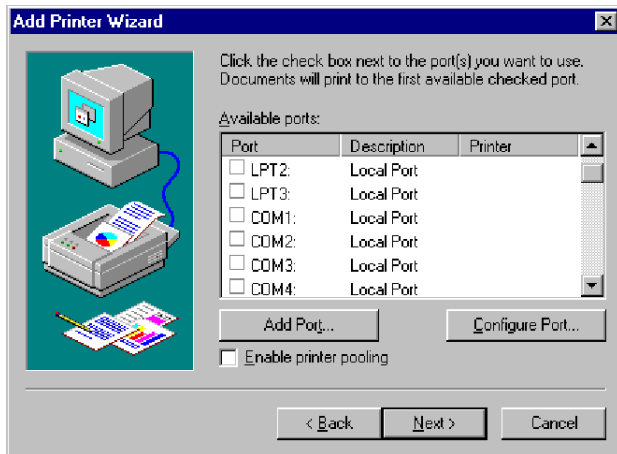


- The **Printer Ports** dialog will appear, showing a list of **Available Printer Ports**.

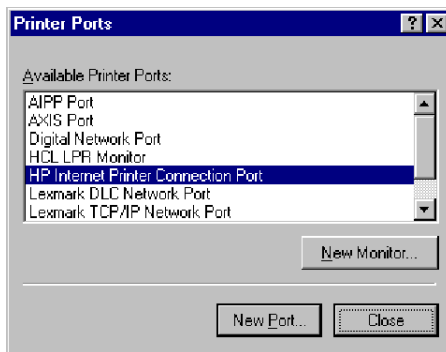


Choose **The HP Internet Printer Connection Port** and click **New Port**.

- The HP Internet Printer Connection will start. Click **Next**.
- In the **IP Address, Host Name or URL** field, type the `http://` address of the Axis print server to which the destination printer is connected. The URL will automatically appear in the **Port Name** field as well:

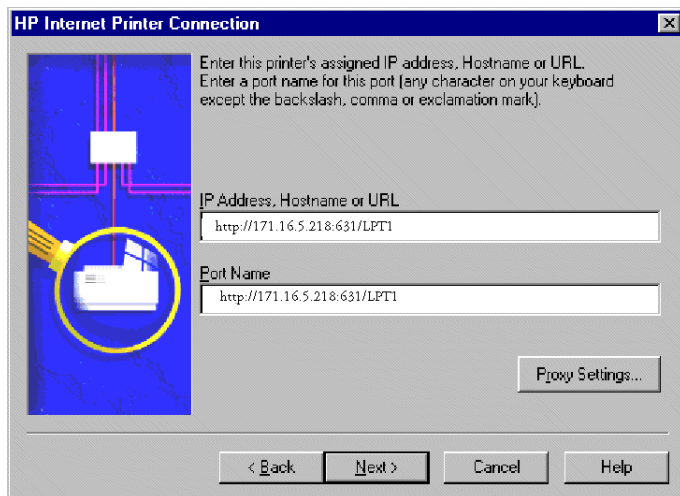


In this example the printer's `http:` address is `http://171.16.5.218:631/LPT1`. Click **Next**.

9. Next, the Wizard will confirm the information you have entered. Click **Finish** to complete the installation and go back to the **Available Ports** list.
10. The IPP printer port list is now available in the **Available Ports** list. Click **Next**.
11. Next, choose a suitable driver for the destination printer and install it. Click **Next**.

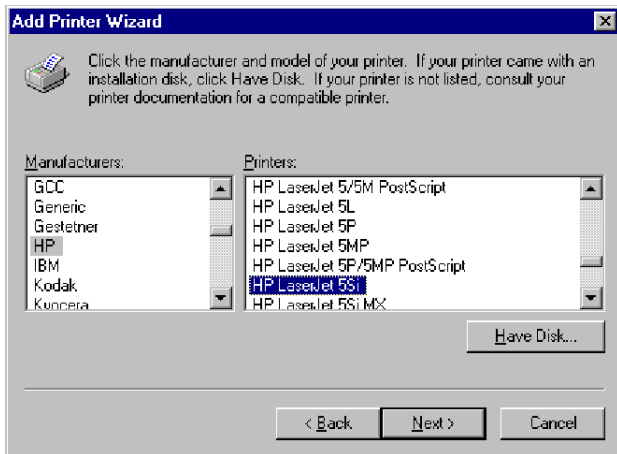

12. You will be asked if you want the newly added printer to be your default printer and if you want to share the printer on your network with other users. Choose the alternatives that suit your printing needs and click **Finish** to complete the installation.

13. The new printer will appear in your **Printer** window. You are now ready to start printing using IPP.

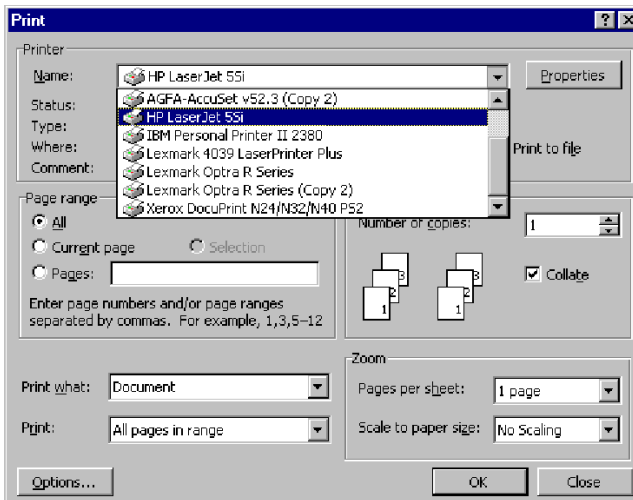

IPP printing in
Windows 2000/XP

Before you print to an IPP printer you will need to know:

- **the http:// address of the print server.** The http:// address contains the **IP address** or **host name** of the print server and the **printer port name**.
 - **the brand of the printer** in order to install the appropriate printer driver.
 - **the printer port** of the print server to which the printer is connected.
1. Select the IPP printer to which you want to send your document. Choose the destination printer from the **Select Printer** field (In **File | Print**).

If your destination printer does not exist in your **Select Printer** list, you need to add it. Adding an IPP-printer to your printer list is described in *Adding an IPP printer to your printer list in Windows 2000/XP*, on page 93.

2. When you press **Print**, the print job is sent over the Internet to the AXIS 5800+ Mobile print server, which then forwards the print job to the destination printer.


3. The recipient of the print job can collect the printjob at the destination printer.

Adding an IPP printer to your printer list in Windows 2000/XP

In this example the print servers' http: address is http://171.16.5.218, the printer is connected to the AXIS 5800+ Mobile printer port LPT1 and the printer is a HP DeskJet 1120C (and the port number is 631).


Thus, the printers http:// address is http://171.16.5.218:631/LPT1.

1. Choose **File | Print** from the document you wish to print.
2. In the **Select Printer** field, click the **Add Printer** icon. The **Add Printer Wizard** will start.
3. The Wizard will ask you if you want to install a local printer or a network printer. Choose **Network Printer** and click **Next**.
4. Enter the printer `http:` address in the **URL** field, e.g. http://171.16.5.218:631/LPT1 and click **Next**:

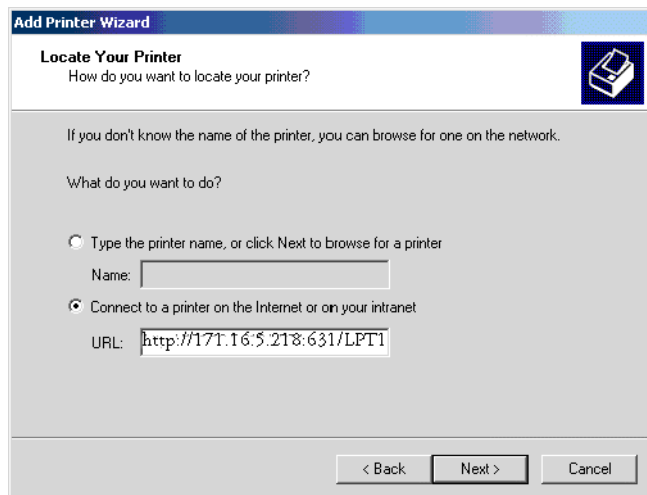


5. If you do not have a driver corresponding to the destination printer installed on your computer, the Wizard will prompt you to install one. Click **OK**:

- The Installation Wizard will ask you to select a printer driver corresponding to the destination printer. Select the printer driver from the list and click **OK**:

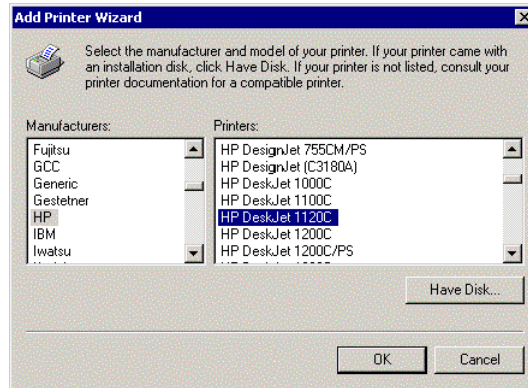

- The Wizard will ask you if you want the printer to be your default destination printer. Make your choice and click **Next** to complete the Add Printer Wizard installation.
- The new printer is added to your **Select Printer** window:

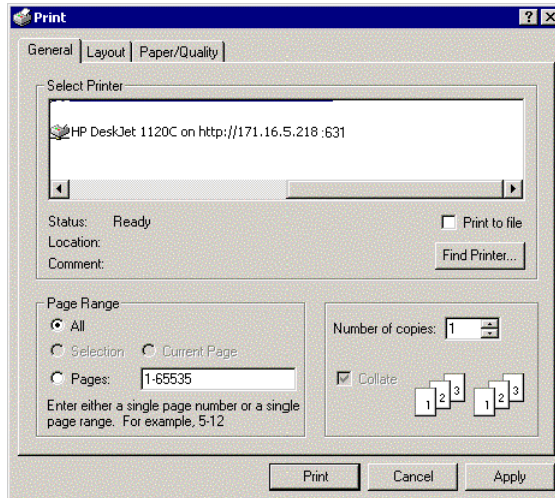

- You are now ready to print using IPP: specify your new destination printer from the printer list and click **Print**.

Section 10 Wireless Printing

The AXIS 5800+ Mobile enables printing from *Bluetooth* units:

- Printing from a laptop with *Bluetooth* support.
See *Bluetooth Printing from a Laptop*, on page 96.
- Printing from an Ericsson mobile phone with *Bluetooth* support.
See *Bluetooth Printing from a Mobile Phone*, on page 101.

- Note:**
- Printing from HCRP, SPP or OPP *Bluetooth* 1.1 compliant clients is possible but is not described in this manual. Refer to the user documentation of your client for information.

Bluetooth[™] The AXIS 5800+ Mobile complies with *Bluetooth* version 1.1

Bluetooth[™] Profiles The following implementations of *Bluetooth* user models are supported:

- HCRP** - Hard Copy Cable Replacement Profile,
- OPP** - Object Push Profile,
- SPP** - Serial Port Profile
- APP** - AXIS Print Profile (Axis proprietary)

Bluetooth Printing from a Laptop

Refer to the table below and check that the necessary software has been installed on your laptop

Hardware	Bluetooth support	System requirements	Software requirements
Toshiba laptop	Integrated <i>Bluetooth</i> support	Windows 98SE, Me, NT SP6, 2000 SP2 or XP	Bluetooth drivers from Toshiba version 1.02.09 or later AXIS Wireless Printing Utility version 1.20 or later
Laptop	<i>Bluetooth</i> PC Card (Motorola, Toshiba, IBM, Dell or NEC)	Windows 98SE, Me, NT SP6, 2000 SP2 or XP	Bluetooth Software Suite version 1.09 or later AXIS Wireless Printing Utility version 1.20 or later
Laptop	Integrated <i>Bluetooth</i> support		Client software supporting the HCRP profile or the SPP profile

- Note:**
- All Axis software and upgrades are available free of charge from the AXIS Network Product CD or from the Axis web site at www.axis.com

AXIS Wireless Printing Utility

AXIS Wireless Printing Utility is printing software that needs to be installed on your laptop for printing over *Bluetooth* using the APP profile (Axis proprietary).


Once installed, AXIS Wireless Printing Utility will create a default virtual printer, the AXIS Wireless Printer. A generic PCL printer driver is used by default for the print jobs, which will work directly with most Laser-type printers. It is possible to change this driver if your printer model requires it. See *Creating Additional Wireless Printers in Windows 98 & ME*, on page 98 or *Creating Additional Wireless Printers in Windows NT, 2000, XP*, on page 99.

When you print from a Windows application, e.g. Word, AXIS Wireless Printing Utility will display available *Bluetooth* printers in a list.

When you have chosen the printer to which you want to print, AXIS Wireless Printing Utility will send the print job to the selected printer via *Bluetooth* Wireless Technology.

How to Print from a Laptop over *Bluetooth*

1. From any Windows application (e.g. Word), select **File | Print**.
2. From the Windows list of available printers, select **AXIS Wireless Printer** and click **OK**.
3. The very first time AXIS Wireless Printing Utility is used it will search the area for *Bluetooth* printers. Available *Bluetooth* printers will be displayed in the AXIS Wireless Printing Utility main window. These printers will be saved and show up the next time you want to print. In order to perform a new scan (for instance in a new environment) click the **Refresh** button in the AXIS Wireless Printing Utility main window.
4. Select a printer and click **Print**.

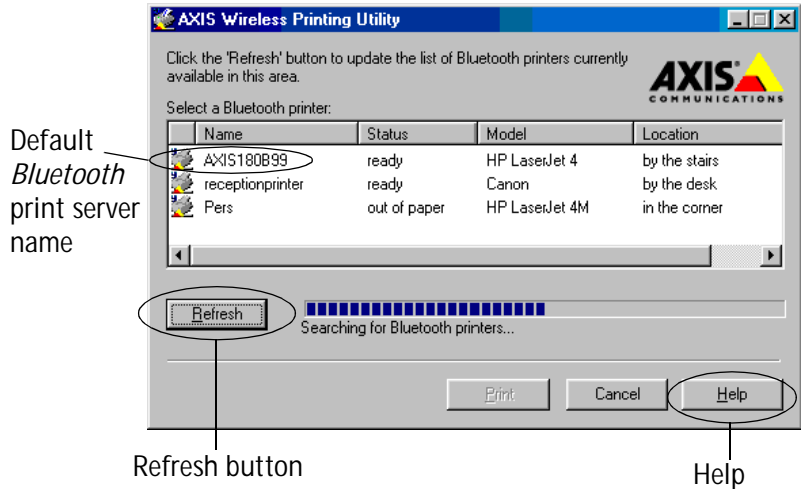

AXIS Wireless Printing Utility main window

- Notes:**
- You can send a print job to a printer as soon as it appears in the list. The search will then be aborted.
 - If you perform a search while a specific printer is busy printing a print job, that specific printer will not show up in the AXIS Wireless Printing Utility list.

- If **Axis Wireless Printer** doesn't show up in the Windows list of available printers, you need to create it. See *Creating Additional Wireless Printers in Windows 98 & ME*, on page 98 or *Creating Additional Wireless Printers in Windows NT, 2000, XP*, on page 99. Remember to name the printer object "AXIS Wireless Printer".

Default Name

In AXIS Wireless Printing Utility, the AXIS 5800+ Mobile default name will be 'AXISXXXXXX'. The six Xs represent the last six digits of the print server's serial number, found on its underside label.

To change the names of the items in the "Name", "Location", etc. columns, see *Assigning a User-friendly Print Server 'Location' and 'Name'*, on page 110.

Default Printer Driver

AXIS Wireless Printing Utility uses a generic PCL printer driver by default for the print jobs, which will work directly with most Laser-type printers.

Creating Additional Wireless Printers in Windows 98 & ME

If you wish to print to a non-PCL printer (e.g. an InkJet), or to a printer with advanced functionality (duplex, color, stapling, etc) you need to create an additional AXIS Wireless Printer with accompanying driver. These drivers are usually located on the CD/diskette accompanying your printer or on your operating system CD. Follow these procedures to install additional wireless printers in Windows 98 and ME:

1. To start the Add Printer Wizard, select **Settings - Printers** from the **Start** menu and double-click the **Add Printer** icon.
2. After clicking **Next>** in the first dialog, the Wizard asks you to select **Local printer** or **Network printer**. Select **Local printer** as the AXIS Wireless Printing Utility emulates a local printer port. Click **Next>**.
3. Choose the appropriate printer driver for your printer. If the desired printer driver appears in the displayed **Manufacturers and Printer Models** lists, highlight your selection, click **Next>** and proceed directly to step 5.

- Even if the desired printer is available in the **Manufacturers and Printer Models** list, you are advised to use the printer driver provided with the printer. This assures you of the latest driver software.
4. Click the **Have Disk...** button. Insert the printer driver diskette/CD that was provided with your printer, select the appropriate diskette/CD drive and click **OK**.
 5. Select the printer driver you want to install and click **Next>**.
 6. Select the **AXIS Wireless Port** from the **Available Ports** list.
 7. Enter an appropriate name for your printer and click **Next>**.
 8. Choose whether you wish to produce a test page and click **Finish**.

Creating
Additional Wireless
Printers in
Windows NT, 2000, XP

If you wish to print to a non-PCL printer (e.g. an InkJet), or to a printer with advanced functionality (duplex, color, stapling, etc) you need to create an additional AXIS Wireless Printer with accompanying driver. These drivers are usually located on the CD/diskette accompanying your printer or on your operating system CD/diskette. Follow these procedures to install additional wireless printers in Windows NT 4.0 or Windows 2000:

1. To start the Add Printer Wizard, select **Settings - Printers** from the **Start** menu and double-click the **Add Printer** icon.
 2. *Windows 2000/XP only.* Start the installation by clicking **Next>**.
 3. The Wizard asks you to select **My Computer** or **Network printer** server. Select **My Computer**, as the AXIS Wireless Printing Utility emulates a local printer port.
 4. Select the **AXIS Wireless Port** from the **Available Ports** list
 5. Choose the appropriate printer driver for your printer. Click **Next>** and proceed directly to step 7.
- Even if the desired printer is available in the **Manufacturers and Printer Models** list, you are advised to use the printer driver provided with your printer. This assures you of the latest driver software.

6. Click the **Have Disk...** button. Insert the printer driver diskette/CD that was provided with your printer, select the appropriate diskette/CD drive and click **OK**.
7. Select the printer driver you want to install and click **Next>**
8. Enter an appropriate name for your printer and click **Next>**
9. When asked if you want to share the printer with other network users, choose **Not Shared** and click **Next>**
10. Choose whether you want to produce a test page and then click **Finish**.

Bluetooth Printing from a Mobile Phone

Requirements

- Ericsson mobile phone equipped with *Bluetooth* wireless technology e.g. Ericsson R520, Ericsson T68, Ericsson T39.
- The *Bluetooth* function of the mobile phone must be activated. See the mobile phone user documentation for detailed information.
- Any PCL4-compatible printer can be used for wireless printing from a *Bluetooth* mobile phone. The printer must be connected to the print server's LPT1 port.
- Your mobile phone should be located within 10 meters of the print server, closer if there are solid objects in between.

What You Can Print From Your Mobile Phone

- Text messages
- Appointments and Tasks
- Monthly, weekly or daily overviews
- Contacts
- Business cards



Refer to the user documentation of your mobile phone for information on how to send print jobs wirelessly.

- Note:**
- This section describes the requirements for wireless printing from a laptop or mobile phone. Printing from HCRP, SPP or OPP *Bluetooth* 1.1 compliant clients is possible but is not described in this manual. Refer to the user documentation of your client for information.

Section 11 Management and Configuration

The management and configuration tools that are supported by the AXIS 5800+ Mobile allow you to:

- Change the print server parameters, i.e. editing the *config* file
- Receive extended information about the print jobs
- Receive printer port status
- Monitor your printers
- Reset the AXIS 5800+ Mobile to factory default
- Upgrade the AXIS 5800+ Mobile firmware (Refer to *Section 12 Upgrades*, on page 140)

Configuration Overview

The method you should use to manage and configure your AXIS 5800+ Mobile depends on the operating system protocols of your network. The table below displays which method to use for each supported environment.

Operating System Protocols	Configuration/Management methods
TCP/IP (UNIX, Windows, NetWare Pure IP, OS/2)	Web Browser - See page 103 AXIS ThinWizard - See page 125 FTP - See page 128 telnet - See page 132 SNMP - See page 135 HP Web JetAdmin - See page 137
IPX/SPX (NetWare)	HP JetAdmin - See page 137 Novell Utilities - See page 138
AppleTalk over TCP/IP	Web browser - See page 103

- Note:**
- BOOTP and TFTP are powerful tools for configuring the AXIS 5800+ Mobile. Refer to the documentation for the BOOTP/TFTP server on your system for specific information.

Using a Web browser for Print Server Management

Once you have established the AXIS 5800+ Mobile in the TCP/IP environment, as described in *Assign an IP address to the print server* on page 23, you are free to access the AXIS 5800+ Mobile Web pages from any Java enabled Web browser.

The Web interface of the AXIS 5800+ Mobile is divided into two modes of operation: User mode and Admin mode.

User In User mode, you have no rights to change any parameter settings. This mode is intended for regular users who are only interested in using the print server's interface for checking print jobs or viewing printer properties. If you want to change any other of the print server's settings, you must enter the Admin mode.

Admin When in Admin mode, you have access to all the print server's parameters and you can change them to your liking. This mode is intended for network administrators and is password protected to prevent unauthorized changing of the print server parameters.

Note:


- If the ROOT_PWD parameter is set to *pass*, which is the default value, you have access to the User mode as well as the Admin mode.

Accessing the Web Pages

Follow the steps below to access the internal home page of the AXIS 5800+ Mobile.

1. Start your Web browser.
2. In the **Location/Address** field, type the host name or the IP address of your AXIS 5800+ Mobile:

- The User Mode home page of your AXIS 5800+ Mobile appears in the browser window.

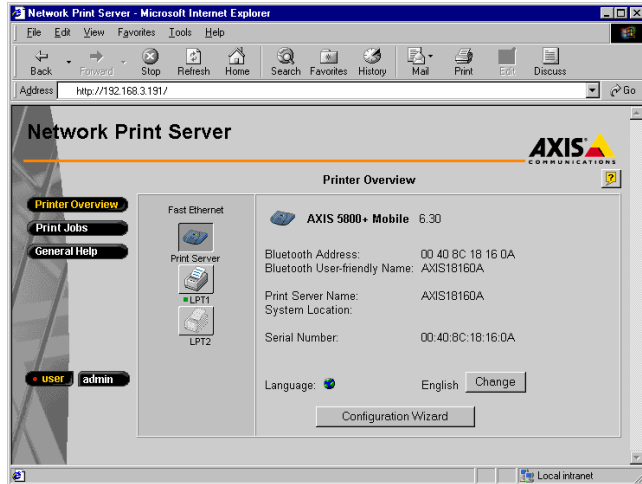

The AXIS 5800+ Mobile User Home Page

- Click the **admin** button to enter the Admin mode. If the management password is set to anything but **pass**, you must enter **root** as the user. The password **pass** is the default password of the AXIS 5800+ Mobile.

Available Services from the User Mode

Printer Overview

The following services are available from the User mode. An additional link to the Axis home page is available from this mode.

The Printer Overview page contains a section that allows you to view the general parameter setting of the AXIS 5800+ Mobile, including the print server name and the location of the print server in your organization, if defined.

If you have admin access rights you can use the Configuration Wizard to perform basic configuration of the AXIS 5800+ Mobile.

By clicking on the printer icons, a printer page opens, allowing you to view the status and the supported capabilities of each connected printer. The extent of this information is depending on the printer model. From the printer page, you can also print a test page to the selected printer.

Print Jobs

From the Print Jobs page you can view the status of the current print jobs, including the number of printed bytes and the origin of the print job. You can also view a log of the 20 latest print jobs that includes the user, the printing protocol and the file size. A log that displays the accumulated usage of the connected printers allows you to control the usage of the connected printers.

General Help

The General Help page presents you with basic information about the AXIS 5800+ Mobile and the Web user interface. A short description of the Axis installation tools you should use when installing a printer on your PC, is also included.

Configuration Wizard


The Configuration Wizard will guide you through the procedure of verifying some default settings and configure a few parameters. When you are finished, the print server is correctly configured for all printers and network environments.

Language Settings

You can change the language of the print server's web interface from the User mode. Available language options are English (default), French, German and Spanish.

Available Services from the Admin Mode

The following services are available from the Admin mode. An additional link to the Axis home page is available from this mode

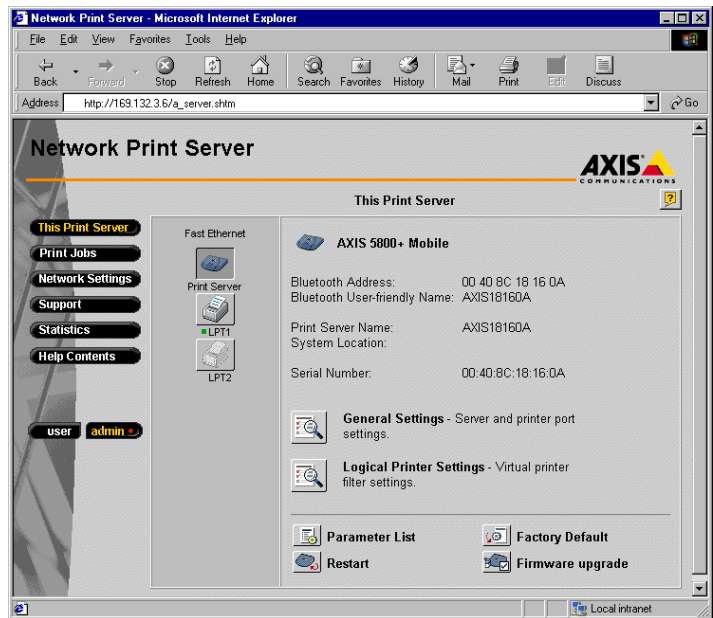

The AXIS 5800+ Mobile admin Home Page

This Print Server

The **This Print Server** page contains a section that allows you to view and modify the general parameter setting of the AXIS 5800+ Mobile, including the print server name, the node address, the password and the base URL. You can also configure any of the eight available logical printers of the AXIS 5800+ Mobile. Management operations, like restarting the AXIS 5800+ Mobile and resetting its parameters to the factory default settings, are also available.

By clicking on the printer icons, a printer page opens, allowing you to view the status and the supported capabilities of each connected printer. The extent of this information is depending on the printer model. From the printer page, you can also print a test page to the selected printer.

Print Jobs

From the Print Jobs page you can view the status of the current print jobs, including the number of printed bytes and the origin of the print job. You can also view a log of the 20 latest print jobs that includes the user, the printing protocol and the file size. A log that displays the accumulated usage of the connected printers allows you to control the usage of the connected printers. If you want to delete an ongoing print job, a delete button is available on this page.

Network Settings

From the Network Settings page you can set all parameters that control the network traffic to and from the AXIS 5800+ Mobile. You can enable or disable any of the supported network protocols and fine-tune the parameter settings.

Caution

- Any network configuration should involve the Network Administrator.

Support

From the Support page you can receive help to resolve any installation or print problems that might occur. If your problems persist, the Support page allows you to produce a Server Report. The Server Report includes the settings of the AXIS 5800+ Mobile, information about your connected printers as well as the current network settings. The Server Report is of great value for support assistance, so please mail, email or fax it to your support channel together with a detailed problem description.

Statistics

The Statistics page displays information about the network traffic to and from the AXIS 5800+ Mobile as well as information about servers and services that are connected or associated with the AXIS 5800+ Mobile.

Help Contents

The Help Contents displays a comprehensive description of the configuration and management activities that can be performed from the internal Web pages of the AXIS 5800+ Mobile. These activities include instructions on how to install the AXIS 5800+ Mobile in various environments and how to upgrade it with new firmware. A detailed index is also available.

Parameter List Button Shows all the current parameter settings of the print server.

Restart Button	Restarts the print server.
Factory Default Button	A Factory Default is done to reset the internal settings of the print server to default. All parameters except Node Address (NODE_ADDR), Internet Address (IP_ADDR) and DHCP enabled or disabled (DHCP_ENABLE.) are reset.
Firmware Upgrade Button	Upgrades the print server's internal software.

Bluetooth Settings in the Print Server's Internal Web Pages

Some specific Bluetooth settings in the print server's internal web pages are explained here.

Disabling/Enabling Bluetooth Printing in Your AXIS 5800+ Mobile

The Bluetooth functionality of your AXIS 5800+ Mobile is automatically enabled upon installation. If you want to disable or enable this function, proceed with the following steps:


1. Start your web browser.
2. Type the **host name** or the **IP address** of your AXIS 5800+ Mobile in the **Location/Address** field and press **Enter**:
3. Click the **admin** button to enter the **Administrators** mode. If the management password is set to anything but `pass`, you must enter `root` as the user and then the new password. `pass` is the default password for the AXIS 5800+ Mobile.
4. From the **admin** page, click **Network Settings | Detailed View**.
5. Click the **Bluetooth** tab and choose **Yes** or **No** under **Bluetooth Enabled** (Enabled by default).
6. Click **OK** when done and exit.

Printer Port Settings

The AXIS 5800+ Mobile print server will print to the port that is selected from the **Printer Port** menu under the **Bluetooth** tab on the AXIS 5800+ Mobile internal web page. See "Using Logical Printers to Customize your Printing" on page 115.

Assigning a User-friendly Print Server 'Location' and 'Name'

See *Changing the Network Printer's 'Location'* on page 112 and *Changing the Network Printer's 'Name'* on page 111.

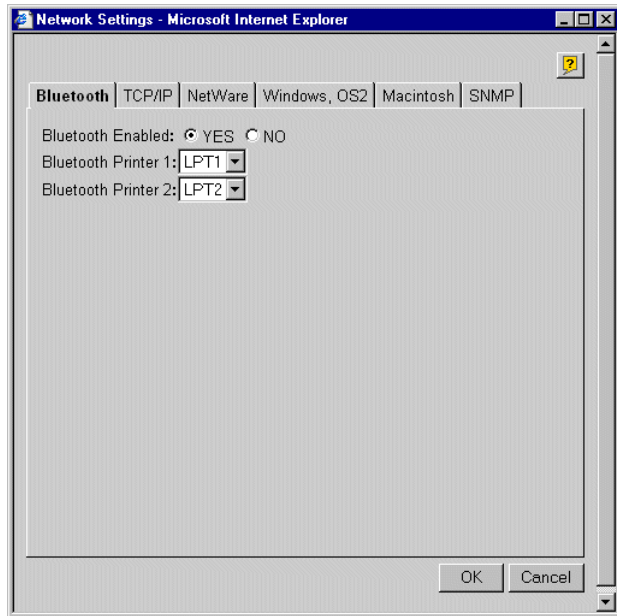

The Bluetooth web page (Admin | Network Settings | Detailed view)

Bluetooth Trouble-shooting

Wireless Printing Check-list

Check that you have set these items properly if you experience problems when trying to print wirelessly with the AXIS 5800+ Mobile print server.

1. Make sure the Bluetooth antenna of the AXIS 5800+ Mobile print server is pointing upwards for best performance.

2. Bluetooth wireless technology must be enabled on your print server. This function is enabled by default upon installation. Browse to the internal web pages of your AXIS 5800+ Mobile print server. Click **Admin | Network settings | Detailed view | Bluetooth**. Make sure the **Bluetooth Enabled** "YES" radio-button is chosen.
3. When printing from a mobile phone, make sure you are using a **PCL4 printer** with the AXIS 5800+ Mobile print server. This printer must be attached to the LPT1 port of the print server.
4. Make sure that your printer is connected to the correct printer port of the AXIS 5800+ Mobile print server. Go to **Admin | Network settings | Detailed view | Bluetooth** and make sure the physical port you have chosen is selected (**LPT1** or **LPT2**).
5. Make sure your communicating Bluetooth devices are located within **10 meters** of each other, closer if there are objects inbetween.

Print Server Settings

Some useful settings that can be changed in the print server are described here. See the print server's **Help** pages for detailed information on all print server settings.

Changing the Network Printer's 'Name'

From the print server's web interface you can assign a user-friendly name to a network printer. This name will then show up under the 'Name' column in AXIS Print System and AXIS Wireless Printing Utility.

1. Log into the AXIS 5800+ Mobile internal web pages and choose **admin | This Print Server | General | Print Server Name**.
2. Enter the new name of the print server and click **OK**.

Changing the Network Printer's 'Location'

If you want to inform users about the physical location of a network printer, you can assign a descriptive location name to it. This name will then show up under the 'Location' column in AXIS Print System and AXIS Wireless Printing Utility.

1. Log into the AXIS 5800+ Mobile internal web pages and select **admin | This Print Server | General | System Location**.
2. Enter the location of the print server and click **OK**.

Language Settings

You can change the language of the print server's web interface from the **User** mode:

1. Click the **Change** button next to "Language".
2. Choose your preferred language from the drop-down list and press **F5** to refresh the view.

AXIS Print System version 1.20 also offers multi-language support for Spanish, French, German, Japanese and English.

Setting the e-mail Notification Parameters

In order to set the e-mail addresses of the people to whom the trouble-reports will be sent:

1. From your print server's internal web page, go to: **Admin | Network Settings | Detailed View | e-mail Notification**. The following options will appear:
 - PAPER JAM - intended for the person responsible for handling paper jams in the printer.
 - OUT OF PAPER - intended for the person responsible for filling the printer with paper.
 - TONER LOW - intended for the person responsible for filling up the toner in the printer.
 - NO TONER - intended for the person responsible for changing the toner in the printer.
 - PRINTER OFFLINE - intended for the person responsible for the overall maintenance of printer.
2. Enter the respective e-mail addresses of the trouble-report recipients in the blank fields as follows:

Example:

name@company.com

3. Click **OK** and exit when done.

Important!

Check that the **SMTP Server** and **Domain Name** parameters in the print server's internal web pages are correct.

This is done in: **admin | Network Settings | Detailed view | TCP/IP**.

Network Speed

With the Network Speed parameter you can manually specify the speed at which you will send and receive network packages. You can change the Network Speed setting to correspond to the type of network you are using (10 or 100 mbit).

To change the Network Speed, log in to the print server's internal web page and click **Admin | General Settings | General**. From here you have the option of setting the network speed to:

AUTO_SENSE (default value)	The print server detects which speed is optimal for each network package you transfer.
10_HALF__DX	10 Half Duplex
10_FULL-DX	10 Full Duplex
100_HALF_DX	100 Half Duplex
100_FULL-DX	100 Full Duplex

The default Network Speed value is AUTO_SENSE. This option is the correct option for the majority of users. If you choose a faulty Network Speed option for your network, you may lose contact with the print server. In order to reset the Network Speed parameter to AUTO_SENSE, you will have to perform a factory default on the print server.

Using Logical Printers to Customize your Printing

The AXIS 5800+ Mobile has a powerful facility for altering the print data. This means that your desired print format can be realized on any type of printer. The following actions can be invoked from the AXIS 5800+ Mobile:

- The character set can be changed to suit the printer
- Strings can be added before and after the print data
- Strings within the print data can be substituted
- ASCII to PostScript conversion
- Redirection of print data to another printer if the printer is busy
- Hex Dump mode to assist with printing problems

If any of these actions are required, a Logical Printer is used to change the print data before being sent to the printer port. There are eight logical printers (PR1-PR8) that can be set up to filter the print data.

The default logical printers settings are such that PR1-PR4 cause no change to the flow of print data, while PR5-PR8 add CR to LF control characters:

Logical Printer	Changes to data
<i>PR1</i>	<i>no change</i>
<i>PR2</i>	<i>no change</i>
<i>PR3</i>	<i>no change</i>
<i>PR4</i>	<i>no change</i>
<i>PR5</i>	<i>add CR to LF</i>
<i>PR6</i>	<i>add CR to LF</i>
<i>PR7</i>	<i>add CR to LF</i>
<i>PR8</i>	<i>add CR to LF</i>

Each logical printer can be set via the print servers' internal web pages: Open a Web browser, enter the IP address of the print server in the "URL/Adress"-field and choose **Admin | Logical Printer Settings**.

The logical printers can also be set up by editing the *config* file.

- Notes:**
- The examples in this section describe how you can configure the available logical printers using a standard Web browser. If you want to set them directly by editing the *config* file, just enter the values for the corresponding parameters.
 - The examples should only be viewed as suggestions how to configure the logical printers. You should, off course, configure them according to the needs of your network.
 - In *Section 15 - Parameter List*, on page 151, you can find a complete list of the AXIS 5800+ Mobile parameters.
 - Refer to *Section 11 Management and Configuration*, on page 102, for more information about the available management tools.

Character Set Conversion

A common problem in a multiple host environment is that different hosts use different ASCII character sets. As a result of this, language specific characters (such as å ü ö ñ) are sometimes printed incorrectly.

The AXIS 5800+ Mobile solution to this problem is to assign a character set conversion filter to a logical printer, and then link that logical printer to the host causing the problem.

You select your desired conversion filter by setting the **Character Set Conversion** (PRx_CSET) parameter. The output from the conversion filter is always IBM PC Set 2 (Code Page 437), and this is the character set the printer must be set up for.

Example: Your network contains a host using the character set ISO 8859-2 and a host using the character set DEC. In order to direct their print jobs to the printer connected to the AXIS 5800+ Mobile, you should assign each host to a separate logical printer, and install a character set conversion filter.

Follow the instructions below to change the conversion filter:

1. From the print server's internal web page, select **Admin | Logical Printer Settings**.
2. Select the **PR1** tab.
3. Set the parameter **Physical Port** to **LPT1**.
4. Set the parameter **Character Set Conversion** to **ISO>IBM**.
5. Click the **OK** button.
6. Select the **Printer2** tab.
7. Set the parameter **Physical Port** to **LPT1**.
8. Set the parameter **Character Set Conversion** to **DEC>IBM**.
9. Click the **OK** button.

The ISO 8859-2 printer data that is sent to logical printer PR1 converts to IBM PC Set 2 and is printed on LPT1. Similarly, the DEC printer data that is sent to logical printer PR2 converts to IBM PC Set 2 and is printed on LPT1.

Adding Strings Before and After Print Jobs

These string functions provide a way to send printer control commands before and after each print job. They may be specified individually for each logical printer.

All strings are entered as hexadecimal byte values.

Example: Assume that the logical printer PR5 is configured as a PostScript printer and that you want to append the PostScript End of File character (hex 04) after each print job.

Follow the instructions below to add a string after the print job:

1. From the print server's internal web page, select **Admin | Logical Printer Settings**.
2. Select the **Printer5** tab.
3. Enter the string **04** in the **String After Print Job** text field.
4. Click the **OK** button.

Example: You have an HP LaserJet printer with dual input bins, and want to print on pre-printed forms when using the logical printer PR4. The standard forms are taken from bin 1, and the pre-printed forms are taken from bin 2. The string before print job should contain the command to select bin 2, $\text{E}_{\text{C}14\text{H}}$ (hex 1B 26 6C 34 48), and the string after print job should contain the command to select bin 1, $\text{E}_{\text{C}11\text{H}}$ (hex 1B 26 6C 31 48).

Follow the instructions below to add strings before and after the print job:

1. From the print server's internal web page, select **Admin | Logical Printer Settings**.
2. Select the **Printer4** tab.

3. Enter the string **1B 26 6C 34 48** in the **String Before Print Job** text field.
4. Enter the string **1B 26 6C 31 48** in the **String After Print Job** text field.
5. Click the **OK** button.

String Substitutions

The string substitution function performs search and replace operations on the print data. The primary application is to replace printer control commands. Up to twenty string substitutions may be specified individually for each logical printer.

All strings must be entered as hexadecimal byte values, and each match and substitute string must be preceded by a count byte.

You substitute command strings by editing the String Substitutions (PRx_STR) parameter.

Example: Assume that you want to replace the UNIX New Line (hex 0A) with an ASCII NewLine (hex 0D 0A) for logical printer PR1.

Follow the instructions below to substitute command strings:

1. From the print server's internal web page, select **Admin | Logical Printer Settings**.
2. Select the **PR1** Web page.
3. Enter the string **01 0A 02 0D 0A** in the **String Substitutions** text field.

Hex Code	Explanation
01	<i>length of the string you want to replace</i>
0A	<i>the string you want to replace</i>
02	<i>length of the substitute string</i>
0D 0A	<i>the substitute string</i>

4. Click the **OK** button.

This is the default setting for logical printers PR5 through PR8.

Example: Assume that you want to replace the UNIX New Line (hex 0A) with an ASCII NewLine (hex 0D 0A), and the printer command $\text{E}_{\text{C}}\text{G1}$ (hex 1B 47 31) with $\text{E}_{\text{C}}\text{Y}$ (hex 1B 59) for logical printer PR2.

Follow the instructions below to substitute command strings:

1. From the print server's internal web page, select **Admin | Logical Printer Settings**.
2. Select the **Printer2** tab.
3. Enter the string **01 0A 02 0D 0A 03 1B 47 31 02 1B 59** in the **String Substitutions** text field.

Hex code	Explanation
01	<i>length of the UNIX New Line command</i>
0A	<i>the UNIX New Line command</i>
02	<i>length of the ASCII New Line command</i>
0D 0A	<i>the ASCII New Line command</i>
03	<i>length of the replaced printer command</i>
1B 47 31	<i>the replaced printer command</i>
02	<i>length of the new printer command</i>
1B 59	<i>the new printer command</i>

4. Click the **OK** button.

Note: • Extensive use of string substitutions will naturally decrease the throughput rate of the AXIS 5800+ Mobile.

ASCII to Postscript Conversion

The AXIS 5800+ Mobile logical printers can translate ASCII print data into PostScript format. This makes it possible to print with a PostScript printer from a host that does not support PostScript. The conversion is selected by activating a filter that converts ASCII data into Postscript. This filter can be activated individually for each logical printer.

Activate your desired filter by setting the Printing Language Translation (PRX_FILT) parameter.

Example: Follow the instructions below to convert ASCII print data to PostScript for logical printer PR2:

1. From the print server's internal web page, select **Admin | Logical Printer Settings**.
2. Select the **Printer2** tab.
3. Set the **Printer Language Translation** parameter to **POSTSCR**.
4. Click the **OK** button.

If you select the parameter value **AUTO_PS**, the print data for every print job is searched and if any ASCII data is found, it is translated into PostScript. This setting is recommended if you are not sure if the print data is ASCII or PostScript.

PostScript Settings

When a logical printer is set for PostScript conversion, you must specify the following:

- page size
- page orientation
- page formats
- which font is to be used

The default page size is A4 and the default page orientation is Portrait, while the page format parameters are:

Page Format Parameter	Default Value
<i>Lines per page</i>	<i>66</i>
<i>Characters per line</i>	<i>0</i> <i>0=disable line wrap</i>

<i>Characters per inch</i>	<i>10.0</i>	
<i>Lines per inch</i>	<i>60</i>	<i>60 = 60 lines per inch</i>
<i>Left margin</i>	<i>30</i>	<i>30 = 3.0 mm</i>
<i>Top margin</i>	<i>50</i>	<i>50 = 5.0 mm</i>

The PostScript font can be any font that is installed in the printer; if no font is specified, Courier will be used.

Example: Follow the instructions below to set the PostScript parameters for logical printer PR2:

1. From the print server's internal web page, select **Admin | Logical Printer Settings**.
2. Select the **Printer2** tab.
3. Set the **Printer Language Translation** parameter to **POSTSCR**.
4. Set the **PostScript Page Size** parameter to **LETTER**.
5. Set the **PostScript Page Orientation** parameter to **LANDS**.
6. Enter the string **48 0 120 60 30 50** in the **PostScript Page Format** text field.

Hex code	Explanation
<i>48</i>	<i>48 lines per page</i>
<i>0</i>	<i>disable line wrap</i>
<i>120</i>	<i>12 characters per inch</i>
<i>60</i>	<i>6 lines per inch</i>
<i>30</i>	<i>3 mm left margin</i>
<i>50</i>	<i>5 mm top margin</i>

7. Enter the string **Helvetica** in the **PostScript Font** text field.
8. Click the **OK** button.

Redirecting Print Jobs when a printer is busy

If print data is received for a printer that is already busy, the host must wait. However, it is possible to use a logical printer to redirect the print data to another logical printer when the target printer is busy. If the second printer is also busy, the host must wait until the target printer is ready.

Example: Follow the instructions below to redirect PR1 print jobs to PR3, when the printer assigned to PR1 is busy:

1. From the print server's internal web page, select **admin | Logical Printer Settings**.
2. Select the **Printer1** tab.
3. Set the **Physical Port** parameter to **LPT1**.
4. Set the **Secondary Printer** parameter to **PR3**.
5. Set the **Wait On Busy** parameter to **NO**.
6. Click the **OK** button.
7. Select the **Printer3** Web page.
8. Set the **Physical Port** parameter to **LPT2**.
9. Click the **OK** button.

- Notes:**
- The two printers must use the same printer driver.
 - Logical Printer redirection cannot be nested. If PR3 is redirected to another logical printer, the print job will not be redirected if PR3 is busy.
 - If both printers are busy, the print job will be printed on the printer that first finishes its active print job.

Read-back of information

The AXIS 5800+ Mobile supports bi-directional printing. The information from the printer is read back on the parallel port when the parameter Read Back Port (PRx_IN) has the default setting of AUTO. However, it is required that the printer also supports bi-directional printing.

Please refer to your printer documentation for further details regarding bi-directional printing support.

Example: Follow the instructions below to disable the bi-directional communication for logical printer PR1:

1. From the print server's internal web page, select **Admin | Logical Printer Settings**.
2. Select the **PR1** tab.
3. Set the **Read Back Port** parameter to **NONE**.
4. Click the **OK** button.

Debugging using the Hex Dump Mode

When hex dump mode is activated, the print data is printed as hexadecimal byte values rather than characters; printer control commands are also printed as hex values. This allows you to inspect what control and print characters are being sent to the printer, which is a useful debugging facility for the more difficult printing problems.

Example: Follow the instructions below to activate the hex dump mode for PR3:

1. From the print server's internal web page, select **Admin | Logical Printer Settings**.
2. Select the **Printer3** tab.
3. Set the **Hex Dump Mode Enabled** radio button to **YES**.
4. Click the **OK** button.

Note:

- The page length for hex dump printouts is determined by the lines per page value of the PostScript page format parameter.

Using AXIS ThinWizard for Print Server Management

AXIS ThinWizard is a management tool that allows you to manage and upgrade ThinServer products. You can find, monitor and upgrade your Axis print servers remotely in any TCP/IP network using a standard Web browser.

The internal Web pages of Axis ThinServer products integrate directly into AXIS ThinWizard, giving you access to the services described in *Using a Web browser for Print Server Management* on page 103.

Once you have established the AXIS 5800+ Mobile in the TCP/IP environment, as described in *Assign an IP address to the print server* on page 23, you are free to access the AXIS 5800+ Mobile from AXIS ThinWizard.

In the 2.00 release of AXIS ThinWizard, the following new features have been included:

1. The possibility to change one or more parameters of several Axis servers simultaneously, or copy the configuration from one server to one or several servers.
2. The possibility to manage non-Axis print servers has been added. ThinWizard will find print servers from Hewlett-Packard, Intel and Lexmark and provide a link to their internal home pages for management.
3. ThinWizard will locate non-configured print servers and let you assign an IP address to the server. (Requires firmware version 6.20 and above)
4. You can now list the servers in the network in a printer-friendly view.

Installing AXIS ThinWizard

You should only install AXIS ThinWizard on a designated server on your network. When you want to use AXIS ThinWizard for management purposes, you just access the server via any standard Web browser.

The AXIS ThinWizard software is available on the AXIS Network Product CD and can also be downloaded from www.axis.com

- Note:**
- You cannot install the AXIS ThinWizard server software on a Windows 3.1 or a Windows for Workgroups server. However, you can access AXIS ThinWizard's Web interface from any TCP/IP client in your network

Starting AXIS ThinWizard

Follow the instructions below to start the AXIS ThinWizard:

1. Make sure that the computer where you installed the AXIS ThinWizard is up and running on your network.
2. Start a Web browser from a client in your network.
3. Enter the IP address or the host name of the server where you installed AXIS ThinWizard. If the server is installed on another port than 80, you must enter the port name after the host name or the IP address.



4. The AXIS ThinWizard start page appears in the Web browser. Enter your user name and the password and click the **Log in** button.
5. The AXIS ThinWizard interface appears. Select a network group from the list. If the list is empty, you must first create a group.

Creating a Network Group

The network group concept is the corner stone of AXIS ThinWizard. By dividing your network into network groups, you can monitor your print servers more efficiently. The scope of each network group is determined by the Axis server types and IP address ranges that are included. You can create as many network groups as you want.

Follow the instructions below to create a network group:

1. Click the **Network Groups** button in the AXIS ThinWizard main menu.
2. Click the **Create** button.
3. The Create Network Group page opens. Type the name of the network group, enter the IP address ranges and Axis server types that should be included. If you are only interested in managing print servers, deselect all options but the **Print Servers** option.
4. Click **OK** to create the network group.


You can edit the properties of each network group from the Network Groups page. Simply select the network group from the list and use one of the **Edit**, **Copy** or **Remove** commands.

Managing the print servers

Follow the instructions below to access the AXIS 5800+ Mobile using AXIS ThinWizard:

1. Click the **Manage Network** button in the main menu.
2. Select the network group, including the AXIS 5800+ Mobile, from the drop-down list. All AXIS servers included in the network group appear in the window.
3. Click the link of the AXIS 5800+ Mobile to access its internal Web page.

- The 'Srv' and 'Dev' columns show the status of your print servers and printers.

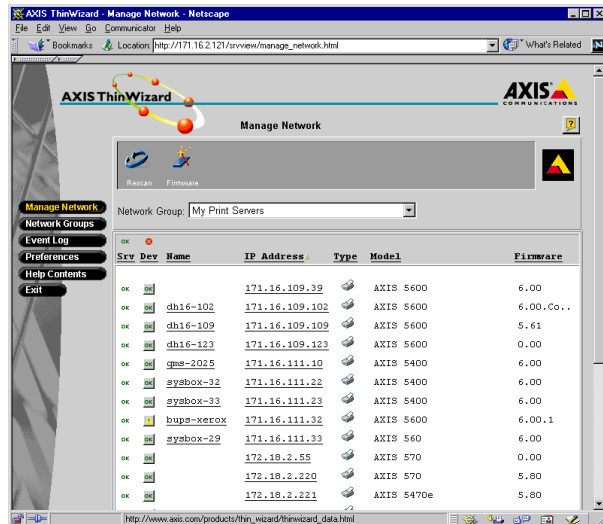

You are now free to manage and configure the AXIS 5800+ Mobile as described in *Available Services from the User Mode* on page 104.

Upgrading Axis Servers

Refer to *Upgrading using AXIS ThinWizard* on page 140, for more information about upgrading Axis Servers using AXIS ThinWizard.

Additional Information

If you need more information, please refer to the AXIS ThinWizard on-line help.

Using FTP for Print Server Management

Having assigned an IP address to your AXIS 5800+ Mobile, as described in *Assign an IP address to the print server* on page 23, you can change the AXIS 5800+ Mobile parameter settings using the File Transport Protocol (FTP).

Editing the *config* file

Follow the instructions below to edit the *config* file using FTP:

1. Log in to the AXIS 5800+ Mobile by typing:
`ftp <host name>`
- OR -
`ftp <IP address>`
in a Command window (Windows and OS/2) or in a UNIX shell window.
2. Enter the user id and the password. (The default entries are `root` and `pass.`)
3. Download the *config* file to your host by typing:
`get config`
4. Edit the file using your preferred text editor.
5. Save the *config* file to the AXIS 5800+ Mobile by typing:
`put config CONFIG`

- Notes:**
- It is important that the destination file is specified in capital letters. Otherwise the edits are temporary and will be lost once the AXIS 5800+ Mobile has been powered down.
 - To edit the *config* file from a Macintosh you will need FTP support such as MacTCP, Fetch or Anarchie. The procedure for editing the file is the same as described above.

The example on the next page shows how to edit the *config* file using FTP from a Command window.

Example:

```
> ftp npserver
connected to npserver.
220 AXIS 5800+ Mobile FTP Print Server v6.20 Jan 01
2001 ready.
Name (npserver:thomas): root
331 User name ok, need password
Password: pass          (not visible)
230 User logged in
ftp> get config
200 PORT command successful.
150 Opening data connection for config
(192,36,253,4,13,223), (mode ascii).
226 Transfer complete.
8588 bytes received in 0.24 seconds (35.63 kbytes/s)
ftp> put config CONFIG
200 PORT command successful.
150 Opening data connection for CONFIG
(192,36,253,4,13,223), (mode ascii).
226 Transfer complete.
8588 bytes received in 0.45 seconds (19.04 kbytes/s)
ftp> bye
221 Goodbye.
>
```

Viewing
the *Status* File

The status command shows which printer port the logical printers are assigned to, and their current status.

Follow the instructions below to view the *status* file using FTP:

1. Log in to the AXIS 5800+ Mobile by typing:
`ftp <host name>` or `ftp <IP address>` in a DOS windows (Windows and OS/2) or in a UNIX shell window.
2. Enter the user id and the password. (The default entries are `root` and `pass`.)
3. Download the *status* file to your host by typing:
`get status`
4. View the status file using your preferred text editor.

Viewing
the *Account* File

The *account* file contains data concerning the 20 last print jobs. It specifies an internal job number, the user that initiated the job, the protocol and logical printer that was used, current status (Completed, Off-line, or Printing), number of bytes printed, elapsed time and off- line time.

Follow the instructions below to view the *account* file using FTP:

1. Log in to the AXIS 5800+ Mobile by typing:
`ftp <host name>` or `ftp <IP address>` in a DOS windows (Windows and OS/2) or in a UNIX shell window.
2. Enter the user id and the password. (The default entries are `root` and `pass`.)
3. Download the *account* file to your host by typing:
`get account`
4. View the *account* file using your preferred text editor.

FTP Help

By typing `help` in step 3 in the FTP instruction sets above, a list of all available files and commands will be displayed.

Using Telnet for Print Server Management

Having assigned an IP address to your AXIS 5800+ Mobile, as described in *Assign an IP address to the print server* on page 23, you can manage your AXIS 5800+ Mobile using the telnet protocol.

Viewing the *Account* File

The *account* file contains data concerning the last 20 print jobs. It specifies an internal job number, the user that initiated the job, the protocol and logical printer that was used, current status (Completed or Printing), number of bytes printed and elapsed time.

Follow the instructions below to view the *account* file using telnet:

1. Log in to the AXIS 5800+ Mobile by typing:
`telnet <host name> OR telnet <IP address>` in a DOS window (Windows and OS/2) or in a UNIX shell window.
2. Enter the user id and the password. (The default entries are `root` and `pass`.)
3. View the *account* file by typing:
`account`

The example on the next page shows how to view the *account* file using Telnet from a UNIX window.

Example:

```

> telnet npserver
Trying 192.36.253.96...
Connected to npserver.
Escape character is '^]'.

AXIS 5800+ Mobile TELNET Print Server v6.20 Jan 01
2001

AXIS 5800+ Mobile network login: root
Password: pass          (not visible)

AXIS 5800+ Mobile TELNET Print Server v6.20 Jan 01
2001

Root> account
Current account file:
JOB          USER      PROT      LPR S BYTES ETIME
1           Thomas    FTP       pr2 C 1885  2
2           Joe       LPT       pr1 C 23074 4
3           RICHARD  PSERVER   pr2 C 43044 5
4           MacUser  APPLE     pr1 C 6717  2
5           LSLM_userNetBIOS pr2 C 36995 3
6           patrick  PROS     pr5 P 83208 9
Root>
    
```

Typical Telnet session to view the *Account* File

Viewing the *Status* file

The status command shows which printer port the logical printers are assigned to, and their current status.

Follow the instructions below to view the *status* file using telnet:

1. Log in to the AXIS 5800+ Mobile by typing:
`telnet <host name>` Or `telnet <IP address>` in a DOS windows (Windows and OS/2) or in a UNIX shell window.
2. Enter the user id and the password. (The default entries are `root` and `pass`.)
3. View the *status* file by typing:
`status`

Performing resets

Three types of reset commands allow you to perform soft resets, to perform hard resets, and to reset the print server's parameters to its factory default settings.

Follow the instructions below to perform a soft reset using telnet:

1. Log in to the AXIS 5800+ Mobile by typing:
`telnet <host name>` Or `telnet <IP address>` in a DOS windows (Windows and OS/2) or in a UNIX shell window.
2. Enter the user id and the password. (The default entries are `root` and `pass`.)
3. Restart the print server's protocols by typing:
`softreset`

Replace the command in step 3 above with `hardreset` or `default` to perform the other two reset operations.

Telnet Help

By typing `help` in step 3 in any of the Telnet instruction sets above, a list of all available commands will be displayed.

Using SNMP for Print Server Management

You can use SNMP (Simple Network Management Protocol) for remotely monitoring and configuring of the AXIS 5800+ Mobile. All major functions for print servers are supported.

General Information

SNMP refers to a set of standards for network management, including a protocol, a database structure specification, and a set of data objects. The AXIS 5800+ Mobile SNMP implementation runs in TCP/IP and NetWare (IPX) networks.

The management is handled by NMS (Network Management System) software running on a host on your network. The NMS software communicates with network devices by the means of messages, which are references to one or more objects.

A message can be a question or an instruction to a device, or an alarm triggered by a specific event in a device. Objects are contained in data bases called MIBs (Management Information Base), where MIB-II is a standard database.

The AXIS 5800+ Mobile supports all relevant parts of MIB-II and of the host resources MIB. The AXIS 5800+ Mobile also includes a private enterprise MIB, the AXIS MIB.

The AXIS MIB

In order to make full use of the AXIS 5800+ Mobile SNMP support, you are required to use NMS software that allows you to install private enterprise MIBs, like the AXIS MIB.

The AXIS MIB contains a large number of objects which may be categorized as follows:

- Menu objects - used for viewing and changing the AXIS 5800+ Mobile configuration from the NMS program. Refer to *15 - Parameter List*, on page 151.
- Printer status and unit administration objects - used for monitoring AXIS 5800+ Mobile print jobs and storing parameter changes permanently.
- Trap objects - used for alarms at various error conditions.

For technical details, you can view the MIB file (*axis.mib*) with any text editor.

The AXIS MIB is resident on the AXIS 5800+ Mobile and can be downloaded directly from the print server to your NMS software using FTP.

Follow these steps to add the AXIS MIB to your NMS software:

1. Log in to the AXIS 5800+ Mobile using FTP.
2. Download the MIB file */snmp/axis.mib* to the NMS host.
3. Install the AXIS MIB according to instructions in your NMS software documentation.

Using HP Administration Tools for Print Server Management

The AXIS 5800+ Mobile is fully compatible with the HP JetAdmin and the HP Web JetAdmin printer management software. You can use either tool to install and configure your printer devices, and to monitor the current status of your AXIS 5800+ Mobile and the connected printers.

Please refer to the appropriate Hewlett Packard documentation for further details about these tools.

- Notes:**
- To enable support for the HP JetAdmin and the HP Web JetAdmin management software, you must set the HP_JETADMIN parameter to YES.
 - It is not possible to upgrade the AXIS 5800+ Mobile Flash Memory from the HP JetAdmin.

Using Novell Utilities for Print Server Management


After installing the AXIS 5800+ Mobile into the NetWare environment, you can manage your AXIS 5800+ Mobile, using either Novell's NetWare Administrator, or PCONSOLE (Not available in NetWare version 5.x or higher).

NetWare Administration

Some useful features provided by the NetWare Administrator are described in more detail below:

Printer Status


The Printer Status menu, detailed below, shows the status of an active print job serviced by an AXIS 5800+ Mobile network print server. It displays detailed information concerning the active job including, Print Queue, print job description, size of print file, percentage of job completed, etc. You can also abort or pause the print job from this menu.

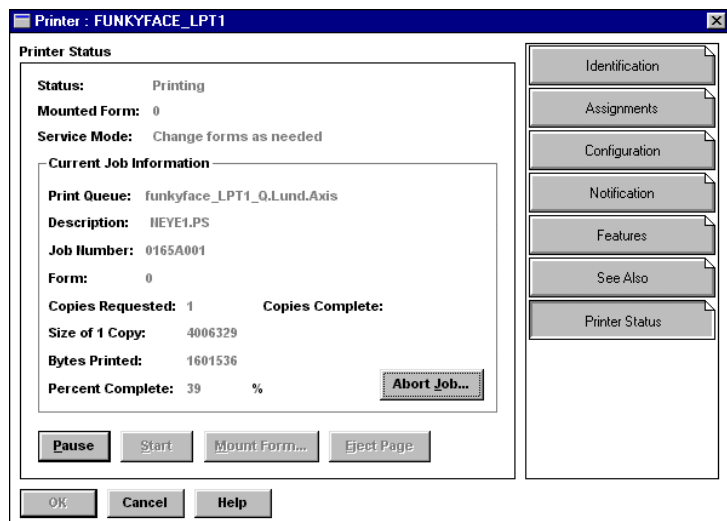

NetWare Administrator Printer Status Menu

Notification You can use the NetWare Administrator to enable or disable status notification messages for printers connected to the AXIS 5800+ Mobile, e.g. Busy, Off-line, Out of paper, Paper jam, etc. You can also add or remove print job owners and administrators from the list of persons to be notified.


Print Layout You can view installed AXIS 5800+ Mobile Network Print Servers and their relative print queues for any NetWare Organizational Unit. You can also display summary information by right-clicking on the printer object you want to examine.

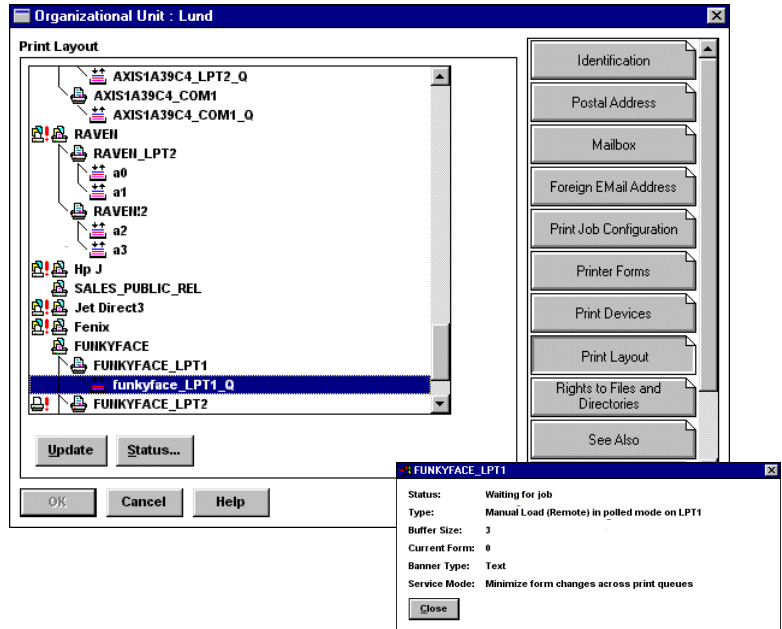

NetWare Print Layout with corresponding information summary

Section 12 Upgrades

Upgrading the Firmware

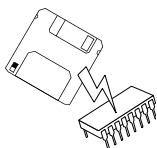

You can upgrade the AXIS 5800+ Mobile Flash memory using one of the following methods:

- From the print server's internal web pages
- AXIS ThinWizard (TCP/IP)
- FTP (TCP/IP)
- AXIS Wireless Upgrade Utility

Note: • Updating instructions are supplied with the software update.

Upgrading from the Print Server's Internal Web Pages

Follow these instructions to upgrade the firmware of your print server from its internal web pages (Web Flash-loading):

1. Open your web browser, enter the IP address of your print server and press **Enter**. (See *Management and Configuration*, on page 102 for detailed instructions on accessing your Axis print server on the web).
2. From the **admin**-mode, click the '**Firmware Upgrade**' button. From here you can download the latest available firmware to your computer and upgrade your print server with it.

Upgrading using AXIS ThinWizard

AXIS ThinWizard is a tool that enables batch upgrading of several print servers and should be used for upgrading the flash memory in TCP/IP networks.

You must assign the AXIS 5800+ Mobile with an IP address, as described in *Assign an IP address to the print server*, on page 23, before you can use this upgrading method.

Follow the instructions below to upgrade your print servers using AXIS ThinWizard:

1. Click the **Manage Network** button in the AXIS ThinWizard main menu.
2. Select a network group from the drop-down list. You can only update the servers that are included in the selected network group.
3. All AXIS servers included in the network group appear. Click the **Firmware** button to start the Upgrade Wizard.
4. Follow the instructions that are presented to you to complete the installation.

Refer to *Using AXIS ThinWizard for Print Server Management*, on page 125, for more information about AXIS ThinWizard.

Upgrading over the Network using FTP

To upgrade over the network using FTP you will need the file with the new print server software. The name of this file is in the form `product_version.bin`, e.g. `5800p_630.bin` for software release 6.30. You can use any of the previously mentioned methods to obtain the new file.

You must assign the AXIS 5800+ Mobile with an IP address, as described in *Assign an IP address to the print server*, on page 23, before you can use this upgrading method.

Follow the procedures below to upgrade the AXIS 5800+ Mobile:

Caution

- Be careful not to interrupt the file transfer. If the transfer is interrupted the AXIS 5800+ Mobile may have to be re-initialized by your dealer.

1. Log in to the AXIS 5800+ Mobile with the command:
`ftp <host name>`, Or `ftp <IP address>`
2. You will be prompted for user id and password. Use the user id `root`, which has the default password `pass`.

3. Type the command:
`binary`
to change to binary transfer mode.

4. Type the command:

```
put <software name> FLASH
```

where <software name> is the name of the new print server software, e.g. 5800p_630.bin

5. Wait for the Flash loading operation to finish. This normally takes 1 to 4 minutes. The unit automatically restarts with the new print server software.
6. Log out using the command:

```
quit, bye OR exit
```

depending on your FTP version.

Upgrading using AXIS Wireless Upgrade Utility

AXIS Wireless Upgrade Utility is software that allows you to upgrade the firmware in your AXIS 5800+ Mobile wirelessly. Install AXIS Wireless Upgrade Utility on your laptop and follow the instructions to upgrade the firmware.

- Note:**
- Before upgrading, you need to download and save the AXIS 5800+ Mobile firmware file temporarily on your hard disk. All Axis firmware files are available from the Axis web site at <http://www.axis.com> or from the Axis Network Product CD.
1. Start **AXIS Wireless Upgrade Utility** and click **Next**.
 2. Click **Search** to list the available *Bluetooth* print plugs and print servers.
 3. Each detected print plug/server will be listed with the following information:
 - **Address** - *Bluetooth* address / serial number
 - **Name** - **AXIS** followed by the last six characters of the serial number
 - **Model** - AXIS 5800+ Mobile (print server) or AXIS 5810 (print plug)
 - **Firmware version** - e.g. 6.30

4. Select the AXIS 5800+ Mobile from the list and click **Next**.
5. Enter the path or browse to the directory where you saved the print server flash file. Click **Next**.
6. Verify that you have selected the correct print plug/server and the correct firmware file and click **Next** to complete the operation.

- Note:**
- Should you encounter any problem that prevents a successful upgrade over your network, it may become necessary to perform the flash loading operation via the parallel port, LPT1. In this case, you are advised to contact your dealer.

Obtaining the Software

You can obtain all the print server software as well as the latest utility software from the following locations:

- <http://www.axis.com>
- AXIS Network Product CD
- your local dealer

- Note:**
- If you are upgrading your print servers using AXIS ThinWizard, you do not need to obtain the firmware file prior to the upgrading process, provided that you are connected to the Internet.

Section 13 Test Button

The test button is located on the front right hand side of the AXIS 5800+ Mobile and is used for:

- Printing a test page, checking the connection to the printer.
- Printing a parameter list, showing the AXIS 5800+ Mobile current settings.
- Resetting the AXIS 5800+ Mobile parameters to the factory default settings.

The Test Page

Press the test button once to print a test page. The printed test page contains basic information about the AXIS 5800+ Mobile. It is recommended that you print a test page every time you have connected the AXIS 5800+ Mobile to a printer.

- Note:**
- The test page is printed on LPT1 by default. If you want to print the test page on LPT2, you should set the **Internal Printout Destination** parameter to **LPT2** from the internal web pages under **admin | General Settings | General**.

The Parameter List

Press the test button twice to print a parameter list showing the current AXIS 5800+ Mobile settings. This list provides comprehensive details of all the parameters and their current status. Refer to *15 - Parameter List*, on page 151.

If you want to change any of the parameters, use one of the methods that are described in *Section 11 Management and Configuration*, on page 102.

- Note:**
- The parameter list is printed on LPT1 by default. If you want to print the parameter list on LPT2, you should set the **Internal Printout Destination** parameter to **LPT2** from the internal web pages under **admin | General Settings | General**.

Factory Default Settings

Follow the instructions below to reset the AXIS 5800+ Mobile to the factory default settings:

1. Remove the external power supply to switch off the AXIS 5800+ Mobile.
2. Press and hold down the test button, while you plug the external power supply back in. Continue to hold down the test button, until the network indicator begins to flash at one second intervals. This should take at least 5 seconds.
3. Release the test button and wait until the network indicator flashes at least five times.
4. Press and hold the test button again until the network indicator remains constantly lit.
5. Restart the AXIS 5800+ Mobile by disconnecting and reconnecting the external power supply.

The AXIS 5800+ Mobile is now reset to factory default settings.

- Note:**
- All parameters except Node Address (NODE_ADDR), Internet Address (IP_ADDR) and DHCP enabled or disabled (DHCP_ENABLE.) are reset. If you want to change the these parameters, use any standard Web browser. Please refer to *Section 11 Management and Configuration*, on page 102.

Section 14 Technical Specifications

Supported Mobile Devices

Laptop equipped with Bluetooth Software Suite 1.09 (and later) PC card and drivers. PC card and drivers from Motorola, Toshiba, IBM, Dell or NEC.

Toshiba laptop with integrated *Bluetooth* support.

Laptop with *Bluetooth* support and client software supporting the HCRP profile.

Any mobile device capable of sending vObjects over OBEX, e.g. Ericsson R520, T68, T39 mobile phone (to PCL4 printers only).

All clients supporting any of the Bluetooth printing profiles (HCRP, OPP, SPP, APP) listed below.

Bluetooth™

The AXIS 5800+ Mobile complies with Bluetooth version 1.1

Bluetooth Profiles

HCRP (Hard Copy Cable Replacement Profile)

OPP (Object Push Profile)

SPP (Serial Port Profile)

APP (AXIS Print Profile - Axis proprietary)

Supported Systems

Novell NetWare:

Versions 3.11, 3.12, 4.10, 4.11, 5 and above, supporting both NDS and Bindery Emulation. A maximum of 16 bindery file servers and 96 print queues can be served. NDPS supported by versions 4.11 and above. NetWare5 and Pure IP supported. User messages are also supported.

Print Methods: RPRINTER/NPRINTER, PSERVER, NDPS.

- Microsoft LAN Manager: LAN Manager 2.0c and above, running under OS/2 ver 1.3 and above.
- IBM LAN Server: LAN Server 1.3 and above, running under OS/2 ver 1.3 and above including OS/2 Warp, OS/2 Warp Connect.
- Microsoft Windows: Windows NT ver. 3.5 and above, Windows 2000, Windows XP, Windows for Workgroups, Windows 95, Windows 98, Windows Me.
- LANtastic: LANtastic 7.0, from any of the supported Windows clients, defined above.

All Operating Systems supporting the TCP/IP suite of protocols, including:
- UNIX Systems: Linux, BSD 4.2, 4.3, 4.4, SunOS4 (Solaris 1.x), DEC Ultrix, R3, R4, AT&T, Interactive, SCO, SunOS5 (Solaris 2.x), HP-UX, IBM AIX, Silicon Graphics IRIX, DEC Alpha OSF/1, BULL (BOS, AIX).
- Other Systems: IBM (MVS, VM, VSE, OS/400), DEC VMS, guidelines for other systems.
- Print Methods: LPD, FTP, PROS (named pipe & filtered), Reverse Telnet, IPP, Bluetooth.
- Apple EtherTalk: Print Method: AppleTalk Phase 2.
- WWW: Netscape Navigator 3.0 and higher and MS Internet Explorer 3.0 and higher.

Supported Protocols

- NetWare: IPX, IP, SAP, RIP, SPX, SNMP, NCP (extended with NDS), NDPS, NLSP, TCP/IP, LIP.
- Windows and OS/2: NetBIOS/NetBEUI or TCP/IP, WINS.

LANtastic	NetBIOS/NetBEUI.
LAN Manager/LAN Server	NetBIOS/NetBEUI
TCP/IP	Auto-IP, LPD, FTP, Telnet, Reverse Telnet, Raw TCP, PROS, BOOTP, ARP, RARP, DHCP, DDNS, ICMP, IGMP, IP, IPP, TCP, UDP, HTTP, Raw TCP, SLP, SNMP, TFTP.
Apple EtherTalk	AARP, ATP, DDP, NBP, PAP, RTMP, ZIP.
<u>RF Specifications</u>	<p>Unlicensed 2.4 GHz frequency band</p> <p>RX sensitivity - 70 dBm</p> <p>TX power 0 dBm (Class 2)</p>
<u>Network Management</u>	SNMP-MIB II compliant (over UDP/IP and IPX), host resource MIB compliant (over UDP/IP and IPX), private enterprise MIB included. LAN Network Manager for OS/2. Print server status in NWAdmin/PCONSOLE. AXIS ThinWizard for monitoring, configuration and firmware upgrading.
<u>Supported Languages</u>	English, German, Spanish, French, Japanese
<u>Hardware</u>	32 bit 100 MHz RISC Controller, 2 Mbyte Flash memory. 8 MB RAM.
<u>Logical Connection</u>	<p>Ethernet: Use of IEEE802,2, IEEE802,3, SNAP and Ethernet II frame types simultaneously.</p> <p>Fast Ethernet: NWAY support for auto-detection of network speed. use of IEEE802,2, IEEE802,3, SNAP and Ethernet II frame types simultaneously, full duplex.</p>

Network Attachments RJ-45 connector (Category 5 Twisted Pair) for 10baseT Ethernet and 100baseTX Fast Ethernet.

Security

UNIX/Linux: Root password. User access list and printer access.

NetWare: Encrypted passwords. NetWare Packet Signature Level 1, 2, 3.

Logical Printers

The logical printer ports can be programmed to perform auto ASCII to PostScript conversion, string before and after job, string substitution, alternative output and character set conversion.

Parallel Printer

Two IEEE 1284 compliant high-speed parallel ports with 25-pin DSUB connectors. Sustained throughput over 1 MB/s. Bi-directional support for Apple Ethertalk, Reverse Telnet, PROS. ECP support.

Indicators

2 LED indicators - Power and Network.

Test Button

Test button for information printouts and for resetting the print server.

Power Consumption

Power provided by external supply (Maximum 1A at 5 VDC)
 For use only with Axis power supplies:
 SA10-0515x **PS-F** (5 VDC, 1500 mA) - or -
 SA120A-0530x-C **PS-H** (5.1 VDC, 2000 mA)

Wireless Performance

460 kbps over Bluetooth baseband link.

Dimensions Height x Width x Depth

1.1 x 6.7 x 5.5 inches (2.5 x 16.9 x 13.5 cm)

Weight 0.57 lb. (0.25 kg)

Environmental Temperature: 40 - 105° F (5 - 40° C)
Humidity: 20-80% RH, non-condensing

Approvals

EMC: EN 55022/1998, EN55024/1998.

CE

CE 0682 

Safety: EN 60950, approved power supply for all countries.

Radio-emission * ETS 300 328 Technical requirements for radio equipment.
* ETS 300 826 General EMC requirements for radio equipment
Approved for EU Member States, Norway and Switzerland.

Section 15 Parameter List

This appendix provides an overview of the AXIS 5800+ Mobile parameters. Please refer to the AXIS Network Print Server Technical Reference for a complete description of the parameters. Alternatively, you can access www.axis.com, where you can download the latest technical information.

The *Config* File

The left-hand column shows the parameters and their default values as they appear in the *config* file and the right-hand column shows the name of the parameters as they appear in the internal Web pages.

After you have changed them, most parameters take effect for the next print job. If *Requires Restart* appears in a parameter description, you must restart the AXIS 5800+ Mobile, before the new setting for that parameter takes effect.

The password parameters, ROOT_PWD and PROS_PWD only appear when you are logged in to the AXIS 5800+ Mobile using *root*. The password parameters will not be printed when you are printing the parameter list using the test button.

--- GENERAL MENU	
NODE_ADDR. : 00 40 8C 00 00 00	Node Address
NETWORK_SPEED : AUTO_SENSE (AUTO_SENSE, 10_HALF_DX, 10_FULL_DX, 100_HALF_DX, 100_FULL_DX)	Network Speed
PS_NAME. : AXIS100000	Print Server Name
ROOT_PWD. : pass	Root Password
USERS. :	User and Printer Access List
BASE_URL. : www.axis.com	Base URL
CHARSET: ISO-8859-1 (ISO-8859-1, UTF-8, SHIFT-JIS)	Character Settings
LANG.: English (English, German, French, Spanish, Japanese)	Language Menu
AXIS_PRINT_SYSTEM.: YES	Enable compatibility with AXIS Print System
HP_JETADMIN. : NO (YES, NO)	HP JetAdmin Support
DEF_OUT. : PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1,LPT2)	Internal Printout Destination
SYS_LOC. :	System Location
SYS_CONT. :	System Contact

--- TCP/IP MENU

TCP_ENB.	: YES	TCP/IP Enabled
INT_ADDR.	: 0 0 0 0	Internet Address
DEF_ROUT.	: 0 0 0 0	Default Router Address (0.0.0.0 for no router)
NET_MASK.	: 0 0 0 0	Net Mask (e.g. 255.255.255.0 for class C, 0.0.0.0 for auto-sense)
PROS_PWD.	: netprinter	PROS Password
PROS_PRT.	: 35	PROS TCP Port Number
LPD_BANN.	: OFF (OFF, AUTO, LAST)	LPD Banner Page Mode
DHCP_ENB.	: YES	DHCP Enabled
AUTOIP_ENB.	: YES	Auto-IP enabled
BOOTP_ENB.	: YES	BOOTP Enabled
RARP_ENB.	: YES	RARP Enabled
WINS_ENB.	: YES	WINS Enabled
WINS_ADDR1.	: 0 0 0 0	Primary WINS Server Address
WINS_ADDR2.	: 0 0 0 0	Secondary WINS Server Address
NBT_SCOPE_ID.	:	NBT Scope ID (Defines the NetBIOS scope to be used with WINS name registration)
DNS_ENB.	: YES	DNS Enabled
DNS_ADDR1.	: 0 0 0 0	Primary DNS Server Address
DNS_ADDR2.	: 0 0 0 0	Secondary DNS Server Address
DOMAIN_NAME.	:	Domain Name (Defines the domain to which the AXIS 5800+ Mobile belongs)
SMTP_SERVER:		Mail Server that uses Simple Mail Transfer Protocol.
SLP_SCOPE_LIST.:	DEFAULT	Defines the SLP scope to which the AXIS 5800+ Mobile belongs.
RTN_OPT.	: NO	Reverse Telnet Options Enabled
RTEL_PR1.	: 0	PR1 Reverse Telnet Port Number
RTEL_PR2.	: 0	PR2 Reverse Telnet Port Number
RTEL_PR3.	: 0	PR3 Reverse Telnet Port Number
RTEL_PR4.	: 0	PR4 Reverse Telnet Port Number
RTEL_PR5.	: 0	PR5 Reverse Telnet Port Number
RTEL_PR6.	: 0	PR6 Reverse Telnet Port Number
RTEL_PR7.	: 0	PR7 Reverse Telnet Port Number
RTEL_PR8.	: 0	PR8 Reverse Telnet Port Number

--- SNMP MENU

READ_COM.	: public	Read Community
WRT_COM.	: pass	Read/Write Community
TRAPADDR.	: 0 0 0 0	Trap Address
TRAP_COM.	: public	Trap Community
SYS_NAME.	:	System Name
SNMP_AUT.	: DISABLE (DISABLE, ENABLE)	Authentication Failure Trap
TRAP_PRT.	: DISABLE (DISABLE, ENABLE)	Printer Failure Trap

--- NETWARE MENU

NETW_ENB.	: YES	NetWare Enabled
NETW_TRANSPORT_PROTOCOL.	: DUAL_STACK (IPX_ONLY, IP_ONLY, DUAL_STACK)	NetWare Transport protocols Enabled

JOB_CHECK_DELAY.	: 5	Job Check Delay (Print Server queue polling interval)
CONF_CHECK_DELAY.	: 300	Configuration Check Delay (Interval between automatic configuration checks)
FR_802_3.	: YES	IEEE 802.3 Frame Type Enabled
FR_ETH_2.	: YES	Ethernet II Frame Type Enabled
FR_802_2.	: YES	IEEE 802.2 Frame Type Enabled
FR_SNAP.	: YES	SNAP Frame Type Enabled
NCP_BURST_MODE.	: YES	NCP Burst Mode Enabled (<i>Requires Restart</i>)
PSERVER_NDS_TREE :		The PSERVER_NDS parameters specify which NDS tree or file server the AXIS 5800+ Mobile will login to. It also specifies the path to the print server object in the tree.
PSERVER_NDS_FILESERVER:		
PSERVER_NDS_DISTINGUISHED_NAME:		
PSERVER_BINDERY1.	:	PSERVER Bindery 1 (Bindery file server name)
PSERVER_BINDERY2.	:	PSERVER Bindery 2 (Bindery file server name)
PSERVER_BINDERY3.	:	PSERVER Bindery 3 (Bindery file server name)
PSERVER_BINDERY4.	:	PSERVER Bindery 4 (Bindery file server name)
PSERVER_BINDERY5.	:	PSERVER Bindery 5 (Bindery file server name)
PSERVER_BINDERY6.	:	PSERVER Bindery 6 (Bindery file server name)
PSERVER_BINDERY7.	:	PSERVER Bindery 7 (Bindery file server name)
PSERVER_BINDERY8.	:	PSERVER Bindery 8 (Bindery file server name)
PSERVER_BINDERY9.	:	PSERVER Bindery 9 (Bindery file server name)
PSERVER_BINDERY10.	:	PSERVER Bindery 10 (Bindery file server name)
PSERVER_BINDERY11.	:	PSERVER Bindery 11 (Bindery file server name)
PSERVER_BINDERY12.	:	PSERVER Bindery 12 (Bindery file server name)
PSERVER_BINDERY13.	:	PSERVER Bindery 13 (Bindery file server name)
PSERVER_BINDERY14.	:	PSERVER Bindery 14 (Bindery file server name)
PSERVER_BINDERY15.	:	PSERVER Bindery 15 (Bindery file server name)
PSERVER_BINDERY16.	:	PSERVER Bindery 16 (Bindery file server name)
NPRINT1.	:	NPRINT/RPRINT 1 (Print Server name and slot number)
NPRINT2.	:	NPRINT/RPRINT 2 (Print Server name and slot number)
NPRINT3.	:	NPRINT/RPRINT 3 (Print Server name and slot number)
NPRINT4.	:	NPRINT/RPRINT 4 (Print Server name and slot number)
NPRINT5.	:	NPRINT/RPRINT 5 (Print Server name and slot number)
NPRINT6.	:	NPRINT/RPRINT 6 (Print Server name and slot number)
NPRINT7.	:	NPRINT/RPRINT 7 (Print Server name and slot number)
NPRINT8.	:	NPRINT/RPRINT 8 (Print Server name and slot number)

--- NetBIOS/NetBEUI MENU

LSLM_ENB.	: YES	NetBIOS/NetBEUI Enabled
NB_FR_TYPE.	: FR_AUTO (FR_AUTO, FR_802_2, FR_DIX)	NetBIOS Frame Type <i>(Requires Restart)</i>
LPRINT_1.	: AX100000.LP1	Name Printer 1
LLOGIC_1.	: PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	Logical Printer for Printer 1
LPRINT_2.	: AX000000.LP2	Name Printer 2
LLOGIC_2.	: PR2 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	Logical Printer for Printer 2
LPRINT_3.	:	Name Printer 3
LLOGIC_3.	: PR3 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	Logical Printer for Printer 3
LPRINT_4.	:	Name Printer 4 Name
LLOGIC_4.	: PR4 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	Logical Printer for Printer 4
LPRINT_5.	:	Name Printer 5
LLOGIC_5.	: PR5 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	Logical Printer for Printer 5
LPRINT_6.	:	Name Printer 6
LLOGIC_6.	: PR6 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	Logical Printer for Printer 6
LPRINT_7.	:	Name Printer 7
LLOGIC_7.	: PR7 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	Logical Printer for Printer 7
LPRINT_8.	:	Name Printer 8
LLOGIC_8.	: PR8 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	Logical Printer for Printer 8

--- BLUETOOTH MENU

BT_ENABLED.	: YES	Bluetooth Printing Enabled
BT_PORT_1.	: LPT1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2, OFF)	Bluetooth Printer 1 Port Destination
BT_PORT_2.	: LPT2 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2, OFF)	Bluetooth Printer 2 Port Destination

--- APPLE TALK MENU

ATLK_ENB.	: YES	AppleTalk Enabled
ATK_ZONE.	:	AppleTalk Zone
ZONER_EN.	: YES	HP Zoner Enabled
ATK_FONT.	: DEFAULT (DEFAULT, 35N, ALL)	Font (PostScript Font Set)
AUTO_DT_PRIN	: DEFAULT: ENABLED	Auto-Detect Printer Type
APRINT_1.	: AXIS100000_LPT1	Name Printer 1 <i>(100000 are the last six digits of the serial number)</i>
ATYPE_1.	: LaserWriter	Type Printer 1
ALOGIC_1.	: PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	Logical Printer for Printer 1
BINARY_TYPE_1.	: TBCP (TBCP, BCP, NONE)	Binary Protocol for APRINT_1
APRINT_2.	: AXIS100000_LPT2	Name Printer 2 <i>(100000 are the last six digits of the serial number)</i>
ATYPE_2.	: LaserWriter	Type Printer 2
ALOGIC_2.	: PR2 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	Logical Printer for Printer 2
BINARY_TYPE_2.	: TBCP (TBCP, BCP, NONE)	Binary Protocol for APRINT_2

--- PRINTER1 MENU

PR1_OUT.	: LPT1 (NONE, LPT1, LPT2)	
PR1_SCND.	: PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	
PR1_WAIT.	: YES	
PR1_IN.	: AUTO (NONE, AUTO)	Read Back Port (Read-Back of information)
PR1_BEF.	:	String Before Print Job
PR1_STR.	:	String Substitutions
PR1_CSET.	: NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)	Character Set Conversion
PR1_FILT.	: NONE (NONE, POSTSCR, AUTO_PS)	Printer Language Translation
PR1_AFT.	:	String After Print Job
PR1_DUMP.	: NO	Hex Dump Mode Enabled
PR1_SIZE.	: A4 (A4, LETTER, LEGAL, EXECUT)	PostScript Page Size
PR1_ORNT.	: PORTR (PORTR, LANDS, R_PORTR, R_LANDS)	PostScript Page Orientation
PR1_FORM.	: 66 0 100 60 30 50	PostScript Page Format (MPL, MPP, CPI, LPI, LM, TM)
PR1_FONT.	:	PostScript Font (Courier when not specified)

--- PRINTER2 MENU

PR2_OUT.	: LPT1 (NONE, LPT1, LPT2)	
PR2_SCND.	: PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	
PR2_WAIT.	: YES	
PR2_IN.	: AUTO (NONE, AUTO)	Read back Port (Read-Back of information)
PR2_BEF.	:	String Before Print Job
PR2_STR.	:	String Substitutions
PR2_CSET.	: NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)	Character Set Conversion
PR2_FILT.	: NONE (NONE, POSTSCR, AUTO_PS)	Printer Language Translation
PR2_AFT.	:	String After Print Job
PR2_DUMP.	: NO	Hex Dump Mode Enabled
PR2_SIZE.	: A4 (A4, LETTER, LEGAL, EXECUT)	PostScript Page Size
PR2_ORNT.	: PORTR (PORTR, LANDS, R_PORTR, R_LANDS)	PostScript Page Orientation
PR2_FORM.	: 66 0 100 60 30 50	PostScript Page Format (MPL, MPP, CPI, LPI, LM, TM)
PR2_FONT.	:	PostScript Font (Courier when not specified)

--- PRINTER3 MENU

PR3_OUT.	: LPT1 (NONE, LPT1, LPT2)	
PR3_SCND.	: PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	
PR3_WAIT.	: YES	
PR3_IN.	: AUTO (NONE, AUTO)	Read Back Port (Read-Back of information)
PR3_BEF.	:	String Before Print Job
PR3_STR.	:	String Substitutions
PR3_CSET.	: NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)	Character Set Conversion
PR3_FILT.	: NONE (NONE, POSTSCR, AUTO_PS)	Printer Language Translation
PR3_AFT.	:	String After Print Job
PR3_DUMP.	: NO	Hex Dump Mode Enabled
PR3_SIZE.	: A4 (A4, LETTER, LEGAL, EXECUT)	PostScript Page Size
PR3_ORNT.	: PORTR (PORTR, LANDS, R_PORTR, R_LANDS)	PostScript Page Orientation
PR3_FORM.	: 66 0 100 60 30 50	PostScript Page Format (MPL, MPP, CPI, LPI, LM, TM)
PR3_FONT.	:	PostScript Font (Courier when not specified)

--- PRINTER4 MENU

PR4_OUT.	: LPT1 (NONE, LPT1, LPT2)	
PR4_SCND.	: PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	
PR4_WAIT.	: YES	
PR4_IN.	: AUTO (NONE, AUTO)	Read Back Port (Read-Back of information)
PR4_BEF.	:	String Before Print Job
PR4_STR.	:	String Substitutions
PR4_CSET.	: NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)	Character Set Conversion
PR4_FILT.	: NONE (NONE, POSTSCR, AUTO_PS)	Printer Language Translation
PR4_AFT.	:	String After Print Job
PR4_DUMP.	: NO	Hex Dump Mode Enabled
PR4_SIZE.	: A4 (A4, LETTER, LEGAL, EXECUT)	PostScript Page Size
PR4_ORNT.	: PORTR (PORTR, LANDS, R_PORTR, R_LANDS)	PostScript Page Orientation
PR4_FORM.	: 66 0 100 60 30 50	PostScript Page Format (MPL, MPP, CPI, LPI, LM, TM)
PR4_FONT.	:	PostScript Font (Courier when not specified)

--- PRINTERS5 MENU

PR5_OUT.	: LPT1 (NONE, LPT1, LPT2)	
PR5_SCND.	: PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	
PR5_WAIT.	: YES	
PR5_IN.	: AUTO (NONE, AUTO)	Read Back Port (Read-Back of information)
PR5_BEF.	:	String Before Print Job
PR5_STR.	: 010A020D0A	String Substitutions
PR5_CSET.	: NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)	Character Set Conversion
PR5_FILT.	: NONE (NONE, POSTSCR, AUTO_PS)	Printer Language Translation
PR5_AFT.	:	String After Print Job
PR5_DUMP.	: NO	Hex Dump Mode Enabled
PR5_SIZE.	: A4 (A4, LETTER, LEGAL, EXECUT)	PostScript Page Size
PR5_ORNT.	: PORTR (PORTR, LANDS, R_PORTR, R_LANDS)	PostScript Page Orientation
PR5_FORM.	: 66 0 100 60 30 50	PostScript Page Format (MPL, MPP, CPI, LPI, LM, TM)
PR5_FONT.	:	PostScript Font (Courier when not specified)

--- PRINTER6 MENU

PR6_OUT.	: LPT1 (NONE, LPT1, LPT2)	
PR6_SCND.	: PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	
PR6_WAIT.	: YES	
PR6_IN.	: AUTO (NONE, AUTO)	Read Back Port (Read-Back of information)
PR6_BEF.	:	String Before Print Job
PR6_STR.	: 010A020D0A	String Substitutions
PR6_CSET.	: NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)	Character Set Conversion
PR6_FILT.	: NONE (NONE, POSTSCR, AUTO_PS)	Printer Language Translation
PR6_AFT.	:	String After Print Job
PR6_DUMP.	: NO	Hex Dump Mode Enabled
PR6_SIZE.	: A4 (A4, LETTER, LEGAL, EXECUT)	PostScript Page Size
PR6_ORNT.	: PORTR (PORTR, LANDS, R_PORTR, R_LANDS)	PostScript Page Orientation
PR6_FORM.	: 66 0 100 60 30 50	PostScript Page Format (MPL, MPP, CPI, LPI, LM, TM)
PR6_FONT.	:	PostScript Font (Courier when not specified)

--- PRINTER7 MENU

PR7_OUT.	: LPT1 (NONE, LPT1, LPT2)	
PR7_SCND.	: PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	
PR7_WAIT.	: YES	
PR7_IN.	: AUTO (NONE, AUTO)	Read Back Port (Read-Back of information)
PR7_BEF.	:	String Before Print Job
PR7_STR.	: 010A020D0A	String Substitutions
PR7_CSET.	: NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)	Character Set Conversion
PR7_FILT.	: NONE (NONE, POSTSCR, AUTO_PS)	Printer Language Translation
PR7_AFT.	:	String After Print Job
PR7_DUMP.	: NO	Hex Dump Mode Enabled
PR7_SIZE.	: A4 (A4, LETTER, LEGAL, EXECUT)	PostScript Page Size
PR7_ORNT.	: PORTR (PORTR, LANDS, R_PORTR, R_LANDS)	PostScript Page Orientation
PR7_FORM.	: 66 0 100 60 30 50	PostScript Page Format (MPL, MPP, CPI, LPI, LM, TM)
PR7_FONT.	:	PostScript Font (Courier when not specified)

--- PRINTER8 MENU

PR8_OUT.	: LPT1 (NONE, LPT1, LPT2)	
PR8_SCND.	: PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, LPT2)	
PR8_WAIT.	: YES	
PR8_IN.	: AUTO (NONE, AUTO)	Read Back Port (Read-Back of information)
PR8_BEF.	:	String Before Print Job
PR8_STR.	: 010A020D0A	String Substitutions
PR8_CSET.	: NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)	Character Set Conversion
PR8_FILT.	: POSTSCR (NONE, POSTSCR, AUTO_PS)	Printer Language Translation
PR8_AFT.	:	String After Print Job
PR8_DUMP.	: NO	Hex Dump Mode Enabled
PR8_SIZE.	: A4 (A4, LETTER, LEGAL, EXECUT)	PostScript Page Size
PR8_ORNT.	: PORTR (PORTR, LANDS, R_PORTR, R_LANDS)	PostScript Page Orientation
PR8_FORM.	: 66 0 100 60 30 50	PostScript Page Format (MPL, MPP, CPI, LPI, LM, TM)
PR8_FONT.	:	PostScript Font (Courier when not specified)

--- LPT1 Menu

L1_CENTR.	: HISPEED (IBM_PC, STNDRD, FAST, HISPEED, HINOACK)	Centronics Interface Timing LPT1
L1_BSYTM.	: 60	Busy Status Time-Out LPT1 (All status reporting disabled if set to 0)
L1_MGM_INFO.	: AUTO (DISABLE, AUTO)	Printer Management Information LPT1
L1_COMMENT.	:	Optional user comment describing the printer at LPT1
L1_BIDIR.	: AUTO (DISABLE, AUTO)	LPT1 Bi-directional printing
L1_READT.	: 3	Set time (in seconds) before reverse data time-out after completed print job

--- LPT2 Menu

L2_CENTR.	: HISPEED (IBM_PC, STNDRD, FAST HISPEED, HINOACK)	Centronics Interface Timing LPT2
L2_BSYTM.	: 60	Busy Status Time-Out LPT2 (All status reporting disabled if set to 0)
L2_MGM_INFO.	: AUTO (DISABLE, AUTO)	Printer Management Information LPT2
L2_COMMENT.	:	Optional user comment describing the printer at LPT2
L2_BIDIR.	: AUTO (DISABLE, AUTO)	LPT2 Bi-directional Printing
L1_READT.	: 3	Set time (in seconds) before reverse data time-out after completed print job

--- e-mail Menu

EMAIL_NOTIFICATION:	YES	e-mail Notification enabled
REPLY_ADDRESS:		Network Administrator e-mail address
PAPER_JAM_ADDRESS:		e-mail address of paper-jam Administrator
OUT_OF_PAPER_ADDRESS:		e-mail address of Out-Of-Paper Administrator
TONER_LOW_ADDRESS:		e-mail address of Toner-Low Administrator
NO_TONER:ADDRESS:		e-mail address of No-Toner Administrator
PRINTER_OFFLINE_ADDRESS:		e-mail address of Printer-Offline Administrator

Section 16 Glossary

AIX Advanced Interactive eXecutive. A version of the UNIX operating system from IBM that runs on various IBM computers including Mainframe systems.

ARP Address Resolution Protocol. A protocol within the TCP/IP suite of network protocols that allows a host to find the physical address of a node on the same network. It is available in UNIX, Windows 95, Windows 98 and Windows NT. ARP cannot be used across routers.

BOOTP BOOT Protocol. A TCP/IP protocol, used for downloading start-up information such as the IP address to hosts on the network. It is only available in UNIX. BOOTP requires a BOOTP daemon on your system. A request made to an active BOOTP daemon initiates a search of the Boot Table for an entry matching the print server's Ethernet address. If a matching entry is found, the daemon downloads the IP address to the print server.

Bluetooth Bluetooth Wireless Technology is a universal radio interface on the globally available 2.4 GHz frequency band facilitating wireless communication of data and voice in both stationary and mobile environments. Bluetooth technology is based on a low cost short-range radio link, eliminating the need for wires, cables and connections between for example mobile phones, handheld computers, printers and LANS.

BSD Berkeley Software Distribution. The University of California, Berkeley additions to the UNIX operating system.

config file

This is a file that resides in the print server's memory and contains all the parameters that determine the AXIS 5800+ Mobile functionality. By editing the *config* file (changing the parameter settings), you can configure the AXIS 5800+ Mobile to meet the printing needs of your network.

DHCP

Dynamic Host Configuration Protocol. DHCP is available in Windows NT, NetWare 5 and UNIX systems, and allows for the automatic but temporary assignment of IP addresses from a central pool. DHCP causes the selected host to automatically allocate and download an unused IP address to the requesting print server. It also provides validation data that defines how long the IP addresses will remain valid.

To fully benefit from this method, the AXIS 5800+ Mobile also supports the WINS host name resolution protocol, which is available in Windows NT networks.

DNS

Domain Name System. Reflects the server names and addresses within a network.

Firmware

Firmware is programming that is inserted into programmable read-only memory thus becoming a permanent part of a computing device. It can be distributed like other software and, using a special user interface, installed in the programmable read-only memory by the user.

Flash Memory

The print server software is stored in Flash Memory. This memory is provided by a silicon chip that like any other ROM device, retains data content even after power is removed. However, Flash Memory is unique because it allows its data to be erased and re-written. This means that you can install software updates for your server as soon as they become available, without having to replace any parts. The new software is simply loaded into the server over the network.

<hr/> <u>FTP</u>	File Transfer Protocol. A TCP/IP protocol used for logging in to network servers and for transferring files.
<hr/> <u>HTML</u>	Hypertext Markup Language. A standard hypertext language used for creating World Wide Web pages and other hypertext documents.
<hr/> <u>HTTP</u>	Hypertext Transfer Protocol. The TCP/IP protocol for Web based communication.
<hr/> <u>IP</u>	Internet Protocol. The TCP/IP session-layer protocol that regulates packet forwarding by tracking IP addresses, routing outgoing messages and recognizing incoming messages.
<hr/> <u>IPP</u>	Internet Printing Protocol. A developing industry standard that allows users to print to remote printers across the Internet. With IPP, a user with an Internet connection can send a document to any Internet-connected printer. IPP is platform-independent and can be used to print over any LAN or WAN that supports TCP/IP.
<hr/> <u>LED</u>	Light Emitting Diode.
<hr/> <u>LPD</u>	The Line Printer Daemon is a protocol for transferring print jobs between hosts. This is the recommended method for UNIX systems, but some System V versions do not support LPD.
<hr/> <u>Logical Printer</u>	A logical printer acts as a filter between the network and the physical printer. It appears to the user as a normal printer with additional characteristics. For example a UNIX workstation may only send a line feed (LF) to a shared printer that needs carriage return (CR) and LF. The logical printer can solve this problem by adding a CR.

<hr/> <u>MIB</u>	Management Information Base. A database of network configuration information used by SNMP and CMIP to monitor or change network settings.
<hr/> <u>NCP</u>	NetWare Core Protocol. Network clients use the NCP to request services of servers, and servers use NCP to provide services, such as file and print services.
<hr/> <u>NDS</u>	NetWare Directory Services. A hierarchical data base that manages NetWare network resources such as servers and volumes.
<hr/> <u>PCL</u>	PCL (Printer Control Language) is a set of command codes used to print to Hewlett-Packard DeskJet, LaserJet, and other HP printers. A PCL driver is a small programs that works between the operating system and the printer.
<hr/> <u>RARP</u>	Reverse Address Resolution Protocol. A TCP/IP protocol used for downloading IP addresses in UNIX networks. It requires a RARP daemon on your system, and only operates within a single network segment. A request made to an active RARP daemon initiates a search of the Ethernet Address Table for an entry matching the print server's Ethernet address. If a matching entry is found, the daemon downloads the IP address to the print server.
<hr/> <u>RISC</u>	Reduced Instruction Set Computing. A processor that recognizes only a limited number of assembly-language instructions.
<hr/> <u>SAP</u>	Service Advertising Protocol. A NetWare network name advertising service that e.g. file servers can use for advertising their existence to network clients.
<hr/> <u>SNMP</u>	Simple Network Management Protocol. A TCP/IP protocol for managing and monitoring nodes on a network.

<u>TCP</u>	Transmission Control Protocol. The connection-oriented, transport-level protocol used in the TCP/IP suite of protocols.
<u>TFTP</u>	Trivial File Transfer Protocol. A simpler version of the FTP protocol that is used by the print server for automatic downloading of config files.
<u>UNIX</u>	A 32-bit multi-tasking, multi-user operating system originally developed by AT&T.
<u>URL</u>	Uniform Resource Locator. A way of specifying the location of publicly available information on the Internet.
<u>WINS</u>	Windows Internet Name Service. A NetBIOS Name Server that maps NetBIOS names to dynamically assigned IP addresses.
<u>Wizard</u>	A special form of user assistance that automates a task through a dialog with the user. Wizards help the user to accomplish tasks that are complex and require experience, and even for the experienced user can help to speed up an operation.

Index

A

- Account file 131, 132
- ARP 24
- ASCII to Postscript Conversion 121
- Assigning a user-friendly name to the print server 111
- Auto-IP 18, 30
- axinstall 77
- AXIS Gateway Configuration Utility 63
- AXIS IP JumpStarter 28
- AXIS MIB 136
- AXIS Print Monitor 46
- AXIS Wireless Printing Utility 96

B

- Basic setup
 - TCP/IP 23
- Bi-directional Printing 124
- Bluetooth 96
- Bluetooth drivers 96
- Bluetooth Printing from a Laptop 96, 170
- Bluetooth Printing From the Ericsson R520 101
- Bluetooth trouble-shooting 110
- Bluetooth version 146
- BOOTP 24, 102

C

- Changing the Network Printer's 'Name' 111
- Character Set Conversion 117
- Chooser 70
- config file 102, 151
- Configuration methods
 - FTP 129
 - HP tools

HP JetAdmin 137

HP Web JetAdmin 137

NetWare Administrator 138

PCONSOLE 138

SNMP 135

Telnet 132

Web browser 103

D

DDNS 25

Debugging Print Problems 124

Default password 104

default user login 104

DHCP* 24

E

e-mail Notification 19

Enabling BlueTooth 109

Ethernet Address 23

ETRAX100 16

F

Factory default settings 145

Firmware Upgrade 140

FTP 128

H

Hardware requirements 101

Hex Dump Mode 124

Host Name 25

HP JetAdmin 137

HP Web JetAdmin 137

I

Installation guide 36

IPP 18, 21, 82

IPP client 85

IPP Printing Requirements 83

L

Language Settings 105

- Language Support 19
- LAptop 170
- Laptop 96
- Local printer 39, 56
- Logical Printers 115
- LPD 79
- LPT1 13
- LPT2 13
- M
- Macintosh
 - Choosing a printer 70
 - Installing the print server 70
 - Setting the Internet address 74
- Multi-Language Support 19
- N
- NDPS 62
- NetWare
 - NDPS 62, 86
- NetWare Packet Signature 20
- NetWare printing modes
 - Print Server Mode 67
 - Remote Printer Mode 67
- Network connectors 13
- Network indicator LED 14
- Network printer 39, 56
- Network Speed 19, 114
- P
- pass 104
- Password 104
- Physical description 13
- Power indicator LED 14
- Print Server Management 103
- Printer port 13
- Printing
 - parameter list 144

- Test page 144
- PSERVER Mode 64
- Pure IP 64, 66
- Q
- Queue-based Printing Methods 67
- R
- Remote Printer Mode 66
- Resetting the AXIS 5800+ Mobile 145
- root 104
- S
- Setting the Internet address
 - ARP 31, 32
 - Auto-IP 30
 - AXIS IP JumpStarter 28
 - AXIS Print System 30
 - BOOTP 34
 - DHCP 29
 - RARP 33
- Setting up
 - Macintosh 69
 - NetWare 61
 - UNIX 76
 - Windows 37
- SNMP 135
- Status file 131, 134
- String Functions 118
- String Substitutions 119
- Support services 8
- T
- Test Button 13
- Test button 14, 144
- TFTP 29, 34, 102
- U
- UNIX Printing methods
 - FTP 80

- LPD 79
- PROS A 80
- PROS B 81
- Reverse Telnet 81
- Upgrades 96
- Upgrading the firmware from the internal web pages 140
- User-friendly Print Server Location 110
- W
- Web Flash-Loading 20
- WfW 10
- Windows 3.1 10
- Windows 95
 - Installing printer ports 40
- Windows 98
 - Installing printer ports 40
- Windows for Workgroups 10
- WINS 25, 29
- Wireless 95, 170
- Wireless printing 95
- Wireless printing from a laptop 96
- Wireless printing from a mobile phone 101

Wireless Printing from a Laptop




- Requirements:**
- Laptop with *Bluetooth* support.
 - **AXIS Wireless Printing Utility** must be installed on your laptop. It is obtainable from www.axis.com and the AXIS Network Product CD.

- How to Print:**
1. From any Windows application (e.g. Word), select **File | Print**.
 2. Select the **AXIS Wireless Printer** and click **OK**.
 3. The very first time AXIS Wireless Printing Utility is used it will search the area for *Bluetooth* printers. Available *Bluetooth* printers will be displayed in the AXIS Wireless Printing Utility main window. These printers will be saved and show up the next time you want to print. To perform a new scan (for instance in a new environment) click the **Refresh** button in the AXIS Wireless Printing Utility main window.
 4. Select a printer and click **Print**.

Default
Bluetooth
print server
name


Refresh
button

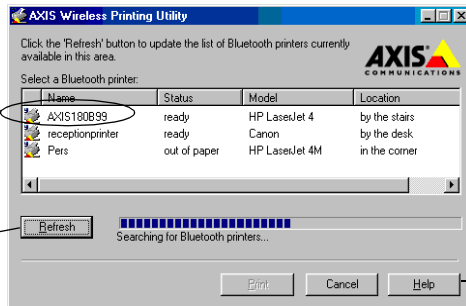

Help

- Notes:**
- You can always print to a selected printer during an on-going search for *Bluetooth* printers.
 - If you perform a search while a specific printer is busy printing a print job, that specific printer will not show up in the AXIS Wireless Printing Utility list.
 - If **Axis Wireless Printer** doesn't show up in the Windows list of available printers, you need to create it. See the AXIS 5800 Mobile User's Manual for instructions. In AXIS Wireless Printing Utility, the AXIS 5800+ Mobile default name will be 'AXISXXXXX'.
 - The laptop must be located within 10 meters of the AXIS 5800+ Mobile when sending a print job.

Wireless Printing from a Mobile Phone



Requirements

- Ericsson mobile phone equipped with *Bluetooth* wireless technology
e.g. Ericsson R520, Ericsson T68, Ericsson T39
- The *Bluetooth*[™] function of the mobile phone must be activated.
- Your phone should be located within 10 meters of the AXIS 5800+ Mobile when printing, closer if there are solid objects in between.
- Any PCL4-compatible printer can be used for wireless printing from a mobile phone with *Bluetooth* functionality. The printer must be connected to the print server's LPT1 port.

What You Can Print

- Appointments and Tasks
- Monthly, weekly or daily overviews
- Contacts
- Business cards

Refer to the user documentation of the mobile phone for detailed instructions.

- Note:**
- Printing from any HCRP, SPP or OPP *Bluetooth* 1.1 compliant client is also possible. Refer to the user documentation of your client for instructions.