

# Miele

## Operating and installation instructions



Frost free fridge/freezer  
with DynamicCooling

KFN 14943 SD

KFN 14943 SD ed/cs

KFN 14842 SD ed/cs

To avoid the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed and used for the first time.

en - AU

M.-Nr. 09 029 600

# Contents

---

<b>Description of the appliance</b> . . . . .	5
<b>Caring for the environment</b> . . . . .	7
<b>Warning and Safety instructions</b> . . . . .	8
<b>How to save energy</b> . . . . .	13
<b>Switching on and off</b> . . . . .	14
Before using for the first time . . . . .	14
Cleaning and care . . . . .	14
Operating the appliance . . . . .	14
Switching the appliance on . . . . .	14
Switching off . . . . .	15
Switching refrigeration and freezer sections on and off separately . . . . .	15
Settings mode . . . . .	16
To switch the sensor tone on/off . . . . .	17
Switching the safety lock on and off . . . . .	17
Switching off for longer periods of time . . . . .	18
<b>The correct temperature</b> . . . . .	19
. . . in fridge section . . . . .	19
. . . in the freezer . . . . .	19
Temperature display . . . . .	19
Setting the temperature . . . . .	20
Temperature range . . . . .	20
Changing the temperature display brightness . . . . .	21
<b>Alarm</b> . . . . .	22
Temperature alarm . . . . .	22
Door alarm . . . . .	23
<b>Using SuperCool, SuperFreeze and DynamicCooling</b> . . . . .	24
SuperCool . . . . .	24
SuperFreeze . . . . .	25
DynamicCooling . . . . .	26
<b>Using the refrigerator efficiently</b> . . . . .	27
Different storage zones . . . . .	27
Food which should not be stored in a refrigerator . . . . .	28
When shopping for food . . . . .	28


Storing food correctly . . . . .	28
Fruit and vegetables . . . . .	28
Unpacked meat and vegetables . . . . .	29
Protein rich foods . . . . .	29
Meat . . . . .	29
<b>Arranging the interior fittings . . . . .</b>	<b>30</b>
Moving the shelves . . . . .	30
Split shelf . . . . .	30
Adjusting the condiment tray/bottle shelf . . . . .	31
Universal container . . . . .	31
Moving the bottle divider . . . . .	32
<b>Freezing and storing food . . . . .</b>	<b>33</b>
Maximum freezing capacity . . . . .	33
Freezing fresh food . . . . .	33
Storing frozen food . . . . .	33
Home freezing . . . . .	34
Tips on home freezing . . . . .	34
Packing . . . . .	34
Before placing food in the freezer . . . . .	35
Placing food in the freezer . . . . .	35
Freezing large items . . . . .	35
Freezer calendar . . . . .	35
Defrosting . . . . .	36
Making ice cubes . . . . .	36
Cooling drinks . . . . .	36
Cool pack . . . . .	37
<b>Automatic defrost . . . . .</b>	<b>38</b>
<b>Cleaning and care . . . . .</b>	<b>39</b>
Cleaning the interior and accessories . . . . .	40
Cleaning the doors and side panels . . . . .	41
Ventilation gaps . . . . .	42
Door seals . . . . .	42
Rear of appliance - metal grille . . . . .	42
<b>Active charcoal filters . . . . .</b>	<b>43</b>
To change the active charcoal filters . . . . .	43

# Contents

---

<b>What to do if. . . ?</b> . . . . .	45
<b>Noises</b> . . . . .	48
<b>After Sales</b> . . . . .	49
<b>Electrical connection</b> . . . . .	50
Electrical connection . . . . .	50
<b>Installation</b> . . . . .	51
Location . . . . .	51
Climate range . . . . .	51
Ventilation . . . . .	51
Installation . . . . .	51
Aligning the appliance. . . . .	52
Supporting the appliance door . . . . .	52
Appliance dimensions . . . . .	53
<b>Changing the door hinging</b> . . . . .	54
<b>Aligning the appliance doors</b> . . . . .	64
<b>Building in the appliance</b> . . . . .	65

# Description of the appliance

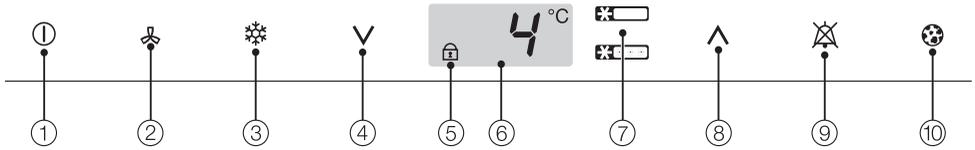


- ① On sensor for the whole appliance and On/Off sensor for switching the refrigeration and freezer sections on and off separately
- ② DynamicCooling sensor
- ③ SuperCool and SuperFreeze sensor
- ④ Sensor for setting a lower temperature (V)
- ⑤ Safety lock indicator light (only visible when the Safety lock is activated)
- ⑥ Temperature display for the refrigeration and freezer sections
- ⑦ Sensor for switching between the refrigeration and the freezer sections (top = "Refrigeration" symbol; bottom = "Freezer" symbol)
- ⑧ Sensor for setting a higher temperature (^)
- ⑨ Alarm off sensor (only visible when the door or temperature alarm sounds)
- ⑩ Change active charcoal filter indicator (only visible when the active charcoal filters need to be changed)

# Description of the appliance

---

- ① Fan
- ② Interior lighting
- ③ Butter and cheese compartment
- ④ Bottle rack
- ⑤ Eggs compartment/Condiment tray
- ⑥ Active charcoal filter holder
- ⑦ Shelves
- ⑧ Condensate channel and drain hole
- ⑨ Fruit and vegetable drawers
- ⑩ Bottle divider
- ⑪ Bottle shelf
- ⑫ Freezer drawers with freezer calendar

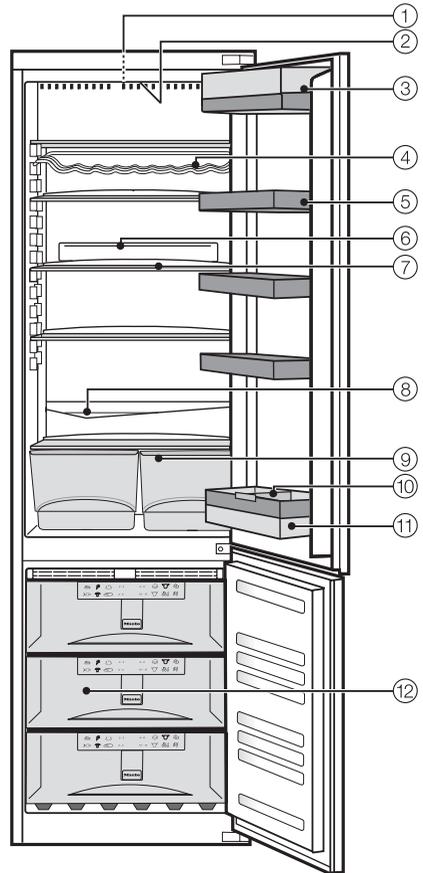

## Disposal of the packing material


The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Rather than just throwing these materials away, please ensure they are offered for recycling.

## Disposing of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

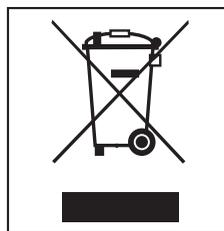

Please dispose of it at your local community waste collection / recycling centre and ensure that it presents no danger to children while being stored for disposal.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse. Take care not to damage the pipework at the back of it before or during transportation to an authorised collection depot.

In this way, refrigerant in the pipework and oil in the compressor will be contained, and will not leak out into the environment.

# Warning and Safety instructions

---

This appliance complies with all relevant local and national safety requirements. Improper use can, however, present a risk of both personal injury and material damage.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before installation and before using it for the first time. They contain important notes on the installation, safety, operation and care of the appliance.

Keep these instructions in a safe place and pass them on to any future user.

## Correct application

► This appliance is intended for domestic use only for the cool storage of food and drink as well as for storing deep frozen food, freezing fresh food and for preparing ice.

Any other usage is not supported by the manufacturer and could be dangerous. The manufacturer cannot be held liable for damage resulting from incorrect or improper use or operation.

► This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised whilst using it, or have been shown how to use it by a person responsible for their safety.

## Safety with children

► This appliance is not a toy! To avoid the risk of injury, do not allow children to play with it or near it, or to play with the controls. Neither should they be allowed to swing on the door. Please supervise young children whilst you are using it. Older children may only use the appliance when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.

# Warning and Safety instructions

---

## Technical safety

► Before setting up the appliance, check it for any externally visible damage. Do not install and use a damaged appliance.

A damaged appliance is dangerous.

► If the connection cable is faulty, it must only be replaced by a service technician authorised by the manufacturer to protect the user from danger.

► This appliance contains the coolant Isobutane (R600a), a natural gas which is environmentally friendly. Although it is flammable, it does not damage the ozone layer and does not increase the greenhouse effect. The use of this coolant has, however, led to a slight increase in the noise level of the appliance. In addition to the noise of the compressor, you might be able to hear the coolant flowing around the system. This is unavoidable, but does not have any adverse effect on the performance of the appliance.

Care must be taken during the transportation and installation of the appliance that no parts of the cooling system are damaged. Leaking coolant can damage the eyes.

In the event of any damage:

- avoid open flames and anything which creates a spark,
- disconnect from the mains,
- air the room in which the appliance is located for several minutes and
- contact Miele for advice.

► The more coolant there is in an appliance, the larger the room it should be installed in. In the event of a leakage, if the appliance is in a small room, there is the danger of combustible gases building up. For every 8 g of coolant, at least 1 m<sup>3</sup> of room space is required. The amount of coolant in the appliance is stated on the data plate inside the appliance.

► Safe operation of the appliance is only assured if it has been installed and connected in accordance with these operating and installation instructions.

► Before connecting the appliance, make sure that the connection data on the data plate (voltage and rated load) match the mains electricity supply. This data must correspond in order to avoid the risk of damage to the appliance. Consult a qualified electrician if in any doubt.

► Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).

# Warning and Safety instructions

---

► The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and tested regularly, and where there is any doubt, the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for damage or injury caused by the lack of or inadequacy of an effective earthing system (e.g. electric shock).

► Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

► While the appliance is under warranty, repairs should only be undertaken by a service technician authorised by the manufacturer. Otherwise the warranty will be invalidated.

► The appliance must be isolated from the electricity supply during installation, maintenance and repair work. The appliance is only completely isolated from the electricity supply when:

- it has been switched off at the socket and the plug has been withdrawn, or
- the fuse from the fused spur connection unit has been withdrawn, or
- the mains fuse has been disconnected, or
- the screw-out fuse has been removed (in countries where this is applicable).

► Faulty components must only be replaced by genuine Miele original spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.

► This appliance may only be used in mobile installations if a risk assessment of the installation has been carried out by a suitably qualified engineer.

► In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the warranty.

# Warning and Safety instructions

---

## Correct use

- ▶ Never handle frozen food with wet hands. Your hands may freeze to the frozen food. Danger of frost burn.
- ▶ Do not take ice cubes out with your bare hands and never place ice cubes or ice lollies in your mouth straight from the freezer.  
The very low temperature of the frozen ice or lollies can cause frost burn to the lips and tongue.
- ▶ Do not refreeze thawed or partially thawed food. Defrosted food should be used up as quickly as possible, as food soon loses its nutritional value and goes off. Defrosted food may only be re-frozen after it has been cooked.
- ▶ Do not store explosive materials in the appliance or any products containing propellants (e.g. spray cans). Thermostats switching on may produce sparks which could present a fire hazard. Flammable compounds could explode.
- ▶ Do not operate any electrical equipment (e.g. an electric ice-cream maker) inside the appliance. Danger of sparking and explosion.
- ▶ If storing alcohol with a high percentage proof, make sure it is tightly closed and stored upright.  
Danger of explosion.

- ▶ Do not store cans or bottles containing carbonated drinks or liquids which could freeze in the freezer. The cans or bottles could explode. Danger of injury and damage to the appliance.
- ▶ When cooling drinks quickly in the freezer, make sure bottles are not left in for more than one hour; otherwise they could burst, resulting in injury or damage.
- ▶ Observe the "use-by" dates given on food to avoid the risk of food poisoning. Storage times will depend on several factors, including the freshness and quality of the food as well as the temperature at which it is stored. Follow the instructions given on the food manufacturer's packaging regarding storage conditions and "use-by" dates.
- ▶ Do not use sharp edged objects to
  - remove frost and ice,
  - separate frozen foods and remove ice trays.They will damage the evaporator, causing irreversible damage to the appliance.
- ▶ Do not place electric heaters or candles in the appliance to defrost it. These can damage the plastic parts.

# Warning and Safety instructions

---

▶ Do not use defrosting sprays or de-icers, as they might contain substances which could damage the plastic parts or which could cause the build-up of gases and pose a danger to health.

▶ Do not use any oils or grease on the door seals, as these will cause the seals to deteriorate and become porous with time.

▶ Do not store cooking oil in the refrigerator door. Traces of oil can cause stress cracks to occur in the plastic components in the door.

▶ Do not block the ventilation gaps in the appliance as this would impair the efficiency of the appliance, increase the electricity consumption and could cause damage to the appliance.

▶ The appliance is designed for use within certain climate ranges (ambient temperatures), and should not be used outside this range. The climate range for your appliance is stated on the data plate inside the appliance.

Installing it in a room with too low an ambient temperature, e.g. a garage, can lead to the appliance switching off for longer periods so that it cannot maintain the required temperature.

▶ Do not use a steam-cleaning appliance to defrost or clean this appliance. Steam could reach the electrical components and cause a short circuit.

## The following applies to stainless steel appliances:

▶ Do not place sticky notes, adhesive tape, masking tape or any other adhesive agent on the treated surface of the door.

The coating will become damaged and lose its protective properties against soiling.

▶ The high quality treated surface of the door is susceptible to scratching. Even fridge magnets can cause scratching.

## Disposal of your old appliance

▶ Before disposing of an old appliance, first make the door latch or lock unusable.

This way you will prevent children from accidentally locking themselves in and endangering their lives.

▶ Be careful not to damage any part of the pipework whilst awaiting disposal, e.g. by

- puncturing the refrigerant channels in the evaporator.
- bending any pipework.
- scratching the surface coating.

Splashes of refrigerant can damage the eyes.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

# How to save energy

	<b>Normal energy consumption</b>	<b>Increased energy consumption</b>
<b>Installation</b>	In a ventilated room.	In an enclosed, unventilated room.
	Protected from direct sunlight.	In direct sunlight.
	Not situated near a heat source (radiator, oven).	Situated near a heat source (radiator, oven).
	Where the ideal ambient room temperature is approx. 20 °C.	Where there is a high ambient room temperature.
	Do not cover the cross-section of the air inlet and outlet and keep free of dust.	
<b>Temperature setting with a thermostat which is approximate (set in stages).</b>	With a medium setting of 2 to 3.	With a high setting: the lower the temperature in the compartment, the higher the energy consumption.
<b>Temperature setting with a thermostat which is exact to the degree- (digital display).</b>	Storage section 8 to 12 °C	On appliances with winter setting, please make sure that the winter setting is switched off when the ambient temperature is warmer than 16 °C.
	Refrigerator section 4 to 5 °C	
	PerfectFresh zone just above 0 °C	
	Freezer section -18 °C	
	Wine storage section 10 to 12 °C	
<b>Use</b>	Do not change the arrangement of the drawers and shelves.	
	Only open the doors when necessary and for as short a time as possible.	Frequent opening of the doors for long periods will cause a loss of coldness.
	Store food in an organised way.	If food is not stored in an organised way, searching for an item will mean the door is open for longer.
	Allow hot food and drinks to cool down before placing them in the appliance.	Placing hot food in the appliance will cause the compressor to run for a long time, as the appliance will have to work harder to lower the temperature.
	Store food covered or packaged.	The evaporation or condensation of liquids will cause a loss of coldness in the refrigerator.
	Place frozen food in the refrigerator to defrost.	
	Do not overfill the appliance to allow air to circulate.	
<b>Defrosting</b>	Defrost the freezer compartment when a layer of ice 0.5 cm thick has built up.	A layer of ice hinders the cold from reaching the frozen food, and causes an increase in energy consumption.

# Switching on and off

## Before using for the first time

To ensure the correct functioning of the appliance, let it stand for between ½ and 1 hour after transporting it to its final location before connecting it to the mains.

## Protective foil

The stainless steel strips and frames have a layer of protective foil to prevent scratching during transportation.

The external surfaces of stainless steel appliances are also covered with a protective foil.

- Remove the protective foil only after the appliance has been installed in its intended location.

## Cleaning and care

- Immediately after removing the protective foil, apply the Original Miele Care product for stainless steel (available from Miele or at [www.miele.com.au](http://www.miele.com.au)) to stainless steel strips and frames.
- Also apply the Original Miele Care product for stainless steel to the side panels after removing the protective foil.  
Appliance doors have a special coating that is not susceptible to soiling. Do **not** apply this product to doors.

Important! Each time the Original Miele Care product for stainless steel is used, it forms a protective film against dirt and water.

- Clean the inside of the appliance and the accessories with lukewarm water and then dry with a soft cloth.

## Active charcoal filters (Active AirClean charcoal filters)

- Place the active charcoal filters supplied in the holder, and place the holder on one of the shelves (see "Active charcoal filters").

## Operating the appliance

A light touch of the finger on the sensors is all that is required to operate this appliance.

## Switching the appliance on

The refrigeration and freezer sections are switched on together with the On/Off sensor.



- Touch the On/Off sensor until the temperature display lights up.

The temperature display shows the current temperature in the refrigeration section.

If the temperature in the freezer is above 0 °C, lines light up in the temperature display of the freezer. As soon as the temperature falls below 0 °C, the temperature display indicates the current freezer temperature.

The "Freezer" symbol and the Alarm off sensor will flash until the temperatures are sufficiently low.

# Switching on and off

The appliance will start to cool, and the interior lighting will come on when the fridge door is opened.

To enable the temperature to get sufficiently cold inside the appliance, allow the appliance to run for a few hours before placing food in it.

Do not place food in the freezer section until the temperature is at least  $-18^{\circ}\text{C}$ .



To switch between the refrigeration and freezer sections, touch the relevant sensor.

If you want to select the freezer section (to check the temperature, for example),



- touch the sensor for changing between the fridge and freezer sections until the "Freezer" symbol lights up.

Depending on which section you have selected, you can

- select the DynamicCooling function,
- select either SuperCool or SuperFreeze, or
- adjust the temperature.

Please refer to the relevant section for more information.

## Cool pack

Place the cool pack in the top freezer drawer. The cool pack will be at its most effective after it has been in the freezer for approx. 24 hours.

## Switching off



- Touch the On/Off sensor until all of the indicators go out. (If this does not happen, the lock must be switched on!)

The refrigeration and freezer sections switch off one after the other.

The interior lighting goes out and refrigeration is switched off.

## Switching refrigeration and freezer sections on and off separately

The refrigeration and freezer sections can also be switched on and off separately so that you can use just one section if you like.

This is useful whilst on holiday, for example, when only the freezer needs to be switched on:



- Select the section you wish to switch off.

## Switching on and off


The "Refrigeration" or "Freezer" symbol lights up yellow.



- Touch the On/Off sensor until the "Refrigeration" or "Freezer" symbol goes out.

The selected section is switched off while the other section remains on.

### To switch on another section again,

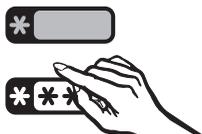

- select the section that you wish to switch on so that the relevant symbol lights up yellow.
- Touch the On/Off sensor until the temperature display lights up, or
- switch the appliance off and then back on again.

## Settings mode

Certain settings on the appliance can only be selected in the settings mode.

How to select the settings mode and how to change the settings is described in the relevant section of these instructions.

Overview of functions that can be selected in the settings mode:

To enter or leave settings mode	<i>c</i>
To switch the sensor tones on/off (see "Switching on and off")	<i>b</i>
Confirm active charcoal filter change (see "Active charcoal filter")	<i>h</i>
To switch the safety lock on/off (see "Switching on and off")	<i>u</i>
To change the brightness of the temperature display (see "The correct temperature")	<i>d</i>

The door alarm is automatically disabled when the appliance is in settings mode. As soon as the door is closed, the door alarm is activated again.

## To switch the sensor tone on/off

The tone which sounds each time a sensor is touched can be deactivated.



- Touch and leave your finger on the V sensor.



- At the same time, briefly touch the On/Off sensor (without letting go of the V sensor).
- Leave your finger on the V sensor for another 5 seconds until **c** appears in the display.
- Touch the V sensor repeatedly until **b** appears in the display.
- Touch the On/Off sensor.
- By touching the V sensor, you can now select whether the sensor tone is switched on or off:
  - b 0**: Sensor tone is switched off
  - b 1**: Sensor tone is switched on
  - b -**: Return to menu

The old setting lights up, and your newly selected setting flashes.

- Touch the On/Off sensor to confirm the new setting.
- Touch the V sensor repeatedly until **c** appears in the display.
- Touch the On/Off sensor.

You have now left settings mode.

## Switching the safety lock on and off

You can secure the appliance against unwanted switching off with the safety lock.



- Touch and leave your finger on the V sensor.



- At the same time, briefly touch the On/Off sensor (without letting go of the V sensor).
- Leave your finger on the V sensor for another 5 seconds until **c** appears in the display.
- Touch the V sensor repeatedly until **u** appears in the display.
- Touch the On/Off sensor.
- By touching the V sensor, you can now select whether the safety lock is switched on or off:
  - u 0**: Safety lock is switched off
  - u 1**: Safety lock is switched on
  - u -**: Return to menu

The old setting lights up, and your newly selected setting flashes.

- Touch the On/Off sensor to confirm the new setting.
- Touch the V sensor repeatedly until **c** appears in the display.
- Touch the On/Off sensor.

# Switching on and off

---

You have now left settings mode.

The safety lock indicator  will light up in the temperature display when the safety lock has been activated.

## Switching off for longer periods of time

If the appliance is not going to be used for a longer period of time, e.g. whilst on holiday:

- switch the appliance off,
- switch off at the wall and withdraw the plug from the socket, or disconnect the mains fuse or remove the screw-out fuse in countries where this is applicable,
- leave the door ajar to air the appliance.

If, during a long absence, the appliance is switched off but not cleaned out and the doors are left shut, there is a danger of mould and odours building up inside the appliance.

# The correct temperature

---

It is very important to set the correct temperature for storing food in the appliance. Micro-organisms will cause food which is not stored at the correct temperature to deteriorate rapidly. Temperature influences the growth rate of these micro-organisms. Reducing the temperature reduces their growth rate.

The temperature in the appliance will rise:

- the more often the door is opened and the longer it is kept open,
  - the more food that is stored in it,
  - the warmer the food is which is being put into it,
  - the higher the ambient temperature surrounding the appliance.
- The appliance is designed for use in specific ambient temperatures (climate ranges). Do not use in ambient temperatures for which it is not designed.

## . . . in fridge section

We recommend a temperature in the centre of the appliance of **4 °C**.

## . . . in the freezer

To freeze fresh food and to store frozen food for a long time, a temperature of **-18 °C** is required. At this temperature the growth of micro-organisms is generally halted. As soon as the temperature rises above -10 °C, the micro-organisms become active in the food again so that it cannot be kept as long. For this reason, partially defrosted or defrosted food must not be refrozen. Food may be refrozen once it has been cooked, as the high temperatures achieved when cooking destroy most micro-organisms.

## Temperature display

During normal operation the temperature displays on the control panel show the temperature in the middle of the fridge section and the temperature in the warmest part of the freezer section.

# The correct temperature

## Setting the temperature

The temperatures in the refrigeration and freezer sections can be set separately.



- Select the refrigeration or freezer section.

The "Refrigeration" or "Freezer" symbol lights up yellow.



- You can now use the arrow sensors on either side of the temperature display to set the temperature you require.

By touching the

∇ sensor: the temperature will get colder

∧ sensor: the temperature will increase.

The temperature range being set will flash in the display as you do this.

The following information appears in the display when the sensors are touched:

- Touching a sensor once: the **last temperature set** flashes.
- Each subsequent touch of a sensor: the temperature is adjusted in 1 °C steps.

- Leaving a finger on the sensor: changes the temperature continuously.  
When the highest or lowest temperature in the range is reached, the ∇ or ∧ sensor disappears.

Approx. 5 seconds after taking your finger off a sensor, the **average current** temperature of the fridge or freezer is automatically shown.

When you have adjusted the temperature, **wait for approx. 6 hours if the appliance is not very full and for approx. 24 hours if the appliance is full** before checking the temperature display, as it will take this long for the appliance to reach the temperature. Only then will the actual temperature be set. If, after this time, the temperature is still too high or too low, you will need to adjust it again.

## Temperature range

The temperature can be adjusted:

- In the refrigerator section from 2 °C to 11 °C
- In the freezer from -14 °C to -28 °C

The ambient temperature in the room and the installation location can affect the time it takes for the appliance to reach the lowest temperature. If the ambient temperature is too high, the appliance may not reach the lowest temperature.

## Changing the temperature display brightness

You have now left settings mode.

The temperature display brightness can be adjusted to suit the lighting conditions of the room.



- Touch and leave your finger on the ∇ sensor.



- At the same time, briefly touch the On/Off sensor (without letting go of the ∇ sensor).
- Leave your finger on the ∇ sensor for another 5 seconds until **c** appears in the display.
- Touch the ∇ sensor repeatedly until **d** appears in the display.
- Touch the On/Off sensor.
- By touching the ∇ sensor, you can adjust the brightness of the temperature display:
  - d 0**: Maximum brightness
  - d 1**: Reduced brightness
  - d -**: Return to menu

The old setting lights up, and your newly selected setting flashes.

- Touch the On/Off sensor to confirm the new setting.
- Touch the ∇ sensor repeatedly until **c** appears in the display.
- Touch the On/Off sensor.

# Alarm

---

Your appliance has been fitted with a warning system which ensures that the temperature in the appliance cannot rise unnoticed and to avoid energy being wasted if a door is left open.

## Activating the alarm system

The alarm system is always active. It does not have to be switched on manually.

## Temperature alarm

An alarm will sound if the temperature becomes too warm.

The alarm off sensor will flash red and the "Freezer" symbol will flash.

The alarm will sound, the alarm off sensor will light up red and the relevant symbol will flash, for example,

- if a lot of room air enters the freezer section when food is being loaded, rearranged or taken out.
- when freezing large amounts of food at once.
- in the event of a power cut.

The alarm will stop and the indicators will go out as soon as the temperature has dropped down to the correct level again.

## Switching the temperature alarm off early

If the noise disturbs you, you can switch the alarm off early if you wish.



- Touch the alarm off sensor. The alarm will stop. The alarm off sensor will light up constantly and the relevant symbol will continue to flash until the correct temperature has been reached.

However, if the temperature in the freezer section remains above  $-18\text{ }^{\circ}\text{C}$  for a long time, check that the frozen food has not started to defrost. If it has, check that the food is safe to use and if it is, then use it as soon as possible.

## Door alarm

The alarm will sound if a door is left open for more than approx. 2 minutes.

The alarm off sensor will light up red and the symbol for the section which has the opened door will flash.

The alarm will stop and the indicators will go out as soon as the door is closed.

## Switching the door alarm off early

If the noise of the door alarm disturbs you, you can switch it off early if you wish.



- Touch the alarm off sensor.

The alarm will stop.

The alarm off sensor will light up constantly and the symbol for the section which has the opened door will continue to flash until the door has been closed.

# Using SuperCool, SuperFreeze and DynamicCooling

## SuperCool

The SuperCool function can be used to rapidly reduce the temperature in the refrigerator to its lowest setting (depending on the room temperature).

### Switching on SuperCool

SuperCool is particularly recommended for the faster chilling of large amounts of fresh food or drink.



- Select the refrigerator section.

The "Refrigerator" symbol will light up yellow.




- Touch the Super cool sensor. It will light up yellow.

The appliance will then work at full power to lower the temperature in the refrigerator section.

## Switching off SuperCool

The SuperCool function will switch itself off automatically after approx. 6 hours. The appliance continues running at normal power.

To save energy, the SuperCool function can be switched off once food and drinks are sufficiently chilled.

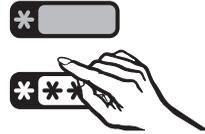

- Select the refrigerator section.

The "Refrigerator" symbol will light up yellow.



- Touch the SuperCool sensor so that it lights up yellow.

The appliance will continue to operate at normal power.

# Using SuperCool, SuperFreeze and DynamicCooling

## SuperFreeze

Switch the SuperFreeze function on before putting fresh food into the freezer.


This helps food to freeze quickly and retain its nutrients, vitamins, flavours and appearance.

### Exceptions:

- when placing food in the freezer that is already frozen.
- when freezing less than 2 kg of fresh food in any one day.

### Switching on SuperFreeze

When freezing small quantities of food in the freezer, the SuperFreeze function should be switched on **6 hours beforehand**. When freezing the **maximum load of food**, the SuperFreeze function should be switched on **24 hours beforehand**.

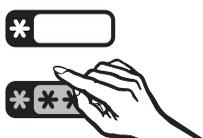

- Select the freezer section.

The "Freezer" symbol will light up yellow.



- Touch the SuperFreeze sensor so that it is highlighted in yellow.


The appliance works at full power to lower the temperature in the freezer section.

### Switching off SuperFreeze

Depending on the amount of food placed in the freezer, the SuperFreeze function will switch off automatically after approx. 30 to 65 hours.

The appliance continues running at normal, energy-saving power.

To save energy, the SuperFreeze function can be switched off once a constant temperature of  $-18\text{ }^{\circ}\text{C}$  or colder has been reached in the freezer section.

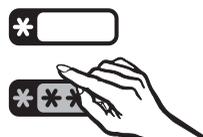

- Select the freezer section.

The "Freezer" symbol will light up yellow.



- Touch the SuperFreeze sensor so that it lights up yellow.

The appliance will continue to operate at normal power.

# Using SuperCool, SuperFreeze and DynamicCooling

## DynamicCooling


When the DynamicCooling function is not switched on, the natural circulation of air in the appliance will cause different temperature zones in the refrigerator as the cold, heavy air will sink to the lowest section of the appliance. You should bear this in mind when placing food in the appliance (see "Using the refrigerator efficiently"). However, if you are placing a large amount of food in the refrigerator at any one time, it is a good idea to switch on DynamicCooling. This way you can distribute the temperature inside the appliance to all areas more evenly so that all the food will be chilled to about the same degree.

The temperature is set as normal with the temperature control.

DynamicCooling should also be selected when:

- the ambient temperature in the room is high (above approx. 33 °C), and
- the room humidity level is high.

## Switching on DynamicCooling

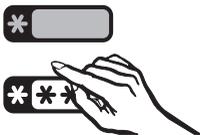

- Select the refrigerator section.

The "Refrigerator" symbol will light up yellow.



- Touch the DynamicCooling sensor so that it is highlighted in yellow.

## Switching off DynamicCooling

Because energy consumption with DynamicCooling activated is higher, it should be switched off under normal conditions.



- Select the refrigerator section.

The "Refrigerator" symbol will light up yellow.



- Touch the DynamicCooling sensor so that it is highlighted in yellow.

The fan for DynamicCooling switches off whilst the door is open.

# Using the refrigerator efficiently

## Different storage zones

Due to the natural circulation of the air in the appliance, there are different temperature zones in the refrigerator. Cold, heavy air sinks to the lowest section of the appliance. Make use of the different zones when placing food in the appliance.

This appliance has DynamicCooling, which helps to keep an even temperature when the fan is running. When DynamicCooling is switched on, the difference between the various zones is less pronounced.

### Warmest area

The warmest area is in the top section of the door. Use this for storing butter and cheese.

### Coldest area

The coldest area in a refrigerator is directly above the vegetable containers.

Use this for all delicate and highly perishable food, e.g.

- fish, meat, poultry,
- sausage products, ready meals,
- dishes or baked goods containing eggs or cream,
- fresh dough, cake mixtures, pizza or quiche dough,
- soft cheese and other dairy products,

- pre-packed vegetables and other fresh food with a label stating it should be kept at a temperature of approx. 4 °C.

Do not store explosive materials in the appliance or any products containing propellants (e.g. spray cans). Danger of explosion.

If storing alcohol with a high percentage proof, make sure it is tightly closed, and store upright.

Do not store cooking oil in the refrigerator door. Traces of oil can cause stress cracks to occur in the plastic components in the door.

Food must not touch the back wall of the refrigerator as it may freeze to the back wall.

To allow air to circulate efficiently, do not pack food too closely together in the refrigerator. Do not cover the fan in the rear wall of the refrigerator as this is essential for keeping the appliance cool.

# Using the refrigerator efficiently

---

## Food which should not be stored in a refrigerator

Not all food is suitable for refrigeration, as some food is sensitive to cold. Cucumbers, for example, become glassy, eggplants bitter and potatoes sweet. Tomatoes and oranges lose their aroma, and the peel on citrus fruit hardens.

Food which should not be stored in a refrigerator includes:

- pineapple, pomegranate, bananas, avocado, mangos, papaya, passionfruit, citrus fruit
- fruit which is not yet ripe
- eggplants, cucumbers, potatoes, capsicum, tomatoes, zucchinis
- some hard cheeses, e.g. Parmesan

## When shopping for food

The freshness of food when first placed in the appliance is an important factor in determining how long it stays fresh, and how long it can be kept in the refrigerator. Time out of the refrigerator, e.g. during transportation, should be kept to a minimum. For example, do not allow food to stay in a hot car for too long. Once food has started to deteriorate, this process cannot be reversed. As little as two hours outside the refrigerator can cause food to start deteriorating.

## Storing food correctly

Food should generally be stored covered or packaged. This will prevent food smells from affecting other foods, food from drying out, and also any cross-contamination of bacteria. The growth of bacteria, such as salmonella, can be avoided by setting the correct temperature and maintaining good standards of hygiene.

## Fruit and vegetables

Fruit and vegetables may be stored loose in the vegetable containers. Please be aware that not all types of fruit and vegetables are suitable for storing in the same container. Aromas and flavours can transfer from one type of food to another (e.g. carrots absorb the smell and flavour of onions very easily). Some food also gives off a natural gas (ethylene) which speeds up the rate at which other food perishes.

### – **Examples of fruit and vegetables which produce a large amount of this natural gas are:**

Apples, apricots, pears, nectarines, peaches, plums, avocado, figs, blueberries, melons and beans.

# Using the refrigerator efficiently

---

– **Examples of fruit and vegetables which react strongly to the natural gases given off by other types of fruit and vegetables are:**

Kiwis, broccoli, cauliflower, Brussels sprouts, mangos, honeydew melons, apples, apricots, cucumbers, tomatoes, pears, nectarines and peaches.

**Example:** Broccoli should not be stored with apples, as apples produce a large amount of natural gas to which broccoli is very sensitive. The result is a shorter than expected storage time for the broccoli.

## **Unpacked meat and vegetables**

Unpackaged meat and vegetables should be stored separately. To avoid any microbiological cross-contamination, these foods may only be stored together if they are wrapped.

## **Protein rich foods**

Please note that foods rich in protein deteriorate faster than others. Shellfish, for example, deteriorates faster than fish, and fish deteriorates faster than meat.

## **Meat**

Meat should be stored unwrapped. (Undo wrappings slightly to leave meat loosely covered, and leave containers open). This permits air to circulate around the meat, allowing the surface to dry slightly, which helps prevent the growth of bacteria. To prevent the risk of bacterial cross-contamination and meat deteriorating, do not let one type of meat come into direct contact with another type.

# Arranging the interior fittings

---

## Moving the shelves

The shelves can be adjusted according to the height of the food.

- Raise the shelf, and pull it forwards slightly until the notch at the side is in line with the shelf support. It can then be raised or lowered to the required level.

The raised edge at the back must face upwards to prevent food from touching the back of the appliance and freezing to it.

Stoppers prevent the shelves from being dislodged by mistake.


## Split shelf

In order to accommodate tall items in the appliance, one of the shelves is divided. The front section can be pushed under the rear section.

- Lightly push the rear glass shelf from underneath.
- Pull the front half of the glass shelf forwards slightly and then push it carefully under the rear half.

To move the split shelf:

- Take both halves of the split glass shelf out,

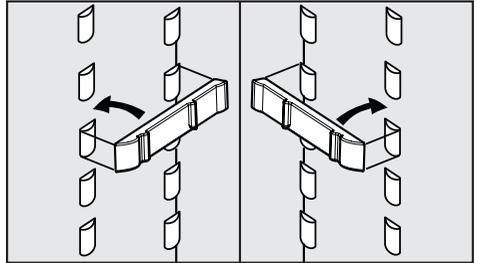

- fit the two brackets onto the supports on either side at the required height,
- and push the glass shelves in one after the other. The shelf with the raised edge must be at the back.

## Fruit and vegetable drawers on roller frames

The fruit and vegetable drawers run on rollers and can be fully pulled out for loading and unloading. The rollers can also be removed for cleaning.

## Adjusting the condiment tray/bottle shelf


- Lift the tray/shelf up and out of the stainless steel frame to remove.
- Push up the stainless steel frame, and remove.
- Replace the frame at the required height. Ensure that it is securely pushed back into position.
- Replace the tray/shelf in the frame.

The tray/shelf can be completely removed for loading and unloading and put back in.

In this way, the tray/shelf can be used as a serving tray on the table.

## Universal container

The universal container can be used both to store and serve food.

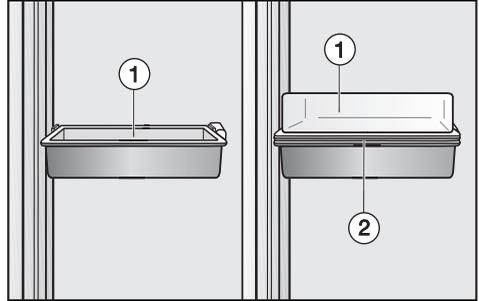

It consists of a deep tray ① and a shallow tray ②. Both trays fit the stainless steel frame.

If you wish to use the universal container to serve food,

- place the shallow tray ② in the stainless steel frame, and use the deep tray as a lid ①.

You can lift the universal container, including contents, out of the frame and take it to the table.

# Arranging the interior fittings

---

## Moving the bottle divider

The bottle divider can be moved to the left or right to ensure that bottles are held securely in position when the door is opened and shut.

The bottle divider can be removed completely ( e.g. for cleaning).

- To do this, push up the front edge of the bottle divider and disengage it.

## Maximum freezing capacity

To ensure that fresh food placed in the freezer freezes through to the core as quickly as possible, the maximum freezing capacity must not be exceeded. The maximum freezing capacity for freezing within a 24-hour period is given on the data plate: "Freezing capacity ....kg/24 hrs".

The maximum freezing capacity given on the data plate has been calculated according to DIN EN ISO 15502 Standard.

## Freezing fresh food

Fresh food should be frozen as quickly as possible so that the nutritional value of the food, its vitamin content, appearance and taste are not impaired.

Food which takes a long time to freeze will lose more water from its cells, which then shrink.

During the defrosting process, only some of this water is reabsorbed by the cells;

This means that a greater moisture loss in food occurs. This can be seen in the water that collects around the food.

If food is frozen quickly, the cells have less time to lose moisture, so they shrink less. As there is not so much moisture loss, it is easier for the food to reabsorb it during the defrosting process, and very little water collects around the defrosted food.

## Storing frozen food

When buying frozen food to store in your freezer, check

- that the packaging is not damaged,
  - the use-by date,
  - the temperature at which the frozen food is being stored in the shop. The length of time it can be kept is reduced if it has been stored at a temperature warmer than  $-18^{\circ}\text{C}$ .
- Buy frozen food once you have finished the rest of your shopping, and wrap it in newspaper or use a cool bag or cool box to transport it.
  - Store it in the freezer as soon as possible.

Do not refreeze defrosted or partially defrosted food. Defrosted food may only be refrozen after it has been cooked.

# Freezing and storing food

---

## Home freezing

Only freeze fresh food which is in a good condition.

### Tips on home freezing

- The following types of food **are suitable** for freezing:  
Fresh meat, poultry, game, fish, vegetables, herbs, fresh fruit, dairy products, pastry, leftovers, egg yolks, egg whites and a range of pre-cooked meals.
- The following types of food **are not suitable** for freezing:  
Grapes, lettuce, radishes, sour cream, mayonnaise, eggs in their shells, onions, whole raw apples and pears.
- To retain colour, taste and vitamin C, vegetables should be blanched after they have been trimmed and washed. To blanch: bring a large saucepan of water to the boil, immerse the vegetables in the fast boiling water for 2 – 3 minutes, depending on variety. Remove, and plunge into ice-cold water to cool quickly. Drain and pack ready for freezing.
- Lean meat freezes better than fatty meat, and can be stored for considerably longer.
- To prevent chops, steaks, cutlets or rolled meat from freezing together in solid blocks when packed, separate with a sheet of plastic freezer film.
- Do not season fresh foods or blanched vegetables before freezing. Only season cooked food

lightly before freezing, but care should be taken as the taste of some spices alters when frozen.

- Do not place hot food or drinks in the freezer. This causes already frozen food to thaw, and increases the energy consumption considerably. Allow hot food and drinks to cool down before placing them in the freezer.

## Packing

- Freeze food in portions.

### Unsuitable packing material

- wrapping paper
- grease-proof paper
- cellophane
- bin bags
- plastic carrier bags

### Suitable packing material

- plastic freezer film
- freezer bags
- aluminium foil
- freezer containers

- Expel as much air as possible from bags etc. before sealing them, to prevent freezer-burn on food.
- Close the packaging tightly with
  - rubber bands
  - plastic clips
  - string or bag ties
  - freezer tape.

Freezer bags may also be sealed using home heat sealing kits.

- Make a note of the contents and the date of freezing on the packaging.

# Freezing and storing food

## Before placing food in the freezer

- When freezing more than 2 kg of fresh food, switch on the SuperFreeze function for some time before placing the food in the freezer (see "SuperFreeze").

This also helps to prevent food that is already in the freezer from starting to defrost.

## Placing food in the freezer

Food to be frozen can be placed anywhere in the freezer.

Large quantities should be placed directly on the glass cold plates to freeze the food quickly. To do this, take out the freezer drawers.

When removing the top drawer, make sure that you do not block the ventilation slits in the back wall of the appliance. They are important for trouble-free operation of the appliance.

The lowest freezer drawer must always remain in the appliance.

Each drawer and each of the glass cold plates can be loaded with a maximum of 25 kg.

- Place the food flat in the bottom of the freezer drawers or on the glass cold plates so that it freezes through to the core as quickly as possible.
- Make sure that the packaging and containers are dry to prevent them sticking together when frozen.

When freezing, make sure that food already frozen does not come into contact with fresh food being frozen as this could cause the frozen food to begin to defrost.

## Freezing large items

If you wish to freeze large items such as a turkey or game, the glass cold plates between the drawers can be removed. To do this:

- Remove the freezer drawers and carefully slide out the glass cold plates.

## Freezer calendar

The freezer calendar on the freezer drawer gives the length of time in months which various foods can be stored for effectively.

Where the storage time given on the packaging differs, follow the advice on the packaging.

			2 - 3	6 - 8			
			3 - 5	10 - 12			

2-3 months:

Cakes, ice cream, stew

3-5 months:

Fish, mushrooms, bread

6-8 months:

Pork, veal, poultry

# Freezing and storing food

---

10-12 months:  
Beef, fruit, vegetables

## Defrosting

Frozen food can be defrosted in different ways:

- in a microwave oven,
- in an oven using the "Fan" or "Defrost" setting,
- at room temperature,
- in the refrigerator (the cold given off by the frozen food helps to keep the other food cold),
- in a steam oven.


Partially thawed **thin pieces of meat or fish** can be placed in a hot pan.

**Fruit** can be defrosted at room temperature in its packaging, or in a covered bowl.

**Most vegetables** can be cooked while still frozen. Just put straight into boiling water or hot fat. The cooking time is slightly less than that of fresh vegetables due to changes in the cell structure.

Do not refreeze defrosted or partially defrosted food. Defrosted food may only be refrozen after it has been cooked.

## Making ice cubes

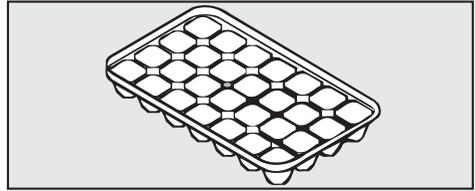

- Fill the ice cube tray with water to  $\frac{3}{4}$  full and place it in a freezer drawer.
- Use a blunt instrument, e.g. a spoon handle or plastic scraper, to prise it apart carefully.
- Ice cubes can be removed quickly if briefly placed under running water.

## Cooling drinks

To cool drinks quickly, place them in the refrigerator section, and switch on the SuperCool function. When cooling drinks quickly, make sure bottles are **not left in the freezer for more than one hour** as they could burst.

## Cool pack

The cool pack prevents the temperature in the freezer rising too quickly in the event of a power cut.

Place the cool pack in the top freezer drawer or, to save space, on the freezer tray. The cool pack will be at its most effective after it has been in the freezer for approx. 24hours.

If there is a power cut, place the cool pack directly on top of the frozen food in the top drawer so that the food will be kept cold for as long as possible.

When placing fresh food in the freezer, use the cool pack to separate the fresh food from the food which is already frozen so that the frozen food does not begin to thaw.

The cool pack can also be used in a cool bag to keep food or drinks cool for a short period of time.

# Automatic defrost

---

## Refrigerator section

The refrigerator defrosts automatically.

Condensate and frost can build up on the back wall of the refrigerator section whilst it is in use. You do not need to remove this, as it will defrost and evaporate automatically with the warmth generated by the appliance.

The condensate is drained away via a channel and drain hole into an evaporation system at the back of the appliance.

Ensure that the condensate channel and drain hole are kept clean and are never blocked so that condensate can flow away without hindrance.

## Freezer section

This appliance is equipped with a "Frost free" system. The freezer section defrosts automatically.

The moisture generated in the appliance collects on the condenser and is automatically defrosted and dissipated by the condenser from time to time.

This automatic defrosting system enables the freezer section to remain permanently ice-free, however, the food stored in the freezer section will not defrost.

Make sure that water cannot get into the electronic unit or into the lighting.

Do not let water get into the drainage channel and drain hole when cleaning.

Do not use a steam cleaning apparatus to clean the appliance. Steam could reach the electrical components and cause a short circuit.

The data plate located inside the appliance must not be removed. It contains information which is required in the event of a service call.

The stainless steel doors have a special coating that is not susceptible to soiling. Do **not** apply the Original Miele Care product for stainless steel to the doors as visible smearing will occur.

The Original Miele Care product for stainless steel can, however, be used on other stainless steel surfaces on the appliance (available from Miele or at [www.miele.com.au](http://www.miele.com.au)). This product contains substances that are gentle to stainless steel surfaces and, unlike stainless steel cleaners, it does not contain polishing agents. Soiling is gently removed and each time the Original Miele Care product for stainless steel is used, it forms a protective film against dirt and water.

**To avoid damaging the outer surfaces of your appliance, do not use:**

- cleaning agents containing soda, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- stainless steel cleaners,
- dishwasher cleaners,
- oven sprays,
- glass cleaning agents,
- hard, abrasive sponges and brushes, e.g. pot scourers,
- dirt erasers,
- sharp metal scrapers.

## Before cleaning


- Switch off the appliance.
- Disconnect the appliance from the mains. Switch off at the wall and withdraw the plug from the socket, or disconnect the mains fuse.
- Take any food out of the appliance and store it in a cool place.
- Take out any removable parts, e.g. shelves, for cleaning.

## Cleaning and care

- The serving trays and containers in the door can be removed from their stainless steel frames for cleaning.

To remove the stainless steel panel from the lid of the butter and cheese compartment, proceed as follows:

- Take out the entire butter and cheese compartment.
- Open the lid.

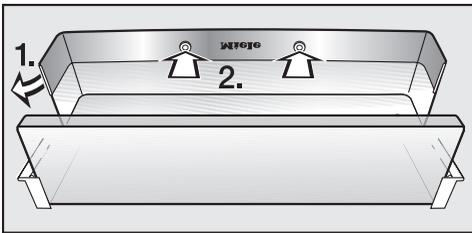

- Disconnect the stainless steel panel from the edge of one side of the lid (1.) first.
- Push the white plastic locating pins out of the holes (2.).
- Reconnect the stainless steel panel to the butter and cheese compartment in the reverse order after cleaning.

## Cleaning the interior and accessories

- Clean the appliance at least once a month.  
Use lukewarm water with a little washing-up liquid.

The following components are all dishwasher safe:

- butter dish, egg tray, ice cube tray, freezer tray (available depending on model)
- serving trays and containers in the door (without stainless steel frame)
- butter and cheese compartment (without stainless steel panel)

The stainless steel frames and panel in the door are **not** dishwasher safe.

The temperature of the dishwasher programme must not exceed 55 °C. Plastic components may discolour in the dishwasher if they come into contact with natural dyes from foods such as carrots, tomatoes and tomato sauce.

This discolouration will not affect the stability of the components.

- Clean the shelves and drawers by hand as they are **not** dishwasher safe.
- Clean the condensate channel and drain hole frequently, so that condensate can drain away unhindered. Use a straw or similar to clear the drain if necessary.

- After cleaning, wipe the interior and accessories with a damp cloth and dry with a soft cloth. Leave the door open to air the appliance for a short while.
- Remove any soiling with the Original Miele Care product for stainless steel.
- Apply the Original Miele Care product for stainless steel to stainless steel panels and frames each time you clean the appliance. This will help to protect stainless steel surfaces and prevent resoiling for a period of time.

## Cleaning the doors and side panels

Remove any soiling immediately. If not, it might become impossible to remove and could cause surfaces to alter or discolour.

The external surfaces of this appliance are all susceptible to scratching. Contact with unsuitable cleaning agents can also alter or discolour the outer surfaces.

- Clean surfaces using a damp microfibre cloth or with a solution of warm water and a little washing-up liquid applied with a soft sponge.
- After cleaning, wipe the outer surfaces with a damp cloth and dry with a soft cloth.

### The following also applies to stainless steel appliances:

#### – Appliance doors

Appliance doors are treated with a high quality surface coating. It protects against soiling and facilitates cleaning and care.

Do **not** use the following on the appliance doors:

- Stainless steel cleaners: The coating will be damaged.
- Miele Original Care product for stainless steel: Visible smearing will form on the door.

#### – Side panels

- Remove any soiling with the Original Miele Care product for stainless steel.
- Apply the Original Miele Care product for stainless steel to the side panels **each time after cleaning**. Each time this product is used it forms a protective film against dirt and water. The stainless steel surface will be protected against resoiling for a period of time.

# Cleaning and care

---

## Ventilation gaps

- The ventilation gaps should be cleaned regularly with a brush or vacuum cleaner. A build-up of dust will increase the energy consumption of the appliance.

## Door seals

Do not use any oils or grease on the door seals as these will cause the seals to deteriorate and become porous over time.

The door seals should be cleaned regularly with clean water, and then wiped dry with a soft cloth.

## Rear of appliance - metal grille

The metal grille at the back of the appliance (heat exchanger) should be dusted at least once a year. A build-up of dust will increase the energy consumption of the appliance.

When cleaning the grille, make sure that the pipework and other components do not get broken or damaged in any way.

## After cleaning

- Replace all shelves and accessories in the refrigerator section.
- Put the food back in the refrigerator.
- Reconnect the appliance to the electricity supply and switch it on.
- Switch on the SuperFreeze function so that the freezer can cool down quickly.
- Once the freezer has reached the required temperature, place the food back in the freezer baskets and put them back in the freezer.
- Switch off SuperFreeze when the temperature in the freezer is a constant  $-18^{\circ}\text{C}$  or colder.


## Active charcoal filters

The active charcoal filters should be changed approx. every 6 months.




When the Change active charcoal filter indicator lights up red, the active charcoal filters need to be changed.

### To change the active charcoal filters

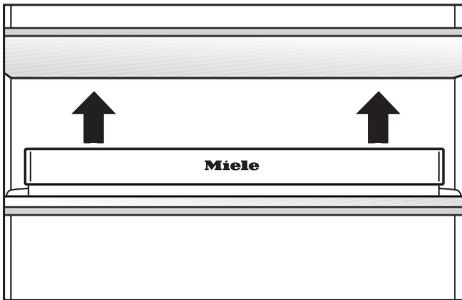

- Pull the active charcoal filter holder upwards to remove it from the shelf.

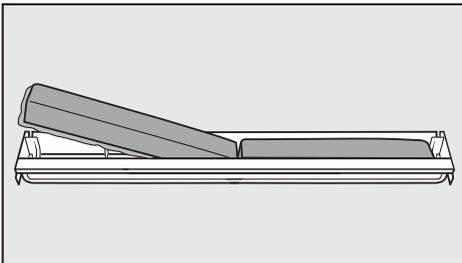

- Take out the two filters and fit the new filters into the holder with the protruding cloth edge facing downwards.
- Place the holder in the middle of the raised edge at the back of the shelf, so that it clicks into position.

To confirm the filters have been changed



- Touch the Change active charcoal filter indicator for approx. 2 seconds.

The indicator light will go out, and the counter will be reset.

### To delay changing the active charcoal filters

If you do not have new active charcoal filters, you can order them from your Miele Chartered Agent or from the Miele Spare Parts Department.

You can switch off the Change active charcoal filter indicator early if you would prefer not to have the red indicator showing.



- Touch the Change active charcoal filter indicator for approx. 2 seconds.

The Change active charcoal filter indicator will go out.

## Active charcoal filters

If you have delayed changing the active charcoal filters and the indicator is not lit up, you will need to reset the counter when you replace the active charcoal filters via the settings mode.



- Touch and leave your finger on the V sensor.



- At the same time, briefly touch the On/Off sensor (without letting go of the V sensor).
- Leave your finger on the V sensor for another 5 seconds until  $\epsilon$  appears in the display.
- Touch the V sensor repeatedly until  $h$  appears in the display.
- Touch the On/Off sensor.
- Touch the V sensor repeatedly until  $h 2$  appears in the display.
- Touch the On/Off sensor for approx. 2 seconds to confirm.

The counter is now reset.

- Touch the V sensor repeatedly until  $\epsilon$  appears in the display.
- Touch the On/Off sensor.

You have now left the settings mode.

### Useful tip:

When you are storing foods with a strong smell (such as ripe cheeses),

- place the holder containing the active charcoal filters on the shelf where the food is going to be stored,
- change the active charcoal filters early if required (remembering to reset the counter),
- and place more active charcoal filters (in holders) in the appliance.

Active charcoal filters and holders can be obtained from your Miele Chartered Agent or from the Miele Spare Parts Department.

Repair work to electrical appliances must only be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. Miele cannot be held liable for unauthorised work.

## What to do if . . .

### **. . . the refrigerator or freezer section does not become cold.**

- Check whether the system lock has been activated. The temperature display must be lit up.
- Check that the plug is correctly inserted into the socket and switched on.
- Check whether the mains fuse has tripped. If it has, contact Miele.

### **. . . the door will not open because it has been opened and closed too many times in succession.**

This is not a fault. The suction caused by opening and closing the door is preventing the door from opening. Wait a few minutes and then try again. It should now open without force.

### **. . . temperature in the refrigerator or freezer is too low.**

- Set a higher temperature.
- Check that the appliance door has been closed properly.
- Has a large amount of fresh food been put in at the same time for freezing?  
This makes the compressor run for longer, causing the temperature to fall automatically.
- SuperCool has not yet switched itself off.

### **. . . the compressor is switching in too frequently and for too long.**

- Check whether the ventilation gaps have been covered over or become dusty.
- Check whether the metal grill (heat exchanger) at the back of the appliance has become too dusty.
- The doors have been opened too frequently, or a large amount of fresh food has been put in at once for freezing.
- Check that the doors close properly.

### **. . . the compressor runs continuously.**

To save energy, the compressor runs at a lower speed, but for longer, when less cooling is required. In this case, the motor runs for longer.

# What to do if. . . ?

---

## **. . . the frozen food is thawing because the freezer is too warm.**

- Is the room temperature lower than the ambient temperature for which the appliance is designed?

If so, raise the temperature of the room.

Operating in a room which is too cold will cause the cooling system to switch off for too long, causing the freezer to become too warm.

## **. . . food has frozen together.**

Use a blunt instrument, e.g. a spoon handle or plastic scraper, to prise it apart carefully.

## **. . . the alarm sounds and the alarm off sensor is flashing.**

A temperature zone is too warm because

- the door has been opened too frequently, or large amounts of fresh food have been placed in the appliance at once.
- the ventilation gaps are blocked.

The alarm will stop and the indicators will go out once the problems have been solved.

## **. . . bars light up in the temperature display.**

Check the temperature displays about 6 hours after switching on the appliance. Only temperatures within the range the appliance can display will be shown.

## **. . . "\_F" appears in the temperature display?**

There is a fault. Call Miele.

## **. . . the Change active charcoal filter indicator is red.**

- Replace the active charcoal filters.

You can order replacement filters via your Miele Chartered Agent or the Miele Spare Parts Department.

## **. . . "nA" appears in the temperature display?**

The temperature has risen too high at some point during the last couple of days because of a power cut.

- Touch the alarm off sensor whilst "nA" is lit up in the display.

The alarm will stop and the temperature display will show the warmest temperature recorded in the freezer section during the power cut.

Check the condition of the food in the freezer. If it has defrosted or started to defrost, check that it is still safe to use and, if so, use it as soon as possible. Defrosted food may only be refrozen after it has been cooked.

The warmest temperature will be displayed for about 1 minute. The display will then revert to showing the current temperature in the freezer.

### . . . "dn" appears in the temperature display?

The demonstration function is activated.

- Call Miele.

### . . . you cannot switch the appliance off.


The safety lock has been activated.

### . . . the interior lighting is not working.


- Has the appliance door been left open for too long? To avoid overheating, the lighting switches itself off automatically after approx. 15 minutes if the door is left open.

If this is not the case, then the interior lighting is defective.

- Disconnect the appliance from the mains. Switch off at the wall and withdraw the plug from the socket, or disconnect the mains fuse or remove the screw-out fuse in countries where this is applicable.

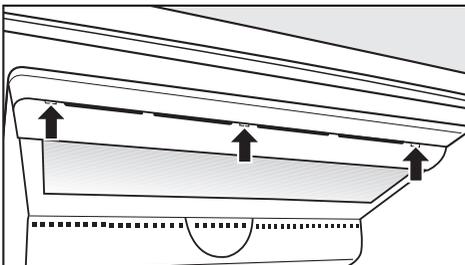

- Disengage the front panel.

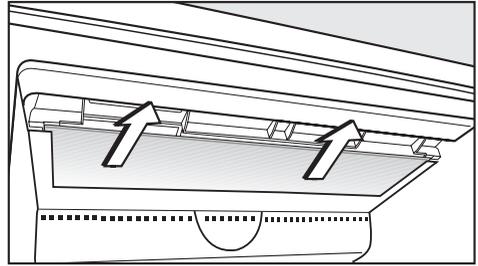

- Pull the glass shelf out.
- Unscrew the lightbulb and replace it.

Connection data of the lamp:  
220 - 240 V, max. 25 W, fitting E 14

- Put the glass shelf back in.
- Put the panel back in place and re-engage the stoppers.

### . . . the floor of the refrigerator is wet.

The condensate drain hole is blocked.

- Clean the condensate channel and drain hole.

If you still cannot remedy the fault having followed these suggestions, please contact Miele.

To prevent unnecessary loss of temperature, it is advisable not to open the door while waiting for the appliance to be serviced.

# Noises

<b>Normal noises</b>	<b>What causes them</b>
<b>Brrrrr ...</b>	Humming noise made by the motor (compressor). This noise can get louder for brief periods when the motor is switching on.
<b>Blubb, blubb....</b>	A gurgling noise can be heard when coolant is circulating through the pipes.
<b>Click ...</b>	Clicking sounds are made when the thermostat switches the motor on and off.
<b>Sssrrrrr ...</b>	On multi-zone and frost-free appliances you can sometimes just hear the movement of the fan inside the appliance.
<b>Crack ...</b>	A cracking sound can be heard when materials expand inside the appliance.

Remember that the noise of the compressor and the coolant circulating in the system is unavoidable.

<b>Noises that you can easily rectify</b>	<b>What causes them, and what can you do about them?</b>
<b>Rattling, vibrating</b>	<b>The appliance is uneven: Realign the appliance using a spirit level, by raising or lowering the screw feet underneath the appliance.</b>
	<b>The appliance is touching another appliance or piece of furniture:</b> Move it away.
	<b>Drawers, baskets or shelves are unstable or sticking:</b> Check all removable items and refit them correctly.
	<b>Are any bottles or containers unstable or knocking against each other?</b> Separate them.
	<b>The transport cable clips are hanging loose at the back of the appliance:</b> Remove the clips.

In the event of a fault which you cannot correct yourself, or if the appliance is under warranty, please contact:

– your Miele Chartered Agent

or

– Miele.

You will find the address and telephone number of Miele on the back cover of the manual.

When contacting your Chartered Agent or Miele, please quote the model and serial number of your appliance. This information is given on the data plate inside your appliance.

# Electrical connection

---

## Electrical connection

All electrical work should be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations.

The appliance is supplied with a mains cable and moulded plug ready for connection to an AC single phase 220-240 V 50 Hz supply.

The voltage and frequency are given on the data plate. Please ensure that these match the household mains supply. The fuse rating is quoted on the plug.

Connection should be made via a suitable switched socket which is easily accessible. For extra safety it is advisable to install a suitable residual current device (RCD).

Do not connect the appliance to the mains electricity supply by an extension lead or a plug adapter. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

Do not connect the machine to an inverter such as those used with an autonomous energy source e.g. **Solar power**.

When switched on, peak loads in the system can cause the safety switch off mechanism to be triggered. This can damage the electronic unit.

The machine must not be used with so-called **Energy saving devices** either. These reduce the amount of energy supplied to the machine, causing it to overheat.

**WARNING**  
**THIS APPLIANCE MUST BE**  
**EARTHED**

Do not place any appliance which gives off heat, such as a toaster or microwave oven, on top of this appliance, as this would increase the appliance's energy consumption.

To avoid a build-up of condensation and resultant damage, this fridge/freezer should not be installed directly next to another appliance. Because this appliance does not have side wall heating, installing side by side can lead to a build-up of condensation. Please check with your Miele Chartered Agent.

## Location

This appliance should be installed in a dry, well-ventilated room. It should not be installed where it is exposed to direct sunlight or directly adjacent to a heat-producing appliance such as an oven or a radiator. The room temperature should not go above or below the climate range for which the appliance is designed.

The higher the ambient temperature of the room, the more energy the appliance requires to operate.

## Climate range

The appliance is designed for use within certain climate ranges (ambient temperatures), and should not be used outside this range. The climate range of the appliance is stated on the data plate inside the appliance.

Climate range	Ambient room temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

Operating in a room which is too cold will result in the cooling system switching off for too long, causing the internal temperature in the appliance to rise with the risk of food deteriorating and going off or frozen food defrosting.

## Ventilation

Air at the back of the appliance gets warm. To ensure sufficient ventilation, the ventilation gaps must not be covered. The air inlet and outlet must not be covered or blocked in any way. They should be dusted on a regular basis.


## Installation

- Remove the cable clip from the back of the appliance.
- Check that all parts at the back of the appliance are unhindered. Carefully remove any hindrance.
- Carefully push the appliance into position with its back against the wall.

# Installation


---

## Aligning the appliance

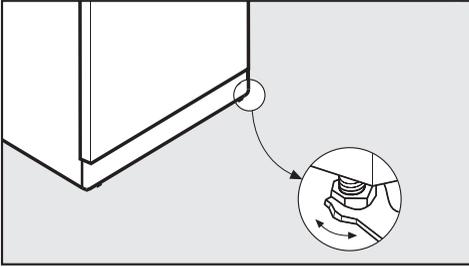


- Align the front feet using a flat spanner.

## Supporting the appliance door

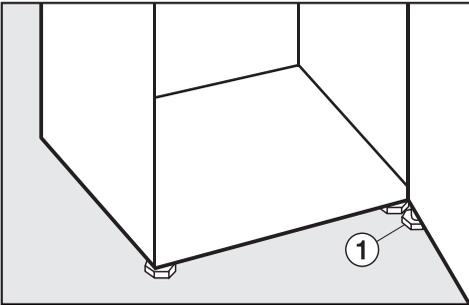

- The foot ③ should **definitely** be unscrewed until it rests on the floor. Then turn it a further 90°.

## Appliance dimensions

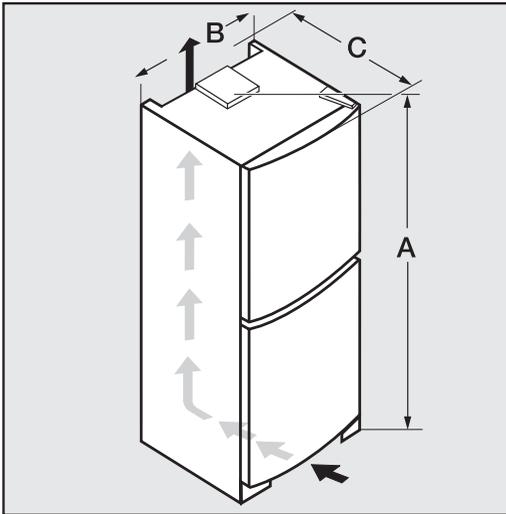

	<b>A</b>	<b>B</b>	<b>C</b>
<b>KFN 14842 SD ed/cs</b>	1860	750	630
<b>KFN 14943 SD ed/cs</b>	2020	750	630
<b>KFN 14943 SD</b>			

# Changing the door hinging

---


The appliance is supplied with right-hand door hinging. If left-hand door hinging is required, the hinging must be changed.

**To change the door hinging, you will need the following tools:**

- a Phillips head screwdriver,
- a flat-bladed screwdriver,
- a selection of Torx screwdrivers,
- a spanner.

Two people are needed to change the door hinging.

## Removing the door handles

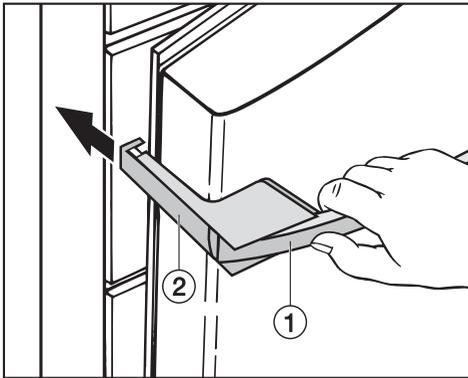


- Pull door handle ① towards you. Side section ② slides back.
- Pull side section ② firmly back out of the guides on the mounting plate (see arrow).
- Undo the 4 (Torx 15) screws in the mounting plate, and remove the handle.
- Remove the cover caps from the opposite side, and fit them into the empty holes.

## Changing the door hinging

Before changing the hinging, make sure you remove all food from the door shelves.


### Removing the upper SoftClose door mechanism

- Open the upper appliance door.

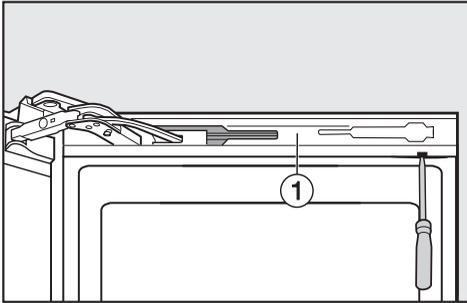


- Prise open panel ① from the SoftClose mechanism: Insert a flat-bladed screwdriver into the gaps from below and ease it off bit by bit.

Take care not to damage the door seal. If the door seal becomes damaged, the door will no longer close properly and cooling will be impaired.

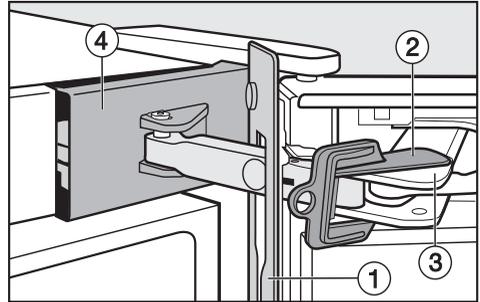

- Slide panel ① towards the appliance, and leave it hanging between the door and the appliance.
- Fit restraining clip ② (supplied with the appliance) onto SoftClose mechanism ③.

The restraining clip stops the hinge from snapping shut. Do not remove the clip until told to do so.

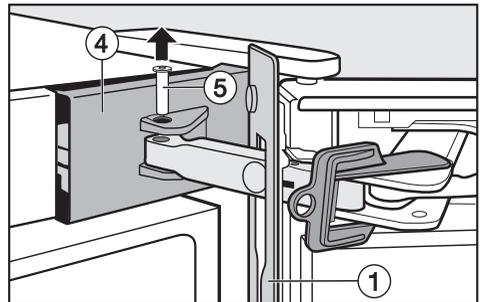


- Carefully prise open cover ④ from above and below using a flat-bladed screwdriver.
- Push hinge pin ⑤ up and out from underneath using a flat-bladed screwdriver.

# Changing the door hinging

- Remove cover ④.


The SoftClose mechanism is now no longer fixed to the appliance.

- Remove panel ①.

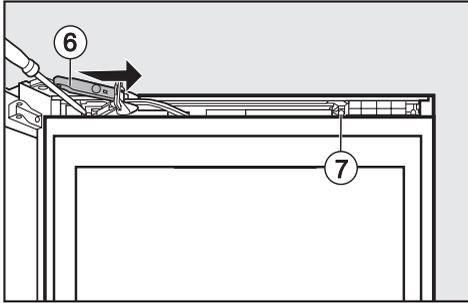

- Slide SoftClose mechanism bracket ⑥ as far as it will go towards the handle side of the door.
- Undo screw ⑦ on the SoftClose mechanism and on the spacer.
- Lever out the housing of the SoftClose mechanism in the middle with a flat-bladed screwdriver.
- Then lever out the housing of the SoftClose mechanism from its position at the side of the appliance.
- Then place it to one side.
- Slide out the spacer from the hinge side.
- Then place it to one side.

## Removing the upper door

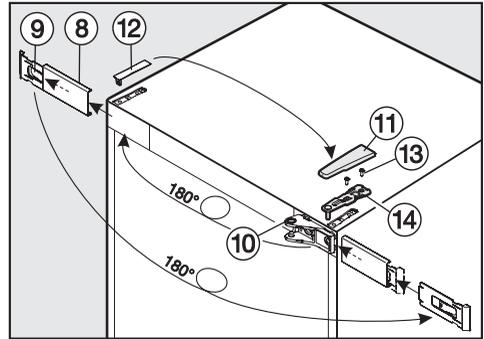

- Gently loosen cover ⑧ by carefully inserting a flat-bladed screwdriver into the gap.
- Remove cover ⑧ together with retaining plate ⑨.
- Then separate retaining plate ⑨ from cover ⑧ by pushing it slightly to the left. Then pull the cover forwards and off.
- Rotate retaining plate ⑨ by 180°.
- Then fit cover ⑧ from the front over retaining plate ⑨ and slide it over to the right. The writing must be visible.
- Unscrew bearing ⑩, turn through 180° and fit to the opposite side. If necessary, drill pilot holes for the screws.
- Remove cover ⑪ by sliding it forwards from the back and then lifting it off.
- Remove cover ⑫ by pulling it upwards.


## Changing the door hinging

Caution! The upper appliance door is not secure once the hinge plate has been removed.

- Close the upper door.
- Loosen screws ⑬ in upper hinge plate ⑭ and pull it upwards and off.
- Carefully lift the upper door off and place it to one side.
- Make sure that you leave the hinge pin in the hinge plate in the middle of the appliance, as otherwise the lower door will be unsecured.
- Then fit cover ⑧ together with retaining plate ⑨ on the opposite side.
- Refit cover ⑫ on the opposite side.


### Removing the lower SoftClose door mechanism

- Open the lower door.

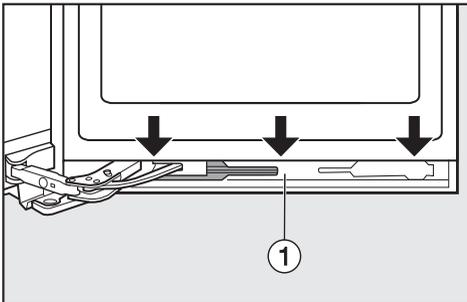

- Prise open panel ① from the SoftClose mechanism: Remove the panel carefully from the top.

Take care not to damage the door seal. If the door seal becomes damaged, the door will no longer close properly and cooling will be impaired.

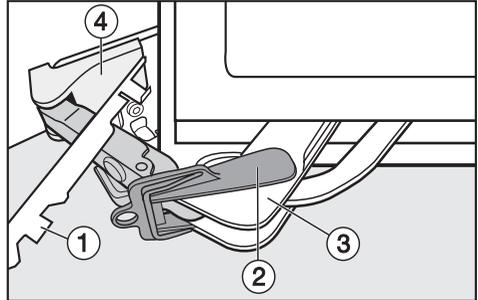


- Slide panel ① towards the appliance, and leave it hanging between the door and the appliance.
- Fit restraining clip ② (supplied with the appliance) onto SoftClose mechanism ③.

The restraining clip stops the hinge from snapping shut. Do not remove the clip until told to do so.

- Carefully remove cover ④ from the side using a flat-bladed screwdriver.
- With the help of another person, tip the appliance back slightly.


# Changing the door hinging

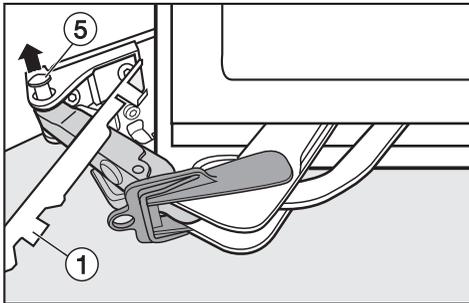

- Push hinge pin ⑤ up and out from underneath.

The SoftClose mechanism is now no longer fixed to the appliance.

- Remove panel ①.

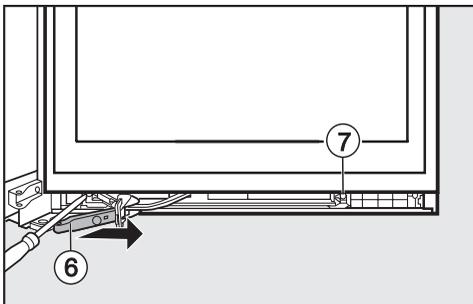


- Slide SoftClose mechanism bracket ⑥ as far as it will go towards the handle side of the door.
- Undo screw ⑦ on the SoftClose mechanism and on the spacer.
- Lever out the housing of the SoftClose mechanism in the middle with a flat-bladed screwdriver.
- Then lever out the housing of the SoftClose mechanism from its position at the side of the appliance.
- Then place it to one side.
- Slide out the spacer from the hinge side.

- Then place it to one side.


## Removing the lower door

- Close the lower appliance door.

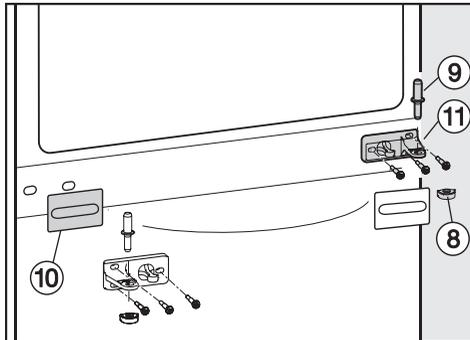


- Pull the middle hinge pin ⑨ upwards to remove it.
- Carefully lift the door off and place it to one side.
- Pull cover ⑩ off.
- Unscrew hinge plate ⑪, turn it through 180° and fit it on the opposite side.
- Turn plastic cover ⑧ 180° and refit it in the centre of hinge plate ⑪.
- Refit cover ⑩ on the opposite side.

## Changing the door hinging

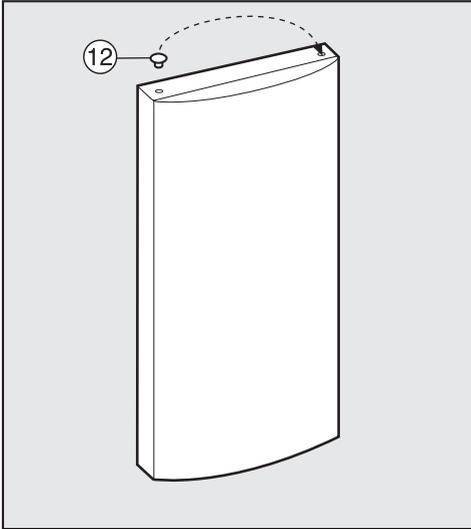

- Remove cap 12 from the bearing bush in the door and refit on the opposite side.

### Refitting the lower door:

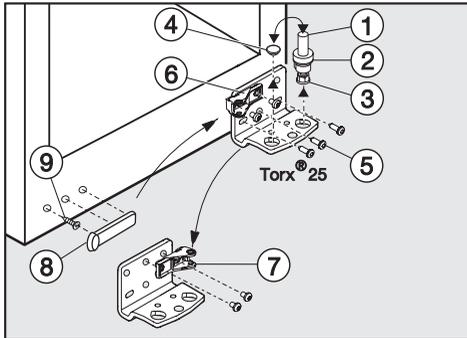


- Pull hinge pin 1 with disc 2 and foot 3 upwards to remove them.
- Remove cap 4.
- Undo screws 5 and take hinge plate 6 off.
- Unscrew bearing 7 from hinge plate 6, rotate it by 180° and refit into the

hole on the opposite side of the hinge plate.


- Place cap 4 in the other hole.
- Remove cover 8.
- Undo screw 9 and screw it into the outermost hole on the other side.
- Rotate cover 8 by 180° and click it into the holes on the other side.
- Screw hinge plate 6 into position on the opposite side using the two **outer** long slots only. Do not use the **middle** screw because you will not be able to align the door over the outer long slots later on.
- Important! Screw foot 3 into hinge pin 1 as far as it will go.
- Reinsert hinge pin 1 with disc 2 and foot 3. Important! The lug on the hinge pin must face backwards.
- Place the lower door onto hinge pin 1.
- Close the lower appliance door.

## Changing the door hinging

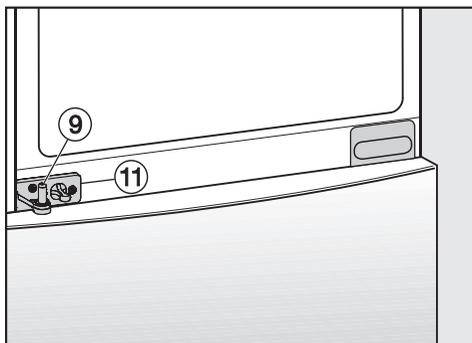


- Fit hinge pin ⑨ into middle hinge plate ⑪ in the lower door.

### Refitting the lower SoftClose door mechanism

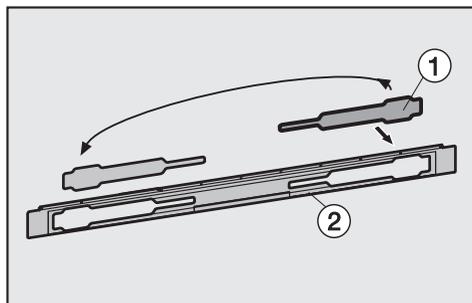


- Remove cover ① from panel ②, rotate it by 180° and refit it on the other side.

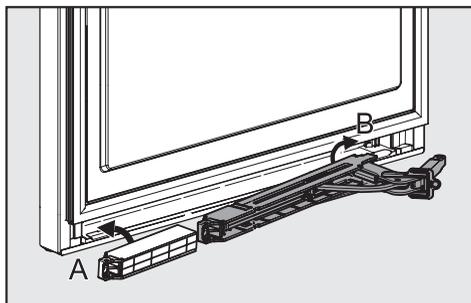


- Clip the spacer into position (A) on the handle side.
- Clip the SoftClose mechanism into position (B) on the appliance side.

Push both parts outwards so that they click into place.

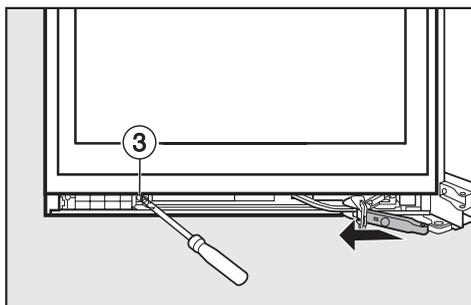

- Tighten the spacer and the SoftClose mechanism with screw ③.


## Changing the door hinging

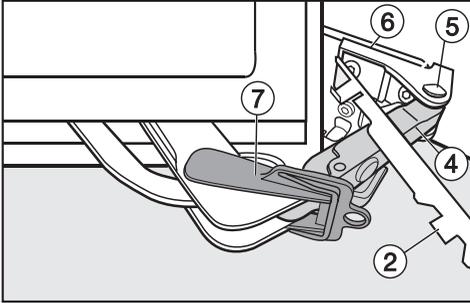

- Attach panel ② to SoftClose mechanism bracket ④.
- Align bracket ④ to the hinge plate, and insert pin ⑤ from above so that the right angle fits into the recess.
- Click cover ⑥ back into place.

Make sure that cover ⑥ fits properly so that the door can be closed without hindrance and the pin is secured.


- Remove retaining clip ⑦.

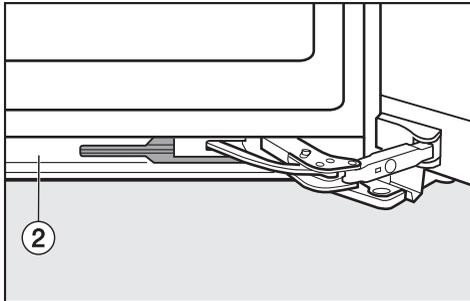

- Replace panel ② onto the SoftClose mechanism from above, clicking it back into place first at the bottom and then at the top.
- Close the lower appliance door.

### Refitting the upper door


- Fit the upper door on middle hinge pin ⑨.
- Close the upper door.

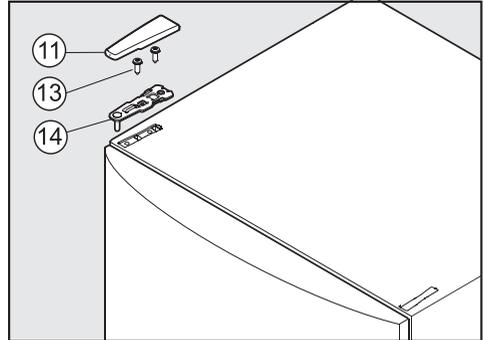


- Fit hinge plate ⑭ onto the opposite side and secure it with screws ⑬. If necessary, drill pilot holes for the screws or use a battery operated screwdriver.
- Refit cover ⑪ on the opposite side.
- Realign the door with the appliance housing again. If necessary, use the long slots in the lower hinge plate. Then tighten the screws.

# Changing the door hinging

## Replacing the upper SoftClose door mechanism

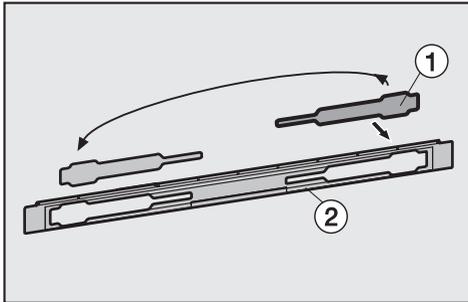


- Remove cover ① from panel ②, rotate it by 180° and refit it on the other side.

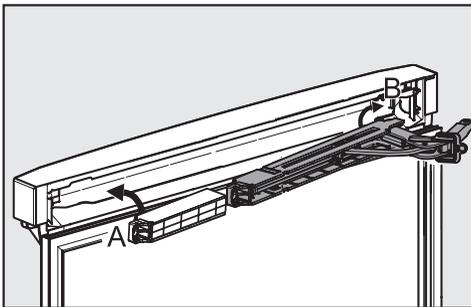


- Clip the spacer into position (A) on the handle side.
- Clip the SoftClose mechanism into position (B) on the appliance side.

Push both parts outwards so that they click into place.

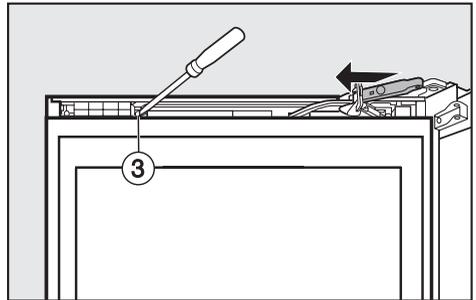

- Tighten the spacer and the SoftClose mechanism with screw ③.

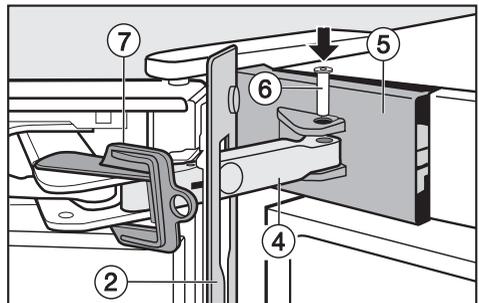


- Attach panel ② to SoftClose mechanism bracket ④.
- Push cover ⑤ on from the side so that the openings for the pin ⑥ are vertically aligned.
- Align bracket ④ to the hinge plate, and insert pin ⑥ from above so that the right angle fits into the recess.
- Click cover ⑤ into position.

Make sure that cover ⑤ fits properly so that the door can be closed without hindrance and the pin is secured.

## Changing the door hinging


- Remove retaining clip ⑦.

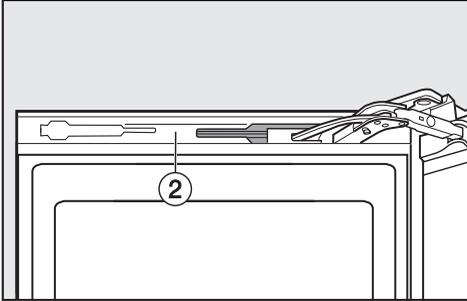

- Replace panel ② onto the SoftClose mechanism from above, clicking it back into place first at the bottom and then at the top.
- Close the upper door.

### Refitting the handles

Please make sure you follow the instructions below carefully when you refit the handles. The door seals will be damaged if the handles are fitted incorrectly.

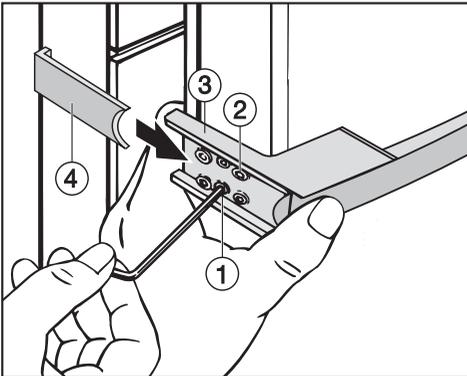

- Loosely attach the handle to the opposite side of the door with the two front screws ②.

Mounting plate ③ must be positioned on the side of the door so that when the door is **closed**, it is flush with the side of the appliance.

If this is not the case,

- tighten both grub screws ① with an Allen key until mounting plate ③ lines up correctly.
- Then tighten all 4 fixing screws ②.
- Slide the side section of the handle ④ into the guides on the mounting plate until it clicks into place.

It is important to check that the side section of the handle ④ does not come into contact with the door seal when opening the door as this would damage the door seal permanently.

If, after you have refitted the handle, you find that the side section does touch the door seal when the door is opened:


- Realign mounting plate ③ with grub screws ① until the mounting plate and the side section of the handle ④ are at the correct angle and the side section does not touch the door seal when the door is opened.

## Aligning the appliance doors

The appliance doors can be retrospectively aligned to the housing.


In the following illustration the door is not shown in the closed position to make it easier to see what happens next.

Align the **lower door** using the long outer slots in the lower hinge plate:

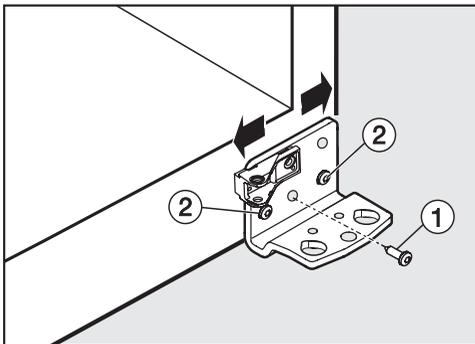


- Remove centre screw ① from the hinge plate.
- Slightly loosen both outer screws ②.
- Align the door by sliding the hinge plate to the left or right.
- Then tighten screws ② again. Screw ① does not need to be refitted.

Align the **upper door** using the long outer slots in the middle hinge plate:

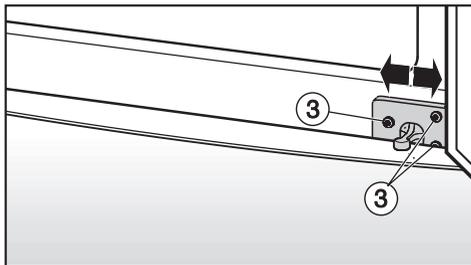

- Slightly loosen both screws ③.
- Align the door by sliding the hinge plate to the left or right.
- Then tighten screws ③.

## Building in the appliance

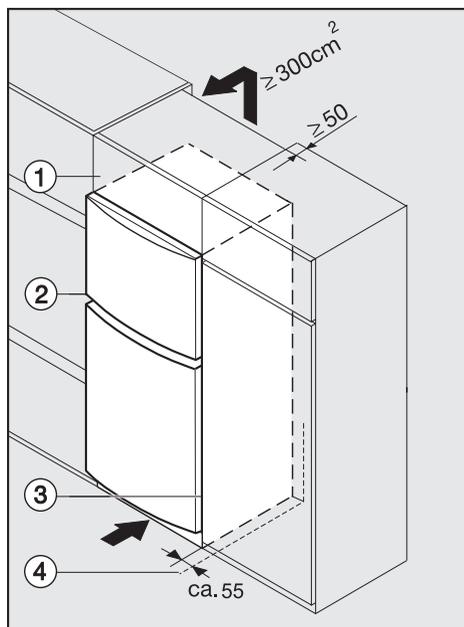

The air inlet and outlet must not be covered or blocked in any way. They should be dusted on a regular basis.

When built into a kitchen run (max. depth 580 mm), the appliance can be installed directly next to a kitchen furniture housing unit. The appliance door will protrude in front of furniture fronts at the sides by 34 mm and by 55 mm in the middle of the door. This enables the doors to be opened and shut without being obstructed.

When installed **next to a wall** (4), a distance of approx. 55 mm must be maintained on the hinge side between the wall (4) and the appliance (2) so that the doors and the handles have sufficient space for opening.

- ① Top box
- ② Appliance
- ③ Housing unit
- ④ Wall

The appliance can be installed in a kitchen run. To match the height of the rest of the kitchen, the appliance can be fitted with a suitable top box (1).

A ventilation gap of at least 50 mm depth must be allowed for behind the appliance across the entire width of the top box for air to circulate.

The cross section of the air outlet under the room ceiling must be at least 300 cm<sup>2</sup> to ensure that air can circulate without hindrance. Otherwise the appliance has to work harder, resulting in an increase in electricity consumption.







## **Miele Australia Pty. Ltd.**

ABN 96 005 635 398

### **Melbourne:**

1 Gilbert Park Drive

Knoxfield, VIC 3180

Telephone: (03) 9764 7130

Fax: (03) 9764 7149

### **Sydney:**

3 Skyline Place

Frenchs Forest, NSW 2086

Telephone: (02) 8977 4230

Fax: (02) 8977 4249

### **Brisbane:**

39 Harvey Street North

Eagle Farm, QLD 4009

Telephone: 1800 798 578

Fax: 1800 799 578

### **Adelaide:**

83-85 Sir Donald Bradman Drive

Hilton, SA 5033

Telephone: 1800 018 770

Fax: 1800 799 578

### **Perth:**

205-207 Stirling Highway

Claremont, WA 6010

Telephone: 1800 094 872

Fax: 1800 799 578

**[www.miele.com.au](http://www.miele.com.au)**

## **Miele New Zealand Limited**

Unit L, 10-20 Sylvia Park Road  
Mt. Wellington, 1060, Auckland  
New Zealand

Telephone: 0800 264 353

Fax: 0800 463 453

[www.miele.co.nz](http://www.miele.co.nz)

## **Germany**

### **Miele & Cie. KG**

Carl-Miele-Straße 29

33332 Gütersloh

