

© ELECTROLUX ITALIA S.p.A.
Spares Operations Italy
Corso Lino Zanussi, 30
I - 33080 PORCIA /PN (ITALY)

Fax +39 0434 394096

Edition: 03-2009- Rev.01

Publication no.

599 70 99-00

EN

**Washing machines
&
Washer-dryers**

**Guide to diagnostics
ENV06 of electronic
controls**

ENV06

**EWM25xx
EWM35xx**

Content

1.1	Purpose of this manual	5
1.2	Procedure	5
2	EWM25xx APPLIANCES CONTROL PANELS	6
3	EWM35xx APPLIANCES CONTROL PANELS	7
4	DIAGNOSTIC SYSTEM	8
4.1	ACCESS TO THE DIAGNOSTIC CYCLE	8
4.2	Exiting diagnostics mode	8
4.3	PHASES OF THE DIAGNOSTIC CYCLE	9
5	ALARMS	11
5.1	Displaying the alarms to the user	11
5.2	Reading the alarm codes	12
5.2.1	Alarm displaying	13
	AEG Version:	13
5.2.2	Examples of alarm display	13
5.2.3	Operation of alarms during diagnostics	14
5.3	Rapid reading of alarm codes	15
5.4	Cancelling the last alarm	15
5.5	TABLE OF ALARMS	16
5.6	Notes concerning certain alarm codes	20
6	THE DIAGNOSTIC PROGRAMME CANNOT BE ACCESSED	21
6.1.1	All LEDs on the circuit are board switched off	21
6.1.2	Some of the LEDs of the circuit board light	21
7	TROUBLESHOOTING ACCORDING TO ALARM CODES	22
	E11: Difficulty in filling water during washing phase	22
	E12: Difficulty in filling water during drying phase	24
	E13: Water leakage	26
	E21: Difficulty in draining	28
	E21: Difficulty in draining (with Aqua Control device)	30
	E22: Difficulty in draining water during drying phase	32
	E22: Difficulty in draining water during drying phase (with Aqua Control device)	34
	E23: Malfunction of the component (triac) that controls the drain pump	36
	E23: Malfunction of the component (triac) that controls the drain pump (with Aqua Control device)	37
	E24: «Sensing» circuit of the component (triac) that controls the drain pump faulty	38
	E35: Water level too high	40
	E38: Pressure chamber blocked	41
	E3A: Problems with «Sensing» circuit of the heating element relay	41
	E41: Door open (3-contact device)	42
	E41: Door open (4-contact device)	44
	E42: Problems with door aperture (3-contact device)	46
	E42: Problems with door aperture (4- contact device)	48
	E44: Door closure «sensing» circuit faulty	52
	E45: Problems with the «sensing» circuit of the triac that actions the door interlock	53
	E52: No signal from the motor tachometric generator (<i>first part</i>)	54
	E52: No signal from the motor tachometric generator (<i>second part</i>)	56
	Procedure for checking the commutator motors	57
	E57: The current requested by the Inverter board is higher than 16A	58
	E58: The current requested by the Inverter board is higher than 6A	60
	E59: No signal from the tachometric generator	62
	E5A: Overheating of the Inverter dissipator	64
	E5H: The power supply of the Inverter board is too low	65
	(lower than 175V)	65
	E5C: The power supply of the Inverter board is too high	66
	(higher than 430V)	66
	E5d: Data transfer error between Inverter board and main board	67
	E5E: Wrong communication between Inverter board and main board	68
	E5F: The Inverter board does not start the motor	68
	E61: Insufficient heating during washing	69
	E62: Overheating during washing (version WM)	70
	E62: Overheating during washing (version WD)	71
	E66: The contacts of the heating element power relay are always closed (version WM)	72
	E66: The contacts of the heating element power relay are always closed (version WD)	73

E68: Washing heating element leaks current (version WM)	74
E68: Washing heating element interrupted (version WD)	75
E69: Washing heating element interrupted (version WM)	76
E69: Washing heating element interrupted (version WD)	77
E71: NTC washing sensor faulty	78
E72: Drying NTC sensor on condenser faulty	79
E73: NTC sensor on drying duct faulty	80
E74: NTC sensor wrongly positioned	81
E82: Error in reading the RESET/OFF position of the programme selector	82
E83: Error in reading the programme selector code	82
E91: Communication error between user interface and main board	83
E92: Protocol incongruence	83
E93: Appliance configuration error	83
E94: Washing cycle configuration error	83
E95: Communication failed between EEprom and Microprocessor	83
E97: Incongruence between version of the control selector and configuration data	83
E98: Communication error between main board and Inverter board	84
E9H: Communication error between microprocessor and Flash memory	85
E9C: Appliance configuration error	85
E9d: Clock faulty	85
E9F: Communication error between main board and Inverter board	86
EA1: Drum positioning system faulty (<i>top-loaders</i>)	87
EA6: Drum flap faulty (<i>top-loaders</i>)	88
EH1: Incorrect mains frequency	90
EH2: Mains voltage too high	90
EH3: Mains voltage too low	90
EHE: Incongruence between the safety relay (main board) and safety "sensing" circuit	91
EHF: Safety "sensing" circuit faulty	91
EF1: Drain hose blocked/throttled/too high; drain filter dirty/blocked	92
EF2: Overdosing of detergent; drain hose blocked/throttled; drain filter dirty/blocked	92
EF3: Intervention of Aqua Control device	92
EF4: Low water fill pressure and solenoid open	92
EF5: Load too unbalanced, skipping of spin phases	92
EF6: Appliance reset	92
EC1: Water fill solenoids blocked	93
EC3: Problem with the weight sensor	94
ED1: Communication problems between main circuit board and	95
WD board	95
ED2: Drying heating element 1 faulty	96
Ed3: Drying heating element 2 faulty	99
Ed4: Drying relays faulty	100
ED6: Communication failure between main circuit board and Satellite board (INPUT styling)	102
8 BASIC CIRCUIT DIAGRAM EWM35xx WITH AQUA CONTROL	103
8.1 Key to circuit diagram EWM35xx with Aqua Control	104
9 BASIC CIRCUIT DIAGRAM EWM35xx WITHOUT AQUA CONTROL	105
9.1 Key to circuit diagram EWM35xx without Aqua Control	106
10 BASIC CIRCUIT DIAGRAM EWM25xx WITH AQUA CONTROL	107
10.1 Key to circuit diagram EWM25xx with Aqua Control	108
11 BASIC CIRCUIT DIAGRAM EWM25xx WITHOUT AQUA CONTROL	109
11.1 Key to circuit diagram EWM25xx without Aqua Control	110
12 BASIC CIRCUIT DIAGRAM EWM25xx WD WITH AQUA CONTROL	111
12.1 Key to circuit diagram EWM25xx WD with Aqua Control	112
13 BASIC CIRCUIT DIAGRAM EWM25xx WD WITHOUT AQUA CONTROL	113
13.1 Key to circuit diagram EWM25xx WD without aqua control	114
14 CONNECTORS ON CIRCUIT BOARD WM/WD	115
15 BURNING ON THE CIRCUIT BOARDS EWM25xx/35xx WM/WD	116
16 BURNING ON THE CIRCUIT BOARD WD	117
17 APPENDIX	118

INTRODUCTION

1.1 Purpose of this manual

The purpose of this Service Manual is to provide a simple and clear description of the procedure to be followed by service engineers when confronted by problems identified by the various alarm codes generated by appliances with the ENV06 electronic control system version EWM25xx and EWM35xx.





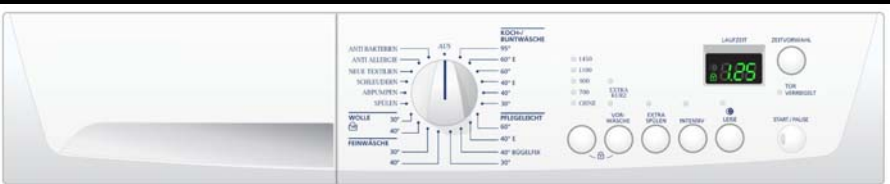



Depending on the configuration of the appliance, the alarm codes may be displayed partially or completely to the user (the alarm codes are generally displayed partially). The diagnostic system can be used by service engineers for the following purposes:




- ◆ To read the alarms
- ◆ To cancel alarm conditions stored in memory
- ◆ To test the operation of the appliance

1.2 Procedure

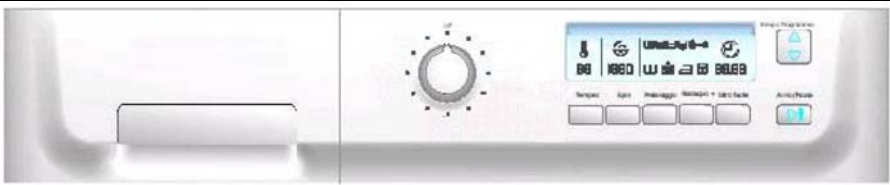


1. Identify the type of control system (**page 7/8**) and access the diagnostic cycle (**See page 9**).
2. Read the alarm code stored in memory (**page 13**) and refer to the instructions for the corresponding alarm code, **page 17-21**.
3. Cancel the alarm stored in memory (**page 16**).
4. If access to the diagnostic cycle is not possible, refer to the section "Access to diagnostic system impossible" (**page 23**).
5. If the main PCB is replaced, check that there are no burned parts (**see page 119-120**).
6. After any repair, always check the operation of the appliance using the diagnostic cycle (**page 10**).
7. Cancel any alarms stored in memory during the diagnostic procedure (**page 16**).

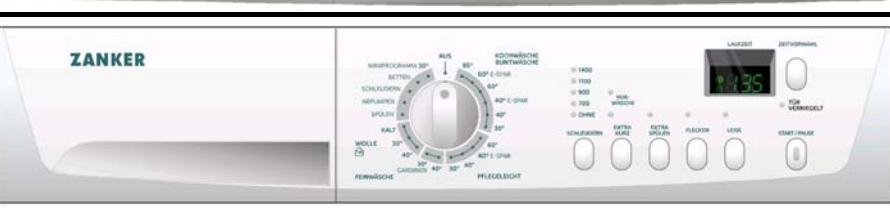2 EWM25xx APPLIANCES CONTROL PANELS

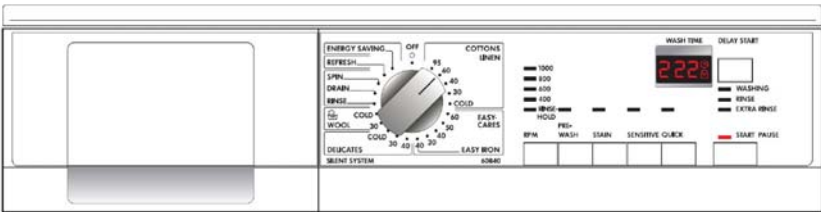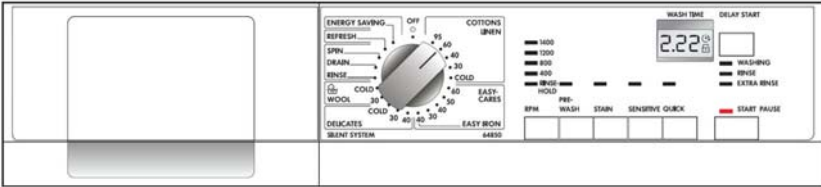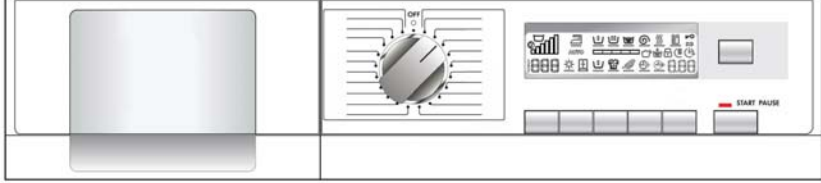ELECTROLUX	TC4	
	TC3	
	TC2	
	TC2 ICON	
SMART ACTION	A3 AF3-A4.2	
SMART CATALOGUE	C3 CF3	
INPUT	C	
SMART ZANKER	K3	

AEG	Serie 6 SPECIAL	
	Serie 6	
	Serie 7	

3 EWM35xx APPLIANCES CONTROL PANELS

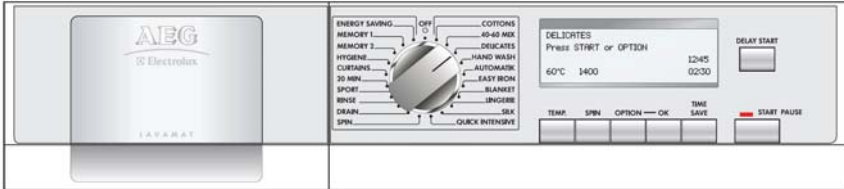
ELECTROLUX	TC1	
	TC1 ICON	
AEG	Serie 8	

These are the available stylings at the moment in this Service Manual, in future some others could be developed.

4 DIAGNOSTIC SYSTEM

4.1 ACCESS TO THE DIAGNOSTIC CYCLE


All versions

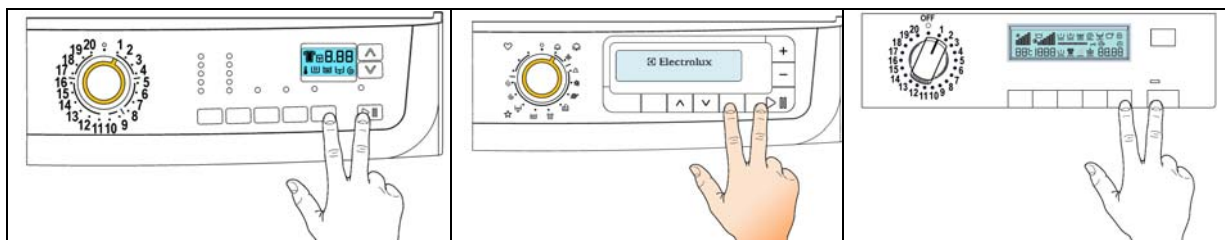

1. Switch off the appliance.
2. Press and hold down the **START/PAUSE** button and the nearest **OPTION** button simultaneously (as represented in figure).
3. Holding down both buttons, switch the appliance on by turning the programme selector **one position clockwise**.
4. Continue to hold down the buttons until the LEDs begin to flash (at least 2 seconds).

In the first position, the cycle tests the operation of the buttons and the relative LEDs. If the selector is turned **clockwise**, the cycle performs the diagnostics for the various components and reads the alarm codes.

INPUT Version

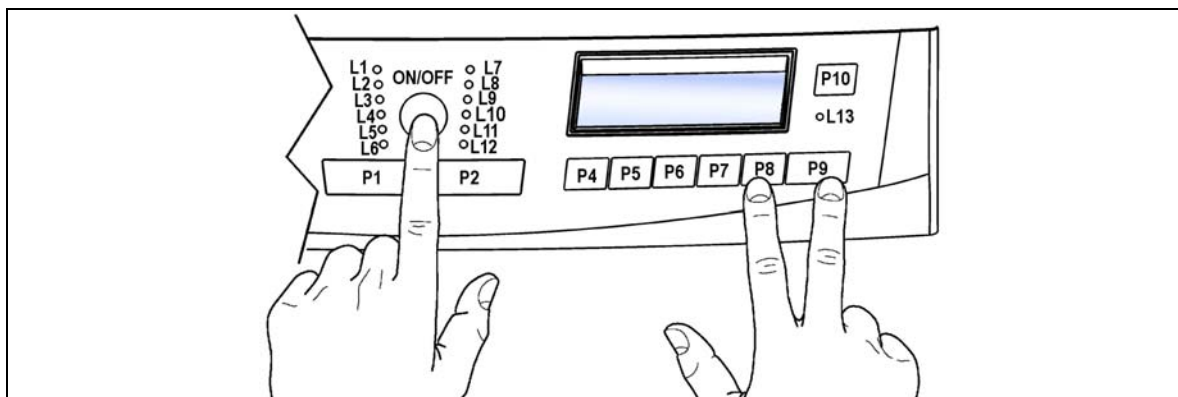

5. Switch off the appliance.
6. Press and hold down **START/PAUSE** button and the nearest **option** button (as represented in figure).
1. Holding down both buttons, switch the appliance on pushing button **ON/OFF**.
2. The test of the display board starts immediately.

Pushing sequentially button P1 positions from 2 to 10 are analysed in an increasing way, on the contrary push button P2.

Each position is confirmed by the switching on of the corresponding LED.

4.2 Exiting diagnostics mode


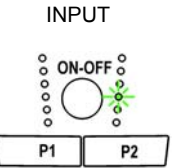
→ To exit the diagnostics cycle, switch the appliance off, then on, and then off again.

4.3 PHASES OF THE DIAGNOSTIC CYCLE

Irrespective of the type of PCB and the configuration of the programme selector it is possible, after entering diagnostic mode, turning the programme selector **clockwise or pushing the buttons P1 or P2** (INPUT version), to perform diagnostics on the operation of the various components and to read the alarms.

All the alarms are enabled during the diagnostic cycle.

Selector position		Components actioned	Operating conditions	Function checked	LCD
1		INPUT - All the LEDs and symbols light in sequence. - When a button is pressed, the corresponding LED or symbol light.	Always activated	Operation of the user interface	All symbols are activated in sequence, the backlight lights up and then switches off.
2		INPUT - Door interlock - Wash solenoid	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through washing compartment	Displays the water level in tub
3		INPUT - Door interlock - Pre-wash solenoid	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through pre-wash compartment (bleach)	Displays the water level in tub
4		INPUT - Door interlock - Pre-wash and wash solenoids	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through conditioner compartment	Displays the water level in tub
5		INPUT - Door interlock - Bleach/stains solenoids	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through conditioner/stains compartments	Displays the water level in tub
6		INPUT - Door interlock - Wash solenoid if the level of water in the tub does not cover the heater - Heating element - Recirculation pump	Door locked Water level above the heater Maximum time 10 minutes or up to 90°C (*)	Heating Recirculation	Wash water temperature
7		INPUT - Door interlock - Wash solenoid if the level of water in the tub does not cover the heater - Motor (55 rpm clockwise, 55 rpm counter-clockwise, 250 rpm impulse)	Door locked Water level above the heater	Check for leaks from the tub	Displays the drum speed (the real value divided by ten)
8		INPUT - Door interlock - Drain pump - Motor up to 650 rpm then at maximum spin speed (**)	Door locked Water level lower than anti-boiling level for spinning	Drain and spin; control of congruence in closure of level pressure switches	Displays the drum speed (the real value divided by ten)
9		INPUT - Door interlock - Drain pump - Motor fan - Condensation solenoid valve - Drying heating element	Door locked Water level lower than anti-boiling level	Drying	Displays the air temperature

10			- Reading/Cancellation of the last alarm	-----	-----	
----	---	---	--	-------	-------	--

- (*) In most cases, this time is sufficient to check the heating. However, the time can be increased by repeating the phase without draining the water: pass for a moment to a different phase of the diagnostic cycle and then back to the heating control phase (if the temperature is higher than 80°C, heating does not take place).
- (**) The check at the maximum speed occurs without control of the FUCS and no clothes have to be inserted inside the appliance.

5 ALARMS

5.1 Displaying the alarms to the user

The alarms displayed to the user are listed below:

- ↩ **Door open**
- ↩ **Drain difficulty (dirty filter)**
- ↩ **Water fill difficulty (closet tap)**


AEG Version

The alarms are represented through the flashing of the yellow LED, which is above the START-PAUSE button, and can be solved directly by the end user;



Other versions

The alarms are represented through the flashing of the red LED, which is inside the START-PAUSE button its shape depends on the styling) and can be solved directly by the user;



The alarm listed below:

- ↩ **EF0 – Water leakage (Aqua Control System)**
for its solution it is necessary the intervention of the Service.

While for the alarm:

- ↩ **EH0 – Voltage or frequency out of nominal values**
It is necessary to wait that the voltage and/or the frequency of the electric line reset the nominal conditions.

The alarms are enabled during the execution of the washing programme, with the exception of alarms associated with configuration and the power supply (voltage/frequency), which are also displayed during the programme selection phase.

The door can normally be opened (except where specified) when an alarm condition has occurred on condition that:

- The level of the water in the tub is below a certain level
- Water temperature lower than 55°C
- Motor stopped



Certain alarm conditions require that a drain phase be performed before the door can be opened for safety reasons:

- Cooling water fill if the temperature is higher than 65°C
- Drain until the analogue pressure switch is on empty, during a max. 3-minute time.


5.2 Reading the alarm codes

It is possible to display the last three memorised alarms in the FLASH memory of the electronic board:

- Enter diagnostic mode (par. 4.1)
- Irrespective of the type of PCB and configuration: turn the programme selector **clockwise** (version with knob) pushing button **P1** (version INPUT) to the **tenth position**.

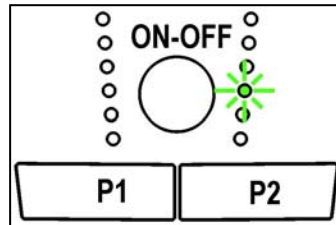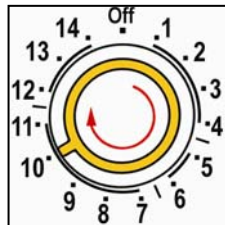


- The last alarm is displayed.

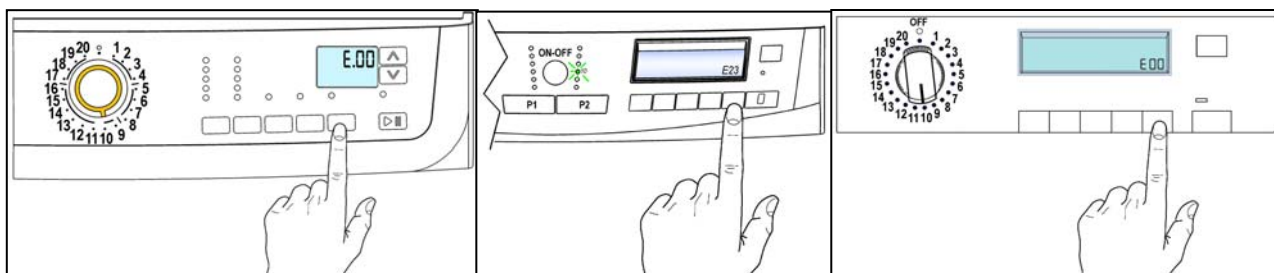


- To display the previous alarms, press sequentially the left button of the START/PAUSE button (as represented in figure).

Appliances with functionality EWM35xx

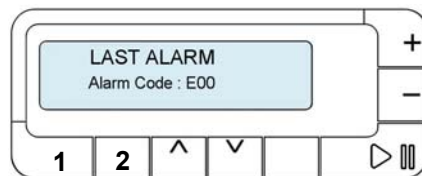

- After having displayed the last alarm (position 10 of the selector).
- To display the previous ones, press button TEMPERATURE (P1 or 1) or SPIN (P2 or 2).

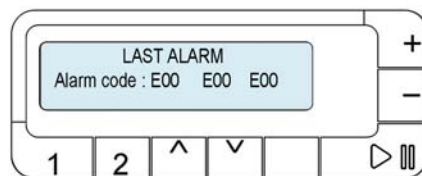

- To return to the last alarm push button START/PAUSE.


5.2.1 Alarm displaying

AEG Version:

The alarm is displayed by a repeated flashing sequence of the LED placed above the button START / PAUSE with yellow and red light (0,5 seconds on, 0,5 seconds off with a 2,5 second pause between the sequences).

- LED indicator START / PAUSE with yellow light → indicates the first digit of the alarm code (family).
- LED indicator START / PAUSE with red light → indicates the second digit of the alarm code (internal number of the family).

These two LEDs are featured in all models.

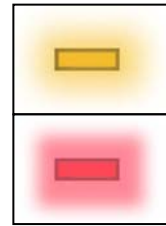


Other versions:

The alarm is displayed by a repeated flashing sequence of the START / PAUSE button with red and green light (0,5 seconds on, 0,5 seconds off with a 2,5 second pause between the sequences).

- LED indicator START / PAUSE with red light → indicates the first digit of the alarm code (family)
- LED indicator START / PAUSE with green light → indicates the second digit of the alarm code (internal number of the family)

These two LEDs are featured in all models.

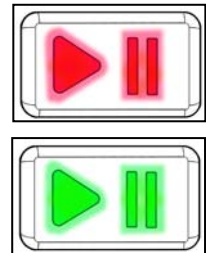

































Notes:

- The first letter of the alarm code “**E**” (Error) is not displayed, since this letter is common to all alarm codes.
- The alarm code “families” are shown in hexadecimal; in other words:
 - **A** is represented by **10** flashes
 - **B** is represented by **11** flashes
 - ...
 - **F** is represented by **15** flashes
- Configuration errors are shown by the flashing of all the LEDs, placed inside or above the button START/PAUSE.

5.2.2 Examples of alarm display

Example: Alarm E43 (problems with the door interlock Triac) will display the following:

- the sequence of four flashes of the START / PAUSE button with red light (version AEG LED yellow light), indicates the first number E**4**3;
- the sequence of three flashes of the START / PAUSE button with green light (version AEG LED red light), indicates the second number E4**3**;

Button/LED - START / PAUSE red/yellow light				Button/LED - START / PAUSE red/green light			
ON/OFF	On/Off (Ver. AEG)	Time (Sec.)	Value	ON/OFF	On/Off (Ver. AEG)	Time (Sec.)	Value
		0.5	1			0.5	1
		0.5				0.5	
		0.5	2			0.5	2
		0.5				0.5	
		0.5	3			0.5	3
		0.5				0.5	
		0.5	4			2.5	Pause
		0.5					
		1.5	Pause				

5.2.3 Operation of alarms during diagnostics

All alarms are enabled during the components diagnostic phase.

5.3 Rapid reading of alarm codes

The last three alarm codes can be displayed even if the programme selector is not in the tenth position (diagnostics) or if the appliance is in normal operating mode (e.g. during the execution of the washing programme):



- Press and hold down **START/PAUSE** and the nearest **option button** (as to enter the DIAGNOSTICS), for at least two seconds: the LEDs initially switch off, and then display the flashing sequence indicating the last alarm.
- To display the previous alarms press the left button of the START/PAUSE button sequentially.
- To return to the last alarm, press the START/PAUSE button.
- The alarm sequence continues as long as the two buttons are held down.
- The alarm reading system is as described in paragraph 5.2.
- While the alarms are displayed, the appliance continues to perform the cycle or, if in the programme selection phase, maintains the previously-selected options in memory.

5.4 Cancelling the last alarm



It is good practice to cancel the last alarm:

- after reading the alarm code, to check whether the alarm re-occurs during diagnostics;
- after repairing the appliance, to check whether it re-occurs during testing.

EWM25xx

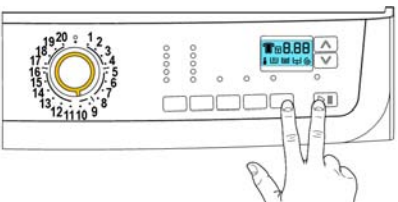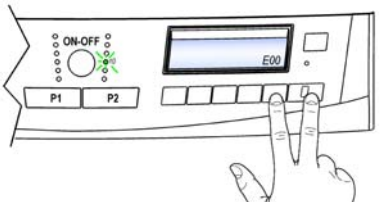	
<ol style="list-style-type: none"> 1. Select diagnostic mode. 2. Turn the selector (version with knob) or push button P2 (version INPUT) to the tenth position (reading of alarm). 3. Press and hold down START/PAUSE and the nearest option button (as represented in figure). 4. Hold down the buttons till the LEDs stop to flash (at least 5 seconds). 	

EWM35xx

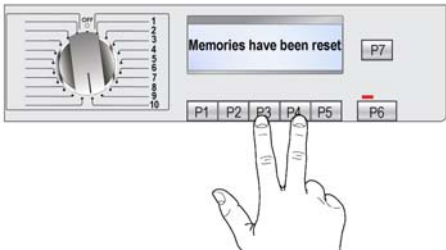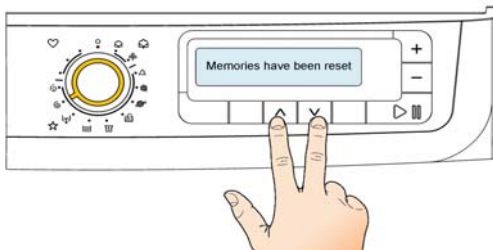	
<ol style="list-style-type: none"> 1. Select diagnostic mode, turn the selector to the tenth position. 2. Press the buttons simultaneously (as represented in figure). 3. Hold down the buttons till the LCD display shows "Deleted memories" (at least 5 seconds). 	

N.B. With this operation all the memorised alarms are deleted.

5.5 TABLE OF ALARMS

Alarm	Possible fault	Action/machine status	Reset	Alarm	Page
E00	No alarm	-----	-----	-----	-----
E11	Difficulties in water fill for washing	Tap closed or water pressure too low; Drain tube improperly positioned; Water fill solenoid valve is faulty; Leaks from water circuit on pressure switch; Pressure switch faulty; Wiring faulty; PCB faulty.	Cycle is paused with door locked.	START/RESET	24
E12	Difficulties in water fill for drying	Tap closed or water pressure too low; Drain tube improperly positioned; Water fill solenoid valve is faulty; Leaks from water circuit on pressure switch; Pressure switch faulty; Wiring faulty; PCB faulty.	Cycle is paused with door locked.	START/RESET	26
E13	Water leakage	Drain hose incorrectly positioned; mains pressure insufficient; water fill solenoid faulty; leakage/blockage of pressure switch hydraulic circuit; pressure switch faulty.	Cycle is paused with door locked.	START/RESET	28
E21	Difficulties in draining for washing	Drain tube kinked/clogged/improperly positioned; Drain filter clogged/dirty; Drain pump faulty; Pressure switch faulty; Wiring faulty; PCB faulty.	Cycle is paused (after 2 attempts).	START/RESET	30-32
E22	Difficulties in draining for drying	Drain tube kinked/clogged/improperly positioned; Drain filter clogged/dirty; Drain pump faulty; Pressure switch faulty; Wiring faulty; PCB faulty.	Cycle is paused.	START/RESET	34-36
E23	Drain pump triac faulty	Drain pump faulty; Wiring faulty; PCB faulty.	Safety drain cycle - Cycle stops with door unlocked.	RESET	38-39
E24	Fault in "sensing" circuit of drain pump triac (wrong input signal to microprocessor)	PCB faulty.	Safety drain cycle - Cycle stops with door unlocked.	RESET	40
E31	Electronic pressure switch circuit faulty (frequency of pressure switch signal out of limits)	Electronic pressure switch; Wiring; PCB faulty.	Cycle blocked with door closed.	RESET	40
E32	Incorrect calibration of electronic pressure switch (The electronic pressure switch generates a signal with instable frequency during the drain phase)	Drain tube kinked/clogged/improperly positioned; Drain filter clogged/dirty; Drain pump faulty; Leaks from water circuit on pressure switch; Pressure switch; Wiring faulty; PCB faulty.	Cycle is paused.	START/RESET	41
E35	Water overflow	Water fill solenoid faulty; Leaks from water circuit on pressure switch; pressure switch faulty; wiring faulty; PCB faulty.	Cycle blocked. Safety drain cycle. Drain pump always in operation (5 minutes on, 5 minutes off etc.).	RESET	42
E38	Pressure chamber blocked (water level does not vary for at least 30 sec. during drum rotation)	Motor drive belt broken; Hydraulic circuit pressure switch clogged.	Heating phase skipped.	ON/OFF RESET	43
E3A	Heating elem. relay sensing faulty (input signal to microprocessor always 0V or 5V)	PCB faulty.	Cycle blocked with door closed.	RESET	43
E41	Door open (after 15 sec.)	Door interlock faulty; wiring faulty; PCB faulty.	Cycle paused.	START/RESET	44-46

Alarm	Possible fault	Action/machine status	Reset	Alarm	Page
E42	Problems of door closure	Door interlock faulty; wiring faulty; PCB faulty.	Cycle paused.	START/RESET	48-50
E43	Interlock power supply triac faulty	Door interlock faulty; wiring faulty; PCB faulty.	(Safety drain cycle) Cycle blocked.	ON/OFF RESET	52-53
E44	Door interlock sensing circuit triac faulty	PCB faulty.	(Safety drain cycle) Cycle blocked.	ON/OFF RESET	54
E45	Door interlock sensing circuit triac faulty (wrong input signal to microprocessor)	PCB faulty.	(Safety drain cycle) Cycle blocked.	ON/OFF RESET	55
E52	No signal from motor tachometric generator	Motor faulty; wiring faulty; PCB faulty.	Cycle blocked, door locked (after 5 attempts).	RESET	56-58
E57	Inverter is drawing too much current (>15A)	Motor-Inverter wiring faulty; Inverter board faulty, Motor faulty.	Cycle blocked, door locked (after 5 attempts).	RESET	60
E58	Inverter is drawing too much current (>4,5A)	Motor abnormal operation (overloaded); Motor-Inverter wiring faulty; Motor faulty; Inverter board faulty.	Cycle blocked, door locked (after 5 attempts).	RESET	62
E59	No signal from tachometric generator for three seconds	Motor-Inverter wiring faulty; Inverter board faulty, Motor faulty.	Cycle blocked, door locked (after 5 attempts).	RESET	64
E5A	Overheating for heat dissipator for Inverter	Overheating caused by continuous operation or ambient conditions (let appliance cool down); Inverter board faulty. NTC open (on the Inverter board).	Cycle blocked, door locked (after 5 attempts).	RESET	66
E5H	Input voltage is lower than 175V	Wiring faulty; Inverter board faulty.	Cycle blocked, door locked (after 5 attempts).	RESET	67
E5C	Input voltage is too high	Input voltage is too high (measure the masters voltage); Inverter board faulty.	Cycle blocked, door locked (after 5 attempts).	RESET	68
E5d	Data transfer error between Inverter and main board	Line interference; Wiring faulty; Main board or Inverter faulty.	-----	RESET	69
E5E	Wrong communication between main board and Inverter	Main board-Inverter wiring faulty; Inverter board faulty; Main board faulty.	Cycle blocked (after 5 attempts).	ON/OFF	70
E5F	Inverter board does not start the motor	Wiring faulty; Inverter board faulty; Main board faulty.	Cycle blocked, door locked (after 5 attempts).	RESET	70
E61	Insufficient heating during washing	NTC sensor faulty; heating element faulty; wiring faulty; PCB faulty.	The heating phase is skipped.	START/RESET	71
E62	Overheating during washing (temperature higher than 88°C for a time higher than 5 min.)	NTC sensor faulty; heating element faulty; wiring faulty; PCB faulty.	Safety drain cycle – Cycle stopped with door open.	RESET	72-73
E66	Heating element power relay faulty (incongruence between sensing and relay)	PCB faulty.	Safety drain cycle – Cycle stopped with door open.	RESET	74-75
E68	Current dispersion to earth (value of mains voltage different from main value)	Current dispersion between between heating element and earth.	Cycle blocked with door open.	RESET	76-77
E69	Heating element interrupted	Wiring faulty; Heating element for washing interrupted (thermofuse open).	-----	START/RESET	78-79
E71	Washing NTC sensor faulty (short-circuited or open)	Wiring faulty; Washing NTC sensor faulty; PCB faulty.	The heating phase is skipped.	START/RESET	80

Alarm	Possible fault	Action/machine status	Reset	Alarm	Page
E72	Drying condenser NTC sensor faulty (voltage value out of limits, sensor short-circuited or open)	Wiring faulty; Drying NTC sensor (condenser) badly positioned or faulty; WD board faulty.	The drying heating phase is skipped.	START/RESET	81
E73	Drying duct NTC sensor faulty (voltage value out of limits, sensor short-circuited or open)	Wiring faulty; Drying NTC sensor (duct) badly positioned or faulty; WD board faulty.	The drying heating phase is skipped.	START/RESET	82
E74	Washing NTC sensor badly positioned	Wiring faulty; Washing NTC sensor badly positioned; NTC sensor faulty; PCB faulty.	The heating phase is skipped.	START/RESET	83
E82	Error in selector reset position	PCB faulty (Wrong configuration data).	-----	RESET	84
E83	Error in selector reading	PCB faulty (Wrong configuration data).	Cycle cancelled.	START/RESET	84
E91	Communication error between PCB and display board	Wiring faulty; Control/display board faulty; PCB faulty.	-----	RESET	85
E92	Communication incongruence between main PCB- display board (versions not compatible)	Wrong control/display board; Wrong PCB (do not correspond to the model).	Cycle interrupted.	OFF/ON	85
E93	Incorrect configuration of appliance	PCB faulty; (Incorrect configuration data).	Cycle interrupted.	OFF/ON	85
E94	Incorrect configuration of washing cycle	PCB faulty; (Incorrect configuration data).	Cycle interrupted.	OFF/ON	85
E95	Communication error between microprocessor and EEPROM	PCB faulty.	Cycle interrupted.	RESET	85
E97	Incongruence between programme selector and cycle configuration	Faulty PCB (Wrong configuration data).	Cycle interrupted.	RESET	85
E98	Communication error between main board - Inverter	Incompatibility between main board and Inverter.	Cycle interrupted.	OFF/ON	86
E9H	Communication error between microprocessor and FLASH memory	Display board.	-----	OFF/ON RESET	87
E9C	Machine configuration error	Display board.	-----	OFF/ON RESET	87
E9d	Clock faulty	Display board.	-----	OFF/ON RESET	87
E9F	Communication error between PCB and remote devices	Wiring between PCB and Inverter faulty; PCB faulty; Inverter faulty.	Cycle interrupted.	OFF/ON	88
EA1	Drum positioning (DSP) faulty	Motor belt broken; Wiring faulty; PCB faulty; DSP sensor faulty.	Positioning phase skipped.	ON/OFF RESET	89
EA6	DSP door opening faulty	Motor belt broken; Wiring faulty; Drum cover open. Motor faulty; PCB faulty.	Cycle paused.	ON/OFF RESET	90
EC1	Solenoid valve blocked with flowmeter working	Wiring faulty; Solenoid valve faulty/blocked, PCB faulty.	Cycle blocked with door closed. Drain pump always works (5 min., then it stops for 5 min. ecc.).	RESET	95
EC3	Problems with Weight sensor (no signal or out of limits)	Wiring faulty; Weight sensor faulty; PCB faulty.	-----	START/RESET	96

Alarm	Possible fault	Action/machine status	Reset	Alarm	Page
Ed1	Data communication error between WD board and PCB	Wiring faulty between PCB and WD board; WD board faulty; PCB faulty.	Cycle interrupted.	OFF/ON	97
Ed2	Drying heating element relay 1 faulty	Wiring faulty between WD board and thermostats; thermostats faulty; WD board faulty; PCB faulty.	Cycle blocked with door open.	RESET	98
Ed3	Drying heating element relay 2 faulty	Wiring faulty between WD board and thermostats; thermostats faulty; WD board faulty; PCB faulty.	Cycle blocked with door open.	RESET	101
Ed4	Relay which commutates power between washing heating element and drying (in the WD board)	Wiring faulty; WD board faulty; PCB faulty.	Cycle blocked with door open.	RESET	102
Ed6	No communication between PCB and display board (INPUT)	Wiring faulty between PCB and programme display board; PCB faulty.	-----	OFF/ON	104
EF1	Drain filter blocked (drain phase too long)	Drain tube blocked/kinked/too high; Drain filter dirty/blocked.	Warning displayed at the end of cycle (specific LED).	START/RESET	94
EF2	Excessive detergent dosing (excessive foam during draining)	Excessive detergent dosing; drain tube kinked/blocked; Drain filter dirty/blocked.	Warning displayed after 5 attempts or by the specific LED.	RESET	94
EF3	Aqua control intervention	Water leaks onto base frame; water control system defective.	Water drain.	ON/OFF RESET	94
EF4	Water fill pressure low, no signal of flowmeter and solenoid valve open	Tap closed; water fill pressure low.	-----	RESET	94
EF5	Unbalanced load	Final spin phases skipped.	-----	RESET	94
EF6	Reset	-----	No action to be performed, if continues replace the PCB.	-----	94
EH1	Frequency power of appliance out of limits	Power supply problems (incorrect / disturbance); PCB faulty.	Wait for frequency nominal conditions.	OFF/ON	92
EH2	Voltage too high	Power supply problems (incorrect / disturbance); PCB faulty.	Wait for frequency nominal conditions.	OFF/ON	92
EH3	Voltage too low	Power supply problems (incorrect / disturbance); PCB faulty.	Wait for frequency nominal conditions.	OFF/ON	92
EHE	Incongruence between safety relay (in the PCB) and the safety "sensing" circuit	Wiring faulty; PCB faulty.	Safety drain cycle – Cycle stopped with door open.	RESET	93
EHF	Safety "sensing" circuit faulty (input voltage to microprocessor wrong)	PCB faulty.	Safety drain cycle – Cycle stopped with door open.	RESET	93


5.6 Notes concerning certain alarm codes

- **Configuration alarms E93:** If this alarm is generated (when the appliance is switched on), operation of the appliance is blocked, the LEDs placed above or inside the START/PAUSE button start to flash displaying the complete codification (family plus alarm), the display shows the alarm code on condition that the configuration part of the display is ok.
The diagnostic procedure cannot be accessed; the only option is to switch the appliance OFF.
- **Configuration alarm E94:** all LEDs placed above or inside the START/PAUSE button start to flash displaying the complete codification (family plus alarm) and the code is displayed.
It is not possible to enter the diagnostics or to use the mode "rapid displaying of the alarm".
- **Alarms EH1(Eb1)-EH2(Eb2)-EH3(Eb3):** In the event of problems with the mains power supply, the appliance remains in alarm mode until the mains frequency or voltage are restored to the correct value or the appliance is switched off (programme selector on "0"). The family of alarm "**b or H**" only is displayed if the problem occurs during the normal operation of the appliance, while the family plus the alarm are displayed if the problem occurs at the switching on, through the flashing of the LEDs placed above or inside the START/PAUSE button. At the same time the code is represented also in the display.
It is not possible to enter the diagnostics or to use the mode "rapid displaying of the alarm": the complete alarm can be read only when the abnormal situation has terminated.
- **Alarms E51- E52:** During the diagnostic test, all the alarms are displayed. Normally, when the programme selector is turned from one test phase to another, the appliance exits the alarm condition and performs the phase selected. This does not take place in the case of alarms E51 (power triac on motor short-circuited) and E52 (no signal from the tachometric generator on the motor): in these cases, the only option to exit the alarm condition is to switch the appliance OFF by turning the selector to position "0" (reset) or pushing the ON/OFF button (INPUT styling).

6 THE DIAGNOSTIC PROGRAMME CANNOT BE ACCESSED

6.1.1 All LEDs on the circuit are board switched off

Are the power cable and connection OK?	No →	Replace or repair the power cable, check the connector.
Yes ↓		
Does the suppressor function correctly?	No →	Replace the suppressor.
Yes ↓		
Is the wiring from the suppressor to the circuit board (connectors U3.1-U3.2) OK?	No →	Replace or repair the wiring.
Yes ↓		
Does the programme selector function correctly?	No →	Replace or repair the knob or knob spindle.
Yes ↓		
Replace the circuit board and perform the diagnostic programme.		

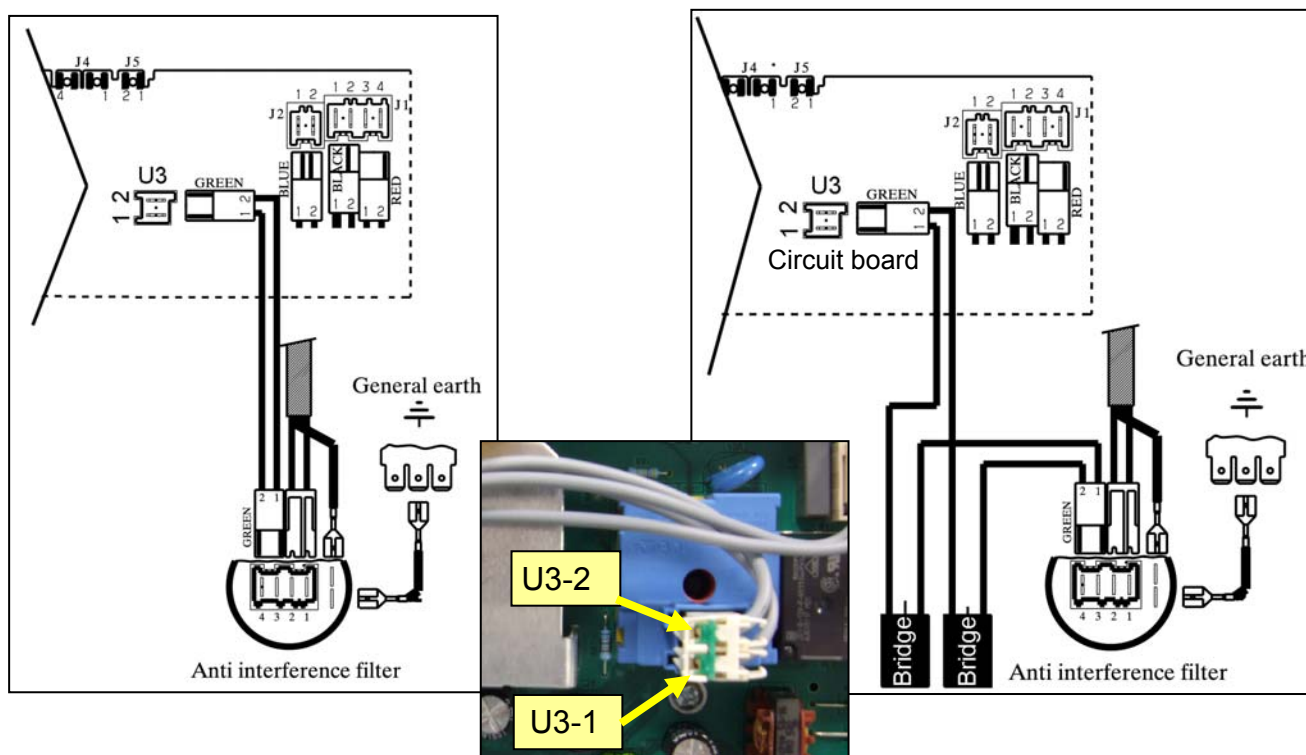

6.1.2 Some of the LEDs of the circuit board light


Do the keys move without hindrance in the housings in the control panel and correctly action the corresponding buttons?	No →	Solve the mechanical problems (control panel / keys / spindles).
Yes ↓		
Replace the circuit board and perform the diagnostic programme.		

If there are traces of burning on the circuit board, refer to pages 119-120





7 TROUBLESHOOTING ACCORDING TO ALARM CODES

E11	E11: Difficulty in filling water during washing phase	E11
	Maximum water fill time for each pressure switch level (this time is reset to zero each time the level is reached)	

Tests to be performed:

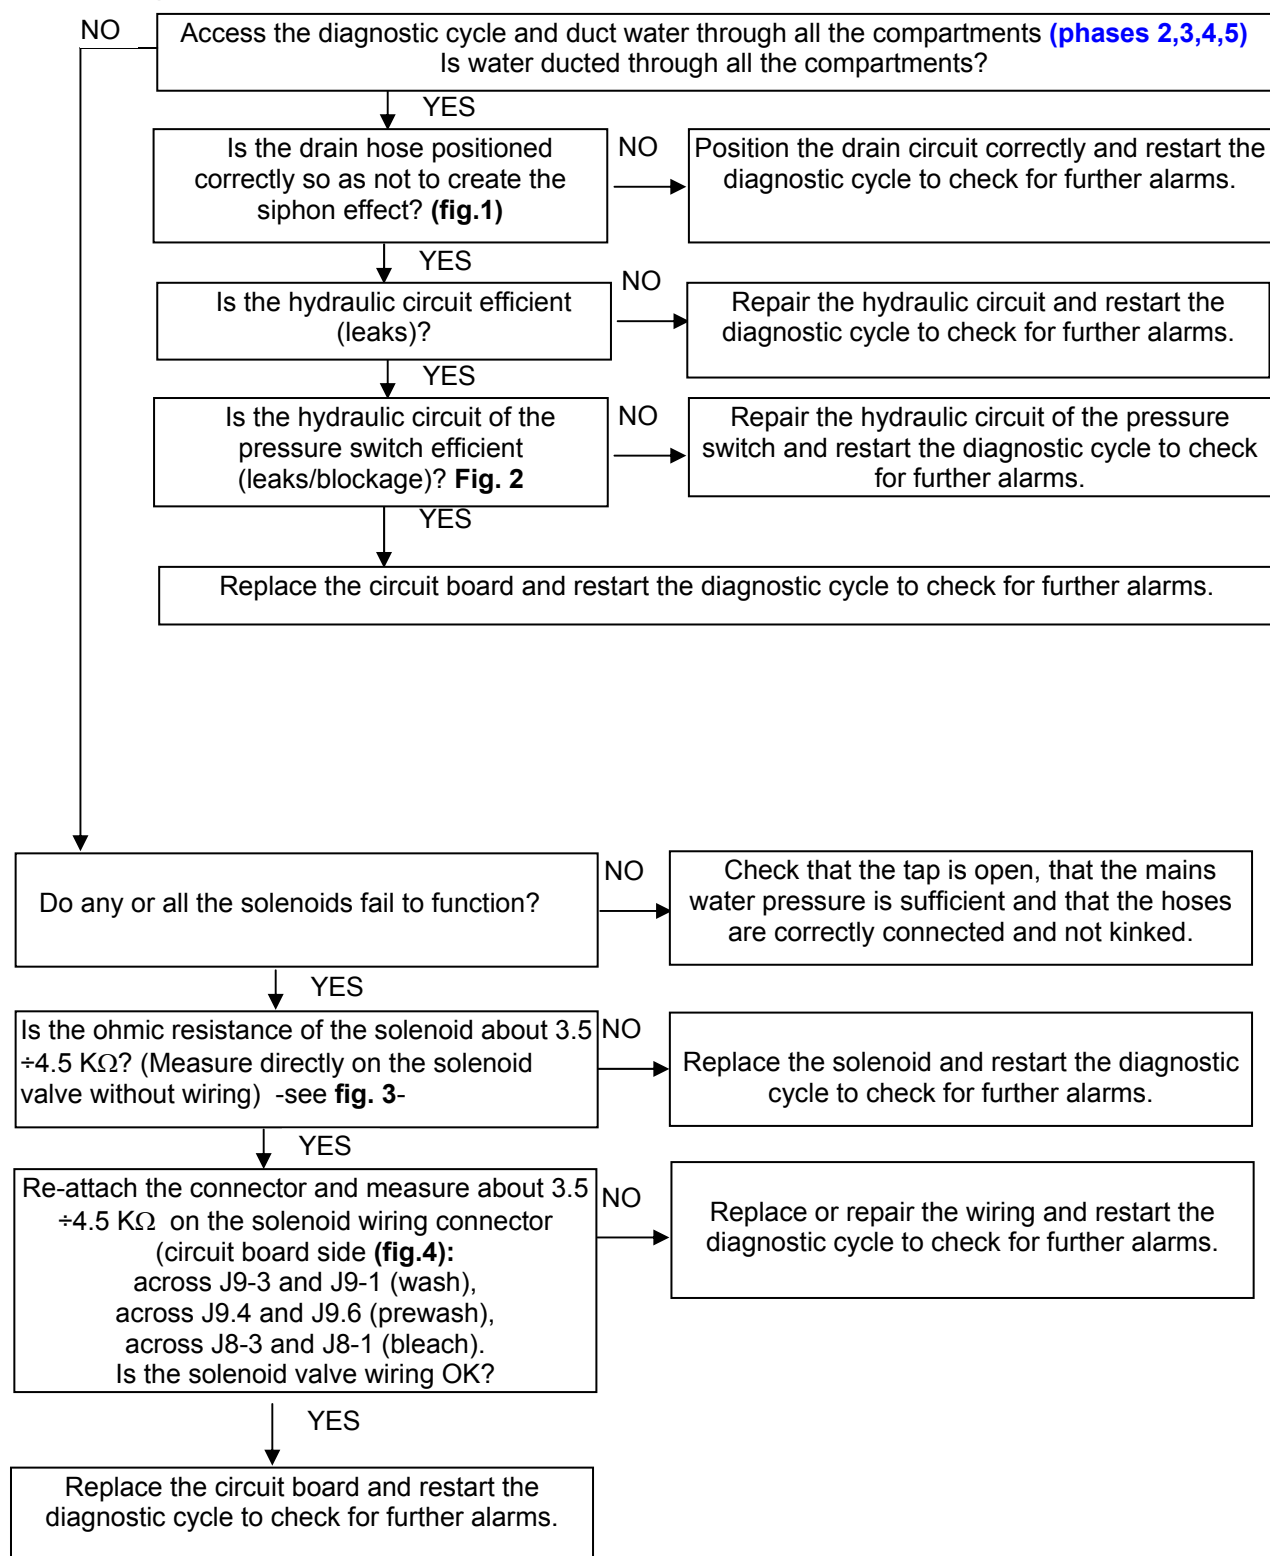


If there are traces of burning on the circuit board, refer to pages 119-120

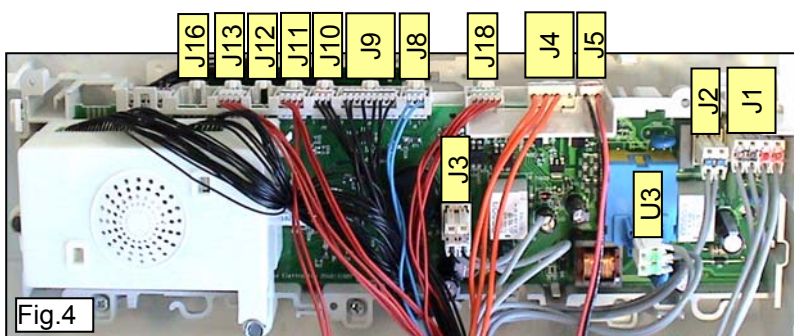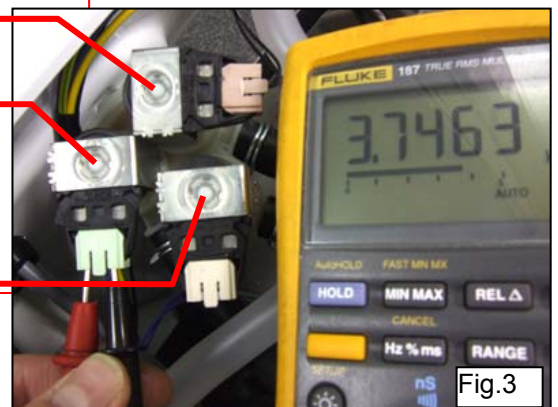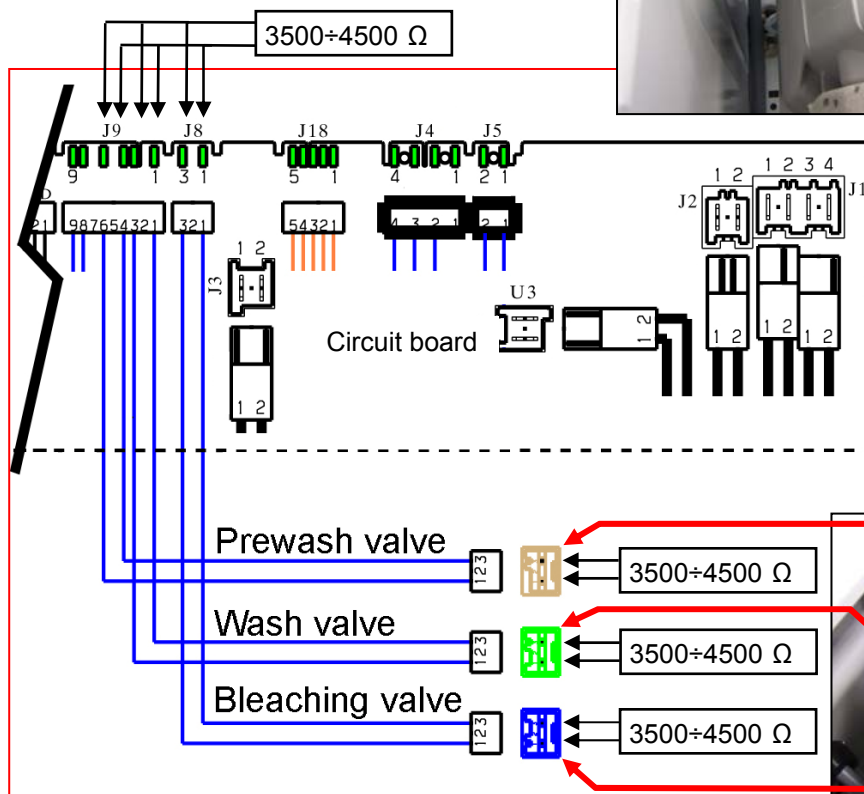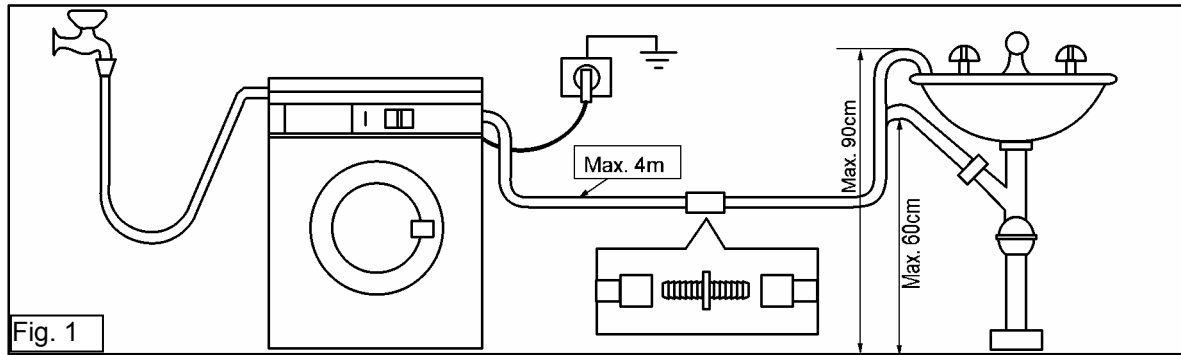

If there are traces of burning on the circuit board, refer to pages 119-120

E12: Difficulty in filling water during drying phase		
E12	To check if the condensation valve is working, machine measures the increasing water level at the beginning of the drying phase. (Alarm appears after 10 min. of filling without reaching the level).	E12

Tests to be performed:

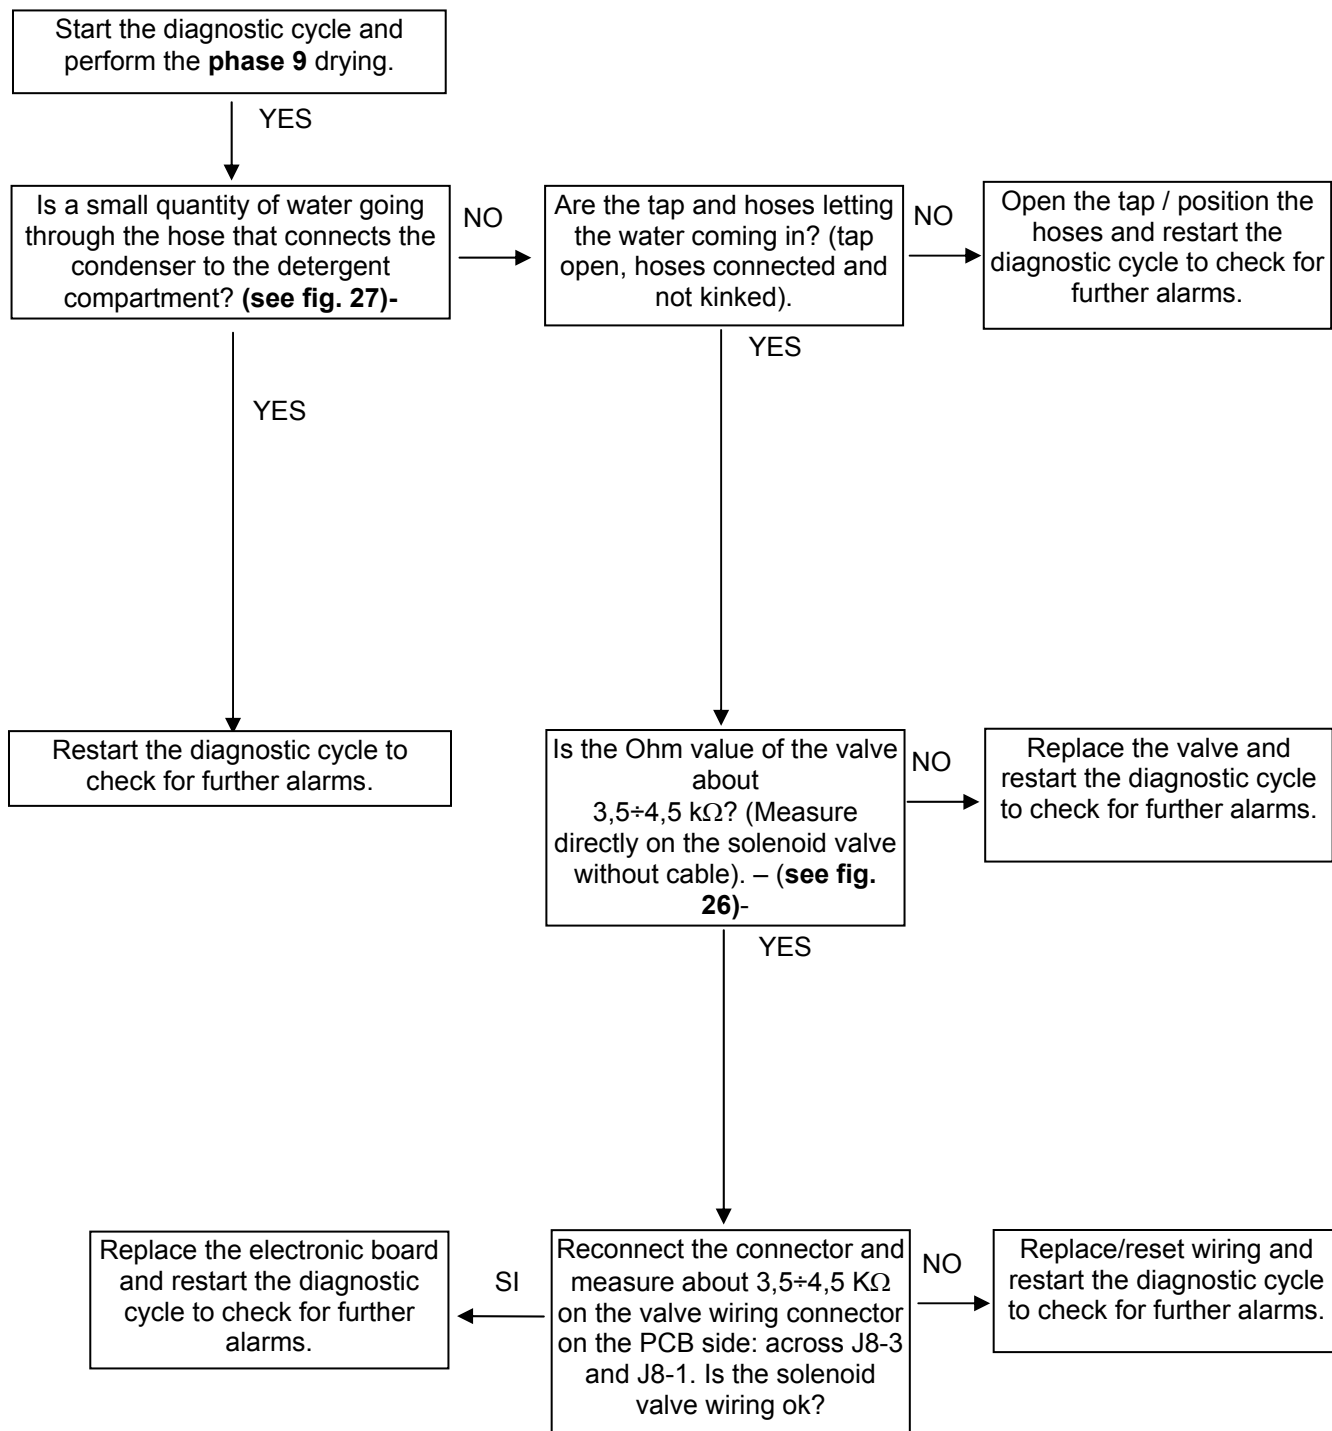

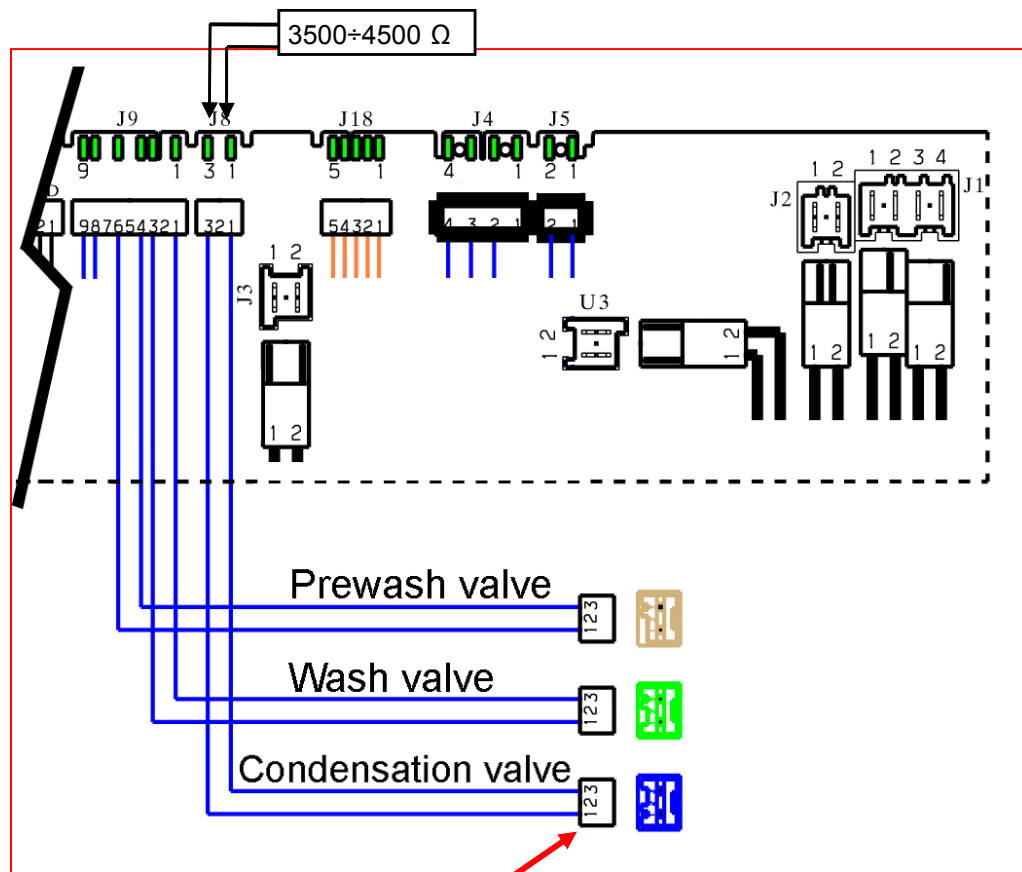


Fig. 26

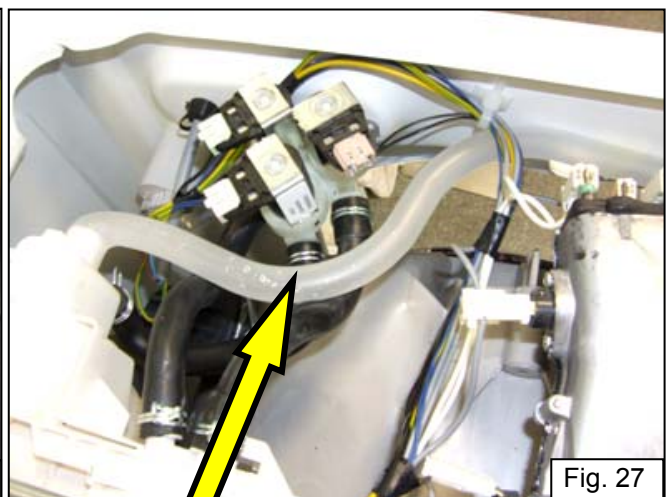



Fig. 27

Little hose which connects the condenser to the detergent





If there are traces of burning on the circuit board, refer to pages 119-120

E13	<p align="center">E13: Water leakage</p> <p>Overall maximum water fill time exceeded (the sum of all the water fills between one drain phase and the next, to avoid exceeding the maximum volume).</p>	E13
------------	---	------------

Tests to be performed:

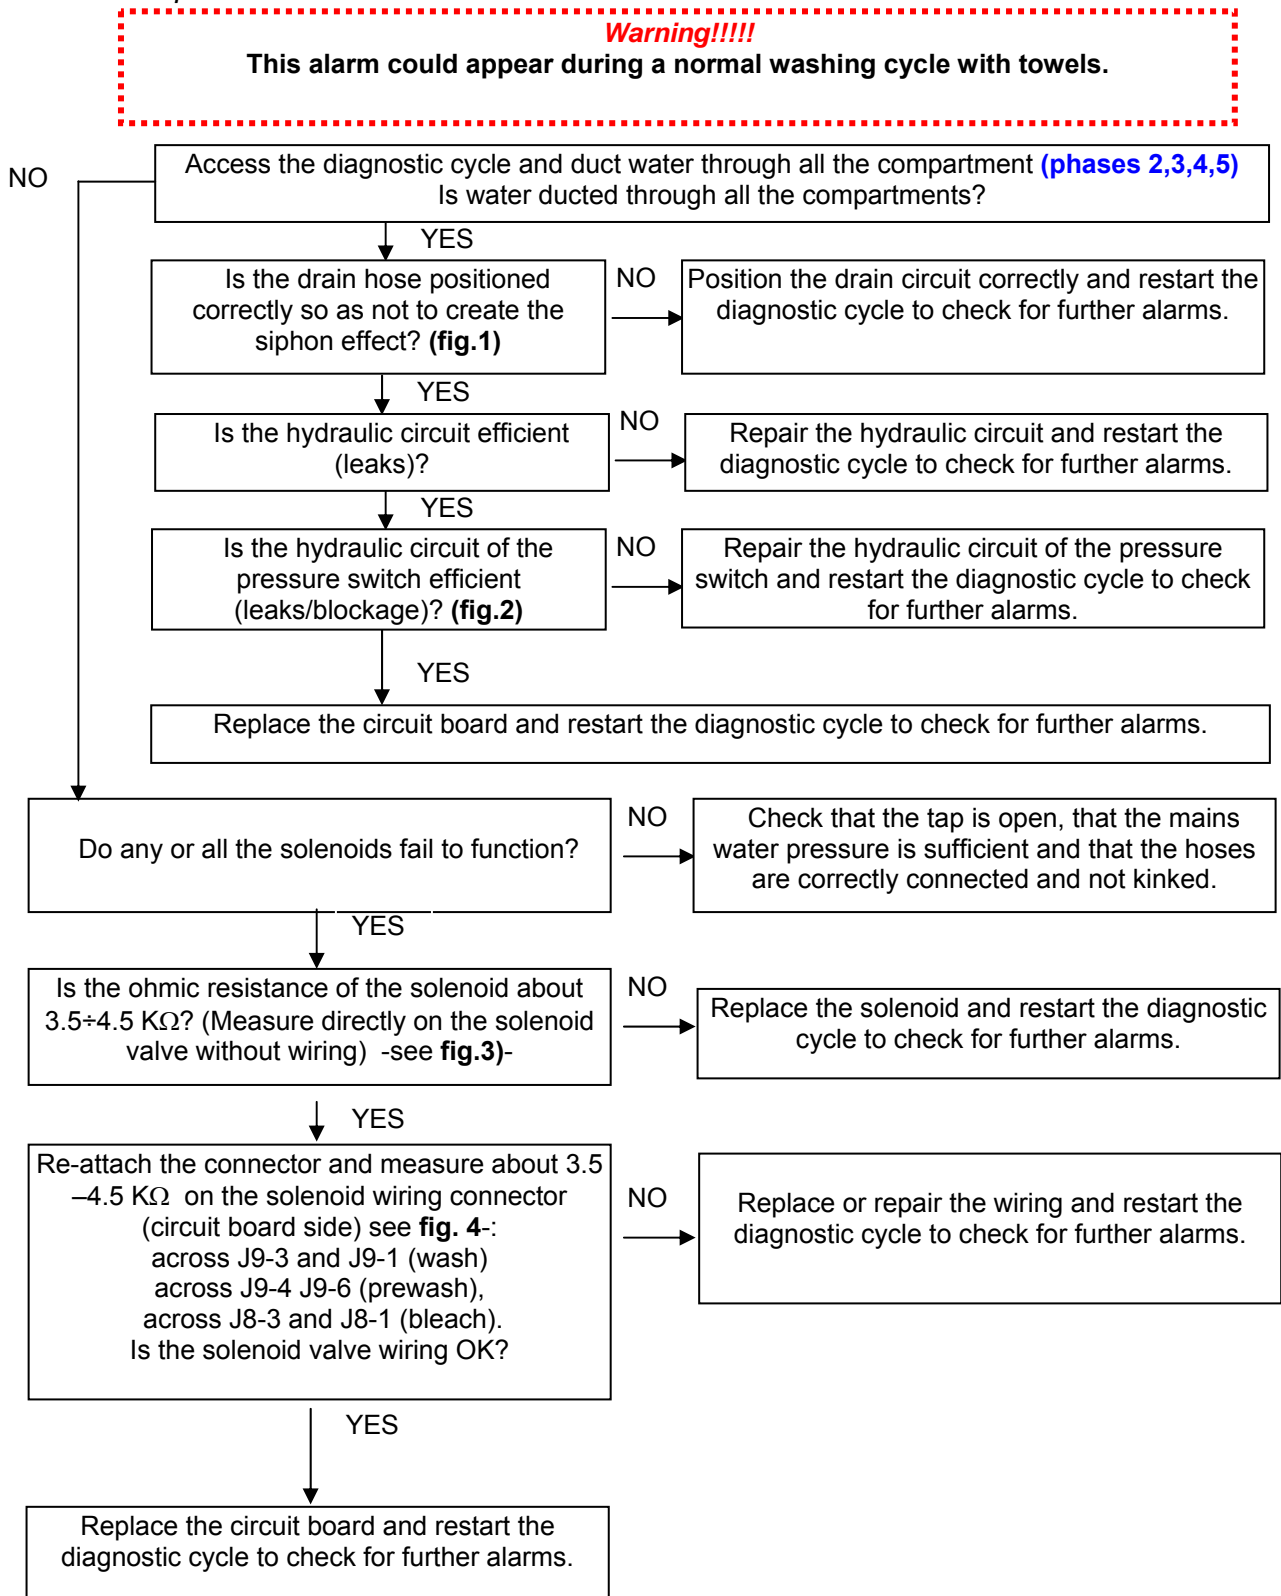


If there are traces of burning on the circuit board, refer to pages 119-120

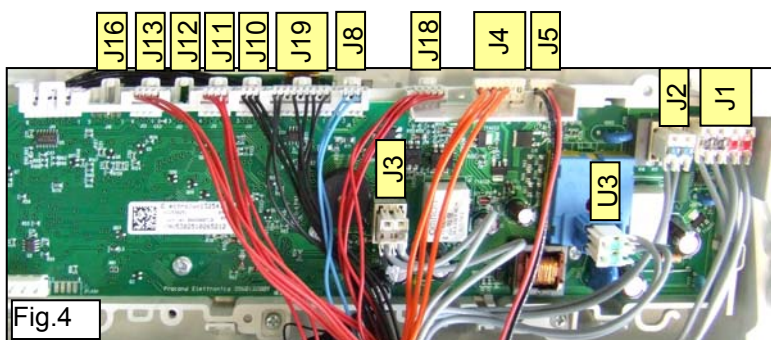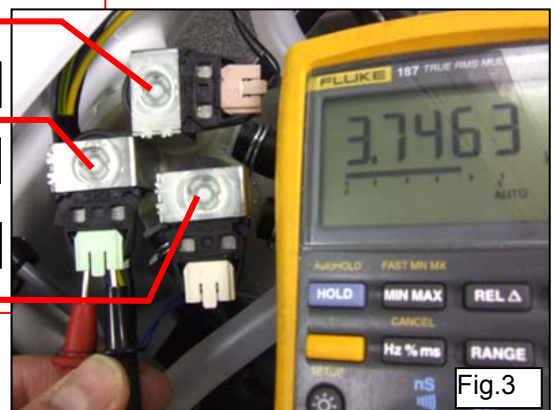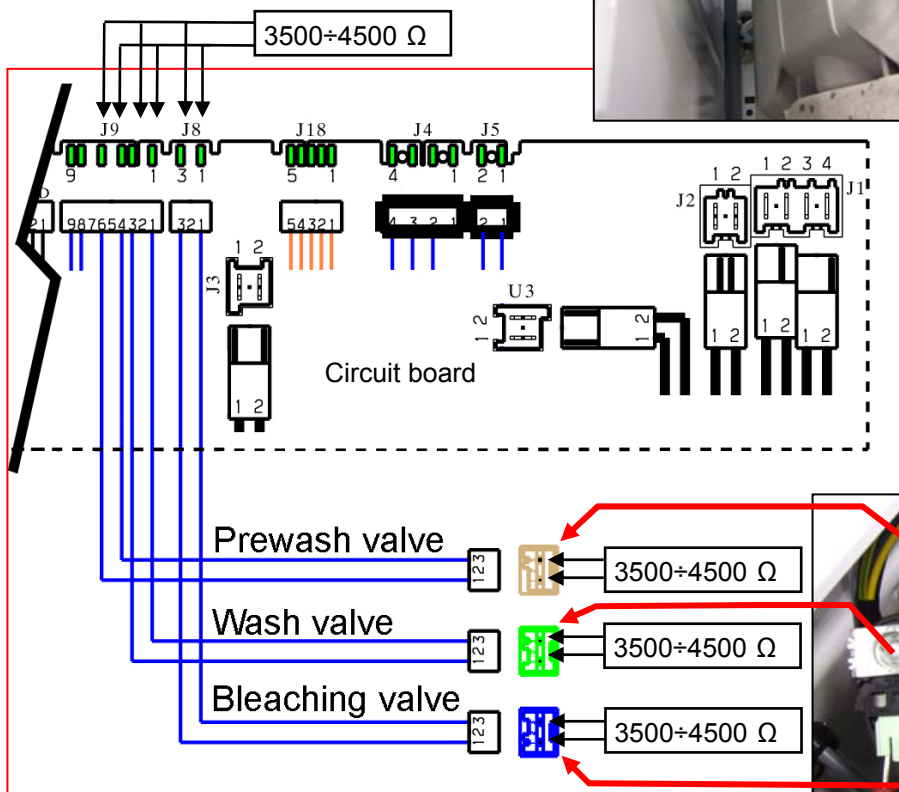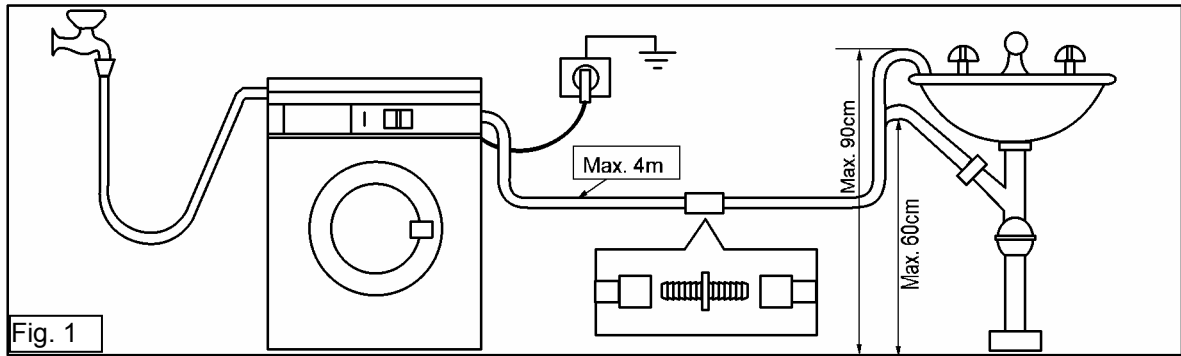




If there are traces of burning on the circuit board, refer to page 119-120

E21	E21: Difficulty in draining	E21
	Maximum drain time exceeded (measured for each phase of the cycle)	

Tests to be performed:

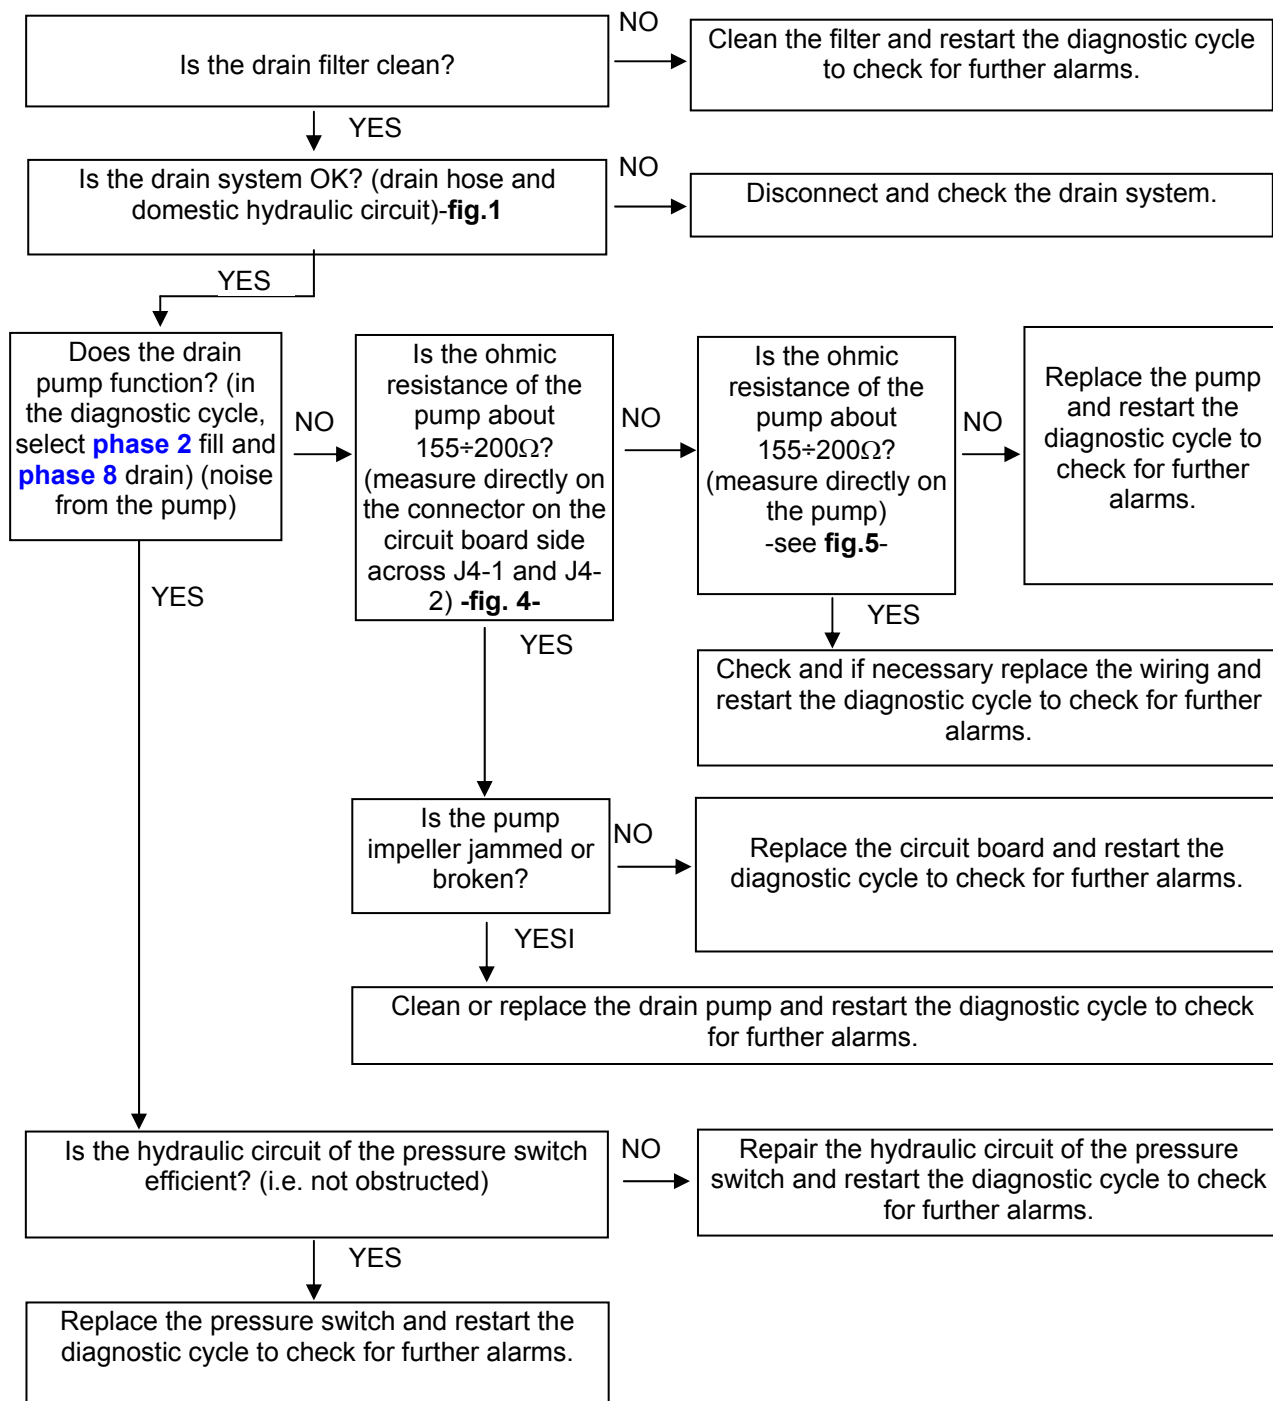


If there are traces of burning on the circuit board, refer to page 119-120

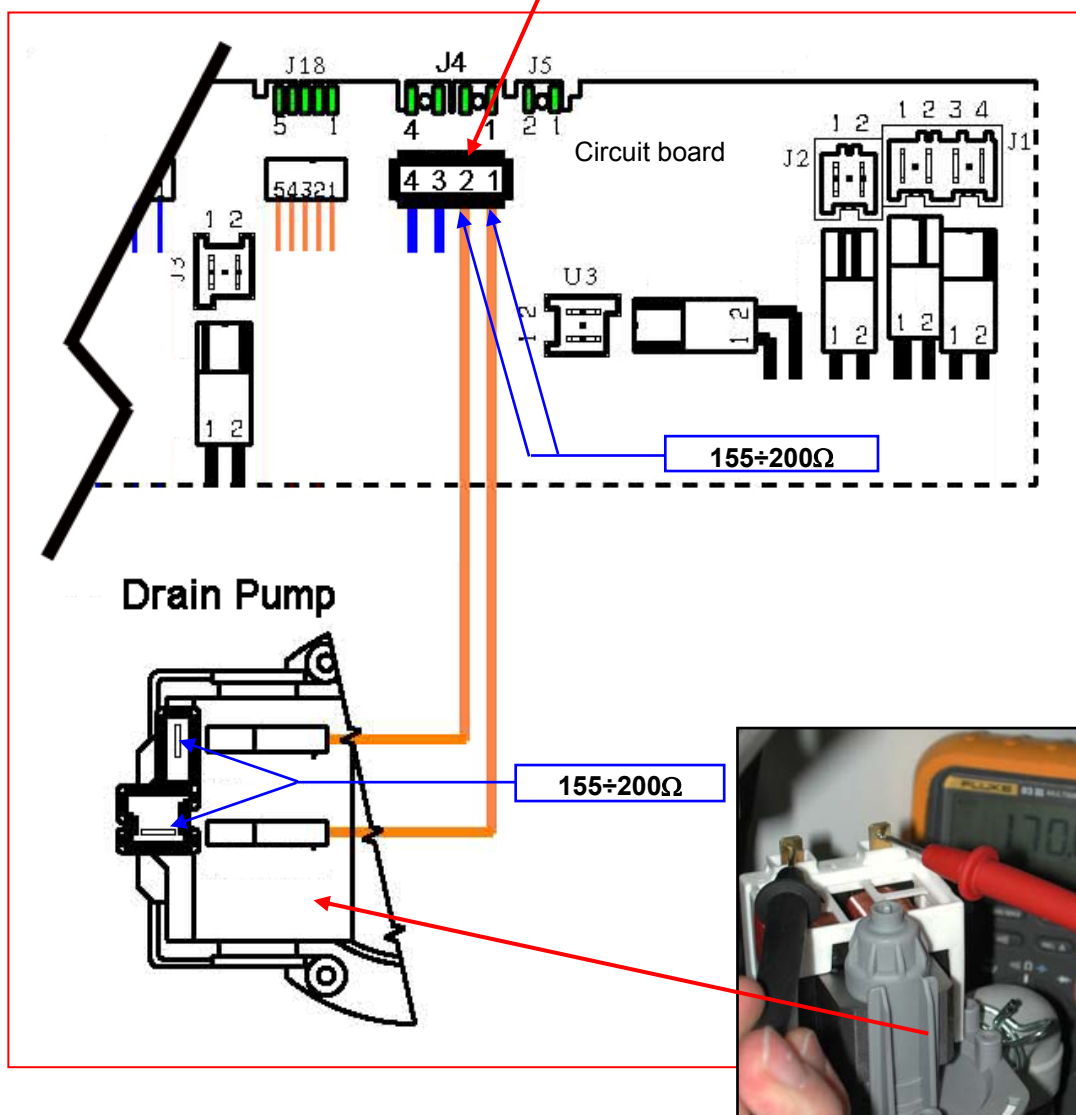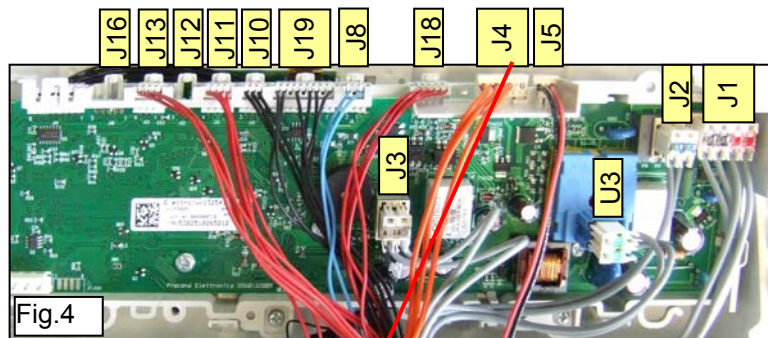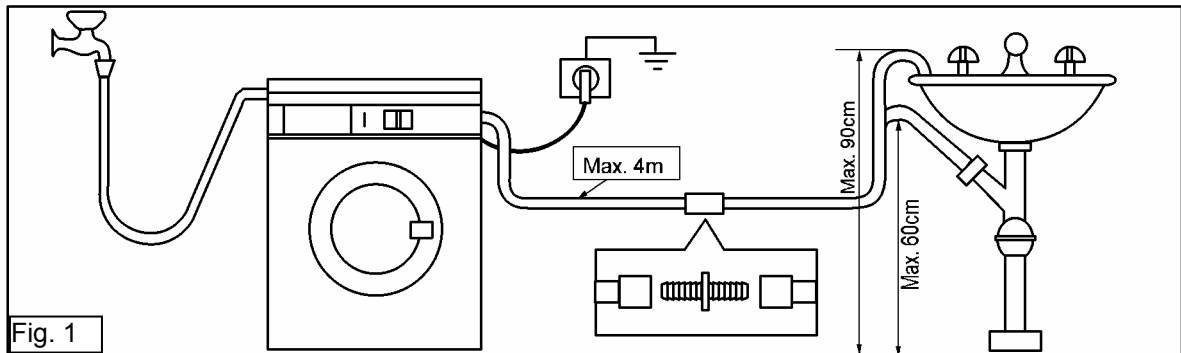





E21	E21: Difficulty in draining (with Aqua Control device) Maximum drain time exceeded (measured for each phase of the cycle)	E21
------------	---	------------

Tests to be performed:

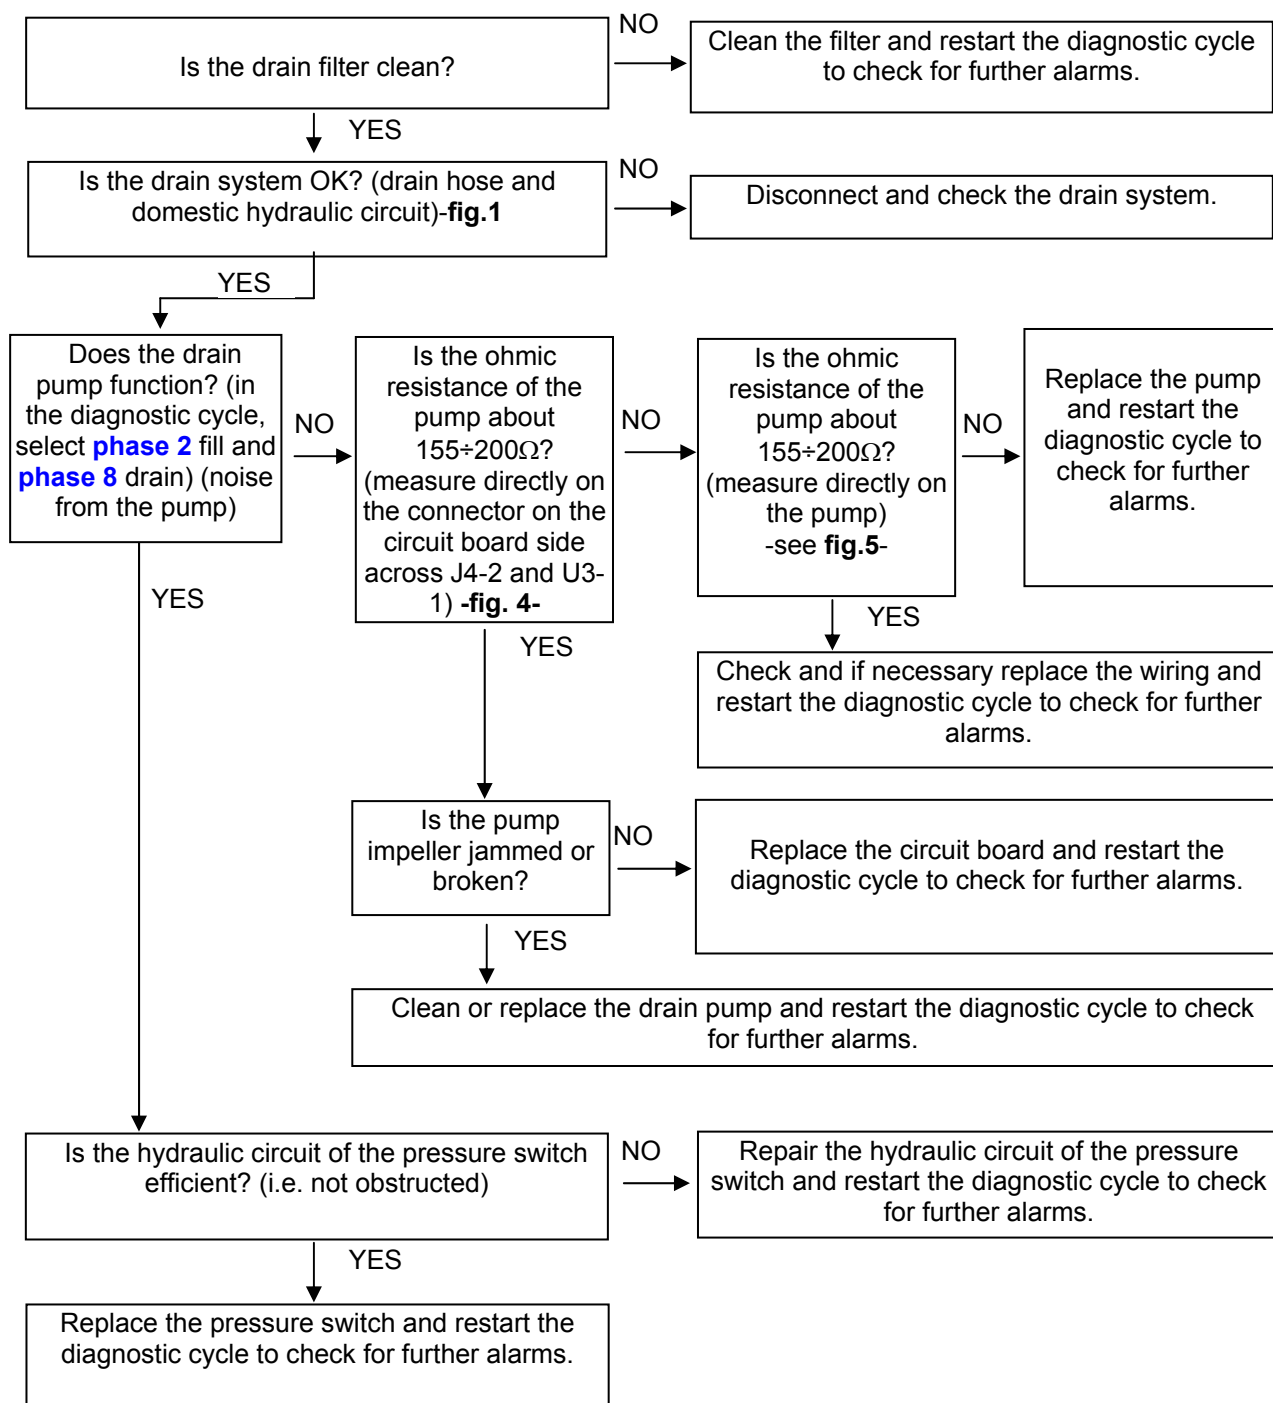


If there are traces of burning on the circuit board, refer to page 119-120






E21 (with Aqua Control device)

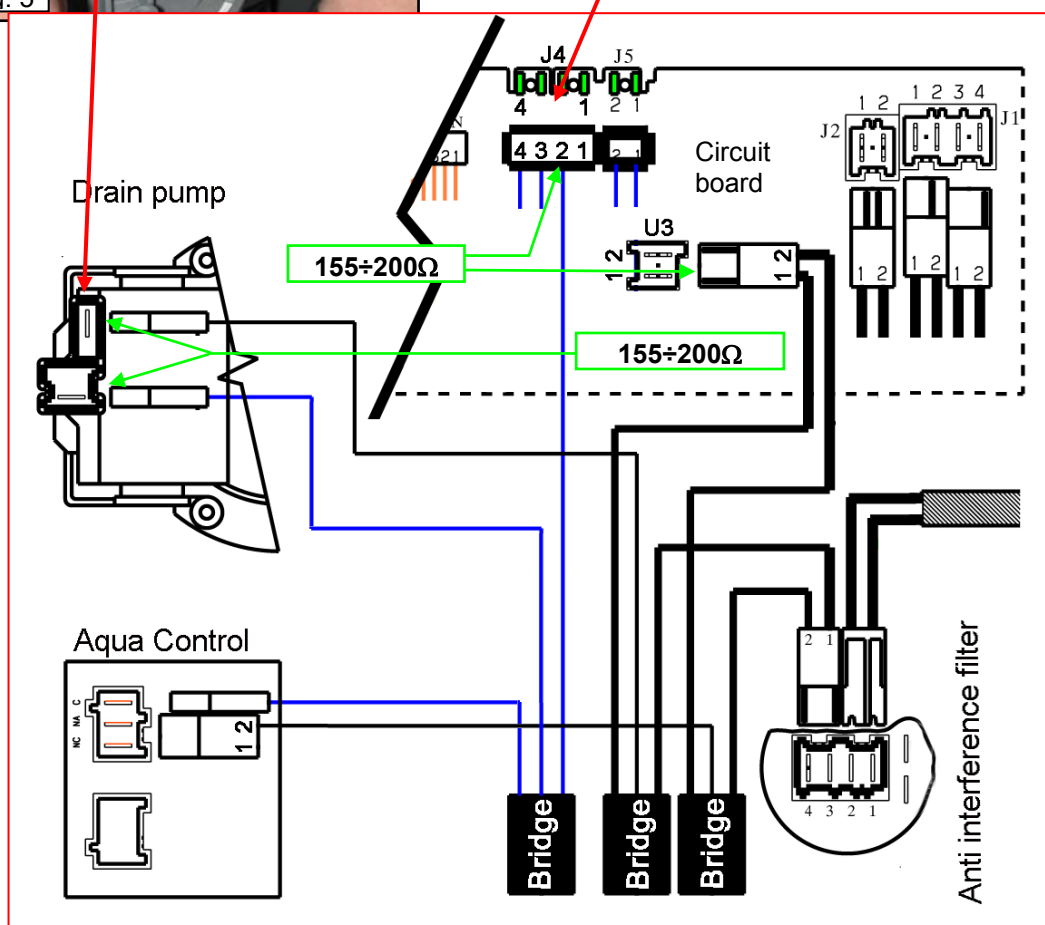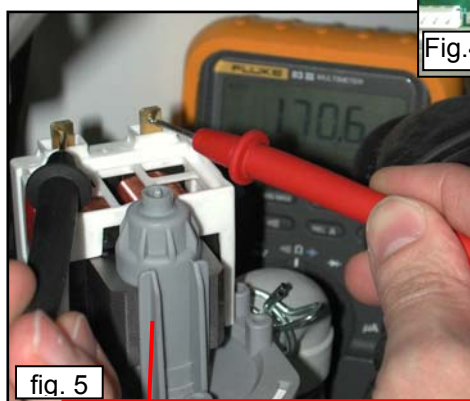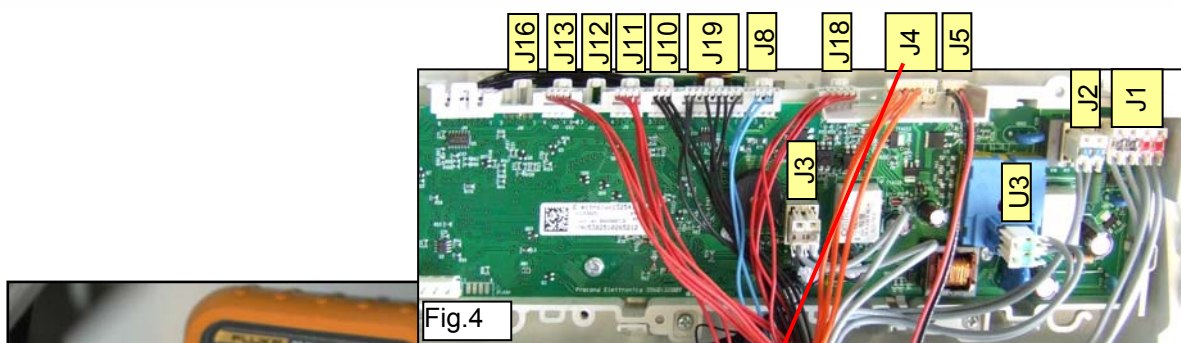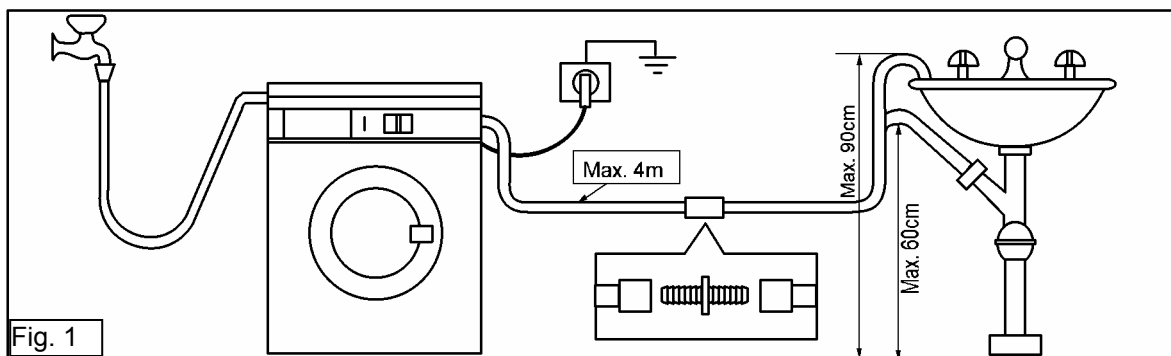


Tests to be performed:

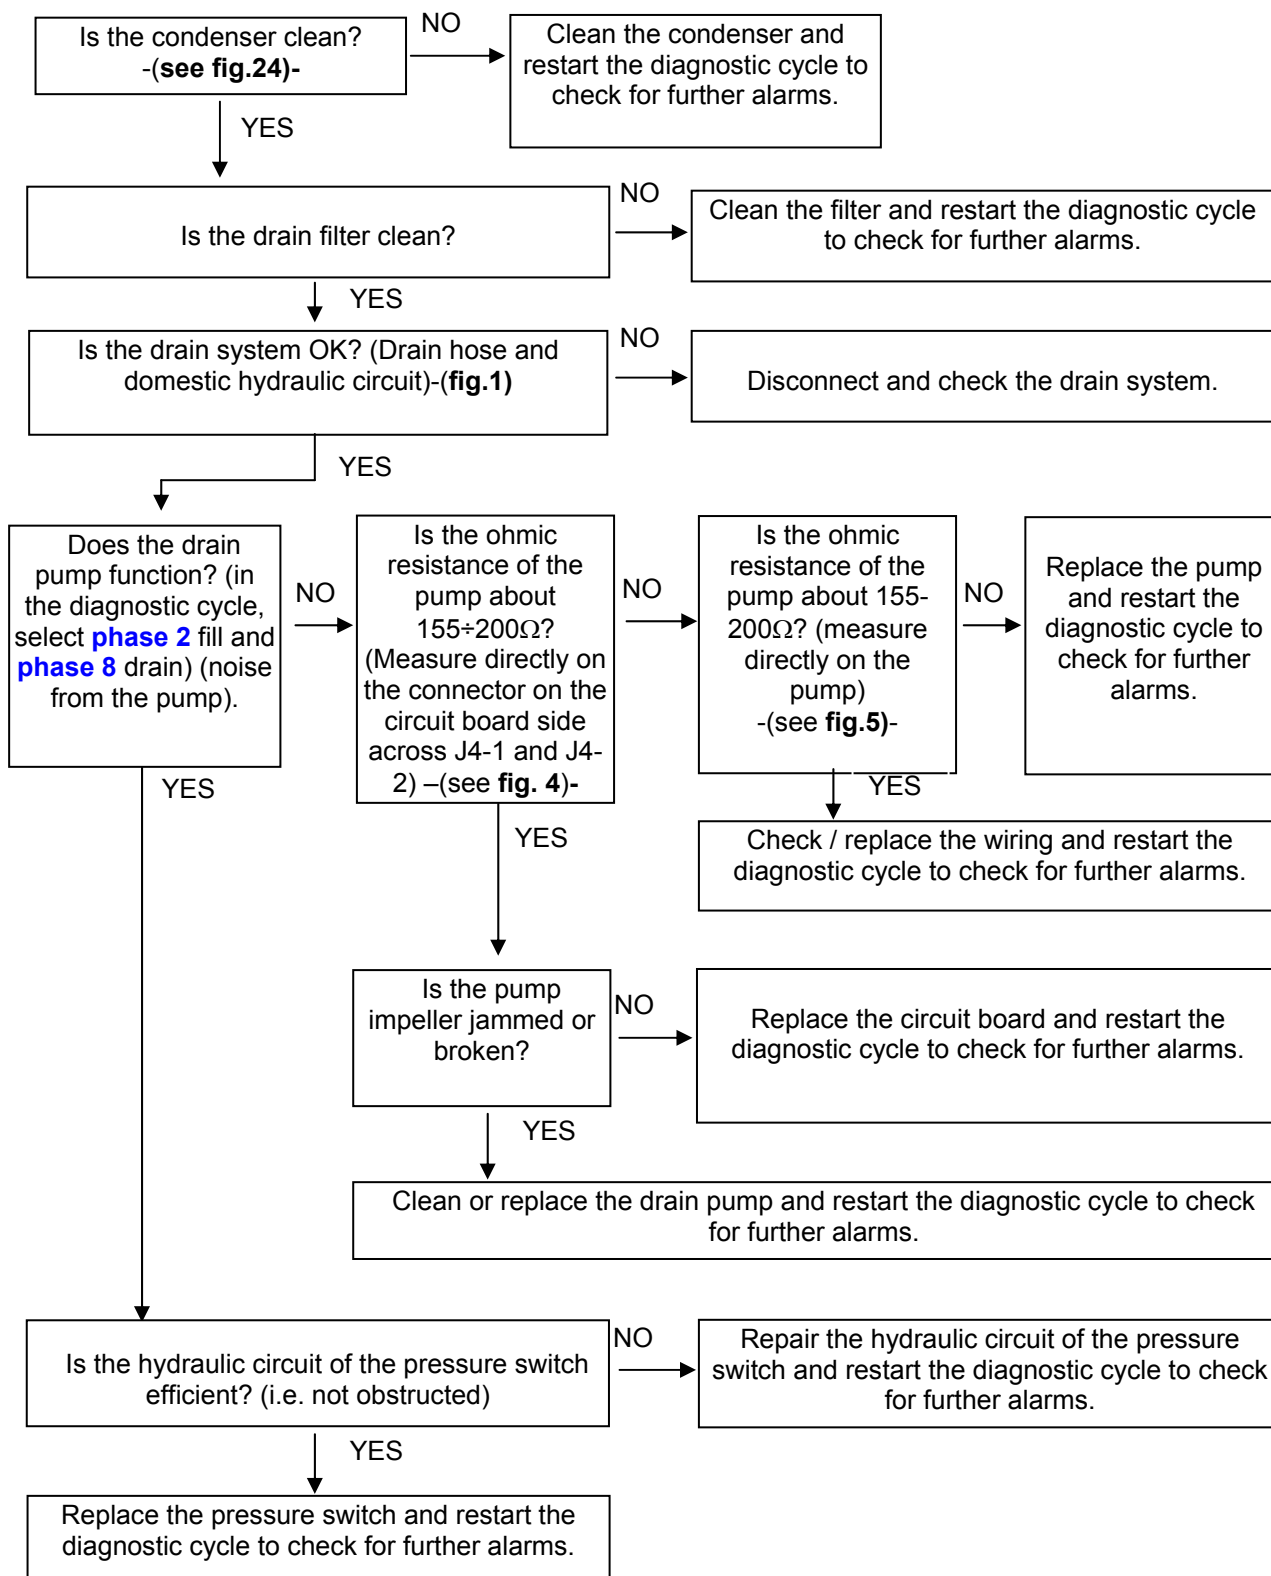

If there are traces of burning on the circuit board, refer to page 119-120

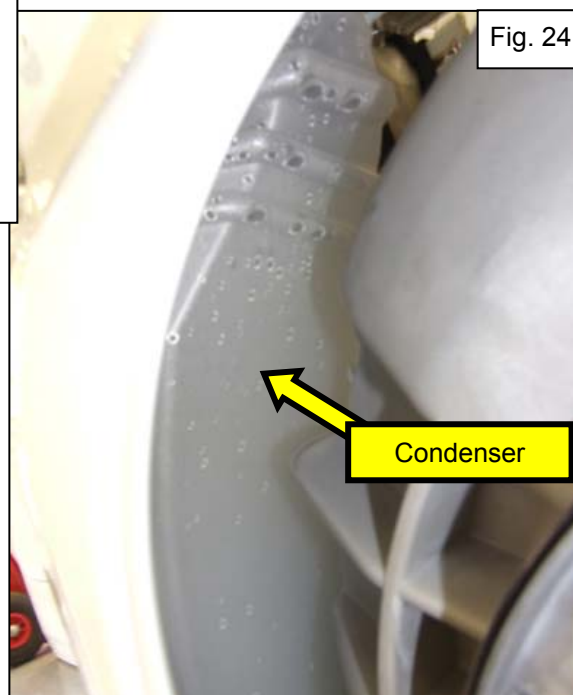
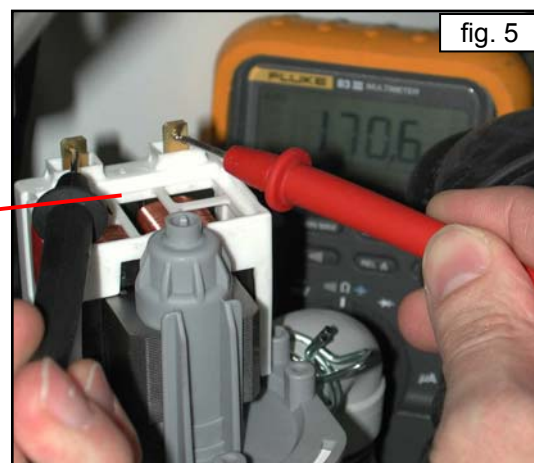
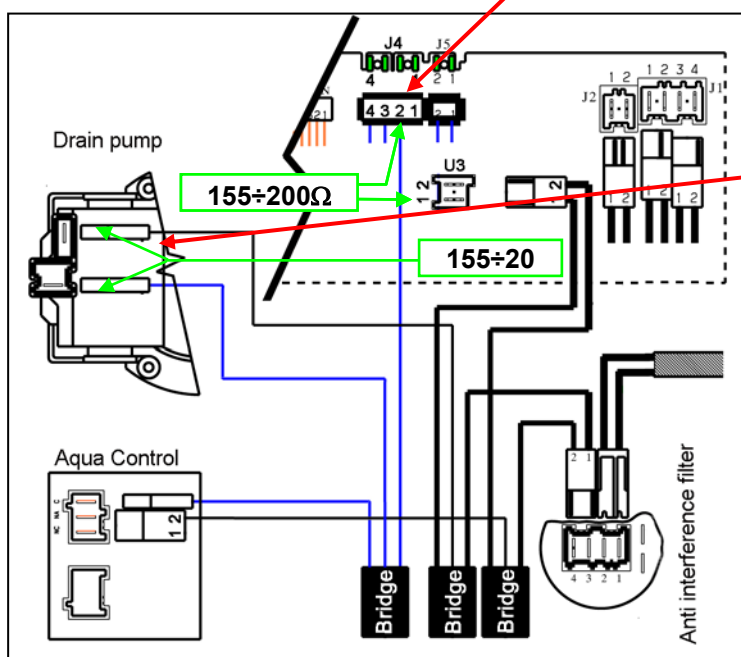
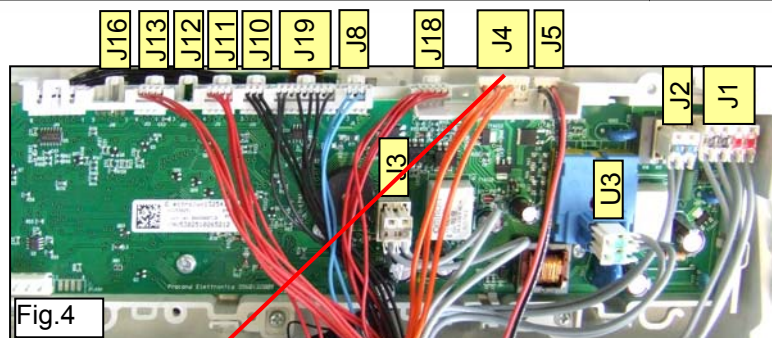
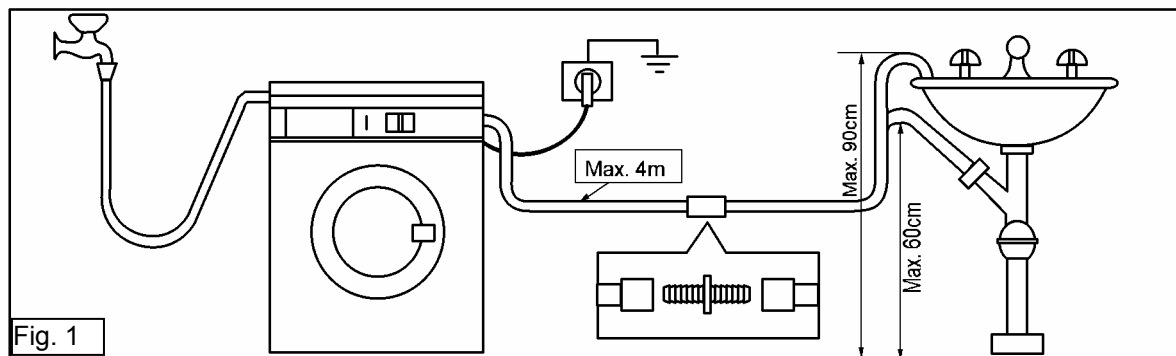


Tests to be performed:


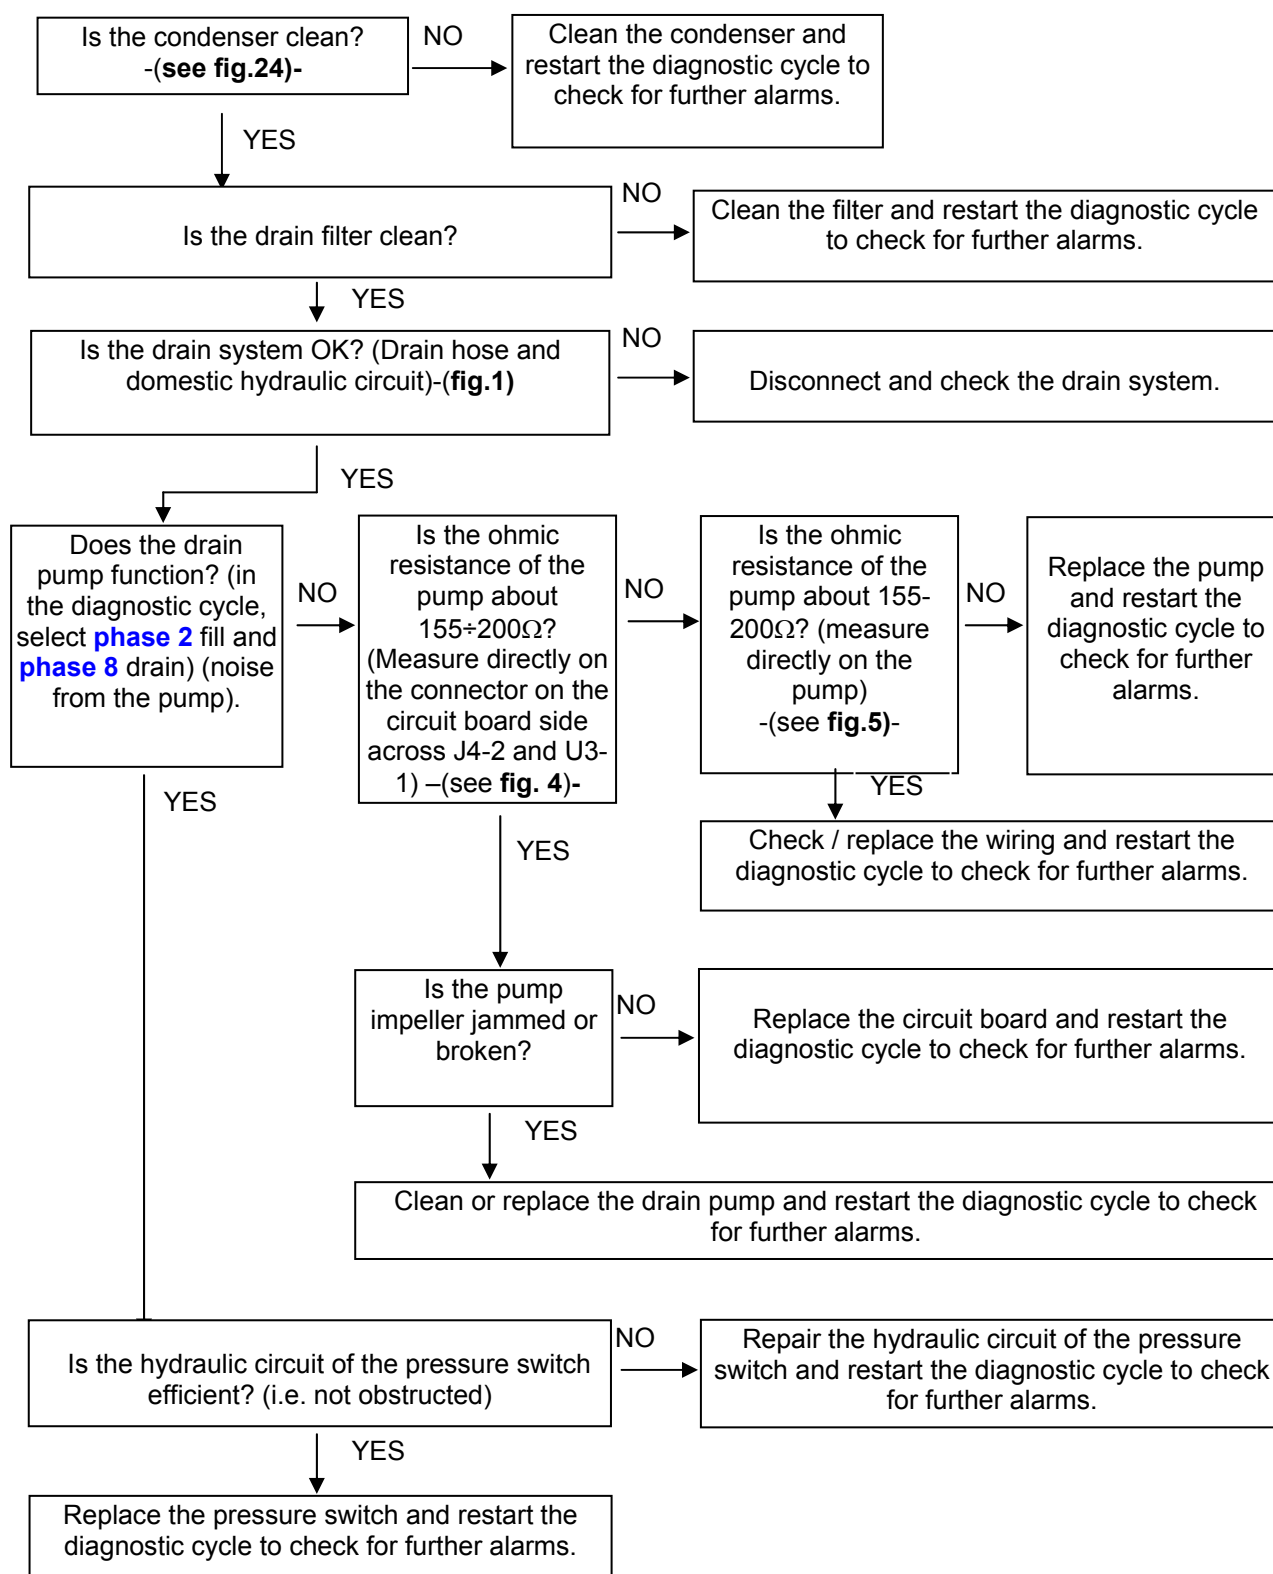


If there are traces of burning on the circuit board, refer to page 119-120

E22 (with Aqua Control device)

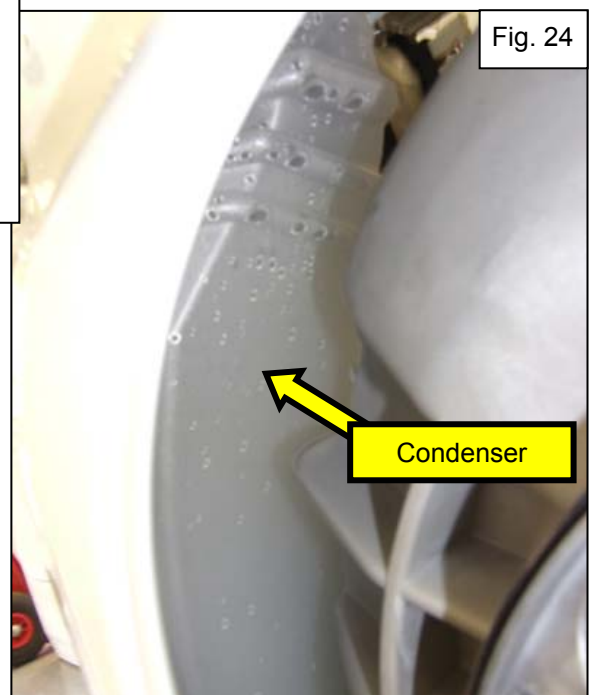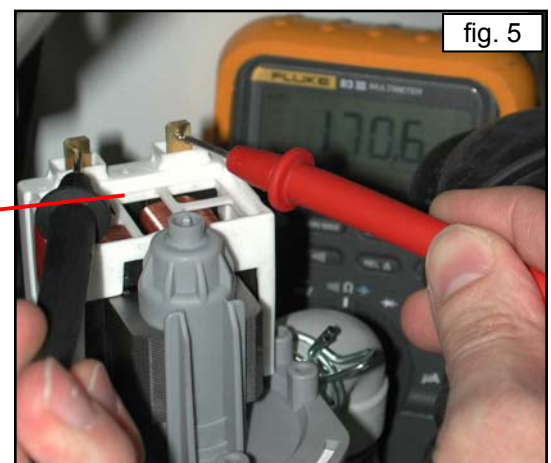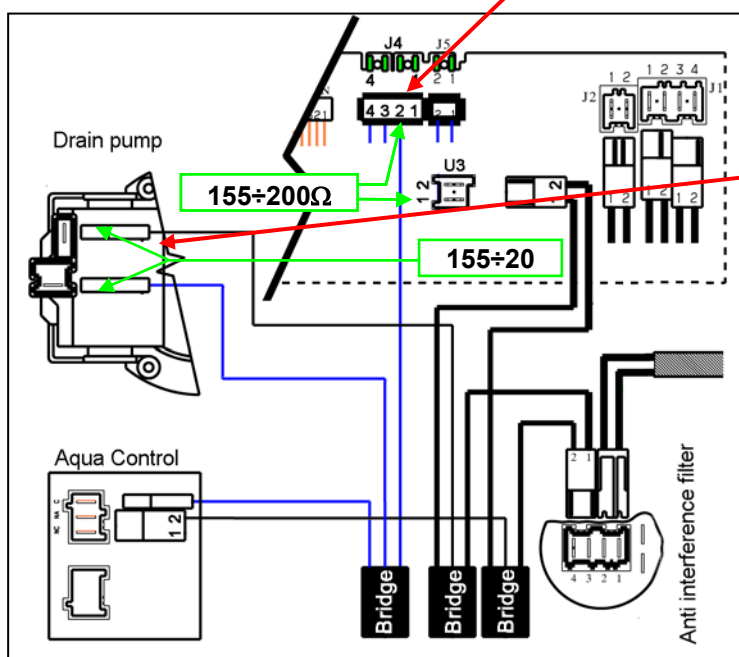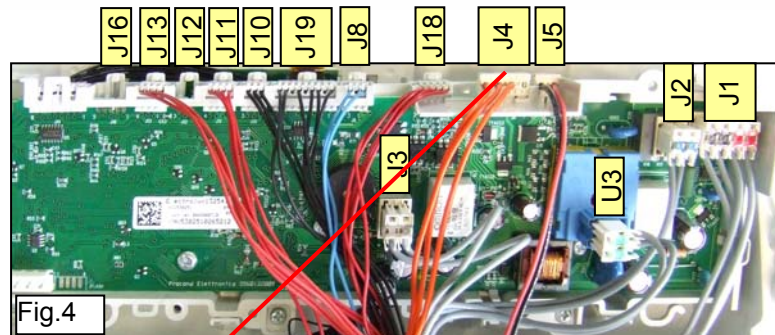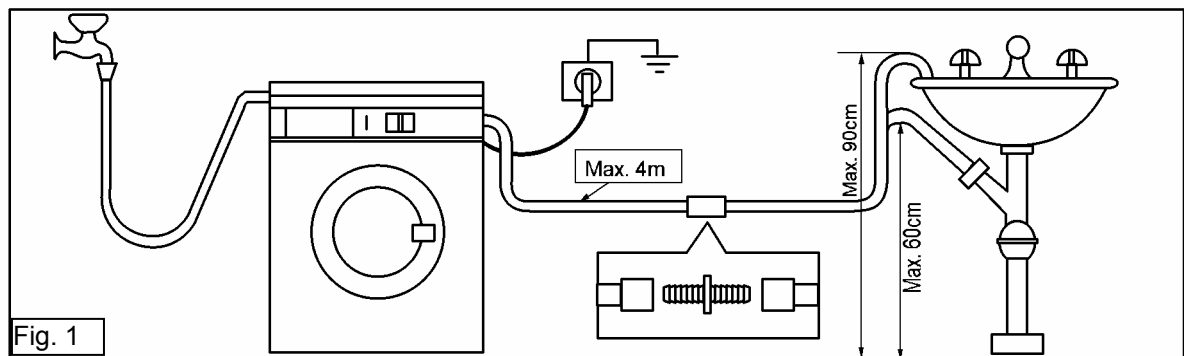

Tests to be performed:

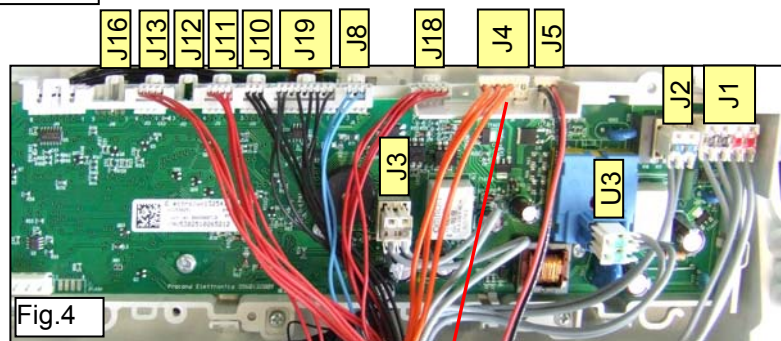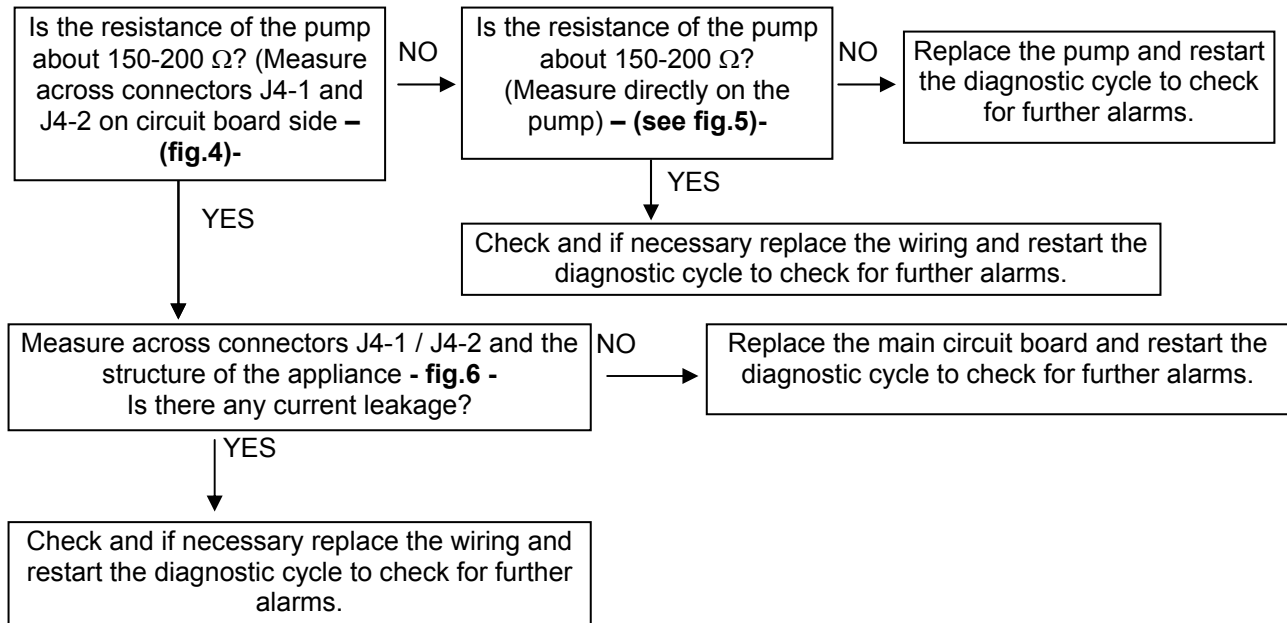

If there are traces of burning on the circuit board, refer to pages 119-120



fig. 6


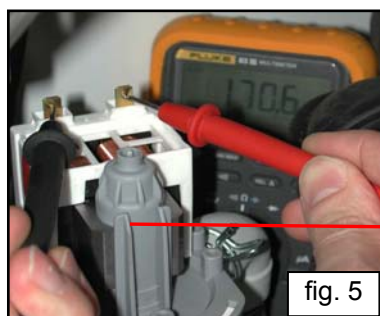


fig. 5

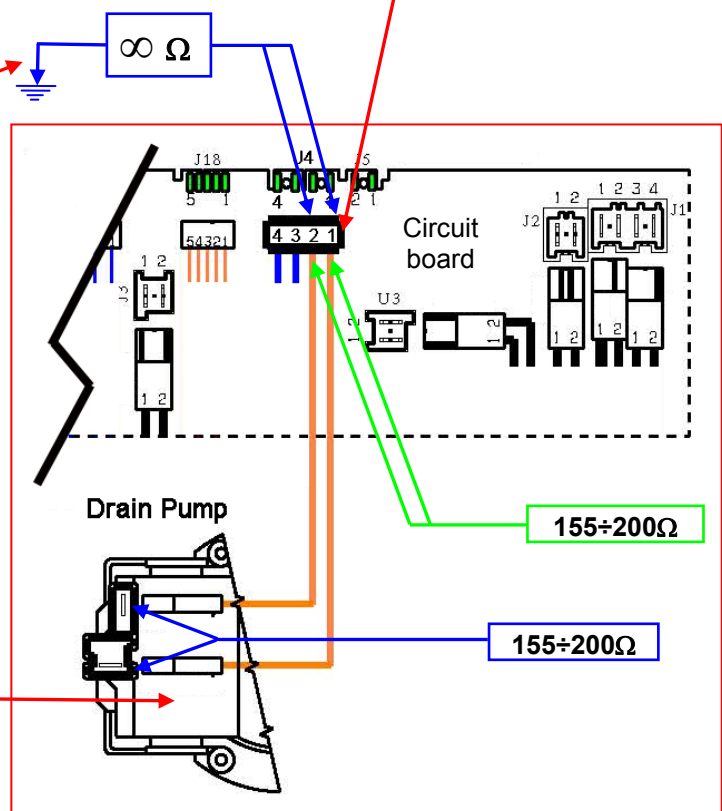

E23

E23: Malfunction of the component (triac) that controls the drain pump (with Aqua Control device)

E23

Tests to be performed:

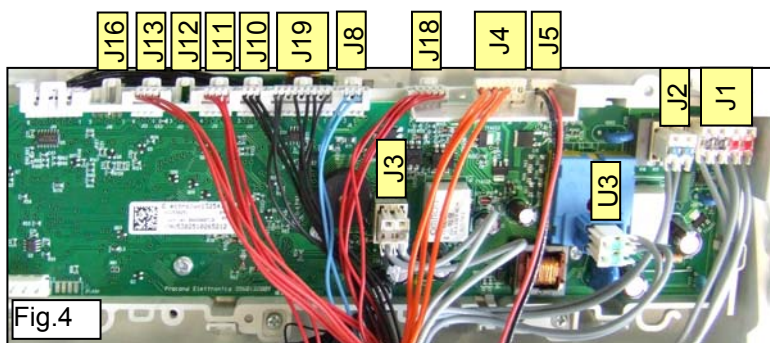
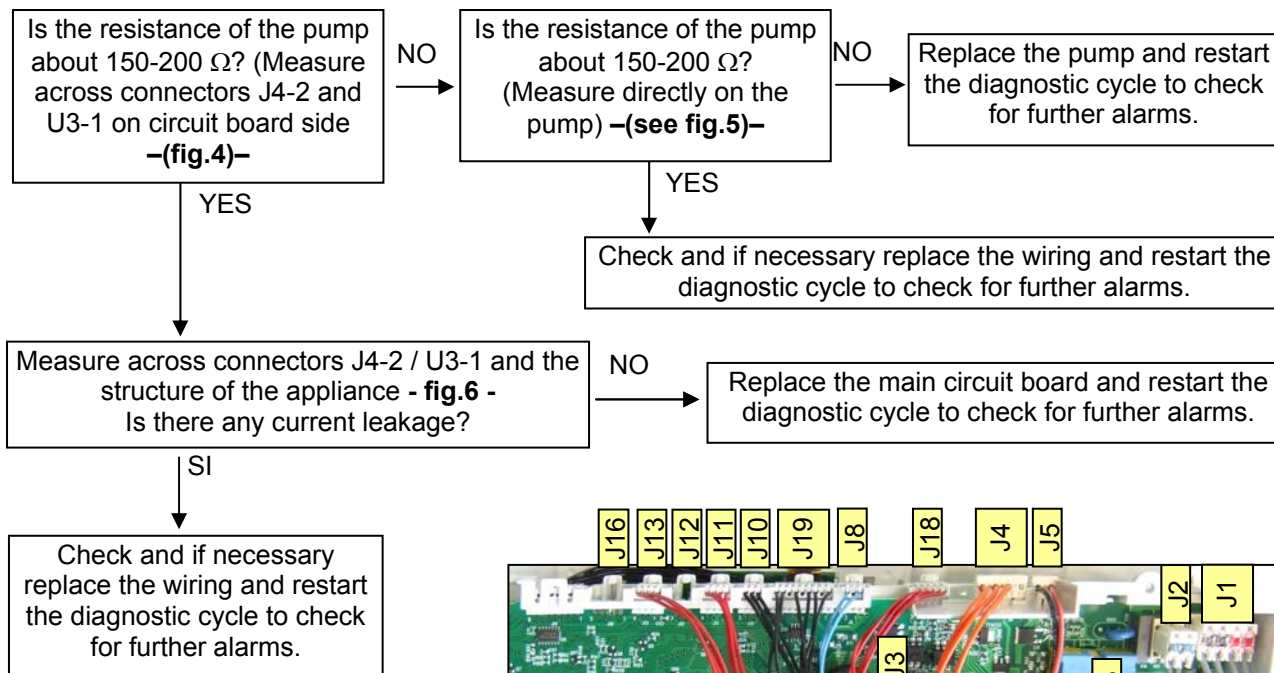


Fig.4

If there are traces of burning on the circuit board, refer to pages 119-120

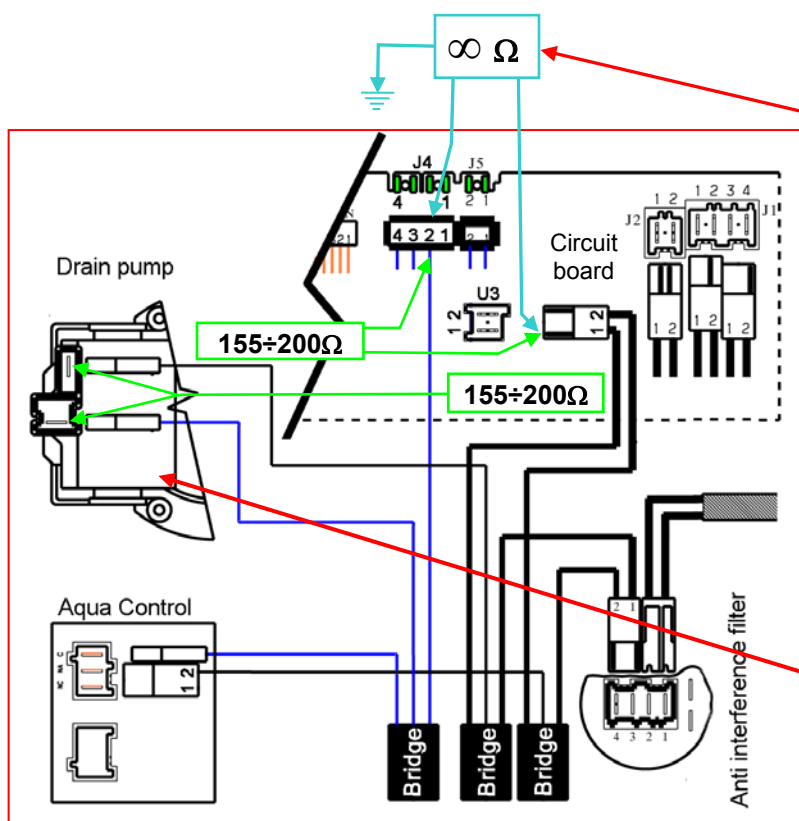


fig. 6

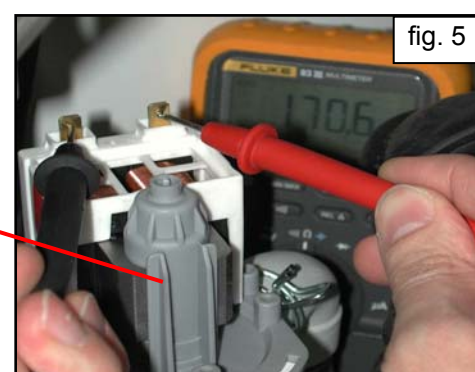


fig. 5




E24	E24: «Sensing» circuit of the component (triac) that controls the drain pump faulty	E24
------------	--	------------

Replace the circuit board and restart the diagnostic cycle to check for further alarms.

If there are traces of burning on the circuit board, refer to pages 119-120

E31	E31: The analogic pressure switch is giving to the main board a signal outside the range	E31
------------	---	------------


Tests to be performed:

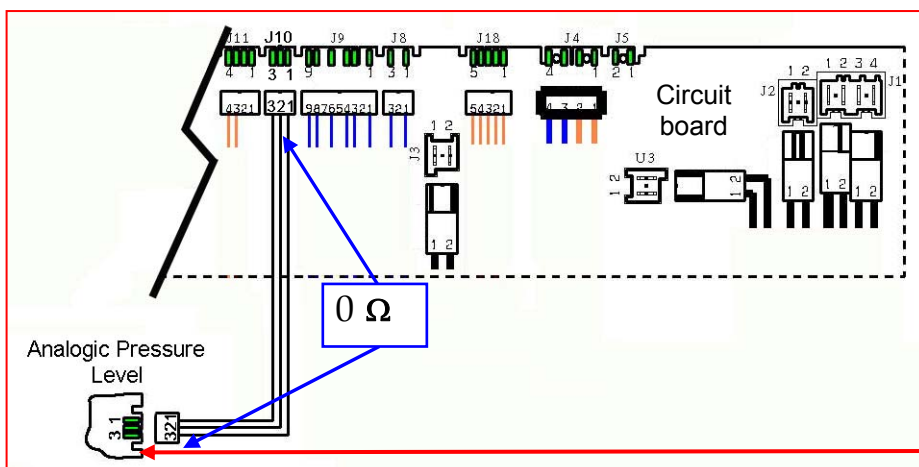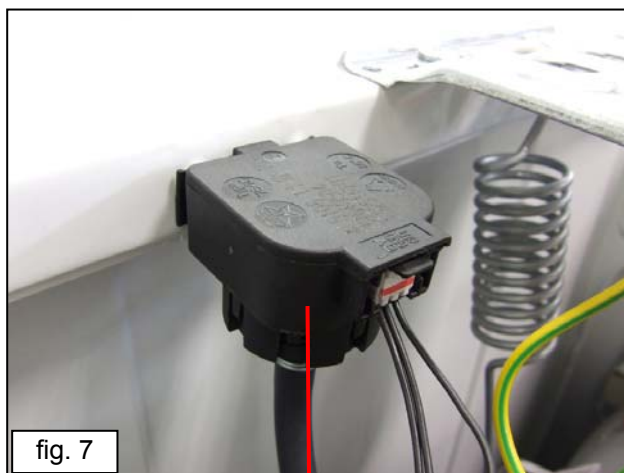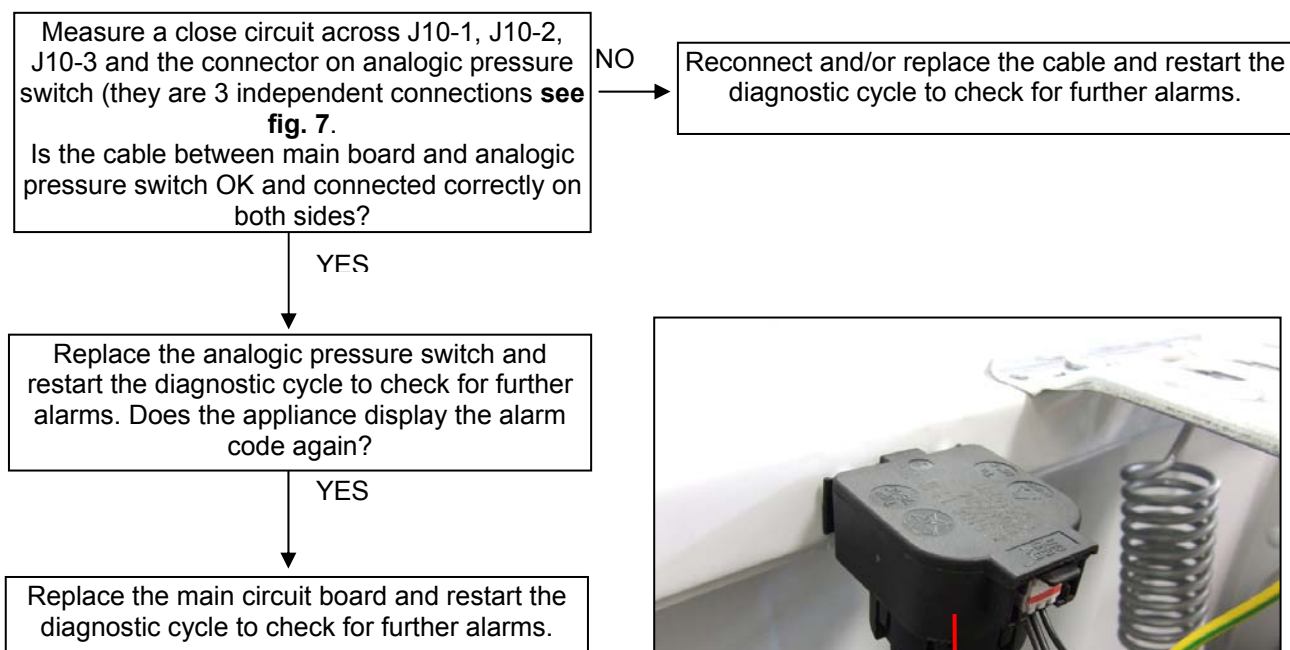


If there are burn marks on electronic board, see pages 119-120

E32	E32: The analogic pressure switch is giving an error during the calibration phase (At the beginning of each cycle the appliance drain to empty the tub and create a 0 level to verify the calibration of the analogic pressure switch)	E32
------------	--	------------

Tests to be performed:

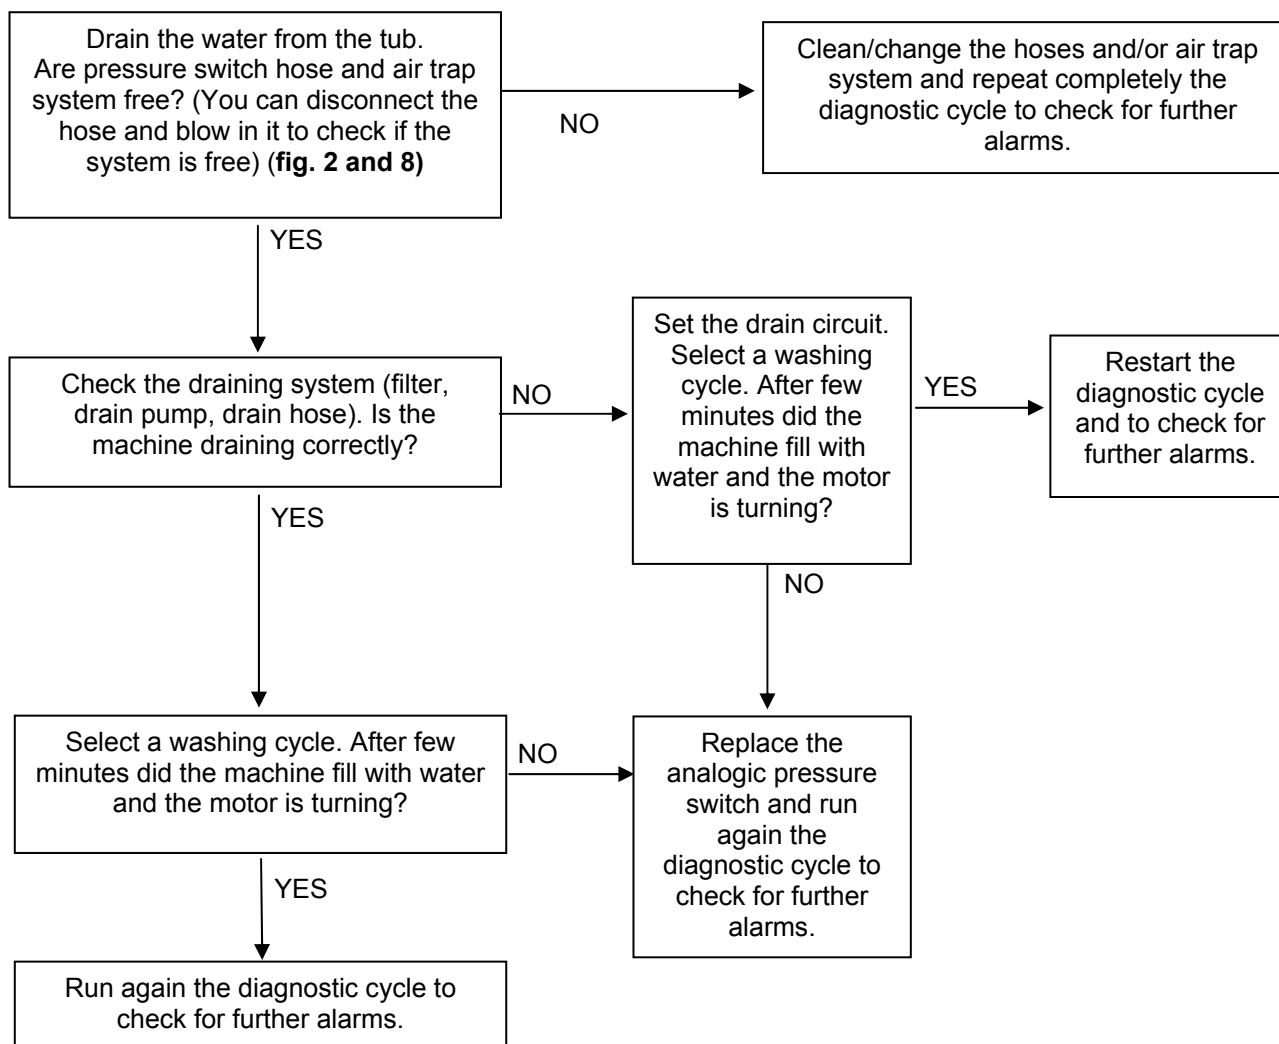


If there are traces of burning on the circuit board, refer to pages 119-120

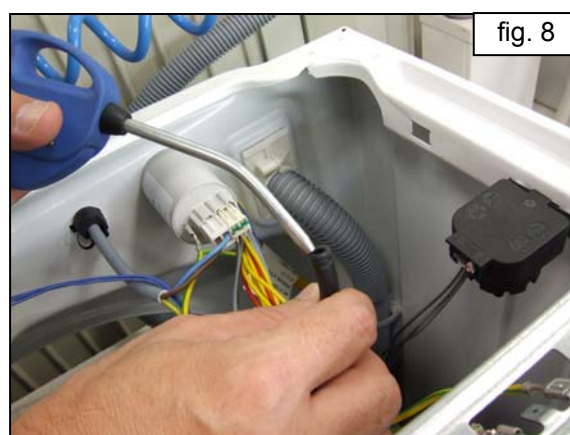


E35	E35: Water level too high	E35
	The electronic board measures a water level from analogic pressure switch higher then 300 mm for more then 15 seconds.	

Tests to be performed:

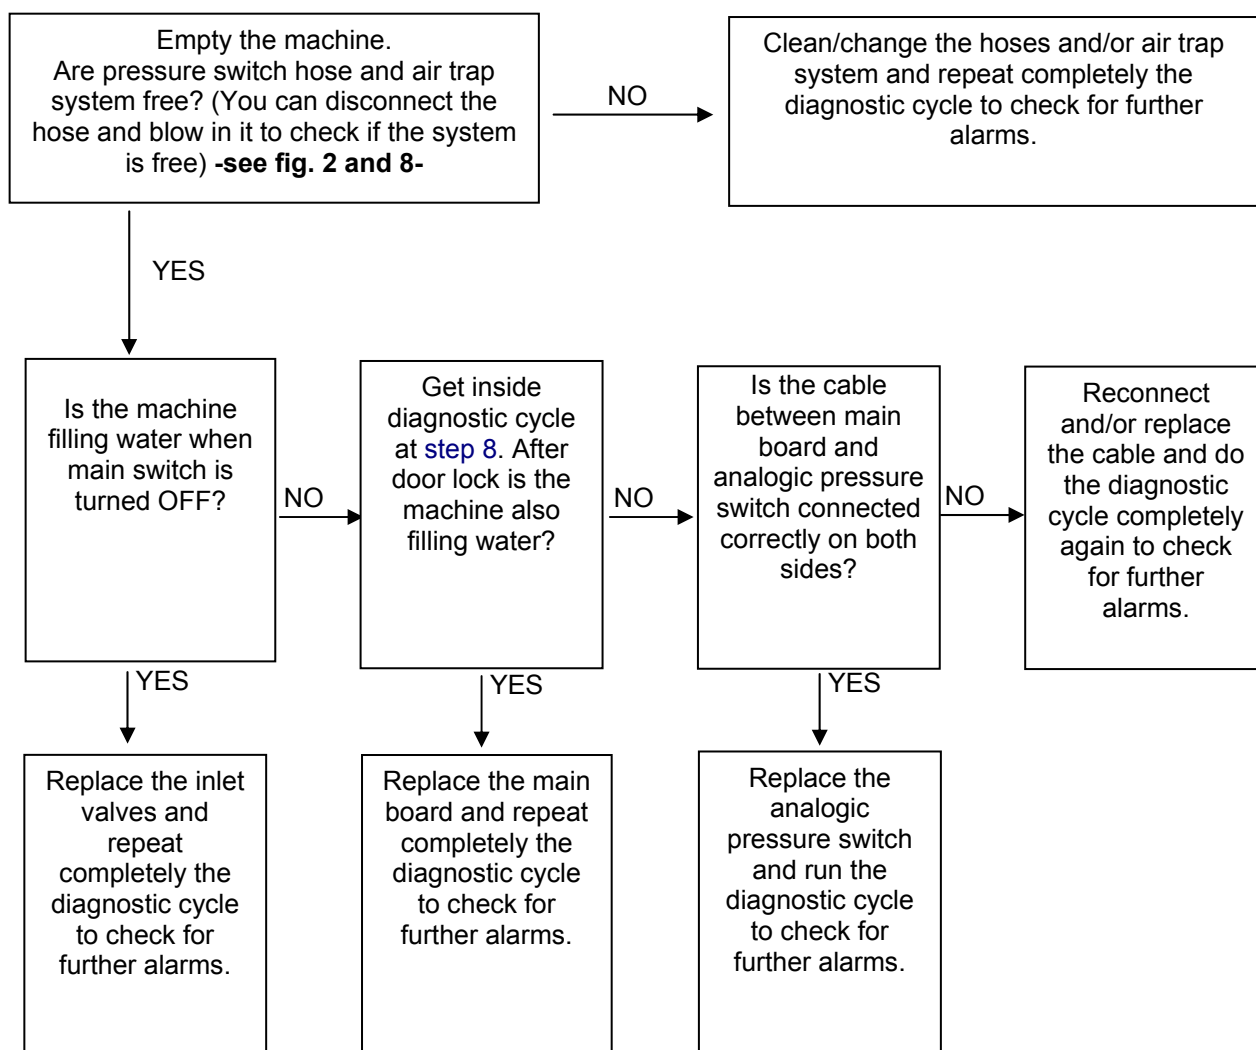


*If there are traces of burning on the
circuit board, refer to pages 119-120*

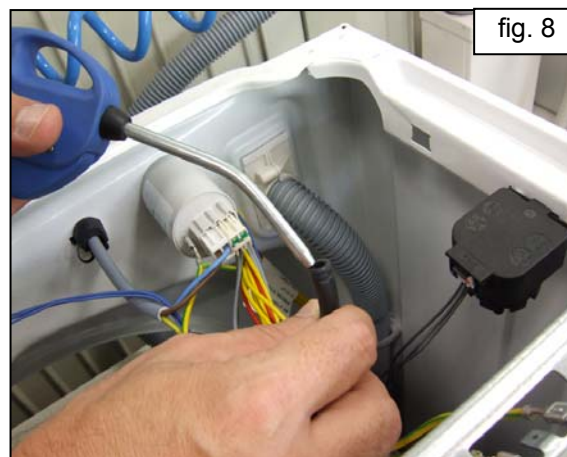

E38	E38: Pressure chamber blocked The analogic pressure switch is not able to measure any variation of the water level for at least 30-sec. during drum movement.	E38
------------	---	------------

Tests to be performed:

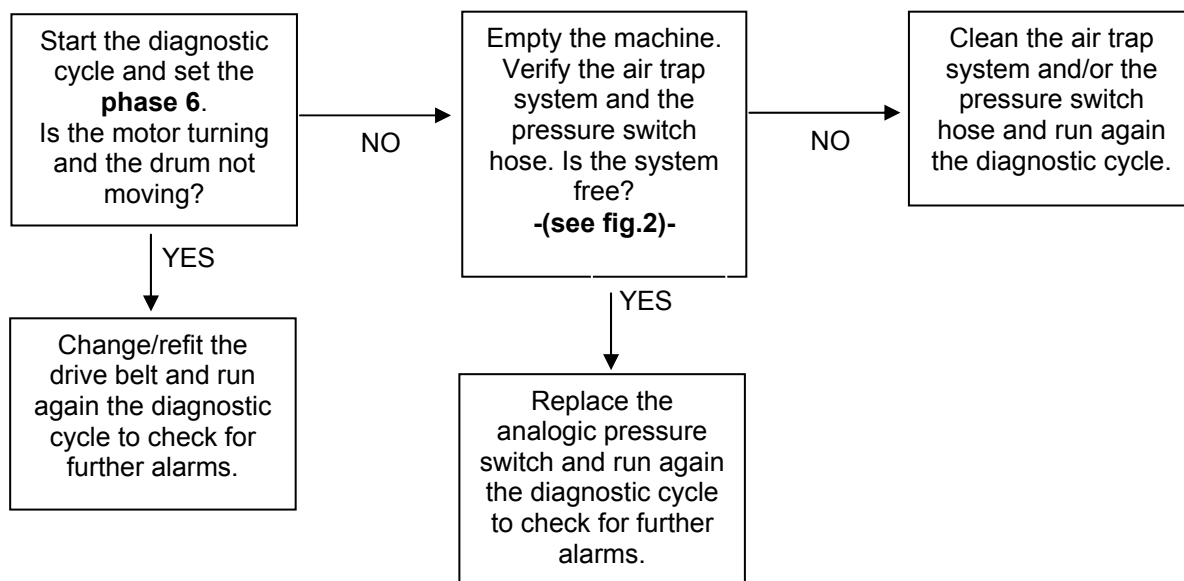


E3A	E3A: Problems with “Sensing” circuit of the heating element relay	E3A
------------	--	------------

Tests to be performed:




Replace the circuit board and run the diagnostic cycle again to check for further alarms.

E41	E41: Door open (3-contact device)	E41
	Maximum time exceeded (PTC = 15 seconds)	

Tests to be performed:

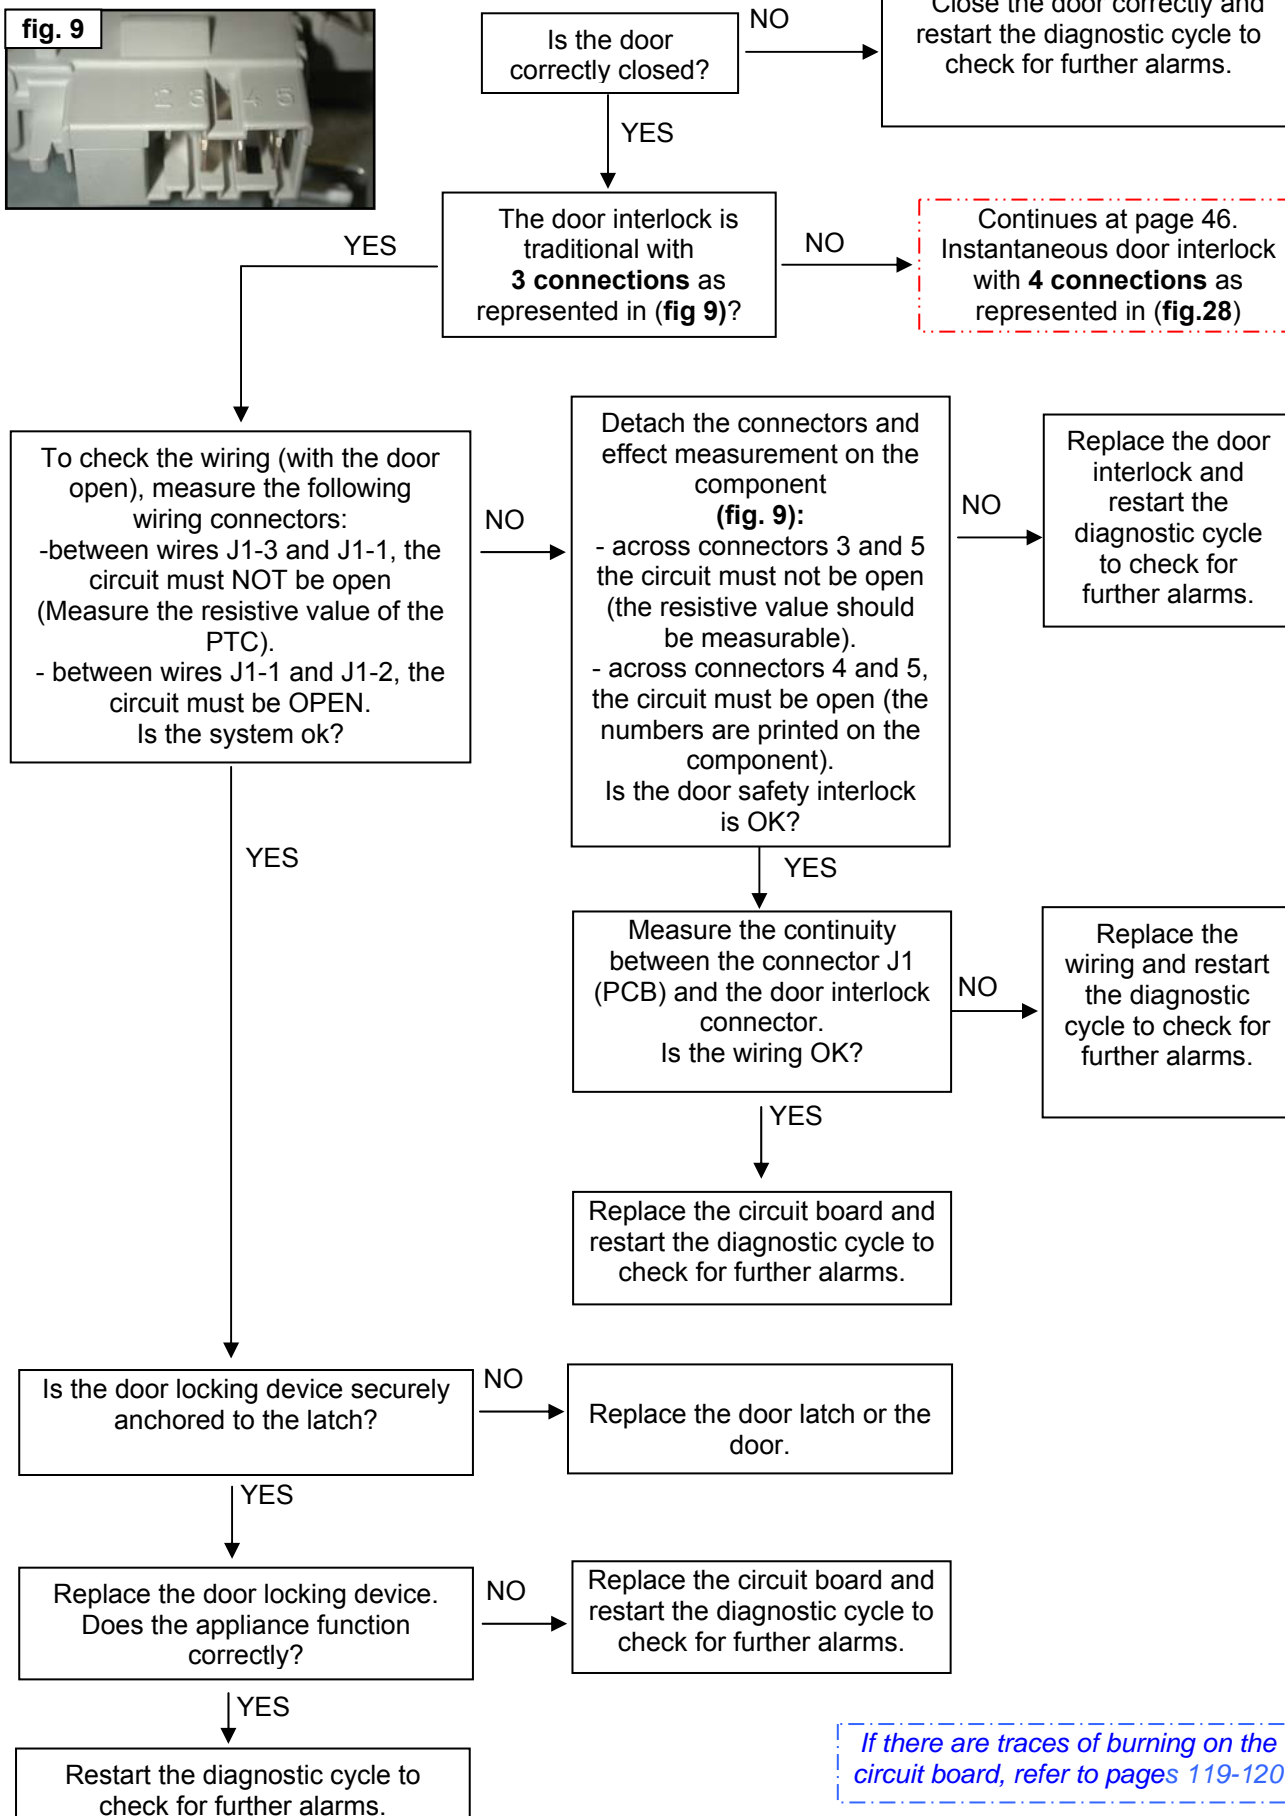


E41 (3-contact device)


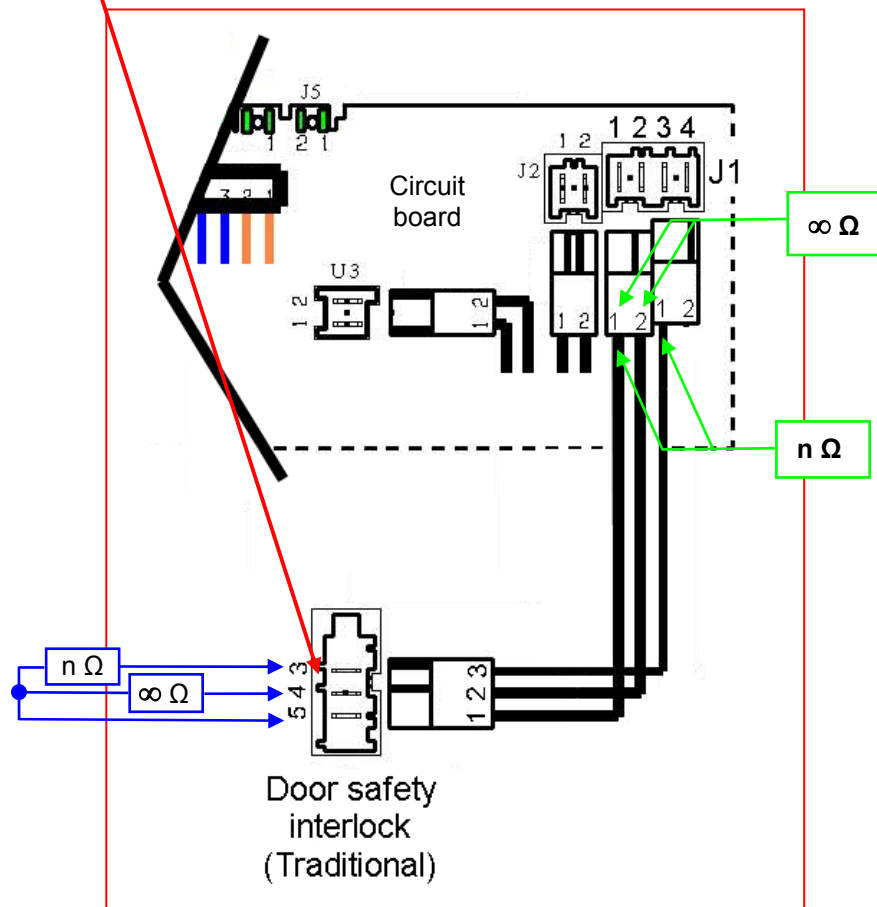
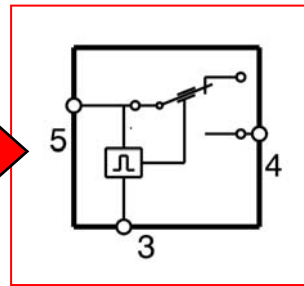
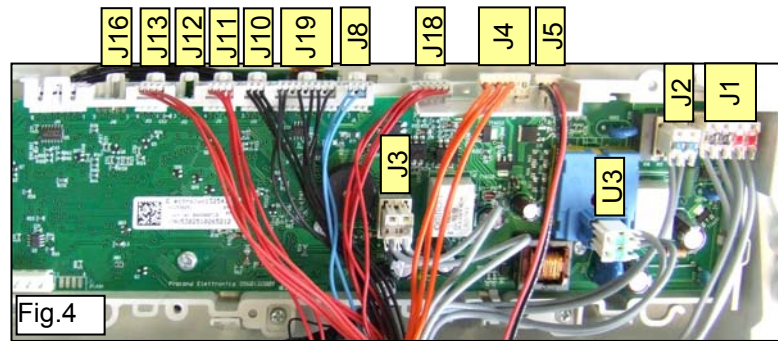


If there are traces of burning on the circuit board, refer to pages 119-120

E41	E41: Door open (4-contact device)	E41
	Maximum time exceeded (5 pulses for instantaneous)	

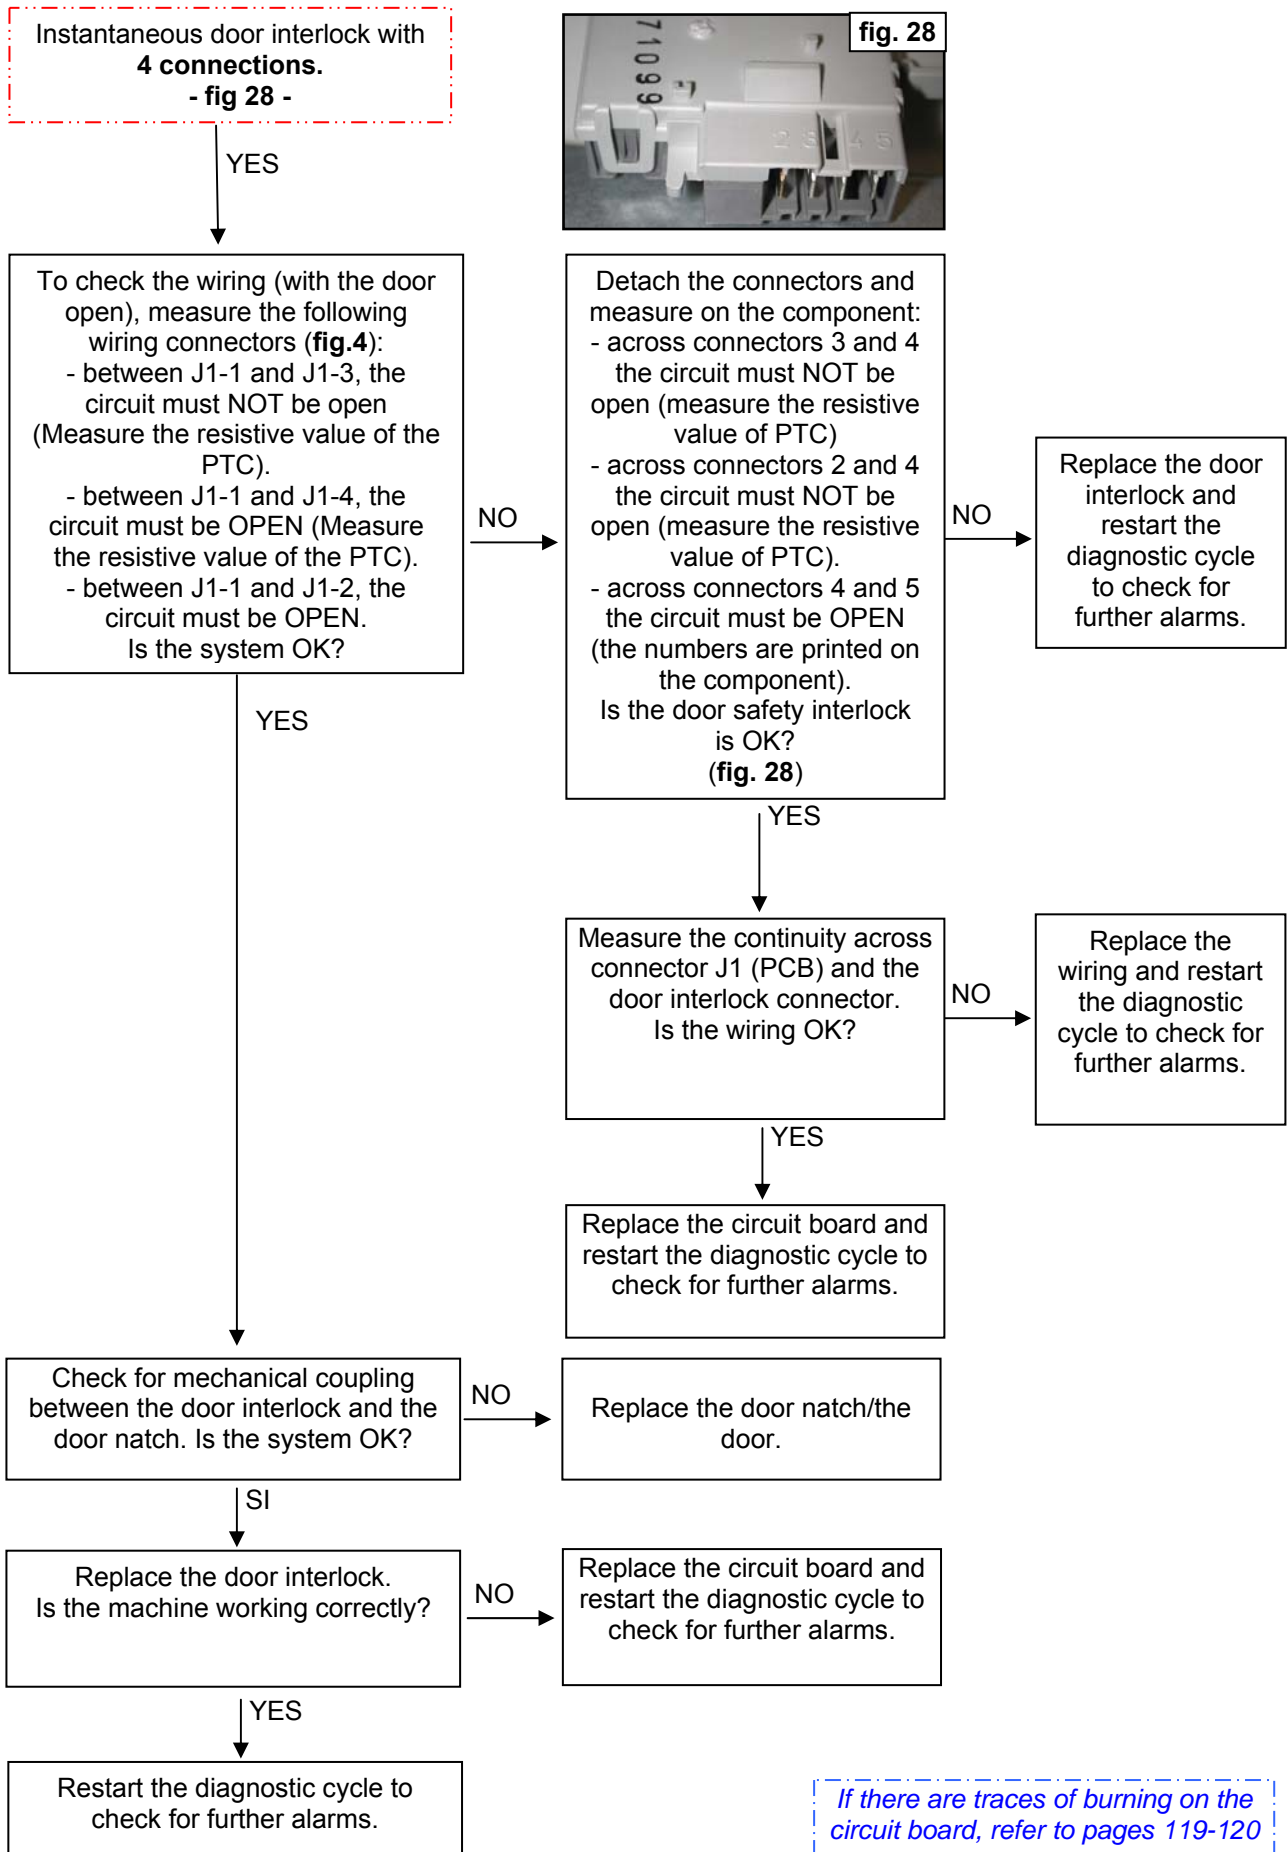


E41 (4-contact device)

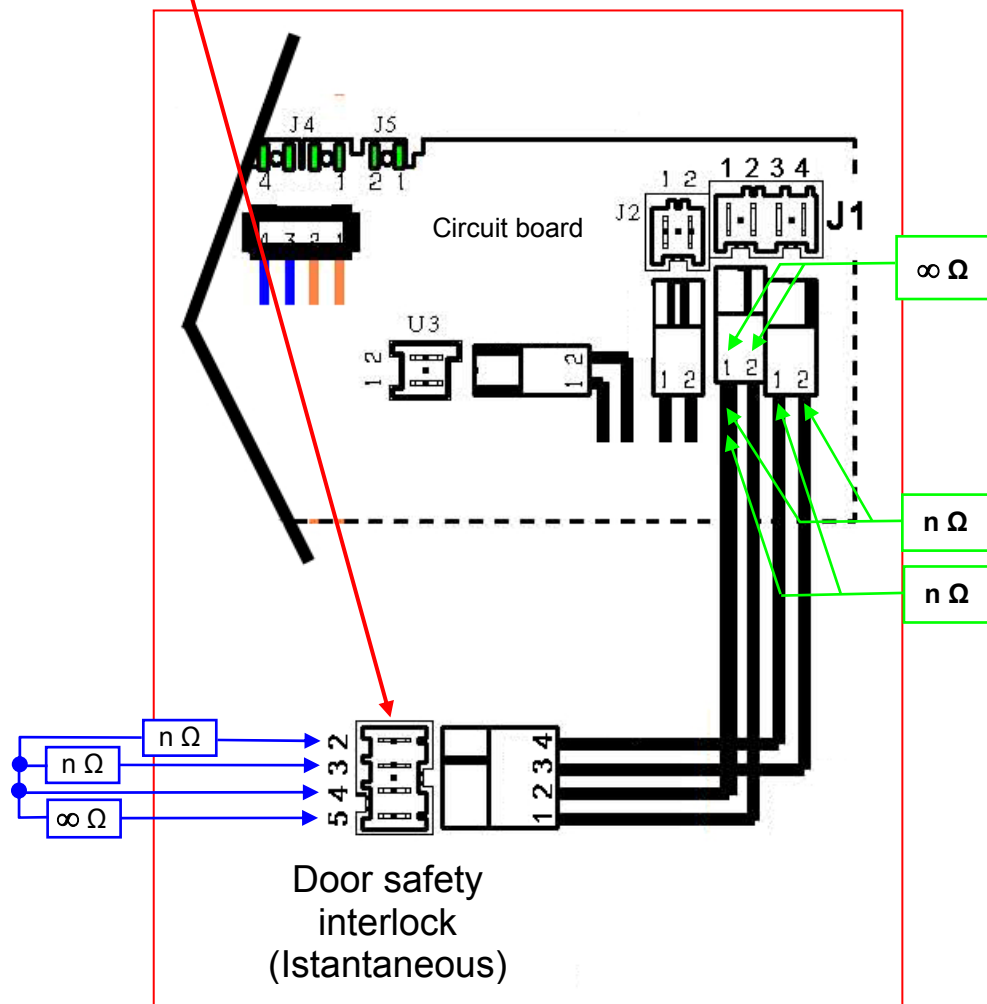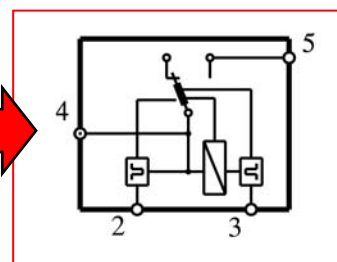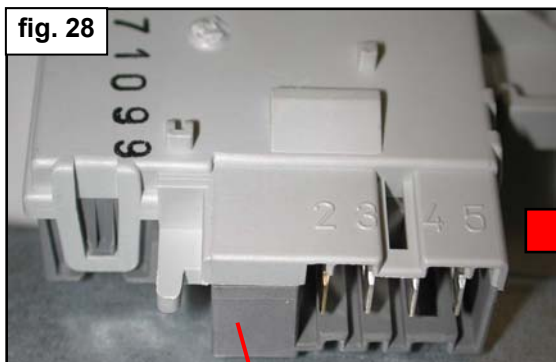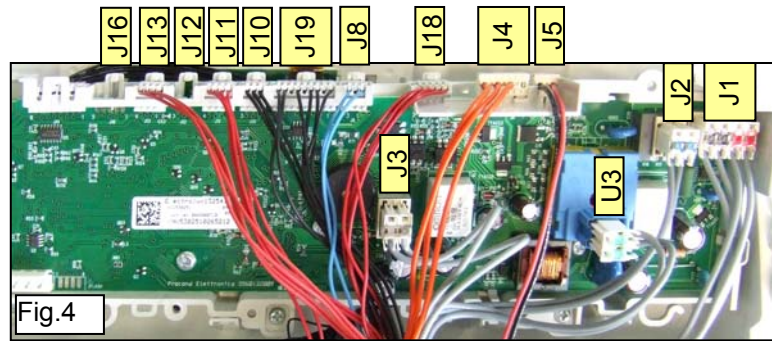




If there are traces of burning on the circuit board, refer to pages 119-120

E42	E42: Problems with door aperture (3-contact device)	E42
	Maximum time exceeded (255 seconds)	

Tests to be performed:

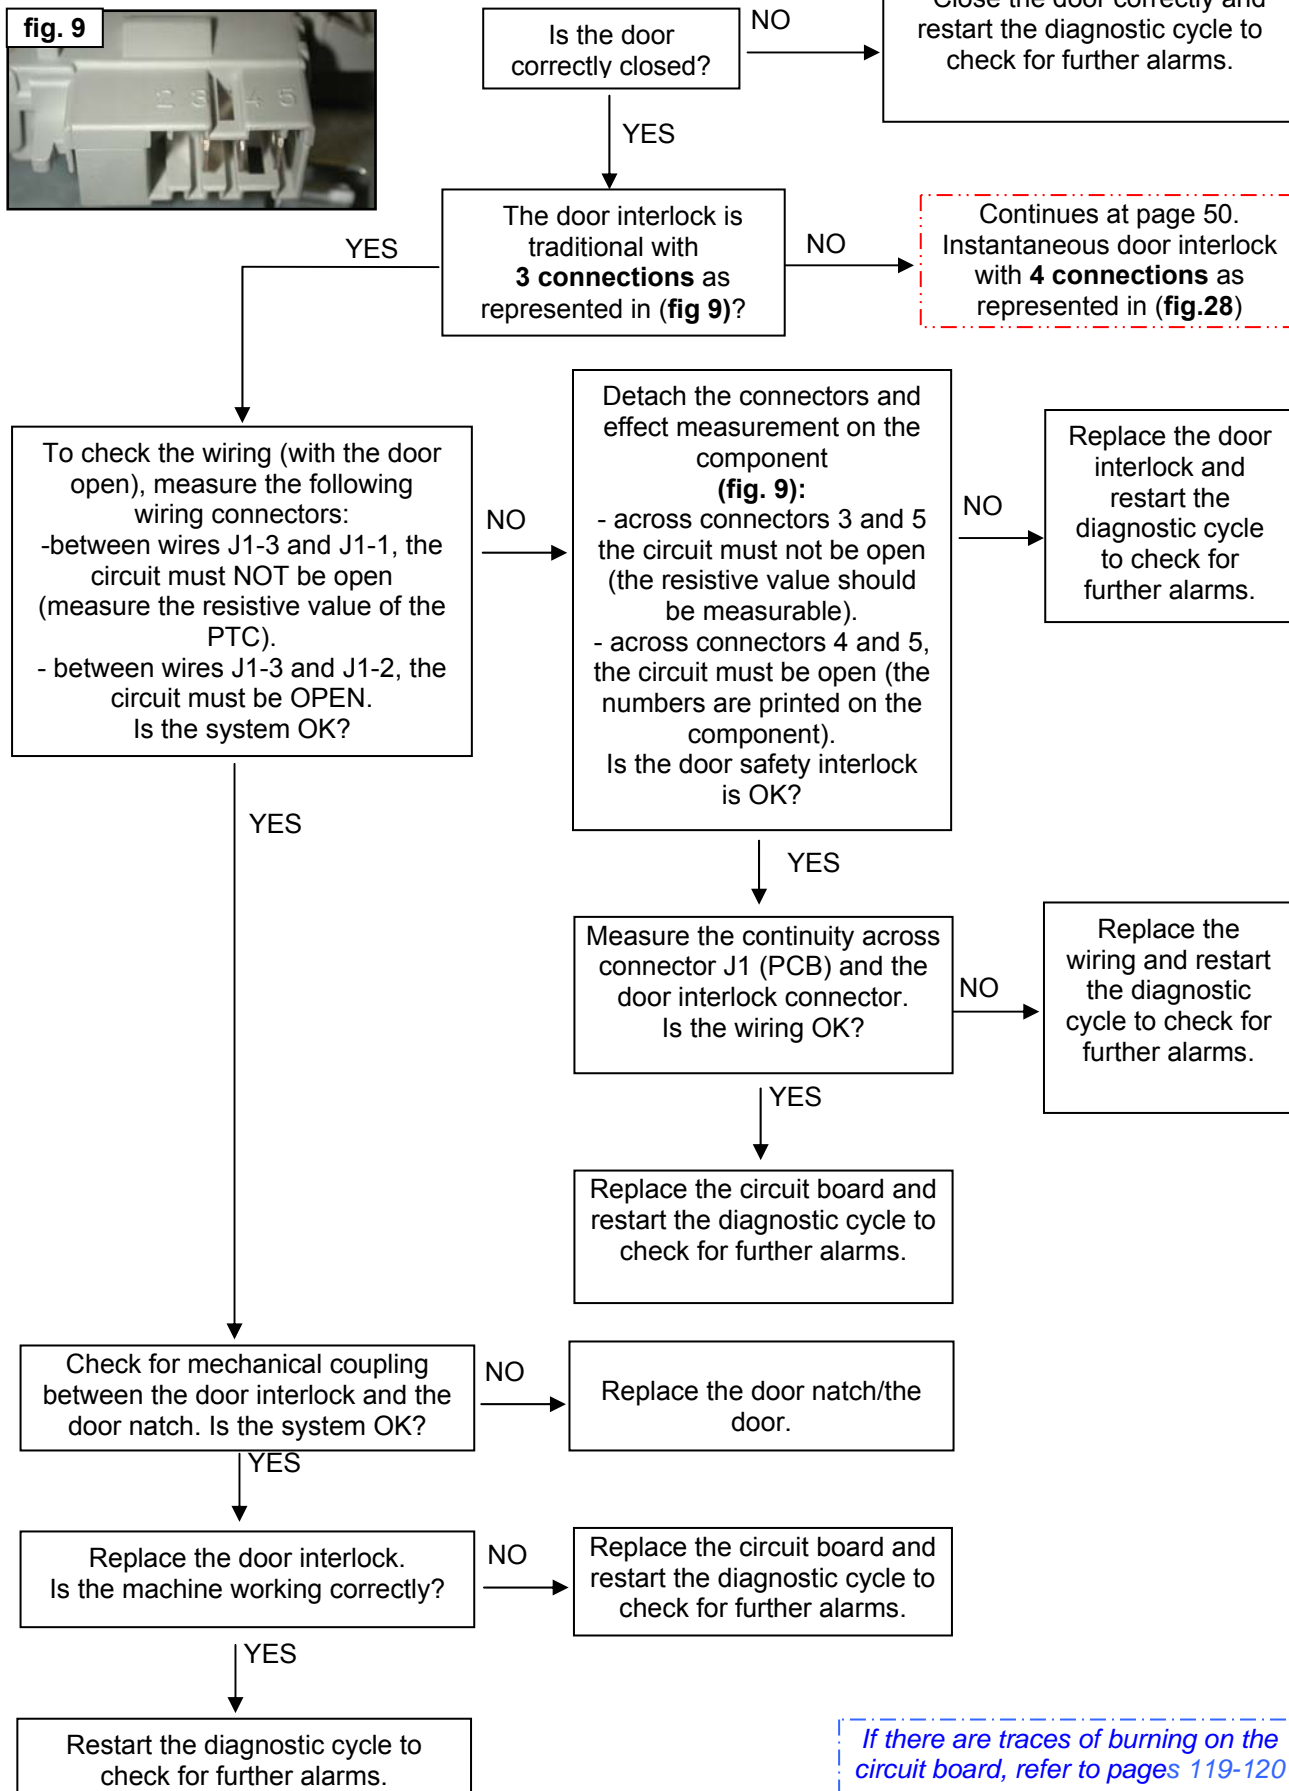


E42 (3-contact device)


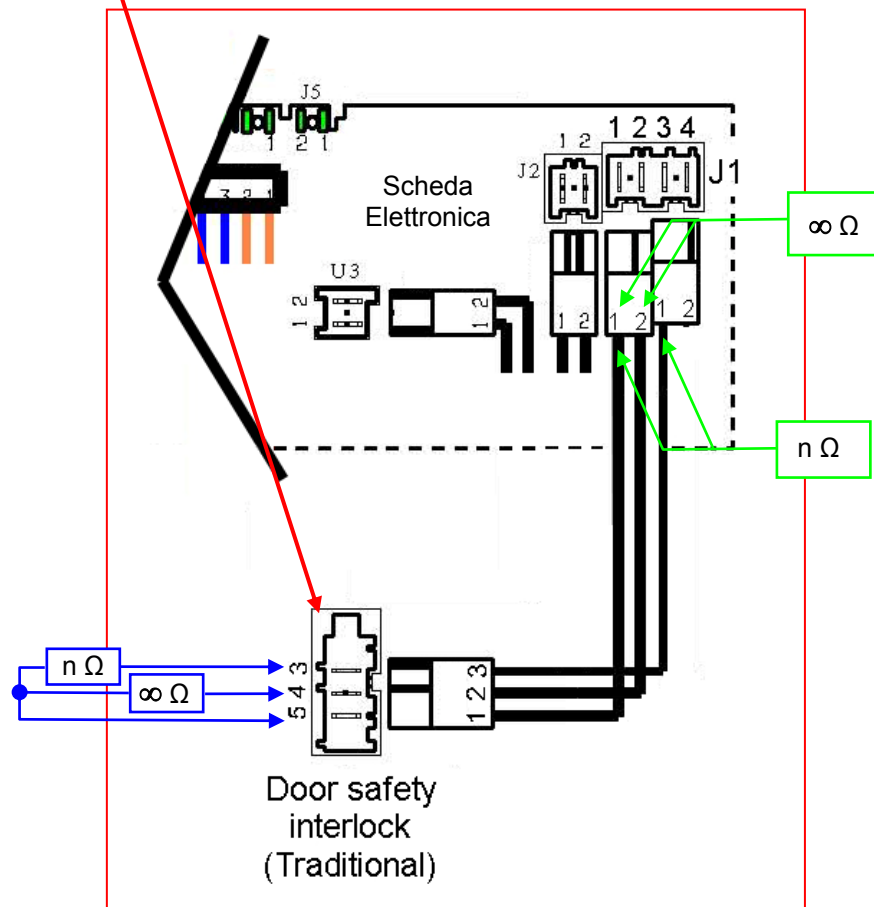
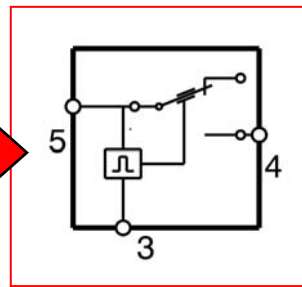
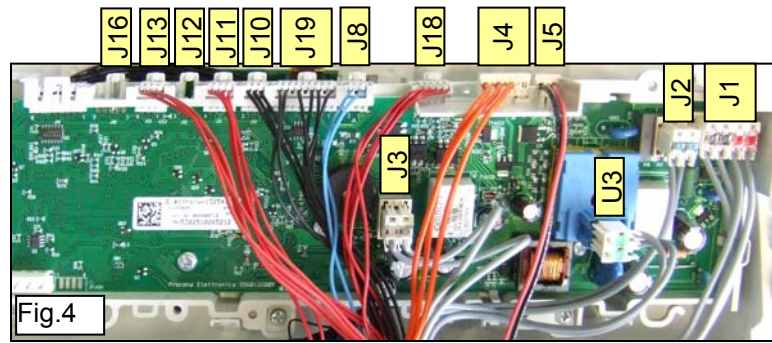


If there are traces of burning on the circuit board, refer to pages 119-120

E42	E42: Problems with door aperture (4- contact device)	E42
	Maximum time exceeded (5 pulses for instantaneous)	

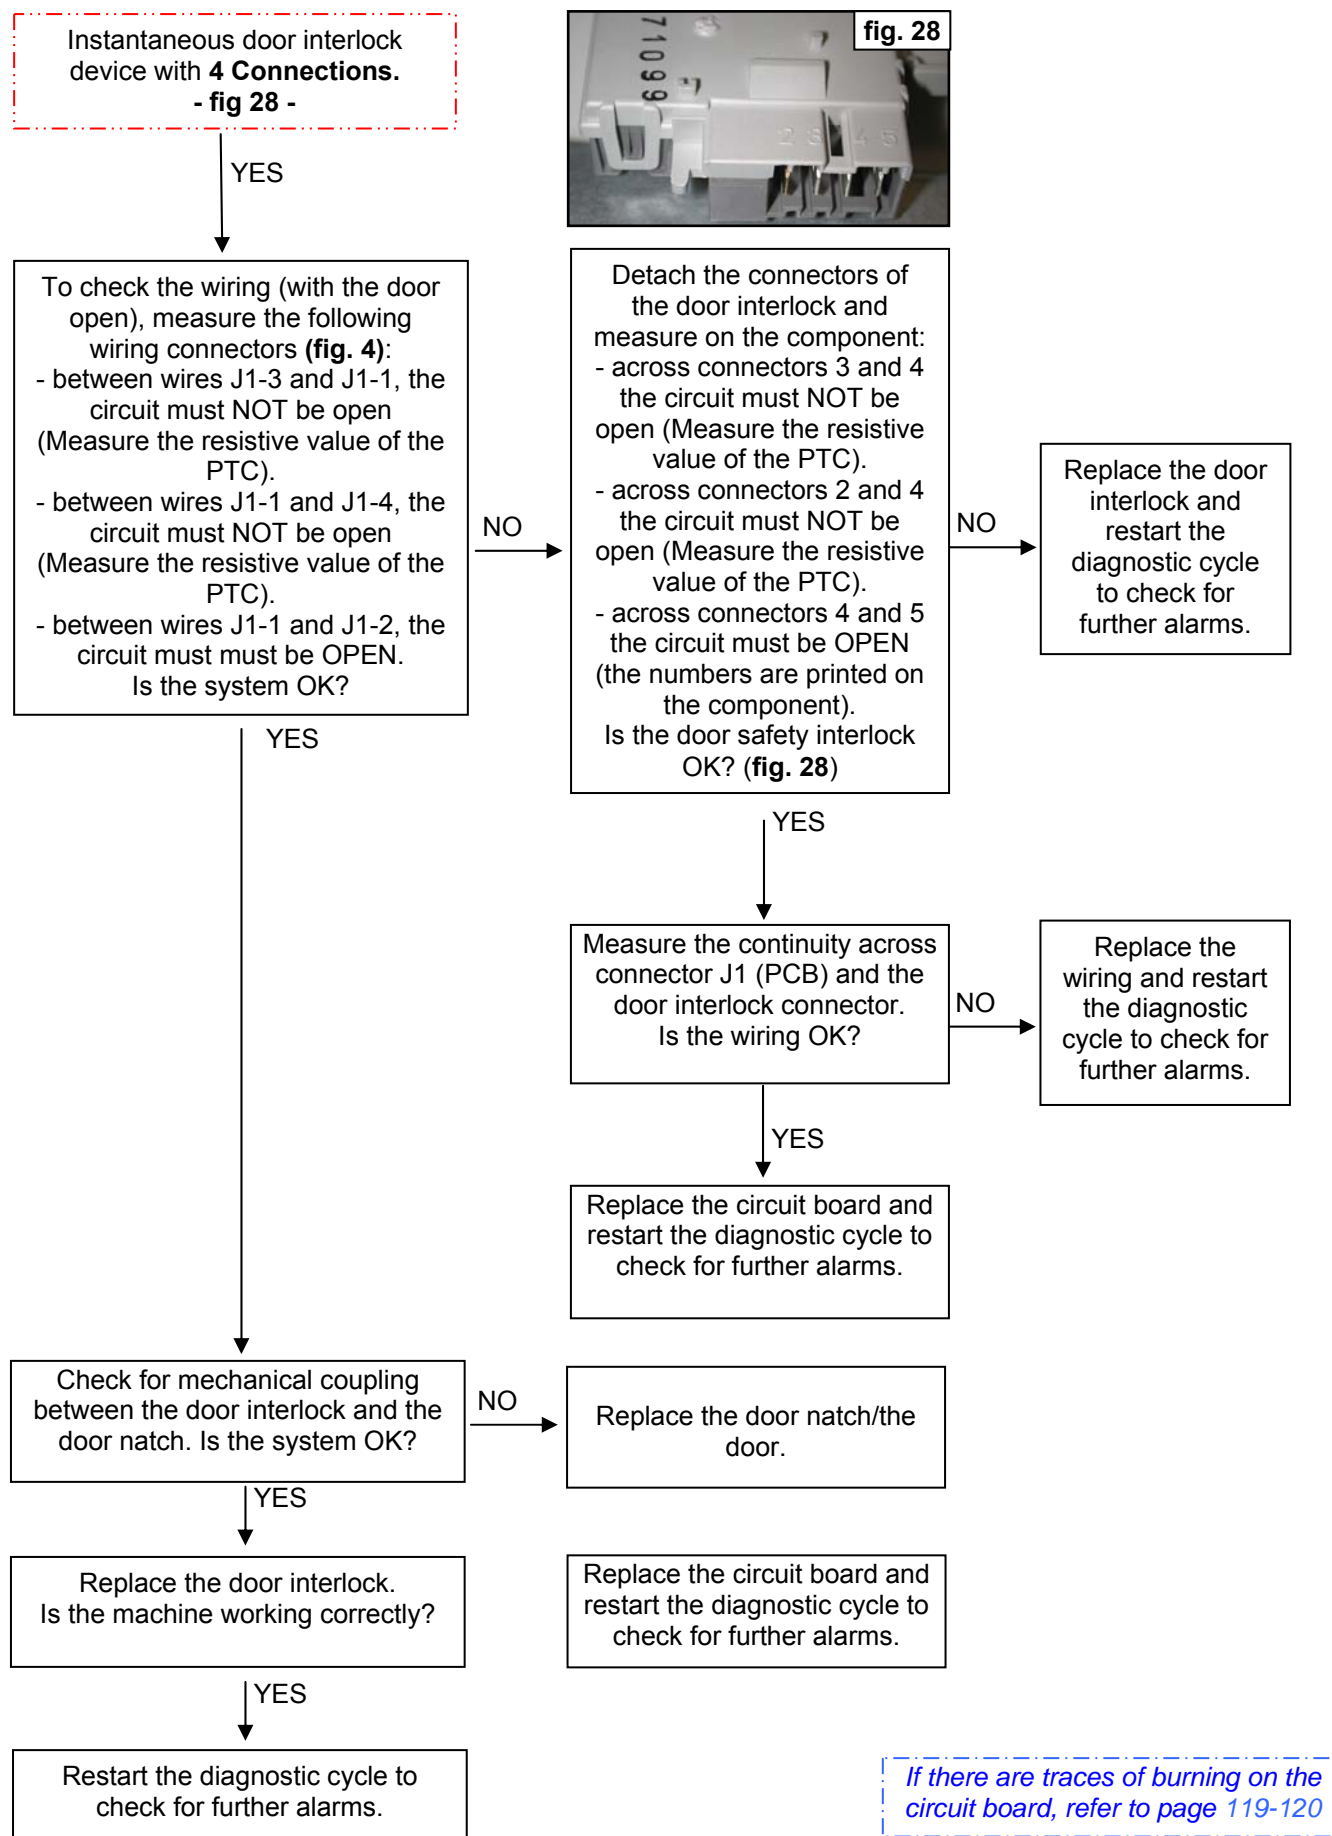

E42 (4-contact device)

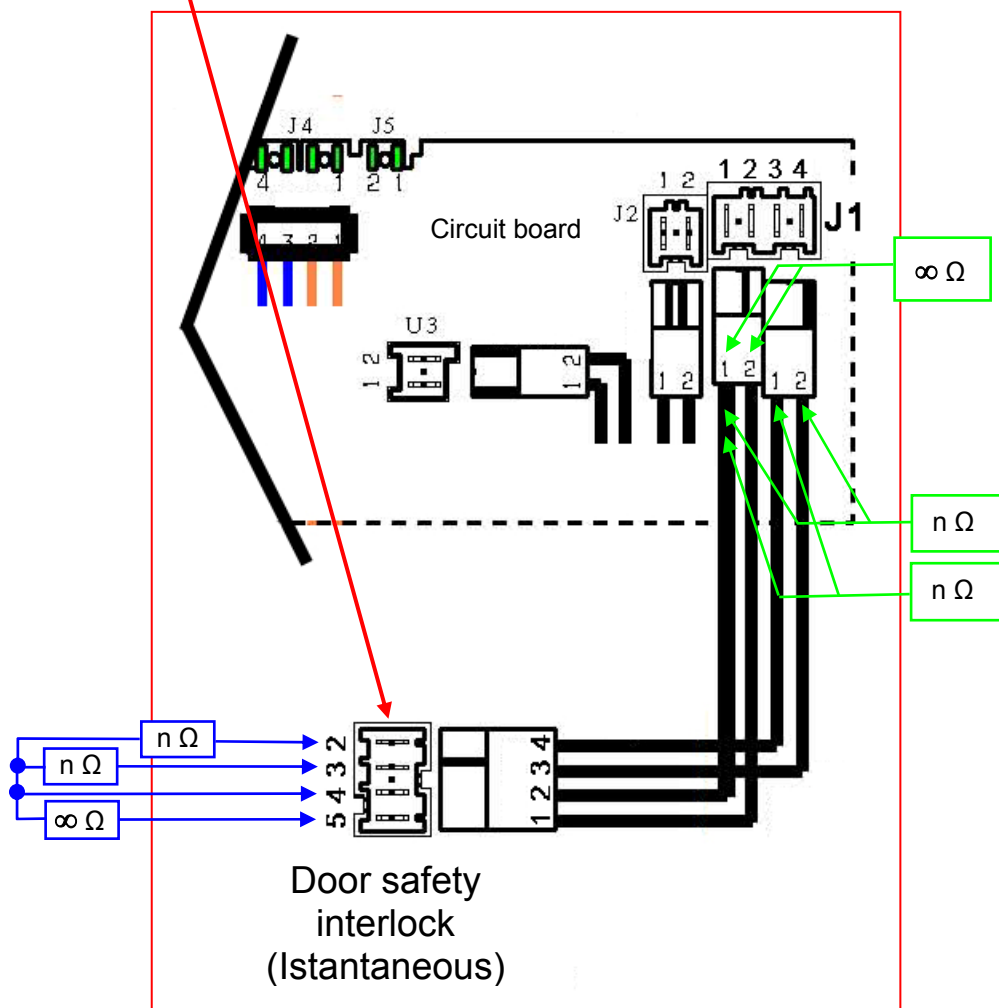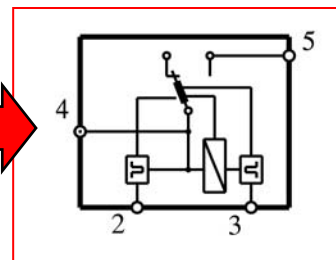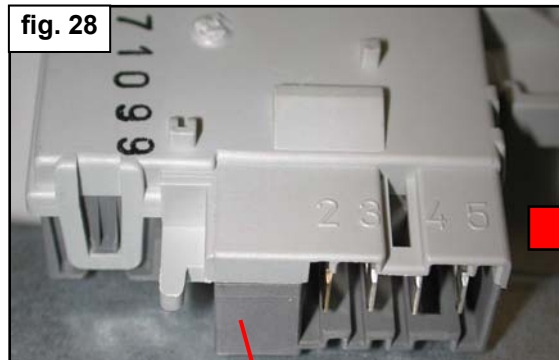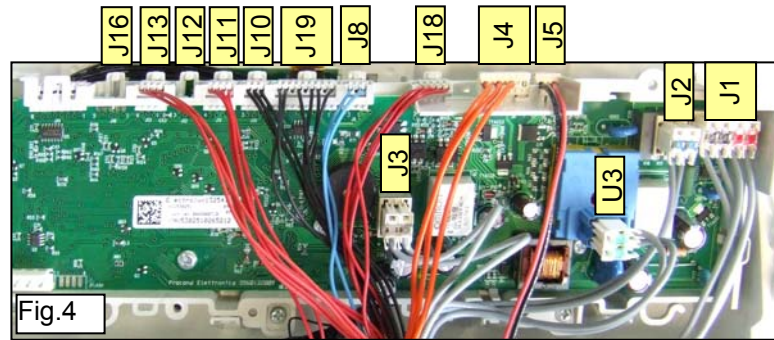

If there are traces of burning on the circuit board, refer to pages 119-120

E43

E43: Problems with the component (triac) which actions the door interlock (3-contact device)

E43

Tests to be performed:

To check the wiring, (with the door open), measure the following wiring connectors (**fig. 4**):

- between wires J1-3 and J1-1, the circuit must NOT be open (measure the resistive value of the PTC).
- between wires J1-1 and J1-2, the circuit must be OPEN.

Is the system OK?

YES

Replace the circuit board and restart the diagnostic cycle to check for further alarms.

NO

Detach the connectors and measure on the component (**fig. 9**):

- across connectors 3 and 5 the circuit must NOT be open (the resistive value should be measurable).
- across connectors 4 and 5, the circuit must be OPEN (the numbers are printed on the component).

Is the door safety interlock OK?

NO

Replace the door interlock and restart the diagnostic cycle to check for further alarms.

YES

Measure the continuity across connector J1 (PCB) and the door interlock connector. Is the wiring OK?


NO

Replace the wiring and restart the diagnostic cycle to check for further alarms.

YES

Replace the circuit board and restart the diagnostic cycle to check for further alarms.

If there are traces of burning on the circuit board, refer to pages 119-120

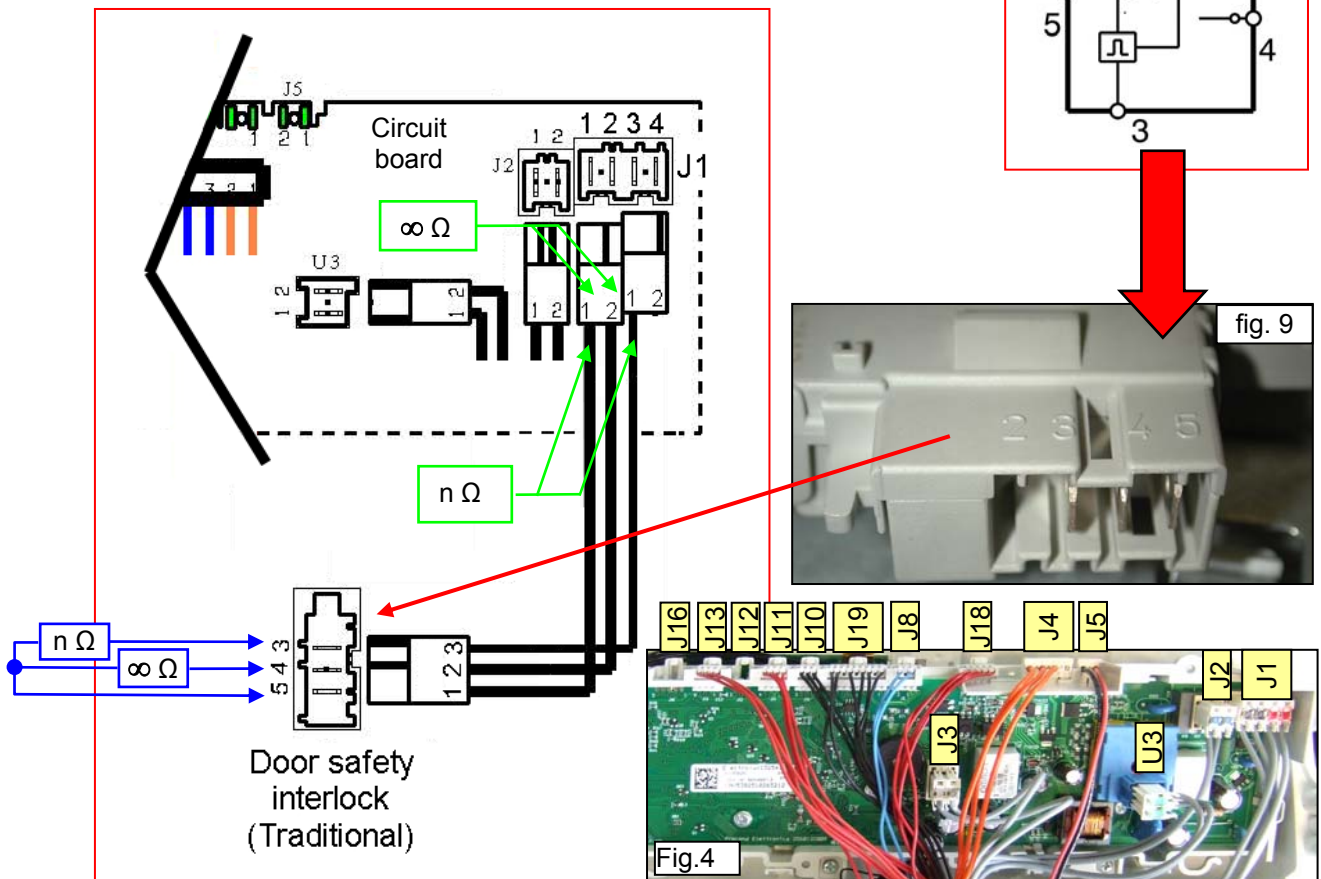

E43

E43: Problems with the component (triac) which actions the door interlock (4-contact device)

E43

Tests to be performed:

To check the wiring, (with the door open), measure the following wiring connectors (**fig.4**):

- between J1-1 and J1-3, the circuit must NOT be open (measure the resistive value of the PTC).
- between J1-1 and J1-4 the circuit must NOT be open (measure the resistive value of the PTC).
- between J1-1 and J1-2, the circuit must be OPEN.

Is the system OK?

YES

Replace the circuit board and restart the diagnostic cycle to check for further alarms.

NO

Detach the connectors of the door interlock and measure on the component (**fig. 28**):

- across connectors 3 and 4 the circuit must NOT be open (Measure the resistive value of the PTC).
- across connectors 2 and 4 the circuit must NOT be open (Measure the resistive value of the PTC).
- across connectors 4 and 5 the circuit must be OPEN (the numbers are printed on the component).

Is the door safety interlock OK?

NO

Replace the door interlock and restart the diagnostic cycle to check for further alarms.

YES

Measure the continuity across connector J1 (PCB) and the door interlock connector. Is the wiring OK?


NO

Replace the wiring and restart the diagnostic cycle to check for further alarms.

YES

Replace the circuit board and restart the diagnostic cycle to check for further alarms.

If there are traces of burning on the circuit board, refer to pages 119-120

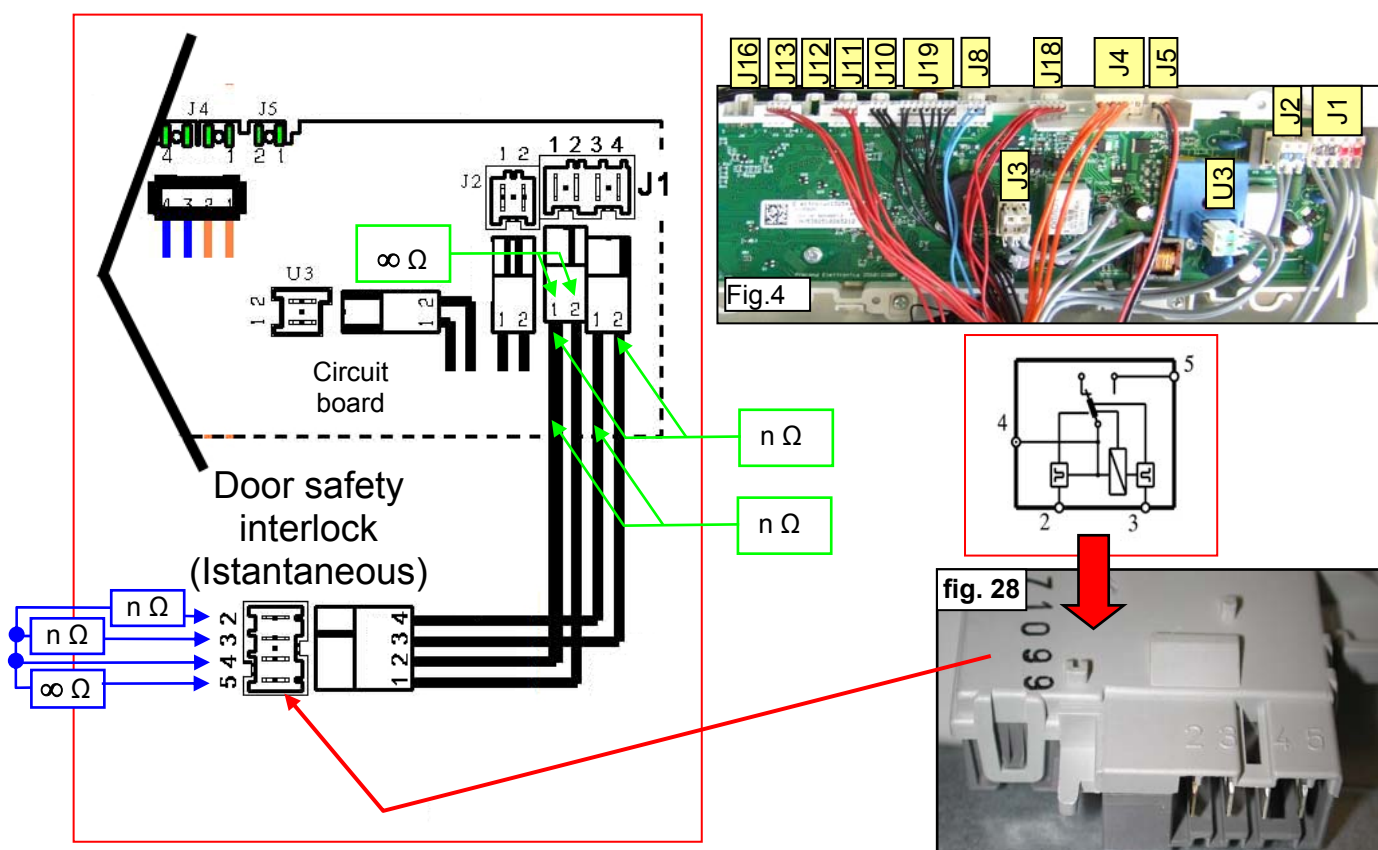

E44	E44: Door closure «sensing» circuit faulty	E44
------------	---	------------

Tests to be performed:

Replace the circuit board and restart the diagnostic cycle to check for further alarms.

If there are traces of burning on the circuit board, refer to pages 119-120

E45	E45: Problems with the «sensing» circuit of the triac that actions the door interlock	E45
------------	--	------------


Tests to be performed:







Replace the circuit board and restart the diagnostic cycle to check for further alarms.

If there are traces of burning on the circuit board, refer to pages 119-120

E52	E52: No signal from the motor tachometric generator (<i>first part</i>) Cycle blocked after 5 attempts during the cycle or immediately if detected at the start or during diagnostics.	E52
------------	--	------------

Tests to be performed:

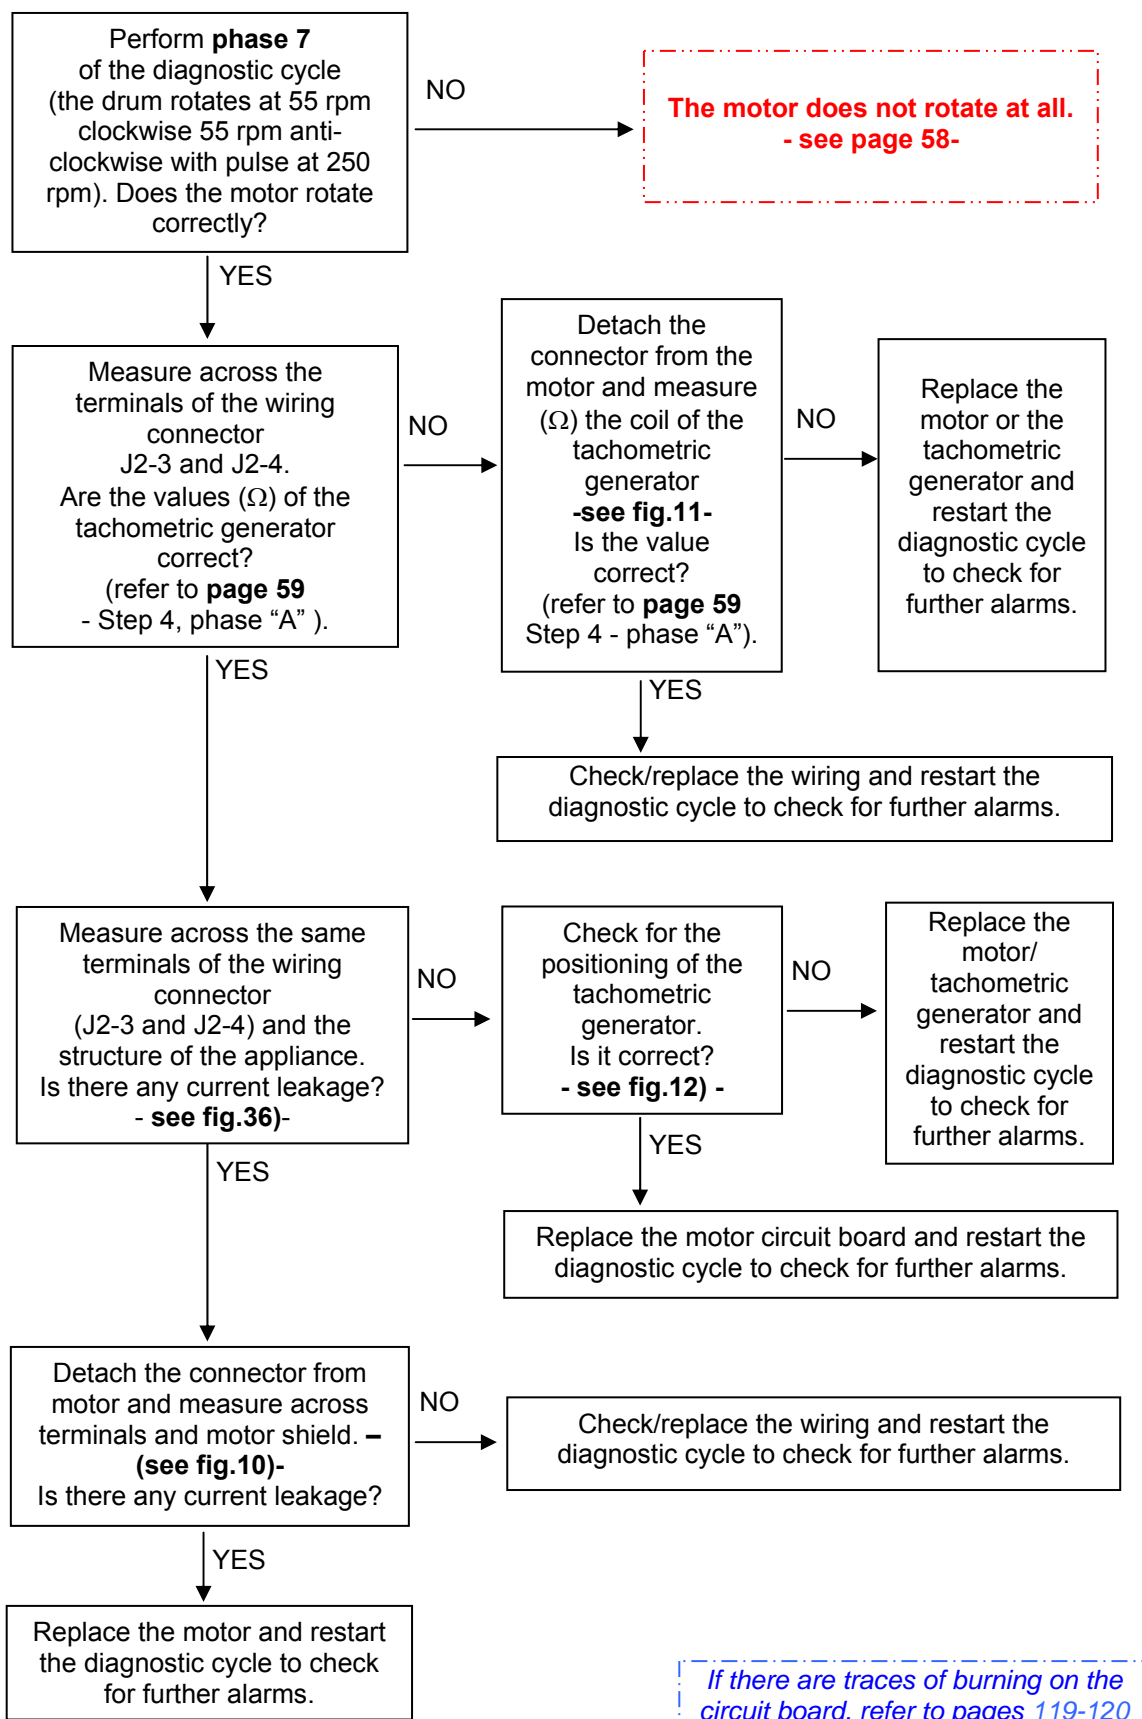

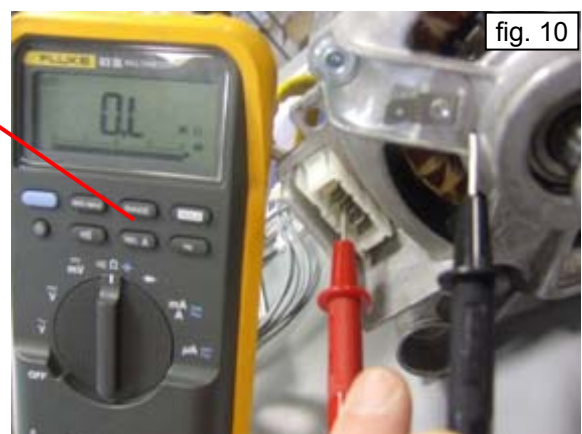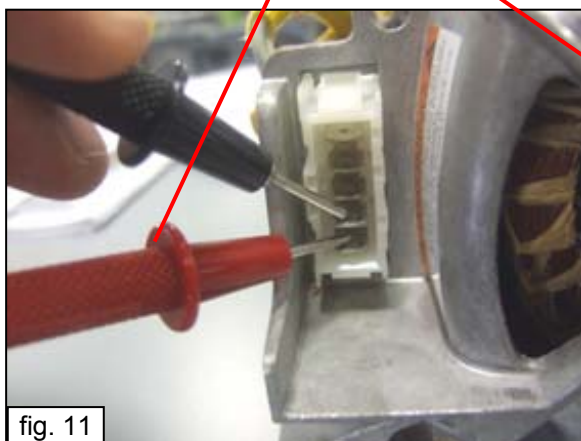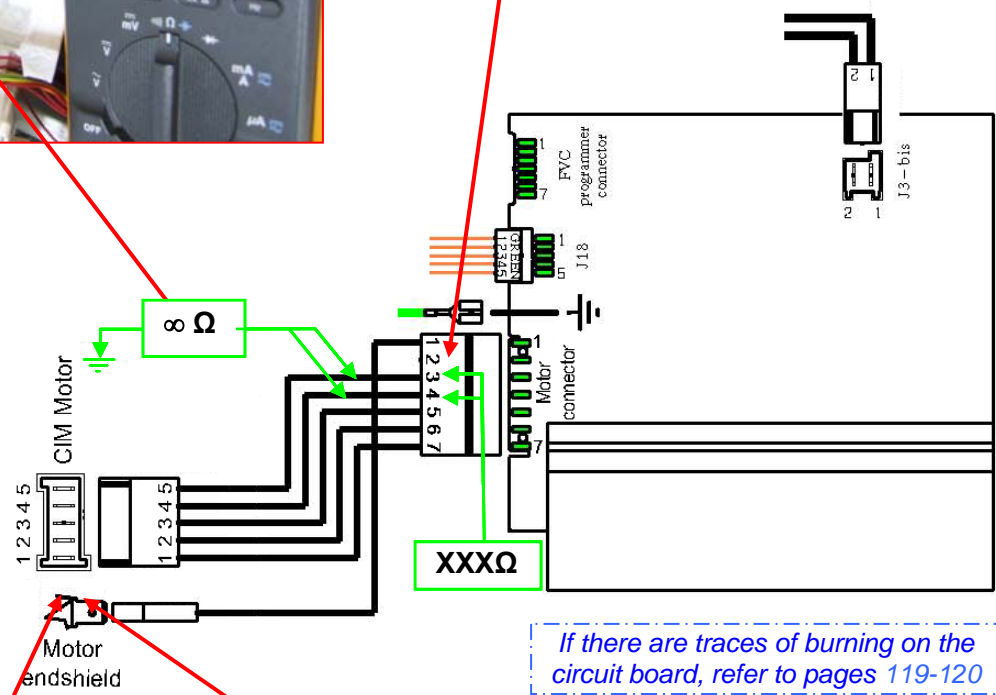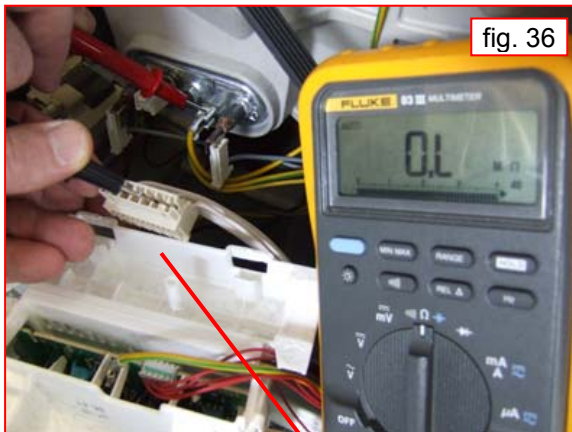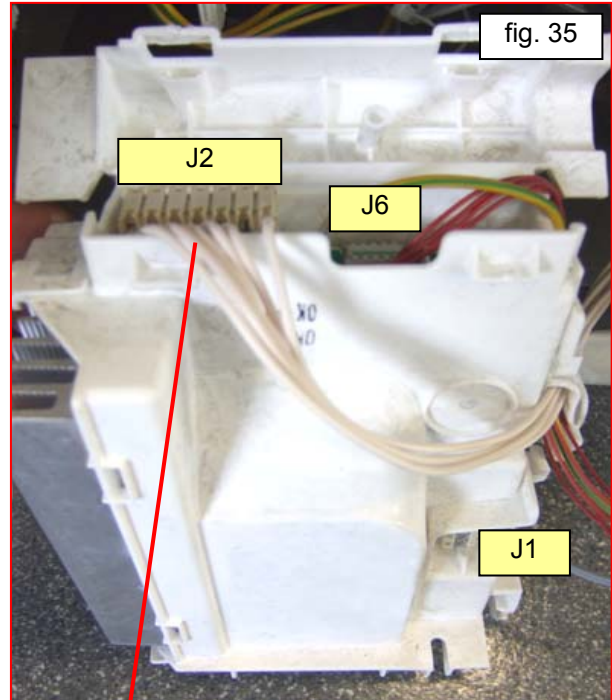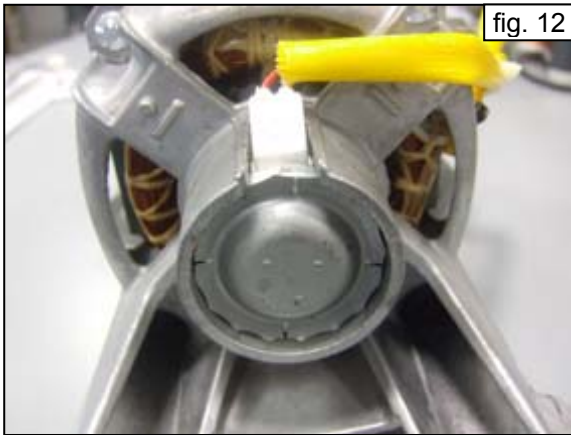

E52	E52: No signal from the motor tachometric generator (second part) Cycle blocked after 5 attempts during the cycle or immediately if detected at the start or during diagnostics.	E52
------------	--	------------

Tests to be performed:

The motor does not rotate at all

To check the wiring, measure (Ω) across the following terminals of the circuit board connector (**fig.35**) and compare with the correct values

(see page 59: step 4 – motor parameters)

- across J2-6 and J2-7, the value must be as in 4 - **B** (stator)
- across J2-5 and J2-6, if present, the value must be as in step 4 - **C** (stator)
- across J2-5 and J2-7, the value must be as in step 4 - **D** (stator).

Are these values correct?

YES

Replace the motor circuit board and restart the diagnostic cycle to check for further alarms.

NO

Check the motor as described on **page 59**.
Is the motor OK?

NO

Replace the motor and restart the diagnostic cycle to check for further alarms.

YES

Check/replace the wiring and restart the diagnostic cycle to check for further alarms.

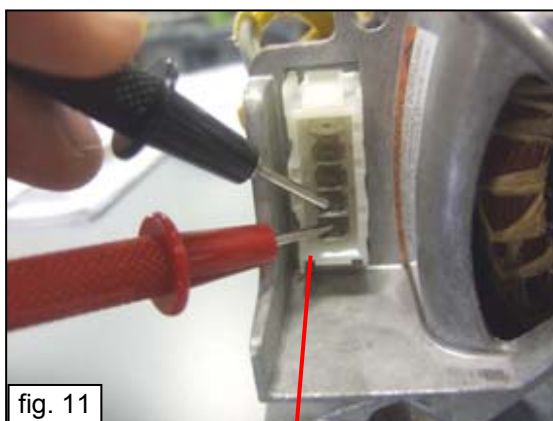


fig. 11


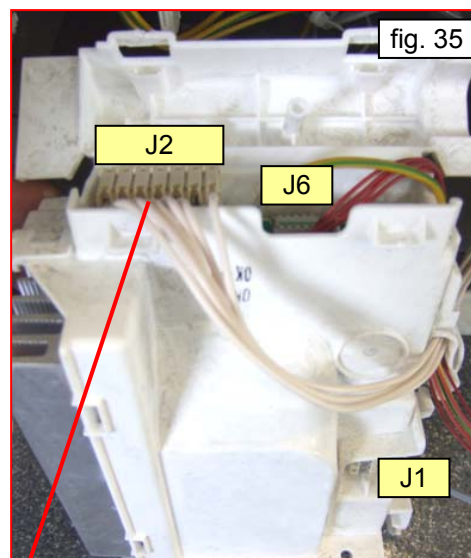



fig. 35

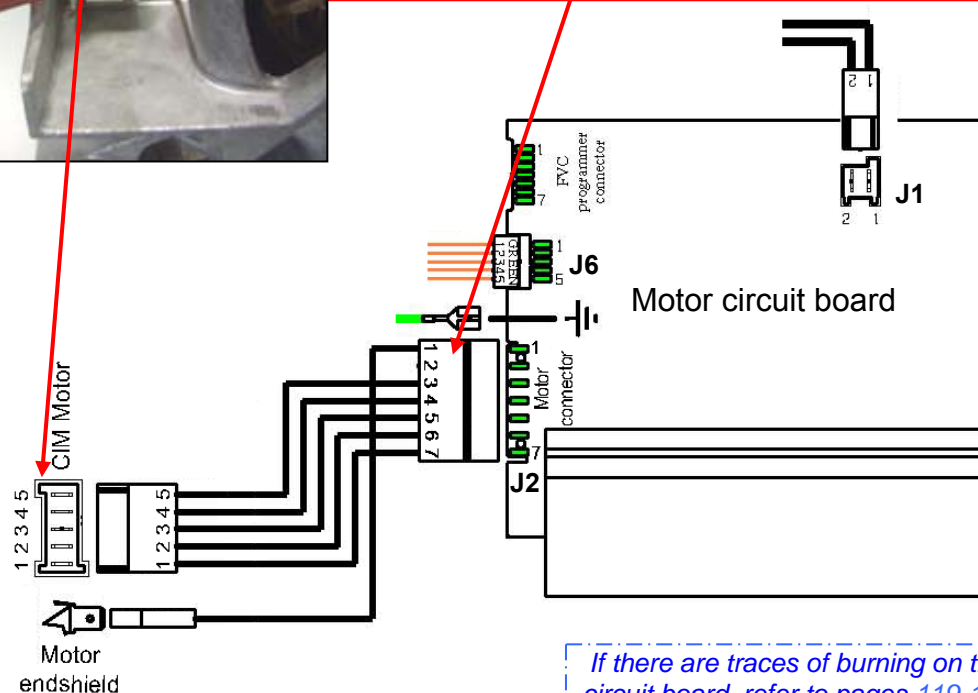



If there are traces of burning on the circuit board, refer to pages 119-120

Procedure for checking the Inverter motors

- 1) Check the connector blocks (wiring) and check for detached or bent terminals.
- 2) Check for traces, residue or deposits of water or detergent on the motor and identify the source.
- 3) Check for windings or other parts that may be grounded or poorly insulated. Use a tester with a minimum scale of 40 M Ω : between each terminal and the casing, this should read ∞ (**fig. 10**).
- 4) Check each winding against the values shown in the table below (**fig. 11**).

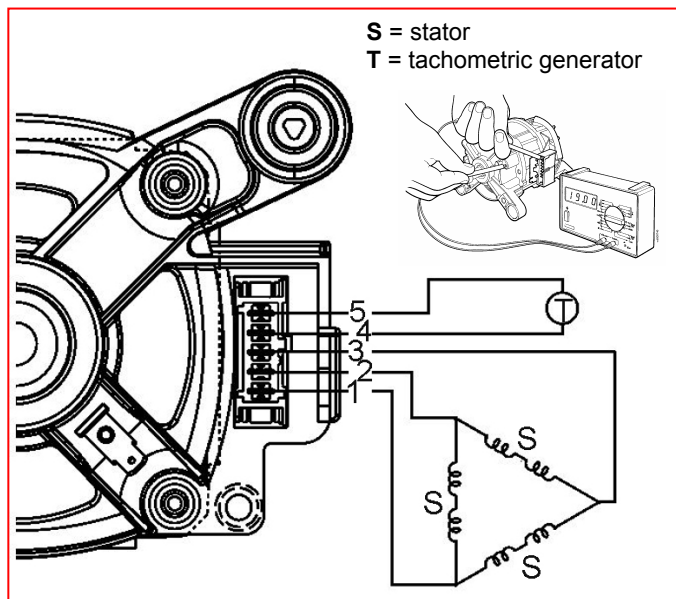


	TERMINALS ON MOTOR TERMINAL BLOCK	CHECKS:	MOTORS		
			C.E.SET.	ACC (SOLE)	ECM
A	4-5	Winding of tachometric generator	108÷133	169÷207	85÷98
B	1-2	Stator winding	5.0÷5.8	5.0÷5.8	5.0÷5.8
C	2-3	Stator winding	5.0÷5.8	5.0÷5.8	5.0÷5.8
D	3-1	Stator winding	5.0÷5.8	5.0÷5.8	5.0÷5.8


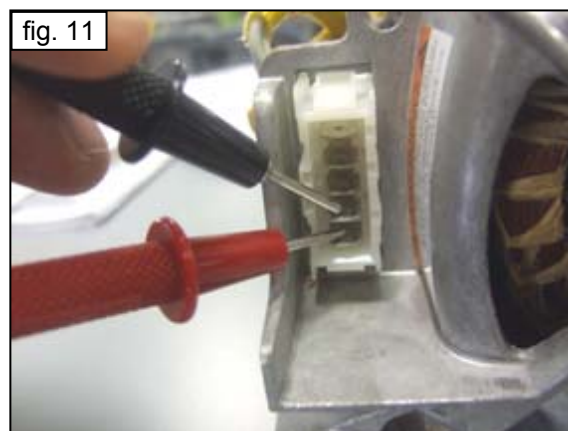
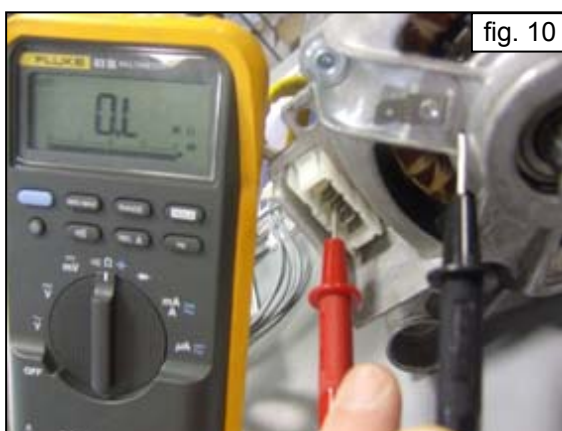


If there are traces of burning on the circuit board, refer to pages 119-120

E57	E57: The current requested by the Inverter board is higher than 16A Abnormal power absorption by the motor	E57
------------	--	------------

Tests to be performed:


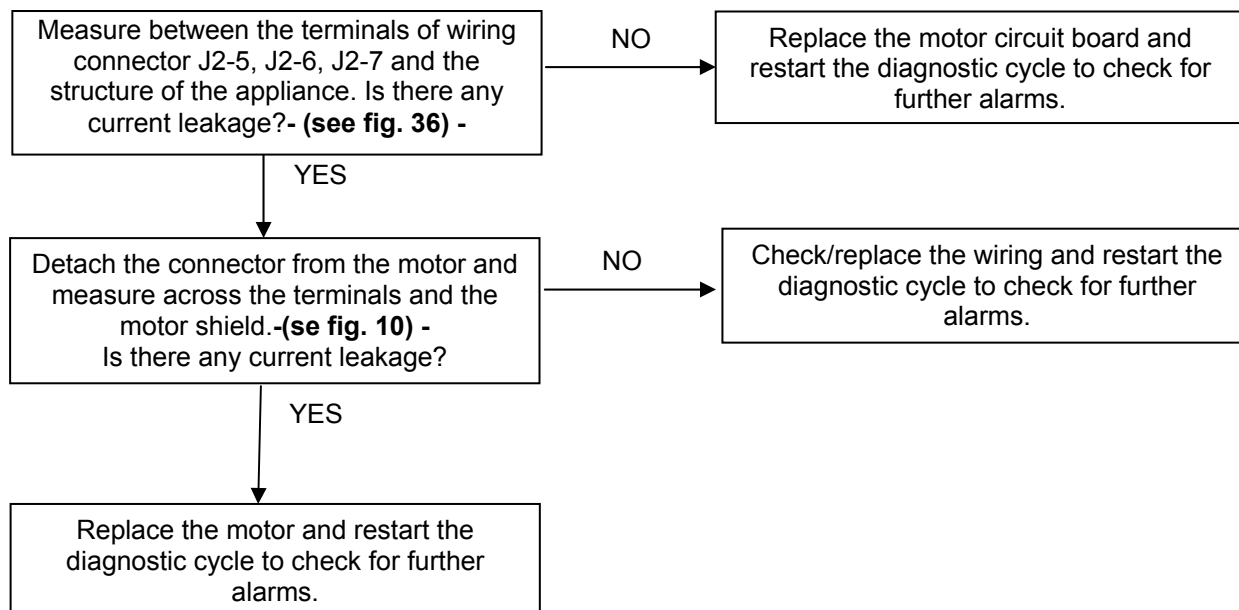


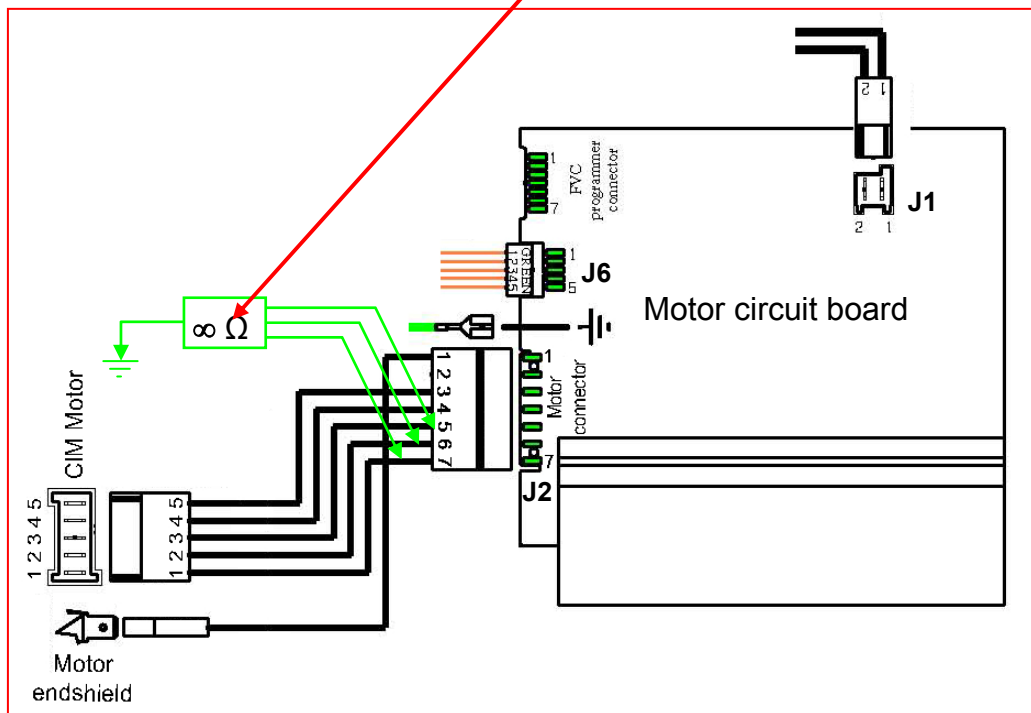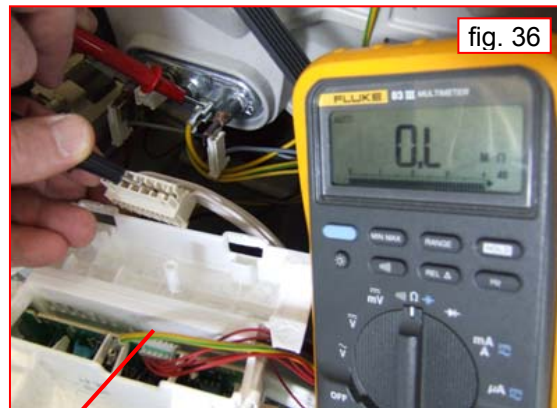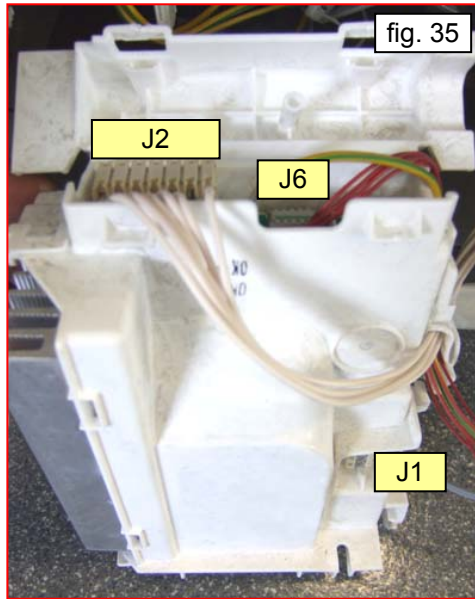




If there are traces of burning on the circuit board, refer to pages 119-120

E58	E58: The current requested by the Inverter board is higher than 6A Abnormal power absorption by the motor	E58
------------	---	------------

Tests to be performed:

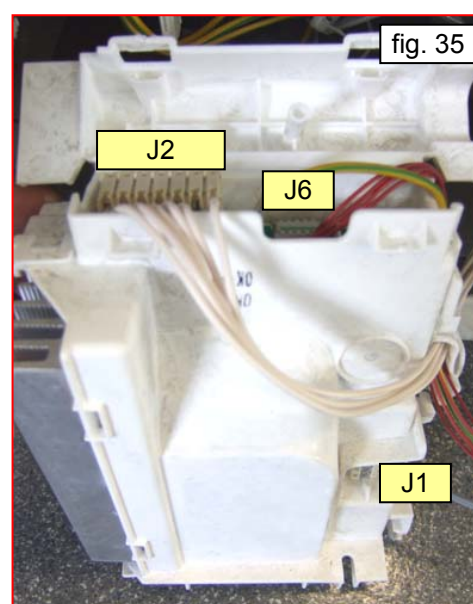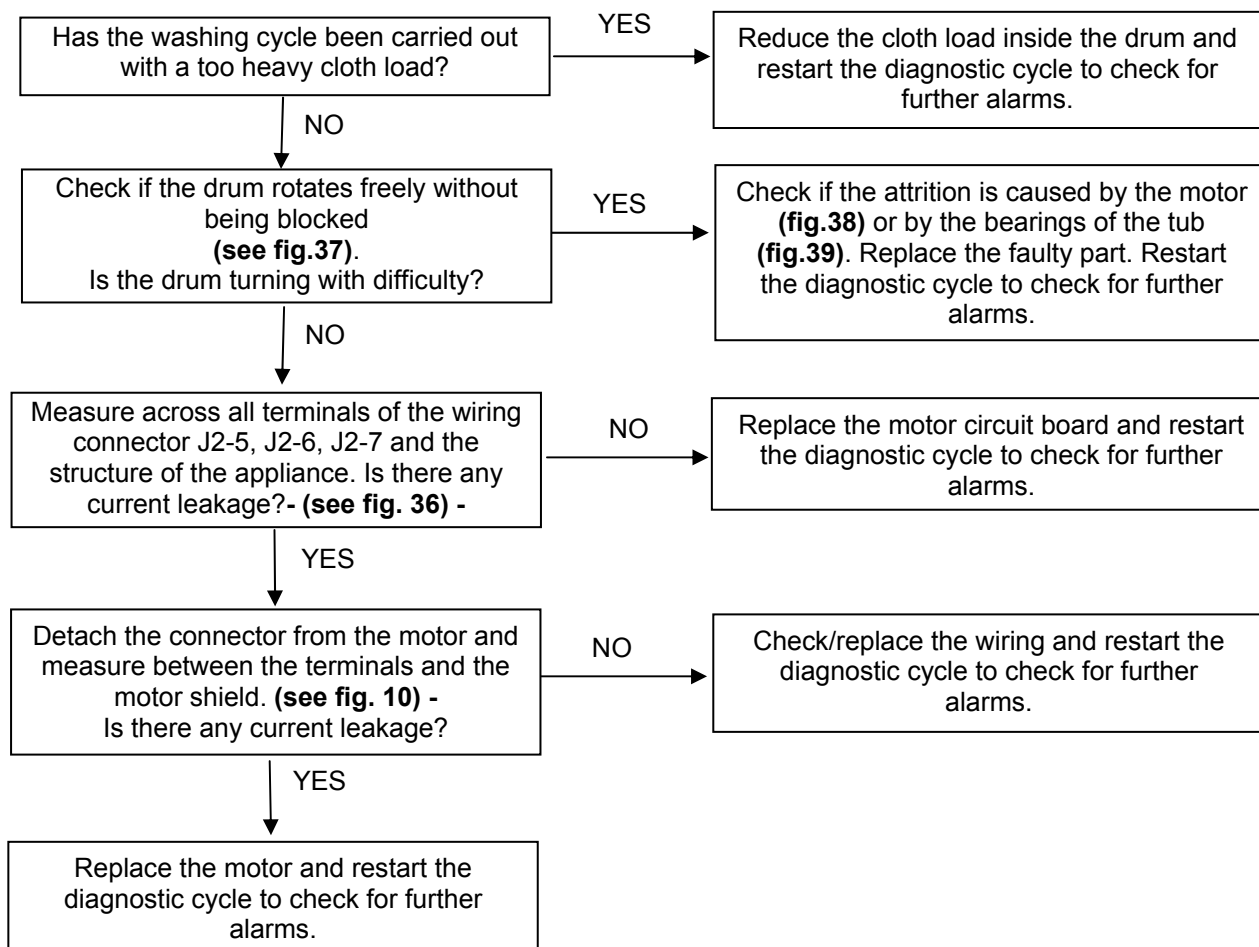


If there are traces of burning on the circuit board, refer to pages 119-120

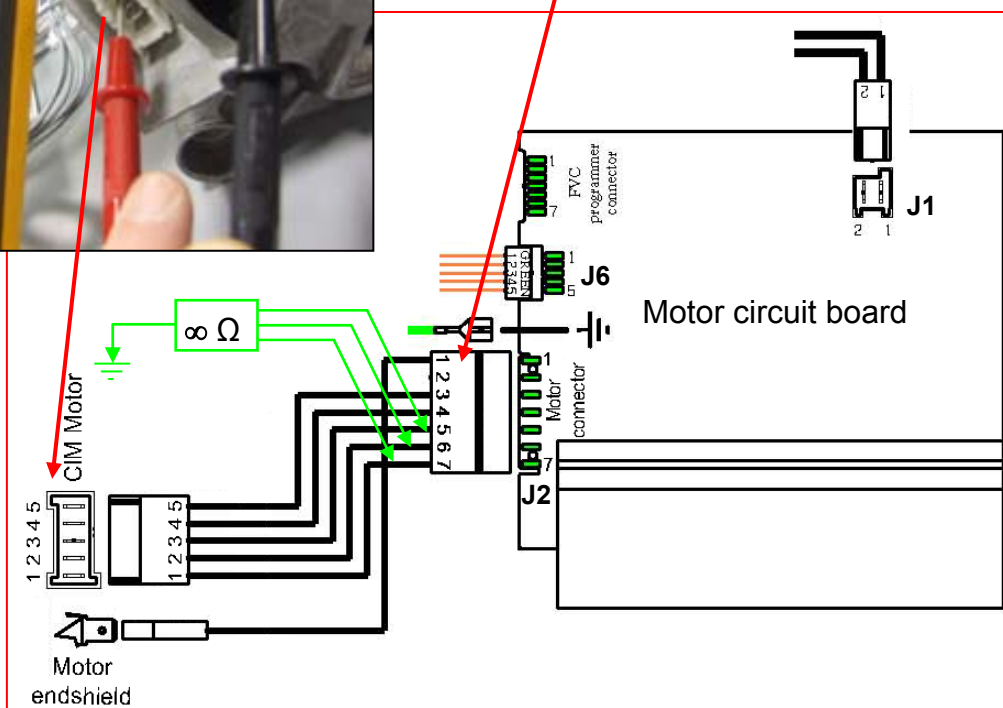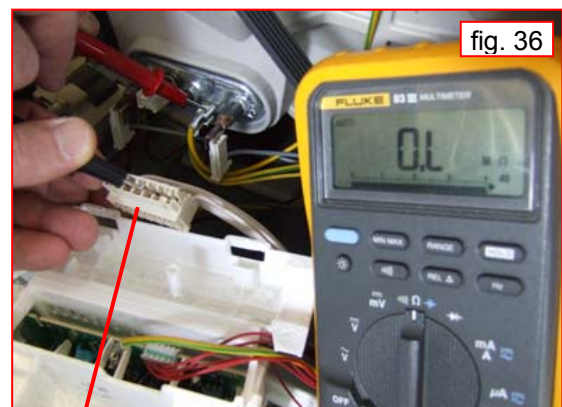
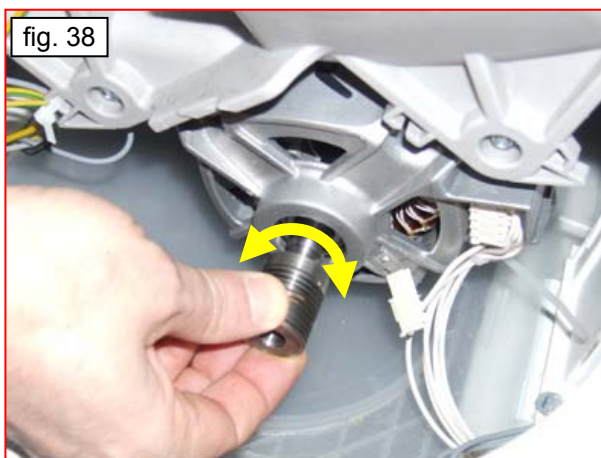


E59	E59: No signal from the tachometric generator	E59
	The absence of the signal must last at least 3 seconds	

Tests to be performed:




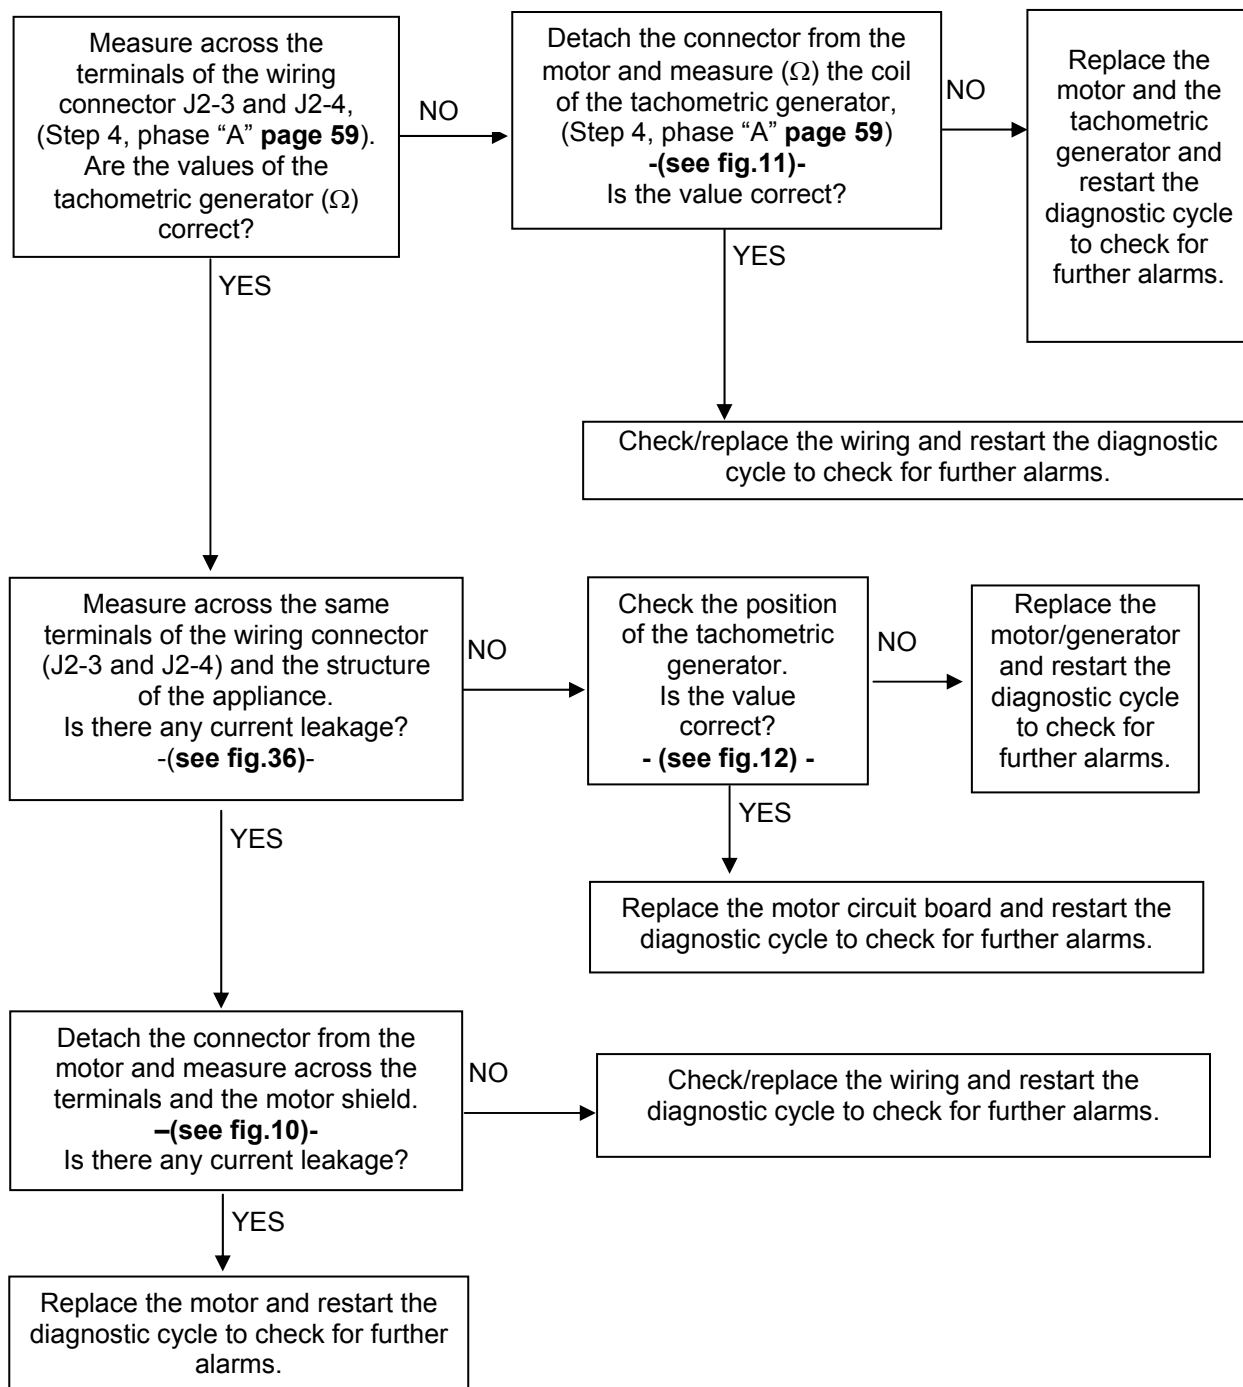


If there are traces of burning on the circuit board, refer to pages 119-120

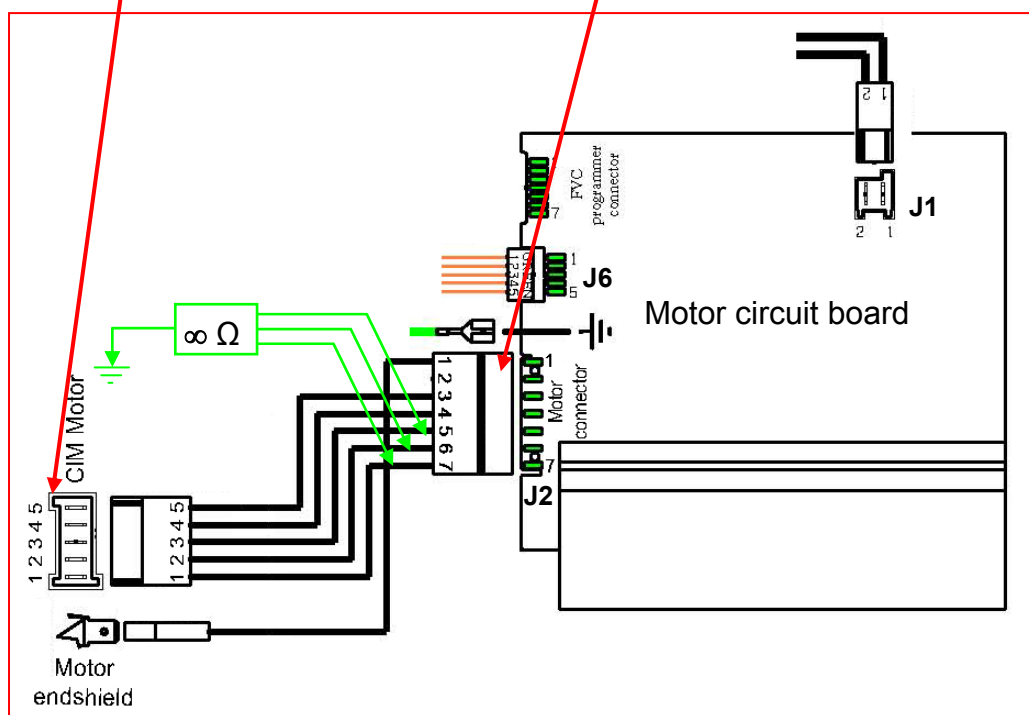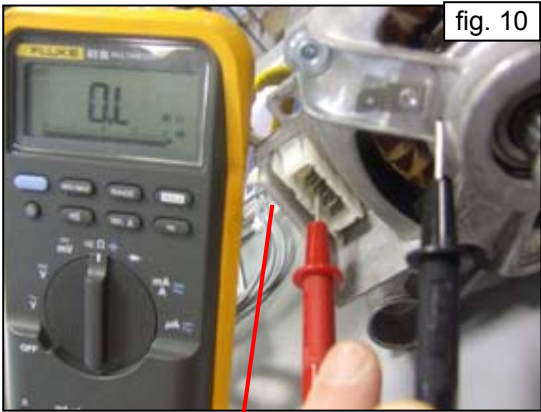



E5A	E5A: Overheating of the Inverter dissipator The dissipator exceeds the temperature of 88°C	E5A
------------	--	------------

Tests to be performed:

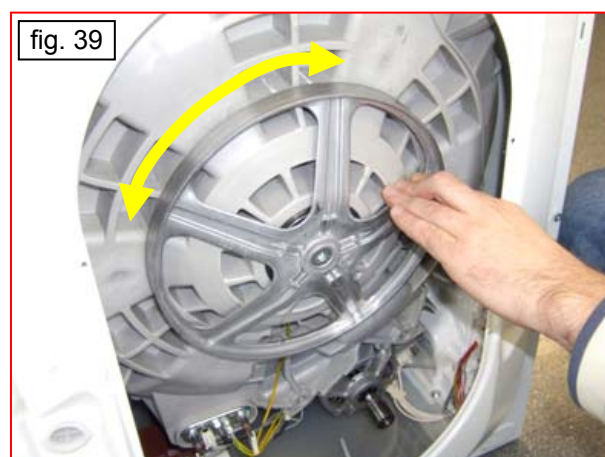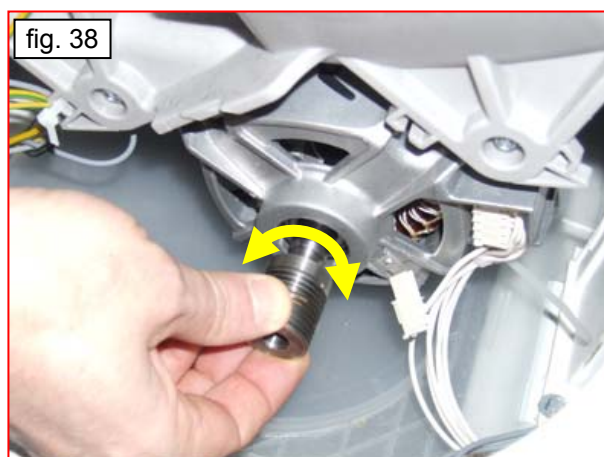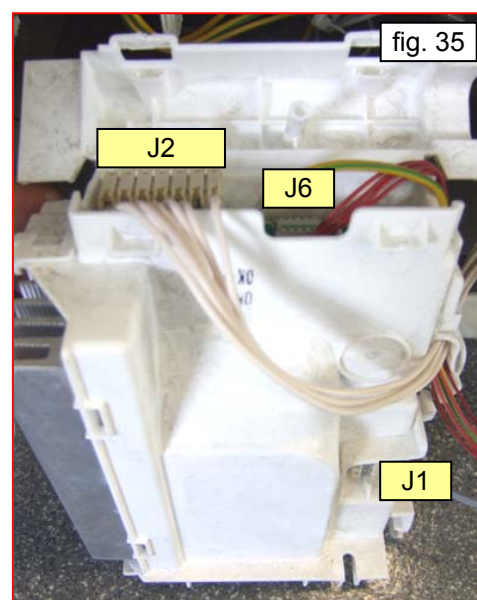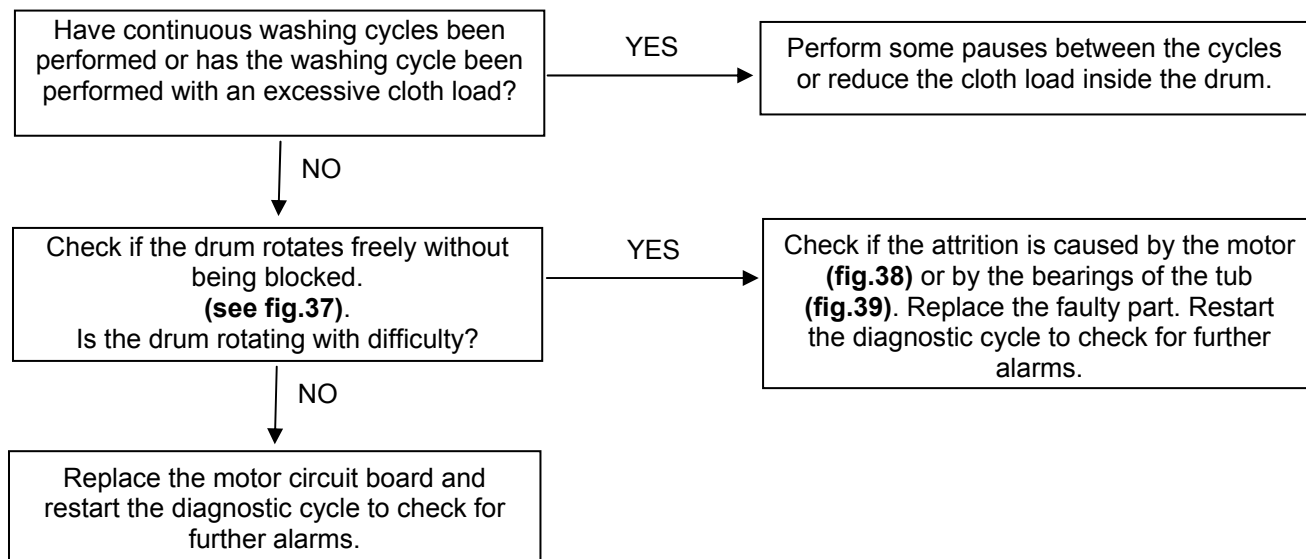

E5H	E5H: The power supply of the Inverter board is too low (lower than 175V)	E5H
	The voltage must remain under 175V for at least 5 seconds	


Tests to be performed:

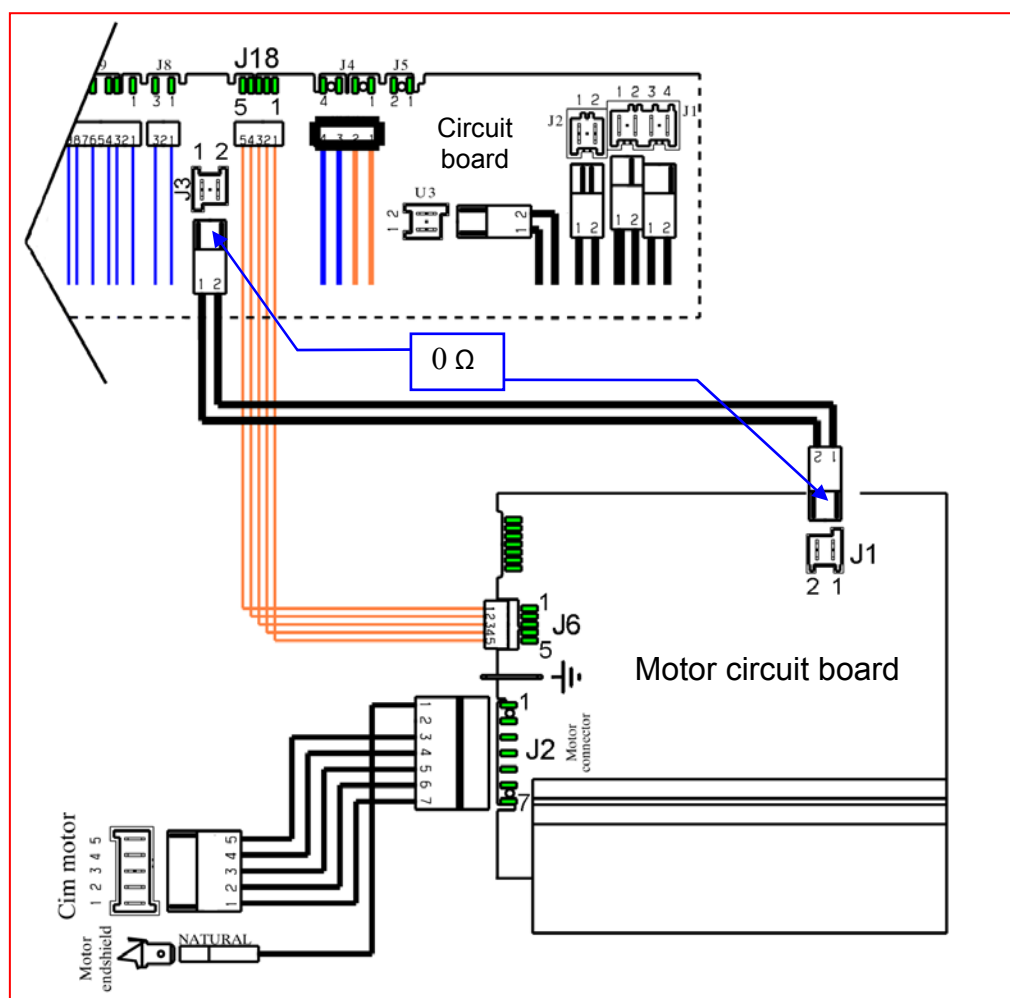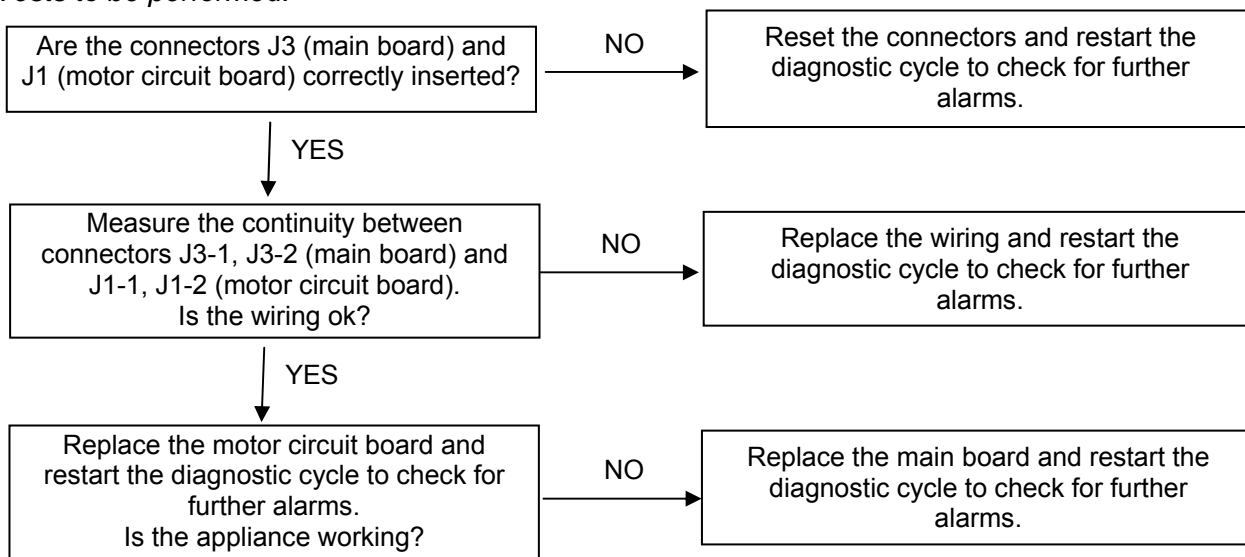

If there are traces of burning on the circuit board, refer to pages 119-120



E5C	E5C: The power supply of the Inverter board is too high (higher than 430V)	E5C
	The voltage must remain above 430V for at least 5 seconds	

Tests to be performed:

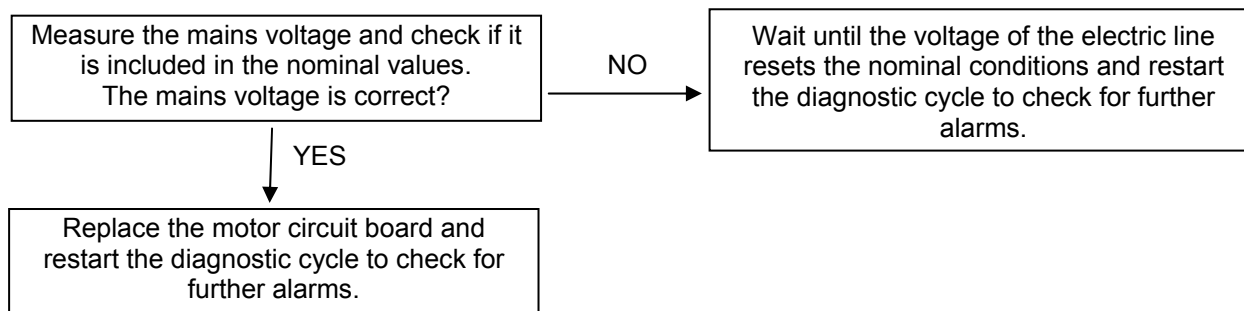

E5d	E5d: Data transfer error between Inverter board and main board	E5d
	The failed transfer must last at least 2sec.	

Tests to be performed:

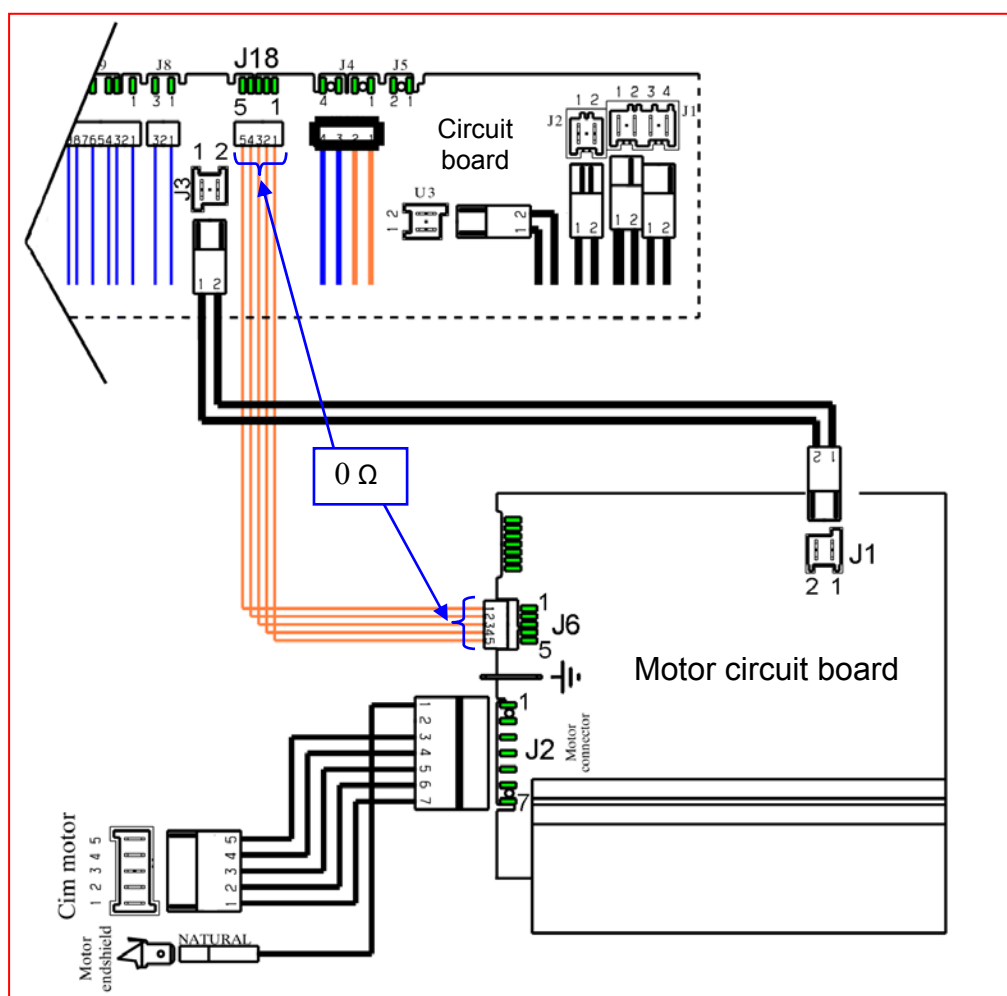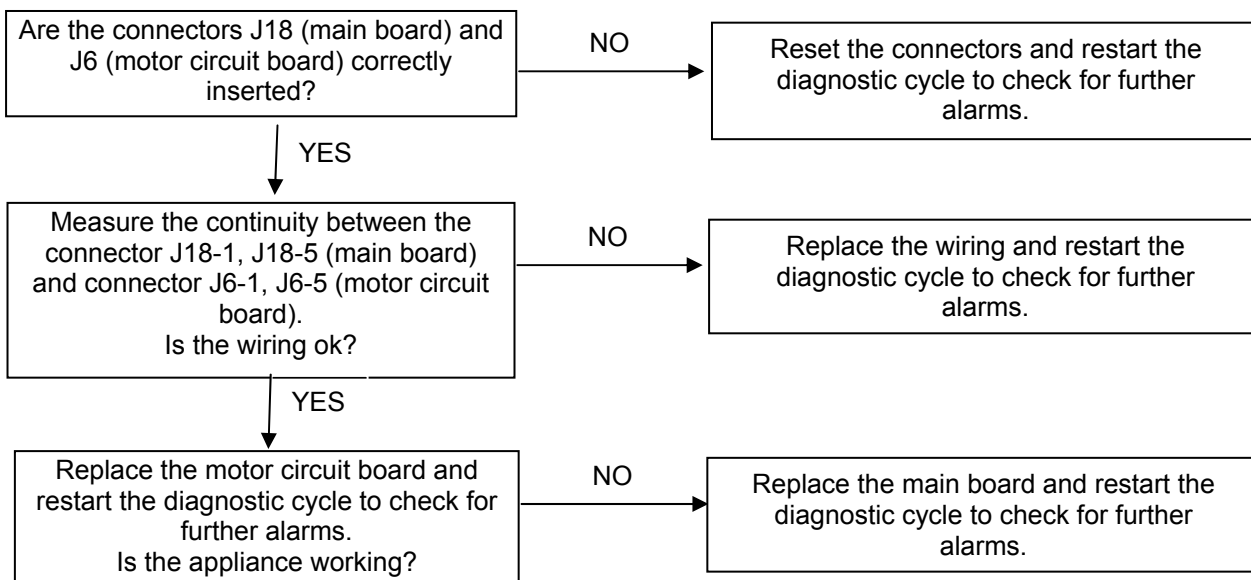

If there are traces of burning on the circuit board, refer to pages 119-120

E5E	E5E: Wrong communication between Inverter board and main board	E5E
	Communication protocol between the two boards not aligned	

Tests to be performed:

Replace the motor circuit board and restart the diagnostic cycle to check for further alarms.




E5F	E5F: The Inverter board does not start the motor	E5F

Tests to be performed:


Replace the motor circuit board and restart the diagnostic cycle to check for further alarms.

E61	E61: Insufficient heating during washing	E61
	Maximum heating time exceeded ➡ SOMETIMES THE ALARM CAN BE CAUSED BY THE POWER VOLTAGE TOO LOW!	

Tests to be performed:

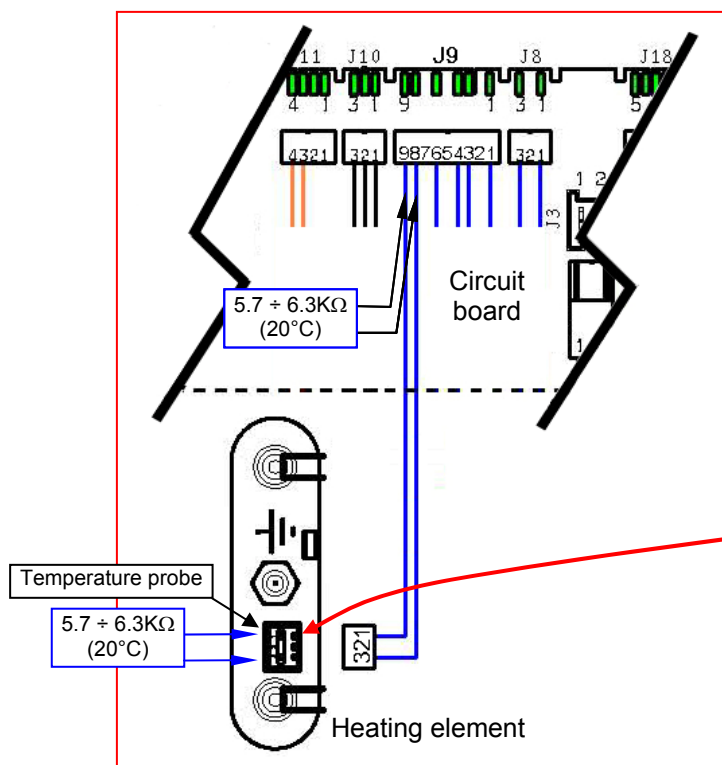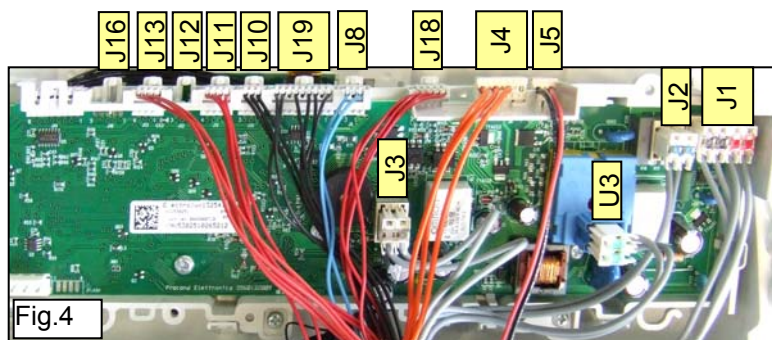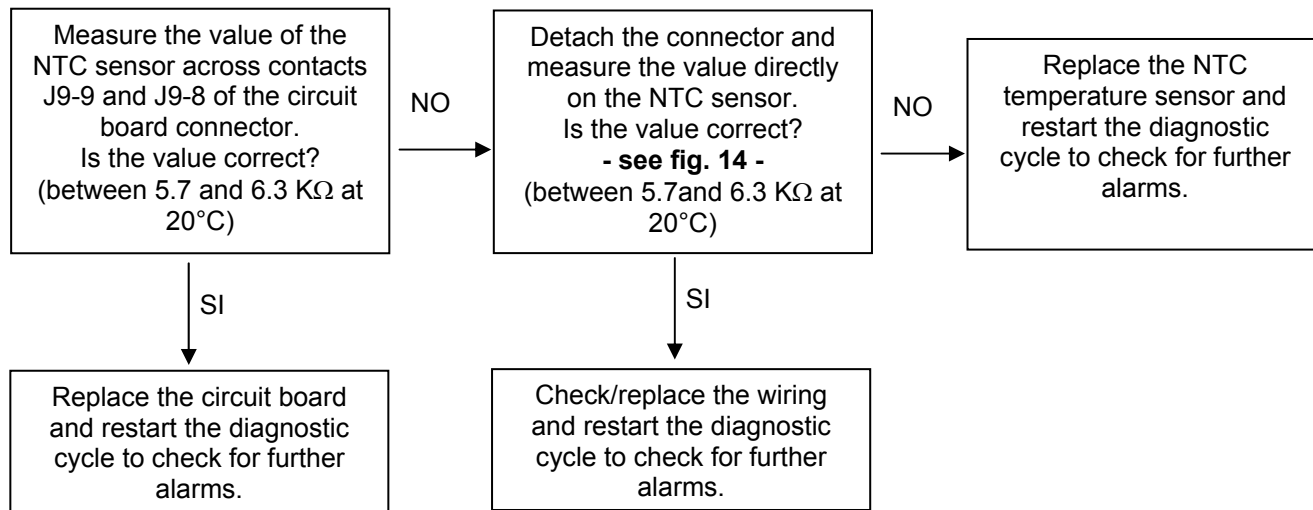


If there are traces of burning on the circuit board, refer to pages 119-120

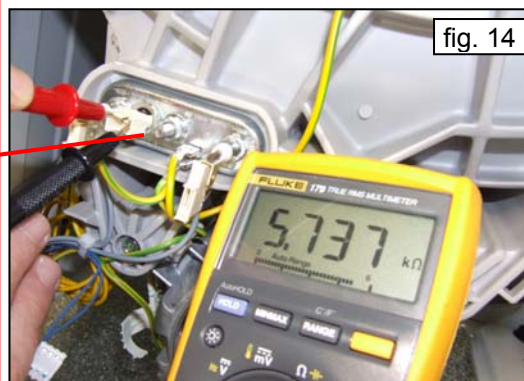




E62	E62: Overheating during washing (version WM) The temperature of the NTC sensor exceeds 88°C for more than 5 minutes.	E62
------------	--	------------

Tests to be performed:

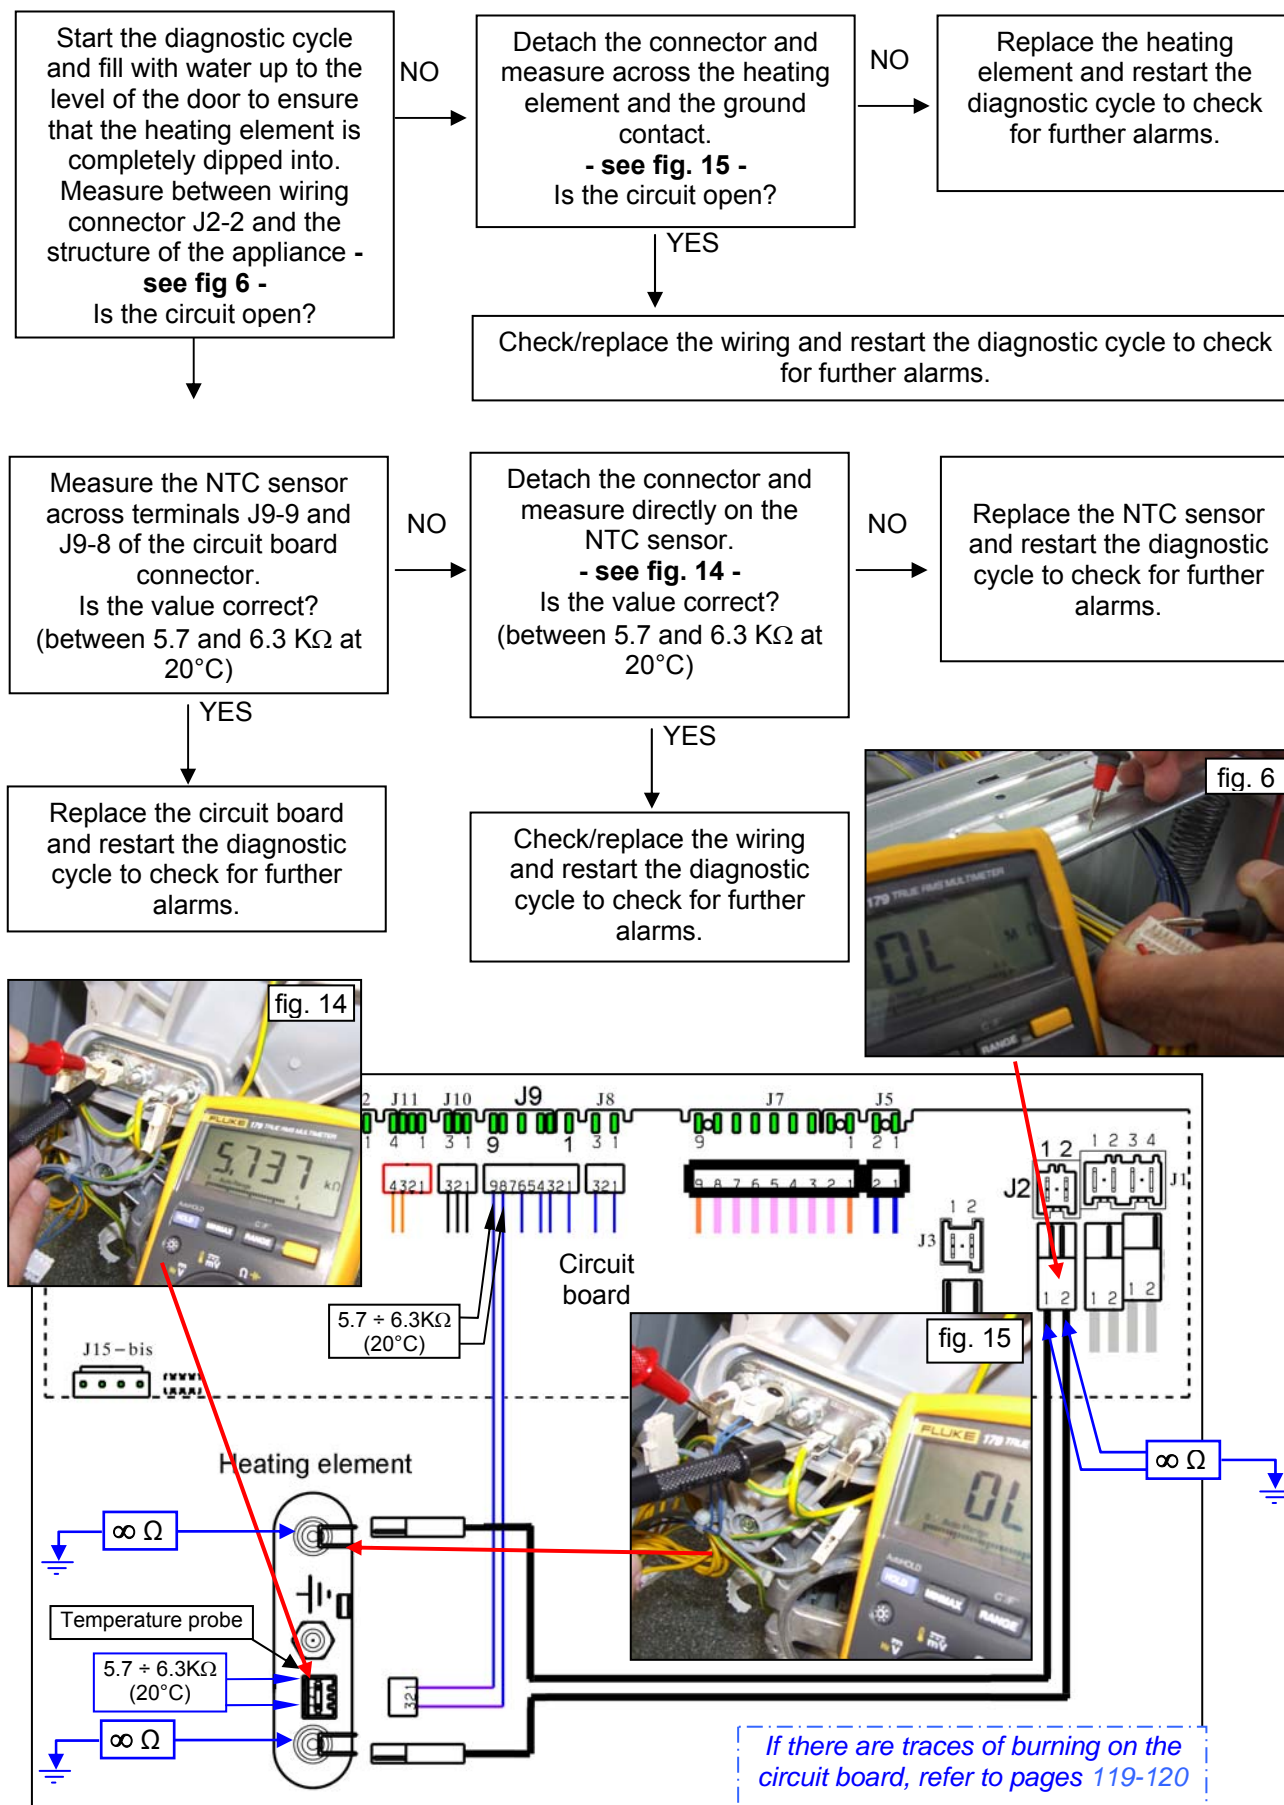


E62	E62: Overheating during washing (version WD) The temperature of the NTC sensor exceeds 88°C for more than 5 minutes.	E62
------------	--	------------

Tests to be performed:

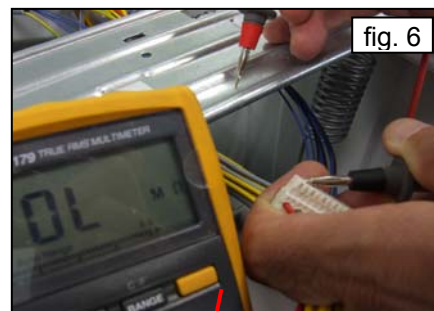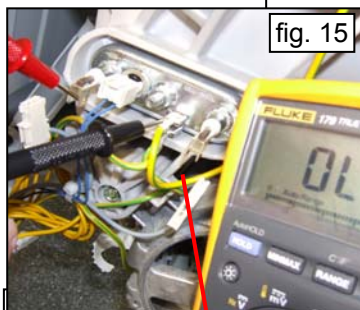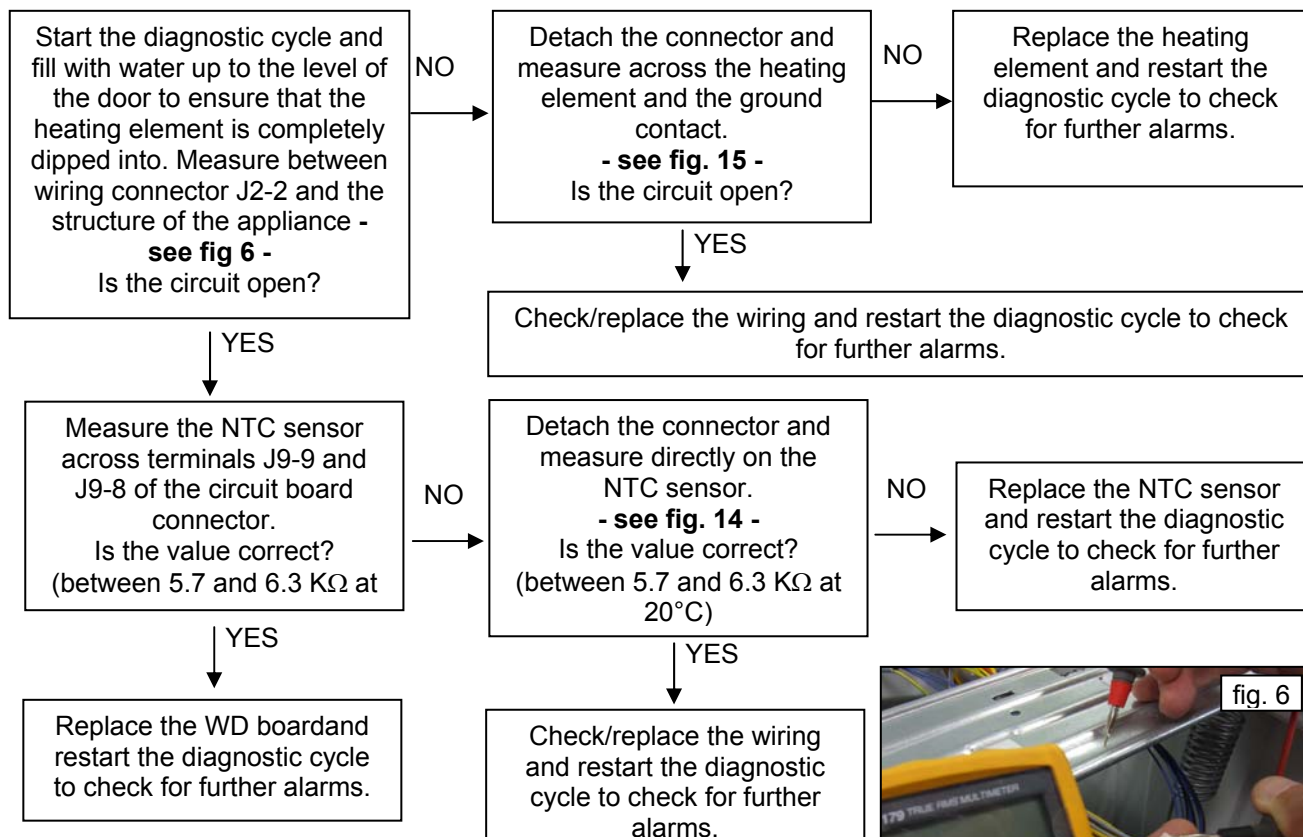

If there are traces of burning on the circuit board, refer to page 119-120

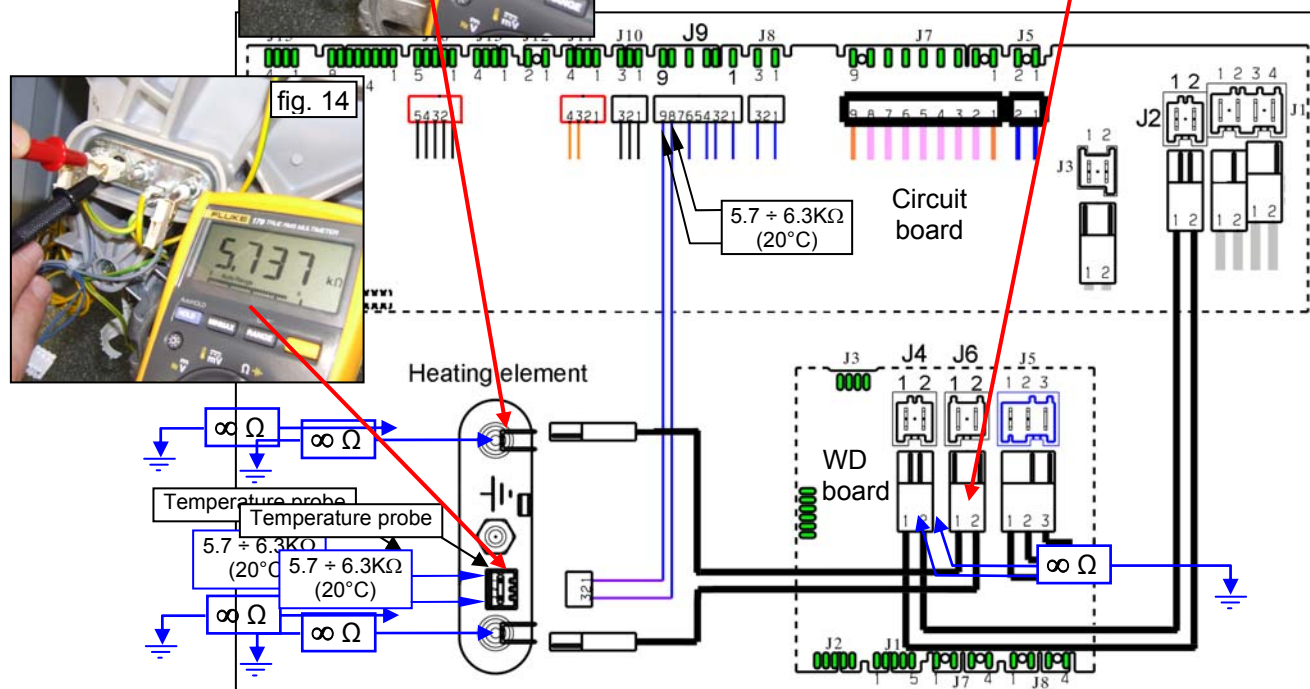

E66

E66: The contacts of the heating element power relay are always closed (version WM)

E66

Tests to be performed:

Measure across connector J2-1/J2-2 on the circuit board and the structure of the appliance. **(Fig. 6)** Is there any current leakage?

NO

Replace the circuit board and restart the diagnostic cycle to check for further alarms.

YES

Detach the connector and measure across the heating element and the ground contact. - **fig. 15** - Is the circuit open?

NO

Replace the heating element and restart the diagnostic cycle to check for further alarms.

YES

Check/replace the wiring and restart the diagnostic cycle to check for further alarms.

If there are traces of burning on the circuit board, refer to page 119-120

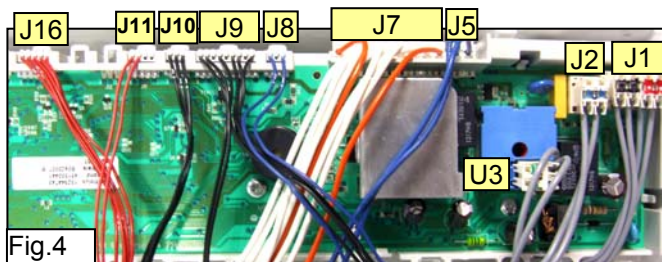


Fig.4



fig. 6


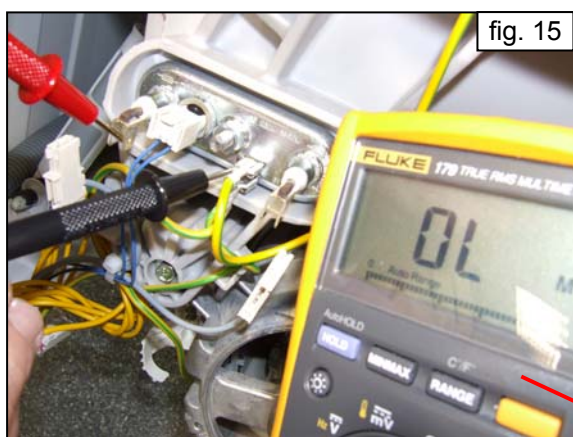


fig. 15

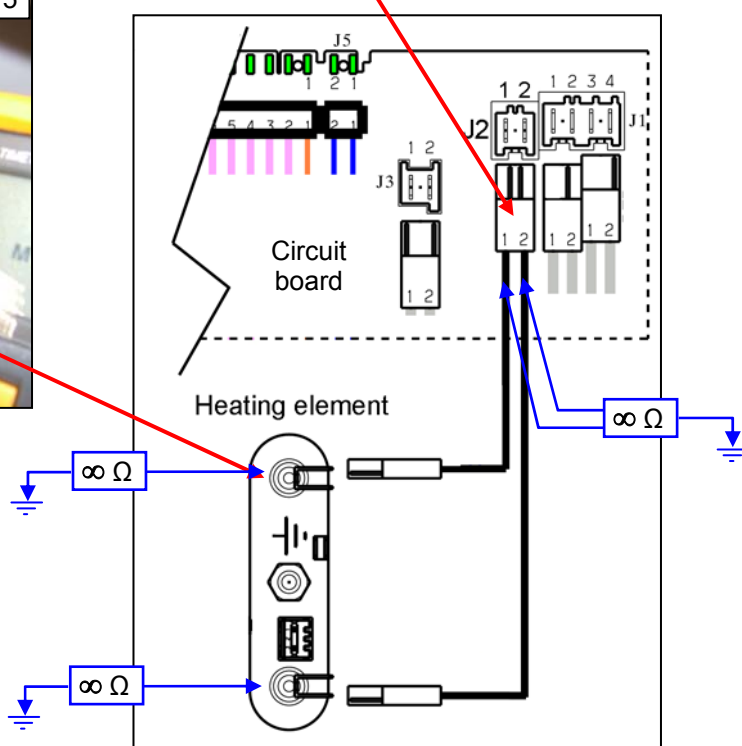


E66




E66: The contacts of the heating element power relay are always closed (version WD)

E66

Tests to be performed:

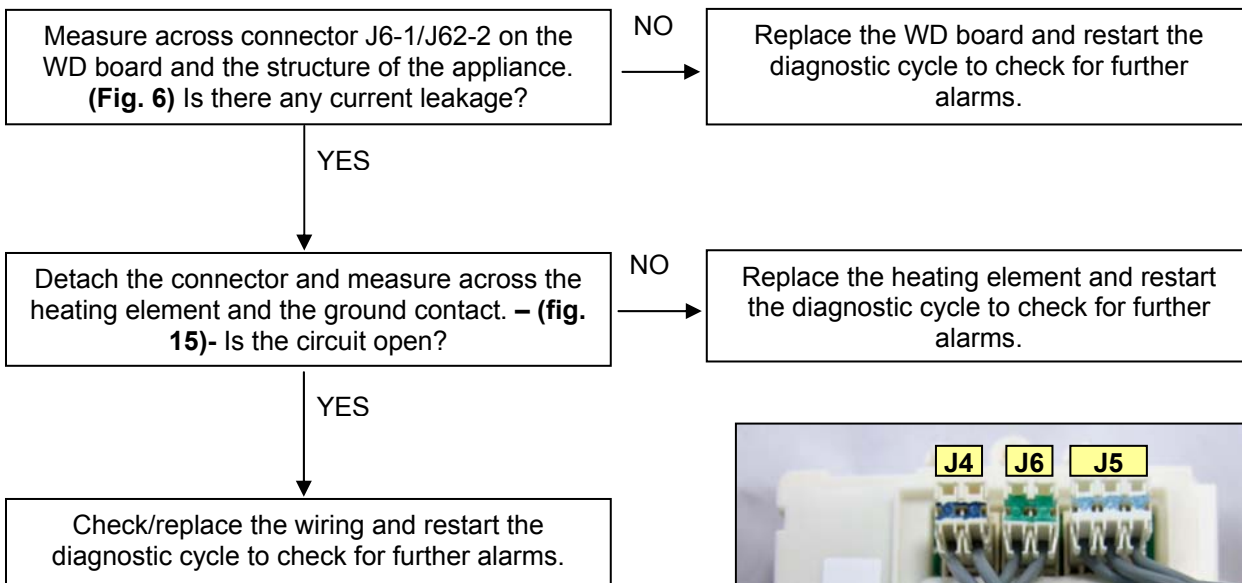

If there are traces of burning on the circuit board, refer to pages 119-120

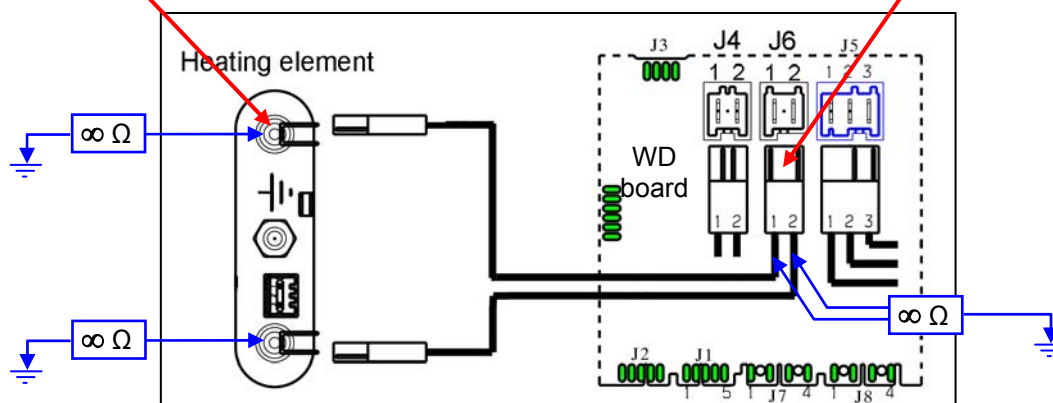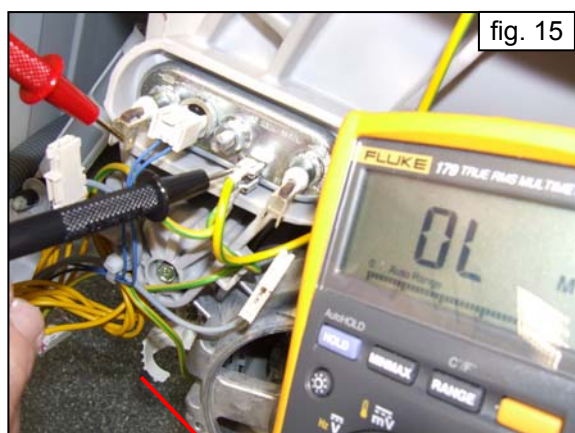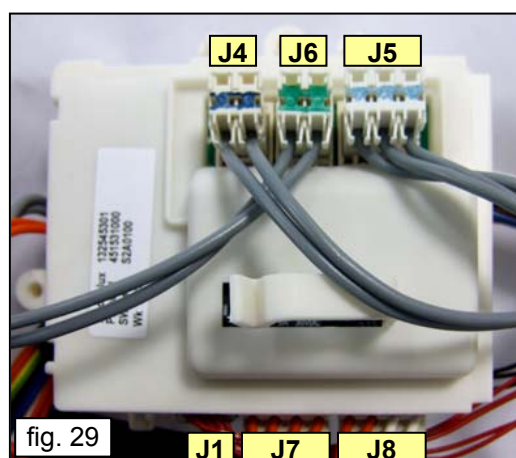

Tests to be performed:

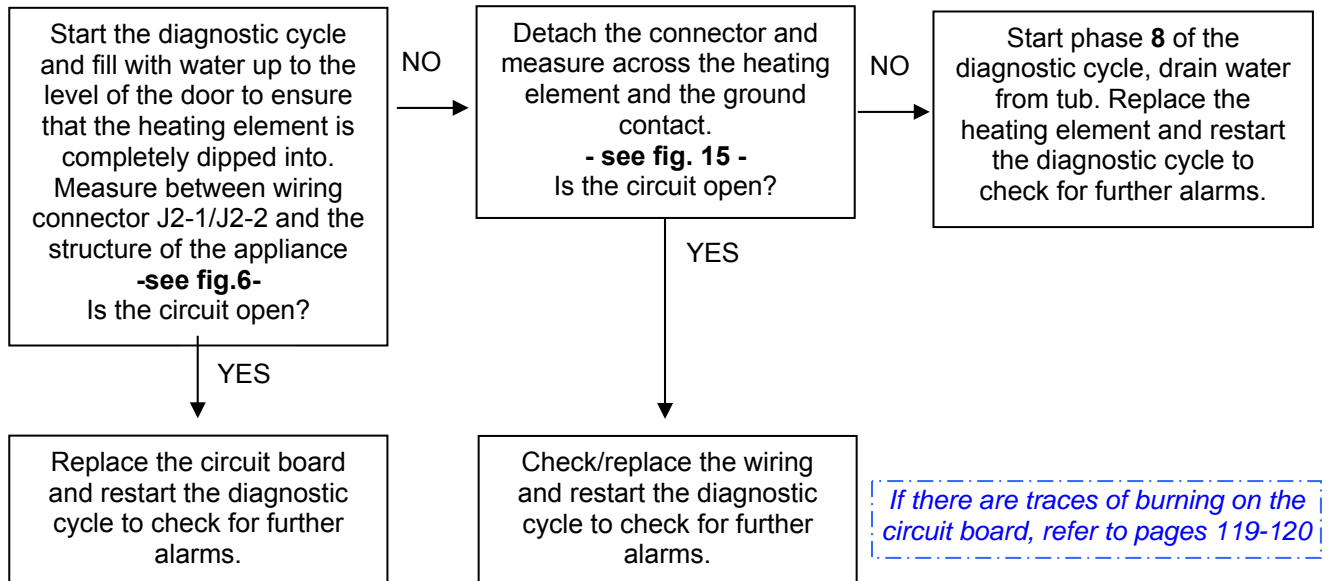


fig. 6

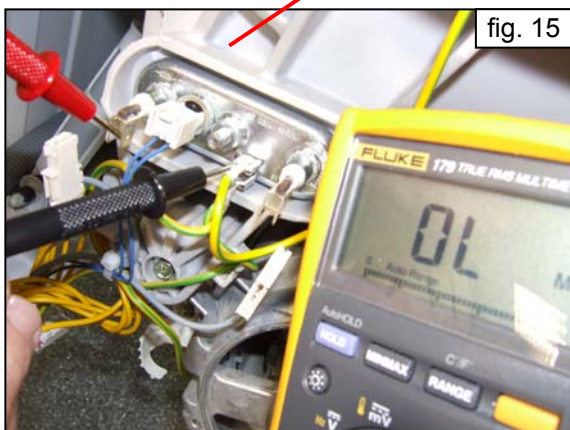
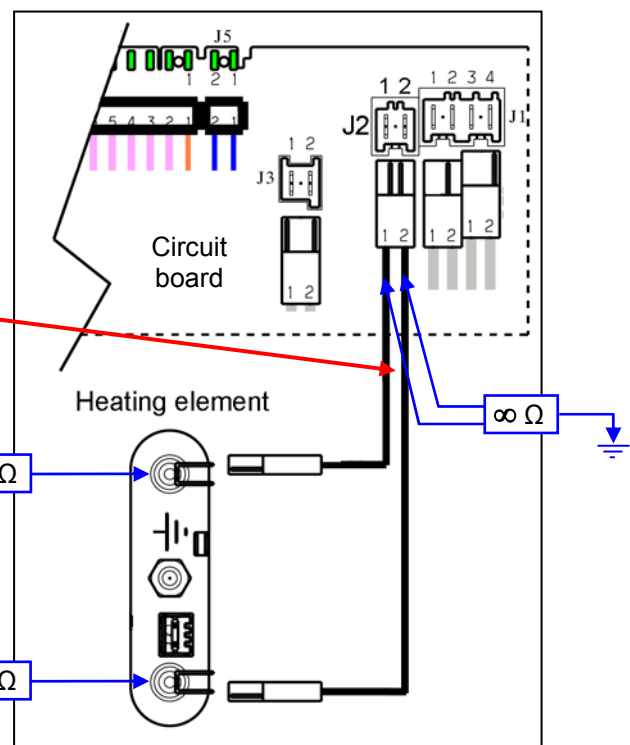


fig. 15





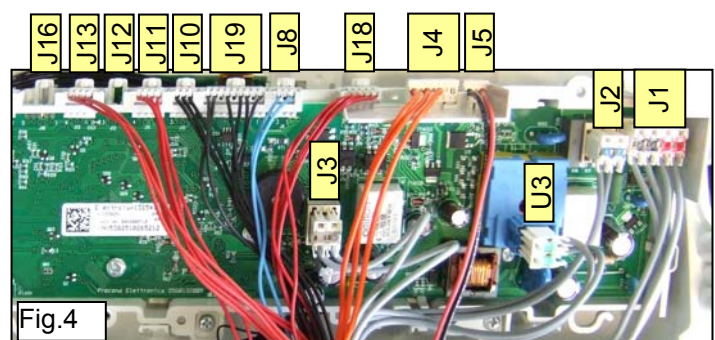





Fig.4

Tests to be performed:

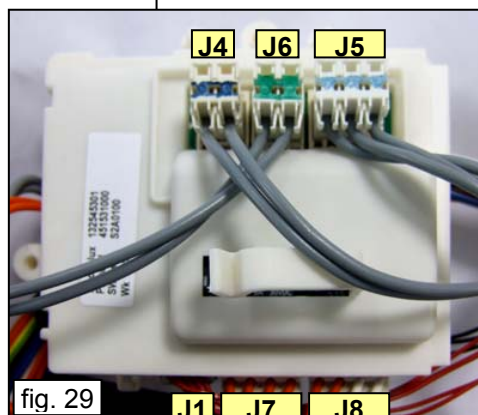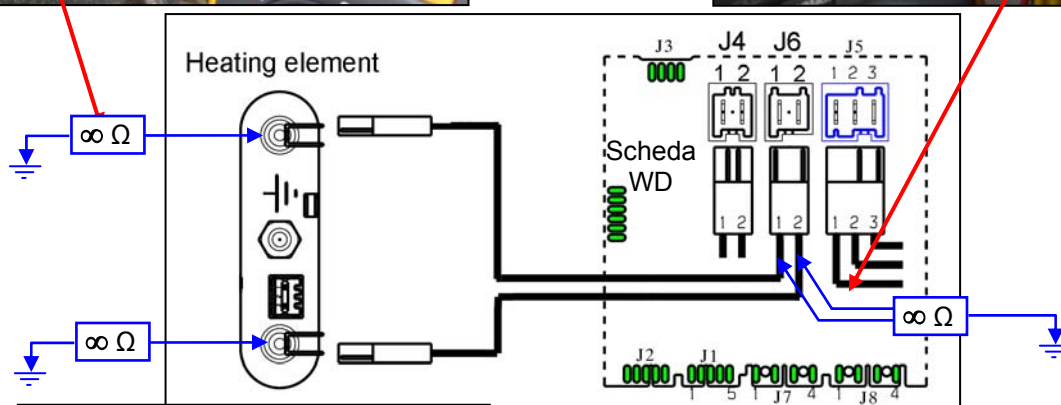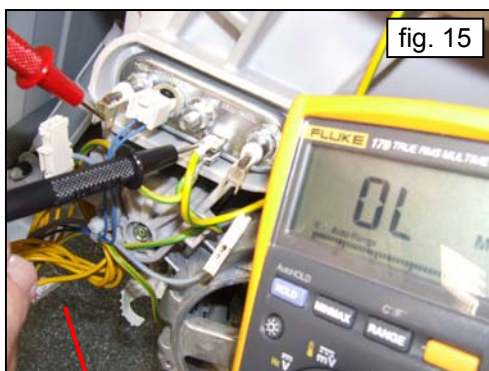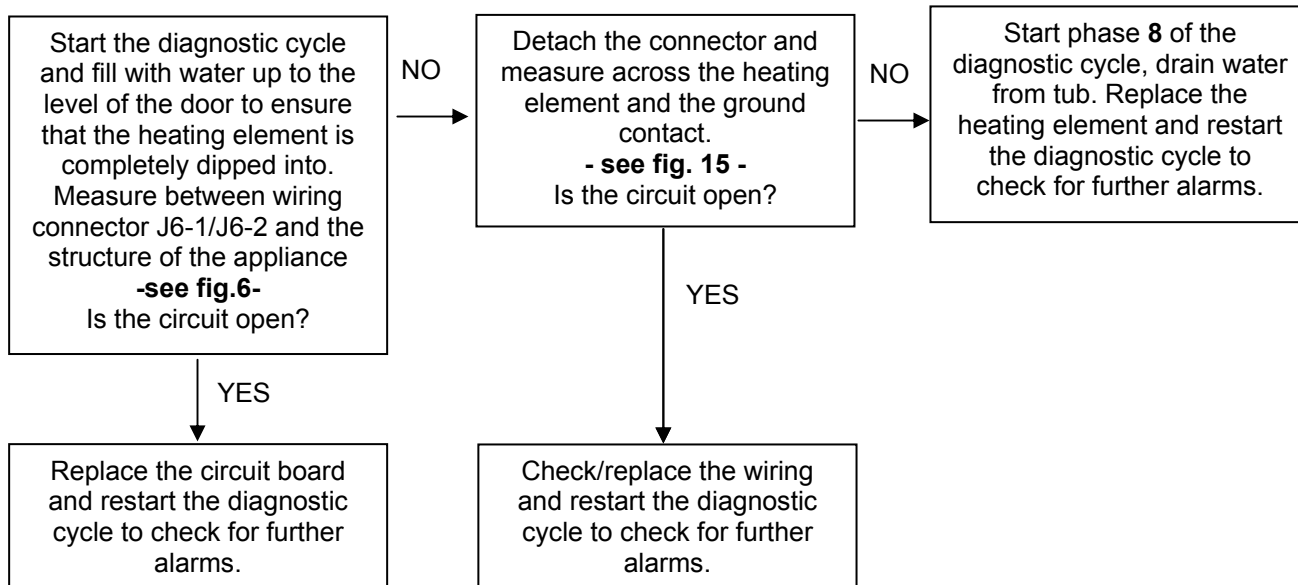





If there are traces of burning on the circuit board, refer to pages 119-120

Tests to be performed:

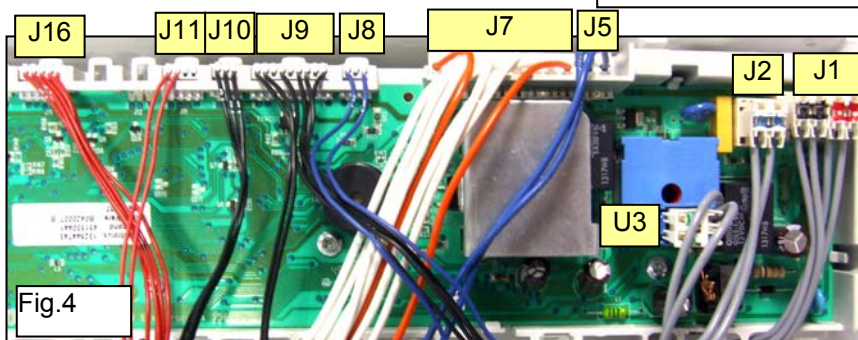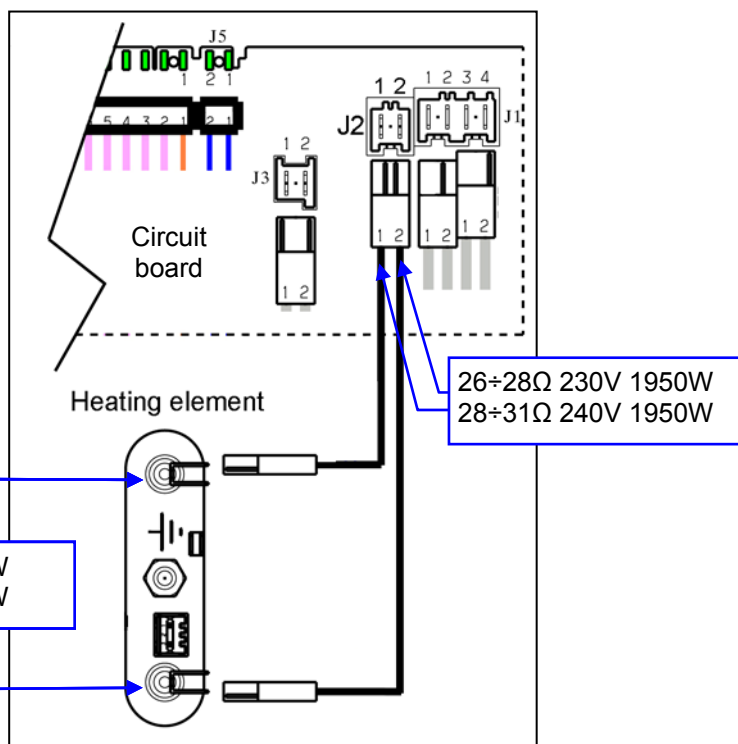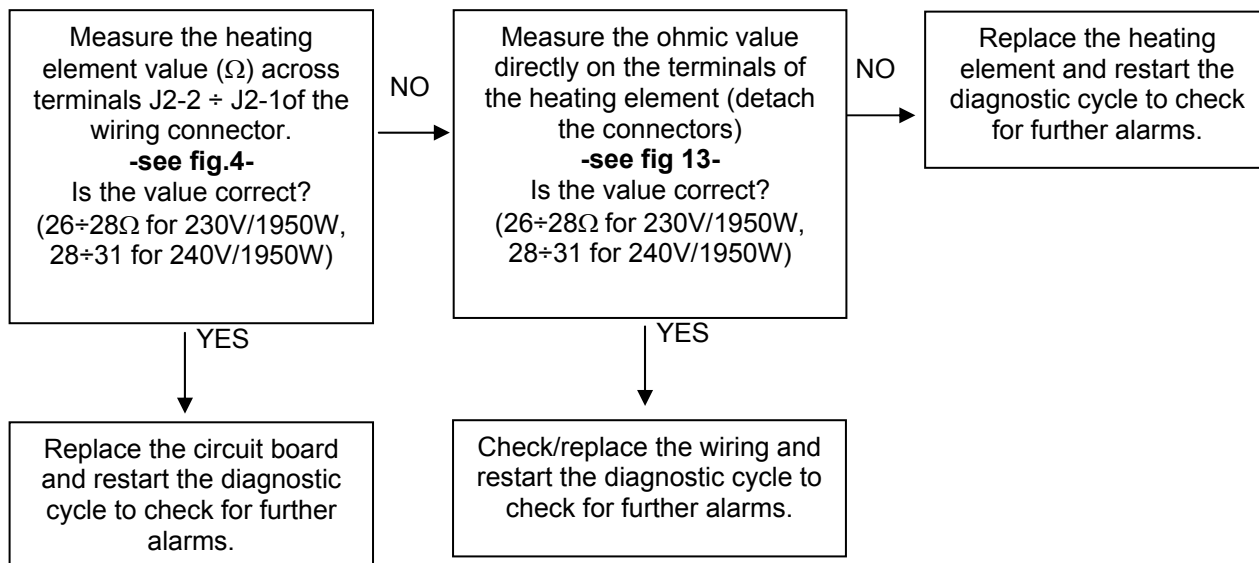

If there are traces of burning on the circuit board, refer to page 119-120


Tests to be performed:

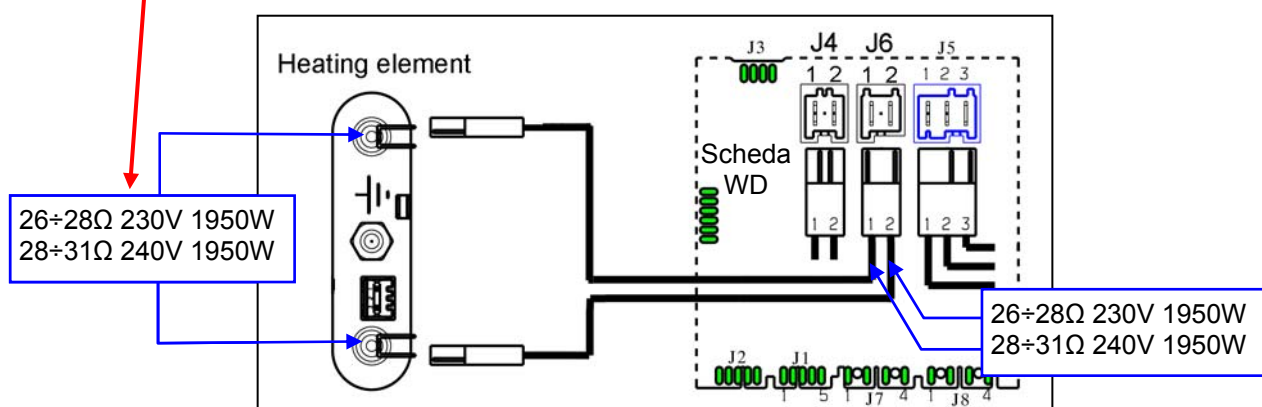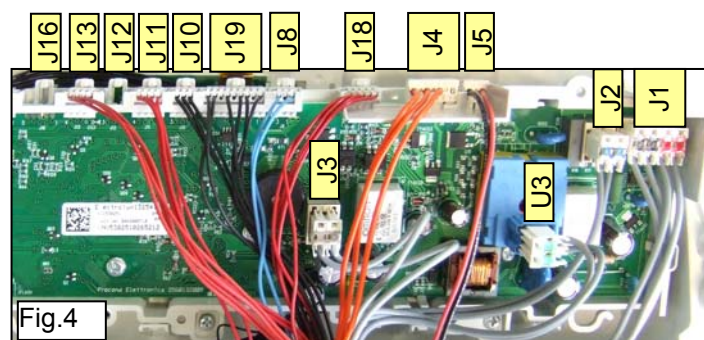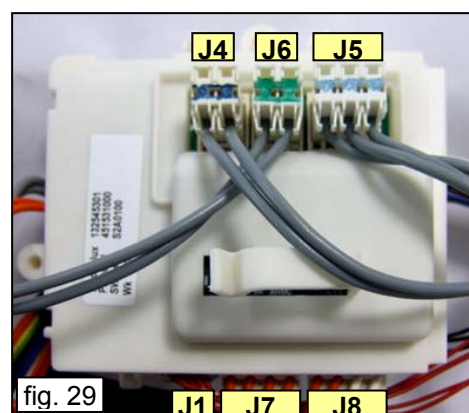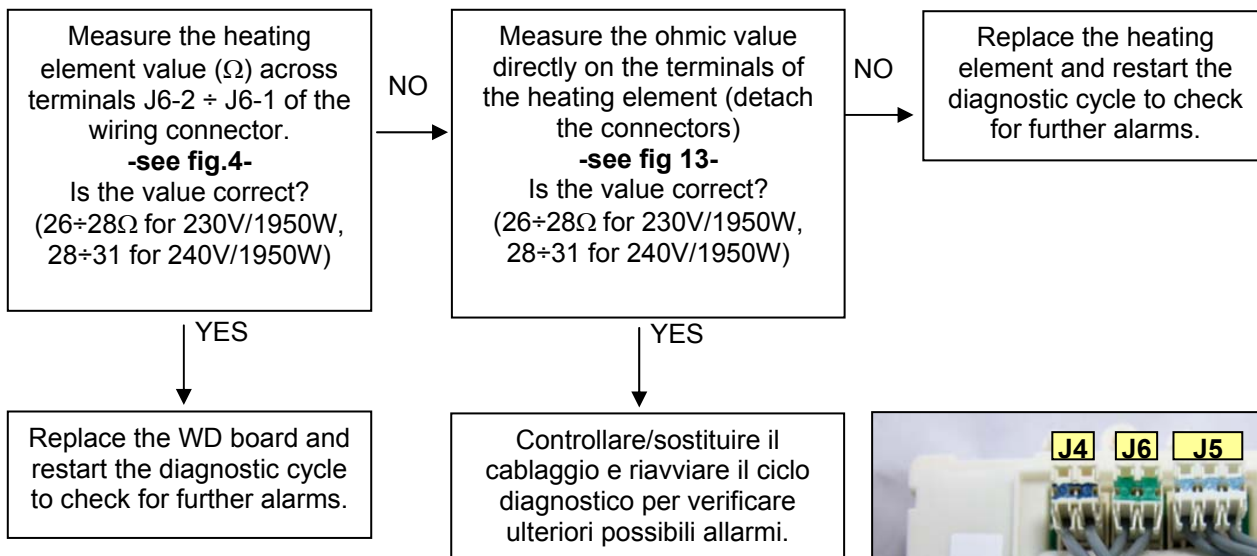

If there are traces of burning on the circuit board, refer to pages 119-120

E71	E71: NTC washing sensor faulty Voltage not within limits (short-circuited or open)	E71
------------	--	------------

Tests to be performed:

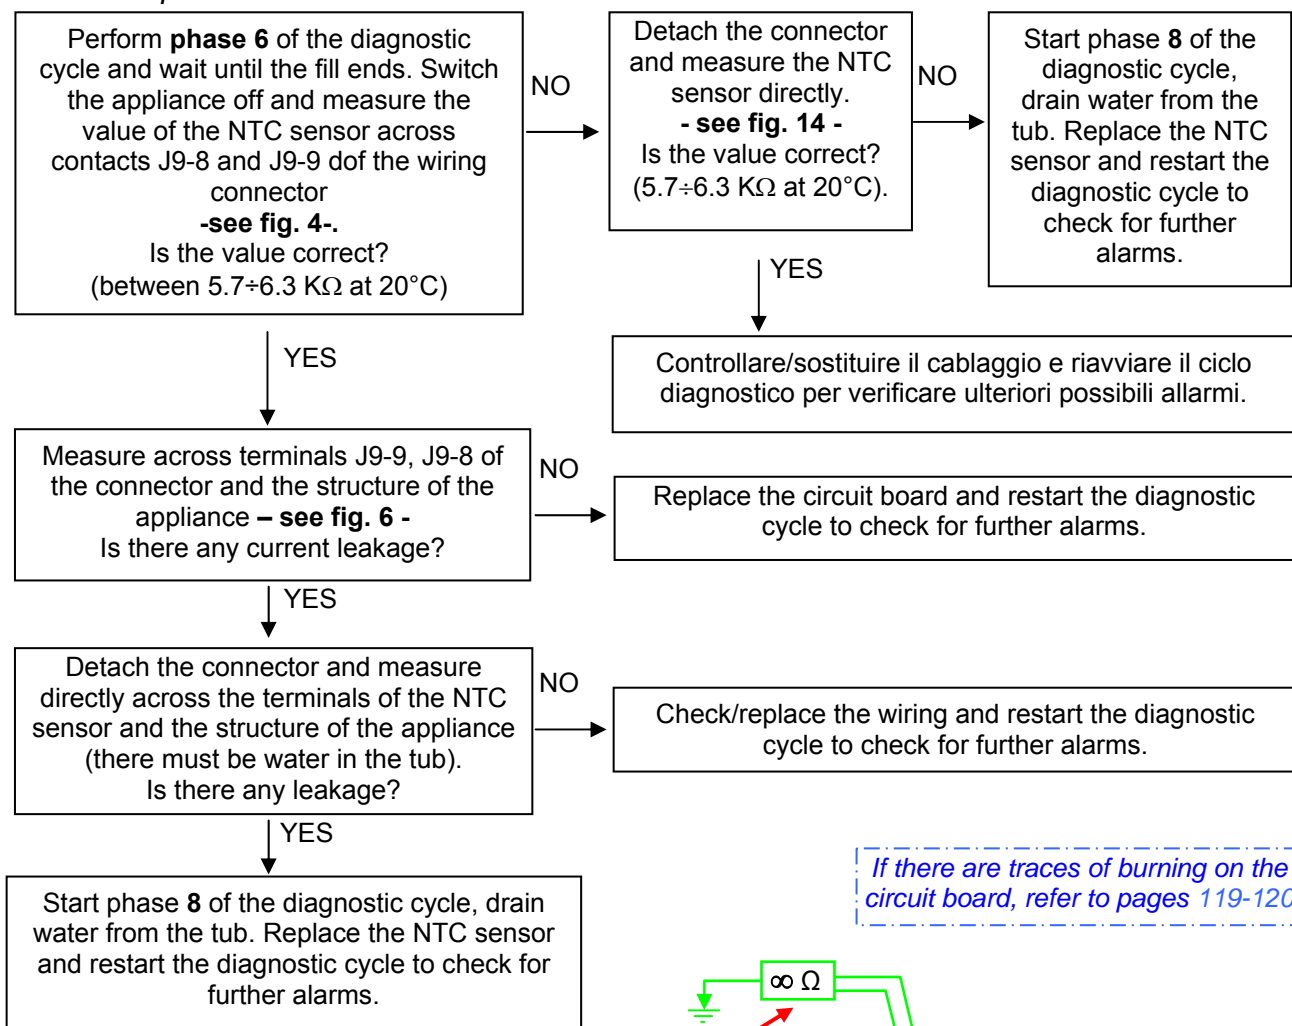

If there are traces of burning on the circuit board, refer to pages 119-120



fig. 6





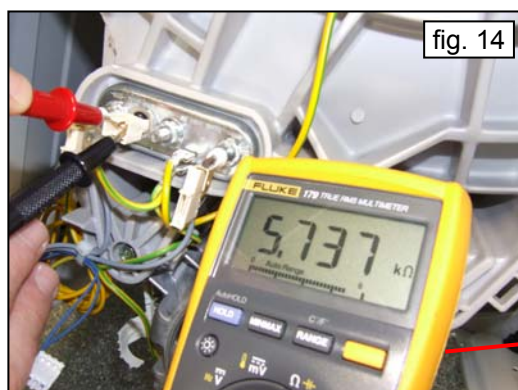


fig. 14

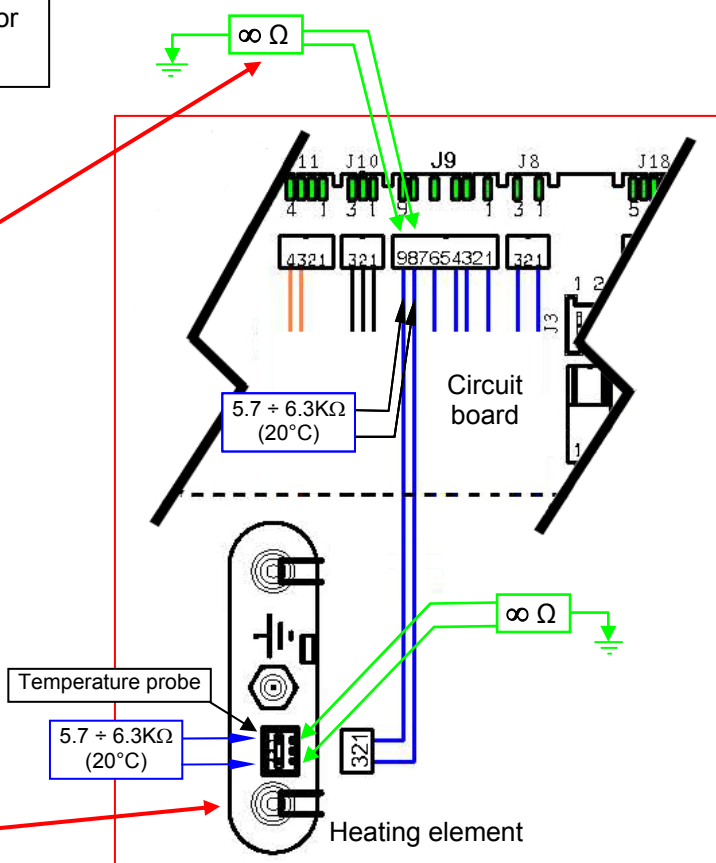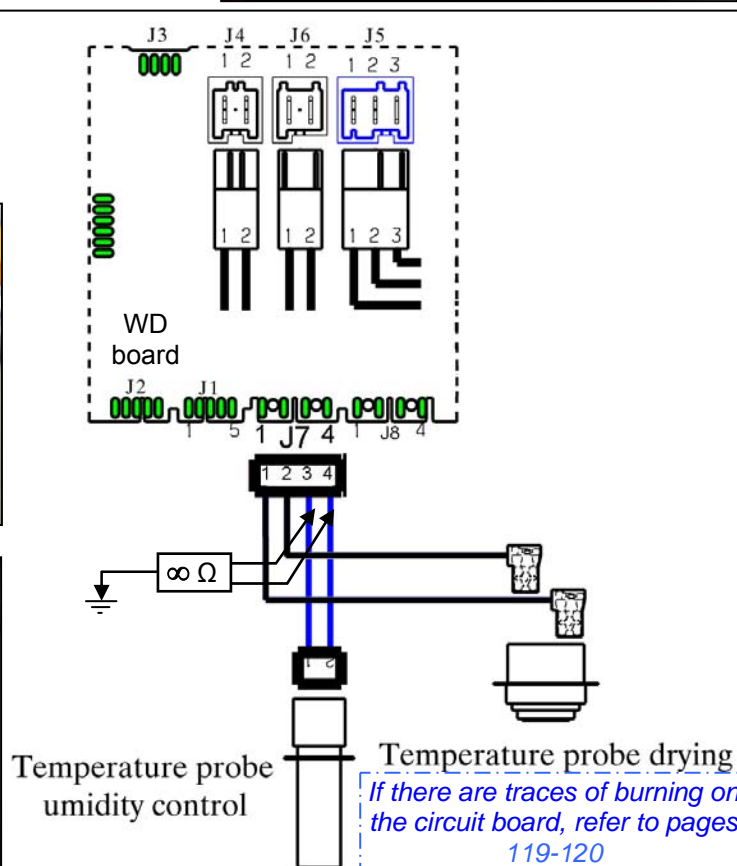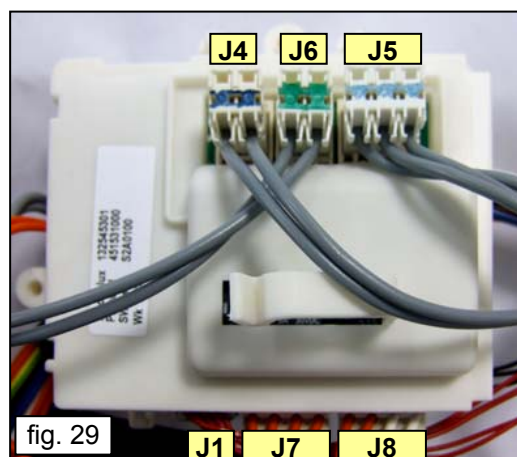





E72	E72: Drying NTC sensor on condenser faulty	E72
	Ohm value of the NTC out of limits	

Tests to be performed:




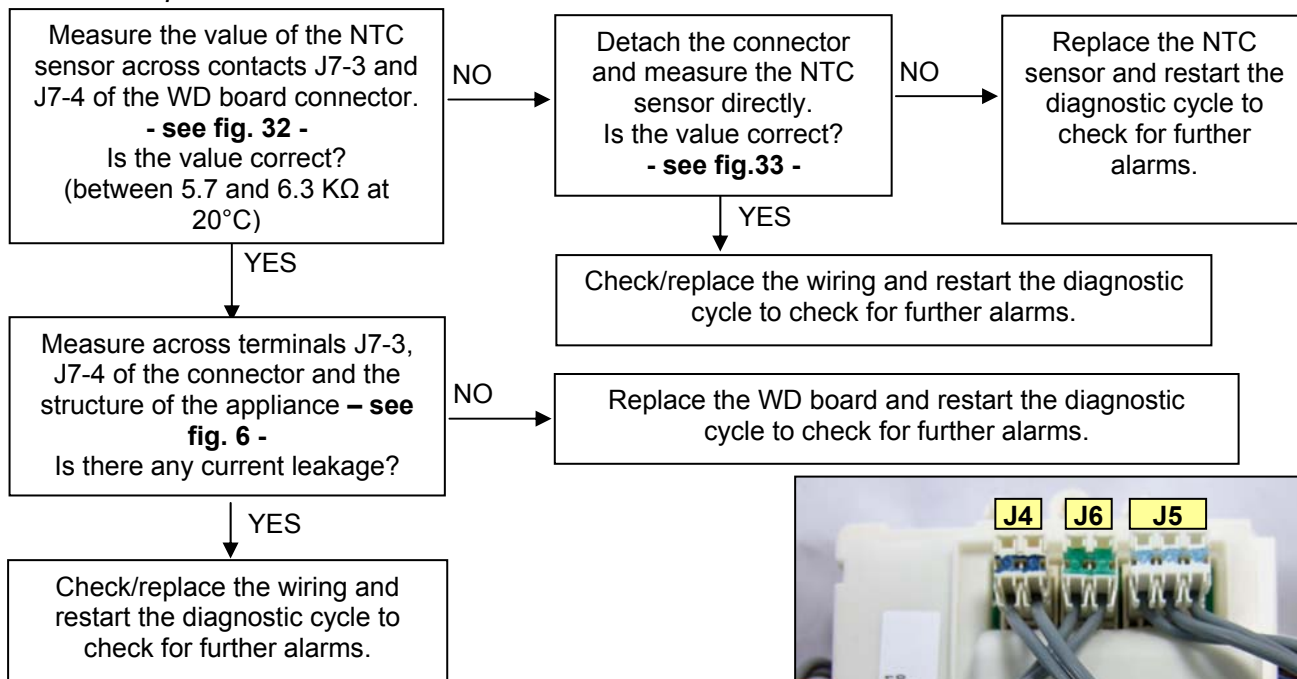


E73	E73: NTC sensor on drying duct faulty	E73
	Ohm value of the NTC out of limits	

Tests to be performed:

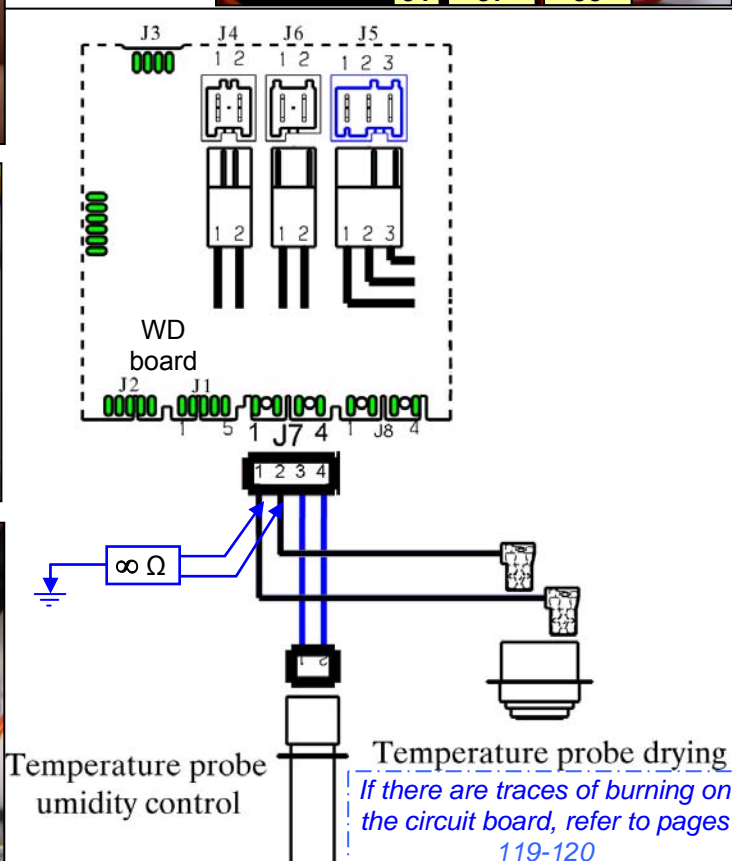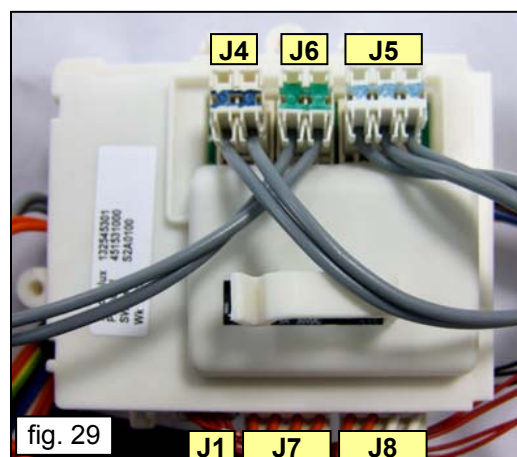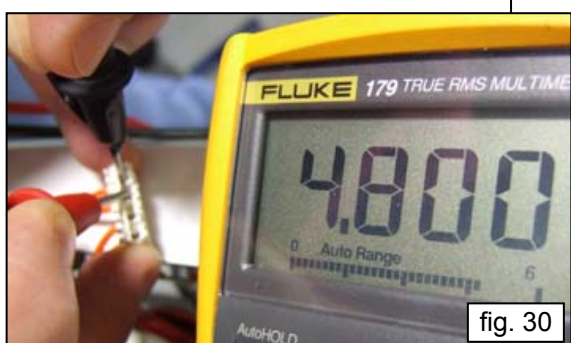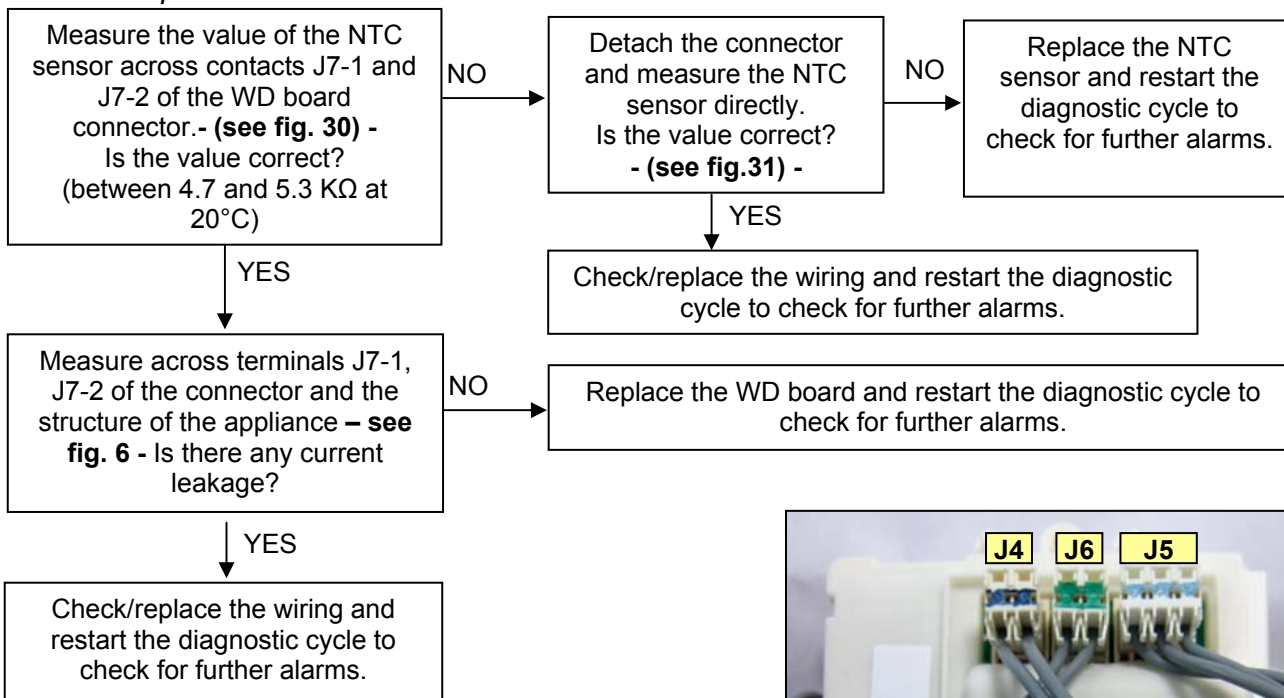


Tests to be performed:

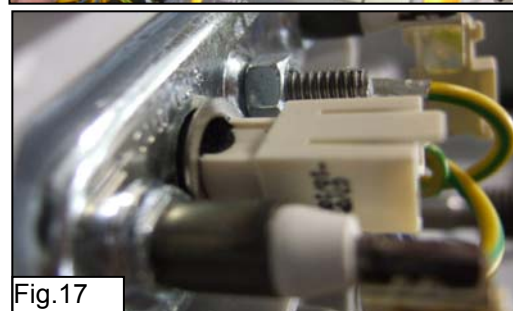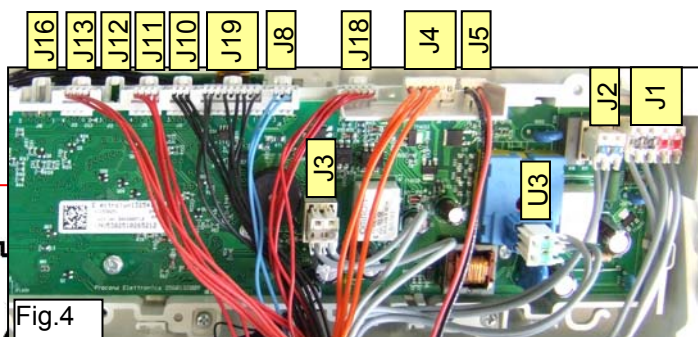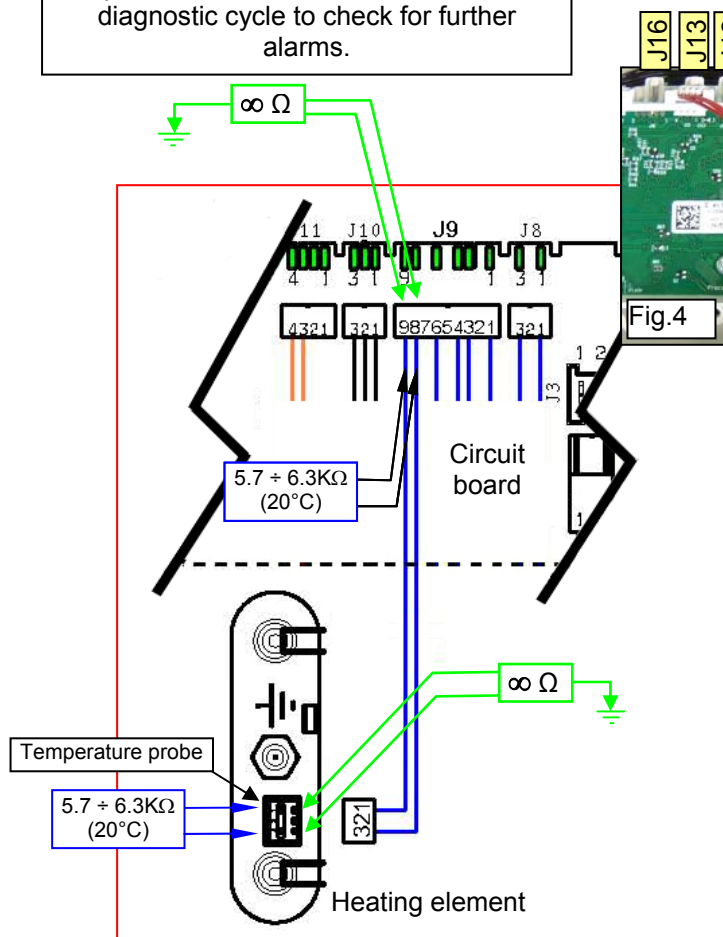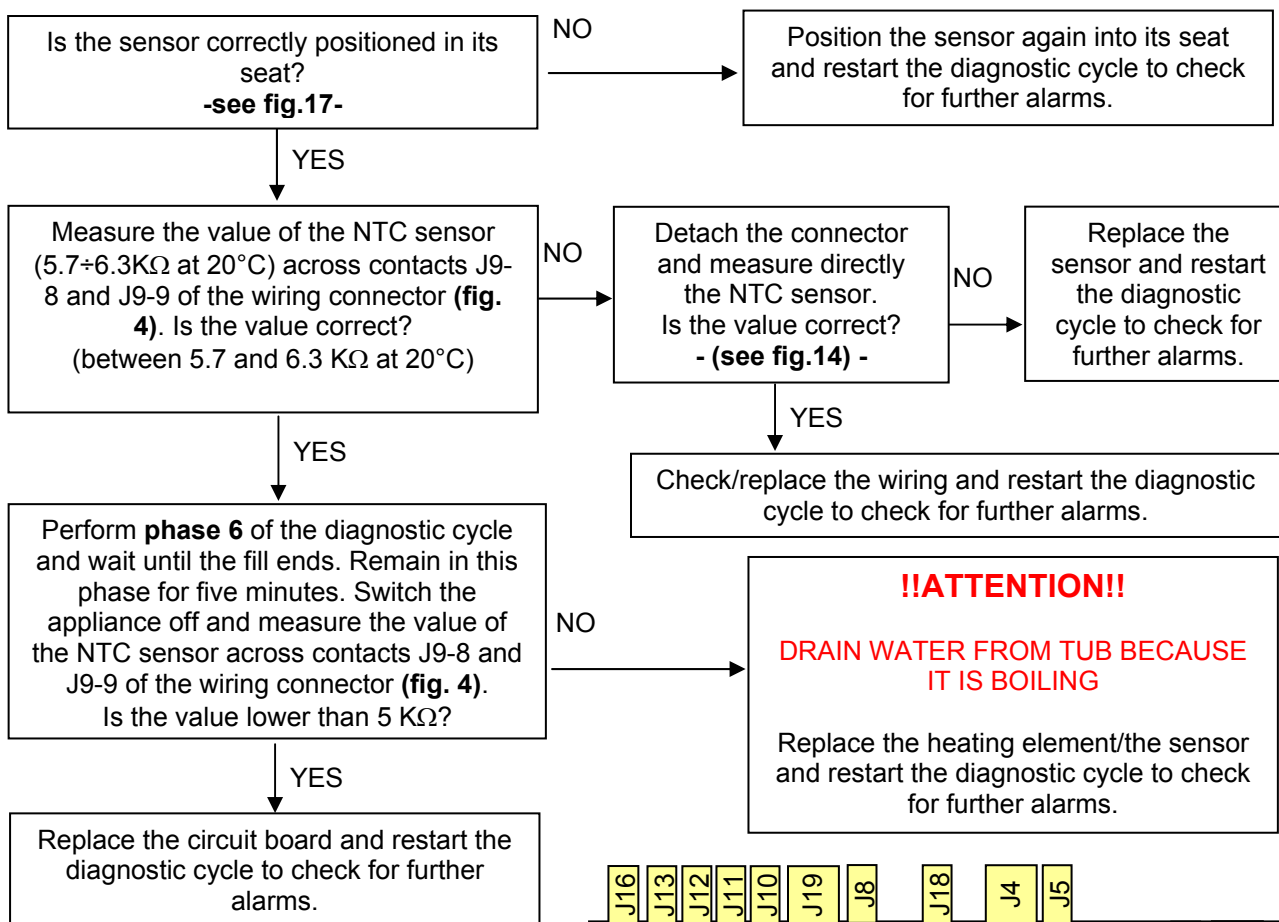


E82	E82: Error in reading the RESET/OFF position of the programme selector	E82
	Reading of position "0" of the selector when the appliance is switched on, or configuration error	

Tests to be performed:

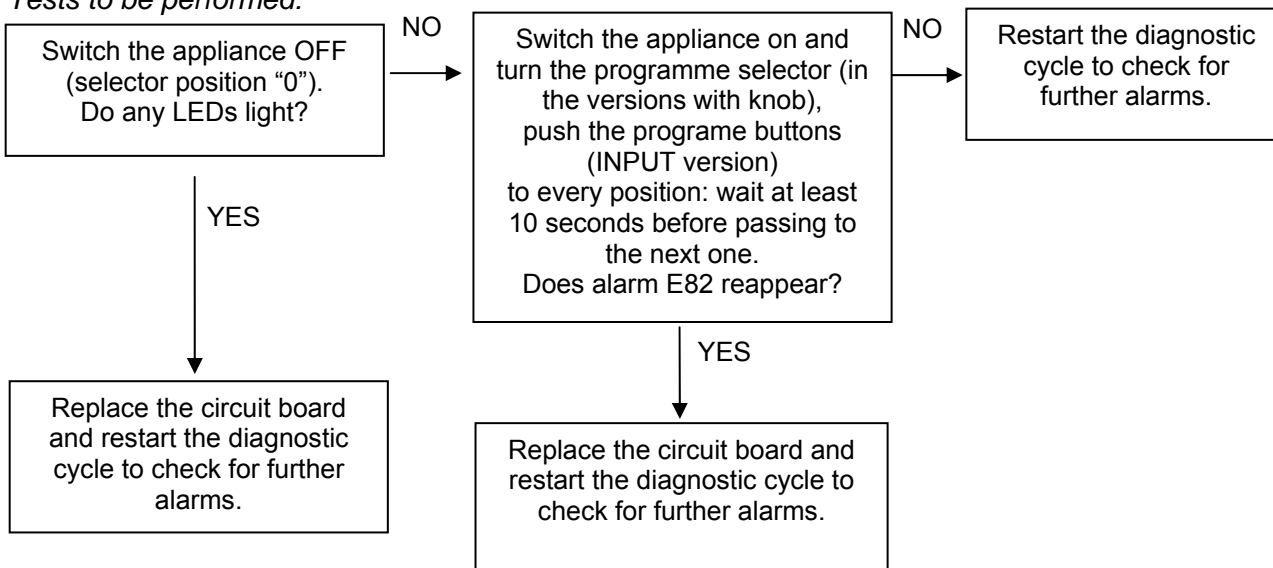

E83	E83: Error in reading the programme selector code	E83
	Code for the position of the selector not included in configuration data or configuration error	

Tests to be performed:

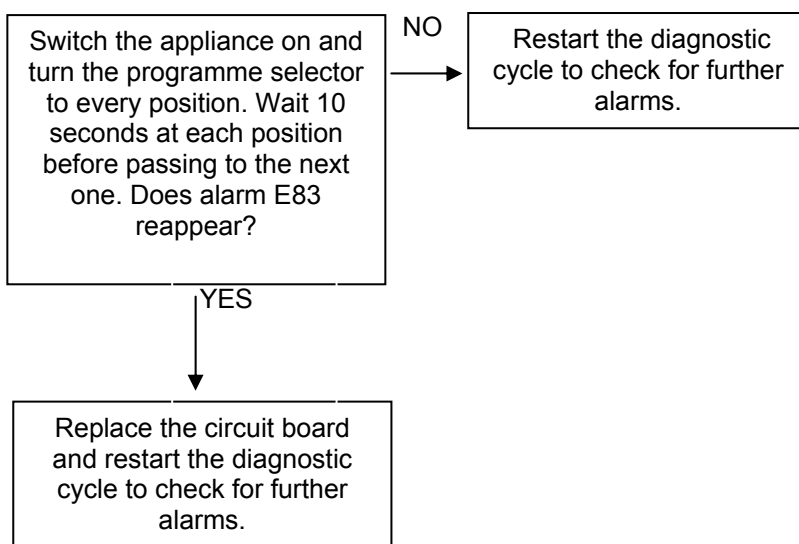

If there are traces of burning on the circuit board, refer to pages 119-120

E91	E91: Communication error between user interface and main board	E91
	Incongruence of configuration values at the switching on of the appliance	

Tests to be performed:

<p><i>Possible configuration error</i></p> <p>Replace the circuit board and restart the diagnostic cycle to check for further alarms.</p>

E92	E92: Protocol incongruence	E92
	Incongruence of configuration values at the switching on of the appliance	

Tests to be performed:

<p><i>Possible configuration error</i></p> <p>Replace the circuit board and restart the diagnostic cycle to check for further alarms.</p>

E93	E93: Appliance configuration error	E93
	Incongruence of configuration values at the switching on of the appliance	

Tests to be performed:

<p><i>Possible configuration error</i></p> <p>Replace the circuit board and restart the diagnostic cycle to check for further alarms.</p>

E94	E94: Washing cycle configuration error	E94
	Incongruence of configuration values at the switching on of the appliance	

Tests to be performed:

<p><i>Possible configuration error</i></p> <p>Replace the circuit board and restart the diagnostic cycle to check for further alarms.</p>

E95	E95: Communication failed between EEprom and Microprocessor	E95
------------	--	------------

Tests to be performed:

<p>Replace the circuit board and restart the diagnostic cycle to check for further alarms.</p>
--

E97	E97: Incongruence between version of the control selector and configuration data	E97
	Incongruence between configuration data of the programmes and those of the selector	

Tests to be performed:

<p><i>Possible configuration error</i></p> <p>Replace the circuit board and restart the diagnostic cycle to check for further alarms.</p>

E98	E98: Communication error between main board and Inverter board	E98
	Incompatibility between main board and Inverter board	

Tests to be performed:

<p style="text-align: center;"><i>Possibile errata configurazione.</i></p> <p>Replace the main board / Inverter board and restart the diagnostic cycle to check for further alarms.</p>

E9H	E9H: Communication error between microprocessor and Flash memory	E9H

Tests to be performed:

Replace the main board and restart the diagnostic cycle to check for further alarms.
--

E9C	E9C: Appliance configuration error	E9C

Tests to be performed:

Replace the main board and restart the diagnostic cycle to check for further alarms.
--



E9d	E9d: Clock faulty	E9d

Tests to be performed:

Replace the main board and restart the diagnostic cycle to check for further alarms.
--




E9F	E9F: Communication error between main board and Inverter board	E9F
------------	---	------------

Tests to be performed:

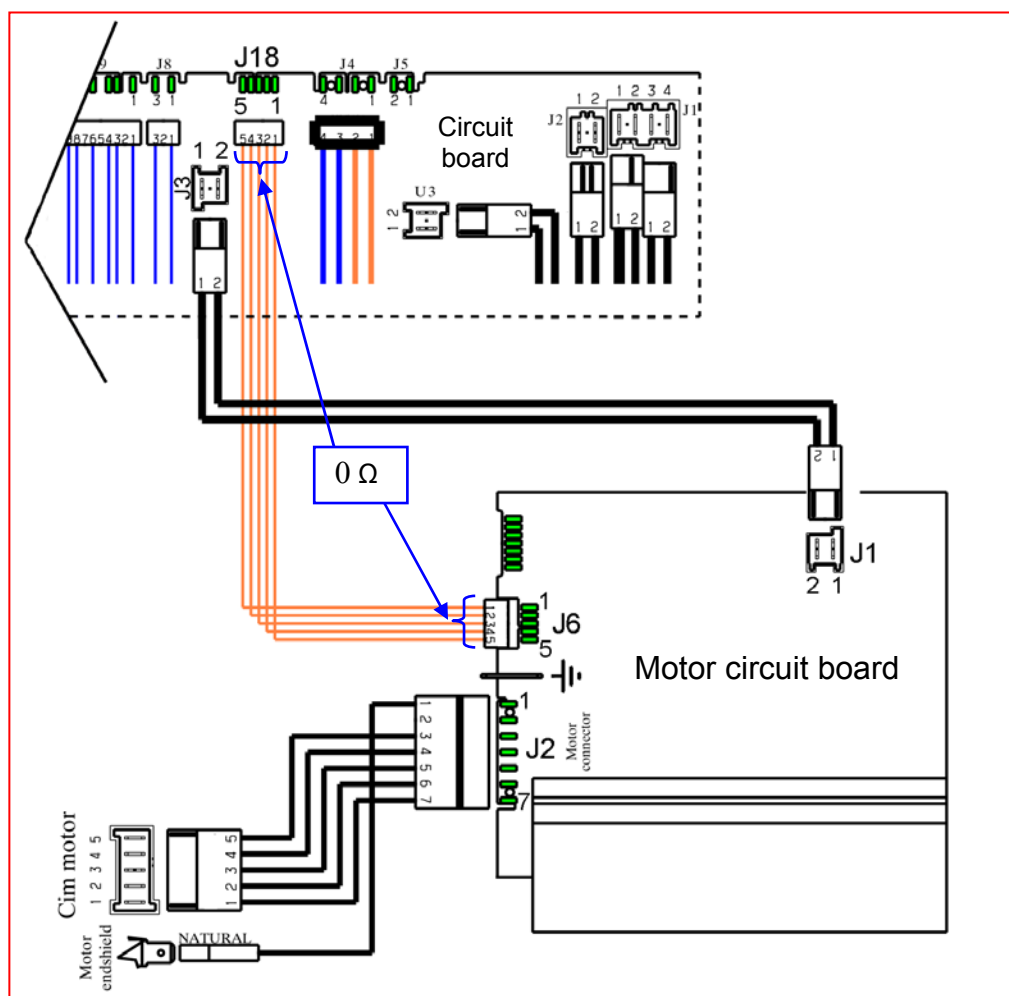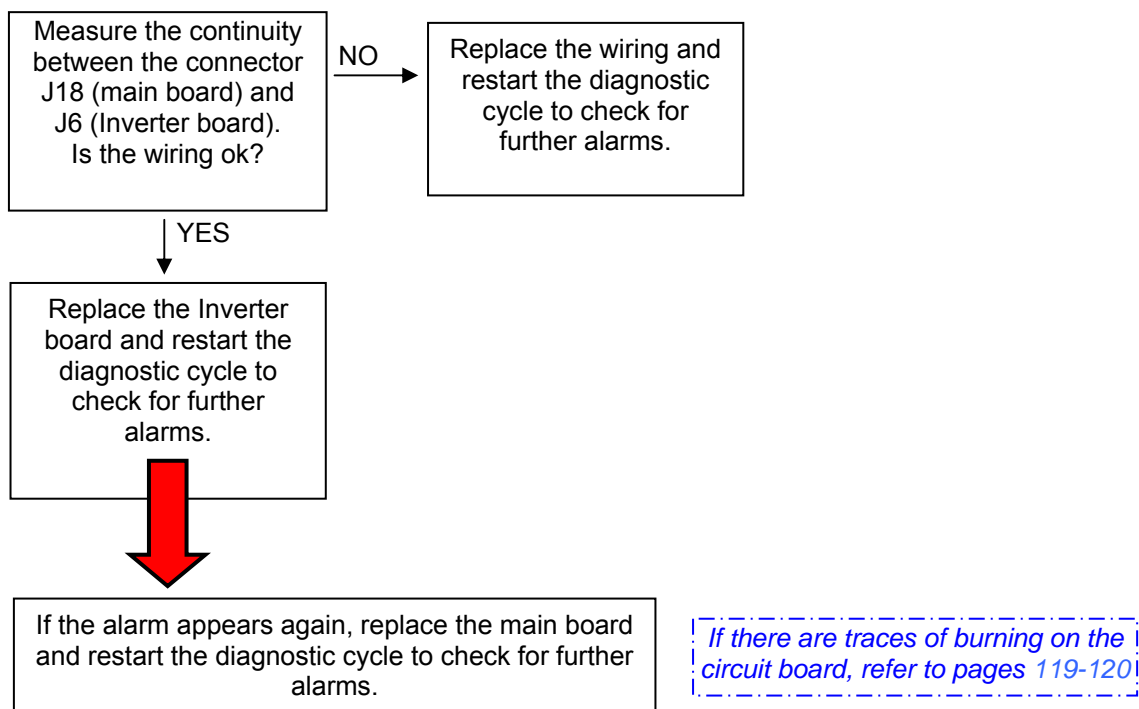


EA1	EA1: Drum positioning system faulty (<i>top-loaders</i>)	EA1
	No signal or discontinuous signal from the sensor for more than 10 seconds during actioning of the motor to position the drum	

Tests to be performed:

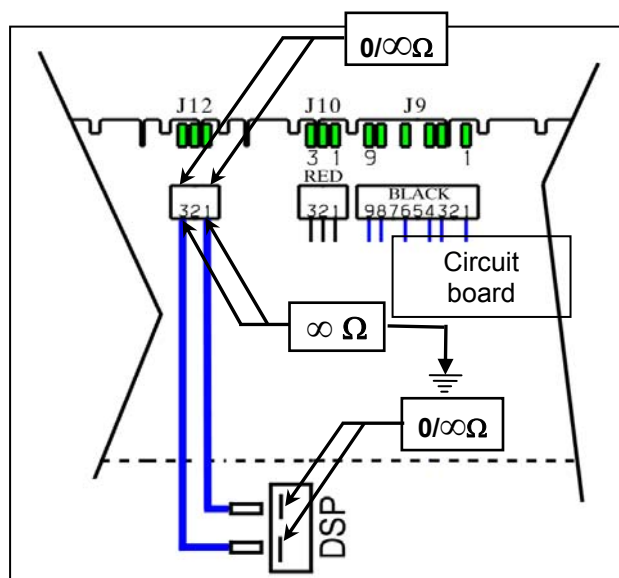
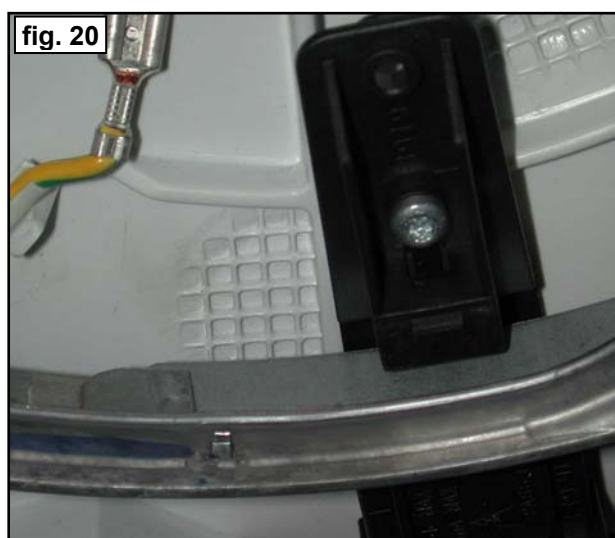
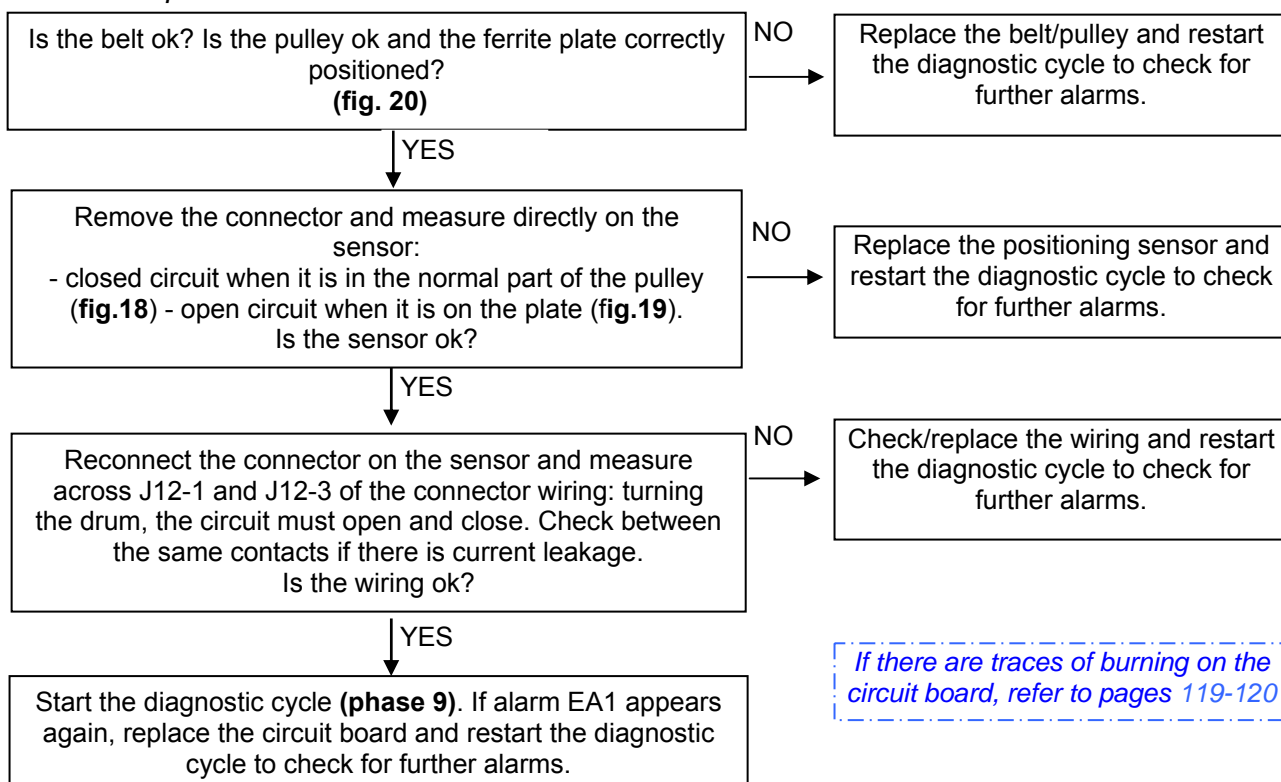


EA6	EA6: Drum flap faulty (top-loaders)	EA6
	Cycle immediately blocked if a not correct tachometric signal is identified for at least 3 seconds	

Tests to be performed:

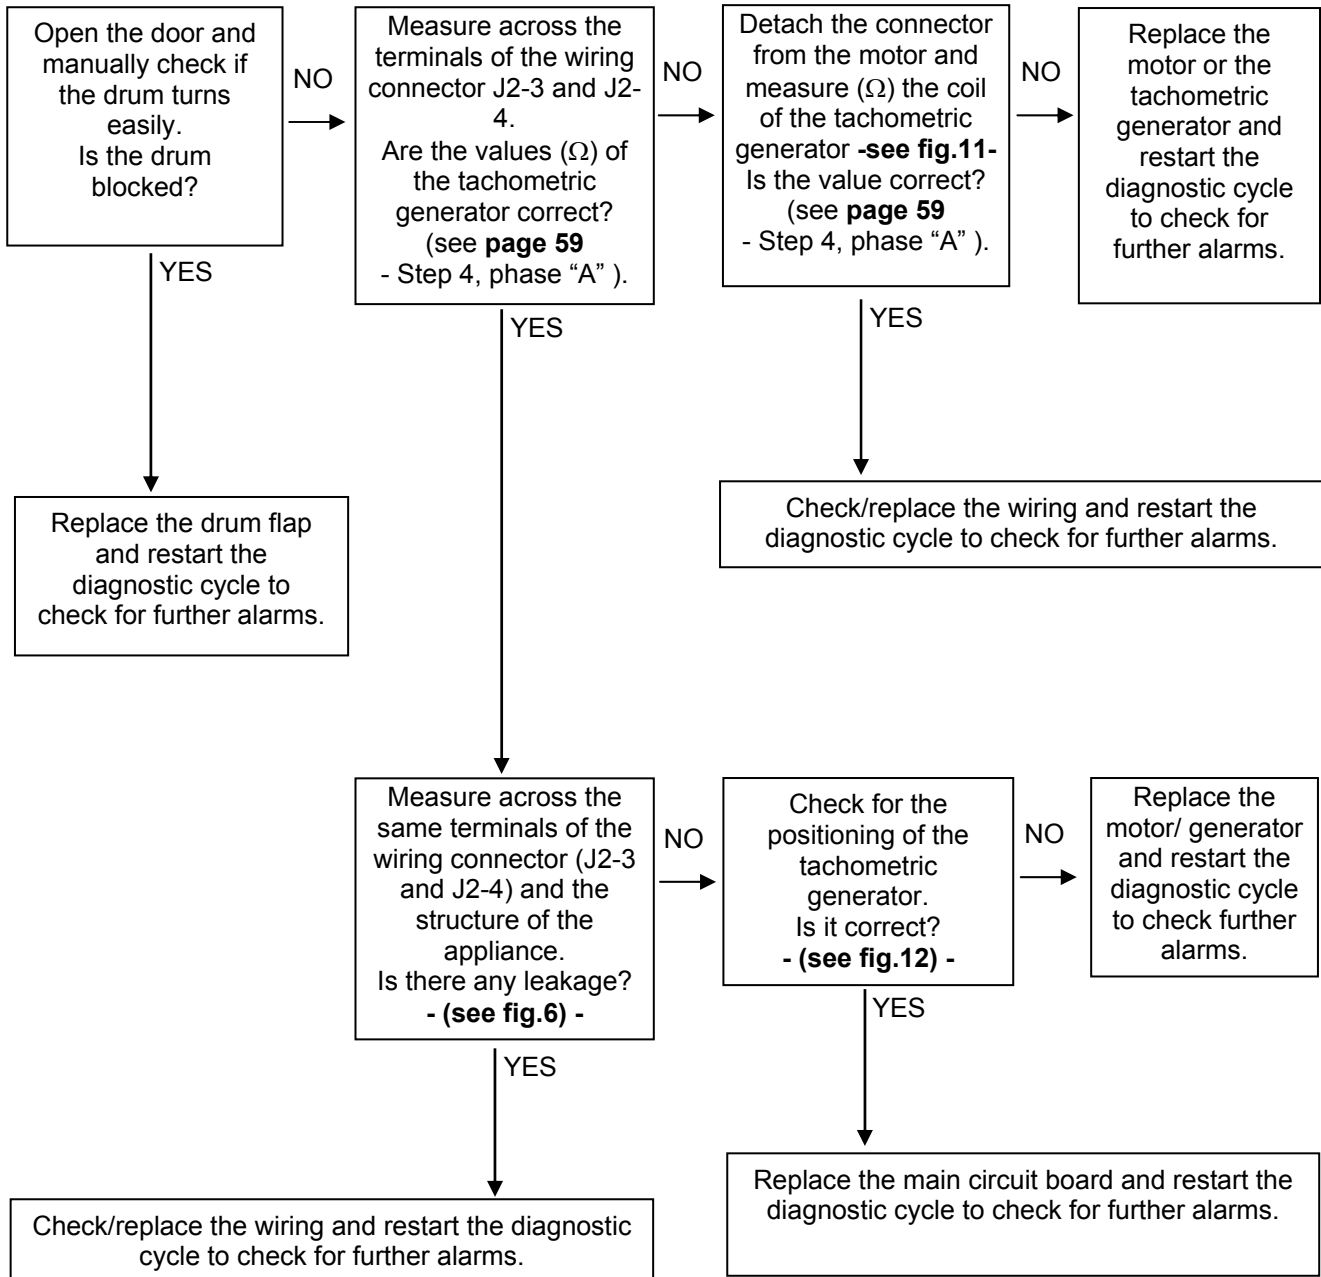


If there are traces of burning on the circuit board, refer to pages 119-120

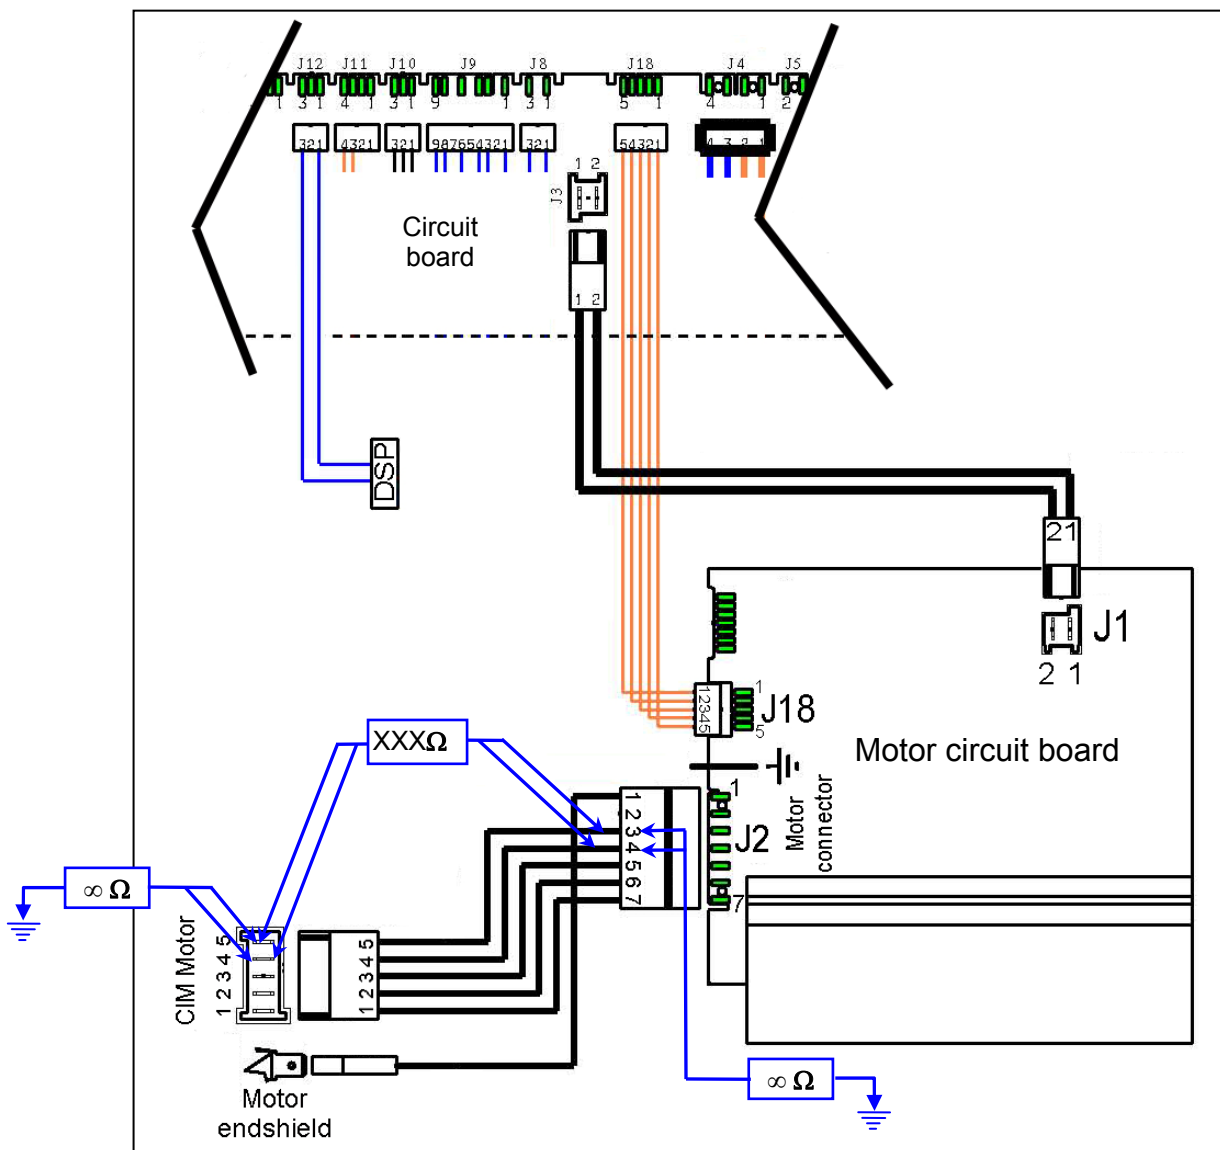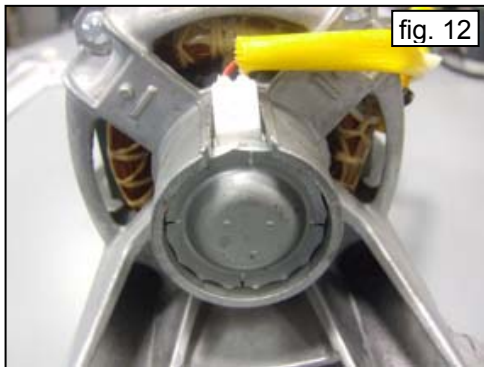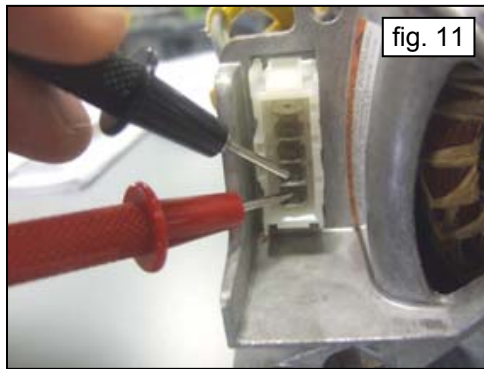


EH1	EH1: Incorrect mains frequency	EH1
	The power supply frequency is not within the configured limits	

Tests to be performed:

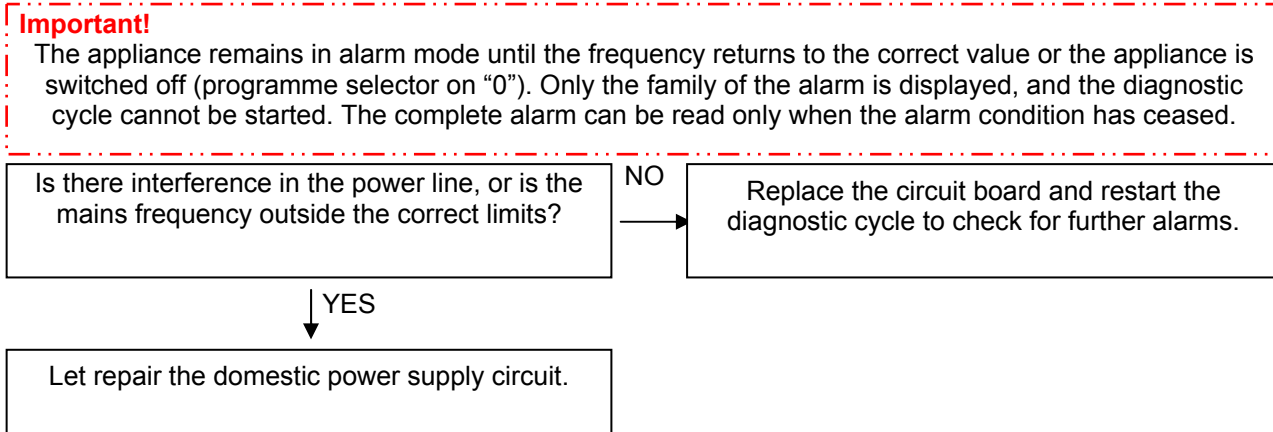


EH2	EH2: Mains voltage too high	EH2
	Mains voltage higher than configured voltage (for more than 10 seconds)	

Tests to be performed:

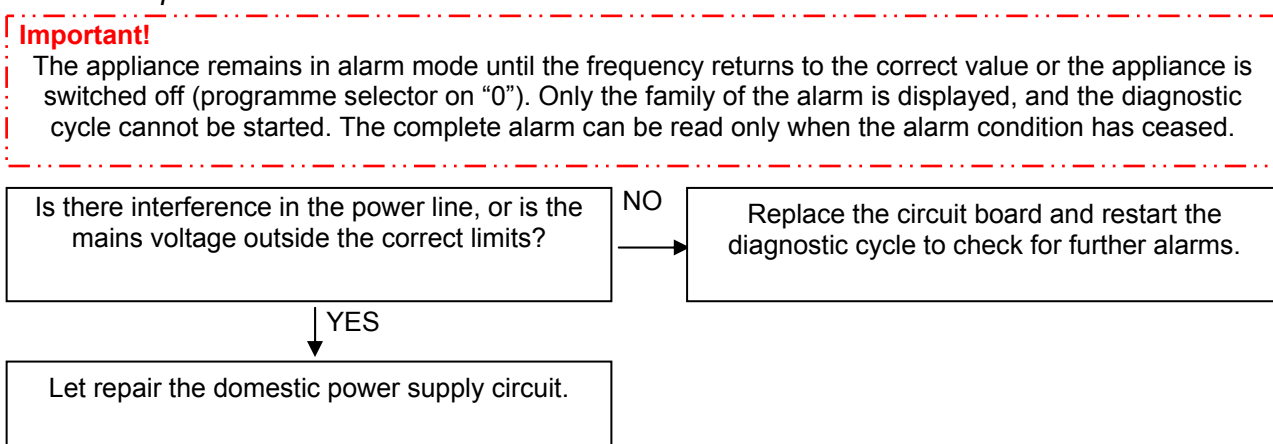

EH3	EH3: Mains voltage too low	EH3
	Mains voltage lower than configured voltage	

Tests to be performed:

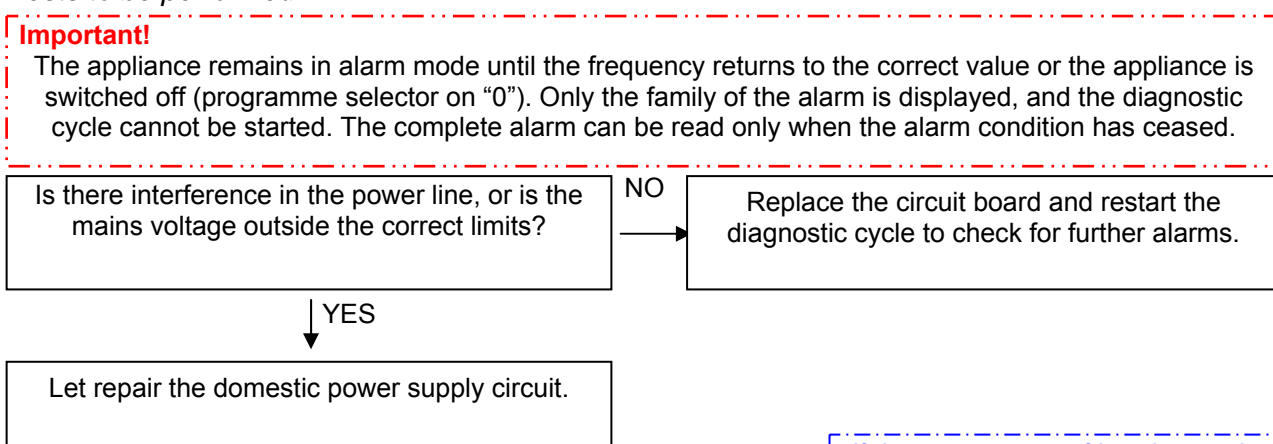

If there are traces of burning on the circuit board, refer to page 119-120

EHE	EHE: Incongruence between the safety relay (main board) and safety “sensing” circuit	EHE

Tests to be performed:

Replace the main board and restart the diagnostic cycle to check for further alarms.
--

EHF	EHF: Safety “sensing” circuit faulty	EHF
	Input voltage to microprocessor wrong	

Tests to be performed:

Replace the main board and restart the diagnostic cycle to check for further alarms.
--

EF1	EF1: Drain hose blocked/throttled/too high; drain filter dirty/blocked	EF1
------------	---	------------

It is a warning that appears only at the end of the cycle. The machine has detected long draining phases during the cycle (Es. More than 20 seconds during draining after rinsing phase). Check/clean the drain filter.

EF2	EF2: Overdosing of detergent; drain hose blocked/throttled; drain filter dirty/blocked	EF2
------------	---	------------

Overdosing of detergent. The system has detected an over foaming during draining phases. Advice Customer to use the right quantity of detergent and verify that drain filter and drain system are clean.

EF3	EF3: Intervention of Aqua Control device	EF3
------------	---	------------

It warns about the presence of water at the bottom of the appliance. Check for any possible water leaks and the correct positioning of the float of the Aqua Control device.

EF4	EF4: Low water fill pressure and solenoid open	EF4
------------	---	------------

Flowmeter faulty – Wiring faulty

EF5	EF5: Load too unbalanced, skipping of spin phases	EF5
------------	--	------------



It is a warning of load too unbalanced. During the spin phases the load is excessively unbalanced. Tell the user to load more clothes in the drum and not single clothes.

EF6	EF6: Appliance reset	EF6
------------	-----------------------------	------------

No action to be carried out, if it does not disappear, replace the circuit board.

EC1	EC1: Water fill solenoids blocked	EC1
	The flowmeter detects water filling even if the solenoid is not controlled	

Tests to be performed:

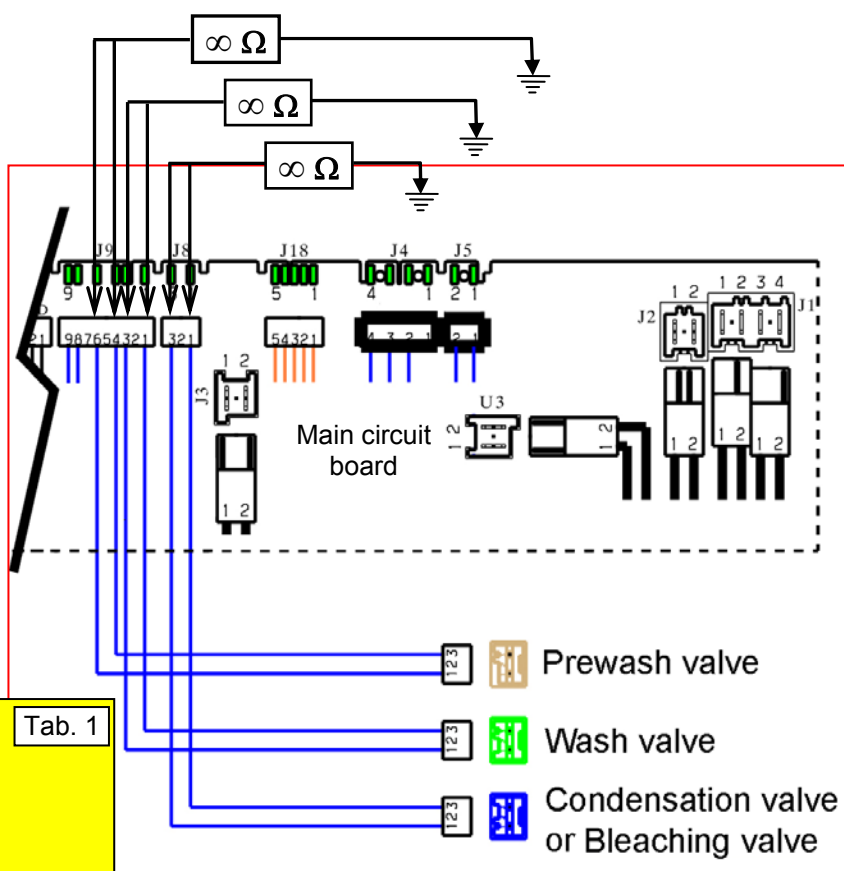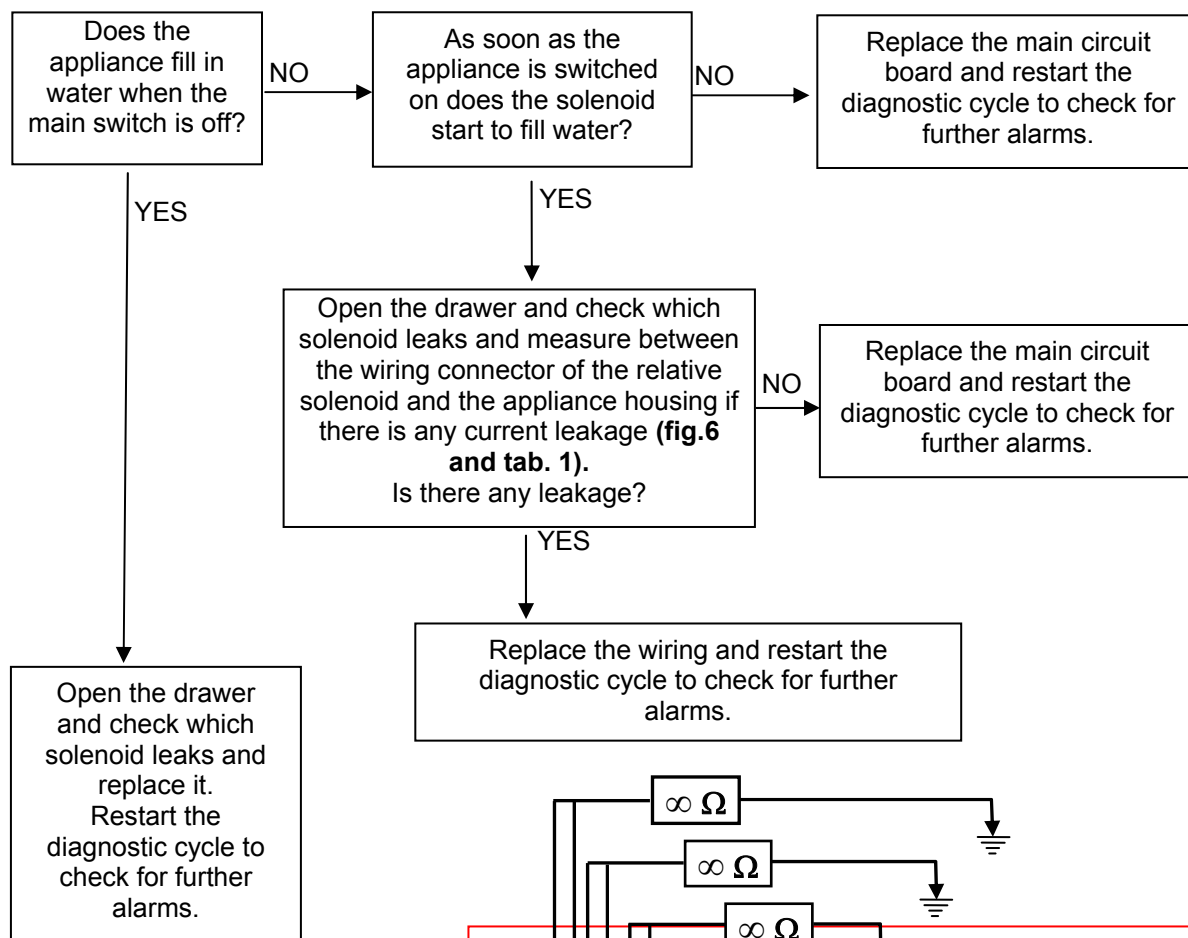

Version WM

Across J8-1 and J8-3 bleach solenoid
Across J9-1 and J9-3 wash solenoid
Across J9-4 and J9-6 prewash solenoid




Version WD



Across J8-1 and J8-3 condensation solenoid
Across J9-1 and J9-3 wash solenoid
Across J9-4 and J9-6 prewash solenoid

If there are traces of burning on the circuit board, refer to pages 119-120

EC3	EC3: Problem with the weight sensor	EC3
	Missing signal or out of the limits	


Tests to be performed:

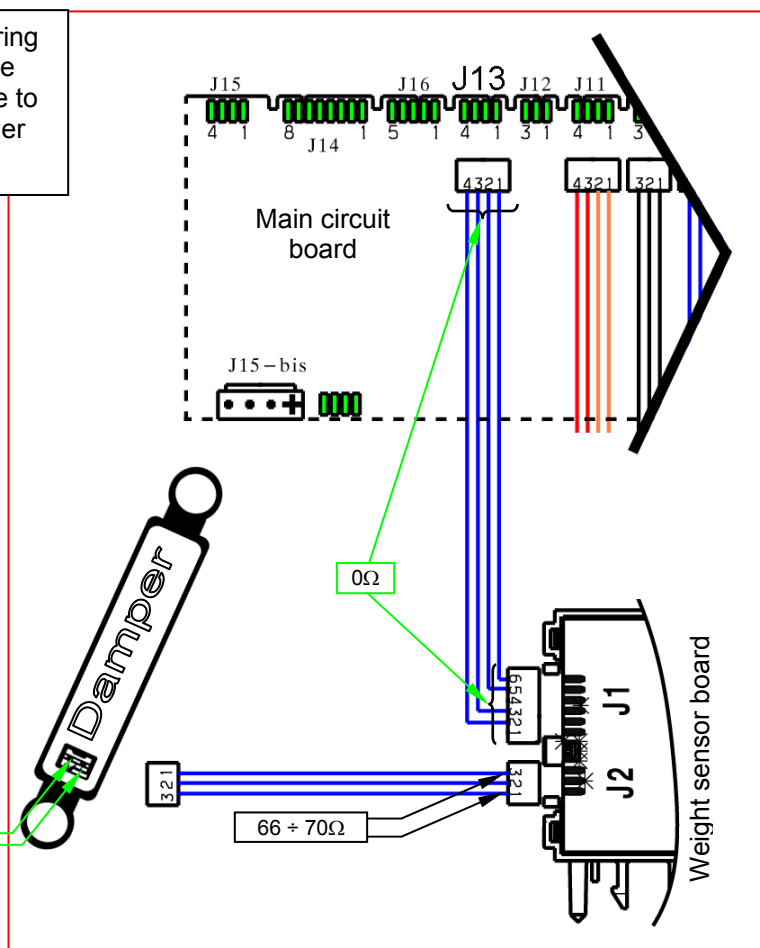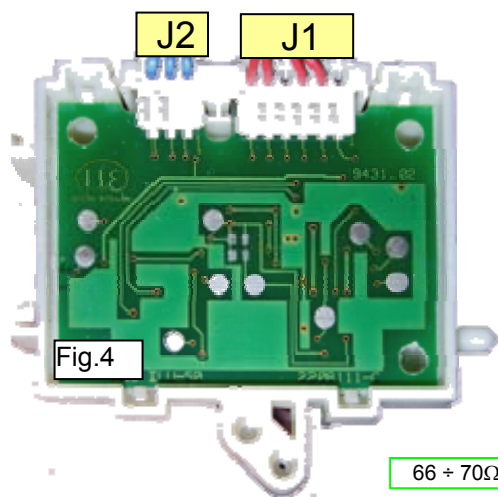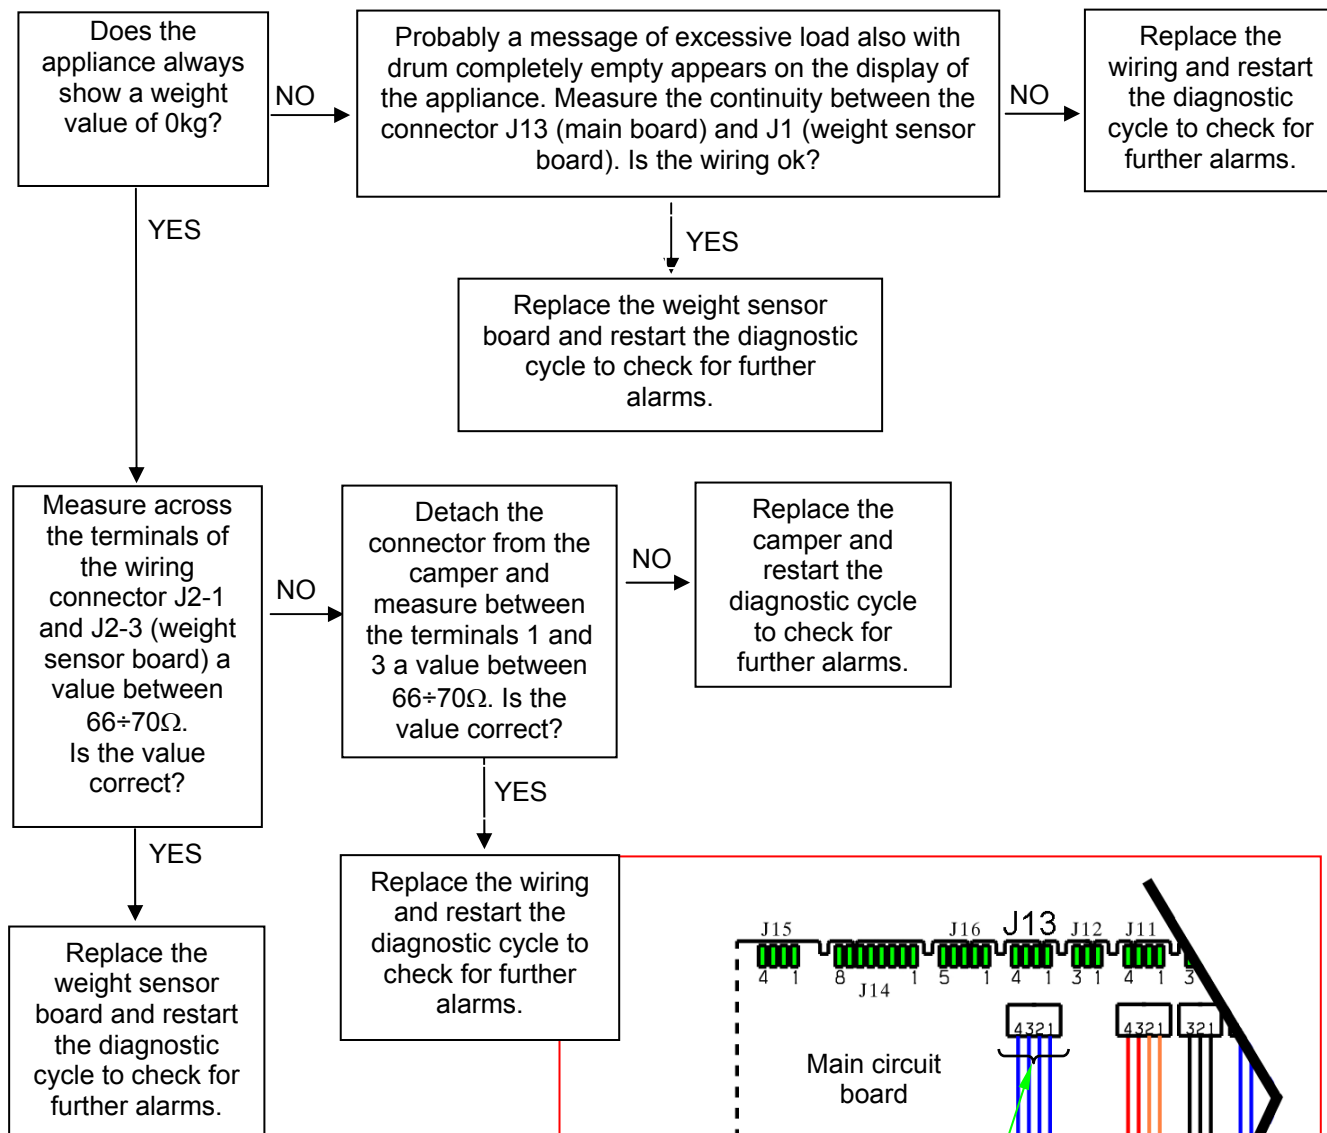

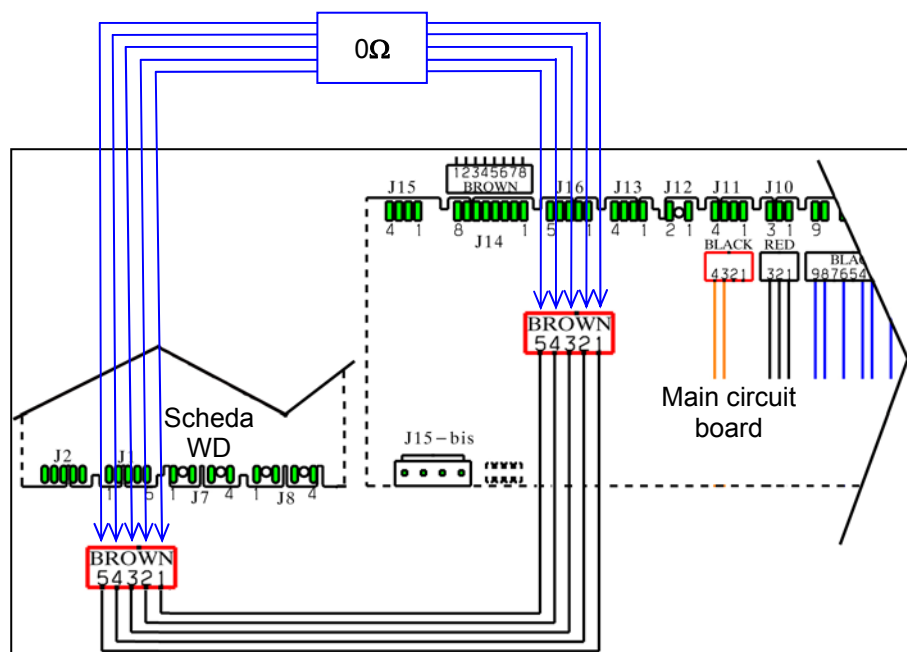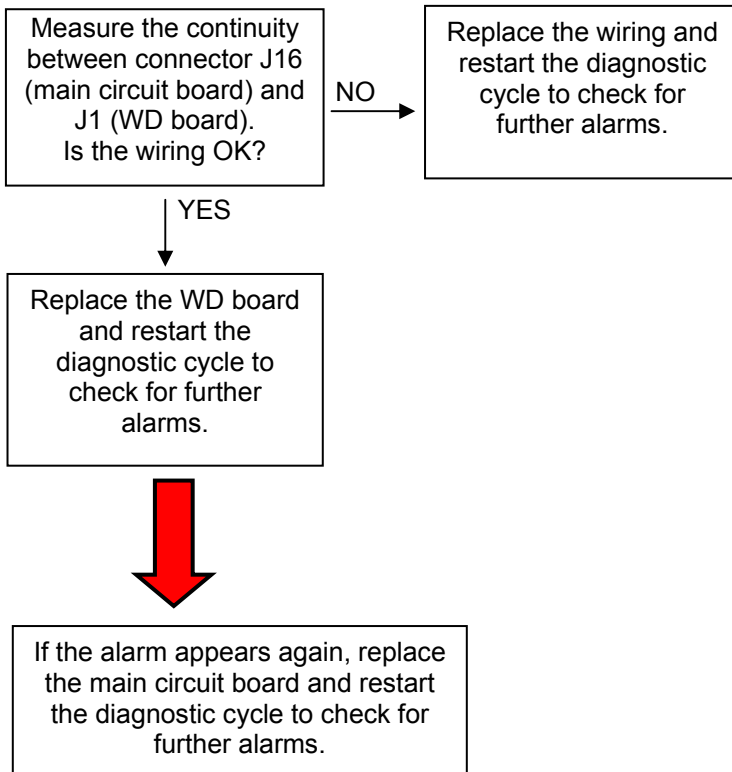Tests to be performed:


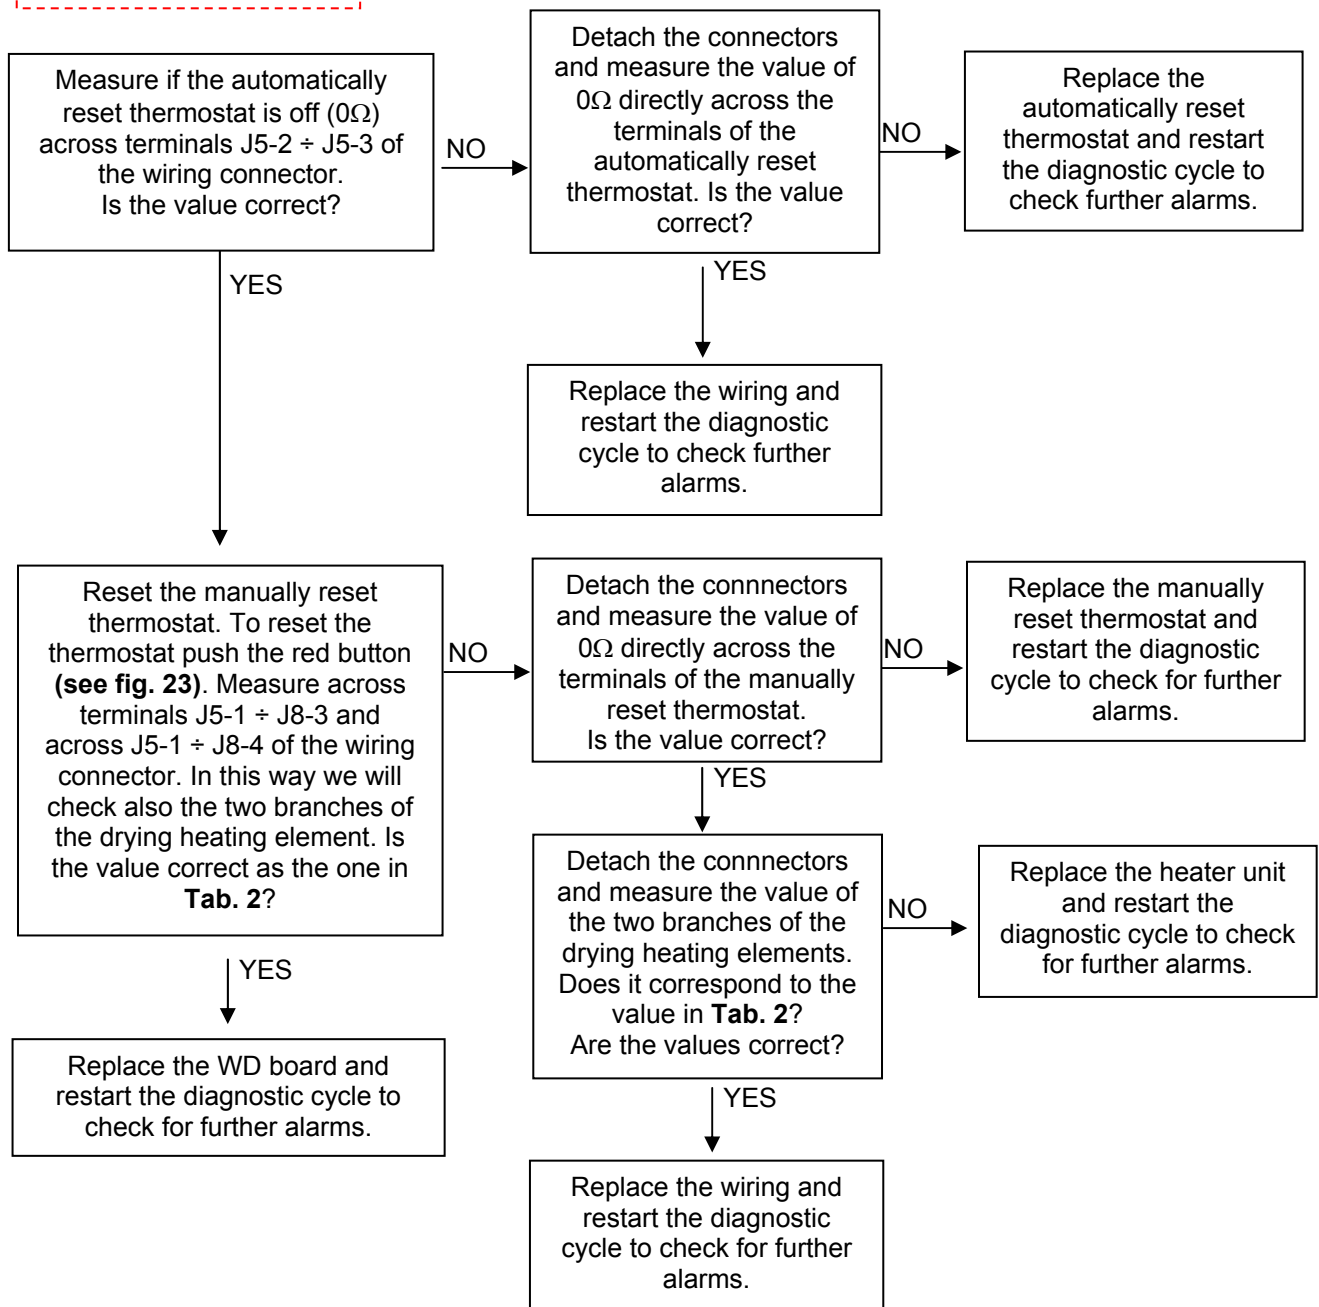
If there are traces of burning on the circuit board, refer to pages 119-120

Tests to be performed:

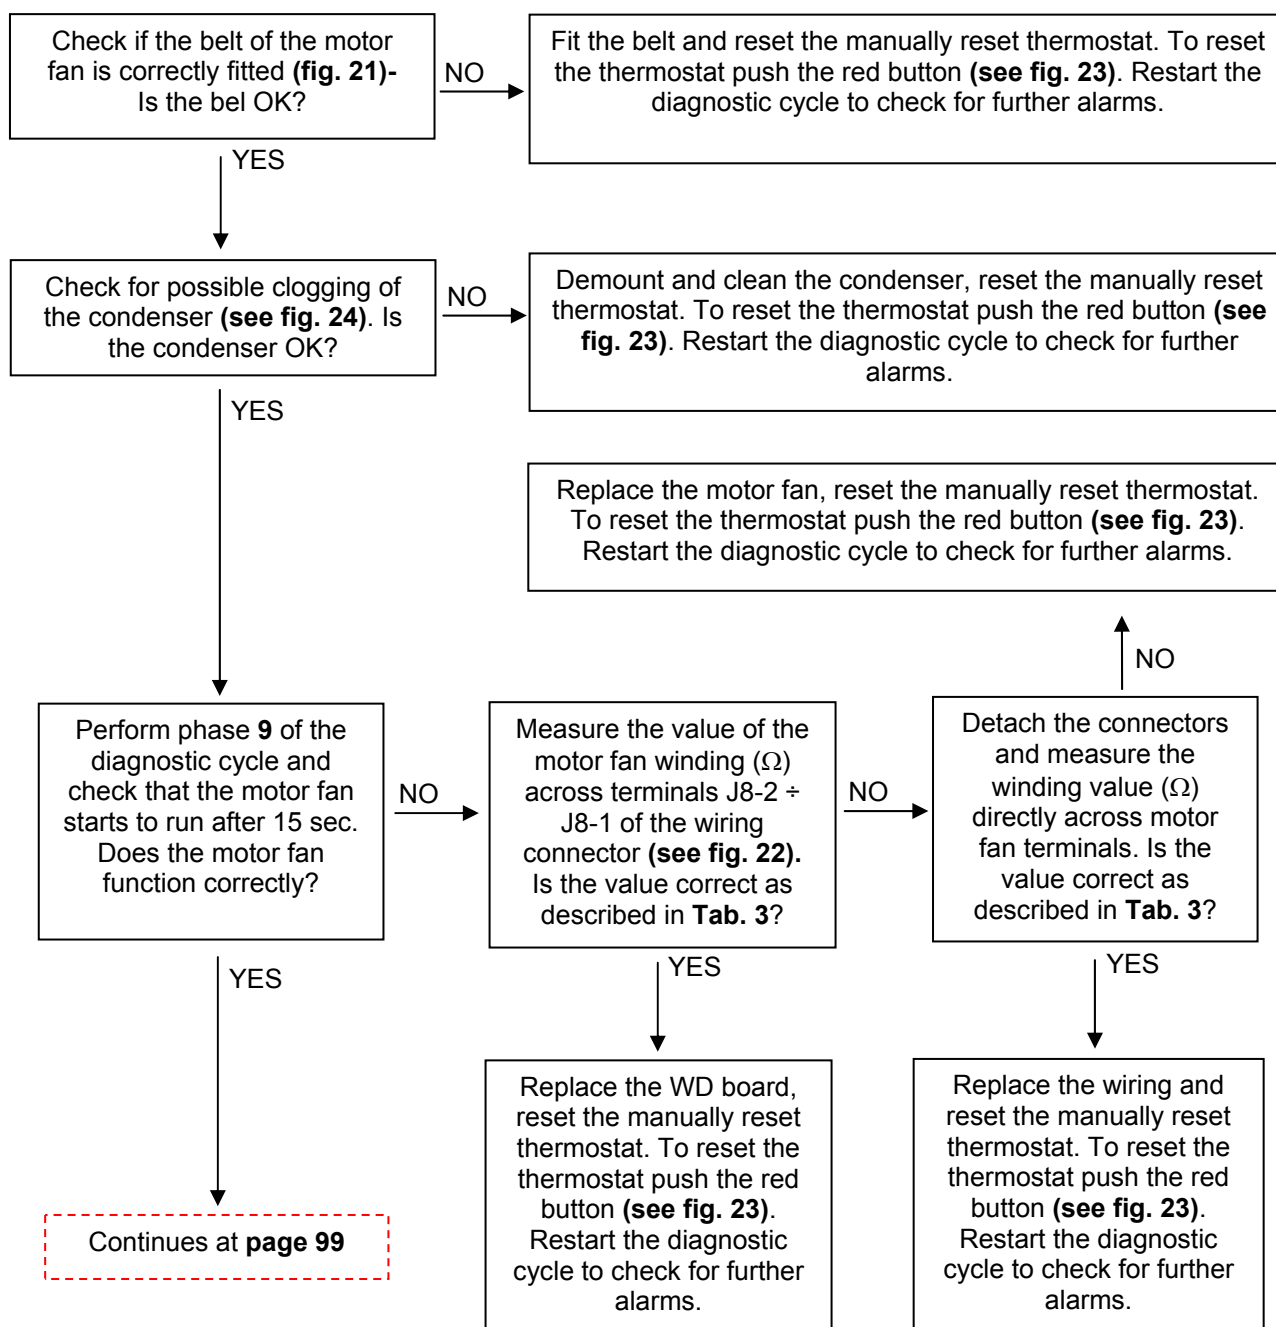

If there are traces of burning on the circuit board, refer to page 119-120

Follows page 98



Drying heating element

Tab. 2

Branch A

Across J5-1 and J8-3 measure a value between:

51.5Ω ÷ 69Ω.

Branch B

Across J5-1 and J8-4 measure a value between:

51.5Ω ÷ 69Ω.

NOTE: The measurements must be carried out with a room temperature of 25°C.

Motor fan





Tab. 3

The value of winding heating element is between:

22Ω ÷ 30.5Ω

NOTE: The measurements must be carried out with a room temperature of 25°C.

If there are traces of burning on the circuit board, refer to page 119-120

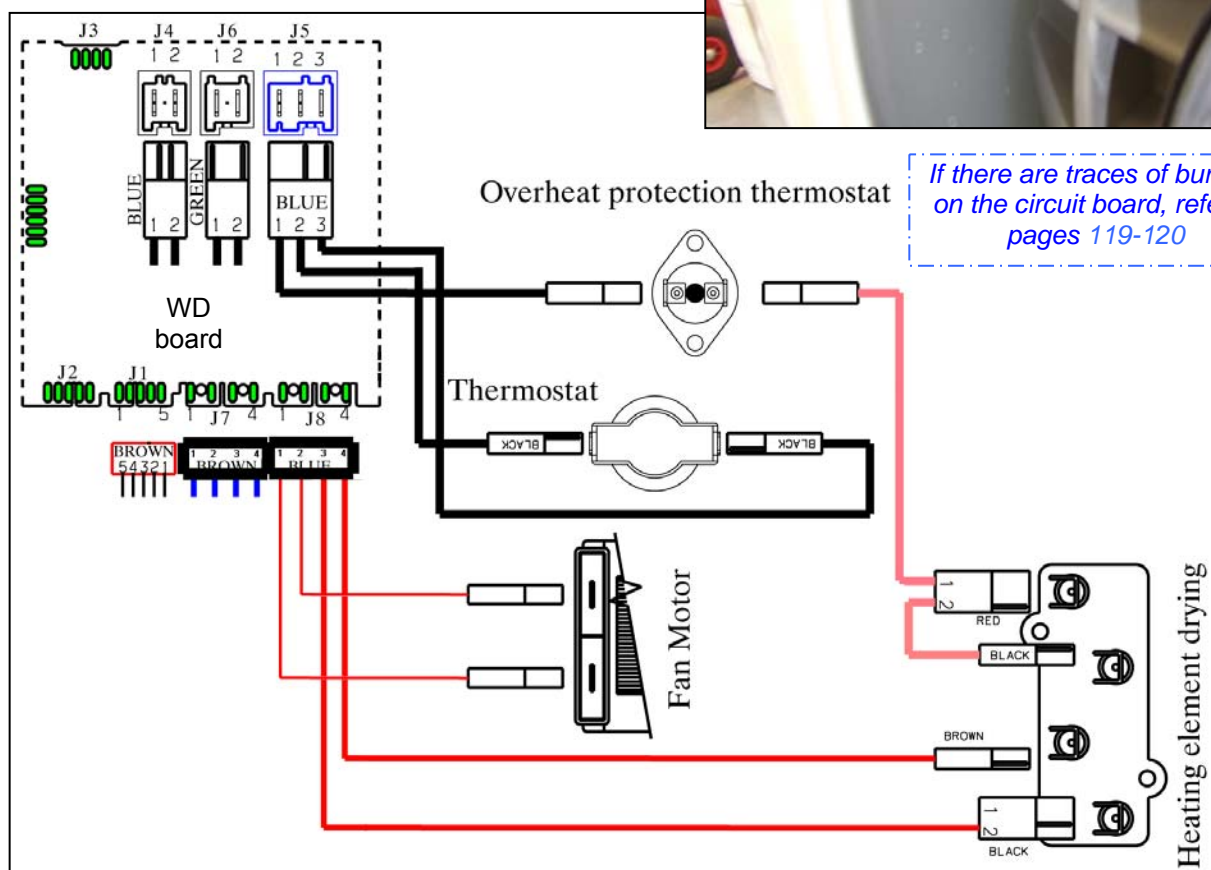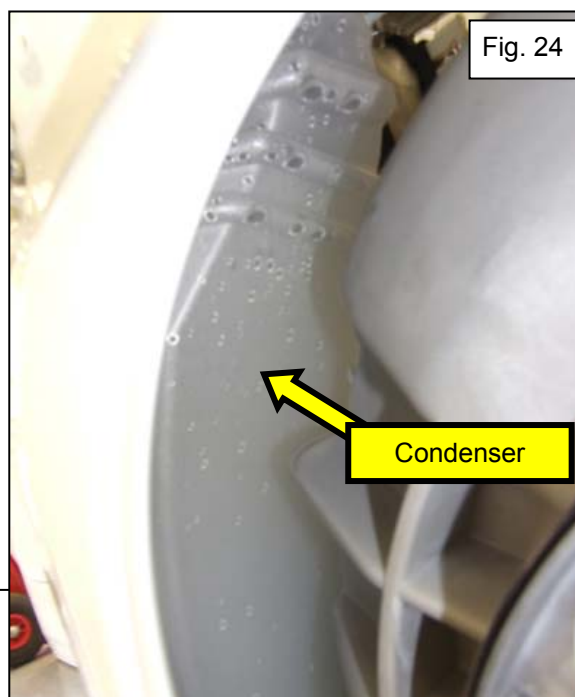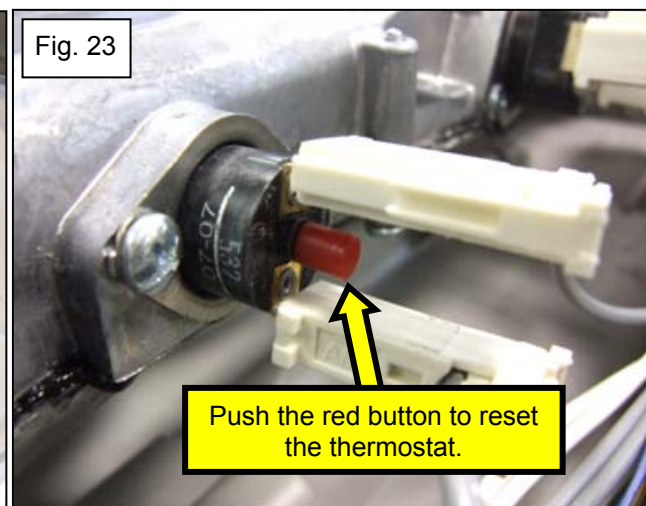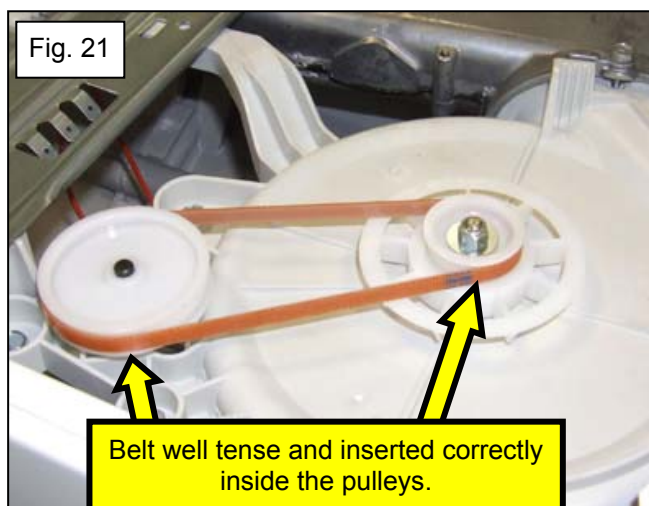

Tests to be performed:

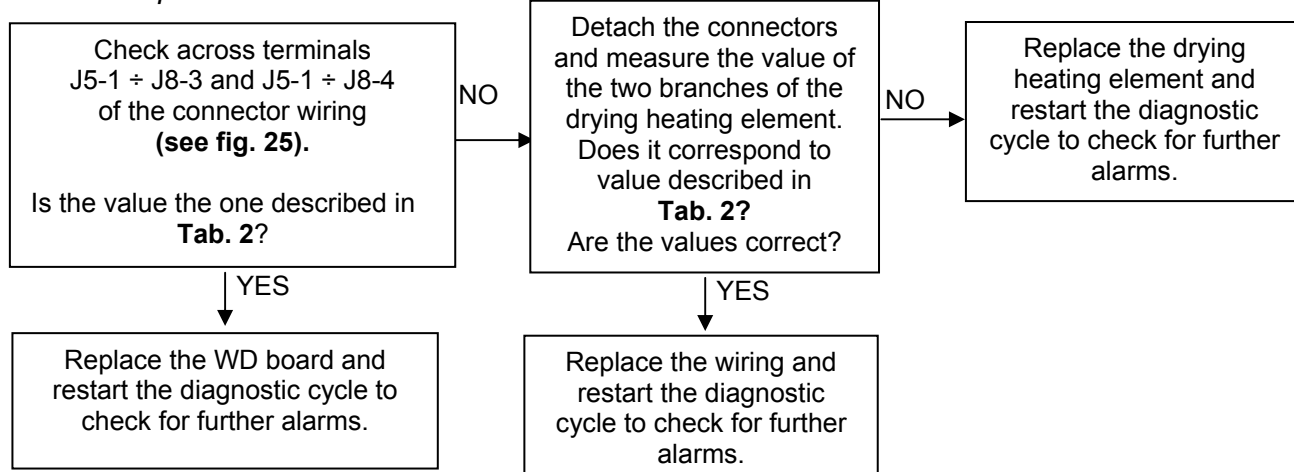


Fig. 25

Drying heating element

Tab. 2

Branch A

Across J5-1 and J8-3 the value must be between:


51.5Ω and 69Ω.

Branch B


Across J5-1 and J8-4 the value must be between:





51.5Ω and 69Ω.

NOTE: The measurements must be carried out with a room temperature of 25°C.

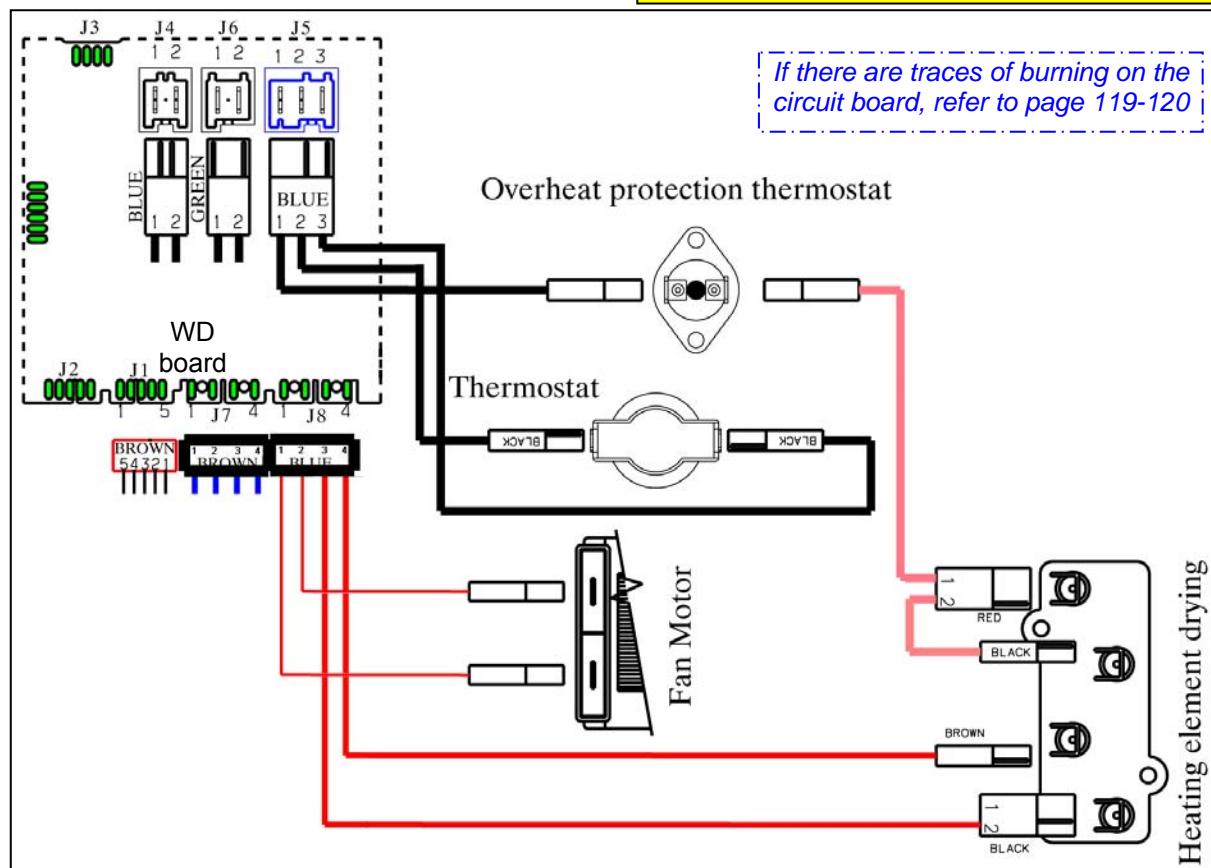

Tests to be performed:

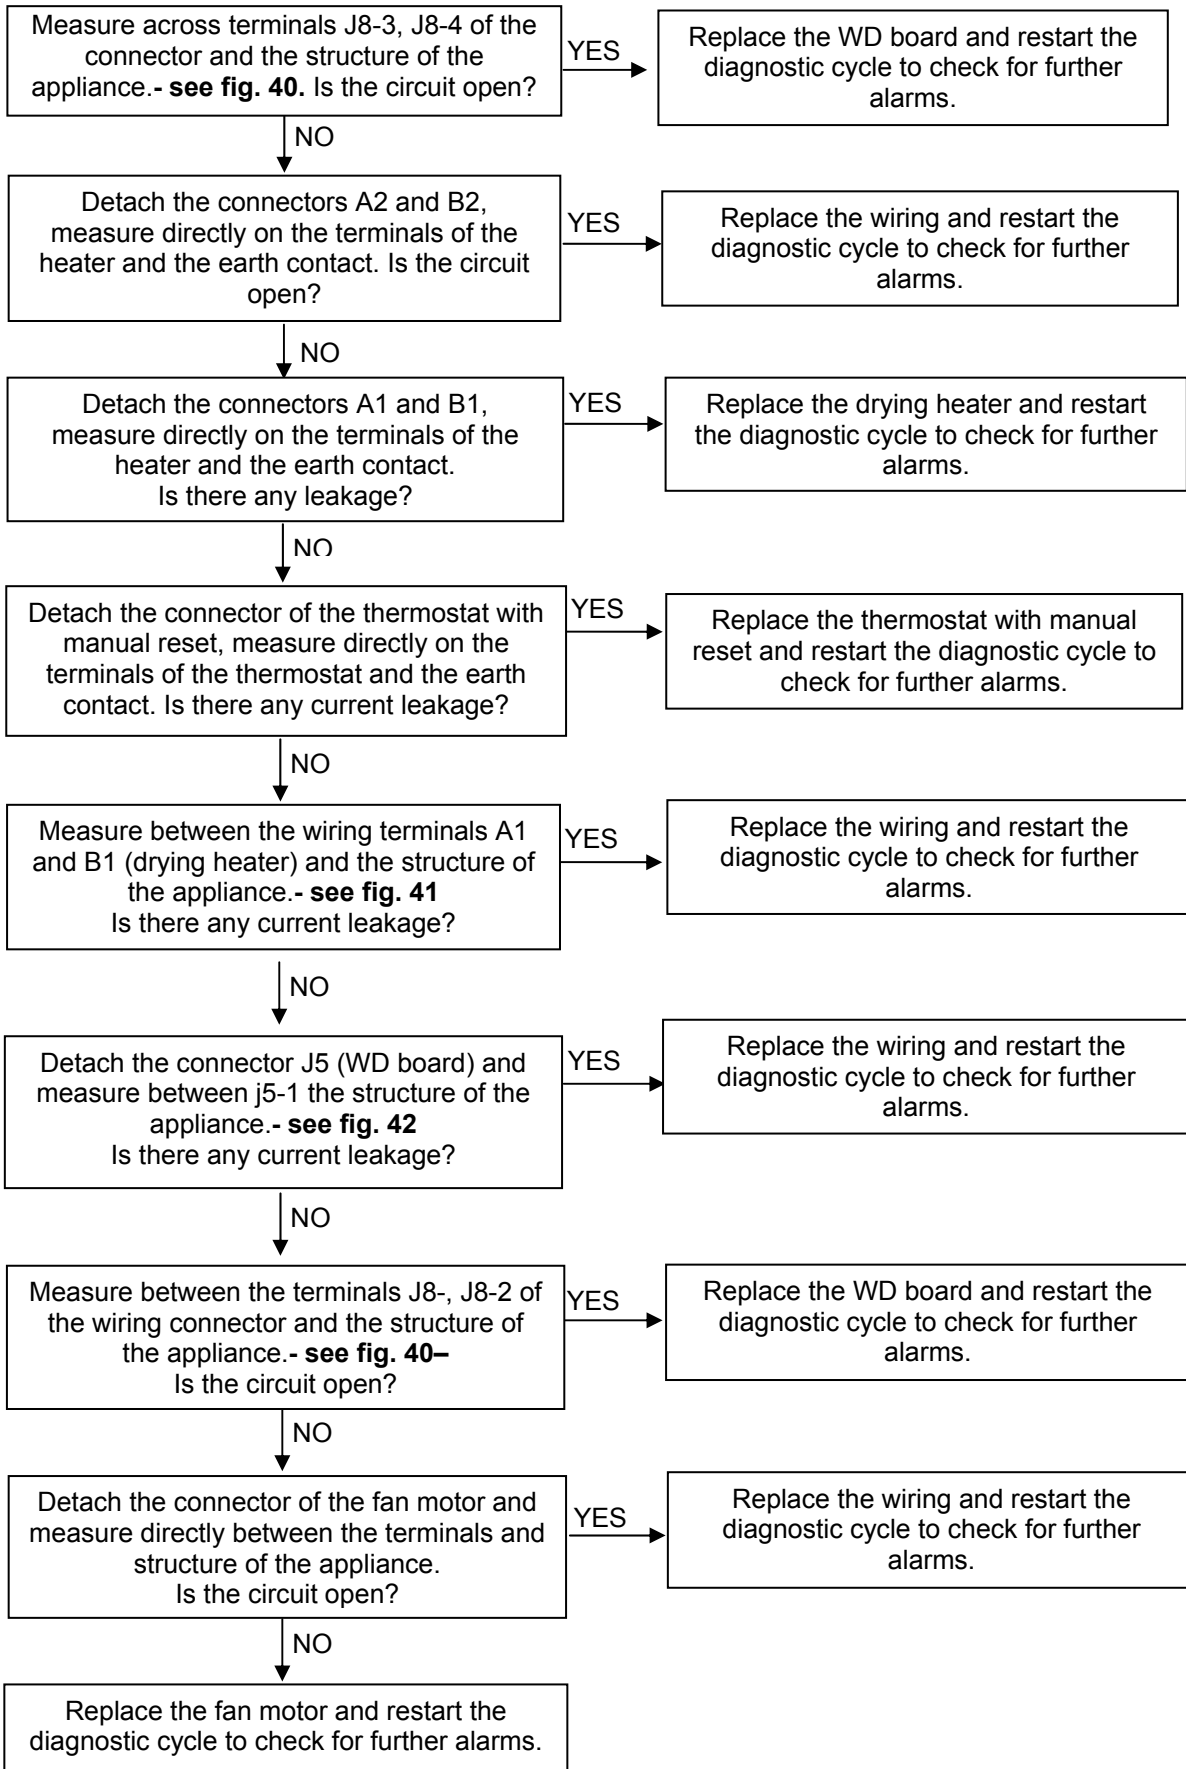

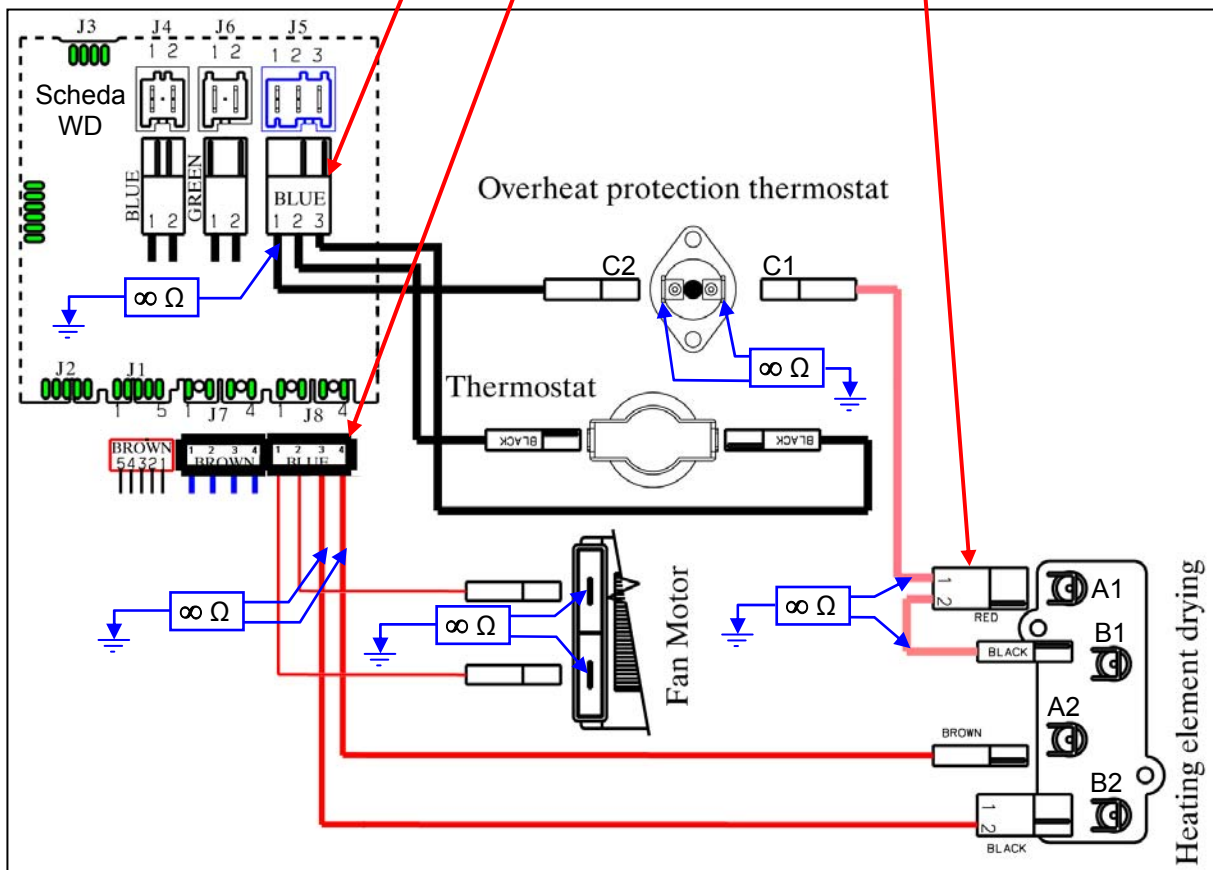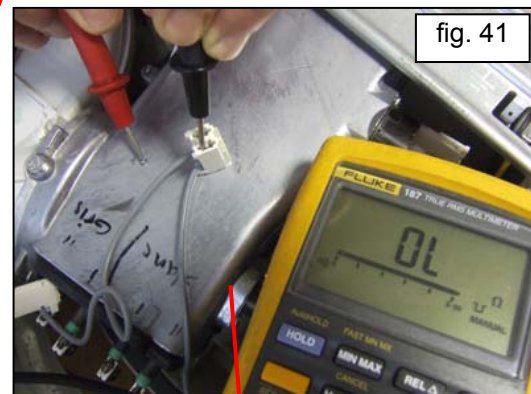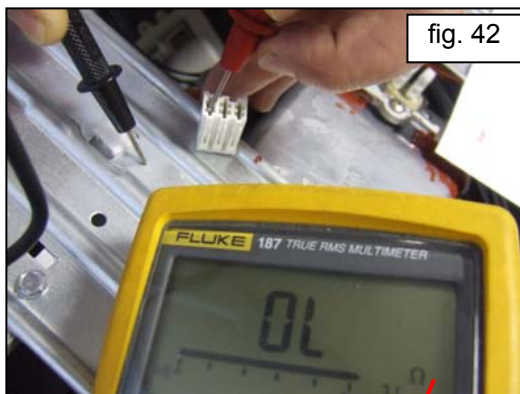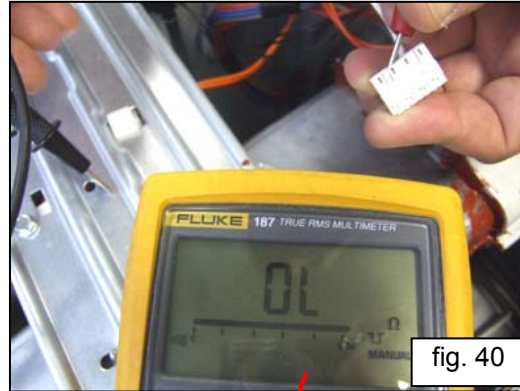

If there are traces of burning on the circuit board, refer to pages 119-120

Tests to be performed:

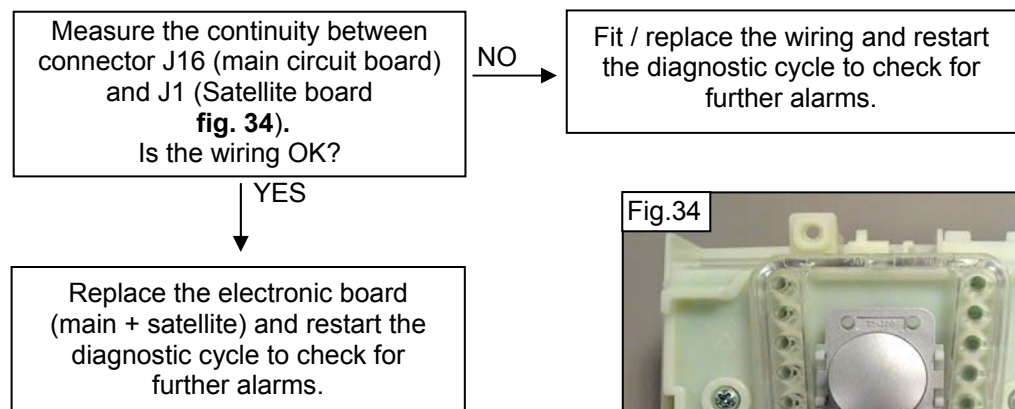


Fig.34




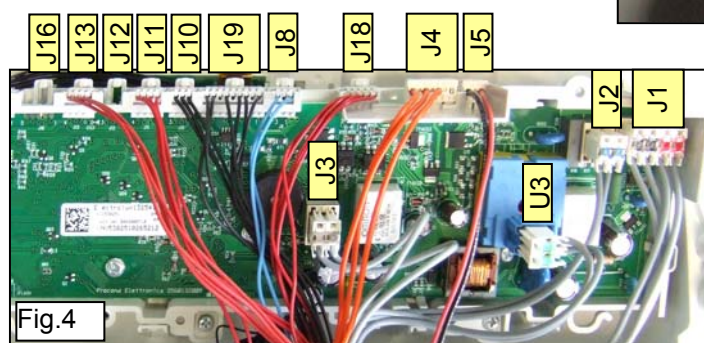


Fig.4

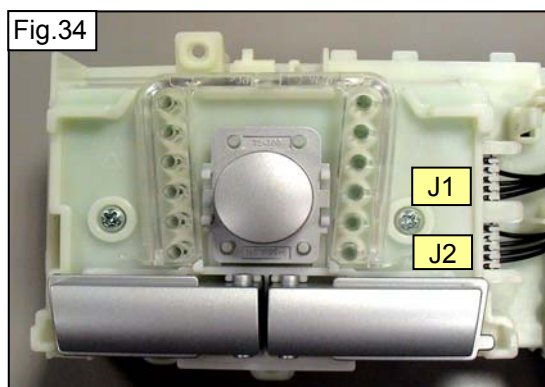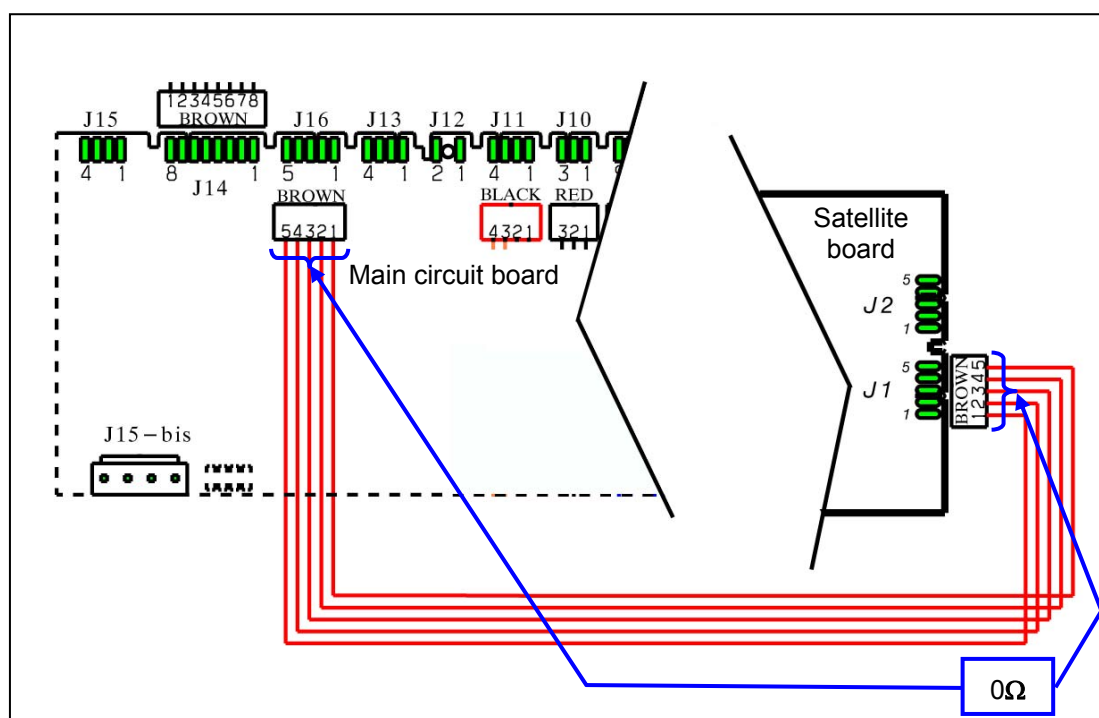

If there are traces of burning on the circuit board, refer to pages 119-120


8 BASIC CIRCUIT DIAGRAM EWM35xx WITH AQUA CONTROL

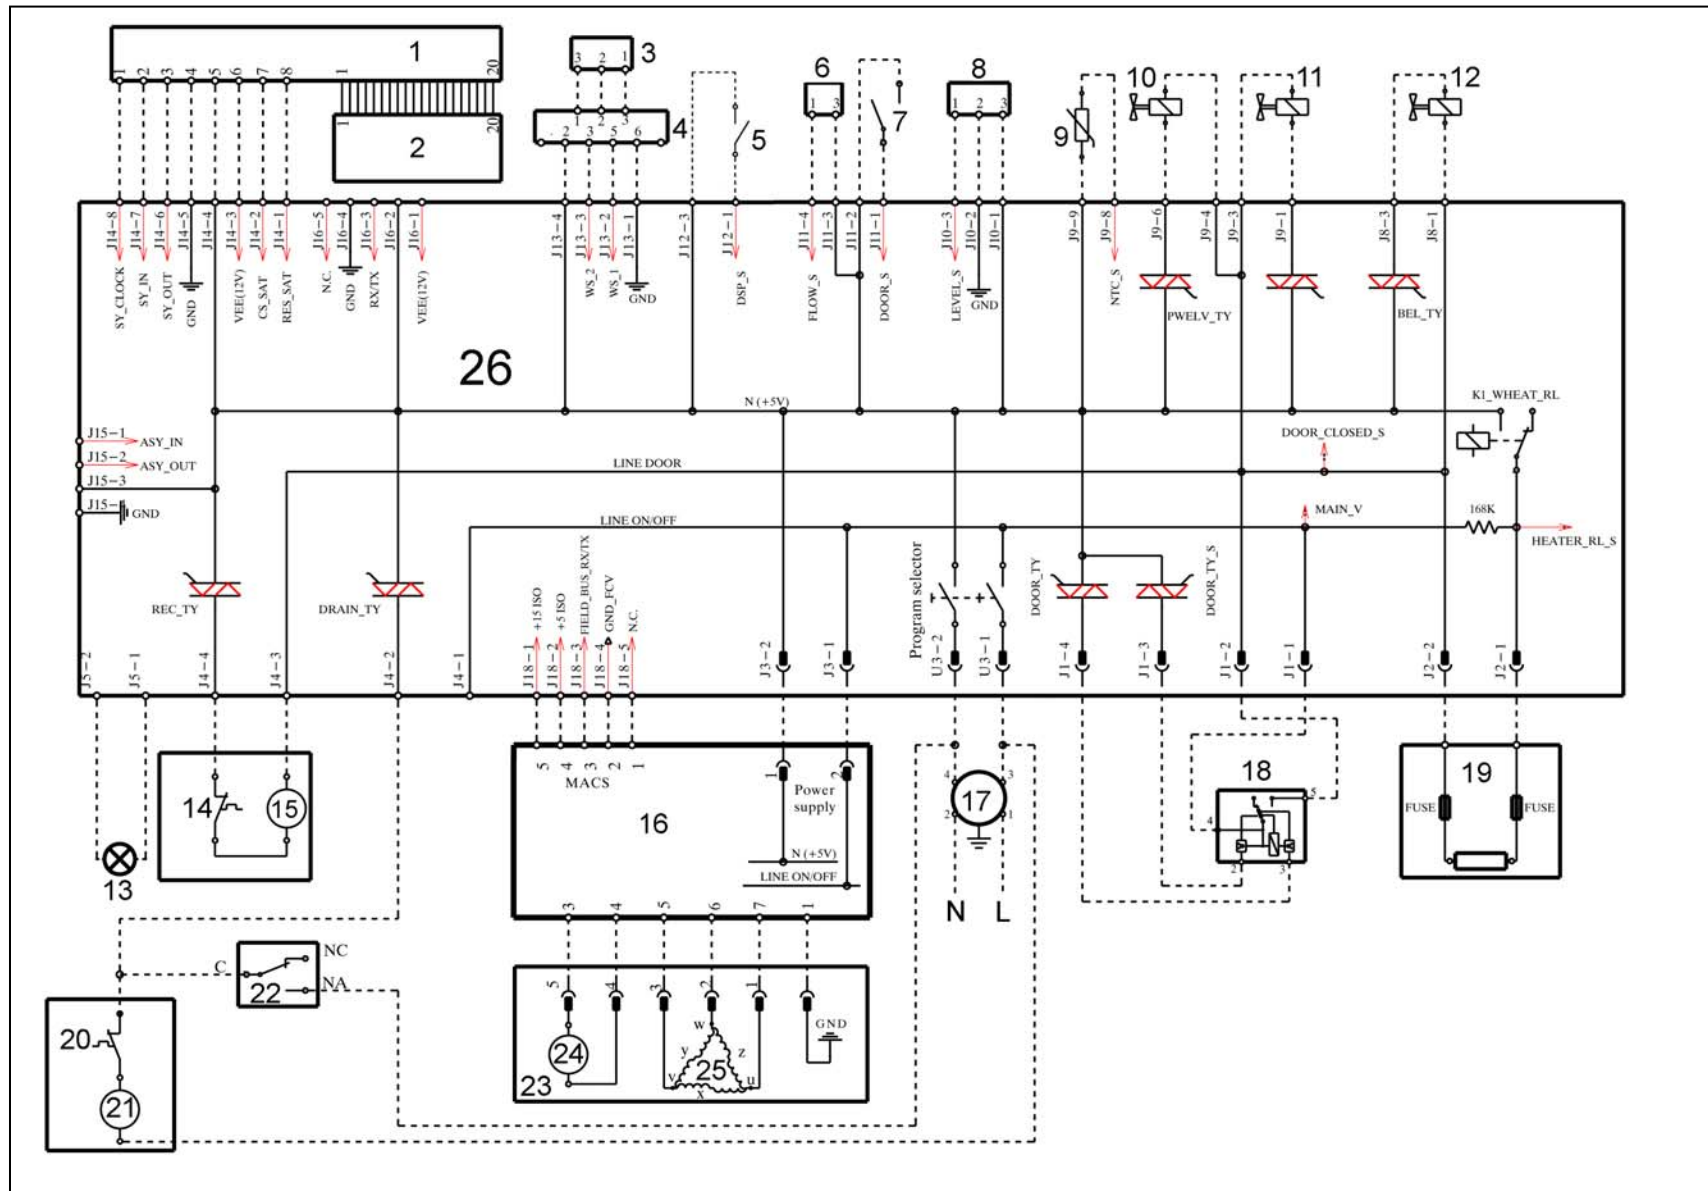

8.1 Key to circuit diagram EWM35xx with Aqua Control

Electrical components on appliance	Components on main board	
1. Circuit board for LCD (TC1)	DOOR_TY	Door interlock Triac
2. LCD Module	DRAIN_TY	Drain pump Triac
3. Damper with weight sensor	REC_TY	Triac circulation pump
4. Circuit board for weight sensor	K1	Heating element relay
5. Drum positioning sensor (DSP)	ON/OFF	Main switch (programme selector)
6. Flowmeter	PWELW_TY	Pre-wash solenoid Triac
7. Miscroswitch on door lock for drum light	WELV_TY	Wash solenoid Triac
8. Analogic pressure switch	BEL_TY	Bleach solenoid Triac
9. Washing NTC temperature sensor		
10. Solenoid valve for prewash		
11. Solenoid valve for wash		
12. Solenoid valve for bleach		
13. Drum light		
14. Thermal cut-out (circulation pump)		
15. Pump circulation		
16. Motor control board (FCV)		
17. Interference filter		
18. Instantaneous door interlock		
19. Heating element (with thermal fuses)		
20. Thermal cut-out (drain pump)		
21. Drain pump		
22. Aqua control (water leaks device)		
23. Three-phase motor (induction)		
24. Tachometric generator (motor)		
25. Stator (motor)		
26. Main circuit board		


9 BASIC CIRCUIT DIAGRAM EWM35xx WITHOUT AQUA CONTROL

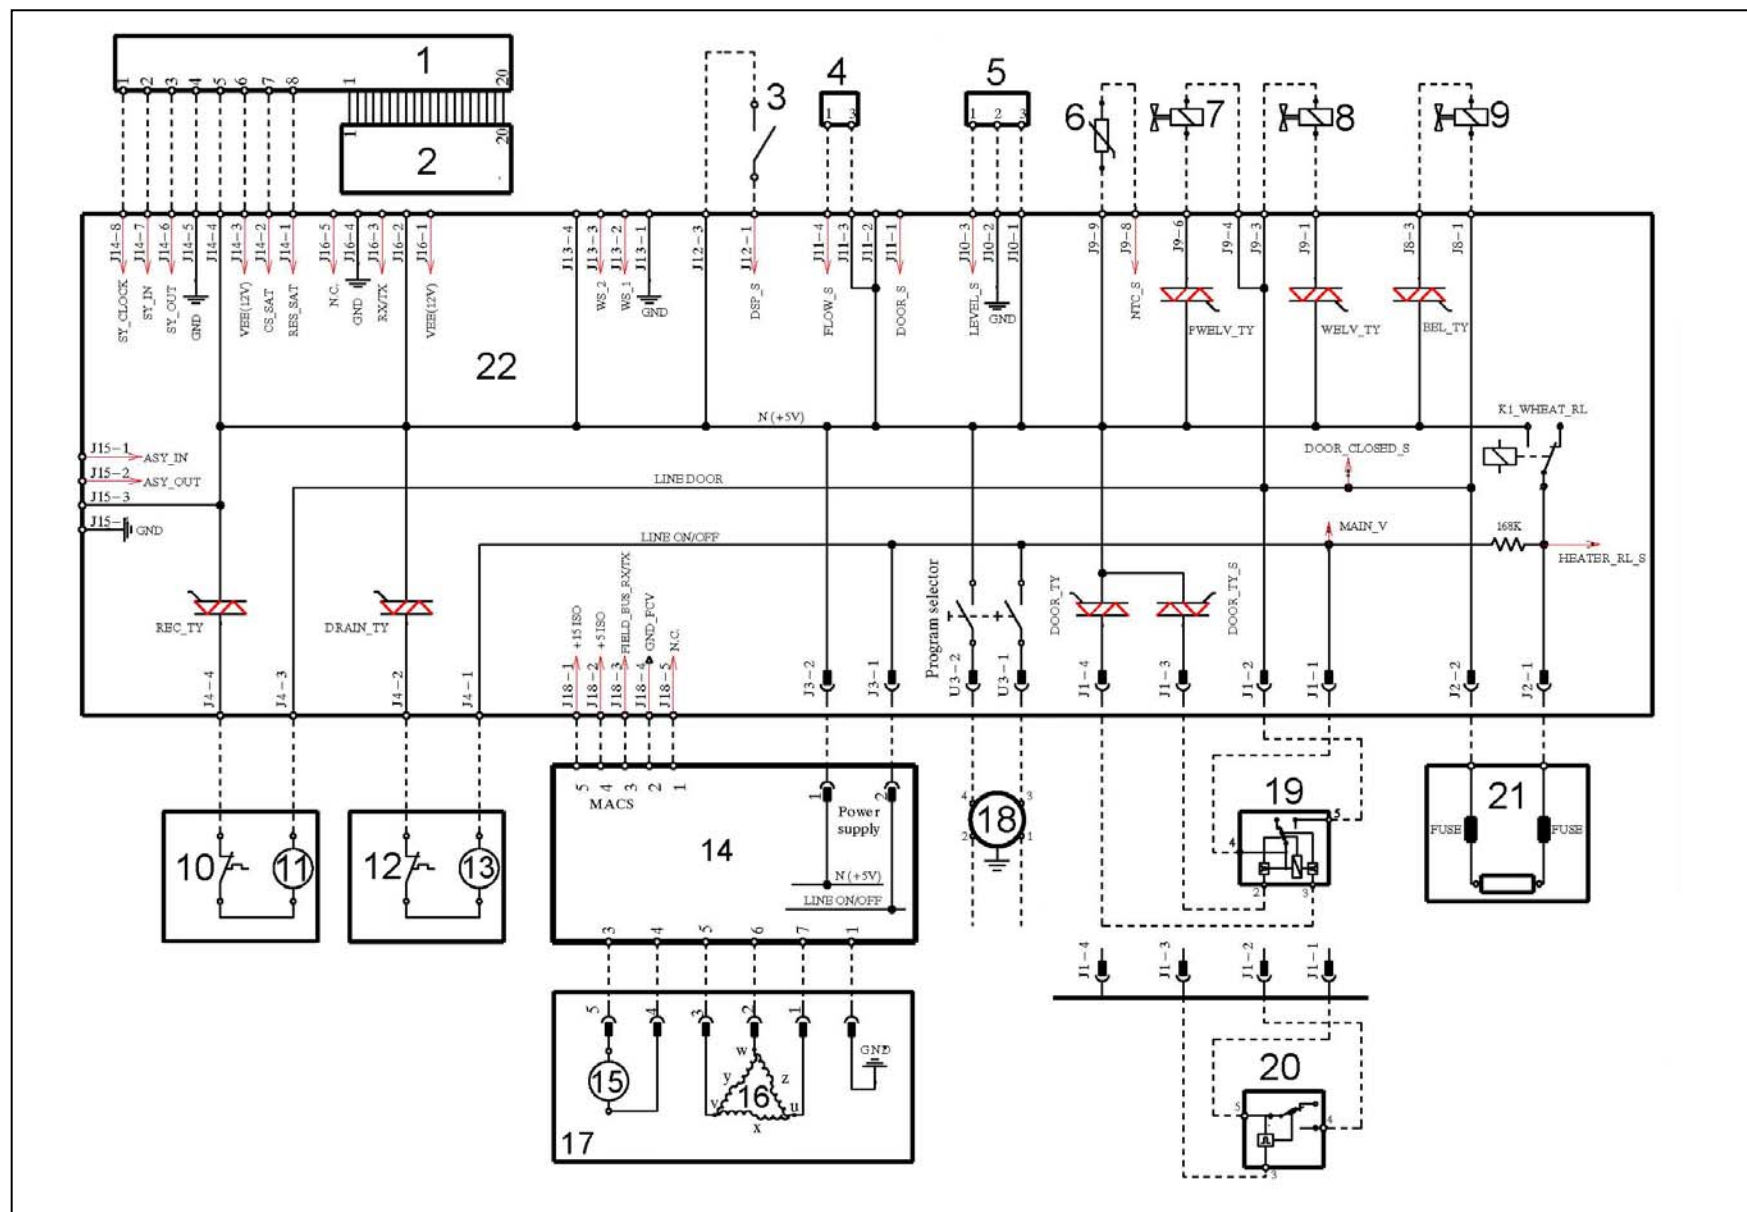

9.1 Key to circuit diagram EWM35xx without Aqua Control

Electrical components on appliance	Components on main board																
<ol style="list-style-type: none"> 1. Circuit board for LCD (TC1) 2. LCD Module 3. Damper with weight sensor 4. Flowmeter 5. Analogic pressure switch 6. Washing NTC temperature sensor 7. Solenoid valve for prewash 8. Solenoid valve for wash 9. Solenoid valve for bleach 10. Thermal cut-out (circulation pump) 11. Pump circulation 12. Thermal cut-out (drain pump) 13. Drain pump 14. Motor control board (FCV) 15. Tachometric generator (motor) 16. Stator (motor) 17. Three-phase motor (induction) 18. Interference filter 19. Instantaneous door interlock 20. Traditional door interlock 21. Washing heating element (with thermal fuses) 22. Main circuit board 	<table border="0"> <tr> <td>DOOR_TY</td><td>Door interlock Triac</td></tr> <tr> <td>DRAIN_TY</td><td>Drain pump Triac</td></tr> <tr> <td>REC_TY</td><td>Triac circulation pump</td></tr> <tr> <td>K1</td><td>Heating element relay</td></tr> <tr> <td>ON/OFF</td><td>Main switch (programme selector)</td></tr> <tr> <td>PWELW_TY</td><td>Pre-wash solenoid Triac</td></tr> <tr> <td>WELV_TY</td><td>Wash solenoid Triac</td></tr> <tr> <td>BEL_TY</td><td>Bleach solenoid Triac</td></tr> </table>	DOOR_TY	Door interlock Triac	DRAIN_TY	Drain pump Triac	REC_TY	Triac circulation pump	K1	Heating element relay	ON/OFF	Main switch (programme selector)	PWELW_TY	Pre-wash solenoid Triac	WELV_TY	Wash solenoid Triac	BEL_TY	Bleach solenoid Triac
DOOR_TY	Door interlock Triac																
DRAIN_TY	Drain pump Triac																
REC_TY	Triac circulation pump																
K1	Heating element relay																
ON/OFF	Main switch (programme selector)																
PWELW_TY	Pre-wash solenoid Triac																
WELV_TY	Wash solenoid Triac																
BEL_TY	Bleach solenoid Triac																


10 BASIC CIRCUIT DIAGRAM EWM25xx WITH AQUA CONTROL

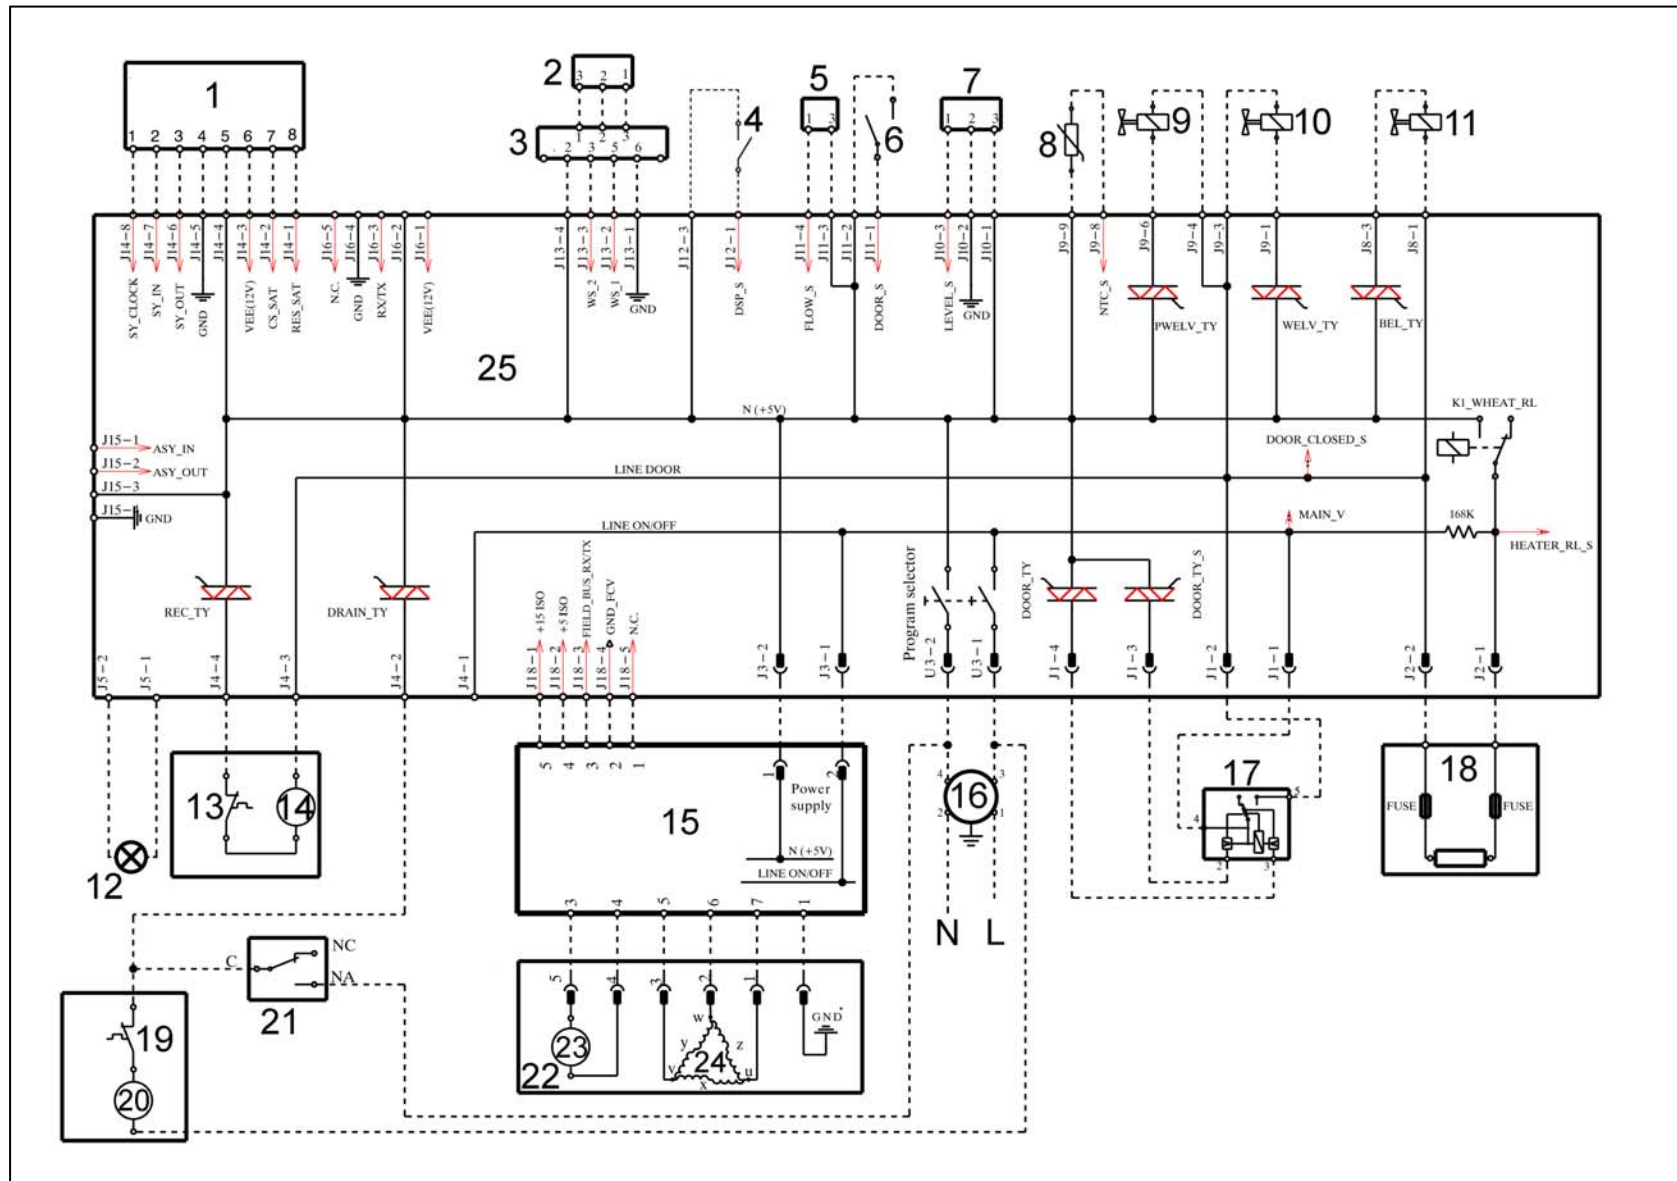

10.1 Key to circuit diagram EWM25xx with Aqua Control

Electrical components on appliance	Components on main board																
<ol style="list-style-type: none"> 1. LCD Module 2. Damper with weight sensor 3. Circuit board for weight sensor 4. Drum positioning sensor (DSP) 5. Flowmeter 6. Microswitch on door lock for drum light 7. Analogic pressure switch 8. Washing NTC temperature sensor 9. Solenoid valve for prewash 10. Solenoid valve for wash 11. Solenoid valve for bleach 12. Drum light 13. Thermal cut-out (circulation pump) 14. Pump circulation 15. Motor control board (FCV) 16. Interference filter 17. Instantaneous door interlock 18. Heating element (with thermal fuses) 19. Thermal cut-out (drain pump) 20. Drain pump 21. Aqua control (water leaks device) 22. Three-phase motor (induction) 23. Tachometric generator (motor) 24. Stator (motor) 25. Main circuit board 	<table border="0"> <tr> <td>DOOR_TY</td><td>Door interlock Triac</td></tr> <tr> <td>DRAIN_TY</td><td>Drain pump Triac</td></tr> <tr> <td>REC_TY</td><td>Triac circulation pump</td></tr> <tr> <td>K1</td><td>Heating element relay</td></tr> <tr> <td>ON/OFF</td><td>Main switch (programme selector)</td></tr> <tr> <td>PWELW_TY</td><td>Pre-wash solenoid Triac</td></tr> <tr> <td>WELV_TY</td><td>Wash solenoid Triac</td></tr> <tr> <td>BEL_TY</td><td>Bleach solenoid Triac</td></tr> </table>	DOOR_TY	Door interlock Triac	DRAIN_TY	Drain pump Triac	REC_TY	Triac circulation pump	K1	Heating element relay	ON/OFF	Main switch (programme selector)	PWELW_TY	Pre-wash solenoid Triac	WELV_TY	Wash solenoid Triac	BEL_TY	Bleach solenoid Triac
DOOR_TY	Door interlock Triac																
DRAIN_TY	Drain pump Triac																
REC_TY	Triac circulation pump																
K1	Heating element relay																
ON/OFF	Main switch (programme selector)																
PWELW_TY	Pre-wash solenoid Triac																
WELV_TY	Wash solenoid Triac																
BEL_TY	Bleach solenoid Triac																


11 BASIC CIRCUIT DIAGRAM EWM25xx WITHOUT AQUA CONTROL

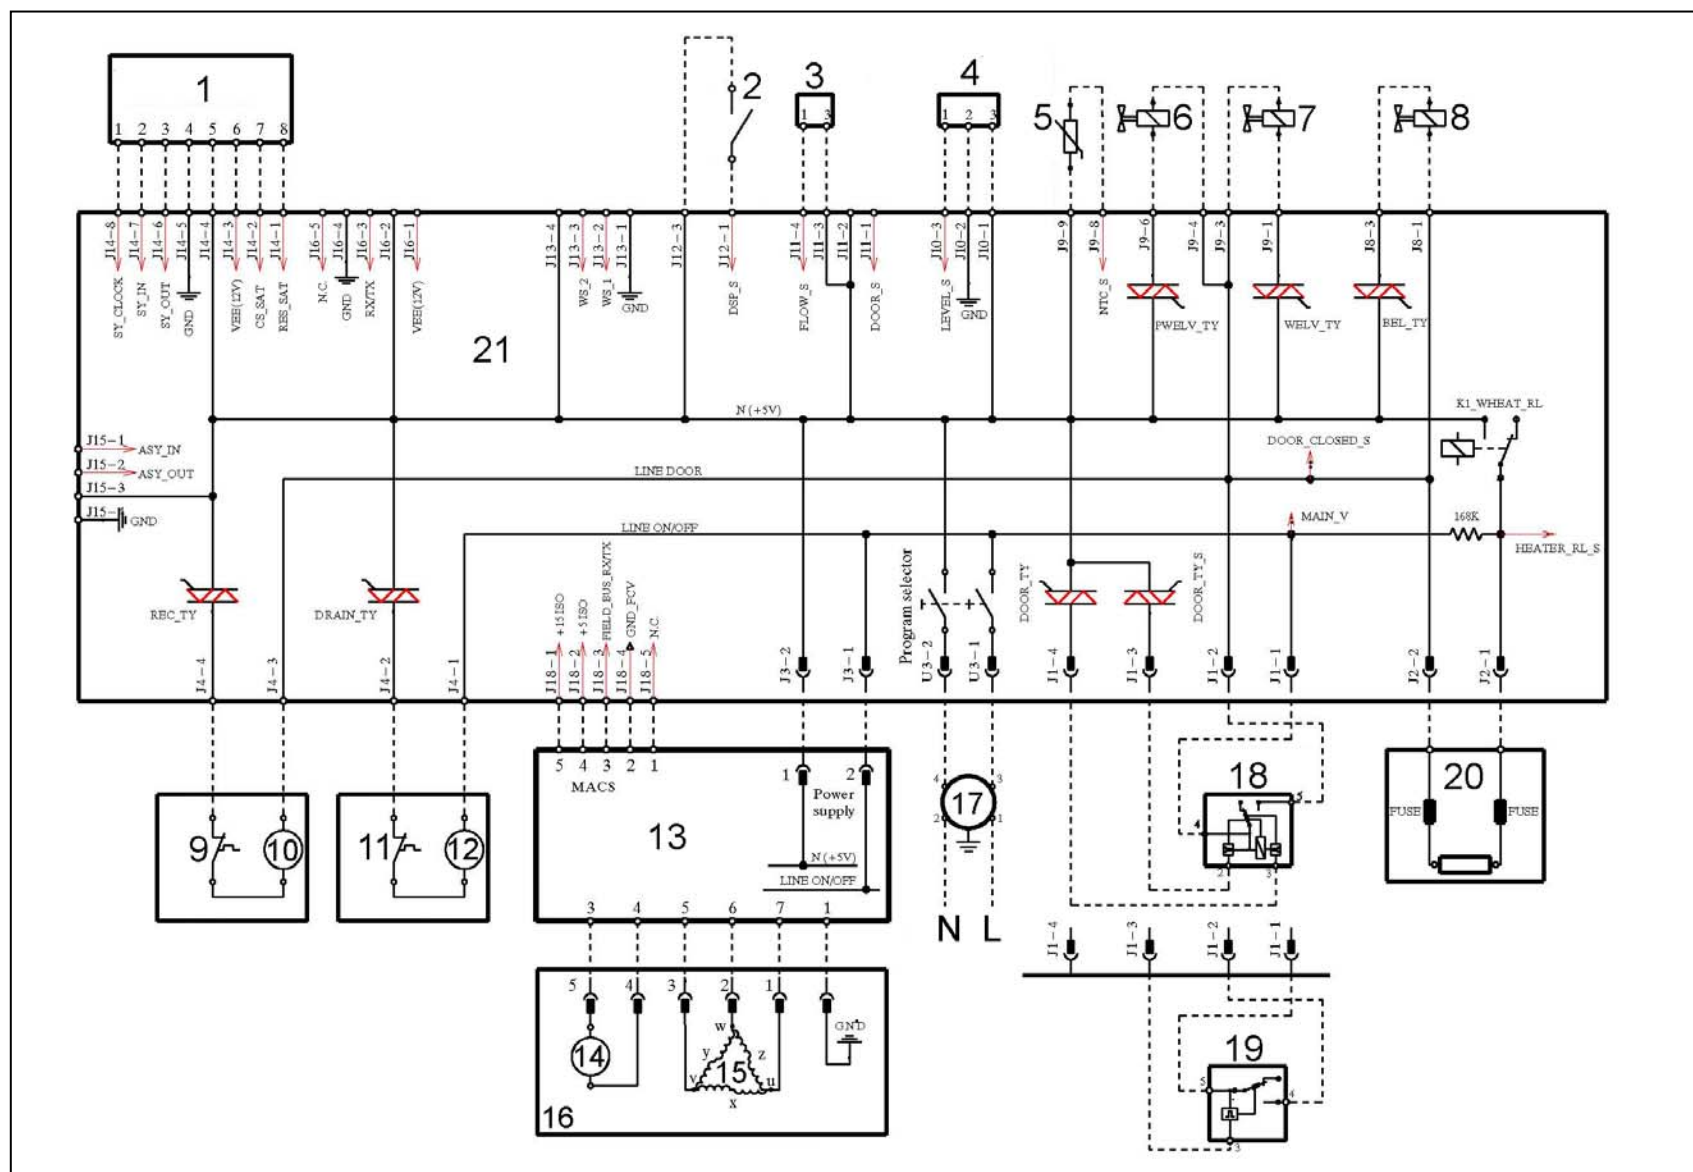

11.1 Key to circuit diagram EWM25xx without Aqua Control

Electrical components on appliance	Components on main board																
<ol style="list-style-type: none"> 1. LCD Module 2. Damper with weight sensor 3. Flowmeter 4. Analogic pressure switch 5. Washing NTC temperature sensor 6. Solenoid valve for prewash 7. Solenoid valve for wash 8. Solenoid valve for bleach 9. Thermal cut-out (circulation pump) 10. Pump circulation 11. Thermal cut-out (drain pump) 12. Drain pump 13. Motor control board (FCV) 14. Tachometric generator (motor) 15. Stator (motor) 16. Three-phase motor (induction) 17. Interference filter 18. Instantaneous door interlock 19. Traditional door interlock 20. Washing heating element (with thermal fuses) 21. Main circuit board 	<table border="0"> <tr> <td>DOOR_TY</td><td>Door interlock Triac</td></tr> <tr> <td>DRAIN_TY</td><td>Drain pump Triac</td></tr> <tr> <td>REC_TY</td><td>Triac circulation pump</td></tr> <tr> <td>K1</td><td>Heating element relay</td></tr> <tr> <td>ON/OFF</td><td>Main switch (programme selector)</td></tr> <tr> <td>PWELW_TY</td><td>Pre-wash solenoid Triac</td></tr> <tr> <td>WELV_TY</td><td>Wash solenoid Triac</td></tr> <tr> <td>BEL_TY</td><td>Bleach solenoid Triac</td></tr> </table>	DOOR_TY	Door interlock Triac	DRAIN_TY	Drain pump Triac	REC_TY	Triac circulation pump	K1	Heating element relay	ON/OFF	Main switch (programme selector)	PWELW_TY	Pre-wash solenoid Triac	WELV_TY	Wash solenoid Triac	BEL_TY	Bleach solenoid Triac
DOOR_TY	Door interlock Triac																
DRAIN_TY	Drain pump Triac																
REC_TY	Triac circulation pump																
K1	Heating element relay																
ON/OFF	Main switch (programme selector)																
PWELW_TY	Pre-wash solenoid Triac																
WELV_TY	Wash solenoid Triac																
BEL_TY	Bleach solenoid Triac																


12 BASIC CIRCUIT DIAGRAM EWM25xx WD WITH AQUA CONTROL

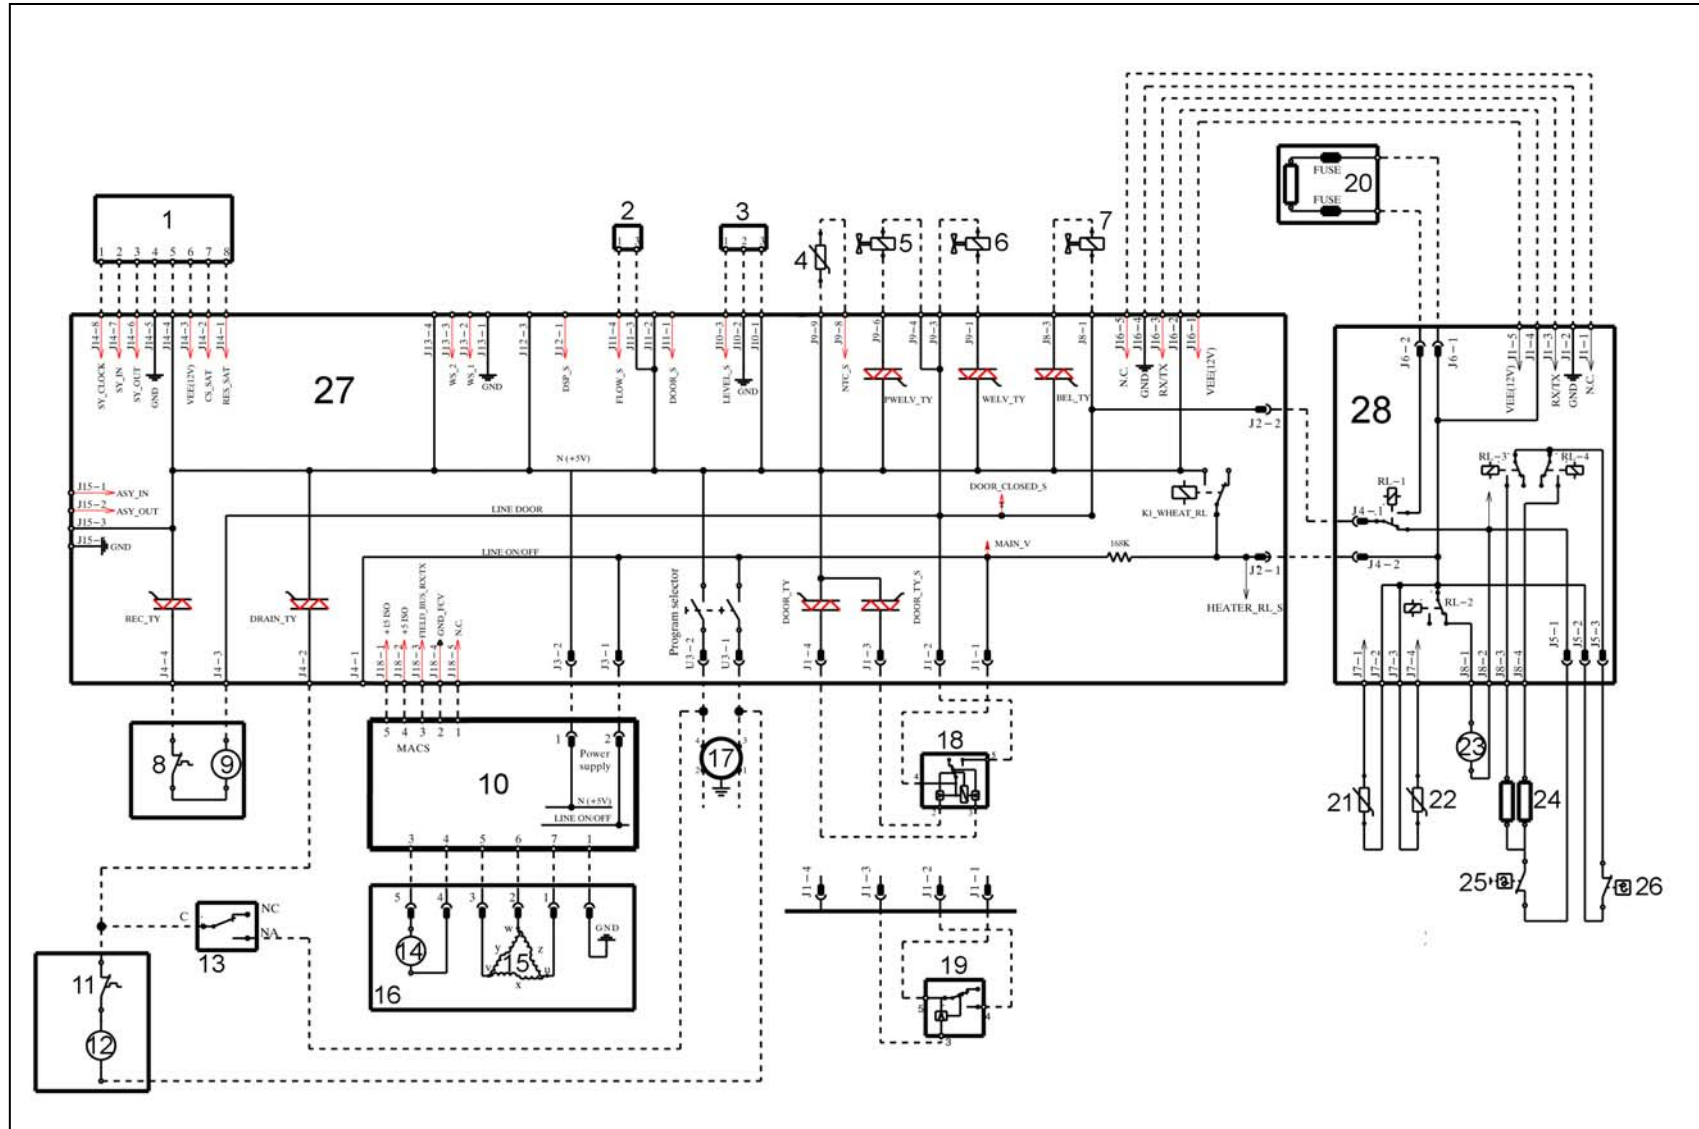

12.1 Key to circuit diagram EWM25xx WD with Aqua Control

Electrical components on appliance	Components on main board	
1. LCD Module	DOOR_TY	Door interlock Triac
2. Flowmeter	DRAIN_TY	Drain pump Triac
3. Analogue pressure switch	REC_TY	Circulation pump Triac
4. NTC temperature sensor	K1	WD board supply relay
3. Solenoid valve for prewash	ON/OFF	Main switch (programme selector)
4. Solenoid valve for wash	PWELW_TY	Pre-wash solenoid Triac
5. Condensation solenoid valve	WELV_TY	Wash solenoid Triac
6. Thermal cut-out (circulation pump)	BEL_TY	Condensation solenoid Triac
7. Pump circulation		
8. Motor control board (FCV)		
9. Thermal cut-out (drain pump)		
10. Drain pump		
11. Aqua Control (water leaks device)		
12. Tachometric generator (motor		
13. Stator (motor)		
14. Induction motor		
15. Interference filter		
16. Instantaneous door interlock		
17. Traditional door interlock		
18. Heating element (with thermal fuses)		
19. Humidity temperature sensor		
20. Drying temperature sensor		
21. Fan motor		
22. Drying heaters		
23. Thermostat with manual reset		
24. Thermostat with automatic reset		
25. Main circuit board		
26. WD circuit board		

13 BASIC CIRCUIT DIAGRAM EWM25xx WD WITHOUT AQUA CONTROL

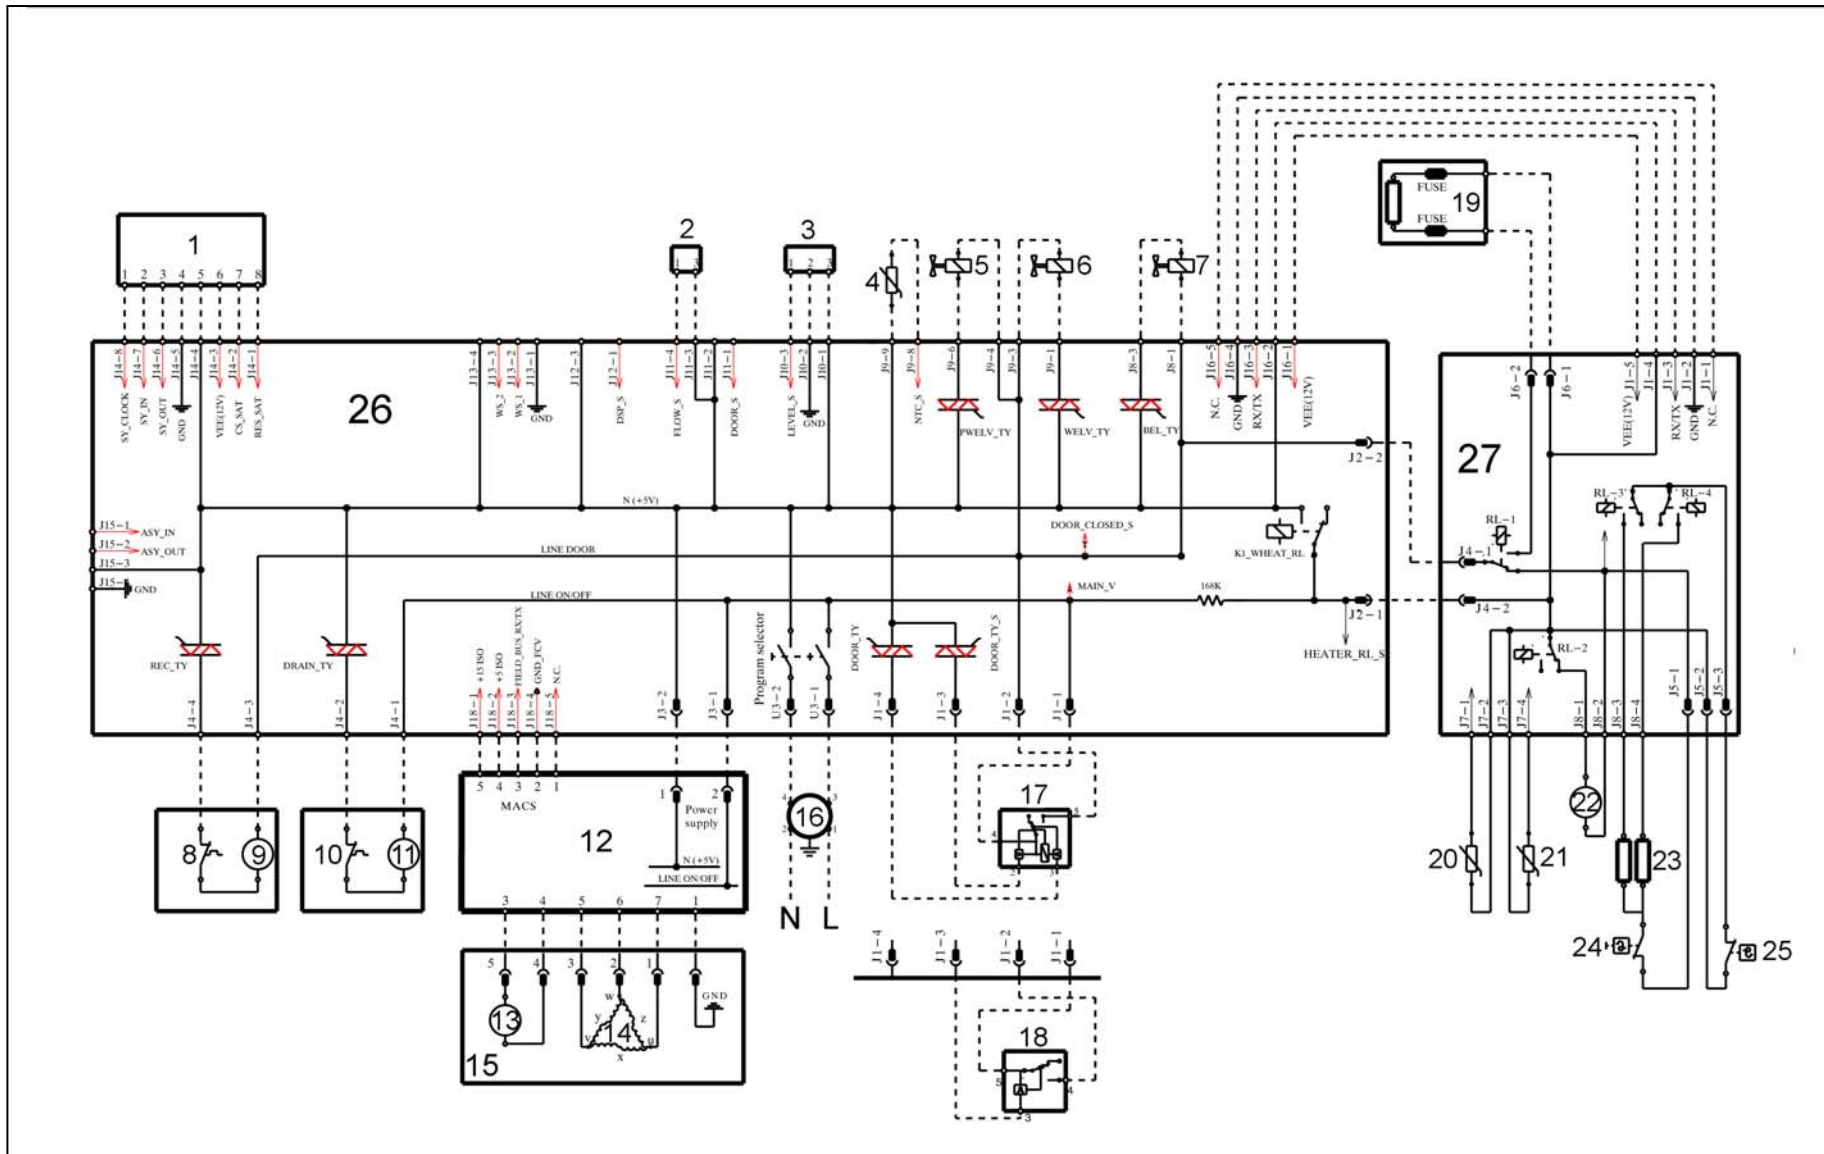


13.1 Key to circuit diagram EWM25xx WD without aqua control

Electrical components on appliance	Components on main board																
<ol style="list-style-type: none"> 1. LCD Module 2. Flowmeter 3. Analogue pressure switch 4. NTC temperature sensor 5. Solenoid valve for prewash 6. Solenoid valve for wash 7. Condensation solenoid valve 8. Thermal cut-out (circulation pump) 9. Pump circulation 10. Thermal cut-out (drain pump) 11. Drain pump 12. Aqua Control (water leaks device) 13. Tachometric generator (motor 14. Stator (motor) 15. Induction motor 16. Interference filter 17. Instantaneous door interlock 18. Traditional door interlock 19. Heating element (with thermal fuses) 20. Humidity temperature sensor 21. Drying temperature sensor 22. Fan motor 23. Drying heaters 24. Thermostat with manual reset 25. Thermostat with automatic reset 26. Main circuit board 27. WD circuit board 	<table border="0"> <tr> <td>DOOR_TY</td><td>Door interlock Triac</td></tr> <tr> <td>DRAIN_TY</td><td>Drain pump Triac</td></tr> <tr> <td>REC_TY</td><td>Circulation pumpTriac</td></tr> <tr> <td>K1</td><td>WD board supply relay</td></tr> <tr> <td>ON/OFF</td><td>Main switch (programme selector)</td></tr> <tr> <td>PWELW_TY</td><td>Pre-wash solenoid Triac</td></tr> <tr> <td>WELV_TY</td><td>Wash solenoid Triac</td></tr> <tr> <td>BEL_TY</td><td>Condensation solenoid Triac</td></tr> </table>	DOOR_TY	Door interlock Triac	DRAIN_TY	Drain pump Triac	REC_TY	Circulation pumpTriac	K1	WD board supply relay	ON/OFF	Main switch (programme selector)	PWELW_TY	Pre-wash solenoid Triac	WELV_TY	Wash solenoid Triac	BEL_TY	Condensation solenoid Triac
DOOR_TY	Door interlock Triac																
DRAIN_TY	Drain pump Triac																
REC_TY	Circulation pumpTriac																
K1	WD board supply relay																
ON/OFF	Main switch (programme selector)																
PWELW_TY	Pre-wash solenoid Triac																
WELV_TY	Wash solenoid Triac																
BEL_TY	Condensation solenoid Triac																

14 CONNECTORS ON CIRCUIT BOARD WM/WD


J15/J15B	J16	J12	J9	J18	J2
Serial interface: J15-1 ASY_IN J15-2 ASY_OUT J15-3 +5V J15-4 GND	Communication with WD external board: J16-1 Vee +12V J16-2 +5V J16-3 Rx/Tx J16-4 GND J16-5 N.C.	Drum positioning system DSP: J12-1 signal J12-2 N.C. J12-3 +5V J11 J11-3 Flowmeter (GND) J11-4 Flowmeter (signal)	JJ9-1 Washing solenoid (triac) J9-3 Solenoids (line) J9-4 Solenoids (line) J9-6 Pre-wash solenoid (triac) J9-8 NTC temperature sensor J9-9 NTC temperature sensor	Communication with FCV board: J18-1 VEE +12 J18-2 +5V J18-3 Signal J18-4 GND J18-5 N.C.	Heating element: J2-1 Relay J2-2 Line
J14	J13	J10	J8	J4	J1
LCD Module: J14-1 RES_SAT J14-2 CS_SAT J14-3 Vee (12V) J14-4 GND J14-5 +5V J14-6 SY_OUT J14-7 SY_IN J14-8 SY_CLOCK	Weight sensor: J13-1 (GND) J13-2 (WS-1) J13-3 (WS-2) J13-4 (+5V)	Analogic pressure switch: J10-1 +5V J10-2 GND J10-3 signal	Beach/condensation solenoid: J8-1 Line J8-3 Tiac	J4-1 N.C. J4-2 Drain pump (triac) J4-3 Drain pump (line) J4-4 Circulation pump (triac)	Door lock device: J1-1 Line (ON/OFF) J1-2 Line (door) J1-3 Line (sensing) J1-4 Triac
				J5	U3
				Drum light: J5-1 +5V' J5-2 GND	U3-1 line U3-2 line (neutral)

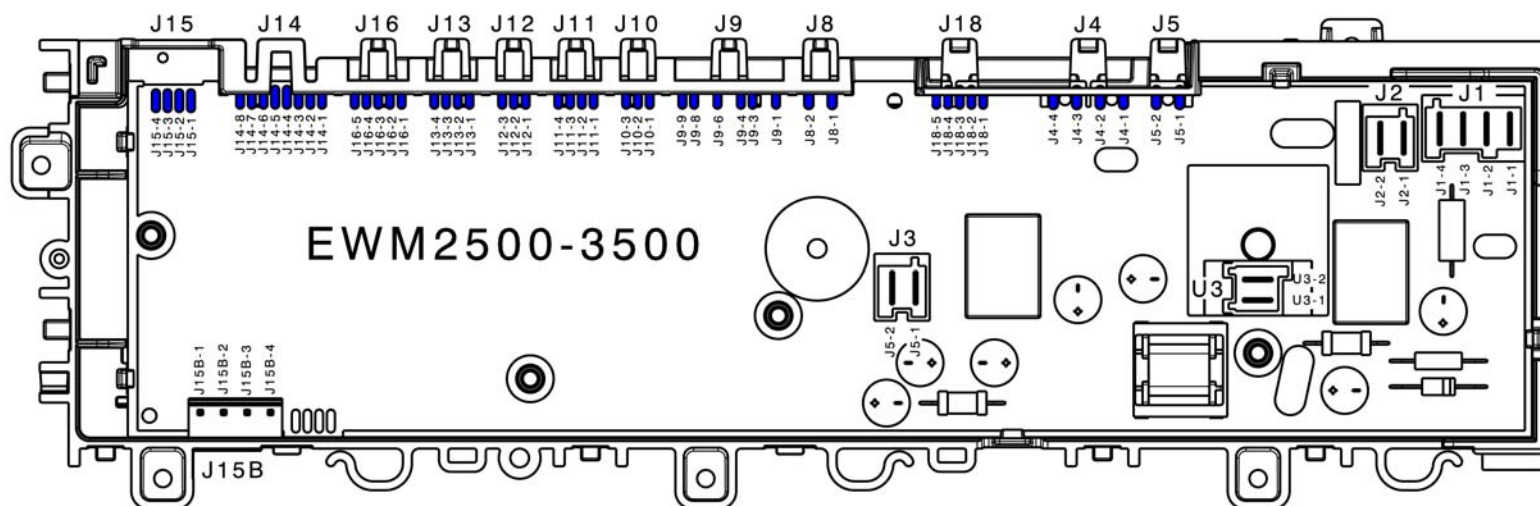

15 BURNING ON THE CIRCUIT BOARDS EWM25xx/35xx WM/WD

In case of burning on the main circuit board, check that the problem is not caused by another electrical component (short-circuits, poor insulation, water leakage). Refer to the figures below in order to identify the component that might have caused the burning according to the position of the burned area.


The circuit board shown below is the version with the greatest number of components: other boards may not feature all these components.

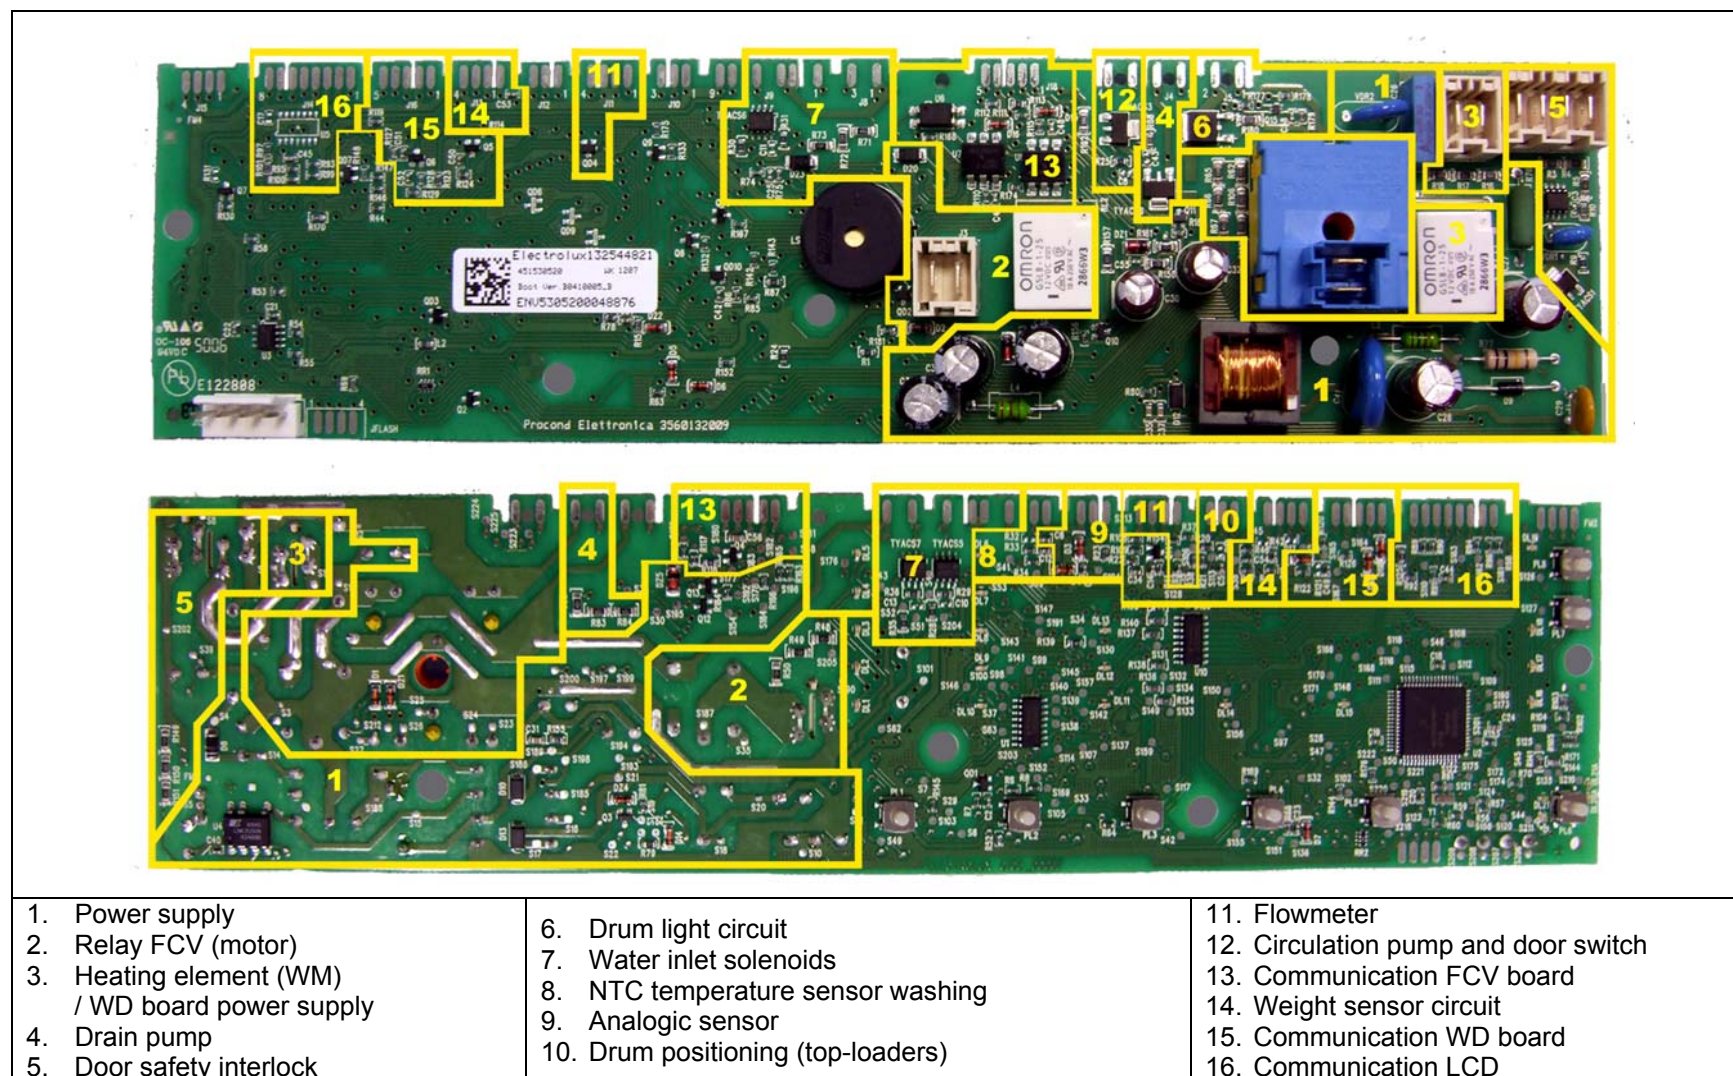

16 BURNING ON THE CIRCUIT BOARD WD

In case of burning on the main circuit board, check that the problem is not caused by another electrical component (short-circuits, poor insulation, water leakage). Refer to the figures below in order to identify the component that might have caused the burning according to the position of the burned area.

The circuit board shown below is the version with the greatest number of components: other boards may not feature all these components.

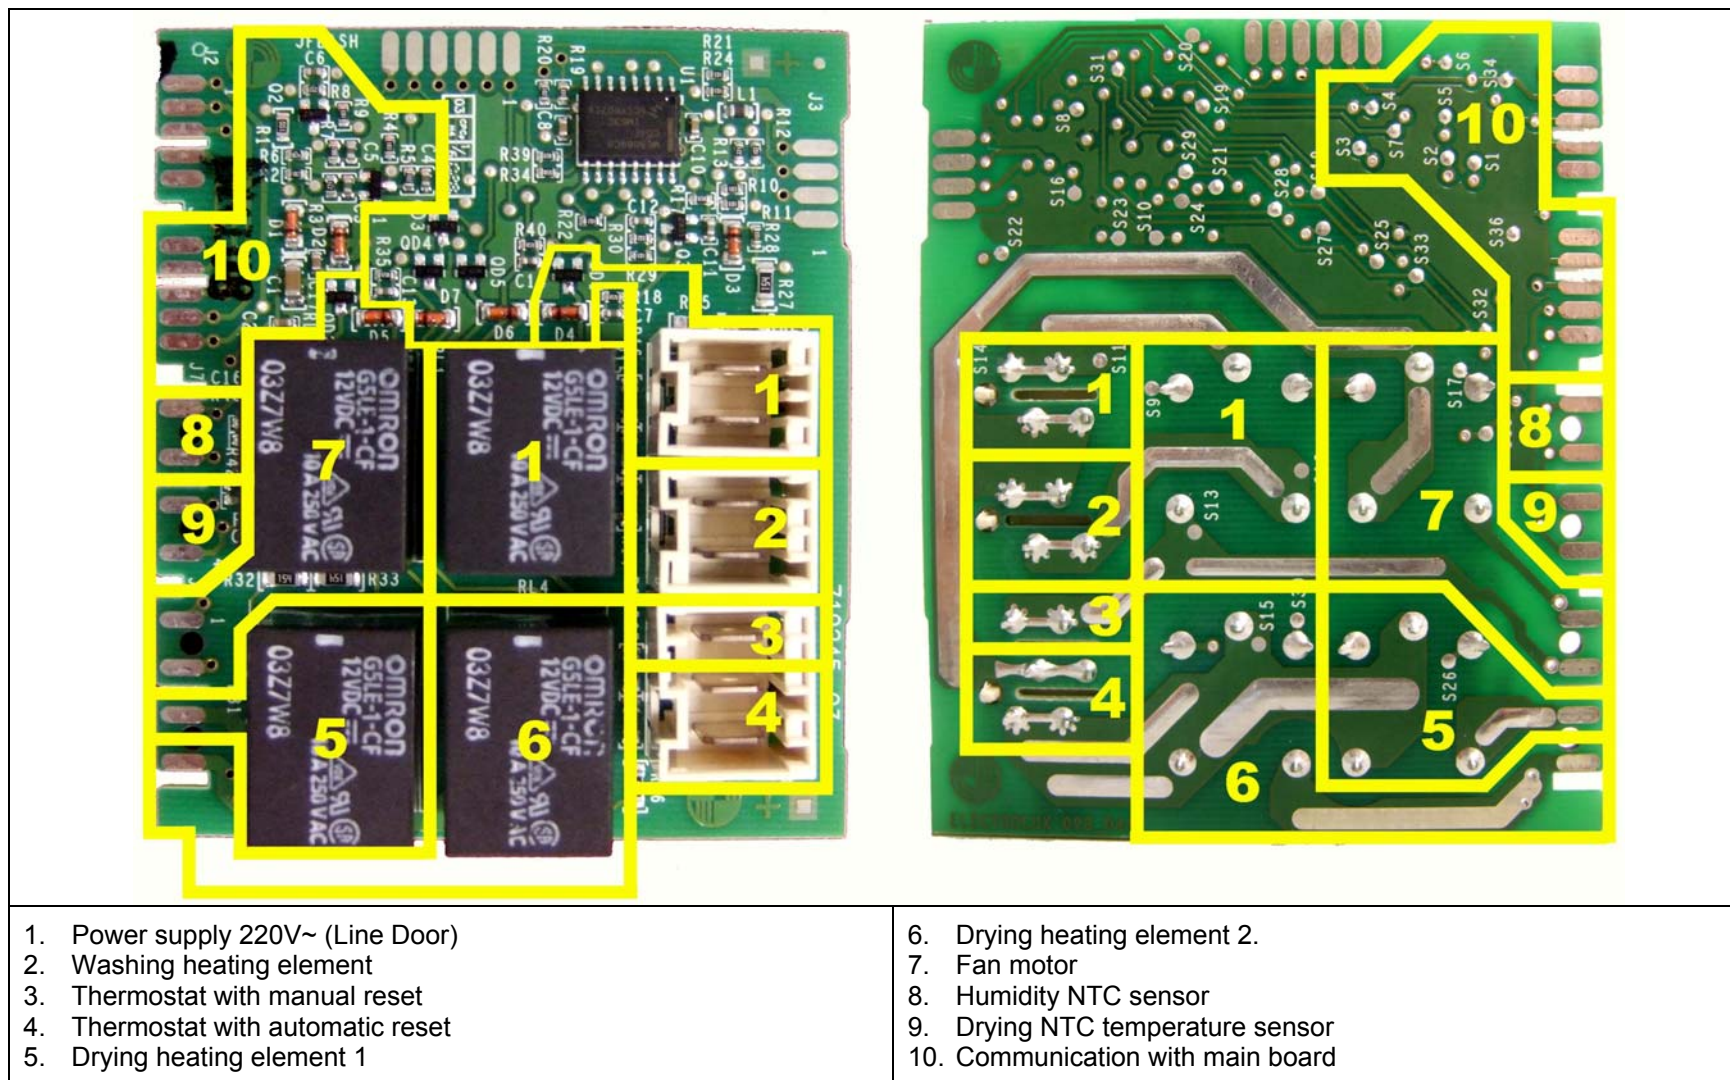

17 APPENDIX

REVISION	DATE	DESCRIPTION
01	03/2009	Modification of Alarms E21-E22 page 17 / Alarm EF3 page 94