

Cobalt Digital Incorporated

9321

HD/SD Audio Embedder Owner's Manual



9321-UM
Version: 0.5

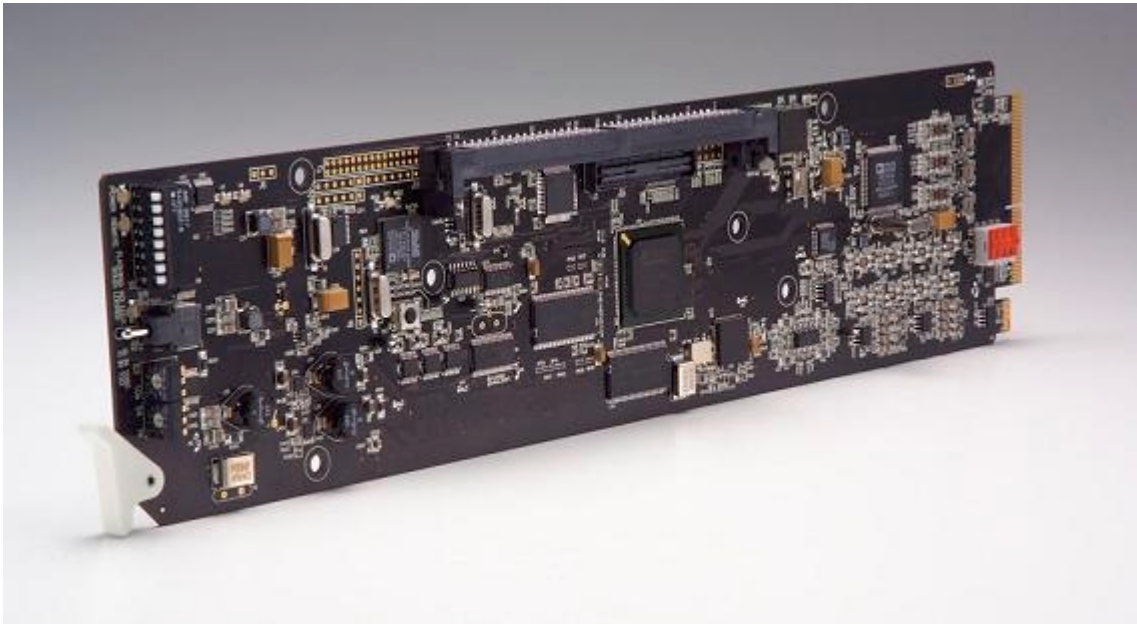

9321 • HD/SD Audio Embedder User Manual

- Cobalt Part Number: **9321-UM**
- Document Version: **0.5.0**
- Printed in the United States.
- Last Author: MB
- Printing Date: 12/18/07 10:19 AM

The information contained in this User Manual is subject to change without notice or obligation.

Copyright


© 2007 Cobalt Digital Incorporated. All rights reserved.

Contents of this publication may not be reproduced in any form without the written permission of Cobalt Digital Incorporated. Reproduction or reverse engineering of copyrighted software is prohibited.

Notice

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as a commitment by Cobalt Digital Incorporated. Cobalt Digital Incorporated assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

Trademarks

-  is a registered trademark of Ross Video Limited.
- “Cobalt Digital” is a registered trademark of Cobalt Digital Incorporated
- All other product names and any registered and unregistered trademarks mentioned in this manual are used for identification purposes only and remain the exclusive property of their respective owners.

Important Regulatory and Safety Notices

Before using this product and any associated equipment, refer to the “Important Safety Instructions” listed below so as to avoid personnel injury and to prevent product damage.

Products may require specific equipment, and /or installation procedures be carried out to satisfy certain regulatory compliance requirements. Notices have been included in this publication to call attention to these specific requirements.

Symbol Meanings



This symbol on the equipment refers you to important operating and maintenance (servicing) instructions within the Product Manual Documentation. Failure to heed this information may present a major risk of damage or injury to persons or equipment.



Warning

The symbol with the word “**Warning**” within the equipment manual indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury.



Caution

The symbol with the word “**Caution**” within the equipment manual indicates a potentially hazardous situation, which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



Notice

The symbol with the word “**Notice**” within the equipment manual indicates a situation, which if not avoided, may result in major or minor equipment damage or a situation which could place the equipment in a non-compliant operating state.



**ESD
Susceptibility**

This symbol is used to alert the user that an electrical or electronic device or assembly is susceptible to damage from an ESD event.

Important Safety Instructions



Caution

This product is intended to be a component product of the openGear frame. Refer to the openGear frame User Manual for important safety instructions regarding the proper installation and safe operation of the frame as well as its component products.



Warning

Certain parts of this equipment namely the power supply area still present a safety hazard, with the power switch in the OFF position. To avoid electrical shock, disconnect all A/C power cords from the chassis' rear appliance connectors before servicing this area.



Warning

Service barriers within this product are intended to protect the operator and service personnel from hazardous voltages. For continued safety, replace all barriers after any servicing.

This product contains safety critical parts, which if incorrectly replaced may present a risk of fire or electrical shock. Components contained within the product's power supplies and power supply area, are not intended to be customer serviced and should be returned to the factory for repair.

To reduce the risk of fire, replacement fuses must be the same type and rating.


Only use attachments/accessories specified by the manufacturer.

Environmental Information

The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Cobalt Digital encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.

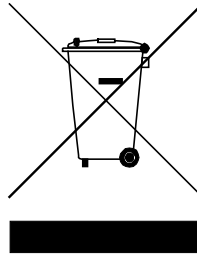

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You can also contact Cobalt Digital for more information on the environmental performances of our products.

openGear Contents

Introduction	6
In This Chapter.....	6
A Word of Thanks.....	6
Overview.....	6
Functional Block Diagram.....	7
Supported Audio and Video Formats.....	8
Input and Output Video.....	8
Embedded Audio.....	8
Analog Audio.....	9
Discrete AES Audio Input.....	9
Documentation Terms.....	9
Installation and Setup	10
In This Chapter.....	10
Static Discharge.....	10
Unpacking.....	10
Rear Module Installation (Optional).....	11
Board Installation.....	12
Cable Connections.....	12
Card Control and Status.....	13
Card Status.....	13
Menu Navigation.....	13
Menu Structure.....	13
Parameter Type Descriptions.....	14
Factory Default Settings.....	16
Remote Control	17
In This Chapter.....	17
DashBoard Control System Software.....	17
Service Information	19
In This Chapter.....	19
Troubleshooting Checklist.....	19
Warranty and Repair Policy.....	19
Ordering Information	21
9321 and Related Products.....	21

Introduction

In This Chapter

This chapter includes the following sections:

- A Word of Thanks
- Overview
- Functional Block Diagram
- Features
- Documentation Terms

A Word of Thanks

Congratulations on choosing the openGear **9321 HD/SD Audio Embedder**. The 9321 is part of a full line of modular conversion gear for broadcast TV environments. The Cobalt Digital openGear line includes video decoders and encoders, audio embedders and de-embedders, distribution amplifiers, format converters, and much more. Cobalt openGear modular conversion gear will meet your signal conversion needs now and well into the future.

Should you have questions pertaining to the installation or operation of your 9321, please contact us at the numbers listed on the back cover of this manual. We are happy to help with any questions regarding this or any other openGear card.

Overview

The 9321 is a high quality audio embedder capable of embedding audio signals into HD or SD SDI signals. It also gives as outputs, two re-clocked copies of the input.

The 9321 can best be thought of as having an audio router on the card. On the input side of the router are the up to 16 channels of embedded AES in the input video, the up to 16 channels (8 pairs) of discrete AES input, up to 8 channels of differential analog audio input. On the output side are the up to 16 channels of embedded AES audio. The router acts as a full audio cross point: each of the 16 output embedded channels can receive signal from any one of the 40 (16 embedded AES, 16 discrete AES, 8 Analog) input channels. Each output also allows gain adjustment and optional polarity inversion.

Audio rates are always 48kHz nominally but discrete AES inputs pass through sample rate converters to align them with the output timing. Analog audio is differential input and sampled at 48 kHz with 0 dbFS digital equivalent to +24 dBu analog.

The product also provides full color processing control of the output video, with separate controls for Gain, Lift, Saturation and Color Phase.

All card configuration is done with a simple front panel menu. There is a four character text display to view and control parameters, and a toggle switch and two buttons to navigate the menu. All settings available on the front panel can also be accessed through Dashboard remote control software provided the openGear frame being used has an 8310-N network card installed.

The card has persistent storage of all settings. There is a menu option to trigger a save or load of stored settings, or to restore the factory default configuration.

The input and outputs of the 9321 are the following:

Input:

- ❑ One dual-rate HD/SD-SDI video input
- ❑ 8 dedicated AES input connections
- ❑ 8 differential analog audio inputs

Outputs:

- ❑ Two dual-rate HD/SD-SDI video outputs
- ❑ Two dual-rate HD/SD-SDI re-clocked copies of input

Functional Block Diagram

The 9321 has a very flexible signal flow path and feature set that combines several products into one compact package. This section describes the basic operation of your 9321 product.

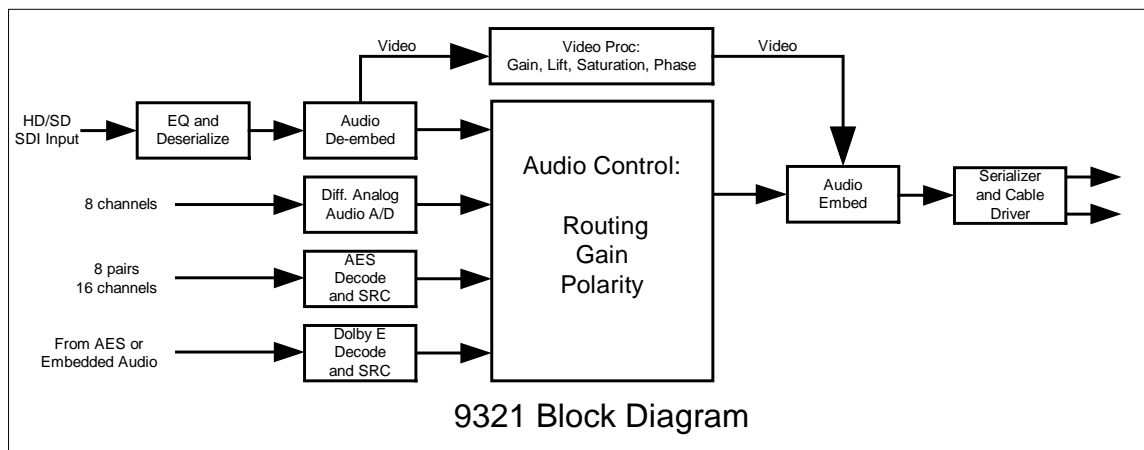


Figure 1. Simplified Block Diagram of 9321 Functions

The 9321 is best thought of as having a large audio router, with a variety of input format and output formats available. Router inputs are de-embedded audio, discrete AES audio, differential analog audio. Router outputs are embedded audio.

Each router output provides a gain and polarity control, and **each router output can be sourced from any input channel**. This router feature gives your 9321 a great deal of flexibility.

There is also a video proc module to allow any necessary corrections to the inbound video signal. It has separate controls for Luma gain (Y channel), Saturation (C channel gain), Lift (Y channel offset), and Phase adjustment (C channel).

Supported Audio and Video Formats

Input and Output Video

The 9321 supports a wide range of video formats for embedding. The output video rate is always precisely the same as the input video rate. Video delay through the device is less than one microsecond.

Table 1. Supported Embedding

Video standard
1080 sF 23.98
1080 p 23.98
1080 sF 24
1080 p 24
1080 i 25
1080 p 25
1080 i 29.97
1080 p 29.97
1080 i 30
1080 p 30
720 p23.98
720 p24
720 p 25
720 p 29.97
720 p 30
720 p 50
720 p 59.94
720 p 60
486 i 29.97
575 i 25

Notes:

1. All rates translated to effective frame rates, interlaced rates “i” are two times the number shown. For example, i 29.97 is 59.94 fields per second (two fields per frame thus the interlaced frame rate is 29.97); but progressive “p” 29.97 is 29.97 frames per second.
2. SD active line rates are PAL (575) and NTSC (486).

Embedded Audio

The 9321 supports all four groups (16 channels) of embedded audio at full 24 bit resolution in both SD (with extended data packets) and HD.

Analog Audio

The 9321 supports 8 channels differential analog audio. The analog audio is encoded in such a way as to make +24 dBu (analog) equivalent to 0 dBFS (digital). Analog audio conversion can be disabled to reduce power consumption.

Discrete AES Audio Input

The 9321 can accept 16 channels (8 pairs) of discrete AES audio on 75 ohm BNC connections. The AES must have a nominal rate of approximately 48 kHz. Sample rate conversion is employed to account for minor clock rate differences in the AES stream and the input video stream. However, the card does not support AES input at 32 kHz, 44.1 kHz, 96 kHz or 192 kHz rates.

Documentation Terms

The following terms are used throughout this guide:

- **“Frame”** refers to the **8310** frame that houses the **9321** card.
- **“Operator”** and **“User”** both refer to the person who uses the **9321**.
- **“Board”** and **“Card”** all refer to the **9321** card itself, including all components and switches.
- **“System”** and **“Video system”** refers to the mix of interconnected production and terminal equipment in which the **9321** operates.

Installation and Setup

In This Chapter

This chapter includes the following sections:

- Static Discharge
- Unpacking
- Rear Module Installation (Optional)
- Board Installation
- BNC Connections
- Menu Structure
- Factory Defaults

Static Discharge

Whenever handling the card and other related equipment, please observe all static discharge precautions as described in the following note:



**ESD
Susceptibility**

Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas, and when wearing synthetic fiber clothing. Always exercise proper grounding precautions when working on circuit boards and related equipment.

Unpacking

Unpack each card you received from the shipping container, and check the contents against the packing list to ensure that all items are included. If any items are missing or damaged, contact your sales representative or Cobalt Digital directly.

Rear Module Installation (Optional)

If you are installing the card in a 8310-C-BNC or 8310-BNC frame (one with a 100 BNC rear module installed across the entire back plane), skip this section.

If you are installing the card into a slot with no rear module, you should have ordered and received a 8310-RM-10 Rear Module with your card. You will need to install it in your 8310 frame before you can connect cables.

Use the following steps to install the 8310-RM-10 in an 8310 openGear frame:

1. Refer to the openGear 8310 frame User Manual, to ensure that the frame is properly installed according to instructions.
2. On the rear of the 8310, locate the card frame slot.
3. As shown in Figure 2, seat the bottom of the 8310-RM-10 in the seating slot at the base of the frame's back plane.

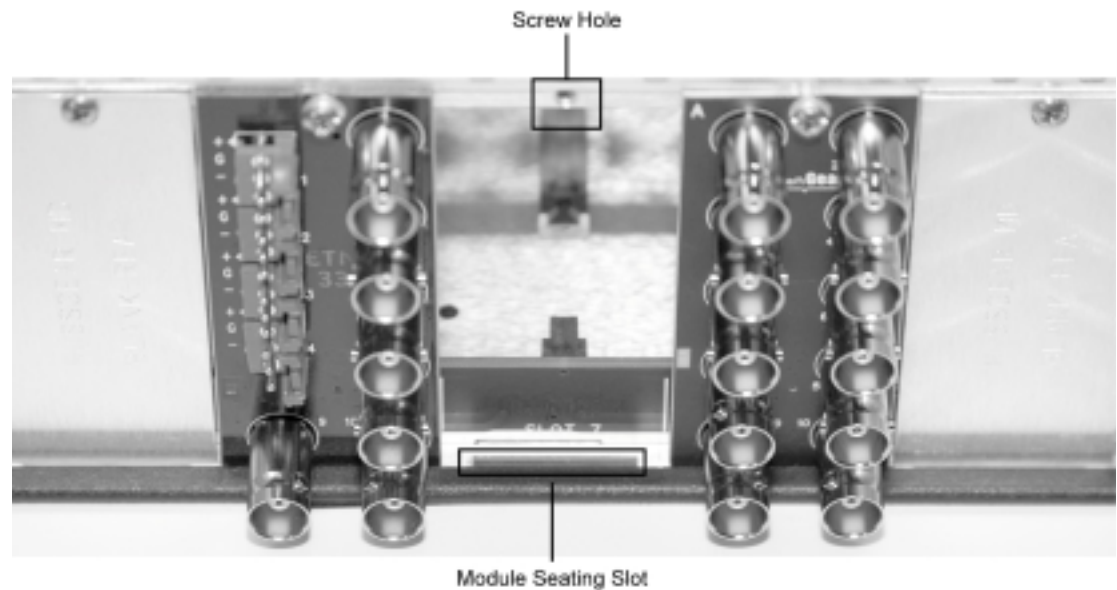


Figure 2. Rear Module Installation

4. Align the top hole of the 8310-RM-10 with the screw hole on the top edge of the 8310 back plane.
5. Using a Phillips driver and the supplied screw, fasten the 8310-RM-10 panel to the 8310 back plane. Do not over tighten.

This completes the procedure for installing the 8310-RM-10 in an 8310 openGear frame.

Board Installation

Use the following steps to install the card in the openGear 8310 frame:

1. Refer to the User Manual of the openGear 8310 frame to ensure that the frame is properly installed according to instructions.



Warning

Heat and power distribution requirements within a frame may dictate specific slot placement of cards. Cards with many heat-producing components should be arranged to avoid areas of excess heat build-up, particularly in frames using convection cooling.

2. After selecting the desired frame installation slot, hold the card by the edges and carefully align the card edges with the slots in the frame. Then, fully insert the card into the frame until the rear connection plugs are properly seated on the midplane and rear modules.

This completes the procedure for installing the card in the openGear 8310 frame.

Cable Connections

This section provides instructions for connecting cables to the installed BNC rear modules on the 8310 series frame backplane. Connect the input and output cables according to the following diagram. The input is internally terminated with 75 Ohms. It is not necessary to terminate unused outputs.

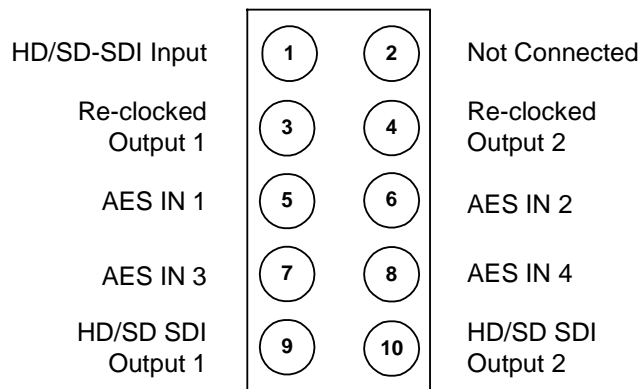


Figure 3. BNC Designations for the Card Rear Module 8310-RM-10 or 8310-RM-100

In the near future Cobalt Digital Inc will release a series of rear modules that allow access to the full IO capabilities of the card.

Card Control and Status

Card Status

The card indicates the status of the input signal with the four blue LEDs labled with the different supported formats (1080, 720, 625, 525). When the card has locked to a particular input format, that LED will be illuminated. When the card has not locked to a particular video format, the card will search all possible formats, and the lights will cycle rapidly.

Menu Navigation

The card can be configured from a menu system built in to the front card edge. This provides an intuitive and easy to use method for exploring and using the features of the card.

The menu is navigated by using the toggle switch and the two push buttons. The lower button is the “Enter” button to enter a submenu, and the upper button is the “Exit” button to exit a submenu. Moving the toggle switch up or down moves up or down in menu choices, and pressing the buttons moves in or out of sub menus.

The menu LEDs will illuminate from top to bottom to indicate increasing depth in the menu.

Menu Structure

The entire 9321 menu looks like this:

MENU STRUCTURE				Parameter Type	
Proc	Enbl			Proc Enable	
	Gain			Proc Gain	
	Lift			Proc Lift	
	Sat			Proc Sat	
	Phas			Proc Phase	
Aud	Embd	Grp1	Enbl		Embedded Group Enable
			Ch01	Src	Output Source
				Gain	Output Gain
				Pol	Output Polarity
			Ch02	Src	Output Source
				Gain	Output Gain
				Pol	Output Polarity
		Ch03	Src	Output Source	
			Gain	Output Gain	
			Pol	Output Polarity	
		Ch04	Src	Output Source	
			Gain	Output Gain	
			Pol	Output Polarity	
		Grp2	Enbl		Embedded Group Enable
	Ch05		Src	Output Source	
			Gain	Output Gain	
			Pol	Output Polarity	
	Ch06		Src	Output Source	
			Gain	Output Gain	
			Pol	Output Polarity	
Ch07	Src	Output Source			
	Gain	Output Gain			

			Pol	Output Polarity		
		Ch08	Src	Output Source		
			Gain	Output Gain		
			Pol	Output Polarity		
		Grp3	Enbl		Embedded Group Enable	
			Ch09	Src	Output Source	
				Gain	Output Gain	
		Pol		Output Polarity		
		Ch10	Src	Output Source		
			Gain	Output Gain		
			Pol	Output Polarity		
		Ch11	Src	Output Source		
			Gain	Output Gain		
			Pol	Output Polarity		
		Ch12	Src	Output Source		
			Gain	Output Gain		
			Pol	Output Polarity		
			Grp4	Enbl		Embedded Group Enable
				Ch13	Src	Output Source
	Gain				Output Gain	
	Pol		Output Polarity			
	Ch14		Src	Output Source		
			Gain	Output Gain		
			Pol	Output Polarity		
	Ch15		Src	Output Source		
			Gain	Output Gain		
			Pol	Output Polarity		
	Ch16		Src	Output Source		
			Gain	Output Gain		
			Pol	Output Polarity		
	AES		SBYP	AES1		AES SRC Bypass
				AES2		AES SRC Bypass
		AES3		AES SRC Bypass		
		AES4		AES SRC Bypass		
		AES5		AES SRC Bypass		
		AES6		AES SRC Bypass		
		AES7		AES SRC Bypass		
		AES8		AES SRC Bypass		
Disp	H/V			Display Orientation		
	BRGT			Display Brightness		
Prst	Save			Save Settings		
	Load			Load Settings		
	Fact			Restore Factory Settings		

Parameter Type Descriptions

Proc Enable

Enables the Proc module. You can keep all the proc settings, and enable/disable the module without having to reset the set

Proc Gain

This is Luma (Y channel) gain, expressed as a percentage. It ranges from 0.0% to 200.0% in 0.1% steps.

Proc Lift

This is Luma (Y channel) offset, expressed as an actual video value ranging from -1024 to 1024. If set to 0 no change is made. If set to 1024 absolute black (value 004) becomes absolute white (value 3FB). If set to -1024, absolute white becomes absolute black.

Proc Saturation

This is Chroma (C channel) gain, expressed as a percentage. It ranges from 0.0% to 200.0% in 0.1% steps.

Proc Phase

This is Chroma (C channel) phase adjustment, expressed in degrees, ranging from -360 to +360 in steps of one degree.

Embedded Group Enable

Enables or disables the embedding of a particular embedded audio group. Disabling a group preserves the settings of the channels belonging to that group.

Output Source

Because the cards audio system functions like a router, each output can be sourced from any input channel. This parameter let's you choose from the many different sources. Here is an explanation of the different source names:

Source Name	Description
EmXX	Input embedded audio channel XX (1 through 16)
AnX	Analog Audio channel X (1 through 8)
AeXX	Discrete AES channel XX (1 through 16)

Output Gain

The gain of each output is adjustable from +30 dB to -100 dB in 0.1 dB steps. After -100 dB gain is set to -Inf, which means that output is present, but muted.

Output Polarity

If set to "Norm" output polarity is the same as input polarity, if set to "Inv" the output polarity is inverted. This can be used to correct polarity errors in the input signals fed to the card.

AES SRC Bypass

Turn on to Bypass Sample Rate Conversion for AES audio inputs. Each input can be bypassed individually from the other AES inputs.

Display Orientation

This parameter lets you change the orientation of the display. "Vert" makes the characters look correct when the cards are mounted in a 2 RU frame like the 8310. "Horz" makes the characters look right in a horizontal frame.

Display Brightness

This parameter allows you to set the standard output brightness of the menu display. It is a percentage of maximum brightness.

Save Settings

In this parameter, move the toggle switch up to save the settings to the card persistent storage.

Load Settings

In this parameter, move the toggle switch up to load the saved settings and make them active.

Restore Factory Settings

In this parameter, move the toggle switch up to make the factory default settings active, and make the stored settings equal to the factory settings.

Factory Default Settings

The factory default settings are as follows

- 1) The proc module is enabled, but all parameters are set to not change the video
- 2) Discrete AES inputs 1-16 are mapped to embedded audio outputs 1-16.
- 3) Audio gain is set to 0dB and polarity is set to normal on all channels.

Remote Control

In This Chapter

This section provides a detailed explanation on using remote control functions with your card.

DashBoard Control System Software

The DashBoard Control System enables you to monitor and control openGear™ frames and controller cards from a computer. The DashBoard software and manual can be downloaded from the Cobalt Digital Inc. website.

Using the Menus

You must first install the DashBoard Control System software on your computer. Refer to the *DashBoard User Manual* for software installation procedures and for using the DashBoard interface.

The Menu System

The following table and sections describe the menus, items, and parameters available from the DashBoard Control System software for the card.

Table 3. DashBoard Menus

Menu	Item	Parameters	Description
Card Info (Read-only)	Product	CDI-9061	
	Manufacturer	Cobalt Digital Inc.	
	Software Release Number	#	
	Software Build Date		
	Software Build Time		
	+12 V Power Rail	### W	Positive Supply Voltage
	-7.5 Power Rail	### W	Negative Supply Voltage
	Video Input Standard		Detected Video Standard on SDI Input
	Reference Standard		Detected Standard of Ref.

Menu	Item	Parameters	Description
Card Info (Read-only)	SSN	#####	Displays the Silicon Serial Number of the card.
Embedded Audio Group (Groups 1-4)	Group Enable	Enable	Enables or disables the entire group of 4 channels.
		Disable	
	Source	Embedded 1-16	Chooses the source for the embedded audio. The source for each channel can be chosen separately.
		AES 1-16	
		Analog 1-8	
	Gain	Range (-400) - 400	Gain applied to embedded audio output.
Phase		Normal	Inverts the phase of the embedded audio.
	Invert		
Presets	Parameter Save	Confirm	Saves the parameters as preset.
	Parameter Load	Confirm	Loads parameters previously saved.
	Restart Parameters to Factory Default	Confirm	Will load factory presets and overwrite the save.
Audio Input Controls	AES Pair 1-8 SRC Bypass	Off/On	Turn on to Bypass Sample Rate Conversion for AES audio inputs.
Video Proc	Proc Controls Enable	On	Enables/Disables Proc
		Off	
	Video Gain	Range 0-2000	Contrast
	Video Lift	Range (-999) – 999	Brightness
	Color Gain	Range 0-2000	Saturation
Color Phase	Range (-360) - 360	Tint	

Service Information

In This Chapter

This chapter includes the following sections:

- Troubleshooting Checklist
- Warranty and Repair Policy

Troubleshooting Checklist

Routine maintenance to this openGear product is not required. In the event of problems with your card, the following basic troubleshooting checklist may help identify the source of the problem. If the module still does not appear to be working properly after checking all possible causes, please contact your openGear products distributor, or the Technical Support department at the numbers listed under the “Contact Us” section at the end of this manual.

1. **Visual Review** — Performing a quick visual check may reveal many problems, such as connectors not properly seated or loose cables. Check the module, the frame, and any associated peripheral equipment for signs of trouble.
2. **Power Check** — Check the power indicator LED on the distribution frame front panel for the presence of power. If the power LED is not illuminated, verify that the power cable is connected to a power source and that power is available at the power main. Confirm that the power supplies are fully seated in their slots. If the power LED is still not illuminated, replace the power supply with one that is verified to work.
3. **Reseat the Card in the Frame** — Eject the card and reinsert it in the frame.
4. **Check Control Settings** — Refer to the Installation and Operation sections of the manual and verify all user-adjustable component settings.
5. **Input Signal Status** — Verify that source equipment is operating correctly and that a valid signal is being supplied.
6. **Output Signal Path** — Verify that destination equipment is operating correctly and receiving a valid signal.
7. **Module Exchange** — Exchanging a suspect module with a module that is known to be working correctly is an efficient method for localizing problems to individual modules.

Warranty and Repair Policy

The openGear card is warranted to be free of any defect with respect to performance, quality, reliability, and workmanship for a period of FIVE (5) years from the date of shipment from our factory.

In the event that your Cobalt Digital Incorporated card proves to be defective in any way during this warranty period, Cobalt Digital Incorporated reserves the right to repair or replace this piece of equipment with a unit of equal or superior performance characteristics.

Should you find that this openGear card has failed after your warranty period has expired, we will repair your defective product should suitable replacement components be available. You, the owner, will bear any labor and/or part costs incurred in the repair or refurbishment of said equipment beyond the FIVE (5) year warranty period.

In no event shall Cobalt Digital Incorporated be liable for direct, indirect, special, incidental, or consequential damages (including loss of profits) incurred by the use of this product. Implied warranties are expressly limited to the duration of this warranty.

This openGear card User Manual provides all pertinent information for the safe installation and operation of your Cobalt Digital Incorporated Product. Cobalt Digital Incorporated policy dictates that all repairs to the openGear card are to be conducted only by an authorized Cobalt Digital Incorporated factory representative. Therefore, any unauthorized attempt to repair this product, by anyone other than an authorized Cobalt Digital Incorporated factory representative, will automatically void the warranty. Please contact Cobalt Digital Incorporated Technical Support for more information.

In Case of Problems

Should any problem arise with your openGear card, please contact the Cobalt Digital Incorporated Technical Support Department. (Contact information is supplied at the end of this publication.)

A Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions, should you wish our factory to repair your openGear card. If required, a temporary replacement module will be made available at a nominal charge. Any shipping costs incurred will be the responsibility of you, the customer. All products shipped to you from Cobalt Digital Incorporated will be shipped collect.

The Cobalt Digital Incorporated Technical Support Department will continue to provide advice on any product manufactured by Cobalt Digital Incorporated, beyond the warranty period without charge, for the life of the equipment.

Ordering Information

9321 and Related Products

Your **9321 HD/SD Audio Embedder** is a part of the openGear family of products. Cobalt Digital offers a full line of openGear terminal equipment including distribution, conversion, monitoring, synchronizers, encoders, decoders, embedders, and de-embedders, as well as analog audio and video products.

Standard Equipment

- **9321** HD/SD Audio Embedder
- **9321-UM** HD/SD Audio Embedder

Optional Equipment

- **9321-UM** HD/SD Audio Embedder (additional User Manual)
- **8310-RM-10** openGear Rear Module compatible with 9321 (10 BNC connector)
- **8310-C** Digital Products Frame and Power Supply with Cooling Fans (2RU, holds 10 cards)
- **8310-C-BNC** Digital Products Frame and Power Supply with fixed 100-BNC Rear Module and Cooling Fans. (2RU, holds 10 cards)
- **MFC-8310-N** Network Controller Card (Additional)

Notes:

Contact Us

Contact our friendly and professional support representatives for the following:

- Name and address of your local dealer
- Product information and pricing
- Technical support
- Upcoming trade show information

PHONE	General Business Office and Technical Support	217 • 344 • 1243
	Fax	217 • 344 • 1245
E-MAIL	General Information	info@cobaltdigital.com
	Technical Support	support@cobaltdigital.com
POSTAL SERVICE	Cobalt Digital Incorporated	2406 East University Avenue Urbana, IL 61802 USA

Visit Us

Please visit us at our website for:

- Company information
- Related products and full product lines
- On-line catalog
- Trade show information
- News
- Testimonials

<http://www.cobaltdigital.com/>