

Advanced Printer Driver for TM-T81 Ver.4

TM Printer Manual

APD Overview

Descriptions of the APD features.

Using the APD

Descriptions of simple printings and useful functions.

Reference

Descriptions of property settings of the printer driver.

TM Flash Logo Setup Utility

Descriptions of how to set and use the TM Flash Logo Setup Utility.

Restrictions

Descriptions of restrictions on use of the APD.

Printer Specification

Descriptions of the specifications of the TM-T81.



M00003900 Rev.A

Cautions

- No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation.
- The contents of this document are subject to change without notice. Please contact us for the latest information.
- While every precaution has taken in the preparation of this document, Seiko Epson Corporation assumes no responsibility for errors or omissions.
- Neither is any liability assumed for damages resulting from the use of the information contained herein.
- Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third
 parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of:
 accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this
 product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating
 and maintenance instructions.
- Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by Seiko Epson Corporation.

Trademarks

EPSON® and ESC/POS® are registered trademarks of Seiko Epson Corporation in the U.S. and other countries.

MS-DOS[®], Microsoft[®], Win32[®], Windows[®], Windows Vista[®], Visual Studio[®], Visual Basic[®], Visual C++[®], and Visual C#[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.

ESC/POS® Command System

EPSON has been taking industry's initiatives with its own POS printer command system (ESC/POS). ESC/POS has a large number of commands including patented ones. Its high scalability enables users to build versatile POS systems. The system is compatible with all types of EPSON POS printers (excluding the TM-C100) and displays. Moreover, its flexibility makes it easy to upgrade the future. The functionality and the user-friendliness is valued around the world.

For Safety

Key to Symbols

The symbols in this manual are identified by their level of importance, as defined below. Read the following carefully before handling the product.



Provides information that must be observed to avoid damage to your equipment or a malfunction.



Provides important information and useful tips.

Restriction of Use

When this product is used for applications requiring high reliability/safety such as transportation devices related to aviation, rail, marine, automotive etc.; disaster prevention devices; various safety devices etc; or functional/precision devices etc, you should use this product only after giving consideration to including fail-safes and redundancies into your design to maintain safety and total system reliability. Because this product was not intended for use in applications requiring extremely high reliability/safety such as aerospace equipment, main communication equipment, nuclear power control equipment, or medical equipment related to direct medical care etc, please make your own judgment on this product's suitability after a full evaluation.

About this Manual

Aim of the Manual

This manual is aimed to provide all the necessary information for development engineers to develop, design, and install POS system, or to develop and design printer applications.

Manual Content

The manual is made up of the following sections:

Chapter 1 APD Overview

Chapter 2 Using the APD

Chapter 3 Reference

Chapter 4 TM Flash Logo Setup Utility

Chapter 5 Restrictions

Appendix Printer Specification

Contents

■ For Safety	3
Key to Symbols	3
■ Restriction of Use	3
■ About this Manual	4
Aim of the Manual	4
Manual Content	
■ Contents	5
APD Overview	9
■ Introduction	9
Manual organization	9
■ Inquiries	10
■ APD4 Features	10
Printing Example	12
Using the APD	
■ Application Printer Settings	13
■ Character Printing (TrueType fonts)	14
■ Character Printing (Device Font)	15
Setting Device Font	
Printing Method Program	
■ Printing a Barcode	
Barcode font setting	
Printing Method	
Program	
■ Printing a 2D-Code	21
Setting the 2D-Code Font	
Printing Method Program	
■ Device Font Printing in a .NET Environment	
Substituting Fonts	
Printing Using a Device Font	26
Printing BarCodes/2D-Code Fonts Controlling the TM Printer: Control Font/Control A Font	
■ Rotated Printing	
Rotated Printed Settings	30

■ Background printing	31
Water Mark setting	31
■ Printing a Logo	32
Bit map data registration	32
Bit map data printing	32
■ Paper Feed and Paper Cut	35
Setting paper cut with the printer driver	
Specifying Control Font and performing paper cut in programming	
■ Drawer Control	37
Opening Drawer with printer driver setting	
Opening Drawer by Control Font	
■ How to Use ControlA Font	39
Setting ControlA Font	
Using ControlA Font	40
Reference	
Reference	43
	43
Reference Properties General	43 44
Reference Properties General Sharing	43 44 45
Reference Properties General Sharing Ports	43 44 45 46
Reference Properties General Sharing Ports Advanced	4344454647
Reference Properties General Sharing Ports Advanced Color Management Security	43454546485051
Reference Properties General Sharing Ports Advanced Color Management Security Utility	4345454647485051
Reference Properties General Sharing Ports Advanced Color Management Security Utility Version	434445464748505152
Reference Properties General Sharing Ports Advanced Color Management Security Utility	434445464748505152
Reference Properties General Sharing Ports Advanced Color Management Security Utility Version Printing Preferences Main	434545464850515256
Reference Properties General Sharing Ports Advanced Color Management Security Utility Version Printing Preferences Main Layout	4344454647485051525655
Reference Properties General Sharing Ports Advanced Color Management Security Utility Version Printing Preferences Main Layout Water Mark	
Reference Properties General Sharing Ports Advanced Color Management Security Utility Version Printing Preferences Main Layout Water Mark Document Settings	
Reference Properties General	4344454647485051525657596264
Reference Properties General Sharing Ports Advanced Color Management Security Utility Version Printing Preferences Main Layout Water Mark Document Settings	
Reference Properties General Sharing Ports Advanced Color Management Security Utility Version Printing Preferences Main Layout Water Mark Document Settings Halftone Settings Printer Settings Barcode 2D-Code	
Reference Properties General Sharing Ports Advanced Color Management Security Utility Version Printing Preferences Main Layout Water Mark Document Settings Halftone Settings Printer Settings Barcode	44 45 46 46 47 48 50 57 56 57 58 62 64 77 80

TM Flash Logo Setup Utility	89
■ Saving a Logo File	89
■ Reference	93
Selection Logo Files Preview Logo Upload Logo Printout Setup	
Restrictions	99
Printer Specification	103

APD Overview

Introduction

The Advanced Printer Driver (APD) is a Windows driver for the EPSON TM/BA/EU printers (referred to as the TM printer henceforth). Using the Status API, the APD also can be used to monitor the TM printer status in your POS system.

Manual organization

Install Manual

Descriptions of the procedures from installing the APD to performing test print, adding printer drivers, and the silent install which is an automated APD installation.

TM Printer Manual

This manual. Descriptions of how to use the APD and its functions.

Descriptions of the specifications of TM-T81

Status API Manual

Descriptions of how to get the status of the TM printer from the user application by using the Status API.

Devmode API / PRINTERINFO Manual

Descriptions of how to configure some printer functions on your application using the Devmode API. Explanations about PrinterInfo, which is one of the Windows functions, are also provided.

Inquiries

Drivers and manuals for using the TM-T81 are not packed with it, so inquire to your dealer as for them.

ESC/POS commands

ESC/POS commands are not open to the public. Ask your sales representative for details.

APD4 Features

Easy

- Allows you to print from commercially available applications, since the APD is a Windows driver.
- Allows you to print a Barcode and 2D-Code with the fonts built in the APD. ("Printing a Barcode" on page 18)
- Allow you to print logos and graphics. ("Printing a Logo" on page 32)
- Allows you to send the paper cut command to the TM printer.
 ("Paper Feed and Paper Cut" on page 35)
- Allows you to send the open command to the cash drawer. ("Drawer Control" on page 37)

Fast

The printing speed differs depending on the models or interfaces of the TM printers. For more details, see the Technical Reference Guide of the TM printer.

- Achieves high speed printing using the Device fonts of the TM printer. ("Character Printing (Device Font)" on page 15)
- Allows you to convert the Windows fonts to the Device fonts.
- Allows you to print an image such as a store logo faster by registering the image in the TM printer. ("Printing a Logo" on page 32)

Convenience

- Allows you to make horizontally long printings by rotated printing, for example landscape format receipt. When using the TM printer oriented vertically (wall mount), it can print backward to make it easy to read for customers. ("Rotated Printing" on page 29)
- Allows you to print characters and images as a background.
 ("Background printing" on page 31)
- Allows you to print A4 size document automatically scaled down to fit the paper width.

Expandability

- Printer sharing is supported. Allows you to share TM printer with other computers on a network. (Printer sharing through a print server is not supported.)
- Allows you to use ESC/POS commands control. ("How to Use ControlA Font" on page 39)

Programming

- Win32/.Net environment is supported. See the "Status API Manual" to find out which development language is supported.
- Allows you to check the status of the device (TM printer) by using the Status API.

Installation

- Allows you to copy the existing settings of the APD environment to other computers. (Silent Install)
- After the APD installation, the printer driver will be automatically installed to the TM printer equipped with a USB interface by the Plug and Play function.


Compatibility

• Note that APD 4.xx cannot coexist with APD 2.xx or 3.xx.



- When you install APD 4.xx in an environment in which APD 2.xx or 3.xx is already installed, APD first automatically uninstalls the previous version before installing 4.xx
- APD 4.xx does not support some TM printers. Check that your TM printer is, in fact, supported by APD 4.xx. If you install APD4.xx in an environment featuring an unsupported TM printer, then you will no longer be able to use that TM printer.
- Coexistence with OPOS in a computer is not possible.

Printing Example

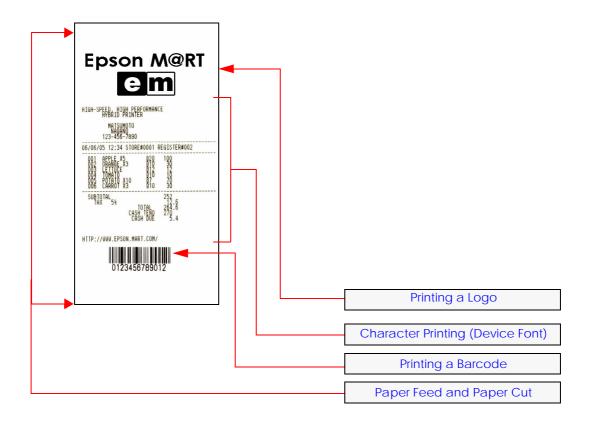

Using the APD

This chapter explains how to use the functions contained in the APD.



- · Some functions cannot be used, depending on the model of TM printer.
- Administrator permission is required for property settings of the printer driver.

Application Printer Settings

The following explains the initial printer settings from the Windows application to the TM printer. Set the printer model and paper from the application you are to use.

This is an example using WordPad. Run [All Programs] - [Accessories] - [WordPad] from the [Start] menu.

NOTE

When printing device fonts with Microsoft Word, convert the application to "Microsoft Word 6.0/95" by selecting [Tools] menu - [Options] - [Compatibility] tab or check the "Use printer metrics to lay out document" option on the same tab.

1. Printer driver specification

Select [File] - [Print...] to display the print dialog box. Select the printer driver you are to use. Press the [Apply] button, then press the [Cancel]. Return to WordPad screen.



2. Page Setup


Select [File] - [Page Setup] to display the Page Setup dialog box.


Select the paper you are to use. At this point the Page Setup illustration changes to roll paper. Set the margins, and then press the [OK] button.



3. Exit Settings

The paper width selected with Page Setup is applied to WordPad.

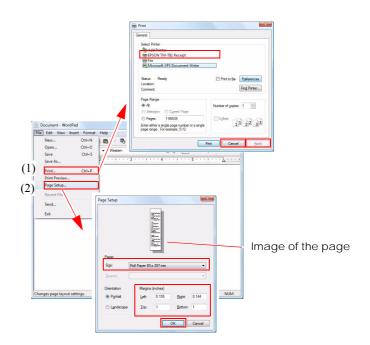

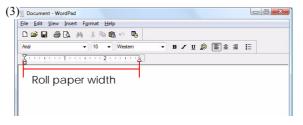


Character Printing (TrueType fonts)

Printing is performed with the TrueType fonts (Arial, Times New Roman, etc.) available with Windows. You can apply italic and other character modifications, and freely change the font size. You can also print almost exactly what you see on screen.



- You cannot obtain full text quality with TrueType fonts depending on TM printer model. In this case, specify device font. (See "Character Printing (Device Font)" on page 15.)
- When printing with a TrueType font, the data volume sent to the TM printer increases since the print image is expanded by the computer before sending to the printer. Due to this, when connected using the serial port, printing time is longer compared with other interfaces.

Specify TrueType font, Point and Style for print data.

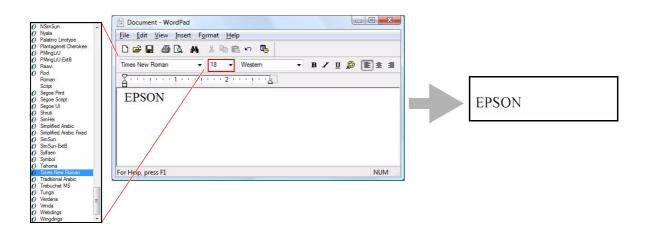

Character Printing (Device Font)

Device Font is the font set built into the TM printer.

You can obtain text quality in line with the performance of the TM printer.

You can print text at a higher speed than TrueType font.

To print Device Font in a .NET environment, you must replace the font. See "Device Font Printing in a .NET Environment" on page 24 for details.

Setting Device Font

When printing with Device Font, set the Device Font type.

Device Font Type

The xx after the font name specifies two digits, expressing the character size.

Font with [254/255] after the font name is user-defined pages. See the Technical Reference Guide for the TM printer you are using for a description of this setting.

Also see the manual regarding the number of dots for each font. See "Printer Specification" for details.

- FontAxx
- FontBxx


Device Font Size

Device Font prepares fonts for each character size. As with TrueType fonts, point size is not specified separately from the font; rather, character size is specified by selecting a font. The following sizes are available with Device Font.

Height \ Width	Standard	Double	Fourfold	Eightfold	Standard	FontA11
Standard	FontA11	FontA12			Double height	FontA12
Double	FontA21	FontA22	FontA24			
Fourfold		FontA42	FontA44	FontA48	Double width	FontA21
Eightfold			FontA84	FontA88	Double height / width	FontA22


The Device Font Point varies with the TM printer. Also, Point is determined for every Device Font. Check with the Printer Settings - [Font] tab of the printer driver.

When printing FontA11 with TM-T81, specify 9.5 pt.

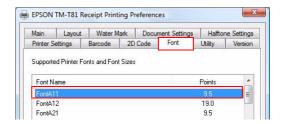

Printing Method

Specify Device Font, specified Point (check with [Font] tab) and language in print data.

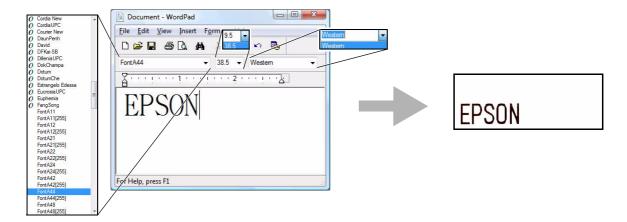



- Not reflected in characters even when you specify bold/italic. The underline is printed but the position is offset.
- Printing is not possible when Device Font and Barcode(2D-Code) Font are arranged in one line.



The character design and size displayed on the application screen are a little different from actual printing results.

Program

The following is an example program for reference.

Printer.Font.Charset = 0
'Font
Printer.Font.Name = "FontA44"
'Size
Printer.Font.Size = 38.5
'Printing text
Printer.Print "EPSON"

NOTE

Font and Point Size differ with the TM printer model. Check the Point Size of the font displayed on the [Font] tab of the printer driver. (The above example is from the TM-T81 Receipt.)

Printing a Barcode


APD has Barcode font built in. Therefore, you can print Barcode even if you have not created Barcode on the application side.

Barcode font lets you register the barcode type and size as properties. Up to eight types of barcode (Barcode $1 \sim 8$) can be registered using the APD.

The barcodes you can print differ with each TM printer. See "Printer Specification" for details.

Barcode font setting

Select the Barcode tab from Printing Preferences.

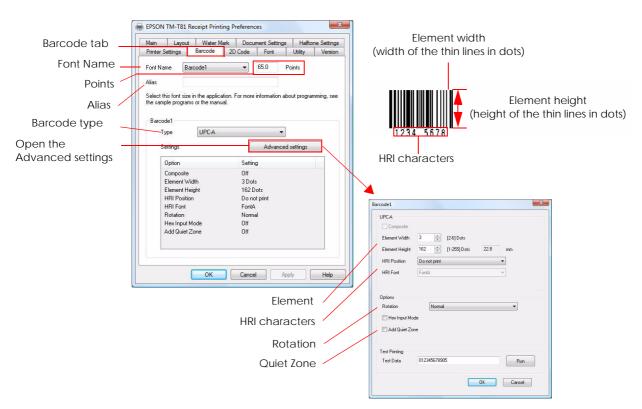

Make the following settings. See "Barcode" on page 80 for details.

Setting	Description
Font Name	You can set Barcode font for up to 8 barcode types (Barcodes 1 ~ 8). When programming, specify the font using "Font Name" or "Alias".
Points	The barcode font size is displayed. When printing, specify this value from the application side.
Alias	You can make optional settings. You can specify Alias during programming.
Barcode type	Configures the Barcode type (UPC-A, RSSetc.)

Setting	Description
Element	Determines the Barcode size. Specifies the finest Element width and height. Units are the smallest dot of the TM printer. This result determines the Barcode font Point.
HRI characters	Sets with/without HRI characters, position and font.
Rotation	Sets whether to independently rotate Barcode.
Hex Input Mode	Allows the Barcode characters to be entered in binary.
Add Quiet Zone	The blank margin on either side of a Barcode required in order to read the Barcode.


NOTE

When Rotate is set with the [Layout] tab, the printing direction of the barcode matches [Layout] tab Rotate and the Rotation of [Barcode]-[Advanced settings] printing direction.

Ex: When specifying [Rotate by 90 degrees] with [Layout] Rotate and [Rotate by 90 degrees] with [Barcode] Rotation, the printing direction is turned through 180 degrees.

Printing Method

Specify Barcode Font, specified Point (check with [Barcode] tab) and language in print data.

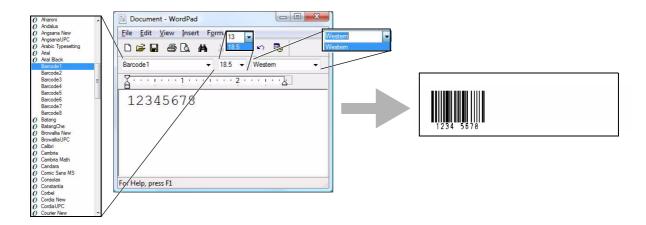

CAUTION

- Barcode Font Points determined. Check with Printing Preferences [Barcode]. When specifying a value other than this, the Barcode is not printed.
- Since the dot resolution differs with the TM printer model, the size of the barcode to be printed varies, even if the same value is set.

NOTE

The character design and size displayed on the application screen are a little different from actual printing results.

Program

The following is an example program for reference.

Printer.Font.Charset = 0
`Font
Printer.Font.Name = "Barcode1"
`Size
Printer.Font.Size = 18.5
`Printing text
Printer.Print "12345678"

Printing a 2D-Code

APD has a 2D-Code font. Therefore, you can print 2D-Code without creating 2D-Code on the application side.

CAUTION

When used in combination with Rotation, set a slow Printing Speed with the [Document Settings] tab. It may not be possible to print clearly when the printing speed is high.


The 2D-Code font allows registration of 2D-Code type and size properties.

Up to eight types (2D-Code $1 \sim 8$) of setting can be registered using the APD. You can make fine settings of 2D-Code at one time, and also easily change the settings.

The 2D-Codes you can print differ with each TM printer. See "Printer Specification" for details.

Setting the 2D-Code Font

Select the 2D-Code tab from Printing Preferences.

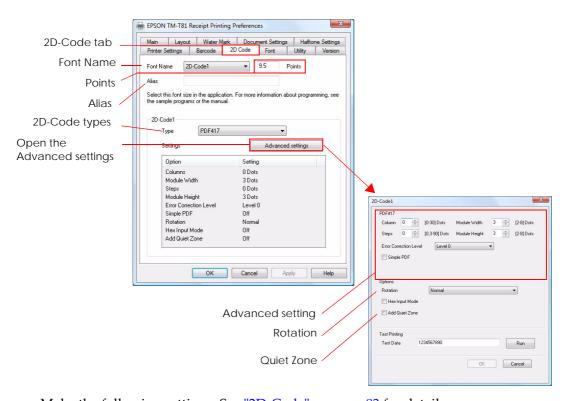

Make the following settings. See "2D-Code" on page 83 for details.

Setting	Description	
Font Name	You can set the 2D-Code font from the 8 types of 2D-Code(1 ~ 8).	
Torrestante	When programming, specify the font using "Font Name" or "Alias".	

Setting	Description
Points	The 2D-Code font size is displayed. When printing, specify this value
FOIITIS	from the application side.
Alias	You can make optional settings. You can specify Alias during
7 tild3	programming.
Barcode type	Sets the 2D-Code type. (CPU-A, JAN8([EAN], ITF, etc.)
	Sets the 2D-Code size and Error Correction Level, etc. Setting contents
Advanced setting	differ with the
	2D-Code type.
Rotation	Sets whether to independently rotate 2D-Code.
Hex Input Mode	Allows the 2D-Code characters to be entered in binary.
Add Ouiet Zone	Check this box to add a quiet zone, the blank margin on either side of a
Add Quiet 2011c	2D-Code required to be properly read.


NOTE

When Rotate is set with the [Layout] tab, the printing direction of the barcode matches [Layout] tab Rotate and the Rotation of [Barcode]-[Advanced settings] printing direction.

Ex: When specifying [Rotate by 90 degrees] with [Layout] Rotate and [Rotate by 90 degrees] with [2D-Code] Rotation, the printing direction is turned through 180 degrees.

Printing Method

Specify 2D-Code Font, specified Point (check with [2D-Code] tab) and language in print data.

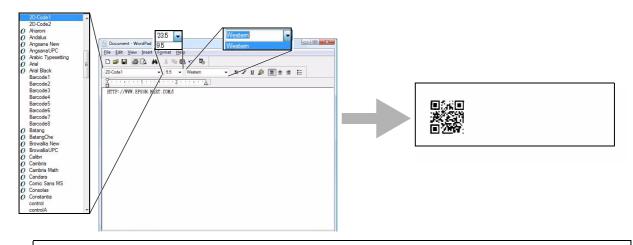

NOTE

- 2D-Code Font Points determined. Check with Printing Preferences [2D-Code]. When specifying a value other than this, the 2D-Code is not printed.
- Since the dot resolution differs with the TM printer model, the size of the 2D-Code to be printed varies, even if the same value is set.

Program

The following is an example program for reference.

Printer.Font.Charset = 0
`Font
Printer.Font.Name = "2D-Code1"
`Size
Printer.Font.Size = 9.5
`Printing text

Printer.Print "http:/www.epson.mart.com/"


Device Font Printing in a .NET Environment

.NET Framework supports only TrueType and OpenType fonts. Therefore, the printer's device fonts cannot be used. In the APD, therefore, a font substitution function is provided to allow you to use device fonts even with .NET Framework.

This function is not only useful in a .NET Framework environment: it also allows you to use the device fonts from an application that only supports TrueType fonts.


Substituting Fonts


The APD font substitution function replaces a TrueType font with a device font. By specifying a device font to be used as a substitute for a given TrueType font, printing can be done using a device font. While it may appear that a TrueType font is selected, the actual printing will be done using the device font.

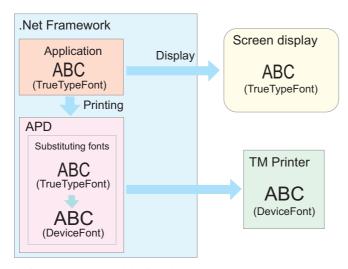

For TrueType fonts not available for the substitution, see the table below.

TrueType fonts not available for the substitution			
Marlett Symbol MS Outlook Wingdings 3			
Wingdings Webdings Wingdings 2			

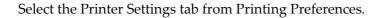


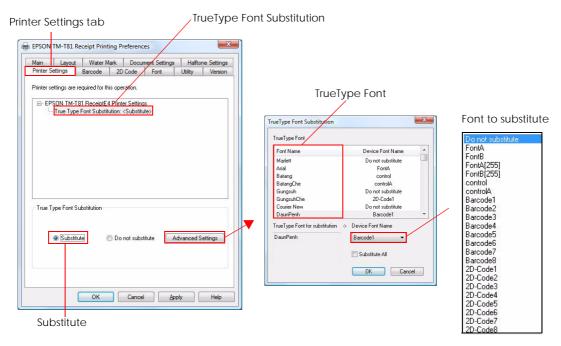

Make the following settings. See "TrueType Font Substitution" on page 78 for details.

Setting	Description
TrueType Font Substitution	Enables TrueType font substitution. Select "Substitute".
TrueType Font	Specifies TrueType font to substitute.
Replacement font	Specifies the device font for substitution.
Substitute All	Check this to replace all TrueType fonts with the same device font.

Printing Using a Device Font

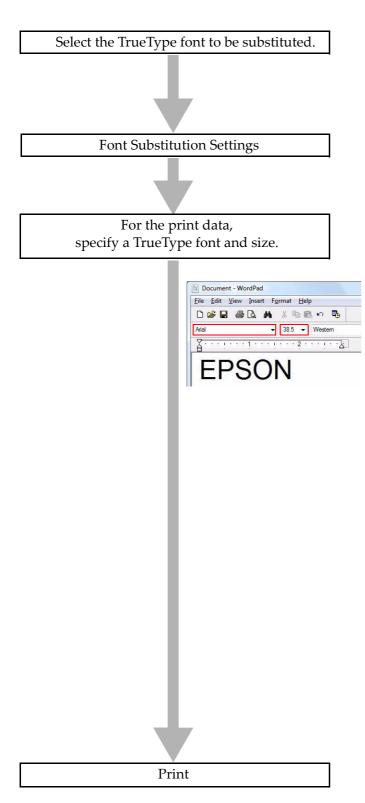

That TrueType font for which substitution has been specified will always be output as the device font. Otherwise, therefore, always select another TrueType font.

Make the [Printer Settings] - TrueType Font Substitution settings.

(See "Substituting Fonts" on page 24.)


Specifying device font size using the specified Point.

Example: When you want to print FontA11 with TM-T81, specify a 9.5 Point.

Specify Point with reference to the following.

- Specify a point size shown on the [Font] tab.
- You can print only device fonts with the same horizontal and vertical dimensions as FontA11/22, etc.
- You cannot print device fonts with different horizontal and vertical dimensions as FontA12/22, etc.
 And you cannot print a smaller point than the smallest device font (Example: Font11).
- When specifying a point that is between device fonts or different sizes (FontA11, FontA22, etc.), the smaller of the two device fonts is printed.
 Example: When specifying 12 point with TM-T81's FontA, FontA11 is printed.

Printing BarCodes/2D-Code Fonts

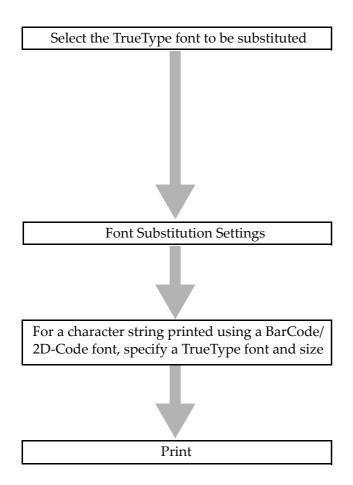


- Wide fonts such as FONT A12/24/48, and tall fonts such as FONT A21/42/84 cannot be substituted.
- That TrueType font for which substitution has been specified will always be output as the device font.
 Make sure to select TrueType font that you will not use for other than the barcode.

Make the [Printer Settings] - TrueType Font Substitution setting.

(See "Substituting Fonts" on page 24.)

Specify a point size specified on the [Barcode]/[2D-Code] tab. Note that the layout will be adversely affected if you specify a point size other than one of those shown here.

Controlling the TM Printer: Control Font/Control A Font

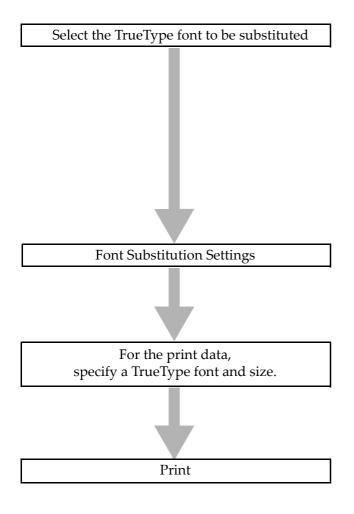


- Select a TrueType font to be used as a control font.
- That TrueType font for which substitution has been specified cannot be used as other than the control font. If you specify this font for any other characters, not only will printing fail, but the system may operate as if another command had been specified. Therefore, make sure to select TrueType font that you will not use as other than the control font.

Make the [Printer Settings] - TrueType Font Substitution setting. (See "Substituting Fonts" on page 24.)

Specify a point size shown on the [Font] tab


Rotated Printing

You can rotate data for printing. When using a TM printer oriented vertically, printing with 180× rotation (inverted printing) enables printing with an orientation that is easy for customers to see. Otherwise, when you want to print characters horizontally, for receipts, etc., you can make the rotation setting on the printer driver side.

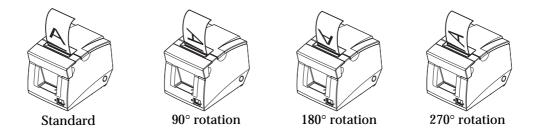


When setting rotated printing, "paper conservation" is enabled automatically.

- Top: Paper can be saved because the top blank is not printed.
- Bottom: Paper can be saved because the bottom blank is not printed Printing direction and margin conservation have the following relations.

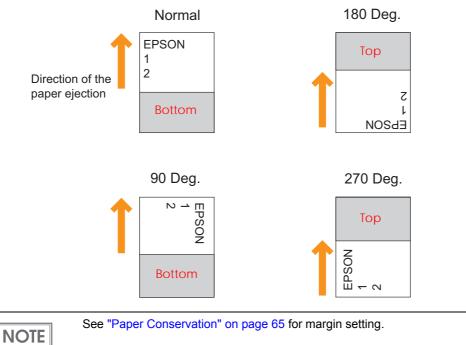

Rotated Printed Settings

Select the Layout tab from Printing Preferences.

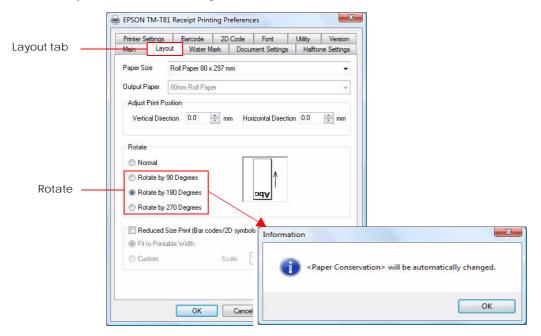

Make the following settings. See "Layout" on page 59 for details.

Setting	Description
Rotate	Select the printing orientation you want. With settings other than Normal, all text is printed as a graphic image, and Paper Conservation is changed automatically. When the Information screen is displayed, click "OK".



- When the printing orientation setting is other than standard, since [Print all text as graphics] under Document Settings is "Yes", you cannot use Device Font, Control Font control (logo printing using NV memory, etc.) or ControlA Font.
- Do not use with your own independently developed application's rotated printing function. Use only one or the other rotated printing function.

Background printing


Use Water Mark to print background. A bit map file is necessary for Water Mark setting.



- You may not be able to print a Water Mark depending on the application.
- When the printing orientation setting is other than standard, since [Print all text as graphics] under Document Settings is "Yes" you cannot use Device Font, Control Font control (logo printing using NV memory, etc.) or ControlA Font.
- Since a large volume of data is sent to the TM printer for Water Mark printing, in the case of serial connection printing time is longer compared with other interfaces.

Water Mark setting

Select the Water Mark tab from Printing Preferences.

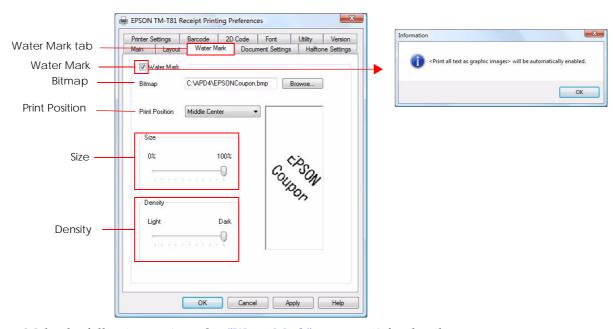

Make the following settings. See "Water Mark" on page 62 for details.

Setting	Description
Water Mark	Check to print Water Mark. When checked, [Print all text as graphics] under Document Settings is automatically set to "Yes".
Bitmap	Specifies the background bit map data file.
Print Position	Make the following settings.
Size	Configures the size of the Water Mark.
Density	Configures the density of the Water Mark.

Printing a Logo

Use the following method to print graphics.

Method	Features
Print bit map on the application screen	Large data volume, printing is slow.
Specify bit map file in the printer driver for printing.	Slow, because file is read each time for printing.
Register bit map in TM printer for printing	Data volume is small, therefore you can print fast.

The following explains how to register a bit map in the TM printer and print. Method that applies the bit map of a fixed format such as a store logo.

Bit map data registration

Register the bit map data in the TM printer's NV (Non Volatile) memory with the TM Flash Logo Setting Utility.

This memory retains its data even when the TM printer is switched off.

For more details, see "TM Flash Logo Setup Utility" on page 89.



You cannot register bit map data in a TM printer unless it has NV (Non Volatile) memory.


Bit map data printing

The following method is for printing bit maps registered in a TM printer.

Method	Features
Setting by printer driver	Prints the bit map in a document or before and after a page.
Specifying by Control Font.	Specifies control font at the position for bit map printing.

Setting by printer driver for printing

Select the Document Settings tab from Printing Preferences.

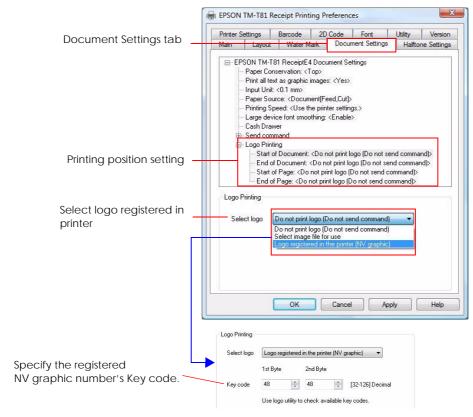

Make the following settings. See "Logo Printing" on page 75 for details.


Setting	Description
Printing position setting	Select the position in which you want to print the logo from Print
	Logo.
Specifying the bit map to	Select whether to use the logo registered in the TM printer or to
print	specify and use an image file.
Specify logo registered in	Specify by key code the bit map registered in the TM printer's NV
printer*	memory.

* The Key code and graphic in the NV memory for printing are as follows.

NV graphics	Key code	
number	1st byte	2nd byte
NV graphics 0	48	48
NV graphics 1	48	49
NV graphics 2	48	50
NV graphics 3	48	51
NV graphics 4	48	52

Specify Control Font to print

Bit map is printed using Control Font.

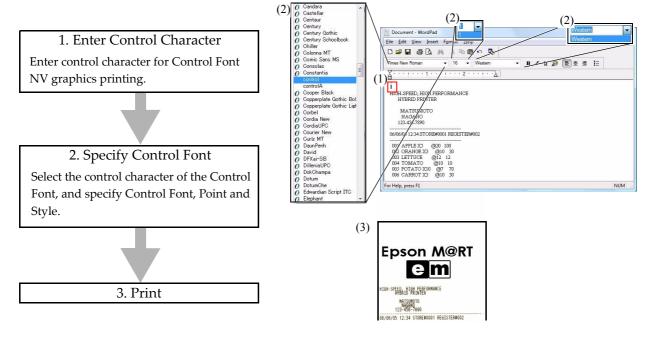

Program

The following is an example program for reference.

Printer.Font.Charset = 0
'Font
Printer.Font.Name = "control"
'Size
Printer.Font.Size = 1
'Printing text
Printer.Print "i"

Paper Feed and Paper Cut

There are two methods for controlling the paper cut.


- Configure the APD to feed and cut the paper automatically at the end of each printing. This method is valid even when [Print all text as graphics image] is set.
- Cut the paper using Control Font in the program.



When using Control Font, you cannot use it in combination with a <Print all text as graphics image> setting such as Rotated Printing/Water Mark/Scale-down Printing.

Setting paper cut with the printer driver

Select the Document Settings tab from Printing Preferences.

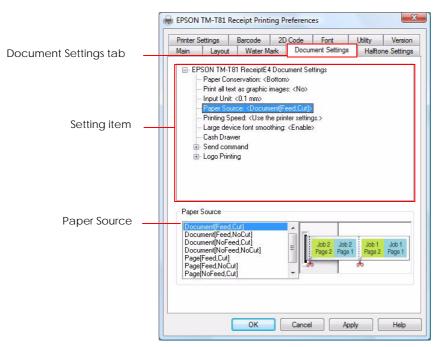

Make the following settings. See "Paper Source" on page 68 for details.

Setting	Description
Setting item	Select Paper Source
Paper Source	Select whether to feed paper per job (document) or page, and whether to cut paper with the auto-cutter or not.

Making this setting controls paper feed and paper cut when printing a document.

Specifying Control Font and performing paper cut in programming.

The following is an example program for reference.

Printer.Font.Charset = 0
`Font
Printer.Font.Name = "control"
`Size
Printer.Font.Size = 1
`Printing text
Printer.Print "P"

Drawer Control

The methods for controlling the drawer are as follows.

- Make the drawer open automatically by configuring the printer driver.
- Open the drawer from the application using the Open Drawer Control Font.




When using Control Font, you cannot use it in combination with the <Print all text as graphics image> setting such as Rotated Printing/Water Mark/Scale-down Printing.



For closing the drawer, push manually.

Opening Drawer with printer driver setting

Select the Document Settings tab from Printing Preferences.

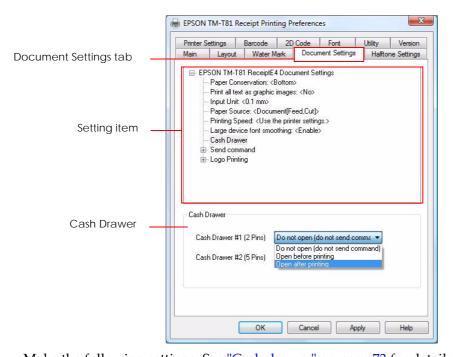

Make the following settings. See "Cash drawer" on page 73 for details.

Setting	Description	
Setting item	Selecting Cash drawer	
Cash Drawer	With a drawer provided by Epson, if you set "Open after printing" for Cash drawer #2 (5pins), the drawer opens after printing.	

NOTE

For closing the drawer, push manually.

Opening Drawer by Control Font

Use the Open drawer Control Font to open Drawer.



Set "Do not open (do not send command)" for Cash Drawer in Document Settings.

1. Enter Control Character

Enter control character of the Open drawer Control Font in the position you want the drawer to open.




2. Specify Control Font

Select the control character of the Control Font, and specify Control Font, Point and Style.



3. Print

Drawer opens.

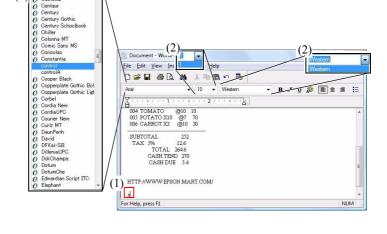

Program

The following is an example program for reference.

Printer.Font.Charset = 0

`Font

Printer.Font.Name = "control"

`Size

Printer.Font.Size = 1

`Printing text

Printer.Print "a"

38

How to Use ControlA Font

With the ControlA Font, ESC/POS commands can be assigned to the selected characters, and on printing the assigned characters can be executed as defined ESC/POS commands.




ESC/POS commands are not open to the public. Ask your sales representative for more information.




When using ControlA Font, you cannot use it in combination with the <Print all text as graphics image> setting such as Rotated Printing/Water Mark/Scale-down Printing.

Setting ControlA Font

Select [Utility] from Properties, and then press the [Edit controlA font Character Translation Table] button. Edit controlA font character translation table is displayed.

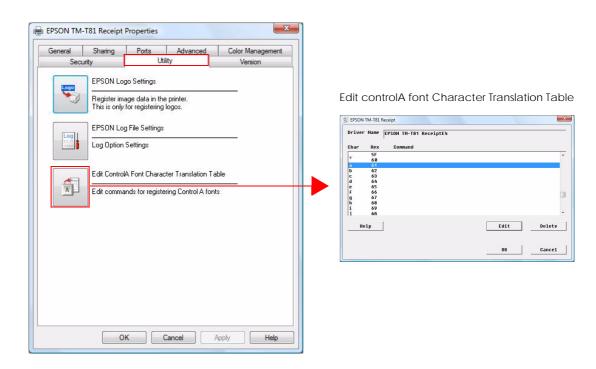


Define ESC/POS commands in the record you want to define.

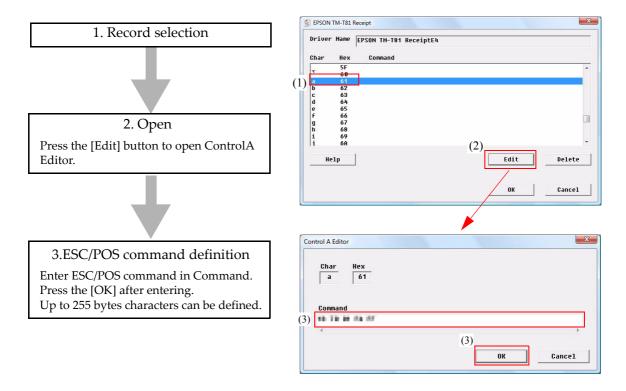

Using ControlA Font

Use the defined ControlA Font.

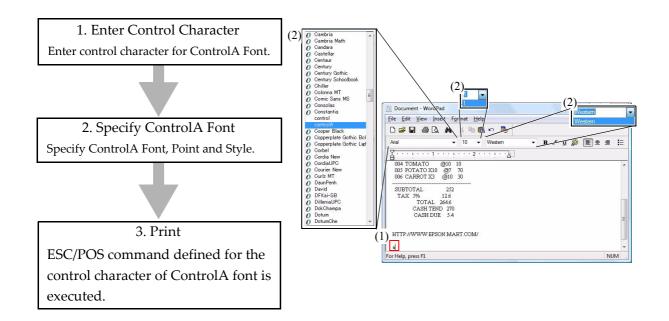

Program

The following is an example program for reference.

Printer.Font.Charset = 0
`Font
Printer.Font.Name = "controlA"
`Size
Printer.Font.Size = 1
`Printing text
Printer.Print "a"


Reference

This chapter describes the APD settings.



Administrator permission is required for property settings of the printer driver.

To open the setting screen of the printer driver Properties, right click the printer driver from [Start] - [Control Panel] - [Printers] and select [Properties]. Select the [General] tab on the Properties screen and click the [Printing Preferences...] button to open the Printing Preference screen.

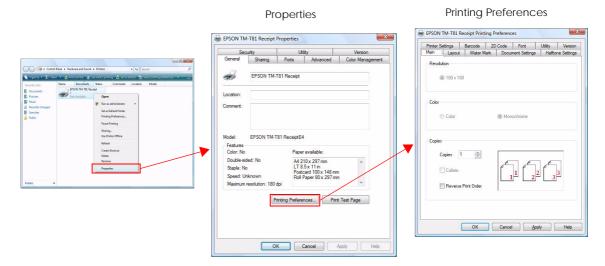


NOTE

- Windows Vista
 [Start] [Control Panel] [Hardware and Sound] [Printer]
- Windows XP
 [Start] [Control Panel] [Printers and Faxes]

Properties


The following settings are available in the Property.

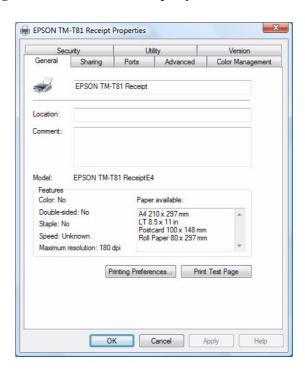

Tab	Description	
General	Configures printer name and printing preference, or makes a test print.	
Sharing	Configures settings for sharing the printer.	
Ports	Configures ports settings.	
Advanced	Configures detailed settings for printing.	
Color Management	Configures color management settings.	
Security	Configures Windows security setting.	
Utility	Configures Log File and ControlA font settings.	
Version	Displays version information.	

General

Allows you to check/change the printer name, check the print settings, and make a test print (Print Test Page).

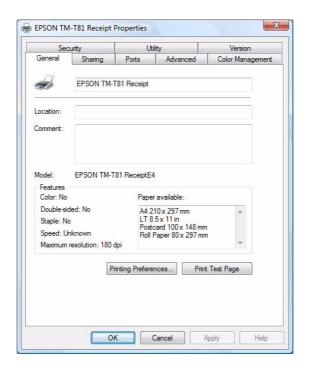

Setting	Description	
Printer Name	Displays the printer driver name.	
Location	Accepts the printer location to be input.	
Comment	Accepts comments about the printer driver to be input.	
Model	Displays the driver name of the TM printer.	
Features	Displays functions and papers available with the TM printer.	
Printing Preferences	Displays the Printing Preferences screen.	
Print Test Page	Prints the Windows test page.	

Sharing


Allows you to configure the settings for sharing the printer.



Printer sharing through a print server is not supported.




In Windows VIsta, elevation of UAC is required.

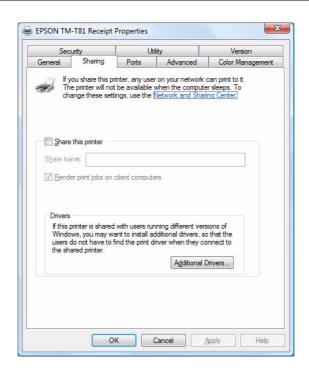

Setting	Description
Change sharing options	Check this box when a printer is to be shared.
Share this printer	When this box is checked, network users can access a printer connected to this computer.
Share name	Specifies the name of a shared printer.

Ports

Allows you to configure Epson Port settings.

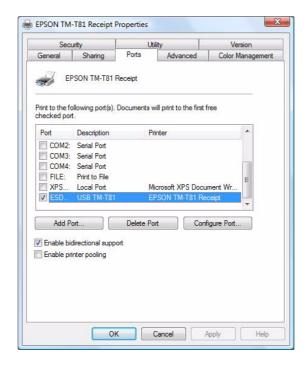


Setting	Description	
Add Port	Creates a new Epson Port.	
Delete Port	Deletes an Epson Port.	
Configure Port	Configures an Epson Port.	
Enable bidirectional support	Do not uncheck. The APD will become unusable.	
Enable printer pooling	Enables printing to two or more identical print devices through one logical printer.	



Select the Epson Port Driver (ESDPRTxxx) to be used for printing. Do not use COM or USB, or any other ports. The APD works only with the Epson Port Driver.

Advanced

Allows you to configure the detailed settings for printing. Basically, use as they are configured by default.

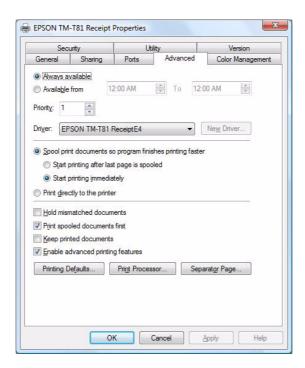


Setting	Description	
Always available	Makes the printer always available.	
Available from	Configures the printer for limited availability. If you send a document to a printer when it is unavailable, the document will be held (spooled) until the printer is available.	
Priority	Indicates the current priority setting. Higher-priority documents will print before lower-priority documents.	
Driver	Lists the name of the installed printer driver. The printer driver name usually corresponds to the name of the print device.	
Spool print documents so program finishes printing faster	Specifies that documents should be spooled before being printed.	
Start printing after last page is spooled	Specifies that the print device should wait to begin printing until after the last page of the document is spooled. The printing program is unavailable until the document has finished spooling. However, using this option ensures that the whole document is available to the print device. Configurable when [Spool print documents so program finishes printing faster] is set.	

Setting	Description	
Start printing immediately	Specifies that the print device should begin printing after the first page of the document is spooled. This makes the printing program available sooner. Configurable when [Spool print documents so program finishes printing faster] is set.	
Print directly to the printer	Specifies that the document should be sent directly to the print device and not spooled. Use this if you cannot print using either of the print spooling options.	
Hold mismatched documents	Directs the spooler to check the printer setup and match it to the document setup before sending the document to the print device. If the information does not match, the document is held in the queue. A mismatched document in the queue will not prevent correctly matched documents from printing. Configurable when [Spool print documents so program finishes printing faster] is set.	
Print spooled documents first	Specifies that the spooler should favor documents that have completed spooling when deciding which document to print next, even if the completed documents are a lower priority than documents that are still spooling. If there are no documents that have completed spooling, the spooler will favor larger spooling documents over smaller ones. Use this option if you want to maximize printer efficiency. When this option is disabled, the spooler picks documents based only on priority. Configurable when [Spool print documents so program finishes printing faster] is set.	
Keep printed documents	Specifies that the spooler should not delete documents after they are printed. This allows a document to be resubmitted to the printer from the printer queue instead of from the program. Configurable when [Spool print documents so program finishes printing faster] is set.	
Enable advanced printing features	Specifies whether the advanced printing feature is enabled. When enabled, metafile spooling is turned on and options such as Page Order, Booklet Printing, and Pages Per Sheet are available, depending on your printer. For normal printing, leave the advanced printing feature set to the default (Enabled). If compatibility problems occur, you can disable the feature. When disabled, metafile spooling is turned off and the printing options might be unavailable. Configurable when [Spool print documents so program finishes printing faster] is set.	
Printing Defaults	Click to configure the Printing Preferences.	
Print Processor	Click to specify the data type. In general, you do not need to change either the default print processor or data type. However, a few programs might require a specialized print processor and a particular data type to print.	
Separator Page	Not available.	

Color Management


Allows you to set color displayed on the screen.

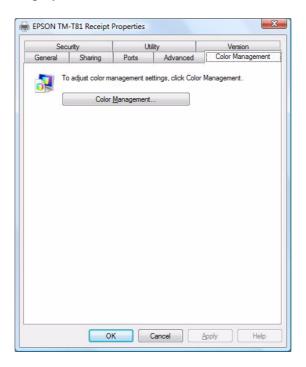

Setting	Description	
Color Management	Set the color management.	

Security


Security setting for Windows.

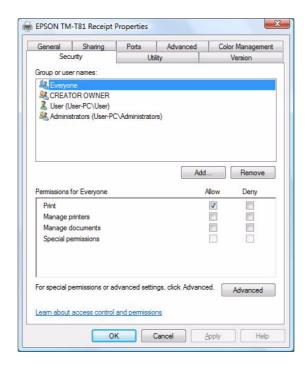

Setting	Description	
	Lists the users and groups with assigned permissions for this object.	
Group or user names	The permissions for the highlighted group or user appear in the list box	
	below.	
Add	If you want to add permissions for users or groups, click their names.	
Remove	Removes highlighted permission entry. More than one permission entry	
Kemove	can be connected with a user or group.	
	Permissions you can allow or deny for each user or group are listed. To	
Permissions for	allow or deny the permission, check or clear the appropriate check-box.	
Administrators	Shaded checkboxes indicate inherited permissions. To see additional	
	information on permissions or inheritance, click Advanced.	
Advanced	Click for viewing and setting special permissions, auditing information,	
Advanced	owner information, and permissions effective for this object.	

Utility


Allows you to use EPSON Log File Settings, Edit CotrolA Font Character Translation Table, and other utilities.

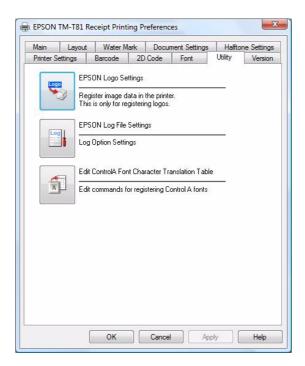

Setting	Description		
EPSON Logo Settings	The TM Flash logo registration screen appears. For more details, see "TM Flash Logo Setup Utility" on page 89.		
EPSON Log File Settings	Opens the Log File Setting screen.		
Edit ControlA Font Character Translation Table	Opens the EPSON controlA font setting screen.		

EPSON Log File Setting

Allows you to create a log file which can help you to troubleshoot a problem quickly. See the Status API Manual for more details about the log file.

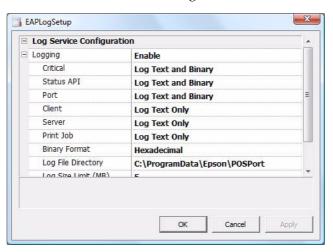

Setting		Description	
Logging	Enable (Default)	Enables log output.	
Logging	Disable	Disables log output.	
	Select how the Windows error information is output.		
Critical	Log Text Only	Outputs the log as text data.	
	Log Text and Binary (Default)	Outputs the log as text and binary data.	
	Select how the Status API log is outp	out.	
Status API	Do Not log	A Status API log is not output.	
Status Ai i	Log Text Only	Outputs the log as text data.	
	Log Text and Binary (Default)	Outputs the log as text and binary data.	
	Select how the log of the communi	cation port is output.	
Port	Do Not log	A communications port log is not output.	
Fort	Log Text Only	Outputs the log as text data.	
	Log Text and Binary (Default)	Outputs the log as text and binary data.	
	Select how the log of the application on the client-server system is output.		
Client	Do Not log	A client log is not output.	
Cilcrit	Log Text Only (Default)	Outputs the log as text data.	
	Log Text and Binary	Outputs the log as text and binary data.	
	Select how the log of the server on	the client-server system is output.	
Server	Do Not log	A service log is not output.	
JCI VCI	Log Text Only (Default)	Outputs the log as text data.	
	Log Text and Binary	Outputs the log as text and binary data.	
	Select how the log of print jobs is output.		
Print Job	Do Not log	A print job information log is not output.	
111111111111111111111111111111111111111	Log Text Only (Default)	Outputs the log as text data.	
	Log Text and Binary	Outputs the log as text and binary data.	

	Setting	Description	
	Configures the binary data format.		
Binary Format	Hexadecimal (Default)	Outputs the log to a hexadecimal log file.	
	Base64	Outputs the log to a Base64 log file.	
	Specify where to output the log file.		
Log File	(Default)		
Directory	Windows XP: C:\Documents and S	vs XP: C:\Documents and Settings\All Users\Application Data\Epson\POSPort	
	Windows Vista: C:\ProgramData\Epson\POSPort		
	Specify the upper limit of the log file size.		
	When the upper limit is exceeded, the log file is compressed using zip format and		
Log Size Limit	saved as a BAK file. The subsequent log information is saved as a new log file. A		
(MB)	sequential number is added to the name of the BAK files. (example:		
	EpsonPOSPort1.bak).		
	Specify the number of log files to be backed up.		
5	(Range: 1 to 1024 , Default: 5)		
Backup File Count	Specify the number of log files to be backed up. (Range 1 to 9, Default: 1)		

NOTE


Output function of hexadecimal dumping list is not supported.

Edit controlA font character translation table

Allows you to edit EPSON controlA Font settings. You can assign ESC/POS commands to the selected controlA Font characters. When the assigned characters are printed, the corresponding ESC/POS commands are executed.




- Up to 255 bytes characters can be assigned.
- ESC/POS commands are not open to the public. Ask your sales representative for more information.

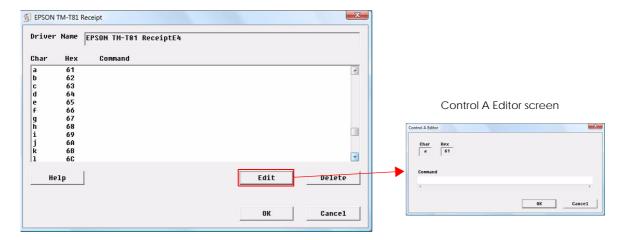

Setting	Description
Driver Name	Displays the printer driver name for which the controlA Font will be configured.
Char	Displays the selected ASCII code as characters.
Hex	Displays the selected ASCII code as hexadecimals.
Command	Displays the ESC/POS command corresponding to the ASCII code. It is displayed in hexadecimal.
Help	Displays the EPSON controlA Font help.
Edit	Displays the controlA Editor screen. Allows the [Command] to be edited.
Delete	Deletes the [Command] selected from the list box.
OK	Saves the configured settings and closes the EPSON controlA Font.
Cancel	Closes EPSON controlA Font without reflecting the changes.

controlA Editor screen


An ESC/POS command to be assigned to the selected character can be entered.

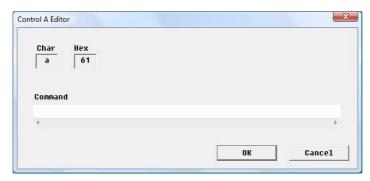

Setting	Description
Char	Displays the selected ASCII code as characters. The content cannot be changed.
Нех	Displays the selected ASCII code as hexadecimals. The content cannot be changed.
Command	Enter the ESC/POS command that will correspond to the ASCII code. Enter using hexadecimal.

Version


Displays the printer driver version information.

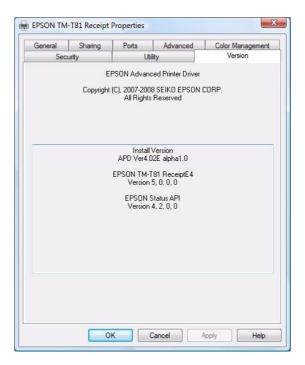

Printing Preferences

The Printing Preferences screen is displayed by selecting the Properties - [General] tab and clicking the [Printing Preferences...].


You can configure the following settings in the Printing Preferences screen.

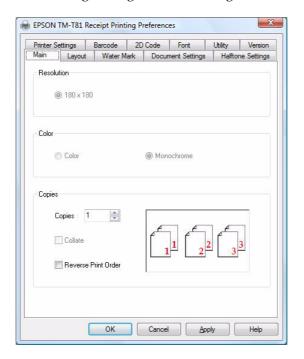

Tab	Description
Main	Configures basic print settings, such as the number of copies, and color
	setting.
Layout	Configures paper size and rotation of print images.
Water Mark	Configures Water Mark setting.
Document Settings	Configures the Document Settings.
Halftone Settings	You do not set the Halftone Settings.
Printer Settings Configures paper width for the TM printer.	
Barcode	Configures the barcode settings. (Displayed only when the printer supports
barcode	the barcode printing.)
2D Code	Configures the 2D-Code settings. (Displayed only when the printer supports
25 3333	the 2D-Code printing.)
Font	Displays the list of Device fonts.

Main


Allows you to configure the print resolution, color mode, and the number of copies.

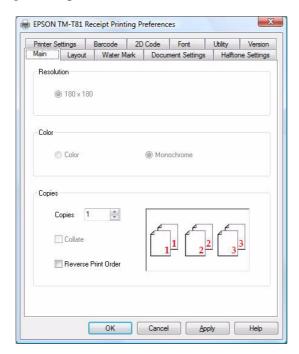

Setting	Description	
Resolution	The resolution of the TM printer is specified.	
Color	Select whether to print in color or monochrome. Select the [Color] for making color print (two-color printing is made when the printer is two-color printer). Select [Monochrome] to print using a single color (black is uses as default). Some TM printer models require memory switch configuration.)	
Copies	Configures the number of copies.	
Collate	Configures the number of copies of document with multiple pages.	
Reverce Print Order	Prints the document with multiple pages in backward order.	

Layout

Allows you to configure the paper size, rotation, and reduced print settings.

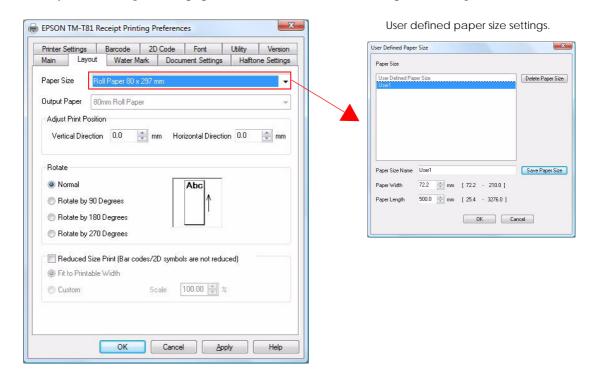


Setting		Description
Paper Size		Select the paper size from list. The list shows all the paper sizes (including the logic paper sizes and user defined sizes) supported by the printer driver.
Paper	size	The sizes of paper which can be set in the TM printers.
	Logic paper size	The original size of a print image which can be scaled down by the printer driver. An image is scaled down to the size of paper loaded on the TM printer.
	User Defined Paper Size	The paper size defined by the users. Setting the paper size can be made in the User Defined Paper Size screen.
Output Paper		Displays paper types available with the TM printer.

Setting		Description
Adjust Print Position		Allows you to fine adjust the print start position. You can adjust the print position without making changes in margins and print area defined by the applications. This also can be used for changing print position of rotated or reduced image. This adjustment is limited within the printable area of the selected [Paper Size]. If you change the [Paper Size] to the smaller one without changing the print position setting, causing the position settings to fall outside the new printable area, the settings will be automatically changed so that the print image fits inside the new printable area. The print position of the logo registered in the TM printer (NV Graphics) will not be changed.
	Vertical Direction	This adjusts the print position in horizontal direction. Enter a negative value to make the top margin smaller, or positive value to make it larger.
	Horizontal Direction	This adjusts the print position in vertical direction. Enter a negative value to make the left margin smaller, or positive value to make it larger.
Rotate	9	This configures print direction. The graphic shown on the right changes according to the selected setting. Select a desired setting for rotating a print image. When other than [Normal] is selected, the following message is displayed; " <print all="" as="" graphics="" image="" text=""> will be automatically set to yes. <paper conservation=""> will be automatically changed."</paper></print>
	Normal	This prints in normal direction. This is the default.
	Rotate by 90 Degrees Rotate by 180 Degrees Rotate by 270 Degrees	This rotates a print image as specified. The rotated print image is printed as a graphics image, therefore, the Device fonts, control font, and controlA font cannot be used.
Reduced Size Print		This configures reduced print, [Fit to Printable Width] or [Custom]. When [Reduced Print] is selected, the following message is displayed; " <print all="" as="" graphics="" image="" text=""> will be automatically set to yes.". The reduced print image is printed as a graphics image, therefore, the Device fonts, control font, and controlA font cannot be used. When Logic paper size is selected, deselecting [Reduced Print] automatically changes the paper size to Paper size or User Defined Paper Size. Reduced Print setting does not change the size of Barcode and</print>
Fit to Printable Width		2D-Code. A print image is automatically scaled down so that it fits inside the width of the paper loaded on the TM printer.
	Custom	You can manually set the reduction percentage.

User defined paper size.

Allows the users to define custom paper sizes. Up to 30 sizes can be saved as the User Defined Paper Sizes.


In the Printing Preferences \tilde{n} [Layout] tab, select [User Defined Paper Size] from the Paper Size pull-down menu. The following screen appears.

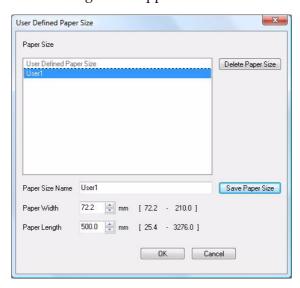

Setting	Description	
	This shows the list of saved User defined paper sizes.	
	"To define a new custom size, select "User Defined Paper Size".	
Paper Size	When one of the saved custom sizes is selected from the list, the configured	
	[Paper Size name], [Paper Width], and [Paper Length] are displayed and	
	you can edit the setting.	
	An arbitrary name of each custom paper size can be specified using up to	
Paper Size Name	24 characters.	
, app. 0.20 mamo	You can not use the name of the physical paper sizes, already shown in the	
	Paper Sizes list in [Layout] tab.	
Paper Width	Specifies a paper width.	
Paper Length	Specifies a paper length.	
Delete Paper Size	Deletes a selected custom paper size shown in the list.	
	Saves a configured custom paper size.	
	The information of [Paper Size Name], [Paper Width], and [Paper Length] will	
Save Paper Size	be saved.	
	If you edit the existing User defined paper size and click this button, the	
	setting is overwritten.	
OK	Saves the selected User Defined paper size.	
Cancel	Cancels changes made on an existing User Defined paper size.	

. Water Mark

Allows you to set a bitmap file to be used as a Water Mark. The preview window shows the specified Water Mark image reflecting the selected Print Position, Size, and Density.

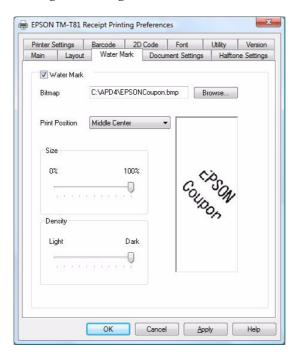


Setting	Description	
	Tick the checkbox to set a Water Mark.	
Water Mark	The following message is displayed; " <print all="" as="" graphics="" image="" text=""> will be automatically set to yes.". When Water Mark is enabled, the print image is printed as a graphics image, therefore, the Device font is replaced with TrueType font, and control font and controlA font cannot be used.</print>	
Bitmap	Specifies a bitmap file to be used as a Water Mark.	
	Select a desired print position from the pull-down menu.	
Print Position	The following position settings are provided: Top Left/Top Center/Top Right/Middle Left/Middle Center/Middle Right/Bottom Left/Bottom Center/Bottom Right/Tiled	

Setting	Description	
Size	Configures the size of Water Mark in a percentage of print area. The percentage can be specified within the range of 0 to 100. However, if you select "0", the Water Mark becomes too small and cannot be printed. When "100" is specified, the Water Mark will be enlarged or reduced so that it fits in the print area of the selected paper. However, depending on the horizontal to vertical ratio of the Water Mark image, such as a vertically long image, some portions of the image may exceed the print area and may not be printed. The length of paper is not changed according to the length of the Water Mark image.	
Density	Configures the density of the Water Mark. The density can be adjusted in the "Light" to "Dark" range.	


Document Settings

The Document Settings allows you to configure the document property. In the upper area of the window, the setting items are displayed in a tree view format, and the current settings of each setting items are shown on the right. If you select a setting item, the setting options for the selected item are displayed in the lower box.

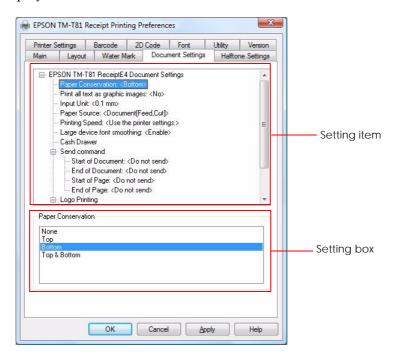

Paper Conservation

You can save paper by skipping page margins. Printing in the Windows environment is made based on standard paper sizes, such as A4, A5 size. Therefore, regardless of whether print data has been received or not, paper is advanced automatically by a predetermined amount each time after a receipt is printed. This function allows you to save paper by disabling the automatic paper feeding.

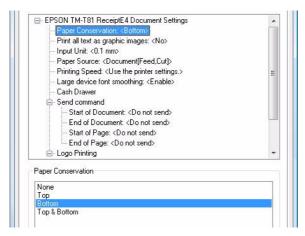

Setting	Description
None	Does not save paper.
Тор	Saves the top margin.
Bottom (Default)	Saves the bottom margin.
Top & Bottom	Saves both top and bottom margins.




According to the Rotate setting in the Layout tab, the Paper Conservation setting is automatically set as follows.

When the Rotate setting is set to "Normal" or "Rotate by 90 Degrees", the Paper Conservation is set to "Bottom". When "Rotate by 180 Degrees" or "Rotate by 270 Degrees" is specified, the Paper Conservation is set to "Top".

Print all text as graphic images

All the data will be printed as a graphic images.

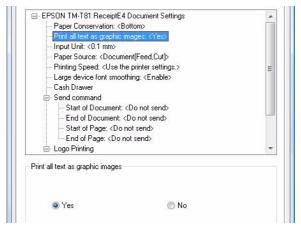

Setting	Description
Yes	All print data is printed as a graphics image. The computer creates the print data in the same way as Windows driver does, therefore, the print data size becomes larger. In addition to that, Device fonts are replaced with TrueType fonts, and Device fonts are not displayed in the Font tab.
No * (Default)	Device fonts are printed. The TM printer creates the print data, therefore, the data size becomes smaller. In addition to the Device fonts, you can also use control font, and controlA font. Due to some settings, you may not be able to change the setting from "Yes" to "No". In such case, a message appears to notify you of the setting that prevents the change.

^{*} When this setting is changed to "Yes" because of other settings, a message appears to notify you of the change.



"If you select "Yes", you can not use control font and controlA font.

Related APD settings.

The following settings automatically change this setting to "Yes".

Setting tab	ltem
Layout	Rotate
Layout	Reduced print
Water Mark	Water Mark
	Add Quiet Zone
Barcode	Rotation
balcode	Composite (when not installed on the device)
	Type (when not installed on the device)
	Add Quiet Zone
2D-Code	Rotation
	Type (when not installed on the device)

Input Unit

The unit to express a length in the Property screen can be changed. Paper size or any other length settings are expressed in the selected unit in the user interface.




Setting	Description
0.1mm (Default)	The length settings in the user interface can be made in increments of "0.1mm".
0.01inch	The length settings in the user interface can be made in increments of "0.01inch".

Related APD settings.

Setting tab	Item
Layout	Paper Size (User Defined Paper Size : Paper Width, Paper Length)
	Adjust Print Position (Vertical Direction, Horizontal Direction)
Barcode	Element Height

Paper Source

This setting allows you to select operations of the autocutter and paper feed between pages, and between print jobs.

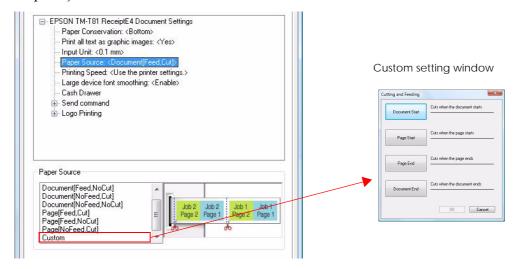


Setting	Description
Document[Feed,Cut]	The paper is advanced and cut each time a print job is finished.
	Job 2 Job 2 Job 1 Job 1 Page 2 Page 1
	The paper is advanced, but not cut each time a print job is finished.
Document[Feed,No Cut]	Job 2 Job 2 Page 1 Job 1 Job 1 Page 2 Page 1
	The paper is cut, but not advanced each time a print job is finished.
Document[No Feed,Cut]	Because of the space between the autocutter and the print head (1
Document[No reed,edt]	to 2 cm), a minimum top margin is provided even if you set the top
	margin to 101. To avoid the waste, this setting allows you to print the top of the next page (e.g. store logos) on the bottom of the previous
	page and then cut the paper without advancing it. In this way, the
	top margin created by the physical space of the TM printer can be
	used.
Document[No Feed,No Cut]	The paper is not advanced and not cut each time a print job is finished.
	Job 2 Page 2 Page 1 Page 2 Page 1

Setting	Description
Page[Feed,Cut]	The paper is advanced and cut each time a page is printed.
rage[reed,Cut]	Ado 2 Job 2 Job 1 Job 1 Page 2 Page 1 Page 1
	The paper is advanced, but not cut each time a page is printed.
Page[Feed,No Cut]	Job 2 Page 2 Page 1 Job 1 Page 2 Page 1
	The paper is cut, but not advanced each time a page is printed.
Page[No Feed,Cut]	Job 2 Page 1 Page 2 Page 1
Custom	Use this setting when printing on black-mark papers or labels. When this is selected, the Custom setting screen appears.

Custom

When "Custom" is selected from the Paper Source list for printing on black-mark papers, labels or cut sheets of paper, the Custom setting screen appears.

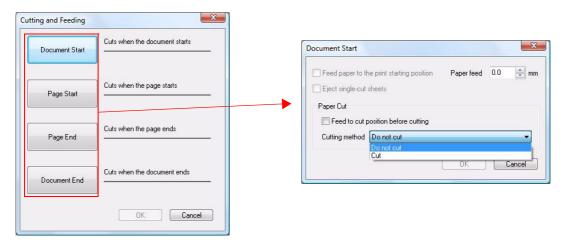


Setting	Description
Feed paper to the print starting position	Specifies whether to advance labels or black mark papers to the print start position. When this box is checked, the paper is advanced to the start position. When not checked, the paper is not advanced.
Paper feed	Specifies the amount of paper to be advanced. When a positive value is specified, the paper is fed in the print direction. When 0 is specified, the paper is not advanced. When a negative value is specified, the paper is fed in the direction opposite to the print direction (reverse-feed may not be possible depending on the TM printer model).
Eject single-cut sheets	Specifies whether to send a form feed command when using cut sheets. When this box is checked, the command is sent. When not checked, the command is not sent.
Feed to cut position before cutting	Specifies whether to advance the paper to the cut position before cutting operation. When this box is checked, the paper is advanced to the cut position. When not checked, the paper is not advanced.
Cutting method	Select the cutting operation. Do not cut Cut Feed to black mark and do not cut Feed to black mark and cut

Printing Speed

You can change the print speed (paper feed speed), if that of your TM Printer is changeable.

When a large bitmap is printed using a thermal printer with the print speed set to higher, the data transmission may not be able to keep up with the print speed. This can cause the printer to pause during printing. Should this occur, the bitmap may not be printed correctly.


Adjust the print speed by changing the setting to 1st (fast), then 2nd (slightly slower), and then 3rd (slowest) in that order, until the image is printed properly without causing the printer to pause.

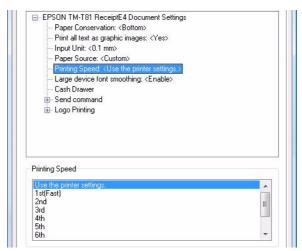

Setting	Description
Use the printer setting.	The print speed set at the TM Printer is applied.
(Default)	
1st~9th	The 1st is the fastest print speed, and the 9th is the slowest.

Large device font smoothing


Large device fonts can be clearly and neatly printed.

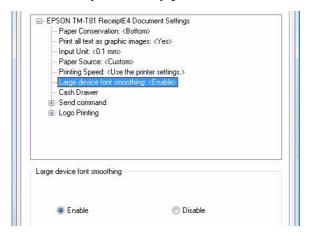

Setting	Description
Enable (Default)	Performs smoothing of the large Device fonts to print them neatly.
Disable	The corners of large device fonts may be printed with jaggies.

Cash drawer

You can configure the setting for opening the Cash drawer. A command for opening the Cash drawer is sent to the drawer connected to the TM Printer through the DK connector. See the Cash drawer specifications to check the connector number for the Cash drawer.

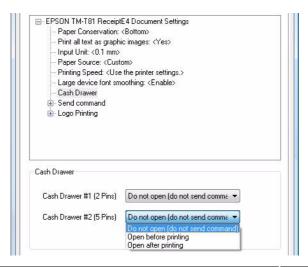


Setting		Description
	Do not open (do not send command) (Default)	The drawer does not open.
Cash drawer #1 [2pins]	Open before printing	The drawer opens when printing starts.
	Open after printing	The drawer opens when printing is finished.
	Do not open (do not send command) (Default)	The drawer does not open.
Cash drawer #2 [5pins]	Open before printing	The drawer opens when printing starts.
	Open after printing	The drawer opens when printing is finished.

Send command

ESC/POS commands can be sent to the TM printer directly.




ESC/POS commands are not open to the public. Ask your sales representative for more information.

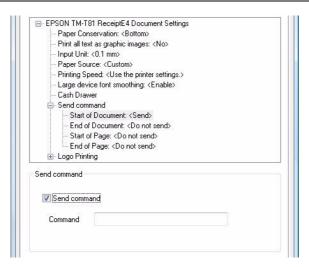

Setting		Description
Start of Document	Send command	Check this box to send a command when printing.
End of Document Start of Page End of Page	Command	Enter a desired ESC/POS command to be sent to the TM printer. You cannot enter the command without checking the "Send command" box.

Logo Printing


A desired logo can be specified to be printed.

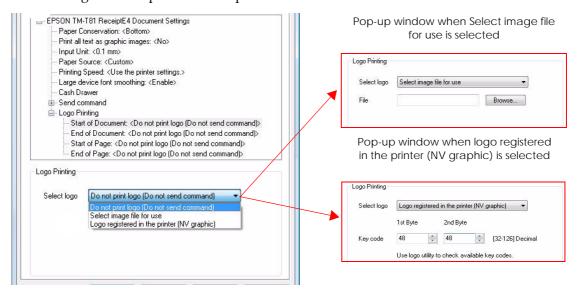

Setting		Description
	Do not print logo (Do not send command)	Does not print a logo.
Start of Document End of Document Start of Page	Select Image file for use	Prints a logo using an image file. Specify a bitmap file in the "Bitmap" box.
End of Page	Logo registered in the printer (NV graphic)	Prints a logo registered in the NV memory of the TM printer. Enter a Keycode of the desired logo. Use the "TM Flash Logo Setup Utility" to register a logo. See "TM Flash Logo Setup Utility" on page 89 for details.


Halftone Settings

You do not set the Halftone Settings.

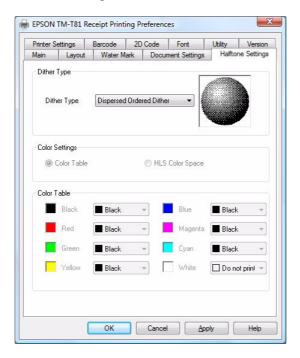


Printer Settings

Allows you to make settings of the printer. The setting items are displayed in the upper box of the Printer Settings screen. If you select a setting item, the setting options for the selected item are displayed in the lower box.

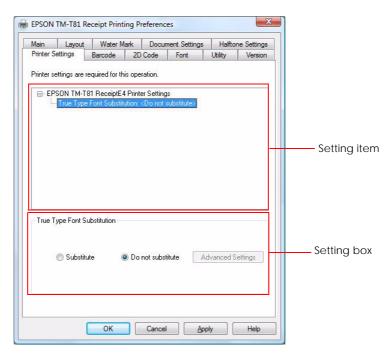

TrueType Font Substitution


Allows you to replace TrueType Font with Device font, Barcode font, 2D-Code font, control font, or controlA font.

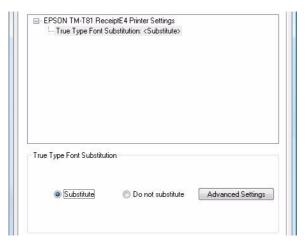

Setting	Description
Substitute (Default)	Replaces TrueType font with Device font, Barcode font, 2D-Code font, control font, or controlA font.
Do not Substitute	Does not replace the TrueType font.
Advanced settings	Displays the "TrueType Font Substitution" screen.
/ dvarioca settings	This button is enabled when the "Replace" is selected.

TrueType Font Substitution settings


Allows you to configure TrueType substitution settings. In the case that Device fonts cannot be used, the substitution setting is ignored and TrueType fonts are printed as they are.

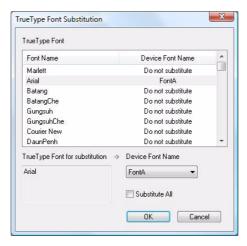

Setting	Description
TrueType Font	Displays the TrueType font list. Select TrueType fonts to be replaced.
TrueType Font for substitution	Displays the fonts selected by the "TrueType Font" list.
Device Font Name	Specify the device fonts to be replaced, "Barcode", "Control", "ControlA" and "2D-Code".
Substitute All	Replace all the TrueType Font on the "TrueType Font" list to the fonts selected on [Device Font Name]. If you put a check mark next to this item, [TrueType Font] will be grayed out.

Barcode


Allows you to configure Barcode fonts. The barcode type and size can be registered. Up to eight types of barcodes (Barcode 1 to 8) can be registered using the APD.

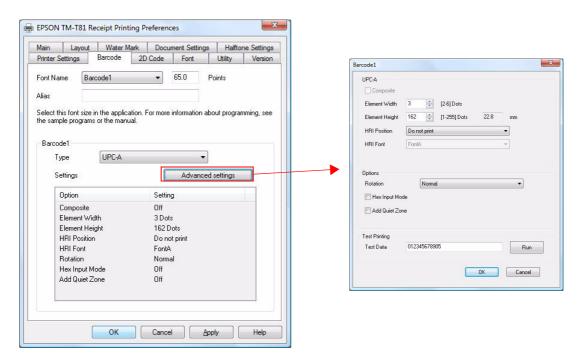

Setting	Description
Font Name	Select a desired barcode font from the pull-down list.
TOTIL Name	The point value changes according to the height of the element.
Alias	An alias name can be specified for the selected barcode font. Up to 31 characters can be entered. Alphameric characters, spaces, and the following symbols can be used. Available characters: !"#\$%&'()*+,/:;<=>?@[\]^_`{ }~
Туре	Select a desired barcode type from the pull-down list (UPC-A, UPC-E, JAN13 (EAN), JAN8 (EAN), Code39, ITF, Codabar, Code93, Code128). Select "Not Use" when not specifying the barcode type.
Advanced settings	Displays the barcode advanced setting screen that allows you to select the barcode size, HRI characters and so on.
Settings	Displays the barcode font settings.

Barcode advanced setting

The barcode advanced setting screen is displayed by clicking the Advanced settings button. This allows you to select the barcode size, HRI characters and so on.

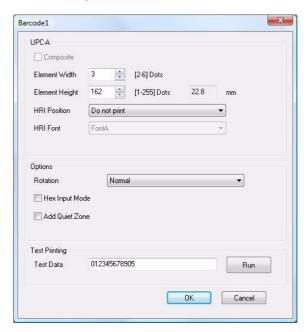


Setting	Description
Element Width	Specifies the barcode element width. The thin element width is expressed in the number of dots. The setting can be changed within the range of 2 to 6.
Element Height	Specifies the barcode element height using the number of dots. The setting can be changed within the range of 1 to 255 dots. According to the specified number of dots, the actual height is expressed in mm or point. Use the point value to specify the height in the application.
HRI Position	Specifies the position of the HRI characters (barcode data) from the pull-down list (Do not print, Above the barcode, Below the barcode, Both above and below the barcode).
HRI Font	Specifies the font of the HRI characters from the pull-down list (FontA, FontB). The FontC is available only with some specific TM printers. This option is grayed out when "No printing" is selected in the [HRI Position].

	Setting	Description
		Specifies the print direction of barcode. When other than "Normal" is selected in the Rotation setting, the following message is displayed: " <print all="" as="" graphics="" image="" text=""> will be automatically set to yes."</print>
Rotation		When other than "Normal" is specified for the Rotation setting both in the [Layout] tab and the [Barcode] - [Advanced settings], the both settings are applied to the printed barcode at a time.
	Normal	Prints the barcode without rotating it.
	Rotate by 90 Degrees	Detates the barrende to print it. The whole print data is printed as
	Rotate by 180 Degrees	Rotates the barcode to print it. The whole print data is printed as a graphics image, therefore, the Device fonts, control font, and controlA font cannot be used.
	Rotate by 270 Degrees	
Hex Input Mode		Allows the barcode characters to be entered in binary. Ex: "00010203" → 0x00 0x01 0x02 0x03
Add Quiet Zone		Check this box to add a quiet zone, the blank margin on either side of a barcode, required to be properly read by a barcode reader. The quiet zone is added without changing the barcode position.
Toot		Prints a set barcode as test printing.
Test Printing	Test Data	Inputs data for test printing.
Tilling	Run	Prints input data.

2D-Code

Allows you to configure 2D-Code fonts. The 2D-Code type and size can be registered. Up to eight types of barcodes (2D-Code 1 to 8) can be registered using the APD.

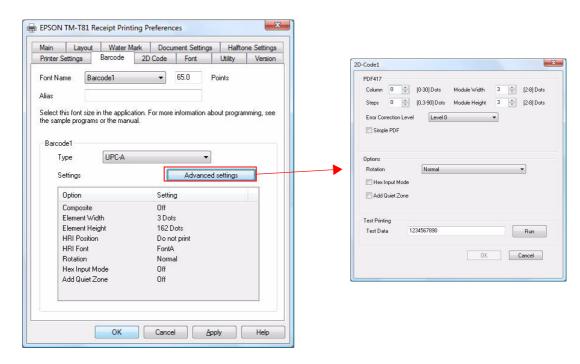

Setting	Description
Font Name	Select a desired 2D-Code font from the pull-down list. The point value
Tontivame	changes according to the height of the 2D-Code.
	An alias name can be specified for the selected 2D Code font.
Alias	Up to 31 characters can be entered. Alphameric characters, spaces,
Alias	and the following symbols can be used.
	Available characters: !"#\$%&'()*+,/:;<=>?@[\]^_`{ }~
	Select a desired 2D-Code type from the pull-down list (PDF417 or QR
Туре	Code).
	Select "Not Use" when not specifying the type.
Advanced settings	Displays the 2D-Code advanced setting screen that allows you to make
Advanced settings	the detailed settings for each type of the 2D-Code.
Settings	Displays the current 2D-Code font settings.

2D-Code advanced settings

The 2D-Code advanced setting screen is displayed by clicking the Advanced settings button.


PDF417



Setting	Description
Column	Specifies the number of columns of PDF417 to be printed.
Column	The setting can be changed within the range of 0 to 30.
Steps	Specifies the number of steps of PDF417 to be printed.
31003	The setting can be changed within the range of 0 to 30.
Module Width	Specifies the cell (module) width of PDF417 to be printed.
Wodale Watti	The setting can be changed within the range of 2 to 8.
Module Height	Specifies the cell (module) height of PDF417 to be printed.
Wioddie Height	The setting can be changed within the range of 2 to 8.
Error Correction Level	Specifies the error correction level for PDF417 (Level 0 to
End Concetton Level	Level 8).
Simple PDF	Specifies the option of PDF417 to be printed.

	Setting	Description
Rotation		Specifies the print direction of 2D-Code. When other than "Normal" is selected in the Rotation setting, the following message is displayed: " <print all="" as="" graphics="" image="" text=""> will be automatically set to yes."</print>
		When other than "Normal" is specified for the Rotation setting both in the [Layout] tab and the [2D-Code] - [Advanced settings], the both settings are applied to the printed 2D-Code at a time.
	Normal	Prints the 2D-Code without rotating it.
	Rotate by 90 Degrees	Rotates the 2D-Code to print it. The whole print data is
	Rotate by 180 Degrees	printed as a graphics image, therefore, the Device fonts, control font, and controlA font cannot be used.
	Rotate by 270 Degrees	
Hex Input Mode		Allows the 2D-Code characters to be entered in binary. Ex: "00010203" → 0x00 0x01 0x02 0x03
Add Quiet Zone		Check this box to add a quiet zone, the blank margin around the 2D-Code, required to be properly read by a barcode reader. The quiet zone is added without changing the 2D-Code position.
Test		Prints a set PDF417 as test printing.
Printing	Test Data	Inputs data for test printing.
9	Run	Prints input data.

QR Code

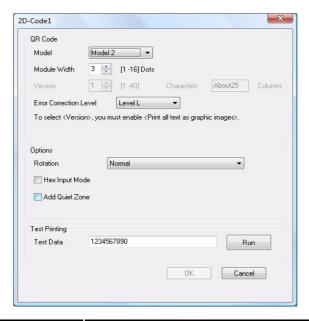


Setting		Description
Model		Specifies a QR Code model (Model 11 or Model 12).
Module Wi	dth	Configures the cell (module) of QR Code to be printed. The setting can be changed within the range of 1 to 16.
Version		Specifies the QR Code version. Depending on the QR Code version, the number of characters to be used for the 2D-Code changes. The settable versions are 1 to 16 when the "Model 1" is selected in the [Model], and 1 to 40 when the "Model 2" is selected.
Error Corre	ction Level	Specifies the error correction level for QR Code (Level L, Level M, Level Q, Level H).
Rotation		Specifies the print direction of 2D-Code. When other than "Normal" is selected in the Rotation setting, the following message is displayed: " <print all="" as="" graphics="" image="" text=""> will be automatically set to yes." When other than "Normal" is specified for the Rotation setting both in the [Layout] tab and the [2D-Code] - [Advanced settings], the both settings are applied to the printed 2D-Code at a time.</print>
	Normal	Prints the 2D-Code without rotating it.
	Rotate by 90 Degrees	Rotates the 2D-Code to print it. The whole print data is
	Rotate by 180 Degrees	printed as a graphics image, therefore, the Device fonts,
	Rotate by 270 Degrees	control font, and controlA font cannot be used.
Hex Input Mode		Allows the 2D-Code characters to be entered in binary. Ex: "00010203" → 0x00 0x01 0x02 0x03

Setting		Description
Add Quiet Zone		Check this box to add a quiet zone, the blank margin around the 2D-Code, required to be properly read by a barcode reader. The quiet zone is added without changing the 2D-Code position.
Toot		Prints a set QR Code as test printing.
Test Printing	Test Data	Inputs data for test printing.
111111119	Run	Prints input data.

Font

The list of Device fonts and Points supported by the TM printer is displayed. When using a Device font, make sure to specify the corresponding point indicated in the list. When programming, also specify the font and point as indicated in the list.

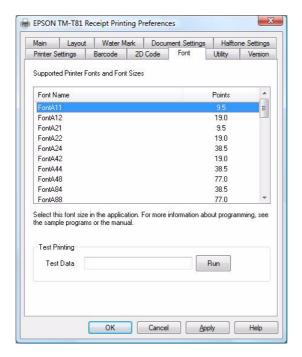

Setting		Description
Test		Prints the device font as test printing.
Printing	Test Data	Inputs data for test printing.
	Run	Prints input data.

TM Flash Logo Setup Utility

This chapter explains how to save your logo and how to use TM Flash Logo Setup Utility. The TM Flash Logo Setup Utility allows you to save a bitmapped image (logo file) to the NV memory of the TM printer and make a test print of the image. The main features are as follows.

- Once a logo file is saved to the memory, you can print the logo file only by specifying to do so using APD. You do not need to send the logo file from your application each time you need to print it.
- Because the logo file (bitmapped image) is saved on the printer and does not need to be transmitted, you can print it faster even when using serial connection, whose data transmission speed is relatively slow.

Saving a Logo File

Follow the procedure below to save your logo file to the NV memory. For more details about the settings, see "Reference" on page 93.

1 Prepare your logo file (bitmapped image). For information about allowable file size of the logo file, refer to the resolution and paper size provided in the "Print Specification".

Example: when printing a 60mm (W) x 20 mm (H) logo on 80 mm-width paper using the TM-T81, calculate the logo file size using the following formula. Formula:No. of dots = Length (cm) 2.54 (one inch) x TM printer resolution (dpi)


Width: $6.0 \ 2.54 \times 180 = 425 \text{ dots}$ Height: $2.0 \ 2.54 \times 180 = 142 \text{ dots}$

In this case, your logo file (bitmapped image) should be 425×142 -dot image.




- · 24-bit bitmap files can not be saved.
- You can use the TMF Logo Tool to change a full-color bitmapped image to a two-color or single-color image.
- See "Printer Specification" of your TM printer to check the printer resolution.
- 2 Select [TM Flash Logo Setup Utility] from [Start] [All Programs] [EPSON] [EPSON Advanced Printer Driver 4].

3 The TM Flash Logo Setup screen is displayed. Select the [Setup] tab. After specifying the printer name, click the [Comm.Test] button.

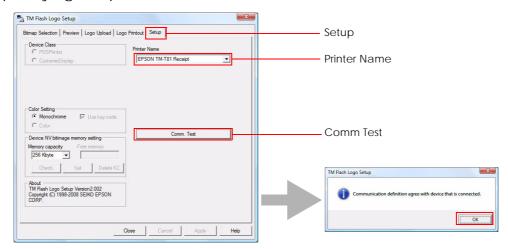

Setting	Description
Printer Name	Specify the printer to save a logo.
Comm Test	Checks whether the communication between devices is normally established and displays a message to show the test result.

✓ Select the [Bitmap Selection] tab and make the following settings.

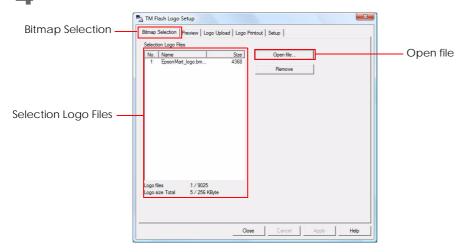


Setting	Description
Open file	Add a logo file (*.bmp) to save. You cannot add a logo file if the total number or size of the logo files listed in the "Selection Logo Files" box exceed the allowable numbers or size.
Selection Logo Files	Displays a list of selected logo files.

NOTE


The allowable number of logo files varies depending on the TM printer's NV memory capacity and size of the saved logo files. For more details, see the User's Manual supplied with the TM printer or the Technical Reference Guide.

Select the [Preview] tab. Make the following settings on the tab.

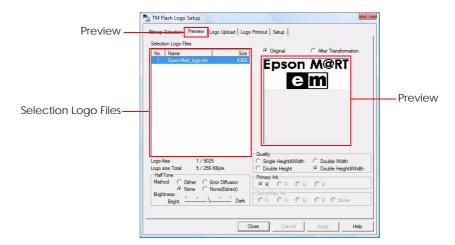


Setting	Description
Selection Logo Files	Displays a list of logo files selected in the [Bitmap Selection] tab.
	Select a desired logo file in the list to preview it in the preview window on the right.
Preview	Previews a logo file selected in the "Selection Logo Files" box.

Select the [Logo Upload] tab. Make the following settings and start to upload the logo file to the TM printer.

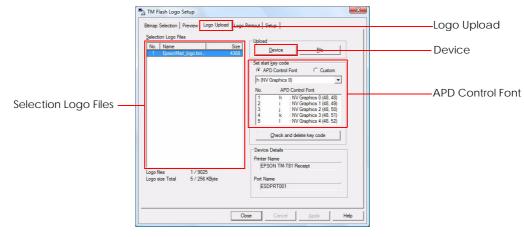


Setting	Description
Selection Logo Files	Select a logo file to be saved to the TM printer in this box.
APD Control Font	Specify the destination to where the logo file is saved. The destination NV memory address of the TM printer is specified using a control font that is used for specifying the logo file to print.
Device	Starts to upload the selected logo file to the TM printer.

- **7** A write start confirmation screen is displayed. Click the [OK] button. Uploading the logo file is started.
- The logo file is saved to the NV memory of the TM printer. A completion screen is displayed when saving the logo is finished successfully. Click the [OK] button and reset the TM printer.

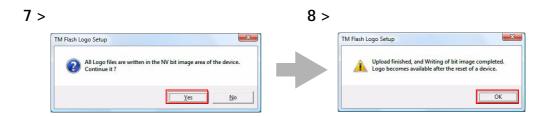

9 Select the [Logo Printout] tab. You can check whether the logo file is properly saved to the TM printer by making a test print.

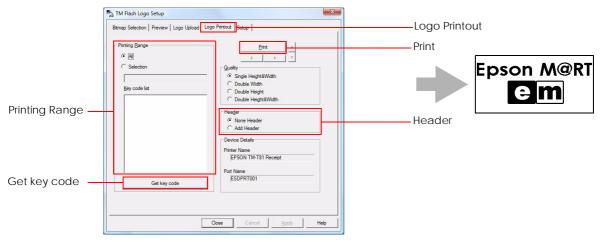


Setting	Description
Printing Range	Select a logo file saved to the TM printer.
	Select "All" to print the all saved logo files.
	In the case of NV graphics, select a desired logo file in the "Key code list" box. Click the "Get key code" to display the available key code list in the box.
Get key code	Displays a list of key codes of logo files saved to the TM printer in the "Key code list" box.
Header	Select whether to print the logo file with additional information such as its logo number.
Print	Starts to print the logo as specified on this tab.

Click the [Close] button to finish the logo entry.

Reference

This section explains about the settings of TMF Logo Tool.

Selection Logo Files

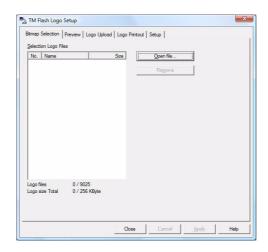


Setting	Description
Selection Logo Files	A list of selected logo files is displayed.
Open file	Specify a logo file (*.bmp) to be newly added to the TM printer.
Open file	The specified logo file is added in the "Selection Logo Files" list.
Remove	Delete a logo file selected in the "Selection Logo Files" box from the box.
Remove	Multiple logo files can be selected at a time.

CAUTION

In the following cases, a logo file cannot be selected.

- * When a specified logo file itself exceeds the NV memory capacity or when adding the logo file makes the total size of logo files exceed the NV memory capacity.
- * When the specified logo file is not a bitmap file.
- * When the specified logo file is a full-color (24-bit) bitmap file.
- * When adding the logo file exceeds the allowable number of logo files.


Preview

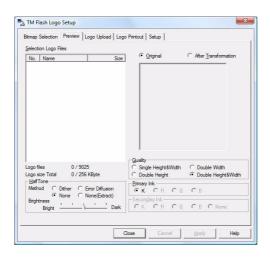

Setting		ting	Description
	Selection Logo Files		Displays a list of logo files selected in the [Bitmap Selection] tab. Select a logo file in the list to preview the bitmapped image in the preview window on the right.
	Preview		Previews a bitmapped image selected in the "Selection Logo Files" list.
	Original		Displays an original bitmapped image.
	After Transformation		Displays a bitmapped image reflecting the [Half Tone], [Quality], [Primary Ink], and [Secondary Ink] settings.
	Half Tone		Select a desired half tone setting. This setting is applied to the selected logo image when the logo is saved to the printer or output as a file.
			Select one of the options for converting a color bitmap file into monochrome or two-color image, or reducing colors from a color bitmap file.
	Method	Dither	Reproduces the image tones as rich as possible within the allowable gray-scale range. The darker portions of the image are printed using the Primary Ink and the Secondary Ink is used for the lighter portions of the image. Each one of image pixels is expressed by one dot.
		Error Diffusion	Reproduces the image tones as rich as possible within the allowable gray-scale range. The darker portions of the image are printed using the Primary Ink and the Secondary Ink is used for the lighter portions of the image. For error diffusion, each one of image pixels is expressed with multiple dots.
		None	Reduces colors from the original image. The original bitmapped image is binarized or trinarized. The darker portions of the image are printed using the Primary Ink and the Secondary Ink is used for the lighter portions of the image.
		None	Select this to print a simple bitmapped image such as a shop logo. Expresses the image using the same color extracted from Primary Ink and Secondary Ink.


Setting	Description
Brightness	Specifies the brightness of the bitmapped image.
Quality	Select the resolution used to display the image in the preview window.
Primary Ink	Select an ink color to be used as the Primary Ink. When [Color Setting] on the [Setup] tab has been set to "Monochrome", the color is fixed to "K".
Secondary Ink	Select an ink color to be used as the Secondary Ink. This setting is enabled when [Color Setting] on the [Setup] tab is set to "Color". When using a thermal printer and special paper, select "K" or "R". When selecting "Monochrome" using the NV graphics, select "None".

Logo Upload

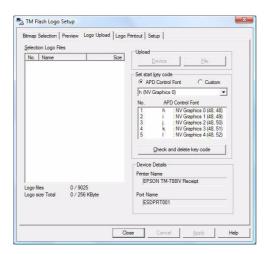


Setting		Description
Solo	ction Logo Files	Displays a list of logo files selected in the [Bitmap Selection] tab.
36161	ction Logo Files	The logo file selected here is saved to the TM printer.
Uplo	ad	Starts to upload the selected logo file to the device or output as a file.
	Device	Starts to upload the selected logo file to the NV memory of the device.
	File	Starts to output the selected logo file as a binary file.
APD	Control Font	Specifies the destination NV memory using a control font that is used for
711 D	Control Font	specifying the logo file to print.
Cust	om	Specify any key code to register the logo.
Devi	ce	Displays device information of the device to where the logo file is saved.
	Printer Name	Displays the printer model name.
	Port Name	Displays the port setting of the destination device.

Logo Printout

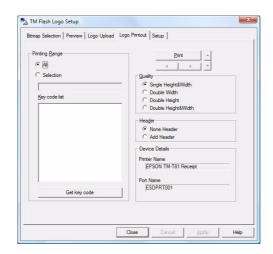

Setting		Description
Print	ing Range	Specifies a print range of the logo image.
	All	Prints all logo files saved in the NV memory of the device.
		Enter a print range of an NV monochrome bitmapped image in the edit box using "," and "-".
	Selection	Example) "1,5,10" "1-5,8,20-22"
		In the case of NV graphics, select the corresponding key code from the Key code list.
	Key code list	When the [Get key code] button is clicked, a list of key codes obtained from the device is displayed.
	Get key code	Obtains key codes from the device.
Print		Prints a logo file selected in the Printing Range box.
Qua	ality	Specifies the print resolution.
Header		Prints the selected logo file with its logo number added above the logo image.
Device Details		Displays device information of the device that prints the logo file.
	Printer Name	Displays the printer model name.
	Port Name	Displays the port setting of the destination device.

Setup

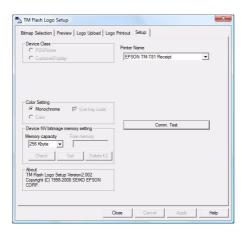

Setting		Description					
Device Class		Select the device type to be displayed in the [Printer Name] box.					
	POS Printer	Displays TM printer model names in the [Printer Name].					
	LineDisplay	Displays Customer Display model names in the [Printer Name].					
Printer Name		Select a device to where the logo file is saved.					
Color Setting		Select the color setting of the logo file to save. When the selected device does not support color printing, the "Color" option is disabled.					
	Monochrome	Saves the selected logo file as a NV bitmapped image.					
	Color	Saves the selected logo file as a NV graphics.					
Device NV bitimage memory setting		NV memory check and setting can be made.					
	Memory capacity	Displays the NV memory capacity. You can change the memory capacity here as long as the selected device supports the change. Click the [Set] button to change the memory capacity.					
	Free memory	Displays free space of the NV memory when "Color" is selected in [Color Setting]. Click the [Check] button to display the free space					
	Check	Displays the current capacity or free space of the NV memory when the selected device supports change of memory capacity or supports color printing.					
	Set	When the selected device supports change of NV memory capacity, changes the capacity to the amount specified in [Memory capacity].					
	Delete KC	When NV graphics is selected, you can check or delete key codes saved in the device.					
Comm	ı.Test	Performs a communication test with the selected device.					
About		Displays the version information of the TM Flash Logo Setup Utility.					



If you change the memory setting, the logo data already registered is not guaranteed. It may be lost. Be sure to confirm the registered logos.

Restrictions

This chapter describes the restrictions that apply to the APD.

OS Settings

- 1. When connecting Windows XP/Vista to a printer using serial I/F, printing may not operate correctly depending on the computer and printer combination. In such cases, disable FIFO in the Windows COM port detailed settings.
- 2. With a serial connection, when the OS recovers from a sleep or hibernate status, the printer may print "??."
- 3. With Windows XP/Vista, use [Enable advanced printing features] (EMF spool) in the printer driver Properties [Advanced] tab set to ON. Setting otherwise (RAW spool) applies the following restrictions to the GDI functions:
 - Raster operation cannot be printed as specified by StrtchBlt()/BitBlt().
 - When transferring bit information from display device context to the printer device context using StretchBlt(), the GDI function returns "Failure" and prevents the driver from printing.
- 4. When printing multiple pages, if you change the paper orientation from one page to another and/or other settings using ResetDC(), the print result may be incorrect. In such cases, set RAW spool (with Windows XP/Vista, set [Enable advanced printing features] to OFF) although some restrictions apply. See the previous paragraph for the restrictions.
- 5. When printing device fonts with Microsoft Word, convert the application to "Microsoft Word 6.0/95" by selecting [Tools] menu [Options] [Compatibility] tab or check the "Use printer metrics to lay out document" option on the same tab.
- 6. If you print more than one Excel sheet at the same time when different print settings are set for each sheet, the setting for the last sheet is effective.
- 7. When printing with Microsoft ACCESS, the text in the print result may be misaligned or align left may not be possible.
- 8. Operation in a Windows XP multi-user environment is not guaranteed.

Printing

- 1. Print data outside of the printable area will not be printed.
- 2. When printing on receipt paper, blank space appears at the top of the paper which is greater than the top margin setting value. This is caused by the fact that the paper cutting position (autocutter) and the printing position (printer head) are separated and the distance between them results in extra margin.
- 3. Device fonts cannot be used in rotated, condensed or enlarged printing. Use Windows fonts.
- 4. If a device font and graphics data (Windows font or ruled line, etc.) are defined on the same line, the print result may be misaligned.
- 5. Printing takes longer with serial models than with other interfaces. If you want to print faster, other than a serial model is recommended.
- 6. Euro currency symbol cannot be printed.
- 7. The paper size displayed in the printer driver Properties [General] tab may differ from what is stated in the "Printer Specification." In such cases, select the paper size stated in the user's manual.
- 8. With Windows XP/Vista, printing of codes 80H, 8EH, or 9EH from an application when device Font A or B, or blank page Font A or B (254 or 255) is specified may not operate correctly.
- 9. Align center or left using Control Font cannot be used with graphics printing.
- 10. [Separator Page] in the printer driver Properties [Advanced] tab is not available.
- 11. With some applications, several device font size options are displayed, however, device font is always printed in a fixed size regardless of your size selection.
- 12. With some applications, print settings such as "Collate" and "Orientation" configured on the application side may differ from the printer driver settings. In such cases, the settings on the application side take priority. However, it is not possible to print beyond the printer's capabilities. (For example, printing in landscape format using device font)
- 13. Even when you specify bold or italic font settings, it will not be reflected in the printings. The underline is printed but the position is offset.
- 14. The color format is fixed to 24 BPP. So check that dmColor setting for Devmode is set to "Color" on the application side.
- 15. You cannot print data with water mark setting and logo files with a shared printer.
- 16. When water mark and 2-D symbol are used in a single data, the printout could be misaligned (displaced).

- 17. When you print a narrow width barcode with a high-resolution printer, all of the HRI characters may not be printed. In such case, specify narrow width fonts; FontB/C for the HRI characters.
- 18. If you manually remove printed paper when the paper source selection is set to [No Eject] with the slip driver, the following printing will not be performed correctly. In that case, turn off the power of the printer, and then turn it on again.
- 19. If you print color logos with a printer that does not support color printing of slip/validation/endorsement and so on, only the black parts will be printed.

Printer Specification

This chapter explains the specifications of the Device Font, the Control Font, the Control A Font, the Resolution, the Paper Size, the Rotate, the Reduce and the Water Mark of the TM-T81 printer drive.

CAUTION

Administrator permission is required for property settings of the printer driver.

Item		Description							
Driver Name	EPSON TM-T81 ReceiptE4								
Device Font	Prohibited when rotation is selected. Prohibited when resizing a font in a smaller size or when Water Mark is selected.								
	Font Font Font	FontA11 FontA12 FontA21 FontA44 FontA48 FontB24 FontB21 FontB22 FontB24 FontB84 FontB88 Code Page WPC1252		FontA84	FontA22 FontA88 FontB42		FontA24 FontB11 FontB44	FontA42 FontB12 FontB48	
	Font Font	A44[255] B21[255]	FontA48[255] FontB22[255] FontB88[255]	FontA21[255] FontA84[255] FontB24[255]	FontA8	8[255]	FontB11[255]	FontB12[255]	
Barcode Font	Barcode Font Points determined. When specifying a value other than this, the Barcode is not printed.								
	Barcode1~Barcode8			Layout possible Barcode Codabar Code39 ITF JAN13(EAN) JAN8(EAN) UPC-A UPC-E Code93 Code128					
2D-Code Font	2D-0	2D-Code1~2D-Code8				Layout possible 2D-Code QR Code PDF417			
Control Font	Font Name : control , Point : 1 No operations for characters other than those mentioned above. Prohibited when rotation is selected. Prohibited when resizing a font in a smaller size or when Water Mark is selected.								
	Cha	r Function	on		Char	Func	ction		
	5	Transm	nits HT		k	ΝV (graphics 3 print	ing (48,51)	
	6	Transm	nits LF		l I	NV Q	graphics 4 print	ing (48,52)	
	7	Transm	nits CR		W	Position alignment left			
	а	Open	Drawer 5pin(50)ms)	х	Posit	ion alignment	center	
	b	Open	Open Drawer 5pin(100ms) y Position alignment rig			right			
	С		Open Drawer 5pin(150ms)		А	Open Drawer 2pin(50ms)			
	d	Open	Drawer 5pin(20	00ms)	В	Ope	n Drawer 2pin((100ms)	
	e Open Drawer 5pin(250ms)		50ms)	С	Open Drawer 2pin(150ms)				
	g	No pa	aper feeding + Partial cut D		D	Open Drawer 2pin(200ms)			
	h	NV gra	aphics 0 printing	g (48,48)	E	Open Drawer 2pin(250ms)		(250ms)	
	i	NV gra	aphics 1 printing	g (48,49)	Р	Pap	er feeding +Pa	rtial cut	
	i	NV ara	aphics 2 printing	a (48 50)					

Item	Description					
ControlA Font	 Font Name: controlA, Point: 1 Characters defined by ControlA Definition File can be selected. No operations for characters not defined. No printing for spaces. No paper feeding for any functions that do not include paper feeding. Prohibited when rotation is selected. Prohibited when resizing a font in a smaller size or when Water Mark is selected. 					
Resolution	180x180DPI					
Paper Size	80mm Roll Paper Paper Size 80mm x 297mm (566dot x 2104dot) Printing Width 72.2mm (512dot) Margin top 0mm bottom 0mm left 3.6mm(26dot) right 3.9mm(28dot) User Defined Paper Size Width 72.2~210.0mm, Height 25.4~3276.0mm Logic paper size (when resizing in a smaller size) A4 210mm x 297mm LT 8.5" x 11" Postcard 100 x 148 mm					
Rotate	Normal Rotate by 90 Degrees Rotate by 180 Degrees Rotate by 270 Degrees					
Reduce Printing	ON/OFF Fit to Printable Width/Custom(10 - 100%)					
Water Mark	Supported When Water Mark is specified to the printer, the printer cannot use Device Font, Control Font and ControlA Font.					