


---

# Acer AL1721h

## Service Guide

Service guide files and updates are available on the CSD web; for more information, please refer to <http://csd.acer.com.tw>

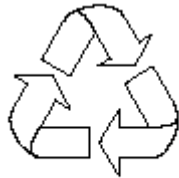

100% Recycled Paper

## **Copyright**

Copyright © 2003 by Acer Incorporated. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Acer Incorporated.

## **Disclaimer**

The information in this guide is subject to change without notice. Acer Incorporated makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties of merchantability or fitness for any particular purpose. Any Acer Incorporated software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not Acer Incorporated, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software.

Acer is a registered trademark of Acer Corporation.

Intel is a registered trademark of Intel Corporation.

Pentium and Pentium II/III are trademarks of Intel Corporation.

Other brand and product names are trademarks and/or registered trademarks of their respective holders.

---

## Conventions

The following conventions are used in this manual:

Screen messages	Denotes actual messages that appear on screen.
NOTE	Gives bits and pieces of additional information related to the current topic.
WARNING	Alerts you to any damage that might result from doing or not doing specific actions.
CAUTION	Gives precautionary measures to avoid possible hardware or software problems.
IMPORTANT	Reminds you to do specific actions relevant to the accomplishment of procedures.

## **Preface**

Before using this information and the product it supports, please read the following general information.

- 1.** This Service Guide provides you with all technical information relating to the BASIC CONFIGURATION decided for Acer's "global" product offering. To better fit local market requirements and enhance product competitiveness, your regional office MAY have decided to extend the functionality of a machine (e.g.add-on card, modem, or extra memory capability). These LOCALIZED FEATURES will NOT be covered in this generic service guide. In such cases, please contact your regional offices or the responsible personnel/channel to provide you with further technical details.
- 2.** Please note WHEN ORDERING FRU PARTS, that you should check the most up-to-date information available on your regional web or channel. If, for whatever reason, a part number change is made, it will not be noted in the printed Service Guide. For ACER-AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code to those given in the FRU list of this printed Service Guide. You MUST use the list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

---

## **Warning: (For FCC Certified Models)**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

## **Notice:**

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibility of the user to correct such interference.

As an ENERGY STAR® Partner our company has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

## **Warning:**

To prevent fire or shock hazard, do not expose the monitor to rain or moisture. Dangerously high voltages are present inside the monitor. Do not open the cabinet. Refer servicing to qualified personnel only.

## Precautions

- Do not use the monitor near water, e.g. near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Do not place the monitor on an unstable trolley, stand, or table. If the monitor falls, it can injure a person and cause serious damage to the appliance. Use only a trolley or stand recommended by the manufacturer or sold with the monitor. If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of the monitor and to protect it from overheating, be sure these openings are not blocked or covered. Do not place the monitor on a bed, sofa, rug, or similar surface. Do not place the monitor near or over a radiator or heat register. Do not place the monitor in a bookcase or cabinet unless proper ventilation is provided.
- The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.
- Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- Never push any object into the slot on the monitor cabinet. It could short circuit parts causing a fire or electric shock. Never spill liquids on the monitor.
- Do not attempt to service the monitor yourself; opening or removing covers can expose you to dangerous voltages and other hazards. Please refer all servicing to qualified service personnel
- To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100 - 240V AC, Min. 3.5A.
- The wall socket shall be installed near the equipment and shall be easily accessible.
- For use only with the attached power adapter (output 12V DC) which have **UL, CSA** listed license

---

## **Special Notes On LCD Monitors**

The following symptoms are normal with LCD monitor and do not indicate a problem.

### **Notes**

- Due to the nature of the fluorescent light, the screen may flicker during initial use. Turn off the Power Switch and then turn it on again to make sure the flicker disappears.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- The LCD screen has effective pixels of 99.99% or more. It may include blemishes of 0.01% or less such as a missing pixel or a pixel lit all of the time.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.

# Table Of Contents

<b>Chapter 1</b>	<b>Monitor Features</b> .....	<b>8</b>
	Monitor Features .....	8
	Electrical Requirements .....	10
	LCD Monitor General Specification .....	11
	LCD Panel Specification .....	12
	Support Timing .....	14
	Factory Preset Timing Table .....	14
	Block Diagram .....	15
	Main board Diagram .....	16
	Software Flowchart .....	17
	Main board Layout .....	18
	Front Bezel .....	23
	Rear Bezel .....	24
<b>Chapter 2</b>	<b>Operating Instructions</b> .....	<b>25</b>
	External Controls .....	25
	Front Panel Controls .....	25
	OSD Menu .....	27
	Hot-Key Menu .....	30
	OSD Message .....	30
	LOGO .....	31
<b>Chapter 3</b>	<b>Machine Disassembly</b> .....	<b>32</b>
<b>Chapter 4</b>	<b>Troubleshooting</b> .....	<b>34</b>
<b>Chapter 5</b>	<b>Connector Information</b> .....	<b>40</b>
<b>Chapter 6</b>	<b>FRU (Field Replacement Unit) List</b> .....	<b>41</b>
	Exploded Diagram .....	41
<b>Chapter 7</b>	<b>Schematic Diagram</b> .....	<b>44</b>
	Analog and Digital Input .....	44
	GM5120/GM2120 .....	45
	LVD-S .....	46
	Key Board Connector .....	47
	Audio .....	48
	DC Power .....	49
<b>Appendix</b>	<b>Online Support Information</b> .....	<b>50</b>



## Monitor Features

		AU	SAMSUNG(Optional)
LCD Panel	Driving system	TFT Color LCD	TFT Color LCD
	Size	43.2cm(17.0")	43.2cm(17.0")
	Pixel pitch	0.264mm( H )x 0.264mm( V )	0.264mm( H )x 0.264mm( V )
	Brightness	260cd/m <sup>2</sup> (Typical)	250cd/m <sup>2</sup> (Typical)
	Contrast	450:1(Typical)	350:1(Typical)
	Viewable angle	140° (H) 140° (V)	140° (H) 120° (V)
	Response time	16ms(Tr+Tf ),Tr=4ms,Tf=12ms	25 ms(Tr+Tf)Tr=5ms/Tf=20ms
Input	Video	R,G,B Analog Interface	
		Digital	Digital
	Separate Sync.	H/V TTL	H/V TTL
	H-Frequency	30KHz – 80KHz	30KHz – 80KHz
	V-Frequency	55-75Hz	55-75Hz
Display Colors		16.2M Colors	16.2M Colors
Dot Clock		165MHz	165MHz
Max. Resolution		1280 x 1024 @75Hz	1280 x 1024 @75Hz
Plug & Play		VESA DDC1/2B™	VESA DDC1/2B™
EPA ENERGY STAR®	ON Mode	≤45W	≤45W
	OFF Mode	≤3W	≤3W
Input Connector		D-Sub 15pin	
		DVI-D 24pin	
Input Video Signal		Analog:0.7Vp-p(standard), 75 OHM, Positive Digital:DVI-D	Analog:0.7Vp-p(standard), 75 OHM, Positive Digital:DVI-D
Maximum Screen Size		Horizontal : 337.92mm	Horizontal : 337.92mm
		Vertical : 270.34mm	Vertical : 270.34mm
Power Source		100~264VAC,47~63HZ	100~264VAC,47~63HZ
Environmental Considerations		Operating Temp: 5° to 50°C Storage Temp.: -20° to 65°C Operating Humidity: 10% to 85%	Operating Temp: 5° to 50°C Storage Temp.: -20° to 65°C Operating Humidity: 10% to 85%
Dimensions		430(W)×445(H)×152(D)mm	
Weight (N. W.)		5.0kg Unit (net)	

External Controls:	Switch	<ul style="list-style-type: none"> <li>• Auto Adjust Key</li> <li>• &lt;/Volume</li> <li>• &gt;/ Volume</li> <li>• Power Button</li> <li>• MENU/ Exit</li> </ul>	<ul style="list-style-type: none"> <li>• Auto Adjust Key</li> <li>• &lt;/Volume</li> <li>• &gt;/ Volume</li> <li>• Power Button</li> <li>• MENU/ Exit</li> </ul>
	Functions	<ul style="list-style-type: none"> <li>• Contrast</li> <li>• Brightness</li> <li>• Focus</li> <li>• Clock</li> <li>• H.Position</li> <li>• V.Position</li> <li>• Input Selected</li> <li>• Language</li> <li>• Dos-mode resolution selected</li> <li>• (Warm) Color</li> <li>• (Cool)Color</li> <li>• RGB Color temperature</li> <li>• Reset</li> <li>• OSD timeout</li> <li>• information</li> <li>• Exit</li> </ul>	<ul style="list-style-type: none"> <li>• Contrast</li> <li>• Brightness</li> <li>• Focus</li> <li>• Clock</li> <li>• H.Position</li> <li>• V.Position</li> <li>• Input Selected</li> <li>• Language</li> <li>• Dos-mode resolution selected</li> <li>• (Warm) Color</li> <li>• (Cool)Color</li> <li>• RGB Color temperature</li> <li>• Reset</li> <li>• OSD timeout</li> <li>• information</li> <li>• Exit</li> </ul>
Power Consumption ( Maximum )	45 Watts	45 Watts	
Audio Output	Rated Power 1W rms (Per channel)	Rated Power 1W rms (Per channel)	
Regulatory Compliance	CSA, TÜV/GS, CE, TCO'99, UL	CSA, TÜV/GS, CE, TCO'99, UL	

---

## Electrical Requirements

### Standard Test Conditions

All tests shall be performed under the following conditions, unless otherwise specified.

**Ambient light :** 225 lux

**Viewing distance :** 40 cm in front of LCD panel

### Warm up time

All specifications : 30 minutes

Fully functional : 5 seconds

**Measuring equipment :** Chroma 7120 signal generator or equivalent, directly  
Connected to the monitor under test.

### Control settings

User brightness control : Maximum (unless otherwise specified )

User contrast control: Typical (unless otherwise specified )

**User red/white balance,**

**Green/white balance and**

**Blue/white balance control :** In the center (unless otherwise specified )

**Power input:** 90Vac or 240Vac

**Ambient temperature:**  $20 \pm 5$  °C

**Analog input mode:** 1280 x1024 /75 Hz

### Measurement systems

The units of measure stated in this document are listed below:

1 gamma = 1 nano tesla

1 tesla = 10,000 gauss

cm = in x 2.54

lb = kg x 2.2

degrees F = [ $^{\circ}$ C x 1.8] + 32

degrees C = [ $^{\circ}$ F - 32]/1.8

$u' = 4x/(-2x + 12y + 3)$

$v' = 9y/(-2x + 12y + 3)$

$x = (27u'/4)/[(9u'/2) - 12v' + 9]$

$y = (3v')/[(9u'/2) - 12v' + 9]$

nits = cd/(m<sup>2</sup>) = Ft-L x 3.426

lux = foot-candle x 10.76

## LCD Monitor General Specification

**Panel type:** 17 “ active matrix color TFT LCD

1). AU EN05

**Display size:** 337.92mm (H) × 270.34mm(V)

**Display mode:**

VGA 640 × 480 (60//72/75 Hz)

SVGA 800 × 600 (56/60/72/75 Hz)

XGA 1024 × 768 (60/70/75 Hz)

SXGA 1280 × 1024 (60//75 Hz) standard resolution

**Pixel pitch:** 0.264mm(H) × 0.264mm(V)

**Display dot:** 1280 x (RGB) × 1024

**Pixel clock:** 25.2 – 135.0MHz

**Contrast ratio:**  $\theta = 0^\circ$  AU EN05 450:1

**Brightness:** AU EN05 260 cd/m<sup>2</sup>

**Response time (Tr/Tf):** AU EN05(16ms)

**Display color:** 16.2M(6 bit color+FRC)

**Viewing angle:** AU EN05 L / R  $\geq 80^\circ / \geq 80^\circ$  ( $\geq 160$  degrees horizontal typical)

U / D  $\geq 70^\circ / \geq 70^\circ$  ( $\geq 140$  degrees vertical typical)

**Luminance uniformity:** > 80 % (typical)

**Pc interface:** 1).Video: RGB analog 0.7V peak to peak

Sync: TTL positive or negative

**Signal connector:** 15 pin Mini D type, (standard VGA video)

3.5 mm stereo audio jack (Audio) (For AR577 only)

**Audio power:** 1.5Wrms + 0.5Wrms (300Hz – 1.3kHz)

**Front control:** power on/off with LED select adjustment

**Interface frequency**

**Horizontal Frequency** 30KHz --80KHz

**Vertical Frequency** 55Hz -----75Hz

**Plug & play:** Support VESA DDC2B functions

**Power Input voltage:** Single phase, 50/60HZ, 100 VAC to 240VAC  $\pm 10\%$

**Total output power:** 50 Watt max.

## LCD Panel Specification

### LCD Panel Model (Hydis LT17E12-200)

Display Type	active matrix color TFT LCD
Resolution	1280x1024 pixels
Display Dot	1280x (RGB) x 1024
Display Area	337.92mm(H) x 270.34mm(V)
Pixel Pitch	0.264mm(H) x 0.264mm(V)
Display Color	16M (6 bite color+FRC)


Lamp Voltage                    700 Vrms (typ)  
Lamp Current                    6.5 mArms (typ)  
Weight                            2000g (typ)

Optical Specifications

$I_L = 7.0\text{mA}$      $T_a = 25 \pm 2^\circ \text{C}$      $V_{DD} = 5\text{V}$      $F_V = 60\text{Hz}$      $F_{DCLK} = 54\text{MHz}$

ITEM		Symbol	Condition	MIN.	TYP.	MAX.	UNIT
Contrast Ratio (Center of screen)		CR		250	450	-	
Response Time at Ta	Rising	$T_R=4$	$\theta=0,$ $\varphi=0$ Normal Viewing Angle	-	16	-	(total) msec
	Falling	$T_F=12$					
Luminance of white (Center of screen)		$Y_L$		200	260	-	cd/mm
Color Chromaticity (CIE)	Red	$R_X$		0.61	0.64	0.67	
		$R_Y$		0.31	0.34	0.37	
	Green	$G_X$		0.26	0.29	0.32	
		$G_Y$		0.58	0.61	0.64	
	Blue	$B_X$		0.11	0.14	0.17	
		$B_Y$		0.04	0.07	0.10	
	White	$W_X$		0.28	0.31	0.34	
		$W_Y$	0.30	0.33	0.36		
Viewing Angle	Hori.	$\theta_L$	$CR \geq 10$	-	80	-	Degrees
		$\theta_R$		-	80	-	
	Vert.	$\varphi_H$		-	70	-	
		$\varphi_L$		-	70	-	
Brightness Uniformity		$B_{UNI}$		-	75	80	%
Flicker		F		-	-	5	%
Cross talk		$C_T$		-	-	2	%

## Panel Relative Humidity

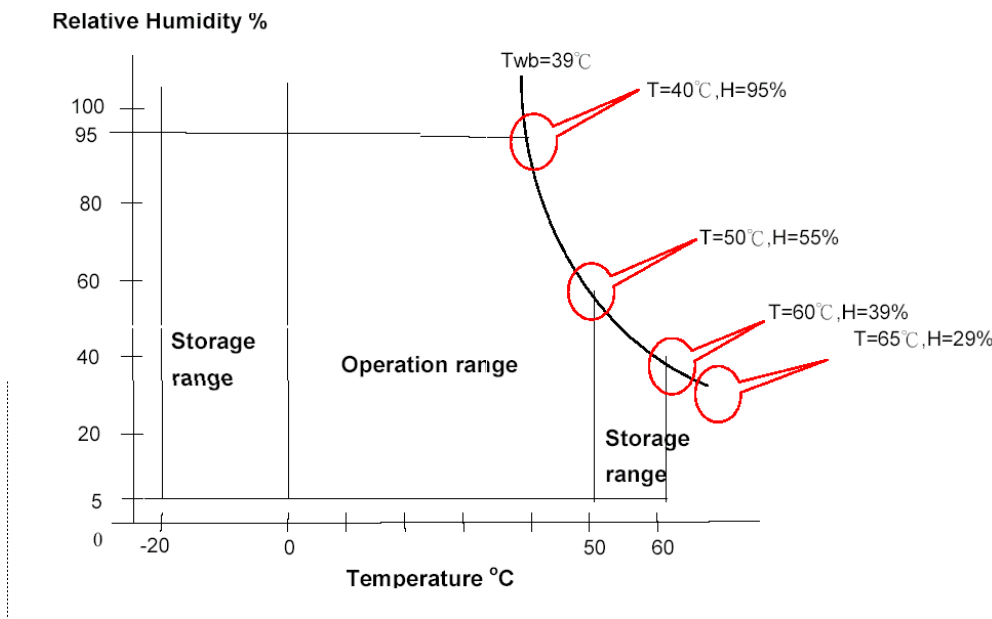

### Input Signals

#### Video input

Type	Analog R, G, B.
Input Impedance	75 ohm +/- 2%
Polarity	Positive
Amplitude	0 - 0.7 +/- 0.05 Vp
Display Color	same as LCD panel

#### Sync input

Signal	separate horizontal and vertical sync, or composite sync which are TTL compatible
Polarity	positive and negative.

#### Interface frequency

The following frequency range is generalized by supported timing. If the entered mode does not match the supported timing the display optimization will not be assured.

Horizontal Frequency	30KHz --80KHz
Vertical Frequency	55Hz -----75Hz

### Panel bright dot defect and dark dot defect

#### Test conditions:

1280\*1024,64KHz/60Hz  
 R.G.B.Full White and Full Black Pattern  
 RECALL

- Bright Dots: R.G or B dots  $\leq 3$ dots (G dots  $\leq 3$ dots)
- Adjacent dot  $\leq 1$  group Total bright dots  $\leq 3$ dots
- Dark Dots: -R.G or B dots  $\leq 5$ dots - 2 adjacent dot  $\leq 2$  group Total dark dots  $\leq 5$ dots
- Total(Dark & Bright)  $\leq 7$ dots

## Supported Timing

TIMING	FH(KHZ)/ FV(HZ)	SYNC POLARITY	TOTAL (DOT/LINE)	ACTIVE (DOT/LINE)	SYNC WIDTH (DOT/LINE)	FRONT PORCH (DOT/LINE)	BACK PORCH (DOT/LINE)	PIXEL FOREQ. (MHZ)
640x350 /DOS	37. 9/70	+	800	449	64	32	96	25. 175
640x480 VGA	31. 5/59. 9	-	800	525	96	8	40	25. 175
	37. 9/72. 8	-	800	520	40	16	120	31. 5
	37. 5/75	-	840	500	64	16	120	31. 5
800x600 SVGA	35. 2/56. 3	+	1024	625	72	24	128	36. 0
	37. 9/60. 3	+	1056	628	128	40	88	40. 0
	48. 1/72. 2	+	1040	666	120	56	64	50. 0
	46. 9/75	+	1056	625	80	16	160	49. 0
1024x768 XGA	48. 4/60. 0	-	1344	806	136	24	160	60. 0
	56. 5/70. 1	-	1328	806	136	24	144	70. 0
	60/75	+	1312	800	96	16	176	75. 0
1280x1024 SXGA	63. 98/60. 02	+	1688	1066	112	48	248	108
	79. 98/75. 03	+	1688	1066	144	16	248	135

## Factory Preset Timing Table

STANDARD	RESOLUTION	HORIZONTAL FREQUENCY (kHz)	VERTICAL FREQUENCY (Hz)
VGA	720 x 400	31.47	70.0
	640 × 480	31.47	60.0
	640 × 480	35.00	66.6
	640 × 480	37.50	75.0
	640 × 480	37.861	72.8
SVGA	800 × 600	35.156	56.3
	800 × 600	37.879	60.0
	800 × 600	48.077	72.2
	800 × 600	46.875	75.0
	832 x 624	49.725	75.0
XGA	1024 × 768	48.363	60.0
	1024 × 768	56.476	70.0
	1024 x 768	60.24	74.9
	1024 × 768	60.02	75.0


Note: the IBM modes and Mac modes not in table, please refer to the spec!

## Monitor Block Diagram

The LCD MONITOR will contain an main board, an inverter/power board, keypad board and internal adapter which house the flat panel control logic, brightness control logic and DDC.


The Inverter board will drive the backlight of panel and the DC-DC conversion.

The Adapter will provides the 12V DC-power to inverter/power board.

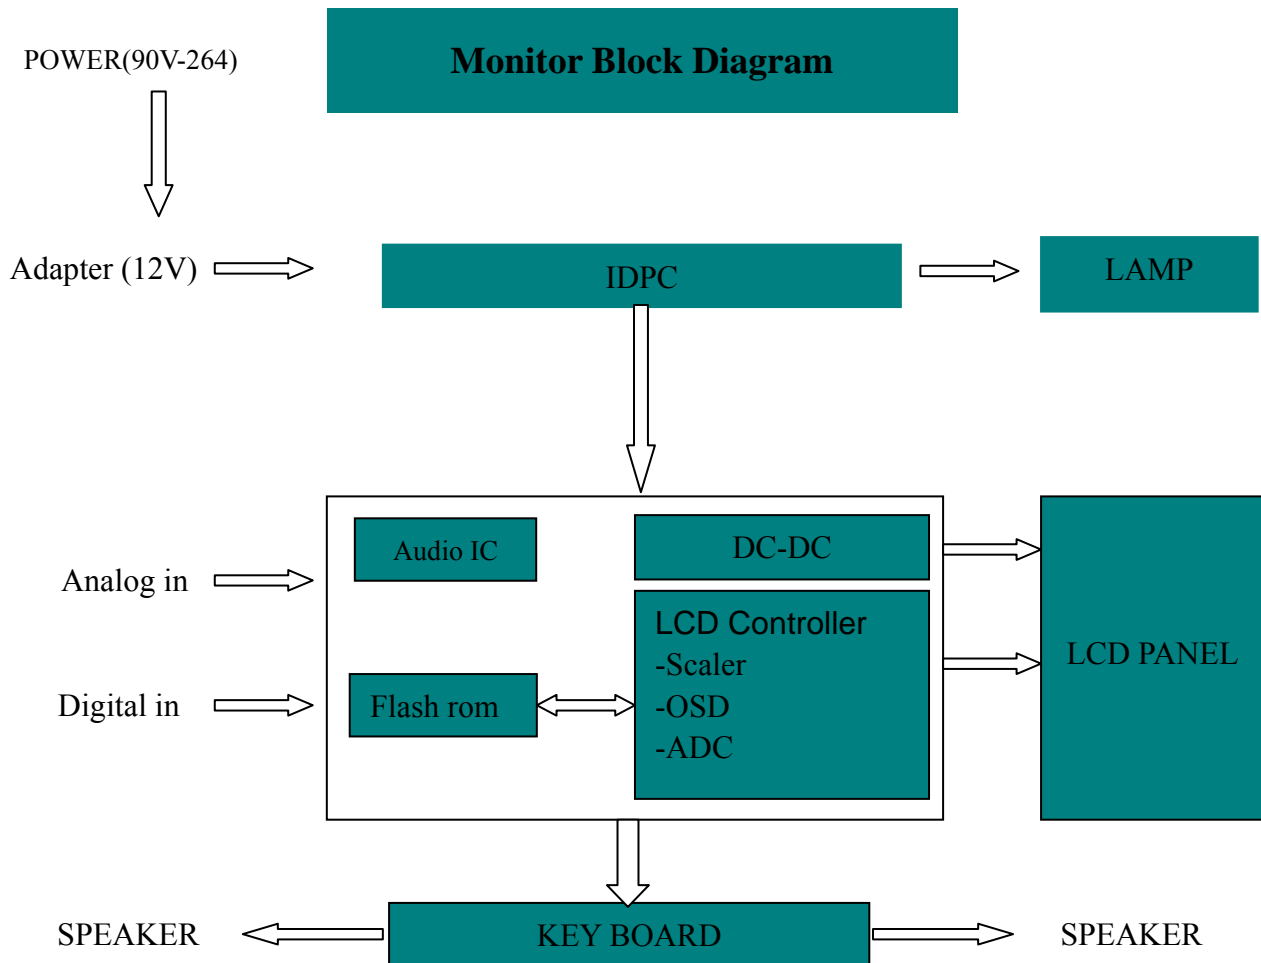





# MAIN BOARD DIAGRAM

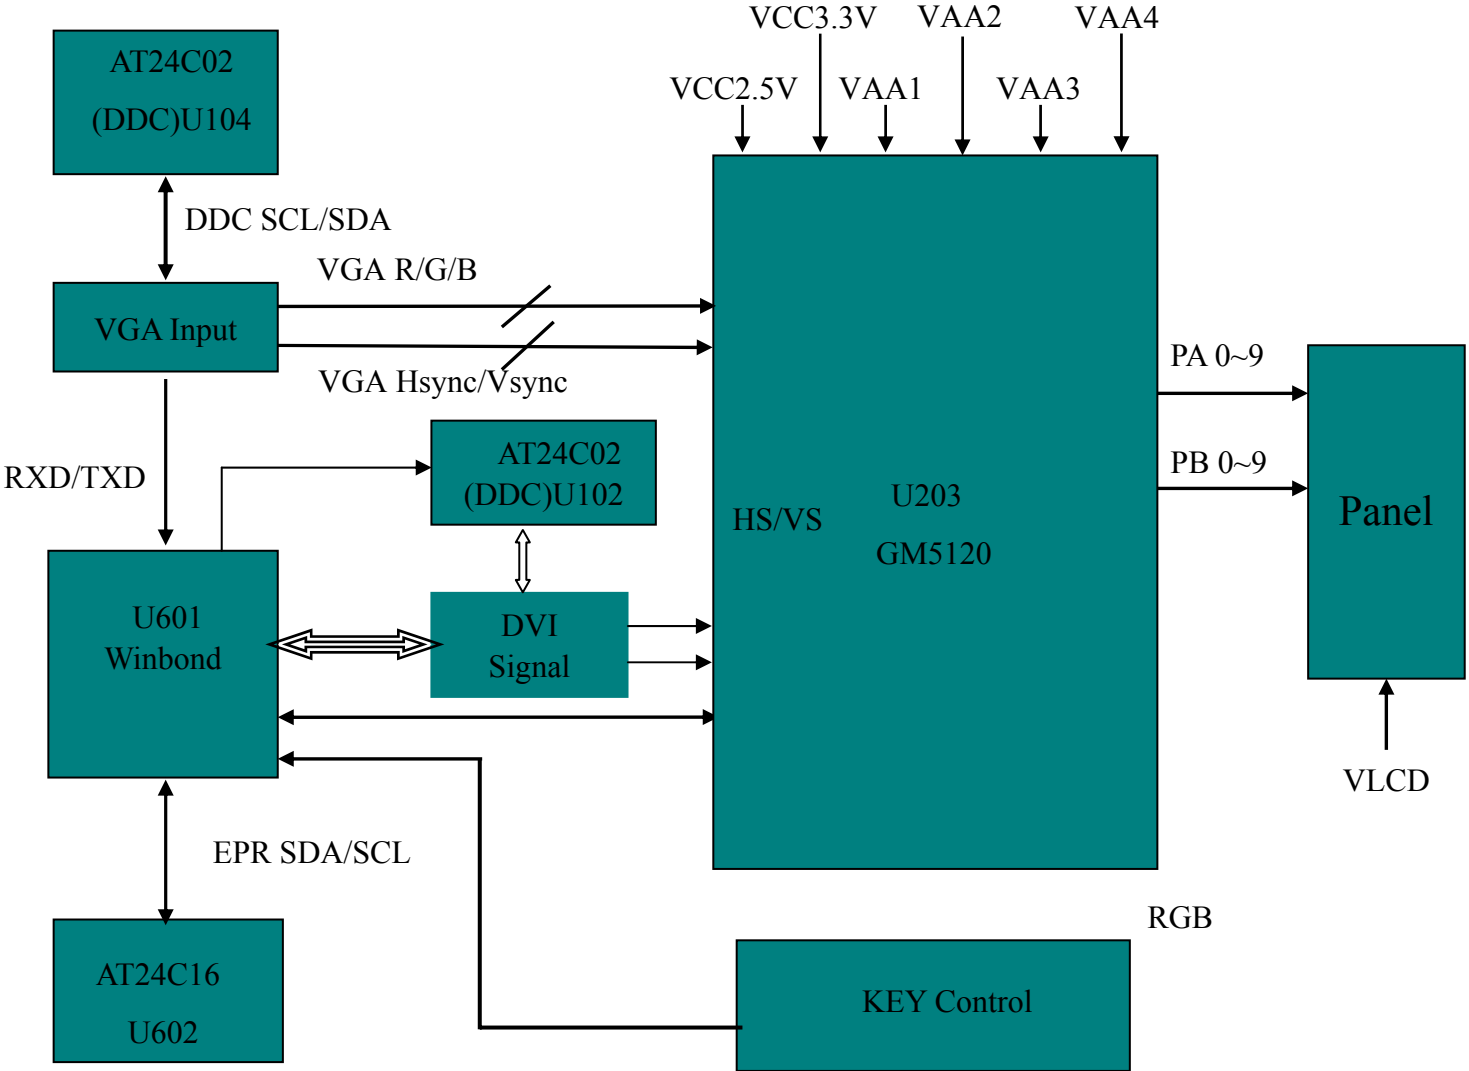

# Software Flow Chart

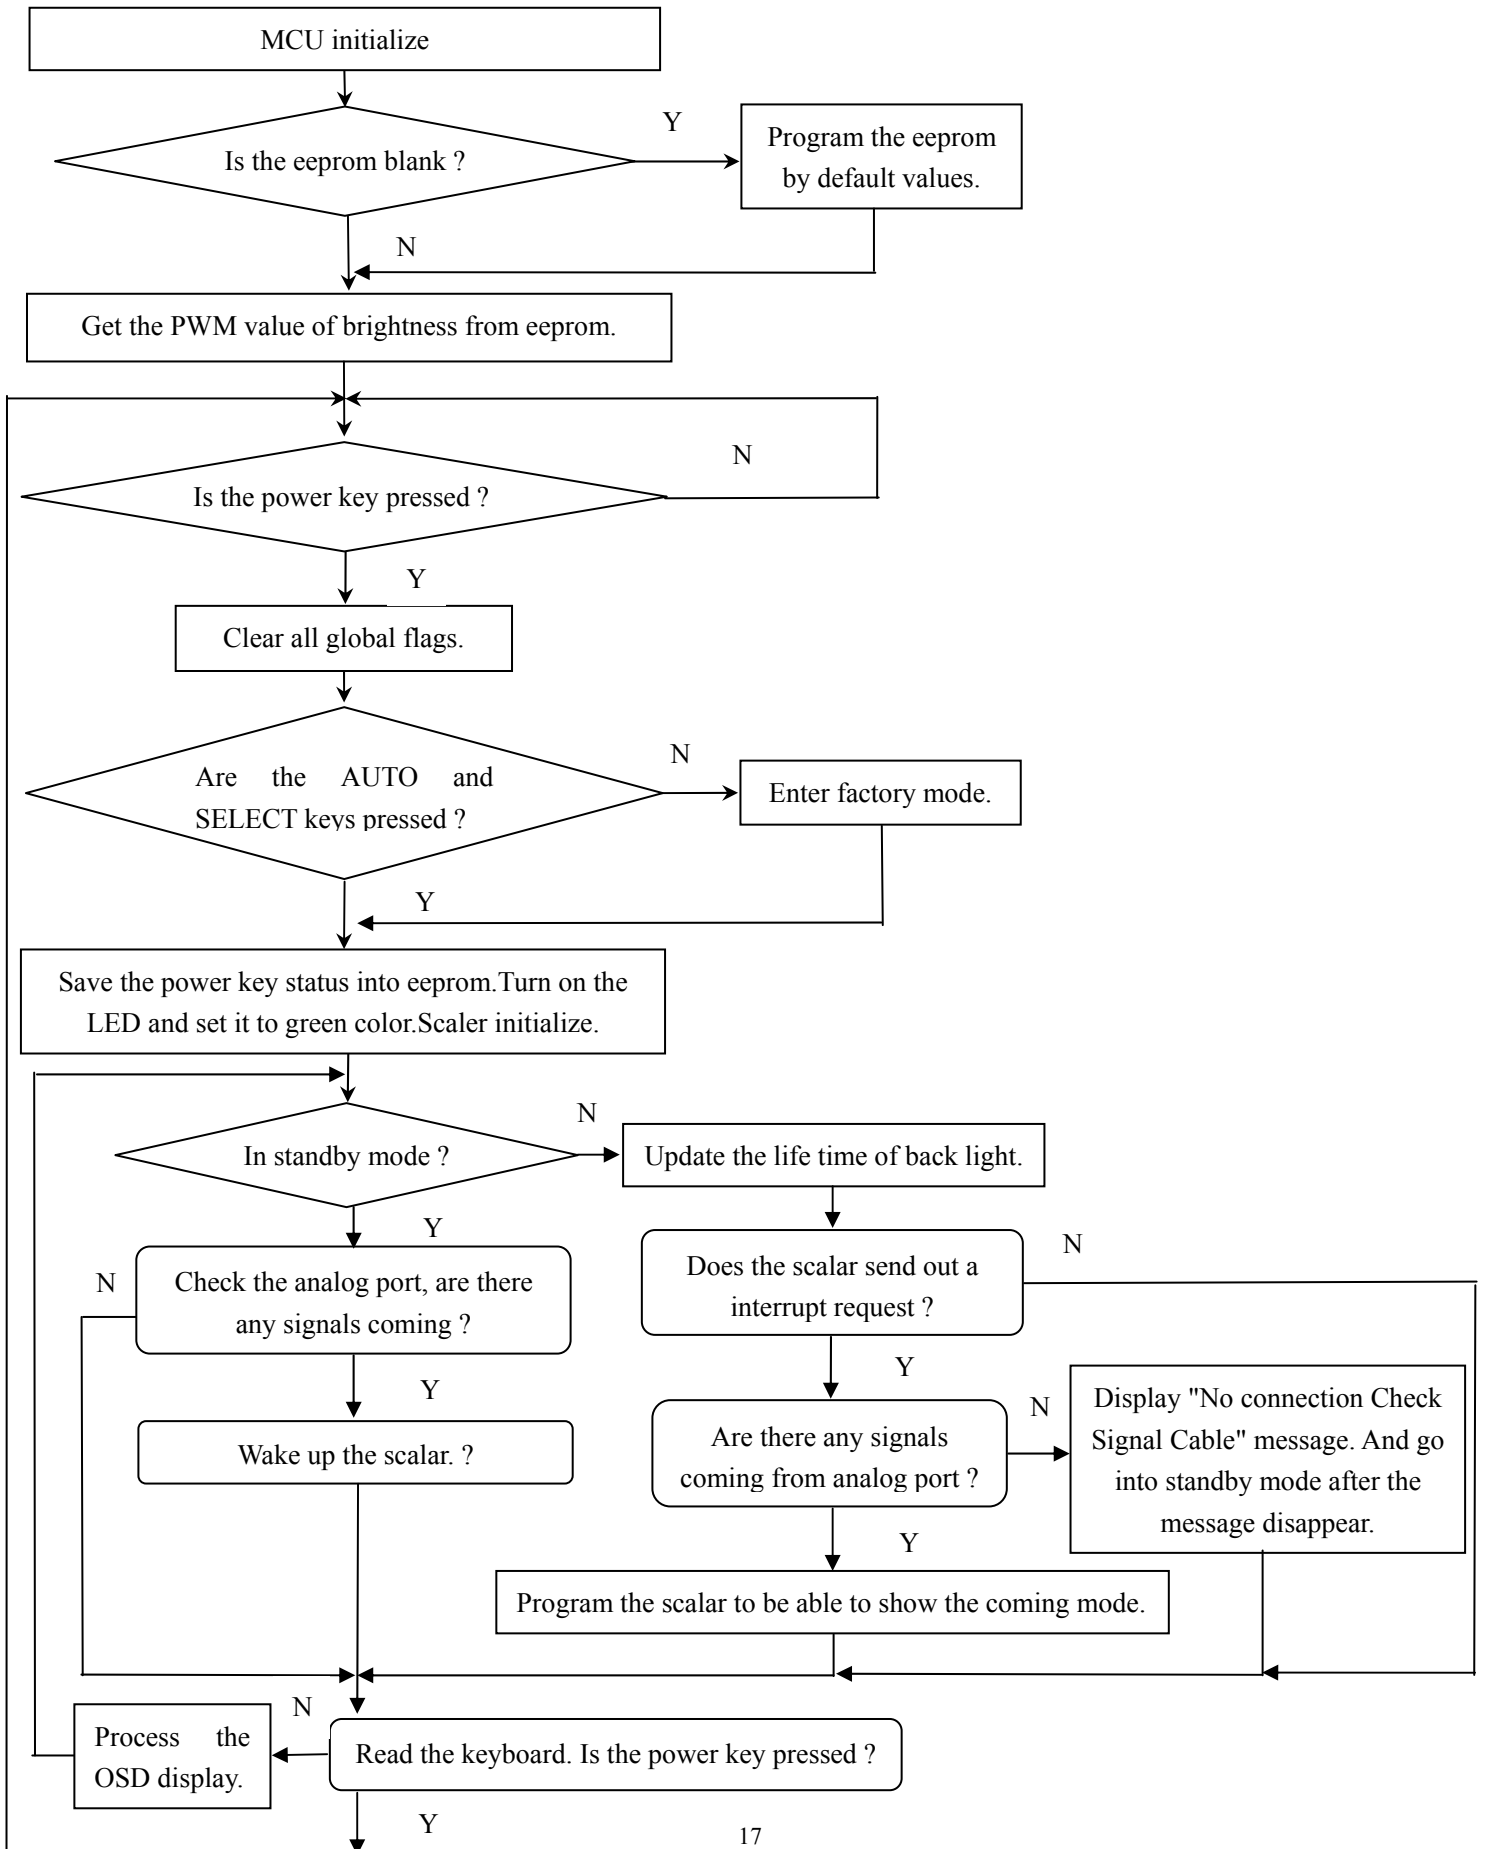

# Monitor Board Layout

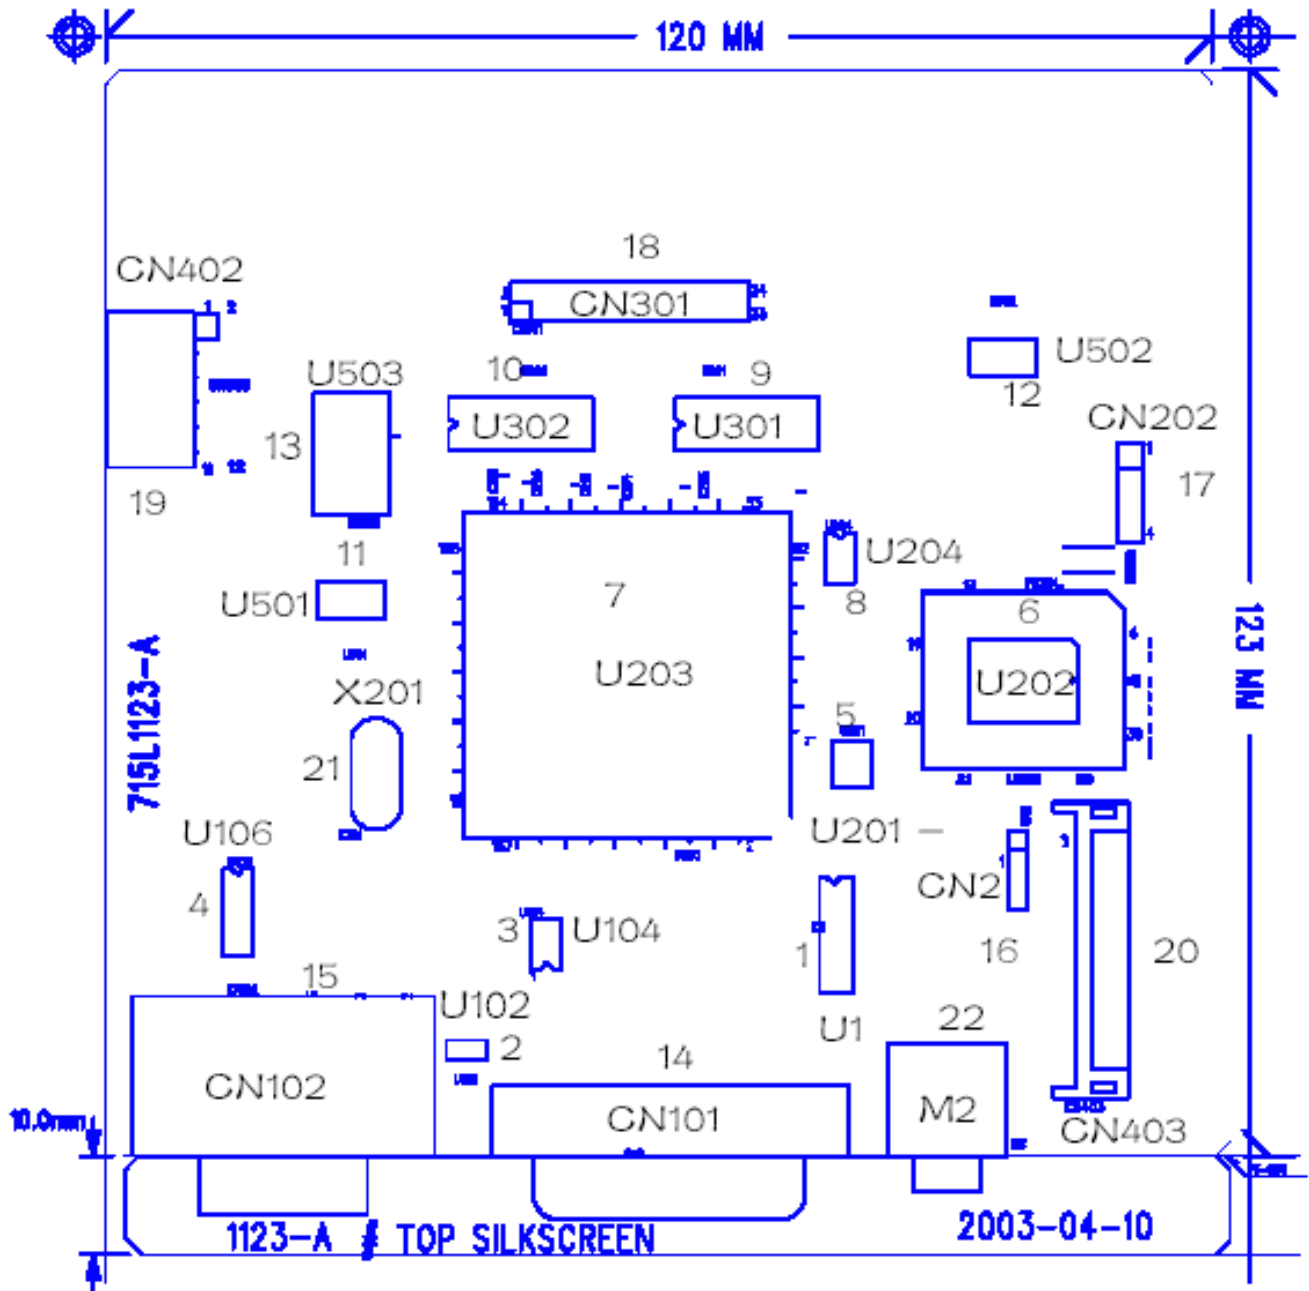

<b>Label</b>	<b>Component</b>
U1	TDA7496L BY ST
U102	M24C02-WMN6T SMT
U104	M24C02-WMN6T SMT
U106	74LCX14MX S014 FAIRCHIL
U201	TL1451ACD
U202	A290011TL-70
U203	SCALER IC gm5120(V:BD)
U204	M24C16-MN6T
U301	THC63LVDM83R
U302	THC63LVDM83R
U501	AIC1117-33CY
U502	AIC1117-33CY
U503	RT9164-25CL
CN101	DVID CONN. 24P FEMALE
CN102	D-USB 15PIN
CN301	PIN HEADER 24P 2.0mm
CN402	PIN HEADER FEMALE 2*6
CN403	WAFER 14P RIGHT ANGLE
X201	CRYSTAL 14.318MHzHC-49U
M2	PHONE JACK


---

**The step between front bezel and back cover shall be within specification.**

Top and Bottom

Back cover & Bezel concavity


$0.8\text{mm} \leq A \leq 1.3 \text{ mm}$

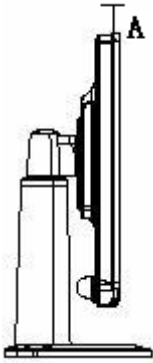

Left and Right


Back cover & Bezel concavity

$0.8\text{mm} \leq A \leq 1.3 \text{ mm}$

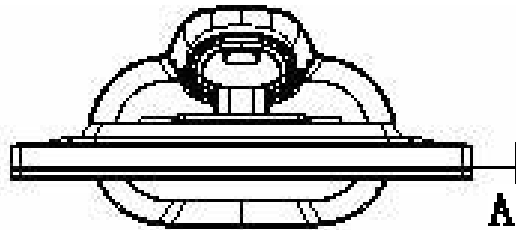


Back Cover & Hinge Cover concavity

$0\text{mm} \leq B \leq 0.5\text{mm}$

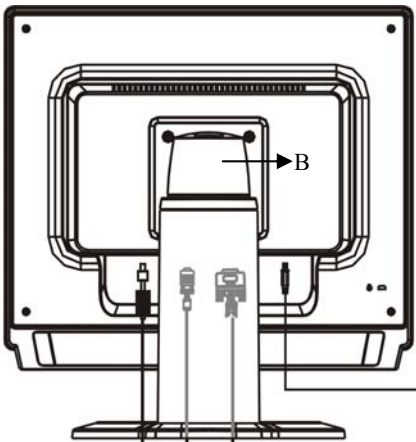

Base & Neck concavity

$0\text{mm} \leq C \leq 0.6\text{mm}$

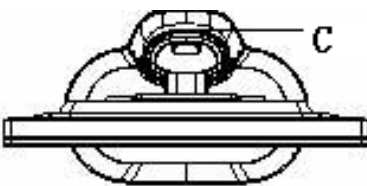


Top and Bottom

Back cover & Bezel step


Left and Right

Back cover & Bezel step

$0\text{mm} \leq D \leq 0.8 \text{ mm}$

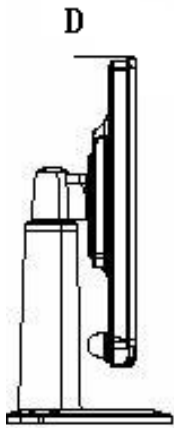


$0\text{mm} \leq D \leq 0.8 \text{ mm}$

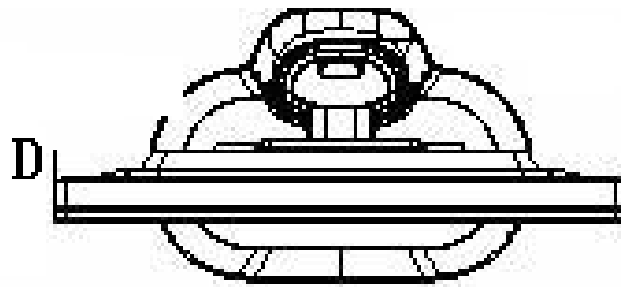


### LCD Horizontally

The angle between front bezel and LCD unit in bottom side should not large than 1.0mm.

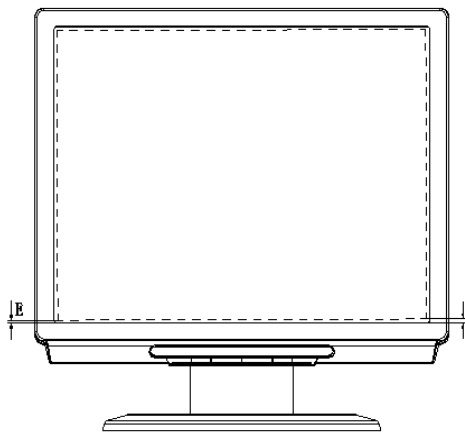

The distance of the LCD display unit from left side to right should not large than 4.0mm.

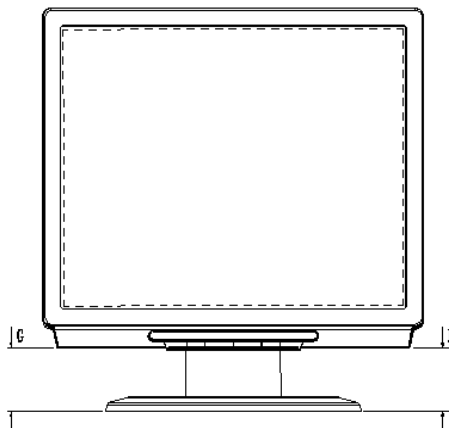

### Tilt Base Rotation

Tilt up  $15 \pm 2^\circ$  / down  $5 \pm 2^\circ$

---

**Plastic Material**

**For TCO99**

Front Bezel ABS 94HB

Back Cover ABS 94HB

The Others ABS 94HB

**For MPRII**


Front Bezel ABS 94HB

Back Cover ABS 94HB


The Others ABS 94HB

**GAP Spec.**

Gap between panel with bezel is  $0 \text{ mm} < \text{gap} < 1.2 \text{ mm}$

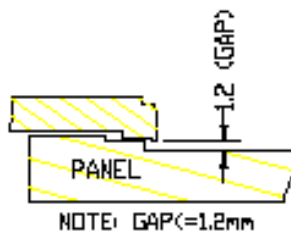


## Front Bezel

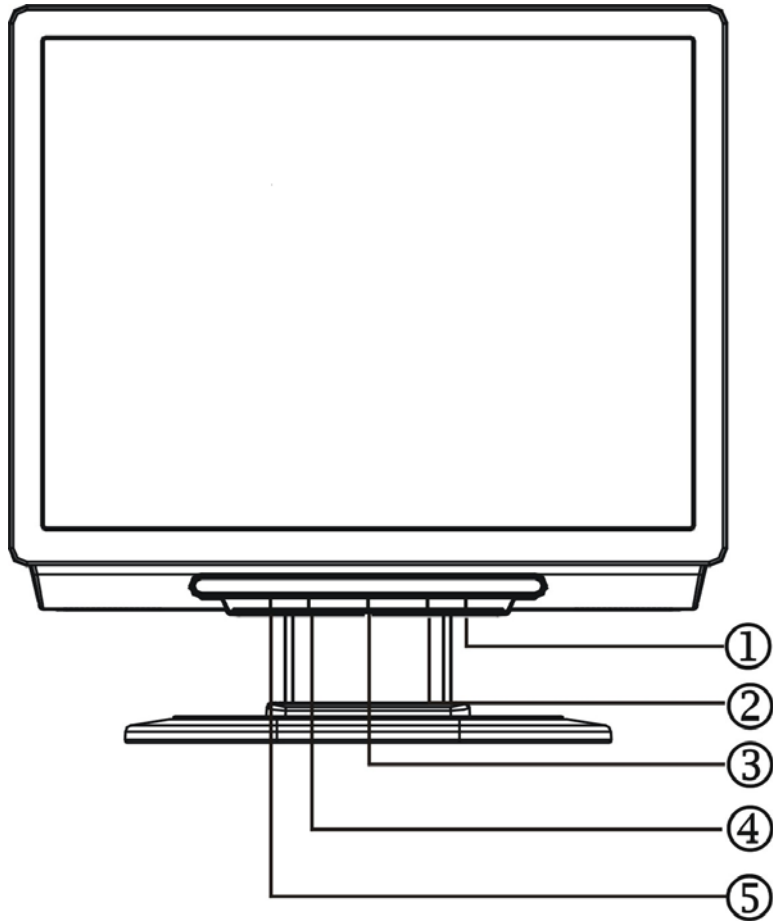

Item	Description
1	VEDIO (UP)
2	VEDIO (DOWM)
3	POWER
4	MENU/ENTER
5	AUTO/EXIT



## Rear Bezel

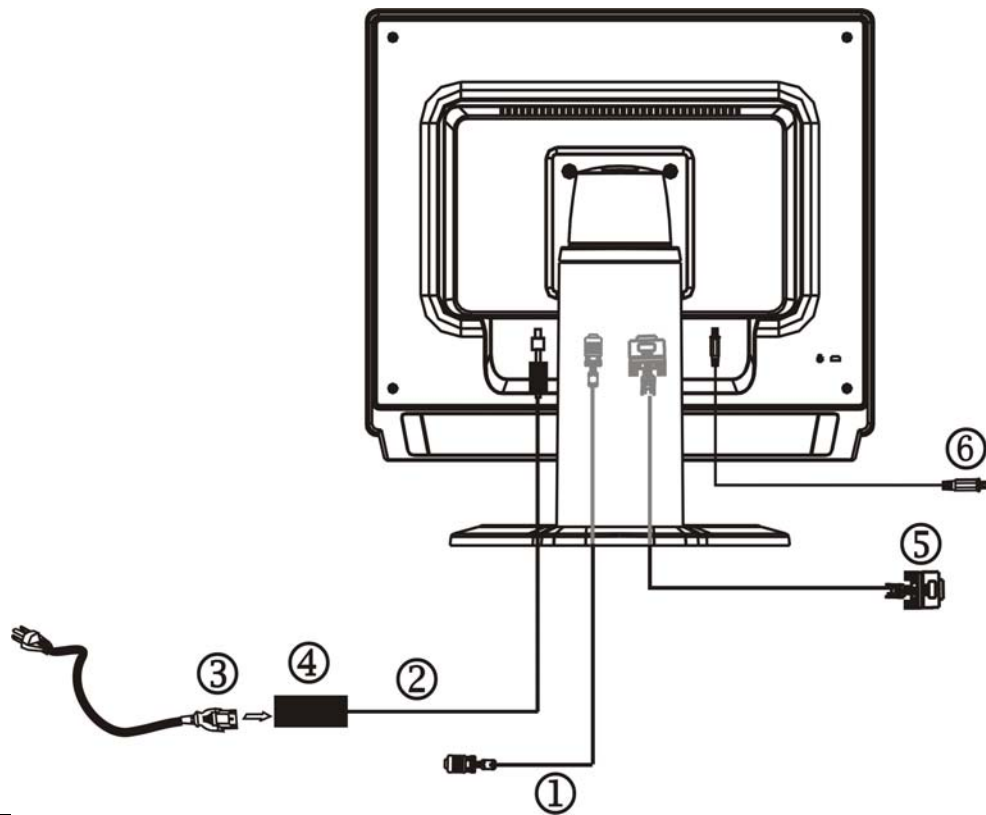


Item	Description
1	D-SUB Cable
2	DC-Jack Power Cable
3	AC POWER CORD
4	EXTERNAL ADAPTER
5	DVI CABLE
6	AUDIO CABLE

## Operating Instructions

Press the power button to turn the monitor on or off. The other control buttons are located at front panel of the monitor. By changing these settings, the picture can be adjusted to your personal preferences.

- The power cord should be connected.
- Connect the video cable from the monitor to the video card.
- Press the power button to turn on the monitor position. The power indicator will light up.

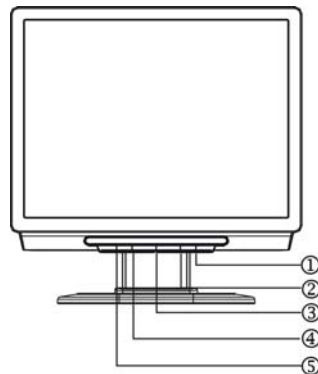

External Control Button

### External Controls

1. >/ Volume	4. MENU/ENTER
2. </ Volume	5. Auto Adjust Key/Exit
3. Power Key /LED	

### Front Panel Control

- **Power Button:**  
Press this button to turn the monitor ON or OFF.
- **Menu / Enter :**  
Activate OSD menu when OSD is OFF or activate/de-activate adjustment function when OSD is ON or Exit OSD menu when in Volume Adjust OSD status.
- **<Volume:**  
Activates the volume control when the OSD is OFF or navigate through adjustment icons when OSD is ON or adjust a function when function is activated.
- **>/Volume:**  
Activates the volume control when the OSD is OFF or navigate through adjustment icons when OSD is ON or adjust a function when function is activated.
- **Auto Adjust button / Exit:**  
1. When OSD menu is in active status, this button will act as EXIT-KEY(EXIT OSD menu).

- 
2. When OSD menu is in off status, press this button for 2 seconds to activate the Auto Adjustment function.

The Auto Adjustment function is used to set the HPos, VPos, Clock and Focus.

- **Power Indicator:**

Green — Power On mode.

Orange — Off mode.

## Notes

- Do not install the monitor in a location near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, or excessive dust or mechanical vibration or shock.
- Save the original shipping carton and packing materials, as they will come in handy if you ever have to ship your monitor.
- For maximum protection, repackage your monitor as it was originally packed at the factory.
- To keep the monitor looking new, periodically clean it with a soft cloth. Stubborn stains may be removed with a cloth lightly dampened with a mild detergent solution. Never use strong solvents such as thinner, benzene, or abrasive cleaners, since these will damage the cabinet. As a safety precaution, always unplug the monitor before cleaning it.

1. Press the MENU-button to activate the OSD window. See figure 4.
2. Press < or > to select the desired function. See figure 4.
3. Press the MENU-button to select the function that you want to adjust.
4. Press < or > to change the settings of the current function.
5. To exit and save, select the exit function. If you want to adjust any other function, repeat steps 2-4.

# Adjusting The Picture

- 1.) Main OSD Menu :
- a. Outline:

## I. Analog-Only Model






















## II. Dual-Input Model, Analog Signal Input







## III. Dual-Input Model, Digital Signal Input




## b. The Description For Control Function :

Main Menu Icon	Sub Menu Item	Sub Menu Icon	Description	Adjustment Range	Reset Value
	Contrast		Contrast from Digital-register.	0-100	Recall Cool Contrast Value
	Brightness		Backlight Adjustment	0-100	Recall Cool Brightness Value
	Focus		Adjust Picture Phase to reduce Horizontal-Line noise	0-100	Do Auto Config
	Clock		Adjust picture Clock to reduce Vertical-Line noise.	0-100	Do Auto Config
	H. Position		Adjust the horizontal position of the picture.	0-100	Do Auto Config
	V. Position		Adjust the vertical position of the picture.	0-100	Do Auto Config
	Warm	N/A	Recall Warm Color Temperature from EEPROM.	N/A	The Color Temperature will be set to Cool.
	Cool	N/A	Recall Cool Color Temperature from EEPROM.	N/A	
	User / Red		Red Gain from Digital-register.	0-100	The User R/G/B value(default is 100) will not be Modified by Reset function.
	User / Green		Green Gain Digital-register.	0-100	
	User / Blue		Blue Gain from Digital-register.	0-100	
	English	N/A	Set OSD display language to English.	N/A	The Language will be set to English.
	繁體中文	N/A	Set OSD display language to Traditional Chinese.	N/A	
	Deutsch	N/A	Set OSD display language to German.	N/A	
	Français	N/A	Set OSD display language to French.	N/A	
	Español	N/A	Set OSD display language to Spain.	N/A	
	Italiano	N/A	Set OSD display language to Italian.	N/A	
	简体中文	N/A	Set OSD display language to Simplified Chinese.	N/A	
日本語	N/A	Set OSD display language to Japanese.	N/A		
	H. Position		Adjust the horizontal position of the OSD.	0-100	50
	V. Position		Adjust the vertical position of the OSD.	0-100	50
	OSD Timeout		Adjust the OSD timeout.	10-120	10
 (Analog-Only Model)	Auto Config	N/A	Auto Adjust the H/V Position, Focus and Clock of picture.	N/A	N/A


 (Dual-Input Model)	Analog	N/A	Select input signal from analog (D-Sub)	N/A	N/A
	Digital	N/A	Select input signal from digital (DVI)	N/A	N/A
	Information	N/A	Show the resolution, H/V frequency and input port of current input timing.	N/A	N/A
	Reset	N/A	Clear each old status of Auto-configuration and set the color temperature to Cool.	N/A	N/A
	Exit	N/A	Exit OSD	N/A	N/A

**2.) Hot-Key Menu:**

**a. Outline:**

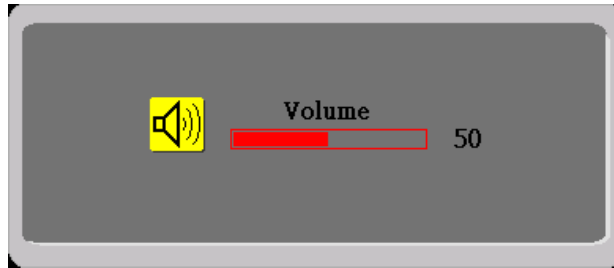

**b. The Description For Hot-Key Function :**

Item	Operation	Icon	Description	Adjustment Range	Reset Value
Volume	When the OSD is closed, press Left or Right button will be Volume Hot-Key Function		Volume of Audio adjustment. The Audio will be Mute when volume=0.	0-100	50

**3.) OSD Message:**

**a. Outline:**



**b. The Description For OSD Message :**

Item	Description
Auto Config Please Wait	1.) When Analog signal input, if User Press Hot-Key “Auto”, will show this message, and the monitor do the auto config function. 2.) When Digital signal input, without this OSD Message.
Input Not Supported	When the Hsync Frequency, Vsync Frequency or Resolution is out of the monitor support range, will show this message. This message will be flying.
Cable Not Connected	1.) Analog-Only Model : When the video cable is not connected, will show this message. This message will be flying. 2.) Dual-Input Model : Dual-Input Model without this OSD Message.
No Signal	1.) Analog-Only Model : When the video cable is connected, but there is no active signal input, will show this message, then enter power saving. 2.) Dual-Input Model : When the video cable is not connected, or the video cable is connected but there is no active signal input, will show this message, then enter power saving.

#### 4.) Logo:

When the monitor is power on, the LOGO will be showed in the center, and disappear slowly.



#### **How To Optimize The DOS-Mode Plug And Play**

##### **Plug & Play DDC1/2B Feature**

This monitor is equipped with VESA DDC1/2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities. The communication channel is defined in two levels, DDC1 and DDC2B.

The DDC1 is a unidirectional data channel from the display to the host that continuously transmits EDID information. The DDC2B is a bidirectional data channel based on the I<sup>2</sup>C protocol. The host can request EDID information over the DDC2B channel.

**This monitor will appear to be non-functional if there is no video input signal. In order for this monitor to operate properly, there must be a video input signal.**

This monitor meets the Green monitor standards as set by the Video Electronics Standards Association (VESA) and/or the United States Environmental Protection Agency (EPA) and The Swedish Confederation Employees (NUTEK). This feature is designed to conserve electrical energy by reducing power consumption when there is no video-input signal present. When there is no video input signal this monitor, following a time-out period, will automatically switch to an OFF mode. This reduces the monitor's internal power supply consumption. After the video input signal is restored, full power is restored and the display is automatically redrawn. The appearance is similar to a "Screen Saver" feature except the display is completely off. The display is restored by pressing a key on the keyboard, or clicking the mouse.

##### **Using The Right Power Cord**

The accessory power cord for the Northern American region is the wallet plug with NEMA 5-15 style and is UL listed and CSA labeled. The voltage rating for the power cord shall be 125 volts AC.

Supplied with units intended for connection to power outlet of personal computer: Please use a cord set consisting of a minimum No. 18 AWG, type SJT or SVT three conductors flexible cord. One end terminates with a grounding type attachment plug, rated 10A, 250V, CEE-22 male configuration. The other end terminates with a molded-on type connector body, rated 10A, 250V, having standard CEE-22 female configuration.

Please note that power supply cord needs to use VDE 0602, 0625, 0821 approval power cord in European countries.



## Machine Disassembly

This chapter contains step-by-step procedures on how to assemble the monitor for maintenance.

### Disassembly Procedure

#### Disassemble the base

1. Remove the neck cover.
2. Remove the four screws to release the hinge.
3. Remove the base



#### Disassemble the chassis

1. To stick the insulated film on the mainframe and the shield.
2. Insert the wiring harness
3. Stick the soft cushion EMI
4. To fix the wiring harness with the adhesive plaster
5. To put the bezel on panel
6. To fix the main frame and panel with the screws
7. To connect the main board with inverter board
8. To connect all the interfaces of above board
9. After having fix the board, cover the shield on them
10. To fix the shield on the main frame with screws
11. To put and fix the rear cover
12. To connect the interfaces
13. To cover the panel with front bezel
14. To paste protecting film on the panel



1



2



3



4



5



6



7



8



9



10



11



12



13



14

- NOTE:**
1. The screws for the different components vary in size. During the disassembly process, group the screws with the corresponding components to avoid mismatch when putting back the components.
  2. Note: The monitor surface is susceptible to scratching! Therefore, lay the monitor on a soft surface when mounting or removing the base.
  3. Wear gloves

Warning: 1. In order to prevent the static disturbance, wear resisting static ring


2. No watch

## Troubleshooting

This chapter provides troubleshooting information for the AL1721h:

### Main Board


#### 1.No Screen Appear

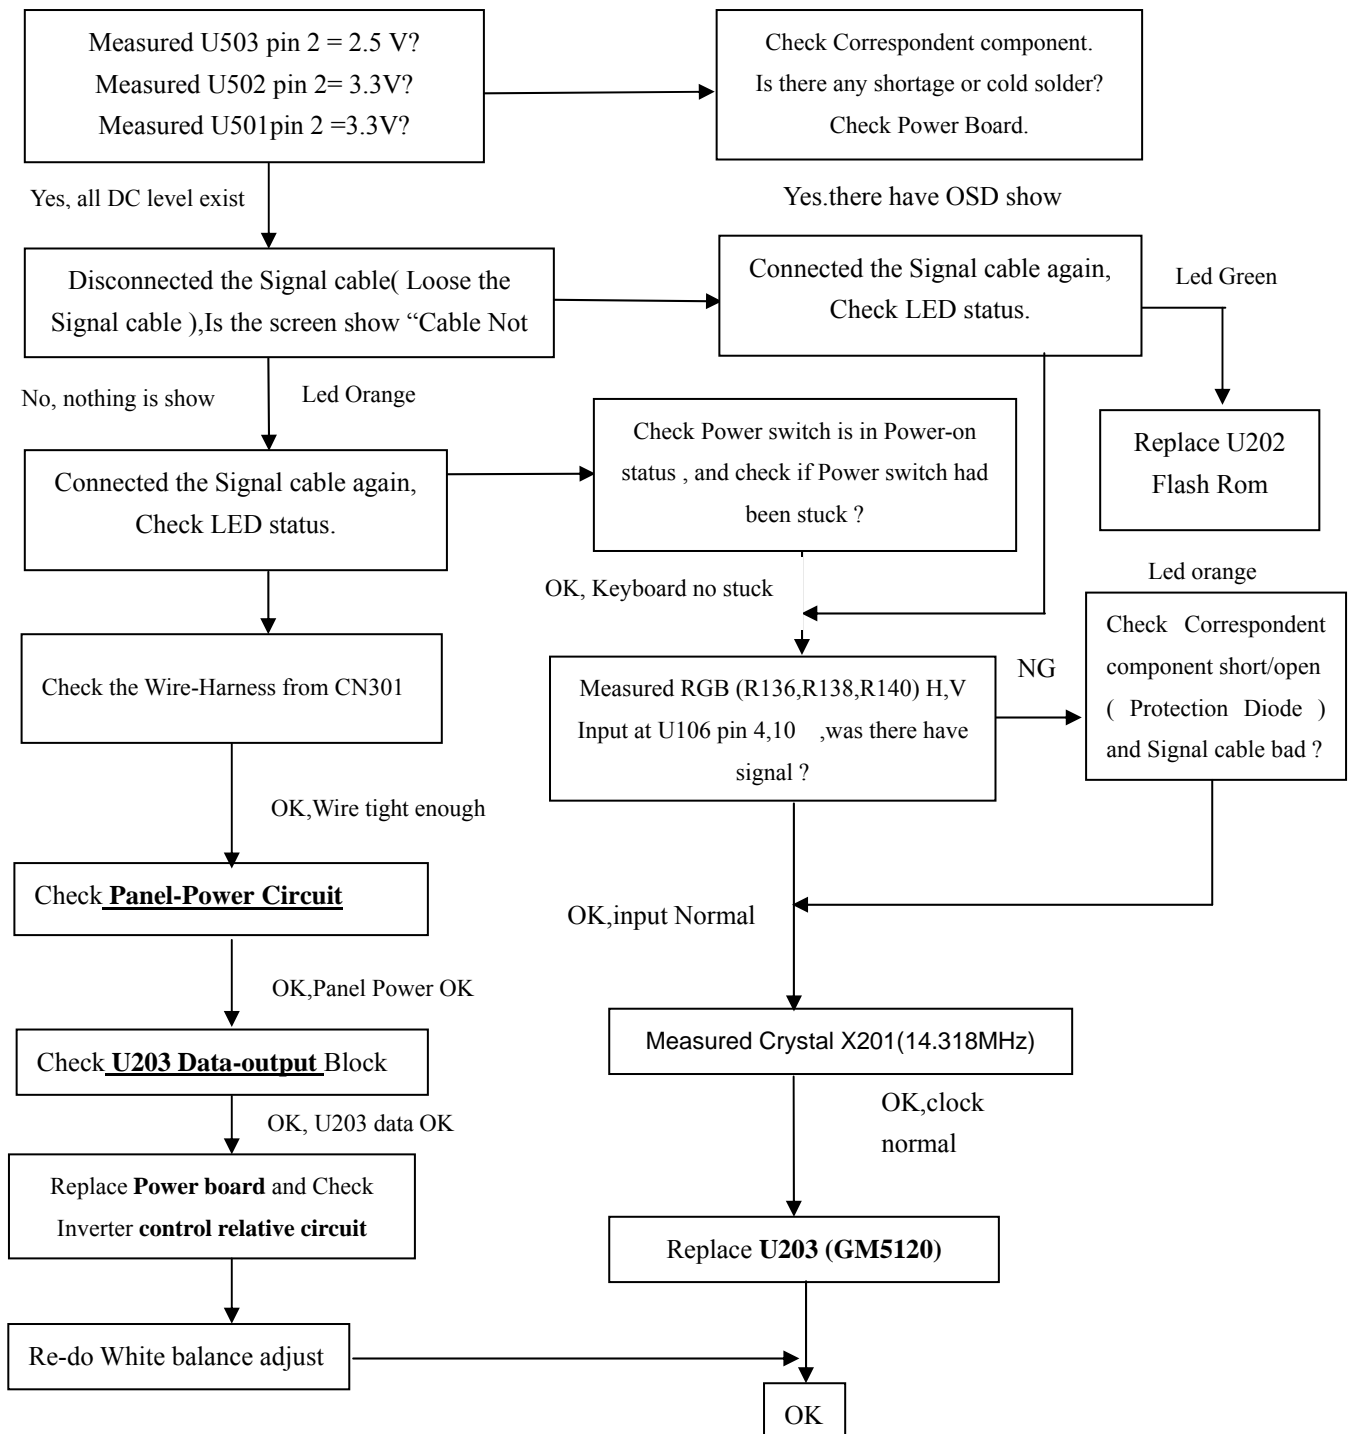


Note:1.If Replace “**MAIN-BOARD**” , Please re-do “DDC-content” programmed & “WHITE-Balance”.

2. If Replace “**Power Board**” only, Please re-do “WHITE-Balance”.


## 2.Panel-Power Circuit

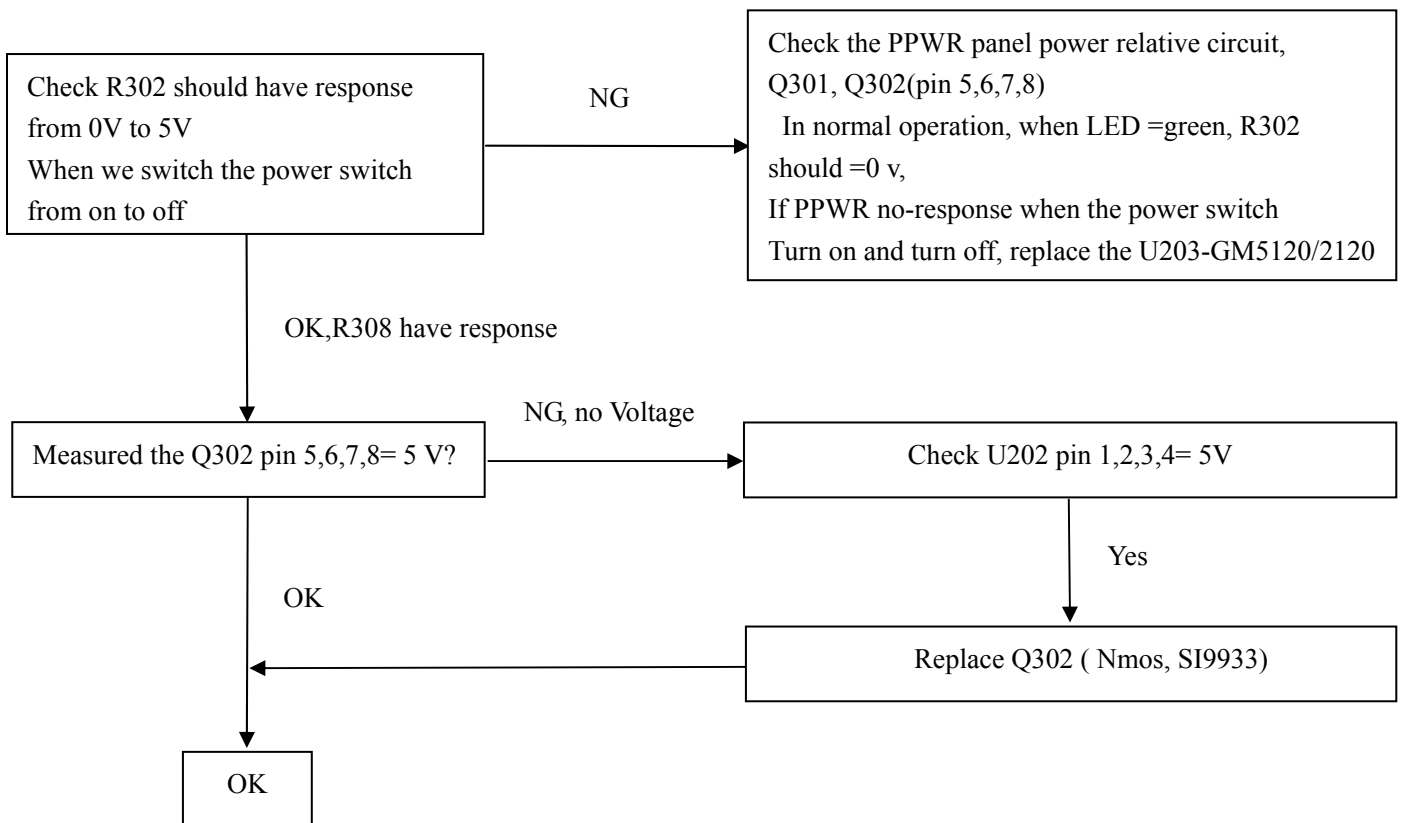

## 3.Inverter Control Relative Circuit

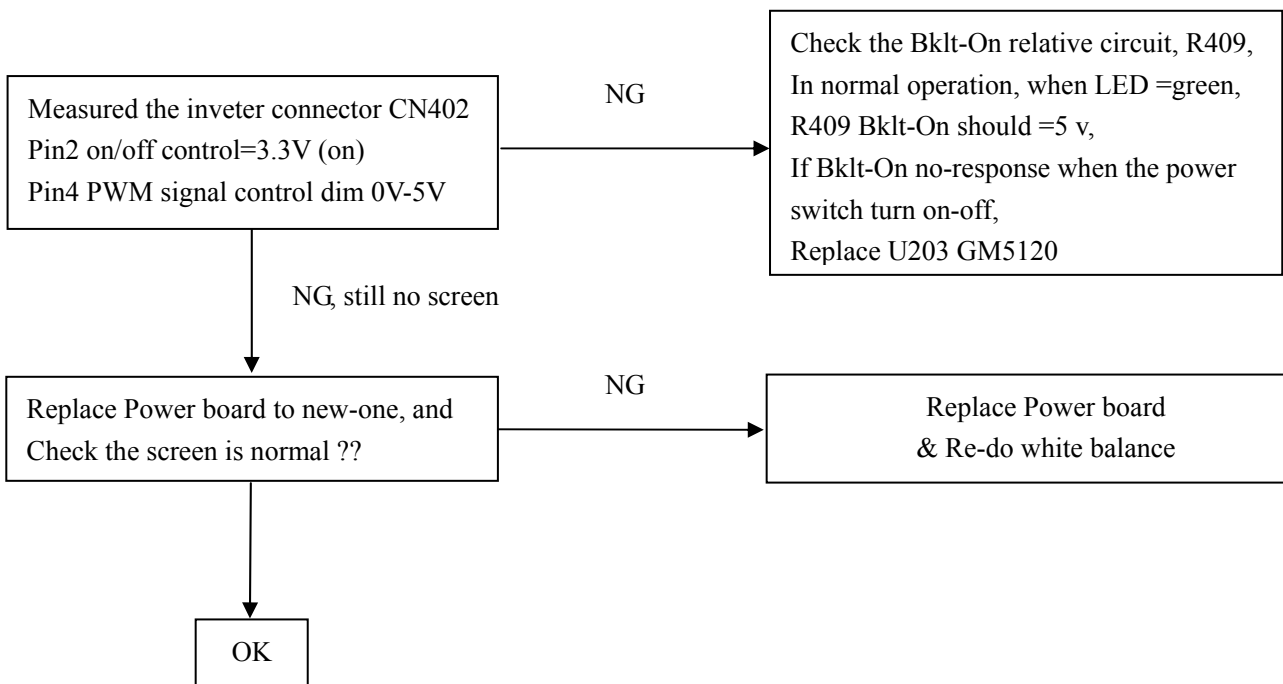


#### 4.U203-Data Output

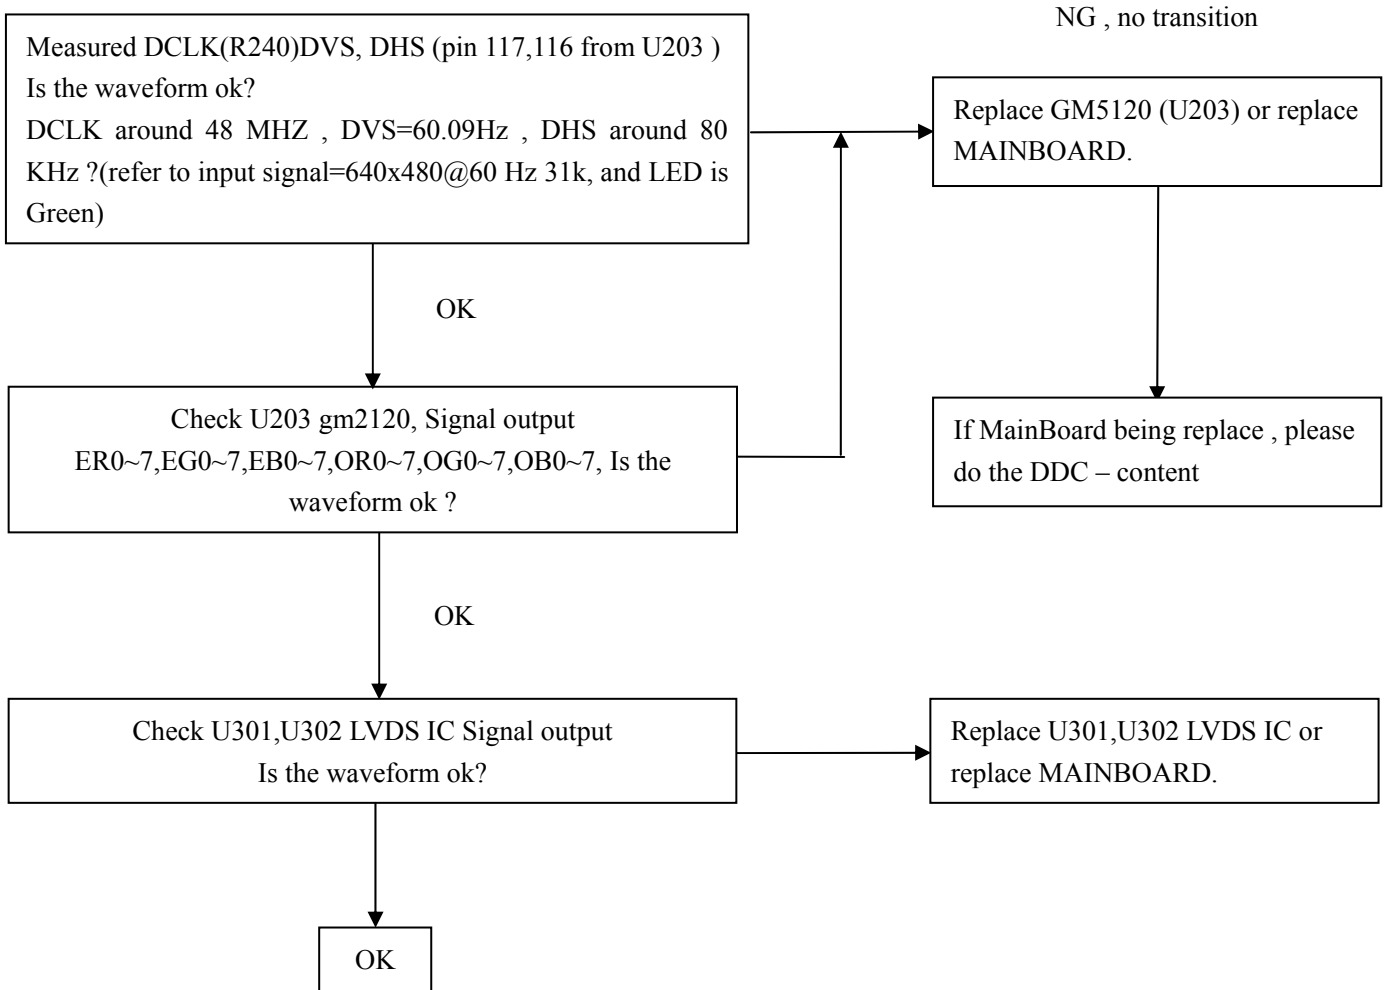


## Power/Inverter Board


### 1.) No Power

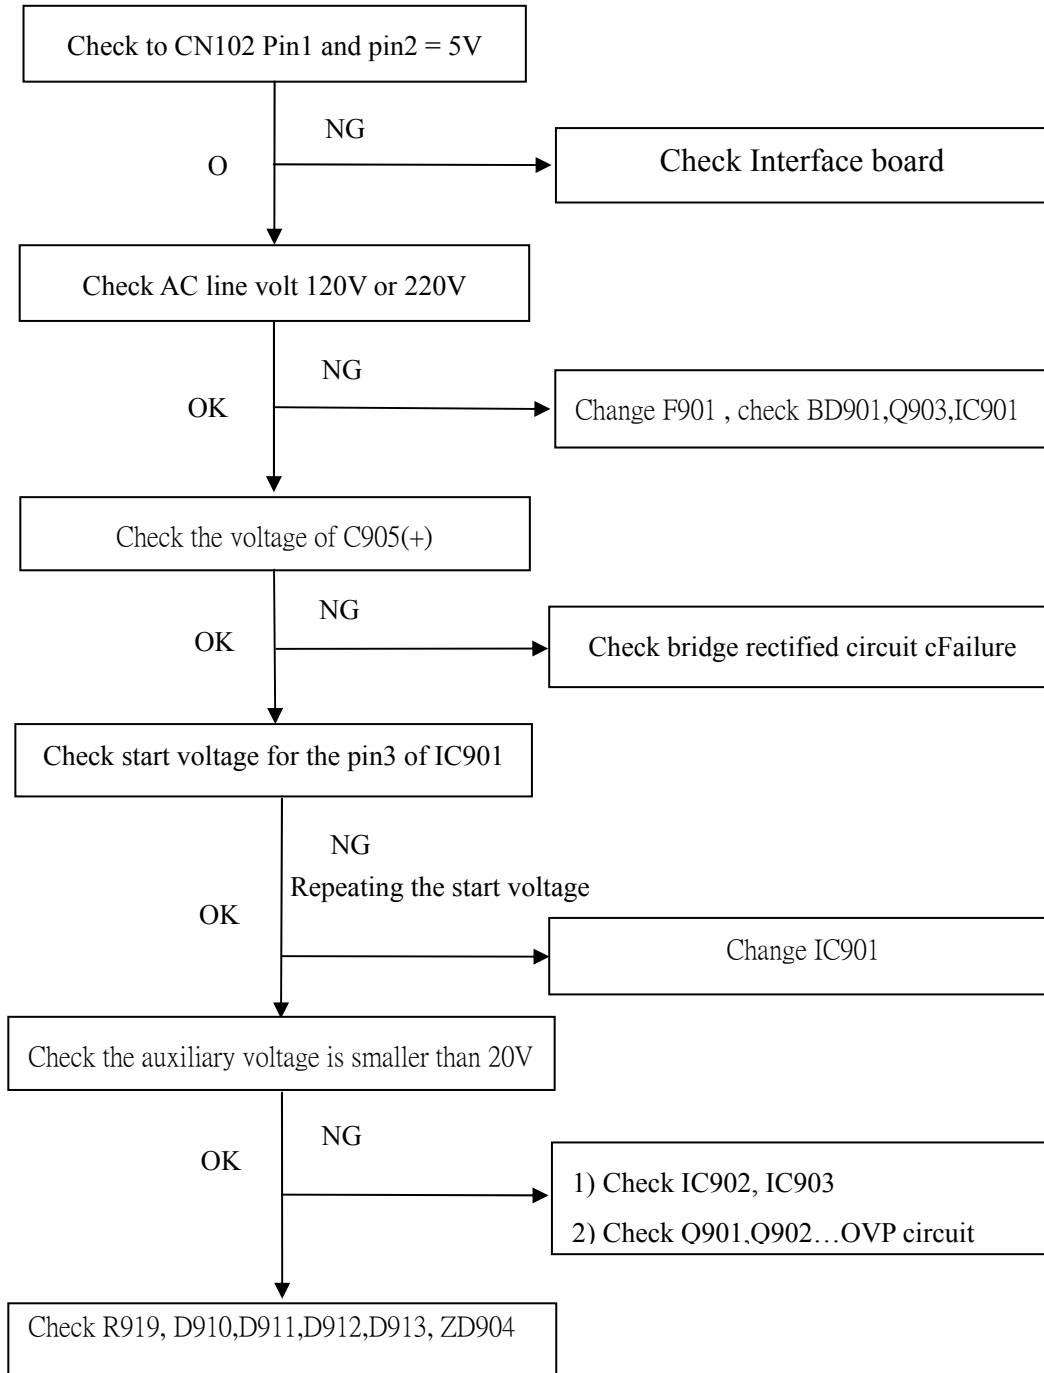

**2.) W / LED , No Backlight**

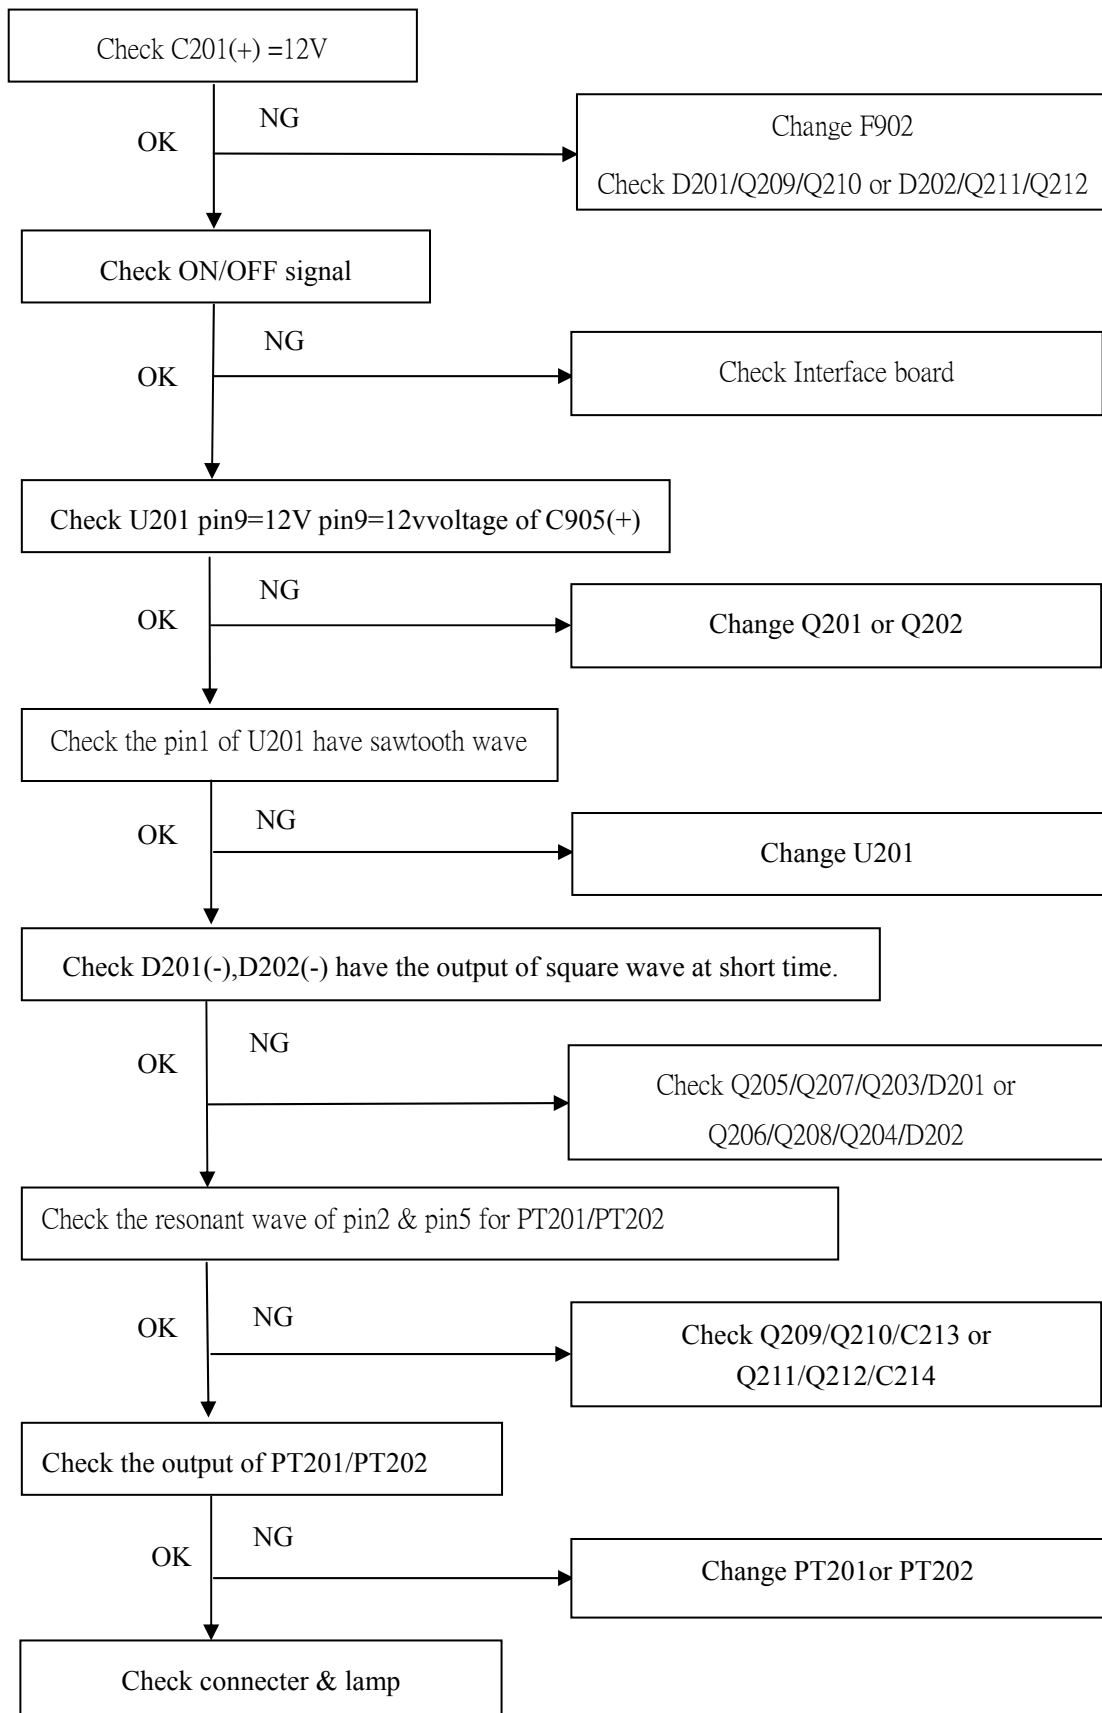


## Keypad Board

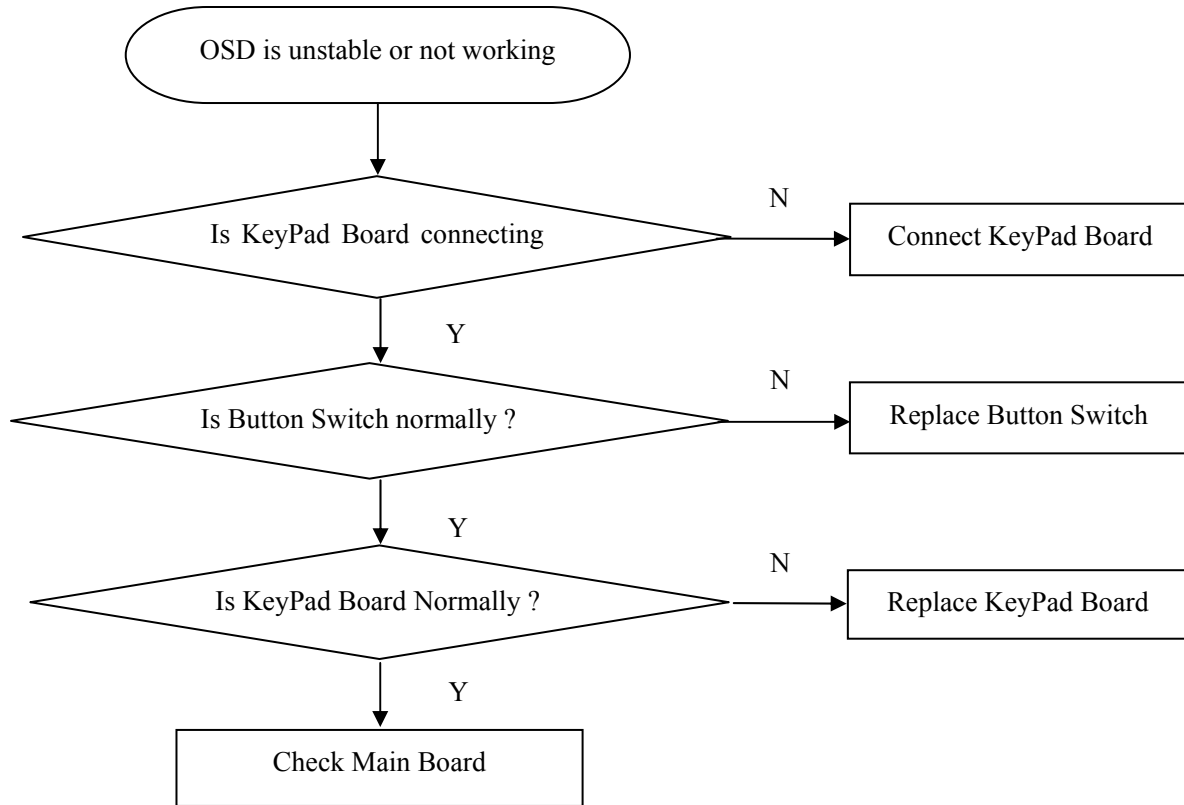




## Connector Information

The following figure shows the connector locations on the monitor board:

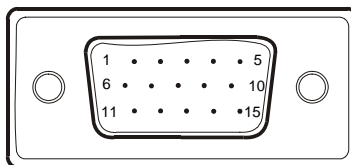

15 - Pin Color Display Signal Cable(D-sub)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1.	Red	9.	NC
2.	Green	10.	Ground
3.	Blue	11.	Ground
4.	Ground	12.	DDC-Serial Data
5.	Ground	13.	H-Sync
6.	R-Ground	14.	V-Sync
7.	G-Ground	15.	DDC-Serial Clock
8.	B-Ground		

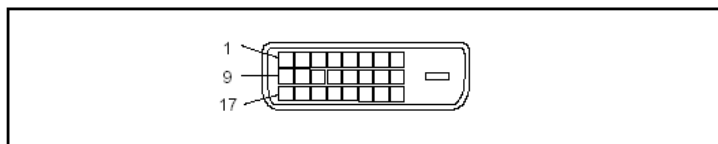

24 - Pin Color Display Signal Cable(DVI)


Pin	Meaning	Pin	Meaning
1.	TMDS Data2-	13.	not connected
2.	TMDS Data2+	14.	+5V Power
3.	TMDS Data 2/4 Shield	15.	Ground
4.	not connected	16.	Hot Plug Detect
5.	not connected	17.	TMDS Data0-
6.	DDC Clock	18.	TMDS Data0+
7.	DDC Data	19.	TMDS Data 0/5 Shield
8.	Analogue Vertical Sync	20.	not connected
9.	TMDS Data1-	21.	not connected
10.	TMDS Data1+	22.	DDC Clock Shield
11.	TMDS Data 1/3 Shield	23.	DDC Clock+
12.	not connected	24.	DDC Clock-

## FRU (Field Replaceable Unit) List

This chapter gives you the FRU ( Field Replaceable Unit ) listing in global configurations of Acer Altos AL1721h. Refer to this chapter whenever ordering for parts to repair or for RMA ( Return Merchandise Authorization ). Please note that WHEN ORDERING FRU PARTS, you should check the most up-to-date information available on your regional web or channel. For whatever reasons a part number change is made, it will not be noted on the printed Service Guide. For ACER AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code from those given in the FRU list of this printed Service Guide. You MUST use the local FRU list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

**Note:** To scrap or to return the defective parts, you should follow the local government ordinance or regulations on how to dispose it properly, or follow the rules set by your regional Acer office on how to return it.

## Exploded Diagram

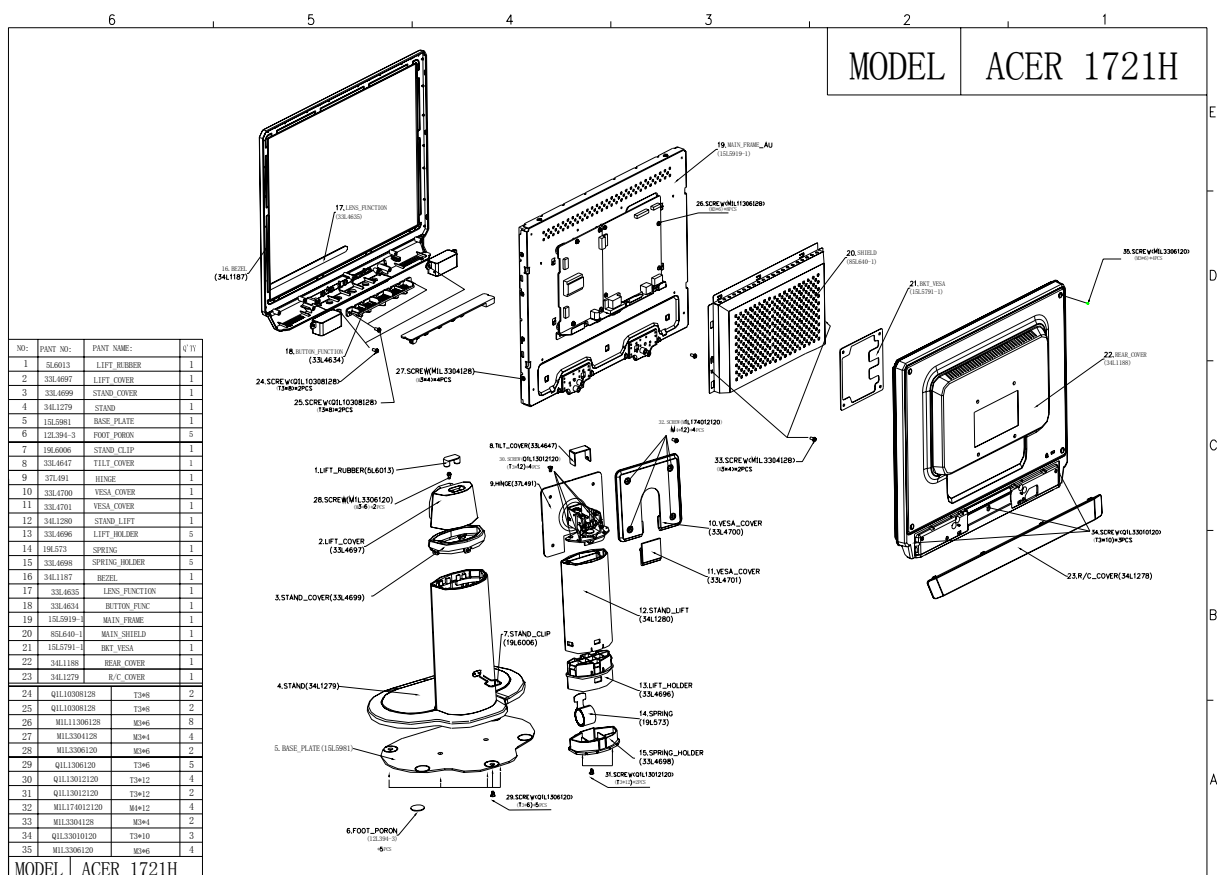


**Note: Above picture show the description of the following component**

Item	Picture	Description	Part No.
1		VESA COVER	33L4700-GD-L 33L4701-GD-L
2		Stand	34L1279-GD-L
3		SCREW	M1L 330 6120
4		SCREW	Q1L 130 6120
5		FOOT-PORON	12L 394 3
6		VESA BRACKET	15L5791 1
7		BASE PLATE	15L5981 1
8		HINGE	37L 491 1
9		SHIELD	85L 641 1
10		MAIN FRAME	15L5921 1
11		LIFT COVER	33L4697-GD-L


Item	Picture	Description	Part No.
12		REAR COVER	34L1188AGD 2B
13		LIFT HOLDER	33L4696 GD L
14		SPRING HOLDER	33L4698-GD-X
15		STAND LIFT	34L1280-GD-B

## Schematic Diagram

### Analog And Digital Input

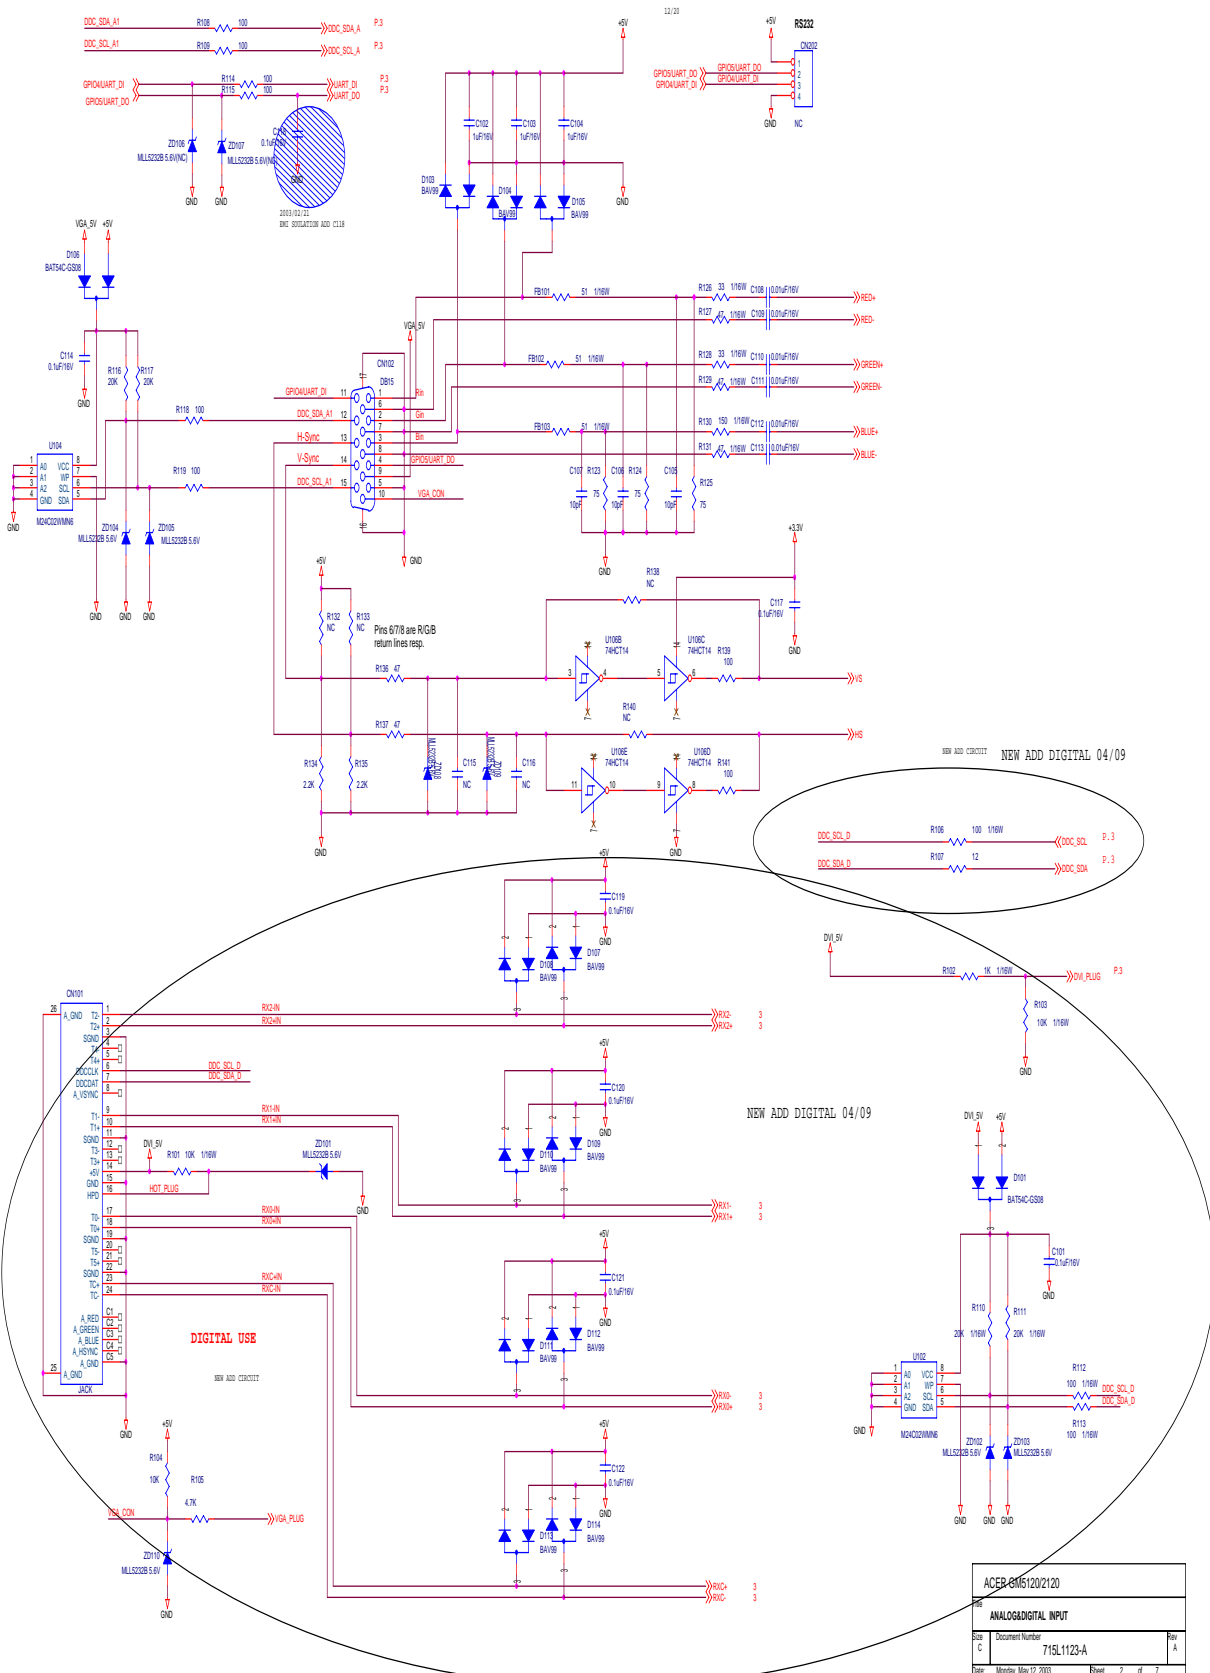

# Gm5120/Gm2120

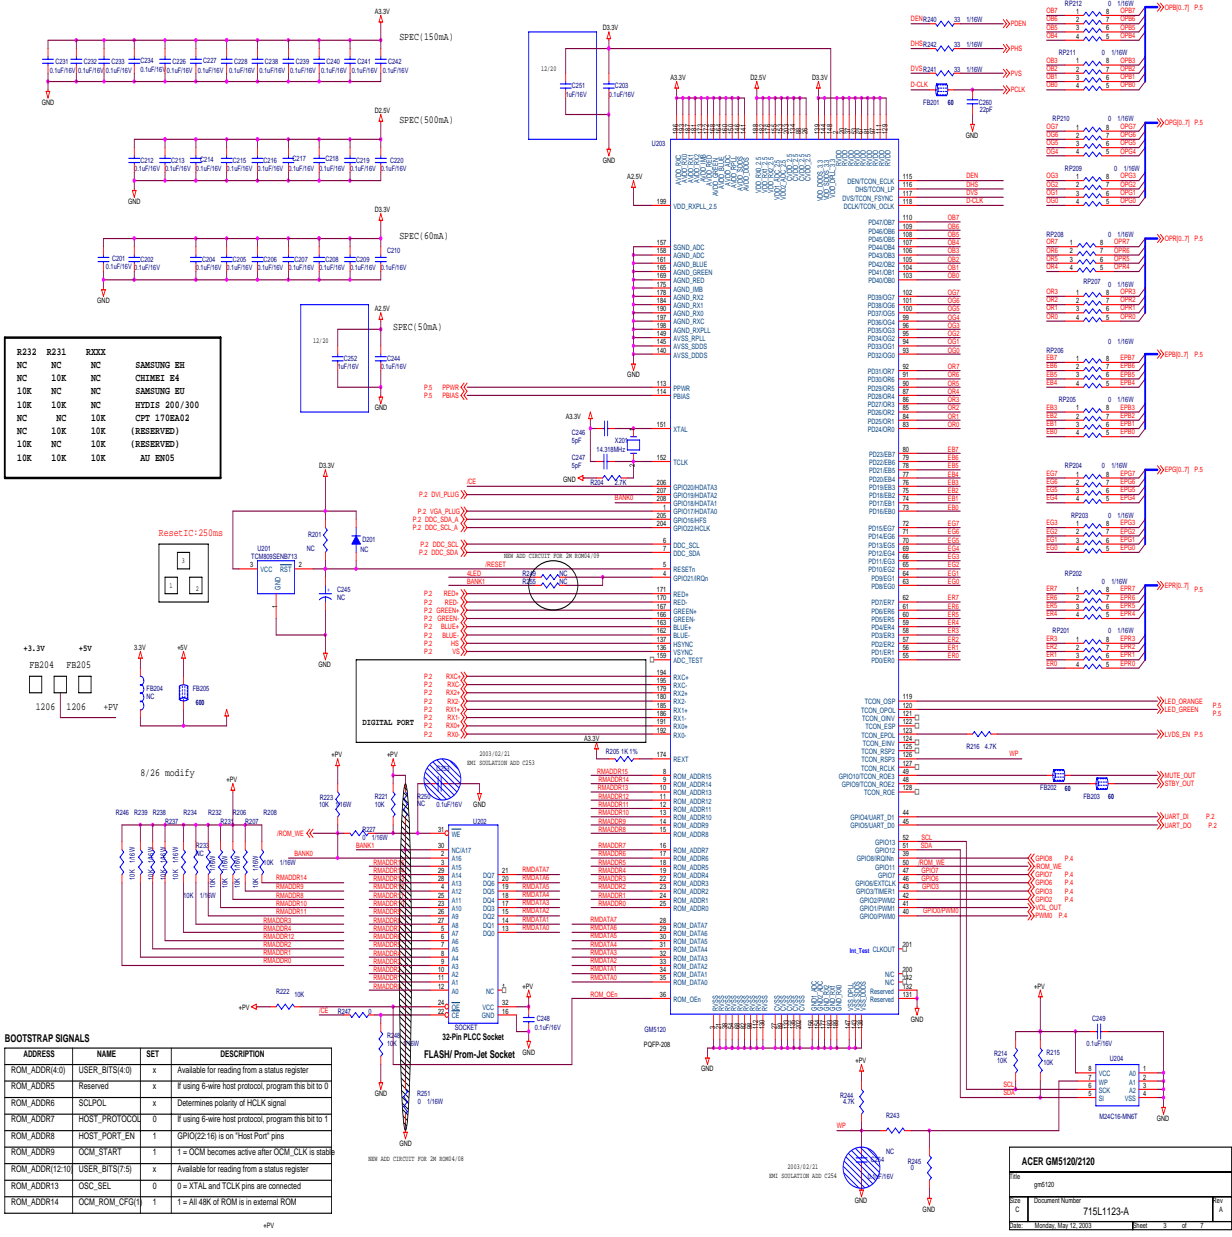


**BOOTSTRAP SIGNALS**

ADDRESS	NAME	SET	DESCRIPTION
ROM_ADDR(4:0)	USER_BITS(4:0)	x	Available for reading from a status register
ROM_ADDR5	Reserved	x	If using 5-wire host protocol, program this bit to 0
ROM_ADDR6	SCLPOL	x	Determines polarity of HCLK signal
ROM_ADDR7	HOST_PROTOCOL	0	If using 5-wire host protocol, program this bit to 1
ROM_ADDR8	HOST_PORT_EN	1	GPIO(2:16) is on "Host Port" pins
ROM_ADDR9	OCM_START	1	1 = OCM becomes active after OCM_CLK is stab
ROM_ADDR(12:10)	USER_BITS(7:5)	x	Available for reading from a status register
ROM_ADDR13	OSC_SEL	0	0 = XTAL and TCLK pins are connected
ROM_ADDR14	OCM_ROM_CFG(1)	1	1 = All 48K of ROM is in external ROM

**ACER Gm5120/2120**

REV	DESCRIPTION	DATE
01	gms120	
02	Document Number: 715L1123-A	
03	Modals: May 12 2003	


# LVD-S

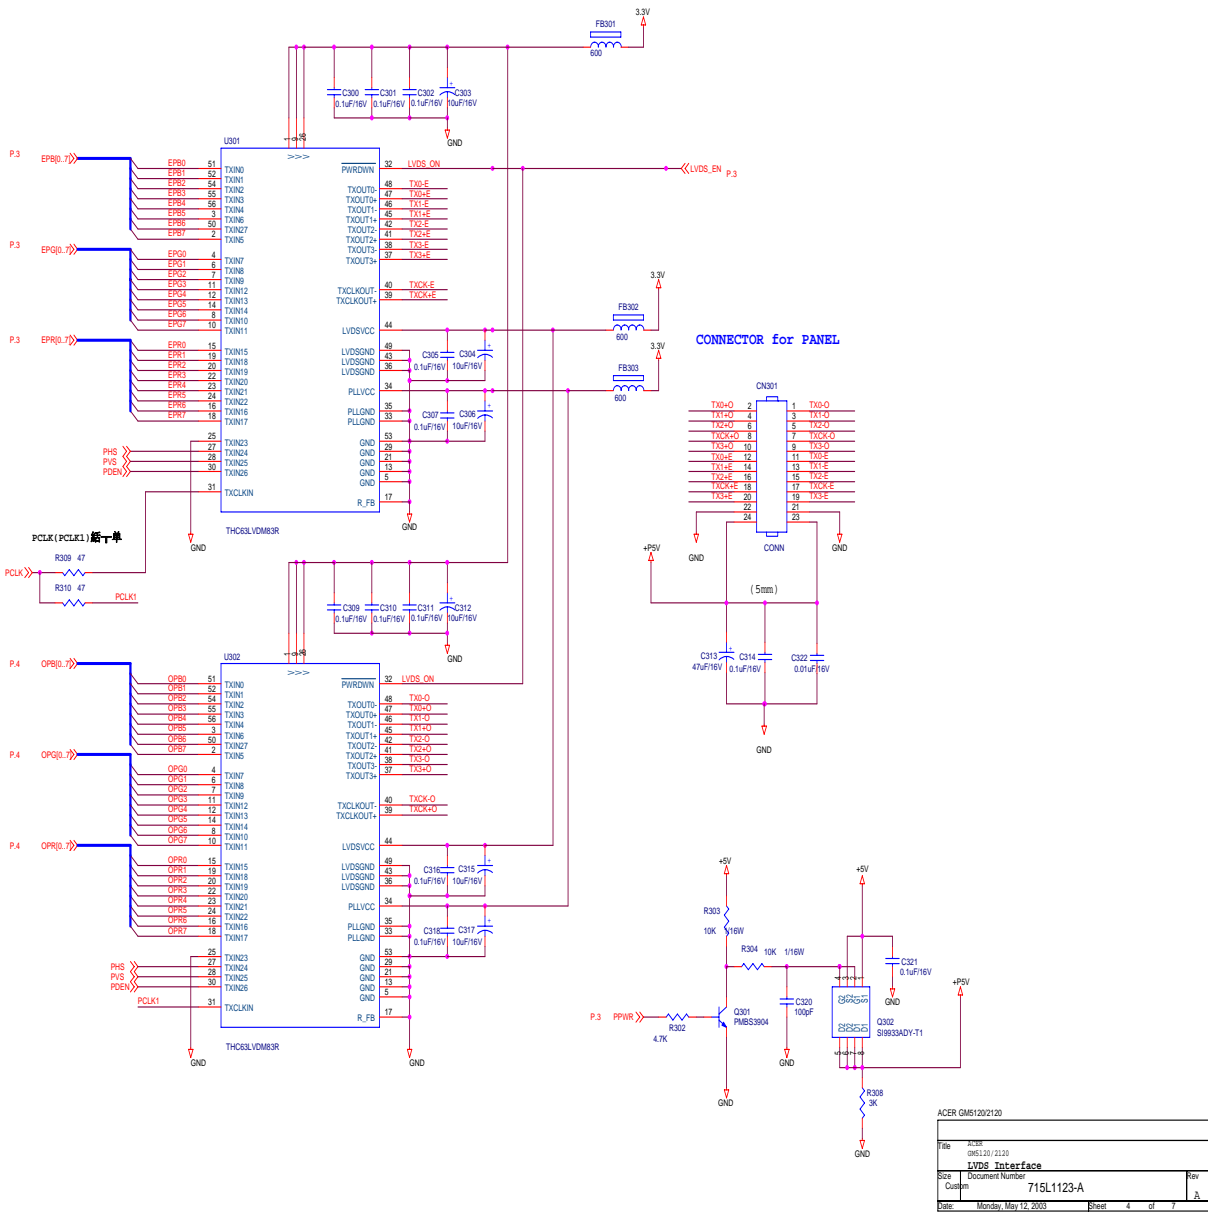











# Audio

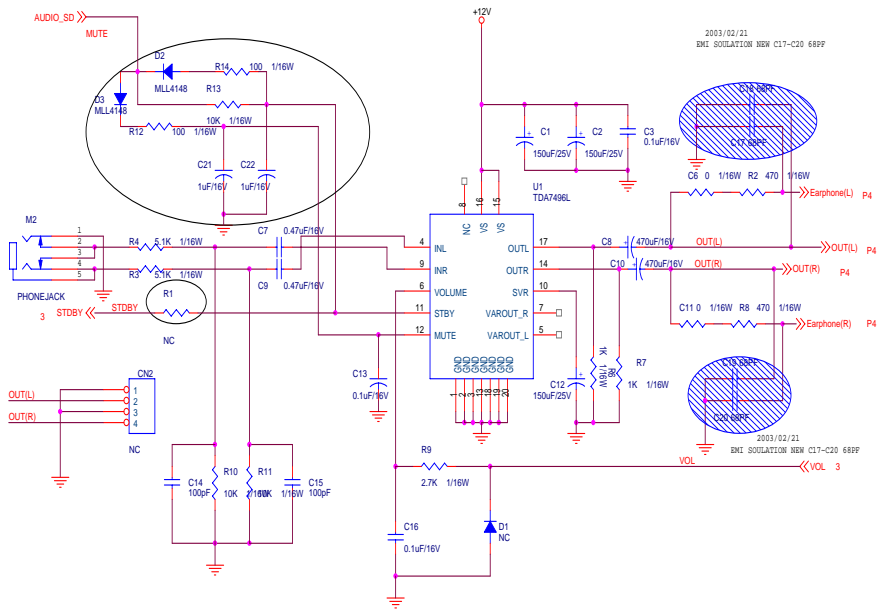

ACER GM2120

GM5120/2120		
Title		
6. AUDIO		
Size	Document Number	Rev
B	715L1123-A	A
Date:	Monday, May 12, 2003	Sheet 6 of 7

# DC Power

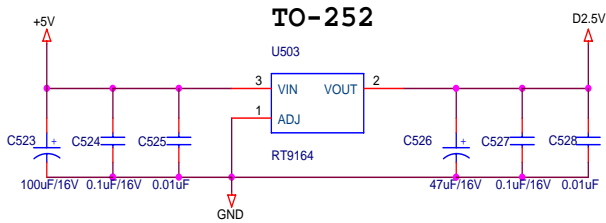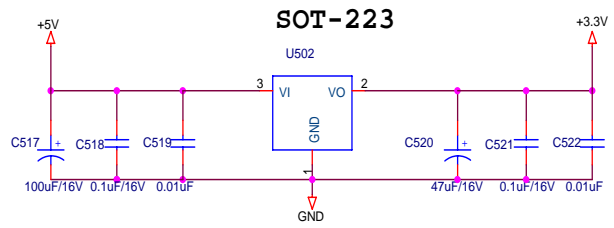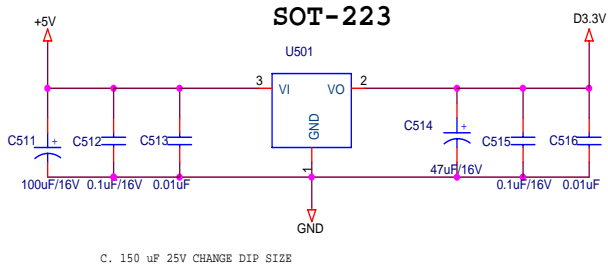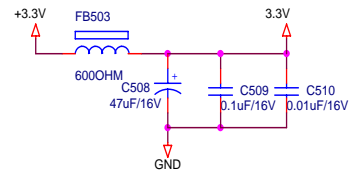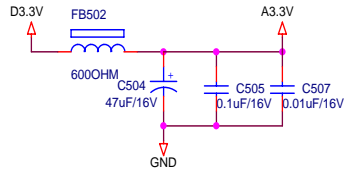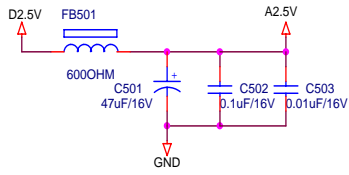

<b>ACER GM5120/2120</b>		
Title		
<b>DC POWER</b>		
Size A	Document Number 715L1123-A	Rev A
Date:	Monday, May 12, 2003	Sheet 7 of 7

---

## Online Support Information

---

This section describes online technical support services available to help you repair your Acer Systems.

If you are a distributor, dealer, ASP or TPM, please refer your technical queries to your local Acer branch

office. Acer Branch Offices and Regional Business Units may access our website. However some sources will require a user i.d. and password. These can be obtained directly from Acer CSD Taiwan. Acer's Website offers you convenient and valuable support resources whenever you need them. In the Technical Information section you can download information on all of Acer's Notebook, Desktop

Server models including:

- Service guides

- User's manuals

- Training materials

- Bios updates

- Spare parts lists

- TABs (Technical Announcement Bulletin)

For these purposes, we have included an Acrobat File to facilitate the problem-free downloading of technical material.

Also contained on this website are:

- Detailed information on Acer's International Traveler's Warranty (ITW)

- Returned material authorization procedures

- An overview of all the support services we offer, accompanied by a list of telephone, fax contacts for all your technical queries.

We are always looking for ways to optimize and improve our services, so if you have any suggestions comments, please do not hesitate to communicate these to us.